


Attaching the PictureMate® Photo Cartridge Door


Your photo cartridge door replacement kit includes a new door and a spring.

Before you begin, make sure you remove the old door. If there are any metal rings on the cartridge door pegs, remove them also. Then follow these steps to attach the new door:

1. Slide the spring onto the right peg on PictureMate.

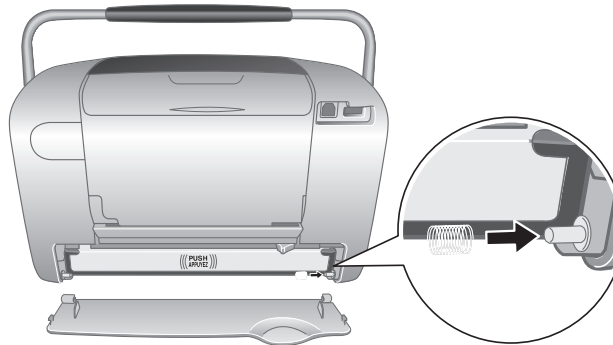

2. Then slide the right hinge of the cartridge door onto the right peg.

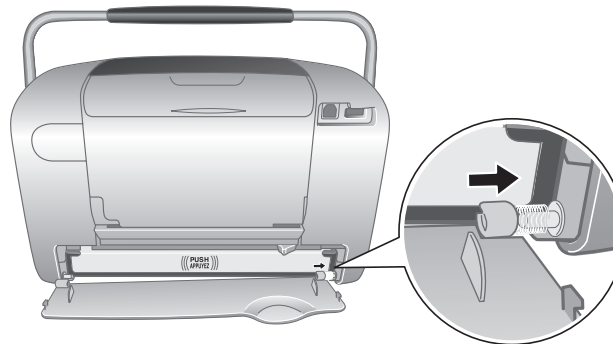

3. Press the left hinge of the cartridge door over the left peg until it snaps into place. Then close the cartridge door.

