

Epson Stylus® Photo R1800

Start Here



411016200

CPD-19344R2


XXX

Printed in XXXXXX XX.XX-XX


1

Unpack


- 1** Remove everything from the box.

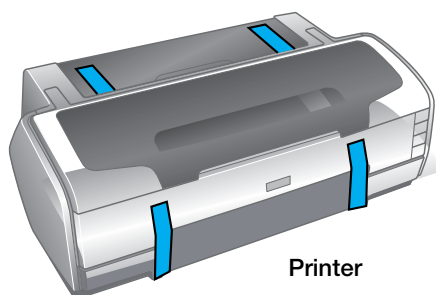

Printer

 

Ink cartridges

 

FireWire® (IEEE 1394) cable



Small CD insert



Printer Software CD-ROM




CD position check paper




User's Guide




Matte sheet support

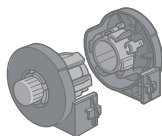

Roll paper holders

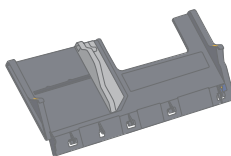


Single sheet guide

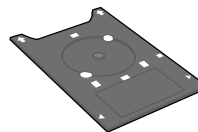

CD/DVD tray


NOTE: For instructions on using special media accessories, see your User's Guide.

- 2** Remove all the tape and packing material from the printer.

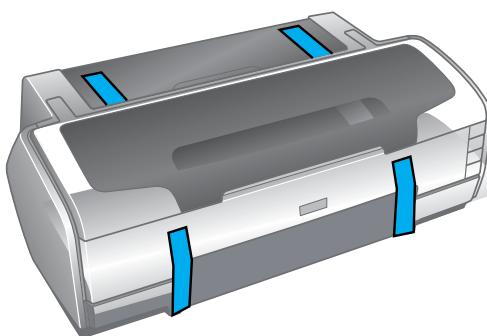


2 Turn On the Printer

- 1 Plug the printer's power cord into a grounded electrical outlet.

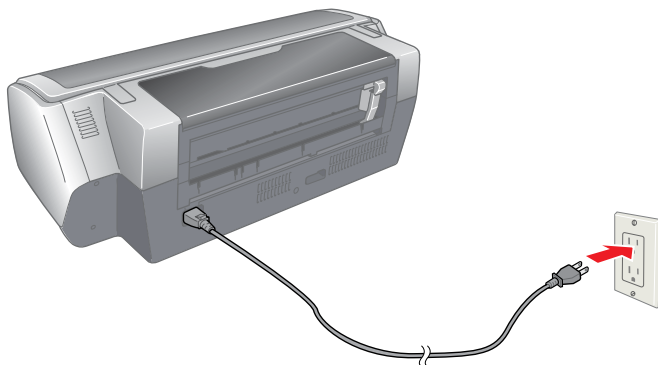

NOTE: Do not connect the printer to your computer yet. Wait until you are instructed to connect the printer cable in section 5, "Install Software."


- 2 Press the  **Power** button to turn on the printer.

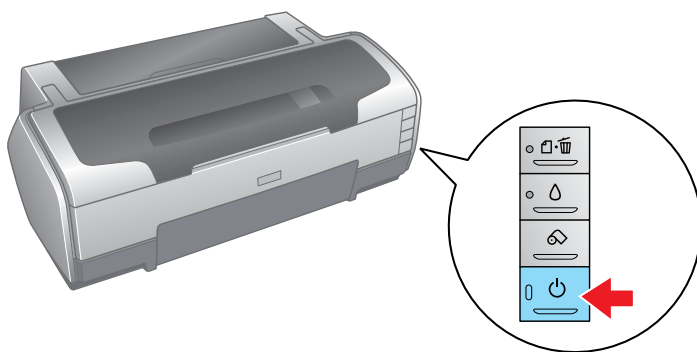

CAUTION: Never use an external switch, such as a wall switch or power strip switch, to turn the printer on or off.

3 Install Ink Cartridges

- 1 Open the printer cover.

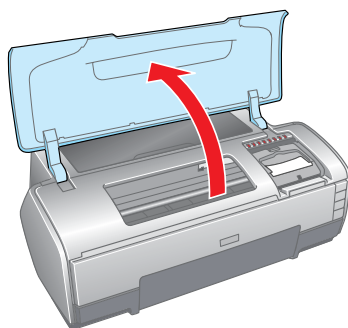

- 2 Shake the ink cartridge packages 4 or 5 times before opening them. (Don't shake them after they're unpacked.)




- 3 Unwrap the ink cartridges.

Don't touch the green circuit board or remove any labels




- 4 Open the cartridge cover and remove the paper insert.

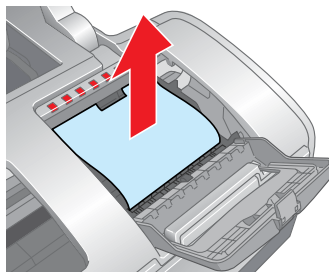


- 5 Lower each cartridge into its holder with the green circuit board facing the front. The color the cartridge label should match the marker above the cartridge holder.

Then gently push each ink cartridge down until it clicks into place.

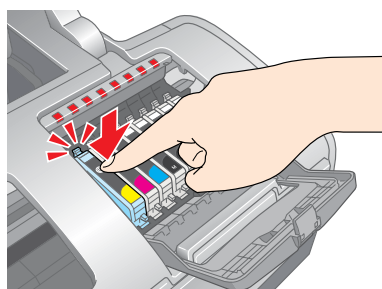


of

- 6** Close the cartridge cover. Push it down at the top so it clicks into place.

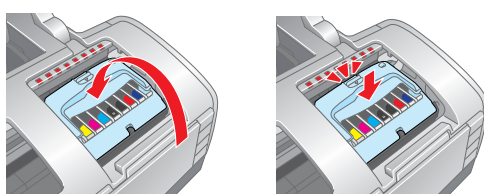

- 7** Press the  Ink button and close the printer cover.

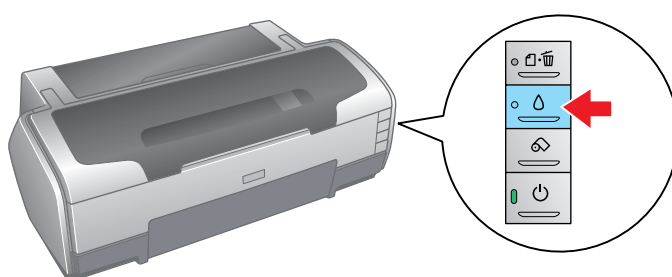


The ink light flashes as your printer charges ink for about 2½ minutes.


CAUTION: Don't turn off the printer or interrupt charging while the light is flashing or you'll waste ink.

4 Load Paper


- 1** Flip open the paper support and pull up the extensions.

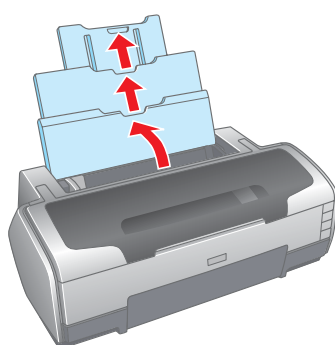


- 2** Press the bottom of the output tray. The tray opens and moves up. Pull out the extension.

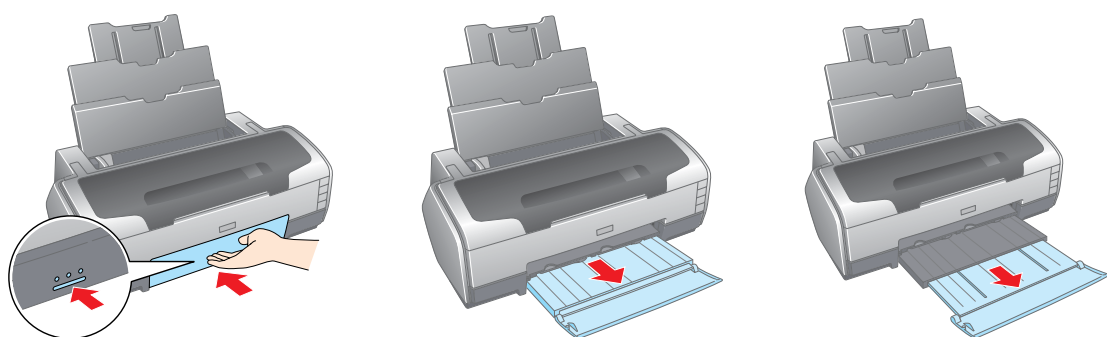

- 3** Fan a few sheets of paper and load them against the right side of the sheet feeder. Slide the left edge guide against the paper.

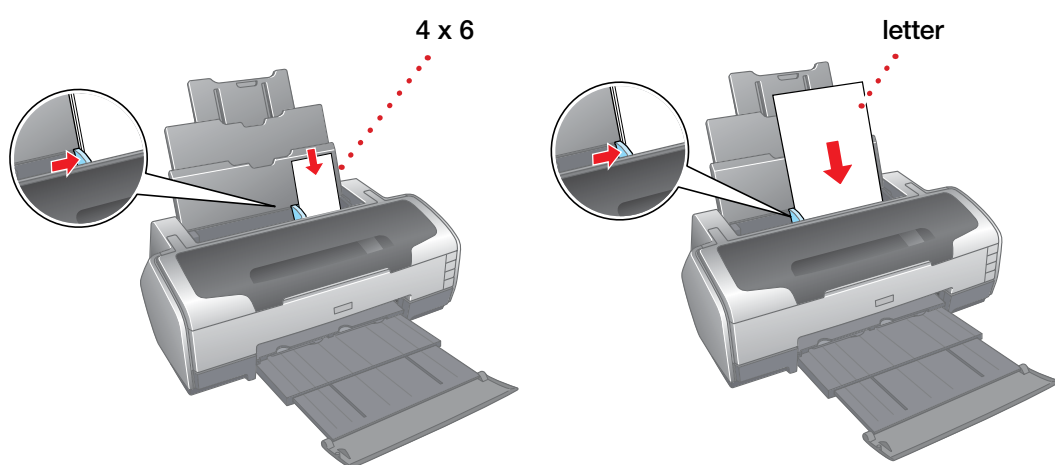

 NOTE: For instructions on loading and printing on CDs or DVDs, roll paper, matte paper, and other special media, see your User's Guide.

Turn over 


5 Install Software

Windows®


The software works with Windows 2000, XP, XP Professional x64 Edition, and Windows Vista.™ Make sure your printer is NOT connected to your computer, then follow the steps below.

- 1 Turn on your computer. Wait for the system to start up, then insert the Epson® CD-ROM in your drive.

With Windows Vista, if you see the AutoPlay window, click **Run Epssetup.exe**. When you see the User Account Control screen, click **Continue**.

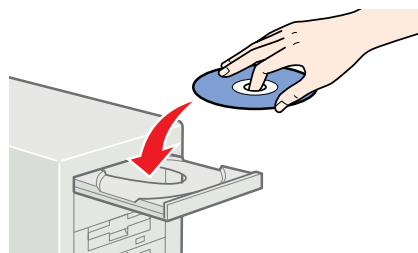


NOTE: If you see a screen like this, click **Cancel** and disconnect the printer from your computer. Then follow the steps below.

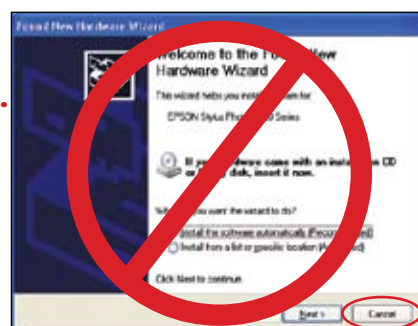

- 2 Read the license agreement that appears and click **AGREE**.

- 3 You see a message like this.
Click **OK** to begin installing your printer driver.

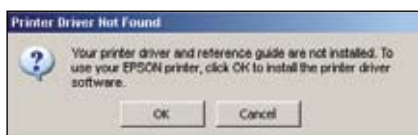


- 4 When you see a screen like this, follow the steps below to connect either a USB cable or a FireWire cable.

NOTE: Windows Vista supports only a USB connection.



USB


Connect the square end of your USB cable to the back of your printer and the flat end of the USB cable to your computer. (You can connect to any open port.)

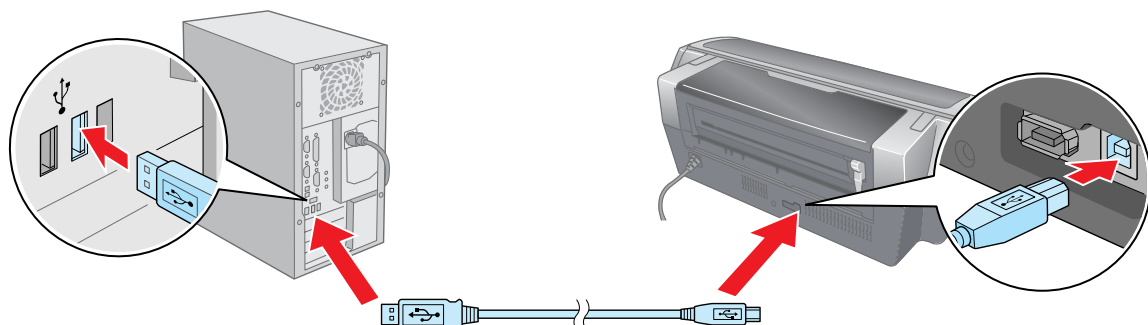

NOTE: For Windows XP, if you don't have USB 2.0, you see a message. Click the **Close** button to close the message.

FireWire

Connect one end of the FireWire cable to the back of your printer and the other end to your computer.

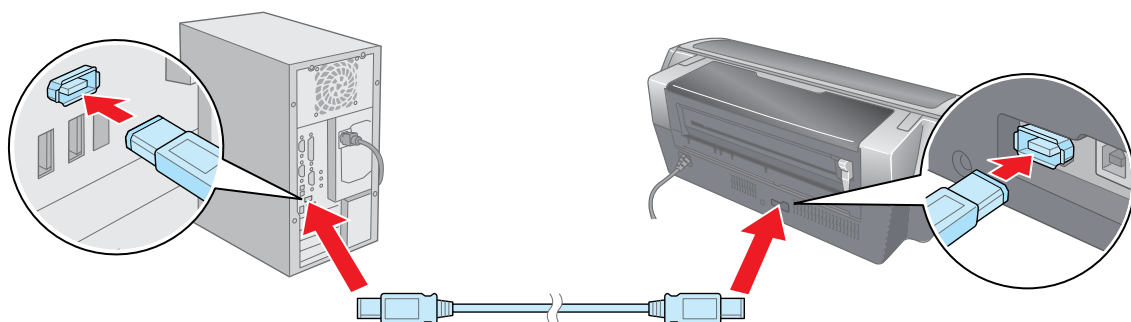

NOTE: If your computer uses i.Link or another 4-pin FireWire connection, you will need to connect a 6-pin to 4-pin FireWire (IEEE 1394) cable.

- 5 When you see this screen, click **Next**.



6 Click **Photo Software**.

7 Click each title to learn more about it. If you want to install the software, follow the on-screen instructions.

When you're done, close any open windows and click **Back** at the Photo Software menu.

8 Click **Color Management Solutions**.

9 Click each title to learn more about it. If you want to install any options, follow the on-screen instructions.

When you're done, close any open windows and click **Back** at the Color Management Solutions menu.

10 Click **Epson PhotoCenter Link**.

Click **Add Icon** to place a link to the Epson PhotoCenterSM website on your desktop, then click **OK**.

11 When you're done installing software, click **Exit**. The registration screen appears.

12 Follow the on-screen instructions to register your printer.

***NOTE:** Be sure to restart your computer to enable all of your printer software features.*

You're ready to print! See section 6, "Print."


Macintosh®

The software works with Mac OS® X 10.2.8 and 10.3.9 through 10.4.x.

1 Connect your printer to your computer with either a USB cable or a FireWire cable.


USB

Connect the square end of your USB cable to the back of your printer and the flat end of the USB cable to your computer. (You can connect to any open port.)

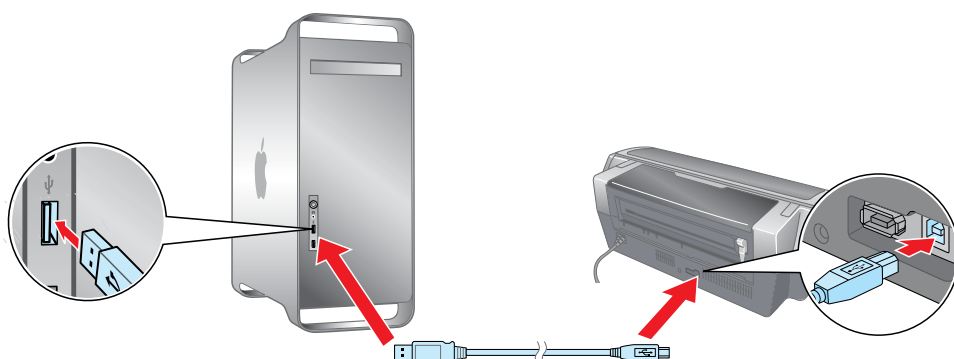

FireWire

Connect one end of the FireWire cable to the back of your printer and the other end to your computer.

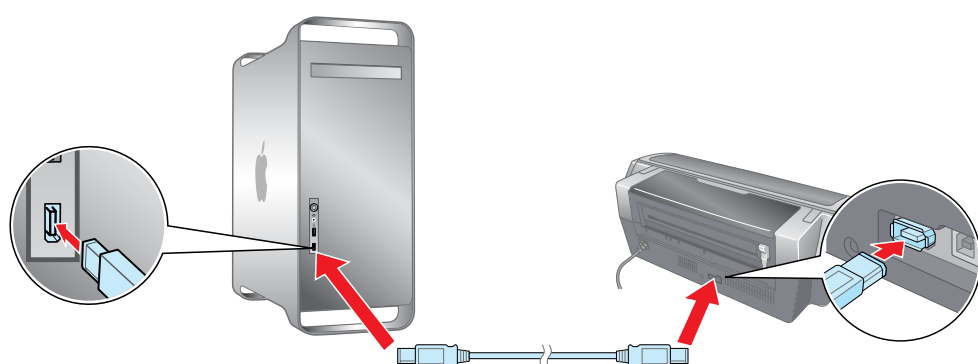

2 Turn on your Macintosh. Wait for it to start up, then insert the Epson CD-ROM into your drive.

3 Double-click the CD-ROM icon, if necessary, then double-click **EPSON**.

4 Read the license agreement that appears and click **AGREE**.


You see the Install Menu.

5 Click **Printer Driver** and follow the on-screen instructions.

6 Click **Photo Software**.

7 Click each title to learn more about it. If you want to install the software, follow the on-screen instructions.

When you're done, close any open windows and click **Back** at the Photo Software menu.

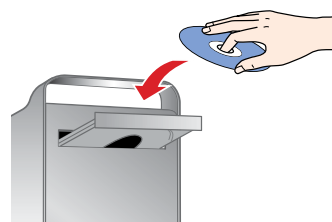

- 8** Click **Color Management Solutions**.
- 9** Click each title to learn more about it. If you want to install any options, follow the on-screen instructions.
- When you're done, close any open windows and click **Back** at the Color Management Solutions menu.
- 10** Click **Epson Reference Guide** to install the guide.
- 11** Click **Epson PhotoCenter Link**.
- Click **Add Icon** to place a link to the Epson PhotoCenter website on your desktop, then click **OK**.
- 12** When you're done installing software, click **Exit**. The registration screen appears.
- 13** Follow the on-screen instructions to register your printer.

Go to the next section to finish setting up your printer.


Finishing Printer Setup

- 1** Open the **Applications** folder, then open the **Utilities** folder and double-click **Printer Setup Utility** (OS X 10.4 or 10.3) or **Print Center** (OS X 10.2).
- 2** Click the **Add** button.
- 3** In Mac OS X 10.4, select **Stylus Photo R1800**. (If it doesn't appear, click **More Printers**, select **EPSON USB** or **EPSON FireWire**, choose **Stylus Photo R1800**, and click **Add**).

In Mac OS X 10.2 and 10.3, select **EPSON USB** at the top and **Stylus Photo R1800** below.



Mac OS X 10.4

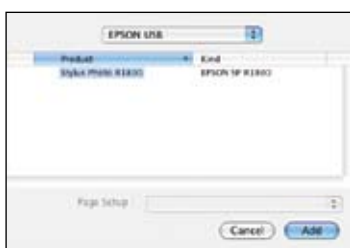

Mac OS X 10.2 and 10.3

NOTE: If the *Stylus Photo R1800* doesn't appear, make sure it is turned on and securely connected to your Macintosh.

- 4** Click **Add**.
- 5** Quit the Printer Setup Utility or Print Center.

You're ready to print! See section 6, "Print."

6 Print

Now you're ready to print. For instructions, use these resources:

- Your *User's Guide*

Learn about loading paper, printing, maintaining your printer, solving problems, and contacting Epson.

- Your on-screen *Reference Guide*.

Double-click the **SPR1800 Reference Guide** icon on your desktop to view more information about your printer.



EPSON
EXCEED YOUR VISION

Epson and Epson Stylus are registered trademarks and Exceed Your Vision is a trademark of Seiko Epson Corporation. Epson PhotoCenter is a service mark of Epson America, Inc.

General Notice: Other product names are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.