


Epson Stylus® Photo R340


Quick Reference

Printing Without a Computer


Here's how to use the control panel:

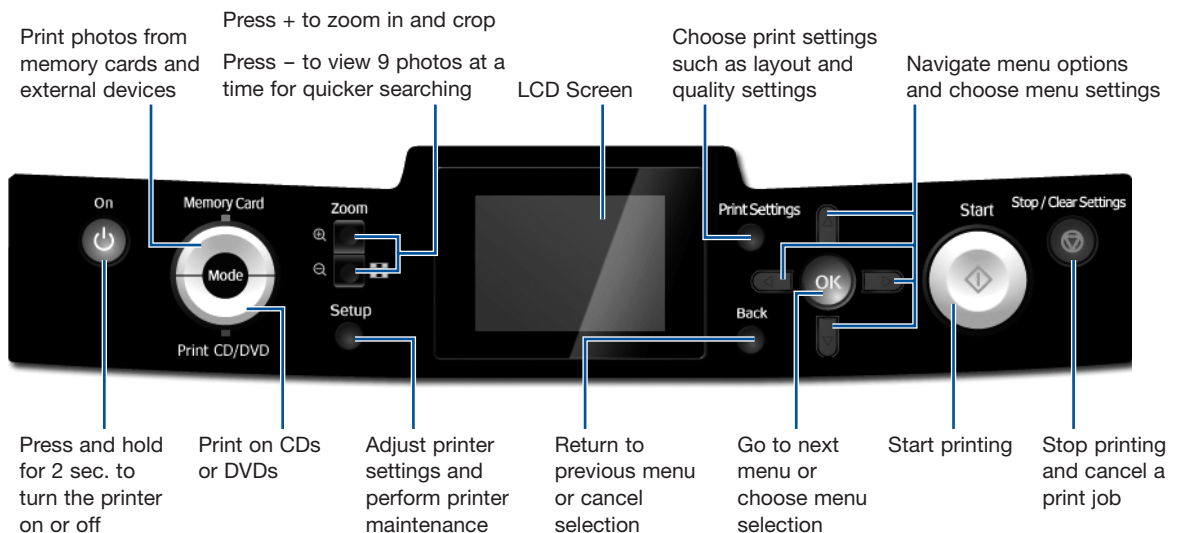


Inserting Your Memory Card

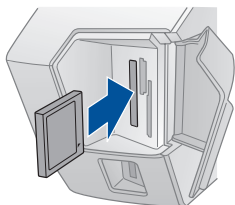


CompactFlash®
or Microdrive™
(left)

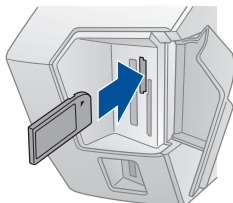


Memory Stick®
(middle)

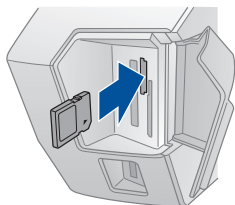

SD™ (Secure Digital)
or MMC (MultiMediaCard)
(middle)

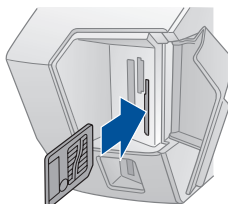

SmartMedia™
(right)

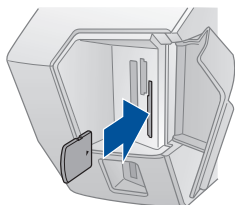

xD Picture Card™
(right)


When you insert the card, you see a message indicating that you have inserted a memory card. The printer reads and counts the images on your card.

NOTE: The printer recognizes the first 999 files only. If your photos aren't recognized, see your Printer Basics book for troubleshooting information.

Loading 4 x 6" Photo Paper


- 1 Place the paper against the right side of the feeder.

- 2 Slide the left edge guide against the paper.

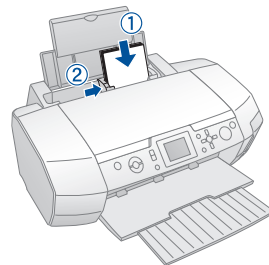


Printing a 4 x 6" Photo

- 1 Press the **Memory Card** button to choose Memory Card mode.
- 2 Press ◀ or ▶ to highlight **View and Print Photos**, then press **OK**.

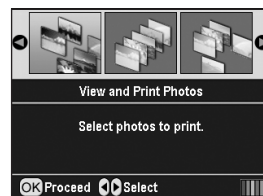

- 3 Press ◀ or ▶ to scroll through your photos. (Press and hold one of the buttons to scroll quickly.)
- 4 When the photo you want is shown on the LCD, press ▲ to select one copy.
- 5 Press the **Print Settings** button.

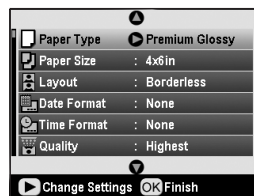


- 6 Press ▲ or ▼ to highlight **Paper Type**, then press ▶.

- 7** Press ▲ or ▼ to highlight the correct paper type setting (see “Paper Type Setting” to the right), then press **OK**.
- 8** Press ▲ or ▼ to highlight **Paper Size**, then press ►.
- 9** Choose **4x6in**, then press **OK**.
- 10** Press **OK**, then check your settings and press the green **Start** button to print your photo.

Customizing Your Prints

You can select layouts, adjust image quality manually or automatically, and add the date or time to your prints.

- 1** Press the **Memory Card** button to choose Memory Card mode.
- 2** Press ◀ or ▶ to highlight **View and Print Photos**, **Print All Photos**, **Print Range of Photos**, or **Print by Date**, then press **OK**.
- 3** Choose your photos if necessary, then press **Print Settings**.

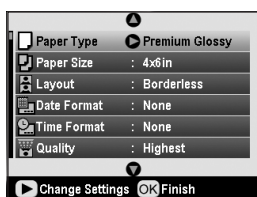

- 4** Press ▲ or ▼ to highlight **Layout**, then press ►.
- 5** Choose one of the layouts then press **OK**.
- 6** Press ▲ or ▼ to highlight **Date Format** or **Time Format** then press ►.
- 7** Press ▲ or ▼ to highlight a format setting, then press **OK**.

- 8** Press ▲ or ▼ to highlight one of these options, then press ►:
 - Quality: Choose **Standard**, **Higher**, or **Highest**
 - Filter: Choose **Off**, **Black & White**, or **Sepia**
 - Brightness: Choose **Standard**, **Brighter**, **Brightest**, **Darker**, or **Darkest**
 - Contrast: Choose **Standard**, **Higher**, or **Highest**
 - Sharpness: Choose **Standard**, **Sharper**, **Sharpest**, **Softer**, or **Softest**
 - Saturation: Choose **Standard**, **Higher**, **Highest**, **Lower**, or **Lowest**
- 9** Adjust any settings as necessary, then press **OK**.

Paper Type Setting

Paper	Paper Type setting
Plain paper Epson Premium Bright White Paper Epson Photo Quality Ink Jet Paper	Plain Paper
Epson Premium Glossy Photo Paper	Premium Glossy
Epson Ultra Premium Glossy Photo Paper	Ultra Premium
Epson Premium Semigloss Photo Paper Epson Semigloss Scrapbook Photo Paper	Semigloss
Epson Premium Luster Photo Paper	Premium Luster
Epson Glossy Photo Greeting Card Epson Photo Paper Epson Glossy Photo Paper	Photo Paper
Epson Matte Paper Heavyweight PremierArt™ Matte Scrapbook Photo Paper	Matte

Viewing a Slide Show

- 1 Press the **Memory Card** button to choose Memory Card mode.
- 2 Press ◀ or ▶ to highlight **Play Slide Show**, then press **OK**.
- 3 Press **OK** to pause/resume the slide show. Press **Back** to stop the slide show.

Resetting Default Settings

After you change your print settings, you may want to return to the default settings before printing other photos. Follow these steps:

- 1 Press the **Setup** button.
- 2 Press ▲ or ▼ to highlight **Restore Factory Settings**.
- 3 Press **OK**.

Other Great Features

For detailed information on these features, see your *Printer Basics* book or on-screen *User's Guide*.

Print Wirelessly

You can use a Bluetooth®-enabled PDA, phone, computer, or other device to send images to your printer wirelessly with an optional Bluetooth photo print adapter.

Automatically Adjust Photos

Your printer automatically adjusts images with PhotoEnhance™ for the best results. If your camera has PRINT Image Matching® (P.I.M.) or Exif Print support, you can use these features to automatically adjust your photos for the best results.



Exif Print

Print Directly onto CDs



You can create great-looking custom CDs or DVDs. Print on ink jet-printable CDs without a computer or by using the included EPSON Print CD software.

Save Files

The printer lets you save the photo files from your camera's memory card directly to a CD-R, DVD-R, thumb drive, or Zip disk, without a computer. You can also print photos from CDs, DVDs, thumb drives and Zip disks.

Maintain Your Printer

You can maintain your printer right from its control panel. You can clean the print head if you see banding or other image quality issues, or you can replace an ink cartridge using the control panel.



410228400

Epson, Epson Stylus, and Print Image Matching and the Print Image Matching logo are registered trademarks of Seiko Epson Corporation. ColorLife is a registered trademark and PhotoEnhance is a trademark of Epson America, Inc.

General notice: Other product names are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

© 2005 Epson America, Inc. 7/05

CPD-20397
Printed in XXXXXX XX.XX-XX
XXX