

 
Start Here

Epson Stylus® Photo R340

Please read these instructions before using the printer.

1 Unpack


- 1** If any of these items are missing, contact Epson® as described on the back of this sheet.

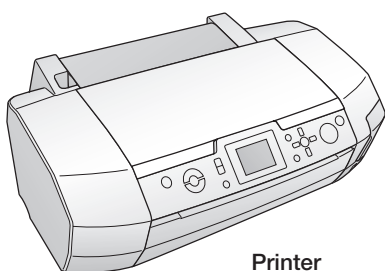


Printer



 Printer Basics

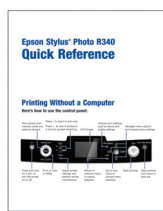

Quick Reference Card

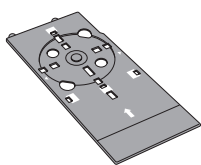 


CD/DVD tray



Small CD insert



 CD position check disk

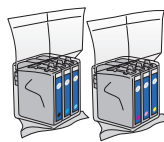


Ink cartridges





Software CD-ROM

 - 2** Remove all of the exterior tape.

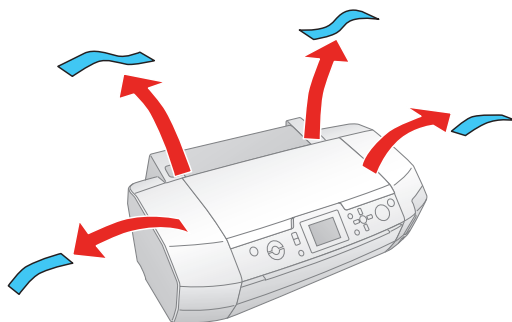

  - 3** Lift the printer cover, then remove the tape from the ink cartridge cover.

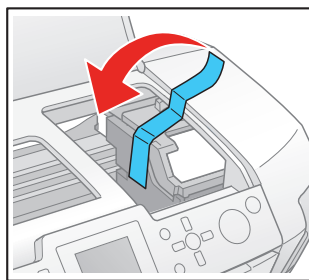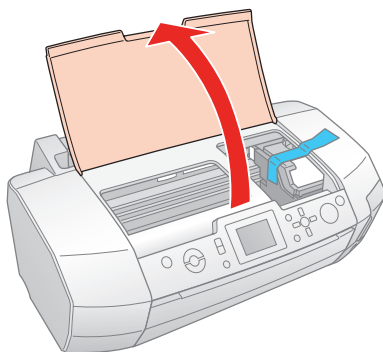


410228300


2

Turn On the Printer

 - 1** Plug in the power cable.

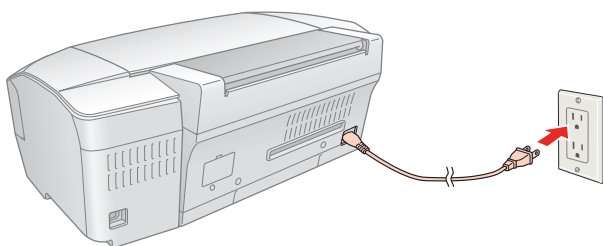


- 2** Press the  power button.

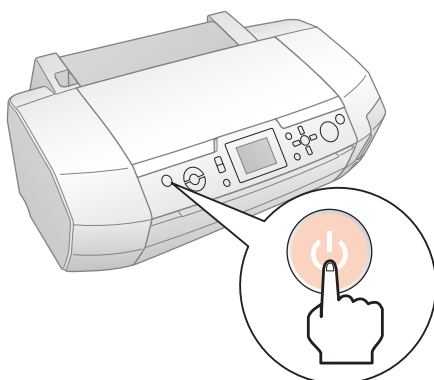 
**3**

Install Ink Cartridges

 
- 1** Open the printer cover.

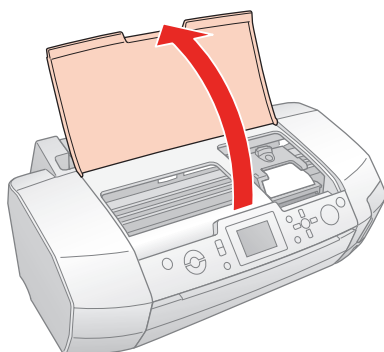


- 2** Open the ink cartridge cover.

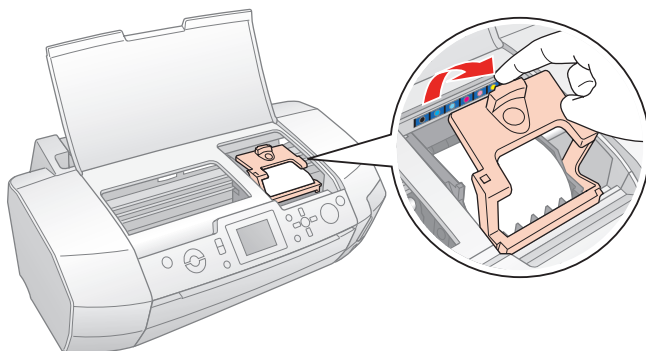 


- 3** Remove the paper insert.

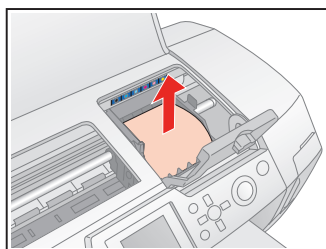 


- 4** Unpack the ink cartridges.

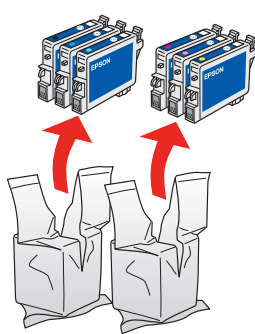 

 
- 5** Insert the cartridges in the holder for each color.

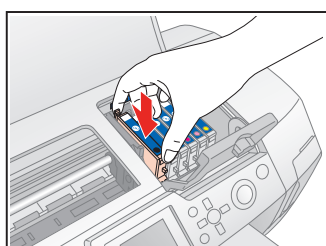

 
- 6** Press the cartridges down until they click.

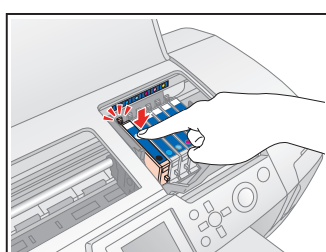

 
- 7** Close the ink cartridge cover. Make sure it clicks into place.

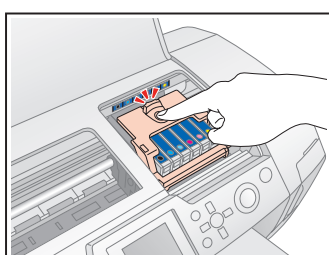

- 8** Close the printer cover.

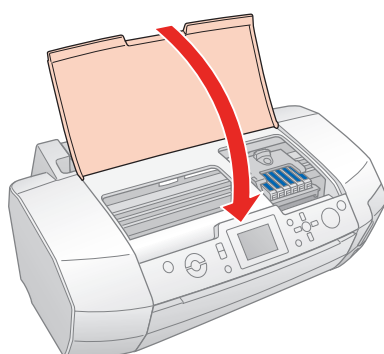 

 
- 9** Press the **OK** button to charge ink. Charging takes about 2 minutes. When charging is complete, press **OK**.

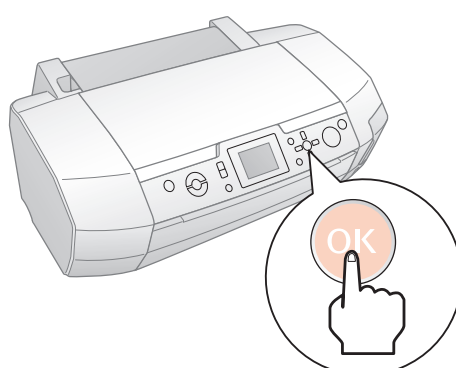


4

Load Paper

 
- 1 Flip open the paper support and pull up the extension.

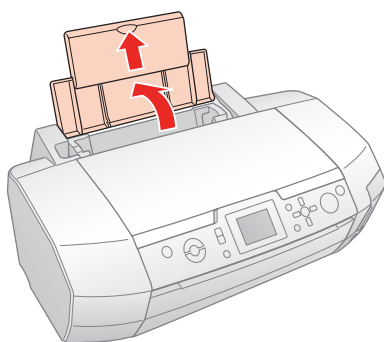

 
- 2 Open the output tray and pull out the extension.

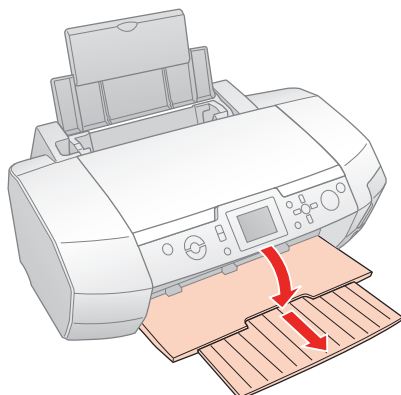

- 3 Slide the edge guide to the left.

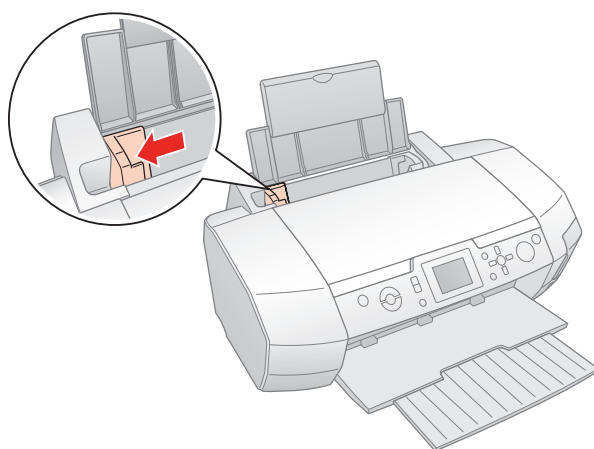 

 
- 4 Load the paper under the tab against the right edge guide.

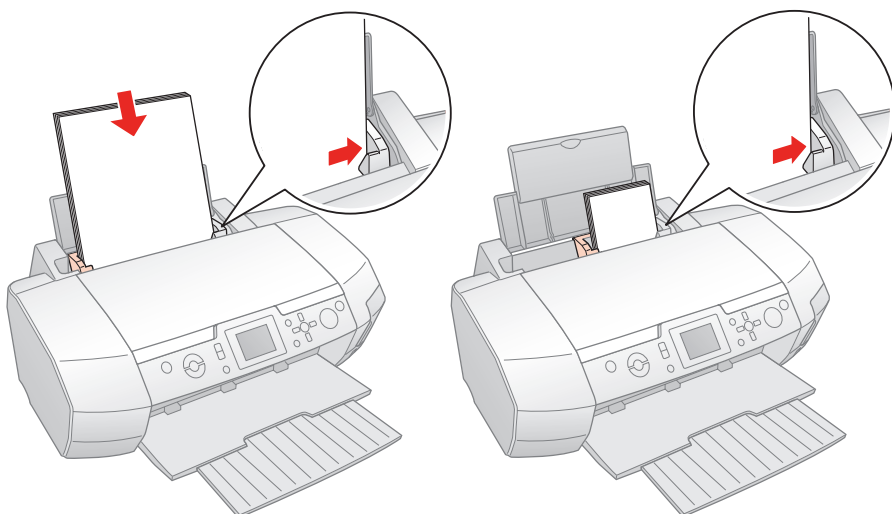

Letter

4 x 6 in

 - 5 Slide the left edge guide over.

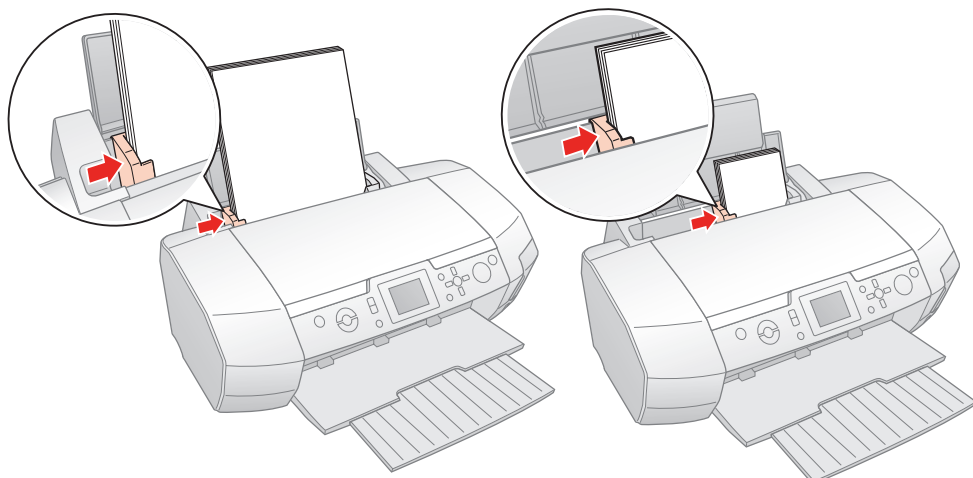

Letter

4 x 6 in

Install Software

 
Your software works with Windows® 98SE, Me, 2000, XP, and Macintosh® OS X 10.2.4 and later.

Windows


- 1 Make sure the printer is **NOT CONNECTED** to your computer.




Note: If you see a screen like this, click **Cancel** and disconnect the USB cable. You can't install your software that way.

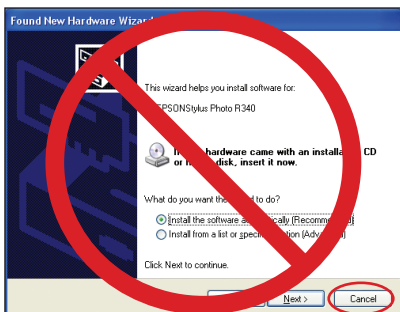

 
- 2 Insert the Epson CD-ROM.
- 3 Read the license agreement that appears and click **AGREE**.

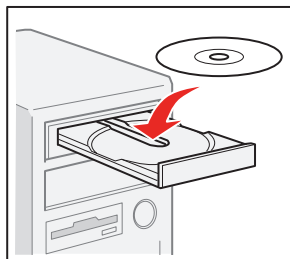

 - 4 If you see a message like this, click **OK** to begin installing your printer driver.

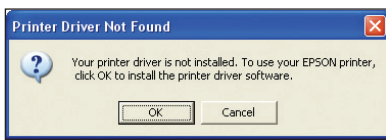

 - 5 When you see this screen, connect the USB cable. Connect the square end of your USB cable to the back of your printer and the flat end of the USB cable to your computer. (You can connect to any open port.)

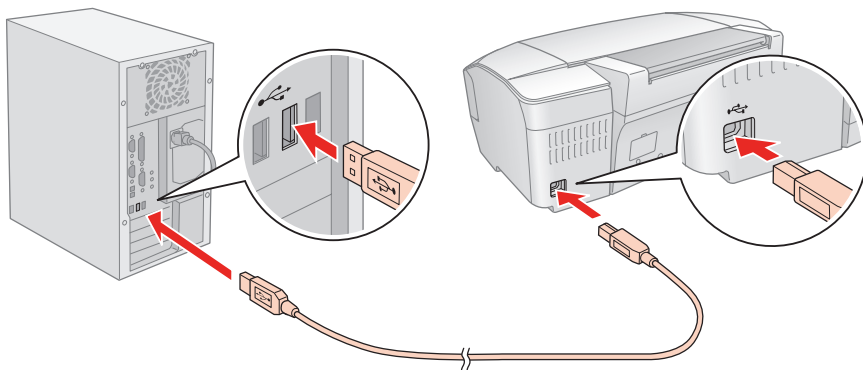

- 6 Click **Print Test Page**. Then click **Next** to install additional software.
- 7 Install any additional software. When you are done installing software, click **Exit**. The registration screen appears.
- 8 Follow the on-screen instructions to register your printer.
- 9 When you're done, remove the CD-ROM and restart your computer.

 
You're ready to print! See the *Printer Basics* book or your on-screen *User's Guide*.

Macintosh

- 1 Insert the Epson CD-ROM.
- 2 Open the Epson CD-ROM desktop icon and double-click the  **Epson** icon.
- 3 Read the license agreement that appears and click **AGREE**.
- 4 Click **Install Printer Driver** and follow the on-screen instructions. Software installation takes several minutes.




- 5 Install any additional software and the *User's Guide*. When you are done installing software, click **Exit**. The registration screen appears.
- 6 Follow the on-screen instructions to register your printer.
- 7 Connect the USB cable. Use any open USB port.

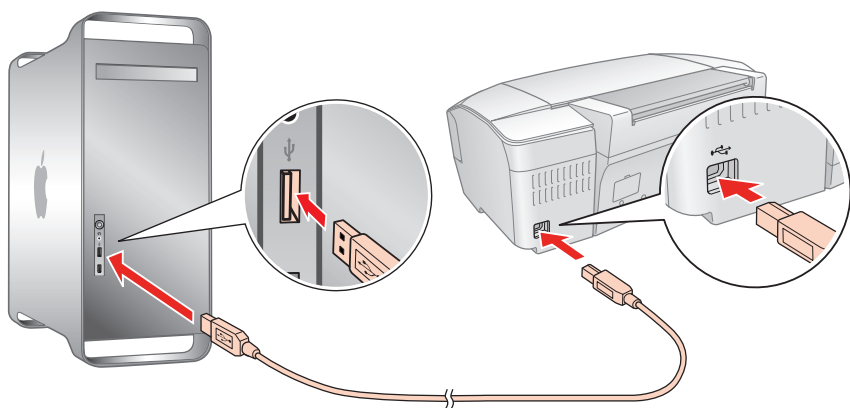


- 8 Remove the CD and restart your Macintosh.
- 9 Open the **Applications > Utilities** folder and select the **Printer Setup Utility** (Mac OS® X 10.3.x to 10.4.x) or **Print Center** (Mac OS 10.2.4).
- 10 Click the **Add** button.
- 11 In Mac OS X 10.4.x, select **Stylus Photo R340**. If it doesn't appear, click **More Printers**, select **Epson USB**, choose **Stylus Photo R340**, and click **Add**.

 In Mac OS X 10.2.4 to 10.3.x, select **EPSON USB** at the top and **Stylus Photo R340** below.

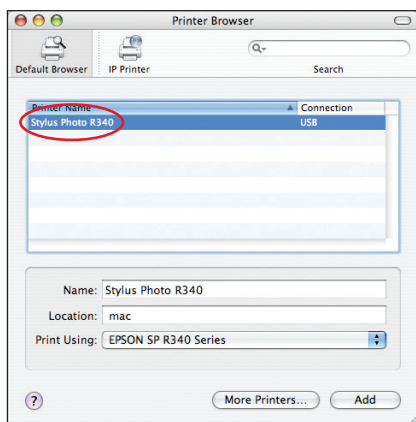

Mac OS X 10.4.x

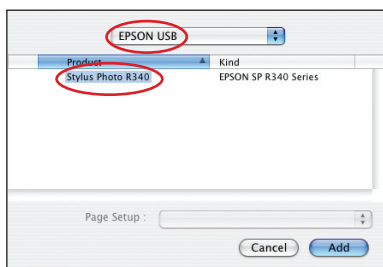 

Mac OS X 10.2.4 to 10.3.x

- 12 Click **Add**.
- 13 Quit **Printer Setup Utility** or the **Print Center**.

You're ready to print! See the *Printer Basics* book or your on-screen *User's Guide*.

Solving Problems

The printer makes noise after ink cartridge installation.

- The first time you install ink cartridges, the printer must charge its print head for a minute or so. Wait until charging finishes before you turn off the printer, or it may charge improperly and use excess ink the next time you turn it on.
- Turn off the printer, then make sure the ink cartridges are inserted completely and the ink cartridge cover is closed completely. Also make sure no packing material remains in the printer. Wait a moment, then turn the printer back on to clear the error.

You're having problems installing the printer software.

- Make sure your printer is turned on and the cable is securely connected at both ends. Then carefully follow the installation instructions. Also make sure your system meets the System Requirements listed in the *Printer Basics* book.
- Close your other programs, including any screen savers and virus protection software, and install the software again.
- In Windows, make sure your printer is selected as the default printer and that the correct port is shown in the printer properties. See your Windows Help for instructions.

Note: See your *Printer Basics* book for more help with solving setup problems.

Any Questions?

Look here for answers:

 
Printer Basics

Basic steps for using the printer.



Quick Reference Card

See how easy it is to print without a computer.

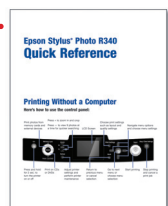

On-screen User's Guide

Double-click the desktop shortcut for easy access to Epson Stylus Photo R340 information.

On-screen help with your software

Select **Help** or **?** when you're using your software.

Technical Support

- **Internet**
<http://support.epson.com>
- **Automated Telephone Services**
To use these services, you must have a touch tone telephone and call (800) 922-8911. Your Epson SoundAdviceSM Express Code is 82720. Use this code to quickly select the Epson Stylus R340 in SoundAdvice.
- **To speak to a technical support representative**
Dial (562) 276-7296 (U.S.), 6 AM to 8 PM, Pacific Time, Monday through Friday and 7 AM to 4 PM, Saturday, or (905) 709-2567 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Toll or long distance charges may apply.

Software Technical Support

ArcSoft PhotoImpressionTM

(510) 440-9901

Web: www.arcsoft.com

E-mail: support@arcsoft.com

Need Paper and Ink?

You can purchase genuine Epson ink and paper from an authorized Epson reseller. To find the nearest reseller, please call 800-GO-EPSON (800-463-7766). To purchase online, visit www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for reseller referral.

Epson Ink



T048120
Black



T048220
Cyan



T048320
Magenta



T048920
Color Multipack



T048420
Yellow



T048520
Light Cyan



T048620
Light Magenta

Epson Paper



Premium Glossy Photo Paper

Heavyweight paper with a high gloss finish for beautiful photographs in a variety of sizes, with borders or borderless.



Glossy Photo Paper

Photo quality, heavyweight glossy paper available in a variety of sizes, including letter, 4 x 6, and panoramic. Perfect for color photo keepsakes of snapshots, reprints, and enlargements.



Matte Paper Heavyweight

Light- and water-resistant matte finish paper for printing photos and graphics.