

Start Here



PictureMate®
personal photo lab

Deluxe
Viewer
Edition



*Set up your PictureMate and
print—no computer required!*

Note: To print from your computer, see *Using PictureMate With a Computer* and your CD after completing these steps.

 
1 *Unpack*

PictureMate comes with all these items in the box.


Remove all the tape and packing material from PictureMate, including the plastic film on the photo viewer screen.



PictureMate
Deluxe Viewer Edition




Power adapter

 

PictureMate
Photo Paper



Power cable

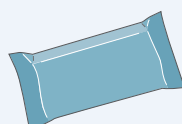

PictureMate
Photo Cartridge



*Using PictureMate
Without a Computer*
booklet

 


PictureMate
Software
CD



*Using PictureMate
With a Computer*
booklet

Note: If you purchased the optional PictureMate Deluxe Viewer Edition battery, see *Using PictureMate Without a Computer* for instructions. Make sure you install the photo cartridge and plug in the AC adapter and power cable before installing the battery.



Caution: To avoid damaging your PictureMate, keep it out of the sun and don't leave it in your car or other location where it can get too hot or too cold.




410098700



Printed in XXXXXX XX.XX-XX XXX

2 *Install the Photo Cartridge*

- 1 Open the cartridge door on the back of PictureMate. You see the release lever.

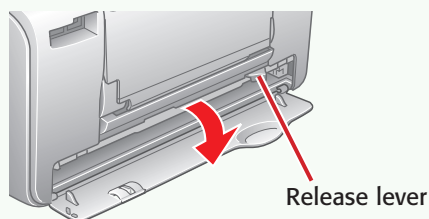


- 2 Move the lever to the **Release** position by sliding it in the direction shown.

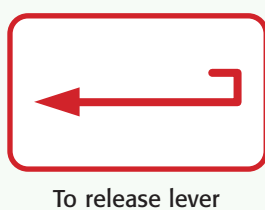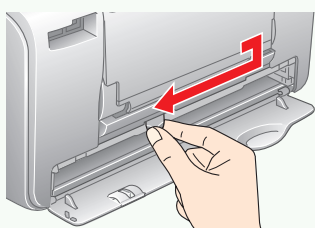


To release lever


- 3 Shake the photo cartridge a few times in its package, then unwrap the cartridge.

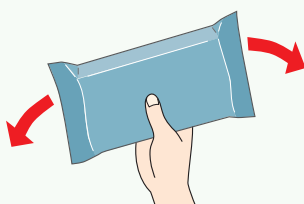


- 4 Slide the cartridge straight into the slot, label side up, until it is fully inserted. Push in both sides evenly to make sure it is not crooked.

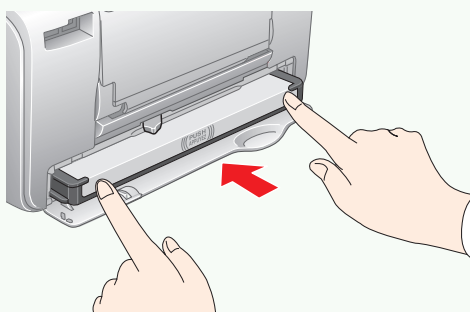

Caution: Make sure both sides of the cartridge are even, or ink may leak. If either side is sticking out, remove the cartridge and reinstall it.

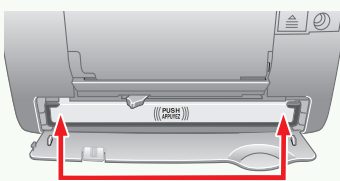


Right

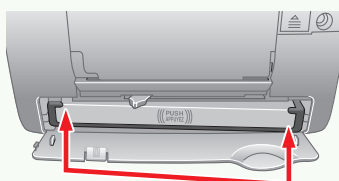


Wrong

- 5 Move the lever right to the **Lock** position. If it does not lock in place, the cartridge is not installed correctly. Release it and try again.

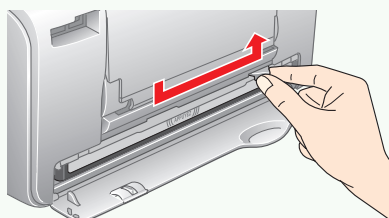

- 6** Close the cartridge door. Make sure it snaps shut.

If the door does not close completely, the cartridge is not installed correctly. Remove it and try again.

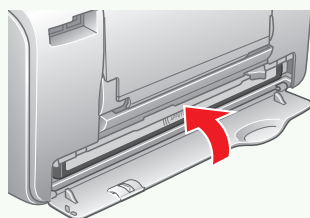

- 7** Flip the handle to the back of PictureMate and all the way down.



3 Load Paper

Your PictureMate comes with photo paper made especially for it.


Caution: Don't load or print on plain paper; this may damage PictureMate.

- 1** Flip up the photo viewer screen.


- 2** Open the paper support.

- 3** Pull up the paper support all the way.

- 4** Open the output tray.

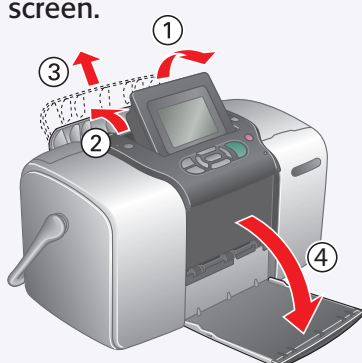

Note: Make sure the paper support is fully extended and the handle is all the way down.

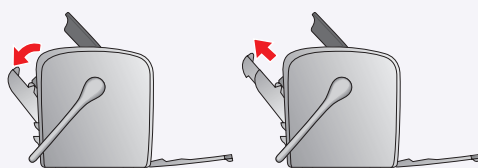


- 5** Place your paper against the right edge, with the glossy side up.

Load up to 20 sheets at one time.



- 6** Slide the edge guide against the paper.

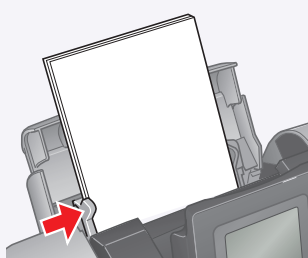

Note: Keep unused paper in the original package and store it flat to prevent curling.


4 Plug In and Turn On PictureMate

1 Connect the power cable to the power adapter.

2 Plug the small cable into the back of PictureMate.

3 Plug the other end of the power cable into a standard power outlet.

4 Press the  **On** button to turn on PictureMate.

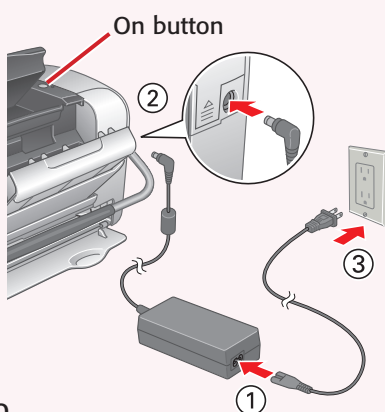


PictureMate gets the cartridge ready for printing.

After a few minutes, you see a message that PictureMate is ready.


5 Press the **OK** button.

You see this message on the photo viewer screen:

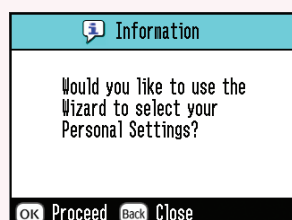


6 Do one of the following:


- If you want to start printing right away, press the **Back** button. Then go to section 5.
- If you want to select your personal settings, press the **OK** button and follow the steps below.

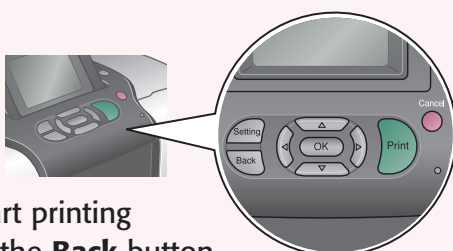

After you press **OK**, you see the first wizard message:

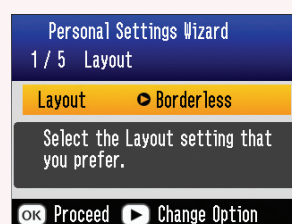

7 Press the  button. You see a list of layout settings:

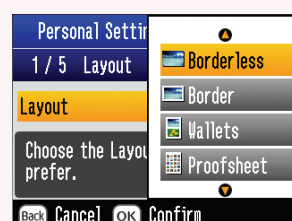

8 Press the  or  button to highlight the layout you want to use most often. Then press the **OK** button.

9 Press the **OK** button again to move to the Color Effects setting.

Repeat steps 7 and 8 to select the color, date stamp, time stamp, and print mode settings you want to use most of the time.


5 *Insert a Memory Card*

Remove the memory card containing photos from your camera, then follow these steps:


- 1 Flip down the memory card door.



- 2 Insert your memory card into the correct slot.

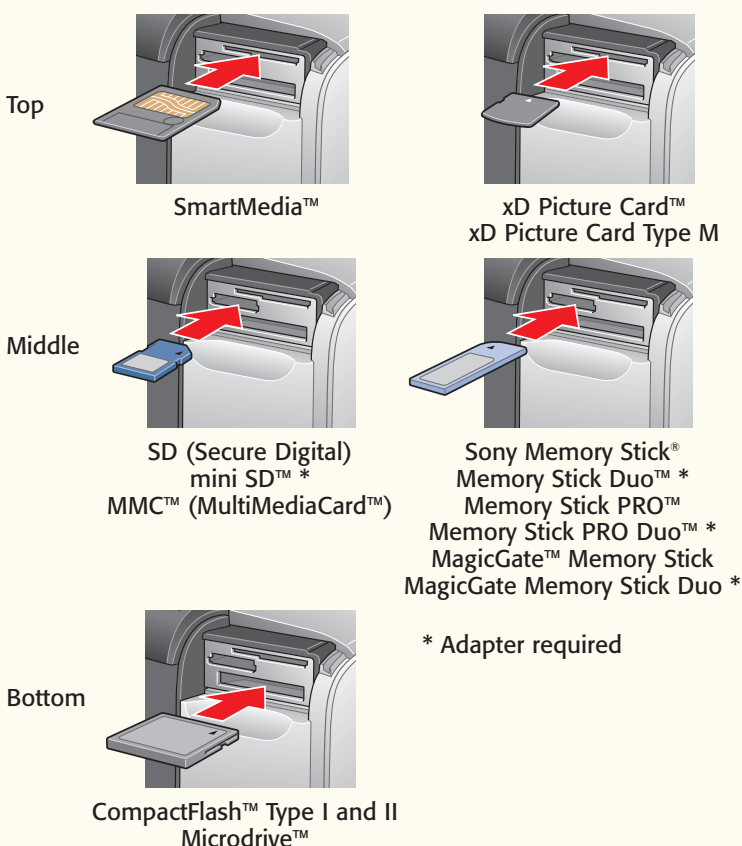

- 3 Push the card in until it stops (it won't go in all the way). The memory card light comes on, and PictureMate tells you how many photos are on the card.

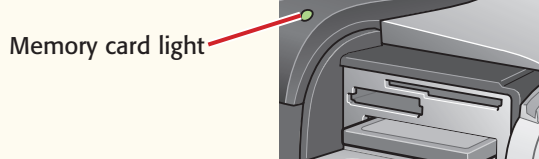

Note: Insert just one card at a time. PictureMate does not read multiple cards at once.

- 4 Close the memory card door.




6 *Print Your Photos*

When **Print All** is highlighted on the screen, you can print all the photos on your memory card. Press the green **Print** button twice. To select individual photos, follow these steps:



1 Press the $\triangleright$ button to highlight **Print Some**.

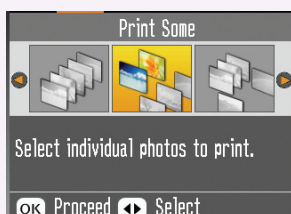

2 Press the **OK** button. You see your first photo on the screen:


3 If you want to print this photo, press the $\triangle$ button to select the number of copies.



4 Press the $\triangleright$ button to see the next photo on your card. If you want to print it, press the $\triangle$ button to select the number of copies.

5 Repeat step 4 for all the photos you want to print.

6 When you have chosen all the photos you want, press the **Print** button.

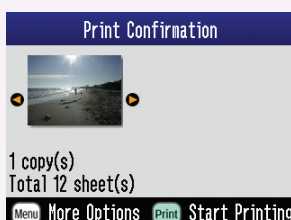

You see a Print Confirmation:

You can press the $\triangleright$ or $\triangleleft$ button to review the photos you have selected.

7 Press the **Print** button again to start printing.

For More Information

Printing Without a Computer

See this booklet to learn more about printing and saving photos without using a computer. You can crop, select photos by date, and print your photos with Disney® character frames.




Printing With a Computer

See this booklet and CD for steps on installing software and the on-screen *User's Guide*. View the *User's Guide* for complete instructions on using PictureMate.



Help on the Photo Viewer Screen

Check the Help menu for special tips on using PictureMate. Press the **Menu** button. Press $\triangle$ or ∇ to select **Help**, then press $\triangleright$. Press $\triangle$ or ∇ to select a topic, then press $\triangleright$.

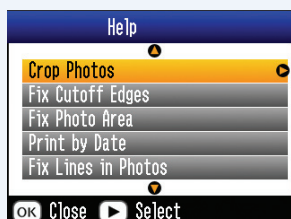

Epson and PictureMate are registered trademarks of Seiko Epson Corporation.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.