

 
Start Here

Epson Stylus® Photo R220

Please read these instructions before using the printer.

1 Unpack

- 1** If any of these items are missing, contact Epson® as described on the back of this sheet.

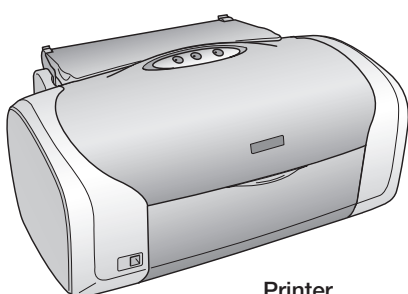


Printer



Software
CD-ROM



 
Printer Basics



Power cord



 Small CD insert

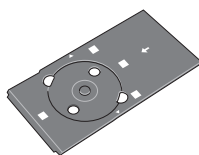

CD/DVD tray

 


CD position
check disk





Ink cartridges


- 2** Remove all of the exterior tape.

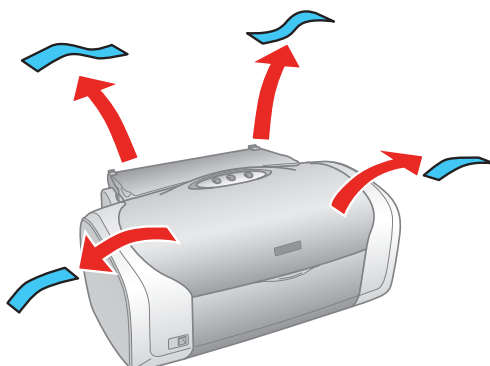

  - 3** Flip open the paper support and pull up the extension. Lift the printer cover, then open the output tray and pull out the extension.

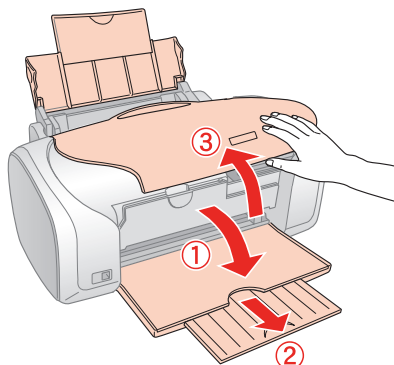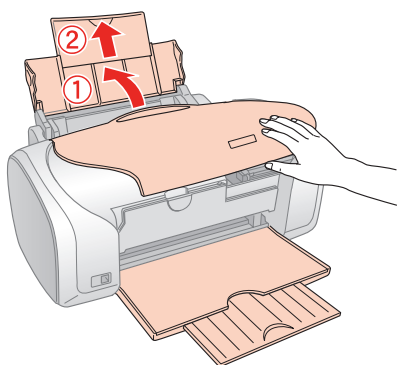

 - 4** Remove the tape from the ink cartridge holder and CD/DVD tray guide.

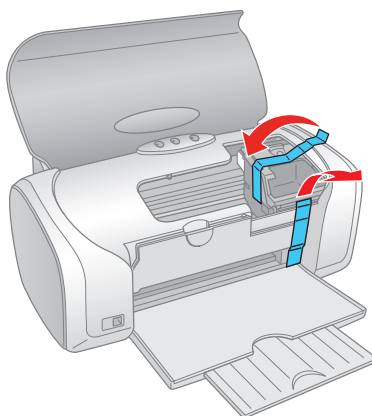


410258100


2

Turn On the Printer

 - 1** Connect the power cable.

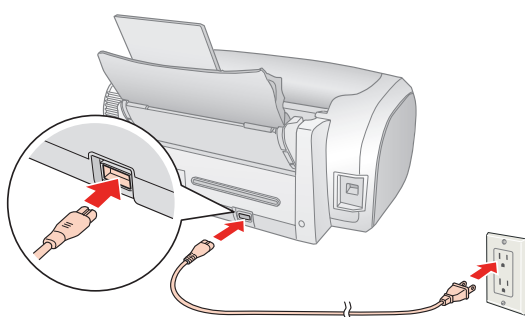


- 2** Press the  power button.

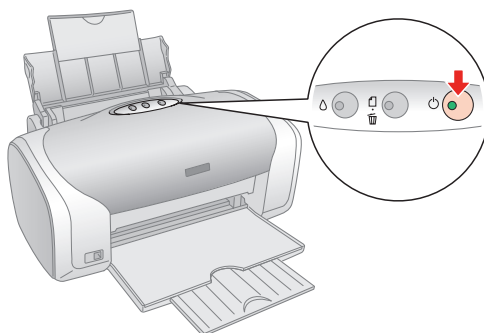 
**3**

Install Ink Cartridges

 
- 1** Open the printer cover.

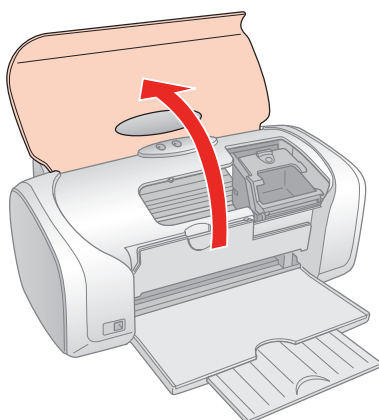


- 2** Open the ink cartridge cover.

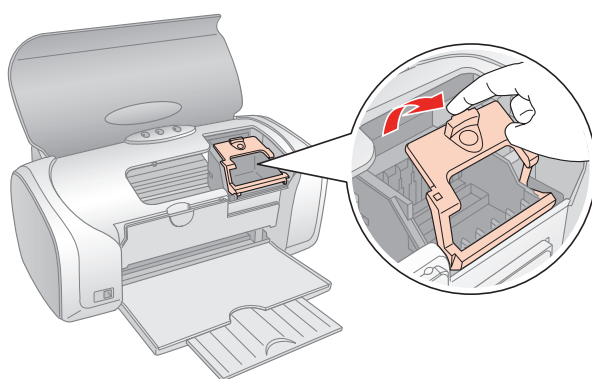 


- 3** Unpack the ink cartridges.

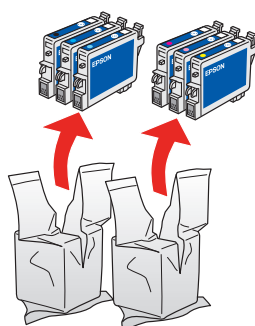 

 
- 4** Insert the cartridges in the holder for each color.

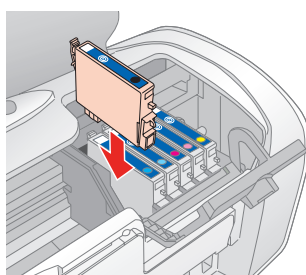

 
- 5** Press the cartridges down until they click.

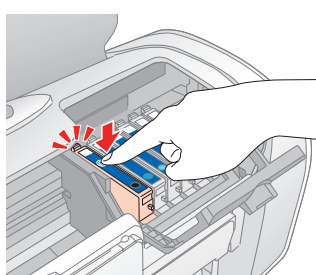

 
- 6** Close the ink cartridge cover. Make sure it clicks into place.

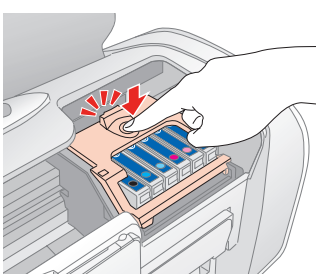

- 7** Close the printer cover.

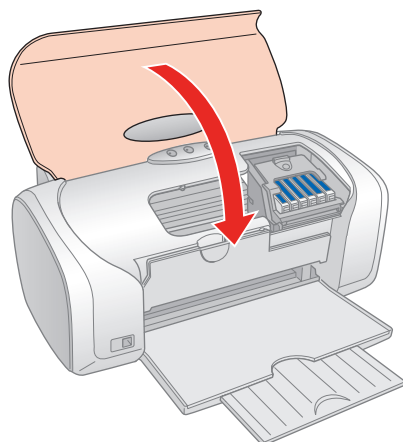 

 
- 8** Press the  ink button to charge ink. Charging takes about 2 minutes.

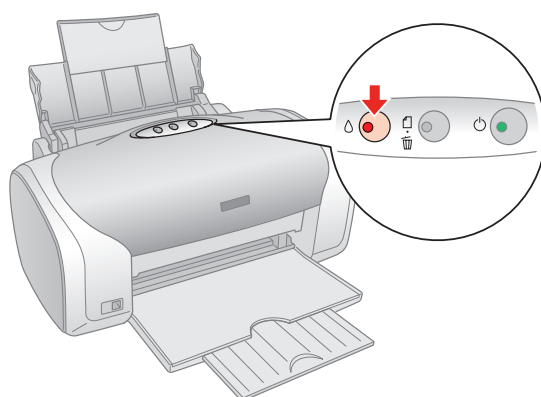


4

Load Paper

 - 1 Slide the edge guide to the left.

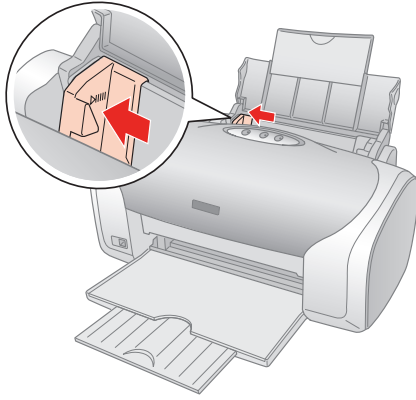


 - 2 Load the paper under the tab against the right edge guide.

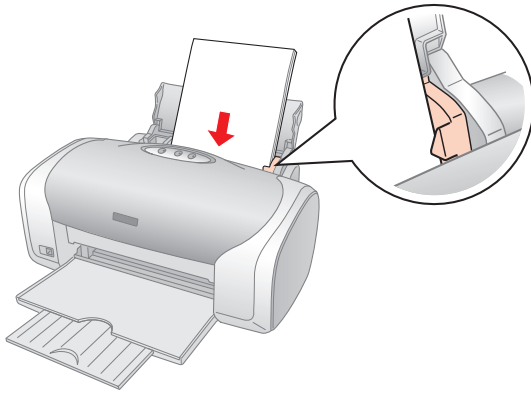


- 3 Slide the left edge guide over.

 Letter

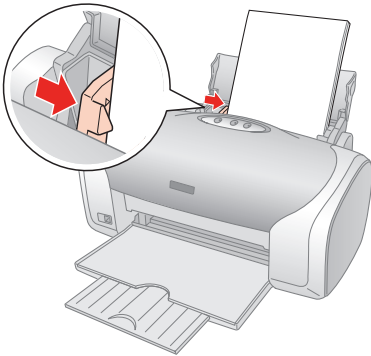

4 x 6 in

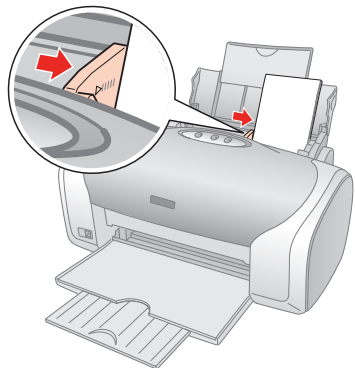 


Install Software


Your software works with Windows® 98SE, Me, 2000, XP, and Macintosh® OS X 10.2.4 and later.

Windows

 - 1 Make sure the printer is NOT CONNECTED to your computer.

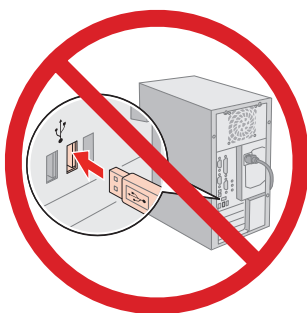


 Note: If you see a screen like this, click **Cancel** and disconnect the USB cable. You can't install your software that way.

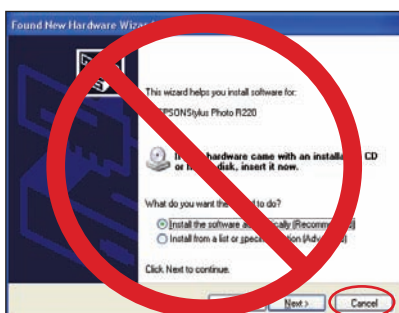


- 2 Insert the Epson CD-ROM.

 
- 3 Read the license agreement that appears and click **AGREE**.

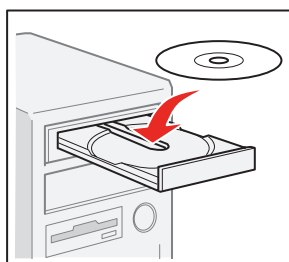

 - 4 If you see a message like this, click **OK** to begin installing your printer driver.

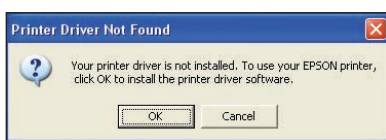

 - 5 When you see this screen, connect the USB cable. Connect the square end of your USB cable to the back of your printer and the flat end of the USB cable to your computer. (You can connect to any open port.)

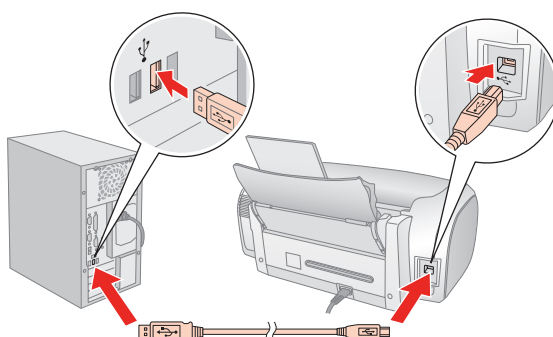

- 6 Click **Print Test Page**. Then click **Next** to install additional software.
- 7 Install any additional software. When you are done installing software, click **Exit**. The registration screen appears.
- 8 Follow the on-screen instructions to register your printer.
- 9 When you're done, remove the CD-ROM and restart your computer.

 
You're ready to print! See the *Printer Basics* book or your on-screen *Reference Guide*.

Macintosh

- 1 Insert the Epson CD-ROM.
- 2 Open the Epson CD-ROM desktop icon and double-click the  **Epson** icon.
- 3 Read the license agreement that appears and click **AGREE**.
- 4 Click **Install Printer Driver** and follow the on-screen instructions. Software installation takes several minutes.




- 5 Install any additional software and the *Reference Guide*. When you are done installing software, click **Exit**. The registration screen appears.
- 6 Follow the on-screen instructions to register your printer.
- 7 Connect the USB cable. Use any open USB port.

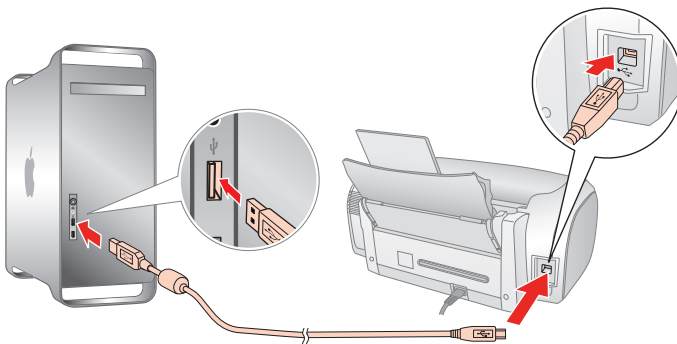


- 8 Remove the CD and restart your Macintosh.
- 9 Open the **Applications > Utilities** folder and select the **Printer Setup Utility** (Mac OS® 10.3.x to 10.4.x) or **Print Center** (Mac OS 10.2.4).
- 10 Click the **Add** button.
- 11 In Mac OS X 10.4.x, select **Stylus Photo R220**.

 In Mac OS X 10.2.4 to 10.3.x, select **EPSON USB** at the top and **Stylus Photo R220** below.

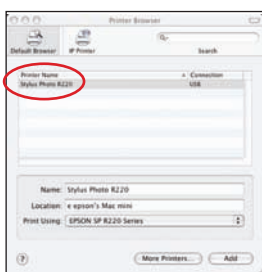

Mac OS X 10.4.x

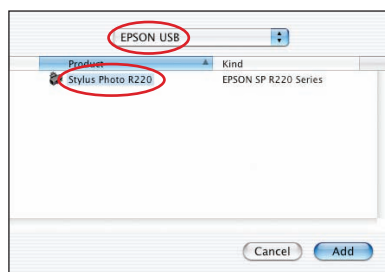 

Mac OS X 10.2.4 to 10.3.x

- 12 Click **Add**.
- 13 Quit **Printer Setup Utility** or the **Print Center**.

You're ready to print! See the *Printer Basics* book or your on-screen *Reference Guide*.

Solving Problems

The printer makes noise after ink cartridge installation.

- The first time you install ink cartridges, the printer must charge its print head for a minute or so. Wait until charging finishes (the green ⏻ power light stops flashing) before you turn off the printer, or it may charge improperly and use excess ink the next time you turn it on.
- If the printer stops moving or making noise, but the green ⏻ power light is still flashing after 5 minutes, turn off the printer. If the light is still flashing when you turn it back on, contact Epson as described in “Any Questions?”.
- Turn off the printer, then make sure the ink cartridges are inserted completely and the ink cartridge cover is closed completely. Also make sure no packing material remains in the printer. Wait a moment, then turn the printer back on to clear the error.

You’re having problems installing the printer software.

- Make sure your printer is turned on and the cable is securely connected at both ends. Then carefully follow the installation instructions. Also make sure your system meets the System Requirements listed in the *Printer Basics* book.
- Close your other programs, including any screen savers and virus protection software, and install the software again.
- In Windows, make sure your printer is selected as the default printer and that the correct port is shown in the printer properties.

Any Questions?

Look here for answers:

Printer Basics

Basic steps for using the printer.



On-screen Reference Guide

Double-click the desktop shortcut for easy access to Epson Stylus Photo R220 information.

On-screen help with your software

Select **Help** or **?** when you’re using your software.

Technical Support

- **Internet**
<http://support.epson.com>
- **Automated Telephone Services**
To use these services, you must have a touch tone telephone and call (800) 922-8911. Your Epson SoundAdviceSM Express Code is **82700**. Use this code to quickly select the Epson Stylus R220 in SoundAdvice.
- **To speak to a technical support representative**
Dial **(562) 276-7296** (U.S.), 6 AM to 8 PM, Pacific Time, Monday through Friday and 7 AM to 4 PM, Saturday, or **(905) 709-2567** (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday.

Software Technical Support

ArcSoft PhotoImpression™

(510) 440-9901

Web: www.arcsoft.com

E-mail: support@arcsoft.com

Need Paper and Ink?

You can purchase genuine Epson ink and paper from an authorized Epson reseller. To find the nearest reseller, please call 800-GO-EPSON (800-463-7766). To purchase online, visit www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for reseller referral.

Epson Ink

T048120 Black	T048220 Cyan	T048320 Magenta	T048920 Color Multipack
T048420 Yellow	T048520 Light Cyan	T048620 Light Magenta	

Epson Paper



Premium Glossy Photo Paper

Heavyweight paper with a high gloss finish for beautiful photographs in a variety of sizes, with borders or borderless.



Glossy Photo Paper

Photo quality, heavyweight glossy paper available in a variety of sizes, including letter, 4 x 6, and panoramic. Perfect for color photo keepsakes of snapshots, reprints, and enlargements.



Matte Paper Heavyweight

Light- and water-resistant matte finish paper for printing photos and graphics.

Epson and Epson Stylus are registered trademarks of Seiko Epson Corporation. SoundAdvice is a service mark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.