

Start Here

PM 200




Set up your PictureMate Pal and print—no computer required!


Note: To print from your computer, see the *Basics* book and your CD after completing these steps.

1 Unpack


PictureMate Pal comes with all these items in the box.

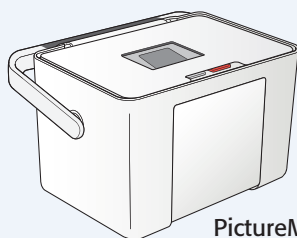


PictureMate Pal

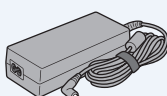


Power adapter

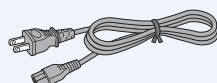

Power cable

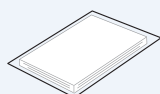

PictureMate Pal photo paper

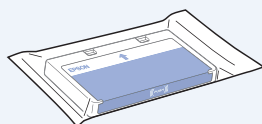

Initial PictureMate Pal photo cartridge




Basics book




PictureMate Pal Printer Software CD

- 1 Remove all the tape and packing material from the outside of PictureMate Pal.


- 2 Open the cartridge door on the back of PictureMate Pal.

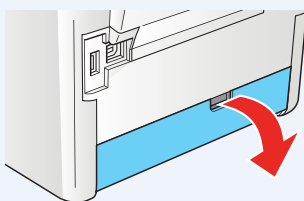

- 3 Remove the packing material from inside the cartridge slot.

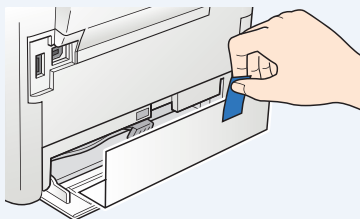

- 4 Close the cartridge door.

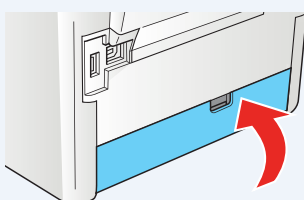


410591100

2 *Plug In and Turn On*


1 Connect the power adapter to the back of PictureMate Pal.

2 Connect the power cable to the power adapter.


3 Plug the other end of the power cable into a power outlet.

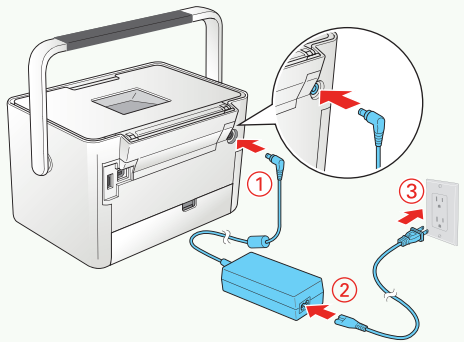

4 Flip the handle to the back.

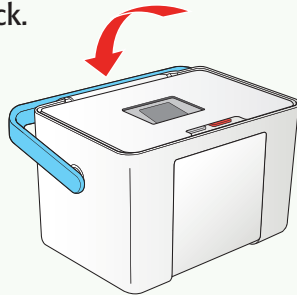


5 Open the paper support.

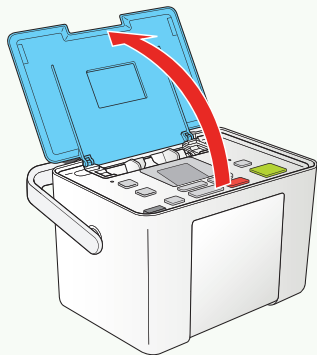

6 Press the I/⏻ **On** button to turn on PictureMate Pal.


After a moment, you see this on the photo viewer screen:

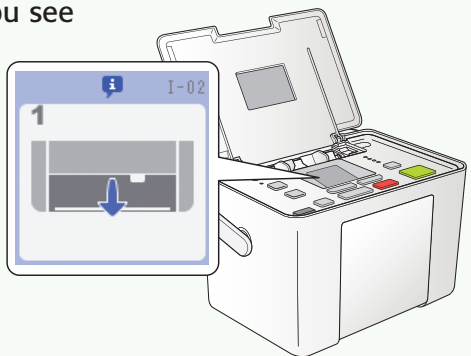


Now you can install your initial photo cartridge.

3 *Install the Initial Photo Cartridge*

1 Open the cartridge door.

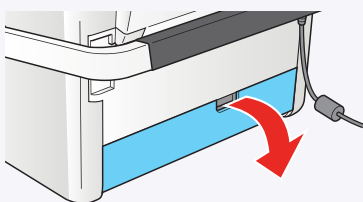


- 2 Slide the cartridge lever left to the **Release** position.

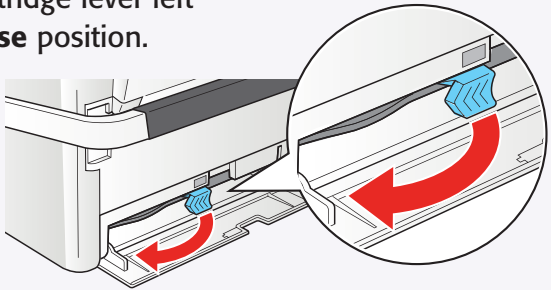


- 3 Remove the initial photo cartridge from its package.


Caution: Do not install a different PictureMate Pal cartridge for initial setup. Install only the initial photo cartridge that came with PictureMate Pal.

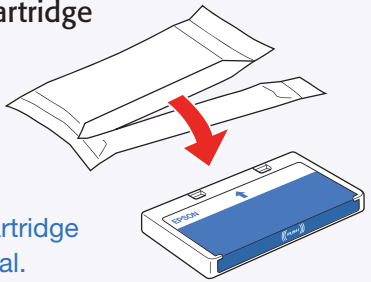

- 4 Slide the cartridge straight into the slot, label side up, until it clicks into place. It will not go in all the way.

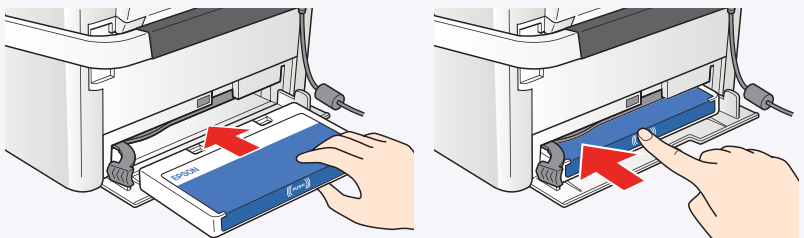


- 5 Slide the lever all the way right, to the **Lock** position.

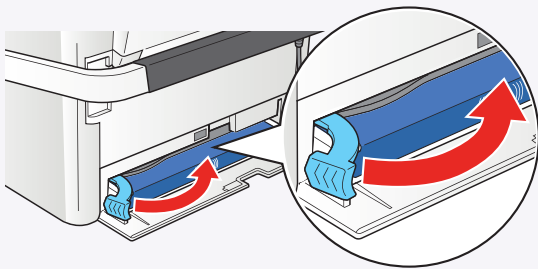

Caution: If the cartridge is not inserted correctly, ink may leak.

- 6 Close the cartridge door.

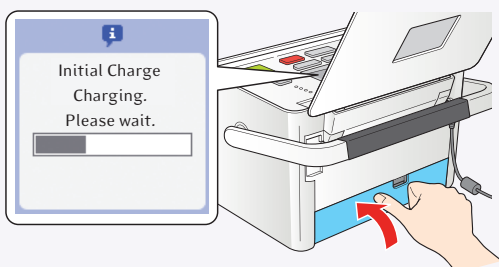

PictureMate Pal charges the print head for 3 to 4 minutes and displays the screen above.

- 7 When you see the **Charging complete** message on the photo viewer screen, press **OK**.

Press **OK**




4 Load Paper


PictureMate Pal comes with genuine Epson glossy photo paper made especially for printing lab quality photos.

Caution: Don't load or print on plain paper; this may damage PictureMate Pal.


- 1 Move the handle to the back.

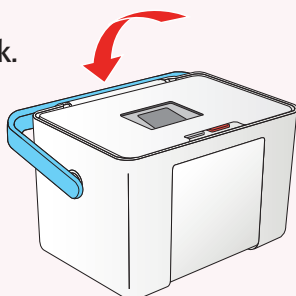


- 2 Open the paper support.

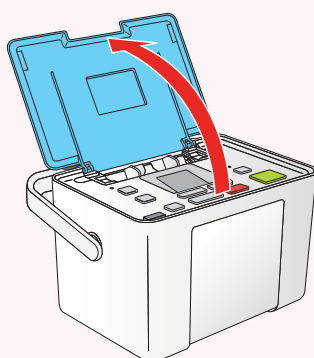

- 3 Press the **Open** button to open the output tray.

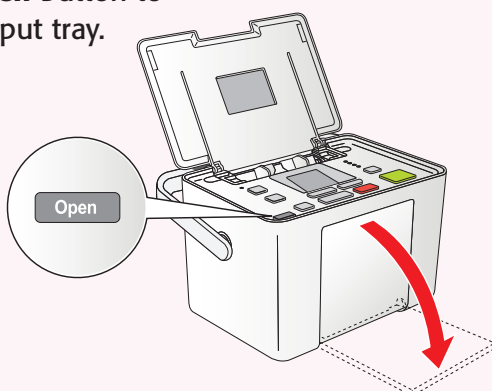


- 4 Slide the edge guides outward.

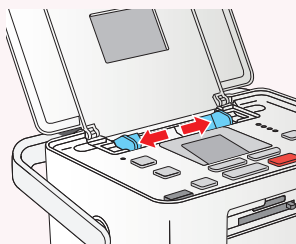

- 5 Load up to 20 sheets at a time. Fan the sheets to slightly separate them.


- 6 Place your paper into the slot between the edge guides with the glossy side up. Slide the edge guides inward slightly.

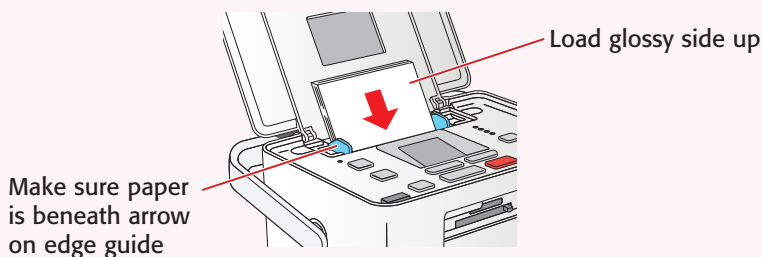

Note: Keep unused paper in the original package and store it flat to prevent curling.

5 *Insert a Memory Card*

- 1 Remove the memory card containing photos from your digital camera.
- 2 Insert your memory card into the correct slot on PictureMate Pal.

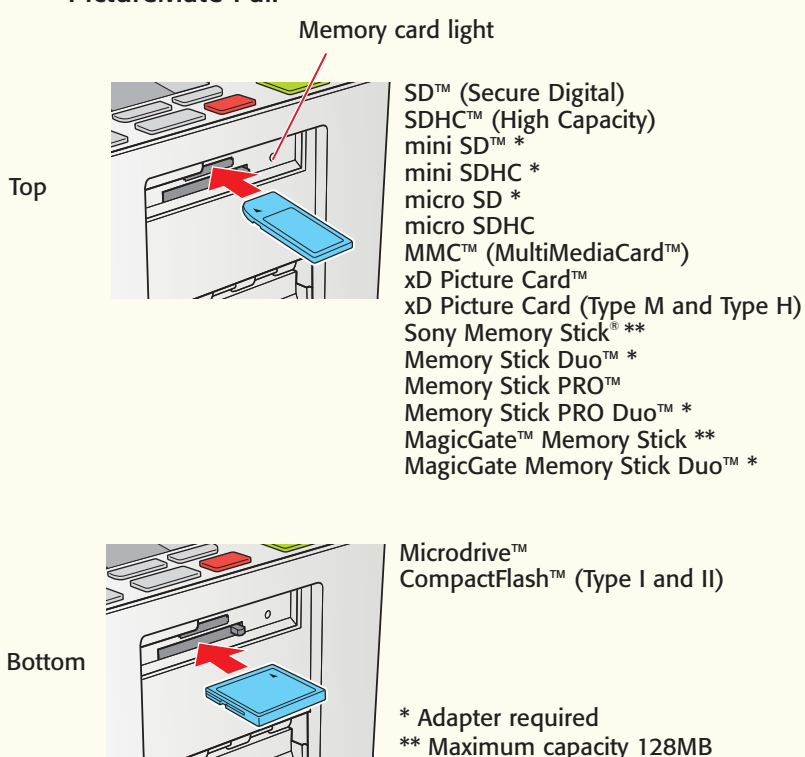


- 3 Push the card in until it stops (it won't go in all the way). The memory card light comes on and PictureMate Pal tells you how many photos are on the card.

Note: Insert just one card at a time. PictureMate Pal does not read multiple cards at once.

6 *Print Your Photos*

PictureMate Pal's photo viewer screen makes it easy to select the photos you want to print.

Select Some Photos

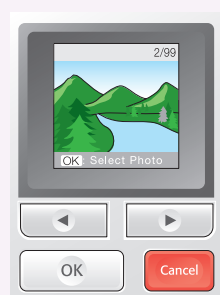

- 1 Press ◀ or ▶ to view the photo you want to print.
- 2 Press **OK** to select it.
- 3 To print more than one copy, press **OK** to increase the number of copies. (Press **Cancel** to decrease the number.)
- 4 To select more photos, press ◀ or ▶ to view the photo and press **OK** to select it. Repeat step 3 to select more copies, if necessary.
- 5 Continue with "Print Selected Photos" to the right.

Select All Photos

- 1 Press  **Select All**.
- 2 To print more than one copy of all the photos, press ► to increase the number of copies. (Press ◀ to decrease the number.)
- 3 Continue with “Print Selected Photos” below.

Print Selected Photos

- 1 Press **Layout** to select the layout of your photos on the paper.

Note: You can access other print options by pressing the **Menu** button, including selecting a **Proof Sheet** layout containing small images (thumbnails) of all your photos.

-  Borderless
-  Border
-  Wallet
-  Mini-wallet



- 2 Press  **Print**.
- 3 Press ◀ or ► to review your selected photos and copies on the preview screen.
- 4 Press  **Print** to print your photos.

More on PictureMate Pal

Check your printed manual

See the *Basics* book for instructions on printing from PictureMate Pal, your computer, and other devices. Also learn how to save photos on your computer, replace your Print Pack (photo paper and photo cartridge), take care of PictureMate Pal, and solve problems.



Check your on-screen manual

When you install your PictureMate Pal software from the CD, you'll see an icon for your on-screen **PictureMate Pal User's Guide** on your computer screen. Double-click that icon for comprehensive instructions on using PictureMate Pal and its software.



Note: For information on possible software updates for PictureMate Pal, go to <http://support.epson.com>, select **Printers**, and select your product under **Personal Photo Lab**. Then check for updated software in the **Drivers & Downloads** section.



Caution: To avoid damaging your PictureMate Pal, keep it out of the sun and don't leave it in your car or other location where it can get too hot or too cold.

Epson and PictureMate are registered trademarks and Exceed Your Vision is a trademark of Seiko Epson Corporation.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.