

PictureMate® Flash (PM 280) CD Drive Information

The built-in CD drive in your PictureMate Flash supports the following operations:

- Save your photos by burning them onto a CD-R or CD-RW disc (writing on the disc).
- View and print your photos from a CD or DVD (reading from the disc).

You may not be able to read all types of CDs or DVDs in the PictureMate Flash CD drive if the discs were written by another CD or DVD drive. Epson cannot guarantee the compatibility of all CDs or DVDs.

Epson and PictureMate are registered trademarks of Seiko Epson Corporation.

© 2006 Epson America, Inc. 7/06

CPD-22532

Printed in XXXXXX XX.XX-XX XXX



410787300