 


Start Here

Epson Stylus® CX7000F Series

 
1

Unpack

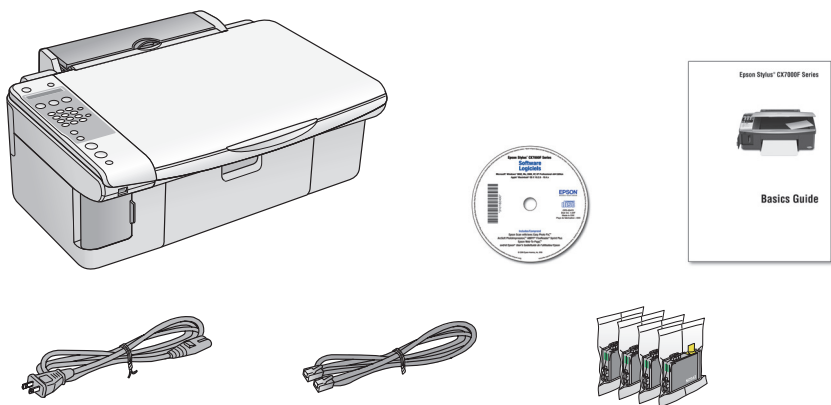


If anything is missing, contact Epson® as described on the back in “Any Questions?”.

- 1** Remove all the tape on the outside.

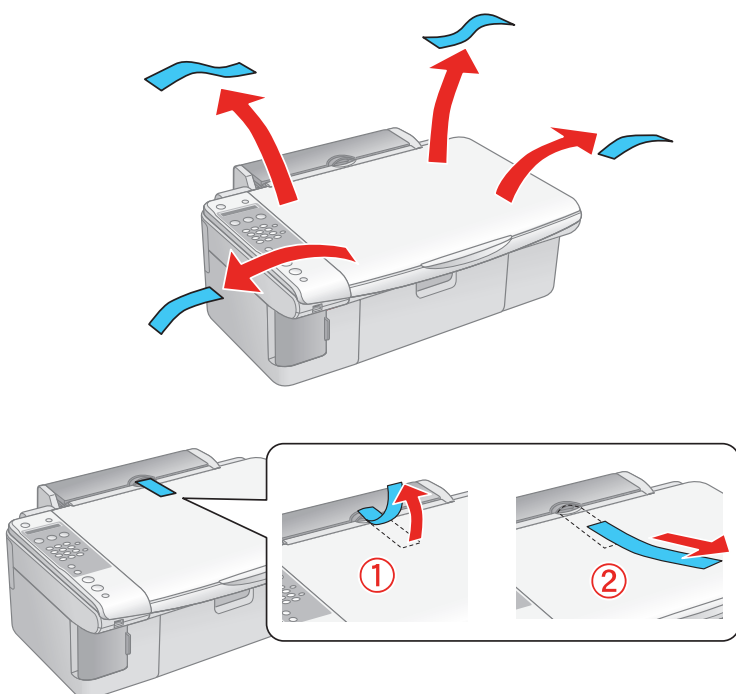


- 2** Lift up the scanner.

 - 3** Remove the tape from the ink cartridge holder.

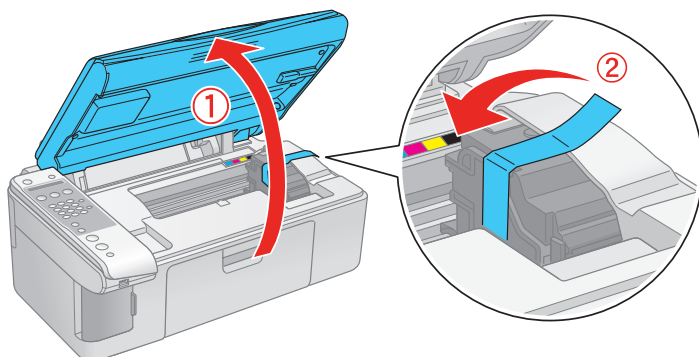

- 4** Close the scanner.

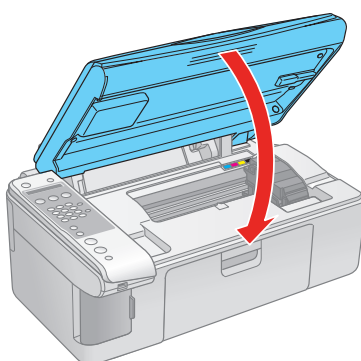 


410923300

EPSON®
EXCEED YOUR VISION


2

Turn On the CX7000F Series

 - 1 Connect the power cable.

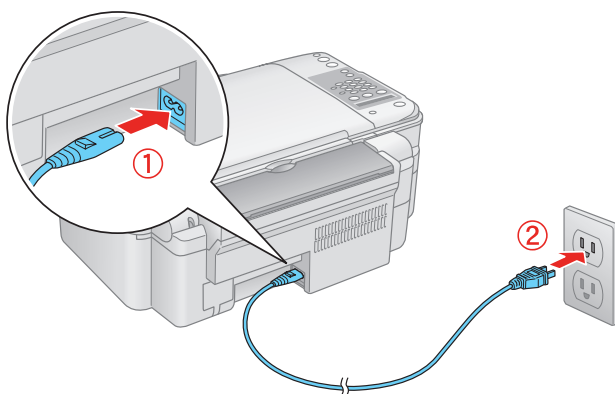

- 2 Press the  On button.

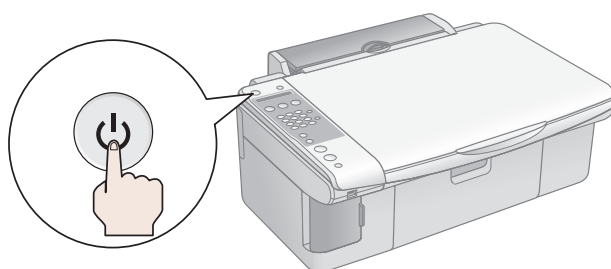 

- 3 You see **Region** on the display screen. Press the  **Start Color/OK** button.
- 4 You see **USA**. Press the  **Start Color/OK** button.
- 5 You see **Date/Time**. Press the  **Start Color/OK** button.
- 6 Use the number keys to enter the month, day, and year. Press the  **Start Color/OK** button.
- 7 Use the number keys to enter the hour and minutes. Press the  **Start Color/OK** button.
- 8 Press 1 to select **AM** or press 2 to select **PM**.
- 9 You see **No Cyan Magenta Yellow Black**. Press the  **Start Color/OK** button.

 
3

Install Ink Cartridges


Caution: Do not open ink cartridge packages until you are ready to install the ink. The ink cartridges are vacuum packed to maintain reliability.

Note: Don't load paper before installing the ink cartridges.


- 1 Lift up the scanner.

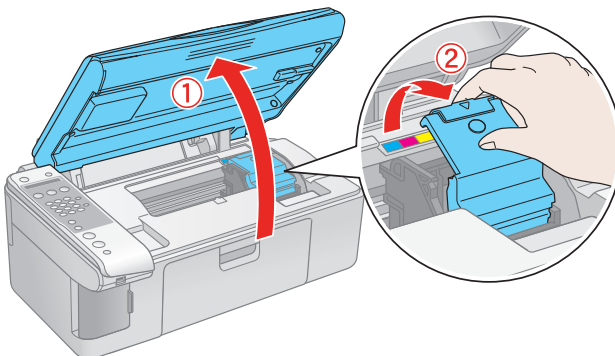

 
- 2 Open the ink cartridge cover.
- 3 Shake the ink cartridges, then unpack them.

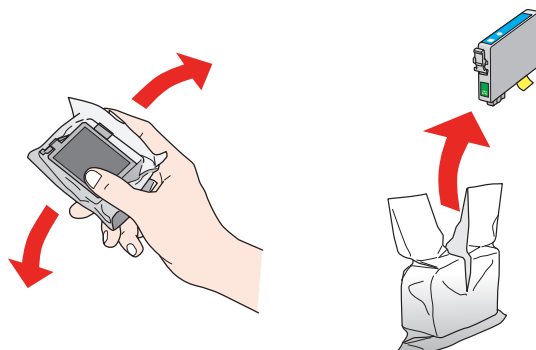

 
- 4** Remove the yellow tape from each cartridge.

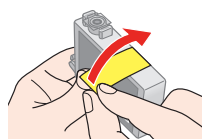

 
Caution: Don't remove any other seals from the cartridges.

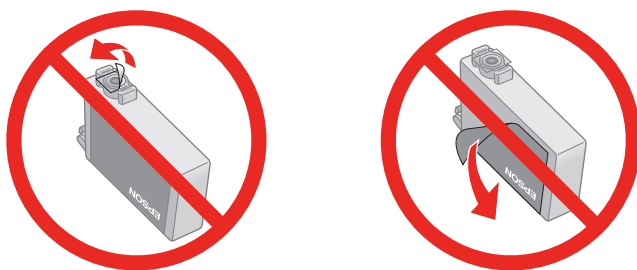

 
- 5** Insert the cartridges in the holder for each color.

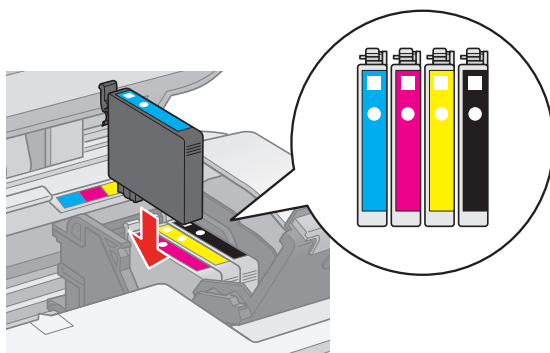

 
- 6** Press the cartridges down until they click.

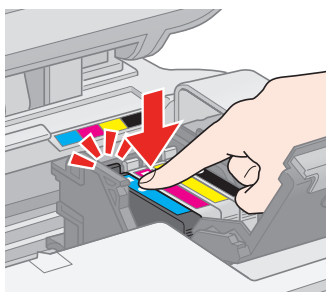

 
- 7** Close the ink cartridge cover and press it down until it clicks.

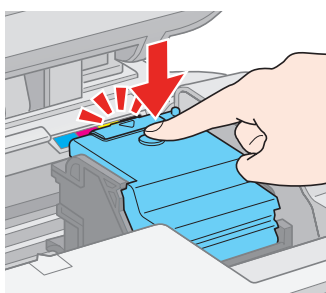

- 8** Close the scanner.

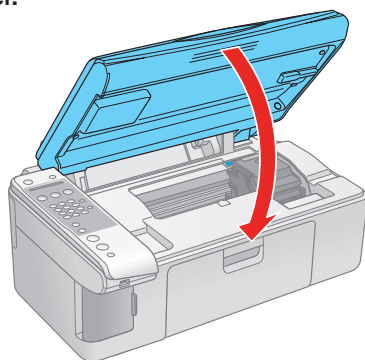 

 - 9** Press the  **Start Color/OK** button to charge ink. Charging takes about 2 minutes.

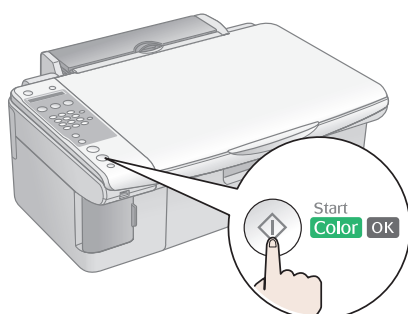


Caution: Don't turn off the CX7000F Series while **Charging** appears on the display screen.

Note: The first time you install ink cartridges, the printer uses some ink to charge the printing system, so print yields may be lower with the first cartridges. Subsequent ink cartridges will last their full rated life.


4

Load Paper

 - 1 Open the paper support and pull up its extensions.

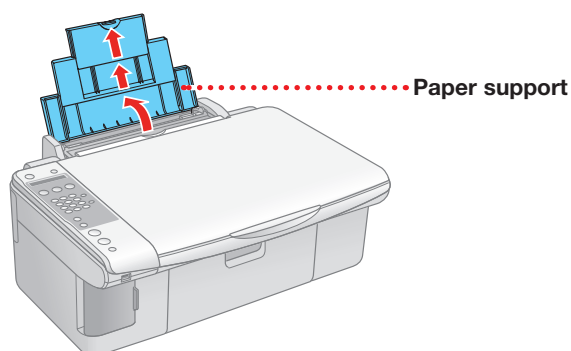

 
- 2 Open the output tray and pull out its extension.

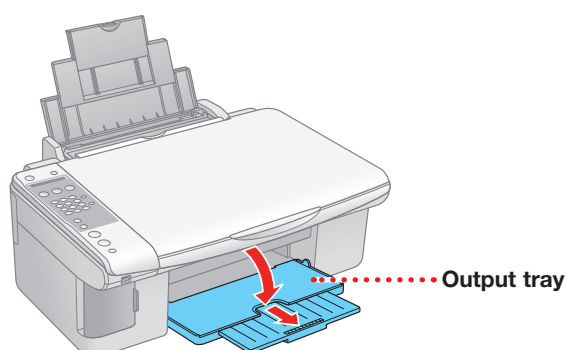


- 3 Flip the feeder guard forward.



 - 4 Load paper against the right edge guide.

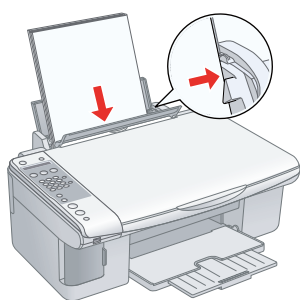


Letter


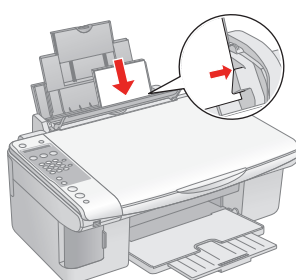 


4 x 6 or 5 x 7

 Note: Don't load the paper sideways; always load it short edge first.

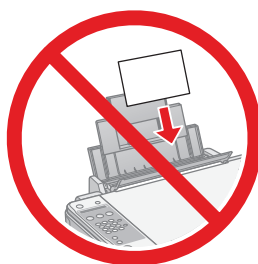

- 5 Slide the left edge guide over.

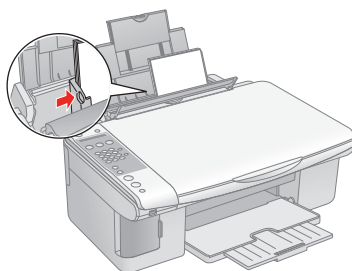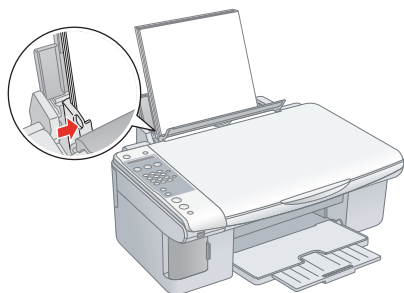  

- 6 Flip the feeder guard back.



 
5

Install Software


Your software works with Windows® 98SE, Me, 2000, XP, XP Professional x64 Edition, and Windows Vista,™ and **Macintosh® OS X 10.2.8, 10.3.9 to 10.4.x.**

Windows

- 1 Make sure the CX7000F Series is **NOT CONNECTED** to your computer.

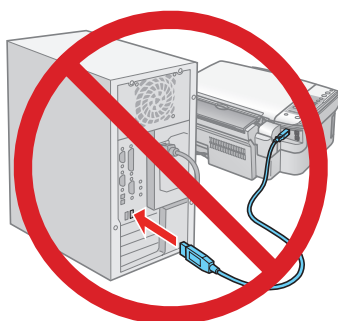

 
Note: If you see a screen like this, click **Cancel** and disconnect the USB cable. You can't install your software that way.

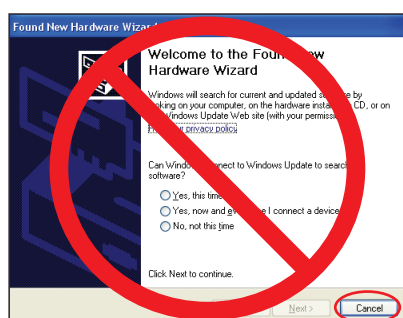

- 2 Insert the CX7000F Series CD.


With Windows 98SE, Me, 2000 or XP, go to step 4.

 With Windows Vista, go to step 3.

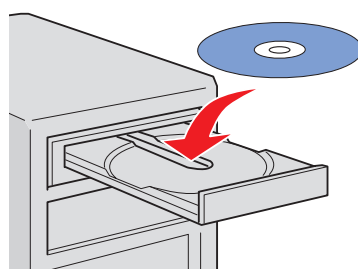

- 3 With Windows Vista, if you see this screen, click **Run EPSETUP.EXE**.

 
Then click **Continue** at the User Account Control screen.

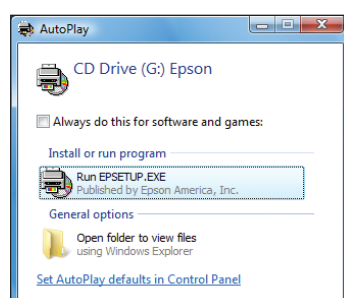

- 4 Click **Install** and follow the on-screen instructions to install software and print a test page. Software installation takes several minutes.



 - 5 When prompted, connect the USB cable to the computer first. Then connect the cable to the printer.

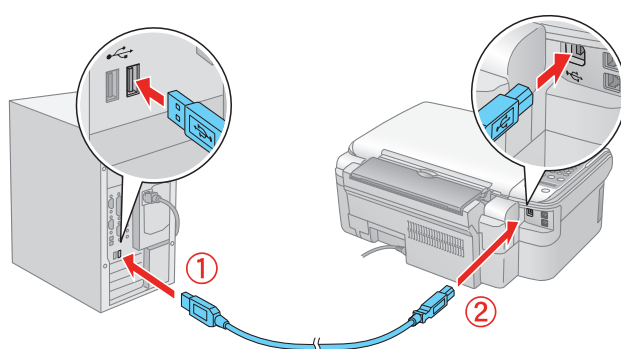


Note: If installation doesn't continue after a moment, make sure you securely connected and turned on the CX7000F Series.

- 6 When you're done, remove the CD.


You're ready to copy, print, and scan! See the *Basics Guide* or your on-screen *User's Guide*.

Macintosh

 
- 1 Insert the CX7000F Series CD.

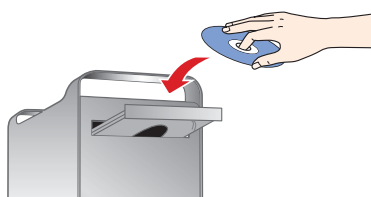

 
- 2 Open the **Epson CD-ROM desktop icon** and double-click the **EPSON Epson icon**.
- 3 Click **Install** and follow the on-screen instructions to install your drivers. Software installation and setup take several minutes. If necessary, close any open windows on your screen to return to the installer.

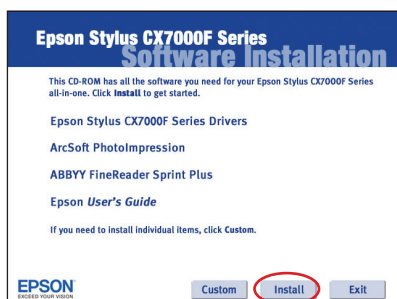

 - 4 When prompted, connect the USB cable to the computer first. Then connect the cable to the printer. Make sure the CX7000F Series is turned on.

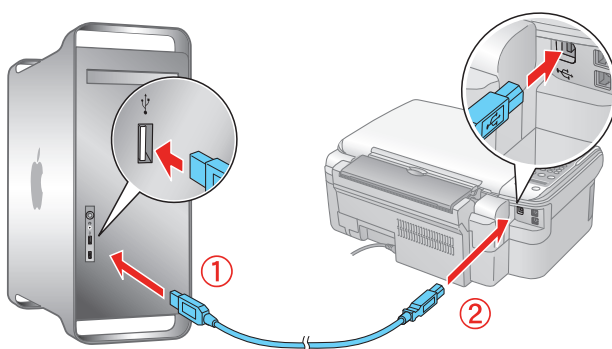

 - 5 When you see this screen, click **Open the Printer List**.

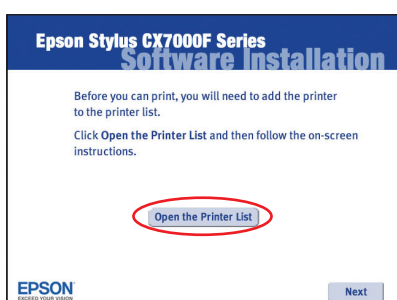

- 6 Follow the instructions to the right to add the printer.



- 7 Click **Next** again, if necessary.
- 8 Follow the on-screen instructions to install the rest of the software and print a test page.
- 9 When you're done, eject the CD.

You're ready to copy, print, and scan! See the *Basics Guide* or your on-screen *User's Guide*.

 
6

Connect the Phone Line

If you are going to connect a dedicated phone line to the CX7000F Series for faxing, connect it as shown here.


If you want to connect a telephone or answering machine, see the *Basics Guide* for instructions.

Connect the phone cable leading from your telephone wall jack to the **LINE** port on the back of the CX7000F Series.

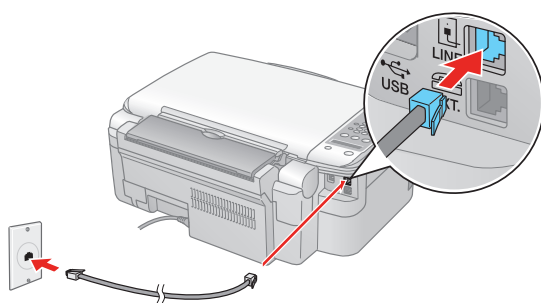

Note: If you connected the CX7000F Series to a DSL phone line, you must install a DSL filter to the line or you won't be able to fax. Contact your DSL provider for the necessary filter.

 Any Problems?

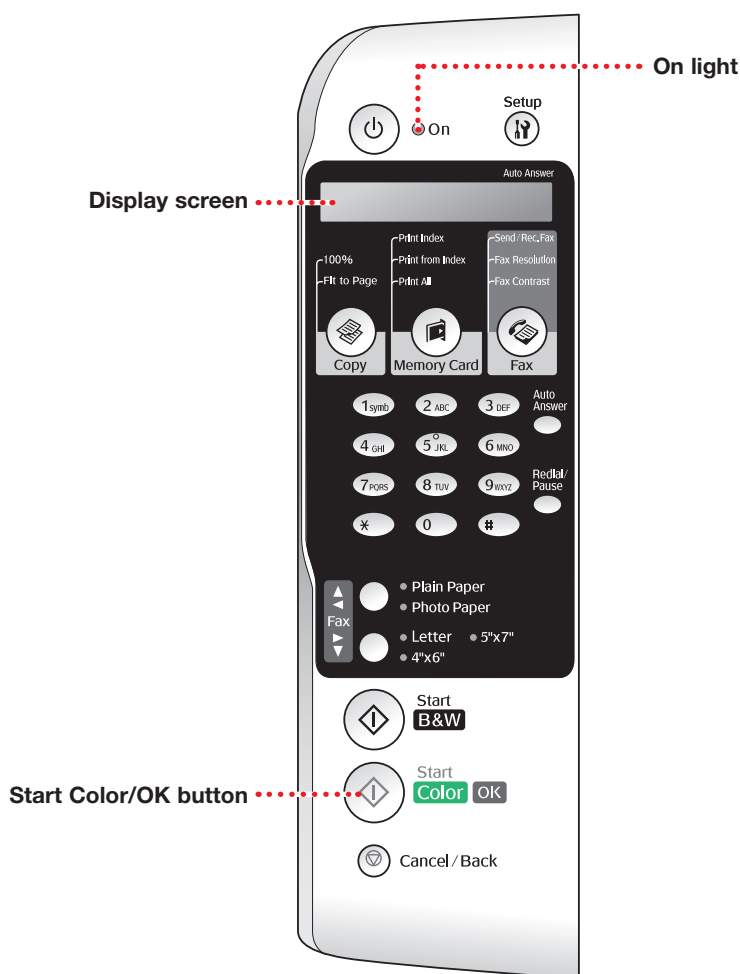

- If you see a **Paper out** message on the display, reload paper and press the **Start Color/OK** button to continue.
- If you see a **No ink cartridge** message on the display, an ink cartridge may be installed incorrectly. Press the **Start Color/OK** button, then open the scanner and push down the cartridges and cartridge cover all the way. See section 3 on the front of this sheet for instructions.
- If you see a **Paper jam** message on the display, press the **Start Color/OK** button to eject the paper, then pull out the jammed sheets from the sheet feeder or output tray. See the *Basics Guide* for details.

See your *Basics Guide* and on-screen *User's Guide* for more problem-solving information.

Any Questions?

Look here for answers:

Basics Guide

Basic steps for using the CX7000F Series.

On-screen User's Guide

Click the desktop shortcut for easy access to CX7000F Series information.

On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson Technical Support

Internet Support

Visit Epson's support website at epson.com/support and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

Before you call Epson for support, please have the following information ready:

- Product name (Epson Stylus CX7000F Series all-in-one)
- Product serial number (located on the label in back)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration
- Description of the problem

Then call:

- U.S.: (562) 276-4382, 6 AM to 6 PM, Pacific Time, Monday through Friday
- Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Toll or long distance charges may apply.

Software Technical Support

 
ArcSoft PhotoImpression™
(510) 440-9901
Website: www.arcsoft.com
E-mail: support@arcsoft.com

ABBYY® FineReader® Sprint Plus
(510) 226-6717
Website: abbyyusa.com/support
E-mail: support@abbyyusa.com



Need Paper and Ink?

For the best prints and copies, use genuine Epson paper and ink. You can purchase them online at www.epsonstore.com (U.S. sales) or www.epson.ca (Canadian sales). You can also purchase genuine Epson paper and ink from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766).

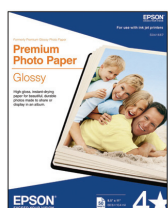

Epson Premium Photo Paper Glossy

Heavyweight paper with a high gloss finish for beautiful photographs in a variety of sizes, with borders or borderless.

Genuine Epson Inks

Look for the numbers below to find your cartridges. It's as easy as remembering your number!



69 Black T069120



69 Magenta T069320



69 Cyan T069220



69 Yellow T069420



Try the High Capacity 68 Black cartridge available at www.epson.com/highcapacity (U.S. sales) or www.epson.ca (Canadian sales).

Epson and Epson Stylus are registered trademarks and Exceed Your Vision is a trademark of Seiko Epson Corporation. DURABrite is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

© 2007 Epson America, Inc. 1/07

CPD-22471R1

Cut out the card to the right and keep it with you when purchasing replacement ink cartridges.

Epson® CX7000F Ink Cartridges

High Capacity 68 Black cartridges are also available at www.epson.com/highcapacity (U.S. sales) or www.epson.ca (Canadian sales).



69 Black T069120



69 Magenta T069320



69 Cyan T069220



69 Yellow T069420