 
 
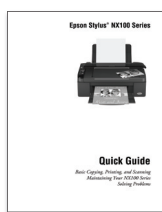 


Start Here

Epson Stylus® NX100 Series

1

Unpack

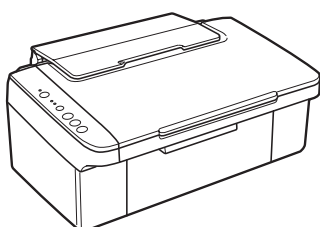

 
(Included for Canada only)

If anything is missing, contact Epson as described on the back.

Caution: Do not open the ink cartridge package until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Canada only: For French speakers, remove stickers from the backing sheet and place over corresponding text on the control panel.


Remove all the tape.

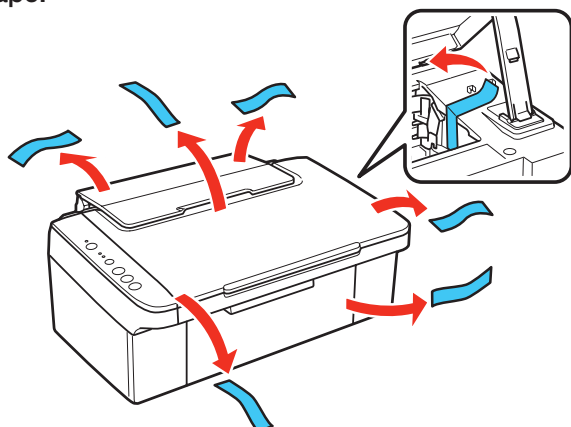

2


Turn on the NX100 Series

 - 1 Connect the power cable.

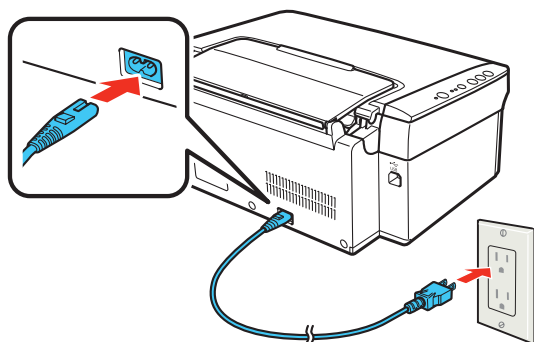

Note: Do not connect to the computer at this time.

 - 2 Press the  On button.

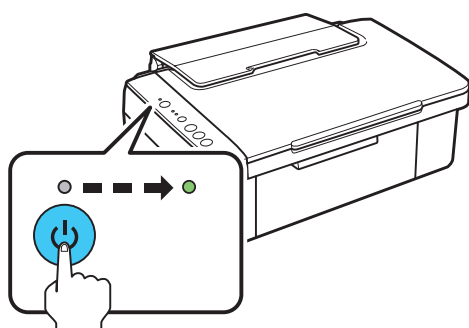

411436500

 
EPSON®
EXCEED YOUR VISION

3


Install cartridges

Note: Do not load paper yet.


- 1 Lift up the scanner and prop it up with the support.

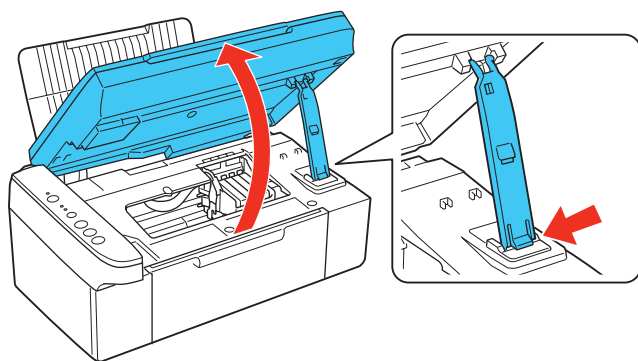

 
- 2 Shake the ink cartridges, then unpack them.

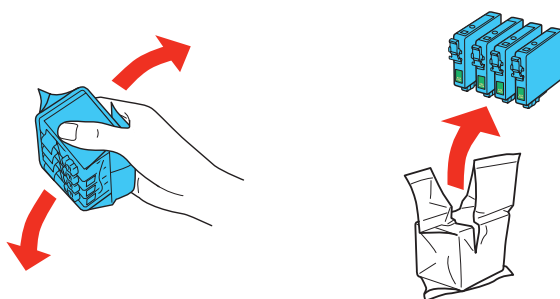

 
- 3 Remove only the yellow tape from each cartridge.

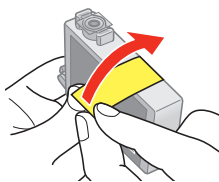

 
Caution: Do not remove any other seals or the cartridge may leak.

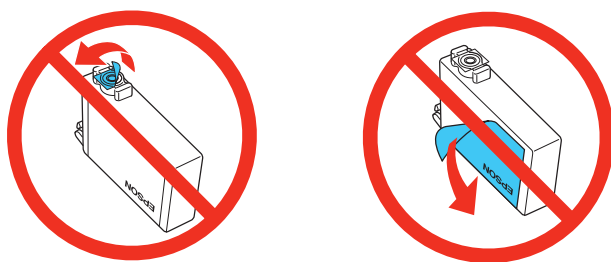

 
- 4 Insert the cartridges in the holder for each color.

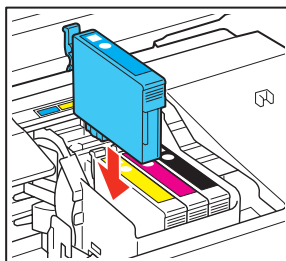

 
- 5 Press each cartridge down until it clicks.

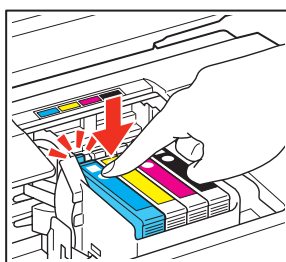

 - 6** Release the scanner support and lower the scanner.

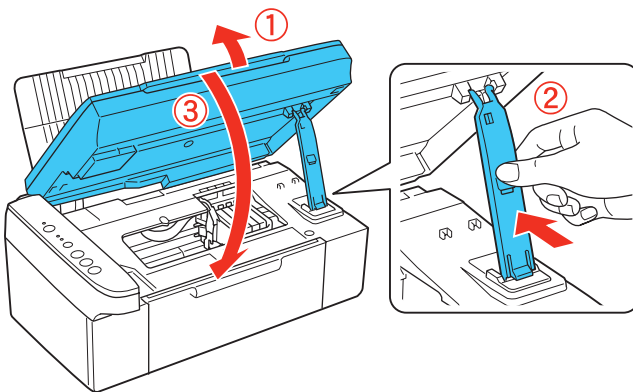

 
- 7** Press the  **Stop** button to charge the ink. Charging takes about 2 minutes.

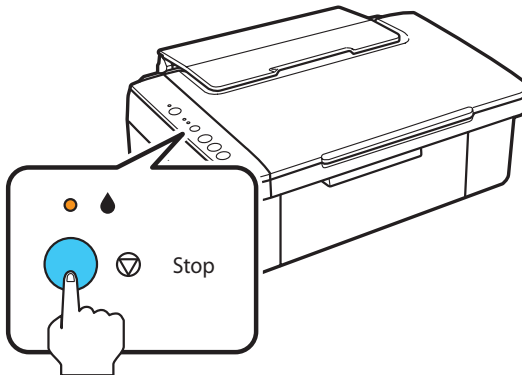


Caution: Don't turn off the NX100 Series while it is charging or you'll waste ink.

4 Load paper

 
- 1** Open the paper support.

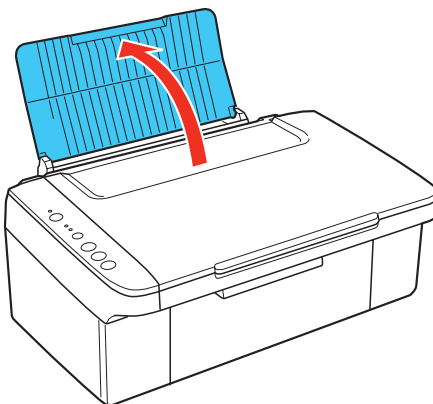

 - 2** Open the output tray and pull out the extension.

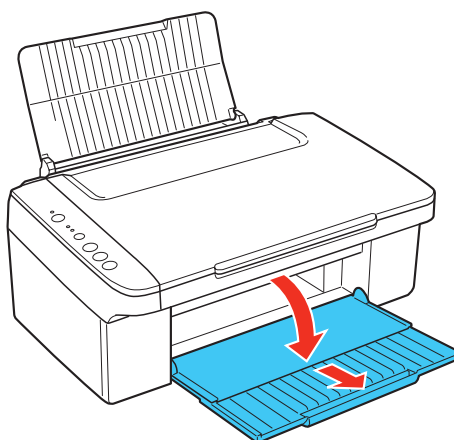


 - 3** Flip the feeder guard forward. Then squeeze the edge guide and slide it left.

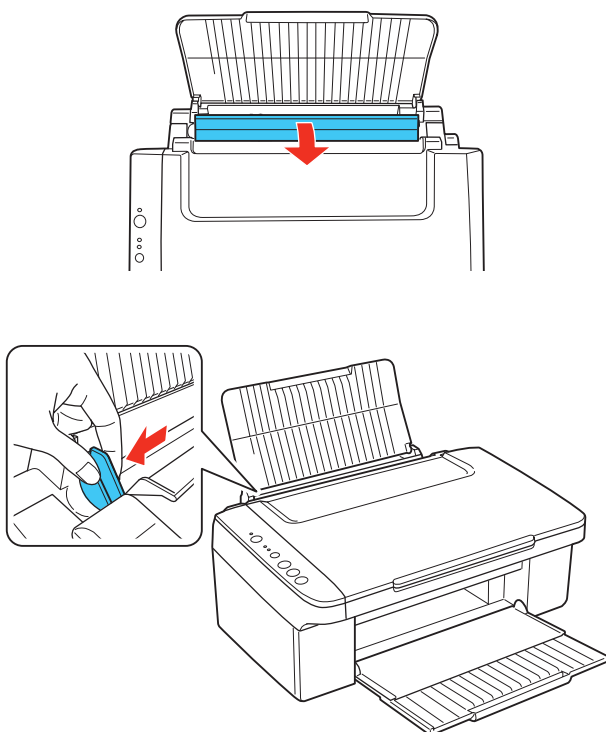


- 4** Load paper against the right edge and underneath the tab, then slide the edge guide over.

 8½ × 11

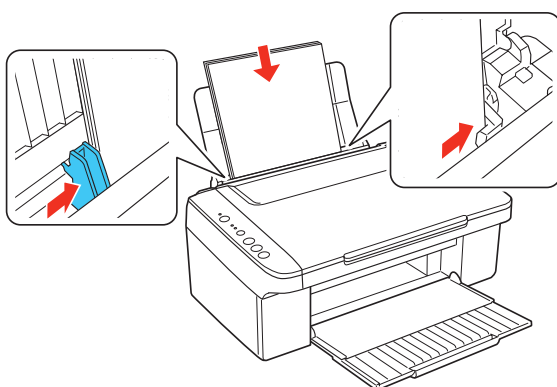

4 × 6

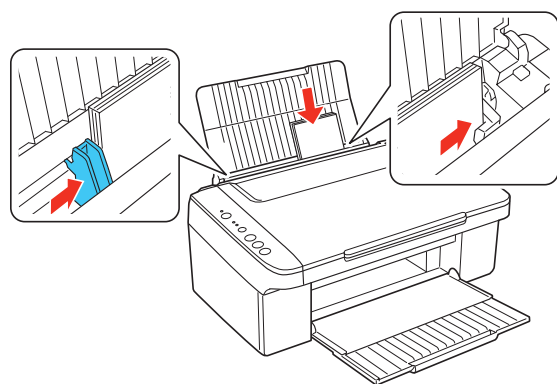 

Note: Don't load the paper sideways.



 
- 5** Flip the feeder guard back.

Install software


Your software works with Windows® 2000, XP, XP Professional x64 Edition, and Windows Vista®, and **Mac OS® X 10.3.9, 10.4.x, and 10.5.x.**

Windows

- 1 Make sure the NX100 Series is **NOT CONNECTED** to your computer.

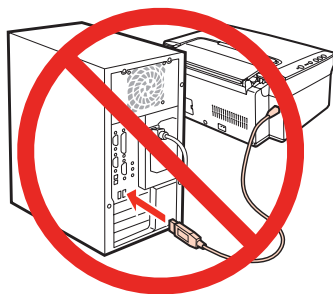


 Note: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable.

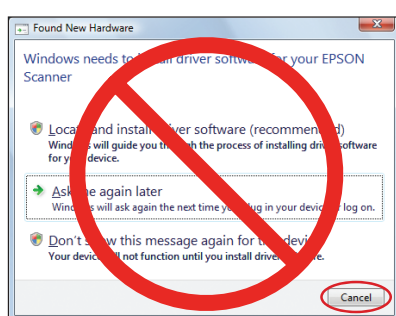

- 2 Insert the NX100 Series CD.

 
With Windows Vista, if you see the AutoPlay window, click **Run Epsetup.exe**. When you see the User Account Control screen, click **Continue**.

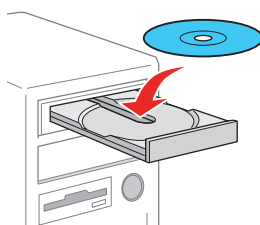

- 3 Click **Install** and follow the on-screen instructions.



 - 4 When prompted, connect the USB cable. Use any open port on your computer.

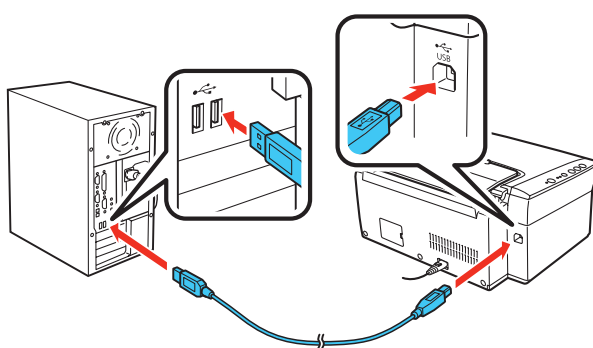


Note: If installation doesn't continue after a moment, make sure you securely connected and turned on the NX100 Series.

- 5 Follow the on-screen instructions to install the rest of the software and register your NX100 Series.
- 6 When you're done, remove the CD.

You're ready to copy, print, and scan! See the *Quick Guide* or your on-screen *Epson Information Center* for instructions.

Macintosh®


 
- 1 Make sure the NX100 Series is **NOT CONNECTED** to your computer.

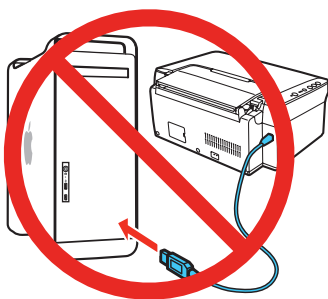


- 2 Insert the NX100 Series CD.

- 3 Double-click the  **Epson** icon.

  - 4 Click **Install** and follow the on-screen instructions.

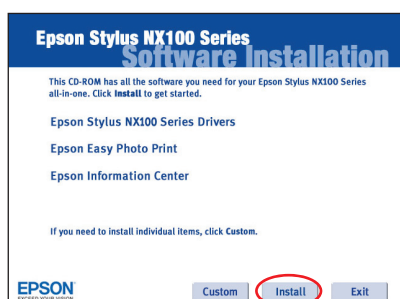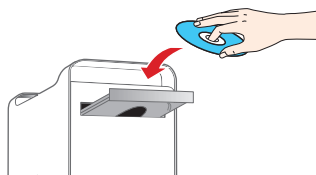

 - 5 When prompted, connect the USB cable. Use any open USB port on your Macintosh.

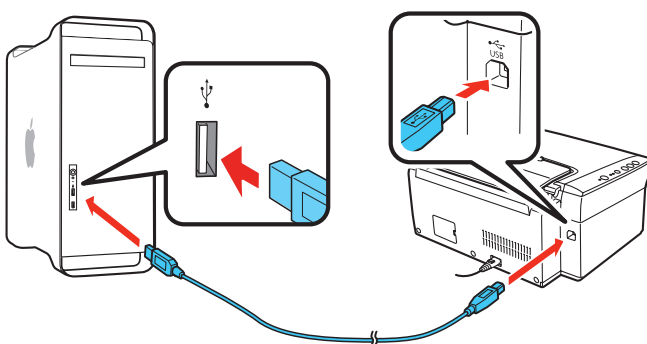


Note: If installation doesn't continue after a moment, make sure you securely connected and turned on the NX100 Series.


- 6 Mac OS X 10.5 users: skip to step 10.

Other users: continue with step 7.

 - 7 When you see this screen, click **Open the Printer List**.

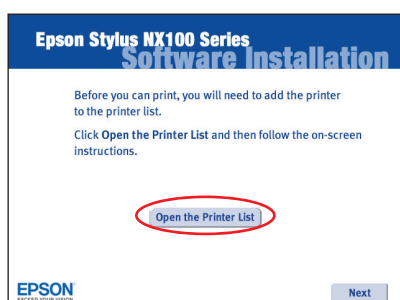

 - 8 Follow the steps on the right of the screen to add the NX100 Series.

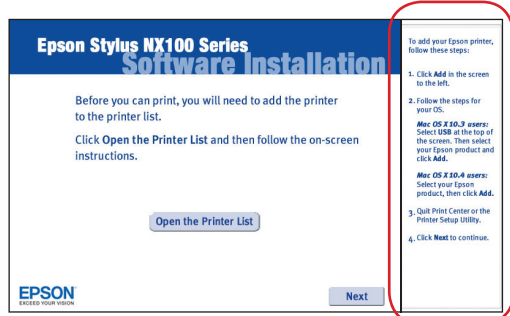


- 9 Click **Next** again, if necessary.

- 10 Follow the on-screen instructions to install the rest of the software and register your NX100 Series.

- 11 When you're done, eject the CD.

You're ready to copy, print, and scan! See the *Quick Guide* or your on-screen *Epson Information Center* for instructions.

 
Control panel

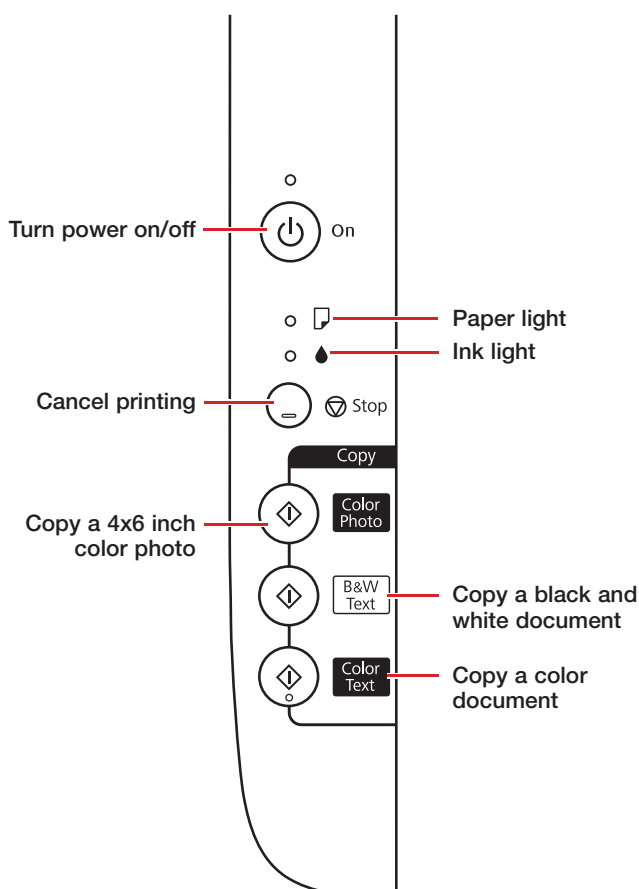

Any questions?


Quick Guide

 Basic instructions for copying, printing, and scanning.

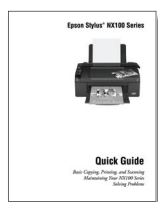

On-screen *Epson Information Center*

 Click the desktop shortcut for easy access to the NX100 Series *User's Guide*, FAQs, online troubleshooting advice, and software downloads. You can also purchase paper and ink.

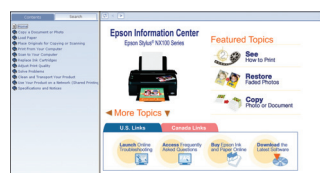

On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson Technical Support

Internet Support

Visit Epson's support website at epson.com/support and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

Call (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Need paper and ink?

Want great results? Simple. Use genuine Epson paper and ink. For the right supplies at the right time, you can purchase them at Epson Supplies CentralSM at www.epson.com/ink3 (U.S. sales) or www.epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Paper



Epson Photo Paper Glossy

Bright, instant-drying paper for great looking photos and projects.

See the entire line of Epson photo papers at Epson Supplies Central.

Genuine Epson inks

Look for the numbers below to find your cartridges. It's as easy as remembering your number!



Ink Color	Moderate Capacity	Standard Capacity (for heavier use)
Black	88	69
Cyan	88	69
Magenta	88	69
Yellow	88	69

Epson and Epson Stylus are registered trademarks, Epson Exceed Your Vision is a registered logomark, and Supplies Central is a service mark of Seiko Epson Corporation. DURABrite is a registered trademark of Epson America, Inc.

General Notice: All other trademarks are the property of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2008 Epson America, Inc. 6/08

CPD-25631

Cut out the card to the right and keep it with you when purchasing replacement ink cartridges.

Epson NX100 Series Ink Cartridges



69

 or

88

 Black

69

 or

88

 Cyan

69

 or

88

 Magenta

69

 or

88

 Yellow