

TM-T88IV *Cleaning Instructions*

If you use linerless label paper, glue accumulates around the thermal head, which causes paper jams or printer malfunctions. Clean the glue off periodically (once every three months) using the tweezers included with the printer.



CAUTION

- **Do not touch the thermal head after printing. It can be very hot.**
Let the thermal head cool before you clean it.
- **Be sure to use the tweezers included with the printer.**
Otherwise, the thermal head may be damaged.

