


EPSON® Stylus® Color 580

Windows® Printer Software Does Not Install

If this window remains on your screen for a few minutes, your installation program may have stopped responding.

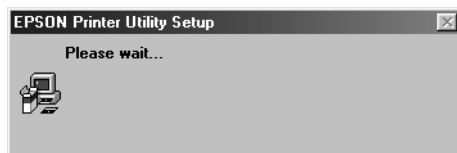

To release the installation program, follow these steps:

1. On your keyboard, hold down the **Ctrl** and **Alt** keys, then press the **Delete** key. You see a window like the one here:
2. Click the **E_srcv03** program to highlight it (you may need to scroll down).
3. Click the **End Task** button to close the program. (If you see a screen confirming the end of the task, click **End Task** again.) Your software will finish installing.
4. Restart your system.
5. You must now download and install a new EPSON printer driver. Go to the EPSON [Downloads](#) page, then select the printer driver for your version of Windows and install it as instructed.

