

EPSON® Stylus® Color 777/777i

Printer Software Update

■ Installing your printer software on Windows® Millennium Edition (Me)

If you're connecting your printer to a computer running Microsoft® Windows Me, follow the steps below to install your printer software. **Don't follow the standard Windows software installation instructions on the *Start Here* sheet.**

■ Completing Windows 95, 98, and Me software installation

When you install your printer software on a computer running Windows 95, 98, or Me, you may need to release the installation program if it stops responding. Follow the steps in "Completing Printer Software Installation" on the back of this sheet.

 
Installing Your Printer Software With Windows Me

1. Follow the instructions on the *Start Here* sheet to unpack your printer, put on the paper support, install ink cartridges, load paper, and connect the printer to your computer. Then return here for instructions on installing your printer software.
2. Turn on your computer.
3. Turn on your printer.
4. If you see this screen, click **Cancel**.
You can't install your printer software this way.



5. Turn OFF your printer (the  power light should be OFF). It's important to turn OFF your printer and wait for the installation program to tell you when to turn it back on.
6. Insert your printer software CD-ROM in a CD-ROM or DVD drive.
7. Double-click the  My Computer icon on your desktop, then double-click the  EPSON CD-ROM icon.
8. Double-click the  EPSON icon to start the installer. Read the license agreement and click **Agree**. You see the Main Menu:
9. Click **Install Printer Driver**. You see the printer driver installation screen. Click **OK**. The installer copies files to your computer.

Click
here

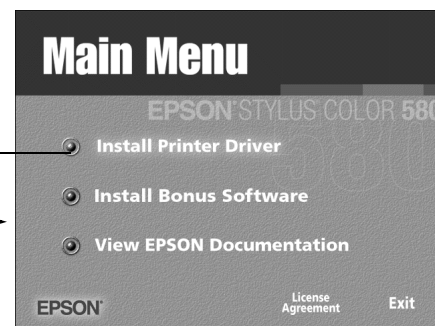

10. If the installation software stops responding, follow the steps in “Completing Printer Software Installation” below to continue.

11. **When you see this screen, turn ON your printer.** —————→
The screen disappears and installation continues.

 
12. When installation is finished, click **OK**.

13. You see the EPSON Product Registration screen: —————→
Follow the on-screen instructions to register your printer with EPSON. At the last screen, click **Done**.

14. Return to the back of the *Start Here* sheet to install your creative software and EPSON documentation.



If you connected your printer with a parallel interface cable, you may want to restart your computer now.

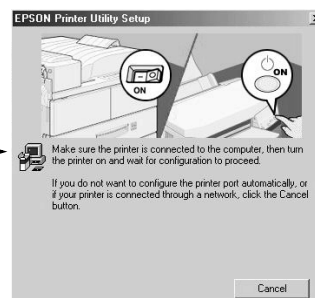

Completing Printer Software Installation

While you're installing your printer software, you'll see this window: —————→

If this window remains on your screen for a few minutes, your installation program may have stopped responding.

To resume software installation, follow these steps:

 
1. On your keyboard, hold down the **Ctrl** and **Alt** keys, then press the **Delete** key. You see a window like this: —————→

2. Click the **E_srcv03** or **E_srcv02** program to highlight it (you may need to scroll down).


3. Click the **End Task** button to close the program.

4. If you see a screen confirming the end of the task, click **End Task** again.

5. Your software will finish installing now.

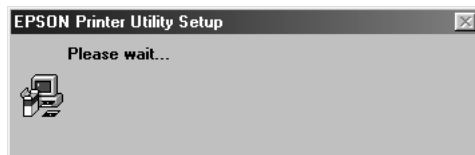

Click here

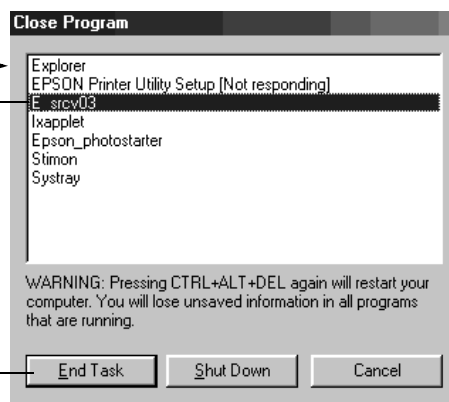 

Then click here

EPSON and EPSON Stylus are registered trademarks of SEIKO EPSON CORPORATION.

General Notice: Other product names are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks. Copyright © 2000 by Epson America, Inc. 10/00

CPD-11390