

Epson® SureColor® P800 Series

Basics

Contents

- Introduction 3**
 - Using the Touch Screen 4
- Loading Paper 5**
 - Loading Paper in the Sheet Feeder 5
 - Loading Fine Art Paper 8
 - Loading Thick Media 11
 - Loading Roll Paper (Optional) 14
- Printing from Start to Finish 22**
 - Printing in Windows 22
 - Printing with OS X 27
 - Selecting the Correct Paper Type 30
- Maintaining Your Printer 32**
 - Checking and Cleaning the Print Head 32
 - Checking and Aligning the Print Head 34
 - Checking the Ink Cartridge Status 35
 - Replacing Ink Cartridges 37
 - Replacing Maintenance Cartridges 40
 - Switching Black Ink Types 42
 - Cleaning the Rollers 44
- Solving Problems 45**
 - Checking for Software Updates 45
 - Problems and Solutions 45
 - Where to Get Help 49
- Notices. 50**
 - Declaration of Conformity 54

Introduction

Your Epson® SureColor® P800 Series printer gives you exhibition quality prints on a wide variety of glossy and matte papers in many sizes.

Your outstanding printouts result from these advanced features:

- Epson® UltraChrome® HD ink cartridges for unprecedented gray balance, outstanding tonal range, and astounding color
- Enhanced media handling of fine art paper, thick media up to 1.5 mm, and rolls for virtually any kind of print up to 17 × 129 inches (43 × 328 cm), with or without borders
- Resolutions up to 2880 × 1440 optimized dpi (dots per inch) with droplets as small as 2 picoliters for the finest details
- Hi-Speed USB 2.0, 100Mbps Ethernet, AirPrint, Wi-Fi Direct®, and Wi-Fi CERTIFIED™ 802.11n for fast, wireless connectivity to multiple computers
- Downloadable Premium ICC Profiles for precise color management

Please follow these guidelines as you read your documentation:

Warning:

Warnings must be followed carefully to avoid bodily injury.

Caution:

Cautions must be observed to avoid damage to your equipment.

Note:


Notes contain important information about your product.

Tip:

Tips contain hints for better printing.


Using the Touch Screen

The touch screen makes it easy to use all the features of your product. To save energy, the screen goes dark after several minutes of inactivity. Touch the screen to wake it up.

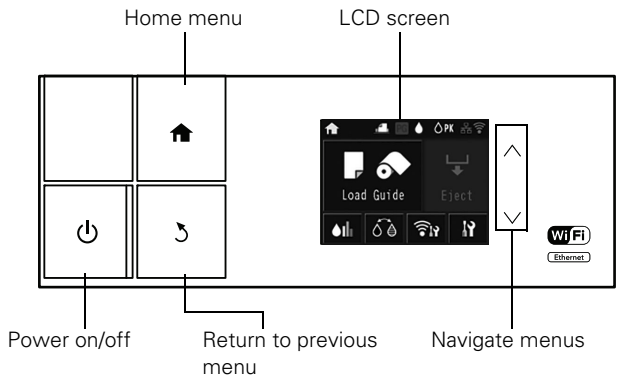

Main Menu

Press the icons on the main menu to display configuration sub-menus such as Setup and Media Load Guide.

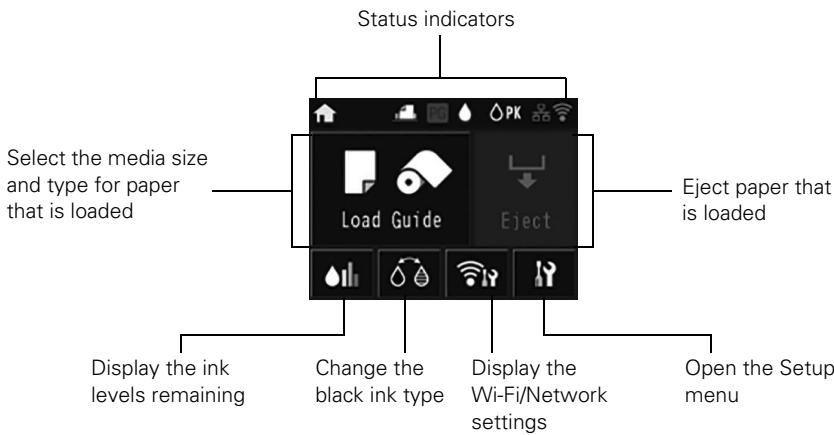

For more information on the icons displayed on the screen, see your online *User's Guide*.

Loading Paper

You can print on a variety of paper types in the sheet feeder, or use the manual feed tray for fine art papers (see page 8) and thick media such as poster board (see page 11). To print multiple photos, panoramics, and banners, load roll paper using the optional roll paper unit (see page 14).


You can purchase genuine Epson ink and paper at Epson Supplies Central® at www.epson.com/ink3 (U.S. sales) or www.epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Loading Paper in the Sheet Feeder


You can load the following paper types and quantities in the sheet feeder.

Paper type	Maximum sheets by size
Plain paper	Approximately 120
Epson Presentation Paper Matte	100 (Letter) 50 (B, 13 × 19 inch, 17 × 22 inch)
Epson Bright White Pro Paper	80
Epson Photo Paper Glossy	30
Epson Premium Photo Paper Glossy Epson Ultra Premium Photo Paper Glossy	30 (4 × 6 inch, 5 × 7 inch, 8 × 10 inch, Letter, 11 × 14 inch) 10 (B, A3, 13 × 19 inch, 17 × 22 inch)
Epson Ultra Premium Photo Paper Luster Epson Ultra Premium Presentation Paper Matte	30 (Letter) 10 (A3, 13 × 19 inch, 17 × 22 inch)
Epson Metallic Photo Paper Glossy Epson Metallic Photo Paper Luster	30 (Letter) 10 (13 × 19 inch or 17 × 22 inch)
Epson Premium Photo Paper Semigloss	30 (4 × 6 inch or Letter) 10 (13 × 19 inch or 17 × 22 inch)
Epson Premium Presentation Paper Matte Epson Premium Presentation Paper Matte Double-sided	30 (8 × 10 inch or Letter) 10 (11 × 14 inch, A3, 13 × 19 inch, 17 × 22 inch)
Epson Photo Quality Self-adhesive Sheets	1 sheet



1. Turn on the printer.
2. Open the paper support and pull up the extensions.

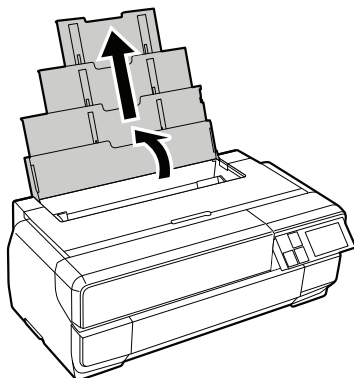


3. Press the front cover to open it.

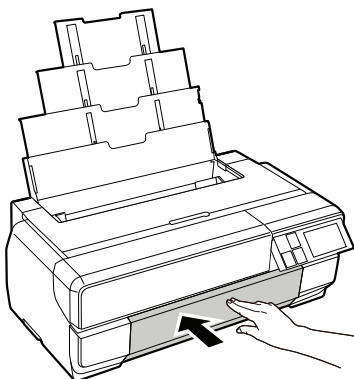

4. Fully extend the output tray.

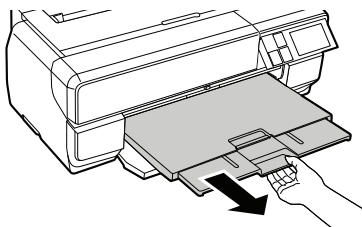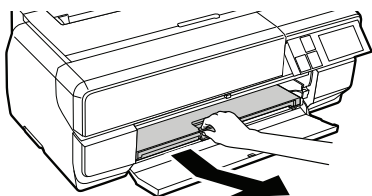


5. Insert paper, glossy or printable side up, short edge first, against the right side and beneath the tab. Then press the button on the edge guide and slide it against the paper (but not too tightly).

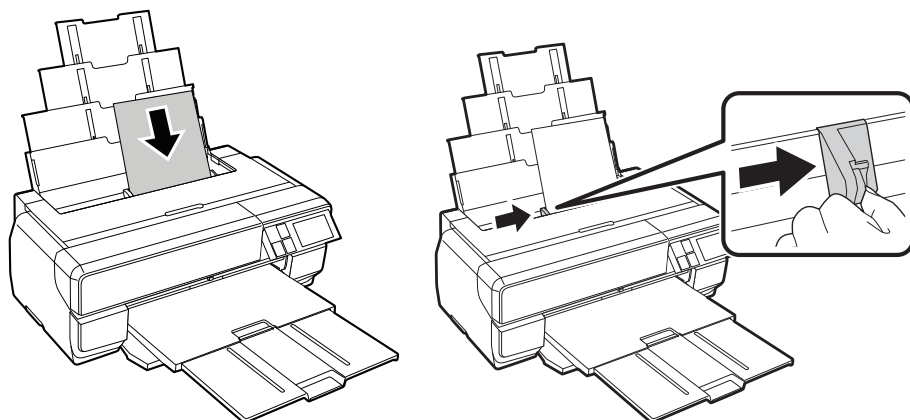

Note:

Always load paper short edge first, even for landscape printing. Load letterhead or pre-printed paper top edge first. If larger paper does not feed correctly, flip down the paper support edge guide as shown.


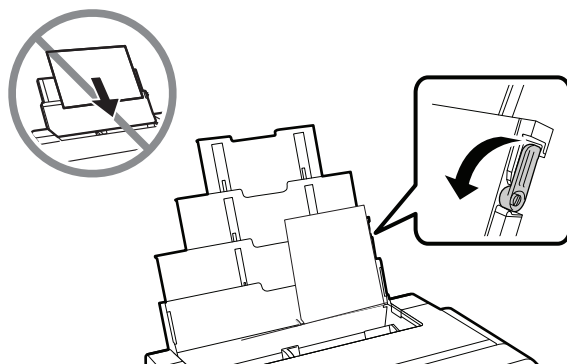


Loading Fine Art Paper


You can print professional quality photos on these Genuine Epson paper types using the manual feed tray:

- | | |
|--|-------------------------------------|
| ■ Epson Exhibition Fiber Paper | ■ Epson Legacy Baryta |
| ■ Epson Hot Press Bright | ■ Epson Legacy Platine |
| ■ Epson Hot Press Natural | ■ Epson Legacy Fibre |
| ■ Epson Cold Press Bright | ■ Epson Legacy Etching |
| ■ Epson Cold Press Natural | ■ Epson Legacy Textured |
| ■ Epson Velvet Fine Art Paper | ■ Epson UltraSmooth® Fine Art Paper |
| ■ Epson Watercolor Paper Radiant White | |

1. Turn on the printer.
2. Remove any roll paper or paper loaded in the sheet feeder. Remove the roll paper unit, if necessary, and close the paper support if it's open.
3. Open the rear support and extend it fully.

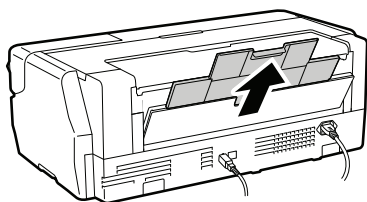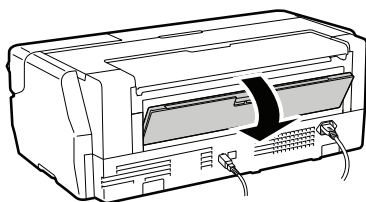


4. Press the front cover to open it, then push the center of the manual feed tray to extend it.

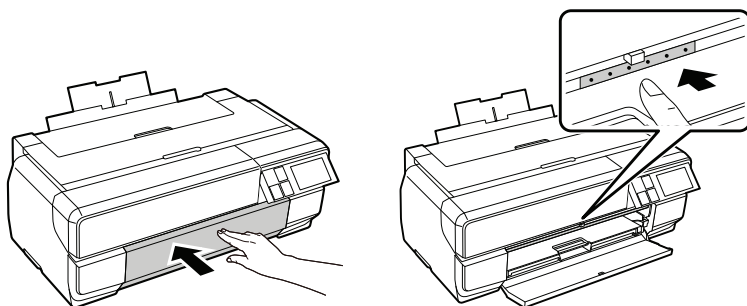


5. Insert a single sheet of fine art paper. Insert it short edge first with the printable side faceup.

Note:

Load paper short edge first, no matter which way your photo faces. Check the paper package for any additional loading instructions.

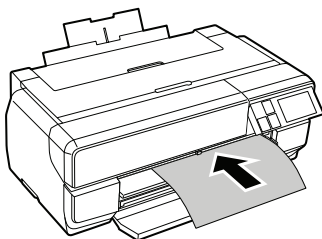

6. Feed the paper up to the line on the tray. Make sure the paper is flush against the right, then pull the paper back gently to align it against the edge of the manual feed tray.

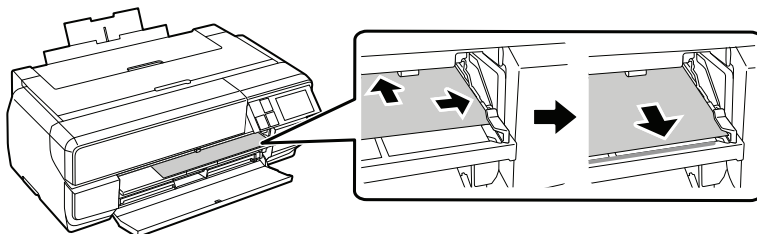


7. Press **Load** on the touch screen. The paper loads inside the printer.



Note:

If you are returned to the home screen, select **Load Guide**, and then follow the instructions on the LCD screen.

8. When you see a message on the screen, close the manual feed tray by pushing it in until it latches.

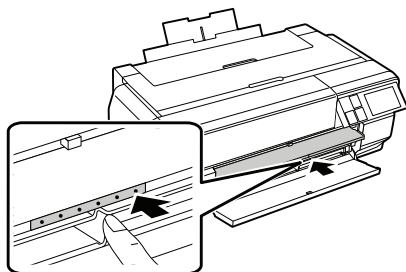

9. Fully extend the output tray.

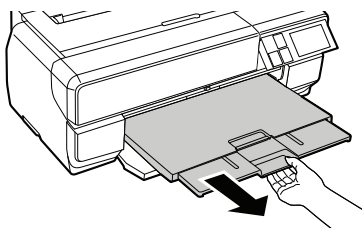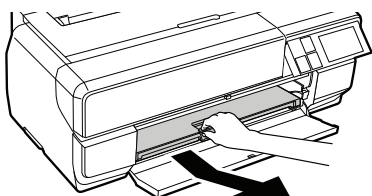

10. If necessary, select the **Paper Size** and **Paper Type**, then press **OK**.

Note:

To eject paper, press **Eject** on the main menu and press **Yes** to confirm.


Loading Thick Media

Use the manual feed tray to load media that is 1.2 to 1.5 mm thick.


Note:

Be sure to leave at least 17 inches (43 cm) of space behind the printer for the media to feed through.

1. Turn on the printer.
2. Remove any roll paper or paper loaded in the sheet feeder. Remove the roll paper unit, if necessary, and close the rear support if it's open.

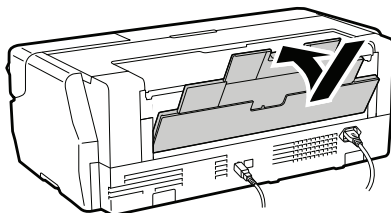


3. Press the front cover to open it, then push the center of the manual feed tray to extend it.

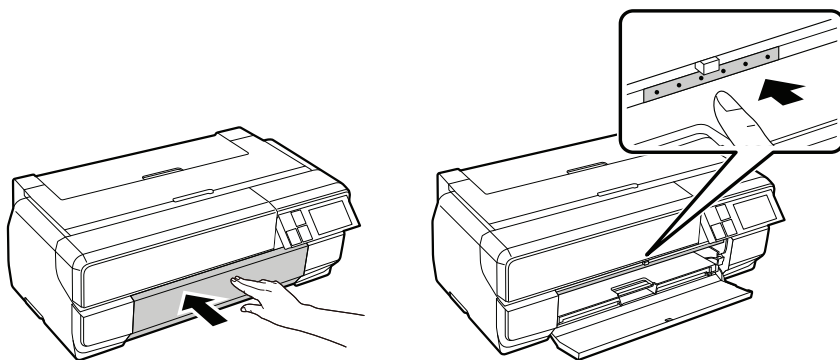


4. Insert a single sheet of thick media. Insert it short edge first with the printable side faceup.

Note:

Never try to load media from the rear, or you could damage the printer.

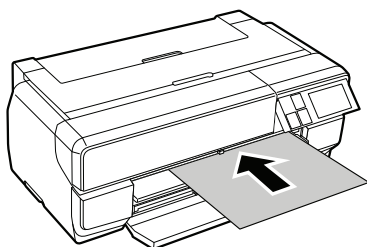

5. Feed the paper up to the line on the tray. Make sure the paper is flush against the right, then pull the paper back gently to align it against the edge of the manual feed tray.

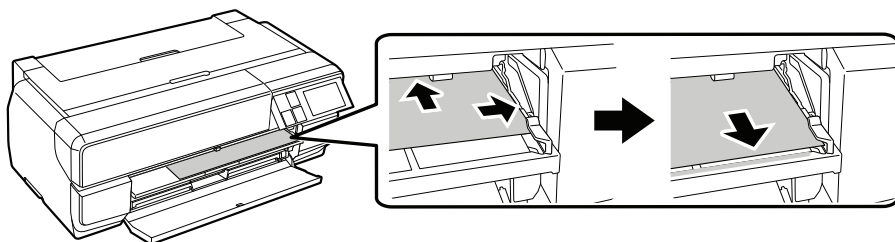


6. Press **Load** on the touch screen. The paper loads inside the printer.



Note:

If you are returned to the home screen, select **Load Guide**, and then follow the instructions on the LCD screen.

7. When you see a message on the screen, close the manual feed tray by pushing it in until it latches.

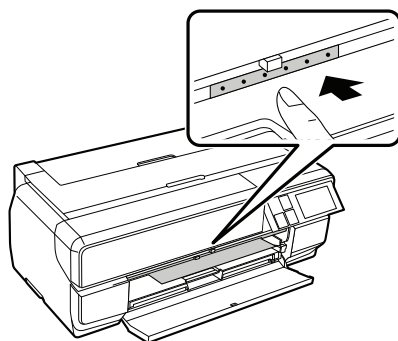

8. Fully extend the output tray.

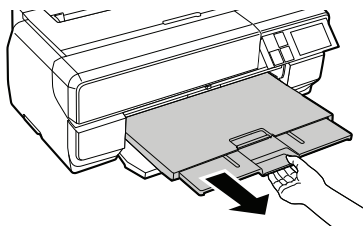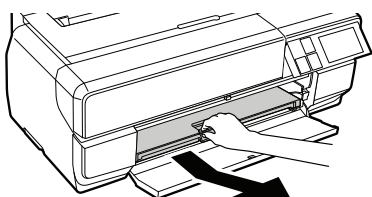

9. If necessary, select the **Paper Size** and **Paper Type**, then press **OK**.

Note:

To eject paper, press **Eject** on the main menu, then follow the touch screen instructions. Do not extend the manual feed tray while printing, or you may damage the printer.

Loading Roll Paper (Optional)



You can load 13-inch to 17-inch wide roll paper for printing large images, panoramic images, or multiple photos, with or without borders using the optional roll paper unit.

Tip:

It's a good idea to check the ink status and replace cartridges, if necessary, before printing a large print job. If you need to replace a cartridge while printing, you can do so but you might notice a color difference depending on drying conditions and the time it takes to install the new ink cartridge.

Attaching the Roll Paper Unit

1. Turn on the printer.
2. Remove any paper loaded in the sheet feeder.
3. Tilt the roll paper unit at an angle so that the hooks on the unit fit into the holes on the back of the printer. Then, tighten the two screws at the base of the roll paper unit.

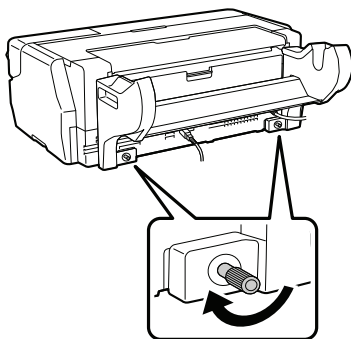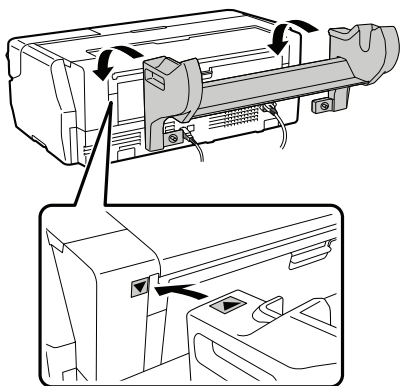


Removing and Installing the Roll Media Adapter

- For roll canvas media with a 2-inch core, you need to remove the roll media adapter from the flange to fit the core size of the roll canvas media.


Note:

Thin media (less than 250 gsm) is not supported in this core size.


1. Remove the black flange from the spindle.

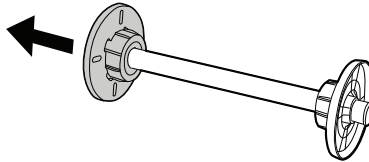

2. Push out the two hooks that fit into the flange and remove the gray adapter from the black flange.

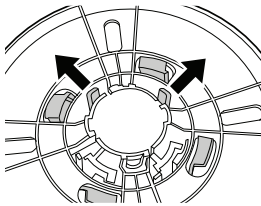


 3. Push out the two hooks and remove the other gray adapter from the flange that is fixed to the spindle.




- For roll paper with a 3-inch core, you need to install the roll media adapter onto the flange to fit the core size of the roll paper.


1. Remove the black flange from the spindle.

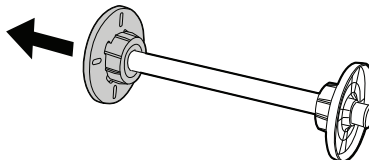

2. Align the triangles on the gray adapter and the flange, and press until the hooks click into place.

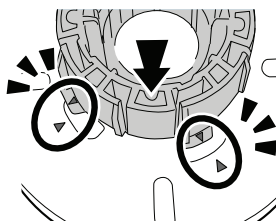

 3. Insert the other gray adapter onto the spindle, then attach it to the flange that is fixed to the spindle.




Loading Roll Paper on the Spindle

1. Remove any tape and protective paper from the end of the roll. Make sure the paper is cut straight across to avoid paper feeding problems.


Note:

Avoid touching the surface of your paper.


With canvas media that you have previously loaded, it's a good idea to cut the edge straight each time you reload it.

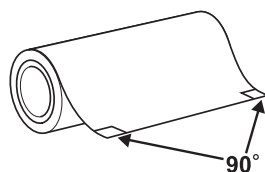


2. Remove the black flange from the spindle.

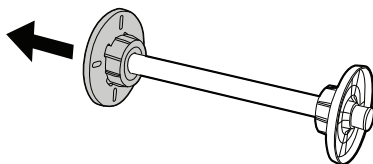


3. Insert the spindle into the roll paper core so that the end of the roll paper is facing towards you.

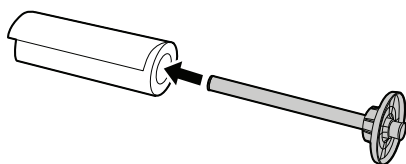

4. Press the roll paper against the fixed flange so that there is no gap between the flange and the roll paper.

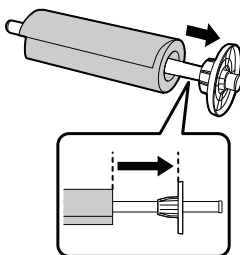


5. Press the black flange onto the spindle so that there is no gap between it and the roll paper.

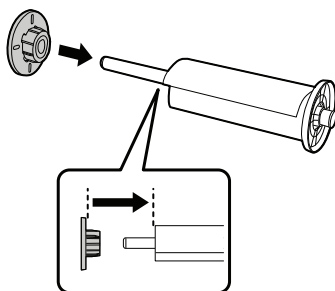

Loading Roll Paper in the Printer


1. Press the front cover to open it.

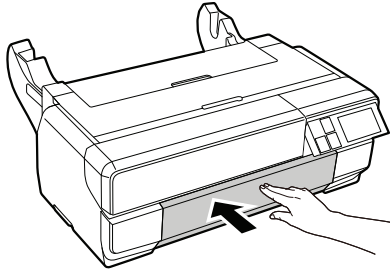


Note:

If the manual feed tray is open, push the center of the tray to close it.


2. Only extend the first section of output tray.

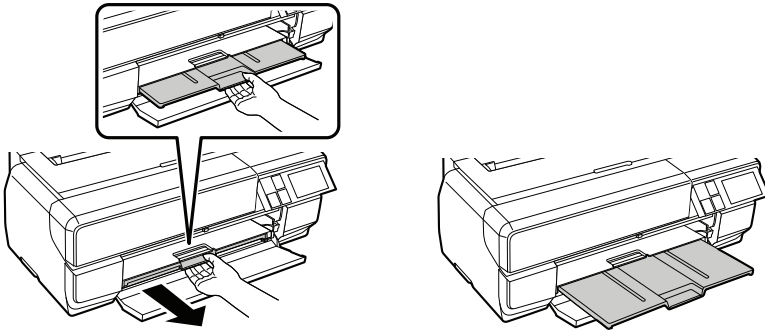

3. Open the rear support; you do not need to extend it.

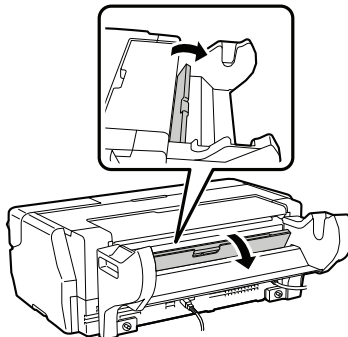


4. Load the spindle with the roll paper into the roll paper unit. Load from the rear and make sure that the gray (fixed) flange is on the left side.

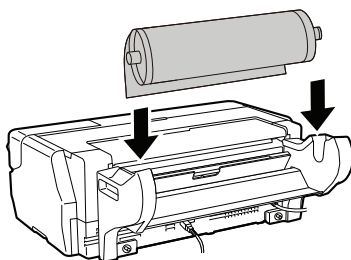

Note:

When loading canvas media, leave slack in the roll as it feeds and prints for the best results. If you have trouble feeding canvas media, check that the edge is straight and reload it, making sure to keep the roll slack.

5. Feed the paper into the roll paper feeder until the leading edge touches the feeder. After about three seconds, the paper will move into the load position.

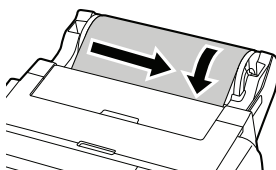


6. If you see this screen, insert the roll paper further into the printer until the screen changes.



7. Press **Load** on the touch screen. The paper loads inside the printer.

Removing Roll Paper Prints and Roll Paper


1. When printing is finished, you see this screen:

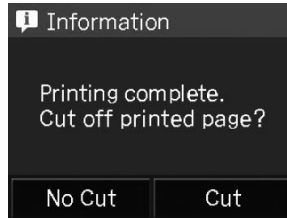


Select **Cut** to print a cut line and feed the paper.

(If you select **No Cut**, you return to the main menu and your next print will be placed on the roll immediately following the last. If you send another print job without making a selection, the printer will continue in no cut mode.)


2. Use scissors to cut the paper along the cut line.

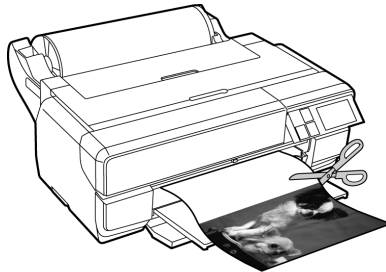


3. Unload roll paper by pressing **Cut/Eject** on the main menu, then pressing **Eject**. The paper will feed back through the printer.
4. Turn the flange to wind the ejected roll paper.

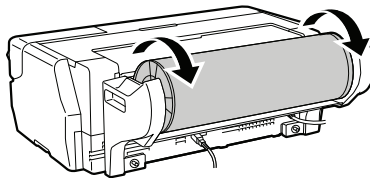

5. Hold both ends of the spindle and remove it from the roll paper unit.

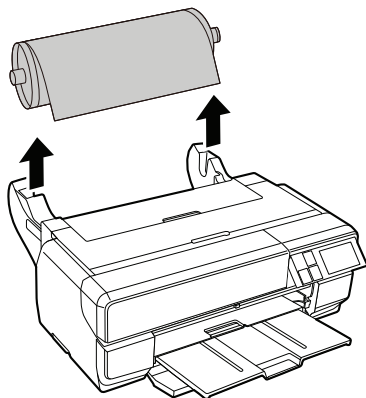

6. Remove the black flange from the spindle. While holding the flange, press the edge of the spindle with your thumbs as shown. If it is difficult to remove, tap on the tip of the spindle on the black flange side.

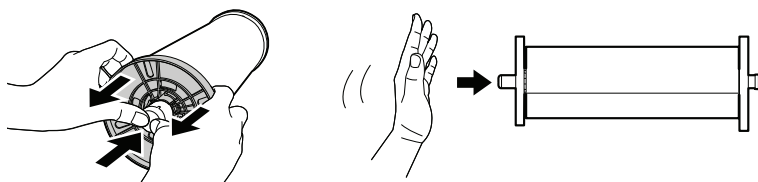

7. Remove the roll paper from the spindle. Store unused roll paper in its original package away from high temperatures, humidity, and direct sunlight.

Printing from Start to Finish


This section describes basic printing from your Windows® or Mac computer. For detailed instructions, see the online *User's Guide*.

Tip:

It's a good idea to check for updates to your Epson SureColor P800 Series software. See "Checking for Software Updates" on page 45 for instructions.

Printing in Windows

1. Open a photo or document in a printing program, and select the print option.

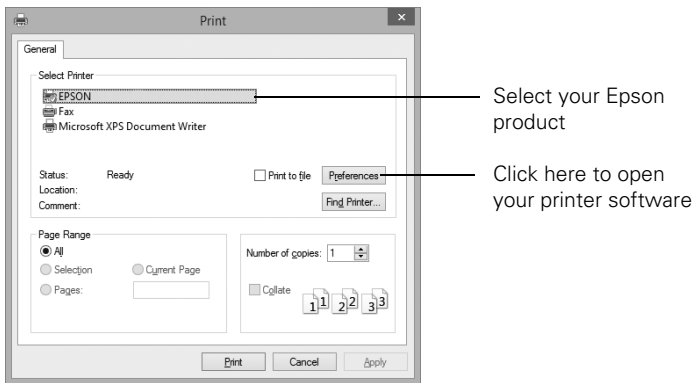


2. Select your product, then click the **Preferences**, **Properties**, **Print Settings**, or **Printer Properties** button.

Note:

If you see a **Setup**, **Printer**, or **Options** button, click it. Then click **Preferences**, **Properties**, **Print Settings**, or **Printer Properties** on the next screen.

3. On the Main tab, select the **Media Type** setting that matches the paper you loaded (see page 30).

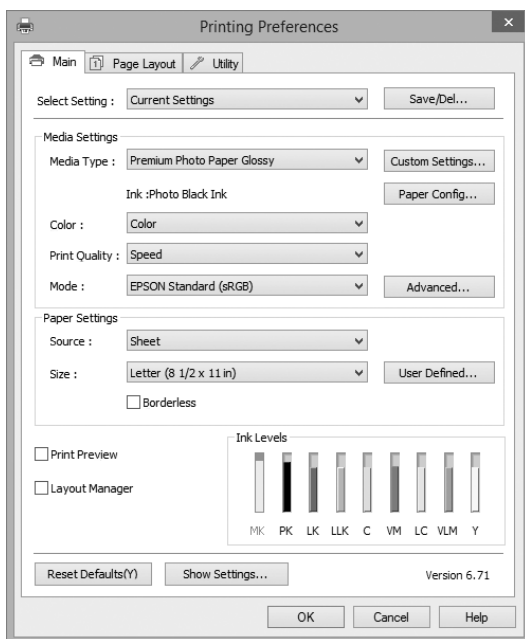


Note:

The available media types vary depending on the type of black ink currently selected as the **Ink** setting. To avoid changing black ink more often than necessary, set the printer to the type of black ink you usually use (see page 42).

4. For the **Color** setting, select **Color** for any type of photographic printing. To print photos in black-and-white, use **Advanced B&W Photo** mode.

5. For the **Print Quality** setting, select **Speed**, **Quality**, or **Max Quality** (available with certain media types only), or select **Quality Options** to display a window like this:

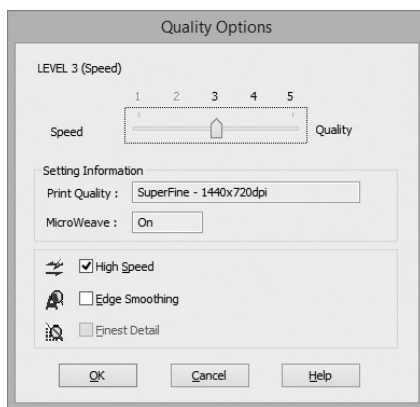

Use the Speed/Quality slider to set from the following quality levels:

- LEVEL 1 for fast printing with draft quality.
- LEVEL 2 for everyday text and image printing.
- LEVEL 3 for photos and graphics with good print quality and speed.
- LEVEL 4 for photos and graphics with high print quality and good print speed.
- LEVEL 5 for the best print quality and slowest print speed.

Then select from the following additional options, and click **OK**:

- **High Speed** for fast, bidirectional printing.
- **Edge Smoothing** to improve the quality of low-resolution images.
- **Finest Detail** for sharper edges on vector-based data including text, graphics, and line art. (This setting does not affect photographs.)

6. Select one of the following as the **Mode** setting:

- **Epson Standard (sRGB)** matches images colors to the Adobe sRGB color standard. Use this setting if your source file was captured in Adobe sRGB.
- **Adobe RGB** matches images colors to the Adobe RGB color standard. Use this setting if your source file was captured in Adobe RGB.
- **Photo Enhance** lets you choose from various Scene Correction settings in the Advanced menu to automatically analyze your photos.
- **ICM** automatically adjusts colors based on the printer's ICC profile and the selected Media Type setting, using the Image Color Matching system.
- **Off (No Color Adjustment)** disables color management in the printer driver. (The appropriate ICC profile must be selected in the imaging application.)

Note:

For color management instructions, see epson.com/proimaging/iccprofiles.html. For more information about print settings, click **Help** or see your online *User's Guide*.

7. Choose the paper **Source** in which you loaded your paper:

- **Sheet:** for sheets of paper loaded in the sheet feeder.
- **Roll Paper:** for photos or panoramics up to 129 inches (327.7 cm) long. If desired, click **Print page frame** to print a cutting guideline around each photo.
- **Roll Paper (Banner):** for photos or banners over 129 inches (327.7 cm) long.
- **Front - Fine Art:** for a sheet of compatible paper loaded in the manual feed tray.
- **Front - Poster Board:** for thick media loaded in the manual feed tray.

8. Select the paper **Size** setting for the paper you loaded.


If you loaded roll paper, create a custom paper size. Select **User Defined** in the Size menu, then click the **User Defined** button. Type a name for your custom size. For the Paper Width, enter **12.95 inches (32.9 cm)** for Super B-size rolls. For the Paper Height enter the desired length up to 129 inches (327.7 cm). Click **Save**, click **OK**, then select your custom paper size in the **Size** menu.

Note:

For roll paper, make sure the maximum width of your photo is 17 inches to fit in the width of your roll paper (set the margins to 0 in your application software).

9. If you're printing borderless photos, select **Borderless**, if available. To adjust the borderless expansion setting, click **Expansion**.
10. To reduce or enlarge your printout or print double-sided, click the **Page Layout** tab and select settings as necessary. (Click **Help** or see your online *User's Guide* for details.)
11. Click **OK** to save your settings.
12. Click **OK** or **Print** to start printing.

This window appears and shows the progress of your print job.

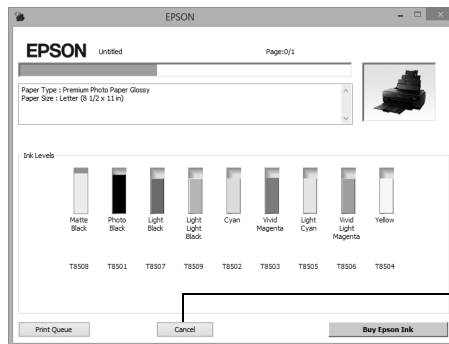

Cancel
printing


Note:

If you're printing on roll paper, see page 20 for instructions on removing your printed photos and paper.

Printing with OS X

Follow the steps below to print from OS X 10.7.x to 10.10.x.

1. Open a photo or document in a printing program, then select the print command in your application.
2. Select your product as the **Printer** setting.

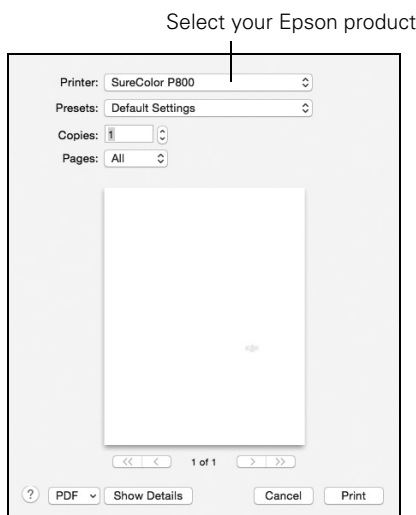

3. Click **Show Details**.
4. Select the **Paper Size** setting for the paper size and source you are using:
 - To print a borderless photo, select a paper size with a **Borderless** option.
 - To print on roll paper, create a custom paper size. Select **Manage Custom Sizes** as the **Paper Size** option. Click the + (plus sign), double-click **Untitled** and give your paper size a name. For the Width, enter 12.95 inches (32.9 cm) for Super B-size rolls. For the Height, enter the desired length up to 129 inches (327.7 cm). Set the margins to 0 and click OK. Then select your custom paper size in the size menu.

Note:

For roll paper, make sure the maximum width of your photo is set to 17 inches to fit in the width of your roll paper (set the margins to 0 in your application software).

- To print on paper loaded in the manual feed tray, select a paper size with a **Front - FineArt** (or **Fr.-FineArt**) option.
5. Choose portrait or landscape as the **Orientation** setting for your document or photo.
 6. Select **Printer Settings** from the pop-up menu.

Printer: SureColor P800

Presets: Default Settings

Copies: 1

Pages: ☒ All ☐ From: 1 to: 1

Paper Size: US Letter 8.50 by 11.00 inches

Orientation:

Printer Settings

Basic Advanced Color Settings

Media Type: Premium Photo Paper Glossy

Ink: Photo Black

Print Mode: AccuPhoto HD

Color Mode: EPSON Standard (sRGB)

Output Resolution: SuperFine - 1440 dpi

☒ High Speed ☐ Mirror Image

Cancel Print

Note:

In certain programs, you may need to select **Advanced** before you can select **Print Settings**. For more information about print settings, click the **?** button.

7. Select the **Media Type** setting that matches the paper you loaded (see page 30).

Note:

The ink type will change depending on the size and type of paper you select. To avoid changing black ink more often than necessary, set the printer to the type of black ink you usually use (see page 42).

8. For the **Print Mode** setting, select **AccuPhoto HD2** for any type of photographic printing. To print photos in black-and-white, use **Advanced B&W Photo** mode.
 9. Select one of the following as the **Color Mode** setting:
 - **Epson Standard (sRGB)** matches images colors to the Adobe sRGB color standard. Use this setting if your source file was captured in Adobe sRGB.
 - **Adobe RGB** matches images colors to the Adobe RGB color standard. Use this setting if your source file was captured in Adobe RGB.
- Note:**
For color management instructions, see epson.com/proimaging/iccprofiles.html. For more information about print settings, click **Help** or see your online *User's Guide*.
10. Select an **Output Resolution** setting (available settings depend on selected media type):
 - **Draft:** for fast printing with draft quality
 - **Fine - 360dpi:** for everyday text and image printing
 - **Fine - 720dpi:** for everyday text and image printing
 - **SuperFine - 1440dpi:** for photos and graphics with good print quality and speed
 - **SuperPhoto - 2880dpi:** for the best print quality and slowest print speed
 11. Click **Print**.
 12. To monitor your print job, click the  printer icon in the dock.

Pause or
resume
printing



Note:

If you're printing on roll paper, see page 20 for instructions on removing your printed photos and paper.

Selecting the Correct Paper Type

Select the correct **Media Type** setting in your printer software (see page 23 for Windows or page 28 for OS X). This adjusts ink coverage for your media. If you don't see your paper type listed in the printer driver, see the tables below.

Media usable with Photo Black ink (see page 42):

For this paper/media	Select this setting
Plain paper Epson Bright White Pro Paper	Plain Paper/Bright White Paper*
Epson Photo Paper Glossy	Photo Paper Glossy
Epson Premium Photo Paper Glossy Epson Ultra Premium Photo Paper Glossy	Premium Photo Paper Glossy
Epson Premium Photo Paper Semigloss	Premium Photo Paper Semigloss
Epson Ultra Premium Photo Paper Luster	Ultra Premium Photo Paper Luster
Epson Exhibition Fiber Paper**	Exhibition Fiber Paper
Epson Exhibition Canvas Satin	Exhibition Canvas Satin
Epson Exhibition Canvas Gloss	Exhibition Canvas Gloss
Epson Exhibition Canvas Natural Satin	Exhibition Canvas Natural Satin
Epson Exhibition Canvas Natural Gloss	Exhibition Canvas Natural Gloss
Epson Metallic Photo Paper Glossy	Metallic Photo Glossy
Epson Metallic Photo Paper Luster	Metallic Photo Luster
Epson Legacy Baryta	Legacy Baryta
Epson Legacy Platine	Legacy Platine
Epson Screen Positive Film	Positive Film

* OS X: When printing with Photo Black ink, select the PK (Photo Black) option.

** For the best results on this paper, print using the premium ICC profile installed by the driver. For new media types, download the premium ICC profiles from Epson at epson.com/support/p800 (U.S.) or epson.ca/support/p800 (Canada).

Media usable with Matte Black ink (see page 42):

For this paper/media	Select this setting
Plain paper Epson Bright White Pro Paper	Plain Paper/Bright White Paper*
Epson Presentation Paper Matte	Presentation Paper Matte
Epson Premium Presentation Paper Matte Epson Ultra Premium Presentation Paper Matte Epson Premium Presentation Paper Matte Double-sided Epson Photo Quality Self-adhesive Sheets	Ultra Premium Presentation Paper Matte
Epson Velvet Fine Art Paper	Velvet Fine Art Paper
Epson Watercolor Paper Radiant White	Watercolor Paper - Radiant White
Epson UltraSmooth Fine Art Paper 325 gsm	UltraSmooth Fine Art Paper
Epson Exhibition Canvas Matte	Exhibition Canvas Matte
Epson Exhibition Canvas Natural Matte	Exhibition Canvas Natural Matte
Epson Hot Press Bright	Hot Press Bright
Epson Hot Press Natural	Hot Press Natural
Epson Cold Press Bright	Cold Press Bright
Epson Cold Press Natural	Cold Press Natural

* OS X: When printing with Matte Black ink, select the MK (Matte Black) option.

Maintaining Your Printer

 
Follow the steps in these sections to keep the Epson SureColor P800 Series working at its best:

- “Checking and Cleaning the Print Head” below
- “Checking and Aligning the Print Head” on page 34
- “Checking the Ink Cartridge Status” on page 35
- “Replacing Ink Cartridges” on page 37
- “Replacing Maintenance Cartridges” on page 40
- “Switching Black Ink Types” on page 42
- “Cleaning the Rollers” on page 44

Checking and Cleaning the Print Head

If your printouts are faint or have gaps in them, some of the nozzles in the print head may be clogged or ink may be running low in one or more of the ink cartridges. Follow the steps below to check the print head nozzles.

1. Load a few sheets of letter-size plain paper.
2. Press the  button or tap the printer's touch screen to open the main menu.
3. Press the , select **Maintenance**, then select **Print Head Nozzle Check**.
4. Press **Print** to print a nozzle check pattern.
5. Check the nozzle check pattern that prints to see if there are gaps in the lines.



Nozzles are clean



Nozzles need cleaning

6. If there are no gaps, the print head is clean. Select **Done**.

If there are gaps or the pattern is faint, select **Clean the Print Head** (see page 33).

Cleaning the Print Head

If print quality has declined and the nozzle check indicates clogged nozzles, you can clean the print head. Print head cleaning uses ink, so clean it only if necessary.

Note:

You cannot clean the print head if an ink cartridge is expended, and may not be able to clean it when a cartridge is low. You must replace the cartridge first (see page 37).

1. Load a few sheets of letter-size plain paper.
2. Press the  button or tap the printer's touch screen to open the main menu.
3. Press the , select **Maintenance**, then select **Print Head Cleaning** or **Heavy Head Cleaning**.
4. Press **Head Cleaning**.

Cleaning lasts around 2-3 minutes. When it's finished, you see a message on the screen.

Caution:

Never turn off the product during head cleaning or you may damage it.

5. Press **Print Nozzle Check Pattern**, then press **Print** to confirm that the print head is clean.
6. Press **Done**.

Note:

Always print a nozzle check between cleaning cycles. If you don't see any improvement after cleaning the print head several times, select **Heavy Head Cleaning**. If you don't see any improvement after performing Heavy Head Cleaning, turn off the printer and wait at least twenty four hours to let any dried ink soften. Then try cleaning the print head again. If quality does not improve, one of the ink cartridges may need to be replaced. If that doesn't help, contact Epson as described on page 49.

If you do not use your product often, it is a good idea to print a few pages at least once a month to maintain good print quality.


Checking and Aligning the Print Head

If your printouts become grainy or blurry, or you see dark or light bands across them, you may need to align the print head.

Note:

Banding may also occur if your print head nozzles need cleaning (see page 32).

1. Load a few sheets of Epson Presentation Paper Matte (or the photo paper you have on hand) in the sheet feeder (see page 5). It's best to use matte or photo paper for the most accurate alignment.
2. Press the  button or tap the printer's touch screen to open the main menu.
3. Press the , select **Maintenance**, then select **Head Alignment**.
4. Press **Print** to print an adjustment pattern.
5. Look at line #1 and choose the pattern with the fewest vertical lines. (In the example below, you would choose "4".)

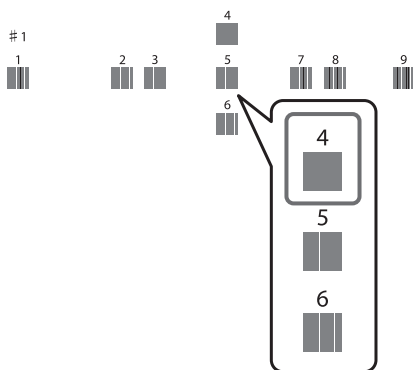

6. Make sure #1 is displayed on the touch screen, press the up or down arrow buttons to select the number you chose in step 5, then press **Proceed**.
7. Repeat this process for lines #2 through #9.
8. Press **Done** when finished.

Checking the Ink Cartridge Status

Your Epson SureColor P800 Series printer will let you know when an ink cartridge is low or expended in the following ways:

- The printer's touch screen displays an error message.
- Your computer screen displays a message when you try to print. This window can optionally display ink offers and other updates retrieved from an Epson website.

Tip:

It's a good idea to check the ink status and replace cartridges, if necessary, before printing a large print job. If you need to replace a cartridge while printing, you can do so but you might notice a color difference depending on drying conditions and the time it takes to install the new ink cartridge.

Note:

On a Windows computer that is connected to the Internet, you may see a screen asking if you want to receive Epson offers the first time you try to print when ink is low. Click **Accept** or **Decline**. To disable checking for ink offers or updates from Epson, see the instructions in your online *User's Guide*.

To check the ink cartridge status at any time, do one of the following:


Control panel:

1. Press the  button or tap the printer's touch screen to open the main menu.
2. Press the  button.

You see the Ink Levels screen.

Windows:


Double-click the  icon in the bottom right corner of your screen (the taskbar). You see this screen:

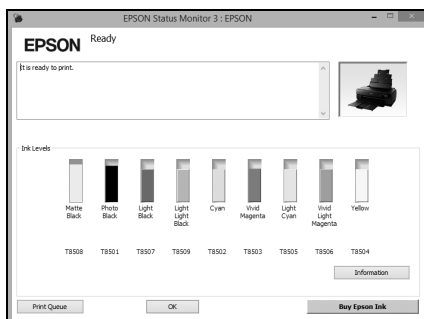

OS X:

1. In the Apple menu or the Dock, select **System Preferences**. Select **Printers & Scanners**, **Print & Fax** or **Print & Scan**, select your product, and select **Options & Supplies**. Select **Utility** and select **Open Printer Utility**.
2. Select **EPSON Status Monitor**.

You see this screen:

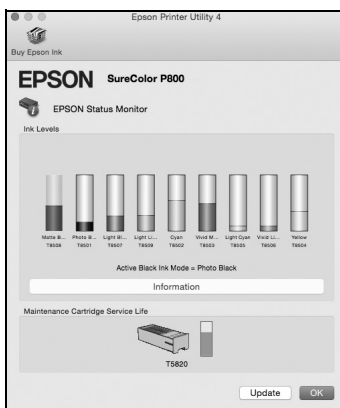

Replacing Ink Cartridges

You can purchase genuine Epson ink and paper at Epson Supplies Central at epson.com/ink3 (U.S. sales) or epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Use the following list when you order or purchase new ink cartridges:

Ink color	Part number
Photo Black	T8501
Cyan	T8502
Vivid Magenta	T8503
Yellow	T8504
Light Cyan	T8505
Vivid Light Magenta	T8506
Light Black	T8507
Matte Black	T8508
Light Light Black	T8509

Note:

We recommend that you use genuine Epson cartridges and do not refill them. The use of other products may affect your print quality and could result in printer damage.

Yields vary considerably based on images printed, print settings, paper type, frequency of use, and temperature. For print quality, a small amount of ink remains in the cartridge after the “replace cartridge” indicator comes on. The cartridges included with the printer are designed for printer setup and not for resale. After some ink is used for charging, the rest is available for printing.

For best printing results, use up a cartridge within six months of opening the package.

Caution:


Do not open ink cartridge packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Leave your old cartridges in the printer until you are ready to replace them to prevent the print head nozzles from drying out.


Make sure you have a new ink cartridge before you begin. You must install new cartridges immediately after removing the old ones.

1. Press the  button or tap the printer's touch screen to open the main menu.
2. Press the  button.
3. Press **Open ink cover**.

The ink cartridge cover lock releases.

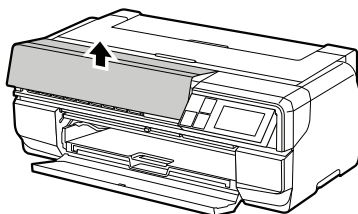


4. Open the ink cartridge cover.

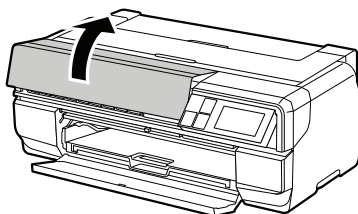


Note: Do not try to open the ink cartridge cover until the lock is released.

5. Press the lever on the ink cartridge you want to replace. The ink cartridge will pop up slightly.

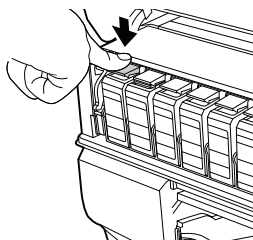


6. Pull out the ink cartridge.

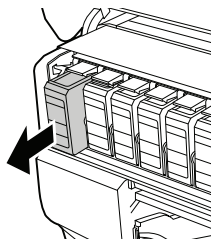


Warning:

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. Keep ink cartridges out of the reach of children.


7. Remove the ink cartridge from the package and shake it as shown for about five seconds, but be careful not to touch the green chip on the cartridge.

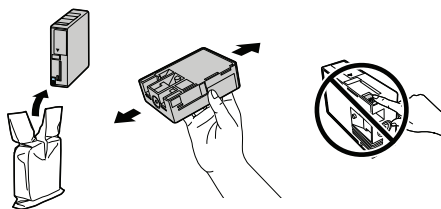

8. Insert the new cartridge into the slot and push it in until it clicks into place.

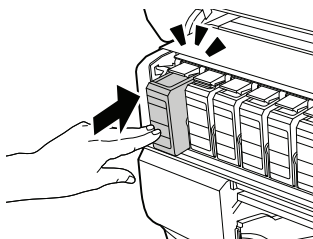

9. Close the ink cartridge cover.

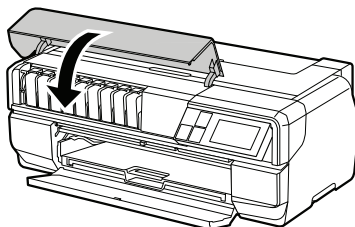

Wait for the printer to check the ink cartridges and charge the ink delivery system, if necessary.


Caution:

Never turn off the printer while ink is charging or you'll waste ink.

Replacing Maintenance Cartridges

The maintenance cartridge absorbs ink that is used in maintenance operations such as head cleaning and changing black ink. Replace the maintenance cartridge (part number T582000) when you see a message on the touch screen.


1. Turn on the printer.
2. Open the maintenance cartridge cover.

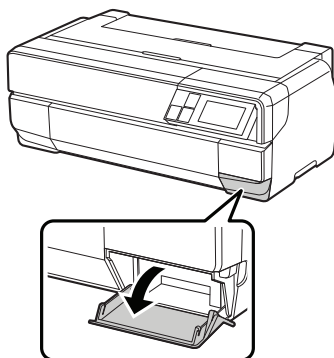


3. Remove the new maintenance cartridge from the package.

Caution:


Do not touch the area shown or you may damage the product.

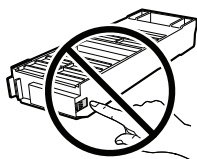


4. Push up slightly on the maintenance cartridge and slide it out carefully so that it does not tilt.

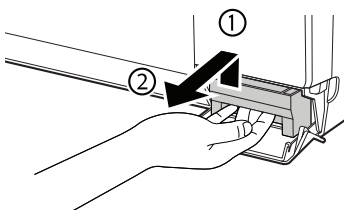

5. Place the old maintenance cartridge in the bag supplied with the new cartridge, and then seal the bag.

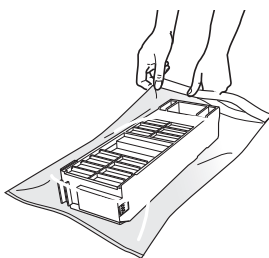

6. Insert the new maintenance cartridge.

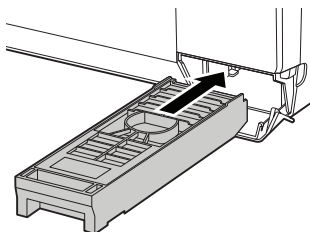

7. Close the maintenance cartridge cover.

Switching Black Ink Types

Your printer comes with Matte Black and Photo Black ink cartridges. Although both must be installed for the printer to work, the printer can use only one type of black ink at a time. The printer will switch ink automatically, depending on the type of media you load. This consumes a certain amount of ink, so you should avoid switching ink more often than necessary.

Note:

You can disable automatic black ink switching by pressing the  button and selecting **System Administration > Printer Settings > BK Ink Auto Change > Off**.

To conserve ink, you can select the type of ink that is available by default (see page 43). First decide which type of media you usually print on. Then, if necessary, switch to the type of ink that works with that media.

The following media use **Matte Black** ink:

- Legacy Etching
- Legacy Fibre
- Legacy Textured
- Hot Press Bright
- Hot Press Natural
- Cold Press Bright
- Cold Press Natural
- Velvet Fine Art Paper
- Exhibition Canvas Matte
- Exhibition Canvas Natural Matte
- Watercolor Paper Radiant White
- UltraSmooth Fine Art Paper 325 gsm
- Ultra Premium Presentation Paper Matte
- Premium Presentation Paper Matte
- Premium Presentation Paper Matte Double-sided
- Presentation Paper Matte
- Photo Quality Self-adhesive Sheets

The following media use **Photo Black** ink:

- Legacy Platine
- Legacy Baryta
- Exhibition Fiber Paper
- Ultra Premium Photo Paper Luster
- Metallic Photo Paper Glossy
- Metallic Photo Paper Luster
- Exhibition Canvas Gloss
- Exhibition Canvas Satin
- Exhibition Canvas Natural Gloss
- Exhibition Canvas Natural Satin
- Premium Photo Paper Semigloss
- Ultra Premium Photo Paper Glossy
- Premium Photo Paper Glossy
- Photo Paper Glossy

Select the Black Ink Type

Switching black ink takes several minutes. Because it consumes some of the new type of ink, you should not switch ink more often than necessary.

1. Press the  button or tap the printer's touch screen to open the main menu.
2. Press the  button.
3. Press **Proceed** to select the type of ink the printer will switch to. The time required for each type is shown below:
 - Photo Black to Matte Black: about 1.5 minutes
 - Matte Black to Photo Black: about 3.5 minutes

Cleaning the Rollers

If you notice lines or streaks on your printouts, you may need to clean the rollers inside the printer by feeding several sheets of plain paper through it.

Note:

If paper dust builds up on the rollers, they may lose traction and become unable to feed paper properly. To keep the paper feed mechanism running smoothly, clean the rollers after feeding every 100 sheets or so of matte paper.

1. Turn on the printer.
2. Open the paper support and output tray.
3. Load several sheets of plain paper in the sheet feeder (see page 5).

Note:

Only the area corresponding to the size of the paper will be cleaned.

4. Press the  button or tap the printer's touch screen to open the main menu.
5. Press the  button, select **Maintenance**, then select **Paper Guide Cleaning**.
6. Press **Roller Cleaning** to feed a sheet of paper through the printer.
7. Feed several sheets of paper to completely clean the rollers.

Solving Problems

If you have a problem with your Epson product, check the messages on the LCD screen to diagnose the cause. You can also check the basic troubleshooting suggestions below or in your online *User's Guide*.

Checking for Software Updates

Periodically, it's a good idea to check Epson's support website for free updates to your product software. Visit the driver download site at www.epson.com/support/p800 (U.S.) or www.epson.ca/support/p800 (Canada).

With Windows, your printer software automatically checks for updates. You can also select **Driver Update** on the **Utility** tab in the printer settings window, or right-click the  icon in the bottom right corner of your screen (the taskbar) and select **Software Update**.

You can also update the software by selecting **EPSON Software Updater** in the **EPSON** or **EPSON Software** program group, accessible by the **Start** button, or on the **Start** or **Apps** screens, depending on your version of Windows.

With OS X, you can manually update the software by opening the **Applications > Epson Software** folder and selecting **EPSON Software Updater**.

Problems and Solutions

Check the solutions below if you're having trouble using your printer.

Printing Problems

- Make sure your paper is loaded printable side up, short edge first, and all the way to the right (see page 5 and page 8).
- When using the sheet feeder, don't load paper above the arrow mark on the left edge guide.

- When using the manual feed tray, load only one sheet of compatible paper (see page 8).
- Make sure the paper size settings in the printer software are correct for the paper you loaded.

Paper Feeding Problems

- If paper doesn't feed into the sheet feeder, remove the paper and fan the stack of paper to separate the sheets. Reload paper against the right side and slide the edge guide against it. Do not load too many sheets in the sheet feeder at once (see page 5).
- If paper dust builds up on the rollers, they may lose traction and become unable to feed paper properly. See page 44 or your online *User's Guide* for cleaning instructions.
- If you can't insert paper easily into the manual feed tray, make sure the paper is perfectly flat and not curled.
- Make sure the manual feed tray is not extended if you're printing on roll paper or with the sheet feeder. Extend it only to load fine art paper or poster board. Once the media is fed into the printer and you see a message on the screen, close the manual feed tray.
- If roll paper doesn't feed, cut the end of it straight across and uncurl the end by rolling it backward, if necessary. Then reload the paper (see page 14).
- If thick media doesn't feed, make sure you're loading it straight into the printer and not at an angle (see page 11).
- If paper is jammed, try the following, depending on how you're printing:

Sheet feeder: Open the printer cover and remove any paper jammed inside. Press **Restart** to clear the error.

Roll paper slot: Cut off any printed roll paper and then cut the paper close to the roll. Gently pull out the paper from the front or back (whichever is easier) and press **Restart** to clear the error.

Manual feed tray: Gently pull out the paper from the front or back (whichever is easier) and press **Restart** to clear the error.

If you still see an error message, turn off the printer and then turn it back on.

Print Quality Problems

- For the best print quality, use Epson papers and genuine Epson ink cartridges (see page 37).
- Load the paper printable side up (usually the whiter, brighter, or glossy side).
- Make sure your paper isn't damp or curled.
- Some papers can only be loaded one sheet at a time (see page 5).
- Make sure the type of paper you loaded matches the paper size and paper type settings in your printer software (see page 30).
- Remove sheets from the output tray as they eject. Let your prints dry separately for at least 12 hours before framing or placing in a protective sheet. If you need to stack them, place a sheet of plain paper between each print.
- If you notice light or dark bands across your printouts or they are too faint, you may need to clean the print head. Run a nozzle check and clean the print head if necessary (see page 32).
- If you notice jagged vertical lines, run the print head alignment utility to check and align the print head (see page 34).
- The ink cartridges may be low on ink. Check cartridge status (see page 35) and replace cartridges if necessary (see page 37).

Network Problems

If you have a poor wireless connection, try moving the product to a different location. Avoid placing it next to a microwave oven, 2.4 GHz cordless phone, or large metal object such as a filing cabinet.

Note:

For optimal print speed, your wireless router and/or laptop must conform to the 802.11n standard. Earlier standards (802.11a/b/g) are not supported.

Network setup failed

- Try moving the product to a different location.
- Make sure there aren't any access restrictions (such as MAC address filtering) set on the wireless router. If access restrictions are set, register the product's MAC address on the router. Print a Network Status Sheet (see below) to obtain the MAC address. Then see your router's manual for instructions.

- If your wireless router doesn't broadcast its network name (SSID), see the online *User's Guide* for instructions on manually entering your wireless network name.
- If your wireless router has security enabled, make sure you entered the WEP key or WPA passphrase correctly.
- Reinstall your product software.

The Wi-Fi icon appears on the LCD screen but you cannot print

- Make sure your firewall or security software is not set to block port 3690 (TCP/UDP). Contact your firewall manufacturer for assistance.
- Your router might not be assigning IP addresses automatically using DHCP. If it isn't, you will need to set the product's IP address manually. Make sure it is set correctly for your network.

Print a Network Status Sheet

1. Press the  button or tap the printer's touch screen to open the main menu.
2. Press the  button, select **Network Status**, then select **Wi-Fi/Network Status**.
3. Press **Print** twice to print the status sheet.

Where to Get Help

Epson Technical Support

Internet Support

Visit your product's support website at www.epson.com/support/p800 (U.S.) or www.epson.ca/support/p800 (Canada) for solutions to common problems. You can download drivers, printer software, and utilities, view how-to videos, access the online *User's Guide*, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

Before you call Epson for support, please have the following information ready:

- Product name (Epson SureColor P800 Series)
- Product serial number (located on the label in back)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration
- Description of the problem

Then call:

(562) 276-7272 (U.S.) or (905) 709-2567 (Canada), 6 AM to 8 PM, Pacific Time, Monday through Friday, and 7 AM to 4 PM, Pacific Time, Saturday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Purchase Supplies and Accessories

You can purchase genuine Epson ink and paper at Epson Supplies Central at www.epson.com/ink3 (U.S. sales) or www.epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Notices

Important Safety Instructions

Before using your Epson SureColor P800 Series printer, read and follow these safety instructions:

- Be sure to follow all warnings and instructions marked on the printer.
- Use only the type of power source indicated on the printer label.
- Place the printer near a wall outlet where the plug can be easily unplugged.
- If you won't be using the printer for a long period, unplug the power cord from the electrical outlet.
- Always turn off the printer using the ⏻ power button, and wait until the ⏻ power light stops flashing before unplugging the printer or cutting off power to the electrical outlet.
- Avoid plugging the printer into an outlet on the same circuit as a photocopier or air control system that regularly switches on and off, or on an outlet controlled by a wall switch or timer.
- Do not let the power cord become damaged or frayed.
- If you use an extension cord with the printer, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.
- Avoid locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
- Leave enough room around the printer for sufficient ventilation. Do not block or cover openings in the printer case or insert objects through the slots.
- Do not place the printer near a radiator or heating vent or in direct sunlight.
- Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire.
- Place the printer on a flat, stable surface that extends beyond its base in all directions. It will not operate properly if it is tilted or at an angle.
- Make sure the printer is at least 11 inches (280 mm) away from the wall. If printing on poster board, make sure the printer is at least 17 inches (430 mm) from the wall.
- Be careful not to spill liquid on the printer.

- Except as specifically explained in your documentation, do not attempt to service the printer yourself.
- Unplug the printer and refer servicing to qualified service personnel under the following conditions: if the power cord or plug is damaged; if liquid has entered the product; if the product has been dropped or the case damaged; if the product does not operate normally or exhibits a distinct change in performance. Adjust only those controls that are covered by the operating instructions.
- When storing or transporting the printer, do not tilt it, stand it on its side, or turn it upside down; otherwise ink may leak from the cartridges.

Ink Cartridge Safety

- Keep ink cartridges out of the reach of children and do not drink the ink.
- Be careful when you handle used ink cartridges; there may be ink remaining around the ink supply port. If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water.
- Do not put your hand inside the printer or touch any cartridges during printing.
- Install a new ink cartridge immediately after removing an expended one. Leaving cartridges uninstalled can dry out the print head and may prevent the printer from printing.
- If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Note that there is a valve in the ink supply port, making covers or plugs unnecessary, but care is needed to prevent the ink from staining items that the cartridge touches. Do not touch the ink cartridge ink supply port or surrounding area. Do not store the cartridge upside down.
- Use the ink cartridge before the date printed on its package. For best results, use within six months of opening the package.
- Do not dismantle the ink cartridges or try to refill them. Do not remove or tear the label on the cartridges.

Touch Screen Safety

- Use only a dry, soft cloth to clean the touch screen. Do not use liquid or chemical cleansers.
- If the touch screen is damaged, contact Epson. If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately.
- Press the touch screen gently with your finger only. Do not use pens or other sharp objects to press the touch screen.

Wireless Network Safety

- Do not use this product inside medical facilities or near medical equipment. Radio waves from the product may adversely affect the operation of medical equipment.
- Keep this product at least 9 inches (22 cm) away from cardiac pacemakers. Radio waves from this product may adversely affect their operation.
- Do not use this product near automatically controlled devices such as automatic doors or fire alarms. Radio waves from this product may adversely affect these devices.

Epson America, Inc., Limited Warranty

What Is Covered: Epson America, Inc. ("Epson") warrants to the original retail purchaser that the Epson printer covered by this limited warranty statement, if purchased and operated only in the United States, Canada, or Puerto Rico, will be free from defects in workmanship and materials for a period of one (1) year from the date of original purchase. For warranty service, you must provide proof of the date of original purchase.

What Epson Will Do To Correct Problems: Should your Epson printer prove defective during the warranty period, please call the Epson ConnectionSM at (562) 276-7272 (U.S.) or (905) 709-2567 (Canada) for warranty repair instructions and return authorization. An Epson service technician will provide telephone diagnostic service to determine whether the printer requires service. If service is needed, Epson will, at its option, exchange or repair the printer without charge for parts or labor. If Epson authorizes an exchange for the defective unit, Epson will ship a replacement printer to you, freight prepaid, so long as you use an address in the United States, Canada, or Puerto Rico. Shipments to other locations will be made freight collect. You are responsible for securely packaging the defective unit and returning it to Epson within five (5) working days of receipt of the replacement. Epson requires a debit or a credit card number to secure the cost of the replacement printer in the event that you fail to return the defective one. If Epson authorizes repair instead of exchange, Epson will direct you to send your printer to Epson or its authorized service center, where the printer will be repaired and sent back to you. You are responsible for packing the printer and for all costs to and from the Epson authorized service center. When warranty service involves the exchange of the printer or a part, the item replaced becomes Epson property. The replacement printer or part may be new or refurbished to the Epson standard of quality, and, at Epson's option, may be another model of like kind and quality. Exchange products and parts assume the remaining warranty period of your original product covered by this limited warranty.

What This Warranty Does Not Cover: This warranty covers only normal use in the United States, Canada, or Puerto Rico. Excessive, continuous use is not considered normal use; damage, maintenance or service from such use will not be covered under this warranty. This warranty is not transferable. This warranty does not cover any color change or fading

of prints or reimbursement of materials or services required for reprinting. This warranty does not cover damage to the Epson product caused by parts or supplies not manufactured, distributed or certified by Epson. This warranty does not cover ink cartridges, ink supply units, or ink packs. This warranty does not cover third party parts, components, or peripheral devices added to the Epson product after its shipment from Epson, e.g., dealer or user-added boards or components. Epson is not responsible for warranty service should the Epson label or logo or the rating label or serial number be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, improper installation, neglect, improper shipping, damage caused by disasters such as fire, flood, and lightning, improper electrical current, software problems, interaction with non-Epson products, or service other than by an Epson Authorized Servicer. If a claimed defect cannot be identified or reproduced, you will be held responsible for the costs incurred.

DISCLAIMER OF WARRANTIES: THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. UNLESS STATED HEREIN, ANY STATEMENTS OR REPRESENTATION MADE BY ANY OTHER PERSON OR FIRM ARE VOID.

Remedies: Your exclusive remedy and Epson's entire liability for a material breach of this Agreement will be limited to a refund of the price paid for the Epson products covered by this Agreement. Any action for breach of warranty must be brought within 3 months of the expiration date of the warranty. Epson is not liable for performance delays or for nonperformance due to causes beyond its reasonable control. Except as provided in this written warranty, neither Epson nor its affiliates shall be liable for any loss, inconvenience, or damage, including direct, special, incidental or consequential damages, including lost profits, cost of substitute equipment, downtime, claims of third parties, including customers, or injury to property, resulting from the use or inability to use the Epson products, whether resulting from a breach of warranty or any other legal theory. Some jurisdictions do not allow limits on warranties or remedies for breach in certain transactions. In such jurisdictions, the limits in this paragraph and the preceding paragraph may not apply.

In Canada, warranties include both warranties and conditions.

Arbitration, Governing Laws: Any disputes arising out of this Agreement will be settled by arbitration, before a single arbitrator to be conducted in Los Angeles, California, in accordance with the commercial Arbitration Rules of the American Arbitration Association, and judgment upon the award rendered by the arbitrator may be entered in any court having jurisdiction thereof. This Agreement shall be construed in accordance with the laws of the State of California, except this arbitration clause which shall be construed in accordance with the Federal Arbitration Act.

To find the Epson Authorized Reseller nearest you, visit our website at: epson.com

To find the Epson Customer Care Center nearest you, visit epson.com/support

You can also write to:

Epson America, Inc., P.O. Box 93012, Long Beach, CA 90809-3012

Declaration of Conformity

According to 47CFR, Part 2 and 15 for: Class B Personal Computers and Peripherals;
and/or CPU Boards and Power Supplies used with Class B Personal Computers:

We: Epson America, Inc.
Located at: MS 3-13
3840 Kilroy Airport Way
Long Beach, CA 90806
Telephone: (562) 981-3840

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: Epson
Type of Product: Ink jet printer
Model: K141A

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

CAN ICES-3(B)/NMB-3(B)

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson product. Epson is not responsible for any use of this information as applied to other equipment.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Responsible Use of Copyrighted Materials

Epson encourages each user to be responsible and respectful of the copyright laws when using any Epson product. While some countries' laws permit limited copying or reuse of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. Contact your legal advisor for any questions regarding copyright law.

Trademarks

EPSON, UltraChrome, Supplies Central, and SureColor are registered trademarks and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

UltraSmooth is a registered trademark and Epson Connection is a service mark of Epson America, Inc.

Mac and OS X are trademarks of Apple, Inc., registered in the U.S. and other countries. AirPrint is a trademark of Apple, Inc.

Wi-Fi Direct is a registered trademark of Wi-Fi Alliance.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

