


EPSON® PowerLite® 30c

Multipurpose Entertainment Projector

Quick Setup

1 Unpack the projector

Your projector comes with the following items:

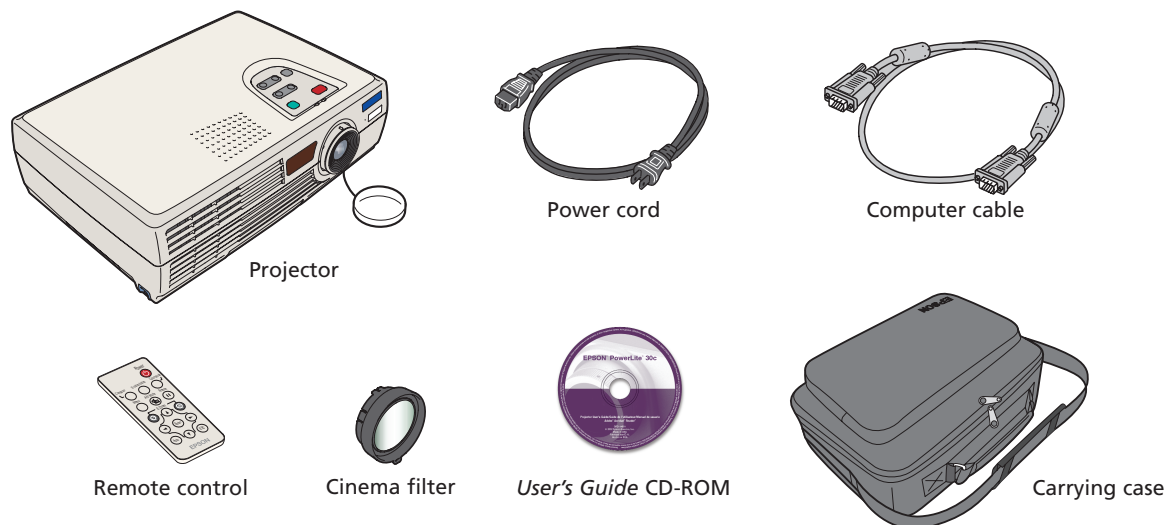


Note: To use your *User's Guide* on the CD-ROM, open the folder labeled **English**, then open the file named *UserGuide.pdf* with Acrobat® Reader®. If you don't have Acrobat Reader, open the folder labeled **Acrobat Reader** and install it.

2 Connect your video source

The projector has 3 video connectors, as shown below. Each one requires a different type of cable (a computer cable is included). You can connect up to 3 video devices (including a computer) and use the remote control to switch between them.

- 1 Check the connectors on your video equipment. If more than one connection is available, choose the one that provides the best quality. (The projector connectors from lowest to highest quality are Video [composite video], S-Video, and Computer/Component Video.)
- 2 Make sure you have the right cable(s) for the connection(s) you want to use, and the cables are long enough for your setup. If you need a cable longer than the standard 6 to 10 ft, you may need a distribution amplifier.
- 3 Before you connect your equipment, make sure everything is turned off.
- 4 Connect your video equipment to the projector.

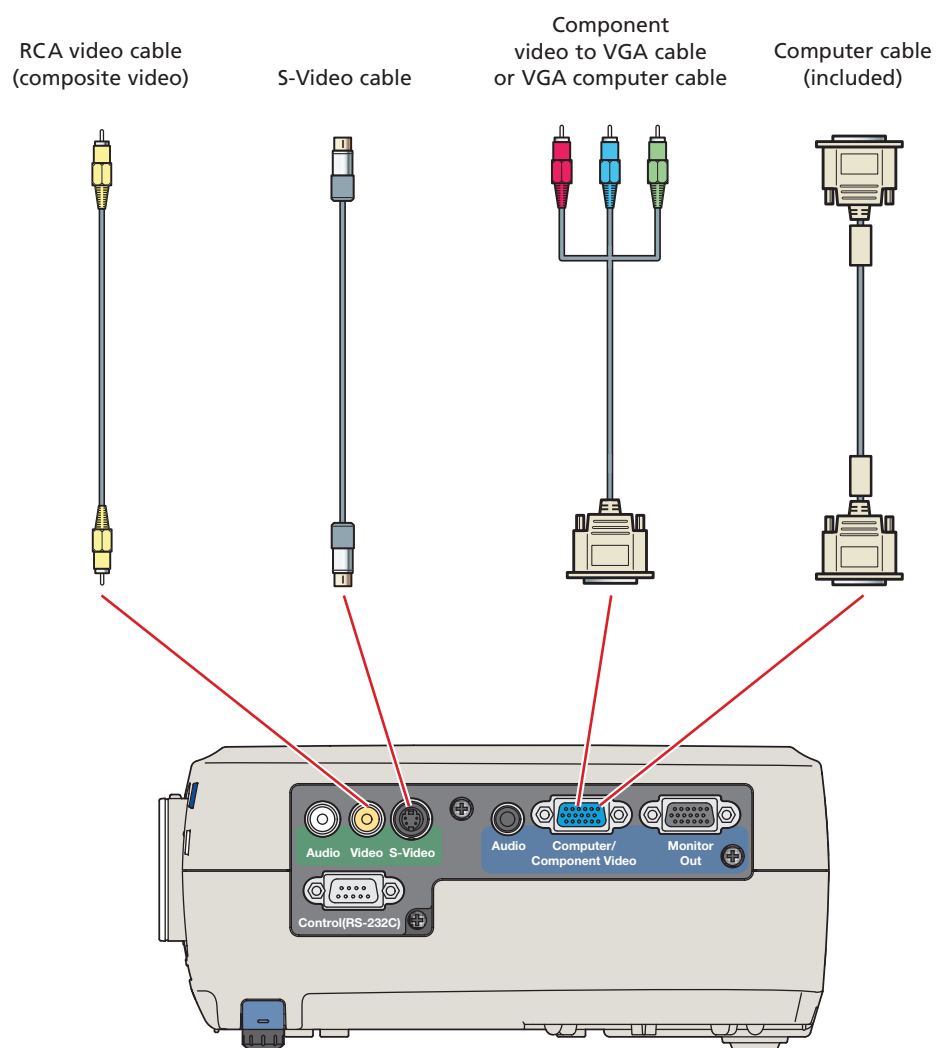

The projector supports 4 viewing setups. Choose the best one for your home theater environment. If you install the projector in a rear or overhead position, you'll need to choose the correct projection option, identified below, from the Advanced menu. Follow the instructions on the back of this sheet to turn on the projector and adjust the image.



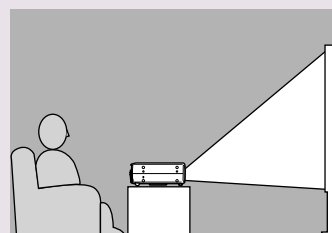



Table
Convenient for temporary front projection.

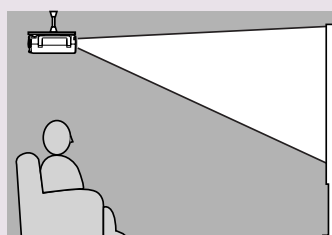

Ceiling
Professional installation recommended.
Choose **Ceiling** from the Advanced menu.

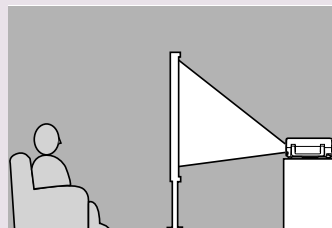


Rear
For permanent installation behind a translucent screen.
Choose **Rear Proj.** from the Advanced menu.

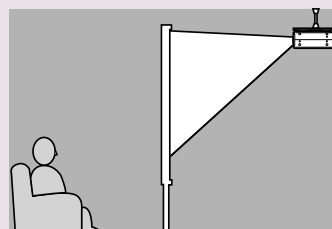

Rear/Ceiling
Professional installation behind a translucent screen recommended. Choose **Rear Proj.** and **Ceiling** from the Advanced menu.

The distance between the projector and the screen determines the size of the image. The diagram below shows approximately how big your image will be, based on where you set up the projector.

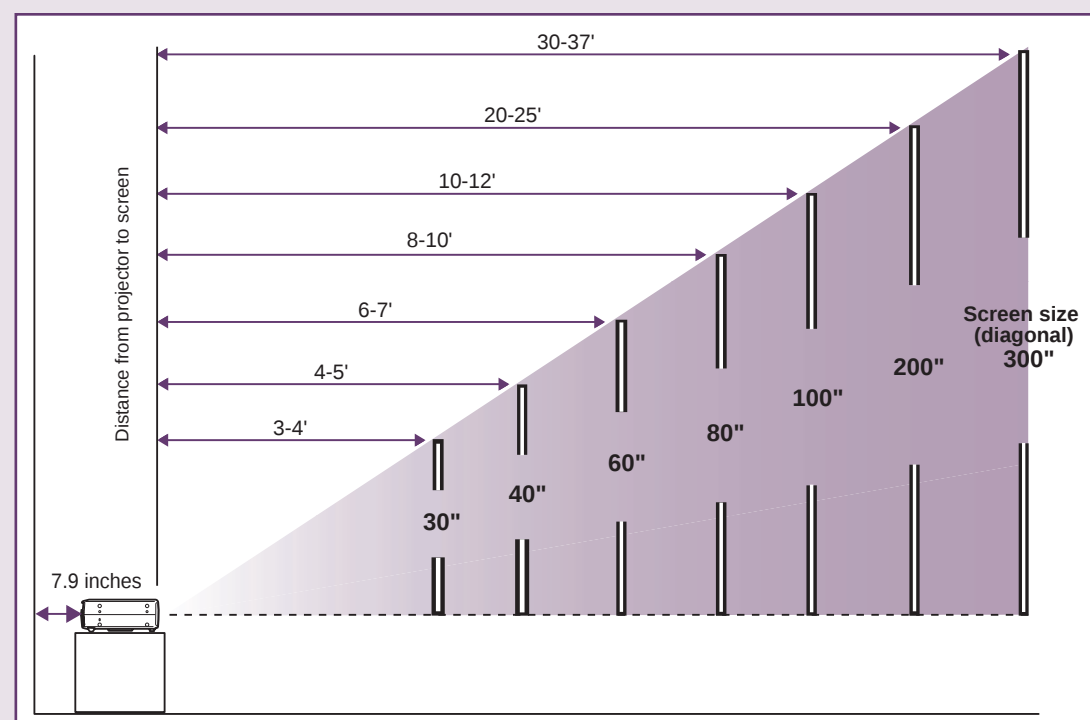


Turn over •••••

3 Set up the remote control


Pull out the insulating tape that protrudes from the battery holder.

The remote control is ready for use.

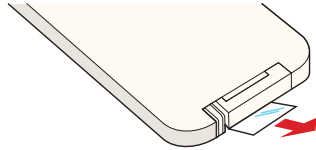


4 Plug in and turn on

- 1 Remove the lens cover.

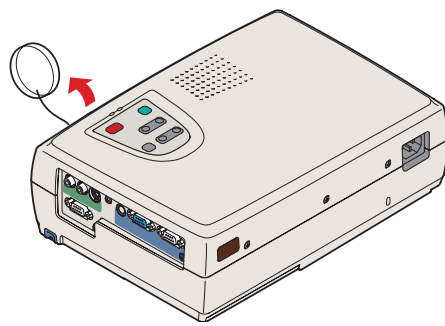


- 2 Connect the power cord to the projector and plug the other end into a grounded outlet.


The  power light turns orange.

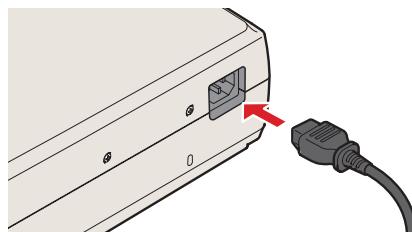


- 3 Turn on the other equipment connected to the projector.

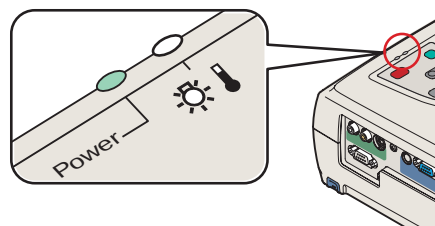

- 4 Press the  **Power** button on the projector or remote control. The  power light flashes green, and the projector lamp comes on in about 15 seconds.

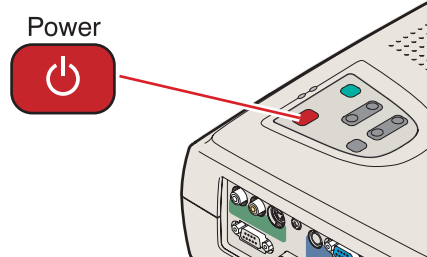

- 5 Start your video. If you have connected more than one video source, press the **Computer** or **S-Video/Video** button on the remote control to select the one you want to watch.

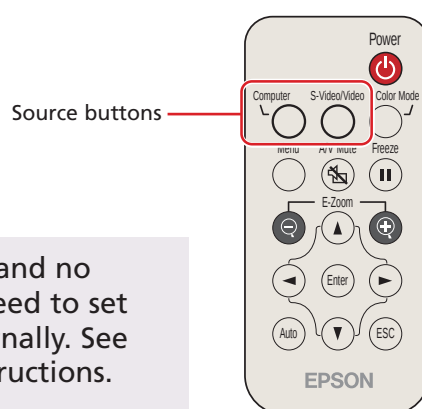

Note: If you connected a laptop computer and no image is being projected, you may need to set up the laptop to output signals externally. See your laptop's documentation for instructions.

For additional instructions on connecting to a computer, see your *User's Guide* on the CD-ROM.

Turning off the projector


- 1 When you're finished using the projector, first turn off the video source.
- 2 Press the  **Power** button on the projector or remote control.
- 3 When you see the confirmation message, press the  **Power** button again. The  power light flashes orange as the projector cools down.

Caution: Never unplug the projector when the  power light is green or flashing orange.

5 Adjust the image


- 1 If you need to raise the image, press the foot adjust buttons and lift the front of the projector. Release the buttons to lock the feet in the position you want.

If you need to straighten the image, raise or lower an individual foot.

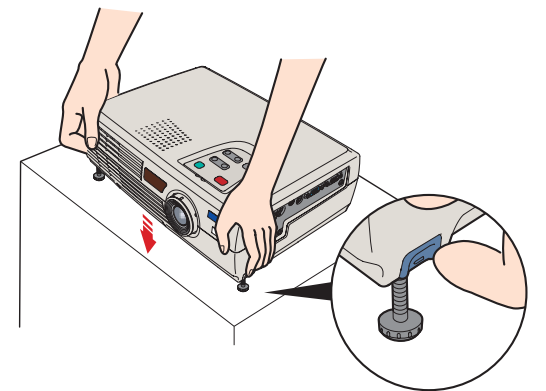

- 2 Rotate the focus ring to sharpen the image.

- 3 If your image is upside-down or reversed, you need to change the setting in the Advanced menu. Press the **Menu** button on the remote control and use the **Enter** button to choose the Advanced menu. Then select the correct setting for your setup.

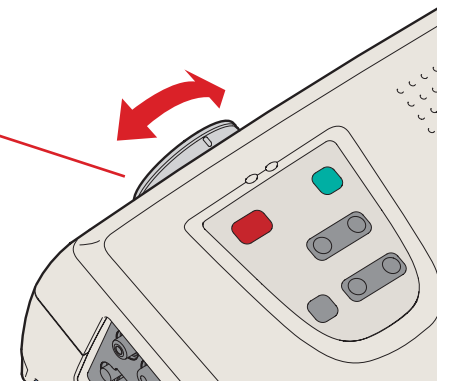

- 4 If a computer is connected, do this after projection starts. Press the **Menu** button on the remote control, and use the **Enter** button to choose the Video menu. Go to the Input Signal option and change it to RGB.

- 5 If your image looks like  or , first make sure the projector is facing the screen squarely. Then, if necessary, press the **Keystone** button on the projector's control panel until the image is corrected. (You also can do this using the projector's Setting menu. See your *User's Guide* on the CD-ROM.)

- 6 To select the best color mode, press the **Color Mode** button on the remote control repeatedly to move through the options.

- 7 To boost the projection quality of films, first attach the EPSON cinema filter to the lens. Then, press the **Menu** button on the remote control, go to the video menu, and change the EPSON Cinema Filter setting to **ON**.



See your *User's Guide* on the CD-ROM for more information about image adjustments.

If you see a blank screen

If you see a blank screen or the **No Signal** or **Not Supported** message, check the following:

- Make sure the lens cover is off.
- Make sure your power cord and video cable are connected securely.
- If the  power light is orange, press the  **Power** button on either the remote control or the projector's control panel.
- Make sure the correct input source is selected. On the remote control, press the **Computer** or **S-Video/Video** button to change the image source. Or, press the **Source** button on the control panel.
- Try turning off your video equipment or computer and restarting it.
- If mute mode is active, press the **A/V Mute** button on the remote control to resume projection.
- If you connected a computer to the projector, it may be necessary to change the image signal to the projector. See "Troubleshooting" in your *User's Guide* on the CD-ROM.

