

PowerLite S1 / S1+

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable (2-prong cable)	2071477
PL S1: Lamp (V13H010L25)	H010L2H
PL S1+: Lamp (V13H010L29)	H010L29
Computer VGA Cable	2110978
Remote Control	1261258
- Presentation Remote Control	1262228
- Presentation Remote Control Receiver	1262220
Filter Set (pkg. of 5 Filters)	V13H134A03
Lens Cap with String	1243744
Projector Software CD (includes User's Guide)	CPD-16302
Navy Blue Soft Carrying Case with handle and shoulder strap (outside compartment for cables)	1261259

Order user replaceable parts from an [Epson authorized parts distributor](http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp).
<http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp>

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts
by using the "Help me find..." tool in the right column of the
[Epson Support](http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp) home page.
<http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp>