


PowerLite® 1825 Quick Setup


Before using the projector, make sure you read the safety instructions in the *User's Guide* on your projector CD.

1 Turn On Your Equipment

- 1 Connect the power cord to the back of the projector and plug the other end into an electrical outlet.

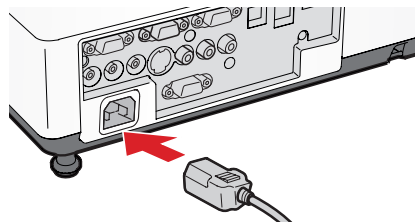


- 2 Open the **A/V Mute** slide (lens cover). Make sure the slide is opened completely.

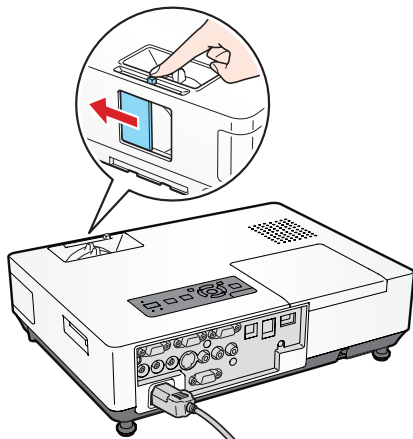

- 3 Remove the battery cover on the remote control. Locate the two AAA batteries that came with the projector and insert them. Then replace the battery cover.

- 4 To turn the projector on, press the **Power** button on the projector or the remote control. The projector beeps once, and the projector's **Power** light flashes green and then stays on.

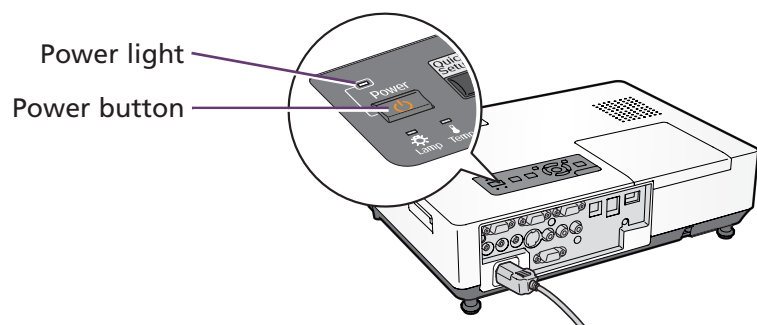


To shut down the projector:


1. Press the **Power** button twice.
2. When the orange light stops flashing and the projector beeps, you can unplug the projector.

2 Adjust the Image

- 1 To raise the image, press the foot release button for the front adjustable foot and lift the front. Release the button to lock the foot in position.

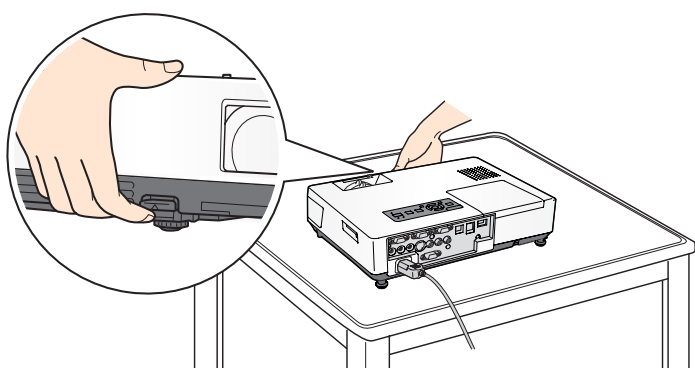

- 2 Turn the focus ring to sharpen the image.
Turn the zoom ring to reduce or enlarge the image.

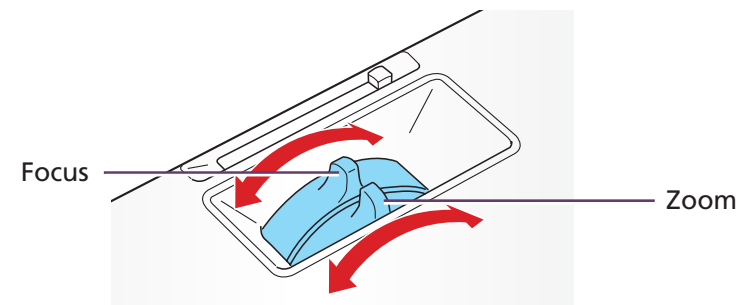


- 3 If your image looks like , , , or , press the **Quick Setup** button on the projector and follow the on-screen instructions.

3 Choose a Presentation Method

How do you want to get images to the projector?

- To connect to a notebook, see "If connecting to a notebook" below.
- To project over a wireless network, see "If projecting wirelessly" on the back of this sheet.

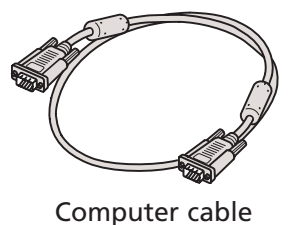


You must have installed the projector's EasyMP® software and configured your projector and computer before you can project wirelessly. See your *User's Guide* for instructions.

- To give a presentation stored on a CompactFlash® memory card, flash drive, digital camera, or other USB storage device, see Chapter 5 in your *User's Guide*.
- To connect to your notebook using the included USB cable, see your *User's Guide*.

If connecting to a notebook...

- 1 Turn on the projector and adjust the image as described in sections 1 and 2 on this sheet.
- 2 Locate the computer cable that came with the projector. Connect one end to the projector's blue **Computer1** port.

Connect the other end to your notebook's video-out port or monitor port.

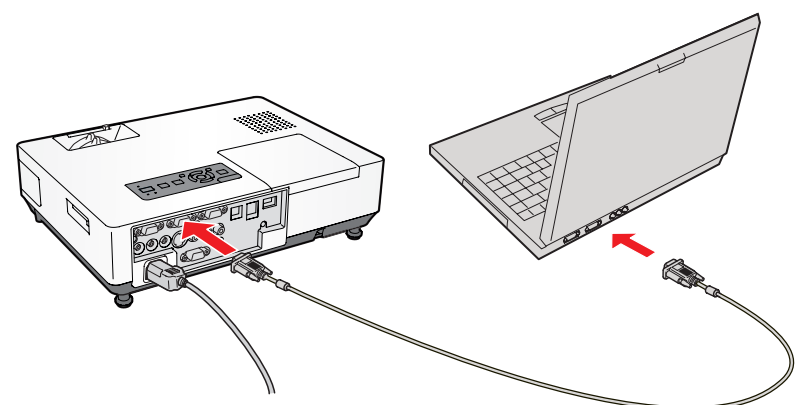

- 3 Press the **Source Search** button on the projector or the **Search** button on the remote control until your computer image is displayed.

NOTE: If your notebook has a DVI connector, you need to use an optional DVI-to-VGA adapter with the included computer cable (see your computer's documentation).

Turn over



411303300

4 If you see a blank screen or you don't see the image you are trying to project from your computer, make sure the **Power** light on the projector is green and not flashing, and the **A/V Mute** slide (lens cover) is open.

If you're using a PC notebook, hold down the **Fn** button on the keyboard and press the function key that lets you display on an external monitor. It may have an icon such as , or it may be labeled **CRT/LCD**. (Allow a few seconds for the projector to sync up.)

5 If your projector and notebook don't display the same image, do the following:

Windows®: Try using the **CRT/LCD** or  function key, as described above. If this doesn't work, double-click **Display** in the Windows Control Panel. In Windows Vista®, right-click on the desktop and select **Personalize**, then select **Display Settings**. Make sure both the LCD screen and monitor port are enabled. See your Windows online help for details.

Macintosh®: From the **Apple®** menu, select **System Preferences**, then click **Displays**. Select the **VGA Display** or **Color LCD** dialog box, click the **Arrangement** (or **Arrange**) tab, and make sure **Mirror Displays** is checked.

If projecting wirelessly...

Follow the steps in this section to project over an 802.11g, 802.11b, or 802.11a wireless network from a computer running Windows 2000, XP, or Windows Vista, or Macintosh OS X 10.3 or later.

NOTE: You must have already installed the projector's EasyMP (EMP NS Connection) software and configured your projector and computer. See the *User's Guide* for instructions. Also, your computer must have a wireless card or built-in wireless connection.


You can also project wirelessly without installing software by using the Network Projector function with Windows Vista.

- 1

Install the wireless module. If necessary, secure it using the screw included with your projector.
- 2

Turn on the projector and adjust the image as described in sections 1 and 2 on the front of this sheet.
- 3

Select EasyMP as the source by pressing the **EasyMP** button on the remote control.

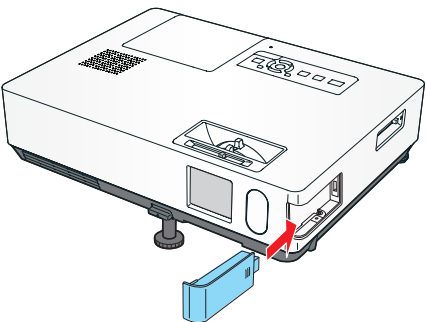


The projector displays a screen like this:



4 **Windows:** From the Start menu, select **Programs** or **All Programs**. Then choose **EPSON Projector** and select **EMP NS Connection**.


Macintosh: Double-click the **EMP NS Connection** icon in your Applications folder.

You see this screen:

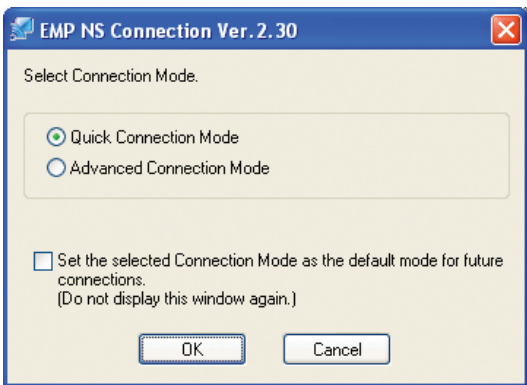


5 Select **Quick Connection Mode** and click **OK**.

If you see this screen, click **Yes**.

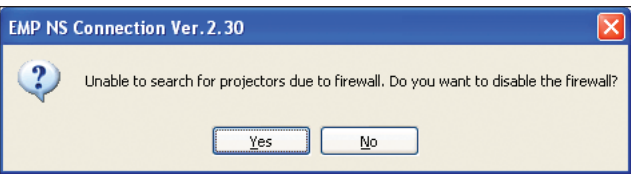

You see this screen:

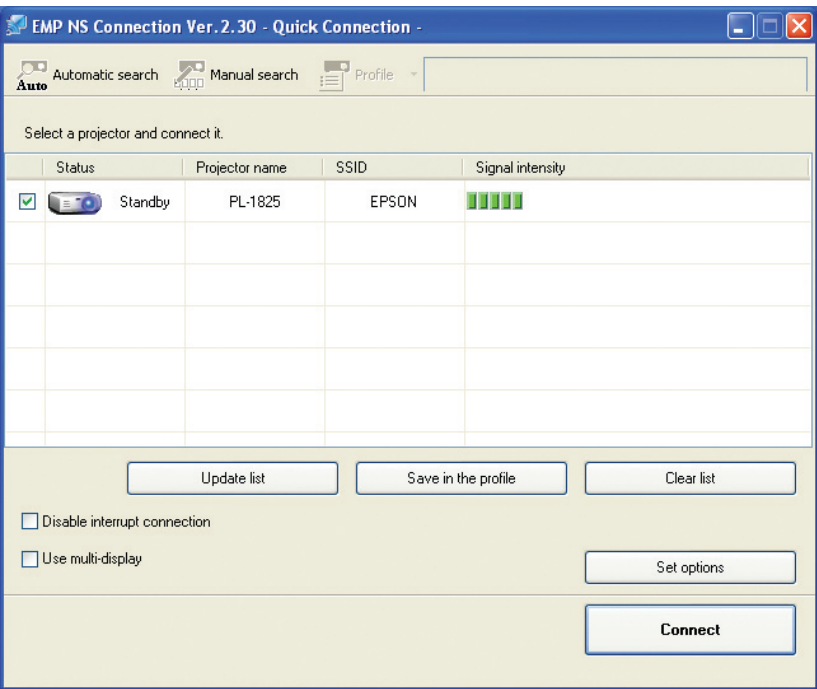


6 Once the name of your projector appears, select it and click **Connect**.

If a projector is in use and is "locked" to prevent interruption, you won't be able to select it.

7 If you see a message asking for a keyword, enter the four digits that appear on the EasyMP Network Screen and click **OK**.

 You see the image on your monitor transmitted to the projector, and a floating control bar appears on the computer screen:



8 When you're done with your presentation, click **Disconnect** on the control bar.

Where To Get Help

For more information about using the projector, install the *User's Guide* from your projector CD.

Telephone Support Services

To use the Epson PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the Epson PrivateLine Support card that came with your projector. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of these numbers:

U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday
Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Internet Support

Visit Epson's support website at epson.com/support and select your product for solutions to common problems. You can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Visit <http://www.presentersonline.com> to access tips, templates, and training for developing successful presentations.

Register today to get product updates, special promotions, and customer-only offers. You can use the registration card or CD included with your projector, or register online at www.epson.com/webreg.

EPSON®
EXCEED YOUR VISION



Epson and EasyMP are registered trademarks and Epson Exceed Your Vision is a trademark of Seiko Epson Corporation. PowerLite and PrivateLine are registered trademarks of Epson America, Inc.
General Notice: Other product names are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

The contents of this manual are subject to change without notice.

© 2007 Epson America, Inc. 12/07 CPD-24799

Printed in XXXXXX