



Cleaning

WELCOME GUIDE

HomeVac Duo



For FAQs and more information, please visit:

www.eufylife.com


IMPORTANT SAFETY INSTRUCTIONS

WARNING – To reduce the risk of fire, electric shock, or injury, read all instructions before using this device:

- This device is intended for household use only.
- Do not leave this device unattended when it is plugged in. Unplug it from the outlet when you are not using it and before servicing.
- Always turn off this device before connecting or disconnecting the handheld vacuum cleaner.
- Do not use outdoors or on wet surfaces.
- Do not use this device as a toy. Pay extra attention when used by or near children.
- Use only as described in this manual. Use only the manufacturer's recommended attachments.
- If the device is not working as it should, or has been dropped, damaged, or dropped into water, contact our customer service for advice and help.
- Do not unplug the adapter by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle the plug or device with wet hands.
- Do not put any object into openings (besides normal vacuum operation). Do not use with any opening blocked; keep free of dust, lint, hair, and anything else that may reduce airflow.
- Keep loose clothing, hair, and all parts of the body (such as fingers) away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ash.
- Do not use without dust collector or filter in-place.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the device. Cleaning and maintenance of the device shall not be performed by children without supervision.
- The device is only to be used with the power supply unit provided.
- For the purposes of recharging the battery, only use the detachable charging base provided with this device.
- The external flexible cable or cord of the power supply unit cannot be replaced. If the cord is damaged, the power supply unit needs to be disposed of.
- The battery must be removed from the device before the device is disposed of.
- The device must be disconnected from the mains supply when removing the battery.
- A used battery should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
- To remove the battery from the device, first use a screwdriver to disassemble the main body enclosure. Unscrew the battery compartment screws and take the battery out. Cut one wire at a time with wire cutters to disconnect the wiring.


SAVE THESE INSTRUCTIONS

At a Glance

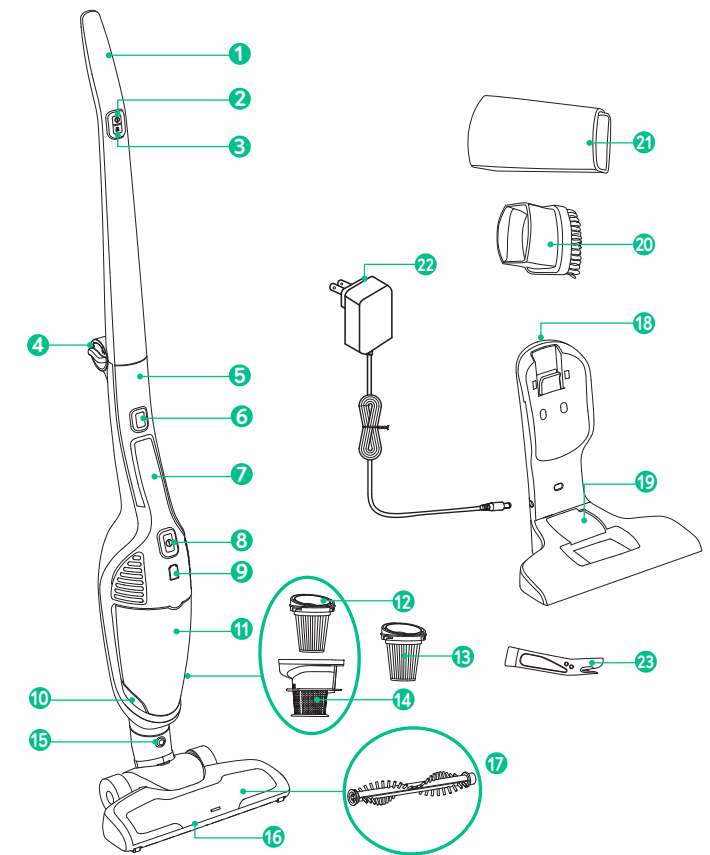


- | | |
|-----------------------------------|----------------------------------|
| 1 Upright handle | 13 Spare high-performance filter |
| 2 Upright unit On / Off button | 14 Pre-filter |
| 3 Power saving button | 15 Floor brush release button |
| 4 Folding handle release | 16 Headlights |
| 5 Upright vacuum cleaner unit | 17 Rolling brush |
| 6 Handheld release button | 18 Charging base |
| 7 Handheld vacuum cleaner unit | 19 Attachments storage space |
| 8 Handheld unit On / Off button | 20 Dusting brush attachment |
| 9 Power indicator light | 21 Crevice nozzle attachment |
| 10 Dust collector release buttons | 22 Charging adapter |
| 11 Dust collector | 23 Cleaning tool |
| 12 High-performance filter | |

Assembling Your HomeVac Duo

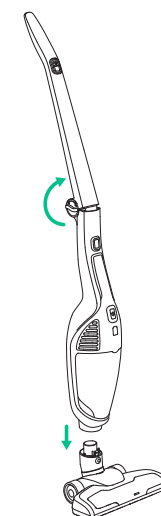

Using Your HomeVac Duo

Upright mode

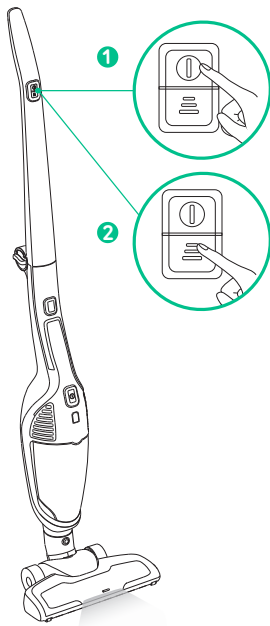

1


Turn it on.

2

Adjust suction power.

- Press Power Saving Button to toggle between Normal and Power Saving Mode.

Handheld mode

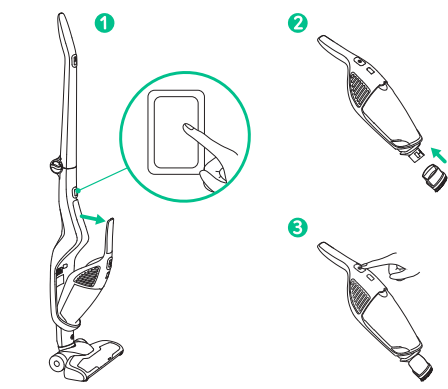

1

Press handheld mode release button and pull out handheld vacuum cleaner.

2


Select and fit attachment to handheld vacuum cleaner unit.

3

Turn on handheld vacuum cleaner.

If suction power is low, empty the dust collector, clean the filter and remove any obstructions from the nozzle.

Charging Your HomeVac Duo

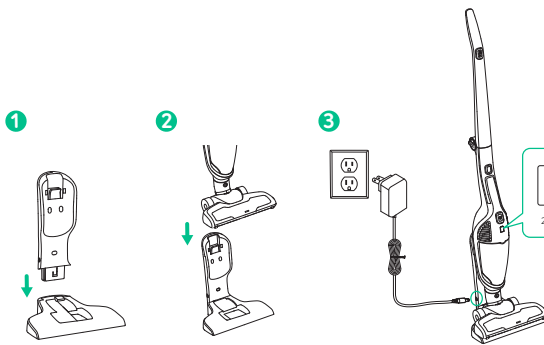

1

2

3

25%

50%

75%


100%

The power indicator will flash when the battery is low on power.

Cleaning and Maintenance

Always unplug the vacuum cleaner from the main power supply before cleaning or maintenance.

Clean the dust collector and the high-performance filter

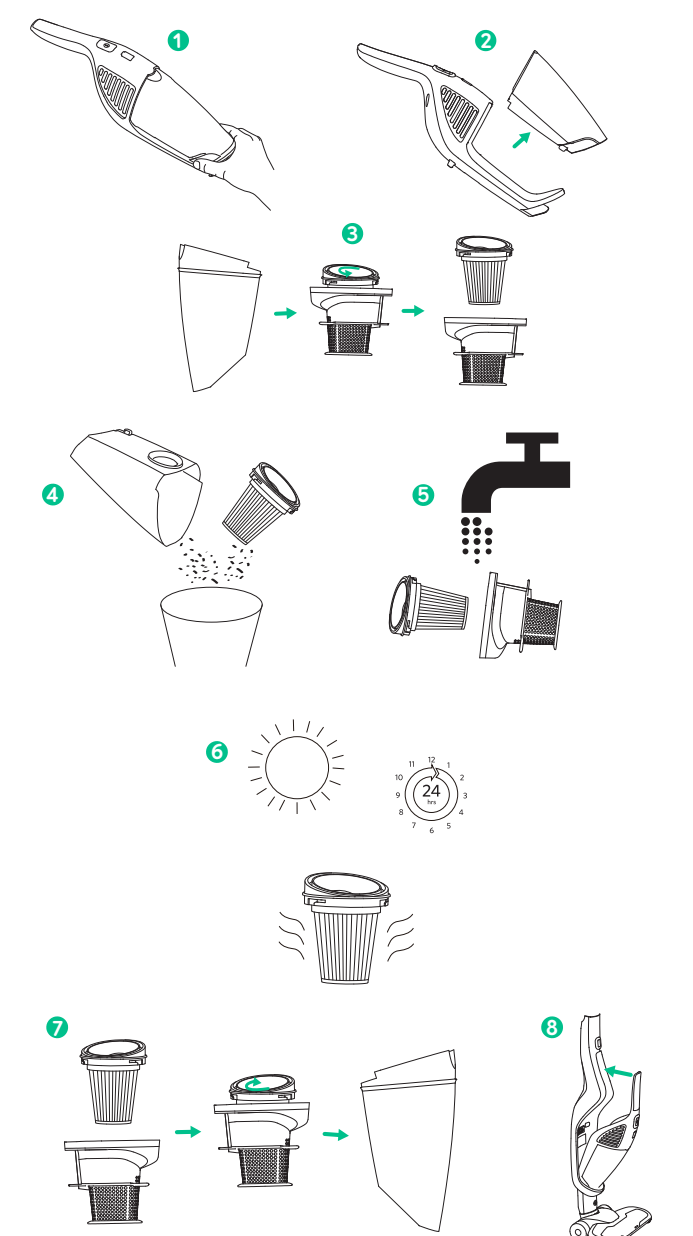

1

2

3

4

5


6

- 4
- Empty dust from the dust collector and the high-performance filter weekly. Tap to remove excess dust.
- 5
- Rinse the filter assembly with water if it becomes too dirty.

NOTE: Washing the high-performance filter with water will degrade its performance. After washing the filter three times, it is recommended to replace with a new one for best cleaning performance.
- 6
- Air-dry the high-performance filter thoroughly before reusing. A wet filter may affect the cleaning power or even damage HomeVac Duo.
- 7
- Replace the filter assembly.
- 8
- Insert the dust collector into the main body.

Excess dust inside the dust collector will clump together if moisture is present and reduce suction power. Regularly clean the dust collector to ensure strong suction power and to prevent unpleasant odors from developing.

Clean the rolling brush

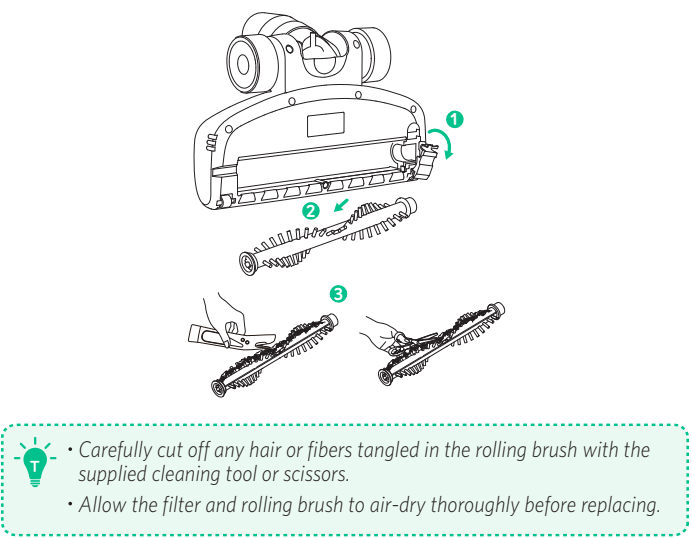

1

2

3

1

Carefully cut off any hair or fibers tangled in the rolling brush with the supplied cleaning tool or scissors.

2

Allow the filter and rolling brush to air-dry thoroughly before replacing.

Specifications

Model	T2400
Voltage	DC 21.6 V
Wattage	125 W
Base size	273 × 162 mm / 10.7 × 6.4 in
Height (extended)	1160 mm / 45.7 in
Height (lowered)	690 mm / 27 in

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

Customer Service

- 15-month limited warranty

Lifetime technical support

support@eufylife.com

1-800-988-7973 | Mon-Fri 9:00-5:00 PST (US)