



For FAQs and more information, please visit:  
**[www.eufylife.com](http://www.eufylife.com)**

## **OWNER'S MANUAL** HomeVac H30

T2522 5100500xxxx V01



# Table of Contents

|    |                                      |
|----|--------------------------------------|
| 01 | <b>IMPORTANT SAFETY INSTRUCTIONS</b> |
| 07 | <b>WHAT'S IN THE BOX</b>             |
| 08 | <b>OVERVIEW</b>                      |
| 09 | <b>RECHARGING</b>                    |
|    | Lights During Charging               |
|    | Lights During Vacuuming              |
|    | Warning Lights                       |
|    | Light On The Charging Base           |
| 14 | <b>VACUUMING</b>                     |
|    | Use With Additional Tools            |
|    | After Use                            |
| 18 | <b>STORAGE</b>                       |
| 20 | <b>CLEANING &amp; MAINTENANCE</b>    |
|    | Clean The Dust Cup And Filter        |
|    | Clean The Mini-Motorized Pet Brush   |
| 23 | <b>SPECIFICATIONS</b>                |
| 23 | <b>TROUBLESHOOTING</b>               |
| 24 | <b>CUSTOMER SERVICE</b>              |

Thank you for purchasing this appliance. Carefully read all instructions before using this product, and keep this manual for future reference.

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM CLEANER



### **WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:**

- Fully assemble before operating.
- Intended for household use only.
- Do not use outdoors or on wet surfaces.
- Do not leave this appliance unattended when it is plugged in. Unplug it from the outlet when you are not using it and before servicing.
- Not intended to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer recommended attachments.
- For the purposes of recharging the battery, only use the detachable power supply unit provided with this device.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, or has been dropped, damaged, or submerged in water, contact our customer service for advice.
- Do not handle the plug or appliance with wet hands.
- Do not unplug the adapter by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not put any objects into openings or vents. Do not use if any opening is blocked. Keep free of dust, lint, hair, and anything else

that may reduce airflow.

- Keep hair, loose clothing, fingers, and other body parts away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Always turn off this appliance before connecting or disconnecting the mini-motorized pet brush.
- To prevent unintentional starting, ensure the appliance is switched off before installing the battery pack, picking up or carrying the appliance. Do not carry the appliance with your finger on the power switch, doing so may cause accidental powering on.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without the dust collector and/or filters in place.
- Store this appliance indoors, in a cool and dry area.
- Make sure that the outlet voltage corresponds to the voltage rating on the charger's label.
- Recharge only with the charger (US: S013-1A190068HU; UK: S013-1A190068HK; AU: S013-1A190068HA; EU: S013-1A190068HE) specified by the manufacturer. A charger that is suitable for one type of battery pack may cause a risk of fire when used with another battery pack.
- Do not attempt to repair or disassemble this appliance. There are no user-serviceable parts inside. Maintenance and repair must be performed by a qualified repairman and only identical replacement parts can be used. This will ensure the safety of the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been

given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be done by children without supervision.

- This appliance includes a rechargeable lithium-ion battery pack. Do not expose the battery pack or appliance to fire or excessive temperature (above 130°C), as it may catch fire and/or explode.
- Use this appliance only with specifically designated battery packs. Use of any damaged or modified battery packs may create a risk of injury and fire.
- Charging, using, and storing of the appliance should be within the ambient temperature range of 0-40°C.
- Follow all the charging instructions and do not charge the battery pack out of the temperature range specified in the instructions, otherwise, it may damage the battery and increase the risk of fire.
- Do not attempt to disassemble the battery pack.
- The battery must be removed from the device before the device is disposed of.
- This appliance must be disconnected from the mains supply when removing the battery.
- The used battery should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
- Under abusive conditions, liquid may leak from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid comes in contact with the eyes, seek immediate medical help. Leaking liquid from the battery may cause irritation or burns.
- Remove the battery pack from the appliance before making any adjustments, changing accessories, or storing this appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.

### **SAVE THESE INSTRUCTIONS**

## **Notice**



### **This symbol on the device or its packaging indicates:**

Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.

## **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from

that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

The following importer is the responsible party  
(for FCC matters only).

Company Name: POWER MOBILE LIFE, LLC

Address: 400 108th Ave NE Ste 400, Bellevue, WA 98004-5541

Telephone: +1 (800) 988 7973

## ISED Compliance Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## EU Declaration of Conformity

Hereby, Anker Innovations Limited declares that the product type T2522 is in compliance with Directives 2014/35/EU & 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.eufylife.com/>

## GB Declaration of Conformity

Hereby, Anker Innovations Limited declares that the product type T2522 is in compliance with Electrical Equipment (Safety) Regulations 2016 & Electromagnetic Compatibility Regulations 2016 & The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 & The Ecodesign for Energy-Related Products Regulations 2010.

The full text of the GB declaration of conformity is available at the following internet address:

<https://www.eufylife.com/>



Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong

Anker Innovations Deutschland GmbH

Georg-Muche-Strasse 3, 80807 Munich, Germany

  
# WHAT'S IN THE BOX

|                                                                                                                                                  | H30 Venture | H30 Mate | H30 Infinity |
|--------------------------------------------------------------------------------------------------------------------------------------------------|-------------|----------|--------------|
| <br>Main body                                                   | ✓           | ✓        | ✓            |
| <br>Lithium-ion battery                                         | ✓           | ✓        | ✓            |
| <br>AC adapter                                                  | ✓           | ✓        | ✓            |
| <br>Charging base                                               | ✓           | ✓        | ✓            |
| <br>2-in-1 crevice tool                                         | ✓           | ✓        | ✓            |
| <br>Multi-surface tool                                          | ✓           |          |              |
| <br>Mini-motorized pet brush<br>* The brush head is rotatable. |             | ✓        | ✓            |
| <br>Hard floor cleaning tool<br>& pipe tools                  |             |          | ✓            |
| <br>Mopping module (x1)<br>& disposable mopping cloths (x5)   |             |          | ✓            |
| <br>Wall plugs & screws (x2)                                  | ✓           | ✓        | ✓            |



The accessories vary by model. The model (H30 Venture, H30 Mate, or H30 Infinity) can be found on the package. Refer to the list above to check the accessories inside your package. You can buy additional accessories at [www.eufylife.com](http://www.eufylife.com).

# OVERVIEW


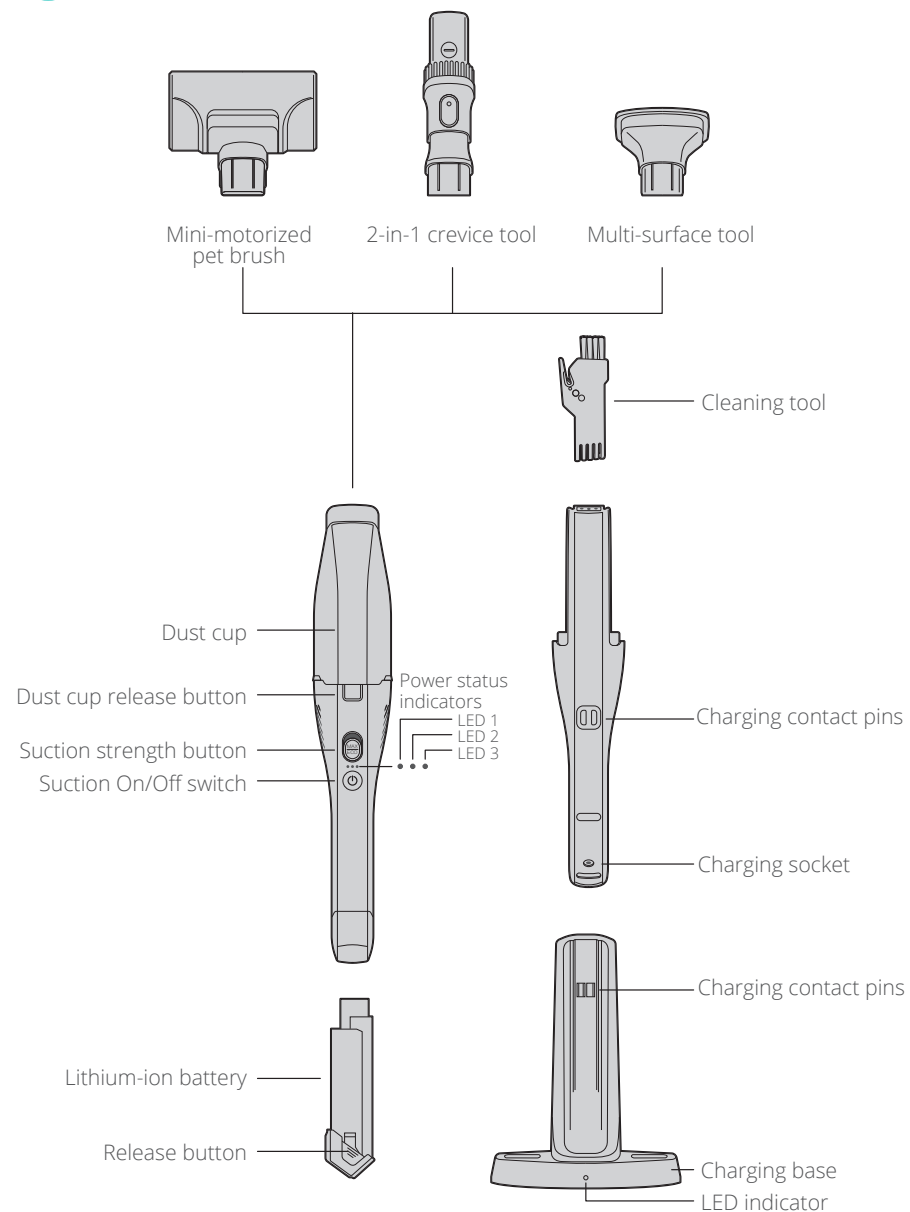


# RECHARGING

The vacuum cleaner is powered by a lithium-ion battery. Before first use, charge the battery for more than 4 hours.




- The vacuum cleaner cannot work while charging.
- The vacuum cleaner cannot be charged when the ambient temperature is above 40°C.

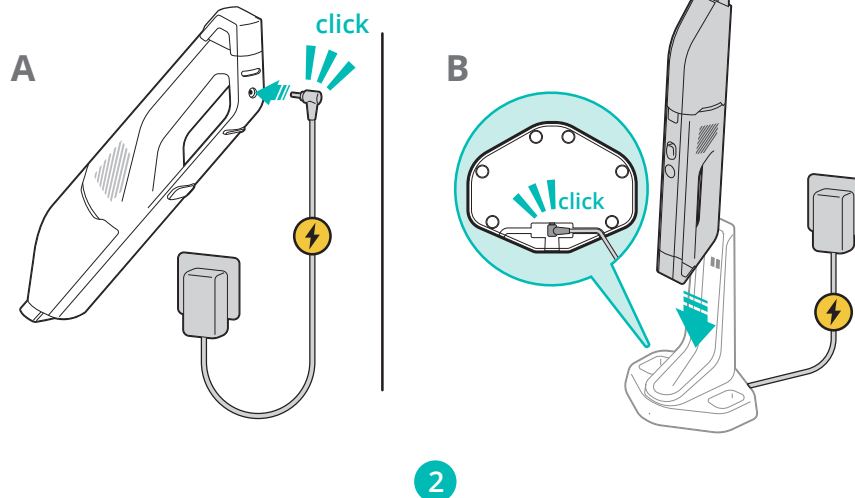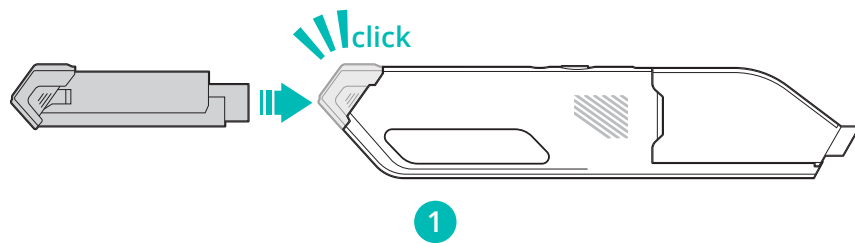


Select one charging method (Fig.2A or Fig.2B) to recharge the battery.


## Lights during charging

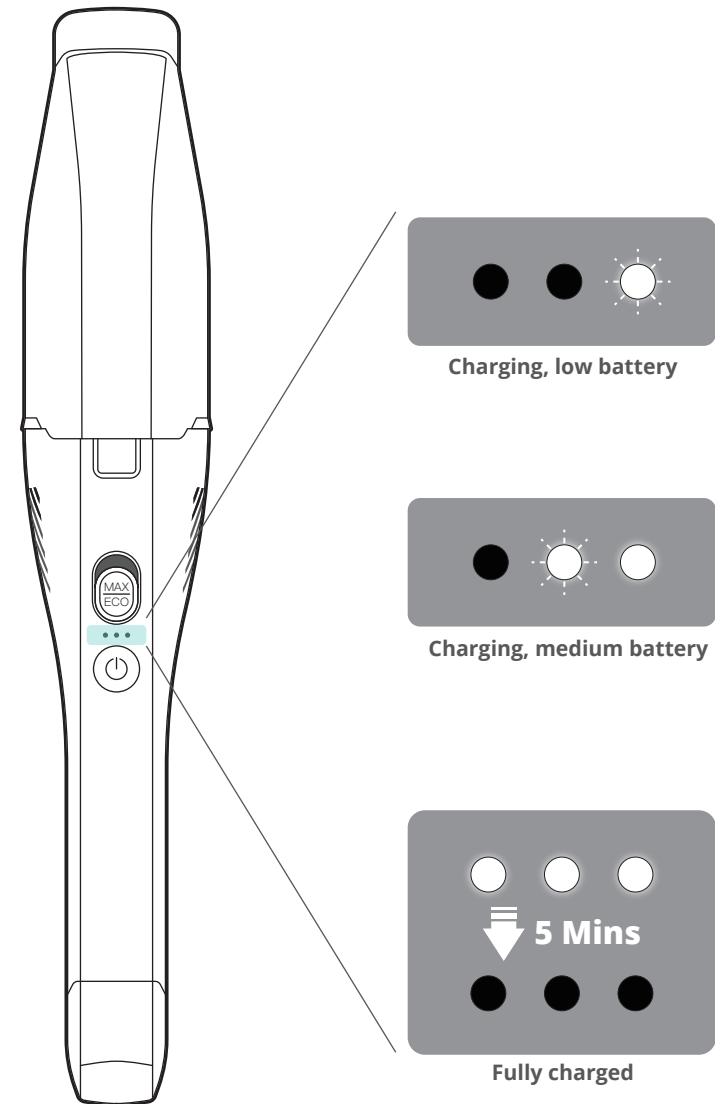


## Lights during vacuuming

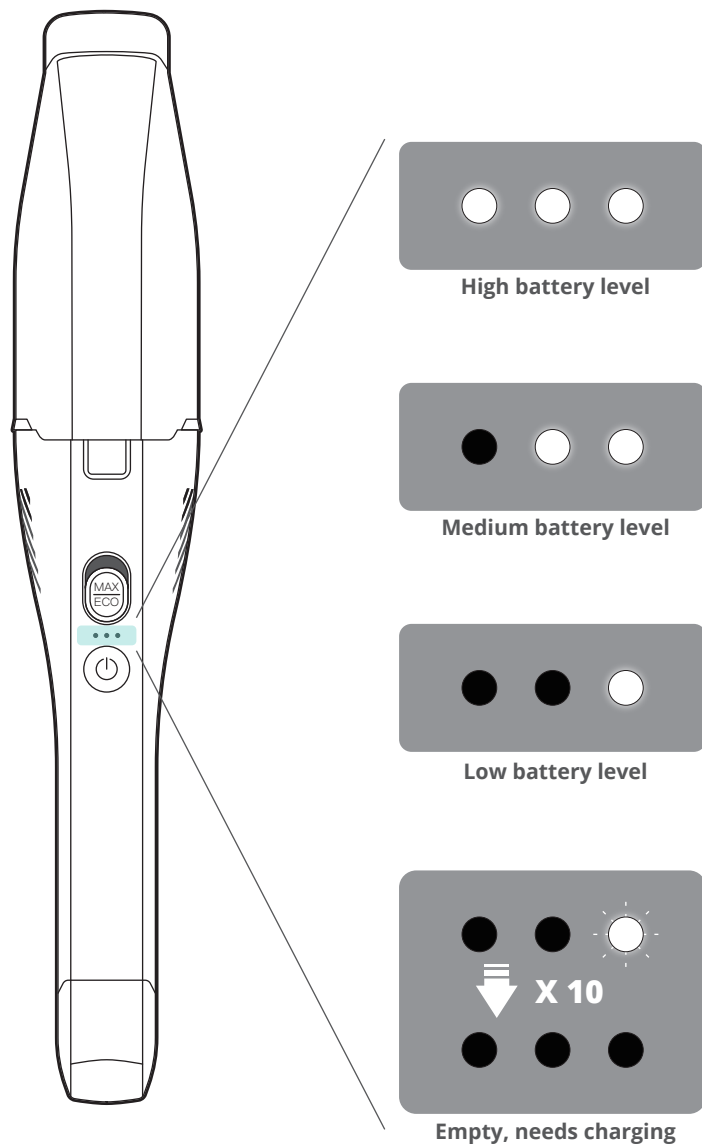

## Warning lights

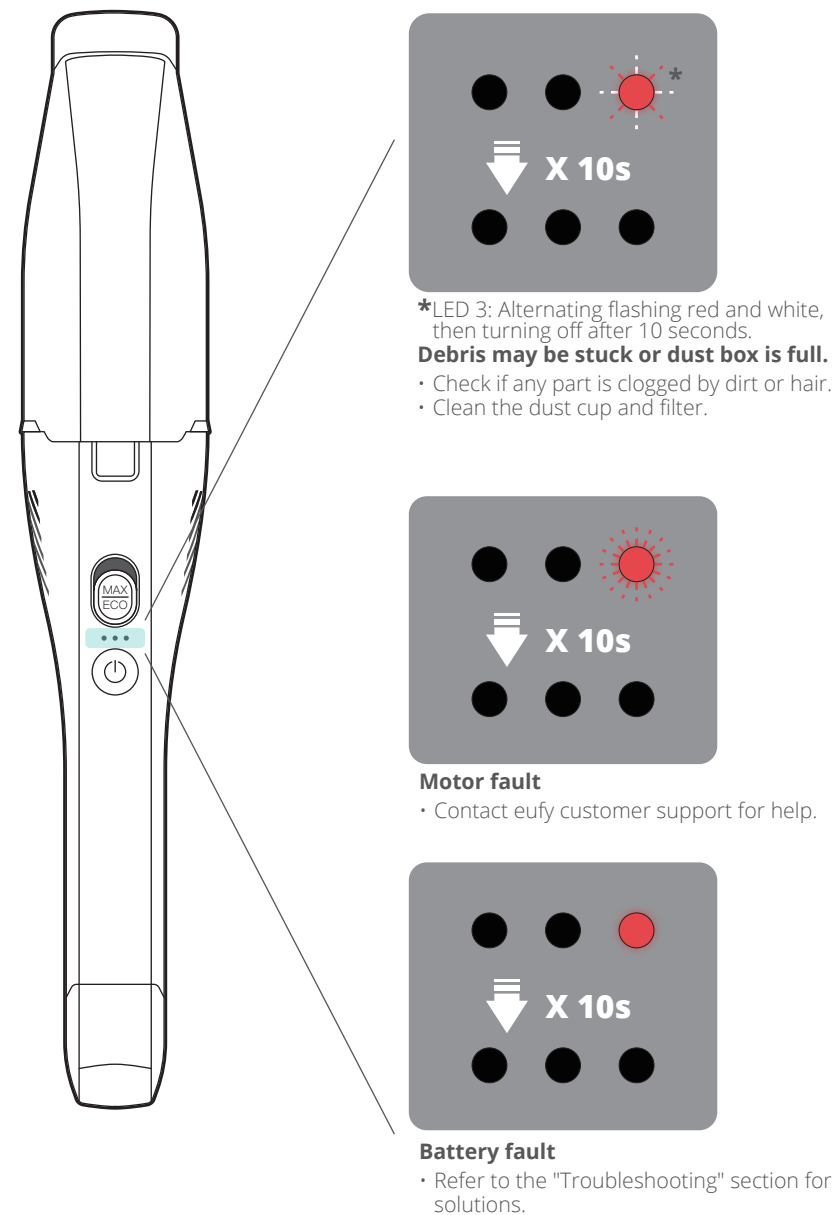

## Light on the charging base

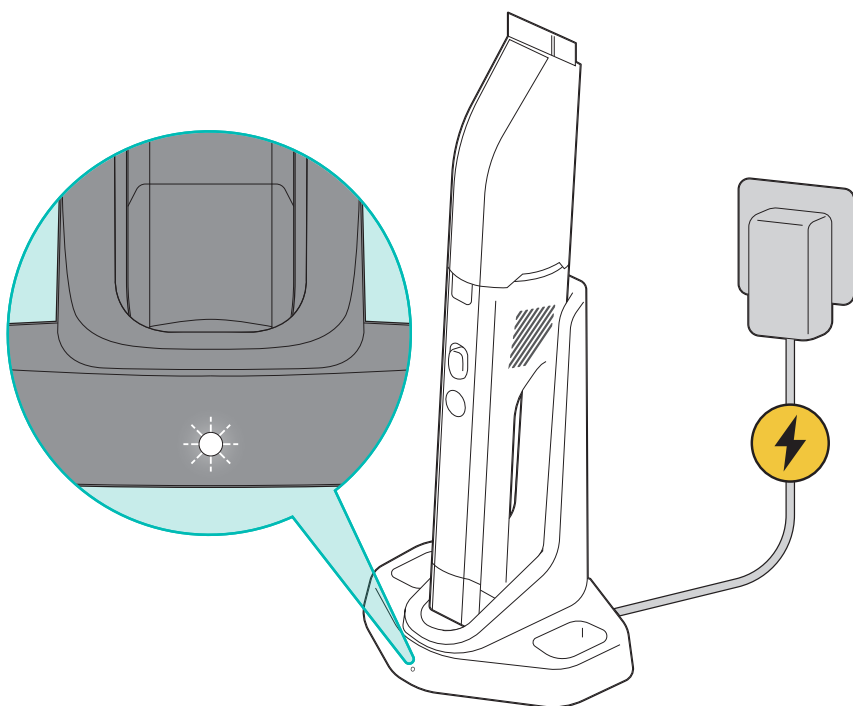

**Solid white:** The charging base is working normally.


# VACUUMING

## Before use, make sure that


- the battery is fully charged.
- the dust cup and filter are cleaned, completely dried, and fixed in place.



- Attach your desired cleaning accessory to the main body as illustrated.
- Do not use the vacuum cleaner to clean up any liquid.

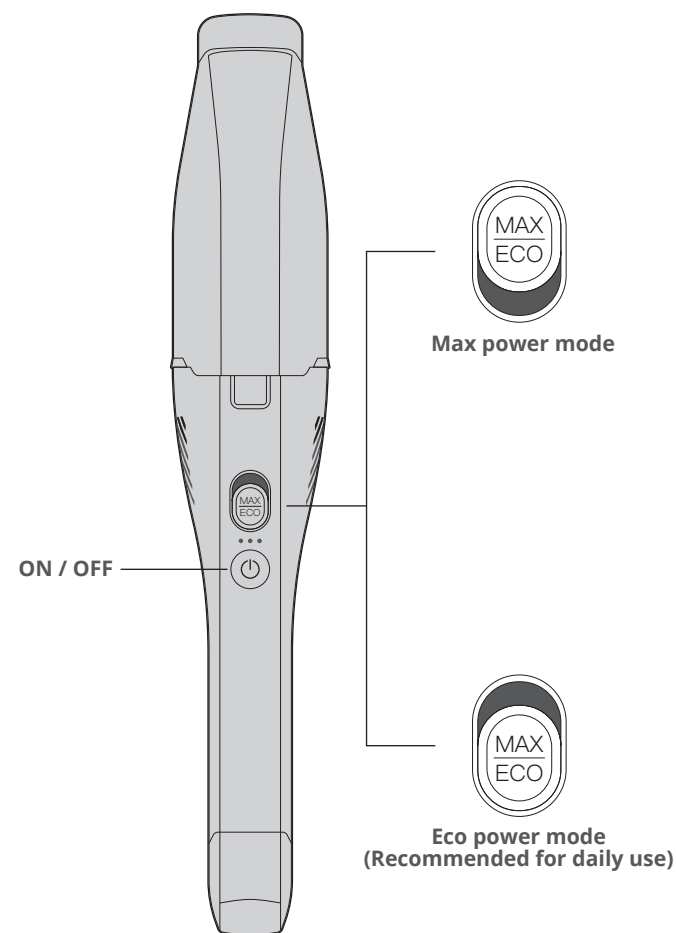


## Use with additional tools

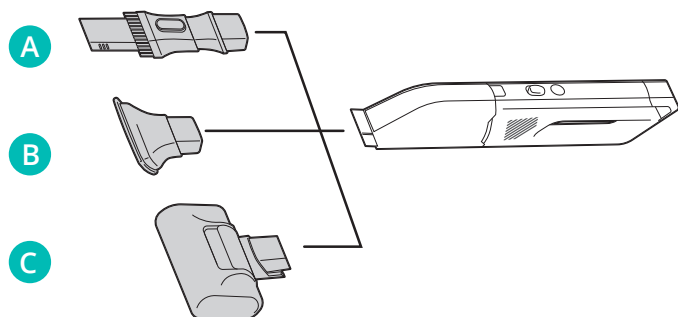

### 2-in-1 crevice tool:


Ideal for precise cleaning around tricky edges and in hard-to-reach narrow spaces. Quickly switch between cleaning and dusting tasks around your home or car.

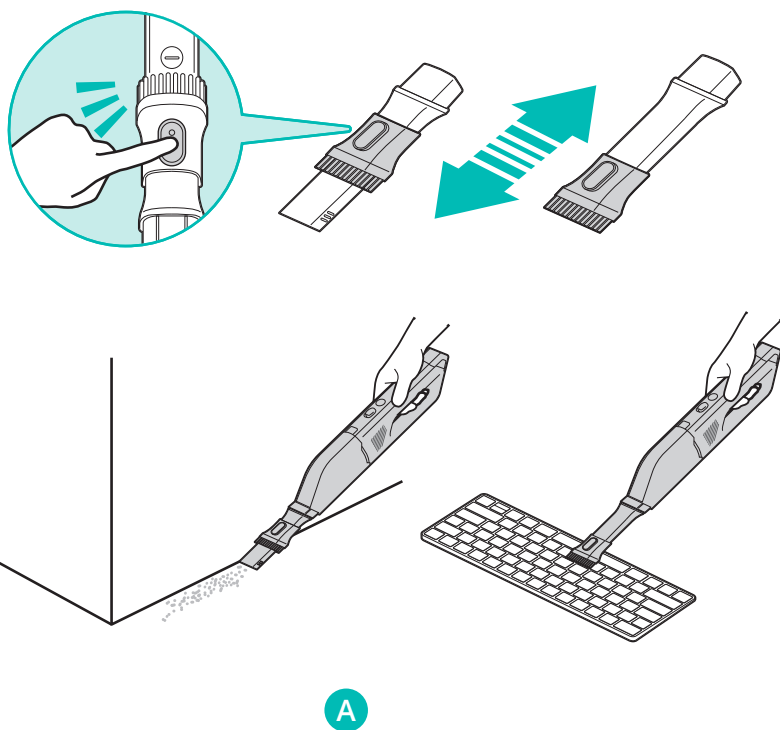

A

### Multi-surface tool:


Ideal for removing dust and hair from sofa and carpets

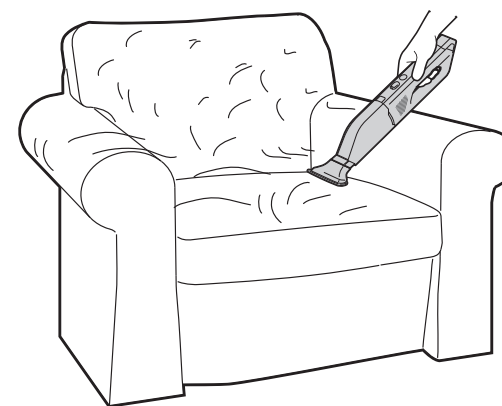

B


### Mini-motorized pet brush:

Ideal for removing pet hair and other allergens from mattresses and upholstery.

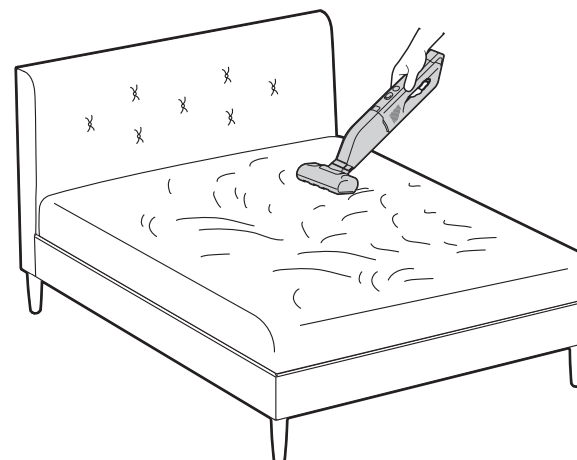


C




## After use

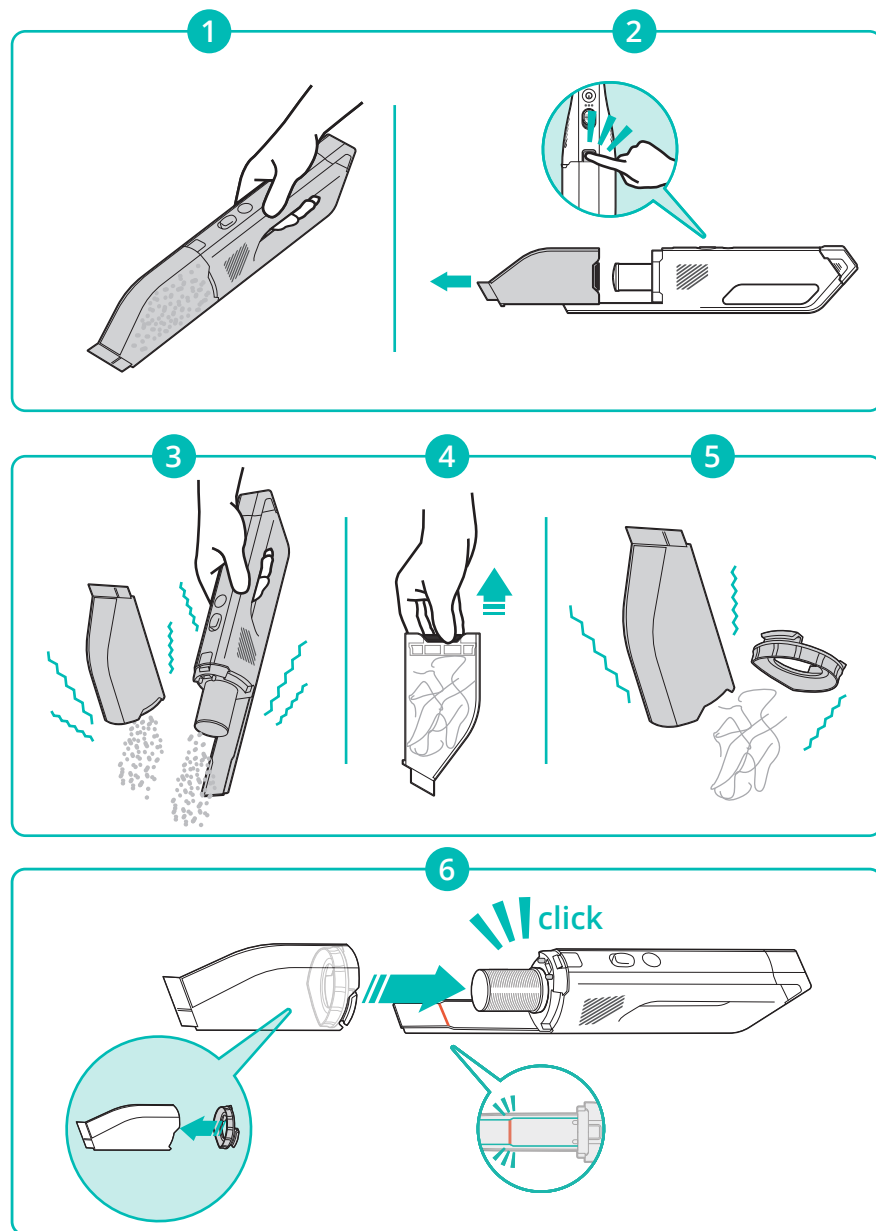

## STORAGE

When not in use, place the tools on a flat surface (Fig.A) or mount the tools on a wall (Fig.B).

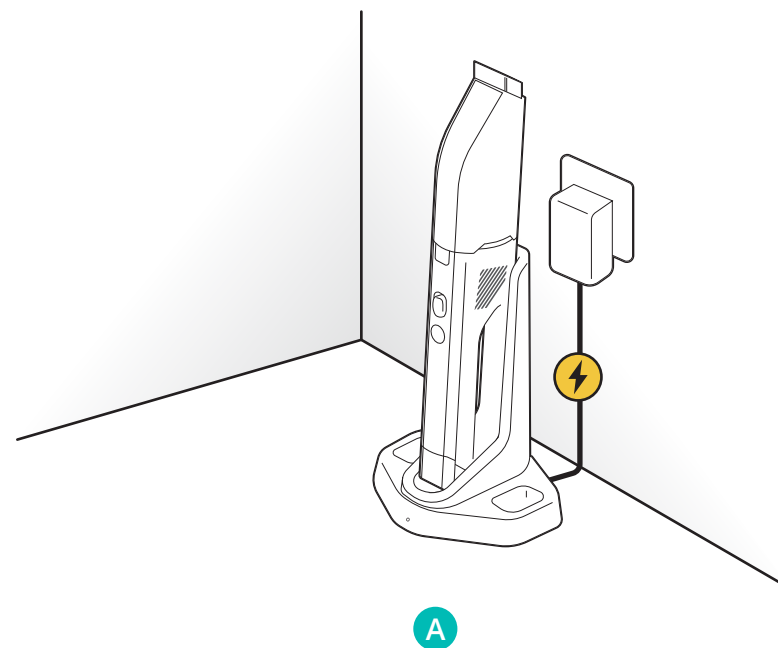

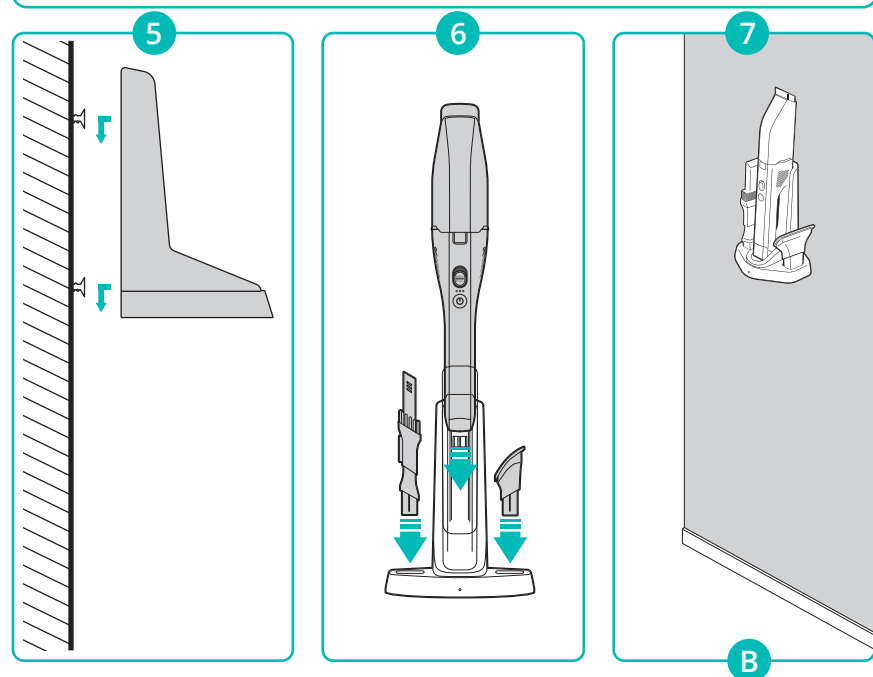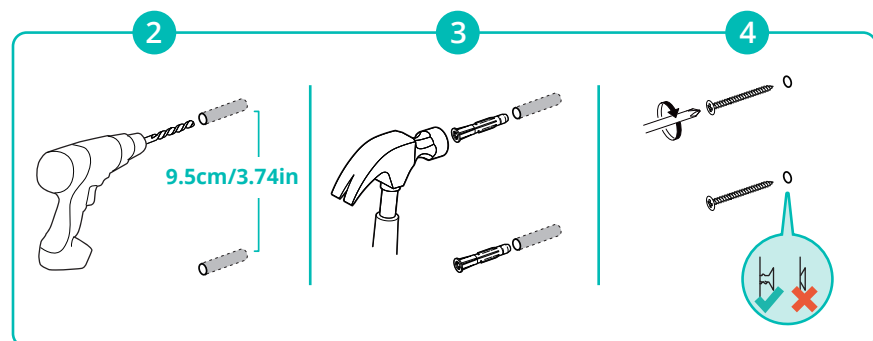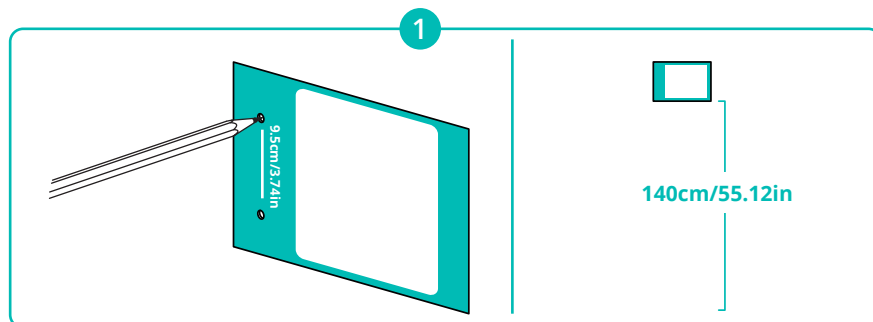

# CLEANING & MAINTENANCE





For optimal performance, follow the instructions below to clean and maintain HomeVac regularly. The cleaning/replacement frequency will depend on your HomeVac usage habits.

| HomeVac Part | Cleaning Frequency                                    | Replacement Frequency                               |
|--------------|-------------------------------------------------------|-----------------------------------------------------|
| Dust Cup     | After each use                                        | —                                                   |
| Filter       | Once every week<br>(Twice a week if it is very dirty) | Every 6 months or after every 50 rounds of cleaning |




- Make sure the tools are completely dry before using.
- Do not use detergents to clean the tools.
- Do not put any part of the tools in a dishwasher.

## Clean the dust cup and filter

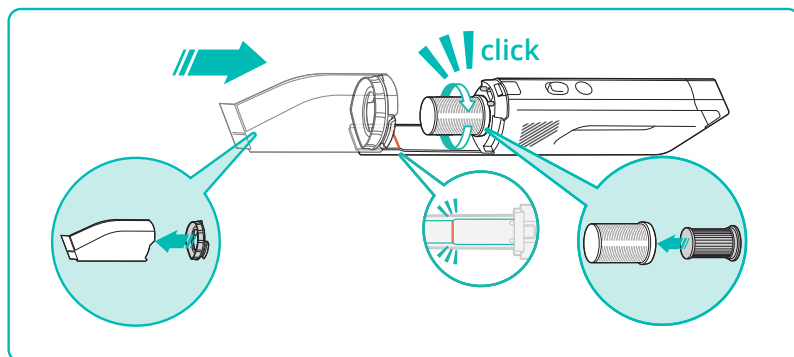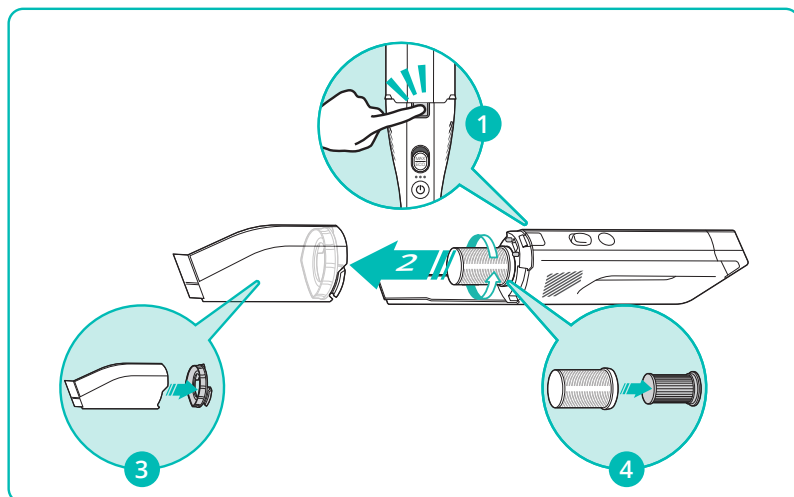

## Clean the mini-motorized pet brush

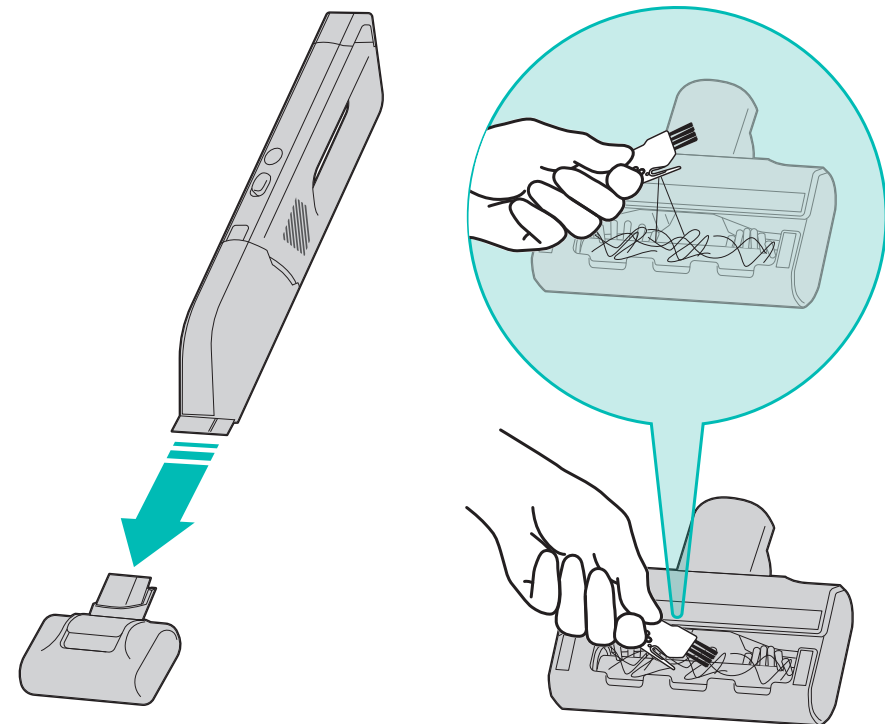

# SPECIFICATIONS

|                                   |                                                          |
|-----------------------------------|----------------------------------------------------------|
| Model                             | T2522                                                    |
| Charging Input                    | 19V == 0.68A                                             |
| Rated Power                       | 200W                                                     |
| Running Time<br>(Per Full-Charge) | Eco power mode: 20 minutes<br>Max power mode: 10 minutes |
| Battery Cell Capacity             | 2,500mAh                                                 |
| Battery Rating                    | DC14.4V Li-ion 2,350mAh 33.8Wh                           |
| Charging Time                     | 4 hours                                                  |

# TROUBLESHOOTING

| Problems                                                                                                       | Causes                                                                                                                                                                                                                                               | Solutions                                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot pick up debris /<br>Weak suction power                                                                  | <ul style="list-style-type: none"> <li>The dust cup is full.</li> <li>The battery level is low.</li> <li>The filter is too dirty.</li> <li>The dust inlet in the hard floor cleaning tool is clogged by hair.</li> </ul>                             | <ul style="list-style-type: none"> <li>Empty the dust cup.</li> <li>Recharge the battery.</li> <li>Remove the dust cup and then clean the filter.</li> <li>Clean the hard floor cleaning tool.</li> </ul>                                                                                     |
| Debris overflowed from<br>the dust cup                                                                         | <ul style="list-style-type: none"> <li>The dust cup or filter is not installed properly.</li> <li>Too much debris</li> </ul>                                                                                                                         | <ul style="list-style-type: none"> <li>Reinstall the dust cup and filter.</li> <li>Empty the dust cup.</li> </ul>                                                                                                                                                                             |
| Device not working                                                                                             | <ul style="list-style-type: none"> <li>The suction inlet, dust cup, or the filter is stuck</li> <li>The accessories or the pipe tools are stuck.</li> <li>The battery level is low.</li> </ul>                                                       | <ul style="list-style-type: none"> <li>Clean the suction inlet, dust cup, or the filter.</li> <li>Clean the accessories and pipe tools.</li> <li>Recharge the battery.</li> </ul>                                                                                                             |
| Cannot recharge the<br>battery                                                                                 | <ul style="list-style-type: none"> <li>The vacuum cleaner is not on the charging base.</li> <li>The battery is not installed properly.</li> <li>The power adapter is not connected correctly.</li> <li>The charging pins are not working.</li> </ul> | <ul style="list-style-type: none"> <li>Place the vacuum cleaner on the charging base.</li> <li>Install the battery correctly.</li> <li>Connect the power adapter to a power source.</li> <li>Contact eufy customer support for help if the charging pins are not working normally.</li> </ul> |
| <b>*If your problem persists, record the LED indication status and contact eufy customer support for help.</b> |                                                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                               |

# CUSTOMER SERVICE

For FAQs and more information, please visit  
<https://support.eufylife.com/>

## Warranty:

- HomeVac unit: 24-month limited warranty
- Lithium-ion battery: 12-month limited warranty



support@eufylife.com

support.mea@anker.com (For Middle East and Africa Only)

service@myeufy.com.au (For AU Only)

ru.support@anker.io (For RU Only)



www.eufylife.com

<https://support.eufylife.com/s/phonecontactus>



(US) +1 (800) 988 7973 Mon-Fri 6:15 - 17:00 (PT); Sat-Sun 6:30-16:30 (PT)

(UK) +44 (0) 1604 936200 Mon-Sun 6:00 - 17:00; Sat-Sun 6:00-14:00

(DE) +49 (0) 69 9579 7960 Mo-Fr 8:00 - 16:00

(日本) 03 4455 7823 月-金 9:00 - 17:00

Scan the QR code for more support information.



@EufyOfficial



@EufyOfficial



@EufyOfficial



@EufyOfficial