


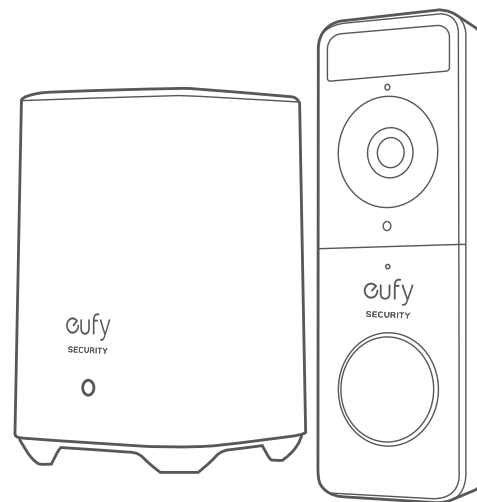

QUICK START GUIDE

eufy Security Video Doorbell 2E (Battery)



Anker Innovations Limited. All rights reserved. eufy Security and eufy Security Logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. All other trademarks are the property of their respective owners.

51005002842 V02

TABLE OF CONTENTS

What's Included	01	08	Finding a Mounting Spot
Product Overview	03	10	Mounting the Bracket
How the System Works	04	13	Mounting the Doorbell
Connecting the Homebase	05	14	Detaching the Doorbell
Setting up the System	06	15	Recharging the Doorbell
Charging Your Doorbell	07	16	Notice


WHAT'S INCLUDED

For Video Doorbell Installation



Video Doorbell 2E
(Battery)
Model: T8221

 
FCC ID: 2AOKB-T8220
IC: 23451-T8220



Mounting Bracket



 
Screw Hole
Positioning Card



15° Mounting
Wedge
(Optional)



 USB Charging
Cable



Screw Packs (Spare
screws and anchors are
included)



Doorbell
Detaching Pin




Quick Start
Guide

For HomeBase 2 Installation




Homebase 2
Model:T8010X

FCC ID:2AOKB-T8010X
IC: 23451-T8010X

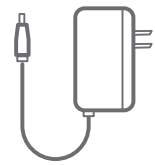

Power Adapter for
HomeBase 2

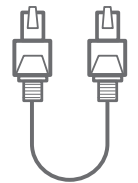


Ethernet Cable for
HomeBase 2

Note: Power plug may vary in different regions.

PRODUCT OVERVIEW


Video Doorbell (Battery Powered)

Front view:

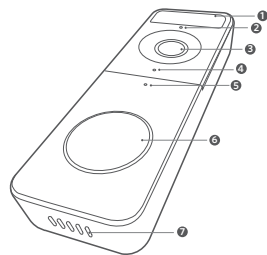

- 1. Motion Sensor
- 2. Microphone
- 3. Camera Lens
- 4. Ambient Light Sensor
- 5. Status LED
- 6. Doorbell Button
- 7. Speaker

Rear View:

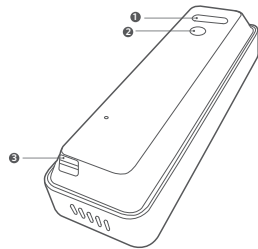

- 1. Micro USB Charging Port
- 2. SYNC/RESET button
- 3. Detaching Mechanism


Operation	How-to
Power on	Press and release the SYNC button.
Add doorbell to Wi-Fi Doorbell Chime	Press and hold the SYNC button until you hear a beep.
Power off the doorbell	Quick-press the SYNC 5 times in 3 seconds.
Reset the doorbell	Press and hold the SYNC button for 10 seconds.

HOW THE SYSTEM WORKS

How the System Works

The video doorbell system includes 2 parts. One is the video doorbell at your door. The other is the HomeBase in your house.


The video doorbell detects motion at your porch and allows you to answer the door anytime and anywhere. HomeBase 2 stores video clips on its built-in storage. When someone rings the doorbell, people in the house will be notified.

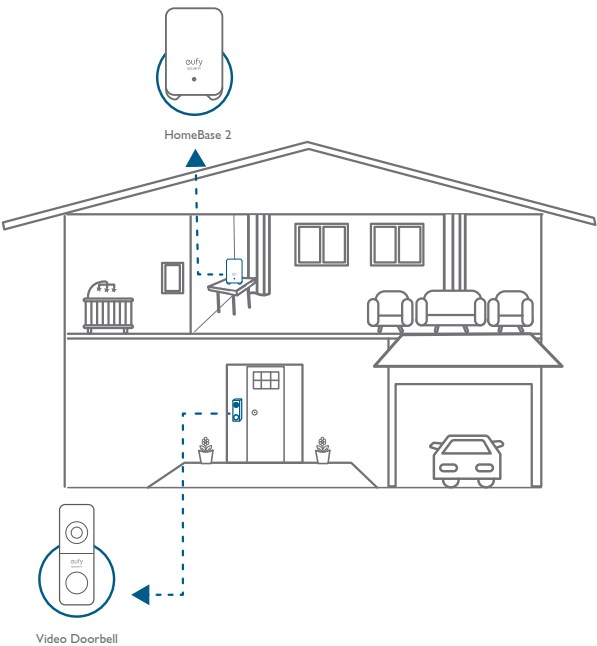


STEP 1 CONNECTING THE HOMEBASE

Connect the HomeBase 2 to the Internet

1. Power on the HomeBase 2, then use the ethernet cable provided to connect the HomeBase 2 to your home router.

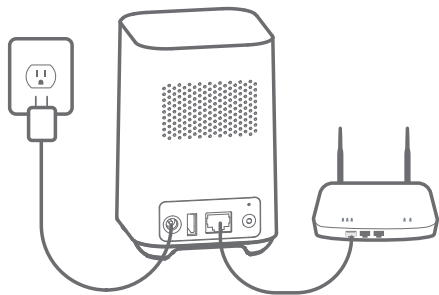

2. The LED indicator turns blue (this may take up to 1 min) when HomeBase 2 is ready for setup.

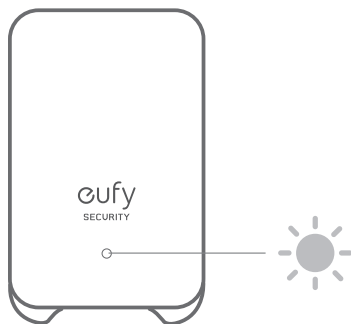

STEP 2 SETTING UP THE SYSTEM

Download the App and Set up the System


Download the eufy Security app from the App Store (iOS devices) or Google Play (Android devices).



Sign up for a eufy Security account and follow on-screen instructions to complete the setup.


Tap Add Device to add the following devices:

1. Add the HomeBase 2.
2. Add the doorbell.

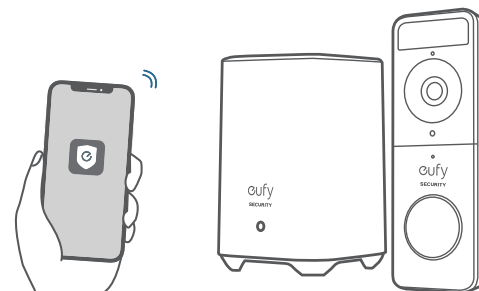

STEP 3 CHARGING YOUR DOORBELL

The doorbell comes with an 80% battery level for safe transportation. Fully charge it before mounting the doorbell at your front door.

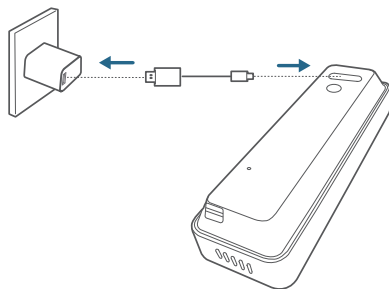

Note: The battery life varies depending on usage. In most common cases, a doorbell may have up to 15 events per day and each recording lasts 20 seconds on average. Under this scenario, the doorbell battery life can last up to 4 months.


STEP 4 FINDING A MOUNTING SPOT

Find a Mounting Spot


Take the Video Doorbell to your front door and check the live view on the eufy Security app at the same time. Find a position where you can get the desired field of view.

Consider the below factors:

1. Check if you can reuse the existing holes and anchors on the wall or door frame.
2. If you want to place the doorbell close to a side wall, make sure the wall doesn't show up in the field of view. Otherwise IR light will be reflected and night vision will become blurry.
3. If you are drilling the mounting holes for the first time the recommended mounting height is 48" / 1.2m from the ground.
4. Use the 15° mounting wedge as a supplementary mounting bracket if you wish to see more on a specific side.

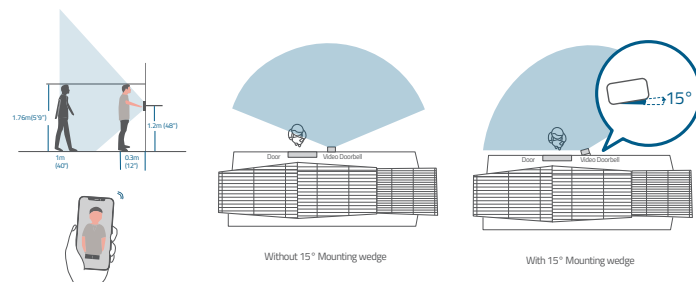

Place the Screw Hole Positioning Card against the wall to mark the position.


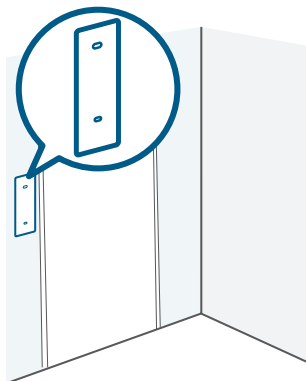


STEP 5 MOUNTING THE BRACKET

Mount the Doorbell on a Wooden Surface


If you're mounting the doorbell on a wooden surface, you don't need to pre-drill pilot holes. Use the provided screws to secure the Mounting Bracket on the wall. The Screw Hole Positioning Card indicates the position of the screw holes.

What is required: Power Drill, Mounting Bracket, 15° Mounting Wedge (Optional), Screw Packs

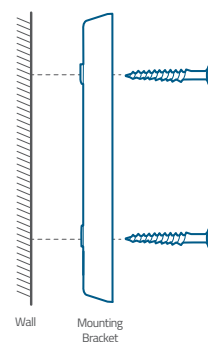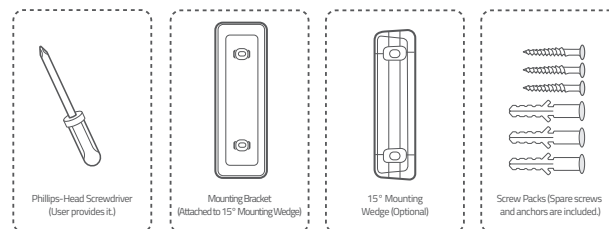

Wall
Mounting
Bracket

Without 15° Mounting Wedge

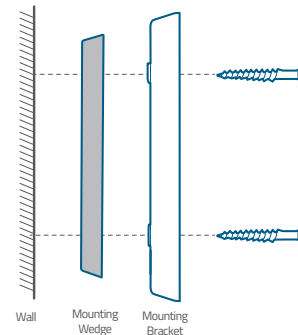



Wall
Mounting
Wedge
Mounting
Bracket

With 15° Mounting Wedge


Mount the Video Doorbell on Surfaces Made Out of Hard Materials

1. If you're mounting the doorbell on a surface made out of hard materials, like brick, concrete, stucco, drill 2 holes through the Screw Hole Positioning Card with 15/64"(6mm) drill bit.
2. Insert the provided anchors, and then use the provided long screws to secure the Mounting Bracket on the wall.

What is required: Power Drill, 15/64"(6mm) Drill Bit, Mounting Bracket, 15° Mounting Wedge (Optional), Screw Packs

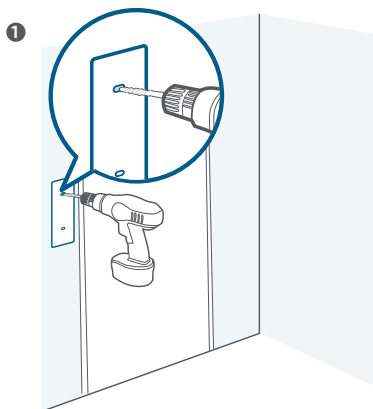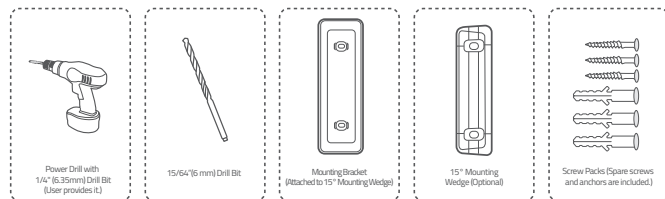


2

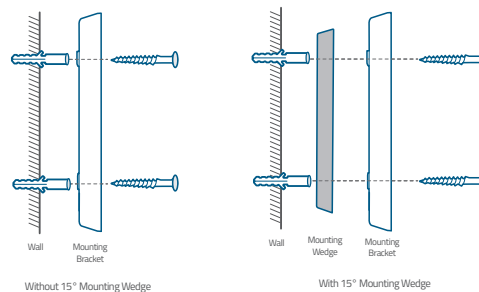

STEP 6 MOUNTING THE DOORBELL

Mount the Doorbell

Align the doorbell with the top of the mount and then snap the bottom into place.

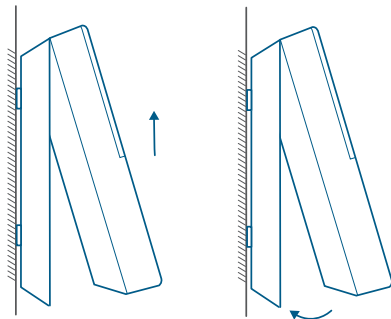

You're all set!




If you want to detach the doorbell or recharge it, please refer to the following sections.

APPENDIX I DETACHING THE DOORBELL

Detach the Doorbell

1. Use the doorbell detaching pin provided if you wish to detach the doorbell from the Mounting Bracket.
2. Insert and press the detaching pin into the hole on the bottom of the doorbell and then lift to take the bottom of the doorbell off.


What is required: Doorbell Detaching Pin

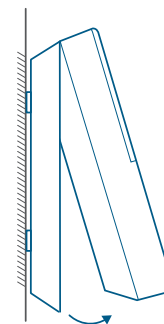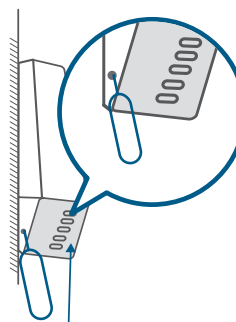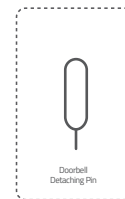

APPENDIX 2 RECHARGING THE DOORBELL

Recharge the Doorbell

Charge the doorbell with universal USB chargers that deliver 5V 1A output.

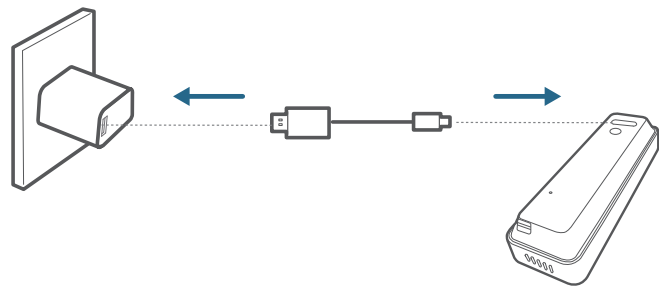

LED indication	Charging: Solid orange
	Fully charged: Solid blue
Charging time	6 hours from 0% to 100%

NOTICE

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

FCC Radio Frequency Exposure Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in fixed/mobile exposure condition. The min separation distance is 20cm.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

The following importer is the responsible party:

Company Name: POWER MOBILE LIFE, LLC

Address: 10900 NE 8TH ST, STE 501, BELLEVUE, WA 98004

Telephone: 1-800-988-7973

IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device."

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IC RF Statement:

When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

Lors de l'utilisation du produit, maintenez une distance de 20 cm du corps afin de vous conformer aux exigences en matière d'exposition RF.

CUSTOMER SERVICE

Warranty



12-month limited warranty



(US) +1 (800) 988 7973 Mon-Fri 9:00-17:00 (PT)

(UK) + 44 (0) 1604 936 200 Mon-Fri 6:00-11:00 (GMT)

(DE) +49 (0) 69 9579 7960 Mon-Fri 6:00-11:00



Customer Support: support@eufylife.com

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon,
Hong Kong



@EufyOfficial



@EufyOfficial



eufyofficial