


READ AND SAVE THESE INSTRUCTIONS

EVERDURE

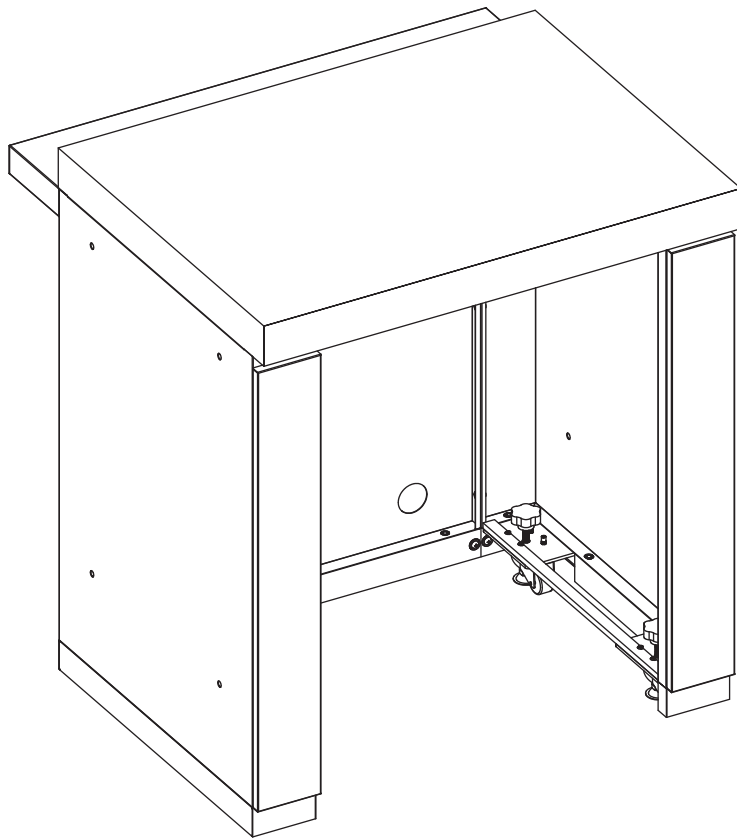

**OPERATION, MAINTENANCE
AND SAFETY INSTRUCTIONS
BEVERAGE COOLER MODULE
(EKMSBC / EKMSBCBP)**



Scan for further support

Due to ongoing product development,
images shown are subject to change without warning

CONTENTS

Important Safety Instructions	3
Appliance Details	3
Cleaning & Storage	4
Parts List	5
Module Assembly	6-8
Connecting Modules Instructions	9-12
Warranty	13-15

Note: In this instruction manual, the Beverage Cooler module will be referred to as an appliance

Read these instructions and follow steps carefully to ensure you assemble the appliance correctly and avoid damages. Check that all parts and hardware have been provided before assembling the appliance. Place all contents on a clean, soft-flat surface to avoid scratching the product

IMPORTANT SAFETY INSTRUCTION:**WARNING:**

- **DO NOT** climb, step, or stand on the appliance.
- **DO NOT** use the appliance for any purpose other than that for which it is designed.
- **DO NOT** exceed the maximum weight for countertop 70kg (150lbs).
- Keep the appliance on a level surface. It may become unstable if stored or moved on a sloping surface and may cause personal injury, and/or damage to the appliance.
- Always apply leg stabilizers once the appliance has been moved to the area.
- To prevent damage to threads, do not use a power tool and do not overtighten screws.
- Do not use or store this appliance in areas of high salt content (a marine environment) or an area with caustic fumes or liquids (such as a domestic pool), as these chemicals can cause the appliance materials to deteriorate (and void the warranty). Take care that the module is positioned in such a way that the beverage cooler is always protected from the elements.
- We recommend that you regularly maintain your module and keep them in good condition. This can be achieved by following the cleaning suggestions in this booklet.
- Use two people to lift and to turn the appliance when assembling.
- Do not attempt assembly with one person.
- Keep all hardware and small parts away from children.
- When moving the appliance secure any items placed on top to prevent damage or personal injury.

APPLIANCE DETAILS:

EKMSBC / EKMSBCBP	WIDTH mm (in)	DEPTH mm (in)	HEIGHT mm (in)	WEIGHT kg (lb)	MAX TOP COUNTER WEIGHT kg (lb)
	830 (32.68)	620 (24.41)	920 (36.22)	33 (72)	70 (150)

CLEANING:

Surfaces can be cleaned using a mild household detergent or cleaner and a clean cloth (do not use scourers or harsh detergents). **It is advisable to test cleaners on a small section of the appliance first. NEVER** use paint thinners or similar solvents for cleaning and **NEVER** pour cold water over hot surfaces. Dry the surface afterwards. **DO NOT** use high pressure cleaners or steam cleaners, as this can damage the module surface causing it to break down and lift away.

STORAGE:

 
 
 
When the appliance is not in use, **MUST** be under cover and covered (preferably with a purpose made cover) out of the weather


PACKAGING:

- Remove all external packaging and remove the appliance from the packaging before use.
- Removal all internal cartons and packaging from within the appliance assembly.
- Recycle as per local government laws

PARTS LIST:**Tools required:**


Phillips head screwdriver


- 
 C Screw
M4*12 8 PCS
- 
 B Screw
M6*16 10 PCS
- 
 D Washer
Ø18-Ø6.5 10 PCS
- 
 A Screw
M8*16 4 PCS
- 
 E Washer
Ø18-Ø8.5 4 PCS

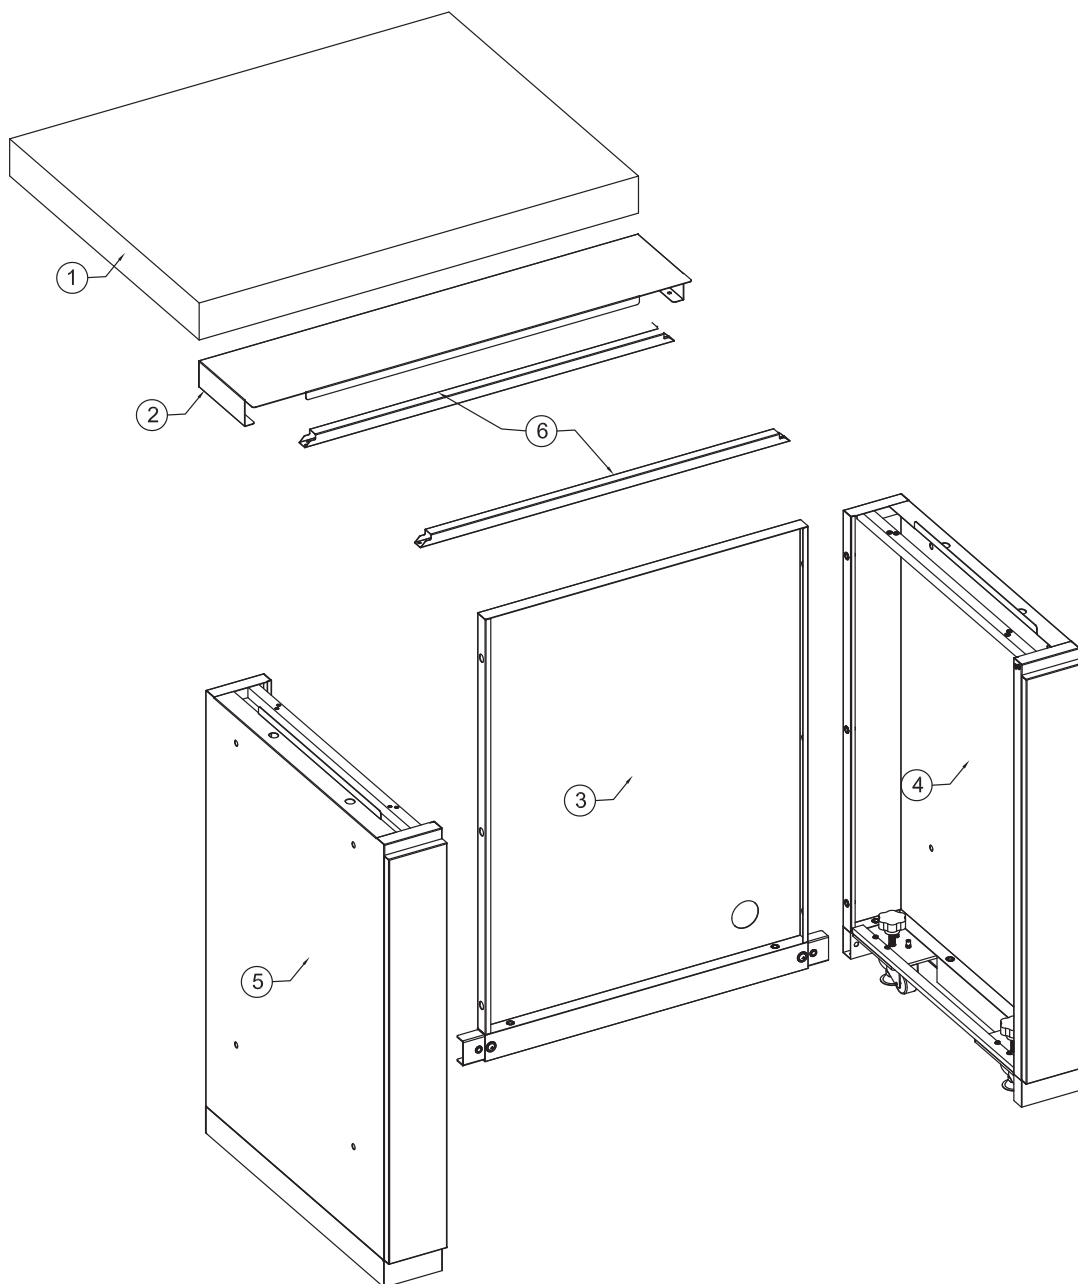



NO.	PART NAME	QTY	PCS	NO.	PART NAME	QTY	PCS
1	Table top	1	PC	A	Screw M8*16	4	PCS
2	Rear infill panel	1	PC	B	Screw M6*16	10	PCS
3	Back panel	1	PC	C	Screw M4*12	8	PCS
4	Right panel	1	PC	D	Washer Ø18-Ø6.5	10	PCS
5	Left panel	1	PC	E	Washer Ø18-Ø8.5	4	PCS
6	Support bracket	2	PCS				

Please contact Everdure for any spare part related inquiries.

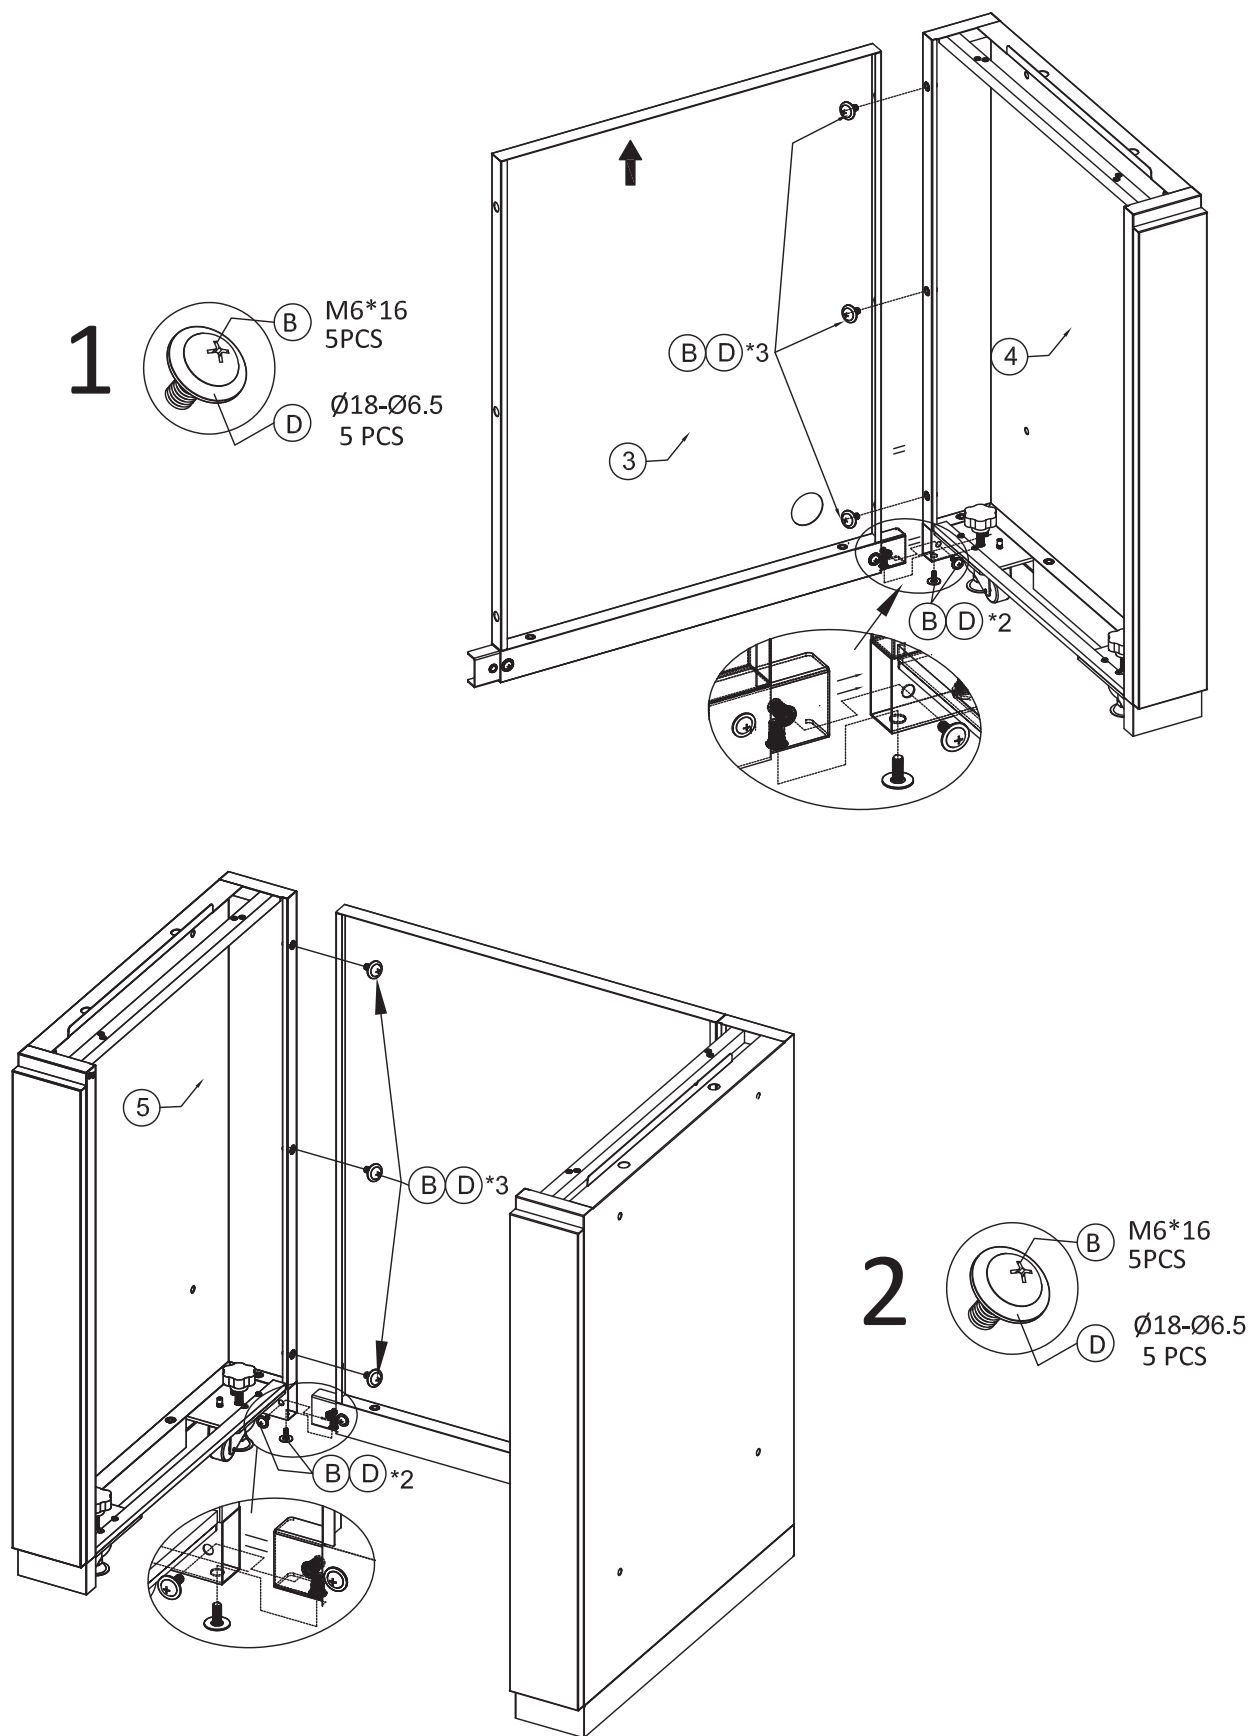MODULE ASSEMBLY INSTRUCTIONS:

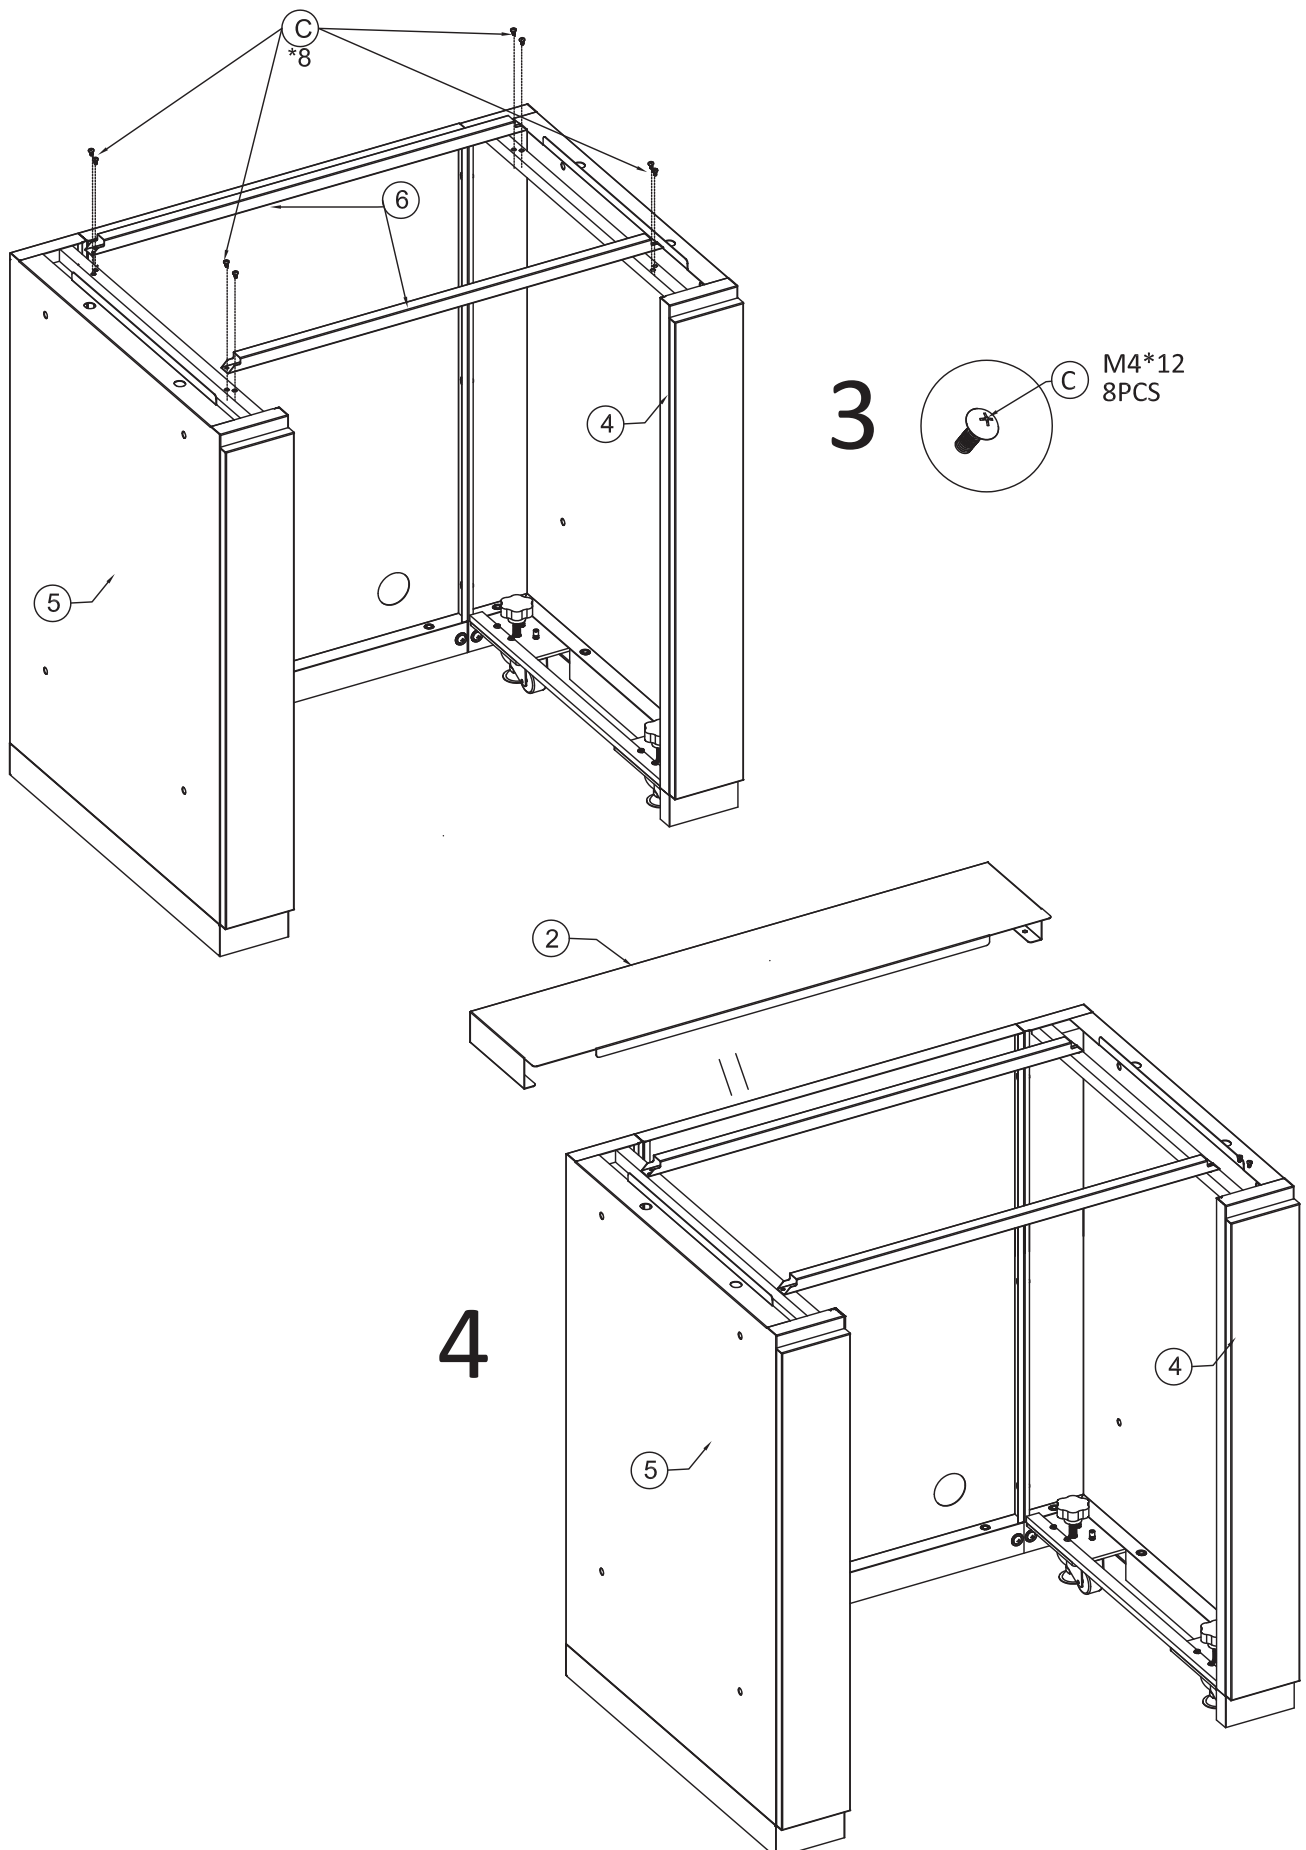

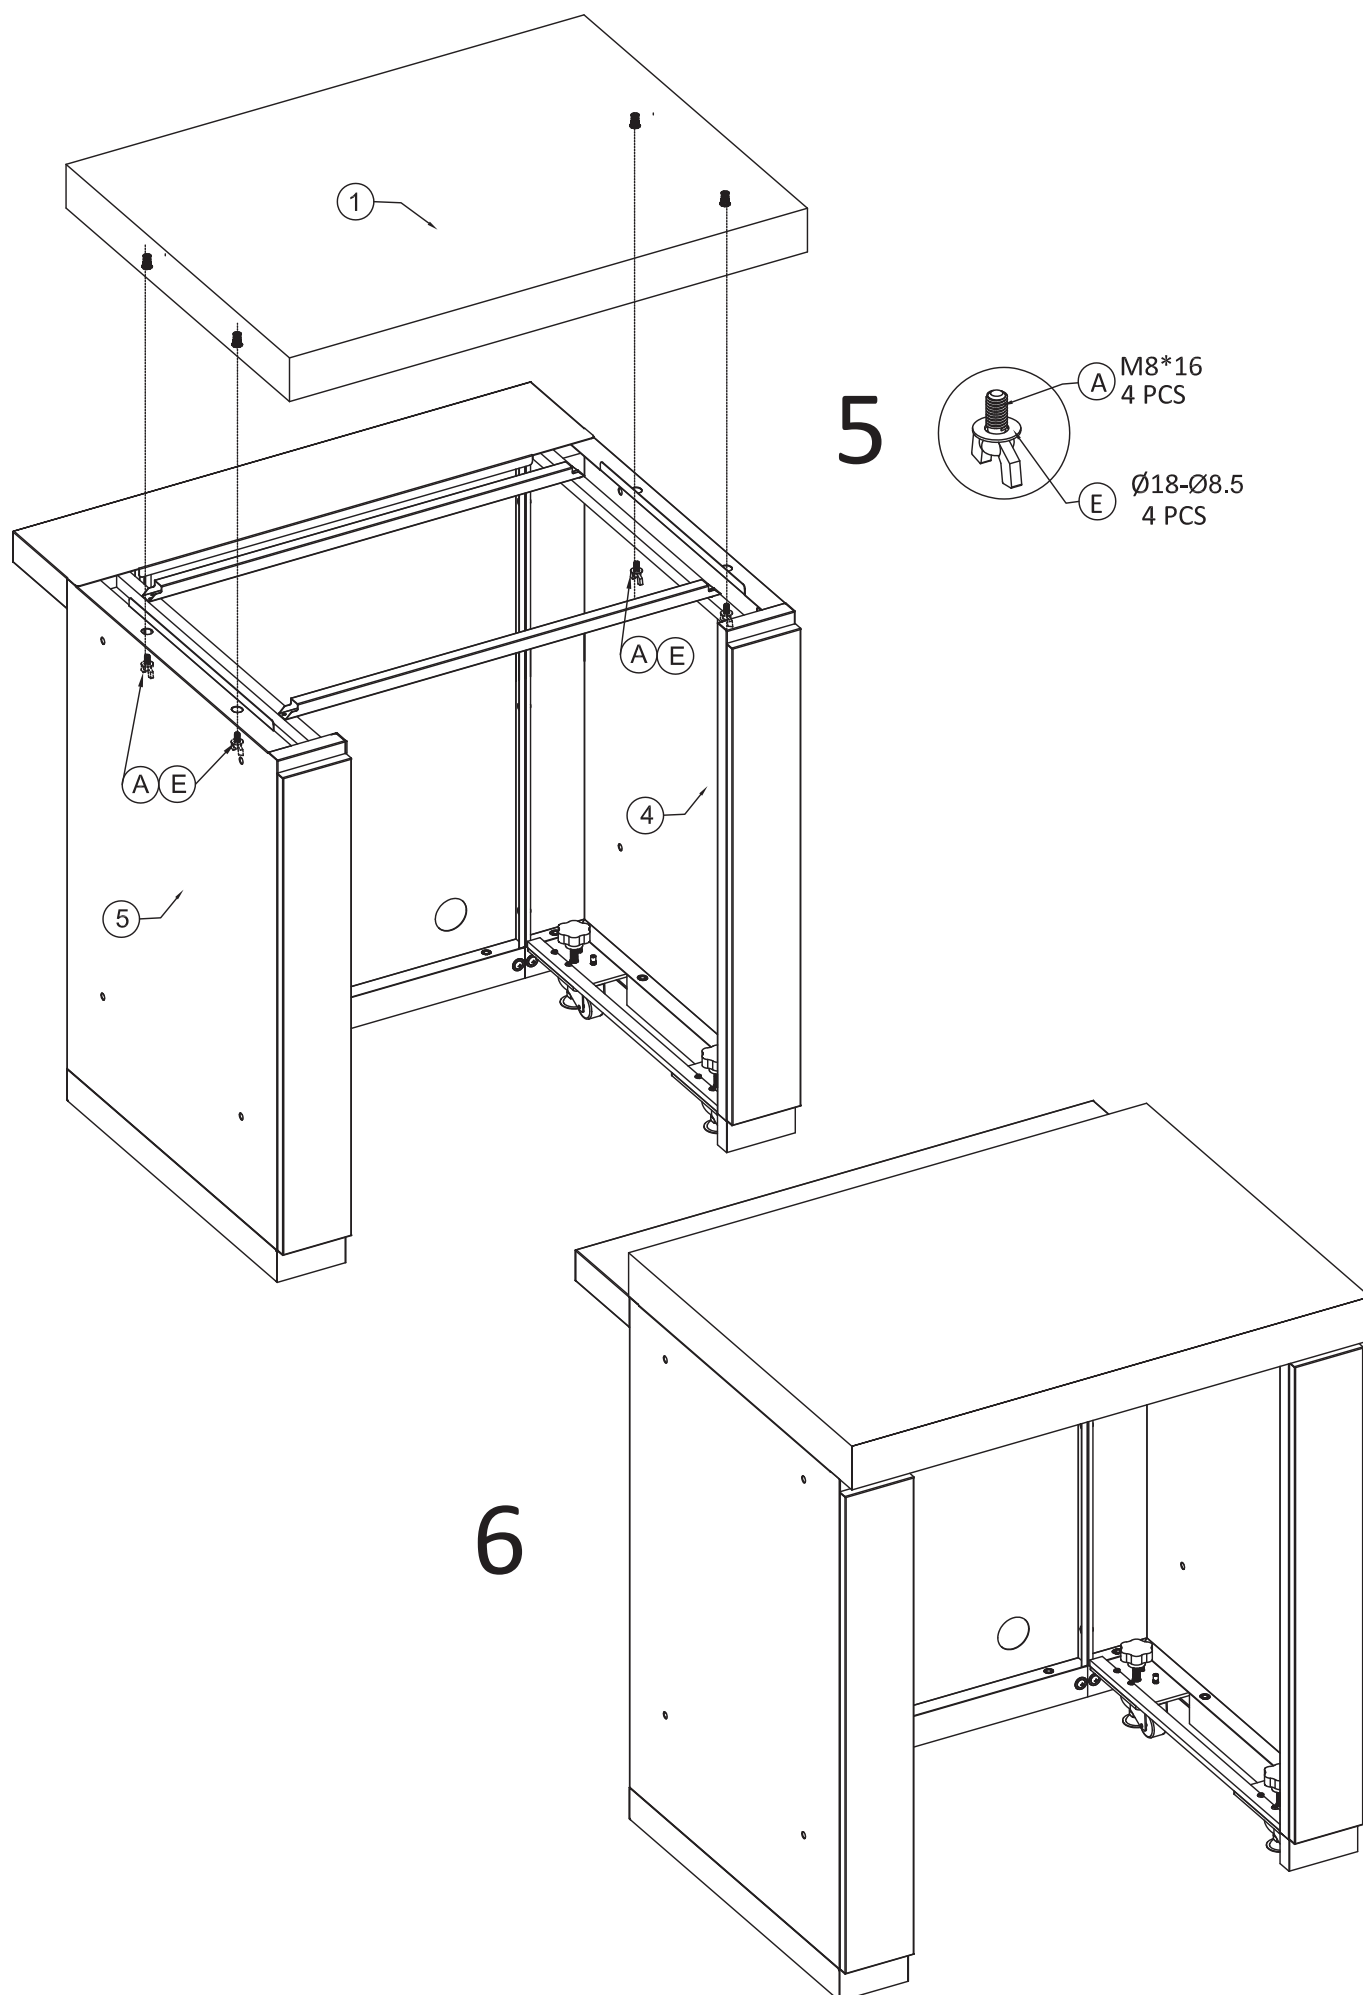


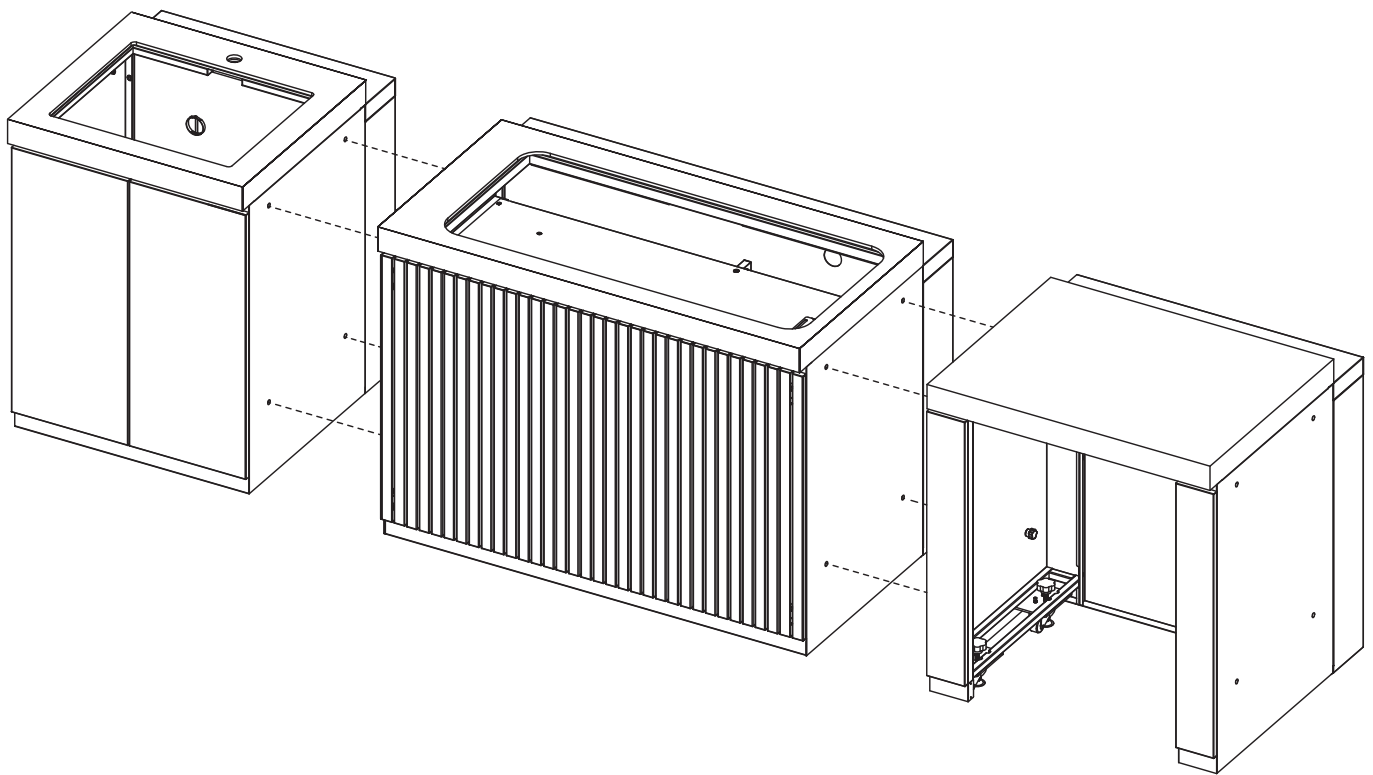MODULE CONNECTION INSTRUCTIONS:

1


Sink Module


BBQ Module

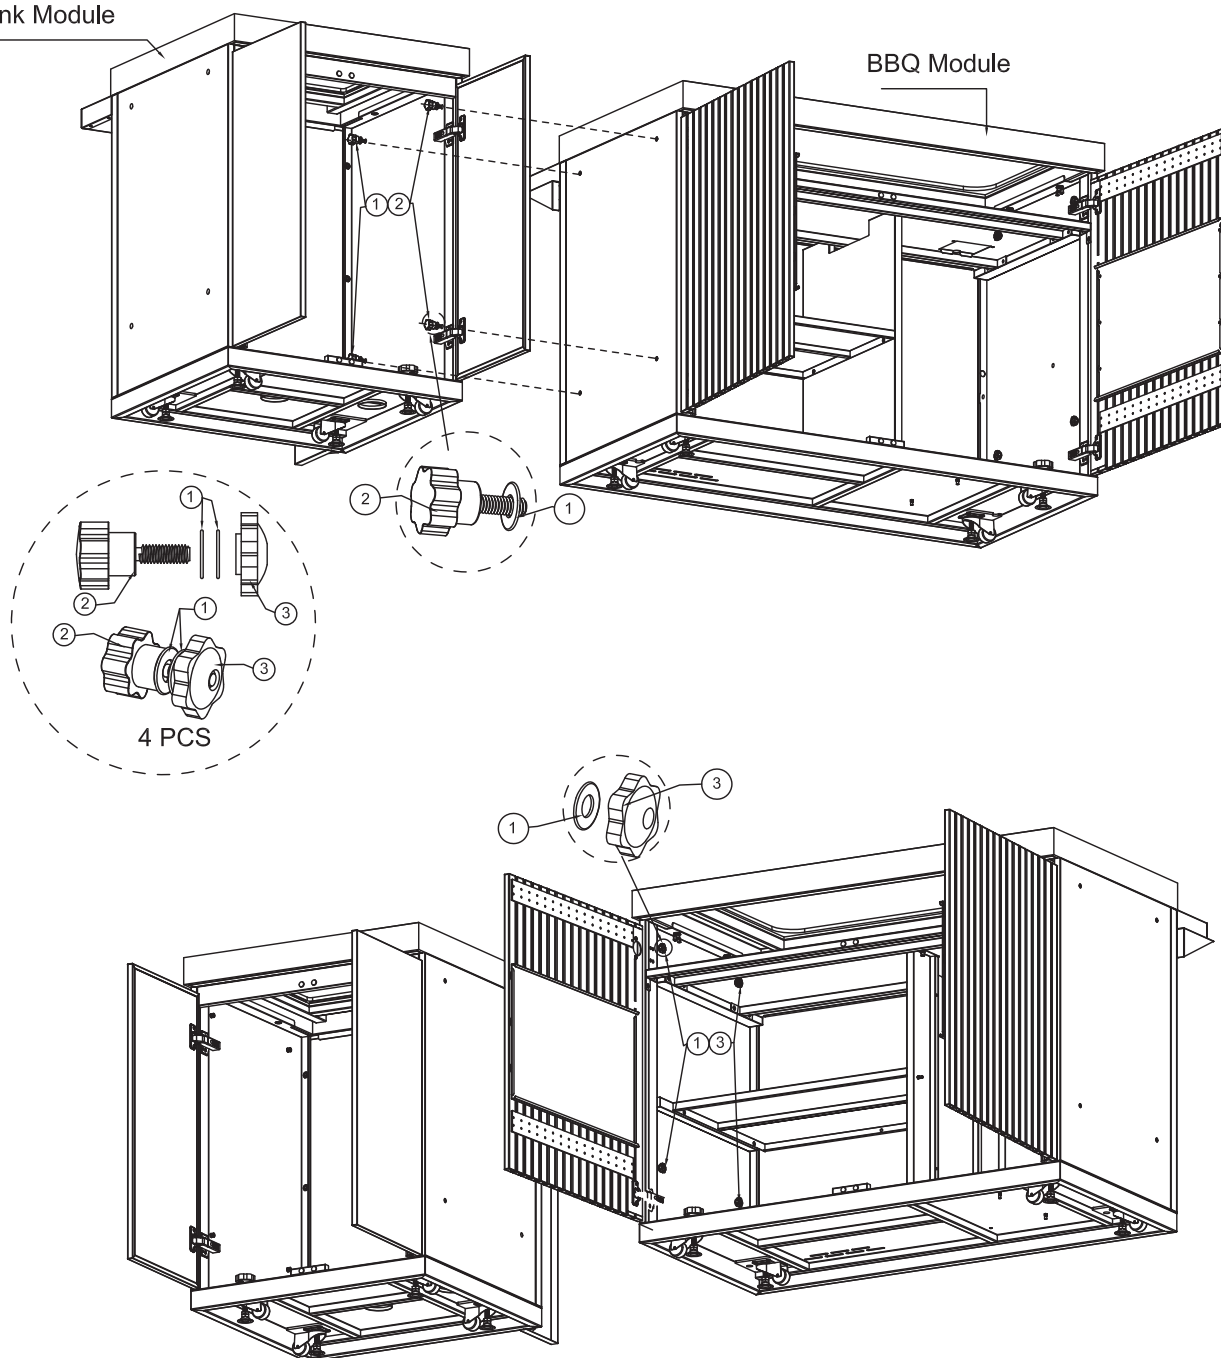

1	Ø18-Ø6.5	8	PCS
2	M6*20	4	PCS
3	M6	4	PCS

 2



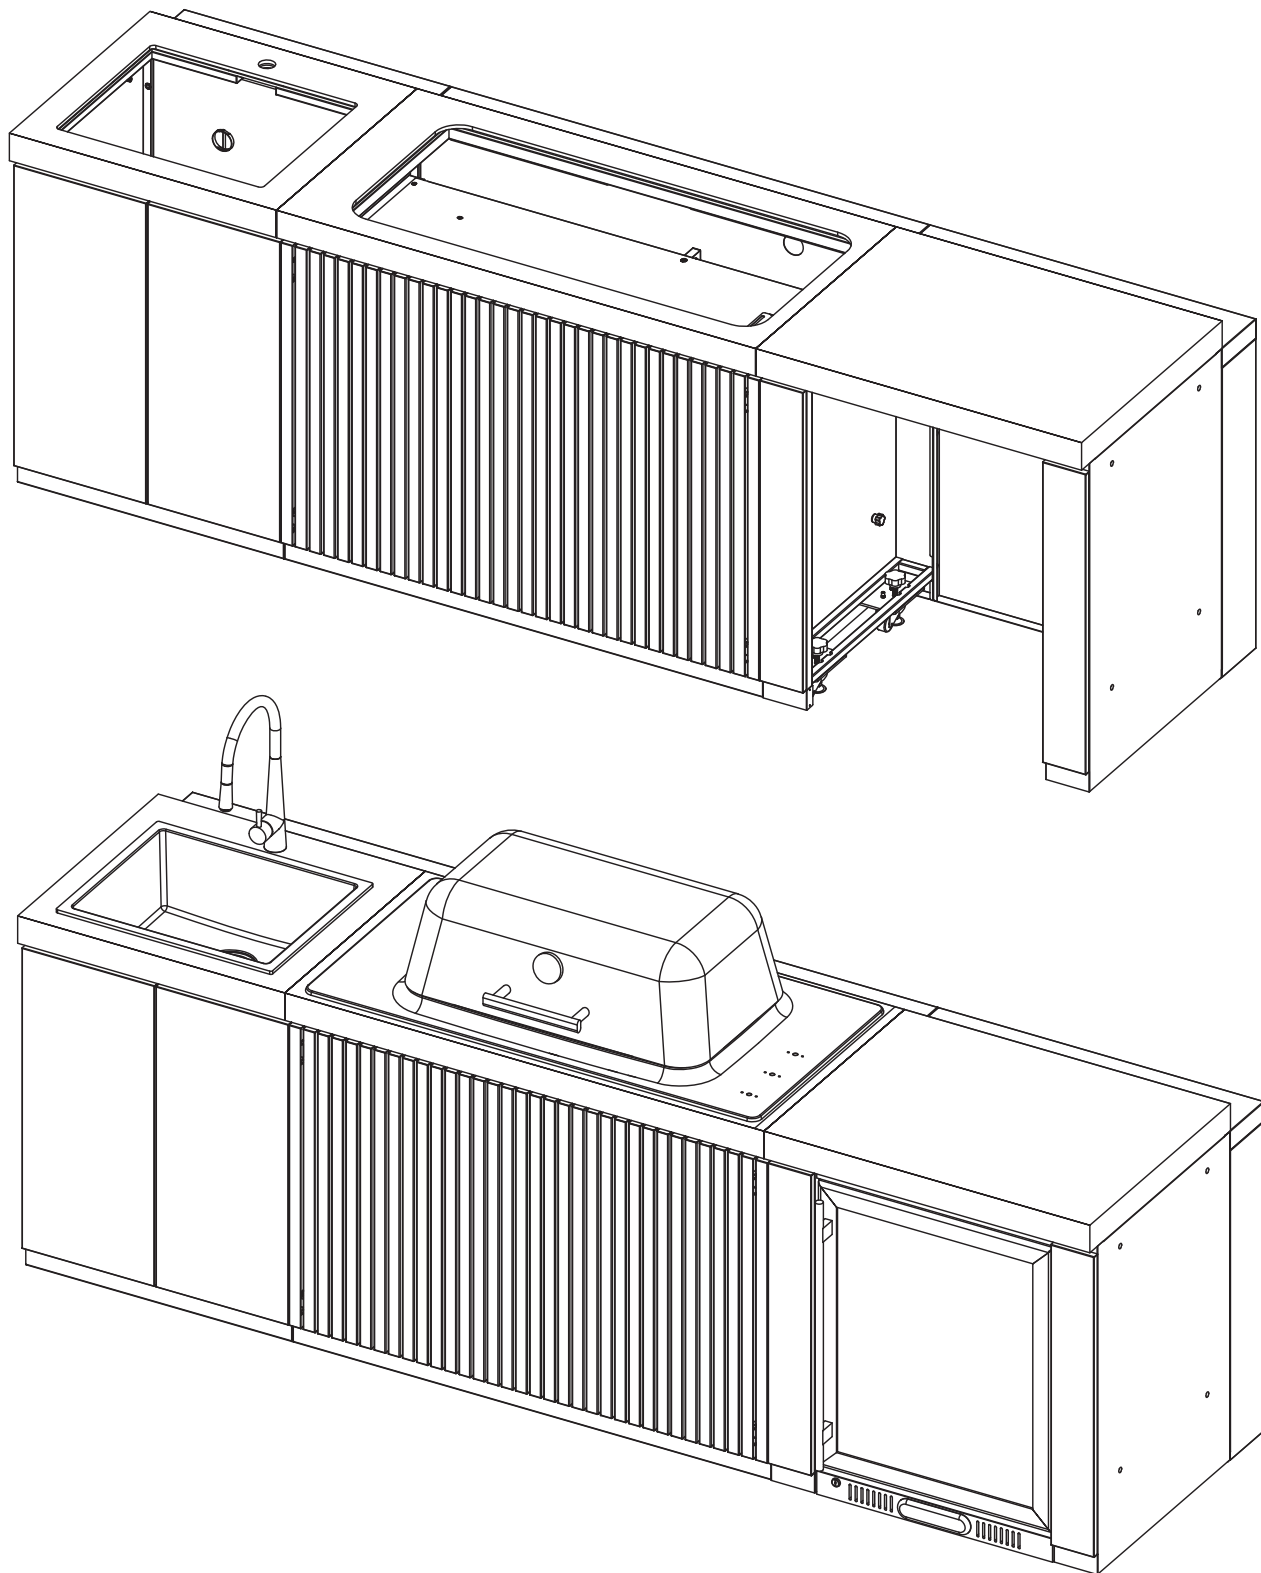

WARRANTY (USA):**EVERDURE**

Please refer to the everdure.com website for more warranty information

CONTACT US

To obtain repairs under this warranty, call Toll Free +1 877 794 2622 or email, service@everdure.com

For prompt service, please ensure you have the following information on hand:

1. Appliance Name/Model Number
2. Serial Number
3. Purchase Date (as per invoice or proof of purchase)
4. Purchased from

SHRIRO USA INC. Incorporation Number 7164875
25541 Arctic Ocean Drive Lake Forest, CA 92630 USA
Tel (sales): +1 877 794 2622
Email: sales@shrirusa.com
Website: www.everdure.com

WARRANTY (AU/NZ):

APPLIANCE WARRANTY

PRIVACY POLICY

Privacy policy: Everdure is committed to protecting your personal privacy. Your personal information that you have provided in this form (e.g., name, street address, email address and telephone/mobile number) is used solely by Everdure for the express purpose for which it was collected (e.g., to respond to your enquiry regarding your appliance). Your personal information will be processed by Everdure in accordance with the guidelines and requirements of the Privacy Laws of Australia (Privacy Act 1998).

For a full copy of Everdure's Privacy Policy, please e-mail customercare@shiro.com.au in Australia or customercare@monacocorp.co.nz in New Zealand or call 1300 766 066 in Australia or (09) 415 6000 in New Zealand.

STATEMENT OF STANDARD WARRANTY CONDITIONS

AUSTRALIAN CUSTOMERS

Our goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss of damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND CUSTOMERS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

OUR WARRANTY

Subject to the following conditions, this appliance is also covered by the manufacturer's warranty from the date of purchase, covering all parts and labour for the period listed below (Our Warranty). Our warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defected materials or components, or faulty workmanship. The appliance will be repaired or replaced at the option of Everdure, but all costs of installation, removal, cartage, freight, travel expenses and insurance are to be paid by the claimant. Our Warranty is subject to appliances being used for single-family domestic household use.

Our Warranty

Operates in addition to (and does not exclude, restrict, or modify) any rights or remedies to which you may already be entitled to under the Australian Consumer Law or any consumer guarantee law relating to this appliance.

WHAT IS COVERED: By Our Warranty

During the warranty period your appliance will be repaired free of charge by Everdure, or its authorised service centre provided your appliance is delivered to and picked up from Everdure or its authorised service centre, subject to terms and conditions below.

It is recommended that exposure of the appliance to the elements should be minimised. After the appliance has been cleaned, store it under cover with a weatherproof cover over it.

COMPONENT	WARRANTY PERIOD
Frame (Excluding Rust)	5 years
Paint finish	2 years
All other parts	1 year

WHAT IS NOT COVERED: By Our Warranty

1. Any defect or failure caused by the appliance not being assembled or used in accordance with the instruction/installation manual provided with the appliance.
2. Normal fair wear and tear (e.g., surface rust & discolouration).
3. Insect or vermin infestation.
4. Unauthorised repairs or use of non-genuine Everdure parts.
5. Appliance scratches & damage as a result of delivery, installation, or assembly.
6. Claims to appliance surface coatings due to accidental damage, improper or lack of maintenance, damage from cleaning appliance not recommended by Everdure.

HOW TO CLAIM OUR WARRANTY

You will need to contact Everdure in Australia or New Zealand using the enclosed contact details. Please make sure you have the following information on hand:

- Appliance Name/Model Number
- Purchase Date (as per invoice, or proof of purchase)
- Place of Purchase

IN AUSTRALIA

Everdure

Distributed by World Wide Appliances Pty LTD

Customer Care: 1300 766 066

Email: customercare@worldwideappliances.com.au

IN NEW ZEALAND

Everdure

Is a division of Monaco Corporation Ltd (Member of Shiro Australia PTY LTD) Phone: (09) 415 6000

Email: customercare@shiro.com.au

EVERDURE

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference. Due to continual product development, Everdure reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.

SHRIRO USA INC. Incorporation Number 7164875
25541 Arctic Ocean Drive
Lake Forest, CA 92630 USA
Tel (toll free): +1 (877) 794 2622
Email: sales@shrirusa.com
Website: www.everdure.com

WORLD WIDE APPLIANCES
48 Moore Street
Leichhardt, NSW 2040 Australia
Tel: 1300 766 066
Website: www.everdure.au