



1 Lay & Play



2 Tummy time



3 Sit & Play



4 On-the-go

Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.

Requires two AA (LR6) **alkaline** batteries (not included).

Tool required for battery installation:
Phillips screwdriver (not included).

Consumer Information

**CONSUMER ASSISTANCE**

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Installation

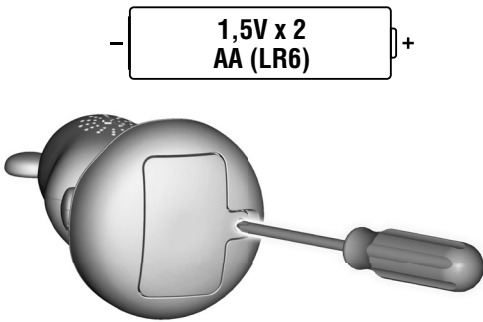

- For longer life, use **alkaline** batteries.
- Locate the battery compartment door on the electronic toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert two AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch off and back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembled Parts



5 Hanging Toys

 


Mirror



Electronic Toy

Assembly

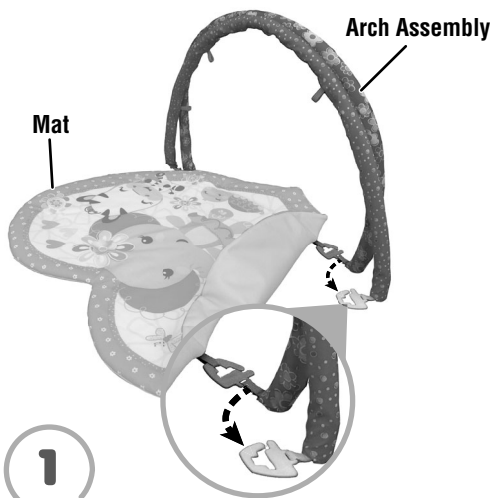


1

- Locate the hooks and loops underneath the mat. The hook straps and the loops are different colors. When properly assembled, the hook strap color will match the loop color.
- While holding the end of an arch, carefully unfasten the hook with the strap that is connected to the other arch.

Hint: This should be the hook that does not match the loop.



 
Arch Assembly with Mat

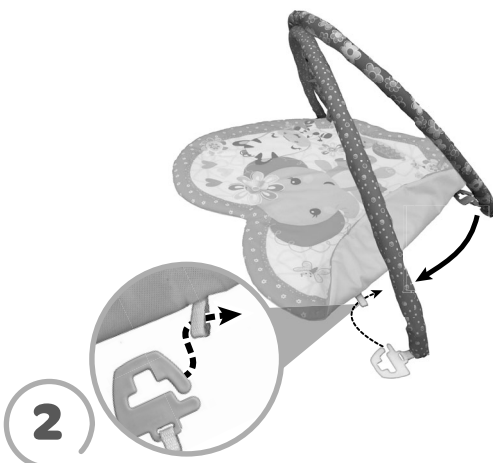

2


- Next, fasten the hook with strap that matches the color of the loop on the other end of the mat.
- Repeat this procedure to assemble the hooks to the loops on the other side of the mat.

 Assembly

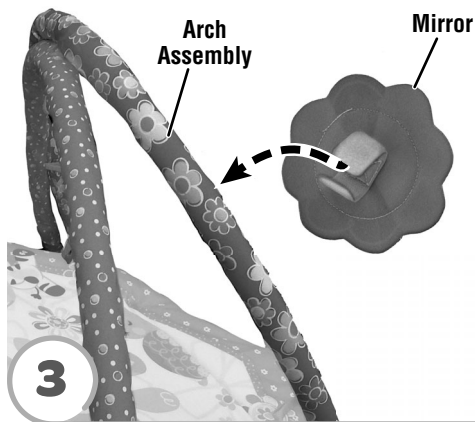

- Wrap the straps on the mirror around an arch and close the fasteners.

 Care

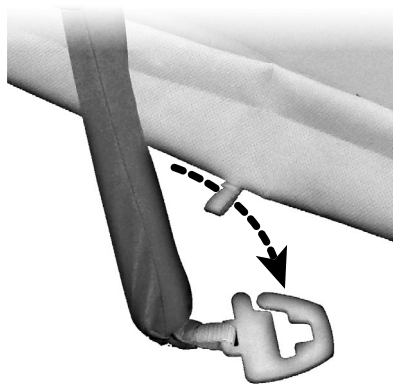

- The mat and elephant toy are machine washable. Remove the arch assembly from the mat.
- While holding the arches together, carefully unfasten the hook on each end of the arches.
- Place the elephant toy in a pillowcase. Machine wash cold on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly, hard toys and electronic toy are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

Musical Hippo!

 


Hang the other toys on the loops around the gym.



WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.



Power/Mode Switch

- Slide the power/mode switch on the electronic toy to:
 - 🎵 **Long Play** - Bat at the hippo to play approximately 15 minutes of music!

- 🎵 **Short Play** - Bat at the hippo for fun musical ditties and sound effects!
- OFF