



- ❶ Choose a mode: Music or Sounds, or Music or Sounds & Vibration.
- ❷ Choose music or a sound effect.
- ❸ Press the toy's tummy to activate! Vibration with music or sound effects play for about 10 minutes. Music or sound effects alone play for about 30 minutes.
- ❹ Press and hold the toy's tummy for several seconds to turn off.

Keep this instruction sheet for future reference,  
as it contains important information.

 
Requires three AA batteries (included).

Batteries included are for demonstration purposes only.


Battery replacement is required. Only adults should replace batteries.

Required tool: Phillips screwdriver (not included).


# Battery Replacement and Setup

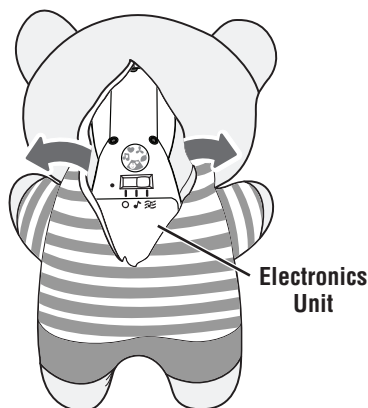

 - Open the fasteners on the back of the toy and remove the electronics unit.

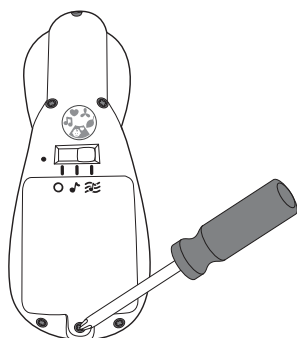


- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the door.
  - Remove the exhausted batteries and properly dispose.
  - Insert three, new AA (LR6) **alkaline** batteries.
  - For longer life, use **alkaline** batteries.
  - Replace the battery compartment door and tighten the screw. Do not over-tighten.
  - Fit the electronics unit back inside the toy.
- Make sure the large activation button on the electronics unit is facing the front of the toy.**

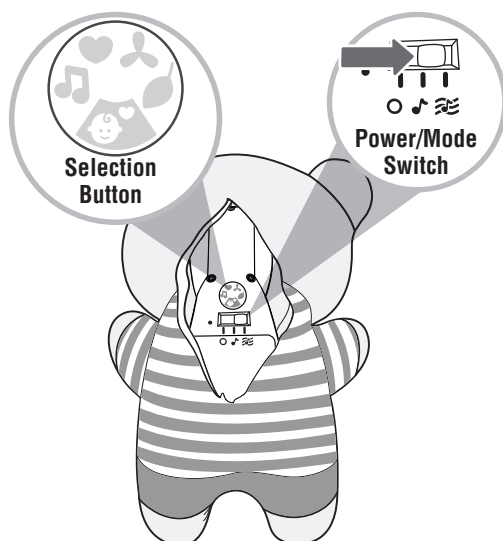 

- Slide the power/mode switch ON or , to remove from the try-me demonstration mode.
- Choose a mode. Slide the power/mode switch to:
  - Music or Sounds & Vibration**
  - Music or Sounds**
  - OFF**
- Choose music or a sound effect. Press the selection button to cycle through choices:
  - Music**
  - Womb**
  - Nature**
  - Heartbeat**
  - White Noise**
- Close the fasteners.

# Battery Safety Information

 

**In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:**

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Care

- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch off and back on.
- When sound/vibrations from this toy become faint or stop, it's time for an adult to change the batteries.
- This toy is machine washable. **First, remove the electronics unit from the toy.** Machine wash cold, on gentle cycle. Do not use bleach. Tumble dry low heat. Do not immerse the electronics unit.



- Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.

# Consumer Information

**CONSUMER ASSISTANCE**

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

**service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

**Outside the United States:**

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

## FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.