



Bubble Delivery Thomas

INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

WHAT'S INCLUDED



HELPFUL HINTS

IMPORTANT!

- Keep bubble solution away from eyes and ensure that children know that bubble solution should not be swallowed.
- Try to avoid spilling bubble solution on the floor. It may create slippery floor condition.
- To prevent bubble solution from leaking, use on a flat, level surface.



ONE-TIME SNAP: Assembly step that is marked with a star is "one-time snap". Once this part is put together, it cannot be taken apart.




Bubble solution refills available while supplies last. To order, please visit service.fisher-price.com or call 1-800-432-5437 (US & Canada).


ADULT ASSEMBLY REQUIRED.

Tool needed: Phillips screwdriver (not included).

ASSEMBLY

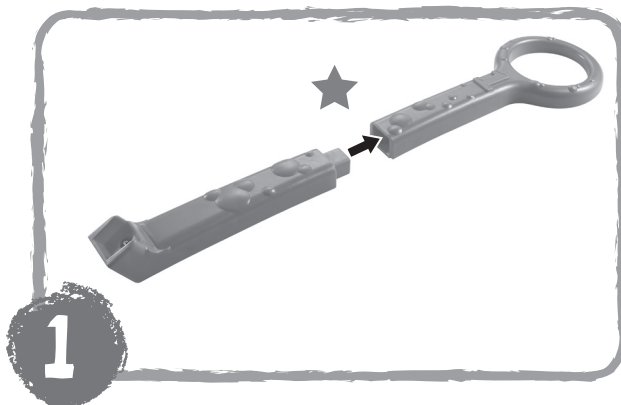


Fit and snap the lower handle into the upper handle.

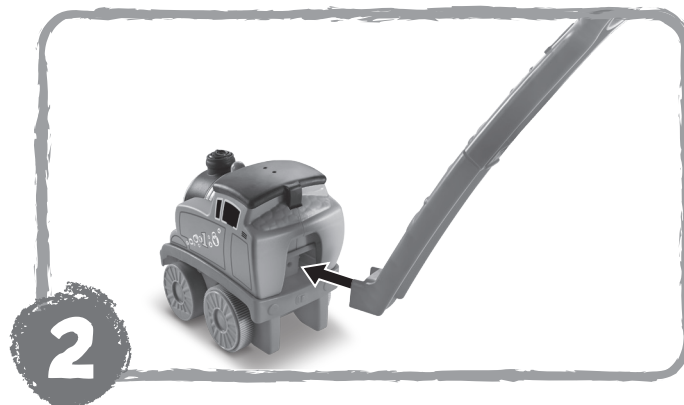


Insert the handle assembly into the socket in the back end of Thomas.




Tighten the screw with a Phillips screwdriver. Do not over-tighten.

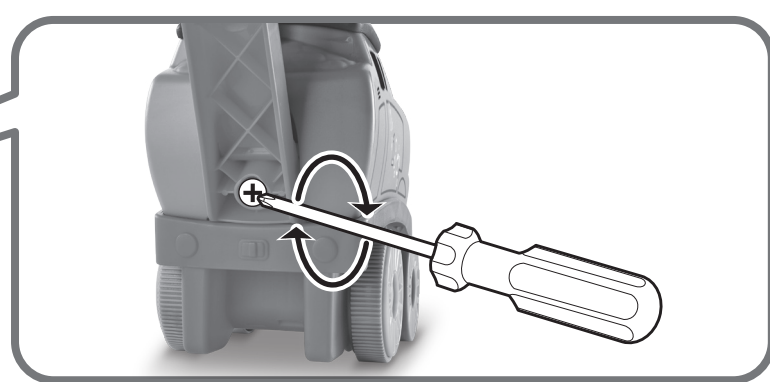

HOW TO PLAY

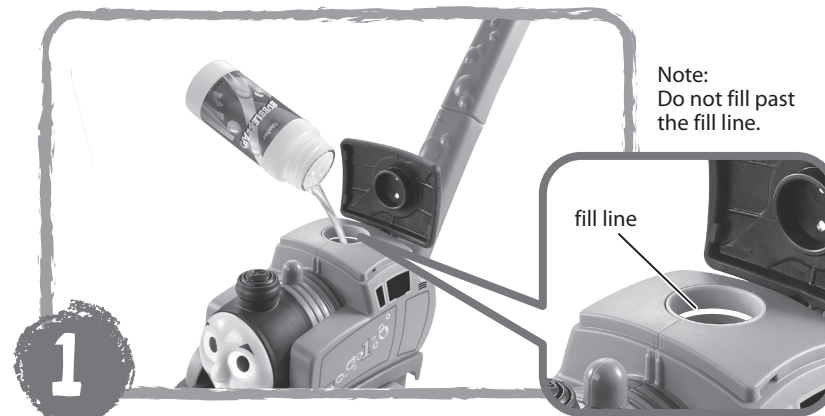

Open the cover and fill the bubble chamber with bubble solution.

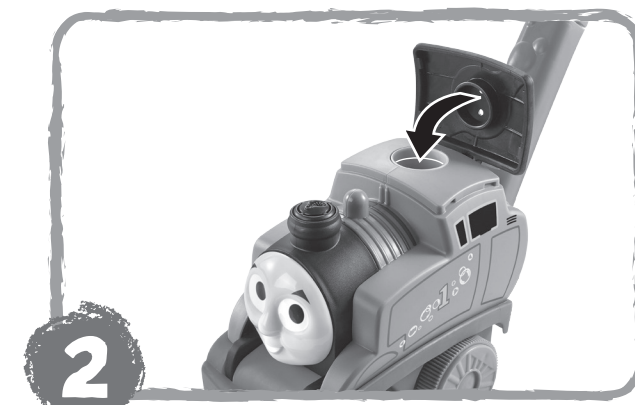

Close lid and press down firmly to create a tight seal.



Push Thomas along and bubbles spout from his funnel. Note: You may need to push Thomas about 15 steps before bubbles start to flow.

CARE & STORAGE



Open the cover, tip Thomas to drain the remaining bubble solution out, recycle and store the bubble solution in the bottle. Cover the bottle before storage.



Rinse the bubble chamber thoroughly with clean water from a garden hose or faucet.



Push Thomas along a bit after rinsing to help remove any remaining soap from his tubes.

Surface wash with water and a mild cleaning solution. Do not use bleach, silicone or oily lubricants. Rinse clean to remove residue.

Drain, rinse, clean and dry all items thoroughly before storing.

TROUBLESHOOTING

No Bubbles?

- Refill the bubble chamber.
- The bubble chamber may be clogged. Rinse the bubble chamber thoroughly with clean water from a garden hose or faucet.
- To suck excess air out of the tube, pull Thomas back around 3.5 - 4.5 feet (1 - 1.5 meters).
- Be sure to push Thomas a minimum of 15 walking steps before bubbles begin to flow.
- Walk at a slow, steady pace.
- Push Thomas so that the rear wheels always contact the ground.
- Never use silicone or oily lubricants on this product. Bubbles will not form if even a very small amount of these substances get into the bubble chamber.

CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Thomas the Tank Engine & Friends™
CREATED BY BRITAIN ALLCROFT

Based on the Railway Series by The Reverend W Awdry.
©2015 Gullane (Thomas) Limited.
Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.
©2015 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2015 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted.
PRINTED IN CHINA. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

DGL03-0970
1100685731-DOM
Fisher-Price
HIT entertainment