

Fisher-Price®

DRD70



Read this manual carefully for important safety information and operating instructions before using this product.
Keep these instructions for future reference,
as they contain important information.

fisher-price.com



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Consumer Information



- This product may come with replacement warning labels which you can apply over the factory applied warning label if English is not your primary language. Select the warning label with the appropriate language for you.



- Disconnect the AC adapter from the product before cleaning.
- Wipe this product with a clean, damp cloth. Do not immerse.
- This product has no consumer serviceable parts. Do not take apart.



- Requires an AC adapter (input 100 - 240 VAC, 50 - 60Hz, 9W with an output of 6 VDC) for operation (included).
- Never use extension cords with the AC adapter.
- The product must only be used with the recommended AC adapter.
- If this product begins to operate erratically, you may need to reset the electronics. Unplug the AC adapter for approximately 30 seconds and plug back in.



- Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

AC Adapter



- Insert the pin end of the AC adapter into the socket on the back of the product.
- Fit the other end of the AC adapter into a standard wall outlet.
- If power flow to the wall outlet is controlled by a switch, make sure the switch is “ON”.


AC Adapter



- Use the AC adapter only in a wall outlet. Do not plug the AC adapter into a ceiling outlet.

- Always use this product where there is adequate ventilation. To prevent overheating, keep the product away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.
- Never use this product near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Do not connect to more than the recommended number of power supplies.

Soothing Settings

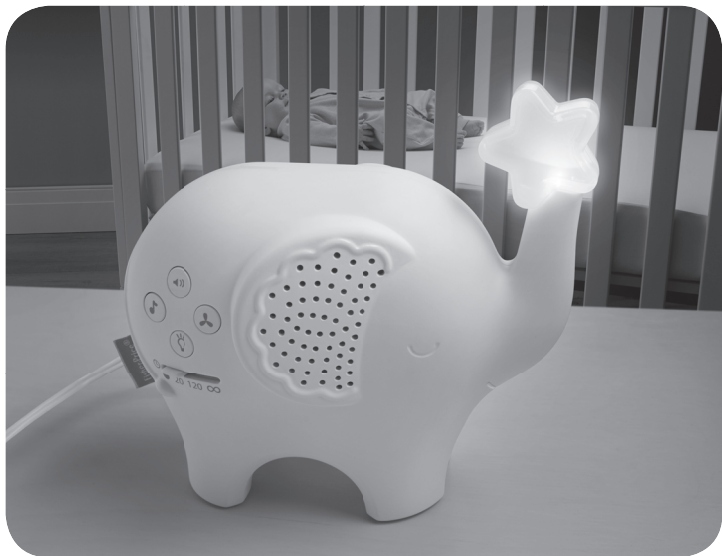

Power/Timer - Slide this switch to turn power ON and select 20 minutes, 120 minutes or all night long ∞.

Sounds - Press to turn on sounds; press again and again to cycle through sound choices: nature, white noise, rain or ocean.

Music and Lullabies - Press to turn on music; press again to change to a different song; press and hold to select a song for continuous play.

Night Light - Press to turn on; press again to turn off.

Volume - Press again and again to cycle through five volume choices or to turn off sound.

Periodically examine this product and AC adapter for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the product or AC adapter is damaged, do not use it.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Consumer Information

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.