

Fisher-Price®

DYW46




1

Lay and Play



2

Tummy-time Fun

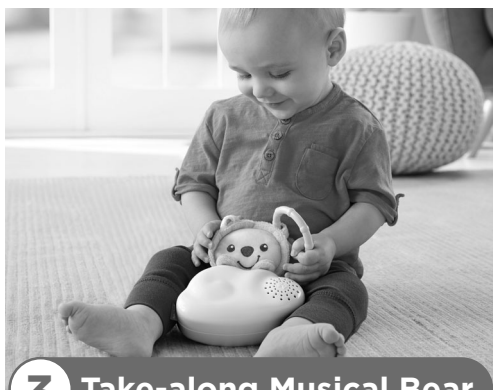

3

Take-along Musical Bear

Keep this instruction sheet for future reference,
as it contains important information.

Adult set up and battery installation are required. No tools are needed for assembly.

Requires two AA (LR6) **alkaline** batteries (not included).

Tool required for battery installation:

Phillips screwdriver (not included).

fisher-price.com

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.
SOUTH AFRICA: Mattel South Africa (PTY) LTD, Office 102 I3,
30 Melrose Boulevard, Johannesburg 2196.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.


NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Installation

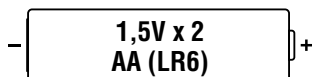

For longer life, use **alkaline** batteries.

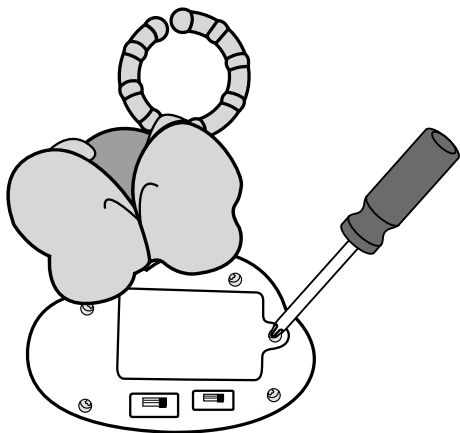

- Locate the battery compartment door on the back of the musical bear.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If the musical bear begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sound from the musical bear becomes faint or stops, it's time for an adult to change the batteries.




Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid **battery leakage**:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


Parts

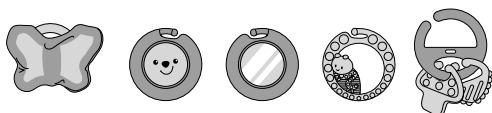

5 Activity Toys




Musical Bear

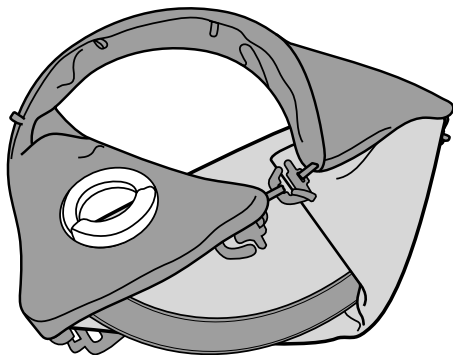

Mat with Arch


Care

The mat is machine washable **when removed** from the arch.

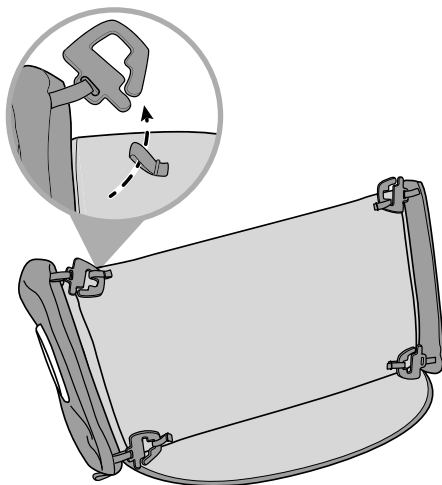


- Turn the gym over so that the underside of the mat is facing you.
- While holding a mat loop, carefully unhook an arch clip. Repeat this process to unhook the remaining arch clips from the mat.
- Machine wash the mat in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch, musical bear and activity toys are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.


Setup

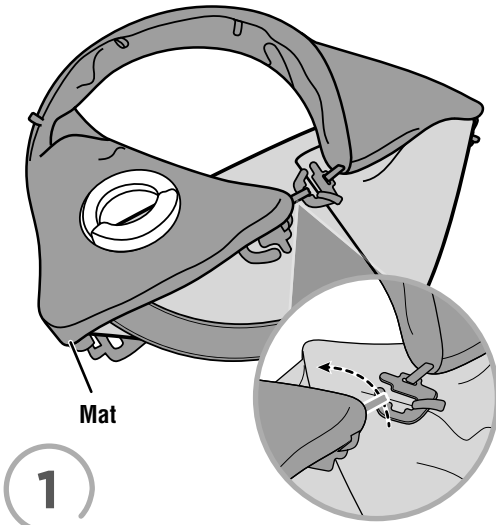

- Pull the mat and arch assembly out from the package.
- While holding the clip on the mat and the loop on the arch, unhook the loop on the arch from the clip on the mat.

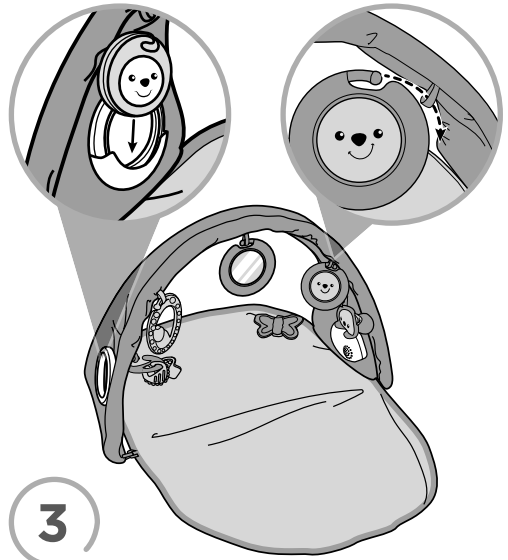


- Fit the links on the toys to the loops around the gym.
- Hint:** Slide any of the disc shaped toys into the peek-a-boo window!

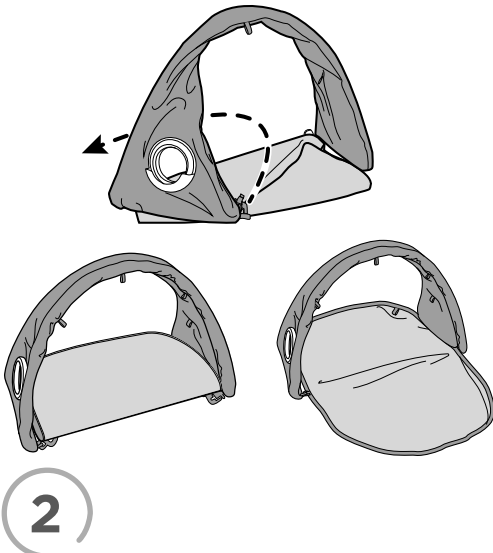

- Grasp the front edge of the arch. Push it back and then through the arch.
- Unfold the mat.

Peek and play fun for your little one!

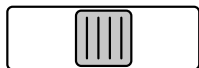

**Power/Volume
Switch**



**Mode
Switch**



WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.

- Slide the power/volume switch on musical bear to ON with low volume , ON with high volume  or OFF .
- Slide the mode switch on musical bear to **short play**  or **long play** .

- In **short play mode** , listen to a short tune or cute sound effect each time baby bats at musical bear.
- In **long play mode** , listen to 20 minutes of continuous music. Music starts when you tap musical bear. When the music stops, tap the bear again for another 20 minutes of music.