

**THOMAS
& FRIENDS™**

**STORYTIME
THOMAS**



Keep these instructions for future reference as they contain important information.
Requires three AA batteries (included). Batteries included are for demonstration purposes only.

INSTALL BATTERIES



- Only adults should install batteries. Tool needed: Phillips screwdriver (not included).
- Loosen the screw in the battery compartment door and remove the door. Remove the worn batteries and properly dispose.
- Install batteries as indicated inside the battery compartment. For longer life, use only **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the product begins to malfunction, check the battery installation. You may need to reset the electronics by sliding the power-volume switch off and then back on. If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the product before being charged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity (+ and -).
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of batteries safely.
 - Do not dispose of this product in a fire.
- The batteries inside may explode or leak.



LET'S PLAY



Power-Volume Switch

Slide the power-volume switch to ON with low volume, ON with high volume or OFF.

If Thomas is left alone for more than 30 seconds, he enters sleep mode. To wake him up, press any button.



Press the red or green buttons or push Thomas along on a flat surface for fun sound effects and phrases.

Whoa! If you lift Thomas off the play surface, songs, sound effects and speaking stops until you place him back down. Or press the red or green button when his wheels are up to start a song. When you place Thomas back on the play surface, the song continues playing.

CHOOSE A MODE



Game time

Let's play a game. When Thomas says, "green signal, go", push Thomas along until he says "red signal, stop"!



Story time

Push Thomas for a story as long as you roll! Press his red or green buttons to make choices when prompted.



Music time

Push Thomas along for a song. If you stop, listen to him hum along.



FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Consult the dealer or an experienced radio/TV technician for help. NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



Thomas the Tank Engine & Friends™



Britt™

CREATED BY BRITT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.

©2020 Gullane (Thomas) Limited.

Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.

©2020 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2020 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.**

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Tel.: (852) 3185-6500.

UNITED STATES

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Consumer Services/Service à la clientèle : 1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.

www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,

Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3,

30 Melrose Boulevard, Johannesburg 2196.



HIT entertainment



GPD83-0970-1102344931-DOM