


fisher-price®





Keep these instructions for future reference,
as they contain important information.

HHW73

 
Battery Replacement

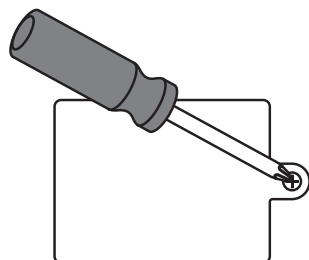

Controller & Tablet

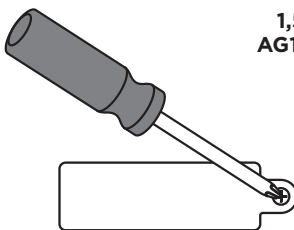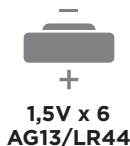  

Remote

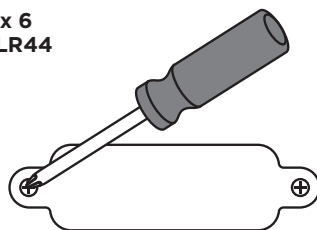 

Watch

Requires six AAA batteries and six AG13/LR44 batteries. Batteries included are for demonstration purposes only in the controller and tablet.

Battery replacement is required. Only adults should replace batteries.

Tool required: Phillips screwdriver (not included).

For longer life, use AAA **alkaline** batteries.

Loosen the screw or screws in each battery compartment door and remove the doors.

Remove the exhausted batteries and properly dispose.

Insert three, new AAA (LR03) **alkaline** batteries into the controller and the tablet compartments. Insert three, new AG13/LR44 batteries into the remote and watch compartments.

Replace the battery compartment doors and tighten the screw or screws. Do not over-tighten.

If any of the toys begin to operate erratically, you may need to reset the electronics. Remove the batteries in remote and watch and reinstall them. Slide the power-volume switch on the controller and tablet off and back on.

When sounds or lights from any of the toys become faint or stop, it's time for an adult to change the batteries.



WARNING: Button cell batteries are hazardous. Button cell batteries can cause serious injuries if swallowed or placed inside any part of the body.

- Keep new and used batteries away from children.
- Dispose of used batteries immediately.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Tune In!




Press the ABC, 123, or Music buttons for colors, phrases, songs or sound effects.



Push the thumbstick

Press the D-pad

..... Press a letter button

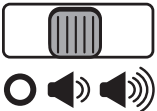

Slide the power volume switch to ON with low volume , ON with high volume  or OFF .



Slide the mode switch to:

123 Learning - Press any button, D-pad or push the thumbstick to hear numbers, letters, colors and shapes identified and fun tunes too!

Play - In this mode, you'll hear more tunes, phrases and fun sounds with each press or push.

Tune In!



 
Press and sing along
to fun songs and
musical ditties!

Press for fun
sound effects
and phrases!




Press any of the
alphabet keys

Press this key in any
mode to listen to musical
ditties and songs!

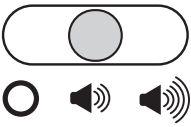

 Slide the power volume switch to ON with low volume ,
ON with high volume  or OFF .

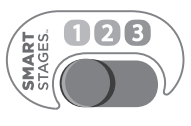

Slide the mode switch to:

- 1 Explore**
Press any of the alphabet keys to hear first words, sound effects, musical ditties along with a glowing light.
- 2 Encourage**
Press the alphabet keys for letters or first words along with blinking lights. Then listen to the question about letters or objects. Press the correct key for the answer!
- 3 Pretend**
Press an alphabet key for sound effects, musical ditties, glowing and blinking lights. Listen to a question for role play fun!

General Information

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



To clean, wipe with a damp cloth. Do not immerse.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

**UNITED STATES**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga,
Ontario L5R 3W2 Consumer Services/Service à la clientèle :
1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard,
Johannesburg 2196.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2021 Mattel.
PRINTED IN CHINA
HHW73-0970-1102467239-DOM

