

fisher-price®



Big Little FEELINGS

 
COLOR INSTRUCTIONS ONLINE



Keep these instructions for future reference as they contain important information.



Battery replacement is required. Only adults should replace batteries. Required tool: Phillips screwdriver (not included).



Requires two AA batteries (included). Batteries included are for demonstration purposes only.

Battery replacement is required. Only adults should replace batteries.



To clean, wipe with a damp cloth. Do not immerse.


The sun toy is machine washable. Wash in cold water on the gentle cycle.

Do not use bleach.

Tumble dry on low heat.

Do not iron.

Do not dry clean.

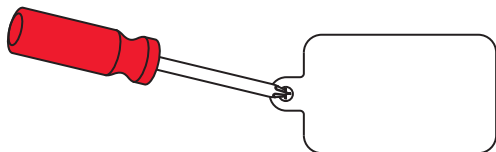

- Loosen the screw in the battery compartment door. Remove the exhausted batteries and properly dispose.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- When sounds become faint or stop, it's time for an adult to change the batteries.
- If this toy begins to operate erratically, you may need to reset the electronics. Remove the batteries and reinstall them.

JFD42



Mattel Europa B.V.,
Gondel 1, 1186 MJ
Amstelveen, Nederland.

UNITED STATES

Fisher-Price, Inc., 636 Girard
Avenue, East Aurora, NY
14052. Consumer Services:
1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2 Consumer
Services/Service à la clientèle : 1-800-432-5437.
www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building,
1 Brunel Way, Slough SL1 1FQ, UK.
www.service.mattel.com/uk.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria
3121 Australia. Consumer Advisory Service
1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331,
Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3,
30 Melrose Boulevard, Johannesburg 2196.

Battery Safety Information

In exceptional circumstances, batteries may leak
fluids that can cause a chemical burn injury or
ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of
different types: alkaline, standard (carbon-zinc)
or rechargeable.
- Insert batteries as indicated inside the battery
compartment (+ and -).
- Remove batteries during long periods of
non-use. Always remove exhausted batteries
from the product. Dispose of batteries safely.
Do not dispose of this product in a fire.
The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent
type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product
before charging.
- If removable, rechargeable batteries are used,
they are only to be charged under
adult supervision.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to
comply with the limits for a Class B digital device,
pursuant to Part 15 of the FCC rules. These limits
are designed to provide reasonable protection
against harmful interference in a residential
installation. This equipment generates uses
and can radiate radio frequency energy and,
if not installed and used in accordance with the
instructions, may cause harmful interference
to radio communications. However, there is no
guarantee that interference will not occur in
a particular installation. If this equipment does
cause harmful interference to radio or television
reception, which can be determined by turning
the equipment off and on, the user is encouraged
to try to correct the interference by one or more
of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment
and receiver.
- Consult the dealer or an experienced radio/TV
technician for help.

NOTE: Changes or modifications not expressly
approved by the manufacturer responsible for
compliance could void the user's authority to
operate the equipment.

This device complies with Part 15 of the FCC
Rules. Operation is subject to the following two
conditions: (1) This device may not cause harmful
interference, and (2) this device must accept any
interference received, including interference that
may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two
conditions: (1) this device may not cause
interference, and (2) this device must accept
any interference, including interference that may
cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée
seulement aux conditions suivantes : (1) il ne doit
pas produire de brouillage et (2) il doit pouvoir
tolérer tout brouillage radioélectrique reçu, même
si ce brouillage est susceptible de compromettre
son fonctionnement.



Protect the environment by not disposing
of this product or any batteries with
household waste. This symbol indicates
that this product shall not be treated
as household waste. Check your local
authority for recycling advice and facilities.



©2025 Mattel.
©2025 KD Creatives, Inc. d/b/a Big Little Feelings. All rights reserved.
PRINTED IN CHINA
JFD42-0970-1103408512-DOM

