

fisher-price®

OPTIONAL LINE OF COPY HERE



Keep this instruction sheet for future reference,
as it contains important information.

Requires three AA batteries (included).
Batteries included are for demonstration
purposes only.

Battery replacement is required. Only adults
should replace batteries.

Required tool for battery replacement:
Phillips screwdriver (not included).


To clean, wipe with a damp cloth.
Do not immerse.

JKD62

Battery Replacement



For longer life,
use **alkaline** batteries.

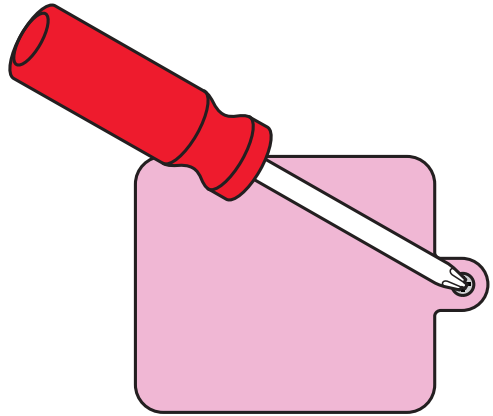

- Slide to turn power ON with low volume , ON with high volume  or OFF .
- If low battery power is detected, a “ding-dong” sound effect will play three times, the lights will flash red, and you will hear the phrase “Replace batteries”. This means it’s time for an adult to replace the batteries.
 - **Note:** Once the low battery alert has occurred, the toy will no longer function properly until you replace the batteries. If you turn the power off and then back on without replacing the batteries, the low battery alert will occur again.
- Loosen the screw in the battery compartment door and remove the door. Remove the exhausted batteries and properly dispose.
- Insert three, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics by sliding the power-volume switch off and then back on.

Hey, there, sweet face!



1 Discover

- Press the ABC button for lights, sounds, phrases, and songs about the alphabet, colors, and shapes.
- Press the Music button for lights, phrases, and familiar instrumental music.
- Put and take the hair dryer for phrases, lights, and hair dryer sounds.
- Open and close the compact for lights, sounds, and phrases about opposites.

2 Encourage

- Press the ABC button for lights, sounds, songs, and phrases about specific letters of the alphabet.
- Press the Music button for lights, phrases, and various genres of instrumental music.
- Put and take the hair dryer for lights, hair dryer sounds, and phrases about opposites.
- Open and close the compact for lights, sounds, and phrases about colors.

3 Imagine

- Press the ABC button to cycle through different light colors.
- Press the Music button for lights, music, and songs about getting ready.
- Put and take the hair dryer for lights and hair dryer sounds.
- Open and close the compact for lights and short instrumental ditties.



Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A.
Consumer Services 1-800-524-8697 and 1-800-432-5437 for
Fisher Price products. Mattel U.K. Limited, The Porter Building,
1 Brunel Way, Slough SL1 1FQ, UK. Mattel Australia Pty. Ltd.,
658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service -
1300 135 312. 16-18 William Pickering Drive, Albany 1331, Auckland.
Mattel Barbie (Shanghai) Trading Co., Ltd. Room 2005, 20th Floor,
899 Ruining Road, Xuhui District, Shanghai, 200232, PRC. Customer Care Line:
400-819-8658. Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street,
Mongkok, Kowloon, Hong Kong, P.R.C. Customer Care Line: (852)2782-0766. CHICKABIDDY CO.,
LTD, F5, No. 186, Sec. 4, Nanjing E. Rd., Taipei 10595, Taiwan region. Customer Care Line:
0800 001 256. Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19,
Tower 3, Avenue 7, No. 8 Jalan Kerinchi, Bangsar South, 59200 Kuala Lumpur, Malaysia.
Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

