

SM - S766C

SMARTPHONE

User Manual

Please read this manual before operating your device
and keep it for future reference.



Legal Notices

Warning: This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual

Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: <http://opensource.samsung.com>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT “AS IS”, AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY

OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

SAFE™ (Samsung For Enterprise)

SAFE™: “SAFE™” (Samsung for Enterprise) is a mark for a Samsung device which has been tested against Samsung’s own internal criteria for interoperability with certain third party security-related solutions for MDM and VPN. The testing includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. During the testing, the device is tested with the security solutions to see if the solutions work with the device as described by the third party security solution providers. The testing, for example, includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. For more information about Samsung’s SAFE™ program, please refer to www.samsung.com/us/safe.

Disclaimer of Warranties: EXCEPT AS OTHERWISE PROVIDED IN THEIR STANDARD END USER LICENSE AND WARRANTY, TO THE FULL EXTENT PERMITTED BY LAW SAMSUNG ELECTRONICS CO., LTD., SAMSUNG TELECOMMUNICATIONS AMERICA, LLC, AND THEIR AFFILIATES (COLLECTIVELY REFERRED TO HEREIN AS THE “SAMSUNG ENTITIES”) EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, INTEROPERABILITY OR NON-INFRINGEMENT, WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES AND APPLICATIONS TESTED WITH SAFE™ DEVICES. IN NO EVENT SHALL THE SAMSUNG ENTITIES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES OR APPLICATIONS TESTED WITH SAFE™ DEVICES. In addition, information technology security protection will be affected by features or functionality associated with, among other things the e-mail platform, master data management, and virtual private network solutions selected by the software provider, solution provider or user. Choice of an e-mail, master data management, and virtual private network solution is at the sole discretion of the software provider,

solution provider or user and any associated effect on information technology security protection is solely the responsibility of the software provider, solution provider or user. For complete statement of limited warranty, please refer to www.samsung.com/us/safe, available on the web and where Samsung smartphones and mobile devices are sold. [091714]

Samsung Telecommunications America (STA), LLC

Headquarters:

1301 E. Lookout Drive
Richardson, TX 75082

1-800-SAMSUNG (726-7864)
1-888-987-HELP (4357)

Internet Address: www.samsung.com

©2014 Samsung Telecommunications America, LLC.
Samsung, Galaxy, Galaxy Note, S Pen, Multi window,
and S Health are registered trademarks of
Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:
www.samsung.com/us/support

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Nuance[®], VSuite[™], T9[®] Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

ACCESS[®] and NetFront[™] are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth[®] word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Hangouts, Picasa, Play Newsstand, YouTube, and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Online Legal Information

The online version of the Health/Safety and Warranty guide for your device can be found at:

English

www.samsung.com/us/Legal/Phone-HSGuide

Spanish

www.samsung.com/us/Legal/Phone-HSGuide-SP

The online version of the **End User Licensing Agreement** for your device can be found online at:
www.samsung.com/us/Legal/SamsungLegal-EULA1.

Table of Contents

Getting Started	1
Front View	2
Back View	4
Assemble Your Device	6
Set Up Your Device.....	13
Set Up Accounts	15
 Know Your Device	17
Home Screen	18
Status Bar	25
Navigation and Motions	29
Notification Panel	31
Entering Text.....	34
 Calling	37
Making and Answering Calls	38
 Applications	48
Apps Screen	49
Google Applications	55
Other Applications	60
Calculator.....	61
Calendar	63

Camera and Video.....	65
Clock	71
Contacts.....	74
Email.....	85
Gallery	88
Internet	93
Memo	98
Messages	100
Music Player.....	109
My Files.....	111
Video	113
Voice Recorder.....	115

Settings.....	117
Wi-Fi and Wi-Fi Direct	119
Bluetooth.....	126
Data Usage	131
Airplane Mode	133
Mobile Networks.....	134
Virtual Private Networks (VPN)	135
Lock Screen	137
Display Settings.....	140
Sound Settings	145
Home Screen Mode.....	151
Call Settings.....	152
Blocking Mode.....	154
Hands-Free Mode	156
Power Saving	157

Accessibility	159
Language and Input Settings.....	163
Motions.....	168
Accounts	169
Backup and Reset	173
Location Services.....	175
Security	177
Application Manager.....	181
Battery	186
Storage.....	187
Date and Time Settings.....	192
About Your Device	193

Getting Started

 
Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

Front View



- **Back key:** Tap to return to the previous screen, or to close a dialog box, menu, or keyboard.
- **Earpiece:** Listen to a call.
- **Front camera:** Take self-portraits and record videos of yourself.
- **Headset jack:** Connect an optional headset (not included).
- **Home key:** Tap to return to the Home screen.
- **Menu key:** Tap to display a menu of options.
- **Power/Lock key:** Press and hold to turn the device on or off. Press to lock or wake up the screen. Press and hold to turn the device off or restart it, or for quick access to Airplane Mode, Emergency Mode, and to Mute, Vibrate, and Sound modes.
- **Proximity sensor:** Detects the presence of objects near the device.
- **Volume:** Press to adjust the volume of your device's sounds and audio.

Back View

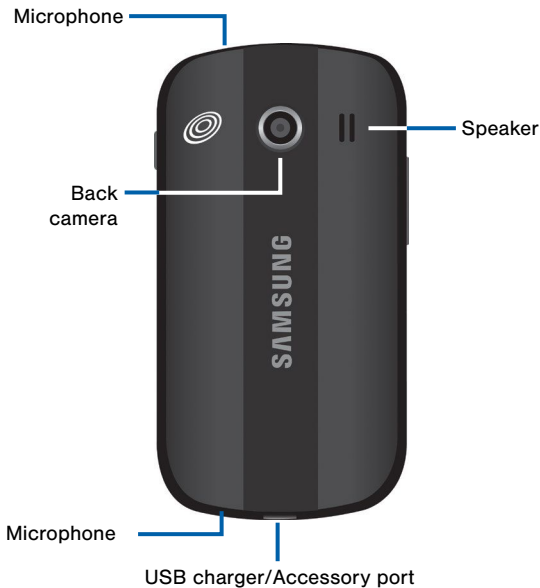


- **Back camera:** Take pictures and record videos.
- **Microphone:** Records audio and detects voice commands.
- **Speaker:** Plays music and other sounds.
- **USB charger/Accessory port:** Connect the Charger/USB cable (included), and other optional accessories (not included).

Assemble Your Device

This section helps you to assemble your device.

Remove the Back Cover

 1. Remove the back cover using the slot on the side of your device.
2. Lift the cover up and to the bottom of the device.

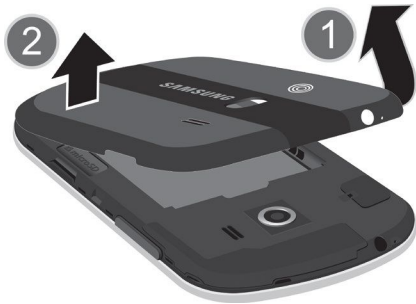

Warning: Do not bend or twist the back cover excessively. Doing so may damage the cover.

Install a Memory Card

You can install an optional microSD or microSDHC memory card (not included) to expand available memory space.

Note: A memory card can be installed at any time; it is not necessary to install it prior to using the device.

For more information on installing a memory card, see [“Install a Memory Card” on page 188.](#)

 
Install the Battery

1. Insert the battery into the opening on the back of the device, making sure the connectors align.
2. Gently press down to secure the battery.



Replace the Back Cover

1. Place the back cover onto the back of the device and press down.
2. Press along the edge of the back cover until you have a secure seal.

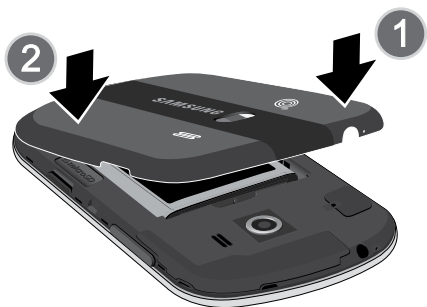

Charge the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (charging head and USB cable) is included with the device for charging the battery from any standard outlet.

 
The battery comes partially charged. A fully discharged battery requires up to four hours of charge time. You can use the device while charging.

Caution: Use only Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.



To charge the battery:

1. Insert the USB cable into the port.
2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.

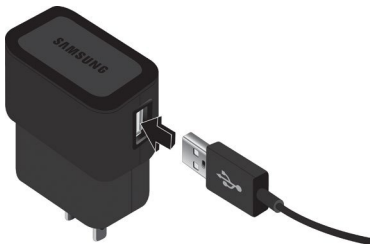

3. When charging is complete, unplug the charging head from the outlet and remove the USB cable from the device.

Caution: Failure to unplug the wall charger before you remove the battery, can cause damage to the device.

When to Charge the Battery

When the battery is weak and only a few minutes of operation remain, the battery icon () blinks and the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the device automatically turns off.

- For a quick check of your battery level, view the battery charge indicator located in the upper-right corner of your device's display. A solid color () indicates a full charge.

You can also choose to display a percentage value. Viewing a percentage value can provide a better idea of the remaining charge on the battery. For more information, see [“Battery” on page 186](#).

Set Up Your Device

Turn Your Device On and Off

Turning the Device On

- ▶ Press and hold the **Power/Lock** key until the device vibrates and starts up.

Turning the Device Off

1. Press and hold the **Power/Lock** key until the Device options menu displays.
2. Tap **Power off**.

Welcome Screen

The first time you turn your device on, the Welcome Screen displays. It will guide you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi network, set up accounts, choose location services, learn about your device's features, and more.

Secure Your Device

Use your device's screen lock features to secure your device.

Lock the Device

By default, the device locks automatically when the screen times out.

- To lock the device, press the **Power/Lock** key.

Unlock the Device

The default Screen lock on your device is Swipe.

- To unlock your device, press the **Power/Lock** key or **Home** key, and then touch and drag your finger across the screen.

Set Up a Secure Screen Lock

The default Screen lock is Swipe, which offers no security. To choose a more secure screen lock, see ["Set a Screen Lock" on page 137.](#)

Set Up Accounts

Google Account

Your new device uses your Google Account to fully utilize its Android features, including Gmail, Google Hangouts, and the Google Play Store.

When you turn on your device for the first time, set up your existing Google Account, or create a new Google Account.

– or –

To create a new Google Account or set up your Google Account on your device at any time, use Accounts settings. For more information, see [“Accounts” on page 169](#).

- From a Home screen, tap  **Apps** >  **Settings** > **Accounts** tab > **Add account** > **Google**.

Samsung Account

Create a Samsung account, for access to Samsung content and apps on your device.

When you turn on your device for the first time, set up your existing Samsung account, or create a new Samsung account.

– or –

To create a new Samsung account or set up your Samsung account on your device at any time, use Accounts settings. For more information, see [“Accounts” on page 169](#).

 
- ▶ From a Home screen, tap  **Apps** >  **Settings** > **Accounts** tab > **Add account** > **Samsung account**.

Know Your Device

Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.

Warning: Please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Home Screen

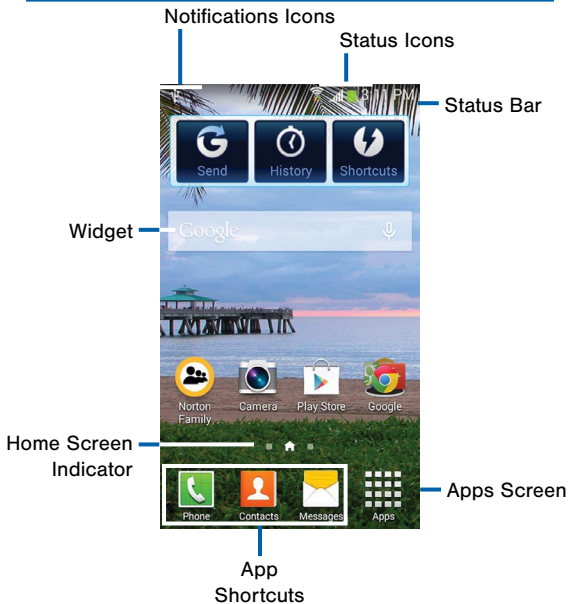

- **Apps Screen:** Allows quick access to all of your applications.
- **App Shortcuts:** Shortcuts to your favorite applications.
- **Home Screen Indicator:** Indicates which Home screen is presently displayed.
- **Notification Icons:** Display new messages and emails, notifications, available software updates, and so on.
- **Status Bar:** Displays device status icons (right) and notification icons (left).
- **Status Icons:** Display information about the device, such as the network signal strength, battery level, the time, and so on.
- **Widgets:** Self-contained applications that run on the Home screen (not shortcuts).

The Home screen is the starting point for using your device.

Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.

Manage Home Screens

Your device comes with multiple Home screens to hold apps and widgets. You can rearrange the Home screens in a different order.

1. From a Home screen, pinch the screen.
2. Use these options to manage screens:
 - **Add a screen:** Scroll to the end of the screens, and then tap  **Add**.
 - **Remove a screen:** Touch and hold on a screen, and then drag it to  **Remove**.
 - **Set a screen as the main Home screen:** Tap  **Main Home screen** at the top of a screen. This screen displays when you press the Home Key.
 - **Change the order of screens:** Touch and hold on a screen, and then drag to a new position.

App Shortcuts

You can use app shortcuts to launch an app from any Home screen.

Add a Shortcut to a Home Screen

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, drag it to a Home screen, and then release it.

Remove a Shortcut

1. Touch and hold an app shortcut to release it.
2. Drag the app shortcut to  **Remove** and release it.

Note: Removing a shortcut does not delete the app, it just removes the shortcut from the Home screen.

Widgets

Widgets are self-contained apps that run on a Home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

Add a Widget to a Home Screen

1. Touch and hold an empty space on the screen, and then tap **Apps and widgets > Widgets**.
2. Touch and hold a widget, drag it to a Home screen, and then release it.

Remove a Widget

1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to  **Remove** and release it.

Note: Removing a widget does not delete the widget, it just removes the widget from the Home screen.

Folders

Place folders on a Home screen to organize items.

Add a Folder to a Home Screen

1. From a Home screen, touch and hold an app shortcut.
2. Drag the shortcut onto  **Create folder** and release.
3. Enter a folder name, and tap **OK**.

Using Folders

1. Tap a folder to open it and access the shortcuts inside.
2. To add shortcuts to a folder, touch and hold the shortcut, and then drag it onto the folder and release.
3. To delete a folder, touch and hold the folder until it detaches, and then drag it to  **Remove** and release.

Change the Wallpaper

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. Touch and hold an empty space on the screen.
2. Tap **Set wallpaper**, and then choose **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Choose a location:
 - **Gallery**: Chose images from the Gallery app.
 - **Live wallpapers**: Choose wallpapers that move.
 - **Wallpapers**: Choose from preloaded images.
 - **Photos**: Choose from your Google Photos account. (Home screen only.)
4. Tap a wallpaper to see a sample, and then tap **Set wallpaper**.

Status Bar

The Status Bar at the top of the Home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.

Status Icons



Battery is fully charged.



Battery is low. The yellow area turns red as the charge level becomes critical.



Battery is charging.



Vibrate mode is enabled.



Mute mode is enabled.



The device is connected to a 4G LTE wireless network.



Signal strength.



Wi-Fi is active.



No wireless network is available.

Notification Icons



Missed call.



Call in progress.



Call is on hold.



Call is using speakerphone.



New email has arrived.



New Gmail has arrived.



New voicemail message has been received.



New text or multimedia message has arrived.



Download of a file or app is in progress.



File is being uploaded or sent.

Notification Icons



Location service (GPS) is active.



App updates are available from the Google Play Store.



App updates are complete.



Keyboard is in use.



Connected to a computer using a USB cable.

Navigation and Motions

Touchscreen Navigation

Tap

Lightly tap items to select or launch them.

- Tap the on screen keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app icon to launch the application.

Touch and Hold

Activate onscreen items by a touch and hold gesture.

- Touch and hold a widget on the Home screen to move it.
- Touch and hold a field to display a pop-up menu of options.

Swipe or Slide

To swipe, lightly drag your finger vertically or horizontally across the screen.

- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screens or menu options.

Drag

To drag, touch and hold on an item, and then move it to a new location.

 
- Drag an app shortcut to add it to a Home screen.
- Drag a widget to a place it in a new location on a Home screen.

Pinch and Spread

Pinch the screen using your thumb and forefinger or spread by moving your fingers apart.

- Pinch the screen to zoom in while viewing a picture or a web page.
- Spread the screen to zoom out while taking a picture.

Notification Panel

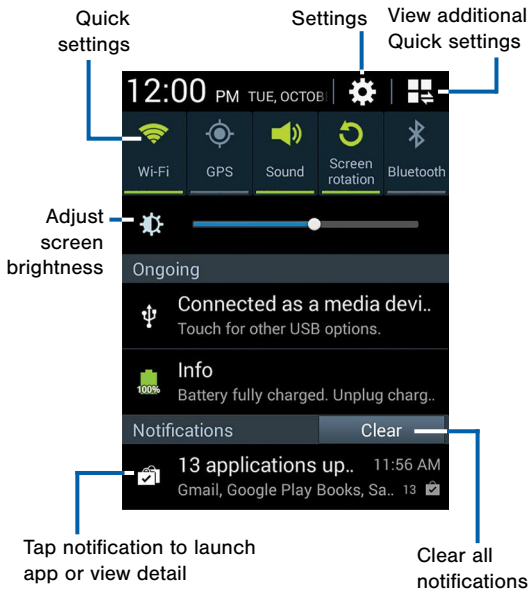

Notification icons on the Status Bar display calendar events, device status, and more. For details, open the Notification Panel.

View the Notification Panel

1. Swipe down on the Status Bar to display the Notification Panel.
2. Scroll down the list to see notification details.
 - Tap an item to open it.
 - To clear a single notification, drag the notification left or right. Tap **Clear** to clear all notifications.
3. To close the Notification Panel, swipe upward from the bottom of the screen or tap the  **Back** key.

Quick Settings

In addition to notifications, the Notification Panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

To view additional Quick settings:

► Swipe left or right across the visible icons.

– or –

Tap  **View all.**

 
Notification Panel Settings

To customize the Notification Panel, see [“Notification Panel” on page 141](#).

Entering Text

Using the Samsung Keyboard

Type your text input using a QWERTY keyboard.

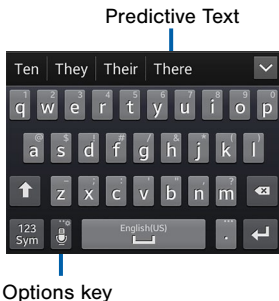

Predictive Text

Predictive text suggest words matching your text entries, and, optionally, completes common words automatically. Predictive text can learn your personal writing style from your contacts, messages, email, and social networking sites—improving its accuracy of predicting your text entries.

Special Keys

123
Sym

Tap to insert numbers and symbols.

Touch and hold the **Options** key to:



Use Google Voice Typing.



Access the clipboard.



 
Access keyboard settings.

Configure the Samsung Keyboard

To customize the Samsung Keyboard, see [“Samsung Keyboard Settings” on page 164.](#)

Using Google Voice Typing

Instead of typing, speak your text input.

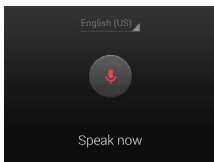

To enable Google Voice Typing:

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab > **Language and input**.
2. Tap the check box next to **Google voice typing** to enable this feature.
3. On the Samsung Keyboard, tap  **Google Voice Typing**. You may need to touch and hold the **Options** key (left of the **Space** key) to find it.
4. Speak your text.

Configure Google Voice Typing

To customize Google Voice Typing, see ["Google Voice Typing Settings" on page 165.](#)

Calling

Make telephone calls using a variety of calling features and services.

Making and Answering Calls

*Learn how to make or answer a call.
Explore features and functionality
associated with making or answering
a call.*

Make a Call

1. From a Home screen, tap  **Phone**.
2. Enter a number and tap  **Dial**.

Quickly Dial a Number from Your Contact List

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. While viewing your contact list, swipe your finger across a contact to the right to call the contact.

Dial a Recent Number

All incoming, outgoing, and missed calls are recorded in the Call log. If the number or caller is listed in your contacts list, the associated name is also displayed.

1. From a Home screen, tap  **Phone**.
2. Tap the **Recent** tab. A list of recent calls is displayed.
3. Tap a contact, and then tap  **Call**.

End a Call

- When you are ready to end your call, tap  **End call**.

Answer a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in the contacts list.

At the incoming call screen:

- Touch and drag  **Answer** in any direction to answer the call.
- Touch and drag  **Reject** in any direction to reject the call and send it to your voicemail.

Multitasking While on a Call

If you exit the call screen and return to a Home screen, your active call is indicated by an icon on the Status bar.

This lets you continue with your current call and do something else, such as access the contacts list, view a recent email, locate a picture, and so on.

To return to the call screen:

- ▶ Swipe the Status bar downward to reveal the Notification Panel, and then tap  **Call screen**.

To end a call from any application:

- ▶ Swipe the Status bar downward to reveal the Notification Panel, and then tap **End**.

Options During a Call

Your phone provides a number of functions that you can use during a call.

Adjusting the Call Volume

- ▶ Press the **Volume Key** to increase or decrease the volume.

– or –

Quickly add more volume to the incoming audio by tapping  **Extra volume.**

Noise Reduction

Activating Noise reduction can improve the quality of your conversation by reducing ambient noise.

- ▶ Tap  **Noise Reduction** to enable the feature.

Listen with the Speaker or Bluetooth Headset

Listen to the call using the speaker or through a Bluetooth headset (not included).

- ▶ Tap **Speaker** to hear the caller using the speaker.

– or –

Tap **Headset** to use a Bluetooth headset (not included).

Personalize the Call Sound Setting

Adjust the sound by using an audio equalizer.

- ▶ From the currently active call, tap  **Personalize call sound**.

Place a New Call While on a Call

If your service plan supports this feature, you can make another call while a call is in progress.

1. From the active call, tap **Add call** to dial the second call. The first call is displayed as a thumbnail.
2. Dial the new number and tap  **Dial**.
 - Tap **Swap** to switch between the two calls.
 - Tap **Merge** to hear both callers at once (multi conferencing).

Call Waiting

If your service plan supports this feature, you can answer an incoming call while you have a call in progress. You are notified of an incoming call by a call waiting tone.

To answer a new call while you have a call in progress:

1. Slide  **Answer** in any direction to answer the new call. This places the current call on hold.
2. Tap the previous **On hold number** entry and select **Swap** to switch between the two calls. This places the new caller on hold and activates the previous call.

Call Log

The numbers of the calls you have dialed, received, or missed are stored in the Call log.

1. From a Home screen, tap  **Phone**.
2. Tap the **Recent** tab. A list of recent calls is displayed. If the caller is in your contacts list, the caller's name is displayed.

Save a Recent Call to Your Contacts List

1. From a Home screen, tap  **Phone > Recent** tab.
2. Tap the call that contains the information that you want to save to your contacts list.
3. Tap **Create contact**.
– or –

If you want to replace the number for an existing contact, tap **Update existing**.

Delete a Call from the Call Log

1. From a Home screen, tap  **Phone > Recent** tab.
2. Touch and hold the call you want to delete from the Call log.
3. Tap **Delete**.

Add a Call to the Reject List

By adding a caller to your Reject list, future calls from this number will be sent directly to your voicemail.

1. From a Home screen, tap  **Phone > Recent** tab.
2. Touch and hold the caller you want to add to the Reject list.
3. Tap **Add to reject list**.

Make a Call Using Speed Dial

You can assign a shortcut number to a contact for speed dialing their default number.

To make a call using Speed Dial:

1. From a Home screen, tap  **Phone > Keypad**.
2. Touch and hold the speed dial number.

If the speed dial number is more than 1 digit long, enter the first digits, then hold the last digit.

Create a Speed Dial

1. From a Home screen, tap  **Apps >  Contacts**.
2. Tap  **Menu > Speed dial setting**. The Speed dial screen displays showing the numbers 1 through 100. Number 1 is reserved for voicemail.
3. Tap an unused number. A list of contacts displays.
4. Tap a contact to assign to the number. The selected contact displays in the speed dial number box.

To remove a Speed Dial number assignment:

- Tap  **Menu > Remove**.

Make an Emergency Call

The Emergency calling mode makes dialing an emergency number a one-tap process.

Note: This mode can drain your battery power more rapidly than normal calling mode.

Make an Emergency Call with a SIM Card

1. From a Home screen, tap  **Phone**.
2. Enter the emergency number (example: 911), then tap  **Dial**.

Call Settings

To access the Call settings menu:

- ▶ From a Home screen, tap  **Phone** >  **Menu** > **Call settings**.

– or –

From a Home screen, tap  **Apps** >  **Settings** > **My device** tab > **Call**.

For more information, see [“Call Settings” on page 152](#).

Applications

The Apps screen displays all applications installed on your device, both preloaded apps and apps you download and install yourself.

Learn how to change the way apps appear, organize apps into folders, and uninstall or disable apps.

Apps Screen

The Apps screen shows all preloaded apps and apps that you downloaded. You can uninstall, disable, or hide apps from view.

Shortcuts to apps can be placed on any of the Home screens. For more information, see [“Add a Shortcut to a Home Screen” on page 21.](#)

Accessing Applications

1. From a Home screen, tap  **Apps**.
2. Tap an application's icon to launch it.
3. To return to the main Home screen, press the **Home** key.

Download and Install New Apps

Find new apps to download and install on your device:

-  **Play Store:** Download new apps from the Google Play Store. Visit play.google.com/store/apps to learn more.

Uninstall or Disable Apps

You can uninstall or disable apps you download and install.

- Preloaded apps cannot be uninstalled.
 - Apps that are disabled are turned off and hidden from view.
1. From a Home screen, tap  **Apps**.
 2. Tap  **Menu** > **Uninstall**. Apps that can be uninstalled show  **Delete** on their icon.
 3. Tap  **Delete** and follow the prompts to either uninstall or disable the app.

Organize Your Apps

The Apps icons can be organized in folders and listed alphabetically or in your own custom order.

Change the Order Apps Are Listed

1. From a Home screen, tap  **Apps**.
2. Tap  **Menu** > **View type**.
3. Tap an option:
 - **Customizable grid:** Allows you to touch and hold on apps to move them from screen to screen.
 - **Alphabetical grid:** Apps are arranged in a grid, in A-Z order.
 - **Alphabetical list:** Apps are arranged in a list from A-Z.

Use Folders to Organize Apps

1. From a Home screen, tap  **Apps**.
2. Tap  **Menu** > **Create folder**.
3. Enter a folder name, and tap **OK**.
4. Touch a folder to view its apps.
 - Touch an app to launch it.

Hiding and Showing Apps

Hide Apps from View

You can hide (rather than uninstall or disable) any apps you do not want to see on the Apps screen.

1. From a Home screen, tap  **Apps**.
2. Tap  **Menu** > **Hide applications**.
3. Tap apps to hide, and then tap **Done**.

Show Hidden Apps

You can unhide apps you have hidden and put them back on the Apps screen.

1. From a Home screen, tap  **Apps**.
2. Tap  **Menu** key > **Show hidden applications**.
3. Tap apps to unhide, and then tap **Done**.

Apps Screen Options

1. From a Home screen, tap  **Apps**.
2. Tap  **Menu** for these options:
 - **Play Store:** This directs you to the Google Play Store, where you can download apps.
 - **Edit:** Touch and hold an app icon then drag it to:
 -  **Create folder** to create a new folder.
 -  **Create page** to add a new page to the Apps screen.
 -  **App info** to view information about this app.
 -  **Uninstall** to uninstall a downloaded app.
 - **Create folder:** Create a new folder to hold the app icon.
 - **View type:** Configure the Apps screen.

- **Uninstall:** Uninstall an app that you downloaded to your device. Touch  **Delete** to remove or disable the selected app.
- **Downloaded applications:** View downloaded apps.
- **Share apps:** Share downloaded applications.
- **Hide applications:** Hide apps from the Apps screen.
- **Show hidden applications:** Display hidden apps.

Google Applications

Enjoy these applications from Google.

Note: Certain applications require a Google account. Visit google.com to learn more.



Chrome

Use Google Chrome to browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your mobile device.



Gmail

Send and receive email with Gmail, Google's web-based email service.



Google

Search not only the Internet, but also the apps and contents of your device.

Google Now

Google Now works in the background to collect information you regularly look up and organize it into convenient cards that appear when you need them.

► Press and hold the **Home** key.

Note: When Google Now is enabled, you can also access it by touching .



Google Settings

Quickly and easily change Google app settings to suit your preferences.

Note: You must be signed in to the application you want to configure. For example, sign in to Google+ to configure Google+ settings.



Google+

Stay connected and share with Google+. Chat with friends and family, post photos, and see what others are sharing.



Hangouts

Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.



Maps

Use Google Maps to find your current location, get directions, and other location-based information.

Note: You must enable location services to use Maps. Please see [“Location Services” on page 175.](#)



Photos

This application automatically backs up your photos and videos to your Google+ account.



Play Books

With Google Play Books, you can find millions of free e-books and hundreds of thousands more to buy in the eBookstore.



Play Games

Discover hundreds of games for download and purchase through the Google Play Store.



Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly, or download them for viewing when you are not connected to the Internet. You can also view videos saved on your device.



Play Music

With Google Play Music, you can play music and audio files on your device.



Play Newsstand

Subscribe to your favorite magazines to read on your device at your leisure.



Play Store

Find new apps, movies and TV shows, music, books, magazines, and games in Google Play Store.



Voice Search

Use voice commands to search the web with Google.



YouTube

View and upload YouTube videos right from your device

Other Applications



Downloads

Use this app to manage your file downloads.



Glympse

Share your location in real time with your friends.

Visit www.glympse.com to learn more.



Help

View tips and guidelines for using your device.



Norton Family

Norton Family allows parents to track which websites kids visit, and set restrictions to block unsuitable content.

Visit www.onlinefamily.norton.com to learn more.

Calculator

The Calculator provides basic and advanced arithmetic functions.

Basic Operation

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. To view the result, tap the = (**Equals**) key.

Additional Functions

To clear the results:

- ▶ Tap  **Clear**.

To clear the calculator history:

- ▶ Tap  **Menu** > **Clear history**.

To copy all or part of the calculation to the clipboard:

- ▶ Touch and hold an entry in the display field.

Scientific Calculator

Turn the device landscape to use advanced arithmetic functions, such as *sin*, *cos*, and *tan*.

Calendar

Manage your events and tasks.

Create an Event or Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Add** and use one of the following methods:
 - **Add event:** Enter an event with an optional repeat setting.
 - **Add task:** Enter a task with an optional priority setting.
3. Enter details for the event or task, and then tap **Save**.

Delete an Event or Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task. Tap  **Menu** > **Delete**.
– or –

To delete multiple events or tasks, Tap  **Menu** > **Delete**, select events or tasks, and then tap **Delete**.

Sharing Events

 
1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task.
3. Tap  **Menu** > **Share via**, select a sharing method, and follow the prompts.

Calendar Settings

These settings allow you to modify settings associated with using the Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the prompts.

Camera and Video

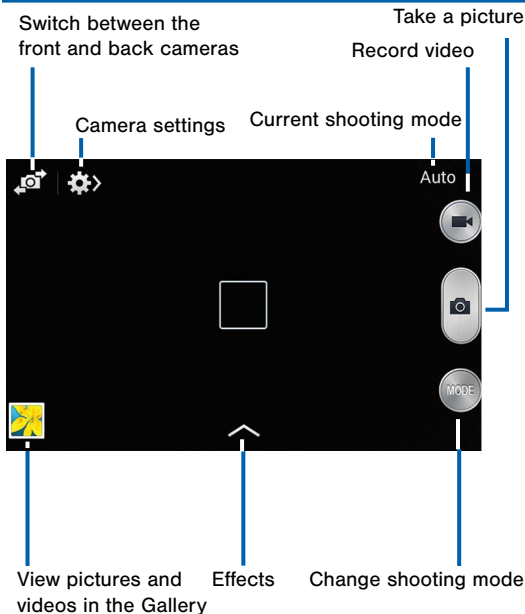

Taking Pictures

Take pictures with your device's front or back camera.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Using the display screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your picture, use the onscreen options or these gestures:
 - Touch the screen with two fingers and pinch or spread them on the screen to zoom in and out.
 - Tap the screen to focus on the area you touched.
3. Tap  to take the picture.

Note: You can also press the **Volume** key up or down to take a picture. This is the default action of the Volume key. You can also set the Volume key to act as the video record key or as a zoom key.

Shooting Mode

Several visual effects are available. Some modes are not available when taking self-portraits.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **MODE**, and then scroll up or down the screen at the right side of the screen.
 - **Auto**: Allow the camera to evaluate the surroundings and determine the ideal mode for the picture.
 - **Beauty face**: Take a picture with lightened faces for gentler images.
 - **Sound & shot**: Record up to 9 seconds of sound to accompany your picture.
 - **Panorama**: Create a linear image by taking pictures in either a horizontal or vertical direction.
 - **Sports**: Take pictures of fast movement.
 - **Night**: Take brighter, clearer pictures in low light without flash.

Camera Settings

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **Settings** to view the settings shortcuts for the Camera.
 - **Focus mode:** Choose a focus mode.
 - **Timer:** Set a timer to take your photos.
 - **Exposure Value:** Adjust the exposure value.
 - **Recording mode:** Select Normal, or Limit for MMS mode.
 - **Share:** Choose from Off, Share shot, and Buddy photo share.
 - Tap  **Settings** to configure the settings for the Camera. Available options vary depending on the camera/recording mode used.
 - **Photo size:** Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
 - **Focus mode:** Choose between Auto focus, and Macro focus.

- **Metering modes:** Select a metering method. This determines how light values are calculated. Center-weighted measures background light in the center of the scene. Spot measures the light value at a specific location. Matrix averages the entire scene.
- **ISO:** Select an ISO value. This controls camera light sensitivity.
- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Location tag:** Attach a GPS location tag to the picture.
- **Volume key:** Use the Volume key as the camera key, the record key, or as a zoom key.
- **Timer:** Take time-delayed pictures or videos.
- **White balance:** Select an appropriate white balance, so images have a true-to-life color range.
- **Exposure value:** Change the exposure value. This determines how much light the camera's sensor receives. For low light situations, use a higher exposure.

- **Guidelines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Contextual filename:** Available only when Location tags are turned on.
- **Save as flipped:** Save the self-portrait or self-recording as a reversed (or ‘mirrored’) image.
- **Storage:** Select the memory location for storage.
- **Reset:** Reset the camera settings.

Effects

- ▶ Tap  **Effects** and choose an effect to add to your image.

Clock

The Clock app offers features for keeping track of time and setting alarms.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap a tab to use a feature:
 - **Alarm:** This feature allows you to set an alarm to ring at a specific time.
 - **World clock:** View the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.
 - **Stopwatch:** You can use this option to measure intervals of time.
 - **Timer:** You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

- **Desk clock:** Use the Desk clock to display the time, day, and date.

Create an Alarm

Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap  **Create alarm** to configure:
 - **Time:** Choose a time for the alarm.
 - **Days:** Choose the days to use this alarm.
 - **Repeat weekly:** When enabled, the alarm repeats every week.
 - **Alarm type:** Choose whether the alarm will use sound, vibration, or vibration and sound to alert you.
 - **Alarm tone:** If you have chosen an alarm type that includes sound, choose a sound to play for the alarm.
 - **Volume:** If you have chosen an alarm type that includes sound, drag the slider to set the volume of the alarm.

- **Location alarm:** The alarm will only be activated when you are at a specified location.
- **Snooze:** Allow snoozing, and set interval and repeat values for the alarm while snoozing.
- **Smart alarm:** When on, the alarm will start playing a tone at a low volume at an interval before the alarm time, and slowly increase in volume. Choose a time interval and a tone to use with smart alarm. Available when you have chosen an alarm type that includes sound.
- **Name:** Enter a name for the alarm.

3. Tap **Save**.

Delete an Alarm

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Touch and hold an alarm, and then tap **Delete**.

Contacts

Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts, including Google, Email, Facebook, and your Samsung account.

For more information on connecting with and managing your accounts through your device, see [“Accounts” on page 169](#).

Contacts

Access your list of contacts by using the Contacts app, which is a shortcut to the Contacts tab. To access your Contacts list:

- From a Home screen, tap  **Apps** >  **Contacts**.

Find a Contact

You can search for a contact, or scroll the list to find one by name.

1. From a Home screen, tap  **Apps >  Contacts.**
2. Tap the **Search** field, and then enter characters to find contacts that match.

– or –

Tap a letter on the side of the list to jump directly to that letter in the alphabetical list. You can also press and slide across the alphabetical list to select a letter with better precision.

Add a Contact

Use the following procedure to add a new contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Add**, and then tap contact fields to enter information.
 - Choose a storage account for the contact. You can store the contact on the device, or sync it with an account.
 - Tap  **Photo** to assign a picture to the new contact.
 - Enter a name, phone number, email address, and assign the contact to a group. Tap **Add another field** to add additional contact information.
 - Tap  **Add** to enter additional entries.
 - Tap  **Delete** to remove an entry.
 - Tap  **Label** to choose a label for the field.
3. Tap **Save**.

Edit a Contact

When editing a contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.

Share a Name Card

When you share a name card, the contact's information is sent as a vCard file (.vcf). You can share a vCard via Bluetooth or Wi-Fi Direct, attach it to a message, or save it to a storage location.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Menu** > **Share namecard via**.
3. Choose a sharing method and follow the prompts.

Link Contacts

When you have contacts from various sources (Gmail, Facebook, and so on), you may have multiple similar entries for a single contact. Contacts lets you link multiple entries into a single contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link contact**.
3. Tap **Link another contact**, and then select contact(s) to link to the original contact.

Unlink Contacts

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link contact**.
3. Tap  **Remove** beside contacts to unlink them from the main contact.

Delete Contacts

You can delete a single contact, or choose multiple contacts to delete.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Touch and hold a contact.
3. Tap **Delete**.

Favorites

When you mark contacts as favorites, they are easily accessible from other apps. Favorites display together on the Favorites tab in Contacts.

Mark Contacts as Favorites

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Favorite** (the star turns gold .

Remove Contacts from Favorites

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab, and then touch and hold a contact.
3. Tap **Remove from Favorites**.

Create a Shortcut to a Favorite

You can create a shortcut to a favorite on the home screen, to access their information directly from the home screen.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab, and then touch and hold a contact.
3. Tap **Add shortcut to home**. The new shortcut displays in an empty area of the home screen.

Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or a team. Groups make it easy to find contacts, and you can send messages to the members of a group.

Create a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups** tab > the  **Menu** > **Create**.
3. Tap fields to enter information about the group:
 - Tap **Create group in <location>** to choose where to save the group. You can save it to a specific account, to the device memory, or to all accounts.
 - Tap **Group name** to enter a name for the new group.
4. Tap **Add member** and select contact(s) to add to the new group, and then tap **Done**.
5. Tap **Save**.

Rename a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups** tab, and then tap a group.
3. Tap  **Menu** > **Edit group** and enter a new name.
4. Tap **Save**.

Add Contacts to a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups** tab, and then tap a group.
3. Tap  **Add**, and then tap the contact(s) you want to add.
4. Tap **Done**.

Send an Email to a Group

You can send an email to members of a group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups** tab, and then tap a group.
3. Tap  **Menu** > **Send email**.
4. Tap contacts to select them, or tap **Select all**, and then tap **Done**. (You will only see group members that have email addresses in their contact records.)
5. Choose an account and follow the prompts.

Delete a Group

Preset groups, such as Family, cannot be deleted.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups** tab.
3. Tap  **Menu** > **Delete groups**.
4. Select groups to delete and tap **Delete**.

Contact Settings

These settings allow you to modify settings associated with using the Contacts app.

1. From a Home screen, tap  **Apps** >  **Contacts** > **Contacts** tab.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.

Email

Use the Email app to view and manage all your email accounts in one application.

To access Email:

► From a Home screen, tap  **Apps** >  **Email**.

Configure Email Accounts

You can configure Email for most accounts in just a few steps.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Follow the onscreen instructions to set up your email account.

– or –

For additional accounts, tap  **Menu** > **Settings** > **Add account**.

The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email appears in the Inbox for the account.

Note: To configure email account settings at any time, tap  **Menu** > **Settings**. Tap the account to display Account settings.

Refresh Your Email Account

Refresh your account to update your email accounts.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Refresh**.

Manage Your Email Accounts

You can view email you receive for all accounts on the **Combined view** screen or you can view email accounts individually.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Menu** at the top left of the screen to select:
 - **Combined view:** View all email in a combined inbox.
 - **<Account Name>:** View email for only this account.

Delete Email Accounts

To delete an Email account:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Menu** > **Settings**.
3. Tap the account you want to delete, and then tap  **Delete**.

Email Settings

These settings allow you to modify settings associated with using the Email app.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.

Gallery

View, edit, and manage pictures and videos.

View Images and Videos

Launching Gallery displays available folders. When another application, such as Email, saves an image, a Download folder is automatically created to contain the image. Likewise, capturing a screenshot automatically creates a Screenshots folder.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **Menu**, and then tap an option to choose the way items display.
3. Tap  **Menu** > **Albums**, and then tap  **Create album** to create a new album.
4. Tap a folder to open it.
5. Tap an image or video to view it in full screen. Scroll left or right to view the next or previous image or video.

Zoom In and Out

Use one of the following methods to zoom in or out on an image:

- Double-tap anywhere on the screen to zoom in or zoom out.
- Spread two fingers apart on any place to zoom in. Pinch the screen to zoom out.

Editing Images

- While viewing an image, tap  **Menu** :
- **Favorite:** Add to the Favorites category.
 - **Slideshow:** Start a slideshow with the images and videos in the current folder.
 - **Photo frame:** Add a decorative frame to the photo.
 - **Photo note:** Write a note on the 'back' of the photo.
 - **Copy to clipboard:** Place a copy on the clipboard.
 - **Print:** Print the image via a USB or Wi-Fi connection. Some printers may not be compatible with the device.
 - **Rename:** Rename the file.

- **Buddy photo share:** Share photos with friends via face detection.
- **Rotate left:** Rotate the picture counter-clockwise.
- **Rotate right:** Rotate the picture clockwise.
- **Crop:** Resize the frame to crop the image.
- **Set as:** Set the image as wallpaper or as a contact's photo.
- **Details:** Display details about the photo.
- **Settings:** Change the Gallery settings.

Deleting Images

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap  **Menu** > **Select item**, select images, and then  **Delete**.

– or –

When viewing an single image, tap  **Delete**.

Sharing Images

Use one of the following methods:

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **Menu** and choose a folder to open it.
3. In a folder, tap  **Menu** > **Select item**, select images, and then tap  **Share via** to send them to others or share them via social network services.

– or –

When viewing an image full screen, tap  **Share via** to send it to others or share it via social network services.

Playing Videos

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. Tap a video to view it.

Trimming Segments of a Video

1. Select a video, and then tap  **Trim**.
2. Use the sliders at the bottom of the screen to trim the video. Move the start bracket to the desired starting point, move the end bracket to the desired ending point.
3. Tap **Done** to save the video.

Gallery Settings

These settings allow you to modify settings associated with using your Gallery.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.
4. Tap  **Menu** > **Add account** to add a Google or Facebook account.

Internet

Access the Internet with a fully featured web browser.

Access the Internet

► From a Home screen, tap  **Apps** >  **Internet**.

Command Keys

The following command keys are available:

-  **Back** or  **Back** key to return to the previous page.
-  **Forward** to go forward to a recent page.
-  **Refresh** to reload the current page.

Viewing Web Site

To view a web site:

- ▶ Tap the address field, enter the web address, and then tap **Go**.

To share, save, or print the current web page:

- ▶ Tap  **Menu** .

To zoom in or out:

- ▶ Tap the screen twice or pinch the screen to zoom out and stretch the screen to zoom in.

Browser Windows

Use windows to view multiple web pages at the same time.

To open a new window:

- ▶ Tap  **Menu** > **New window**.

To close a window:

- ▶ Tap  **Window manager** >  **Close**.

Bookmarks

To bookmark the current web page:

1. Tap  **Bookmarks > Add bookmark.**
2. Enter a title, and tap **Save.**

To open a bookmarked web page:

- ▶ Tap  **Bookmarks** and tap an entry.

History

To view a list of recently visited web pages:

- ▶ Tap  **Bookmarks > History** tab.

Saved Pages

To save a web page:

- ▶ Tap  **Menu > Save page.**

To view a list of saved web pages:

- ▶ Tap  **Bookmarks > Saved pages** tab.

Sharing Pages

To share a web page address with others:

- ▶ Tap  **Menu** > **Share via** and follow the prompts.

Incognito Tabs

Pages viewed with incognito windows do not appear within your browser history or search history, and leave no traces (such as cookies) on your device.

Incognito tabs display  **Incognito** on their window.

Note: Any downloaded files will remain on your device after you close the incognito tab.

To change to an incognito window:

- ▶ Tap  **Menu** > **Incognito mode**.

To open a new incognito window:

1. Tap  **Window manager**.
2. Tap  **Menu** > **New incognito window**.

Internet Settings

These settings allow you to modify settings associated with using the Internet app.

1. From a Home screen, tap  **Apps** >  **Internet**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.

Memo

Create and manage text memos and use Bluetooth to send memos to paired Bluetooth devices.

Composing a Memo

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap  **Add**, and compose the memo.
3. Tap **Save**.

Memo Options

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap a memo to view it, then tap  **Menu**.
3. Choose an option:
 - **Delete:** Delete the memo.
 - **Color:** Choose a color for the background of the memo.
 - **Lock:** Disable editing to the memo.
 - **Print:** Print the memo.
 - **Share text via:** Choose a method to share the text only.
 - **Share via:** Choose a format to share the memo file.

Deleting Memos

To delete multiple memos:

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap  **Menu** > **Delete**, and select the memos you want to delete.
3. Tap **Delete**.

Messages

Learn how to send and receive different messages using the default messaging app on your device.

Types of Messages

Your default Messaging app provides the following message types:

- Text Messages (SMS)
- Multimedia Messages (MMS)

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type.

Create and Send Messages

This section describes how to create a send a message using the Messaging app.

1. From a Home screen, tap  **Messages** >  **Compose**.
2. Tap the **Enter recipient** field to manually enter a recipient or tap  **Add Recipient** to select a recipient from your Contacts. You can also select the recipient based on Groups, Favorites, or Logs.
3. If adding a recipient from your Contacts, tap the contact to place a check mark then tap **Done**. The contact will be placed in the recipients field.
4. Enter additional recipients by separating each entry with a semicolon (;) and then using the previous procedure. More recipients can be added at any time before the message is sent.

For the Group option, if the number of recipients is less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.

5. Tap the **Enter message** field and use the onscreen keypad to enter a message.

6. Review your message and tap  **Send**.

Note: If you exit a message before you send it, the message is automatically saved as a draft.

View New Messages

When you receive a new message, a new message icon appears on the Status Bar.

To view the message:

1. Open the Notification Panel and select the message. For more information, please see [“Notification Panel” on page 31](#).

– or –

From a Home screen, tap  **Messages**, and then tap the new message to view it.

2. To play a multimedia message (audio or video), tap  **Play**.
3. To scroll through the list of messages, tap the screen and scroll up or down the page.

Delete Messages

To delete messages, follow these steps:

1. From a Home screen, tap  **Messages**.
2. Tap a conversation, then tap  **Menu > Delete messages**.
3. Tap each message you want to delete or tap **Select all**.
4. Tap **Delete**.

Message Search

1. You can search through your messages by using the Message Search feature.
2. From a Home screen, tap  **Messages**.
3. Tap  **Menu** > **Search**.
4. Enter a word or phrase to search for, and then tap  **Search** on the keyboard.

Messaging Settings

Configure the settings for text messages, multimedia messages, push messages, and so on.

- From a Home screen, tap  **Apps** >  **Messages** > the  **Menu** > **Settings**.

Emergency Alerts

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS) which may also be known as the Personal Localized Alerting Network (PLAN). For more information, please contact your wireless provider.

Emergency Alerts allows customers to receive geographically-targeted messages. Alert messages are provided by the US Department of Homeland Security and will alert customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency Alert message.

There are three types of Emergency Alerts:

- Alerts issued by the President
- Alerts involving imminent threats to safety of life (Extreme and Severe)
- AMBER Alerts (missing child alert)

To disable Imminent Threats and AMBER Alerts, follow the instructions below:

1. From a Home screen, tap  **Messages**.
2. Tap  **Menu > Settings > Emergency alerts**.
3. All alerts are enabled by default (check mark showing). Tap an alert option to disable it.

Note: Users may choose not to receive Imminent Threats (Extreme and Severe) and AMBER Alerts. Alerts issued by the President cannot be disabled.

Music Player



Listen to your favorite songs with the Music player. Navigate through your music library, play songs, and create customized playlists.

Listen to Music

1. From a Home screen, tap  **Apps** >  **Music**.
2. Tap a library category at the top of the screen to view your music files.
3. Scroll through the list of songs and tap an entry to begin playback.

My Files

Access files stored on your device, including images, videos, songs, and sound clips.

View Files

Files stored in the device are sorted into groups:

1. From a Home screen, tap  **Apps** >  **My Files**.
2. Select a group, and then tap a file or folder to open it.

Group Options

- ▶ After selecting a group, tap  **Menu** for options:
 - **Select item:** Select files or folders.
 - **Create folder:** Add a folder to organize the files.
 - **View as:** Choose to view files as lists, list and details, or thumbnails.
 - **Sort by:** Sort files or folders.

- **Add shortcut:** Add a shortcut to a file or folder to the Home screen.
- **Settings:** Customize the way the group is set up.

File Options

- Tap  **Menu** > **Select item**, select a file or folder, and then use one of these functions:



Share via: Send files to others or share them.

 


Delete: Delete files or folders.

Tap  **Menu** for additional options:

- **Move:** Move files or folders to another folder.
- **Copy:** Copy files or folders to another folder.
- **Rename:** Rename a file or folder.
- **Zip:** Create a zip file from a folder.
- **Details:** View file or folder details.

Video

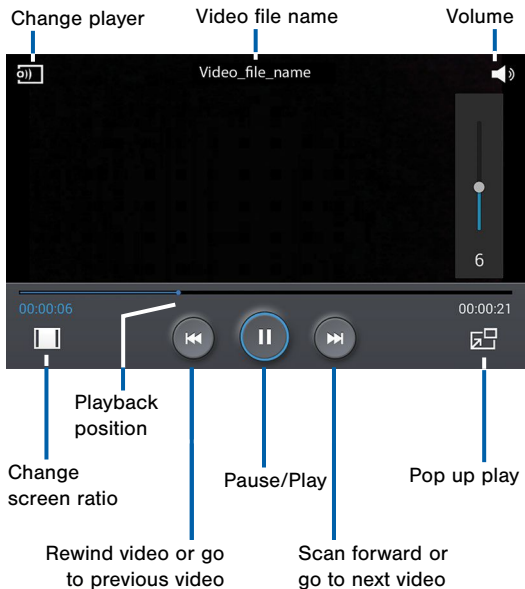

Play and manage videos stored on your device.

To access video:

1. From a Home screen, tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your device. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

Use Pop-Up Play

Multi task with Pop-Up Play—transform your video player into a pop-up window. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap  to continue playing the video in a floating window.
 - Drag the window to any location on the screen.
 - Use two fingers to pinch or spread to resize the floating window.

Voice Recorder

Record voice memos and notes.

Create a Voice Recording

- From a Home screen, tap  **Apps** >  **Voice Recorder**.
- Tap  **Recording quality** to adjust the recording quality.
 - Tap  **Record** to record an audio file.
 - Tap  **Stop** to stop recording. The file is automatically saved.
 - Tap  **Pause** to pause the recording of an audio file.
 - Tap  **Cancel** to cancel the recording of an audio file.

View Recordings

1. From a Home screen, tap  **Apps** >  **Voice Recorder**.
2. Tap  **List** to view recording files.
3. Tap  **Menu** :
 - **Share via**: Select files and share them.
 - **Delete**: Select files and delete them.
 - **Settings**: Configure Voice Recorder.
 - **End**: Exit Voice Recorder.

Settings

Configure your device's connections and settings, add accounts, and customize the home screen, apps, and features.

- Some Settings options use an **ON/OFF** button to turn the option on () or off ().
- For some options, you must tap a field, such as **Email address**, to display and set options.
- Some options are enabled or disabled by tapping a  checkbox. When enabled, a check mark displays. Tap check mark to remove it and disable the option.

Accessing Settings

- ▶ From a Home screen, tap  **Apps** >  **Settings**.
 - or –

From a Home screen, drag down from the Status bar to display the Notification panel, and then tap  **Settings**.

Wi-Fi and Wi-Fi Direct

Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to a Wireless Access Point (WAP).

Wi-Fi Direct creates a direct connection between two or more devices using Wi-Fi.

Turn Wi-Fi On or Off

Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on or off.

Scan and Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. When Wi-Fi is first turned on, your device will automatically scan for available networks and display them.
4. Tap the network you want to connect to.
 - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.
 - To manually scan for networks, tap **Scan**.

Manually Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap **Add Wi-Fi network**.
4. Enter information about the Wi-Fi network:
 - Tap **Network SSID** to enter the name of the Wi-Fi network.
 - Tap the **Security** field and select a security option and enter your password.
 - Tap **Show advanced options** if you need to add advanced options such as Proxy settings, IP settings, or Key management.
5. Tap **Connect** to store the new information and connect to your target WAP.

Wi-Fi Status Indicators

These Status bar icons show your current Wi-Fi connection status:



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



A Wi-Fi access point is available, but your device is not connected to it. It may also display if there is a communication issue with the target Wireless Access Point (WAP).

Wi-Fi Settings

The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap  **Menu** for options:
 - **Advanced:**
 - **Wi-Fi notifications:** Receive a notification when new Wi-Fi is available.
 - **Sort by:** Sort Wi-Fi networks by Alphabet or Signal strength.
 - **Keep Wi-Fi on during sleep:** Specify when to disconnect from Wi-Fi.

- **Always allow scanning:** Allow Google location service and other apps to scan for networks, even when Wi-Fi is turned off.
- **Auto network switch:** Auto switch between Wi-Fi networks and mobile networks.
- **Wi-Fi timer:** Auto connect/disconnect from Wi-Fi network according to a time limit.
- **Install certificates:** Install authentication certificates.
- **MAC address:** View your device's MAC address, which is required when connecting to some secured networks (not configurable).
- **IP address:** View your device's IP address (not configurable).
- **Manage networks:** Edit or remove networks.
- **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
- **WPS PIN entry:** View the PIN used by your device to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
- **Help:** Learn about setting up and using Wi-Fi networks, and other settings.

Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections via Wi-Fi, without having to connect to a Wi-Fi network.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on. Wi-Fi must be on to configure settings.
3. Tap **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices, or you can tap **Scan** to start scanning.
4. After scanning for devices, select a device, and then follow the prompts to complete the connection.
 - Tap **Multi connect** to scan for devices that support multi connect. Select the devices and follow the prompts to establish the connections.

Wi-Fi Direct Status Indicator



Displays when connected to another device using Wi-Fi Direct.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth-enabled computers, printers, and wireless devices.

Note: The Bluetooth communication range is approximately 30 feet.

Turn Bluetooth On and Off

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on or off.

Making Your Device Visible to Other Bluetooth Devices

When you make your device visible, other Bluetooth can find it in a scan and initiate pairing. You can choose the length of time your device remains visible.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on.
3. Tap **Bluetooth** >  **Menu** > **Visibility timeout**.
4. Select a time period for your device to remain visible after you turn on visibility.

Scan for Bluetooth Devices

When you want to pair with another Bluetooth device, you can scan for nearby devices that are visible.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. When Bluetooth is first turned on, it scans for nearby Bluetooth devices and displays them.
 - To manually perform a new scan, tap **Scan**.

Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.

Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. Make sure that the target device is discoverable, so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.
4. Tap **Scan**. Your device will start to scan for Bluetooth devices within range.
5. When you see the name of the target device displayed in the Bluetooth devices section, tap the name. Your device then automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Delete a Paired Device (Unpairing)

When you unpair from a Bluetooth device, the two devices will no longer recognize each other. To connect again, you'd need to pair the devices.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap  next to the previously paired device, and then tap **Unpair** to delete the paired device.

Review Files Received via Bluetooth

When you receive files from another device via Bluetooth, you can access them from Bluetooth settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth** >  **Menu** > **Received files**.

Bluetooth Status Indicators

The Status bar displays  when Bluetooth is turned on.

Data Usage

Monitor your mobile data usage.

Note: Your service provider may account for data usage differently.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Data usage** for options:
 - **Mobile data:** Enable mobile data. You can also control Mobile Data at the Notification panel.
 - **Set mobile data limit:** Disable your mobile data connection when the specified limit is reached. Drag the red limit line to set the data usage limit.
 - **Data usage cycle:** Tap the menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.

2. Tap **Menu** :

- **Restrict background data:** Restrict some apps and services from working unless you are connected to a Wi-Fi network.
- **Auto sync data:** Set your accounts to automatically sync.
- **Show Wi-Fi usage:** Display a Wi-Fi tab that shows Wi-Fi usage.

Airplane Mode

Airplane mode disconnects your device from all networks and turns off connectivity features, such as phone calls and Wi-Fi.

While in airplane mode, you can use other features, such as playing music, watching videos, and other online applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **More networks** > **Airplane mode**, and then tap **ON/OFF** to enable or disable the option.

Note: You can also control Airplane mode from the Device options menu. Press and hold the **Power/Lock key**, and then tap **Airplane mode**.

Mobile Networks

Control your device's access to networks and mobile data service.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **More networks** > **Mobile networks** for options:
 - **Mobile data:** Allow your device to connect to a mobile data network.
 - **Data roaming:** Allow your device to connect to data services while roaming. Significantly higher charges may result.
 - **System select:** Choose a CDMA roaming mode.

Virtual Private Networks (VPN)

Set up and manage your Virtual Private Networks (VPNs).

Note: You must set a screen lock PIN or password before setting up a VPN. For more information, see [“Lock Screen” on page 137](#).

Adding a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **More networks** > **VPN**.
3. Tap  **Add**, and follow the prompts to set up your VPN.

Connect to a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **More networks** > **VPN**.
3. Tap the VPN, enter your log in information, and tap **Connect**.

Edit or Delete a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **More networks** > **VPN**.
3. Touch and hold the VPN that you want to edit or delete.

Lock Screen

Choose a method for unlocking your screen. Different Screen Locks have different levels of security and options.

Set a Screen Lock

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Lock Screen**
3. Tap **Screen lock** to select a screen lock and level of security:
 - **Swipe:** Swipe the screen to unlock it. This option provides no security.
 - **Face unlock:** Look at your device to unlock the screen with facial recognition.

- **Pattern:** A screen unlock pattern is a tap gesture you create and use to unlock your device. This option provides medium security.
- **PIN:** Select a PIN to use for unlocking the screen. This option provides medium to high security.
- **Password:** Create a password for unlocking the screen. This option provides high security.
- **None:** Never use a Lock screen.

Screen Lock Options

Swipe Only

- **Shortcuts:** Set shortcuts on the Lock screen.
- **Unlock effect:** Set the visual effect used when unlocking the screen.
- **Help text:** Show help information on unlocking the screen on the Lock screen.

Face unlock Only

- **Improve facial recognition:** Take a new photo to improve the facial recognition.
- **Presence check:** Requires you to blink to unlock the screen.

Pattern Only

- **Make pattern visible:** Display the pattern as you draw it.

Face unlock, Pattern, PIN, and Password Only

- **Lock automatically:** Screen will be locked in a set number of time after the screen automatically turns off.
- **Lock instantly with power key:** Enable this feature to instantly lock the screen when you press the power key.

Display Settings

Wallpaper

Change the look of the home and lock screens with wallpaper.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab > **Display**.
2. Tap **Wallpaper**.
3. Tap **Home screen**, **Lock screen**, or **Home and lock screens**.
4. Choose a location:
 - **Gallery**: Chose images from the Gallery app.
 - **Live wallpapers**: Choose wallpapers that move.
 - **Photos**: Choose from your Google Photos account. (Home screen only.)
 - **Wallpapers**: Choose from preloaded images.
5. Tap a wallpaper to see a sample, and then tap **Set wallpaper**.

Notification Panel

Customize which Quick setting buttons appear on the Notification Panel.

- ▶ From a Home screen, tap  **Apps** >  **Settings** > **My Device** tab > **Display** > **Notification panel**.

– or –

From the Notification Panel, tap  **View all** >  **Edit**.

The following options are available:

- **Brightness adjustment:** Tap to enable adjusting the screen brightness from the Notification Panel.

To customize which quick setting buttons appear at the top of the Notification Panel:

- ▶ Touch and hold, then drag buttons to reorder them.

To use the default layout:

- ▶ Tap **Reset**.

Adjust the Screen Brightness

Adjust the screen brightness to suit your surroundings or personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Display** > **Brightness** to set a custom brightness level.

Automatically Rotate the Screen

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Display** > **Auto rotate screen** to enable the feature.

Set the Screen Timeout Delay

Choose how long the display screen remains lit after you tap the screen or press any key.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Display** > **Screen timeout**, and then choose a time period.

Daydream (Screen Saver)

The Daydream setting controls what the screen displays when the device is docked (dock not included), or while charging. You can choose to display colors, or display photos stored on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Display** > **Daydream**. Tap **ON/OFF** to turn Daydream on. Configure options:
 - **Colors:** Tap the selector to display a changing screen of colors.
 - **Google Photos:** Display pictures from your Google Photos account. Tap  **Settings** for options.
 - **Photo Table:** Display pictures in a photo table. Tap  **Settings** for options.
 - **Photo frame:** Display pictures in a photo frame. Tap  **Settings** for options.
3. Tap **Start now** to see a demonstration of Daydream.

Change the Font Style

You can set the font style for all text that displays on the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Display** > **Font style** to choose a font style.
 - Tap **Get fonts online** to find new fonts from the Google Play Store.

Change the Font Size

You can set the font size for all text that displays on the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Display** > **Font size** to choose a font size.

Show Battery Percentage

You can display the percentage of battery life in the Status Bar.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Display** > **Show battery percentage** to turn the feature on.

Sound Settings

Configure the sounds and vibrations used to indicate notifications, screen touches, and other activities.

Adjust the Volume

Set the system volume level, and set default volume for call ringtones, notifications, and other audio.

Tip: You can also set System volume from the home screen by pressing the **Volume** key.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Volume**, and then drag the sliders to set the default volume for:
 - Music, video, games and other media
 - Ringtone
 - Notifications
 - System

Select a Default Ringtone

Choose from preset ringtones or add your own.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Ringtones**.
3. Tap a ringtone to hear a preview, and then tap **OK** to set it as your default ringtone.

– or –

Tap **Add** to use an audio file as a ringtone.

Select a Default Vibration Pattern

Choose from preset vibration patterns or create your own pattern.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Vibrations**.
3. Tap a pattern to preview it, and then tap **OK** to set it as your default vibration pattern.

– or –

Tap **Create** and follow the prompts to create a new vibration pattern.

Change the Notification Sound

Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Default notification sound**.
3. Tap a sound to preview it, and then tap **OK** to set it as your default notification sound.

Vibrate When Ringing

Your device can vibrate in addition to ringing when you receive a call.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Vibrate when ringing** to turn the feature on.

Play Tones When Entering a Phone Number

Play tone when the dialing keypad is tapped.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Dialing keypad tone** to turn the feature on.

Play Tones When Touching or Tapping the Screen

Play tones when you touch or tap the screen to make selections.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Touch sounds** to turn the feature on.

Set the Screen Lock Sound

Play a sound when you unlock the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Screen lock sound** to turn the feature on.

Select an Emergency Tone

Set an alert tone or vibration when receiving an emergency message.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Emergency tone** and select Off, Alert, or Vibrate.

Play a Sound When Using the Samsung Keyboard

Play a tone when keys are tapped on the Samsung Keyboard.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab > **Sound**.
2. Tap **Key-tap sound** to enable auditory feedback when you touch an onscreen key.

More Settings

Adjust the sound to your personal preferences using Adapt Sound.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Sound** > **Adapt Sound** and follow the onscreen prompts.

Home Screen Mode

Switch between the default screen layout and a simpler layout. The Easy Mode layout has larger text and icons, making for a more straightforward visual experience.

To enable Easy Mode:

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab > **Home screen mode**.
2. Tap **Easy mode** to enable this feature. When Easy mode is enabled, you can scroll down the page and select which apps you want to appear on the Home screens.
3. Tap **Apply**.

Call Settings

Customize your Calls.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab > **Call**.
2. Tap an option to customize:
 - **Call block:** Manage your blocked calls.
 - **Set up call rejection message:** Choose or create a call rejection message.
 - **Answering/ending calls:** Choose alternative methods for answering and ending calls.
 - **Turn off screen during calls:** Tap to enable this feature.

- **Call alerts:** Set up call alert settings.
- **Call accessories:** Set accessory options for calls.
- **Ringtones and keypad tones:** Choose options for your ringtones, vibrations, and keypad.
- **Personalize call sound:** Choose a call sound according to your preference.
- **Noise reduction:** Tap to enable this feature.
- **Voicemail service:** Choose a service for your voicemail.
- **Voicemail settings:** Customize your voicemail dialing shortcut.
- **Sound:** Choose a default ringtone.
- **Vibrate:** Set your phone to vibrate.
- **Auto retry:** Set up your phone to automatically retry calling when there is no answer.
- **TTY mode:** Choose a TTY mode.
- **Hearing aids:** Improve the sound quality of your phone for use with hearing aids.
- **DTMF tones:** Set length of DTMF tones.
- **Voice privacy:** Tap to enable Enhanced privacy mode.

Blocking Mode

Turn off notifications for selected features.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Blocking mode**.
3. Tap **ON/OFF** to turn the feature on and configure these options:
 - Tap **Block incoming calls** to block all calls except for the people on your allowed list.
 - Tap **Turn off notifications** to block all notifications.
 - Tap **Turn off alarm and timer** to block all alarms.

- The SET TIME option allows you to set Blocking mode for a specific time range or to always keep it on.
 - Tap the **Always** field to disable it and configure the **From** and **To** time fields.
- **Allowed contacts:** Add contacts to your allowed list.
- **Allowed contact list:** Manage your allowed list.

Note: When Blocking Mode is enabled,  displays in the Status Bar.

Hands-Free Mode

Hands-Free mode allows you to have notifications read out loud to you, so that you don't have to look at your screen.

To enable Hands-free features:

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab > **Hands-free mode**.
2. Tap **ON/OFF** to enable Hands-Free mode.
3. Tap any of the following features to turn it on or off:
 - **Incoming call:** Read out caller's information when receiving incoming calls.
 - **Message:** Read out sender's information when new messages arrive.
 - **Alarm:** Read out alarm information when alarms sound.
 - **Schedule:** Read out scheduled alarm information when alarms sound.

Power Saving

Conserve battery power by automatically adjusting the screen brightness, limiting the performance of the CPU, and other power reduction activities.

Ultra power saving mode saves even more battery power by using a gray scale theme on the Home screen and limiting the number of usable apps.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Power saving** for options:
 - Tap **ON/OFF** to turn the feature on.
 - Tap **CPU power saving**: This limits the maximum performance of the CPU.
 - Tap **Screen power saving**: This uses low power level for the screen.
 - Tap **Learn about power saving** to learn more about power saving.

Tip: Tap  **Menu** > **Help** to display more information about conserving power.

Accessibility

Accessibility services are special features that make using the device easier for those with certain physical disabilities.

Note: You can download additional accessibility applications from the Google Play Store.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Accessibility** for options:
 - **Auto rotate screen:** Tap to enable this feature.
 - **Screen timeout:** Tap to select a time period.
 - **Speak passwords:** Read the characters aloud as you enter your passwords.
 - **Answering/ending calls:** Choose alternative ways to answer and end calls.

- **Show shortcut:** Enable to add accessibility settings under device options when you press and hold the power key.
- **Manage accessibility:** Export your accessibility settings and share them with another device.

Services

- **TalkBack:** Speak feedback aloud to help blind and low-vision users.
 - TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

Additional accessibility apps may be downloaded from the Google Play Store. Certain accessibility services you install may be configured here.

Vision

- **Font size:** Set the font size.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Negative colors:** Reverse the display of onscreen colors from White text on a Black background to Black text on a White background.
- **Notification reminder:** Play a beep when a notification has been missed.
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps. Tap **ON** to turn the feature on.
- **Text-to-speech options:** Set your preferred TTS engine and options. For more information, see [“Text-To-Speech Options” on page 167.](#)

Hearing

- **Sound balance:** Use the slider to set the Left and Right balance when using a stereo device.
- **Mono audio:** Switch audio from stereo to mono for use with one earphone.
- **Turn off all sounds:** For privacy, turn off all notifications and audio.

Mobility

- **Assistant menu:** Improve the device accessibility for users with reduced dexterity.
- **Touch and hold delay:** Select a time interval for this tap gesture.

Recognition

- **Interaction control:** Block areas of the screen from touch interaction. Disable Auto rotate screen and hard key functions. Only show application notifications in the Notification Panel and the Status bar.

Language and Input Settings

Configure your device's language and input settings.

Set Your Default Language

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Language and input** > **Language**.
3. Select a language from the list.

Select Your Default Keyboard or Input Method

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Language and input** > **Default**.
3. Select a keyboard.

Note: Additional keyboards can be downloaded from the Google Play Store.

Samsung Keyboard Settings

Configure options for using the Samsung keyboard.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Language and input**.
3. Tap  **Settings** next to Samsung keyboard for options:
 - **Portrait keyboard types:** Choose a keyboard layout.
 - **Numbers and symbols:** Choose a keyboard layout when using numbers and symbols.
 - **Input language:** Choose which languages are available on the keyboard. To switch between languages, slide the space bar sideways.
 - **Predictive text:** Allow Predictive text to suggest words matching your text entries, and, optionally, complete common words automatically. Predictive text can learn your personal writing style from your contacts, messages, Gmail, and social networking sites—improving its accuracy of predicting your text entries.
 - Additional keyboard settings provide assistance with capitalization, punctuation, and much more.

Google Voice Typing Settings

Speak rather than type your text entries using Google Voice Typing.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Language and input**.
3. Tap  **Settings** next to Google voice typing for options:
 - **Choose input languages:** Select languages for Google voice typing.
 - **Block offensive words:** Hide words many people find offensive are in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
 - **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.

Voice Search

Use Google voice recognition to perform Google searches using spoken commands.

To perform a voice search, tap  in the Google search bar or widget. Or say “Ok Google” to launch a Google search (if the hotword detection option is enabled).

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Language and input** > **Voice search** for options.
 - Tap “**Ok Google**” **hotword detection** to launch a Google search whenever you say “Ok Google.”
 - Additional options include selecting a default language, blocking offensive words, and more.

Text-To-Speech Options

Configure your Text-To-Speech (TTS) options. TTS is used for various accessibility features, such as TalkBack. For more information, see [“Accessibility” on page 159](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Language and input** > **Text-to-speech options** for options:
 - Choose either the Samsung or Google text-to-speech engine. Tap  **Settings** next to each TTS engine for options.
 - **Speech rate**: Set the speed at which the text is spoken.
 - **Listen to an example**: Play a sample of speech synthesis (available if voice data is installed).

Mouse/Trackpad Settings

Configure settings for using an optional mouse or trackpad (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab.
2. Tap **Language and input** > **Pointer speed**: Set the speed of the pointer.

Motions

Control your device by making specific gestures with your hand above the device's screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **My device** tab > **Motion**.
2. Touch **ON/OFF** to enable each feature:
 - **Smart alert:** Your device will vibrate when you pick it up to notify you about missed calls and messages.
 - **Turn over to mute/pause:** Mute incoming calls, alarms, and pause media by turning the device over.

Note: To view a tutorial tap  **Apps** >  **Settings** > **My device** tab > **Motion** > **Learn about Motions**.

Accounts

Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.

Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.

Add an Account

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts** tab.
2. Tap **Add account**.
3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.

Synchronize Accounts

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts** tab.
2. Tap **Accounts** > (account type).
3. Tap an account to view the sync settings for that account.
 - Check individual data items to sync.
 - Tap  **Sync** to synchronize the account.

Account Settings

Each account has its own set of settings. In addition, you can configure common settings for all accounts of the same type.

Note: Account settings and available features vary between account types and service providers. Contact your service provider for more information on your account's settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts** tab.
2. Tap **Accounts** > (account type).
 - Tap an account to configure that account's settings.
 - Tap **Settings** or other available options to configure common settings for all accounts of this type.

Delete an Account

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts** tab.
2. Tap **Accounts** > (account type).
3. Tap the account, and then tap **Remove account**.

Backup and Reset

Back up your data to Google servers. You can also reset your device to its factory defaults.

Backup and Restore

Enable backup of your information to Google servers.

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts** tab.
2. Tap **Backup and reset** for options:
 - **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
 - **Backup account:** Select a Google account to be used as your backup account.
 - **Automatic restore:** Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

Factory Data Reset

Return your device to its factory defaults.

Warning: This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files.

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts** tab.
2. Tap **Backup and reset** > **Factory data reset**.
3. Tap **Reset device** and follow the prompts to perform the reset.

Location Services

Some apps, such as Google maps, may require one or more location services be turned on for full functionality.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab > **Location services**.
2. Tap an option to turn it on or off:
 - **Access to my location:** Allow apps that have asked your permission to use your location information.
 - **Use GPS satellites:** Allow apps to use GPS to pinpoint your location.
 - **Use wireless networks:** Allow apps to use Google's location service to estimate your location faster.
 - **My Places:** Save you favorite locations.
 - **Camera:** Allows the application to use your location data.

My Places

You can save your favorite locations for use with services that require location information. This information can improve your search results and other location-related activities.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab > **Location services**.
2. Tap **My places**.
 - Tap a category to add a location:
 - Tap  **Add** to add additional categories.
 - Tap  **Menu** > **Delete** to delete a custom category.

Note: Home, Office, and Car cannot be deleted.

Security

Secure your device and protect your data with Security settings.

Encrypt Your Data

Require a numeric PIN or password to decrypt your device each time you power it on or encrypt the data on a memory card (not included) each time it is connected.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Security** for options:
 - Tap **Encrypt device** and follow the prompts to encrypt all data on your device.
 - Tap **Encrypt external SD card** to encrypt data on a memory card (not included).

Reactivation Lock

Use your Samsung account to stop other people from reactivating your device after it has been reset.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Security** > **Reactivation lock** to turn the feature on.

View Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Security** > **Make passwords visible** to turn the feature on.

Device Administration

Manage your device administrators and application installation privileges.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Security** for options:
 - **Device administrators:** Add or remove device administrators.
 - **Unknown sources:** Enable installation of non-Google Play applications.
 - **Verify apps:** Block or warn before installing apps that may cause harm.

Warning: Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.

Credential Storage

Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Security** for options:
 - **Storage type:** Select a storage location for credential contents.
 - **Trusted credentials:** Display certificates in your device's ROM and other certificates you have installed.
 - **Install from phone storage:** Install a new certificate from storage.
 - **Clear credentials:** Erase the credential contents from the device and reset the password.

Application Manager

You can download and install new applications on your device. Use Application manager settings to manage your downloaded and preloaded applications.

Warning: Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Memory Usage

See how memory is being used by Downloaded or Running applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab > **Application manager**.
2. Swipe across the screen to display DOWNLOADED, SD CARD, RUNNING, or ALL to display memory usage for that category of applications.

The graph on the DOWNLOADED tab shows used and free device memory. The graph on the RUNNING tab shows used and free RAM.

Downloaded

Displays apps you have downloaded on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab > **Application manager**.
2. Tap **DOWNLOADED** to view a list of all the downloaded applications on your device.
 - To switch the order of the DOWNLOADED list, tap  **Menu** > **Sort by size**, or **sort by name**.
 - To reset all of your application preferences, tap  **Menu** > **Reset app preferences**.
3. Tap an application to view and update information about the application. The following options are displayed:
 - **Force stop**: Stop an app. Restart your device if stopping an app, process, or service causes your device to stop working correctly.
 - **Uninstall updates**: Delete the application from the device.
 - **Turn off**: Stop running the application.
 - **Move to SD card**: Move this app to your microSD card.
 - **Clear data**: Clear application data from memory.

- **Clear cache:** Clear an application's temporary memory storage.
- **Clear defaults:** Clear an application's customization.
- **Permissions:** View information about the application's access to your device and data.

SD Card

Displays apps you have downloaded onto your memory card (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab > **Application manager**.
2. Tap **SD CARD** to view a list of all the downloaded applications on your SD card.
 - To switch the order of the SD CARD list, tap  **Menu** > **Sort by size**, or **sort by name**.
 - To reset your application preferences, tap  **Menu** > **Reset app preferences**.

Note: When you reset app preferences, you will not lose any app data.

3. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Running Services

View and control services running on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab > **Application manager**.

2. Tap **RUNNING** to view a list of running services.

All the applications that are currently running on the device display.

3. Tap **Show cached processes** to display all the cached processes that are running. Tap **Show services in use** to switch back.
4. Tap one of the applications to view application information.
 - **Stop:** Stops the application from running on the device. This is usually done prior to uninstalling the application. (Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.)
 - **Report:** Report failure and other application information.

Note: Options vary by application.

Battery

View how battery power is used for device activities.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Battery** for options:
 - **Battery Chart:** The battery level displays as a percentage. The amount of time the battery has been used also displays.
 - **Apps and OS Usage:** Battery usage displays in percentages per application.
 - Tap **Screen, Android System, Android OS**, or an app to view they are affecting battery use.
 - **Show battery percentage:** Display the battery charge percentage on the Status bar.
 - Tap  **Refresh** to update the listing.

Note: Other applications may be running that affect battery use.

Storage

View the device memory and usage, or mount, unmount, or format an optional memory card (not included).

Device Memory

View and manage the memory used by the device.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Storage**.
 - The DEVICE MEMORY displays Total space and Available space.
 - The amounts of memory used by Applications, Pictures and videos, Audio, Downloads, Cached data, and Miscellaneous files are also displayed.

To increase available memory:

1. Tap **Cached data** to clear all cached data for all apps.
2. Tap **Miscellaneous files**, select unnecessary files (or tap **Select all**), and then tap  **Delete**.

Memory Card (SD Card)

Once an optional memory card (not included) has been installed in your device, the card memory displays as Total space and Available space.

Install a Memory Card

You can use an optional microSD or microSDHC card (not included) to add additional memory space to your device.



1. Remove the back cover. For more information, see [“Remove the Back Cover” on page 6](#).
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.
3. Replace the back cover. For more information, see [“Replace the Back Cover” on page 9](#).

Mount a Memory Card

When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you will need to mount it before it can be accessed.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Storage** > **Mount SD card**.

Unmount an SD Card

To prevent damage to information stored on the memory card, always unmount the card before removing it from the device.

Unmounting an SD card may stop some applications from functioning until you mount the SD card again.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Storage** > **Unmount SD card**.

Remove a Memory Card

Warning: To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Storage** > **Unmount SD card**.
3. Remove the back cover. For more information, see [“Remove the Back Cover” on page 6](#).
4. Gently press inward on the memory card so that it pops out from the slot and carefully pull the card out.
5. Replace the back cover. For more information, see [“Replace the Back Cover” on page 9](#).

Formatting an SD Card

Warning: When formatting an SD card, you should backup your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Storage** > **Format SD card** and follow the prompts.

Date and Time Settings

By default, your device receives date and time information from the wireless network.

When you are outside network coverage, you may want to set date and time information manually using the date and time settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **Date and time**.
3. Set the date, time, time zone, time format, and date format.

About Your Device

View information about your device, including status, legal information, hardware and software versions, and a tutorial.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **About device**, and then tap items for more details:
 - **Software update:** Check for software updates.
 - **Status:** View the status of the battery, network, and other information about your device.
 - **Legal information:** View your device's open source licenses and Google legal information.
 - **Device name:** View and change your device's name.
 - Additional device information includes the Model number, Android version, Build number, and more.

Software Update

Use Software update to update your device's software.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** tab.
2. Tap **About device** > **Software update**.
3. Follow the prompts to check for available software updates to download and install.