

Ovis 40 RC

 



Operator's Manual

GRAVELY

Model

949001 - Ovis 40 RC
(SN 000101 +)

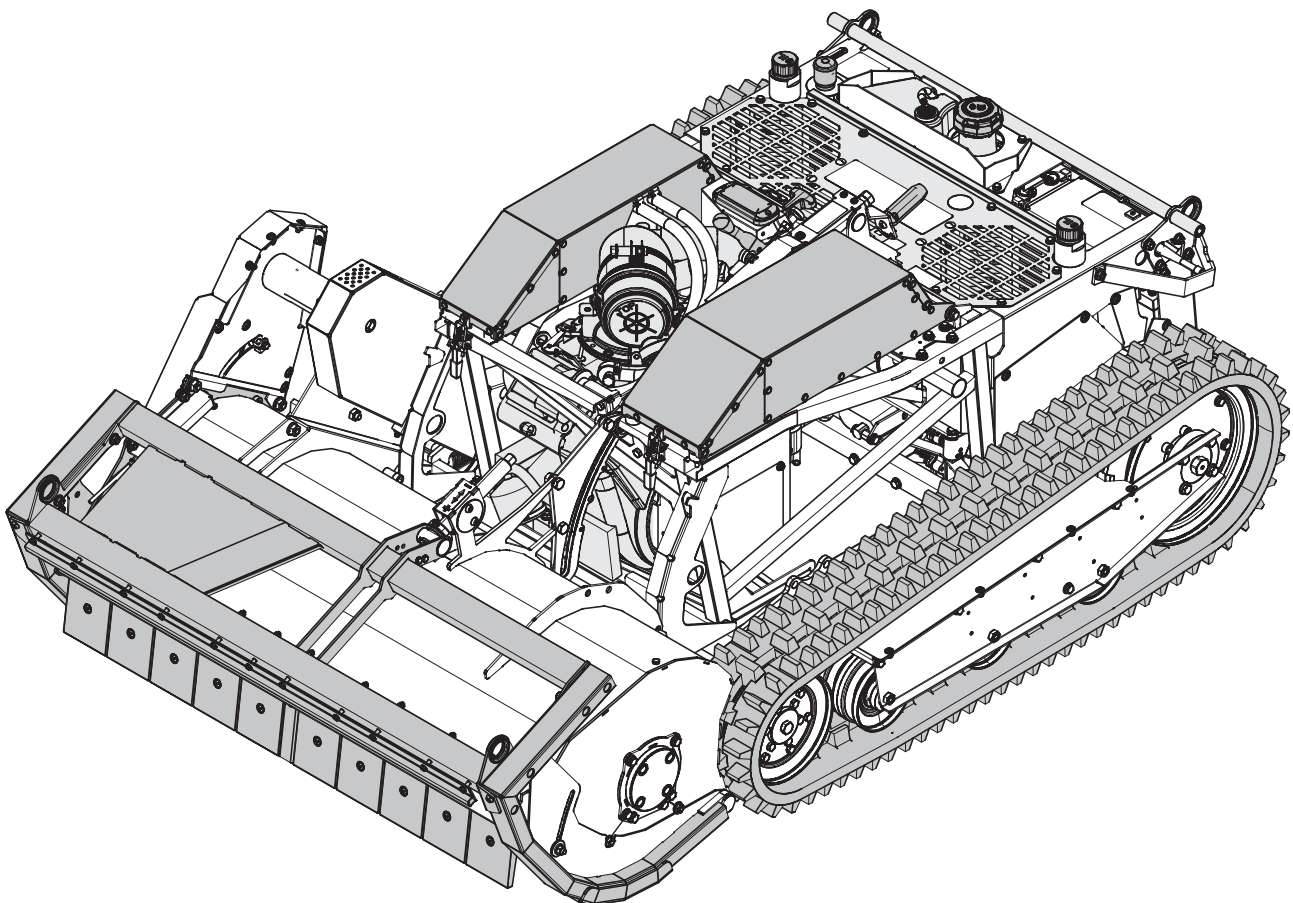

EN ENGLISH

30203100B • 07/24
Printed in Germany

Contents

Welcome	3	Maintenance	24
Register your product!.....	3	Maintenance overview.....	25
Manuals.....	3	Maintenance and cleaning position.....	27
Disclaimer.....	3	Cleaning the device.....	27
Explanation of the symbols	4	General inspection.....	28
Warnings.....	4	Checking safety function.....	28
Symbols in the instructions.....	4	Checking the RC functions.....	28
Signs on the device.....	4	Checking the Emergency stop switch.....	29
Safety instructions	6	Checking start-stop switch.....	29
Get informed!.....	6	Checking main switch.....	29
User restrictions and hours of operation.....	6	Checking maintenance and cleaning position of the blade.....	29
Safe handling of fuel.....	6	Checking the parking brake.....	29
Check the device prior to use.....	7	Checking the blade and flail shaft.....	29
Use caution during operation.....	7	Checking the blade brake clutch.....	31
Prior to mowing.....	8	Checking tracks.....	31
Danger area.....	8	Maintaining the engine.....	32
Driving on slopes.....	9	Checking the engine oil level.....	32
Increased risk of tipping with additional load.....	9	Check oil level of the gearbox.....	32
When work is completed.....	10	Maintaining the air filter.....	33
Use caution during maintenance and repair.....	10	Checking and charging the battery.....	33
Controls and Features.....	11	Hydrostat transmission.....	33
Control elements on the device	12	Grease lubrication.....	34
Control elements on the transmitter	14	Assembly	34
Acoustic signals	15	Scope of delivery.....	34
Signals of the device.....	15	Unpacking.....	34
Signals of the transmitter.....	15	Storage	35
Optical signals	15	Storing the device.....	35
Status indicators on the device.....	15	Longer storage.....	35
Display on the transmitter.....	15	Restarting.....	35
LED display on the receiver.....	15	Spare parts	35
Safety functions.....	15	Wear parts	36
Information on mowing.....	16	Disposal.....	36
Prior to starting.....	16	Troubleshooting	37
Checking the oil level.....	16	Error codes.....	40
Fuel.....	16	Technical specifications	41
Adding fuel.....	16	Fuses.....	42
Checking and changing the battery of the transmitter..	16	Accessories.....	43
Adjusting cutting height.....	17	Warranty	44
Setting cutting height limit.....	18		
Switching on receiver and transmitter	18		
Selecting radio frequency.....	18		
Training operation.....	19		
Operating.....	19		
Starting the engine.....	19		
Steering.....	20		
Driving.....	20		
Driving on steep terrain.....	21		
Engaging blade.....	21		
Switching off and parking.....	22		
Emergency stop.....	22		
Transport	23		
Transport on pallets.....	23		
Transport of ready-to-use device.....	23		

Welcome

Congratulations on your purchase and welcome to the Gravelly family! Every machine in the Gravelly lineup is designed for long-lasting and unsurpassed performance. We are confident your machine will be part of your family for many years to come.

Have Questions or Need Assistance?

www.gravelly.com

A parts manual for your unit is available for free download or purchase at www.gravelly.com.

Manual del operador español está disponible para su descarga gratuita o compra en www.gravelly.com.

Register your product!

It is extremely important to register your product at time of purchase. Product registration activates the warranty and establishes a communication link from AriensCo.

Locate the model and serial number decal on your unit and register those numbers online at www.gravelly.com. See Figure 1 for decal location. Be aware that the original selling dealer may have already completed product registration on behalf of the original purchaser.

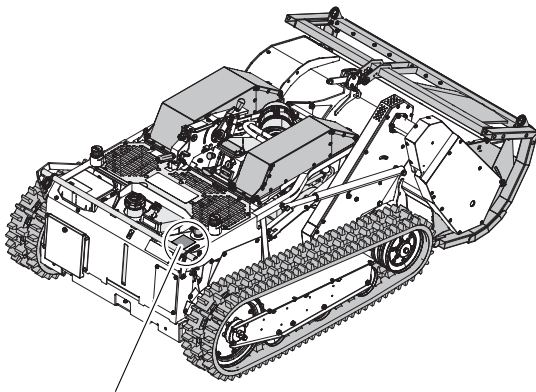


Figure 1: Model & Serial Number Decal.

Record model number here.

Record serial number here.

Manuals

Before operating or servicing the unit, carefully and completely read the manuals provided with the unit. They contain safety instructions and important information about unit controls.

The engine on this unit is covered by a separate manual. Refer to the engine manual for engine service recommendations. Contact the engine manufacturer for a replacement manual if necessary.

Your dealer must review important information in this manual with you before or upon delivery of the unit. It is your responsibility to read and understand all safety precautions and instructions in the manuals. If you do not understand or have difficulty following the instructions, contact your Gravelly dealer for assistance. To locate your nearest Gravelly dealer, go to www.gravelly.com.

Disclaimer

Gravelly reserves the right to discontinue, make changes to, and add improvements upon its products at any time without public notice or obligation. The descriptions and specifications contained in this manual were in effect at printing. Equipment described in this manual may be optional. Some illustrations may not be applicable to your unit.

Explanation of the symbols

Warnings

In these operating instructions, warnings are marked with signal word and colors. The signal words and colors out used to point to following hazards and potential consequences.

Danger

Imminent danger

Indicates an imminently hazardous situation with a **high level of risk** that, if not avoided, **will** result in death or severe injury.

Warning

Hazardous situation

Indicates a possibly hazardous situation with a **medium level of risk** that, if not avoided, **could** result in death or (severe) injury.

Caution

Hazardous situation

Indicates a possibly hazardous situation with a **low level of risk** that, if not avoided, **could** result in minor or moderate injury.

Notice

Danger of property damage

Indicates a possible risk of damage of the device and its surroundings.

Symbols in the instructions

The device is only as safe as its user. Carelessness, negligence or an operating error could result in severe injuries or death.

In these operating instructions, the following symbols are used to denote special dangers.

Warning.
These symbols denote special dangers.

Prohibition sign.
These symbols denote inadmissible procedures.

Directive sign.
These symbols denote required protective measures.


Symbols in the text

- 1. A numbered text requests you to act or shows a process sequence.
 - ⇒ An indented arrow marks the result of a step.
- ⇒ An arrow that is not indented refers to the result of a sequence of actions.

Notice: An additional piece of information is marked by the word "Notice" written in bold letters.

Signs on the device

The following signs are attached to the device to provide a reminder that during use of the device, you will have to be careful and attentive:

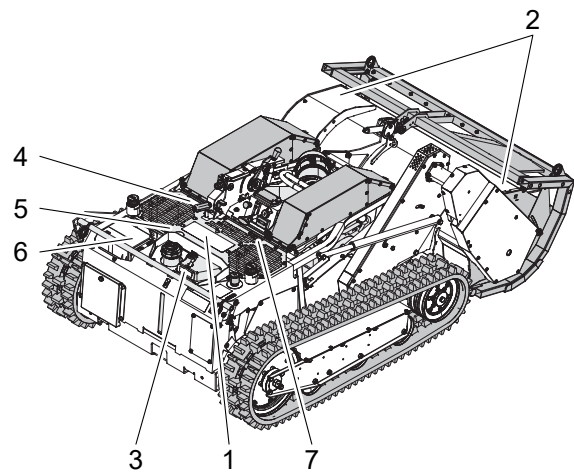

1



These operating instructions contain important information to help you avoid hazards and to increase the reliability and the life span of the device.
Read the operator's manual before using the device.



Danger of tipping when driving uphill and downhill!
Observe the safety instructions, especially those regarding the "Danger zone" and "Driving on slopes".



 
Danger of tipping when driving crosswise to the slope!
Observe the safety instructions, especially those regarding the "Danger zone" and "Driving on slopes".



Danger to life!
On slopes, the device can topple over and slide towards you or run you over.
Never stay below the device when on a slope.
Observe the safety instructions, especially those regarding the "Danger zone" and "Driving on slopes".



Prior to repair and maintenance work, pull off the key.




Prior to any repair and maintenance work, pull off the spark plug connector.

2



 Risk of injury!
Make sure that no one is within the danger zone of the device. Objects may be ejected.



The quickly rotating blade can cause life threatening injuries or immense property damage! Be especially careful to keep your hands and feet away from the blade when the device is put into operation.


3



Overfilling may cause severe damage to evaporative system.
NEVER fill fuel tank when engine is running, hot, or unit is indoors.
Replace fuel cap securely and clean up spilled fuel.



No smoking.

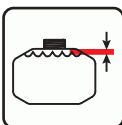

Fill fuel tank to bottom of filler neck – MAXIMUM.

4



Clean the ventilation grid! The cooling air of the engine is sucked in through the ventilation grid of the engine cover. Always keep the entire surface open and free!

5



Noise is causing health problems. Use personal ear protection to avoid hearing damage. Wear safety glasses.

6



Do not clean the device with water spray or high-pressure cleaner!

7



Check the engine oil level! Before and after each use, check the engine oil level.

Safety instructions

Get informed!

For your safety, read these operating instructions carefully. Familiarize yourself with the control elements and the proper use of the device. Failure to observe the safety information and instructions can result in serious injuries or fatal accidents. Share these operating instructions with other users of the device.

Also read the operating instructions of the transmitter and receiver.

Before starting to work: Have skilled personnel show you the safe handling of the device.

Get familiar with the device in a wide, open and flat terrain first.

User restrictions and hours of operation

Never allow children or persons who are not familiar with the operator's manual to use the device. Persons under 18 years of age may operate the device only under proper supervision. Local regulations determine the minimum age of the operator and the operating times.

Unsuitable for operation of the device are persons who

- are under the influence of alcohol, drugs or reaction delaying medications.
- have physical and mental/emotional impairments.
- are tired or sick.



Persons with pace makers must not touch live parts of the ignition system.

Safe handling of fuel

Fuel is toxic and highly flammable. There is a burn and explosion hazard!

Keep fuel away from ignition sources and do not smoke during handling.

Do not inhale fuel vapors, they are dangerous to your health.

Use gloves and avoid skin contact with the fuel.

Always refuel outdoors when the engine is cold and stopped completely. When doing so, always use a filler spout or a funnel.

Do not spill any fuel or do not let fuel enter canalisation or drain away.

When fuel has overflowed, do not start the device until the fuel vapors have evaporated (wipe dry). Move the device away from the spilled fuel.

Always close the tank cap tightly and do not open it while the engine is running or the device is still hot.

Empty the fuel only when outdoors. Use the approved container for this or run the fuel tank empty.

Store the fuel away from children and keep it in a suitable container in a dark, cool and dry place.

Never store the device when there is fuel in the tank inside a building where fuel vapors might come into contact with open fire or sparks.

Immediately replace the fuel tank or tank cap if they are damaged (authorized service center).

First aid

When swallowing fuel or inhaling fuel vapors, do not force vomiting and immediately consult a doctor.

In case of skin contact, immediately wash with water and soap. Change your soiled clothing as soon as you can.

Measures in case of a fire

In case of a fire, use foam, dry powder extinguisher, or carbon dioxide (CO₂). Never douse with water!

Check the device prior to use

To ensure safe operation and to avoid hazards, injuries and damage, check the device before each use.

Visually check that the blade, protection skirt, impact protection, covers, ejection rubber, drive and fastening parts, cables and cable connections are in perfect condition and firmly seated.

Never use the device if covers, impact protection, ejection rubber or protection skirt are defective or not mounted.

Do not remove, change or override any safety devices or control elements.

Have an authorized service center check your device if the blade does not stop within 7 seconds.

Observe the maintenance instructions (see chapter "Maintenance").

Prior to use, check functions and safety functions of the device (see chapter "Maintenance") to ensure safe operation of the device.

Use caution during operation

Make sure that help can be provided in case of an emergency.

Only work during daylight or with adequate artificial lighting. Never work in the event of uncertain weather conditions and risk of lightning.

Be especially carefully when mowing on soft ground, nearby landfills, ditches, dikes and water edges.

Make sure that no persons, children or animals ride along.

Do not drive yourself on the device.

Danger of injury during motor start

The motor must not be started:

- When fuel was spilled.
- In closed or badly ventilated rooms (danger of poisoning!).
- When you or other persons are in close proximity.

Risk of injury when the blade is running

Approach the stationary unit only from behind, set the knife down and wait for the knife to come to a standstill.

- when you drive on surfaces other than the mowing area.
- when you do not mow.
- when you do not have a complete overview of the area to be mowed.
- when the device must be maneuvered out of a dangerous position.
- when the trafficability of the area to be mowed is too unsafe.

Risk of injury when the motor is running

Switch off the engine, wait for the blade and the engine to stop and remove the key at the main switch

- before you transport the device.
- before you step away from the device, even for just a short time.
- before you clean or check the device or before you carry out work on the device.
- before you unblock or unclog the discharge area.

Risk of injury due to uncontrolled rolling

Never switch off the device using the main switch. Otherwise, the parking will no longer be activated and the device can roll away.

Only park the device on flat surfaces.

Risk of burns

Do not touch the muffler, the engine, and the transmission. These parts become very hot during operation and you can get burned. If a jumpy movement occurs, the risk of additional injuries can result.

Vibrations

Have an authorized service center check the device

- when the blade has hit an object.
- if the device starts to vibrate unusually severely.

Unusual vibrations are an indication that

- blades are missing or broken,
- the blade is worn excessively or on one side or
- damage to the engine or cutter deck fastening.

Mowing surfaces with fire hazard

- Carry a sufficient amount of suitable extinguishing media.
- Observe the mowed area even after mowing to make sure that no fire breaks out.

To prevent a fire hazard, always keep the following components free of dirt, grass, hay, leaking oil, grease, etc.:

- engine, ventilation grid
- muffler (manifold, protection, spaces)
- battery, cable connections, electric drive units
- area around the fuel tank
- belt drives

Prior to mowing

Personal protective measures



During mowing, always wear safety shoes with good grip and long trousers. Do not mow with open sandals or while shoeless.



Wear safety gloves to protect yourself against injuries.



Noise is causing health problems. Use personal ear protection when you are less than 15 meters (50 feet) from the device to avoid hearing damage.



Wear safety glasses and headgear.


Ask your specialized dealer about suitable protective equipment.

Preparing the mowing area

Prior to mowing, carefully check the perimeter of the lawn. Remove rocks, pieces of wood, bones, wires, and other objects that could be picked up and thrown out by the device.

Remove live cables from the mowing area. These can be damaged during mowing and cause an electric shock or short circuit.

Danger area

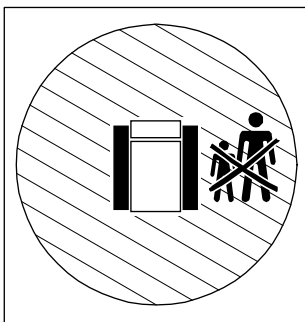

Within the danger area of the device, there is a risk of injury.

The size of the danger area depends on the conditions of the mowing area.

Stones, trash or other objects on the mowing surface can be caught by the blade and thrown out, causing serious injury. The area in front of the device is especially dangerous. On uneven surfaces, the blade can touch the ground and catch hidden objects. Never work when persons, children, or pets are in the danger area.

There is a risk of injury from the rotating blade. Keep your hands and feet away from moving and rotating parts.


Never stand in the danger area of the device during operation. Always approach the stationary device from behind.

Immediately leave the danger area to the rear after engaging the blade. Only approach the stationary device from the rear when disengaging the blade.


Dangerous situations can result from unintended steering or driving movements. Persons or obstacles can be hit or run over.

Make sure

- that nobody else besides the user is on the mowing area.

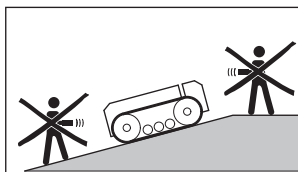

- that you are not in the danger zone.

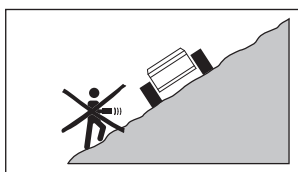



There is a risk of injury on slopes due to tipping or sliding. The device may trap or roll over people. Material goods can be damaged. Never stay below the device when on a slope. Never work when persons, children, or pets are in the danger area.

There is a risk of property damage in the danger area around the device. Make sure that no vehicles, buildings or other material goods are damaged in the danger area.

Working near the road requires special care.

- Pay attention to traffic when working close to roads. Do not expose yourself to any risk from road traffic.
- Make sure that the road is outside the danger area and that you do not endanger any road users.

Recommended position for the operator

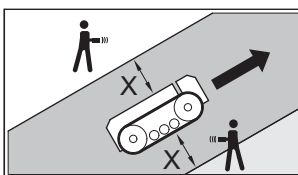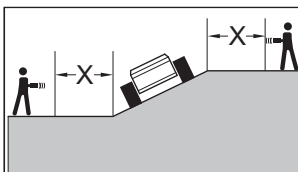


Outside the danger area (X), on the side of the device.

Stop the device when you change your position.

- Choose your position so that you are not in the danger area and you have a full view of the mowing area at all times.

Danger area for the operator when mowing

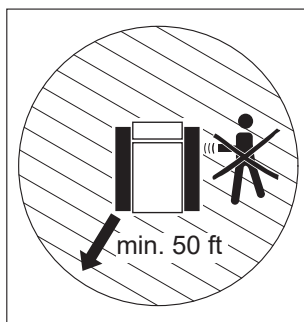

- With a radius of at least 15 meters (50 feet) around the device.

Danger area for the operator with disengaged blade

- A 5 meters (16 feet) radius around the device.


Driving on slopes

Observe the notices for the danger area.

If the device, while in use, stops in steep terrain or the engine cuts out, the device can roll away.

- If possible, stop the device crosswise to the slope.
- Take suitable safety measures to prevent the device from rolling away unintentionally. Secure the device, e.g. with a cable winch or by blocking the tracks with a squared lumber.

Danger due to tipping

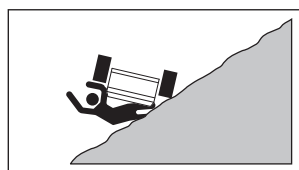


There is a risk of injury on slopes due to tipping or sliding. The device may trap or roll over people. Material goods can be damaged. Never stay below the device when on a slope. Never work when persons, children, or pets are in the danger area.

Safe work in steep terrain is only possible by a trained operator under ideal conditions and adapted driving style.


If the specified maximum slopes can be achieved also depends on the direction of travel, local conditions and other factors.

- Make sure that you know the slope of the hill or that the slope can be determined on site.
- If the ground is uneven, it is not possible to determine the slope without any doubt. The specified maximum slope inclinations can then not be achieved. There is an increased risk of tilting and accidents.
- Unfavorable conditions may reduce the maximum attainable slope, e.g. wetness, loose and slippery ground, dense growth, mowed grass, etc.

- Be extremely cautious when changing the direction.
- Always keep the speed low when moving on slopes.
- Do not start abruptly and do not brake abruptly.

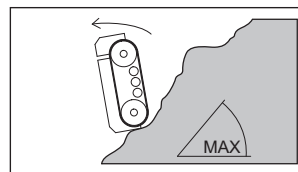

- While driving uphill or downhill, only use the device up to a maximum slope inclination of 44°.

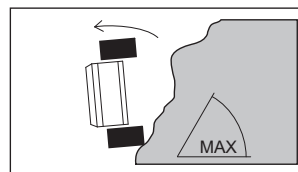

- Only use the device across the slope up to a maximum slope inclination of 55°.

- Do not turn if the slope inclination exceeds 44°.

If the downhill tracks get caught in depressions, terrain edges or paths, the device can tip over or slide away.

- Do not drive near dangerous areas (e.g. walls, slopes, steep declines, edges of bodies of water etc.).

When the uphill tracks encounter obstacles, the device can tilt or slip.

- Only drive when you know about the terrain conditions and terrain is free of obstacles.

- Watch for hills, dips and other visible hazards such as tree stumps, roots, branches, rocks, etc.

If the device tilts or slips

- Never try to stop a tilting or sliding device. Severe injuries can result.
- Remove leaking fluids (oil, fuel, battery acid) from the device and the floor. Deposit of contaminated soil environment friendly according to the local regulation.
- Undetectable damage may have occurred to the device. In case of malfunctions, there is a risk of injury. Have an authorized service center check the device.

Increased risk of tipping with additional load

Loads or attachments change the center of gravity of the device and increase the risk of tipping.

Loads and attachments are not permitted.

When work is completed

Before you leave the device, wait for the blade and engine to stop and remove the key from the main switch.

After switching it off, let the device cool down for at least 20 minutes before you store it in a dry, closed, sufficiently ventilated room.

Never place the device with fuel in the tank inside a building where petrol vapors may come into contact with open flames or sparks.

Use caution during maintenance and repair

Only carry out work as described in these operating instructions. Have an authorized service center perform all other work.

Only use blades and spare parts approved by the manufacturer. Unauthorized blades and spare parts can cause severe injuries.


Prior to all maintenance work, wait until the engine comes to a standstill and pull off the spark plug connector.

We explicitly point out that, in accordance with the Product Liability Act, we are not liable for damages that were caused by our devices if

- worn or damaged parts were not repaired or replaced on time.
- these damages were caused by improper repair.
- when changing a part, our original parts or parts authorized by us were not used.
- the repair work was not carried out by an authorized service center.


The same applies for spare parts and accessories.

Controls and Features

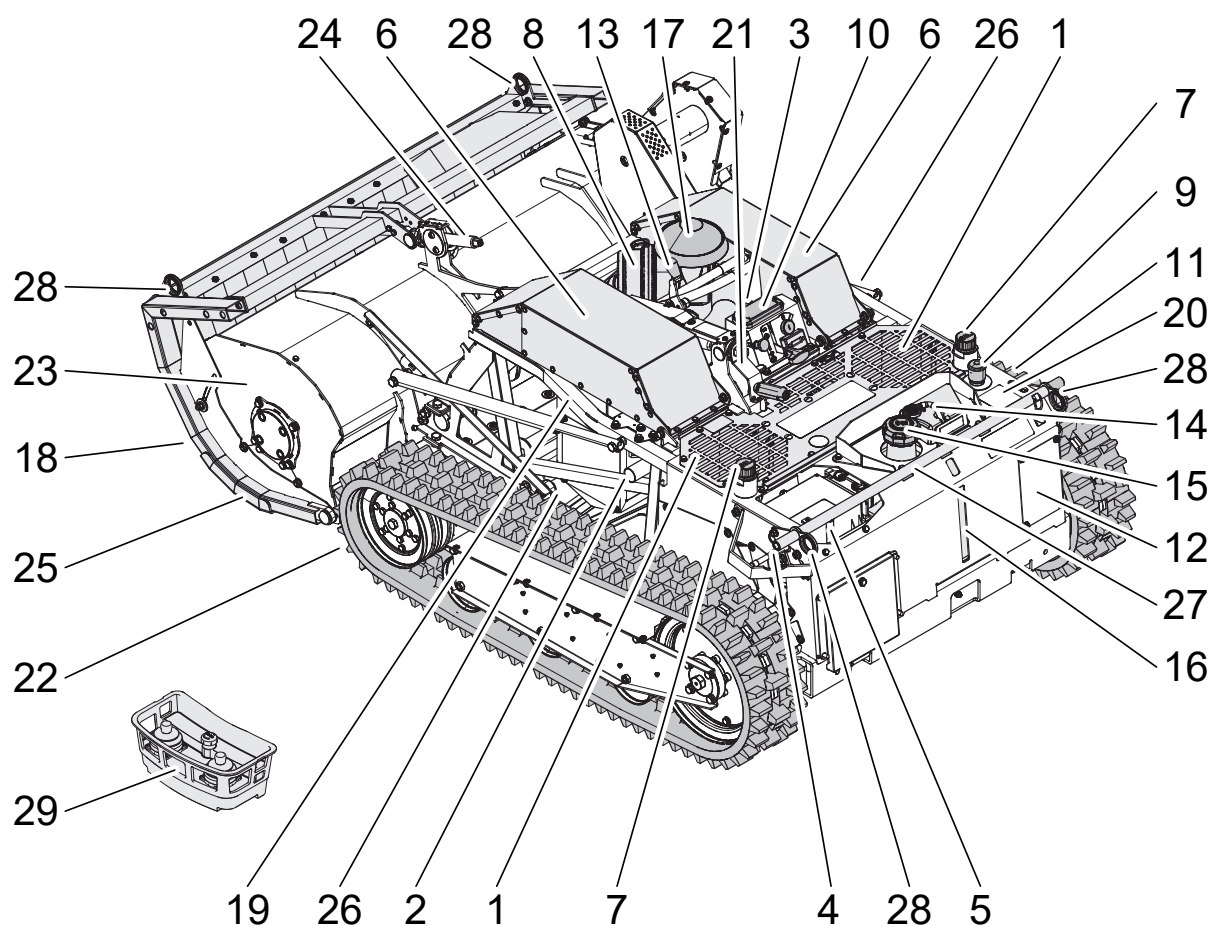


- | | |
|--|---------------------------------------|
| 1 Transmission fan | 20 ID plate |
| 2 Muffler | 21 Cutting height adjustment |
| 3 Oil dipstick / oil filler | 22 Ejection rubber (under the device) |
| 4 Antenna | 23 Mower deck cover |
| 5 Receiver | 24 Cutting height adjuster |
| 6 Ventilation grid | 25 Skid plates |
| 7 Oil expansion chamber hydrostat | 26 Tracks tensioner and spring pack |
| 8 Air filter | 27 Extension, tracks tensioner |
| 9 Emergency stop | 28 Tie down point |
| 10 Status indicator | 29 Transmitter |
| 11 Power socket | |
| 12 Cover fuse compartment / fuses (see chapter "Technical data") | |
| 13 Blade clutch lever | |
| 14 Tank ventilation | |
| 15 Tank cap | |
| 16 Fill level tank | |
| 17 Rain cap (see chapter "Assembly") | |
| 18 Protection skirt/flaps (front of device) | |
| 19 Frame | |

Control elements on the device

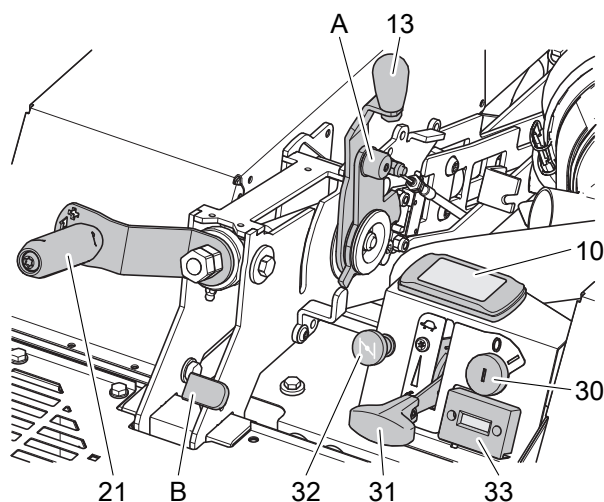

Main switch (30) with key

 
You can switch on/off the circuit of the control with the main switch.



- 0: Off
The key can be removed.
- 1: On

Throttle lever (31)

 Using the throttle lever, you change the engine speed.



- 1: Highest speed (full throttle)
Press the throttle lever all the way down.



- 2: Lowest speed (idle)
Pull the throttle lever all the way up.

Lever for starter flap (choke) (32)

The choke is closed only for start up the cold engine. As soon as the engine is running, open the choke.



Close the choke:
Pull out the lever for the starter flap (32).



Open the choke:
Push in the lever for the starter flap (32).

Hour meter (33)

The operating hours are counted as soon as the engine is running.

Display:

- When engine is running: engine speed
- When engine is off: operating hours

Status light (10)

The status light on the device flashes when the blade is engaged.

Emergency stop (9)




Actuate Emergency stop:
Press the switch.

Revoke Emergency stop:
Turn the switch in the direction of the arrow.

Blade clutch lever (13)

The blade clutch lever is a guard device. When you disengage the blade, the blade comes to a stop within 7 seconds.

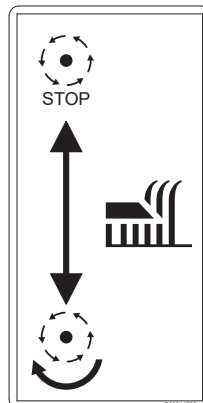


Disengaging blade:

Turn the throttle lever to lowest speed.
Move the blade clutch lever (13) upwards.

Engaging blade:

Lift the blade clutch lever (13), engage the latch knob (A) and slowly press the blade clutch lever (13) downwards.

Cutting height adjustment (21)

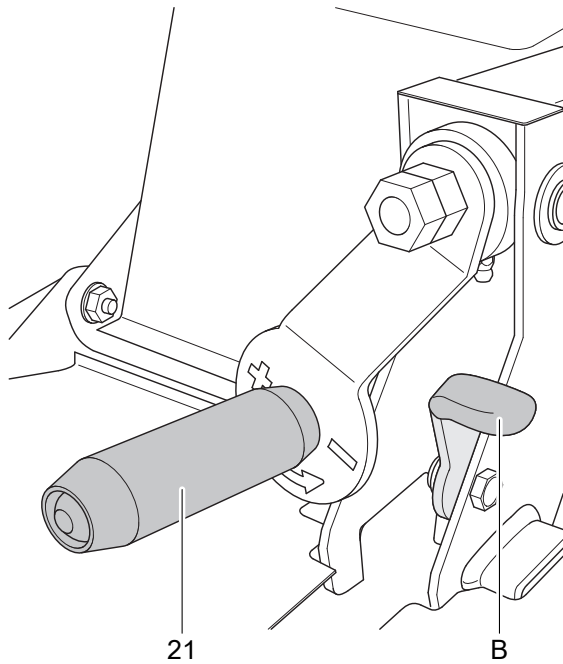

The cutting height can be continuously adjusted. To prevent unintentional adjustment of the crank handle during operation, the cutting height setting can be fixed.

The top position is the maintenance position. The blade is automatically disengaged.

Setting the cutting height:

Swivel the securing bracket (**B**) upwards. Turn the cutting height adjustment (**21**).


+: Increase cutting height.

–: Decrease cutting height.

Setting cutting height:


Swivel the securing bracket (**B**) downwards.

Control elements on the transmitter

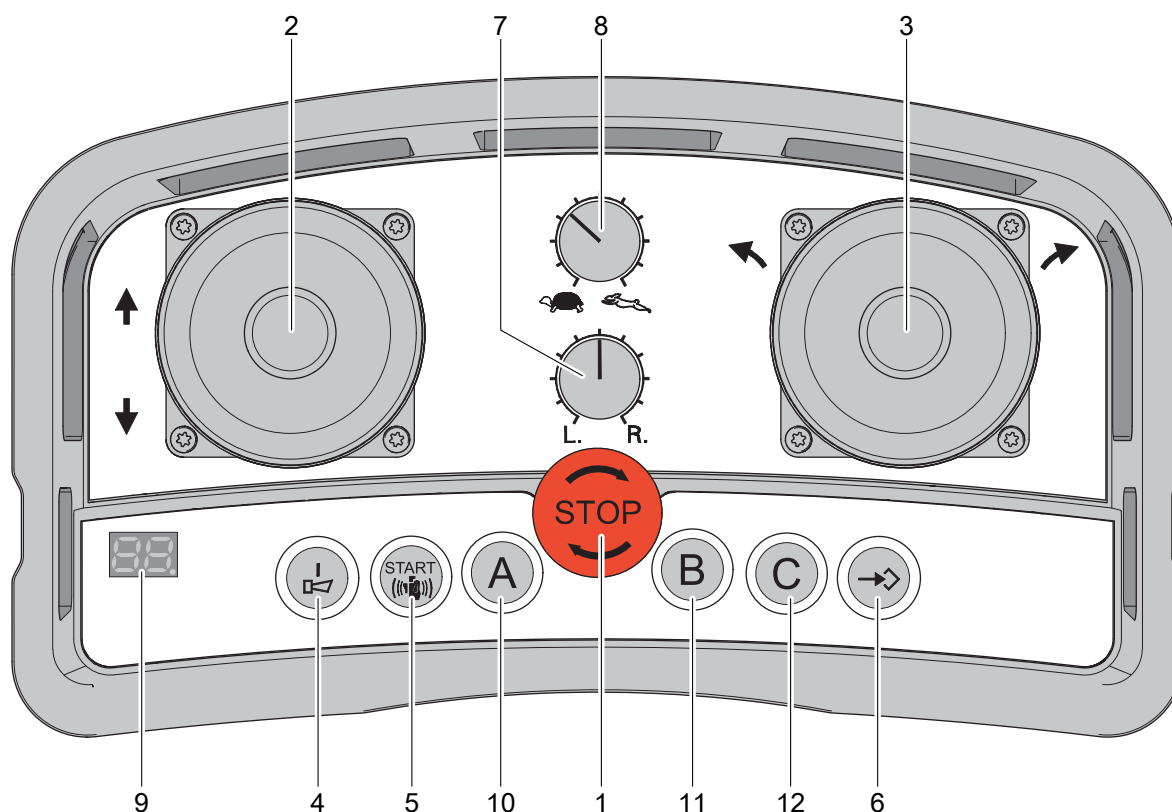

Pos.	Symbol	Function	Type
1		Transmitter: Switching on, switching off	Start-stop switch
2		Forward travel drive and travel speed	Joystick
		Travel drive backwards and travel speed	
3		Steering to the left	Joystick
		Steering to the right	
4		Horn/acknowledge	Button
5		Engine start	Button
6		Displaying frequency	Button
7	L. R.	Trimming steering	Rotary knob
8		Fast maximum travel speed	Rotary knob
		Slow maximum travel speed	
9	-	Display (see chapter "Display on the transmitter")	-
10	A	Recalibration purposes only (see service manual)	Button
11	B	Recalibration purposes only (see service manual)	Button
12	C	(not used)	Button

Carrying the transmitter

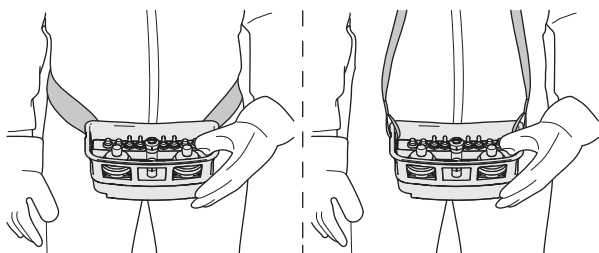

Fasten the belt to the transmitter in the desired way:

- Hip belt
- Carrying strap

Acoustic signals

Signals of the device

- Single honk signal after the transmitter is switched on: Radio connection between transmitter and receiver was successfully established.
- Horn sounds at intervals: Receiver is in operation. No radio contact to transmitter. Warning of battery consumption.

Signals of the transmitter

- Horn sounds twice when the transmitter is switched on: Transmitter is ready for operation.
- Horn sounds for a long time when the transmitter is switched off: Transmitter is switched off.

Optical signals

Status indicators on the device

- Flashing: Beware, blade is engaged.

Display on the transmitter



Frequency: After a radio contact has been established between transmitter and receiver, the frequency number is briefly displayed.



Transmitter in operation: Red dot jumps here and there.



Warning battery capacity: Quick flashing of an "L". As soon as the display appears, the transmitter can be operated for another approx. 30 minutes.




Error code: When the control detects an error, the error code is displayed. For meaning of this code, see chapter "Error codes".



Energy saving mode: If you do not actuate a button over a longer period of time, the transmitter switches off automatically.

LED display on the receiver

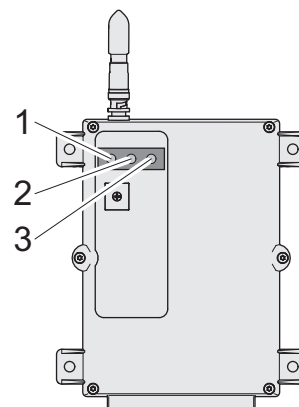

Description	LED 1	LED 2	LED 3
No supply	Off	Off	Off
Supply is ok and ready	Green light	Flashing weak green	Green light
Some type of radio signal was received (not necessarily by the corresponding transmitter)	Green light	Flashing orange when signal is received	Green light
Connection to the corresponding transmitter was correctly established	Green light	Flashing orange	Flashing green
Disturbance in HF channel (while radio connection is established)	Green light	Flashing orange	Flashing red
Fault while checking the EMERGENCY OFF relay	Green light	Flashing orange	Slowly flashing red
Other error sources	Off	(undefined)	Lights up or flashing red

Safety functions

To ensure safe operation at all times, the device is equipped with safety functions. To make the engine and the blade run, certain requirements need to be fulfilled. These requirements are described in the corresponding chapters.

The device is equipped with an Emergency Stop. To avert danger, switch off all functions of the device with the Emergency Stop. The device is immediately put into a safe state (see chapter "Emergency stop").

Information on mowing

Prior to mowing, check the device for completeness, proper function, and cleanliness. A dirty ventilation grid causes overheating of the engine which can result in engine damage. There is a risk of fire due to dirt on the muffler.

Frequent engagement and disengagement of the clutch increases wear of the blade drive belt and the blade brake. Especially in case of high grass, clutch engagement leads to overload.

To keep the area well maintained, mow frequently and keep the grass short.


Mow only with a sharp and undamaged blade. Check the knife and flail shaft regularly (see chapter "Maintenance"). Contact an authorized service center if you find faults or damage during the test.

Do not mow when the grass is wet or when it is raining. The turf may be damaged and there is a danger of slipping!

Turn the device around only in already mowed sections. Do not leave the device unattended while the engine is running.

Set the cutting height so that the blade edges do not touch the ground in case of uneven terrain.

For mowing, always turn the throttle lever to full throttle to achieve the best mowing performance.

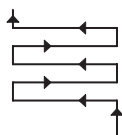

To avoid blockage during the ejection of grass, we recommend, for flat terrain, to proceed according to the mowing patterns. Mulch is shredded into much smaller pieces when you mow the terrain once again in the opposite direction.

Observe the notices for the danger area.

Stop the device when you change your position.

- Choose your position so that you are not in the danger area and you have a full view of the mowing area at all times.

Prior to starting

Checking the oil level

Notice

Incorrect oil level can damage the engine.

- Prior to each use, check the engine oil level.

Observe the information in the operator's manual of the engine manufacturer.

Fuel

For fuel, use lead-free gas (see operating instructions of the engine manufacturer).

You can use E10 fuel. Do not store E10 fuel longer than 30 days.

Do not use E85 fuel. The fuel must contain 10 % ethanol or less.

Adding fuel

Warning

Fuel is ignited by hot engine parts.

- Prior to filling up, switch off the engine and wait for at least 20 minutes until the engine has cooled down. Observe the safety instructions regarding the fuel!

Filling up with fuel

1. For filling, use a canister with filler spout or a funnel.
2. Open the canister carefully so that existing excess pressure is slowly reduced.
3. Open the tank cap carefully so that existing excess pressure is slowly reduced and no fuel sprays out.
4. Fill the fuel tank.
5. Tightly close the tank cap again.

Checking and changing the battery of the transmitter


When working, always carry extra batteries.

Consequences of too weak or unsuitable batteries in the transmitter are:

- The range of the radio contact drops.
- The radio contact becomes unreliable.
- An Emergency stop is triggered.
- The device cannot be operated any longer.

The transmitter can be operated with commercially available rechargeable batteries. Only use high-quality and charged rechargeable batteries to avoid functional problems.


Checking the battery

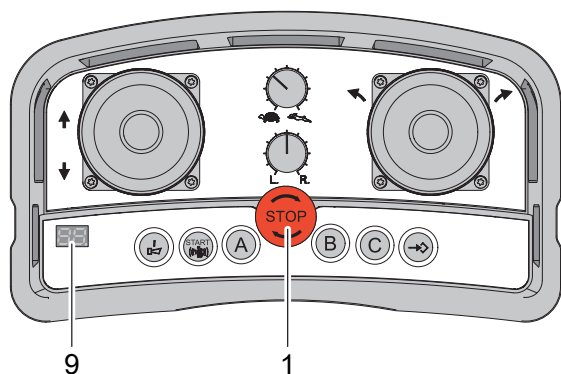

1. Switch on the transmitter with the start-stop switch (1).
 - ⇒ In the display (9) the frequency number is briefly shown.
 - ⇒ In the display (9) a dot jumps back and forth: The battery is ok.
 - ⇒ The display (9) flashes an "L": Warning low battery capacity. You can continue to operate the transmitter for approx. 30 minutes.

Notice: If the batteries are unsuitable or faulty, this test can produce an incorrect result. In that case, please replace the batteries.

Changing the batteries

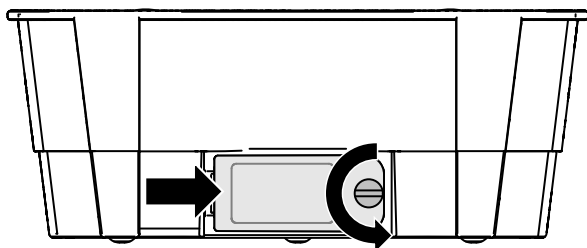

1. Move the device to a safe position and switch it off.
2. Loosen the locking screw at the battery compartment and remove the cover.
3. Replace the batteries with 2 new AA batteries or 2 charged AA batteries.
4. Close the cover and tighten the locking screw.
5. Switch on the transmitter via the start-stop switch.
6. Check if a dot is jumping on the display.

Adjusting cutting height

Warning


Risk of injury due to rotating blade.

- ▶ Only approach the stationary device from the rear before setting the cutting height.
- ▶ Disengage the blade before setting the cutting height.

The adjustment of the cutting heights is continuous.

Set the cutting height high enough so that the blade does not touch the ground even if the terrain is uneven. If the cutting height is set too high, objects can be ejected. In addition, the cutting pattern may deteriorate.

The top position is the maintenance position. In the maintenance position, the blade is automatically disengaged and cannot be engaged.

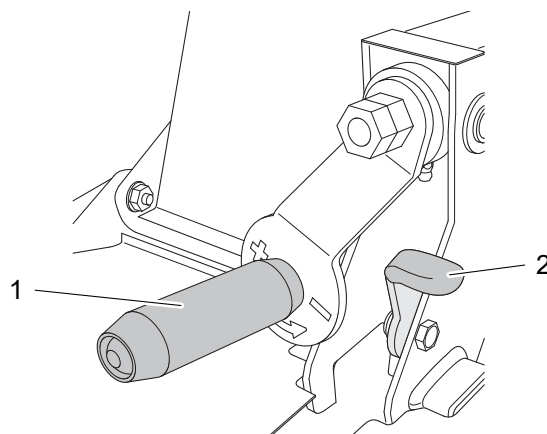

1. Stand behind the device.
2. Swing the safety bar (2) upwards.
3. Turn the crank (1), until the desired cutting height is reached.
 - ⇒ Turning in the + direction: increases the cutting height.
 - ⇒ Turning in the - direction: decreases the cutting height.
4. Swing the securing bracket (2) down to prevent unintentional adjustment of the crank handle when working.

Setting cutting height limit

Warning


Risk of injury due to rotating blade.

- Disengage the blade and switch off the engine before setting the cutting height limit.


The cutting height limit sets the minimum distance between the cutting tool and the skid.

The cutting height limit is continuous.

Set the cutting height high enough so that the blade does not touch the ground even if the terrain is uneven.

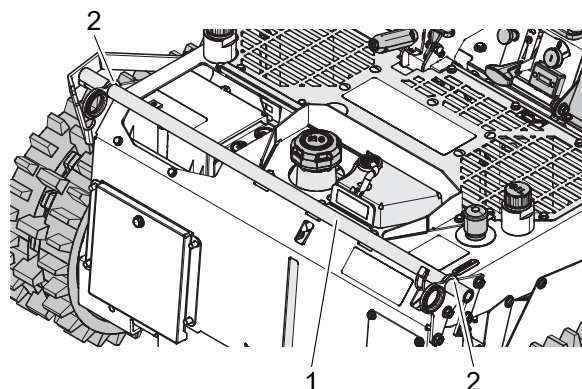


1. Loosen the securing splint and remove the extension (1) from the holder (2).

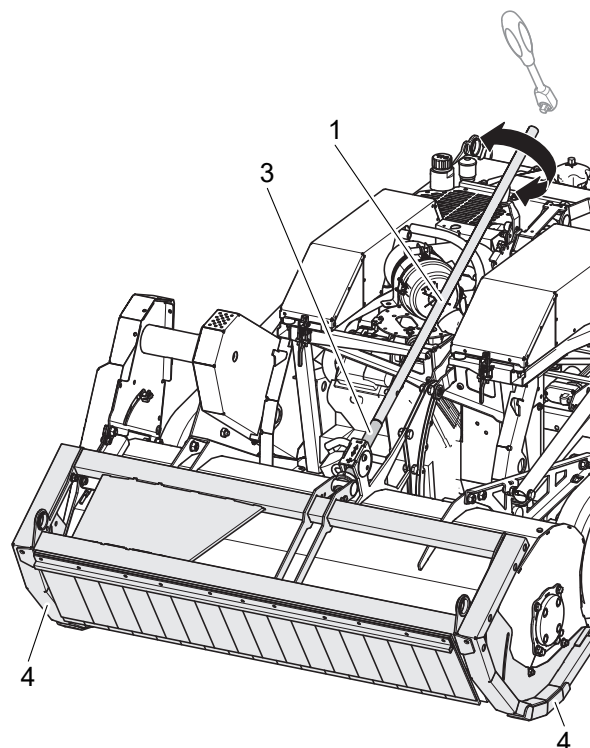

2. Set the extension (1) on the square (3) of the spindle.
3. Place a 1/2" drive socket wrench handle on the extension (1) and turn the square (3) until the skid (4) reaches the desired distance.
 - ⇒ Spindle on square (3) moves in direction +: increases the cutting height limit.
 - ⇒ Spindle on square (3) moves in direction -: decreases the cutting height limit.
4. Put the extension (1) back into the holder (2) and fasten it with the securing splint pin.

Switching on receiver and transmitter

1. Insert the key at the main switch on the device.
2. Turn the key to pos. I.

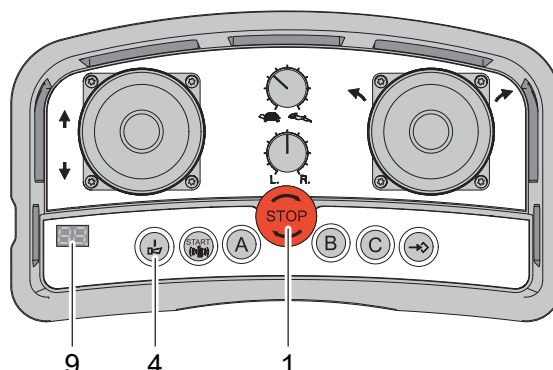


3. Turn the start-stop switch (1) clockwise to switch on the transmitter.
4. Wait until the horn of the device sounds once.
 - ⇒ In the display (9) the frequency number is briefly displayed.
5. Press the button "Horn" (4) on the transmitter to get the device ready for operation.
 - ⇒ The horn signals that the device is ready for operation.

Selecting radio frequency

When you switch on the transmitter, the receiver automatically searches a suitable frequency.

If several remote controlled devices are operated at the same time or when another transmitter is located close by, faults in the radio contact can occur. If this is the case, change the frequency.

Changing the radio frequency

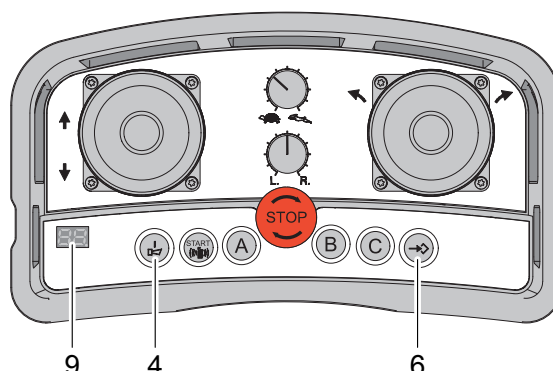

1. Continue to press the button "Display frequency" (6).
2. Press the button "Horn/acknowledge" (4).
 - ⇒ In the display (9) the frequency number is briefly displayed.
 - ⇒ When the transmitter has set a new frequency, the horns sounds and the device is ready for operation.

Training operation

Warning


Risk of injury due to rotating blade.

- Make sure that nobody is in the danger area.

Warning

Risk of injury caused by ejected objects.

- Never mow when persons, children, pets or material assets are in the danger area.

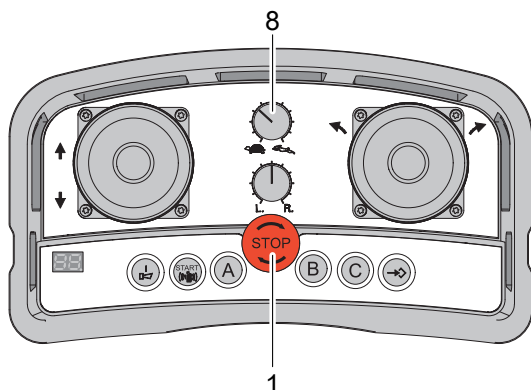

Limit the maximum travel speed using the rotary knob (8) on the transmitter.

Notice: Travel speed may not exist if a very low setting is used.

Make sure that you know at all times how to stop the device:

- Press the start-stop switch (1) on the transmitter.

First practice driving and steering with the blade switched off on a large, open and level area.

Practice driving around obstacles.

Never steer the device towards yourself.

Mow on a level and clear area first, slowly increase the difficulty (uneven terrain, obstacles, slight slopes).

Move on to difficult terrain and slopes only after you have safely mastered the device.

Operating

Starting the engine

Requirements

- Receiver and transmitter are switched on and ready for operation.
- The blade is disengaged.

Starting

Danger


Danger of poisoning due to poisonous exhaust gases.

- Do not operate the engine in closed or insufficiently ventilated rooms.
- Please observe the safety instruction regarding the poisoning risk.

Warning

Risk of injury due to unexpected movement when switching on and starting.

- Make sure that no persons or property are in the danger area.
- Immediately press the start-stop switch on the transmitter and the Emergency Stop on the device if an unexpected movement occurs.
- Make sure that no further hazards result from an unexpected movement.

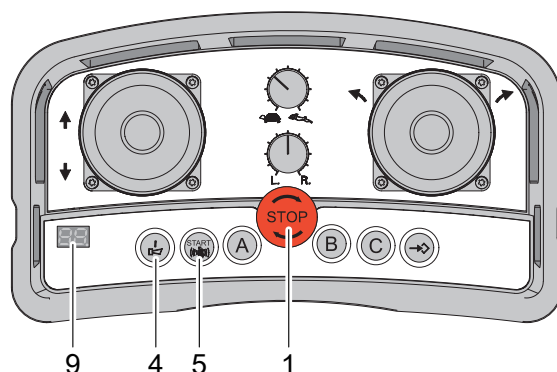

1. Cold start:

Move the throttle lever to middle position. Close the starter flap (choke).

When the engine is warm:

Move the throttle lever to full throttle position. Do not use the starter flap (choke).


- Insert the key at the main switch on the device.
- Turn the key to pos. I.
- Turn the start-stop switch (1) clockwise to switch on the transmitter.
- Wait until the horn of the device sounds once.
 - ⇒ In the display (9) the frequency number is briefly displayed.
- Press the button "Horn" (4) on the transmitter to get the device ready for operation.
 - ⇒ The horn signals that the device is ready for operation.
- Press the "Engine start" button (5) on the transmitter.
 - ⇒ Engine is started.
- Only after cold start:** Open the starter flap (choke).

Steering

Notice

Steering while stationary or turning on the spot can damage the ground.

- ▶ Only steer or turn when stationary if the ground is not damaged.
- ▶ Note that steering while stationary on a surface with good grip (e.g. concrete or asphalt) can lead to increased wear of tracks.

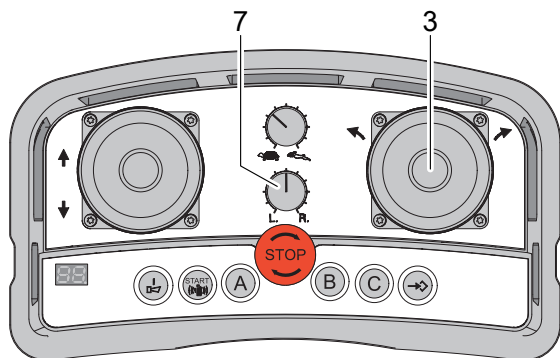

Steer the device with the right joystick (3) to the left or right. The further you push the joystick, the more the device steers.

Steering when stationary

The device rotates around its own axis.

The further you push the joystick, the faster the device rotates.

When you release the joystick, the rotary movement is stopped.

Steering while driving

The device drives a curve.

The further you push the joystick, the tighter the curve becomes.

When you release the joystick, the device steers straight forward.

Trimming steering

If the device does not drive straight despite the center position of the steering, compensate with the "Trim steering" rotary knob (7).

- R.** When the device moves to the left:
Turn the rotary knob "Trim steering" (7) to the right until the device drives straight ahead.
- L.** When the device moves to the right:
Turn the rotary knob "Trim steering" (7) to the left until the device moves straight ahead.

Turning

The device can be turned on the spot.

When turning the device, always stand so the device moves away from you.

Driving

Warning


Risk of injury when driving forwards and in reverse.

- ▶ Make sure that no people are in front of or behind your device and that your path is clear of obstacles.
- ▶ Make sure that no persons, children or animals ride along.
- ▶ Do not drive yourself on the device.
- ▶ Make sure that you are outside the danger zone.

Warning

Driving on slopes is dangerous. There is a tilting and slipping hazard.

- ▶ Observe the safety instructions regarding "Driving on slopes" and "Danger area".

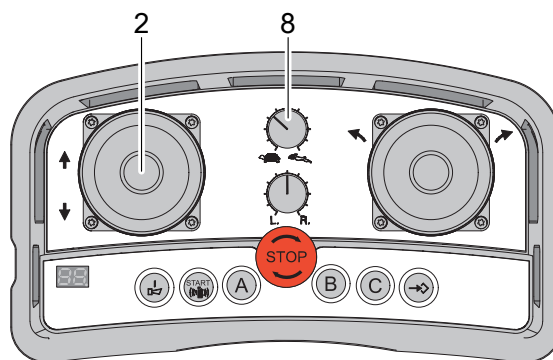

Adjust the speed and the direction of travel with the left joystick (2).

The more you push the joystick, the faster the device moves.



Moving forward: Pressing joystick forward

Stopping (neutral position/parking brake): Releasing the joystick



Moving in reverse: Pressing joystick backward

Always reverse slowly. Be especially cautious when the blade is engaged.

Limiting the speed



Fast maximum travel speed



Slow maximum travel speed

Use the rotary knob (8) to limit the travel speed to a speed at which you can safely control the device. This speed is reached when you push the joystick for the driving speed as far as it will go.

Notice: The adjustment of the driving speed to the mowing conditions enables:

- Clog-free mowing.
- Comfortable holding of the joystick at the stop.

Driving on steep terrain

Warning

Driving on slopes is dangerous. There is a tilting and slipping hazard.

- ▶ Have skilled personnel who were trained by the manufacturer show you the safe handling of the device before you mow on steep terrain.
- ▶ Observe the safety instructions regarding “Driving on slopes” and “Danger area”.

Notice

Particularly in steep terrain, the engine can be damaged if the oil level is too low.

- ▶ Prior to each use, check the engine oil level (see chapter “Maintenance”).

Preferably drive crosswise on the slope. This reduces the risk of tipping and improves the traction of the tracks.

Notice: Excessive steering movements on steep terrain reduce traction. The device may stop or damage the ground.

Engaging blade

Warning

Risk of injury due to rotating blade.

- ▶ Make sure that no persons, children, animals or objects are in the danger area.
- ▶ Only approach the stationary device from the rear before disengaging the blade.
- ▶ Immediately leave the danger area to the rear after engaging the blade.

Warning

Risk of injury caused by ejected objects.

- ▶ Never mow when persons, children, pets or material assets are in the danger area.

Only engage the blade when it can rotate freely and does not touch objects or the ground.

Do not engage the blade in uncut grass because the blade drive is overloaded, can be damaged or wears prematurely.

Requirements

- The engine is running.
- The blade is not in maintenance position.

Engaging blade:

1. Stand behind the device.
2. For mowing, set the throttle lever to the maximum speed.
3. Lift the blade clutch lever.
4. Press the latch knob on the blade clutch lever.
5. Move the blade clutch lever down quickly.
 - ⇒ The blade is engaged.
 - ⇒ Status indicator on the device flashes.

Disengaging blade:

1. Stand behind the device.
2. Move the blade clutch lever quickly upwards.
 - ⇒ The blade is disengaged.
 - ⇒ The status indicator no longer flashes.

Switching off and parking

Warning

There is a risk of injury in case of unauthorized use.


- Press the start-stop switch on the transmitter.
- Remove the key on the main switch when you are not using the device.

Warning

Risk of injury due to device that is no longer controllable.

If you switch off the main switch on the device first, the receiver is no longer active. The parking brake is not activated and the device can roll away.

- Always switch off the device in the order described in the following section.

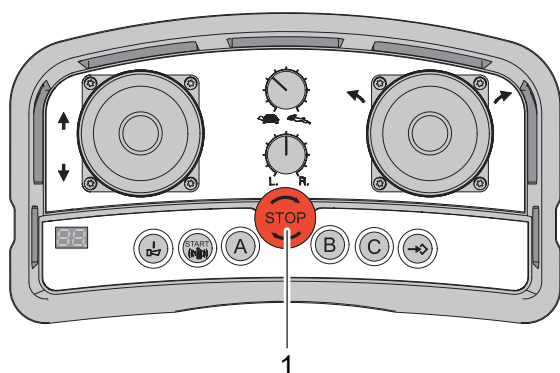

1. Release both joysticks.
2. Press the start-stop switch (1) on the transmitter.
 - ⇒ The engine is off.
 - ⇒ The travel drive goes to zero position.
 - ⇒ After 10 seconds, the horn sounds with interval.
3. Switch off the device using the main switch.
 - ⇒ The sounding of the horn in intervals is finished.
 - ⇒ The receiver is now de-energized.
4. Remove the key from the main switch.
5. Disengage the blade.

Notice: If you do not switch off the main switch at the device, the receiver continues to consume power. After 10 seconds, the horn sounds with interval. Switch off to the main switch so that the battery is not discharged.

Emergency stop

The device is equipped with an Emergency Stop. To avert danger, switch off all functions of the device with the Emergency Stop. The device is immediately put into a safe state.

Immediately press the Emergency stop switch,

- in an emergency or a dangerous situation.
- if the device does not work properly.

Do not use the Emergency stop switch to normally switch off the device.

Be extremely cautious when switching on again. Make sure that you are not in the danger area.

Causes of the Emergency stop

- Loss of radio connection between transmitter and receiver
- Press the Emergency Stop switch on the device.

Notice: When the control detects an error, the error code is displayed. For meaning of this code, see chapter “Error codes”.

Consequences of an Emergency Stop

The device is brought into a safe state.


- The engine is switched off.
- The travel drive goes to zero position.
- The parking brake is activated.
- The control function of the transmitter is switched off.

Procedure after an Emergency stop

Warning

Risk of injury due to unexpected movement when switching on and starting.

- Make sure that no persons or property are in the danger area.
- Immediately press the start-stop switch on the transmitter and the Emergency Stop on the device if an unexpected movement occurs.
- Make sure that no further hazards result from an unexpected movement.

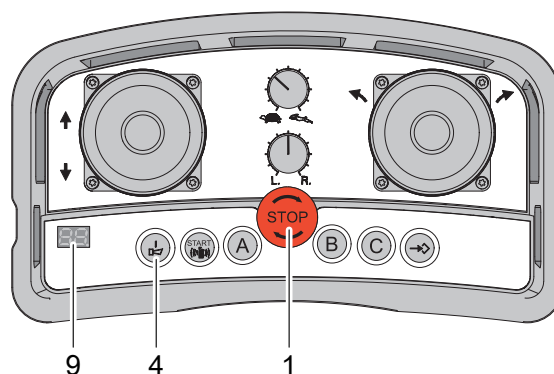

After an Emergency Stop, the following starting procedure must be carried out.

1. Check and eliminate the cause for the Emergency Stop.
2. Disengage the blade.
3. Turn the Emergency stop on the device clockwise.

4. Switch off the transmitter by pressing the start-stop switch (1) and wait 5 seconds.
5. Turn the start-stop switch (1) clockwise to switch on the transmitter.
6. Wait until the horn of the device sounds once.
 - ⇒ In the display (9) the frequency number is briefly displayed.
7. Press the button "Horn" (4) to get the device ready for operation.
 - ⇒ The horn signals that the device is ready for operation.

Transport


Transport the device on a freight vehicle or a trailer which is designed for a carrying capacity of at least as great as the empty weight of the device.

Transport on pallets

For transport over short distances, use a fork lift or a lift truck.

For longer distances, load the device with a fork lift onto a freight vehicle or trailer.

The user must be authorized to operate a fork lift. When the machine is lifted, all persons must step away from the working area of the fork lift.

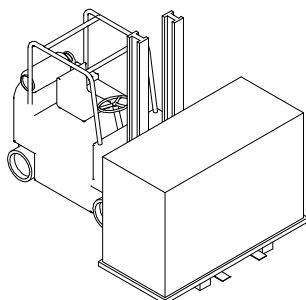

Notice! Drive the fork lift completely under the longitudinal beams of the wooden pallets.

Transport of ready-to-use device

Warning

Risk of injury due to the heavy weight of the device. The device can fall over and fall down and cause severe injuries.

► Observe the following notices.

Do not stay in the tilting area of the device.

Prior to each transport, let the device cool down for at least 20 minutes.

Loading

Use suitable ramps for loading that



- can carry the empty weight of the device + 200 kg (440 lbs).
- are wider than the device.
- have a slip-free surface.

Notice

Risk of damage due to incorrect fastening of straps.

- Fasten the straps only at the points shown in the figure.
- Do not overtighten the straps.

1. Put the device in front of the ramps and make sure that the ramps
 - are as wide as the wheel gauge of the device.
 - are tightly secured to the platform.
 - are not steeper than 15°.
2. Carefully drive the device via the ramps onto the platform.
3. Observe the instructions in chapter "Switching off and parking".
4. Secure the device against rolling, sliding and tilting. Use straps that support the weight of the device.
5. Set the mower to the lowest cutting height so that the cutting height limit touches the ground.
6. Tie down the device to tie down points and frame parts with straps that can hold the weight.

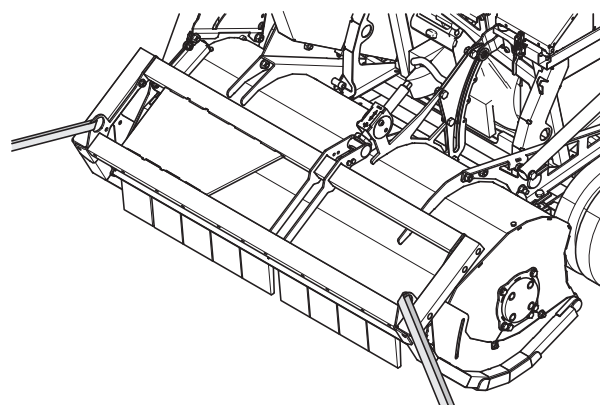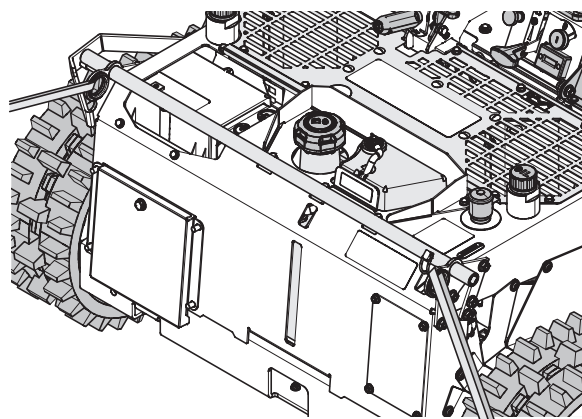

Unloading the device

1. Release and unhook all tie down points.
2. Carefully drive the device over the ramps off the loading area.

Observe the information in chapter "Loading".

Maintenance

Danger

Danger of poisoning due to poisonous exhaust gases.

- ▶ Do not operate the engine in closed or insufficiently ventilated rooms.
- ▶ Please observe the safety instruction regarding the poisoning risk.

Warning

Burn hazard from hot surfaces.

- ▶ Switch off the engine.
- ▶ Let the device cool down for at least 20 minutes before you start any maintenance and cleaning work.

Warning

Risk of injury due to unexpected movement. When inspections are carried out, the device can move unexpectedly.

- ▶ Make sure that no persons or property are in the danger area.
- ▶ Immediately press the start-stop switch on the transmitter and the Emergency Stop on the device if an unexpected movement occurs.
- ▶ Make sure that no further hazards result from an unexpected movement.

Warning

Risk of injury during maintenance and cleaning work when the engine is running.

- ▶ Perform maintenance tasks only then with a running engine if this is required in the Maintenance table.

Prior to all maintenance and cleaning work when the engine is not running:

1. Let the device cool down for at least 20 minutes.
2. Press the start-stop switch on the transmitter.
3. Switch off the device using the main switch.
4. Pull off the ignition key.

Improper maintenance can make the device unsafe for operation and result in accidents. Regular maintenance keeps your device ready for use.

Service the device according to the following maintenance instructions.

Contact an authorized service center if problems during maintenance occur or if you determine deficiencies during one of the following inspections.

Maintenance overview

Component	Action	Maintenance interval	
		A	B
Device	Clean.	■	
	Perform basic inspection.	■	▲
	Check the RC functions.	■	▲
	Check the safety functions.		▲
Mower	Clean. See chapter "Cleaning mower".	■	
Fuel	Check fuel level.	■	
	Is the tank cap closed?	■	
Tank and fuel line	Check parts for leaks and check for good condition.	■	▲
Ventilation grid	Clean.	■	▲
Engine cooling	Clean.		▲
Spark plug	Check/replace (see operator's manual of the engine manufacturer).		▲
Air filter	Maintain (see operator's manual of the engine manufacturer).	■	■▲
Blade and fastening components	Check for wear and damage (see chapter "Checking the blade").	■	▲
	Change.		▲
	Clean the screw-on point of the knife blade.	■	
Blade brake clutch	Does the blade function safely and does the blade stop in 7 seconds?	□	▲
Traction drive	Is the device stationary when the left joystick is in the center position?	□	▲
V-belt	Are the belts tensioned correctly, without fissures, and in good condition?		▲
Bowden cables	Check for proper function and ease of movement.	■	▲
Throttle lever	Check for proper function.	□	▲
Chassis and impact protection	Check for rust and fissures and check the welding seams.	■	▲
	Are all protective devices and covers in place, fastened correctly and properly functioning?	■	▲
Label	Condition of the labels.	■	▲
Engine	Binding information (see operating instructions of the engine manufacturer).	■	▲
	Check the oil level (see operating instructions of the engine manufacturer).	■	▲
	Oil change (see operating instructions of the engine manufacturer).		▲
	Oil filter change (see operating instructions of the engine manufacturer).		▲
Parking brake	Check.	■	▲
Flammable material	Remove easily flammable debris buildup from the engine and the device.	■	▲
Tracks	Check for wear.	■	▲
	Check the tension.	■	▲
Emergency stop switch	Check.	□	▲

Maintenance

Start-stop switch	Check.	□	▲
Hydrostatic transmission	Check oil level.		▲
	Check for leaks.	■	▲
	Oil change after 50-100 h and every 200 h thereafter.		▲
Gearbox	Check the oil level.		▲
Lubrication	See chapter "Grease lubrication".	■	▲ ■
Battery of the device	Check the charging conditions.		▲
Safety function	Check.	■	▲
RC functions	Check.	□	▲

A Before and after each use.

B Once a year or every 50 h.

■ By the operator when the engine is not running.

□ By the operator when the engine is running.

▲ By the authorized service center.

Maintenance and cleaning position

Warning

Risk of injury due to the heavy weight of the device. The device can fall over and fall down and cause severe injuries.

► Observe the following notices.

To perform maintenance, repair or cleaning tasks at the bottom of the device, you can lift or tilt the device.

- Lift the device only when on level and firm terrain.
- Use only lifting gear or ramps that are suitable for the weight of the device.
- Attach the lifting gear only to the main frame because only the main frame can carry the weight.
- Secure the device always against tilting, falling down or slipping.
- Do not stay in the tilting area of the device.
- Do not tilt the device more than indicated in the safety instructions regarding driving on the slope. Otherwise the device can tilt and the device can be damaged or contaminations can occur due to leaking fluid.
- Do not carry out tasks that can result in tilting, falling down or slipping of the device.

Cleaning the device

Depending on use, clean the device thoroughly, especially the bottom and the blade.

Grass build-up and dirt that are stuck interfere with the grass ejection and impair the cutting quality.

For sufficient cooling of the hydrostat transmission, keep the transmission casing and the area around the transmission fan clean.

Fire hazard! Take particular care that the components at the muffler are clean.

For cleaning, use a hand brush. Remove stubborn dirt with a wooden or plastic spatula. Clean the outside housing parts with a cloth.

Do not clean the device with water spray or high-pressure cleaner! Do not use any aggressive cleaning agents.

Cleaning the mower unit

Notice

Cleaning agents damage the mower unit.

► Clean the mower unit with water only.


Clean the mower immediately after mowing. Avoid that the dirt dries up and is difficult to remove.

1. Switch off the engine.
2. Move mower to maintenance position.
3. Clean the mower with water. A strong water jet improves the cleaning effect.

Cleaning engine cooling

A dirty ventilation grid causes overheating of the engine which can result in engine damage. To sufficiently cool the engine, keep the engine cover, ventilation grid and engine clean.

Keep the ventilation grids free of dirt even during operation.

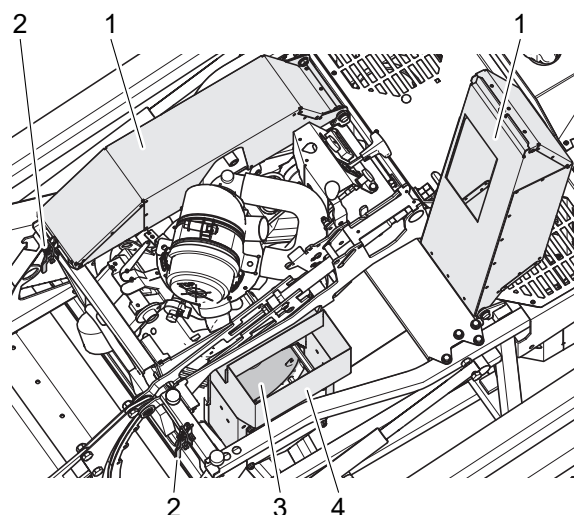

1. Switch off the engine.
2. Remove dirt from both ventilation grids (1).
3. Release the tension lock (2) and open the ventilation grid (1).
4. Clean the round cooling air grille (3) of the engine.
5. Clean the cooling air duct (4), especially the inside.
6. Close the ventilation grid (1) and secure it with the tension lock (2).

General inspection

To make sure that the device can be operated safely, check all nuts, bolts, screws, connection of fuel lines, air filters etc. regularly for firm seating. Check the ignition wire and the spark plug connectors for damage.

Immediately replace damaged or worn parts, especially covers, protection skirt, muffler or fuel tank (authorized service center).

Check all parts that contain fluids for leaks and proper condition. These can be: Fuel tank, fuel valve, fuel lines, carburetor, engine, gears, battery, hydraulic system.

In case of leaks, contact an authorized service center.

Checking safety function

Check the safety switches for proper function. It must not be possible to start the engine when:

- The blade clutch is switched on.

Checking the RC functions


Warning

Risk of injury due to unexpected movement. When inspections are carried out, the device can move unexpectedly.

- Perform the tests in a sufficiently large and clear area without obstacles.
- Make sure that no persons, children, animals or objects are in the danger area.
- Observe the safety instructions at the beginning of the chapter Maintenance.

Contact an authorized service center if you notice any deviating behavior during the test or if, for example, the steering trim cannot be adjusted correctly.

The controller may need to be calibrated or there may be mechanical malfunctions.

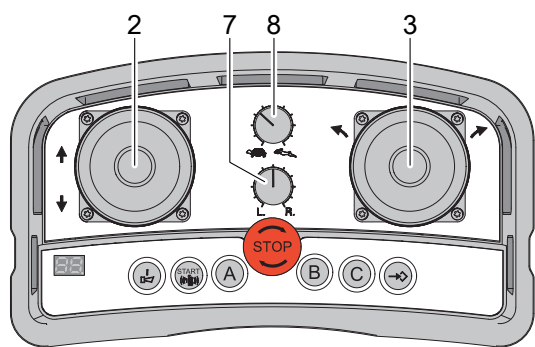

Checking when the engine is running

1. Set the rotary knob "maximum travel speed" (8) to rabbit.
2. Start the engine (see chapter "Starting the engine").
 - ⇒ The device must be stopped.
3. Pull the throttle lever all the way up.
 - ⇒ The engine is idling.

Perform all further tests exclusively with idle throttle.

Checking the traction drive

1. Press the left joystick (2) forward.
 - ⇒ The device must move forward.
2. Press the left joystick (2) backwards.
 - ⇒ The device must move backwards.
3. Release the left joystick (2).
 - ⇒ The device must stop and stand still.

Checking steering when stationary

1. Press the right joystick (3) slowly to the left.
 - ⇒ The device rotates slowly on the spot to the left. The left tracks move backwards, the right tracks move forward.
2. Press the right joystick (3) slowly to the right.
 - ⇒ The device rotates slowly on the spot to the right. The left tracks move forward, the right tracks move backwards.

The further you push the right joystick (3), the faster the device rotates.

Checking and adjusting steering trim

When steering while stationary, the steering trim has no effect.

1. Slowly press the left joystick (2) forward.
 - ⇒ The device should move straight forward.
2. When the device moves to the left:
 - Turn the rotary knob "Trim steering" (7) to the right until the device drives straight ahead.
3. When the device moves to the right:
 - Turn the rotary knob "Trim steering" (7) to the left until the device moves straight ahead.

Checking steering while driving

1. Slowly press the left joystick (2) forward – the device must move forward.
 - ⇒ The device drives a curve to the left.
2. Press the right joystick (3) slowly to the left.
 - ⇒ The device drives a curve to the right.
3. Press the right joystick (3) slowly to the right.
 - ⇒ The device drives a curve to the left.

If you press the joystick (3) completely, the inner curve tracks stop.

Checking the Emergency stop switch

1. Start the engine (see chapter "Starting the engine").
2. Move on a terrain where the blade can rotate freely and does not touch objects or the ground.
3. Make sure that nobody is in the danger area of the device.
4. Press the Emergency stop switch on the device.
 - ⇒ The engine must stop.

Checking start-stop switch

1. Start the engine (see chapter "Starting the engine").
2. Drive on large, open and level terrain.
3. Make sure that nobody is in the danger area of the device.
4. Drive slowly forward.
5. Press the start-stop switch on the transmitter.
 - ⇒ The drive goes to neutral position, the parking brake is active.
 - ⇒ The engine must stop.

Checking main switch

1. Remove the key from the main switch.
 - ⇒ The key may only be removed in position 0.

Checking maintenance and cleaning position of the blade

1. Put the blade into maintenance and cleaning position.
 - ⇒ Now the blade should not engage.

Checking the parking brake

Warning

If the parking brake is not properly adjusted, the device can roll away.

- Make sure that the parking brake always functions correctly.

1. Drive the device uphill into terrain with a 30° to 40° slope.
2. Stop the device.

- ⇒ The device must remain stationary and not roll downhill.

If the tracks lock up, the parking brake is set correctly.

If the device moves, the parking brake must be readjusted by an authorized service center.

Checking the blade and flail shaft

Warning

Wear or damage on the blades and the fastening elements can result in the blades or the fastening elements coming off.

- Check the blades and all fastening elements according to the following instructions.

Warning

There is a considerable risk of injury due to improperly mounted and maintained blades.

- Work at blades must be carried out by an authorized service center.



Use solid gloves when you check the blade.

Working with the blade and the blade shaft requires special skills and therefore may only be carried out by an authorized service center.

Check the blade, the flail shaft and all fastening elements for completeness, wear, damage and cracks

- each time before and after you mow.
- in case of noticeable changes or unusual vibrations.

Contact an authorized service center if you detect faults or damage during inspection.

All shown blade parts and their fastening elements must be changed

- if damage or cracks are detected.
- if unusually strong vibrations occur.
- at least once a year or every 50 operating hours, no matter if wear does exist or not.

The material weakens, can suffer cracks, endangering people and material assets. Ejected broken pieces can cause severe injuries.

Unusual vibrations are an indication that


- blades are missing or broken,
- the blade is worn excessively or on one side or
- damage to the engine or cutter deck fastening.

Changing the flail blades


Warning

Blades cannot and must not be sharpened. There is a considerable risk of injury due to improperly maintained blades.

- Always replace a damaged or worn blade with a new replacement blade.

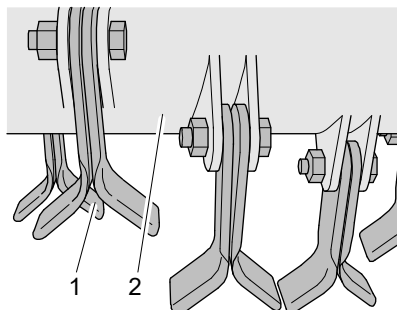

New blade

 

Replacing the blade

- broken



- bent



- worn on both sides



Turning over the blade

- worn on one side



The flail blades (1) can be mounted to both sides. Turn all flail blades over together when:

- one side is worn and
- when the other side of the flail blade has not yet been used.

Replace a flail blade when the blade is:

- broken,
- torn,
- bent or
- worn on both sides.

In case of uneven wear, there is a risk of imbalance.

Replace all flail blades together when more than 2 flail blades are damaged or worn.

For each blade change, check the flail shaft (2) for damage and cracks.

Always have a new spare blade ready.

Original blade

An original blade is engraved with:

AS G90180003

Replacement blade

Contact your Gravely dealer to purchase replacement blades for your device.

Description	Quantity	Part No.
Flail blade with fastening part	1	54900100
Flail blade with fastening part (set)	28	54901100

Checking the fastening elements and the flail shaft

Warning


Wear or damage at the flail shaft and the fastening elements can result in the flail blade or the fastening elements coming off.

- Check the flail shaft, mounting plates, fastening screws and corresponding nuts of the flail blades.

Notice

Over-tightening the fastening elements could damage the fastening elements and fastening straps.

- When tightening new fastening elements, tighten the nuts snug to the fastening straps. Do not over-tighten the fastening elements.

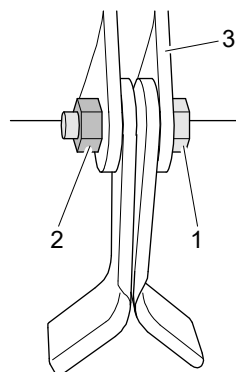

The fastening elements are worn down during mowing. Replace the fastening screws (1) and the corresponding nuts (2),

- if they are worn by more than 0.04 in (1 mm) in diameter and
- for each blade change.

Only use original spare parts.

For each blade change, check the flail shaft for damage. The fastening straps (3) must not be damaged, bent or knocked out. Contact an authorized service center if damage, cracks or wear have occurred.

Checking the blade brake clutch

1. Start the engine (see chapter "Starting the engine").
2. Move on a terrain where the blade can rotate freely and does not touch objects or the ground.
3. Make sure that nobody is in the danger area of the device.
4. Turn the throttle lever to the maximum engine speed.
5. Engage the blade.
6. Disengage the blade.
 - ⇒ The blade must stop from maximum speed in less than 7 seconds.
 - ⇒ The status indicators on the device must go out.

Checking tracks

Checking the condition of the tracks

Check the tracks for completeness, wear, damage and cracks.

– each time before and after you mow.

Contact an authorized service center if you determine faults or damage during the inspection.

The tracks must be changed

- If damage or cracks are found.
- if the cleats of the tracks are worn out.
- if the steel cables of the tracks are exposed.
- if broken steel cables are visible.

Change the tracks in pairs.

Checking tracks tension

Notice

Risk of damage due to incorrectly tensioned tracks.

- Always make sure that the tracks are correctly tensioned.

Tracks that are not sufficiently tensioned can detach from the device during travel.


Excessively tensioned tracks increase the stresses on the equipment and can cause damage to the tracks.

The tracks tension is set correctly if the length of the spring pack (5) is 125 mm (4.92 in).


The spring pack (5) is accessible from above.

Tensioning tracks


You can carry out the work described below while the device is standing on a level surface.

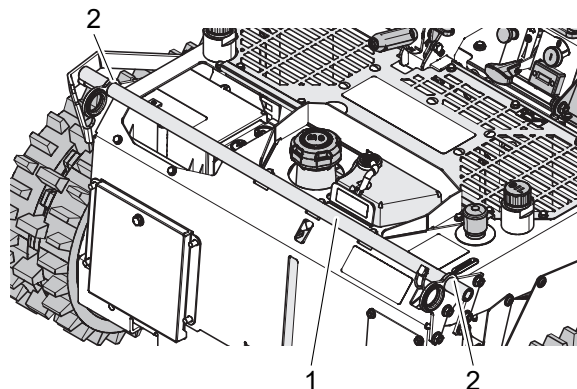

1. Loosen the securing splint and remove the extension (1) from the holder (2).

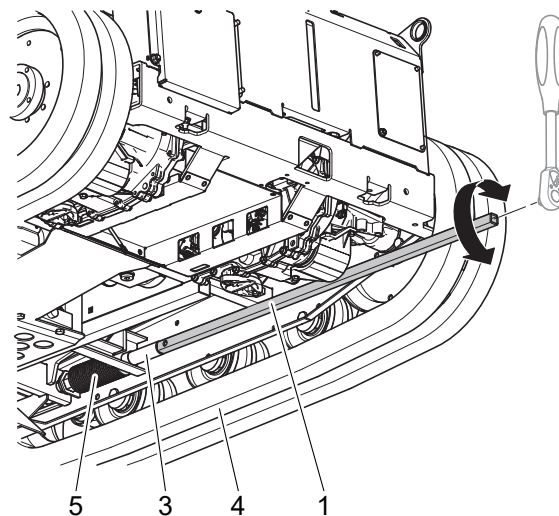

2. Insert the extension (1) from the back of the device and pass it under the device.
3. Set the extension (1) on the square (3).
4. Place a 1/2" socket wrench handle on the extension (1) and turn the square (3) clockwise to tension the tracks (4).

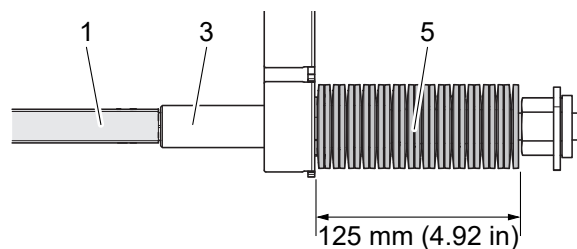

5. Tension the tracks so that the spring pack (5) has a length of 125 mm (4.92 in).
6. Tension the other tracks in the same way.
7. Put the extension (1) back into the holder (2) and fasten it with the securing splint pin.

Maintaining the engine

Danger

The ignition system generates an electromagnetic field.
 ► Wearers of pacemakers must not work on active parts.

Warning

Burn hazard from hot surfaces.
 ► Switch off the engine.
 ► Let the device cool down for at least 20 minutes before you start any maintenance and cleaning work.

Caution

If the speed is set too high, objects can be ejected. The engine can be damaged and a higher level of noise pollution is produced.
 ► Do not change the basic setting of the carburetor or the speed control.

The engine manufacturer has prepared the operating manual of the engine. The manual contains all maintenance requirements and warranty conditions for the engine. If warranty work at the engine is required, contact your authorized service center or the next authorized dealer for engines.

To ensure a long service life of the engine, sufficient engine cooling is required.

Keep the

- engine cover (ventilation grid),
 - muffler (protective grid) and
 - cooling fins of the engine
- clean at all times.

Checking the engine oil level


Notice

Incorrect oil level can damage the engine.
 ► Prior to each use, check the engine oil level.

The oil level may never be too low; otherwise, the engine can be damaged. When moving on slopes, the oil level should always be at the top level.

Never fill in too much oil. Otherwise there is a risk that oil enter the air filter and destroys it.

Observe the information in the operator's manual of the engine manufacturer.

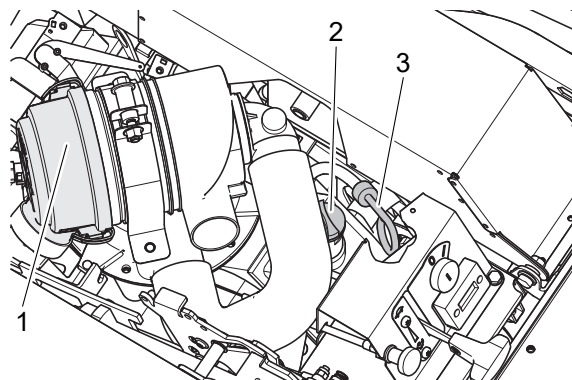


- 1: Air filter
- 2: Oil filler neck
- 3: Oil dipstick

Check oil level of the gearbox.

Notice

Incorrect oil level can damage the gearbox.
 ► Prior to each use, check the oil level.

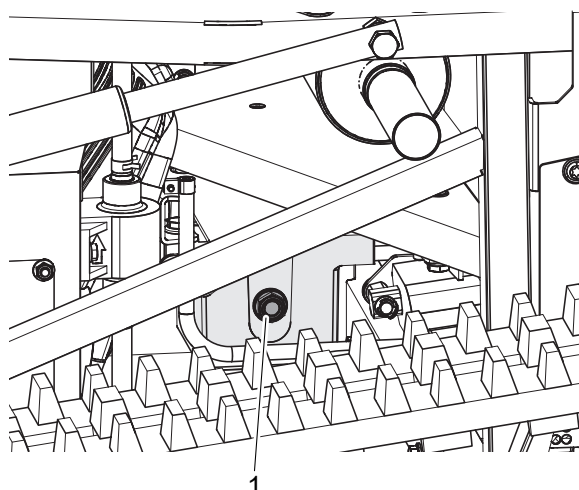

Place the device for 30 minutes on a level surface before you check the oil level.

The inspection glass (1) should be at least 1/2 full of oil.



If the oil level is lower than 1/3 of the inspection glass, damage to the gearbox due to overheating can result.

Contact an authorized service center when the oil level is too low.

Maintaining the air filter

Warning

- There is a fire and explosion risk due to cleaning agents.
- ▶ Never clean the air filter with flammable solvents.

Make sure that the air filter is always clean. A dirty air filter reduces the engine power and leads to increased engine wear and fuel consumption. Independent of the operating hours, change the filter insert at least once a year. Do not operate the engine without air filter.

Observe the information in the operator's manual of the engine manufacturer.

Checking and charging the battery

Warning

- Batteries can be dangerous.
- ▶ Keep children away.
 - ▶ Never perform any changes to the battery.
 - ▶ The battery is sealed and may never be opened.
 - ▶ For all work on the battery or the battery cables, wear safety glasses and gloves.
 - ▶ If accidents with battery acid occur, always contact a doctor.

Warning

- Explosion hazard
- When the battery is charged, explosive gases are generated. An explosion of the battery can result in injuries and blindness.
- ▶ Keep open flames and ignition sources away and do not smoke.
 - ▶ Charge the battery only in well ventilated rooms.

Warning

- Danger of chemical burn
- Batteries contain acids. Contact with battery acid can result in blindness or serious burns.
- ▶ Always keep the battery upright and do not spill any battery acid.
 - ▶ Avoid contact with skin and eyes.
 - ▶ If battery acid comes into contact with eyes, immediately rinse with water.

Notice

- Work on the battery can damage the receiver.
- ▶ Press the start-stop switch on the transmitter. Switch off the device at the main switch and remove the key.

If the starter does not get the engine going or only insufficiently, charge the battery.

Use electronically controlled charging systems. These charging systems detect the connected battery and charge it with the required charging current and terminate the charging process when the battery is fully charged.

Optional: Use a charger that is equipped with a 12 V connection for standard norm outlets. Insert the plug for charging into the standard norm outlet.

Charge the battery and disconnect the ground cable before you put the device away for winter storage.

Notice: Do not store the battery in freezing temperatures.

Exchanging the battery

Warning

- When you work on the battery, there is a risk of short circuit.
- ▶ Do not put any tools or metal objects onto the battery.
 - ▶ When disconnecting and connecting the battery, observe the order of assembly steps.

Important: Only use original batteries.

You can buy original batteries from your dealer. Also observe all information in the operator's manual of the battery (if existing).

Beware! Never confuse the plus and minus terminals.

1. Disconnect the black cable (-).
2. Disconnect the red cable (+).
3. Dismantle the battery from the device.
4. Mount the new battery into the device.
5. Connect the red cable (+).
6. Connect the black cable (-).

Hydrostat transmission

Warning

- Risk of injury due to high pressure in the hydraulic system.
- ▶ Check the hydraulic drive system for leaks, damage and chafe points.

Warning



- When oil leaks there is a danger of environmental pollution.
- ▶ Check the hydraulic drive system for leaks before and after mowing.

Oil changes must be carried out by an authorized service center (see chapter "Maintenance overview").

Check if the transmission fan is undamaged.

The hydrostatic drive generates a monotone working noise that gets louder as the load is increased (e.g. in steep terrain). If the working noise changes, if it gets irregular or very loud, let the hydrostatic drive cool down. If the changed working noise still exists, have the device checked by an authorized service center.

Grease lubrication

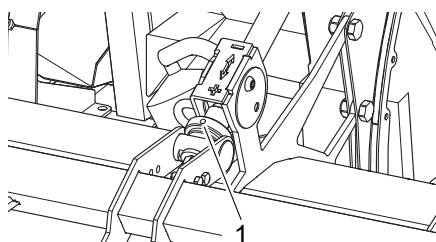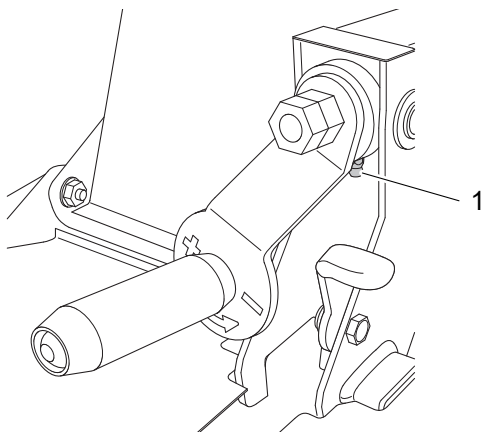

A grease fitting (1) is attached to the cutting height adjustment and the cutting height limit.

1. Clean the lubricating fittings.
2. Lubricate the lubricating fittings with a grease gun (1-2 strokes pressure-resistant grease).
3. Remove excess grease that has been pressed out of the bearing points.
4. Clean the spindles, especially if they are dirty or sluggish.
5. Grease the spindles.

Assembly

Scope of delivery

The device is shipped in a crate. The scope of delivery includes:


- The device.
- The transmitter with batteries and belts.
- Key for main switch.
- Rain cap for air filter.
- Tool bag with small parts.
- This operating manual.
- Manufacturer's certificate.
- Operator's manual of the engine manufacturer.
- Operating instructions for receiver and transmitter.

Unpacking

Read and understand the information in chapter "Safety instructions" before proceeding.

Before use, follow the instructions in chapter "Prior to starting".

1. Cut off all packaging cables on the unit and discard them.
2. Remove packaging materials from the unit and discard them.
3. Remove the unit and all other components from the shipping container.

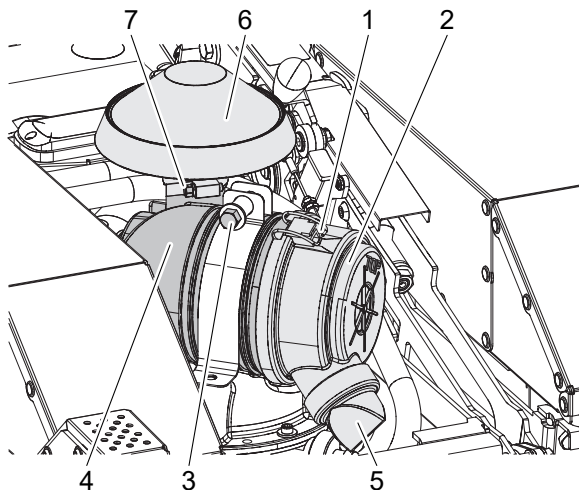

4. Loosen the catches (1) and remove the lid (2).
5. Loosen the screw (3) and turn the housing (4) until the intake nozzle points upwards. Tighten the screw (3).
6. Secure the lid (2) so that the water drain (5) points downwards. Close the catches (1).
7. Place the rain cap (6) on the connection piece and tighten the screw clamp (7).

8. Check the engine oil level and add oil if needed (see chapter "Checking the engine oil level"). Observe the information in the operator's manual of the engine manufacturer.
9. Fill the fuel tank (see chapter "Fuel" and "Adding fuel").
10. Insert batteries into the transmitter (see chapter "Checking and changing the battery of the transmitter").
11. Remove the spare key and keep it in a safe place.
12. Attach the belt to the transmitter (see chapter "Carrying the Transmitter").
13. Ensure that all parts are firmly tightened.
14. Ensure that all guards are in place and securely fastened.
15. Open the battery compartment at the rear of the device.
16. Connect the red cable to the positive (+) battery terminal and then the black cable to the negative (-) battery terminal.
17. Close the battery compartment.
18. Check the function of all controls.

Storage

Danger

Danger of poisoning due to poisonous exhaust gases.

- Do not operate the engine in closed or insufficiently ventilated rooms.
- Please observe the safety instruction regarding the poisoning risk.

Warning

Fire hazard

Parts of the device can become extremely hot during operation and this may cause fire.

- Please observe the safety instruction regarding the fire risk.

Warning

There is a risk of injury in case of unauthorized use.

- Press the start-stop switch on the transmitter. Switch off the device at the main switch and remove the key.

Storing the device

Store the device in a locked, dry and sufficiently ventilated room and out of reach of children. Always rectify faults of the device before storage so that the device is always in operationally safe condition. Let the device cool down for at least 20 minutes before you store it.

Also observe the information regarding storage in the operator's manual of the engine manufacturer.

Longer storage

1. Observe the safety instructions for handling the fuel.
2. Observe the recommendations regarding fuel storage in the operator's manual of the engine manufacturer.
3. Run the fuel tank empty.
4. Emptying carburetor: Start the engine and let it run until it stops by itself.
5. Thoroughly clean the device.
6. Touch up any possible damage to the paint finish (for paint, see chapter "Accessories").
7. Remove the key from the main switch and store it separately from the device.
8. Remove the batteries from the transmitter.

Before longer storage, e.g. in the fall, have an authorized service center check the device!

Also observe the information regarding storage in the operator's manual of the engine manufacturer.

Restarting

If you want to start the device after a longer storage, carry out the tasks described in chapter "Maintenance".

Spare parts

The reliable and safe operation of the device also depends on the quality of the spare parts used. Only use original spare parts and accessories approved by the manufacturer. When foreign parts are installed, the warranty and guarantee shall be void for the foreign parts, the device, and for any resulting damage.

Inform your authorized service center about the device type and serial number of your device when you order spare parts.

Visit www.gravely.com to locate a Gravely dealer for service and spare parts ordering.

Wear parts

Some parts are described as wear parts. They wear during use and must be replaced. The warranty does not cover the following parts (examples):

Blades, cutting edges, cutter bars, blade bolts, sliding plates, V-belts, tracks, Bowden cables, starter ropes, pressure plates, air filters, spark plugs, disk springs, lock washers, fuses, disks, thrust plates, pressure disks, protection skirts, impact protection, wheels, tires, brushes, skids etc.

Disposal

The device cuts and shreds the growth in a single operation. Shredded plant material decomposes quickly and can be used as fertilizer and, therefore, be left on the ground.

Dispose of waste oil and fuel in accordance with the local regulations or return it to an oil shop.

Packaging, device, and accessories are made of recyclable materials and must be disposed of accordingly.



The transmitter as well as its batteries must not be thrown away with regular household rubbish. Dispose of the transmitter via the local take-back system for waste electrical and electronic equipment. Dispose of the batteries at your local battery collection point.

Troubleshooting

If a fault occurs, first it is recommended to switch off the transmitter at the start-stop switch and the device at the main switch. Wait 10 seconds and restart the device. If required, also change the frequency (see chapter “Selecting radio frequency”).

If the fault persists, the following error codes describe the faults that occur most frequently and how to eliminate them.

If the fault cannot be eliminated, contact your closest authorized service center.

You can find an authorized service center on our home page under www.gravelly.com.

Problem	Possible cause	Remedy
No connection between transmitter and receiver	Battery on the transmitter is low.	Replace battery.
	Battery on the device is low.	Charge the battery (see chapter “Checking the battery”) or have authorized service center do so.
	Radio range exceeded.	Reduce distance between transmitter and receiver.
	Radio interference due to other transmitters (radio equipment, garage door opener, vehicle key).	Switch off transmitter and receiver, restart after 10 seconds.
		Switch the radio channel.
		Increase the distance to the disturbance source. Remove the disturbance source.
Starter does not turn	The Emergency stop switch on the device is activated.	Unlock the Emergency Stop switch.
	Antenna loose, damaged or no longer existent.	Fasten or replace antenna.
	An Emergency stop situation occurred.	Eliminate the Emergency stop situation (see chapter “Procedure after an Emergency stop”).
	Fuse is blown.	Replace (if necessary, have authorized service center do so).
Engine does not start	Battery at the device is low.	Charge the battery (see chapter “Checking the battery”) or have authorized service center do so.
	Battery at the device is defective.	Replace the battery (authorized service center).
	No fuel is in the tank.	Refill fuel.
	Choke is open.	Close the choke.
	Device was tilted – oil leaked into the air filter.	Replace air filter, unscrew spark plug and start several times, dry the spark plug and screw it back in.
	Engine was flooded due to too many start attempts.	Unscrew spark plugs and start several times, dry the spark plugs and screw them back in.
	Spark plug connector is pulled off.	Observe the safety instructions! Put spark plug connector back on.
	Air filter is dirty.	Maintain air filter (see chapter “Maintenance”).
	Spark plugs are sooted, damaged, or incorrect electrode gap.	Clean spark plugs and check electrode gap (see chapter “Maintenance”). Replace spark plugs if necessary.
	Poor quality, dirty, or old fuel.	Clean fuel system (authorized service center). Always use fresh fuel.

Engine starts badly or runs irregularly	Choke is closed.	Open choke (see chapter "Starting").
	Air filter is dirty.	Maintain air filter (see chapter "Maintenance").
	Poor quality, dirty, or old fuel.	Always use fresh fuel.
	Spark plug is dirty, damaged, or incorrect electrode gap.	Clean spark plug and check electrode gap (see chapter "Maintenance"). Replace spark plug if necessary.
Engine stops during operation.	Battery on the transmitter is empty.	Replace battery.
	Battery on the device is empty.	Charge the battery (see chapter "Checking the battery") or have authorised service centre do so.
Device does not move	Rotary knob limit speed is set to "0".	Adjust rotary knob limit speed.
	Hydrostatic drive is overheated.	Cool down (see chapter "Maintenance").
Blade cannot be engaged	Mower in maintenance and cleaning position.	Move mower to desired cutting position.
	V-belt is damaged.	Authorized service center.
The blade does not rotate	V-belt is insufficiently tensioned or damaged.	Authorized service center.
	Bowden cable is defective.	Authorized service center.
Strong vibrations during operation	Unbalance due to missing, broken, chipped or unevenly worn knives.	Check the knife and flail shaft (see chapter "Maintenance").
	Flail shaft is bent due to collisions with foreign objects.	Authorized service center.
	Engine fastening is loose.	Authorized service center.
	Blade fastening is loose.	Authorized service center.
Irregular noises	Loose fastening elements.	Authorized service center.
	Muffler is defective.	Authorized service center.
	Hydrostatic drive is overheated.	Cool down (see chapter "Maintenance").
Engine is smoking	Air filter is dirty or drenched with oil.	Maintain or replace air filter (see chapter "Maintenance").
	Oil level is too high.	Have authorized service center lower the oil level to the marking.
Engine gets hot	Ventilation grid is dirty.	Clean ventilation grid.
	Oil level in the engine is too low.	Refill engine oil (see operating instructions of the engine manufacturer).
	Cooling fins of the engine are dirty.	Have cooling fins cleaned by authorized service center.
Poor cutting	Blade is dull or worn.	Have someone replace a damaged blade immediately (authorized service center).
	Speed is too high in relation to the cutting height.	Reduce speed and/or select the correct cutting height.
	Housing of the device is heavily contaminated.	Clean.
	Mower housing is not parallel to the ground.	Adjust (authorized service center).
Mulching result with high plant material not satisfactory	Speed is too high.	Reduce speed.

Mulching result with low plant material not satisfactory	Plant material is ejected too quickly.	Increase speed.
Housing is jammed	Mowed grass was too long or too damp.	Adjust cutting height and mowing speed to the mowing conditions.
	Blade is worn.	Authorized service center.
	Engine speed is too low despite full power.	Authorized service center.
The device does not stop when the brake is activated	Brake is adjusted incorrectly, worn, or defective.	Check the parking brake (see chapter "Maintenance"). Authorized service center.
The engine does not switch off	Switching off system is defective.	Authorized service center.
Device does not drive straight forward	Trimming of the steering is misadjusted.	Adjust trimming with rotary knob trimming steering on the transmitter (if required, authorized service center).
Tracks detach from the device	Tracks incorrectly tensioned.	Tension tracks correctly.
	Foreign object in the drive.	Remove foreign object.
	Tracks, sprocket or wheels worn or damaged.	Replace worn or damaged parts (authorized service center).

Error codes

When the control detects an error, the error code is displayed.


The following table lists the most frequent error codes. Contact an authorized service center when an error code is displayed that you cannot find in this table.

Display	Designation	Reasons	Remedy
A3	Activate the Emergency stop switch on the device	Emergency stop switch actuated.	Unlock the Emergency stop switch by turning clockwise.
		Fuse no. 5 (10 A) has blown (see chapter "Fuses").	Eliminate cause of fuse tripping and replace fuse.
F2	Right drive lever does not go to center position	Drive lever / rods blocked on the right.	Remove blockage.
		Fuses nos. 1-3 (25 A) have blown (see chapter "Fuses").	Eliminate cause of fuse tripping and replace fuse.
F3	Angle sensor driving right	Fuses nos. 1-3 (25 A) have blown (see chapter "Fuses").	Eliminate cause of fuse tripping and replace fuse.
F4	Left drive lever does not go to center position	Drive lever / rods blocked on the left.	Remove blockage.
		Fuses nos. 1-3 (25 A) have blown (see chapter "Fuses").	Eliminate cause of fuse tripping and replace fuse.
F5	Angle sensor driving left	Fuses nos. 1-3 (25 A) have blown (see chapter "Fuses").	Eliminate cause of fuse tripping and replace fuse.
FU	Interruption of radio transmission	Battery on the transmitter is empty.	Replace battery.
		Battery on the device is empty.	Charge the battery (see chapter "Checking the battery") or have authorized service center do so.
		Radio range exceeded.	Reduce distance between transmitter and receiver.
		Radio interference due to other transmitters (radio equipment, garage door opener, vehicle key).	Switch off transmitter and receiver, restart after 10 seconds.
			Switch the radio channel.
			Increase the distance to the disturbance source. Remove the disturbance source.
L	Warning low battery capacity	Antenna loose, damaged or no longer existent.	Fasten or replace antenna.
		Battery capacity of the transmitter low.	Replace battery of the transmitter.

Technical specifications

Type	Gravely OVIS RC 40
Range of application (temperature)	0 - 30 °C (32 - 86 °F) For temperatures below 5 °C (41 °F), observe the engine manufacturer's information regarding the engine oil.
Engine, type Manufacturer Type Cylinder capacity Performance Engine speed	Two-cylinder four-stroke engine Briggs & Stratton Vanguard, V-Twin 627 cm ³ 15.5 kW (21.1 hp) 3,600 min ⁻¹
Starting device	Electric start
Battery Device Transmitter	12 V, 22 Ah 2x AA 1.5 V or 2x AA Mignon 1.2 V NiMH batteries (not included in scope of delivery)
Traction drive Speed forward Speed reverse	Crawler track 0 - 5.0 km/h (0 - 3.1 mph) 0 - 5.0 km/h (0 - 3.1 mph)
Maximum area coverage	approx. 5,000 m ² /h (1.2 acres/h)
Turning radius	approx. 0 m (0 in)
Cutting device, type Cutting width Continuous cutting height Maintenance and cleaning position Drive of cutting tool Clutch of cutting tool Growth height	Flail mower unit with 28 Y-knife, can be used on both sides. 100 cm (40 in) 30 - 100 mm (1 - 4 in) 700 mm (27 in) V-belt Belt tension clutch up to approx. 150 cm (5 ft)
Measures and weights Transport size with packaging L/W/H max. operating dimensions L/W/H Weight Ground pressure	208/130/130 cm (82/51/51 in) 183/114/69 cm (72/45/27 in) 419 kg (924 lbs) 0.155 kg/cm ² (2.2 psi)
Capacities Fuel tank Engine oil Transmission oil (per device side)	10.8 liters (2.87 gallons) 1.7 liters (56 ounces) 5W-50 fully synthetic engine oil (see operating instructions of the engine manufacturer) 2.1 Liter (71 ounces) SAE 5W-50 fully synthetic engine oil
Sound level	according to DIN EN 12733
Measured sound power level L _{WA} Uncertainty factor K _{WA}	103.5 dB (A) 3.0 dB (A)
Measured sound pressure level L _{pA} when operating behind the device Uncertainty factor K _{pA}	92.0 dB (A) Wear ear protection! 3.0 dB (A)
Measured sound pressure level L _{pA} at a distance of 15 metres Uncertainty factor K _{pA}	73.6 dB (A) 3.0 dB (A)
Maximum slope crosswise to the slope uphill and downhill	55° 44°
Angle at which the device flips over Measurement method crosswise to the slope uphill and downhill	Measured angle at which the stationary device tips over (mower in highest position, tank full) 61° 49°

Fuses

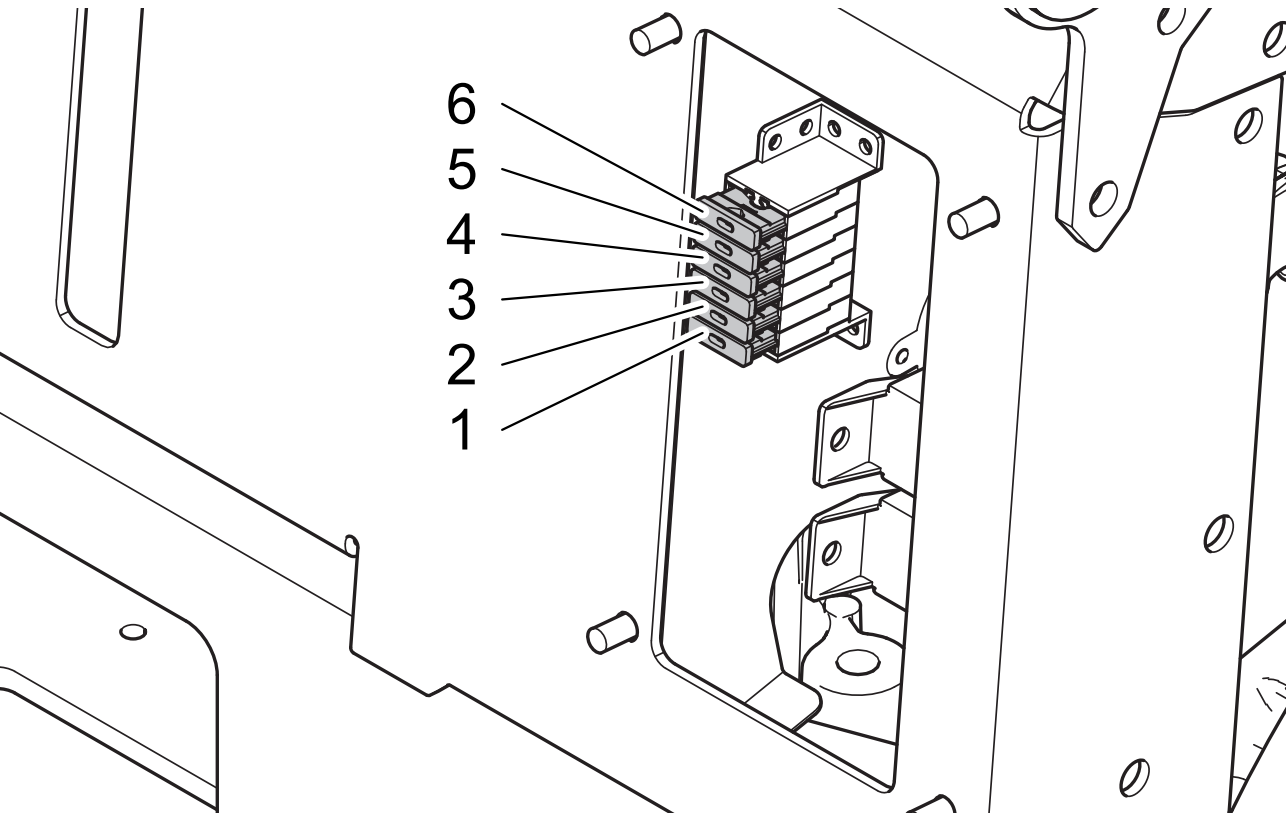

The fuses are located at the rear of the device.

If you experience malfunctions, remove the fuse compartment cover and check the fuses. Replace defective fuses.

Contact an authorized service center if the malfunctions cannot be remedied by replacing the fuses or if the fuses blow again after replacement.

Do not perform any repairs on the electrical system of the device.

Pos	Rating	Designation	Supplied
1	25A	Main fuse 1	Receiver
2	25A	Main fuse 2	Receiver
3	25A	Main fuse 3	Receiver
4	25A	Fuse controller generator	Alternator
5	10A	Fuse fuel pump Emergency Stop	Fuel pump Emergency Stop
6	10A	Fuse onboard power supply socket	Power socket Ignition switch

Accessories

Gravely Red Spray Paint Enamel (12 oz. spray can):	00008700
Gravely Red Touch-up Paint (6 oz. bottle):	00026600
Inclinometer:	30219200

Warranty


**Outdoor Power
Equipment
Limited Warranty**

AriensCo warrants to the original purchaser that Gravely brand products purchased on or after 09/01/2022 will be free from defects in material and workmanship for the time period noted in the chart below.

If any product, EXCEPT AXIS skidsteer, is rented or leased, then the duration of these warranties shall be 90 days after the date of purchase.

An authorized Gravely dealer will repair any defect in material or workmanship, and repair or replace any defective part, subject to the conditions, limitations and exclusions set forth herein. Such repair or replacement will be free of charge (labor and parts) to the original purchaser; except as noted below. Pick-up and delivery are at the owner's expense.

The warranty code is found on the model and serial number identification label on the unit.

Warranty Code	Product Group	Warranty Period
AA	Serialized Attachments	1 Year.**
AB	Serialized Attachments	2 Years.**
CH	Pro-Turn Z and Pro-Turn ZX Mowers	4 Years or 750 Hours.*
CJ	Pro-QXT	4 Years or 500 Hours.*
CK	Compact-Pro and Pro-Walk Hydro Mowers	4 Years or 750 Hours.* No Hour Limit for First 2 Years.
CL	Pro-Turn 100 and Pro-Stance Mowers	5 Years or 1000 Hours.* No Hour Limit for First 2 Years.
CM	Pro-Turn 200 and 300 Mowers	5 Years or 1250 Hours.* No Hour Limit for First 2 Years.
CN	Pro-Turn 500, 600 and Mach-One Mowers	5 Years or 1500 Hours.* No Hour Limit for First 2 Years.
CS	AXIS Skidsteer	1 Year or 1000 Hours.* Includes Rented or Leased Products.
CT	Ovis, Sherpa and Yak Mowers	2 Years or 250 Hours.*
HE	ZT Mowers	2 Years or 150 Hours.*
HF	ZT X Mowers	3 Years or 300 Hours.*
HG	ZT XL Mowers	4 Years or 400 Hours.*
HH	ZT HD and Z-Stance Mowers	4 Years or 500 Hours.*
UG	Atlas JSV	1 Year.

* Whichever comes first.

** AXIS Attachments see Limitations chart below.

Special Extensions

The chart below details special **extensions** to warranty terms. Warranty terms are total time periods covered. If any product is rented or leased, there are no extensions to the 90-day warranty.

Warranty Code	Warranty Term Extension	Warranty Period	Detail
CL, CM, CN	Mower Deck Shell and Main Frame	Lifetime Limited.	Warranty is for parts only after the initial warranty period. Components are covered for manufacturer's defect only, not wear.

Exclusions and Limitations

The charts below detail special **exclusions and limitations** to this warranty.

Warranty Term Exclusions	Warranty Period
Air filters, brake arms, brake linings, brake shoes, brushes, cutters, fuel filters, halogen head-lights, knives, halogen light bulbs, lubricants, mower blades, flail blades, oil, oil filters, spark plugs, scraper blades, shear bolts, skid shoes and spoon tines.	Components are not covered under warranty.

Hydro-Gear Transaxle Limitation
See Hydro-Gear warranty. The warranty is administrated by AriensCo. Refer to www.gravelly.com for warranty statement.

Warranty Term Limitations	Warranty Period
Cloth, Plastic and Rubber Components. Mufflers, Tires and Belts.	Components are covered for manufacturer's defect only, not wear.
AXIS Bucket and Fork Attachments	Warranty is administered by Erskine Attachments, LLC. Follow Erskine warranty statement in back of Attachment Operator's Manual.

Exclusions – Items Not Covered by This Warranty

- Parts that are not genuine Gravelly service parts are not covered by this warranty and may void the warranty if the parts result in premature wear or damage to the product.
- Damages resulting from the installation or use of any part, accessory, or attachment which is not approved by the AriensCo for use with product(s) identified herein are not covered by this warranty.
- Any misuse, alteration, improper assembly, improper adjustment, neglect, or accident which requires repair is not covered by this warranty.
- Repairs or adjustments required due to failure to use fresh fuel or failure to properly prepare the unit for periods of non-use.
- **Use of gasoline blends exceeding 10% ethanol voids any and all warranties.**
- **Any tampering with the hour meter voids any and all warranties.**
- Products are designed to the specifications in the area that the product was originally distributed. Different areas may have significantly different legal and design requirements. This warranty is limited to the requirements in the area in which the unit was originally distributed. AriensCo does not warrant this product to the requirements of any other area. Warranty service is limited to service within the area originally distributed.
- In countries other than the United States and Canada, contact the AriensCo dealer for warranty policies that govern within your country. Rights may vary from country to country and within any one country.

Evaporative Emissions Control Warranty Exception

As required by the California Air Resources Board (CARB) and the US Environmental Protection Agency (EPA) the evaporative emissions control system is warranted to the ultimate purchaser, and any subsequent owner, for two years.

The CARB and EPA evaporative emissions control system warranty is described in a separate evaporative emission control warranty statement.

Special Exclusions for Job-site Vehicles

The following uses void the warranty terms on Atlas JSV (Warranty Code UG) vehicles:

- Renting or leasing the vehicle.
- Using the vehicle to tow or carry loads in excess of the limits specified in the operator's manual.
- Modifying the vehicle with parts and accessories that are not genuine or authorized Gravelly parts or accessories.
- Modifying the vehicle without express written authorization from Gravelly.
- Operating the vehicle when it has not been completely and properly assembled and pre-delivered by an authorized Gravelly dealer.

Battery Warranty

Battery warranty is one year. Units used for rental or lease have no exceptions to the 90-day warranty. Total battery claim reimbursement will not exceed 45.00 USD.

Warranty

Transmissions

The chart below details transmission warranty information. Transmission warranty terms may vary from the specific terms of this warranty. If inconsistent, the terms of the transmission warranty shall apply to the transmission and its component parts.

Transmission Manufacturer	Detail
Hydro-Gear Transaxle	See Hydro-Gear warranty. The warranty is administrated by AriensCo. Refer to www.gravely.com for warranty statement.
Parker Hannifin Drive & Valve Systems	Parker Transaxles, Pumps, Wheel Motors and Valves are warranted for the length of equipment warranty period. Refer to Warranty Code chart above. Warranty is administered by AriensCo.

Engines

The chart below details engine warranty information. Engine warranty terms may vary from the specific terms of this warranty. If inconsistent, the terms of the engine warranty shall apply to the engine and its component parts.

Engine Manufacturer	Detail	
Gravely V-Twin	Serial Number 0000400 and lower	4 Years or 500 Hours, whichever comes first. Refer to www.gravely.com for warranty statement.
	Serial Number 0000401 and higher	4 Years or 750 Hours, whichever comes first. Refer to www.gravely.com for warranty statement.
Yamaha	Yamaha-branded engines are warranted by the manufacturer and the warranty is administrated by AriensCo. Refer to www.gravely.com for warranty statement.	
Briggs & Stratton, Kawasaki, Kohler, Kubota	Covered by the engine manufacturer's warranty. Refer to the engine manufacturer's warranty statements.	

Parts and Accessories

Service replacement parts and non-serialized accessories are warranted for 90 days from date of purchase. Labor is not included.

Customer Responsibilities

Register the product immediately at the time of sale. If the dealer does not register the product, the customer must register the unit on-line at www.ariens.com.

To obtain warranty service, the **original purchaser** must:

- Ensure that the maintenance and adjustments explained in the Operator's Manual are routinely completed.
- Promptly notify AriensCo or an authorized Gravely service representative of the need for warranty service.
- Transport the product to and from the place of warranty service at owner's expense.
- Have the warranty service performed by an authorized Gravely service representative.

To find an authorized dealer use the dealer locator on our websites, or contact us by mail or phone.

Globally except Australia or New Zealand:	Australia:	New Zealand:
AriensCo 655 W. Ryan Street Brillion, WI 54110 Phone: (920) 756 – 4688 www.gravely.com	Roy Gripske & Sons Pty Ltd 11 Sodium Street Narangba Queensland 4504 Australia Phone: (61130) 036 3004 www.rgs.com.au	Masport Ltd 320 Ti Rakau Drive East Tamaki Auckland 2013 New Zealand Phone: 0800 627 7678 www.masport.co.nz

Disclaimer

AriensCo may from time to time change the design of its products. Nothing contained in this warranty shall be construed as obligating the AriensCo to incorporate such design changes into previously manufactured products, nor shall such changes be construed as an admission that previous designs were defective.

Limitation of Remedy and Damages

AriensCo liability under this warranty, and under any implied warranty that may exist, is limited to repair of any defect in workmanship, and repair or replacement of any defective part. AriensCo shall not be liable for incidental, special, or consequential damages (including lost profits). Some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

AriensCo shall not be held liable for damages, including premature wear and tear, or injuries caused by installation of unauthorized parts and accessories or for parts and accessories not installed by an authorized Gravely dealer.

Australian Consumer Law

The following applies solely to warranties subject to Subsection 102(1) of the Australian Consumer Law: Our goods come with guarantees that cannot be excluded by the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

Disclaimer of Further Warranty

AriensCo makes no warranty, express or implied, other than what is expressly made in this warranty. If the law of your state provides that an implied warranty of merchantability, or an implied warranty of fitness for particular purpose, or any other implied warranty, applies to AriensCo then any such implied warranty is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from region to region.



655 West Ryan Street
Brillion, WI 54110

www.gravely.com



WARNING: Cancer
and Reproductive Harm -
www.P65Warnings.ca.gov

ARIENS | **CO**
EST. 1933