 


Connecting an optional XM Satellite Radio Antenna

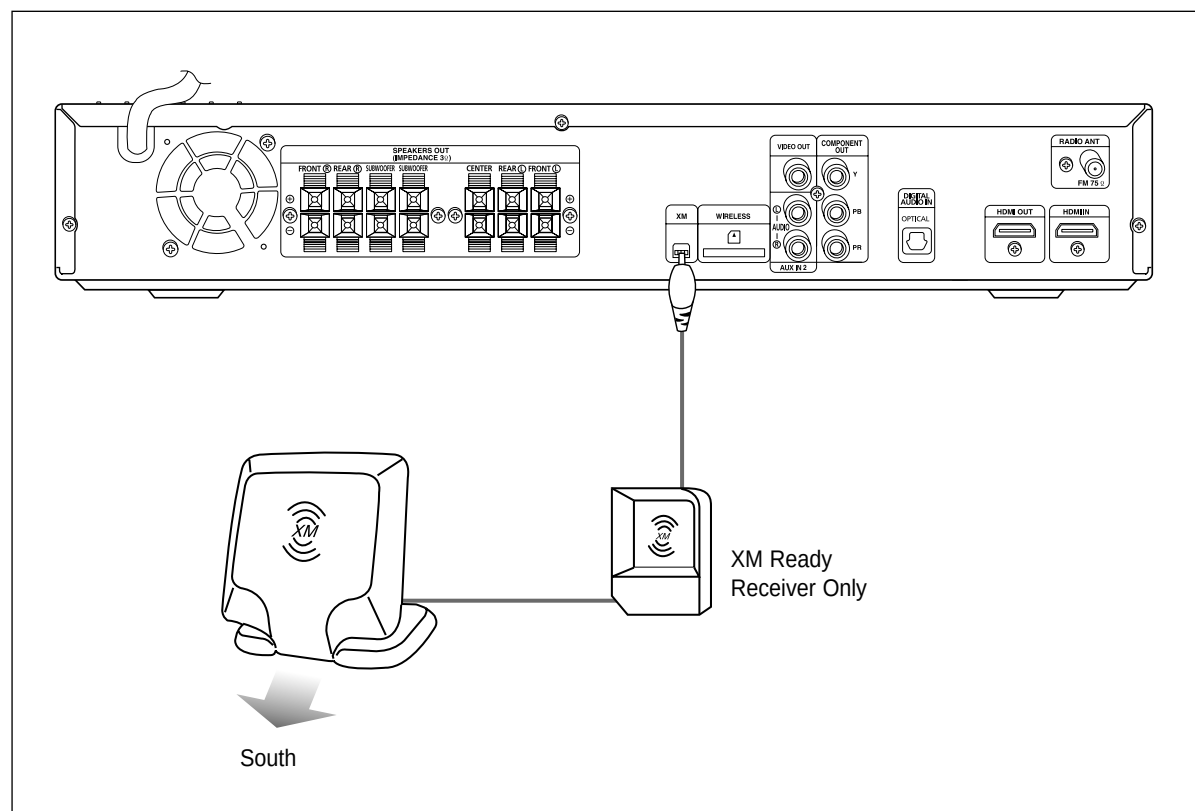

 
Connect the XM Antenna(Sold separately) to the XM Antenna Connector on the rear of this unit.

- To ensure optimal reception of XM's satellite signal, the XM Antenna should be placed at or near a southerly facing window with nothing obstructing its path to the sky. You can mount it indoors or outdoors.
- When making connections, also refer to the operation instructions of the XM Antenna.
- Depending on your location, the radio signal may be weak or cannot be tuned .

XM Satellite Radio

ENG

Before Using XM Satellite Radio

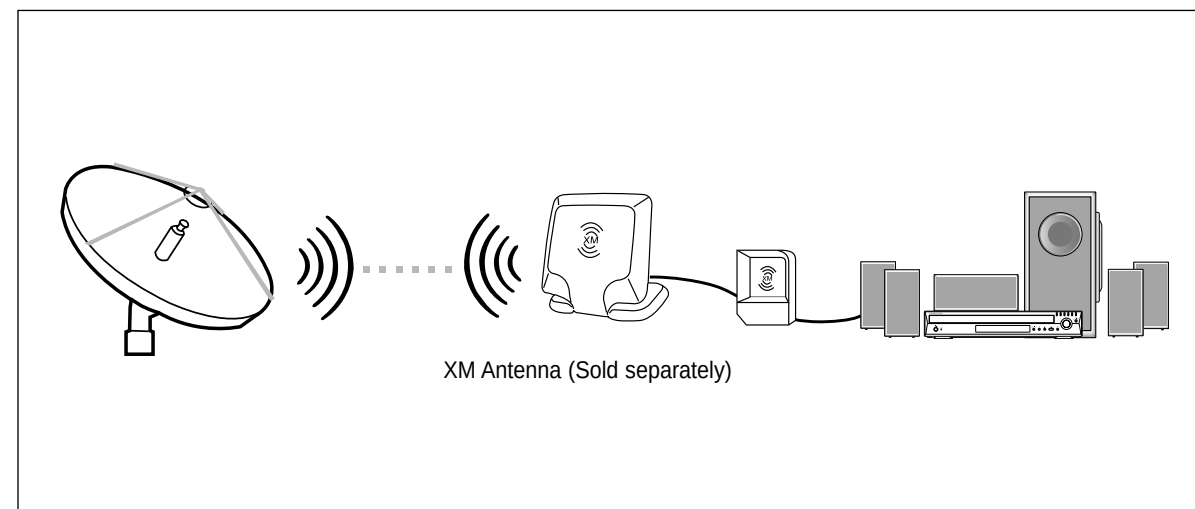


What is XM satellite Radio?

XM Satellite Radio is the satellite radio service with millions of listeners across the U.S., broadcasting live daily. XM's channel lineup includes more than 160 digital channels of choice from coast to coast: 68 commercial-free music channels, featuring hip hop to opera, classical to country, bluegrass to blues; 33 channels of premier sports, talk, comedy, children's and entertainment programming; and more than 20 channels of the traffic and weather information for major metropolitan areas nationwide.

- The XM Satellite Radio service is only available in the 48 contiguous United States (not available in Alaska and Hawaii).
- XM Antenna and monthly subscription are sold separately.
For details, see the XM Satellite Radio website at "<http://www.xmradio.com>"
- To ensure optimal reception of XM's satellite signal, the XM Antenna should be placed at or near a southerly facing window with nothing obstructing its path to the sky. You can mount it indoors or outdoors.

 Listening to XM Satellite Radio

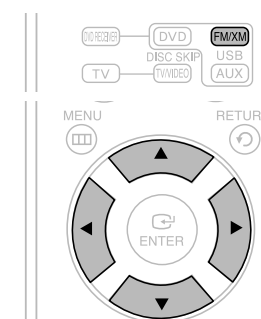

- 1 Press the **FM/XM** button (or **FUNCTION** button on the main unit) and select the XM band.

- Each time the FM/XM button is pressed, the band switches between "FM → XM"

102.01

- 2 Press the ◀, ▶ button to select the channel, press the ▲, ▼ button to select the category.

- You can select the channel directly by pressing the number buttons(1 to 255).

- If <CHECK ANTENNA> appears in the display, the XM Antenna may not be connected to the XM Antenna Connector on the rear of this unit properly.
- When the selected channel is not available, <CH----> is displayed.

MISCELLANEOUS