

 
 
HONDA

BATTERY PACK

DP5080XY CBNA

DP50120XY CBNA

Owner's Manual

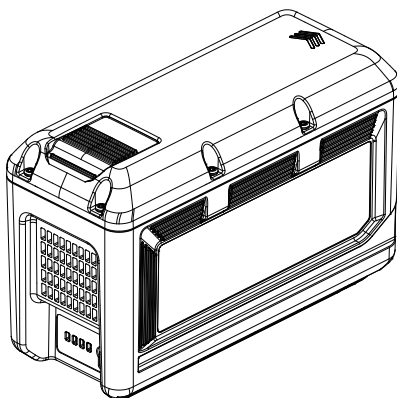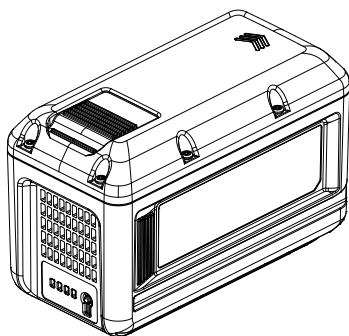

00X31-8B3-6000

Please register your battery pack. See page 10 for details.

PREFACE

Thank you for purchasing a Honda Battery (hereinafter referred to as Product).

Keep this Owner's Manual handy, so you can refer to it at any time. This manual should be considered a permanent part of this product and should remain with this product if it is resold.

We suggest you read the warranty policy to fully understand its coverage and your responsibilities of ownership.

No part of this publication may be reproduced without written permission.

We want to help you get the best results from your new product and to operate it safely.

This manual contains all the information on how to do that, please read it carefully.

As you read this manual you will find information preceded by safety messages in a variety of forms. This information is intended to help you and others avoid injury or damage to your product, other property, or the environment.

The products shown in this manual may differ from the actual products.

If a problem should arise, or if you have any questions about your product, consult your servicing dealer.

Honda Motor Co., Ltd.

CONTENTS

SAFETY & INTERNATIONAL SYMBOLS.....	3
SAFETY INSTRUCTIONS	3
KNOW YOUR BATTERY PACK.....	5
SPECIFICATIONS.....	6
OPERATION	6
MAINTENANCE	8
TROUBLESHOOTING	9
TECHNICAL INFORMATION	10
CUSTOMER INFORMATION.....	11
DISTRIBUTOR'S LIMITED WARRANTY	12
DISTRIBUTOR'S WARRANTY	15

SAFETY & INTERNATIONAL SYMBOLS

Explanation of Safety & international symbols describes safety and international symbols and pictographs that may appear on this product. Read the operator's manual for complete safety, assembly, operating and maintenance and repair information.



Caution / Warning.



Read the operator's manual(s) and follow all warnings and safety instructions. Failure to do so can result in serious injury to the operator and/or bystanders.



Do not use in rain or wet conditions.



Do not dispose of battery packs in rivers or immerse in water.



Do not dispose of battery packs in fire. They will explode and cause injury.



Charge the battery at the temperature range of 39°F - 104°F (4°C - 40°C).



Do not disassemble, crush, heat above 212°F(100°C); Never expose the battery to microwaves or high pressures.



Keep bystanders a safe distance away from the work area.



General symbol for recovery/recyclable



Warning: Electricity.



Indoor use only. Only use battery charger indoors.



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.

SAFETY INSTRUCTIONS

You will find important safety information in a variety of forms:

- **Safety Labels** - on the battery pack.
- **Instructions** - how to use this battery pack correctly and safely.
- **Safety Messages** - preceded by a safety alert  symbol and one of three signal words: DANGER, WARNING, or CAUTION.
Each message tells you what the hazard is, what can happen, and what you can do to avoid or reduce injury.

These signal words mean:

DANGER

You **WILL** be KILLED or SERIOUSLY HURT if you don't follow instructions.

WARNING

You **CAN** be KILLED or SERIOUSLY HURT if you don't follow instructions.

CAUTION

You **CAN** be HURT if you don't follow instructions.

- **Damage Prevention Messages** - You will also see other important messages that are preceded by the word NOTICE. This word means:

NOTICE

Your battery pack, other property, or the environment can be damaged if you don't follow instructions.

Read all safety warnings, instructions, illustrations, and specifications, provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

Save all warnings and instructions for future reference.

1. Do not dismantle, open or shred batteries.
2. Keep batteries out of the reach of children. Battery usage by children should be supervised. Especially keep small batteries out of reach of small children.
3. Seek medical advice immediately if a battery has

- been swallowed.
- Do not expose batteries to heat or fire. Avoid storage in direct sunlight.
 - Do not short circuit a battery. Do not store batteries haphazardly in a box or drawer where they may shortcircuit each other or be shortcircuited by other metal objects.
 - Do not remove the battery from its original packaging until required for use.
 - Do not subject batteries to mechanical shock.
 - If a battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
 - Do not use any charger other than that specifically provided for use with the equipment.
 - Observe the plus (+) and minus (–) marks on the battery and equipment and ensure correct use.
 - Keep batteries clean and dry.
 - Wipe the battery terminals with a clean, dry cloth if they become dirty.
 - Batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
 - Do not leave a battery on prolonged charge when not in use.
 - After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.
 - Retain the original product literature for future reference.
 - Use the battery only in the application for which it was intended.
 - When possible, remove the battery from the equipment when not in use.
 - Dispose of the battery properly.
 - Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
 - Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.

BATTERY TOOL USE AND CARE

- Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- When battery pack is not in use, keep it away from other metal objects, like paper clips,**

coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. *Shorting the battery terminals together may cause burns or a fire.*

- Under abusive conditions, liquid may be ejected from the battery; avoid contact.** *If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.*
- Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
- Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 266°F (130°C) may cause explosion.*
- Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

SERVICE

- Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers.*


INTENDED USE

Please read through these operating instructions and keep them for future reference. This battery pack is only designed for Honda 58V products only. If this battery pack is damaged or has a defect, do not use it and take to an authorized servicing dealer for inspection.


WARNING

This battery pack contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. www.P65Warnings.ca.gov

KNOW YOUR BATTERY PACK

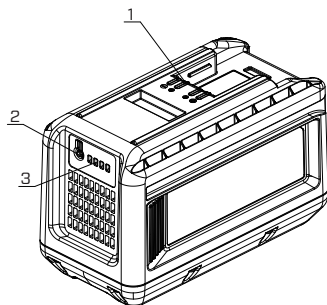

DP5080XY CBNA

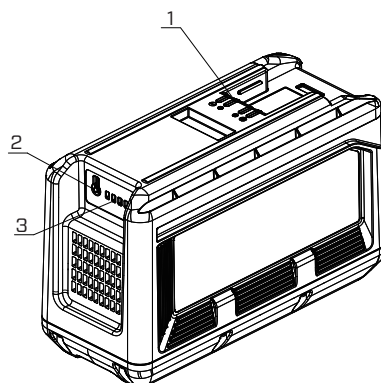

DP50120XY CBNA

Model: DP5080XY CBNA & DP50120XY CBNA
Use this battery for Honda 58V products only.

1	Battery Terminal
2	Capacity Indicator Button
3	Capacity Indicator

SPECIFICATIONS

Model	DP5080XY CBNA
Battery Type	Lithium-ion
Rated Voltage	50.4 V
Rated Capacity	8.0 Ah 403.2 Wh
Weight	6.1 lbs 2.8 kg

Model	DP50120XY CBNA
Battery Type	Lithium-ion
Rated Voltage	50.4 V
Rated Capacity	12.0 Ah 604.8 Wh
Weight	8.9 lbs 4.1 kg

NOTICE

Only use the following chargers:
CV5020XY N1A, CV5080XY N1A
/CV5020XY N1U, CV5080XY N1U.

OPERATION

Be sure to read the instruction manual carefully before using your battery.
This battery has been shipped completely assembled. Carefully remove the battery from the box.

WHEN TO CHARGE THE BATTERY PACK

Lithium-Ion battery packs are shipped partially charged. Before using it the first time, fully charge the battery pack.

It is not necessary to completely discharge the battery charge before recharging. This battery pack can be charged at any time. It is necessary to press the capacity indicator button to check whether the battery pack needs to be charged. When charging, it is important to provide adequate ventilation to avoid damage to this battery.

HOW TO CHARGE THE BATTERY PACK

Charge the battery pack only with the chargers in "SPECIFICATIONS". If the charger does not charge the battery pack under normal circumstances, bring both the battery pack and charger to your nearest authorized service dealer for inspection.


NOTICE


The recommended charging temperature range 50°F - 86°F (10°C - 30°C) indoor.

Do not place the charger and battery pack in an area of extreme heat or cold. They will work best at normal room temperature. The batteries life can be reduced or the battery can be damaged when used or stored in extreme environments.

It is good practice to unplug the charger and remove the battery pack when not in use.

1. Plug the charger into an approved power supply that complies with input in "SPECIFICATIONS".
2. Align the raised ribs of the battery pack with the slot in the charger, and then slide the battery pack onto the charger until it stops.
3. Normally, the relevant charge indicator of the charger will light in green color showing the battery is being charged.
4. When the charging process is complete, the green indicator will keep lighting for three minutes. Please remove the battery pack from the charger and disconnect the charger plug from the power supply.

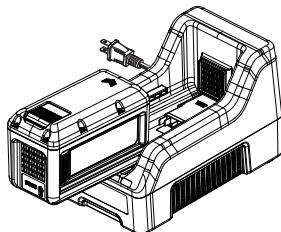

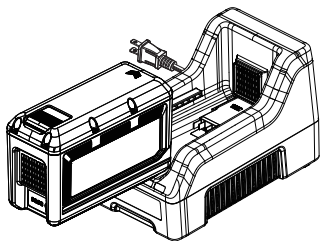

When battery charge runs out after continuous use or overheats due to exposure to direct sunlight or heat, allow time for the battery to cool down.

CHARGING A HOT BATTERY

When using a tool continuously, the battery pack may become hot. It is recommended to allow the battery to cool before placing it on the charger.

When a hot battery is placed on the charger, the charger may indicate the battery is not ready to charge. Please refer to the charger's owner's manual. When the battery cools, the charger will automatically begin charging.

CHARGING A COLD BATTERY



A cold battery pack may be placed directly onto the charger port but charging will not begin until the battery temperature warms to within acceptable temperature range.

When a cold battery is placed on the charger, the charger may indicate the battery is not ready to charge. Please refer to the charger's owner's manual. When the battery warms to approximately room temperature, the charger will automatically begin charging.

The battery pack will shut down when its operating temperature exceeds 158°F (70 °C).

CAPACITY INDICATOR

Press the capacity indicator button to check whether the battery needs to be charged.

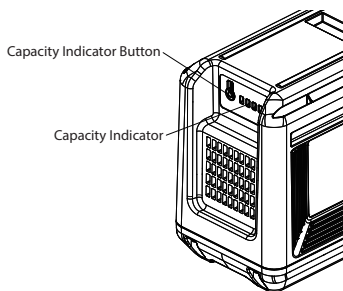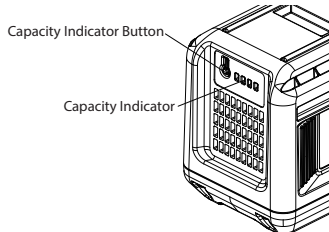

Remaining capacity	4-LED indicator	Remarks
76% - 100%	■■■■	Four green LED on
51% - 75%	■■■□	Three green LED on
26% - 50%	■■□□	Two green LED on
10% - 25%	■□□□	One green LED on
2% - 9%	◐□□□	One green LED flashing
0% - 1.9%	◐□□□	Alternating red/green LED flashing
0% or Voltage/ Temperature anomaly	■□□□	One red LED on
	◐□□□	One red LED flashing

See the table at the end of the manual for more details about LED lighting patterns of errors.

BATTERY PROTECTION

The battery circuitry protects the battery pack from extreme temperature, over-discharge, and over-charge. To protect the battery from damage and prolong its life, the battery pack circuitry will turn off the battery pack if it becomes overloaded or if the temperature becomes too high during use. This may happen in extremely high torque, binding, and stalling situations. The battery pack will shut down and capacity indicators will light for 5 seconds after pressing the battery capacity indicator button.

MAINTENANCE

Only perform cleaning and maintenance according to these instructions! All further works must be performed by an authorized servicing dealer.

BATTERIES

These batteries have been designed to provide maximum troublefree life. However, like all batteries, the battery's capacity will degrade over time.

WARNING

Do not disassemble a battery pack or attempt to replace the batteries.

Handling batteries with your hands, especially with rings or jewelry on, can seriously burn or injure you. Never attempt to repair a battery and recycle worn out batteries appropriately.

To obtain the longest possible battery life, we suggest the following: Remove the battery pack from the charger once it is fully charged and ready for use.

CLEANING

1. Remove battery pack from the charger/tool before any cleaning work.
2. Keep this battery pack free of debris and dirt. Wipe down the equipment with a cloth and/or compressed air.
3. It is highly suggested that you clean the battery after every use.

TRANSPORTATION

1. Take the battery pack from the tool, and place it into a box to avoid being heated by exposure to sunlight during the transportation.
2. Be sure to bring the battery charger anytime the battery is being transported.

STORAGE

1. Do not store the battery pack on the charger.
2. Do not store close to furnaces, stoves or water heaters.
3. Do not store the battery outside or in vehicles.
4. Keep away from metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.
5. Keep the battery pack away from moisture. Store the battery in a clean, dry place. Cover it in order to provide added protection.
6. Store the battery within a temperature range of

50°F - 86°F (10°C - 30°C) indoor, garage.

7. For Lithium-Ion battery pack storage longer than 30 days:
 - Store Lithium-Ion battery packs in a 30%-50% charged condition in a dry place with low humidity (below 65%).
 - Every six months of storage, charge the Lithium-Ion battery pack until 2 green LED indicators turn on.
 - Exterior may be cleaned with a cloth or soft non-metallic brush.

ENVIRONMENTAL PROTECTION

Waste electrical products must not be disposed of with household waste. Check with your local authorities or retailer for recycling advice. It will then be recycled or dismantled in order to reduce the impact on the environment and for human health since they contain hazardous substances.

LED lighting pattern (at charge)

Category	Protection function	Equipment		Battery display		Charger display		ON Condition	OFF Condition
		Discharge	Charge	Remaining amount (green)	Failure (red)	Pilot (green)	Failure (red)		
Failure	Over voltage (cell) (>4.225 V)	-	Stopped	0000				• Immediately after a protection function is detected.	• Battery removal. • Battery and charger shut down 3 minutes after error stop.
	Under voltage (cell)	-	Stopped	0000					
	Cell unbalance	-	Stopped	0000					
	Over time (charger)	-	Stopped						• Cell temperature recovery. • Communication recovery. • Charge over voltage recovery.
	Current error (charger)	-	Stopped	0000					
	Fan error (charger)	-	Stopped	0000					
	Over temperature (battery)	-	Stopped	0000					
	Over temperature (charger)	-	Stopped	0000					
	Communication error	-	Stopped	0000					
Abnormality	Over voltage (cell) (4.2-4.225V)	-	Stopped	0000					

TROUBLESHOOTING

Suspected problems are often due to causes that users can fix themselves. In most cases the problem can be solved quickly.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The battery pack doesn't work	The battery's charge level is too low	Charge the battery pack
	Battery pack is damaged	Replace with new one
	Temperature out of working range	Wait until the battery temperature reaches the appropriate working range
The battery pack cannot charge	Battery pack is damaged	Replace with new one
	Charger is damaged	Replace with new one
	Poor connection between charger and battery terminals	Inspect and clean the terminals on the battery pack and battery charger, and then reinsert the battery into the charger.

If further assistance is required, take the battery to an authorized servicing dealer.

TECHNICAL INFORMATION

Record your battery serial number and date of purchase in the space below. You will need this information when making technical or warranty inquiries.

For USA:

Your battery pack must be registered separately from the Honda battery-powered product it is used in, even if the battery was packaged with the product. This separate registration is to ensure you receive important service information in the event of a product update or recall.


Please register your battery pack within 30 days of purchase. Failure to register your battery does not diminish your warranty rights.

Your information will remain confidential and will not be shared with any other company or organization.

Battery Serial Number: _____


Date of Purchase: _____

Battery Serial Number

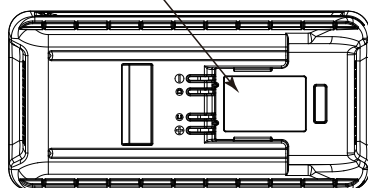

DP5080XY CBNA

 Battery Serial Number

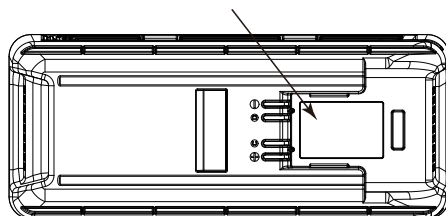

DP50120XY CBNA

CUSTOMER INFORMATION

How to Contact Honda

Honda Power Equipment dealership personnel are trained professionals. They should be able to answer any question you may have. If you encounter a problem that your dealer does not solve to your satisfaction, please discuss it with the dealership's management. The Service Manager or General Manager can help. Almost all problems are solved in this way. If you are dissatisfied with the decision made by the dealership's management, contact the Honda Power Equipment Customer Relations Office in your region.

When you write or call, please provide this information:

- Model and serial number
- Name of the dealer who sold the battery pack to you
- Name and address of the dealer
- Date of purchase
- Your name, address, and telephone number
- A detailed description of the problem

<U.S.A.>

American Honda Motor Co., Inc.

Power Equipment Division

Customer Relations Office

4900 Marconi Drive, Alpharetta, GA 30005-8847

Tel: (770) 497-6400 M-F, 9:00 a.m.- 7:30 p.m. ET

Fax: 678-339-2519

<Canada>

Honda Canada, Inc.

Customer Relations Department

180 Honda Boulevard. Markham, Ontario L6C 0H9

Tel: 1-888-946-6329 (Toll free)

Fax: 1-877-939-0909 (Toll free)

E-mail: honda_cr@ch.honda.com

<Australia>

Honda Australia Motorcycle and Power Equipment Pty.Ltd.

Level 4, 6 Gladstone St, Moonee Ponds, Victoria 3039

Tel: 1300 559 846

DISTRIBUTOR'S LIMITED WARRANTY

Honda Power Equipment

This warranty is limited to the following Honda Power Equipment products when distributed by American Honda Motor Co., Inc., Power Equipment Division, 4900 Marconi Drive, Alpharetta, Georgia 30005-8847. The following warranty applies to products manufactured on or after April 1, 2023.

PRODUCTS COVERED BY THIS WARRANTY	LENGTH OF WARRANTY (from date of original retail purchase)	
	PRIVATE RESIDENTIAL ⁽¹⁾	COMMERCIAL/RENTAL/ INSTITUTIONAL
Battery Pack, DP5080XY Model	36 months	12 months
Battery Pack, DP50120XY Model	36 months	24 months

⁽¹⁾ Private residential: Used in maintaining owner's primary and/or secondary residence. Any other use, including but not limited to informal "for hire" use, is considered commercial/rental/institutional use.

To Qualify for This Warranty:

The product must be purchased in the United States, Puerto Rico, or the U.S. Virgin Islands from American Honda or a dealer authorized by American Honda to sell those products. This warranty applies to first retail purchaser and each subsequent owner during the applicable warranty time period, unless noted otherwise.

What American Honda Will Repair or Replace Under Warranty:

American Honda will repair or replace, at its option, any part that is proven to be defective in material or workmanship under normal use during the applicable warranty time period. Warranty repairs and replacements will be made without charge for parts or labor. Anything replaced under warranty becomes the property of American Honda Motor Co., Inc. All parts replaced under warranty will be considered as part of the original product, and any warranty on those parts will expire coincident with the original product warranty.

To Obtain Warranty Service:

You must, at your expense, take the Honda Power Equipment product, accessory, replacement part, apparel, or the power equipment on which the accessory or replacement part is installed, and proof of purchase to any Honda Power Equipment dealer in the United States, Puerto Rico, or the U.S. Virgin Islands who is authorized to sell and/or service that product, during the dealer's normal business hours. To locate a dealer near you, visit our web site at PowerEquipment.Honda.com and click on Find a Dealer. If you are unable to obtain warranty service or are dissatisfied with the warranty service you receive, contact the owner of the dealership involved; normally this will resolve the problem. However, if you should require further assistance, write or call the Power Equipment Customer Relations Department of American Honda Motor Co., Inc.

Exclusions:

- Any damage or deterioration resulting from the following:
 - Neglect of the periodic maintenance as specified in this manual
 - Improper repair or maintenance
 - Operating methods other than those indicated in the product owner's manual
 - Increasing engine speed beyond factory specification
 - The use of non-genuine Honda parts, accessories, lubricants, and fluids other than those approved by Honda
 - Exposure of the product to soot and smoke, chemical agents, bird droppings, sea water, salt or other corrosive environments
 - Collision, fuel contamination or deterioration, neglect, unauthorized alteration, misuse, incorporation or use of unsuitable attachments or parts
 - Normal wear and tear (including, but not limited to, normal fading of painted or plated surfaces, sheet peeling, and other natural deterioration)
- Consumable parts: Honda does not warrant parts deterioration due to normal wear and tear. The following parts are not covered by warranty (unless they are needed as a part of another warranted repair): spark plug, fuel filter, air cleaner element, clutch disc, tire, wheel bearing, recoil starter rope, cable, belt, cutter blade, oil, and grease.

- Cleaning, adjustment, and normal periodic maintenance work (carburetor cleaning, engine oil draining, blade sharpening, belt and cable adjustments).
- Any product that has ever been declared a total loss or sold for salvage by a financial institution or insurer.
- Auger and paddle assemblies of snow throwers, tiller tines of roto-tillers, mower blades and mower deck housings, are specifically not warranted against impact damage, including but not limited to, abrasive damage.

Disclaimer of Consequential Damage and Limitation of Implied Warranties:

American Honda disclaims any responsibility for loss of time or use of the product, transportation, commercial loss, or any other incidental or consequential damage. Any implied warranties are limited to the duration of this written limited warranty. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Honda Parts, Accessories, and Apparel

This warranty is limited to Honda Power Equipment parts, accessories, and apparel when distributed by American Honda Motor Co., Inc., 4900 Marconi Drive, Alpharetta, Georgia 30005-8847.

PRODUCTS COVERED BY THIS WARRANTY	LENGTH OF WARRANTY (from date of original retail purchase)	
	PRIVATE RESIDENTIAL	COMMERCIAL/RENTAL/ INSTITUTIONAL
Parts	6 months	3 months
Accessories	12 months	3 months
Apparel	6 months	3 months

To Qualify for This Warranty:

- The parts, accessories, or apparel must be purchased from American Honda or a dealer authorized by American Honda to sell those products in the United States, Puerto Rico, and the U.S. Virgin Islands. Parts and Accessories must be purchased for installation on original Honda equipment or engines to be eligible for warranty coverage. Installing parts and accessories on non-Honda products or engines voids this warranty.
- You must be the first retail purchaser. This warranty is not transferable to subsequent owners.

What American Honda Will Repair or Replace Under Warranty:

American Honda will repair or replace, at its option, any Honda Power Equipment parts, accessories, replacement parts, or apparel that are proven to be defective in material or workmanship under normal use during the applicable warranty time period. Anything replaced under warranty becomes the property of American Honda Motor Co., Inc. The warranty on all parts, accessories, and apparel replaced under warranty will expire coincident with the original warranty on the replaced parts, accessories, or apparel. Parts and accessories installed by a dealer who is authorized by American Honda to sell them will be repaired or replaced under warranty without charge for parts or labor. If installed by anyone else, parts and accessories will be repaired or replaced under warranty without charge for parts, but any labor charges will be the responsibility of the purchaser. Apparel will be repaired or replaced under warranty without any charge.

To Obtain Warranty Service:

You must, at your expense, take the Honda Power Equipment part, accessory, apparel or the Honda Power Equipment on which the part or accessory is installed, and proof of purchase to any Honda Power Equipment dealer in the United States, Puerto Rico, or the U.S. Virgin Islands who is authorized to sell that product, during the dealer's normal business hours. To locate a dealer near you, visit our web site at PowerEquipment.Honda.com and click on Find a Dealer. If you are unable to obtain warranty service or are dissatisfied with the warranty service you receive, contact the owner of the dealership involved; normally this will resolve the problem. However, if you should require further assistance, write or call the Power Equipment Customer Relations Department of American Honda Motor Co., Inc.

Exclusions:

This warranty does not extend to parts, accessories, or apparel affected or damaged by collision, normal wear, use in an application for which the product was not designed or any other misuse, neglect, incorporation or use of unsuitable attachments or parts, unauthorized alteration, improper installation, or any causes other than defects in material or workmanship of the product. Installing parts and accessories on non-Honda products or engines voids this warranty.

Disclaimer of Consequential Damage and Limitation of Implied Warranties:

American Honda disclaims any responsibility for loss of time or use of the product, or the power equipment on which the product is installed, transportation, commercial loss, or any other incidental or consequential damage. Any implied warranties are limited to the duration of this written warranty. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PWL50623-Z

DISTRIBUTOR’S WARRANTY

Honda Canada, Inc., 180 Honda Blvd. Markham, Ontario for and on behalf of Honda Motor Co. Ltd., Tokyo, Japan, gives the following written warranty on each new power product manufactured by Honda Motor Co. Ltd., Japan, distributed in Canada by Honda Canada Inc. and sold by authorized Honda Power Equipment dealers. Whenever used herein, the word “Honda” refers to Honda Canada Inc. and/or Honda Motor Co. Ltd. as appropriate from the context.

Honda warrants that each new Honda power product will be free, under normal use and maintenance, from any defects in material or workmanship for the relevant warranty period set forth below. If any defects should be found in a Honda power product within the relevant warranty period, necessary repairs and replacements with a new part or the Honda equivalent shall be made at no cost to the consumer for parts and labour, when Honda acknowledges that such defects are attributable to faulty material or workmanship at the time of manufacture.

Warranty Period

Warranty coverage commences from the original date of sale or when the unit is first put into use as a demonstrator. The following warranty applies to power products purchased at retail or placed into rental service on or after August 1, 2011.

PRODUCTS COVERED BY THIS WARRANTY	LENGTH OF WARRANTY (from date of original retail purchase)	
	PRIVATE RESIDENTIAL	COMMERCIAL/RENTAL/ INSTITUTIONAL
Battery Pack, DP5080XY, DP50120XY Models	36 months	12 months

This Warranty Covers

- a. Any Honda power product purchased in Canada from an authorized Honda dealer which has been registered at the time of purchase on a form provided by Honda, which has had set-up and pre-delivery service performed by an authorized Honda dealer and which is normally operated on Canada;
- b. Any factory installed part (except normal maintenance parts) referred to in “THIS WARRANTY DOES NOT COVER”; and
- c. Any power product on which required maintenance services have been performed as prescribed in the Owner’s Manual.

This Warranty Does Not Cover

- a. Any repairs required as a result of collision, accident, striking any object, misuse or lack of required maintenance;
- b. Any repairs required as a result of any attachments, parts or devices installed by or repairs done by a party other than an authorized Honda dealer;
- c. Any repairs required as a result of any parts not supplied by Honda, and this part is responsible for the failure or malfunction;
- d. Any power equipment modified, altered, disassembled or remodelled;
- e. Normal maintenance services, including tightening of nuts, bolts and fittings and engine tune-up and the replacement of parts made in connection with normal maintenance services including filters, spark plugs and wires, fuses, belts, lubricants and other expendables susceptible to natural wear;
- f. The Honda lawn mower blades and mower deck housings are specifically not warranted against impact damage including, but not limited to, abrasive damage; and
- g. All accessories or attachments.

The Owner’s Obligation

In order to maintain the validity of this DISTRIBUTOR’S WARRANTY, the required maintenance services as set forth in the Owner’s Manual must be performed at the proper intervals and detailed receipts and records retained as proof.

To Obtain Warranty Service

You must take the Honda power product, at your expense, during normal service hours, to any authorized Honda Power Equipment dealership. If you are unable to obtain or are dissatisfied with the warranty service

you receive, first contact the owner of the dealership involved; this should resolve the problem. If you require further assistance, contact Honda Canada's Customer Relations Department.

Honda Canada, Inc.
180 Honda Blvd. Markham, ON L6C 0H9
or visit www.honda.ca
Telephone: (888) 9HONDA9 Toll Free
(880) 946-6329
Facsimile:(877) 939-0909 Toll Free

Replacement Parts And Accessories Warranty

New Honda Genuine replacement parts or accessories sold to a consumer or installed by an authorized Honda Power Equipment dealer which are not covered by the DISTRIBUTOR'S WARRANTY are warranted for a period of one year from date of purchase, provided, however, that this Replacement Parts and Accessory Warranty does not apply to any replacement parts modified, used with, or installed on a power product for which the replacement parts were not intended. Electrical components that are not installed by the dealer (sold over the counter) are not covered by warranty. Refer to Battery & Charger owners manual.

Entire Written Warranty:

This DISTRIBUTOR'S WARRANTY and the REPLACEMENT PARTS AND ACCESSORY WARRANTY are the only and the entire written warranties given by Honda for Honda power products. No dealer or his agent or employee is authorized to extend or enlarge on these warranties on behalf of Honda by any written or verbal statement or advertisement.

Disclaimer

To the extent the law permits, Honda disclaims any responsibility for loss of time or use of the product, transportation or towing costs or any other indirect, incidental or consequential damage, inconvenience or commercial loss.

Notice To Consumer

The consumer protection, sales of goods and consumer warranty laws of certain jurisdictions (including Quebec) do not allow the exclusion or limitation of certain legal warranties, conditions or representations. The provisions contained in this warranty are not intended to limit, modify, take away from, disclaim or exclude any warranties that you may have under such laws. If these laws apply to you, some or all of the exclusions or limitations in this warranty (including the preceding disclaimer) may not apply and you may have additional rights. To the extent that we may not, as a matter of applicable law, disclaim any implied warranty or condition, the scope and duration of such warranty or condition will be the minimum permitted under such applicable law.

Privacy Statement

The owner information submitted may be used by Honda and its related companies, their dealers, and service provides to communicate marketing, product, and service information to you. If you prefer not to receive marketing information, please contact us at 1-888-946-6329.

NOTES

NOTES

NOTES

