


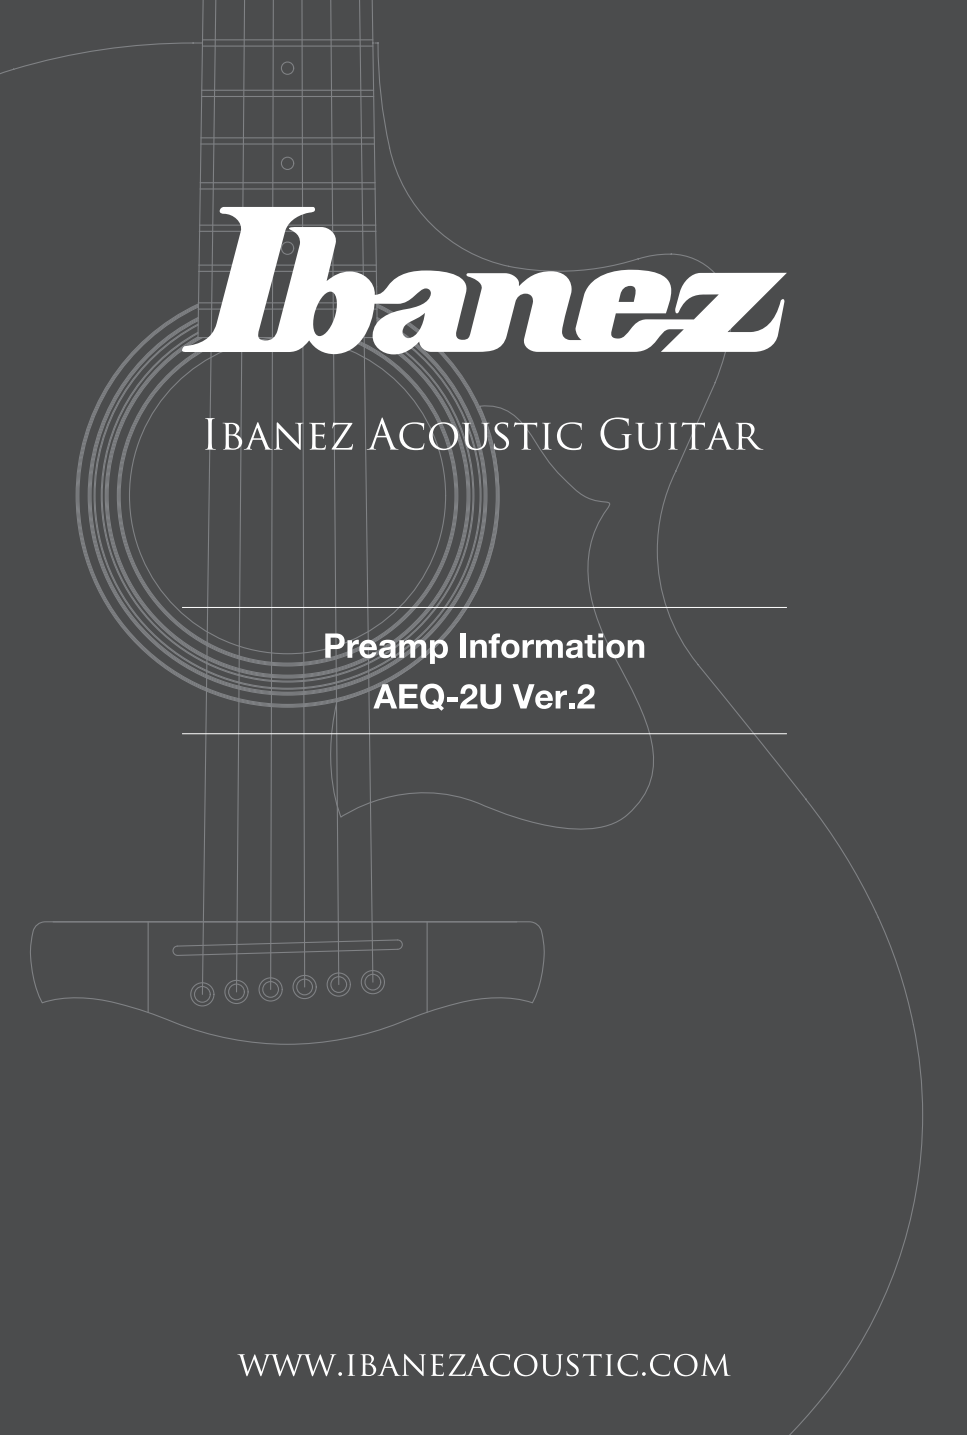


Ibanez

IBANEZ ACOUSTIC GUITAR

Preamp Information
AEQ-2U Ver.2

WWW.IBANEZACOUSTIC.COM

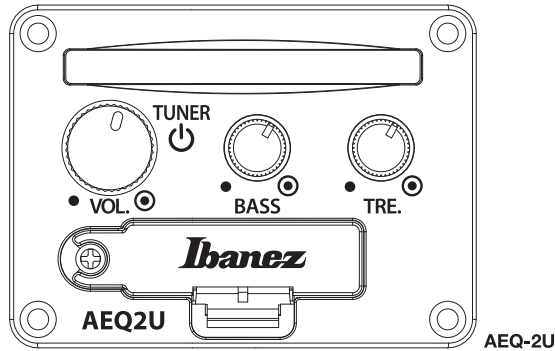

Basic Controls

VOLUME

Controls the overall gain of the Pre-Amp.

TREBLE

Controls the boost/cut of the treble frequencies.

BASS

Controls the boost/cut of the bass frequencies.

Tuner functions

TUNER ON/OFF SWITCH

Pressing the volume knob will alternately turn the tuning meter on/off. The tuner will turn off automatically after 5 minutes.

NOTE INDICATOR LED



These LEDs indicate the note of the strings you are playing. When tuning sharp or flat notes such as G#, both the G indicator and the # indicator will light up. If the note shown on the note indicator LED is different from the one you wish, try tightening or loosening the string until the correct LED lights up. Be careful not to tighten the strings too much (over tune) as the strings may break. When in doubt, it is better to tune down and loosen the strings and then tune back up to find the desired pitch.

TUNING GUIDE LED

When the string is in tune, the green LED in the middle will light up. If the pitch of the string is flat, the red LED on the left will light up. If the pitch of the string is sharp, the red LED on the right will light.

Notes

Replace the batteries if you notice any of the following things.

- Decreased sound quality or volume
- The tuner does not respond when you turn it on
- The LEDs do not operate when you turn on the tuner
- The battery check LED is lit or blinking

To prevent the battery from being consumed needlessly, disconnect the plug from the output jack when you're not using the guitar.

- ※ Dispose of used batteries in accordance with local regulations.
- ※ Appearance and specifications are subject to change without notice.

===== Observe the following instructions with a product that uses coin batteries =====

● Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
● Even used batteries may cause severe injury or death.
● Call a local poison control center for treatment information.
● Use only the CR2032 coin battery. (The nominal battery voltage: 3V)
● Non rechargeable batteries are not to be recharged.
● Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
● Ensure the batteries are installed correctly according to polarity (+ and -).
● Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
● Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
● Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WARNING

- **INGESTION HAZARD** : This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- Always completely secure the battery compartment. does not close securely, stop using the product, remove the batteries, and keep it away from children.
- For treatment information call: [phone number for the National Battery Ingestion Hotline, currently 1-(800) 498-8666].

