

get started

INSTANT POT® **VORTEX® MINI**
AND **VORTEX® MINI PLUS**
4QT WITH CLEARCOOK™

USER MANUAL

Instant Pot®

Welcome

Welcome to your new Instant Pot® Vortex® Mini!

This air fryer can help you cook delicious meals with less oil and less hassle. We hope you fall in love with Instant Pot air frying and enjoy it in your kitchen for years to come!

Get started with your new Instant Pot®!



⚠ WARNING

Before using your new appliance, read all instructions, including the Important Safeguards. **Failure to follow the safeguards and instructions may result in personal injury and/or property damage.**

CONTENTS

Important safeguards	2
What's in the box	7
Using your Instant Pot Vortex Mini	8
Initial set up	12
Smart Programs	14
Cooking	16
Cleaning	19
Troubleshooting	20
Error Codes	21
Replacement Parts	22
Learn more	23
Warranty	24



IMPORTANT SAFEGUARDS

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

READ ALL INSTRUCTIONS

Before using your new appliance, please read all instructions, including the Safety Information below. Keep this manual for reference.

Placement

- **DO** place the appliance on a countertop only. Always operate the appliance on a stable, non-combustible, level surface.
- **DO** make sure all parts are dry and free of food debris before use.
- **DO** use extreme caution when moving the appliance. Always let the appliance cool to room temperature before handling or moving.
- **DO NOT** place the appliance on butcher block, other wood surfaces, Formica, laminate or other combustible surfaces.
- **DO NOT** place the appliance or power cord on or close to a gas or electric stovetop or oven. **NEVER** use the appliance on your stove.
- **DO NOT** use the appliance near water, an external heat source or flame.
- **DO NOT** use outdoors. Keep out of direct sunlight.
- **DO NOT** place on anything that may block the vents on the appliance.
- **DO NOT** move the appliance if it contains hot oil or other hot liquids.

General Use

- **DO** use the appliance's handles when opening the door/basket.
- **DO** use oven mitts when removing accessories and handling hot items.
- **DO** place hot accessories on a heat-resistant surface or cooking plate.
- **DO NOT** touch the appliance's hot surfaces, or any accessories during or immediately after cooking because they will be hot. Only use handles or knobs.
- **DO NOT** cover the basket, cooking tray or any part of the appliance with foil. This will cause overheating of the appliance, which may result in personal injury, fire, and/or property damage.

⚠ WARNING

- **DO NOT** move the appliance while it is in use.
- **DO NOT** allow children or persons with reduced physical, sensory or mental capabilities to operate this appliance. Close supervision is necessary when any appliance is used by or near children and persons with reduced physical, sensory or mental capabilities. Children should not play with this appliance.
- **DO NOT** use the appliance for anything other than household use. It is not intended for commercial use.
- **DO NOT** leave the appliance unattended while in use.
- **DO NOT** use the appliance for more than 60 minutes in a 2-hour period. Exceptions are when using programs that cook at temperatures under 400° F / 204° C.
- **DO NOT** attempt to touch moving parts while appliance is in use.
- **DO NOT** store any item on top of the appliance. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like.

Air Frying Cautions

When the air fryer is in operation, hot air is released through the air vents. Keep your hands and face away from the air vents and take extreme caution when removing hot accessories from the appliance.

Failure to do so may result in personal injury and/or property damage.

While cooking, the internal temperature of the appliance reaches several hundred degrees. To avoid personal injury, **NEVER** place unprotected hands inside the appliance until it has cooled to room temperature.

- **DO** use extreme caution when using containers made of materials other than glass or metal. Failure to do so may result in personal injury, fire and/or property damage.
- **DO** use extreme caution when removing the basket/cooking tray or disposing of hot cooking residue.
- **DO NOT** use a ceramic-coated or stoneware pot for air frying.
- **DO NOT** cover or block the vents while the air fryer is operating. Doing so will prevent even cooking and may cause damage to the appliance. Leave at least 5 in / 13 cm of space around the air fryer when in use.
- **DO NOT** use this appliance for deep frying foods.
- **DO NOT** pour oil into the cooking container. Using excess cooking oil could cause fire and result in personal injury and/or property damage.

⚠ WARNING

- **DO NOT** use pressurized, aerosol oil sprays, since they contain chemicals that can damage the non-stick finish of the cooking tray. If needed, spray food lightly with oil with a high smoke point (such as refined avocado oil, safflower oil, refined sunflower oil, refined peanut oil, canola oil and refined coconut oil) from a non-aerosol, pump-style cooking spray before placing in the basket.
- **DO NOT** use this appliance for making popcorn.
- Should the unit emit black smoke during use, press **Cancel** and unplug the appliance immediately. Wait for smoking to stop before removing the lid, then clean thoroughly. For further information refer to 'Troubleshooting'.

Overfill During Air Frying

- **DO NOT** overfill the unit when air frying. Overfilling may cause food to contact the heating element, which may result in personal injury, fire, and/or property damage. When using an air fry tray or cooking tray, only place food in a single layer and do not stack. When using an air fry basket, do not fill more than 3/4 full. Best air frying results require air circulating through the food.
- **DO NOT** allow food to contact the heating element.

Accessories

- **DO** use only accessories or attachments authorized by Instant Pot Brands. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of electric shock or other personal injury, fire and/or property damage.
- **DO NOT** use the included accessories in a microwave, toaster oven, convection or conventional oven, on a ceramic, electric or gas cooktop, or with an outdoor grill.

Care and Storage

- **DO** let the appliance cool to room temperature before cleaning or storage.
- **DO NOT** store any materials, other than accessories provided by the manufacturer, in the appliance when not in use.
- **DO NOT** place any combustible materials in the appliance, such as paper, cardboard, plastic, Styrofoam or wood.
- **DO NOT** clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch the electrical parts, causing a risk of shock, burns or other personal injury.

⚠ WARNING

Power Cord

A short power-supply cord is used to reduce the risk resulting from grabbing, entanglement or tripping. **WARNING:** Hot spilled food can cause serious burns.

- **DO** keep appliance and cord away from children.
- **DO** disconnect the power cord from the electrical outlet when not using the appliance and before cleaning.
- **DO NOT** let the power cord hang over edge of tables or counters.
- **DO NOT** let the power cord touch hot surfaces or open flame, including the stovetop.
- **DO NOT** use below-counter power outlets.
- **DO NOT** use with extension cords, power converters or adapters, timer switches or separate remote-control systems.

This appliance has a polarized plug and one blade is wider than the other. To reduce the risk of electric shock:

- **DO** plug this appliance into a polarized outlet one way.
- **DO** contact a qualified electrician if the plug does not fit in the outlet.
- **DO NOT** attempt to modify the plug. If the plug does not fit full into the outlet, reverse the plug.

Electrical Warning

The appliance contains electrical components that are an electrical shock hazard. **Failure to follow these instructions may result in electric shock and/or death.**

To protect against electrical shock:

- To disconnect, select **Cancel**, then remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. **NEVER** pull from the power cord.
- **DO** regularly inspect the appliance and power cord for any signs of damage or fraying.
- **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Consumer Care by email at **support@instantpot.com**.
- **DO NOT** attempt to dislodge food while the appliance is plugged in to an electrical outlet as this may lead to electric shock, burns or other personal injury, and/or property damage.

⚠ WARNING

- **DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock or other personal injury, fire and/or property damage, and will void the warranty. For assistance, contact Consumer Care by email at **support@instantpot.com**.
- **DO NOT** tamper with any of the safety mechanisms, as this may result in personal injury and/or property damage.
- **DO NOT** immerse power cord, plug or the appliance in water or other liquid.
- **DO NOT** clean the appliance by rinsing it under a faucet.
- **DO NOT** use the appliance in electrical systems other than 120 V ~ 60 Hz for North America.


SAVE THESE INSTRUCTIONS

⚠ WARNING


Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

WHAT'S IN THE BOX

Air Fryer

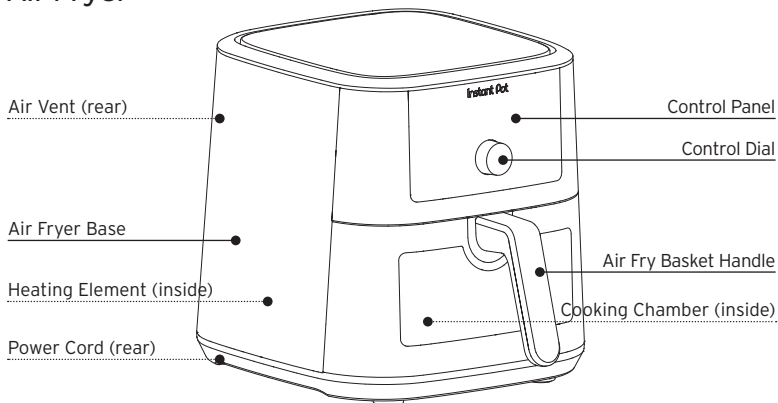

Parts + Accessories

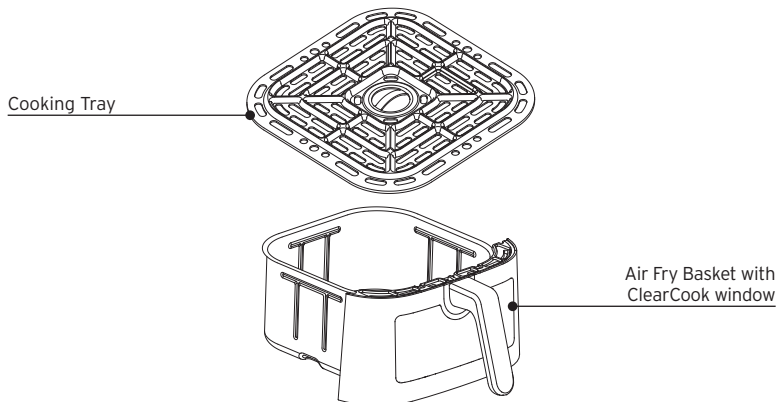

Illustrations are for reference only and may differ from the actual product.


Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live. Be sure to keep this user manual for reference.

USING YOUR INSTANT POT VORTEX MINI

Control panel

We've designed the control panel to be simple to use and easy to read.

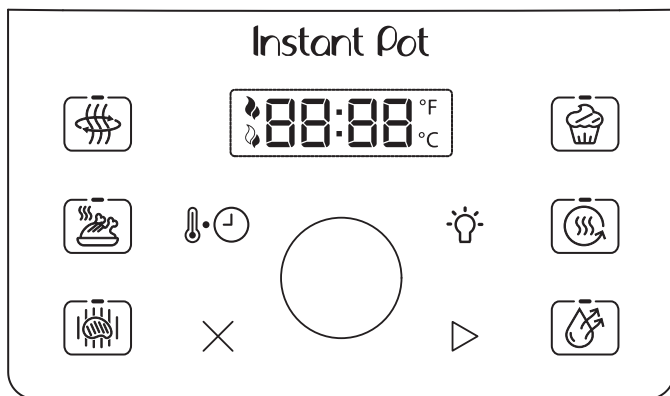

Control Panel buttons and indicators

Smart Programs

Air Fry		Roast		Broil	
					
On	Off	On	Off	On	Off
Bake		Reheat		Dehydrate	
					
On	Off	On	Off	On	Off

Controls

Temp/Time	Light
	
Press to change temperature and time settings	Press to turn internal light ON and OFF

Cancel	Start	Control Dial
		
Press to end a cooking program or setup	Press to start a cooking program	Turn to change settings

Indicators

Cooking Progress	Status Display	Temp Scale
 		 
Preheating Cooking	Time, Temperature, Messages	Celsius Fahrenheit

Status messages

The status display shows helpful information when using your air fryer.

OFF	Unit is ready to begin
On	Unit is preheating (Air Fry, Bake, Roast and Broil)
Add Food	Unit has reached the selected cooking temperature and you can add food (Air Fry, Bake, Roast and Broil)
turn Food	For best cooking results, it is time to turn food (Air Fry)
End	Smart Program has ended
OPEN	Air Fry Basket is not completely inserted

Changing settings

You can change settings for sound, temperature unit and Smart Programs.

Setting	When to change	How	Notes
Sound ON/ OFF	When you're setting up a Smart Program or when the display shows OFF	Press and hold [icon] (Time/Temp) and [icon] (Light) at the same time for over 5 seconds until the display shows either SOff or S On .	Audible safety alerts (beeps) cannot be turned off.
Temperature F or C	When you're setting up a Smart Program or when the display shows OFF	- While the display shows OFF, press and hold [icon] (Time/Temp) for over 5 seconds until display shows either Unit °F or Unit °C. - While you're setting up a Smart Program, press and hold [icon] (Time/Temp) for over 5 seconds until display shows the temperature with either °F or °C.	
Reset a memorized Smart Program	When you're setting up a Smart Program or when the display shows OFF	- While the display shows OFF, press and hold the Smart Program button you want to reset for over 3 seconds until the Smart Program button flashes twice. - While a Smart Program is in process, press and hold the Smart Program button you want to change for over 3 seconds until the display shows the original cooking settings.	When you use a Smart Program, the cooking time and temperature settings you choose are memorized and used the next time. This resets them to the original settings.
Reset all Smart Programs	While the display shows OFF	Press and hold the Control Dial for over 3 seconds until all Smart Program buttons flash three times.	This resets all Smart Program cooking times and temperatures to the original settings.

Setting	When to change	How	Notes
Control Panel display language	When the display shows OFF	1. Press the Control Dial twice within 1 second. The current selected language blinks in the display. 2. Turn the Control Dial to select a new language. 3. Within 10 seconds, press the Control Dial to confirm your selection.	You can select the language shown on the Control Panel display. Choose from: English or French.

Cancel cooking

You can cancel an active Smart Program at any time.

- While setting up a Smart Program, during preheating or while cooking, press **×** (Cancel). Depending on the internal temperature of the unit, the fan may keep running to cool the cooker.

INITIAL SET UP

Unpack

4. Remove your new air fryer from the box.
5. Remove all the packaging material from in and around the air fryer.
6. Make sure to remove all the accessories from inside the box and unpack them.
7. Don't remove the safety warning stickers or the rating label from the air fryer.

Clean before use

1. Remove the Air Fry Basket from the base. Wipe inside the Air Fry Basket and the cooking chamber with a damp cloth. Use a clean, soft cloth to dry.
2. Wash the accessories with hot water and dish soap. Rinse with warm, clear water and use a soft cloth to dry.
3. Insert the Air Fry Basket into the base. When inserted securely, the front of the basket is flush with the front of the base.

Placement

1. Place your air fryer on a stable, level surface, away from combustible material and external heat sources. Do not place your air fryer on top of another appliance.
2. Make sure to leave at least 5 in / 13 cm of space above and around all sides of the appliance to allow for sufficient air flow.

Connect to power

When you're ready to use your air fryer, plug the power cord into an electrical outlet. When you're done cooking and whenever you're cleaning the air fryer, unplug the cord from the outlet.

Test run

Before using your new air fryer for the first time, you should perform a test run to ensure the unit is working properly.

Step	What to do	Result
1	Plug the power cord into an outlet.	Display shows OFF
2	Make sure the Air Fry Basket is fully inserted. Do not add any food.	
3	Press the  Air Fry to start.	The Air Fry indicator lights and memorized settings display
4	Press  (Temp/Time) or the Control Dial to activate the time setting. Turn the Control Dial to select 5 min. <i>You do not need to change the temperature settings.</i>	Time setting blinks and then displays 00:05 when time is selected
5	Press  (Start).	The display shows On and  (Preheating) lights
6	When the display shows Add Food and Turn Food , do nothing.	 (Cooking) lights
7	When the Smart Program completes, the unit beeps.	Display shows End
8	Unplug the unit and let it fully cool before cleaning or storing. <i>If you don't pull out the Air Fry Basket, the unit beeps once a minute for 10 minutes to remind you.</i>	

Now you're ready to cook a meal in your Instant Pot Air Fryer!

SMART PROGRAMS

Each Smart Program is designed for specific types of food. Use these recommendations for how to cook in your appliance.

Program	How it cooks	Types of foods
Air Fry	Circulates hot air around food for crisp food with little to no oil	Fries, cauliflower bites, wings, nuggets
Bake	Evenly bakes and browns baked goods	Breads, cakes, pastries and buns
Roast	Crisps outside and evenly cooks inside	Small cut proteins, vegetables, chicken breasts and potatoes
Broil	Evenly brown tops of food	Nachos, thin cuts of meat, fish and browning casseroles
Reheat	Heat leftovers and bring the crisp back to pizza and french fries	Leftover food and snacks
Dehydrate	Slowly and evenly dries food	Meats (jerky) fruit, vegetables

What to cook in

Cooking utensil	How it works
Air Fry Basket with Cooking Tray	Allows air to circulate under and around your food for even heating and the perfect crisp. You can place food right on the Cooking Tray, without using foil or other coverings.
Baking Dish (Bake program only)	A metal or glass baking dish can hold food, like batter for cakes and dough for breads. Place the baking dish on the Cooking Tray inside the Air Fry Basket, leaving approximately 1" / 2.5 cm of space around all sides of the baking dish to allow heat to circulate evenly.

Program settings

Each Smart Program has default cooking settings, designed for best results with a wide variety of foods. You can adjust the settings for specific foods and recipes.

Each time you change the settings for a Smart Program, those become the memorized settings the next time you use the program. You can return to the default settings at any time (see 'Changing Settings' on page 10.)

Program	Default Temp	Temp Range	Default Time	Time Range	Preheat	Turn Food
Air Fry	400°F 205°C	195°F-400°F 90°C-205°C	15 min	1 min-1 hr	Yes	Yes
Bake	350°F 176°C	195°F-400°F 90°C-205°C	25 min	1 min-1 hr	Yes	No
Roast	375°F 190°C	250°F-400°F 121°C-205°C	20 min	1 min-1 hr	Yes	No
Broil	400°F 205°C	300°F-400°F 148°C-205°C	10 min	1 min-30 min	Yes	No
Reheat	280°F 138°C	120°F-360°F 49°C-182°C	10 min	1 min-1 hr	No	No
Dehydrate	125°F 51°C	105°F-195°F 40°C-90°C	6 hr	1 hr-24 hr	No	No

COOKING

Your Instant Pot Vortex Mini uses rapid air circulation to crisp or cook food, giving your meals all the rich, crispy flavor of deep frying, with little to no oil.

⚠ WARNING

HOT SURFACES

The air fryer chamber will be hot during and after cooking. Always exercise extreme caution when removing food from the hot air frying basket and cooking chamber. Touching hot surfaces may result in personal injury, and/or property damage.

MUST ALLOW AIR FLOW

To prevent personal injury, do not block air intake or air vents.

How to cook

Step	What to do	Result
1	Plug the electrical cord into an outlet.	Display shows OFF
2	<i>For Reheat and Dehydrate:</i> Place your food in the Air Fry Basket and insert the basket into the air fryer.	
3	<i>For Air Fry, Bake, Roast and Broil:</i> Insert the Air Fry Basket (without food) into the air fryer. When the air frying basket is inserted securely, the front of the basket is flush with front of cooker. <i>You'll add food once the unit is preheated.</i>	
4 Choose program	Press the button for the Smart Program you want to use.	The Smart Program indicator lights and memorized time and temperature settings display, alternating every 3 second

Step	What to do	Result
5 Choose temp	<i>You can accept the memorized temperature or change it.</i> Press  (Temp/Time) or the Control Dial to activate the temperature setting. Turn the Control Dial to adjust the cooking temperature.	Temperature setting blinks and then displays the temperature you select
6 Choose time	<i>You can accept the memorized time or change it.</i> Press  (Temp/Time) or the Control Dial to activate the time setting. Turn the Control Dial to adjust the cooking time.	Time setting blinks and then displays the time you select
7	Press  (Start).	• The display shows On and  (Preheating) lights (Air Fry, Roast, Bake and Broil) •  Cooking lights (Dehydrate and Reheat) • Memorized time and temperature settings display, alternating every 3 second, with cooking time counting down
8 Add food	<i>For Air Fry, Bake, Roast and Broil:</i> When the display shows Add Food , pull out the basket and carefully add food. Re-insert the basket.	Cooking starts and  Cooking lights
9 Turn food	<i>For Air Fry:</i> When the display shows Turn Food , pull out the basket and carefully turn, flip or rotate your food. Re-insert the basket. <i>If you don't pull out the basket, cooking automatically resumes after 10 seconds.</i>	Cooking resumes automatically
10	When the Smart Program completes, the unit beeps.	Display shows End

Step	What to do	Result
11	Pull out the basket and carefully remove your food from the basket. Re-insert the basket, unplug the unit and let it fully cool before cleaning or storing. <i>If you don't pull out the Air Fry Basket, the unit beeps once a minute for 10 minutes to remind you.</i>	

Changing settings or ending cooking

You can change the cooking time or temperature while cooking, or stop cooking.

Setting	When to change	How	Notes
Change time	During Preheating or Cooking	Press ⏸ (Temp/Time), then turn the Control Dial to increase or decrease the time, then press ▷ (Start).	If you don't press ▷ (Start) within 10 seconds, the new settings are not saved.
Change temperature	During Preheating or Cooking	Press ⏸ (Temp/Time), then turn the Control Dial to increase or decrease the temperature, then press ▷ (Start).	If you don't press ▷ (Start) within 10 seconds, the new settings are not saved.
Stop cooking	During Preheating or Cooking	Press × (Cancel).	Depending on the internal temperature of the unit, the fan may keep running to cool the cooker.

CLEANING

Clean your air fryer after each use. Always unplug the unit and let all parts cool to room temperature before cleaning. Before use or storing, make sure all surfaces are dry.

⚠ WARNING

To prevent electric shock, unplug before cleaning.

DO NOT immerse power cord, plug or the appliance in water or other liquid, which may result in electric shock.

Part	Cleaning instructions
Cooking Tray Air Fry Basket	• Dishwasher safe.* • Avoid using metal utensils and harsh cleaners when cleaning to avoid damaging the non-stick coating. • Allow the basket to air dry completely before reinstalling otherwise glass may experience clouding..
Cooking chamber	• Clean with a damp cloth and mild dish soap. • Always check the heating coil and cooking chamber walls for oil spatter and food debris, and clean as needed. • Ensure the heating coil is dry before turning on the air fryer. • To remove baked-on grease and food residue from the cooking chamber, spray with a mixture of baking soda and vinegar and wipe clean with damp cloth. For stubborn stains, allow the mixture to sit on the affected area for several minutes before scrubbing clean.
Power cord	• Use a barely-damp cloth to wipe any particles off cord

** Some discoloration may occur after machine washing, but this will not affect the cooker's safety or performance.*

TROUBLESHOOTING

Problem	Cause	Solution
Air fryer will not turn on	The appliance is not properly plugged in.	Make sure the power cord is plugged into the outlet firmly.
	Outlet is not powered.	Plug another appliance into the same outlet to test the circuit.
	The basket is not fully inserted into the air fryer.	Make sure the basket is fully inserted.
Black smoke is coming from the air fryer	Using an oil with a low smoke point.	Cancel the Smart Program, unplug the cooker and allow it to cool to room temperature. Choose a neutral oil with a high smoke point, such as Canola, Avocado, Soybean, Safflower, or Rice Bran.
	Food residue on the heating coil, in the cooking chamber or on the accessories.	Cancel the Smart Program, unplug the cooker and allow it to cool to room temperature. Remove all accessories from the cooking chamber and clean the cooking chamber and all accessories thoroughly.
	Appliance malfunction.	Contact Consumer Care.
White smoke is coming from the air fryer	Cooking foods with a high fat content, such as bacon, sausage, and hamburger	Avoid air frying foods with a high fat content. Check the cooking chamber for excess oil and/or fat and carefully remove as needed before air frying.
	Water is vaporizing, producing thick steam.	Pat dry moist food ingredients before air frying. Do not add water or other liquid to the cooking chamber when air frying.
	Seasoning on food has blown into element	Be mindful when seasoning food. Spray vegetables and meats with oil before seasoning to help the seasoning stick.


ERROR CODES

If the control panel displays an error code from this list, there is an issue with the air fryer. Here are the actions you should take to fix the problem.

Problem	Cause	Solution
E1	Temperature sensor open circuit.	Contact Consumer Care.
E2	Temperature sensor short circuit.	Contact Consumer Care.

REPLACEMENT PARTS

We offer genuine replacement parts for your Instant Pot air fryer, if you need them. Visit www.instantpot.com to order.

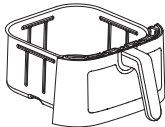	Part	Part number
	Air Fry Basket with Clear Cook Window	210-0194-01
	Cooking Tray	210-0193-01
	User Manual	399-1475-03US

LEARN MORE

There's a whole world of Instant Pot cooking information and help just waiting for you. Here are some of the most helpful resources.

Register your product

Instantpot.com/register

Contact Consumer Care

In the Instant Connect™ App

Instantpot.com/customer-care-center

support@instantpot.com

Download the Instant Connect™ App

Discover guided cooking and recipes

Available at iOS and Android app stores

Cooking charts and more recipes

Instantpot.com

How-to videos, tips and more

Instantpot.com

Replacement parts and accessories

Instantpot.com

Join the community



Product specifications

Model	Volume	Wattage	Power
IPAFB41-BK IPAFB41-TE IPAFB41-RE IPAFB41-ST IPAFB41-SS	4 Quart 3.7 Litres	1500 W	120V ~ 60Hz

WARRANTY

One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made one year from the purchase date or delivery date, whichever is later, from authorized retailers of Instant Pot Brands by the original appliance owner and is not transferable. Proof of original purchase date and, if requested by Instant Pot Brands, return of your appliance, is required to obtain service under this Limited Warranty. Provided the appliance was used in accordance with the use & care instructions, Instant Pot Brands will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire twelve (12) months from the date of receipt. Failure to register your product will not reduce your warranty rights. The liability of Instant Pot Brands, if any, for any allegedly defective appliance or part will not exceed the purchase price of a comparable replacement appliance.

What is not covered by this warranty?

- Products purchased, used, or operated outside of the United States and Canada.
- Products that have been modified or attempted to be modified.
- Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God, or repair by anyone unless directed by an Instant Pot Brands representative.
- Use of unauthorized parts and accessories.
- Incidental and consequential damages.
- The cost of repair or replacement under these excluded circumstances.

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY APPLICABLE LAW, INSTANT POT BRANDS MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABLE QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Some states or provinces do not allow for: (1) the exclusion of implied warranties of merchantability or fitness; (2) limitations on how long an implied warranty lasts; and/or (3) the exclusion or limitation of incidental or consequential damages; so these limitations may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law. The limitations of warranties, liability, and remedies apply to the maximum extent permitted by law. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Product Registration

Please visit **www.instantpot.com/register** to register your new Instant Pot Brands appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to **support@instantpot.com**. You can also create a support ticket online at **www.instantpot.com**. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Pot Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

⚠ WARNING

DO NOT place this appliance on or close to a gas or electric burner, or inside an oven. **NEVER** use on your stove. Always operate this appliance on a stable, non-combustible, level surface, such as a kitchen countertop.



In Canada, distributed by
Instant Pot Brands
199 Bay Street, Suite 4000
Toronto, ON M5L 1A9 Canada

In U.S., distributed by
Instant Pot Brands
8725 W Higgins Road, Suite 725
Chicago, IL 60631 U.S.

instantpot.com

© 2025 Instant Pot Brands
399-1475-03US

Art release date
09/12/2025

INSTANT POT and VORTEX
are registered trademarks
of Instant Pot Brands