

get started

**INSTANT POT® DUO® CRISP
MULTI-COOKER + AIR FRYER
WITH ULTIMATE LID AND WIFI**

USER MANUAL

Instant Pot®

Welcome

to your new Instant Pot® Duo® Crisp Multi-Cooker + Air Fryer!

This Instant Pot Duo Crisp Multi-Cooker + Air Fryer with Ultimate Lid and WiFi is designed to pressure cook and air fry using a single lid. It'll help you cook healthy, delicious meals more easily and in less time. We hope you fall in love with your Instant Duo Crisp, and enjoy it in your kitchen for years to come!

Learn all about your Instant Pot!



FCC Compliance Statement

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

⚠ WARNING

Before using your new appliance, read all instructions, including the Important Safeguards. **Failure to follow the safeguards and instructions may result in personal injury and/or property damage.**

CONTENTS

Important safeguards	3
What's in the box	9
Changing Instant Pot Duo Crisp settings	11
Using the Ultimate Lid	13
Initial setup	17
Using the Instant Connect App	19
Pressure Cook + Steam	21
Sauté	24
Slow Cook	26
Sous Vide	28
Yogurt	30
Air Fry	32
Bake + Roast	34
Broil	36
Dehydrate + Proofing	38
Keep Warm	40
Cleaning	41
Troubleshooting	42
App Troubleshooting	44
Error codes	46
Learn more	47
Warranty	48

About the Instant Connect™ app!

Control your Instant Pot Duo Crisp Ultimate Lid using the Instant Connect App.

Get the App

You can download the app in one of two ways:

1. Scan the QR code below
2. Search "Instant Pot" in the Apple Store or the Google Play Store



Get connected

1. Plug in your appliance.
2. Open the App and select 'Get Started'.
3. Select 'Instant Pot Duo Crisp Ultimate Lid'.
4. The App will guide you through creating a user account.
5. Then the App will guide you through connecting.

For more details about the App and connecting, see page 18.

IMPORTANT SAFEGUARDS

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

READ ALL INSTRUCTIONS

Before using your new appliance, please read all instructions, including the Safety Information below. Keep this manual for reference.

Placement

- **DO** place the appliance on a countertop only. Always operate the appliance on a stable, non-combustible, level surface.
- **DO** make sure all parts are dry and free of food debris before placing the inner cooking pot on the cooker base.
- **DO NOT** place the appliance or power cord on or close to a gas or electric stovetop or oven. **NEVER** use the appliance on your stove.
- **DO NOT** use the appliance near water, an external heat source or flame.
- **DO NOT** use outdoors. Keep out of direct sunlight.
- **DO NOT** place on anything that may block the vents on the bottom of the appliance.

General Use

The removable inner cooking pot is extremely hot during use and can be extremely heavy when full of ingredients.

- **DO** use oven mitts when handling the inner cooking pot and removing accessories.
- **DO** place hot accessories on a heat-resistant surface or cooking plate.
- **DO** use care when lifting the cooking pot from the cooker base to avoid burn injury.
- **DO** use extreme caution when the cooking pot contains hot food, hot oil or other hot liquids.
- **DO** use only the Instant Pot lid or lids that came with this cooker base. Using any other pressure cooker lids may cause personal injury and/or property damage. Only use the appliance's side handles when carrying or moving.

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

- **DO NOT** use the appliance without the removable inner cooking pot installed.
- **DO NOT** touch the appliance's hot surfaces, or any accessories during or immediately after cooking because they will be hot. Only use the appliance's side handles for carrying or moving.
- **DO NOT** use this appliance for deep frying or pressure frying with oil.
- **DO NOT** move the appliance while it is in use and use extreme caution when disposing of hot grease.
- **DO NOT** allow children or persons with reduced physical, sensory or mental capabilities to operate this appliance. Close supervision is necessary when any appliance is used by or near children and persons with reduced physical, sensory or mental capabilities. Children should not play with this appliance.
- **DO NOT** use the appliance for anything other than household use. It is not intended for commercial use.
- **DO NOT** leave the appliance unattended while in use.
- **DO NOT** store any item on top of the appliance. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like.

Pressure Cooking

This appliance cooks under pressure. Allow the appliance to depressurize naturally or release all excess pressure before opening.

Failure to follow these instructions may result in burns, personal injury and/or property damage.

- **DO** make sure the appliance is properly closed before operating.
- **DO** check that the steam release valve is installed properly.
- **DO** use the pressure cooking lid or Ultimate lid when pressure cooking.
- **DO** turn the appliance off if steam escapes from the steam release valve and/or float valve in a steady stream for longer than 3 minutes. If steam escapes from the sides of the lid, turn the appliance off. Once steam stops, pressure is released and the cooker has cooled, carefully make sure the sealing ring is properly installed.
- **DO** ensure the sealing ring is in good condition and installed properly.
- **DO** check the steam release valve, steam release pipe, anti-block shield and float valve for clogging before use.

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

- **DO NOT** remove the lid with unprotected hands.
- **DO NOT** attempt to force the lid off the Instant Pot cooker base.
- **DO NOT** move the appliance when it is pressurized.
- **DO NOT** cover or obstruct the steam release valve and/or float valve with cloth or other objects.
- **DO NOT** attempt to open the appliance until it has depressurized, and all internal pressure has been released. Attempting to open the appliance while it is still pressurized may lead to sudden release of hot contents and may cause burns, personal injury and/or property damage.
- **DO NOT** place your face, hands or exposed skin over the steam release valve or float valve when the appliance is in operation or has residual pressure, and do not lean over the appliance when removing the lid.

Overfill During Pressure Cooking

Overfilling may cause a risk of clogging the steam release pipe and valve, developing excess pressure.

- **DO NOT** fill the inner cooking pot over the line labeled 'PC MAX' or 'Max PC Fill'.
- **DO NOT** fill the inner cooking pot over the line labeled '1/2' when cooking foods that expand during cooking such as rice, dried beans or dried vegetables.
- **DO** be aware that certain foods, such as applesauce, cranberries, pearl barley, oatmeal or other cereals, split peas, noodles, macaroni, rhubarb, or spaghetti can foam, froth and sputter, and clog the steam release pipe and valve. **DO NOT** fill the inner cooking pot over the line labeled '1/2' when cooking these foods.
- **DO NOT** place oversized foods into the inner cooking pot as they may cause risk of fire, personal injury and/or property damage.

Air Frying Cautions

When the air fryer is in operation, hot air is released through the air vents. Keep your hands and face away from the air vents and take extreme caution when removing hot accessories from the appliance.

Failure to do so may result in personal injury and/or property damage.

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

While cooking, the internal temperature of the appliance reaches several hundred degrees. To avoid personal injury, never place unprotected hands inside the appliance until it has cooled to room temperature.

- **DO** use the included inner cooking pot when using the air fryer or Ultimate lid.
- **DO** use extreme caution when using containers made of materials other than glass or metal. Failure to do so may result in personal injury, fire and/or property damage.
- **DO** use extreme caution when removing the inner cooking pot, air fry basket or cooking tray, or disposing of hot cooking residue.
- **DO NOT** use a ceramic-coated or stoneware pot for air frying.
- **DO NOT** cover or block the vents while the air fryer is operating. Doing so will prevent even cooking and may cause damage to the appliance. Leave at least 5 in / 13 cm of space around the air fryer when in use.
- **DO NOT** use this appliance for deep frying foods.
- **DO NOT** pour oil into the cooking container. Using excess cooking oil could cause fire and result in personal injury and/or property damage.
- **DO NOT** use pressurized, aerosol oil sprays, since they contain chemicals that can damage the non-stick finish of the cooking tray. If needed, spray food lightly with oil with a high smoke point (such as refined avocado oil, safflower oil, refined sunflower oil, refined peanut oil, canola oil and refined coconut oil) from a non-aerosol, pump-style cooking spray before placing in the basket.
- **DO NOT** use this appliance for making popcorn.
- Should the unit emit black smoke during use, press **Cancel** and unplug the appliance immediately. Wait for smoking to stop before removing the lid, then clean thoroughly. For further information refer to 'Troubleshooting'.

Overfill During Air Frying

- **DO NOT** overfill the unit when air frying. Overfilling may cause food to contact the heating element, which may result in personal injury, fire, and/or property damage. When using an air fry tray or cooking tray, only place food in a single layer and do not stack. When using an air fry basket, do not fill more than 3/4 full. Best air frying results require air circulating through the food.
- **DO NOT** allow food to contact the heating element.

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

Accessories

- **DO** use only accessories or attachments authorized by Instant Pot Brands. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of electric shock or other personal injury, fire and/or property damage.
- **DO** use only an authorized Instant Pot inner cooking pot to reduce the risk of pressure leakage.
- **DO** only replace the sealing ring with an authorized Instant Pot sealing ring to prevent personal injury, property damage, and/or damage to the appliance.
- **DO NOT** use the included accessories in a microwave, toaster oven, convection or conventional oven, on a ceramic, electric or gas cooktop, or with an outdoor grill.

Care and Storage

- **DO** let the appliance cool to room temperature before cleaning or storage.
- **DO NOT** store any materials, other than the inner cooking pot, in the cooker base when not in use.
- **DO NOT** place any combustible materials in the cooker base, such as paper, cardboard, plastic, Styrofoam or wood.
- **DO NOT** clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch the electrical parts, causing a risk of shock, burns or other personal injury.

Power Cord

A short power-supply cord is used to reduce the hazards resulting from grabbing, entanglement or tripping. **WARNING:** Hot spilled food can cause serious burns.

- **DO** keep appliance and power cord away from children.
- **DO** disconnect the power cord from the electrical outlet when not using the appliance and before cleaning.
- **DO NOT** let the power cord hang over edges of tables or counters.
- **DO NOT** let the power cord touch hot surfaces or open flame, including a stovetop.
- **DO NOT** use below-counter power outlets.
- **DO NOT** use with extension cords, power converters or adapters, timer switches or separate remote-control systems.

⚠ WARNING

This appliance has a polarized plug and one blade is wider than the other. To reduce the risk of electric shock:

- **DO** plug this appliance into a polarized outlet one way.
- **DO** contact a qualified electrician if the plug does not fit in the outlet.
- **DO NOT** attempt to modify the plug. If the plug does not fit full into the outlet, reverse the plug.

Electrical Warning

The cooker base contains electrical components that are an electrical shock hazard. **Failure to follow these instructions may result in electric shock and/or death.**

To protect against electrical shock:

- To disconnect, select **Cancel**, then remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. **NEVER** pull from the power cord.
- **DO** regularly inspect the appliance and power cord for any signs of damage or fraying.
- **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Consumer Care by email at **support@instantpot.com**.
- **DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock or other personal injury, fire and/or property damage, and will void the warranty. For assistance, contact Consumer Care by email at **support@instantpot.com**.
- **DO NOT** tamper with any of the safety mechanisms, as this may result in personal injury and/or property damage.
- **DO NOT** put liquid or food of any kind into cooker base without the inner cooking pot.
- **DO NOT** immerse the power cord, plug or the appliance in water or other liquid.
- **DO NOT** clean the appliance by rinsing it under a faucet.
- **DO NOT** use the appliance in electrical systems other than 120 V ~ 60 Hz for North America.


SAVE THESE INSTRUCTIONS

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

WHAT'S IN THE BOX

Instant Pot Duo Crisp

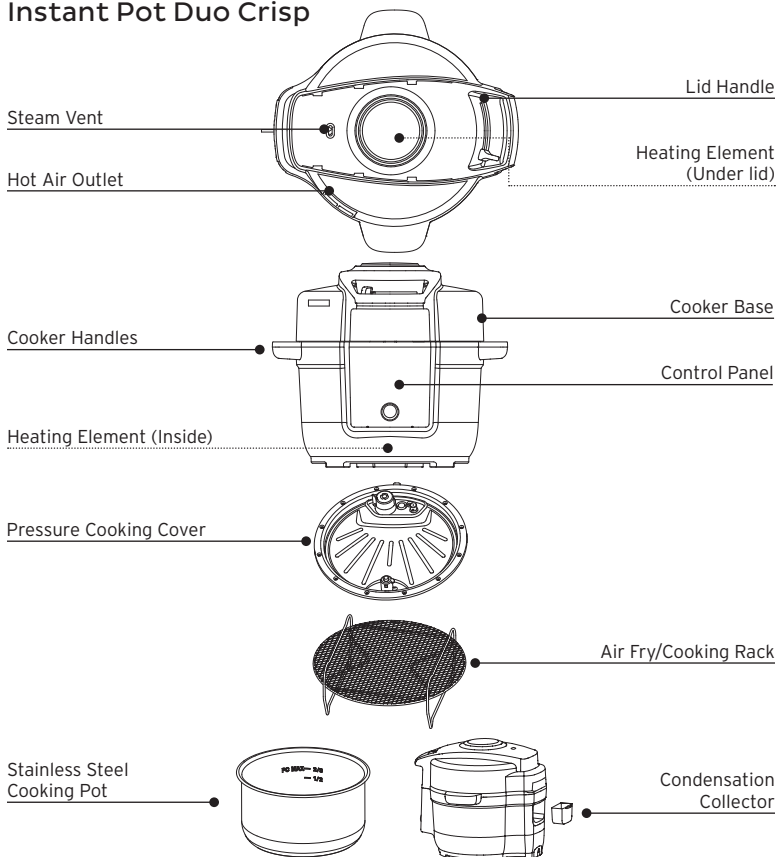

Illustrations are for reference only and may differ from the actual product.


Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live. Be sure to keep this User Manual for reference

USING YOUR INSTANT POT DUO CRISP

Control panel

We've designed the control panel to be simple to use and easy to read.

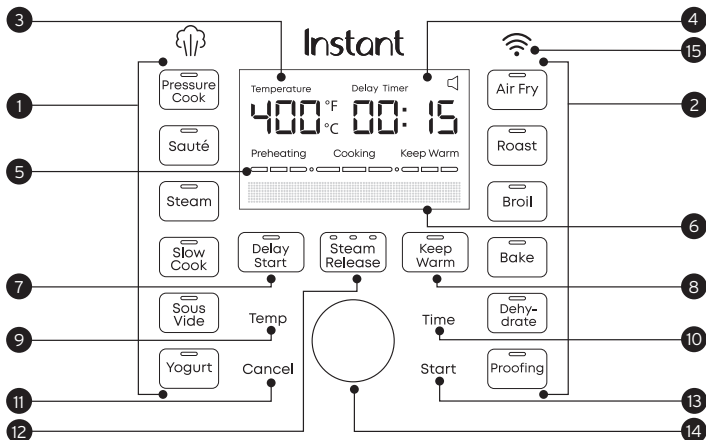

1. Pressure cooking smart programs
 - Light shows the active smart program
2. Air frying smart programs
 - Light shows the active smart program
3. Temperature display
 - Choose Fahrenheit or Celsius
4. Time display
 - Cook time countdown
 - Keep Warm count
5. Cooking progress bar
6. Message bar
 - Displays status messages
7. Delay Start
 - Can also serve as kitchen timer
8. Keep Warm
 - On or Off
9. Temperature
10. Time
11. Cancel
12. Steam Release control button
 - Lights show type of steam release selected
13. Start
14. Control dial
 - Adjust time and temperature
15. WiFi indicator

Cooking Progress Bar

1. **Preheating:** cooker is heating to the set temperature. Display shows cooking time.
2. **Cooking:** cooker has started the smart program. Display counts down cooking time.
3. **Keep Warm:** turns on automatically after cooking stops. When done, display shows **End**.

CHANGING INSTANT POT DUO CRISP SETTINGS

Turning sound On/Off

You can choose to have audible cooking alerts on or off.

- When in Ready mode, press and hold the **Time** and **Temperature** buttons for 5 seconds until the display shows **Sound On** or **Sound Off**.

Audible safety alerts (beeps) cannot be turned off.

Choosing temperature scale

You can choose to show cooking temperature in either Fahrenheit or Celsius.

- When in Standby mode, press and hold the **Temp** button for 5 seconds until the display shows **Temp Unit F** or **Temp Unit C**.

Delay the start of cooking

You can use Delay Start to delay cooking for a minimum of 10 minutes or a maximum of 24 hours.

1. Select a smart program, adjust the settings as you want, then press **Delay Start**.
2. When the time flashes, use the **Control Dial** to adjust the delay time.
3. Press **Start** and the timer counts down.
4. When Delay Start ends, the smart program begins, and the display shows cooking time.
5. Delay Start is not available with the **Air Fry, Sauté, Yogurt, Sous Vide, Roast, Broil, Bake, Dehydrate, Proofing** or **Keep Warm** smart programs.

Set a timer

You can set a cooking timer for a minimum of 1 minute or a maximum of 1 hour.

1. When in Ready mode, press **Delay Start**.
2. When the time flashes, use the **Control Dial** to adjust the delay time.
3. Press **Start** and the timer counts down.
4. When the timer ends, the display shows **Ready**.

Reset Smart Programs to original settings

Reset smart programs

- While in Ready mode, press and hold one smart program button for over 3 seconds until the smart program button blinks twice.
The smart program's settings are restored to the factory default setting.
- While in Cooking mode, press and hold the currently-used smart program button for over 3 seconds until the smart program button blinks twice.
The smart program's settings are restored to the factory default setting.

Reset all settings

- While in Ready mode, press and hold the Control Dial for over 3 seconds until the smart program buttons blink 3 times and the display shows **Ready**.
All settings are restored to the factory default setting.

USING THE ULTIMATE LID

You'll use the Ultimate Lid for both pressure cooking and air frying, as well as other types of cooking. Always use the lid that came with this Instant Pot Duo Crisp cooker base.


Open the Lid

1. After pressure cooking, be sure to release the steam before opening. See How to Release Steam on page 16.
2. Turn the Lid Lock Switch to the **Unlock** position.
3. Use the lid handle to raise the lid from the cooker base.

Close and lock the Lid

For pressure cooking, the lid must be securely locked into place to prevent steam from escaping.

1. Use the lid handle to lower the lid onto the cooker base, and press the lid down.
2. For pressure cooking turn the Lid Lock Switch to the **Lock** position.

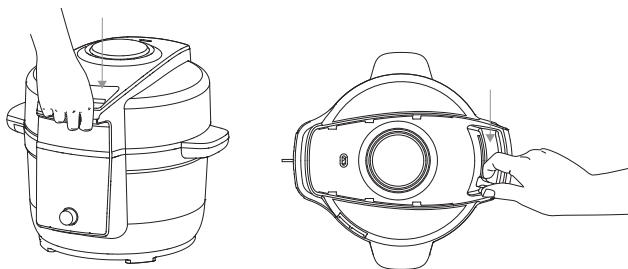


How to use the Pressure Cover


For pressure cooking and other smart programs that use the pressure cooking functions of the Ultimate Lid, you'll need to install the Pressure Cooking Inner Cover.

Install the Pressure Cooking Cover

1. Insert the Pressure Cooking Cover into the slot on the underside of the Ultimate Lid, bottom first.

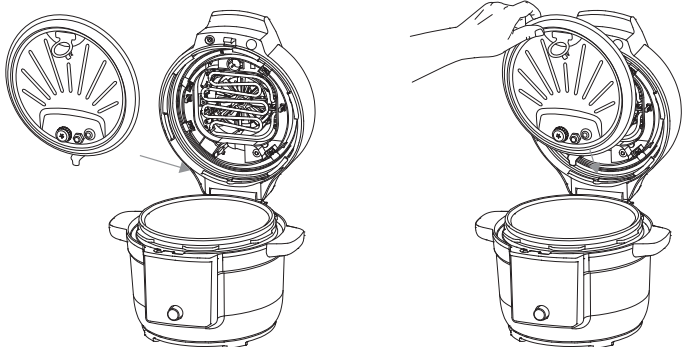


2. Push the Pressure Cooking Cover fully into place. When the Pressure Cooking Cover is in place, you will hear a locking sound.

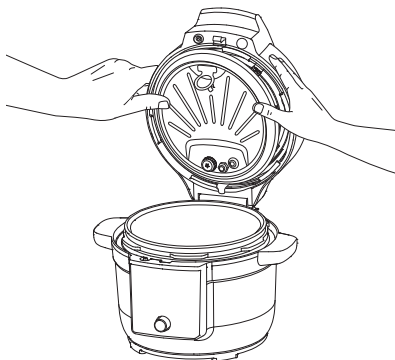


Remove the Pressure Cooking Cover

1. Open the Ultimate Lid, and then grasp the Inner Cover holder loop.

Be sure to hold the Pressure Cooking Cover holder loop with a kitchen cloth or protective gear since it may still be hot.

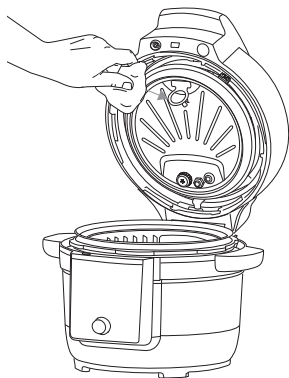

2. Press the red button on top of the lid, and the Inner Cover will release.

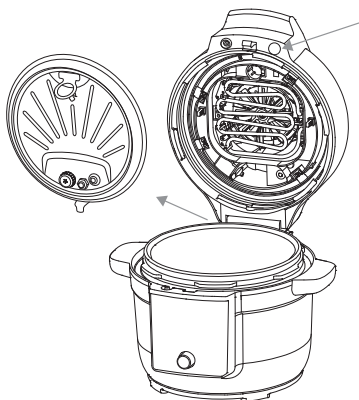

How to release steam

Your Instant Pot Duo Crisp can release steam in 3 different ways. Use the one that best fits the type of food you're cooking.

Choose	Natural Release	Pulse Release	Quick Release
How?	Releases steam gradually over time (up to 40 minutes or more) after cooking stops	Releases timed bursts of steam in quick puffs after cooking stops	Quickly releases steam after you press the steam release button
Use for	Foods that can simmer, like stews, chili, pasta, oatmeal, beans and grains	Foods like rice and grains	Foods that tend to overcook, like vegetables and seafood


How to release steam

1. Press the Steam release on the Front Control Panel to toggle between Natural Release, Pulse Release and Quick Release.

You can change the steam release type any time: before, during, or after cooking.

2. When all steam is released the display shows **OK to open lid**.
3. After steam release, you can use the lid handle to open the lid.

Hot steam releases from the steam vent; do not place your hands or face near the vent when steam is releasing.

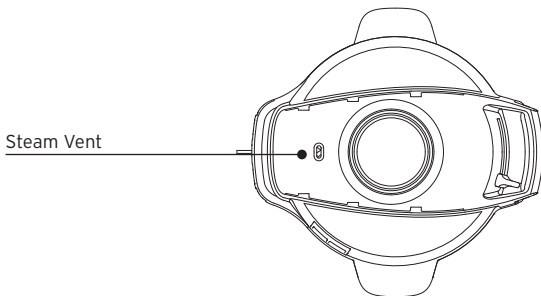

INITIAL SETUP

Clean before use

1. Wash the Cooking Pot with hot water and soap. Rinse and use a soft cloth to dry the outside. Or you can wash the Cooking Pot in the dishwasher
2. Wipe the heating element inside the cooker base and the inside of the Ultimate Lid with a soft cloth to ensure there are no stray packaging particles.

Using the condensation collector

The condensation collector sits at the back of the cooker base and accumulates overflow moisture from the condensation rim. It should be installed before cooking, then emptied and rinsed out after each use.

Remove the condensation collector

- Pull the condensation collector away from the cooker base; do not pull down.

Note the tabs on the cooker base and the grooves on the condensation collector.

Install the condensation collector

- Align the grooves on the condensation collector with the tabs on the back of the cooker base and slide the condensation collector into place.

Using the Air Fry/Cooking Rack

With a reversible design that has two sides with two different handle heights, the Air Fry/Cooking Rack is a versatile tool that you can use for most cooking programs.

- Tall handle side up: air frying, roasting, baking, pressure cooking and steaming
- Short handle side up: broiling and dehydrating

For smaller foods, that could fall out of the rack area during cooking, consider using a baking dish that holds the food inside.

Connect to power

When you're ready to use your Instant Pot, plug the power cord into an electrical outlet. When you're done cooking and whenever you're cleaning the multi-cooker, unplug the cord from the outlet.

Test run

Before using your new Instant Pot Duo Crisp for the first time, you must perform a pressure cooking test run to ensure everything is working correctly.

To perform a test run:

1. Follow the instructions for pressure cooking on page 21.
2. Fill the cooking pot with water to the first fill line, but do not add food.
3. Select **Pressure Cook**
4. Set the cooking time to 5 minutes.
5. Select **Quick Steam Release** under the steam button.
6. Press **Start**.
7. When done, appliance will release steam.
8. After steam is released, message bar will show **Ok to open lid**.
9. Wash and dry the cooking pot.


Now you're ready to cook a meal in your Instant Pot Duo Crisp!

USING THE INSTANT CONNECT APP


Make cooking simple and easy when you control your Instant Pot Duo Crisp Ultimate Lid using the Instant Connect App from your mobile device.

Guided recipes

With over 2,000 delicious, tested recipes, the App's step-by-step virtual guide assists you through the entire cooking process, ensuring a tasty meal every time.

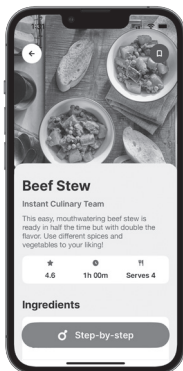

Discover 2,000 delicious recipes in the App

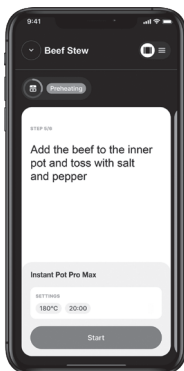

Use the App to interactively control cooking from within the recipe



Control your Instant Pot

Use the App to control the Smart Programs on your Instant Pot. You can choose your own settings and save them, all remotely.

Monitor cooking remotely

Use the App to monitor every stage of the recipe from anywhere, knowing your meal will be ready when you are.

How to get the App

You can download the app in one of two ways:

- Scan the QR code below
- Search “Instant Pot” in the Apple Store or the Google Play Store



Pairing with the Instant Connect™ App

Read the “Requirements for pairing” section below before you start.

1. Plug in your appliance.
2. Open the App and select ‘Get Started’.
3. Select ‘Instant Pot Duo Crisp Ultimate Lid’.
4. The App will guide you through creating a user account.
5. Then the App will guide you through connecting.

Now you’re ready to begin using the App with your Instant Pot Duo Crisp Ultimate Lid!

Requirements for pairing

- We suggest you have the latest iOS version or Android version on your device for the best connectivity.
- Know your home WiFi network name and password.
- Make sure your Instant Pot Duo Crisp Ultimate Lid is plugged in and not currently cooking. It should display READY.
- Make sure you have your mobile device near the Instant Pot Duo Crisp Ultimate Lid.
- Make sure you turn on Bluetooth on your mobile device.

Note: If the Wifi symbol blinks in orange, the connection failed.

PRESSURE COOK + STEAM

Both programs use pressurized steam to quickly and evenly cook foods. Use Pressure Cook for most pressure cooking recipes and use Steam as you would a regular stovetop steamer, boiling liquid to cook food with hot steam.

Using liquid for pressure cooking

Pressure cooking requires liquid in the Cooking Pot to produce the steam needed. For this Instant Pot Duo Crisp, here are the minimum amounts you'll need:

Cooking Pot Size	Minimum Liquid for Pressure Cooking*
6.5 Quarts/ 6.2 Litres	2 cups (16 oz / 500 mL)

**Unless otherwise specified in recipe.*

Pressure cooking liquids should be water-based, such as broth, stock, soup or juice. If using canned, condensed, or cream-based soup, add water as directed above.

Program settings

Choose from these settings for each smart program:

Smart Program	Temperature	Default Cook Time	Min. Cook Time	Max. Cook Time
Pressure Cook	Automatically set	10 minutes (00:10)	0 minutes (00:00)	4 hours (04:00)
Steam	Automatically set	10 minutes (00:10)	0 minutes (00:00)	1 hours (01:00)

Other settings

- Keep Warm is set to ON by default.
- Delay Start is available.

Use the app

You can control settings for the Pressure Cook or Steam programs and use recipes for specific foods in the Instant Connect App. Or you can follow the instructions below, using the multi-cooker's Control Panel.

How to pressure cook or steam

Prep

Cut, chop, season or marinate your ingredients according to your recipe.

Preheat

1. Place the Cooking Pot into the cooker base.
2. Add ingredients to the Cooking Pot.
3. Make sure the Pressure Cooking Cover is installed in the Ultimate Lid.
4. Close the lid on the cooker base and lock it.
See 'Close and lock the lid' for full details.
5. Press **Pressure Cook** or **Steam**. The indicator light blinks.
6. The default or last-used cooking time displays. To change it, press **Time** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
7. For the Pressure Cook smart program, Keep Warm is **On** by default. If you want to turn it off, press **Keep Warm**.
8. The default or last-used steam release type is displayed. To change it, press the **Steam Release** button as needed to toggle through the options.
See 'How to release steam' for full details.
9. Press **Start**. The Progress Bar shows **Preheating** and the Instant Pot Duo Crisp starts heating. The display shows Preheating.

It can take 10-15 minutes to preheat for cooking. Preheating time can be longer than 15 minutes for 2/3 max. Frozen foods increase the preheating time. The cooking time you choose will be the new setting the next time you use that smart program.

Cook

1. When the pressure is ready, the Instant Pot Duo Crisp starts pressure cooking. The unit displays **Cooking** and the cooking timer starts counting down.
2. When the timer reaches 00:00, cooking stops.
3. When the display shows **Ok to Open Lid**, you can open the lid.
4. Press **Cancel** if you want to finish cooking before the timer stops.

Keep Warm

When the Pressure Cook smart program completes and Keep Warm is turned on, the timer begins counting from **00:00** up to 10 hours (**10:00**). If Keep Warm is turned off, the display shows **End**.

SAUTÉ

Use Sauté in place of a frying or saucepan. Sautéing can deepen the flavors of your food, or can simmer, thicken or reduce sauces.

Choose from these settings to sauté:

Default Temp.	Min. Temp.	Max. Temp.	Default Cook Time	Min. Cook Time	Max. Cook Time
Level 1	Level 1	Level 6	30 minutes (00:30)	1 minute (00:01)	1 hour (01:00)

Other settings

- Keep Warm is not available.
- Delay Start is not available.

How to sauté

Prep

Cut, chop, season or marinate your ingredients according to your recipe.

Preheat

1. Place the Cooking Pot into the cooker base.
2. Keep the lid open during the entire Sauté cooking process.
3. Press **Sauté**. The indicator light blinks.
4. The default or last-used cooking time displays. To change it, press **Time** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
5. The default or last-used cooking temperature displays. To change it, press **Temp** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
6. Press **Start**. The Progress Bar shows **Preheating** and the Instant Pot Duo Crisp starts heating. The display shows **Preheating**.

Cook

1. When display shows **Add Food**, add ingredients.
2. The unit displays **Cooking**.
3. When timer ends, display shows **End**.
4. Press **Cancel** if you want to finish cooking before the timer stops.

Deglazing

Deglazing is the process of adding a liquid to a hot pan, releasing all of the delicious, caramelized pieces stuck to the bottom.

1. Remove food from Cooking Pot.
2. Add water, broth, or wine.
3. Use wooden spoon or silicone spatula to loosen food stuck to bottom of the Cooking Pot.

Sautéing before Pressure or Slow Cooking

Quite often, you'll want to sauté foods to brown them before further cooking them.

1. Sauté ingredients.
2. Press **Cancel**.

*You can deglaze the Cooking Pot now before switching to **Pressure Cook** or **Slow Cook** (see **Deglazing**).*

3. Select the smart program you want to use to cook.

SLOW COOK

Slow Cook lets you make your favorite simmering and stewing recipes. This program does not use pressure to cook food.

Choose from these settings for slow cooking:

Default Temp.	Min. Temp.	Max. Temp.	Default Cook Time	Min. Cook Time	Max. Cook Time
High	Low	High	4 hours (04:00)	30 minutes (00:30)	24 hours (24:00)

Other settings

- Keep Warm is ON by default.
- Delay Start is available.

Use the app

You can control all the settings for the Slow Cook program and use recipes for specific foods in the Instant Connect App. Or you can follow the instructions below, using the multi-cooker's Control Panel.

How to slow cook

Prep

Cut, chop, season or marinate your ingredients according to your recipe.

Preheat

1. Place the Cooking Pot into the cooker base.
2. Add ingredients to the Cooking Pot.
3. Make sure the Pressure Cooking Cover is installed in the Ultimate Lid.
4. Close the lid on the cooker base and lock it.
See 'Close and lock the lid' for full details.
5. Press **Slow Cook**. The indicator light blinks.

6. The default or last-used cooking time displays. To change it, press **Time** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
7. The default or last-used cooking temperature displays. To change it, press **Temp** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
8. Keep Warm is **On** by default. If you want to turn it off, press **Keep Warm**.
9. Press **Start**. The Progress Bar shows **Preheating** and the Instant Pot Duo Crisp starts heating. The display shows **Preheating**.
10. When the pressure is ready, the Instant Pot Duo Crisp starts slow cooking. The unit displays **Cooking** and the cooking timer starts counting down.
11. When the timer reaches 00:00, cooking stops.
12. Press **Cancel** if you want to finish cooking before the timer stops.

Keep warm

When cooking completes and Keep Warm is turned on, the timer begins counting from **00:00** up to 10 hours (**10:00**). If Keep Warm is turned off, the display shows **End**.

SOUS VIDE

Sous Vide cooks food underwater in an air-tight, food-safe bag, for a long period of time. Food cooks in its own juices and comes out delicious and very tender. This program does not use pressure to cook food.

Choose from these settings for the Sous Vide Smart Program:

Default Temp.	Min. Temp.	Max. Temp.	Default Cook Time	Min. Cook Time	Max. Cook Time
56°C 133°F	25°C 77°F	90°C 194°F	3 hours (03:00)	30 mins (00:30)	99 hours, 30 mins (99:30)

Other settings

- Keep Warm is not available.
- Delay Start is not available.

What you need to sous vide

- Tongs
- Food safe, airtight, re-sealable food pouches
OR
- Vacuum sealer and food-safe vacuum bags

How to sous vide

Prep

1. Cut, chop, season or marinate your ingredients according to your recipe.
2. Add the ingredients to the cooking bag or pouch and seal tightly.

Preheat

1. Fill the Cooking Pot with water to the Half Fill mark.
2. Place the Cooking Pot into the multi-cooker base.
3. Place the lid on top of the multi-cooker base and lock the lid.

4. Press **Sous Vide**. The indicator light blinks.
5. The default cooking time displays. To change it, press **Time** and turn the **Control Dial** to change it, then press **Control Dial** to select the time.
6. The default cooking temperature displays. To change it, press **Temp** and turn the **Control Dial** to change it, then press **Control Dial** to select the temperature.
7. Press **Start**. The Progress Bar and the display shows **Preheating**.

Cook

1. When the Progress Bar shows **Add Food**, unlock and open the lid and add the cooking bag or pouch to the cooking pot.
2. Replace and re-lock the lid. The display shows **Cooking** and the cooking time starts counting down.
3. When the cooking time reaches 00:00, the display shows **End**.

*You can press **Cancel** to stop cooking at any time.*

Remove food

- When cooking is done, unlock and remove the lid. Use the tongs to carefully remove the cooking pouch.

YOGURT

You can use your Instant Pot Duo Crisp to easily make delicious, fermented dairy and non-dairy yogurt.

Choose from these settings for making yogurt:

Pasteurizing Temperature	Fermenting Temperature	Pasteurizing Time	Default Fermenting Time	Min Fermenting Time	Max Fermenting Time
Automatically set	Automatically set	Automatically set 30 minutes (00:30)	8 hours (08:00)	6 hours (06:00)	24 hours (24:00)

Other settings

- Keep Warm is not available.
- Delay Start is not available.

How to make yogurt

Making yogurt is a 3-step process, starting with pasteurizing the milk, then adding yogurt starter, and finally cooling the yogurt. Be sure to follow a trusted recipe.

Prep

1. Prepare the ingredients according to your recipe.
2. Place the ingredients into the Cooking Pot.

Pasteurize

1. Place the Cooking Pot into the cooker base.
2. Make sure the Pressure Cooking Cover is installed in the Ultimate Lid.
3. Close the lid on the cooker base and lock it.
4. See 'Close and lock the lid' for full details.
5. Press **Yogurt**. The indicator light blinks.

6. Press **Start**. The first Progress Bar displays under Cooking and the Instant Pot Duo Crisp starts heating. The display shows **Step 1. Pasteurize**.
7. When pasteurization is done, the Instant Pot Duo Crisp starts cooling down, and the second Progress Bar displays under Cooking. Open lid to cool down faster, takes approximately one and half hour. The display shows **Cooling Down**.

Ferment

1. When the Instant Pot Duo Crisp reaches the correct temperature for fermentation, the display shows **Add Yogurt Starter**. Add the yogurt starter and close lid.
2. You have 30 minutes to add the yogurt starter. If you do nothing, the Yogurt program will automatically stop.
3. The default or last-used fermenting time displays. To change it, press Time and turn the Control Dial to change it, then press Time again to select it.
4. Press Start. The third Progress Bar displays under Cooking. The display shows **Step 2. Ferment**.
5. When the fermenting step is finished, the display shows **End**.
6. Press Cancel if you want to finish cooking before the timer stops.

Cool

1. Allow yogurt to cool.
2. Place in refrigerator for 12-24 hours to develop flavors.

How much to make?

Instant Pot Size	Minimum Milk Volume	Maximum Milk Volume
6.5 Quarts / 6.2 Liters	4 Cups (32 oz / 1000 mL)	4 Quarts (128 oz / 3.8 L)

AIR FRY

You can air fry all sorts of foods, fresh or frozen, for a crisp finish without all the oil.

How to cook with Air Fry

- Cook your dish entirely with the Air Fry, Roast, Bake, Broil, Dehydrate or Proof smart programs.
- Give your food a crisp finish after cooking with the Pressure Cook, Slow Cook, Steam or Sous Vide smart programs.

Choose from these settings for air frying:

Default Temp	Min. Temp	Max. Temp	Default Cook Time	Min. Cook Time	Max. Cook Time
204°C 400°F	82°C 180°F	204°C 400°F	18 minutes (00:18)	1 minute (00:01)	1 hour (01:00)

Other settings

- Keep Warm is not available.
- Delay Start is not available.

Use the app

You can control settings for the Air Fry program and use recipes for specific foods in the Instant Connect App. Or you can follow the instructions below, using the multi-cooker's Control Panel.

How to air fry

Prep

Prepare the ingredients according to your recipe and have them ready.

Preheat

1. Place the Cooking Pot into the cooker base.
2. Place the Air Fry/Cooking Rack inside the Cooking Pot.
3. Make sure the Pressure Cooking Inner Cover is NOT installed in the Ultimate Lid.
4. Close the lid on the cooker base.
See 'How to lock the lid' for full details.
5. Press **Air Fry**. The indicator light blinks.
6. The default or last-used cooking time displays. To change it, press **Time** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
7. The default or last-used cooking temperature displays. To change it, press **Temp** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
8. When the unit displays **Add Food**, open the lid, add the prepared food, and close the lid.
9. The Instant Pot Duo Crisp starts air frying, and the unit displays **Cooking**.
10. When the unit displays **Turn Food**, open the lid, turn the food, and close the lid.
11. When the timer reaches 00:00, cooking stops.
12. Press **Cancel** if you want to finish cooking before the timer stops.

BAKE + ROAST

You can bake foods like breads, cakes and pastries, or roast meats and vegetables.

Choose from these settings for each smart program:

Smart Program	Default Temp.	Min. Temp.	Max. Temp.	Default Cook Time	Min. Cook Time	Max. Cook Time
Bake	193°C 365°F	82°C 180°F	204°C 400°F	30 mins (00:30)	1 min (00:01)	1 hour (01:00)
Roast	204°C 380°F	82°C 180°F	204°C 400°F	40 mins (00:40)	1 min (00:01)	1 hour (01:00)

Other settings

- Keep Warm is not available.
- Delay Start is not available.

Use the app

You can control settings for the Bake and Roast programs and use recipes for specific foods in the Instant Connect App. Or you can follow the instructions below, using the multi-cooker's Control Panel.

How to bake or roast

Prep

1. Prepare the ingredients according to your recipe.
2. If baking, place the ingredients into an oven-safe baking dish that fits in the Instant Pot Duo Crisp cooker base.

Leave approximately 1 in / 2.5 cm of space around all sides of the baking dish to allow heat to circulate evenly.

3. If roasting, place the ingredients into the Air Fry/Cooking Rack.

Cook

1. Place the Cooking Pot into the cooker base, and then place the Air Fry/Cooking Rack inside the Cooking Pot.
2. Make sure the Pressure Cooking Inner Cover is NOT installed in the Ultimate Lid.
3. Close the lid on the cooker base.
See 'How to lock the lid' for full details.
4. Press **Bake** or **Roast**. The indicator light blinks.
5. The default or last-used cooking time displays. To change it, press **Time** and turn the **Control Dial** to change it, then press Control Dial to select it.
6. The default or last-used cooking temperature displays. To change it, press **Temp** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
7. Press **Start**. The Progress Bar shows **Preheating** and the Instant Pot Duo Crisp starts heating. The display shows **Preheating**.
8. When the unit displays **Add Food**, open the lid, place Air Fry/Cooking Rack inside the Cooking Pot, and close the lid.
9. The Instant Pot Duo Crisp starts baking/roasting, and the unit displays **Cooking** and the cooking timer starts counting down.
10. When the timer reaches 00:00, cooking stops.
11. Press **Cancel** if you want to finish cooking before the timer stops.

BROIL

You can broil foods like meats, seafood and vegetables.

Choose from these settings for broiling:

Default Temp.	Min. Temp.	Max. Temp.	Default Cook Time	Min. Cook Time	Max. Cook Time
204°C 400°F	Not adjustable	Not adjustable	6 minutes (00:06)	1 min (00:01)	40 mins (00:40)

Other settings

- Keep Warm is not available.
- Delay Start is not available.

Use the app

You can control settings for the Broil program and use recipes for specific foods in the Instant Connect App. Or you can follow the instructions below, using the multi-cooker's Control Panel.

How to broil

Prep

1. Prepare the ingredients according to your recipe.
2. Place the ingredients into the Air Fry/Cooking Rack.

Cook

1. Place the Cooking Pot into the cooker base.
2. Place the Air Fry/Cooking Rack inside the Cooking Pot.
3. Make sure the Pressure Cooking Inner Cover is NOT installed in the Ultimate Lid.
4. Close the lid on the cooker base.

See 'How to lock the lid' for full details.

5. Press **Broil**. The indicator light blinks.

6. The default or last-used cooking time displays. To change it, press **Time** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
7. Press **Start**. The Instant Pot Duo Crisp starts broiling, and the unit displays **Cooking** and the cooking timer starts counting down.
8. When the timer reaches 00:00, cooking stops.
9. Press **Cancel** if you want to finish cooking before the timer stops.

DEHYDRATE + PROOFING

You can dehydrate foods like fruit and vegetables or proof dough before baking.

Choose from these settings for each smart program:

Smart Program	Default Temp.	Min. Temp.	Max. Temp.	Default Cook Time	Min. Cook Time	Max. Cook Time
Dehydrate	51°C 125°F	40°C 105°F	73°C 165°F	7 hours (07:00)	1 hour (01:00)	72 hours (72:00)
Proof	25°C 77°F	23°C 75°F	35°C 95°F	1 hour (01:00)	30 mins (00:30)	3 hours (03:00)

Other settings

- Keep Warm is not available.
- Delay Start is not available.

Use the app

You can control settings for the Dehydrate and Proof programs and use recipes for specific foods in the Instant Connect App. Or you can follow the instructions below, using the multi-cooker's Control Panel. How to dehydrate or proof

Prep

1. Prepare the ingredients according to your recipe.
2. Place the ingredients into the Air Fry/Cooking Rack.

Cook

1. Place the Cooking Pot into the cooker base.
2. Place the Air Fry/Cooking Rack inside the Cooking Pot.
3. Make sure the Pressure Cooking Inner Cover is NOT installed in the Ultimate Lid.
4. Close the lid on the cooker base.

See 'How to lock the lid' for full details.

5. Press **Dehydrate** or **Proof**. The indicator light blinks.
6. The default or last-used cooking time displays. To change it, press **Time** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
7. The default or last-used cooking temperature displays. To change it, press **Temp** and turn the **Control Dial** to change it, then press **Control Dial** to select it.
8. Press **Start**. The Instant Pot Duo Crisp starts dehydrating/proofing, and the unit displays **Cooking** and the cooking timer starts counting down.
9. When the timer reaches 00:00, cooking stops.
10. Press **Cancel** if you want to finish cooking before the timer stops.

KEEP WARM

You can choose to turn Keep Warm on automatically after cooking on many smart programs. You can also use Keep Warm to reheat food.

Choose from these settings in the Keep Warm smart program:

Default Temp	Min. Temp	Max. Temp	Default Cook Time	Min. Cook Time	Max. Cook Time
None	Low (62°C / 144°F)	High (77°C / 171°F)	10 hours (10:00)	10 mins (00:10)	10 hours (10:00)

Other settings

- Delay Start is not available.

How to reheat

Prep

Place the food to be reheated into the Cooking Pot.

Preheat

1. Place the Cooking Pot into the cooker base.
2. Please make sure to install the pressure cooking cover on the ultimate lid then close and lock the lid.
See 'How to lock the lid' for full details.
3. Choose **Keep Warm** on the **Control Panel**. The default or previous time and temperature settings display.
4. To change the reheating time, press **Time**, then turn the **Control Dial** to select a new reheating time.
5. To change the cooking temperature, press **Temperature**, then turn the **Control Dial** to select a new cooking temperature.
6. Press **Start**. The Progress Bar shows **Keep Warm** and the timer starts counting down.
7. When reheating completes, the display shows **End**.

CLEANING

Clean your Instant Pot Duo Crisp after each use. Always unplug the unit and let all parts cool to room temperature before cleaning. Before use or storing, make sure all surfaces are dry.

Part	Cleaning instructions
Accessories • Air Fry/ Cooking Rack • Pressure Cooking Cover • Condensation Collector	• Wash after each use • Hand wash with hot water and mild dish soap or wash in dishwasher, top rack • Never use harsh chemical detergents, powders or scouring pads on accessories • Empty and rinse condensation collector after each use
Ultimate Lid	• Use a barely-damp cloth to wipe any particles
Cooking Pot	• Wash after each use. • Hand wash with hot water and mild dish soap or wash in dishwasher* • Hard water stains may need a vinegar-dampened sponge and scrubbing to remove • For tough or burned food residue, soak in hot water for a few hours before cleaning • Dry all exterior surfaces before placing in cooker base
Power cord	• Use a barely-damp cloth to wipe any particles off cord
Cooker base	• Wipe the inside of the cooker base as well as the condensation rim with a barely-damp cloth, and allow to air dry • Clean the outside of the cooker base and the control panel with a soft, barely-damp cloth or sponge

**Some discoloration may occur after machine washing, but this will not affect the cooker's safety or performance.*

TROUBLESHOOTING

Problem	Cause	Solution
Display remains blank after plugging in the power cord	Bad power connection or no power	Inspect power cord for damage. If damage is noticed, contact Consumer Care. Check outlet to ensure it is powered.
	Cooker's electrical fuse has blown	Contact Consumer Care.
Steam leaks from side of lid	Lid not closed properly	Open, then close lid.
	Cooking Pot rim may be misshapen	Check for deformation and contact Consumer Care.
Difficulty closing lid	Contents in cooker are still hot	Press Steam Release on the Control Panel, then lower lid onto cooker base and wait for steam and temperature to reduce before attempting to close the lid.
Difficulty opening lid	Pressure inside the cooker	Release pressure according to recipe; only open lid after the display shows "OK to open lid".
Inner pot is stuck to lid when cooker is open	Cooling of inner pot may create suction, causing inner pot to adhere to the lid	To release the vacuum, press Steam Release on the Control Panel and wait for food content inside inner pot to cool down.
	Too little liquid in the inner pot	Check for scorching on bottom of inner pot. Add thin, water-based liquid to the inner pot: 1 1/2 cups (12 oz / 375 mL)
Minor steam leaking/ hissing from steam release valve during cook cycle	Lid not set to Lock position	Check Lid Lock to ensure it's set to Lock.
	Cooker is regulating excess pressure	This is normal; no action required.

Problem	Cause	Solution
Steam gushes from steam release valve when quick release button is in Seal position	Not enough liquid in the inner pot	Add thin, water-based liquid to the inner pot: 1 1/2 cups (12 oz / 375 mL)
	Pressure sensor control failure	Contact Consumer Care.
Occasional clicking or light cracking sound	The sound of power switching and expanding pressure board when changing temperatures	This is normal; no action needed.
	Bottom of the cooking pot is wet	Wipe exterior surfaces of inner pot. Ensure heating element is dry before inserting inner pot into cooker base.

APP TROUBLESHOOTING

Problem	Solution
I tried to download the App, and it says my device is not compatible.	Make sure the version of iOS or Android operating systems on your mobile device is compatible with the App. These are listed on the Instant Connect page in the App Store and Google Play store.
I am trying to create an account in the App, but I have not received the verification code.	Check your spam or junk folder in your email account. If you find it, make sure to mark it as "not spam" to prevent future emails from being filtered. Wait a few minutes and check your inbox again; sometimes email is simply delayed. <i>Note: the validation email will come from our smart appliance technology partner, Fresco.</i>
My saved recipes have disappeared from my account in the App.	Saved recipes can be found under "My Cookbook," located at the bottom of the screen. If you don't see your recipes there, uninstall the App. Then download the latest version. You can download using the QR code inside the front cover of this manual. To help you make sure your recipes get saved, try the following: 1. Make sure you have a strong and stable WiFi connection. This will help the App communicate the server and save the recipe properly. 2. Check that your device has enough storage space. If your device's storage is running low, the App may not be able to save the information properly. 3. Check that the App has the necessary permissions to access your device's storage and network. If the App does not have the required permissions, it may not be able to save information properly.

Problem	Solution
I can't connect to the App. Instead I get a 'Failure to connect' error message.	If you have trouble connecting, uninstall the App. Then download the latest version. You can download using the QR code inside the front cover of this manual. Once the App is reinstalled: 1. Make sure Bluetooth is enabled on your phone. Then open the App. 2. If you don't have an account, select Get Started. 3. If you already have an account, sign in, select My Kitchen, then select the Plus sign at the top right corner of the screen. 4. Select Instant Pot Duo Crisp Ultimate Lid. 5. Press the WiFi button on your Instant Pot for less than 1 second and when you release you will hear a beep. 6. You will be prompted in the App to add your Instant Pot. Press Continue. This step can take several minutes. 7. Once paired, you'll see the message Let's Get Cooking. Press OK to continue. Occasionally, there are problems with either your router or another hardware issue. If you still can't connect, contact Instant Pot Brands Consumer Care at www.instantpot.com.
I am trying to sign in to the App, and my account cannot be found; I was able to sign in yesterday.	Check your login: Make sure you are using the correct email address and password associated with your account. Sometimes, small typos can prevent you from signing in. If you recently reset your password, make sure you're using new password. Clear the app cache and data: Sometimes, cached data can interfere with the sign in process. Open your device's settings and select Apps or Applications. Select the Instant Connect App and look for the option to clear the App's cache and data. Uninstall and reinstall the App: If you consistently cannot connect, uninstall the App. Then download the latest version. You can download using the QR code inside the front cover of this manual.
I've installed the App, but half the screen is cut off.	1. Adjust the screen resolution: Open your device's settings and select Display or Screen. Look for an option to adjust the screen resolution and try selecting a different resolution to see if that resolves the issue. 2. Increase the font size: If the type is too small and getting cut off, try increasing the font size in the App or in your device's settings. Open your device's settings and select Accessibility. Look for an option to adjust the font size. 3. If the issue persists in the Instant Connect App, try using a different app to see if the problem affects all apps on your device. 4. Clear the App's cache: Open your device's settings and select Apps or Applications. Select the Instant Connect App and look for the option to clear the App's cache. If you still can't view the App correctly, contact Consumer Care.

ERROR CODES

If the control panel displays an error code from this list, there is an issue with the Instant Pot Duo Crisp with Ultimate Lid. Here are the actions you should take to fix the problem.

Code	Cause	Solution
C1, C3	Faulty sensor	Contact Consumer Care.
C4	Faulty control panel connection	Contact Consumer Care.
C6	Fault pressure switch	Contact Consumer Care.
C7	Loss of pressure	Cancel cooking, turn the cooker off, then turn the cooker back on to try to reset. If this doesn't solve the problem, contact Consumer Care.
Food burn	High temperature detected at bottom of inner pot; cooker stops to avoid overheating	Turn the cooker off, release pressure according to the recipe, and check the bottom of the cooking pot for food deposits; clear the deposits if possible and restart cooking.
PrSE	Pressure has accumulated during a non-pressure cooking program	Cancel cooking and set Steam Release to Vent. Once steam is released, restart cooking.

LEARN MORE

There's a whole world of Instant Pot® cooking information and help just waiting for you. Here are some of the most helpful resources.

Register your product

Instantpot.com/register

Contact Consumer Care

In the Instant Connect™ App

Instantpot.com/customer-care-center

support@instantpot.com

Download the Instant Connect™ App

Discover guided cooking and recipes

Available at iOS and Android app stores

Cooking charts and more recipes

Instantpot.com

How-to videos, tips and more

Instantpot.com

Replacement parts and accessories

Instantpot.com

Join the community



Product specifications

Model	Volume	Wattage	Power
SLC065002	6.5 Quarts 6.2 Litres	1500 W	120V ~ 60Hz

WARRANTY

One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made one year from the purchase date or delivery date, whichever is later, from authorized retailers of Instant Pot Brands by the original appliance owner and is not transferable. Proof of original purchase date and, if requested by Instant Pot Brands, return of your appliance, is required to obtain service under this Limited Warranty. Provided the appliance was used in accordance with the use & care instructions, Instant Pot Brands will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire twelve (12) months from the date of receipt. Failure to register your product will not reduce your warranty rights. The liability of Instant Pot Brands, if any, for any allegedly defective appliance or part will not exceed the purchase price of a comparable replacement appliance.

What is not covered by this warranty?

- Products purchased, used, or operated outside of the United States and Canada.
- Products that have been modified or attempted to be modified.
- Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God, or repair by anyone unless directed by an Instant Pot Brands representative.
- Use of unauthorized parts and accessories.
- Incidental and consequential damages.
- The cost of repair or replacement under these excluded circumstances.

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY APPLICABLE LAW, INSTANT POT BRANDS MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABLE QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Some states or provinces do not allow for: (1) the exclusion of implied warranties of merchantability or fitness; (2) limitations on how long an implied warranty lasts; and/or (3) the exclusion or limitation of incidental or consequential damages; so these limitations may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law. The limitations of warranties, liability, and remedies apply to the maximum extent permitted by law. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Product Registration

Please visit **www.instantpot.com/register** to register your new Instant Pot Brands appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to **support@instantpot.com**. You can also create a support ticket online at **www.instantpot.com**. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Pot Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

⚠ WARNING

DO NOT place this appliance on or close to a gas or electric burner, or inside an oven. **NEVER** use on your stove. Always operate this appliance on a stable, non-combustible, level surface, such as a kitchen countertop.



In Canada, distributed by
Instant Pot Brands
199 Bay Street, Suite 4000
Toronto, ON M5L 1A9 Canada

In U.S., distributed by
Instant Pot Brands
8725 W Higgins Road, Suite 725
Chicago, IL 60631 U.S.

instantpot.com

© 2025 Instant Pot Brands
140-0060-01, 140-0080-01

Art release date
07/16/2025

INSTANT POT and DUO
are registered trademarks
of Instant Pot Brands