



81-316-0975

This guide has been prepared to help you get quickly acquainted with your new Jeep and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com or your local Jeep dealer.

Have fun out there. Jeep®



www.JEEP.com

Jeep®

LIBERTY

2009
QUICK
REFERENCE
GUIDE



INSTRUMENT PANEL

**TURN SIGNAL/
LIGHTS LEVER**

**ELECTRONIC
VEHICLE
INFORMATION
CENTER
(EVIC)
CONTROLS**

**EVIC
DISPLAY**

**INSTRUMENT
CLUSTER**

**SPEED
CONTROL
LEVER**

**WIPER/
WASHER
LEVER**

**CLIMATE
CONTROLS**

**AUDIO
SYSTEM
(TOUCH
SCREEN
RADIO
SHOWN)**

**LOWER
SWITCH PANEL**
Heated Seats
Electronic
Stability
Program Off
Hill Descent Control
Hazard Warning
Flasher
Power Inverter





KEY FOB:

LOCKING AND UNLOCKING THE DOORS/LIFTGATE

- Press the LOCK button once to lock all doors and liftgate.
- Press the UNLOCK button once to unlock the driver's door only and twice within five seconds to unlock all the doors and liftgate.
- All doors can be programmed to unlock on the first press of the UNLOCK button.
- Press the liftgate flipper glass button $\times 2$ twice within five seconds.
- Refer to the Owner's Manual for programming.

REMOTE START

- Press the REMOTE START button $\times 2$ twice within five seconds.
- To drive vehicle, press the UNLOCK button, insert the key in the ignition and turn to ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition key is placed in the ON/RUN position.
- The vehicle must be started with the key after two consecutive timeouts.

PANIC ALARM

- Press the button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.



TURN SIGNAL/LIGHTS LEVER:

HEADLIGHTS/PARKING LIGHTS/AUTOMATIC HEADLIGHTS

- Rotate the end of the lever to the first detent for parking lights, the second detent for headlights and the third detent for AUTO.
- When set to AUTO, the system automatically turns the headlights on or off based on ambient light levels.

INSTRUMENT PANEL DIMMER

- Rotate the center portion of the lever to the extreme bottom position to turn off the interior lighting. In this position, the interior lights will not turn on when a door is opened.
- Rotate the center portion of the lever up to increase the brightness of the instrument panel lights when the parking lights or headlights are on.
- Rotate the center portion of the lever upward to the next detent position to fully brighten the odometer and radio displays when the parking lights or headlights are on.
- Rotate the center portion of the lever upward to the last detent to turn on the interior lighting.

HIGH BEAM

- Push the lever forward to activate the high beams.

FOG LIGHTS

- Pull out the end of the lever. Fog lights only operate with parking lights or low beam headlights.

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times then automatically turn off.

VEHICLE FEATURES



SPEED CONTROL LEVER:

CRUISE ON/OFF

- Push the ON/OFF button to activate the Speed Control.
- CRUISE will appear on the instrument cluster to indicate the Speed Control is on.
- Push the ON/OFF button a second time to turn the system off.

SET

- With Speed Control on, press down and release the lever to set a desired speed.

ACCEL/DECEL

- Press and hold the lever up to accelerate or down to decelerate the vehicle; release the lever to save the new set speed.
- Once a speed is set, tapping the lever up or down will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Pull the lever toward you, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected speed in memory, push the lever up and release.



WIPER/WASHER LEVER:

FRONT WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Mist

- Pull down on the lever and release when a single wipe is desired.

Washer Operation

- Pull the lever towards you and hold for as long as spray is desired.

Rain Sensing Wipers

- This feature senses moisture on the vehicle's windshield and automatically activates the wipers for the driver when the switch is in the intermittent positions. Refer to Owner's Manual for operation.

REAR WIPER

Wiper Operation

- Rotate the center portion of the lever forward to the first detent for rear wiper operation.

Washer Operation

- Rotate the center portion of the lever past the first detent to activate the rear washer.

VEHICLE FEATURES

FUEL CAP:



LOOSE GAS CAP MESSAGE

- If a “gas cap” message (shown as gASCAP or CHECK GASCAP) appears, tighten the gas cap until a “clicking” sound is heard.
- Press the odometer reset button to turn the message off.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.

TIRE PRESSURE MONITORING SYSTEM (TPMS):



- If one or more of the four road tire pressures are low, the Tire Pressure Monitoring Light will illuminate and an audible chime will sound.
- Check the inflation pressure of each road tire on your vehicle and inflate to the recommended cold pressure value, shown on the placard located in the driver's door opening. The TPMS light should not be used as a tire pressure gauge when adjusting your tire pressure.
- The light will turn off once the updated tire pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressures, causing the TPMS light to turn on.** Colder temperatures will decrease tire pressure and warmer temperatures will increase tire pressure.
- If your spare tire's pressure is low or in use on the vehicle, the TPMS light may turn on. Refer to your Owner's Manual.

OIL CHANGE INDICATOR:

MESSAGE

- If an “oil change” message (shown as CHAnGE Oil or Oil Change Required) appears and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

Rotate Blower Control Rotate Temp. Control Rotate Mode Control



MANUAL CLIMATE CONTROLS:

AIR RECIRCULATION


- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.

DRIVER POWER SEAT:


- This switch, located on the outboard side of the seat, controls the forward/backward and up/down movement of the seat.

DRIVER MEMORY SEAT:

- The memory seat feature allows you to save two different driver seating positions. With the key in the ON/RUN position, push (S), then 1 or 2 within five seconds.
- Push 1 or 2 to recall the saved positions.
- Key fobs may be programmed to automatically recall position 1 or 2 when UNLOCK is pushed.
- Refer to Owner's Manual for programming instructions.

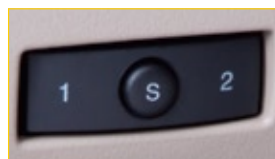

Rotate Blower Control Rotate Temp. Control Rotate Mode Control

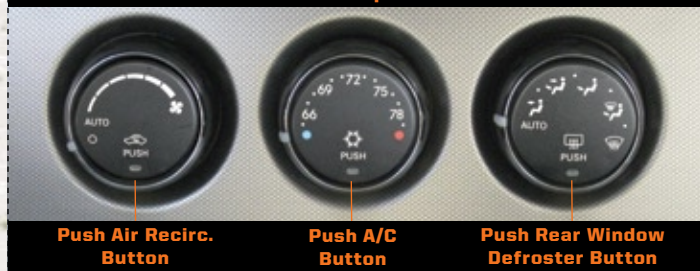

AUTOMATIC TEMPERATURE CONTROLS:

AUTOMATIC OPERATION

- Turn the Mode and Blower Controls to the AUTO position.
- Select the desired temperature by rotating the Temperature Control.
- The system will maintain the set temperature automatically.

AIR CONDITIONING (A/C)

- If the air conditioning button is pressed while in the AUTO mode, the indicator light may flash three times to indicate the air conditioning is being controlled automatically.

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging, turn air recirculation off.
- If the recirculation button is pressed while in the AUTO mode, the indicator light may flash three times to indicate the cabin air is being controlled automatically.

uconnect® phone:

- uconnect® phone is a voice-activated, hands-free, in-vehicle, communications system. uconnect® phone allows you to dial a phone number with your cellular phone using voice commands.
- uconnect® phone requires a cellular phone equipped with the Bluetooth® Hands-Free Profile, Version 0.96 or higher. See the www.jeep.com/uconnect website for supported phones. Refer to your Owner's Manual for further information.

CLOCK SETTING:

NON-TOUCH SCREEN RADIOS

- Press and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Press the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Press the TUNE/SCROLL control knob to save the time change.

TOUCH SCREEN RADIOS

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where "User Clock" is displayed (Navigation radio only).
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word "Save" is displayed.

SKY SLIDER® ROOF:

- Press and quickly release the top AUTO button, located in the center of the headliner, to automatically open the Sky Slider® from the front.
- Press and quickly release the bottom AUTO button to automatically open the Sky Slider® from the rear.
- Press the center button to automatically close the Sky Slider® from any position.

WIND BUFFETING:

- Wind buffeting can be described as a helicopter-type percussion sound. If buffeting occurs with the rear windows open, adjust the front and rear windows together.
- If buffeting occurs with the sunroof open, adjust the sunroof opening, or adjust any window. This will minimize the buffeting.