



#737009 Fine Fence Adjusters for JRL-912

Assembly and operation


Contents:

- 2 Handles
- 2 Adjuster assemblies (L and R)
- 2 Long guide bars
- 2 Short guide bars

Refer to the illustration below.

1. Unscrew and remove the tall handles from the router fence. (The flat washers may be reused beneath the short handles.)
2. Lay the short guide bar (A) and long guide bar (B) into the channel. Position the adjuster (C) as shown, and install the short (D) and tall (E) handles so that they screw into the guide bar holes. Repeat for the opposite end of fence.

NOTE: There is a right hand and a left hand adjuster; mount accordingly as viewed from the front of the router lift.
3. Loosen all four handles, and move fence to approximate position relative to the scales.
4. At one end of the fence, tighten the short handle (D), and rotate knurled collar (F) for fine positioning of the fence. Tighten the tall handle (E) on that end.
5. Repeat for opposite end of fence.
6. Make sure the tall handles (E) are securely tightened before operating.

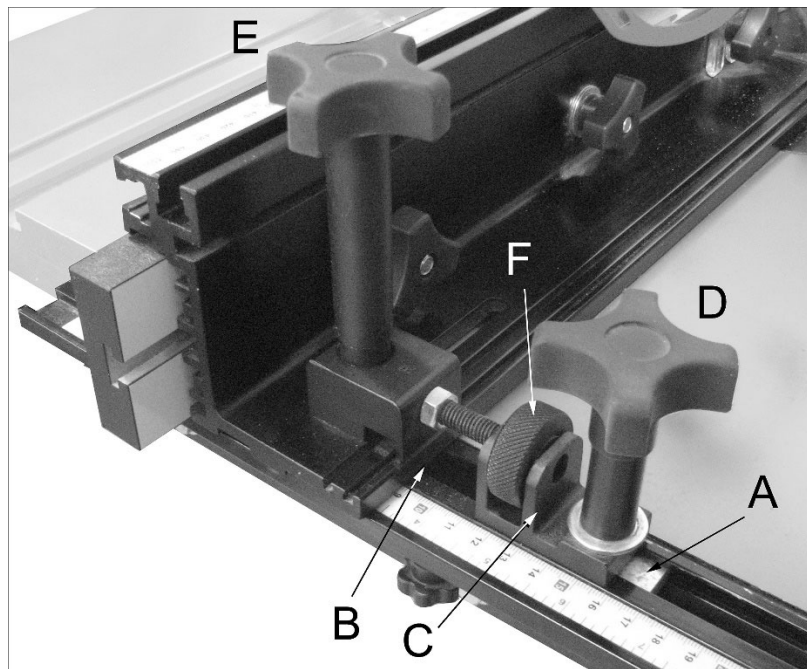

JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Preliminary edition 02/06/2020
JET is a Division of JPW Industries, Inc.