



Operating Instructions and Parts Manual

Web Strap Ratchet Hoists

JWS-Series



JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-352100
Edition 1 07/2016
Copyright © 2016 JET



1.0 IMPORTANT SAFETY INSTRUCTIONS

WARNING – To reduce risk of injury:

1. Read and understand the entire owner's manual before attempting assembly or operation.
2. Read and understand the warnings posted on the tool and in this manual. Failure to comply with all of these warnings may cause serious injury.
3. Replace warning labels if they become obscured or removed.
4. This web strap hoist is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper and safe operation of a web strap hoist, do not use it until the proper training and knowledge have been obtained.
5. Do not use this hoist for other than its intended use. If used for other purposes, JET disclaims any real or implied warranty and holds itself harmless from any injury that may result from that use.
6. Do not wear jewelry or loose clothing that can become entangled in the hoist mechanisms. Confine long hair.
7. Keep hands and fingers away from ratchet area during operation.
8. Give your work undivided attention. Looking around, carrying on a conversation and "horse-play" are careless acts that can result in serious injury.
9. Keep visitors a safe distance from the work area. Keep children away.
10. Always inspect the hoist for damage prior to use. If hoist is damaged, do not use until it has been repaired or replaced.
11. Always maintain your balance and firm footing when operating the hoist.
12. Always take time to study the job to be performed and choose the safest method. Do not place yourself or other people in an unsafe position.
13. Do not operate this tool while under the influence of drugs, alcohol or any medication.
14. Do not pull web strap over sharp edges.
15. Do not operate hoist with twisted, frayed, kinked or damaged web strap. Do not attempt repairs (stitching, splicing, etc.) to web strap. A damaged or worn strap must be replaced before using the hoist.
16. Do not exceed rated load capacity for the hoist.
17. Do not use hoist as a load binder or a tow line.
18. Do not use an extension on the handle in an attempt to increase leverage.
19. Make sure one full wrap of webbing remains on drum prior to applying load.
20. Do not operate hoist until hoist frame, web strap and hooks are in a straight line with load direction. Do not side load.
21. Load must be properly seated in hook and safety latch closed before operating. The latch should never be used to support a load.
22. Do not attempt to free-wheel strap with a load on the hoist.
23. Do not wrap web strap around load or use as a sling.
24. Do not use this product to lift, support or transport people; or to lift or support loads over people.
25. The hoist is to be hand-powered by one operator only.
26. Never use the hoist if either hook is stretched, deformed, or has a broken or missing safety latch. Always replace safety latch and/or hook before placing hoist back in service.
27. Be sure supporting structures and load-attaching devices used in conjunction with this hoist provide an adequate safety factor to handle the rated load plus the weight of the equipment. If in doubt, consult a qualified structural engineer.
28. Do not leave a loaded hoist unattended unless proper precautions have been put in place.
29. Do not modify or attempt repair on the hoist. Contact an authorized JET service center for repairs.
30. Use only JET factory authorized replacement parts and accessories; otherwise, the warranty and guarantee are null and void.
31. All maintenance and inspections must be done by a qualified designated person.

32. The fiberglass handle has been tested and meets certain insulating properties of a “hot stick”. However, the web strap on this hoist is not a rated insulating member. The web strap, when clean and dry, may have dielectric properties typical of polyester or nylon fibers. Use appropriate insulating members in series with this hoist to achieve proper working

distances per OSHA Regulation Subpart V, 1926.950 (see Table 1) or follow your company’s safe work practices. If handle swings closer to energized conductors than OSHA working distances or company practices permit, use appropriate rubber gloves rated for the voltage.

1.1 Alternating Current – Minimum Distances

(OSHA Regulation Subpart V, 1926.950 Table V-1)

Voltage range (phase to phase) Kilovolt	Minimum Working & Clear Hot Stick Distance	Voltage range (phase to phase) Kilovolt	Minimum Working & Clear Hot Stick Distance
2.1 to 15	2 ft. 0 in.	161 to 169	3 ft. 8 in.
15.1 to 35	2 ft. 4 in.	230 to 242	5 ft. 0 in.
35.1 to 46	2 ft. 6 in.	345 to 362	7 ft. 0 in.
46.1 to 72.5	3 ft. 0 in.	500 to 552	11 ft. 0 in.
72.6 to 121	3 ft. 4 in.	700 to 765	15 ft. 0 in.
138 to 145	3 ft. 6 in.		

Table 1

Familiarize yourself with the following safety notices used in this manual:



This means that if precautions are not heeded, it may result in minor injury and/or possible tool damage.



This means that if precautions are not heeded, it may result in serious, or possibly even fatal, injury.

SAVE THESE INSTRUCTIONS

2.0 About this manual

This manual is provided by JET, covering the safe operation and maintenance procedures for a JET JWS-series Web Strap Ratchet Hoist. This manual contains instructions on safety precautions, general operating procedures, maintenance instructions and parts breakdown. This tool has been designed and constructed to provide consistent, long-term operation if used in accordance with the instructions set forth in this document.

The web strap hoists are proof-tested and comply with OSHA, ANSI/ASME B30.21 Lever Hoists and B30.10 Hooks standards.

If there are questions or comments, please contact your local supplier or JET. JET can also be reached at our web site: www.jettools.com.

Retain this manual for future reference. If the hoist transfers ownership, the manual should accompany it.



Read and understand the entire contents of this manual before attempting setup or operation! Failure to comply may cause serious injury!

3.0 Table of contents

Section	Page
1.0 IMPORTANT SAFETY INSTRUCTIONS	2
1.1 Alternating Current – Minimum Distances	3
2.0 About this manual	3
3.0 Table of contents.....	4
4.0 Specifications for JWS-series Web Strap Hoists	5
5.0 Features	6
6.0 Operation	7
6.1 General procedures.....	7
7.0 User-maintenance	7
7.1 Cleaning and lubrication.....	7
7.2 Web strap replacement	7
7.3 Storage.....	7
7.4 Additional servicing	7
8.0 Hook wear limits	8
9.0 Inspection and maintenance	8
10.0 Inspection schedules.....	9
11.0 Replacement Parts.....	9
11.1.1 JWS-2A Web Strap Hoist – Exploded View	10
11.1.2 JWS-2A Web Strap Hoist – Parts List	11
11.2.1 JWS-25A Web Strap Hoist – Exploded View	12
11.2.2 JWS-25A Web Strap Hoist – Parts List	13
11.3.1 JWS-3A Web Strap Hoist – Exploded View	14
11.3.2 JWS-3A Web Strap Hoist – Parts List	15
11.4.1 JWS-4A Web Strap Hoist – Parts List	16
11.4.2 JWS-4A Web Strap Hoist – Parts List	17
12.0 Warranty and Service.....	18

Record your purchase information here for quick reference:

Model No.:	Stock No.:	Serial No.:
Purchased From:	Date Purchased:	

Register your product online:

<http://www.jettools.com/us/en/service-and-support/warranty/registration/>

4.0 Specifications for JWS-series Web Strap Hoists

Stock No.	352100	352105	352110	352115
Model No.	JWS-2A	JWS-25A	JWS-3A	JWS-4A
Single pull capacity (ton)	1 ton	---	1-1/2 ton	---
Single pull distance, minimum	20 in. (508mm)	---	21 in. (533.4mm)	---
Single pull distance, maximum	72 in. (1829mm)	---	73 in. (1854mm)	---
Double pull capacity (ton)	---	1 ton	---	1-1/2 ton
Double pull distance, minimum	---	25 in. (635mm)	---	26 in. (660.4mm)
Double pull distance, maximum	---	75 in. (1905mm)	---	76 in. (1930.4mm)
Minimum distance between hooks	13-1/2 in.	20 in. (508mm)	13-1/2 in.	21 in.
Webbing length	3M (9.8ft)	3M (9.8ft)	3M (9.8ft)	3M (9.8ft)
Webbing width	32mm (1-1/4in.)	32mm (1-1/4in.)	41mm (1-5/8in.)	41mm (1-5/8in.)
Handle length	325mm (12.8in.)	325mm (12.8in.)	380mm (15in.)	380mm (15in.)
Handle rotation	360 deg.	360 deg.	360 deg.	360 deg.
Handle effort (gear/leverage ratio)	1:1	1:1	1:1	1:1
Handle material	fiberglass	fiberglass	fiberglass	fiberglass
Hook swivel	360 deg.	360 deg.	360 deg.	360 deg.
Frame material	carbon steel	carbon steel	carbon steel	carbon steel
Hook material	drop forged steel	drop forged steel	drop forged steel	drop forged steel
Web strap material	polyester	polyester	polyester	polyester
Paint finish	electroplated	electroplated	electroplated	electroplated
Load control	friction brake	friction brake	friction brake	friction brake
Net weight	3.38kg (7.5 lb)	4.56kg (10 lb)	4.06kg (9 lb)	5.41kg (11.9 lb)

Table 2

Specifications in this manual were current at time of publication, but because of our policy of continuous improvement, JET reserves the right to change specifications at any time and without prior notice, without incurring obligations.

5.0 Features

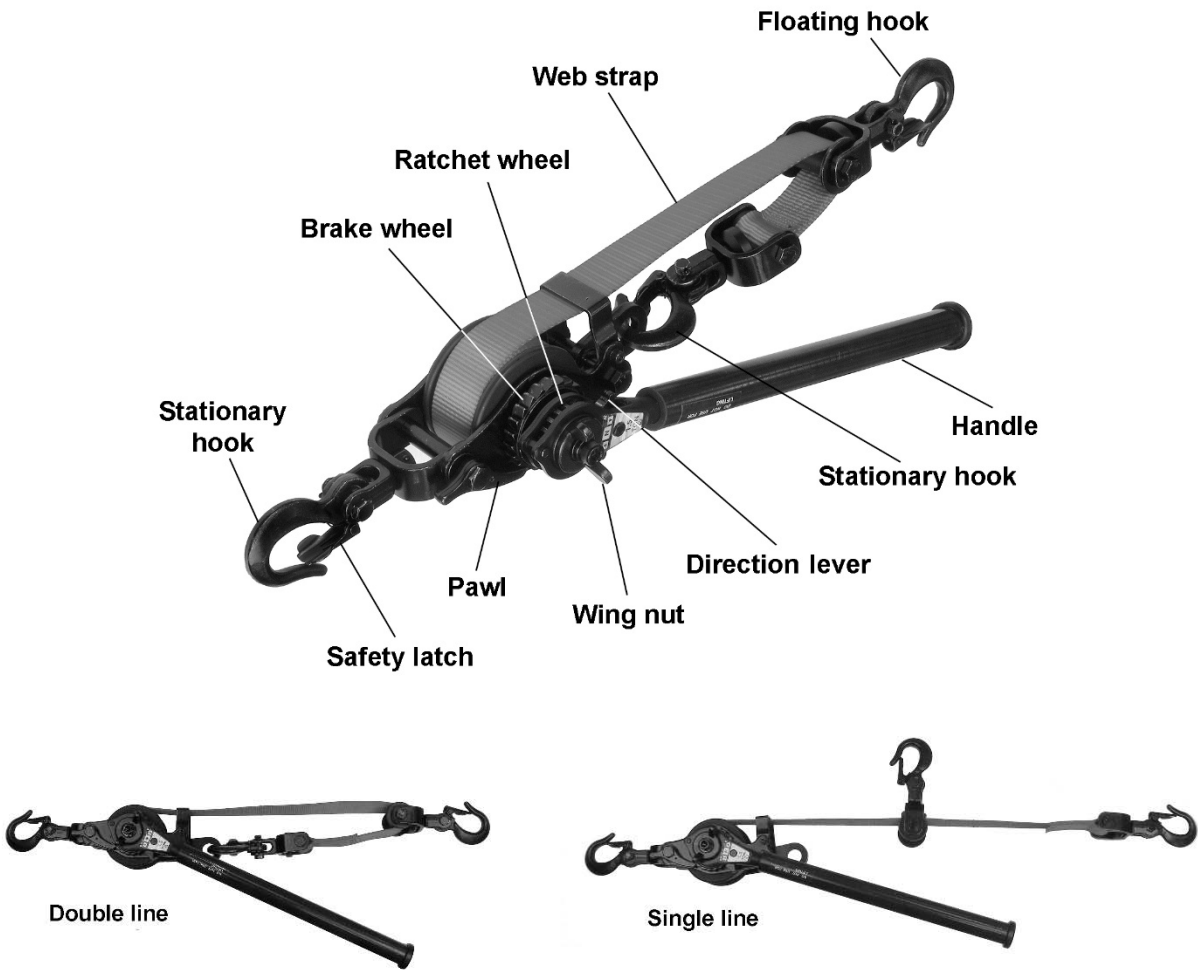


Figure 5-1: features and rigging (double pull model shown)

6.0 Operation

⚠WARNING Use of the web strap hoist around energized lines may result in serious or fatal injury. It is the operator's responsibility to understand and comply with OSHA regulations and/or company work practices when operating hoist around electrical lines.

The web strap ratchet hoist will operate right side up, upside down, or at an angle. For maximum pulling power, rig the unit for double line (JWS-25A and JWS-4A only). For half the capacity but greater operating speed and pulling distance, use single line. See Figure 5-1.

Always position hoist so that it hangs freely and has free side-to-side movement.

Always inspect the hoist before each use. If any damage is found, do not use the hoist.

6.1 General procedures

See Figure 6-1.



Figure 6-1: lever shown in neutral position

Pulling load – Push lever to UP arrow position and operate handle. The wing nut can also be rotated to pull in the strap when there is light or no load. (Handle will remain stationary when using wing nut for this.)

Releasing load – Push lever to DOWN arrow position, and operate handle.

Neutral – Push lever to N position. Handle is disengaged, but wing nut can still be rotated to pull load.

Free-wheel – Set lever to N, and release pawl by pressing upper end with your finger (you may have to move wing nut slightly to disengage pawl). Unreel strap by hand.

⚠WARNING Do not attempt free-wheel while hoist is under load.

⚠CAUTION If lever is set to UP position, handle will rotate during free-wheel and may cause injury. Set lever to N (Neutral) position before free-wheeling.

Hoist frame, strap and hooks should be aligned in direction of loading to prevent side pull.

Make sure one full wrap of web strap remains on shaft before applying load.

Load should be properly seated in the saddle of the hook.

Use steady strokes of the handle.

When beginning to lift or pull, move load a few inches and check for proper load holding action before continuing.

7.0 User-maintenance

⚠WARNING Do not perform any maintenance while hoist is under load.

7.1 Cleaning and lubrication

Clean metal parts and web strap with soap or detergent and water, as needed. Allow web strap to dry completely before using hoist.

Lubricate ratchet wheel sparingly with a general purpose machine oil. Wipe off excess. Do not get oil or grease on the web strap. Do **not** apply grease to the braking mechanism.

7.2 Web strap replacement

1. Place hoist in Neutral position and release pawl. Pull strap all the way out by hand.
2. Remove two screws and clamping block (#28,29, exploded view) with 5mm hex key. Remove old strap and pin (#30).
3. Insert pin (#30) into loop of new strap. Install strap, clamping block and screws. **Securely tighten screws.**
4. Push direction lever to UP position and wind strap onto drum.

7.3 Storage

The hoist should be stored away from direct sunlight, dirt, oil, water, high humidity or corrosive materials that can damage the web strap.

7.4 Additional servicing

Any other servicing should be performed by an authorized service representative.

8.0 Hook wear limits

Figure 8-1 shows normal hook measurements A, B and C. The hook must be replaced if any distortion causes a 10% or more change in these dimensions. Never heat-treat the hook or attach anything to the hook by welding.

NOTE: Excessive hook throat opening or twist indicates abuse or overloading of the hoist. If such deformation is discovered, inspect the hoist and all supporting members very carefully for additional indications of excessive hoist loading.

Hook Limits for JWS-series Web Strap Hoists		
	Normal	Replace If = or > than
A	29 mm (1.14 in.)	32 mm (1.25 in.)
B	15.1 mm (0.59 in.)	16.6 mm (0.65 in.)
C	15 mm (0.59 in.)	16.5 mm (0.65 in.)

Table 2

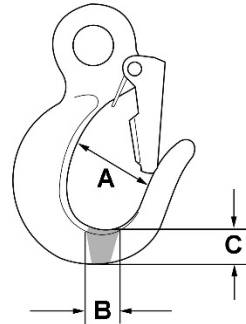


Figure 8-1

9.0 Inspection and maintenance

⚠ WARNING

All repairs and adjustments are to be performed by qualified persons using procedures that are approved for the hoist system being serviced. All safety-related deficiencies discovered in the inspection are to be corrected before hoist is placed back into service.

Read and follow all relevant ANSI Inspection and Maintenance standards, particularly ANSI/ASME B30.21 *Lever Hoists*. Know the meaning of Frequent Inspection, Periodic Inspection, Normal Service, Heavy Service, and Severe Service. It is the customer's responsibility to understand and follow all ANSI and JET inspection and maintenance instructions.

The following definitions are based upon ANSI/ASME B30.21.

Normal Service: Operation with randomly distributed loads within the rated load limit or uniform loads less than 65% of rated load for not more than 25% of the time.

Heavy Service: Operation within rated load limit, which exceeds normal service.

Severe Service: Normal or heavy service with abnormal operating conditions.

Designated Person: A person selected or assigned as being competent to perform the specific duties to which he/she is assigned.

Qualified Person: A person who, by a recognized degree or certificate of professional standing, or who, by extensive knowledge, training, and experience, has successfully demonstrated the ability to solve or resolve problems relating to the subject matter and work.

10.0 Inspection schedules

The JWS-series Web Strap Hoist should be given an **initial inspection** upon installation and prior to use. Following that, it must be inspected by a designated person at the time interval noted below. Dated inspection and repair reports must be maintained. Copies of all reports must be available to service personnel.

Visual inspections are divided into two general classifications based upon frequency, then further categorized by type of service, as shown below.

More detailed information may be found in ANSI/ASME B30.21 standards publication.

FREQUENT Inspection Schedule

Service Interval:

Normal Service: Monthly

Heavy Service: Weekly

Severe Service: Daily

1. Check all functional mechanisms for proper operation and adjustment, any signs of damage or loss of integrity. Listen for abnormal sounds.
2. Check braking system for slippage.
3. Check hooks for deformation, chemical damage, cracks or nicks (see ANSI B30.10).
4. Check hook safety latch operation.
5. Check hoist frame and handle for cracks or deformation.
6. Check web strap for proper reeving on drum.
7. Check end connections/terminations of web strap.
8. Check web strap for signs of damage: charring, broken stitching, cuts, tears, abrasions, knots, discolorations, brittle fibers or weld spatter.

A hoist that has been idle for over one month but less than one year, shall undergo the Frequent Inspection items above, before being placed into service.

PERIODIC Inspection Schedule

Service Interval:

Normal Service: Yearly

Heavy Service: Semi-Annually

Severe Service: Quarterly

1. Perform all of the Frequent Inspection items.
2. Check entire unit for loose screws, bolts, nuts, rivets and pins.
3. Check for evidence of excessive wear, corrosion, cracks, or distortion in the following parts: hook parts, suspension bolts and shafts, housings, gears, bearings, pins, rollers, and locking and clamping devices.
4. Check for evidence of damage to hook parts including hook retaining nuts and collars and pins, and hook holding frame and parts used to secure the frame.
5. Check for evidence of excessive brake wear, worn pawls or ratchets; broken, corroded or stretched pawl spring.
6. Check for evidence of deterioration of supporting structures and trolleys.
7. Check that all warning labels are present and legible.


A hoist that has been idle for over one year shall undergo the Periodic Inspection items above, before being placed into service.

11.0 Replacement Parts

Replacement parts are listed on the following pages. To order parts or reach our service department, call 1-800-274-6848 Monday through Friday, 8:00 a.m. to 5:00 p.m. CST. Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

Non-proprietary parts, such as fasteners, can be found at local hardware stores, or may be ordered from JET. Some parts are shown for reference only, and may not be available individually.


11.1.1 JWS-2A Web Strap Hoist – Exploded View

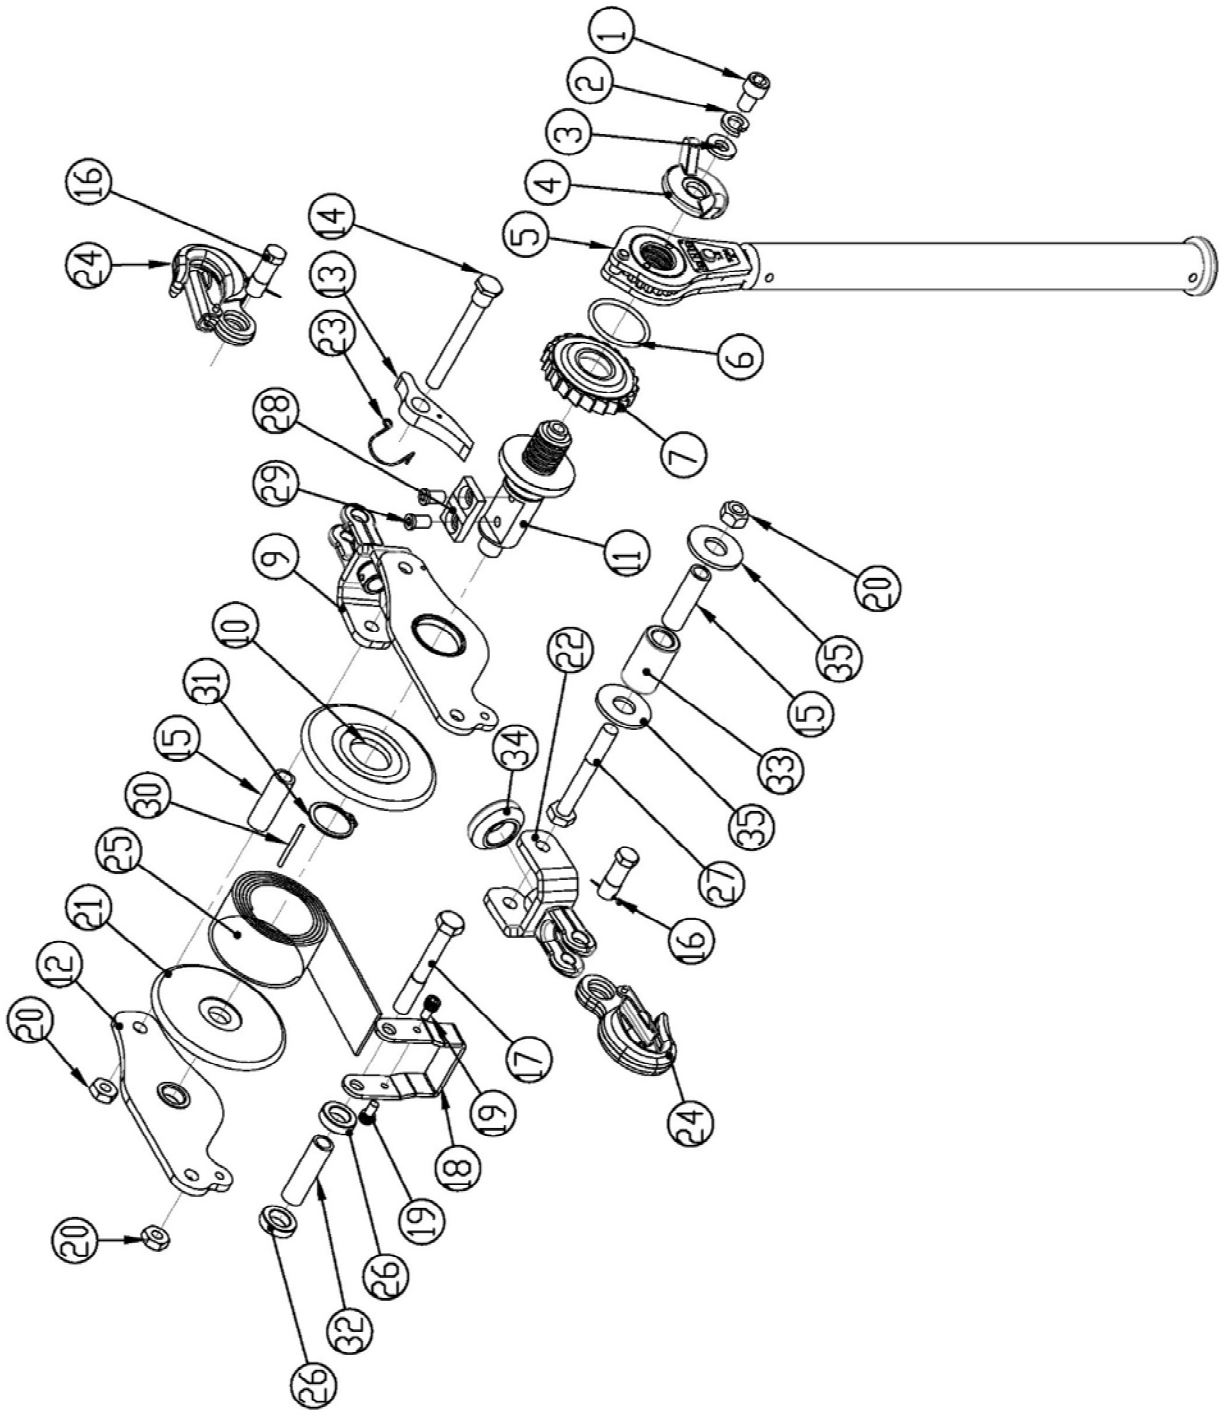

11.1.2 JWS-2A Web Strap Hoist – Parts List

Index No.	Part No.	Description	Size	Qty
1	TS-1504031	Hex Socket Head Cap Screw	M8x16	1
2	TS-2361081	Lock Washer	M8	1
3	TS-1550061	Flat Washer	M8	1
4	JWS2A-04	Wing Nut		1
5	JWS2A-05	Handle Assembly		1
6	JWS2A-06	O-Ring		1
7	JWS2A-07	Brake Gear		1
9	JWS2A-09	Plate A Weldment (large hole)		1
10	JWS2A-10	Plastic Disc (large hole)		1
11	JWS2A-11	Drum		1
12	JWS2A-12	Plate B (small hole)		1
13	JWS2A-13	Pawl		1
14	JWS2A-14	Pawl Screw	M8	1
15	JWS2A-15	Top & Bottom Tube		2
16	JWS2A-16	Clevis Pin with Cotter	M12x29.5	2
17	SH081400	Hex Cap Screw	M8x70	1
18	JWS2A-18	Web Strap Restraint		1
19	SH069200	Hex Cap Screw	M6x8	2
20	TS-1541031	Hex Nylon Lock Nut	M8	3
21	JWS2A-21	Plastic Disc (small hole)		1
22	JWS2A-22	Swivel Shackle Assembly		1
23	JWS2A-23	Pawl Spring		1
24	JWS2A-24	Eye Hook and Latch Assembly		2
25	JWS2A-25	Web Strap		1
26	JWS2A-26	Collar		2
27	JWS2A-27	Hex Cap Screw		1
28	JWS2A-28	Clamping Block		1
29	TS-1504011	Hex Socket Head Cap Screw	M8x10	2
30	JWS2A-30	Pin		1
31	F006052	C-Ring, External	30mm	1
32	JWS2A-32	Middle Tube		1
33	JWS2A-33	Web Strap Roller		1
34	JWS2A-34	Plastic Cushion		1
35	JWS2A-35	Web Strap Guide Washer		2
	LM000215	Label - Not For Lifting (not shown)	5/8 x 2-5/8 in	1


11.2.1 JWS-25A Web Strap Hoist – Exploded View

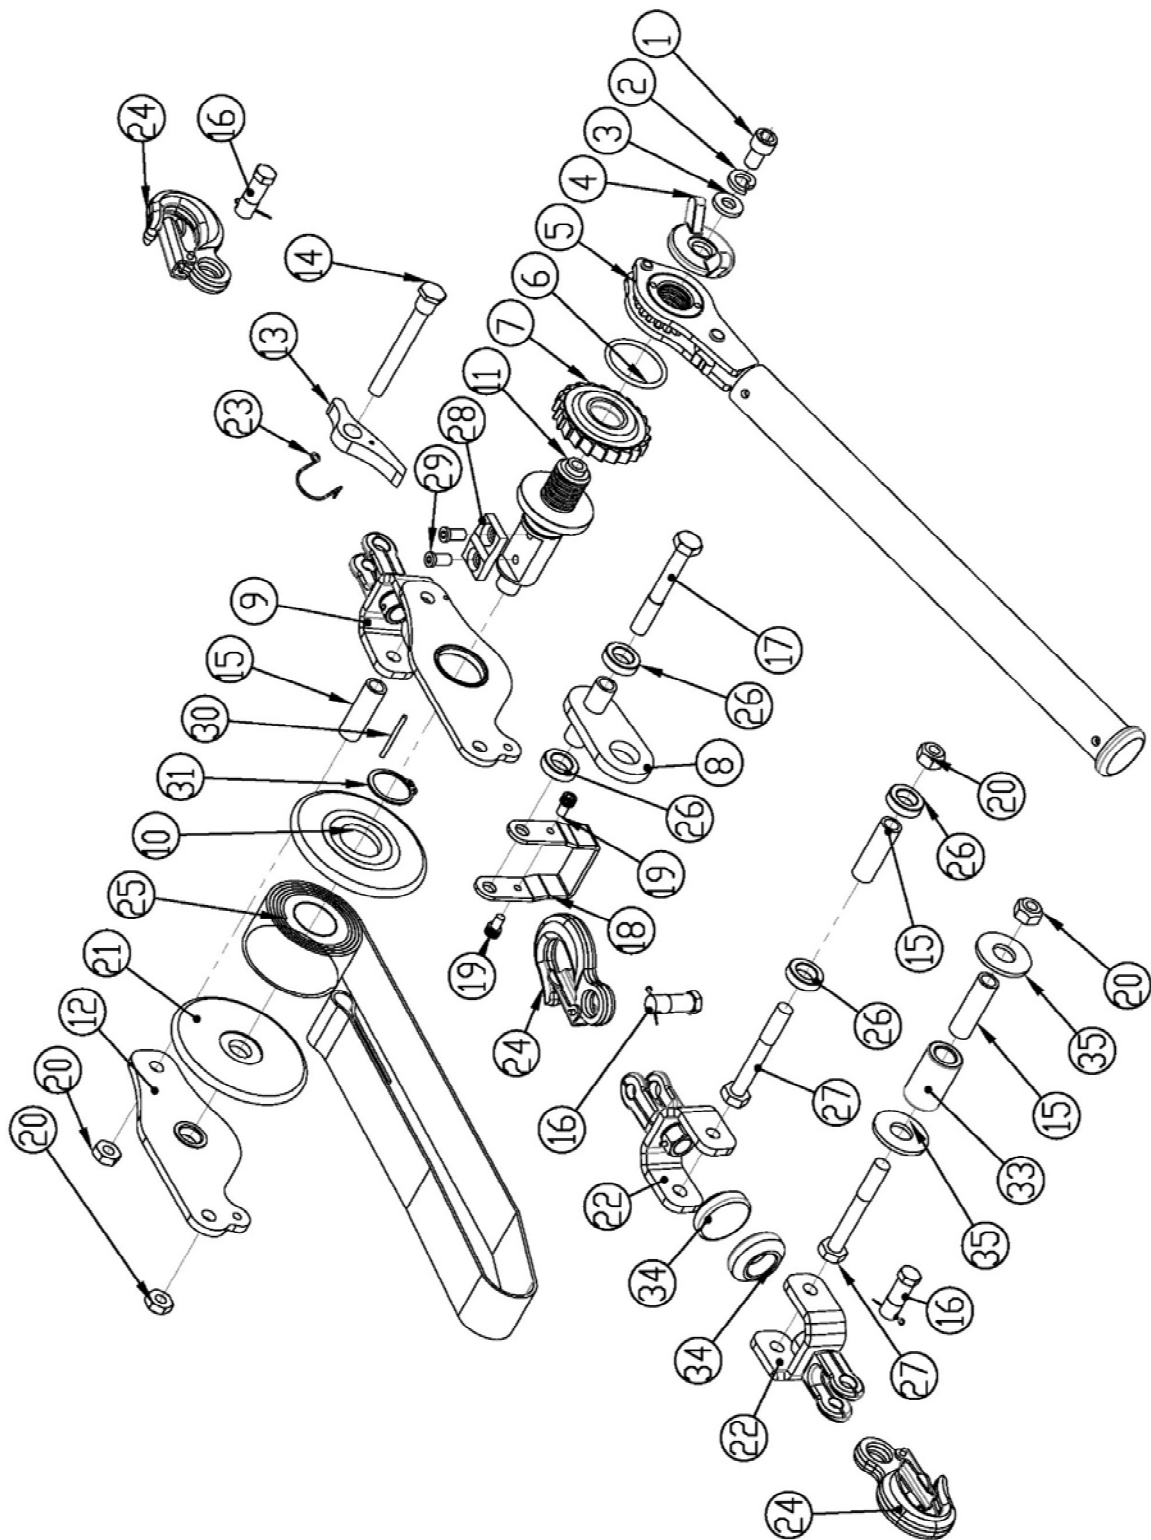

11.2.2 JWS-25A Web Strap Hoist – Parts List

Index No.	Part No.	Description	Size	Qty
1	TS-1504031	Hex Socket Head Cap Screw	M8x16	1
2	TS-2361081	Lock Washer	M8	1
3	TS-1550061	Flat Washer	M8	1
4	JWS2A-04	Wing Nut		1
5	JWS2A-05	Handle Assembly		1
6	JWS2A-06	O-Ring		1
7	JWS2A-07	Brake Gear		1
8	JWS-25A-08	Center Plate Weldment		1
9	JWS2A-09	Plate A Weldment (large hole)		1
10	JWS2A-10	Plastic Disc (large hole)		1
11	JWS2A-11	Drum		1
12	JWS2A-12	Plate B (small hole)		1
13	JWS2A-13	Pawl		1
14	JWS2A-14	Pawl Screw	M8	1
15	JWS2A-15	Top & Bottom Tube		2
16	JWS2A-16	Clevis Pin with Cotter	M12x29.5	2
17	SH081400	Hex Cap Screw	M8x70	1
18	JWS2A-18	Web Strap Restraint		1
19	SH069200	Hex Cap Screw	M6x8	2
20	TS-1541031	Hex Nylon Lock Nut	M8	4
21	JWS2A-21	Plastic Disc (small hole)		1
22	JWS2A-22	Swivel Shackle Assembly		2
23	JWS2A-23	Pawl Spring		1
24	JWS2A-24	Eye Hook and Latch Assembly		3
25	JWS2A-25	Web Strap		1
26	JWS2A-26	Collar		2
27	JWS2A-27	Hex Cap Screw		2
28	JWS2A-28	Clamping Block		1
29	TS-1504011	Hex Socket Head Cap Screw	M8x10	2
30	JWS2A-30	Iron Pin		1
31	F006052	C-Ring, External	30mm	1
33	JWS2A-33	Web Strap Roller		1
34	JWS2A-34	Plastic Cushion		2
35	JWS2A-35	Web Strap Guide Washer		2
	LM000215	Label - Not For Lifting (not shown)	5/8 x 2-5/8 in	1


11.3.1 JWS-3A Web Strap Hoist – Exploded View

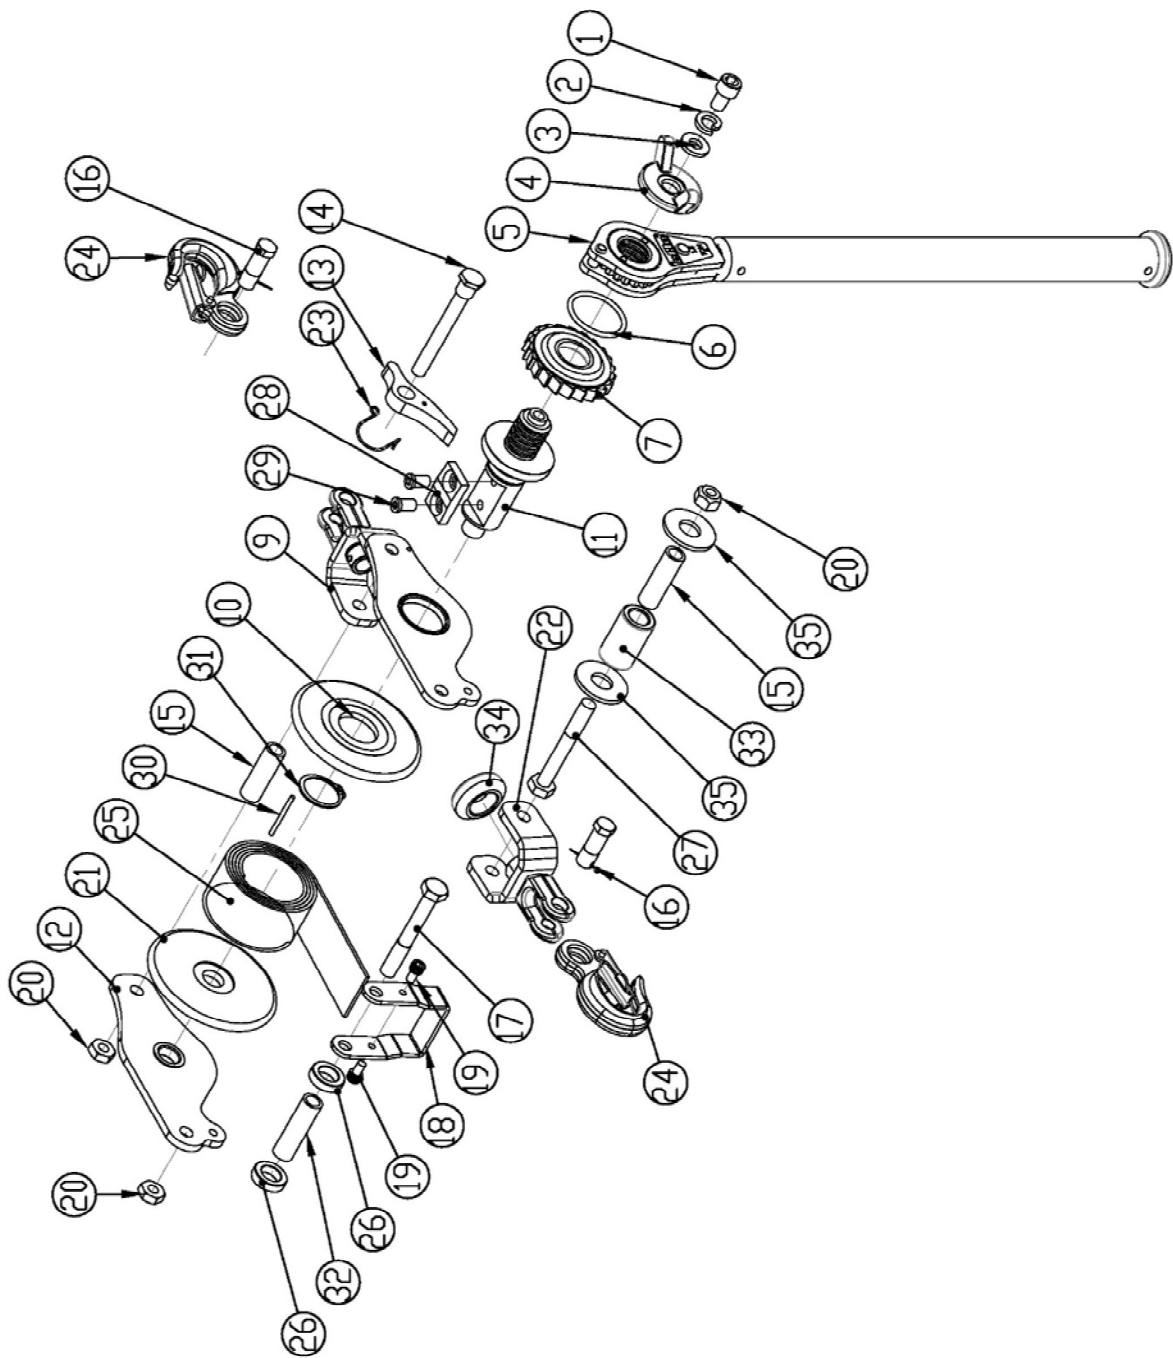

11.3.2 JWS-3A Web Strap Hoist – Parts List

Index No.	Part No.	Description	Size	Qty
1	TS-1505011	Hex Socket Head Cap Screw	M10x16	1
2	TS-2361101	Lock Washer	M10	1
3	TS-1550071	Flat Washer	M10	1
4	JWS3A-04	Wing Nut		1
5	JWS3A-05	Handle Assembly		1
6	JWS3A-06	O-Ring		1
7	JWS3A-07	Brake Gear		1
9	JWS3A-09	Plate A Weldment (large hole)		1
10	JWS3A-10	Plastic Disc (large hole)		1
11	JWS3A-11	Drum		1
12	JWS3A-12	Plate B (small hole)		1
13	JWS3A-13	Pawl		1
14	JWS3A-14	Pawl Screw	M10	1
15	JWS3A-15	Top & Bottom Tube		2
16	JWS2A-16	Clevis Pin with Cotter	M12x29.5	2
17	TS-2210801	Hex Head Cap Screw	M10x80	1
18	JWS3A-18	Web Strap Restraint		1
19	JWS3A-19	Hex Head Cap Screw	M10x6	2
20	TS-1541041	Hex Nylon Lock Nut	M10	3
21	JWS3A-21	Plastic Disc (small hole)		1
22	JWS3A-22	Swivel Shackle Assembly		1
23	JWS3A-23	Pawl Spring		1
24	JWS2A-24	Eye Hook and Latch Assembly		2
25	JWS3A-25	Web Strap		1
26	JWS2A-26	Collar		2
27	JWS3A-27	Hex Head Cap Screw		1
28	JWS3A-28	Clamping Block		1
29	TS-1504011	Hex Socket Head Cap Screw	M8x10	2
30	JWS2A-30	Iron Pin		1
31	F006052	C-Ring, External	30mm	1
32	JWS3A-32	Middle Tube		1
33	JWS3A-33	Web Strap Roller		1
34	JWS3A-34	Plastic Cushion		1
35	JWS3A-35	Web Strap Guide Washer		2
	LM000215	Label - Not For Lifting (not shown)	5/8 x 2-5/8 in	1

11.4.1 JWS-4A Web Strap Hoist – Parts List

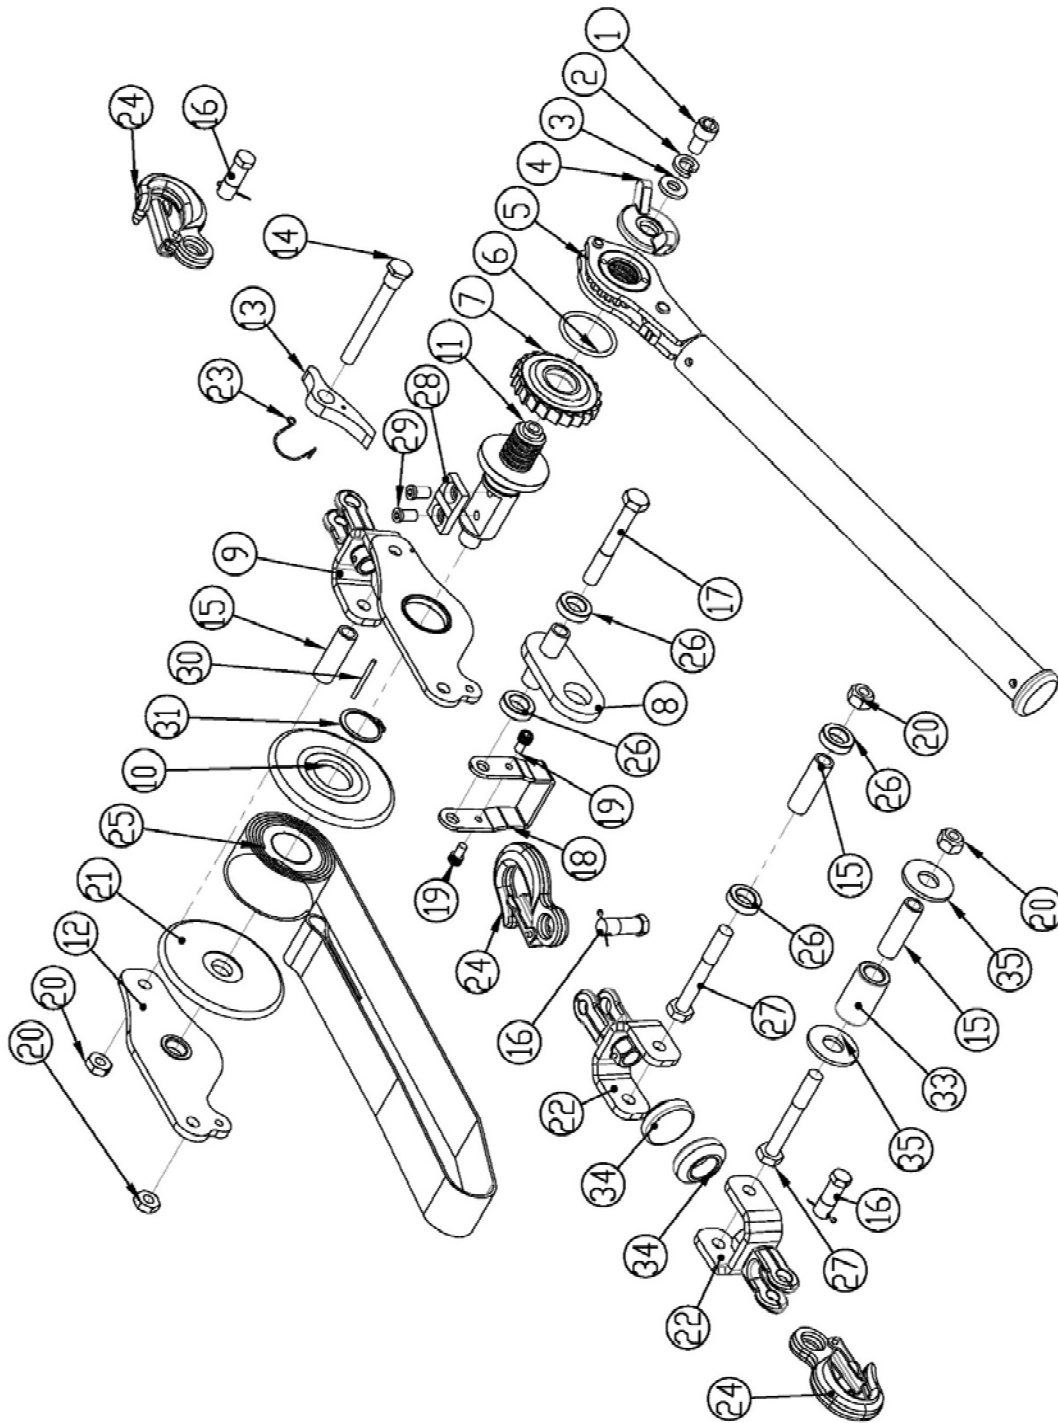

11.4.2 JWS-4A Web Strap Hoist – Parts List

Index No.	Part No.	Description	Size	Qty
1	TS-1505011	Hex Socket Head Cap Screw	M10x16	1
2	TS-2361101	Lock Washer	M10	1
3	TS-1550071	Flat Washer	M10	1
4	JWS3A-04	Wing Nut		1
5	JWS3A-05	Handle Assembly		1
6	JWS3A-06	O-Ring		1
7	JWS3A-07	Brake Gear		1
8	JWS4A-08	Center Plate Weldment		1
9	JWS3A-09	Plate A Weldment (large hole)		1
10	JWS3A-10	Plastic Disc (large hole)		1
11	JWS3A-11	Drum		1
12	JWS3A-12	Plate B (small hole)		1
13	JWS3A-13	Pawl		1
14	JWS3A-14	Pawl Screw	M10	1
15	JWS3A-15	Top & Bottom Tube		2
16	JWS2A-16	Clevis Pin with Cotter	M12x29.5	2
17	TS-2210801	Hex Head Cap Screw	M10x80	1
18	JWS3A-18	Web Strap Restraint		1
19	JWS3A-19	Hex Head Cap Screw	M10x6	2
20	TS-1541041	Hex Nylon Lock Nut	M10	4
21	JWS3A-21	Plastic Disc (small hole)		1
22	JWS3A-22	Swivel Shackle Assembly		2
23	JWS3A-23	Pawl Spring		1
24	JWS2A-24	Eye Hook and Latch Assembly		3
25	JWS3A-25	Web Strap		1
26	JWS2A-26	Collar		2
27	JWS3A-27	Hex Head Cap Screw		2
28	JWS3A-28	Clamping Block		1
29	TS-1504011	Hex Socket Head Cap Screw	M8x10	2
30	JWS2A-30	Iron Pin		1
31	F006052	C-Ring, External	30mm	1
33	JWS3A-33	Web Strap Roller		1
34	JWS3A-34	Plastic Cushion		2
35	JWS3A-35	Web Strap Guide Washer		2
	LM000215	Label - Not For Lifting (not shown)	5/8 x 2-5/8 in	1

12.0 Warranty and Service

JET warrants every product it sells against manufacturers' defects. If one of our tools needs service or repair, please contact Technical Service by calling 1-800-274-6846, 8AM to 5PM CST, Monday through Friday.

Warranty Period

The general warranty lasts for the time period specified in the literature included with your product or on the official JET branded website.

- JET products carry a limited warranty which varies in duration based upon the product. (See chart below)
- Accessories carry a limited warranty of one year from the date of receipt.
- Consumable items are defined as expendable parts or accessories expected to become inoperable within a reasonable amount of use and are covered by a 90 day limited warranty against manufacturer's defects.

Who is Covered

This warranty covers only the initial purchaser of the product from the date of delivery.

What is Covered

This warranty covers any defects in workmanship or materials subject to the limitations stated below. This warranty does not cover failures due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair, alterations or lack of maintenance. JET woodworking machinery is designed to be used with Wood. Use of these machines in the processing of metal, plastics, or other materials may void the warranty. The exceptions are acrylics and other natural items that are made specifically for wood turning.

Warranty Limitations

Woodworking products with a Five Year Warranty that are used for commercial or industrial purposes default to a Two Year Warranty. Please contact Technical Service at 1-800-274-6846 for further clarification.

How to Get Technical Support

Please contact Technical Service by calling 1-800-274-6846. **Please note that you will be asked to provide proof of initial purchase when calling.** If a product requires further inspection, the Technical Service representative will explain and assist with any additional action needed. JET has Authorized Service Centers located throughout the United States. For the name of an Authorized Service Center in your area call 1-800-274-6846 or use the Service Center Locator on the JET website.

More Information

JET is constantly adding new products. For complete, up-to-date product information, check with your local distributor or visit the JET website.

How State Law Applies

This warranty gives you specific legal rights, subject to applicable state law.

Limitations on This Warranty

JET LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

JET SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

JET sells through distributors only. The specifications listed in JET printed materials and on official JET website are given as general information and are not binding. JET reserves the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever. JET® branded products are not sold in Canada by JPW Industries, Inc.

Product Listing with Warranty Period

90 Days – Parts; Consumable items
1 Year – Motors; Machine Accessories
2 Year – Metalworking Machinery; Electric Hoists, Electric Hoist Accessories; Woodworking Machinery used for industrial or commercial purposes
5 Year – Woodworking Machinery
Limited Lifetime – JET Parallel clamps; VOLT Series Electric Hoists; Manual Hoists; Manual Hoist Accessories; Shop Tools; Warehouse & Dock products; Hand Tools; Air Tools

NOTE: JET is a division of JPW Industries, Inc. References in this document to JET also apply to JPW Industries, Inc., or any of its successors in interest to the JET brand.

This page intentionally left blank.



427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.jettools.com