

1550, 1570, 1575, 1580, 1585 Series TerrainCut™ Front Mowers



JOHN DEERE

OPERATOR'S MANUAL

1500 Series TerrainCut™ Front Mowers

OMTCU39308 ISSUE L3 (ENGLISH)



John Deere Turf Care

**Export Edition
Printed in U.S.A.**

Introduction

Thank You for Purchasing a John Deere Product

We appreciate having you as a customer and wish you many years of safe and satisfied use of your machine.

OUC1082,0000A47-19-19SEP13

Required Emission-Related Information

Service Provider

A repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.

DX,EMISSIONS,REQINFO-19-08DEC23

Using Your Operator's Manual

This manual is an important part of your machine and should remain with the machine when you sell it.

Reading your operator's manual will help you and others avoid personal injury or damage to the machine. Information given in this manual will provide the operator with the safest and most effective use of the machine. Knowing how to operate this machine safely and correctly will allow you to train others who may operate this machine.

If you have an attachment, use the safety and operating information in the attachment operator's manual along with the machine operator's manual to operate the attachment safely and correctly.

This manual and safety signs on your machine may also be available in other languages (see your authorized dealer to order).

Sections in your operator's manual are placed in a specific order to help you understand all the safety messages and learn the controls so you can operate this machine safely. You can also use this manual to answer any specific operating or servicing questions. A convenient index located at the end of this book will help you to find needed information quickly.

The machine shown in this manual may differ slightly from your machine, but will be similar enough to help you understand our instructions.

RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction the machine will travel when going forward. When you see a broken line (-----), the item referred to is hidden from view.

Before delivering this machine, your dealer performed a predelivery inspection to ensure best performance.

OUC1082,0000A48-19-19SEP13

Machine Use

This machine is designed solely for use in customary utility operations, park and amenity area maintenance, for appropriate agricultural operations, and for winter work. Use in any other way is considered as contrary to the intended use.

This machine is not intended for use in forestry operations, unless equipped with a Falling Objects Protection Structure (FOPS). The operator station does not provide adequate protection to the occupants in that environment unless equipped with a FOPS.

The cab available from the manufacturer is not designed to provide adequate protection from hazardous substances. The operator must wear appropriate personal protection equipment.

The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

This machine should be operated, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Setting fuel delivery beyond published factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

Any arbitrary modifications carried out on this machine will relieve the manufacturer of all liability for any resulting damage or injury.

MX00654,00001B3-19-17OCT13

Introduction

Special Messages

Your manual contains special messages to bring attention to potential safety concerns, machine damage as well as helpful operating and servicing information. Please read all the information carefully to avoid injury and machine damage.



CAUTION: Avoid injury! This symbol and text highlight potential hazards or death to the operator or bystanders that may occur if the hazards or procedures are ignored.

IMPORTANT: Avoid damage! This text is used to tell the operator of actions or conditions that might result in damage to the machine.

NOTE: General information is given throughout the manual that may help the operator in the operation or service of the machine.

OUO1082,0000A49-19-19SEP13

Attachments for Your Machine

There's a John Deere attachment or kit to make your new machine perform more tasks or be more versatile, whether your machine is a lawn tractor or compact utility tractor or a utility machine.

You can check out the entire line of attachments for your machine at JohnDeere.com or ask your John Deere dealer. From aerators to electric lift kits to tillers, there's a John Deere attachment or kit to fill every need.

OUO1082,0000A4A-19-19SEP13

Contents

Product Identification.....	5
Safety Labels.....	6
Safety.....	11
Operating Controls.....	18
Operating Machine.....	23
Replacement Parts.....	36
Service Intervals.....	37
Service Lubrication.....	39
Service Engine.....	42
Service Transmission.....	55
Service Steering & Brakes.....	59
Service Electrical.....	61
Service Miscellaneous.....	65
Troubleshooting.....	73
Storage.....	75
Assembly.....	77
Specifications.....	81
Declaration of Conformity.....	87
Service Statement.....	89
Service Record.....	90

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2023
DEERE & COMPANY
Moline, Illinois
All rights reserved.
Previous Editions
Copyright © 2014

Product Identification

Record Identification Numbers

Front Mower

OUMX068,0000689-19-14AUG17

1550 PIN (040001 -)

1570 PIN (040001 -)

1575 PIN (040001 -)

1580 PIN (040001 -)

1585 PIN (040001 -)


If you need to contact an Authorized Service Center for information on servicing, always provide the product model and identification numbers.

You will need to locate the identification numbers for the product. Record the information in the spaces provided below.

DATE OF PURCHASE:


DEALER NAME:

DEALER PHONE:

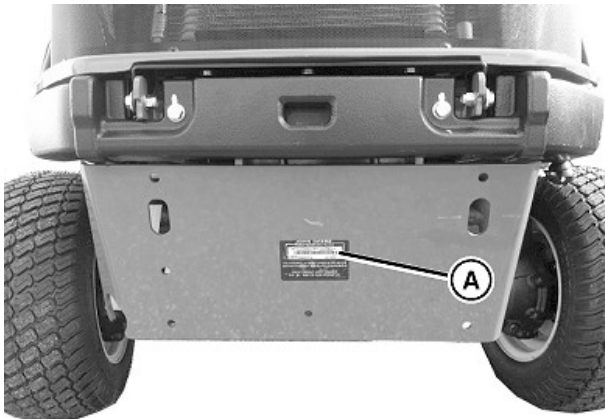

TCT007876—UN—11JUL13

PRODUCT IDENTIFICATION NUMBER (A):

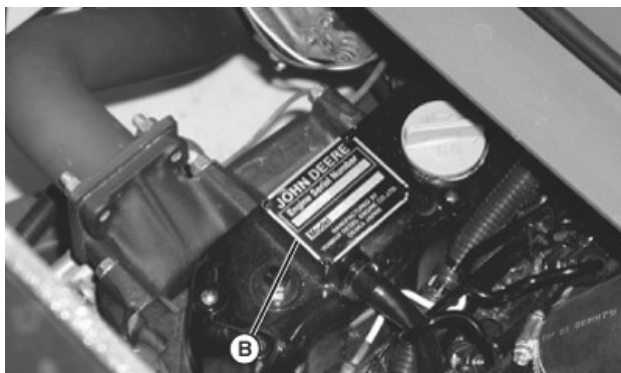


TCAL43291—UN—14MAR13

ENGINE SERIAL NUMBER (B):

Safety Labels

Safety Label Location (No Cab)

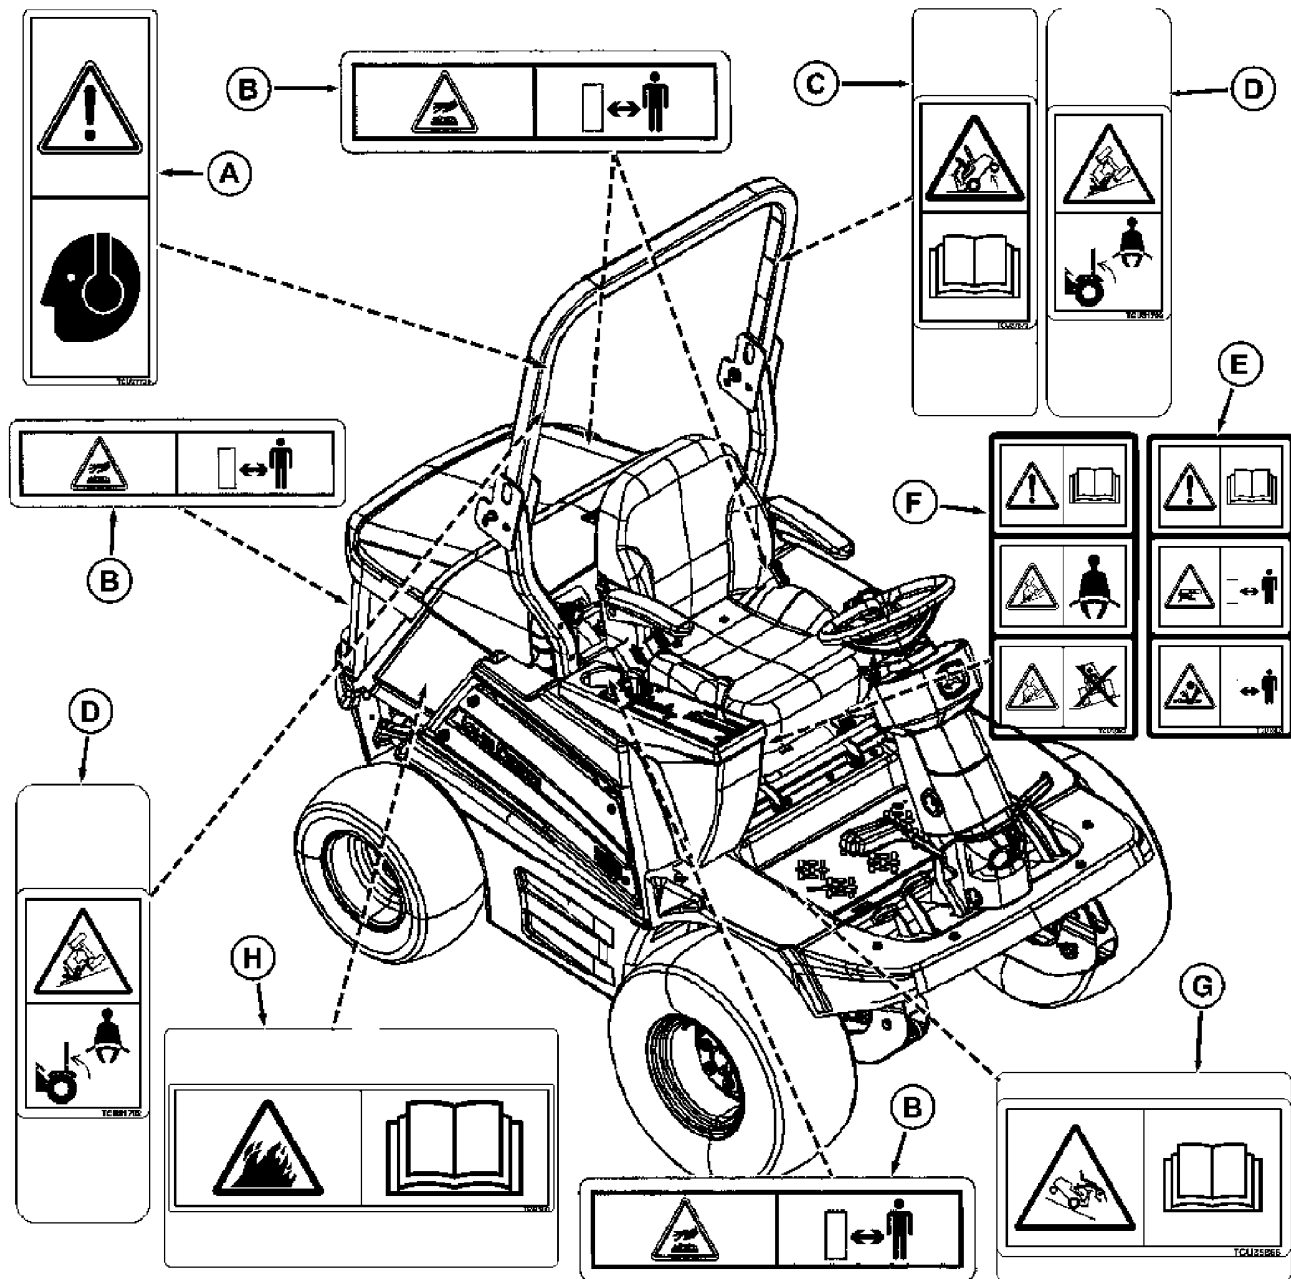

TCT008017—UN—29OCT15


A—AVOID INJURY FROM EXPOSURE TO LOUD NOISE TCU27739
 B—HOT SURFACES TCU13555 (2 on rear, 2 behind seat)
 C—AVOID INJURY FROM TIPPING TCU37873
 D—AVOID CRUSHING TCU31702

E—HELP AVOID INJURY TCU13520
 F—HELP AVOID INJURY TCU36506
 G—MAINTAIN STEERING CONTROL AND STABILITY TCU35866
 H—AVOID INJURY FROM EQUIPMENT FIRES TCU34231

OUO2005.00000A5-19-06JUL16

Safety Labels

Safety Label Location (Cab)

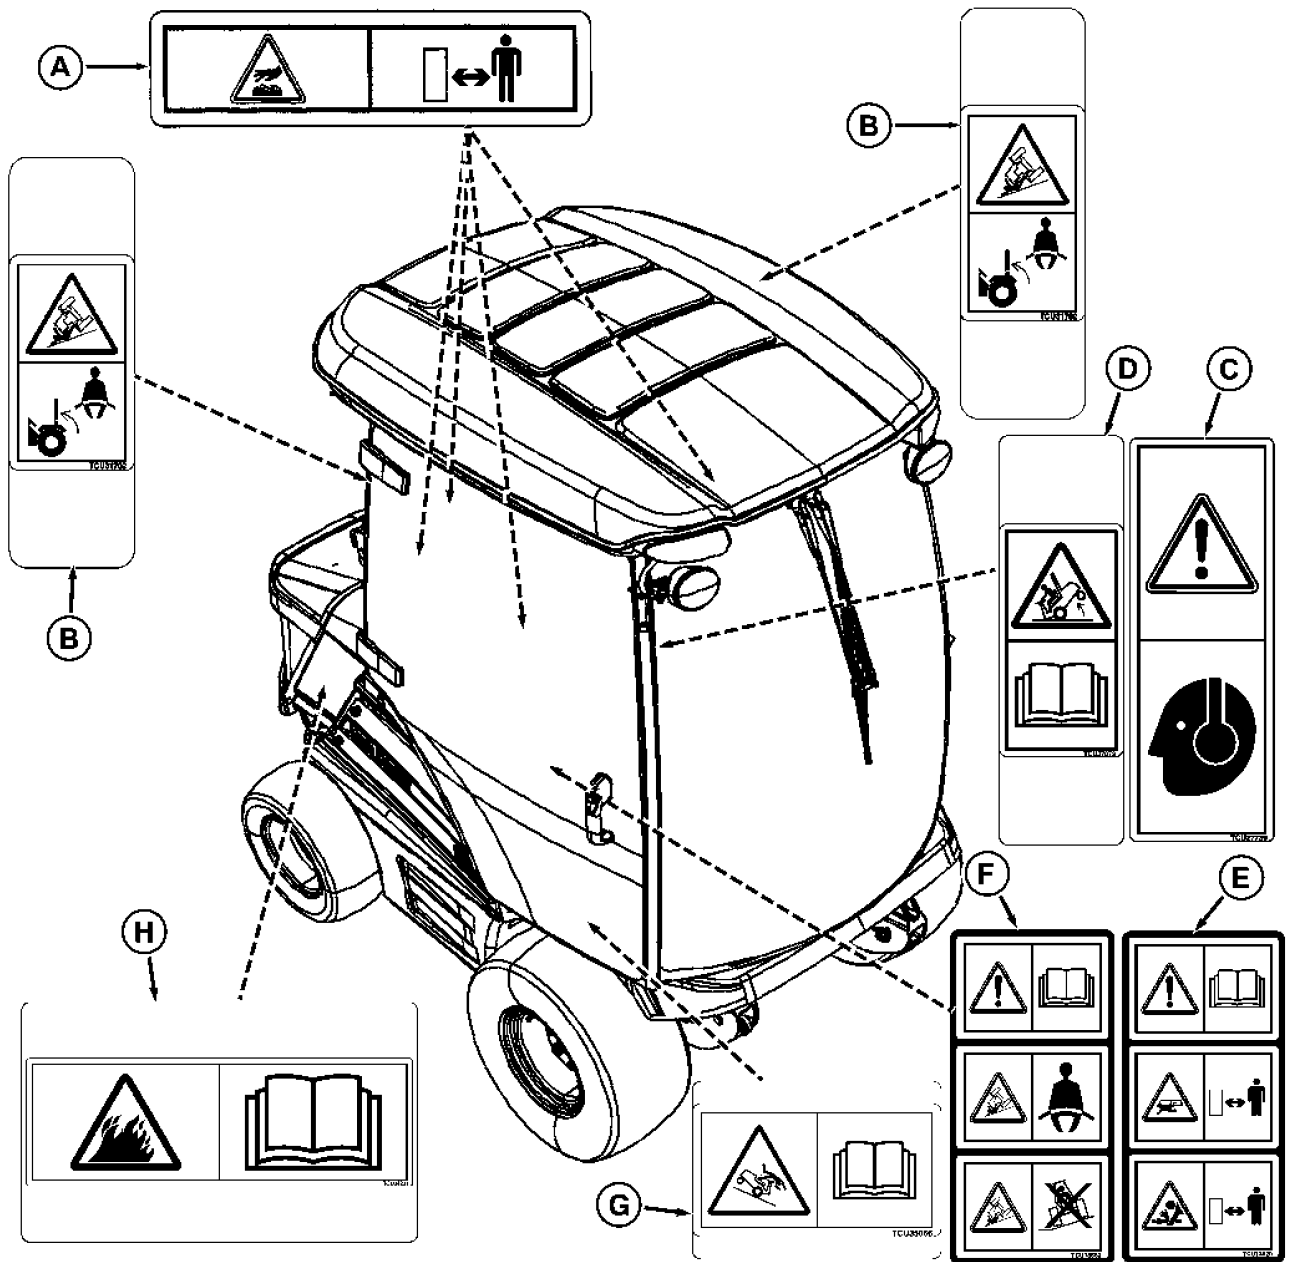

TCT009078—UN—03NOV15

A—HOT SURFACES TCU13555 (2 on rear, 2 behind seat)
 B—AVOID CRUSHING TCU31702
 C—AVOID INJURY FROM EXPOSURE TO LOUD NOISE TCU27739
 D—AVOID INJURY FROM TIPPING TCU37873

E—HELP AVOID INJURY TCU13520
 F—HELP AVOID INJURY TCU36506
 G—MAINTAIN STEERING CONTROL AND STABILITY TCU35866
 H—AVOID INJURY FROM EQUIPMENT FIRES TCU34231

OUC2005.000028F-19-06JUL16

Safety Labels

Pictorial Safety Signs



TCT005498—UN—11SEP12

At several important places on this machine safety signs are affixed intended to signify potential danger. The hazard is identified by a pictorial in a warning triangle. An adjacent pictorial provides information how to avoid personal injury. These safety signs, their placement on the machine and a brief explanatory text are shown in this Safety section.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

OUMX068,000067C-19-19MAR14

Avoid Crushing



TCUR1704

TCAL25049—UN—24MAY12


- Keep Rollover Protective Structure fully extended
- Do not jump if machine tips
- Use seat belt

When structure must be down

- DO NOT use seat belt
- Drive with extra care

OOU2005,0000120-19-16AUG13

Avoid Equipment Fires

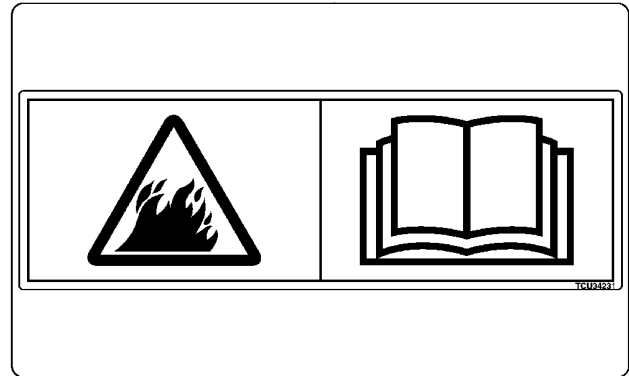

TCUR2421

TCT010624—UN—19MAR14

Avoid equipment fires.

Accumulation of grass, leaves and other debris on or near hot or moving parts can cause a fire.

Inspect machine before, during, and after use.

Shut off engine and allow machine to cool before cleaning.

Inspect and clean the entire machine and pay special attention to these locations:

1. Muffler and exhaust system
2. Engine and engine screens
3. Top of mower deck and under shields

OUMX068,000067F-19-19MAR14

Hot Surfaces



TCAL45198—UN—10APR13


Stay clear of hot surfaces.

OOU2005,0000121-19-16AUG13

Safety Labels

Maintain Steering Control and Stability

TO MAINTAIN STEERING CONTROL AND STABILITY

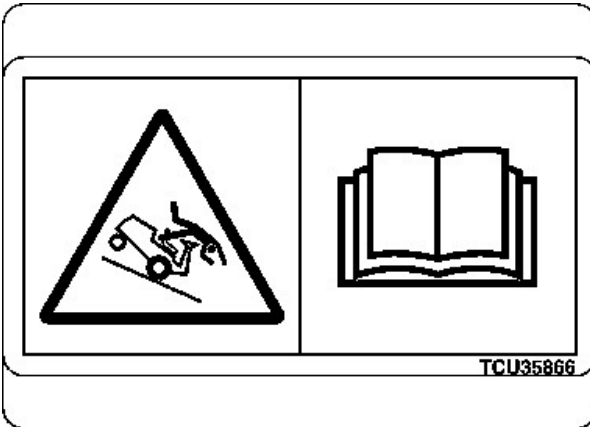


TCT008321—UN—14AUG13

- See operator's manual for ballasting recommendations.

OUC02005,00000A9-19-16AUG13

Avoid Injury from Exposure to Loud Noise

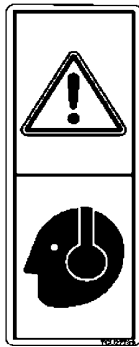


TCAL45197—UN—10APR13

- Prolonged exposure to loud noises can cause impairment or loss of hearing.
- Wear suitable hearing protection.

OUC02005,0000122-19-16AUG13

Help Avoid Injury

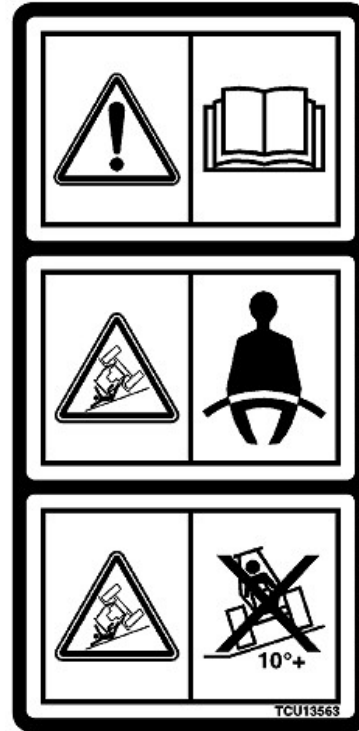

TCT008322—UN—14AUG13


HELP AVOID INJURY

- Operator training required.
- Do not operate where machine could tip.
- Never carry riders.
- Roll-over protection structure (ROPS) should be raised unless prohibited by low clearance operation.
- Use seat belts unless ROPS is in lowered position.
- Before leaving machine:
 - Lower attachment to ground.
 - Stop engine.
 - Lock the park brake.
 - Remove key.
- Do not use this machine on slopes greater than 10°.

OUC02005,00000AB-19-16AUG13

Safety Labels

Help Avoid Injury

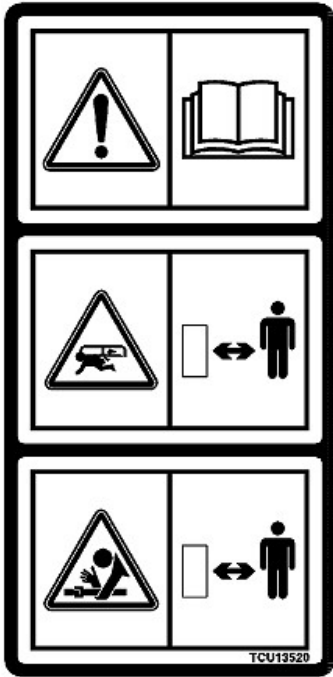

TCT008323—UN—14AUG13

HELP AVOID INJURY

- Operator training required.
- Read operator's manual.
- Know all controls.
- Keep shields in place.
- Maintain all safety devices.
- Look behind before backing.
- Keep children and others away.
- Stay clear of power driven parts.

OUC02005,00000AC-19-16AUG13

Avoid Injury from Tipping



TCT010623—UN—19MAR14

Avoid injury from tipping:

- Drive slowly when attachment is removed and avoid sudden stops, sharp turns and slopes.
- Keep attachment low when transporting.

OUMX068,000067D-19-19MAR14

Safety

Operator Training Required

- Read the operator's manual, attachment manuals, and other training material carefully. If the operator or mechanic cannot read English, it is the responsibility of the owner to explain this material to them. This publication is available in other languages.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- All operators and mechanics should be trained. The owner of the machine is responsible for training the users.
- Age, physical ability, and mental capacity can be factors in equipment-related injuries. Operators must be mentally and physically capable of operating the machine properly and safely.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people, or property.
- Operate the machine in an open, unobstructed area under the direction of an experienced operator.
- Test drive area with attachment lowered, if equipped, but not running. Slow down when you travel over rough ground.

OUC1082,000657E-19-15MAY18

Preparation

- Evaluate the terrain and determine what accessories and attachments are required to perform the job safely and properly. Only use accessories and attachments approved by the manufacturer.
- Wear appropriate clothing including, safety glasses, and hearing protection. Long hair, loose clothing, or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used. Remove all objects such as rocks, toys, and wire which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive.
 - a. Use only an approved container.
 - b. Never remove gas cap or add fuel when engine is running. Do not smoke.
 - c. Never refuel or drain the machine indoors.
- Check that the operator presence controls, safety switches, and shields are attached and functioning properly. Do not operate machine unless all safety devices are functioning properly.

OUC1082,000657E-19-15MAY18

Operating Safely

- Never run an engine in an enclosed area where dangerous carbon monoxide fumes can collect.
- Only operate in good light, keeping away from holes and hidden hazards.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Only start engine from the operator's position. Use seat belts if provided.
- Slow down and use extra care on hillsides. Be sure to travel in the recommended direction on hillsides. For this machine, drive up and down hillsides, not across. Turf conditions can affect the machine's stability. Use caution while operating near drop-offs.
- Slow down and use caution when making turns and when changing directions on slopes.
- Never raise deck with the blades running.
- Never operate with the PTO shield, or other guards, not securely in place. Be sure all interlocks are attached, adjusted properly, and functioning properly.
- Never operate with the discharge deflector raised, removed or altered, unless using a grasscatcher. Do not operate mower without discharge chute or entire grasscatcher in place.
- Do not change the engine governor setting or overspeed the engine. Operating the engine at excessive speed can increase the hazard of personal injury.
- Stop on level ground, lower implements, disengage drives, engage parking brake, and shut off engine before leaving the operator's position for any reason including emptying the grasscatchers or unclogging the chute.
- Stop equipment and inspect blades after striking objects or if an abnormal vibration occurs. Make necessary repairs before resuming operations.
- Keep hands and feet away from the cutting units.
- Look behind and down before backing up to be sure of a clear path.
- Never carry passengers and keep pets and bystanders away.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop blades if not mowing. Watch for traffic when operating near or crossing roadways.
- Be aware of the mower discharge direction and do not point it at anyone.
- Do not operate the machine while under the influence of alcohol or drugs.
- Use care when loading or unloading the machine into or off of a trailer or truck.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.
- Inspect machine before you operate. Be sure hardware is tight. Repair or replace damaged, badly

Safety

worn, or missing parts. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before you operate.

- Before using, always visually inspect to see that the blades, blade bolts and the mower assembly are not worn and damaged. Replace worn and damaged blades and bolts in sets to preserve balance.
- Keep safety labels visible when installing accessories and attachments.
- Do not wear radio or music headphones. Safe service and operation require your full attention.
- When machine is left unattended, stored, or parked, lower the mower deck unless a positive mechanical lock is used.

OUO1023,000044C-19-13MAR13

Checking Mowing Area



MXAL41932—UN—22MAY13

- Clear mowing area of objects that might be thrown. Keep people and pets out of mowing area.
- Low-hanging branches and similar obstacles can injure the operator or interfere with mowing operation. Before mowing, identify potential obstacles, such as low-hanging branches, and trim or remove those obstacles.
- Study mowing area. Set up a safe mowing pattern. Do not mow where traction or stability is doubtful.
- Test drive area with mower lowered (if equipped) but not running. Slow down when you travel over rough ground.
- Survey all mowing sites to determine which slopes are safe for machine operation and which slopes should be maintained through other maintenance techniques.

MP47322,00F4617-19-05JUL17

Parking Safely

1. Stop machine on a level surface, not on a slope.
2. Disengage mower blades or any other attachments.
3. Lower attachments to the ground.
4. Lock the park brake.
5. Stop the engine.
6. Remove the key.

7. Wait for engine and all moving parts to stop before you leave the operator's seat.
8. Close fuel shut-off valve, if your machine is equipped.
9. Disconnect the negative battery cable or remove the spark plug wire(s) (for gasoline engines) before servicing the machine.

OUO1023,0000035-19-21FEB13

Rotating Blades are Dangerous



MXAL41928—UN—18FEB13

- Rotating blades can cut off arms and legs, and throw objects. Failure to observe safety instructions could result in serious injury or death.
- Keep hands, feet and clothing away from mower deck when engine is running.
- Be alert at all times, drive forward and in reverse carefully. People, especially children can move quickly into the mowing area before you know it.
- Before backing up, stop mower blades or attachments and look down and behind the machine carefully, especially for children.
- Do not mow in reverse.
- Shut off blades when you are not mowing.
- Park machine safely before leaving the operator's station for any reason including emptying the grasscatchers or unplugging the chute.

MX00654,000001F-19-27MAR14

Protect Children

- Death or serious injury can occur when young children associate having fun with a lawn mowing machine simply because someone has given them a ride on a machine.
- Children are attracted to lawn mowing machines and mowing activities. They don't understand the dangers of rotating blades or the fact that the operator is unaware of their presence.
- Children who have been given rides in the past may suddenly appear in the mowing area for another ride and be run over or backed over by the machine.
- Tragic accidents with children can occur if the operator is not alert to the presence of children, especially when a child approaches a machine from behind. Before and while backing up, stop mower blades and look down and behind the machine carefully, especially for children.
- Never carry children on a machine or attachment,

Safety

even with the blades off. Do not tow children in a cart or trailer. They can fall off and be seriously injured or interfere with safe machine operation.

- Never use the machine as a recreational vehicle or to entertain children.
- Never allow children or an untrained person to operate the machine. Instruct all operators not to give children a ride on the machine or in an attachment.
- Keep children indoors, out of the mowing area, and in the watchful eye of a responsible adult, other than the operator, when a mower is being operated.
- Stay alert to the presence of children. Never assume that children will remain where you last saw them. Turn the machine off if a child enters the work area.

OUO2005.0000217-19-05FEB13

Operating on Slopes

Identify Slopes for Safe Operation

- Establish your own special procedures and rules for operating on slopes. These procedures must include a survey of all mowing sites to determine which slopes are safe for machine operation. Always use common sense and good judgement when performing this survey.
- Lay a straight piece of sturdy lumber 1.2 m (4 ft) long on the slope and measure the angle of the slope with an angle indicator or protractor level.
- Never mow or operate machine on slope angles greater than 25°.
- Exceeding the maximum recommended slope angle of 25° increases the risk of rollover accidents that can result in serious injury or death.
- Always consider potential turf conditions and slope angles when determining the risk of loss-of-control and tip-over accidents.
- On slope angles of 15° or less the risk of rollover is low, but as the slope angle increases to the John Deere recommended maximum of 25° the risk increases to a moderate level.
- The recommended slope angles are for a machine in its basic configuration. The basic configuration is mower deck only, no cab, MCS or other attachments. The addition of a cab, MCS or other attachments will increase the risk of a rollover and decrease the recommended operating slope.

Operate Safely on Slopes

- Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.
- If you feel uneasy on a hillside, do not mow it.
- Mow up and down slopes, not across.

- Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Choose a low ground speed so you will not have to stop or shift while on a slope.
- Rollover can occur before the tires lose traction.
- Use caution if moving when grass is wet or slippery. Tires may lose traction. Tires may lose traction or slip on slopes even though the brakes are functioning properly.
- Avoid starting, stopping or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.
- Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.
- Use extra care while operating machine with grass catchers or other attachments, they can affect stability of the machine. Do not use on steep slopes.
- Do not mow or operate machine in areas adjacent to hazards that may cause the machine to roll over. The machine could suddenly lose traction, slide, and/or roll over if a wheel goes over the edge or if the edge breaks away. Leave a buffer area of at least as wide as the machine between the hazard and the mowing area.
- Follow the manufacturer's recommendations for wheel weights or counterweights for added stability when operating on slopes or using front or rear mounted attachments. Remove weights when not required.
- Drive machine very slowly and avoid quick stops or sharp turns when attachment is removed.
- Keep attachments lowered to the ground while operating on slopes. Raising attachments while operating on slopes can cause machine to become unstable.
- Transport machine with attachments lowered to improve stability.

OUO2005.0000166-19-27MAR14

Use Seat Belt Properly



TCAL42361—UN—08MAR13

- Use a seat belt when you operate with a Roll-Over Protective Structure (ROPS) to minimize chance of injury from an accident, such as an overturn.
- Do not use a seat belt if operating with a folding ROPS in the folded position. Return the folding ROPS to the upright position as soon as possible.

Safety

- Never modify, disassemble or attempt to repair the seat belt.
- Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.
- Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with John Deere-approved replacement parts.
- Layers of heavy clothing can interfere with proper positioning of the seat belt and can reduce the effectiveness of the seat belt.

OUO1023,0000454-19-11MAR14

Use Rollover Protection System (ROPS) Properly

- Never operate the machine without the ROPS installed.
- DO NOT remove the ROPS.
- Keep the ROPS in safe operating condition by periodically thoroughly inspecting for damage and keeping all mounting hardware tight. Make certain all parts of the ROPS are installed correctly if the ROPS structure is loosened or removed for any reason. All ROPS hardware should be tightened to the proper torque per manufacturer's recommendations.
- Replace a damaged ROPS. Do not repair or revise. The protection provided by the ROPS will be impaired if the ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. It must be replaced to maintain the manufacturer's certification of the structure.
- The seat is part of the ROPS safety zone. Replace only with a John Deere approved seat.
- Be certain that the seat belt can be released quickly in the event of an emergency.
- Never attempt to repair a damaged or altered ROPS. It must be replaced to maintain the manufacturer's certification of the structure.
- Check carefully for overhead clearances (i.e. branches, doorways, electrical wires) before driving under any objects and do not contact them.
- The ROPS is an integral and effective safety device. Keep a folding ROPS in the raised and locked position and use the seat belt when operating the machine.
- Lower a folding ROPS temporarily only when absolutely necessary. Do not wear the seat belt when folded down.
- Be aware there is no rollover protection when a folded ROPS is in the down position.
- Check the area to be mowed and never fold down a

folding ROPS in areas where there are slopes, drop offs, ditches or embankments or bodies of water.

MX00654,000001D-19-27MAR14

Keep Riders Off

- Only allow the operator on the machine. Keep riders off.
- Riders on the machine or attachment may be struck by foreign objects or thrown off the machine causing serious injury.
- Riders obstruct the operator's view resulting in the machine being operated in an unsafe manner.

OUO2005,000021B-19-05FEB13

Driving Safely on Public Roads

Avoid personal injury or death resulting from a collision with another vehicle on public roads:

- Use safety lights and devices. Slow moving machines when driven on public roads are hard to see, especially at night.
- Whenever driving on public roads, use flashing warning lights and turn signals according to local regulations. Extra flashing warning lights may need to be installed.

OUO2005,000021C-19-05FEB13

Checking Wheel Hardware

- A serious accident could occur causing serious injury if wheel hardware is not tight.
- Check wheel hardware tightness often during the first 100 hours of operation.
- Wheel hardware must be tightened to specified torque using the proper procedure anytime it is loosened.

OUO2005,000021D-19-05FEB13

Wear Appropriate Clothing



TCT015572—UN—24MAY18

- Always wear safety goggles, or safety glasses with side shields when operating the machine.
- Wear close fitting clothing and safety equipment appropriate for the job.

Safety

- While operating this machine, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
- Wear a suitable protective device such as earplugs. Loud noise can cause impairment or loss of hearing.

TC00531,00001DE-19-26JUN18

Towing Loads Safely

- Stopping distance increases with speed and weight of towed load. Travel slowly and allow extra time and distance to stop.
- Total towed weight must not exceed combined weight of pulling machine, ballast and operator. Use counterweights or wheel weights as described in the attachment or pulling machine operator's manual.
- Excessive towed load can cause loss of traction and loss of control on slopes. Reduce towed weight when operating on slopes.
- Never allow children or others in or on towed equipment.
- Use only approved hitches. Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the approved hitch point.
- Follow the manufacturer's recommendations for weight limits for towed equipment and towing on slopes.
- If you cannot back up a slope with a towed load, the slope is too steep to operate on with the towed load. Reduce the towed load or do not operate.
- Do not turn sharply. Use additional caution when turning or operating under adverse surface conditions. Use care when reversing.
- Do not shift to neutral and coast downhill.

OUO1082,000634B-19-14FEB13

Maintenance and Storage



TCAL43414—UN—15MAR13

- Never operate machine in a closed area where dangerous carbon monoxide fumes can collect.
- Disengage drives, lower implement (if equipped), lock parking brake, stop engine and remove key or disconnect spark plug (for gas engines). Wait for all movement to stop before adjusting, cleaning or repairing.
- Clean grass and debris from cutting units, drives,

mufflers, and engine to help prevent fires. Clean up oil or fuel spillage.

- Let engine cool before storing and do not store near flame.
- Shut off fuel while storing or transporting. Do not store fuel near flames or drain indoors.
- Park machine on level ground. Never allow untrained personnel to service machine. Understand service procedure before doing work.
- Use jack stands or lock service latches to support components when required. Securely support any machine elements that must be raised for service work.
- Before servicing machine or attachment, carefully release pressure from any components with stored energy, such as hydraulic components or springs.
- Release hydraulic pressure by lowering attachment or cutting units to the ground or to a mechanical stop and move hydraulic control levers back and forth.
- Disconnect battery (if equipped) or remove spark plug (for gas engines) before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- Use care when checking tines or blades. Wrap the tines or blades, or wear gloves, and use caution when servicing them. Only replace tines or blades. Never straighten or weld them.
- Keep hands, feet, clothing, jewelry and long hair away from moving parts. If possible, do not make adjustments with the engine running.
- Charge batteries (if equipped) in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.
- Keep all parts in good working condition and all hardware tightened. Replace all worn or damaged decals.
- Check grass catcher components and the discharge guard frequently and replace with manufacturer's recommended parts, when necessary. Grass catcher components are subject to wear, damage, and deterioration which could expose moving parts or allow objects to be thrown.
- Keep all nuts and bolts tight, especially tines or blades attachment bolts, to be sure the equipment is in safe working condition.
- Check brake operation frequently. Adjust and service as required.
- On multi-bladed machines, take care as rotating one tine or blade can cause others to rotate.

TH84124,00001DF-19-26JUL18

Safety

Avoid High Pressure Fluids



TCAL25960—UN—24MAY12

- Hydraulic hoses and lines can fail due to physical damage, kinks, age, and exposure. Check hoses and lines regularly. Replace damaged hoses and lines.
- Hydraulic fluid connections can loosen due to physical damage and vibration. Check connections regularly. Tighten loose connections.
- Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.
- Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.
- If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A. Information may be obtained in the United States and Canada only by calling 1-800-822-8262.

OUC2005,0000220-19-05FEB13

Prevent Fires

- Please review these recommendations with all operators. See your John Deere dealer with questions.
- Always follow all safety procedures posted on the machine and in this operator's manual. Before carrying out any inspection or cleaning, always shut off engine, set parking brake, and remove ignition key.
- Besides routine maintenance, one of the best ways to keep your John Deere equipment running efficiently and to reduce fire risk is to regularly remove debris buildup from the machine.
- After operating, allow machine to cool in an open area before cleaning or storing. Do not park machine near flammable materials, such as wood, cloth, or chemicals, or near an open flame or other sources of ignition, such as a water heater or furnace.
- Completely remove any combustible materials from equipment before storing by emptying any grass catcher bags, containers, and cargo boxes.
- Debris can accumulate anywhere on the machine, especially on horizontal surfaces. Remove grass and debris completely from engine compartment, muffler

area, and from the mower deck or cutting units both before and after operating machine. Additional cleaning may be necessary when mowing or mulching in dry conditions.

- In addition to cleaning machine before using and storing, keeping engine area clean provides the greatest impact on fire prevention. Other areas requiring regular inspection and cleaning include behind wheel rims, wire harness, hose or line routing, mowing attachments, etc. Compressed air, leaf blowers, or water assists in keeping these areas clean.
- Frequency of these inspections and cleaning will vary depending on a number of factors, including operating conditions, machine configuration, operating speeds, and weather conditions (particularly dry, hot, and windy conditions). When you are operating in these conditions, inspect and clean these areas frequently throughout the day.
- Excess lubrication or fuel/oil leaks or spills on the machine can also serve as collection sites for debris. Prompt machine repair and oil and fuel clean-up reduces the potential for debris collection.
- Bearing failures or overheating can result in a fire. To reduce this risk, always follow the instructions in the machine operator's manual regarding lubrication intervals and locations. Contact your local dealer if you have any questions about the lubrication intervals or location and if any unusual noises are coming from areas where bearings might be located. Washing the machine while warm may also reduce bearing life and increase potential for premature bearing failure.
- Always shut off fuel when storing or transporting machine, if the machine has a fuel shutoff.
- Check fuel lines, tank, cap, and fittings frequently for cracks or leaks. Replace if necessary.

OUC2005,0000221-19-27MAR19

Transport Safely

- Use care when loading or unloading the machine into a trailer or truck.
- Use full width ramps for loading machine into trailer or truck.
- Tie the machine down securely using appropriate straps, chains, cable, or ropes. Both front and rear straps should be directed down and outward from the machine.
- Refer to "Transporting Machine" in the Operating section for more information.

MX00654,000001E-19-25MAR14

Safety

Tire Safety




TCAL25965—UN—24MAY12

Explosive separation of a tire and rim parts can cause serious injury or death:

- Do not attempt to mount a tire without the proper equipment and experience to perform the job.
- Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.
- When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly.
- Check tires for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

OUO2005,0000222-19-10MAY17

Handling Fuel Safely

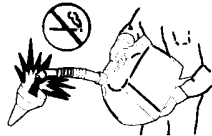

MXAL41938—UN—18FEB13

To avoid personal injury or property damage, use extreme care in handling fuel. Fuel is extremely flammable and fuel vapors are explosive:

- Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
- Use only an approved fuel container. Use only non-metal, portable fuel containers approved by the Underwriter's Laboratory (U.L.) or the American Society for Testing & Materials (ASTM). If using a funnel, make sure it is plastic and has no screen or filter.
- Never remove the fuel tank cap or add fuel with the engine running. Allow engine to cool before refueling.
- Never add fuel to or drain fuel from the machine

indoors. Move machine outdoors and provide adequate ventilation.

- Clean up spilled fuel immediately. If fuel is spilled on clothing, change clothing immediately. If fuel is spilled near machine, do not attempt to start the engine but move the machine away from the area of spillage. Avoid creating any source of ignition until fuel vapors have dissipated.
- Never store the machine or fuel container where there is an open flame, spark, or pilot light such as on a water heater or other appliance.
- Prevent fire and explosion caused by static electric discharge. Static electric discharge can ignite fuel vapors in an ungrounded fuel container.
- Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before fueling.
- Remove fuel-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment with a portable container, rather than from a fuel dispenser nozzle.
- Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until the fueling is complete. Do not use a nozzle lock-open device.
- Never overfill fuel tank. Replace fuel tank cap and tighten securely.
- Replace all fuel container caps securely after use.
- For gasoline engines, do not use gas with methanol. Methanol is harmful to your health and to the environment.

OUO2005,0000223-19-12OCT16

Handling Waste Product and Chemicals


Waste products, such as, used oil, fuel, coolant, brake fluid, and batteries, can harm the environment and people:

- Do not use beverage containers for waste fluids - someone may drink from them.
- See your local Recycling Center or authorized dealer to learn how to recycle or get rid of waste products.
- A Safety Data Sheet (SDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques. The seller of the chemical products used with your machine is responsible for providing the SDS for that product.

OUO2005,0000224-19-11OCT18

Operating Controls

Operator Station Controls—1550, 1570 and 1580

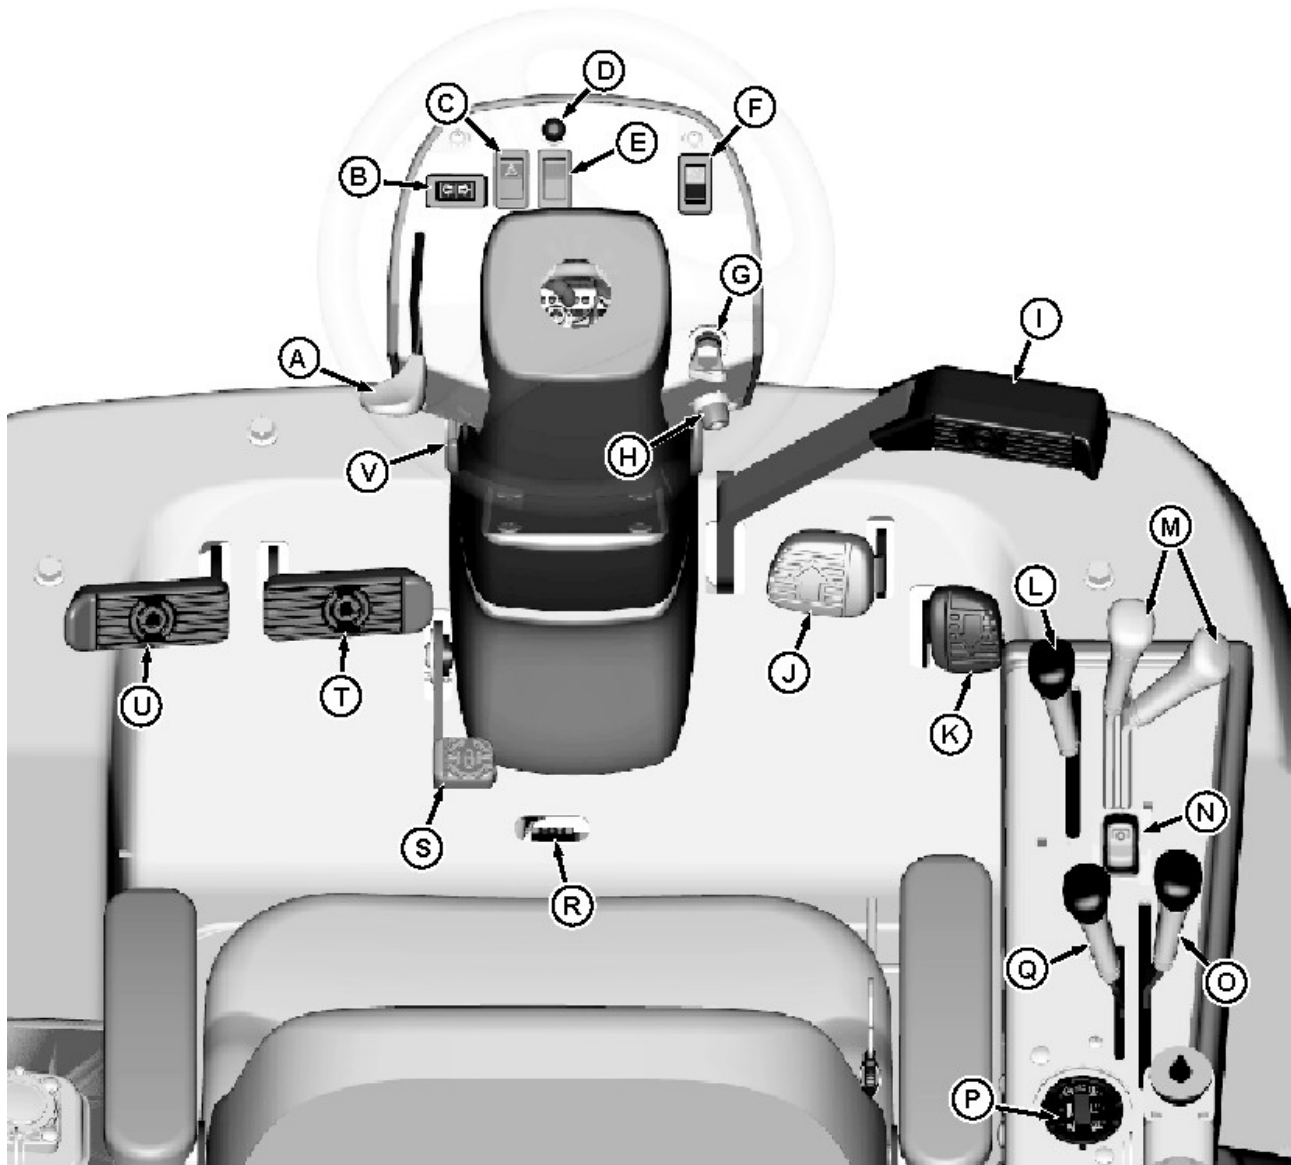

TCT013237—UN—18NOV15

Picture Note: Four wheel drive model shown.


A—Throttle Lever
B—Turn Signal Switch (Optional)
C—Hazard Switch (Optional)
D—Indicator Light, Green (Optional)
E—Headlight Switch (Optional)
F—Work Lamp Switch
G—Key Switch
H—Horn Switch (Optional)
I—Park Brake Pedal
J—Forward Pedal
K—Reverse Pedal

L—Attachment Lift Lever
M—Auxiliary Hydraulics Control Lever (Optional)
N—PTO Switch
O—4WD Control Lever
P—Operator Display
Q—Axle Speed Lever
R—Park Brake Lock Lever
S—Traction Assist Pedal
T—Right Turn Brake Pedal
U—Left Turn Brake Pedal
V—Steering Column Tilt Lever Lock

OUC005,000035C-19-17NOV15

Operating Controls

Operator Station Controls—1580

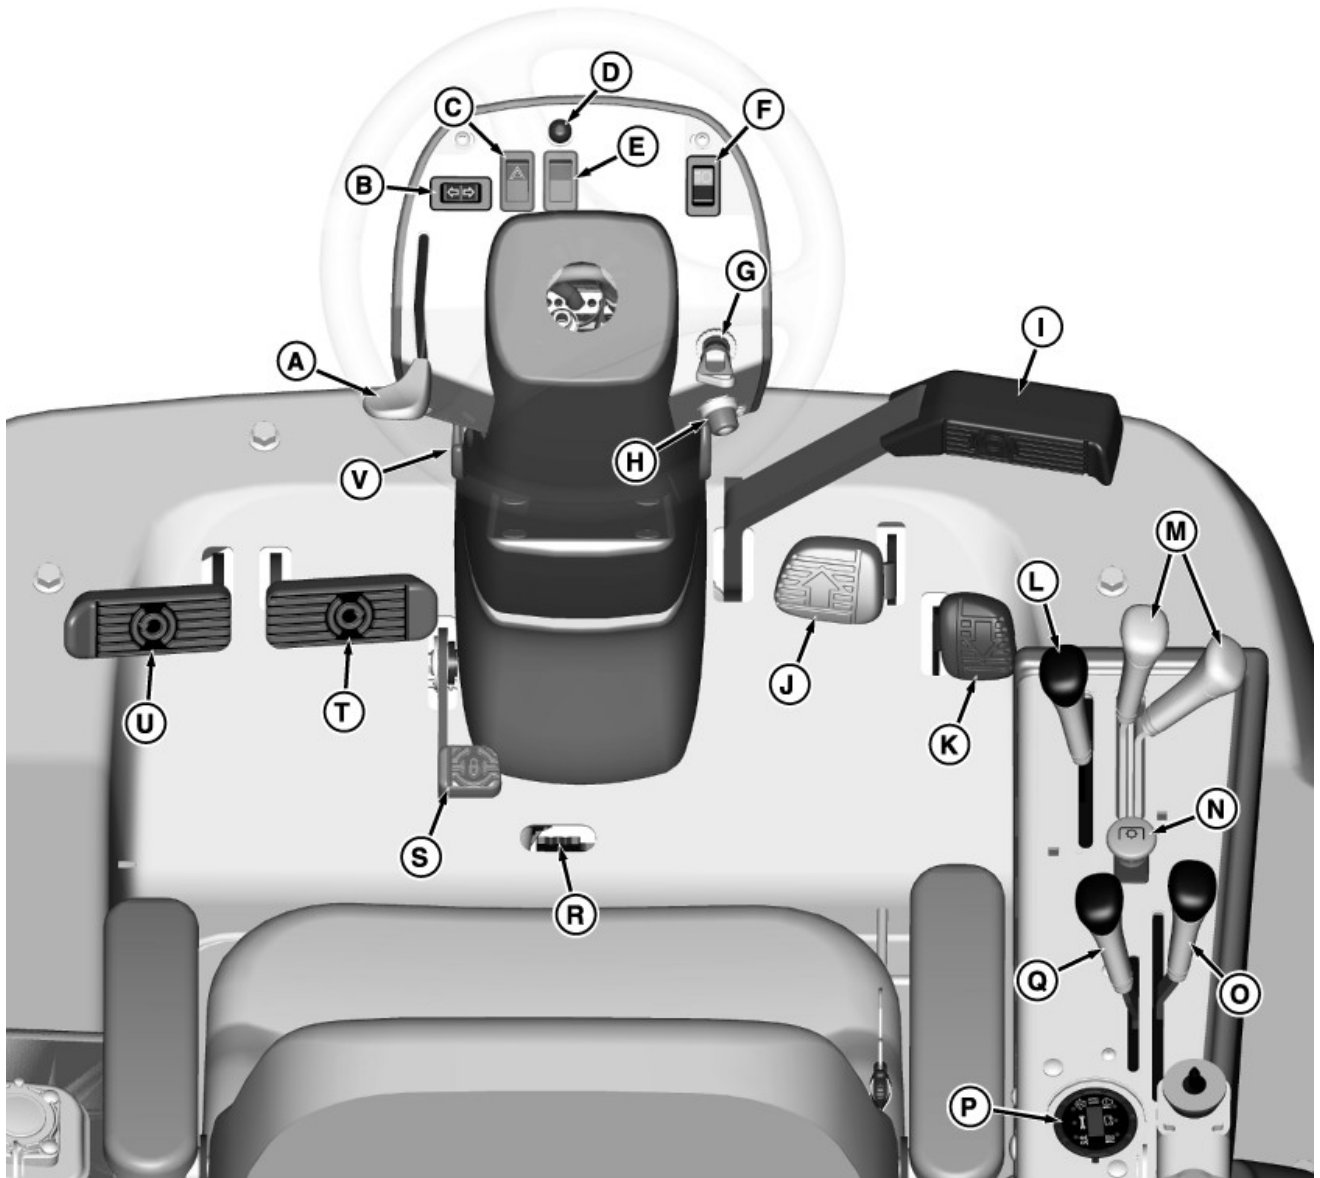

TCT008513—UN—20MAR14


A—Throttle Lever
B—Turn Signal Switch (Optional)
C—Hazard Switch (Optional)
D—Indicator Light, Green (Optional)
E—Headlight Switch (Optional)
F—Work Lamp Switch
G—Key Switch
H—Horn Switch (Optional)
I—Park Brake Pedal
J—Forward Pedal
K—Reverse Pedal

L—Attachment Lift Lever
M—Auxiliary Hydraulics Control Lever (Optional)
N—PTO Switch
O—4WD Control Lever
P—Operator Display
Q—Axle Speed Lever
R—Park Brake Lock Lever
S—Traction Assist Pedal
T—Right Turn Brake Pedal
U—Left Turn Brake Pedal
V—Steering Column Tilt Lever Lock

OUC005,0000205-19-20MAR14

Operating Controls

Operator Station Controls—1575 and 1585 (Cab Models)

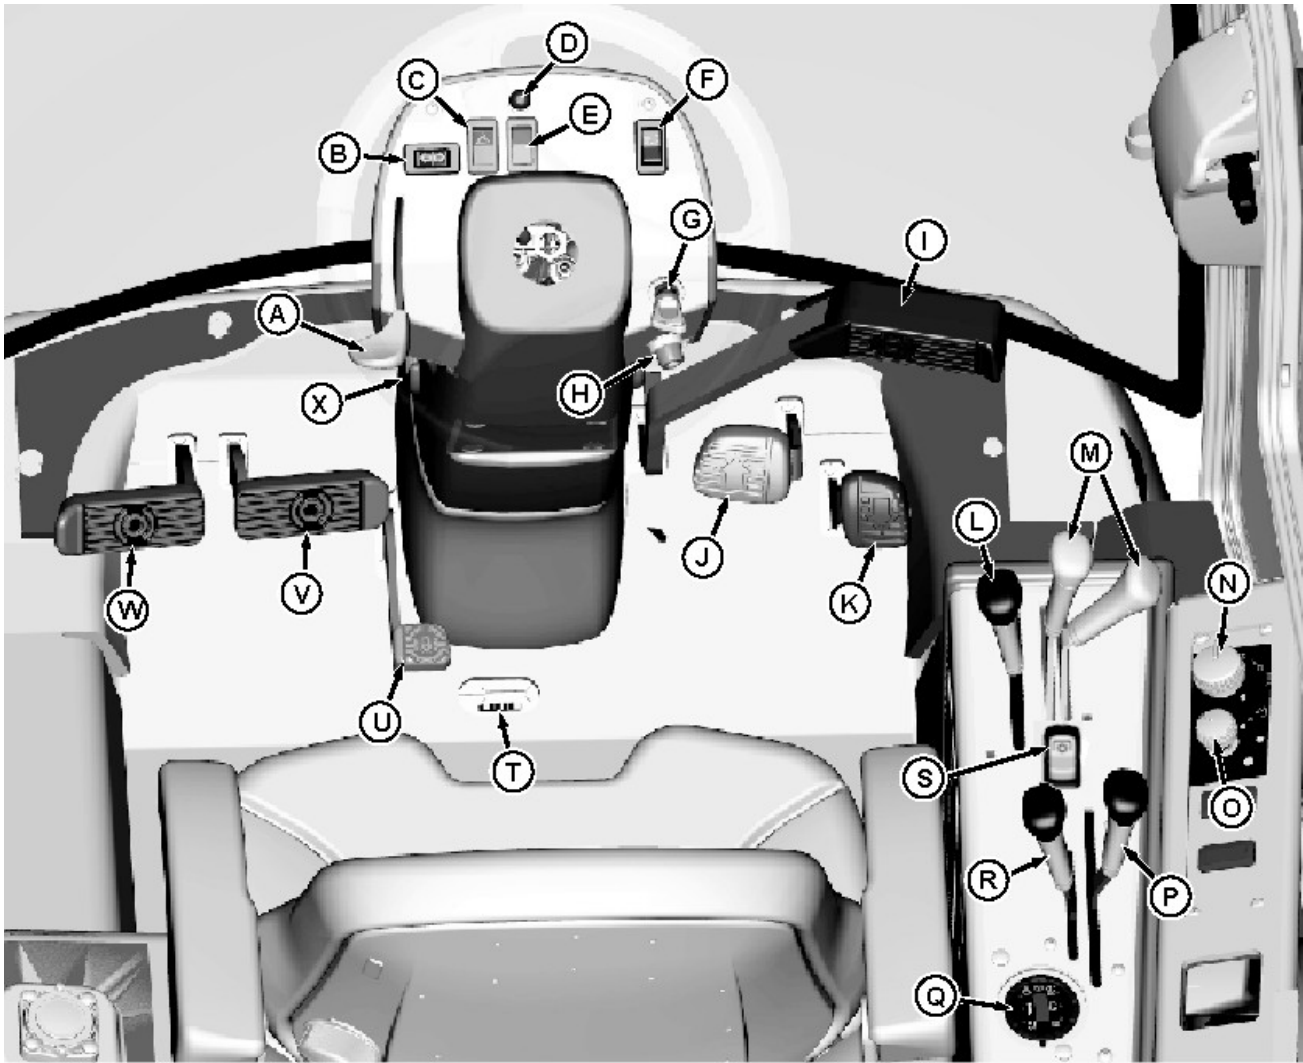

TCT013238—UN—18NOV15

Picture Note: 1585 model is shown.

A—Throttle Lever
B—Turn Signal Switch (Optional)
C—Hazard Switch (Optional)
D—Indicator Light, Green (Optional)
E—Headlight Switch (Optional)
F—Work Lamp Switch
G—Key Switch
H—Horn Switch (Optional)
I—Park Brake Pedal
J—Forward Pedal
K—Reverse Pedal
L—Attachment Lift Lever

M—Auxiliary Hydraulics Control Lever
N—Light Switch
O—Windshield Wiper Switch
P—4WD Control Lever
Q—Operator Display
R—Axle Speed Lever
S—PTO Switch
T—Park Brake Lock Lever
U—Traction Assist Pedal
V—Right Turn Brake Pedal
W—Left Turn Brake Pedal
X—Steering Column Tilt Lever Lock


OUC2005,000010D-19-17NOV15

Operating Controls

Seat Controls

IMPORTANT: Avoid Injury! Fasten Safety belts when operating machine with Roll-Over Protective Structure (ROPS) in upright position and pinned in place. If ROPS must be folded to operate in a low clearance area, do not use the seat belt. Raise ROPS and use seat belt as soon as conditions permit.

Seat Controls – Deluxe Comfort Seat with Armrests

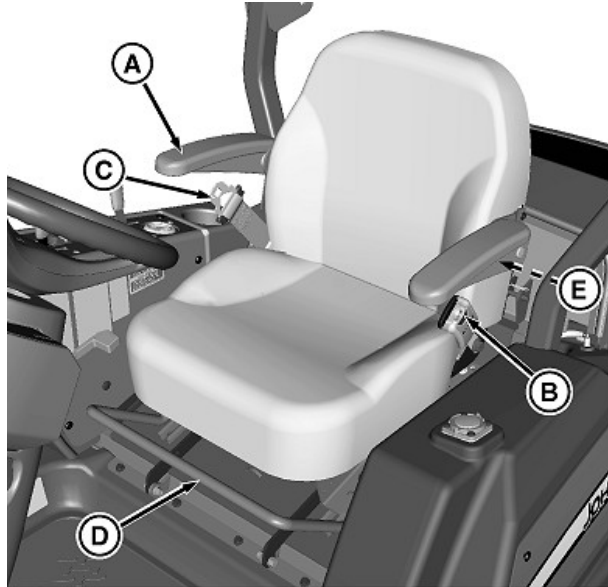


TCT008505—UN—20SEP13

- A—Folding Armrests
- B—Seat Belt Latch
- C—Seat Belt Buckle
- D—Seat Fore/Aft Adjustment Lever
- E—Armrest height adjusting knob

- Adjust fore/aft position to maximize comfort but to maintain control of machine as well.
- Make certain that steering wheel and foot pedals can be easily used when operating.
- The armrests can be lowered or raised by adjusting the knobs under each armrest.

Seat Controls – Comfort Adjust Suspension Seat with Armrests

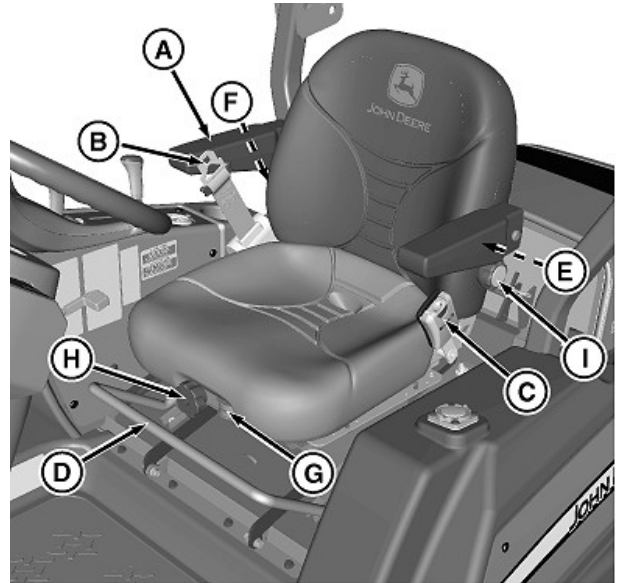


TCT008506—UN—20SEP13

- A—Folding Armrests
- B—Seat Belt Latch
- C—Seat Belt Buckle
- D—Seat Fore/Aft Adjustment Lever
- E—Armrest height adjusting knob
- F—Seat Back Adjustment Knob
- G—Scale Weight Indicator
- H—Seat Suspension Adjustment Crank
- I—Lumbar Support Knob

- Adjust fore/aft position to maximize comfort but to maintain control of machine as well.
- Make certain that steering wheel and foot pedals can be easily used when operating.
- The armrests can be lowered or raised by adjusting the knobs under each armrest.
- Use hand crank to adjust suspension.
- Monitor scale indicator to maintain setting at operator's weight.
- Adjust seat rake to desired angle using seat back adjustment knob.
- Support for lower back can be adjusted using lumbar support knob on right side of seat back.

Operating Controls

Seat Controls –Air Ride Suspension Seat

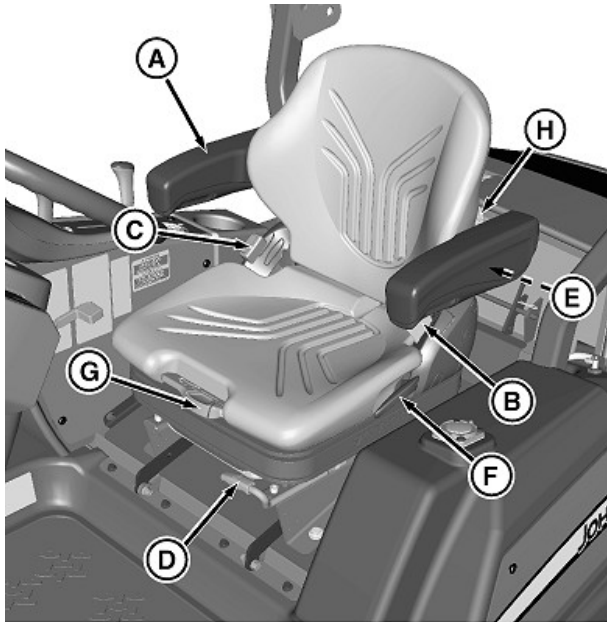


TCT008507—UN—20SEP13

- A—Folding Armrests
- B—Seat Belt Latch
- C—Seat Belt Buckle
- D—Seat Fore/Aft Adjustment Lever
- E—Armrest height adjusting knob
- F—Seat Back Adjustment Lever
- G—Air Pressure Switch
- H—Lumbar Support Knob

- Adjust fore/aft position to maximize comfort but to maintain control of machine as well.
- Make certain that steering wheel and foot pedals can be easily used when operating.
- The armrests can be lowered or raised by adjusting the knobs under each armrest.
- Use air pressure switch to adjust suspension.
- Adjust seat rake to desired angle using seat back adjustment lever.
- Support for lower back can be adjusted using lumbar support knob on left side of seat back.

OUC02005,000010E-19-19MAR14

Air Temperature Controls (Cab)

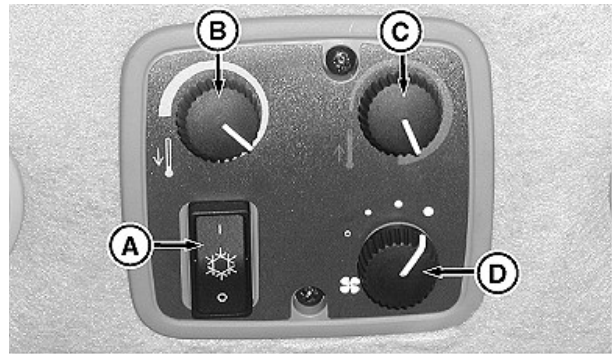

TCT008311—UN—13AUG13

- A—Air Conditioning and Deicing Switch
- B—Air Conditioning Temperature Control Knob
- C—Heater Temperature Control Knob
- D—Blower Speed Control Knob

OUC02005,000010F-19-14AUG13

Operating Machine

Daily Operating Checklist

Before Each Use

- ☐ Check engine oil
- ☐ Check hydraulic oil
- ☐ Check coolant
- ☐ Check for leaks
- ☐ Inspect tires and check air pressure
- ☐ Check safety interlock system, lights
- ☐ Check brake system
- ☐ Check air cleaner restriction indicator
- ☐ Check for loose, missing, or damaged parts
- ☐ Check all safety guards and shields
- ☐ Check fuel / water separator
- ☐ Check belts
- ☐ Check pedals and / or steering control
- ☐ Check seat belt
- ☐ Check and clean hood sealing surfaces

After Each Use

- ☐ Check / fill fuel
- ☐ Clean debris from machine
- ☐ Clean debris from cooling system
- ☐ Clean debris from mower and / or attachment drive systems
- ☐ Clean debris from cutting units and attachments
- ☐ Clean debris from underside of mower deck
- ☐ Check mower deck drive belts
- ☐ Check mower blades
- ☐ Lubricate machine after washing

OUO2005,0000200-19-09NOV18

Avoid Damage to Plastic and Painted Surfaces

- Do not wipe plastic parts unless rinsed first. Using a dry cloth may cause scratches.
- Insect repellent spray may damage plastic and painted surfaces. Do not spray insect repellent near machine.
- Be careful not to spill fuel on machine. Fuel may damage surface. Wipe up spilled fuel immediately.
- Prolonged exposure to sunlight will damage hood surfaces.

OUO1023,0000462-19-13MAR13

Entering and Exiting Machine (Cab)




TCT008319—UN—14AUG13

1. To enter cab on either right or left side, press button (A) on handle and open door. Close door until door locks into closed position.
2. To exit cab, twist handle on inside of door handle and open door.

OUO2005,0000111-19-04NOV13

Testing Safety Systems

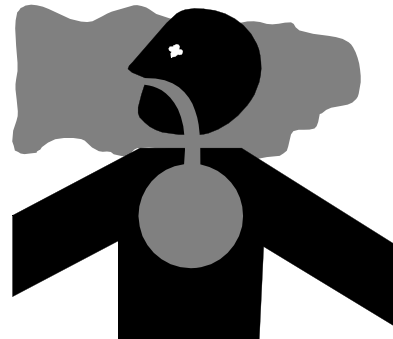

TCAL41599—UN—22JAN13

CAUTION: Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.

- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.
- Connect a pipe extension to the engine exhaust pipe to direct the exhaust fumes out of the area.
- Allow fresh outside air into the work area to clear the exhaust fumes out.

The safety systems installed on your machine should be checked before each machine use. Be sure you have read the machine operator manual and are completely

Operating Machine

familiar with the operation of the machine before performing these safety system checks.

Use the following checkout procedures to check for normal operation of machine.

If there is a malfunction during one of these procedures, do not operate machine. **See your authorized dealer for service.**

Perform these tests in a clear open area. Keep bystanders away.

OUO1023,0000464-19-14MAR13

Testing PTO Switch

1. Sit on the seat and verify seat is properly adjusted for operator's weight. (Seat should spring down slightly so seat switch is actuated.)
2. Lock the park brake.
3. Turn on the PTO switch: Pull PTO knob on switch up to the "ON" position.
4. Try to start engine.

Result: The starting motor must not engage. If it does, there is a problem with the safety interlock circuit.

5. Unlock the park brake (keep the PTO switch on). Try to start engine.

Result: The starting motor must not engage. If it does, there is a problem with the safety interlock circuit.

OUO2005,0000062-19-04NOV13

Testing Seat and Park Brake Switch

1. Sit on the seat and verify seat is properly adjusted for operator's weight. (Seat should spring down slightly so seat switch is actuated.)
2. Turn off the PTO switch: Push PTO knob on switch down to the "OFF" position.
3. Push down master brake pedal.
4. Start engine.
5. Release master brake pedal.
6. Rise up off of seat, but do not get off machine.

Result: Engine should stop after a few seconds. If engine does not stop, there is a problem with the safety interlock circuit.

OUO2005,0000063-19-04NOV13

Testing the Park Brake

Stop machine on a 17° slope (30% grade). Stop the engine and lock the park brake.

Result: Park brake must hold the machine stationary. (ANSI standards permit movement of no more than 61cm (24 in.) in one hour.) If machine moves more than that, brakes need to be adjusted. See your John Deere Dealer.

OUO1023,0000467-19-13MAR13

Using Proper Ballast



TCT007879—UN—11JUL13

- Attachments used with this machine may require ballast to prevent tipping and loss of control when the attachment is raised.
- Ballast may vary depending on the model and year of the machine or attachment.
- Check the attachment operator's manual and see your John Deere dealer for ballasting information.

OUO2005,0000060-19-05JUN14

Adjusting Seat (Deluxe Suspension)

Adjusting Seat Position

1. Sit on seat.
2. Pull seat adjustment lever up, out of locked position.
3. Slide seat forward or rearward to desired position. Operator's right heel should be able to rest firmly on the floor in front of the forward and reverse pedals.
4. Release lever.

Operating Machine

Adjusting Seat Spring Tension

1. Turn seat spring adjustment knob to adjust seat spring tension while watching weight indicator.
2. Match weight of operator to value shown in weight indicator. Seat must spring slightly so that operator's presence switch will be actuated, allowing engine to start.

Adjusting Seat Height

1. Pull up on the front of the base of the seat, and the seat height adjustment lever, until the seat height lock disengages.
2. Raise or lower the operator's seat to desired height. (There are four positions available.)
3. Release the seat height lock lever and continue to move the seat slightly until it latches in place.

OUC1023,0000469-19-13MAR13

Adjusting Seat (Comfort Adjust Suspension)

Adjusting Seat Position

1. Sit on Seat.
2. Pull seat adjustment lever up, out of locked position
3. Slide seat forward or rearward to desired position. Operator's right heel should be able to rest firmly on the floor in front of the forward and reverse pedals.
4. Release lever.

Adjusting Seat Suspension

Turn knob to desired position per operator weight on gauge.

Adjusting Seat Back


- Bring the seat back to a vertical position by turning the knob to the right (clockwise).
- Turn the knob to the left (counterclockwise) to recline the seat back slightly.

Adjusting Lumbar Support

- Turn the lumbar support knob to the left (counterclockwise) to decrease lumbar support.
- Turn the lumbar support knob to the right (clockwise) to increase lumbar support.


Adjusting Armrest

- To raise or lower armrest both sides:

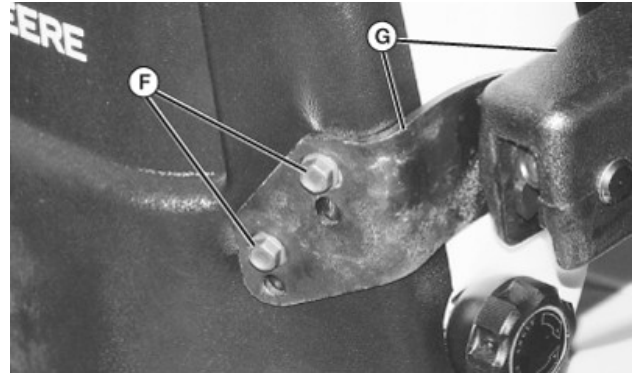

TCAL43313—UN—14MAR13

- a. Remove two bolts (F) and raise armrest and bracket (G) to the other set of holes.
 - b. Install bolts and tighten.
- To change the angle of the armrest both sides:

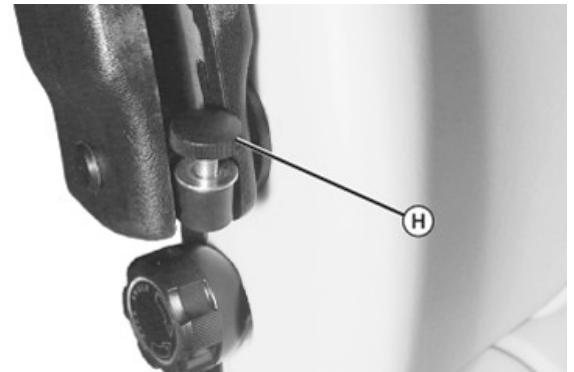

TCAL43314—UN—14MAR13

- a. Lift armrest to reveal knob (H).
- b. Turn knob (H) to raise or lower knob height and change the angle of the armrest.

OUC1023,000046A-19-13MAR13


Using Seat Belt

CAUTION: Always wear seat belt when operating machine with folding Roll-Over Protective Structure (ROPS) in upright position. Do not jump from machine if machine tips.

If ROPS must be folded to operate in a low clearance area, do not use seat belt. Raise ROPS and use seat belt as soon as conditions permit.

1. Sit in seat.

Operating Machine

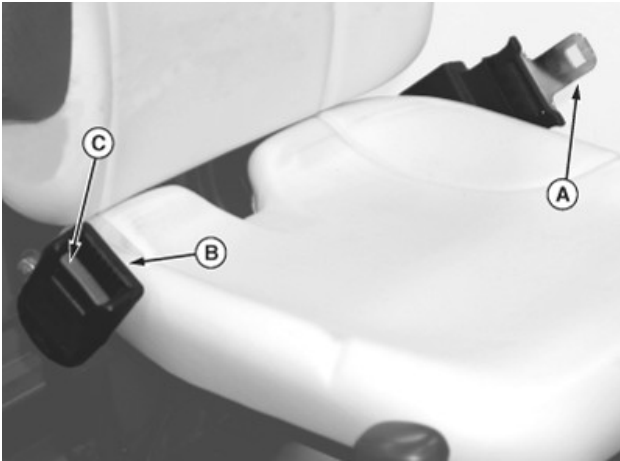

TCAL43315—UN—14MAR13

2. Pull out seat belt buckle (A) and stretch across your lap in one non-stop motion.
3. Insert seat belt buckle into latch (B) until it locks.
4. To release seat belt, press red button (C) until buckle comes out of latch.


OUC1023,000046B-19-29JUN22

Adjusting Steering Column

CAUTION: Avoid Injury! Do not attempt to adjust the steering wheel while the machine is moving. The operator can lose control of the machine.

- Stop the machine before adjusting the steering wheel.
- Lock the steering wheel in position before driving the machine.

1. Stop machine travel.

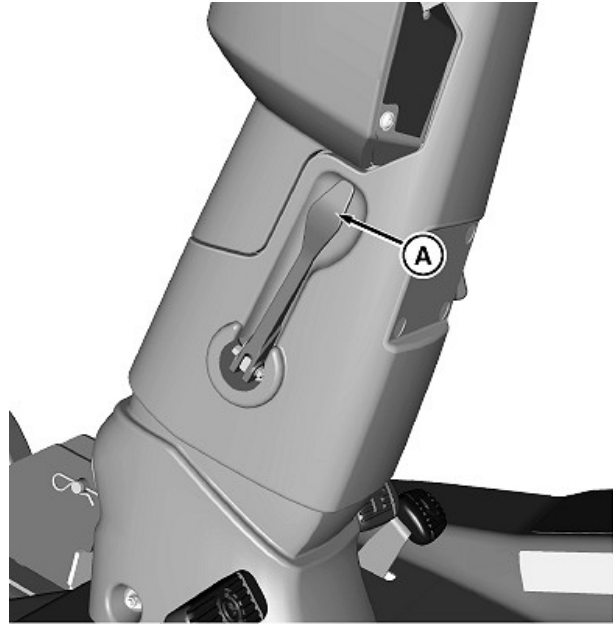

TCT009086—UN—04NOV13

2. Pull steering column tilt lever (A) outward to release steering column.
3. Move steering column forward or rearward to desired position.
4. Push lever back in to lock steering column in place.

OUMX068,0000681-19-20MAR14

Using PTO Switch

The starter will not crank if the PTO is engaged. The PTO will disengage if any of the following conditions exist:

- High engine coolant temperature.
- Low engine oil pressure.
- High hydraulic oil temperature.
- Master brake pedal is depressed.
- To turn PTO off: Push PTO knob on switch down to the "OFF" position.
- To turn PTO on: Pull PTO knob on switch up to the "ON" position.


OUC2005,0000061-19-04NOV13

Using Key Switch

NOTE: Starting motor will engage only if the following conditions exist:

- Master brake pedal is depressed.
- Traction pedals in neutral.

Operating Machine

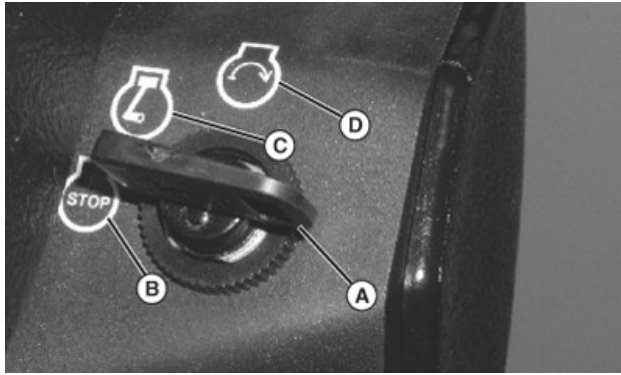

TCAL43316—UN—14MAR13

- To turn ignition off, turn the key (A) to the stop position (B).
- To turn ignition on, turn key to the RUN position (C). The beeper will sound, and the following indicator lamps on instrument panel will light:
 - Engine Oil Pressure Lamp
 - Battery Discharge Lamp
 - Engine Coolant Temperature Lamp
 - Engine Glow Plug Lamp (Diesel Only)
- To start engine, turn key to the START position (D). Once the engine begins to run, the key should return to the RUN position (C).

NOTE: With the key switch in the START position, the following indicator lights on the operator display illuminate:

- Engine Oil Pressure Light
- Engine Coolant Temperature Light
- Hydraulic Oil Temperature Light

OUC1023,000046E-19-16NOV15


Using Throttle Lever

- Pull the throttle lever to the rear for slow idle. Use this position to start engine and maneuver the mower in confined spaces.
- Push throttle lever fully forward to the fast idle position for transporting and mowing.

OUC1023,000046F-19-13MAR13

Using Cab Controls

Using Temperature Controls

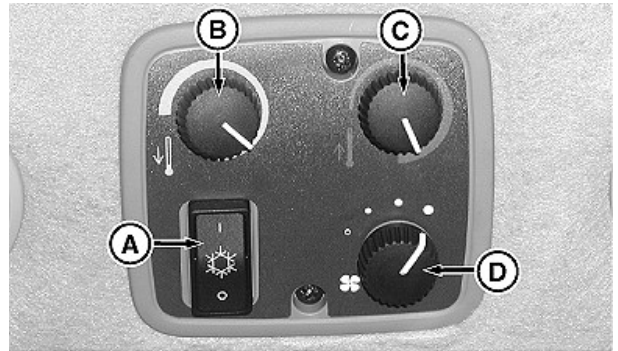

TCT008311—UN—13AUG13

- A—Air Conditioning and Deicing Switch
- B—Air Conditioning Temperature Control Knob
- C—Heater Temperature Control Knob
- D—Blower Speed Control Knob

Air Conditioner and Deicing System

- Push top half of air conditioning and deicing switch to turn system ON. Push bottom half of switch to turn system OFF.


Adjusting Air Conditioning Temperature

- Turn air conditioning temperature control knob clockwise to circulate warmer air through vents. Turn knob counterclockwise to circulate cooler air through vents. The thicker the blue bar is on knob label indicates a cooler temperature setting and a thin bar indicates a less cool setting.

Adjusting Heater Temperature

- Turn heater temperature control knob clockwise to circulate warmer air through vents. Turn knob counterclockwise to circulate cooler air through vents. The thicker the red bar is on knob label indicates a warmer temperature setting and a thin bar indicates a less warm setting.

Adjusting Blower Speed

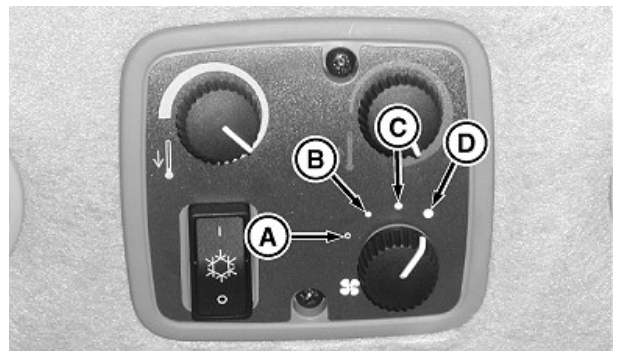

TCT008312—UN—13AUG13

Turn blower speed control knob to desired setting:


- Off (A)

Operating Machine

- Low (B)
- Medium (C)
- High (D)

Using Light Switch

CAUTION: Avoid injury! Do not operate on roads with light switch in the field position. Rear work lights may blind or confuse operators of oncoming vehicles.

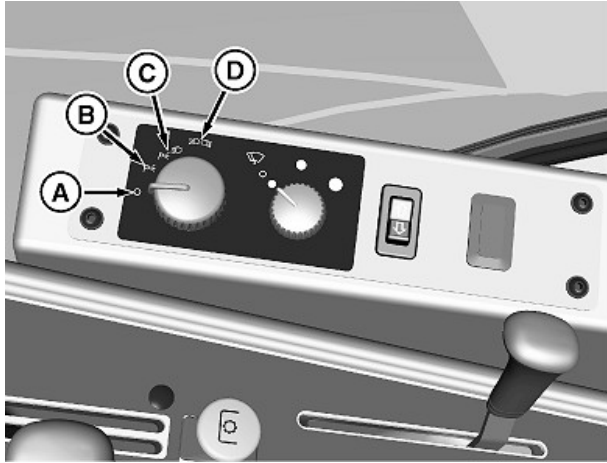


TCT008314—UN—13AUG13

- A—All lights off.
- B—Warning flasher lights and taillights on.
- C—Road Position: headlights, taillights, and warning flasher lights on.
- D—Field Position: headlights and optional working lights on.

Using Dome Light

IMPORTANT: Avoid damage! Before exiting cab, make sure dome light is in OFF position. Failure to do so will cause the battery to lose its charge.

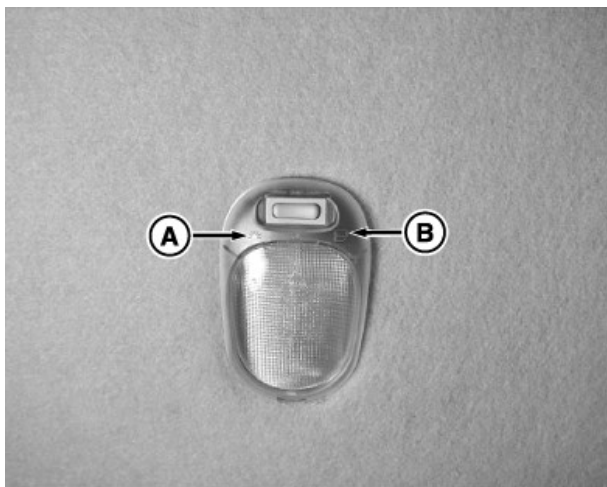

TCT008313—UN—31MAR14

Dome light has two positions:

- ON (A) - Dome light comes on.


- OFF (B) - Dome light does not light.

Using Turn Signal Switch

- Push the left side of the turn signal switch down to signal a left turn.
- Push the right side of the turn signal switch down to signal a right turn.

Using Windshield Wiper

NOTE: The front wiper will return to the park position whenever it is switched off.

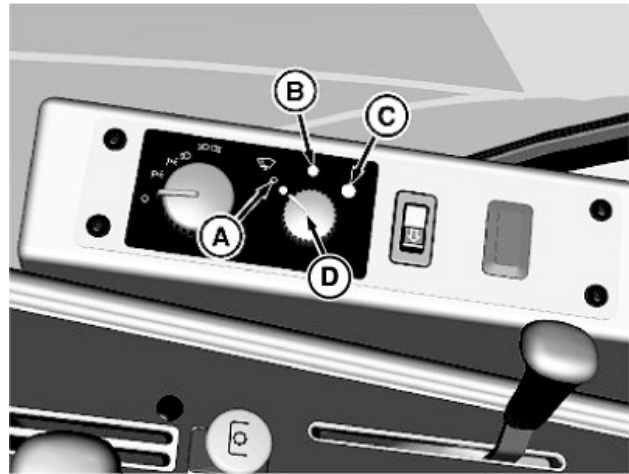

TC102111—UN—24MAY22

The front wiper switch has three positions:

- OFF (A)
- SLOW (B)
- FAST (C)
- Windshield Washer (D) (push down to operate)

OUO2005.0000110-19-24MAY22


Opening Engine Cover

IMPORTANT: Avoid damage! Do not operate machine with engine cover open. Engine cover must be closed for proper engine cooling and exhaust.

1. Park machine safely. (See Parking Safely in the SAFETY section).


NOTE: Some models are equipped with a locking latch. This must be unlocked first.

Operating Machine

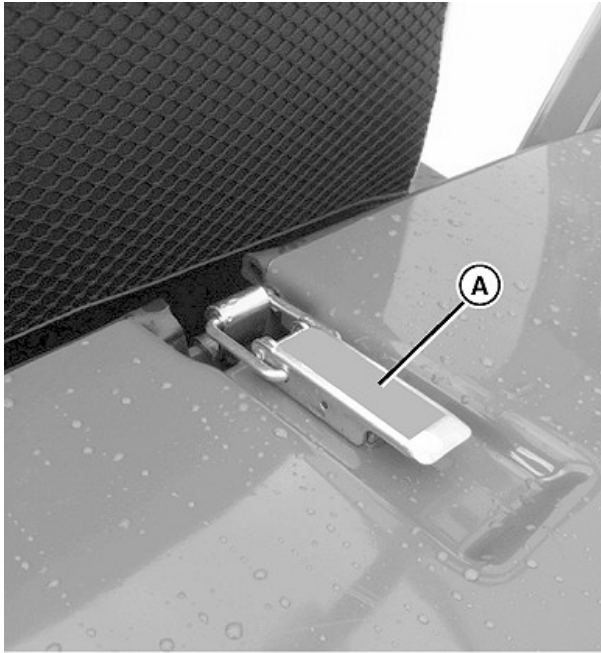

TCT007880—UN—11JUL13

2. Lift latch mechanism (A) and unlatch hood.

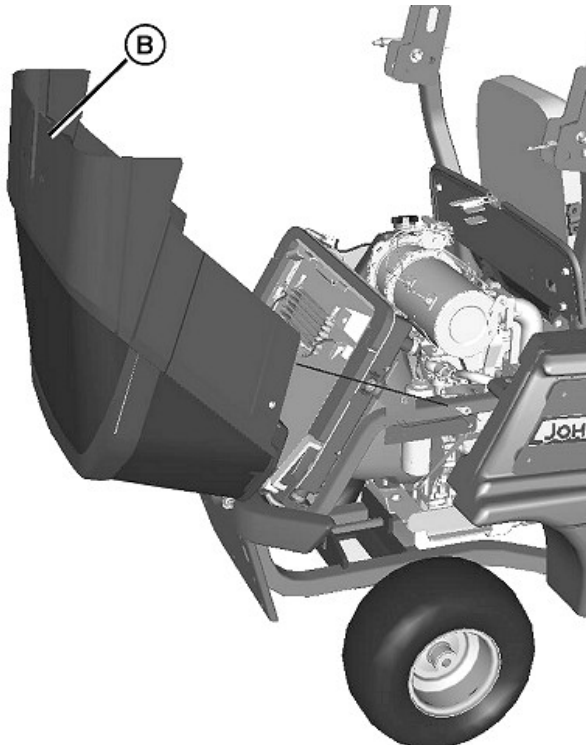


TCT007881—UN—11JUL13

3. Lift hood (B) and place in open position.
4. To close the engine cover, lower it back over the engine compartment.
5. Engage latch hasp with hook and pivot back to secure.
6. To lock the engine cover latch, insert key in slot and turn clockwise (If equipped with optional lock).

OUMX068,000068A-19-07AUG18

Opening Service Hatch

1. Park machine safely. (See Parking Safely in the SAFETY section.)

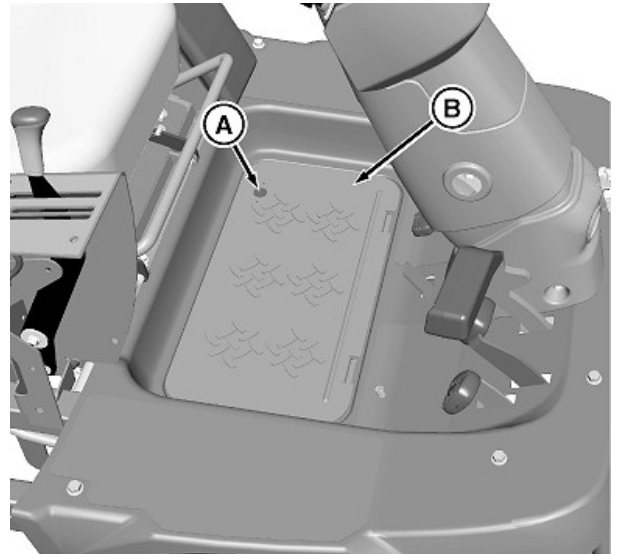

TCT008233—UN—06AUG13

2. Unlock service hatch lock (A) by turning 3/4 turn counterclockwise with a large screwdriver.
3. Lift and remove service hatch (B).

OUC02005,0000203-19-20SEP13

Using Four Wheel Drive (4WD) (1550, 1570, 1575)

CAUTION: To avoid loss of control or damage to turf, do not turn suddenly or at high speeds while machine is in four wheel drive. Do not use four wheel drive any longer than required.

- Pull 4WD control lever rearward to use on-demand four wheel drive. Rear wheels will engage whenever front wheel slip is detected, and will disengage automatically. Rear wheels are not driven in reverse.
- Push 4WD lever forward to engage full time four wheel drive. Four wheel drive is locked in for forward and reverse travel.
- Traveling forward (slowly) while pushing the 4WD lever forward helps to engage the 4WD on demand.
- Traveling rearward (slowly) while pulling the 4WD lever rearward helps to disengage the 4WD lock.

OUC02005,0000065-19-09NOV15

Operating Machine

Using Four Wheel Drive (4WD) (1580 and 1585)

CAUTION: To avoid loss of control or damage to turf, do not turn suddenly or at high speeds while machine is in four wheel drive. Do not use four wheel drive any longer than required.

- Move the 4WD control lever to the center position to use on-demand (automatic) four wheel drive. Rear wheels will engage whenever front wheel slip is detected, and will disengage automatically or when machine is reversed.
- Pull the 4WD control lever rearward to disengage 4WD
- Push 4WD control lever forward to engage full time 4WD. Four wheel drive is locked in for forward and reverse travel.
- Traveling forward (slowly) while pushing the 4WD lever forward helps to engage the 4WD on demand.
- Traveling rearward (slowly) while pulling the 4WD lever backward helps to disengage the 4WD lock.


OUO2005,0000066-19-09NOV15

Using Two-Speed Transaxle (1580 and 1585)

- Push the two-speed transaxle shift lever up to the highest position to shift the transaxle into the high gear range. This is used to transport machine or move quickly in light duty applications.
- Place the two-speed transaxle shift lever in the centered position to shift transaxle into neutral. This position is used to push or tow the machine.
- Pull the two-speed transaxle shift lever down to the lowest position to shift the transaxle into the low gear range. This is used for climbing hills and powering through deep grass or materials.
- Slowly moving the machine with no load while changing gear range helps to engage the gears.

OUO2005,0000067-19-04NOV13

Using Operator Display

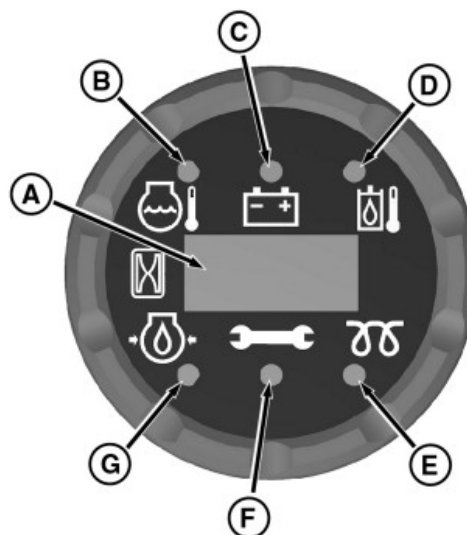

TCT007012—UN—18MAR13

A—Hour meter will display number of hours engine has run. Electronic hour meters can be read with key switch in ON position. Use the hour meter and the service interval chart to determine when service procedures need to be performed on the machine and mower deck.

B—Engine Coolant Temperature Indicator will glow if engine temperature becomes excessive. Stop engine and determine cause.

C—Battery Discharge Indicator will glow when alternator is not producing adequate current. Stop engine and determine cause. Indicator light will also flash a diagnostic code to help the operator identify operational and electrical problems. For codes, see **Sit-On-Seat Diagnostics** in the Operating section of this manual.

D—Hydraulic Oil Temperature Indicator will glow when hydraulic oil temperature is high. Stop all hydraulic functions immediately. Let hydraulic oil temperature cool by allowing engine to idle under a no-load situation. This keeps the oil flowing through the oil cooler and cools the oil. Check oil level and make sure oil cooler coils are clean. Continued operation may cause higher temperatures, resulting in damage.

E—Engine Air Preheat Indicator (Diesel models) will glow when key switch is turned to the run position. The light will no longer glow after approximately three to fifteen seconds.

F—Service Indicator is not applicable on this machine.

G—Engine Oil Pressure Indicator will glow when engine oil pressure is low. If lamp glows when engine is running, stop engine immediately. See your John Deere distributor.

OUMX068,0000690-19-26MAR14

Operating Machine

Using Hydrostatic Pedals

Using the Forward Pedal

1. Push the forward pedal down slightly to begin forward motion. Push the pedal down farther to travel faster.
2. Release the pedal to return to neutral and stop the mower.

Using the Reverse Pedal

CAUTION: Rotating blades are dangerous. Children or bystanders may be injured by runover and rotating blades.

Before backing up, carefully check the area around the machine.

1. Push the reverse pedal down slightly to begin reverse travel. Push the pedal down farther to travel faster.
2. Release pedal to return to neutral and stop the machine.

OUO1023,0000478-19-13MAR13

Using Brakes

Using Master Brake Pedal

NOTE: When the master brake is engaged, the PTO is disengaged.

Push the master brake pedal down to hold the machine stationary on a slope, or for an emergency stop. PTO will disengage when master brake pedal is depressed, and PTO switch will have to be recycled once brake is released to restart PTO.

Using Park Brake

1. Lock the park brake by pulling the park brake lock lever (B) upwards and fully depressing the master brake pedal (A). The pedal should stay locked down.
2. Unlock the park brake by depressing the master brake pedal and pushing the park brake lock lever down. Release the master brake pedal.

Using Turn-Brakes

The turn-brakes are used to change direction quickly within the width of the machine. Avoid locking the tire with turn-brake in areas where turf damage is not acceptable. Turn-brakes will not turn machine if traction assist is engaged.

1. Depress the right turn-brake pedal to slow or stop the right front wheel, while power is applied to the left wheel. The machine will turn to the right. Release the turn-brake pedal to resume driving in a straight line.

2. Depress the left turn-brake pedal to turn to the left.

OUO1023,0000479-19-13MAR13

Using Traction Assist Pedal

The traction assist lock is used to help improve traction on slopes and on slippery surfaces. The front drive axle will lock so that the front wheels turn together.

IMPORTANT: Using the traction assist function improperly can damage the transaxle:

- Reduce speed and allow drive wheels to rotate at same speed before engaging or disengaging traction assist.
- Disengage traction assist when driving on dry asphalt or concrete.
- Use traction assist only when necessary for improved ground engagement.

To Lock the Traction Assist

Push the traction assist lock pedal down with the left foot and hold it.


To Unlock the Traction Assist

1. Release the pedal.
2. The traction assist will stay locked as long as wheel rotation is unequal. Once the load on the transmission is equalized and reduced, the traction assist lock will disengage automatically.

OUO1023,000047A-19-13MAR13

Using Fuel Shutoff Valve

NOTE: Close fuel shutoff valve when storing machine or when transporting on a trailer.

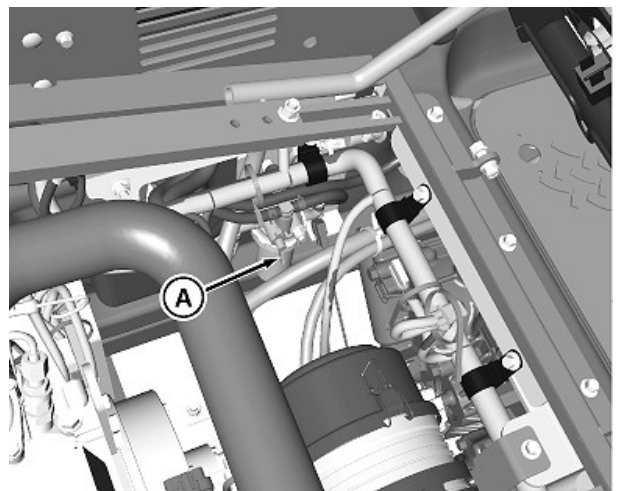

TCT008008—UN—29JUL13

Picture Note: 1550 model is shown.

Operating Machine

Open the engine cover. Locate the fuel shutoff valve (A) on the left side of the engine.


- To open the fuel shutoff valve:
 - Turn the handle so the pointer is facing down.
- To close the fuel shutoff valve:
 - Turn the handle so the pointer is facing rearward.

OUMX068,0000692-19-26MAR14

Raising and Lowering ROPS


Raising ROPS

1. Park machine safely. (See Parking Safely in the SAFETY section.)

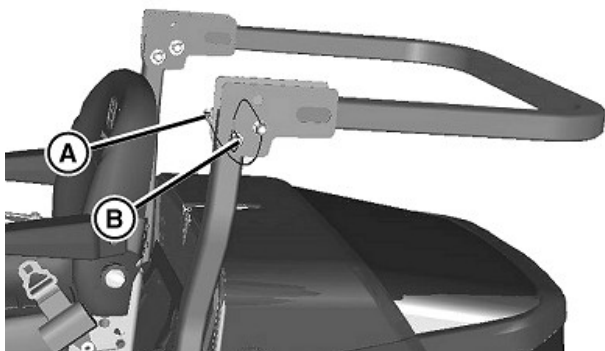

TCT007882—UN—11JUL13

2. Remove spring pin (A) from drilled pin (B) on left and right side of ROPS.
3. Remove drilled pin from left and right side of ROPS.

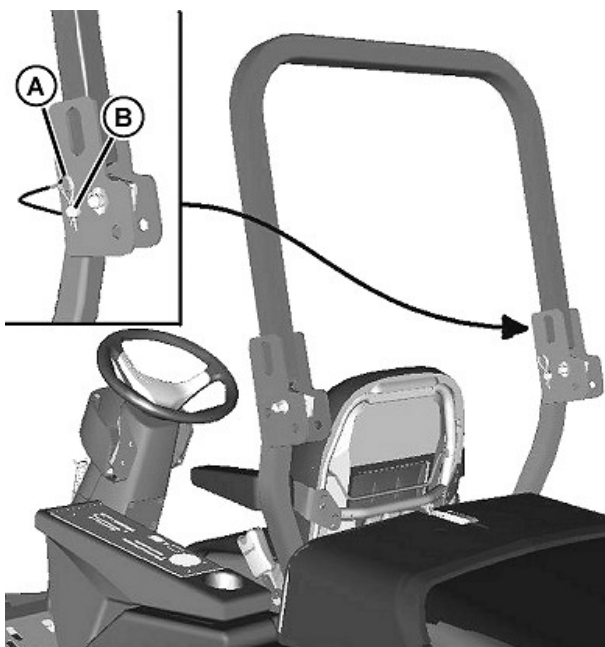

TCT007883—UN—01NOV13

4. Push ROPS into upright position.

5. Install drilled pin (B) into holes on left and right side of ROPS, and secure in place with spring pins (A).

Lowering ROPS

CAUTION: Always wear seat belt when operating machine with folding Roll-Over Protective Structure (ROPS) in upright position. Do not jump from machine if machine tips.

If ROPS must be folded to operate in a low clearance area, do not use seat belt. Raise ROPS and use seat belt as soon as conditions permit.

1. Park machine safely. (See Parking Safely in the SAFETY section).
2. Remove spring pin (A) from drilled pin (B) on left and right side of ROPS.
3. Remove drilled pin from left and right side of ROPS.
4. Pull ROPS rearward to lower.
5. Install drilled pins and spring pins back into hole in ROPS to secure in place.

OUC02005,000006C-19-04NOV13

Raising and Lowering the Attachment

CAUTION: Do not raise the attachment on slopes or when traveling at high speeds, as the machine could become unstable. Avoid hard braking with attachment raised.

The PTO will continue to run after the attachment is raised. Turn off PTO before raising attachment.

The attachment will lower when the lift lever is pushed forward, even when the engine is off and operator is not on the seat. Never operate controls while not on seat. Check that the area under the attachment is clear before lowering.

Turn off PTO. Raising an attachment will not stop the PTO; the attachment continues to run in the raised position.

To Raise Attachment

- Pull lift lever rearward. Attachment will rise up until lever is released, or attachment reaches top of travel, whichever occurs first.

To Lower Attachment

- Push lift lever forward. Attachment will lower until lever is released, or attachment reaches the ground, whichever occurs first.

Operating Machine

To Float Attachment

- Push lift lever forward until it latches into float position. Attachment will rise and lower, as needed, to follow contour of ground.

OUO1023,000047E-19-04NOV13

Using Auxiliary Hydraulic Control Levers

1. Move hydraulic control levers back and forth several times to relieve pressure in hydraulic system.
2. Remove dust caps from couplers.
3. Follow instructions in attachment Operator's Manual to connect attachment hydraulic hoses and operate attachment.

Hydraulic control lever functions are determined by attachment:

- Pull levers rearward to pressurize the male coupler line and perform an attachment function.
- Pull or push levers to middle position to neutralize pressure in both coupler lines.
- Push levers forward to pressurize the female coupler line and perform an attachment function.

MX00654,00001F5-19-18DEC14

Starting Engine

 **CAUTION: Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.**

- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.
- Connect a pipe extension to the engine exhaust pipe to direct the exhaust fumes out of the area.
- Allow fresh outside air into the work area to clear the exhaust fumes out.

NOTE: The engine will not start unless the PTO is off, and the master brake pedal is depressed.

1. Open the fuel shutoff valve.
2. Sit on the operator's seat. (Seat should spring down slightly so seat switch is actuated.)
3. Put on seat belt (if ROPS is not in folded position).
4. Depress master brake pedal if park brake is not locked.
5. Push down the PTO knob to the off position.
6. Pull the throttle lever back to the slow idle position.

7. Turn the key to the on position.
8. 1550 Only: Wait for the engine preheat light to turn off.

IMPORTANT: Do not overheat starter. Do not operate starter more than ten seconds at a time. Wait two minutes before trying again if engine does not start.

9. Turn the key to the start position for no longer than ten seconds. Release key to run position after engine starts.
 - If starter engages, but engine does not start, wait two minutes and try again for no longer than ten seconds.

IMPORTANT: Do not idle engine for long periods of time. Excessive idling can cause engine overheating, carbon build-up, and poor performance.

10. Let engine run at half-speed position for two minutes to allow it to warm up before operating machine.

OUO2005,000006D-19-04NOV13

Stopping Engine

1. Push PTO switch down to the OFF position.
2. Move throttle lever back to the SLOW IDLE position. Let engine run at slow idle a few seconds.
3. Lock the park brake.
4. Lower attachment to the ground.
5. Turn the key switch to STOP position.
6. Remove key.

OUO2005,000006E-19-29JUL13

Transporting Machine

1. Turn off the PTO switch.
2. Lower the attachment to the ground.
3. If necessary to transport with the attachment lowered, be certain attachment is latched into float position. Keep transport speeds low.
4. If necessary to transport with the attachment raised, avoid hard braking and slopes, and keep transport speeds low.

OUO2005,000006F-19-04NOV13

Operating Machine

Moving Machine with Engine Off

⚠ CAUTION: When the bypass valve is open, the machine will have unrestricted motion.

- Do not open the bypass valve when the machine is stopped on an incline to prevent it from going downhill out of control.


IMPORTANT: Transmission damage may occur if the machine is towed or moved incorrectly:

- Move machine by hand only.
- Do not use another vehicle to move machine.
- Do not tow machine.

Turn key switch to OFF position.

1550, 1570, 1575

1. Push 4WD lever into FORWARD position.

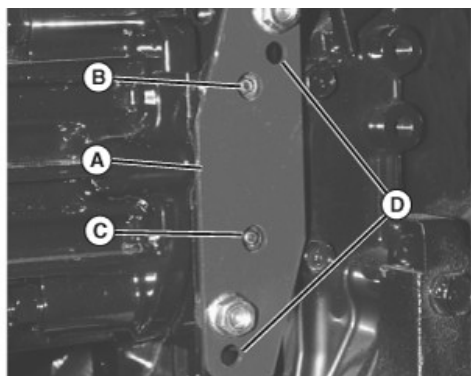

TCAL43326—UN—14MAR13

2. Open service hatch and locate the red plate (A) on the right side of the transaxle housing.
3. Lock the park brake.
 - For pushing machine short distances in the forward direction, push in and release the top relief valve (B) with a small tool.
 - For pushing machine short distances in the reverse direction, push in and release the bottom relief valve (C) with a small tool.
 - For pushing machine longer distances in forward and reverse, remove the two M8 flange head nuts and install plate to lower set of drilled holes (D). Install nuts.
4. Unlock the park brake.
5. Push machine slowly by hand, or using winch, using brakes when necessary.
6. Do not use another vehicle to push or tow mower at high speed.
7. If red plate was moved to the lower set of holes, move it back to original position.

1580, 1585

1. Push 4WD lever down into 2WD position.
2. Place two-speed transaxle shift lever to centered neutral position.
3. Unlock the park brake.
4. Push machine slowly by hand or using winch, using brakes when necessary.

OUC2005,0000070-19-29JUL13

Transporting Machine on Trailer

⚠ CAUTION: Use extra care when loading or unloading the machine onto a trailer or truck.

- Park trailer on a level surface.
- Use of a trailer with sides is recommended.
- Keep wheels away from drop-offs and edges.
- Back slowly and in a straight line.
- Close fuel shut-off valve, if your machine is equipped.

IMPORTANT: Transporting a machine on a trailer or on a truck bed at high speeds can result in hood or engine cover raising and possibly coming off machine if not secured.


- Position machine on trailer so hood or engine cover opens from rear of trailer to prevent wind from blowing hood or cover open.
- Secure hood or engine cover with existing machine locks or latches.
- Secure hood or engine cover with tie down straps if no locks or latches exist.

Be sure trailer has all the necessary lights and signs required by law.

1. Stop PTO.
2. Drive onto heavy-duty trailer with attachment raised.
3. Lower attachment down to platform of trailer.
4. Stop engine, remove key, lock park brake.
5. Close the fuel shutoff valve (diesel model only).
6. Fasten machine to trailer with heavy-duty straps, chains, or cables.

NOTE: Both front and rear straps must be directed down and outward from machine.


Operating Machine

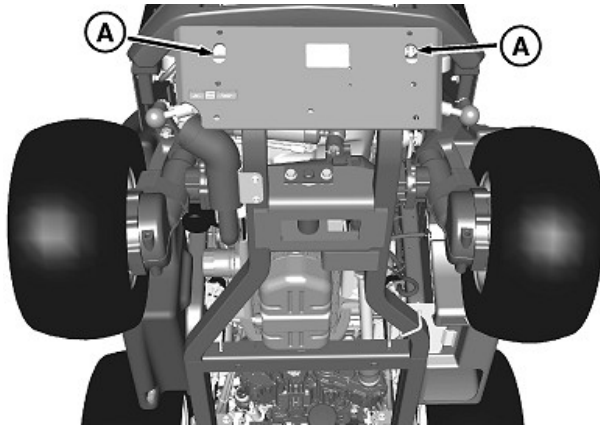

TCT008010—UN—11DEC13

7. Fasten rear straps:

- No Weight Kit Installed: Fasten rear straps to vertical slots (A) in rear panel.
- Weight Kit Installed (Not Shown): Fasten rear straps to weight kit bracket.

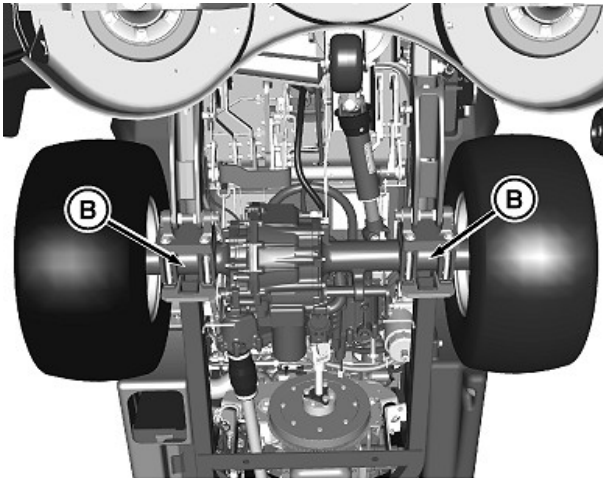


TCT008011—UN—11DEC13

8. Fasten front straps around front transaxle (B).

9. Check that engine cover is closed and latched. Fold ROPS to avoid overhead clearance problems while on trailer.

OUC0005,0000071-19-11DEC13

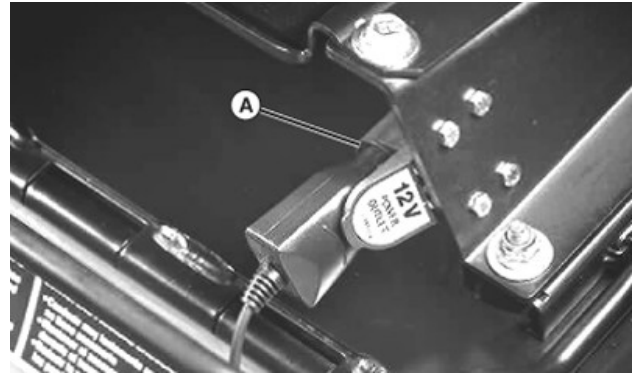

TCAL43327—UN—14MAR13

The power outlet provides 12 volts direct current (VDC) to power accessories. It is fused at 10 amps and powered regardless of ignition switch position. The outlet has a weather resistant spring-loaded cover. Always unplug devices and close cover before storing machine.

OUC01023,0000484-19-13MAR13

Using Power Outlet

⚠ CAUTION: Do not use personal electronics or wear headphones while operating machine. Keep electrical cords from hanging into operator's station and sides of machine.

Replacement Parts

Service Literature

If you would like a copy of the Parts Catalog or Technical Manual for this machine call:

- **U.S. & Canada:** 1-800-522-7448.
- **All Other Regions:** Your John Deere dealer.

OUO1023,0000485-19-13MAR13

Parts

We recommend John Deere quality parts and lubricants, available at your John Deere dealer.

Part numbers may change, use part numbers listed below when you order. If a number changes, your dealer will have the latest number.

When you order parts, your John Deere dealer needs the serial number or product identification number (PIN) for your machine or attachment. These are the numbers that you recorded in the Product Identification section of this manual.

Order Service Parts Online

Visit <http://JDParts.deere.com> for your Internet connection to parts ordering and information.

OUO1023,0000486-19-13MAR13

Service Intervals

Servicing Your Machine

IMPORTANT: Avoid damage! Operating in extreme conditions may require more frequent service intervals:

- Engine components may become dirty or plugged when operating in extreme heat, dust or other severe conditions.
- Engine oil can degrade if machine is operated constantly at slow or low engine speeds or for frequent short periods of time.
- High-pressure washer can cause damage to machine components.

Please use the following timetables to perform routine maintenance on your machine.

Park the vehicle safely. See Park Safely in the SAFETY Section.

OUO2005,0000291-19-08FEB21

Break-In

After First 10 Hours of Operation

- Check and tighten wheel hardware.

After First 50 Hours of Operation

NOTE: The machine factory default timer alert for engine and hydraulic oil is set for 50 hours. When the 50 hour interval expires, the timer needs to be reset to the normal interval of 250 hours for engine oil and hydraulic oil. (See Using Service Timers)

- Change engine oil and filter.
- Change transaxle oil and filter.
- Reset service timer interval.

OUO2005,0000363-19-13MAR20

Every 50 Hours or Yearly

- Clean cabin air filter (cab units).
- Lubricate deck components.
- Lubricate cutting unit or mower lift components.
- Lubricate drive shafts.
- Clean battery terminals and check battery fluid level (if applicable).
- Lubricate rear axle components.
- Lubricate steering cylinder.
- Check mower deck belts.
- 4WD Model: Check rear axle oil level.
- Check and tighten wheel hardware.

OUO2005,0000364-19-02NOV15

Every 100 Hours

- Lubricate rear axle pivot.
- Lubricate hydrostatic linkage.
- Lubricate turn brake pedals.

OUO2005,0000365-19-07MAR14

Every 250 Hours

- Change engine oil and filter.
- Change transaxle oil and filter.

OUO2005,0000366-19-07MAR14

Every 500 Hours

- Check torque on ROPS hardware.
- Replace fuel filter.
- 4WD Model: Change rear axle oil.
- Check toe-in adjustment on rear axle.
- Inspect rear axle pivot pin for wear or damage.

OUO2005,0000367-19-17APR15

Every 1000 Hours

- Check valve clearance.

OUO2005,0000368-19-07MAR14

Every 1500 Hours

- Check coolant freeze point and clarity.
- Check fuel injectors.

OUO2005,0000369-19-07MAR14

Every 2000 Hours or Two Years

- Change engine coolant and thermostat.

OUO2005,000036A-19-06MAR14

Service Intervals After Converting to BioDiesel Fuel

IMPORTANT: Only use biodiesel fuel that complies with EN14214 (European Standards) or ASTM D-7467 (USA Standards) in B6 through B20 blends.

Biodiesel fuel must be used within three months of the date of production by the fuel supplier.

Service Intervals

NOTE: The use of John Deere Biodiesel Fuel Conditioner is recommended whenever a biodiesel blended fuel is used.

Use the service procedures below at the intervals listed for machines converted to use biodiesel B6-B20 fuel blends:

Daily

- Check and drain water separator as required.
- Check engine oil. If oil level rises, change engine oil immediately.

Engine Oil and Filter Change Interval

- Change at 50% of Service Interval listed in Operator Manuals for regular diesel fuel usage.

Fuel Filter Change Interval

- Change at 50% of Service Interval listed in Operator Manuals for regular diesel fuel usage.

Every 1000 Hours

- Clean, inspect and adjust fuel injectors.

OUO1023,0000493-19-13MAR13

Service Lubrication

Grease

IMPORTANT: Use recommended John Deere greases to avoid component failure and premature wear.

The recommended John Deere greases are effective within an average air temperature range of -29 to 135 degrees C (-20 to 275 degrees F).

If operating outside that temperature range, contact your Servicing dealer for a special-use grease.

The following greases are preferred:

High Speed Applications

Use John Deere Multi-Purpose SD Polyurea Grease or John Deere Multi-Purpose HD Lithium Complex Grease for the following high speed applications:

- Engine drive shaft (1 place).
- PTO shaft (3 places).

Other Applications

Use John Deere Multi-Purpose HD Lithium Complex Grease or John Deere Moly High Temperature EP Grease for all other applications.

If not using any of the preferred greases, be sure to use a general purpose grease with a NLGI grade No. 2 rating. Avoid use of John Deere Moly High Temperature EP Grease on high speed applications such as mower spindles and the rear axle.


Operating in extremely wet conditions may require use of special purpose greases. See your John Deere dealer.

Wipe off all grease fittings before and after lubrication to prevent contamination.

OUO1023,0000494-19-13MAR13

Lubricating Rear Axle Pivot Pin

1. Park machine safely. (See Parking Safely in the SAFETY Section.)

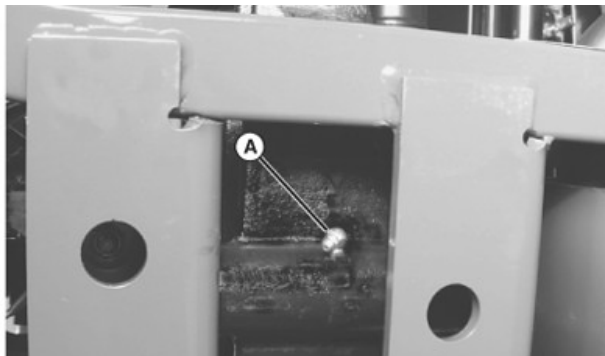


TCAL43328—UN—14MAR13

2. Locate rear axle pivot pin grease fitting (A) under rear of machine between frame members on bottom of rear axle.
3. Lubricate grease fitting with John Deere Multi-Purpose HD Lithium Complex Grease or John Deere Moly High Temperature EP Grease until grease can be seen seeping out at front and rear of axle casting.

OUO1023,0000495-19-13MAR13

Lubricating Rear Tie Rod

1. Park machine safely. (See Parking Safely in the SAFETY Section.)

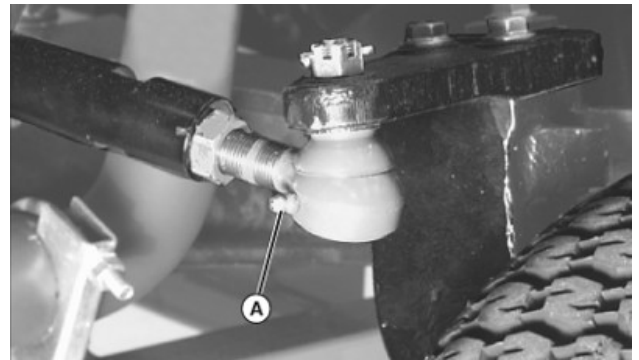

TCAL43329—UN—14MAR13

2. Lubricate left and right side of the rear tie rod (A) with John Deere Multi-Purpose HD Lithium Complex Grease or John Deere Moly High Temperature EP Grease.

OUO1023,0000496-19-13MAR13

Lubricating Hydraulic Steering Cylinder

1. Park machine safely. (See Parking Safely in the SAFETY Section.)



TCAL43330—UN—14MAR13


2. Lubricate hydraulic steering cylinder ends (A) at rear of machine with John Deere Multi-Purpose HD Lithium Complex Grease or John Deere Moly High Temperature EP Grease.

OUO1023,0000497-19-13MAR13

Service Lubrication

Lubricating Hydrostatic Linkage

1. Park machine safely. (See Parking Safely in the SAFETY Section.)

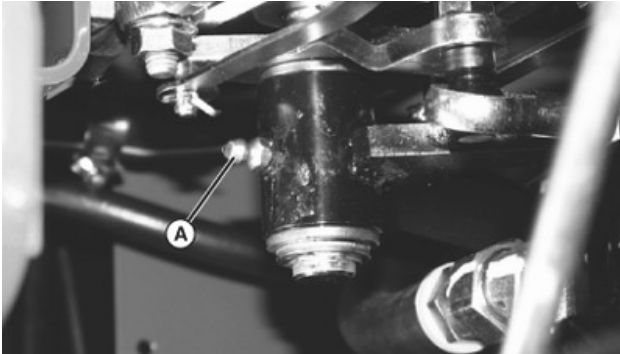


TCAL43331—UN—14MAR13

2. Locate hydrostatic linkage grease fitting (A) under service hatch in operator's platform, or to the rear of the right front tire.
3. Lubricate linkage with John Deere Multi-Purpose HD Lithium Complex Grease or John Deere Moly High Temperature EP Grease.

OUO1023,0000498-19-13MAR13

Lubricating Engine Drive Shaft

1. Park machine safely. (See Parking Safely in the SAFETY Section.)

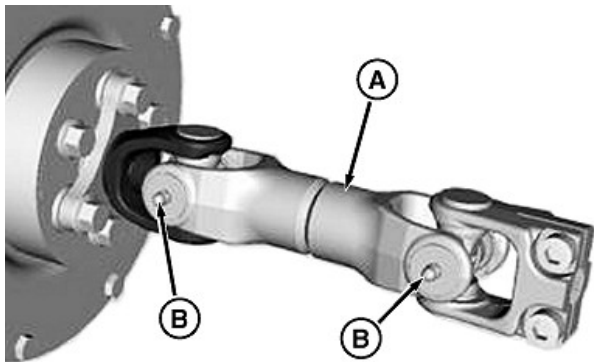


TCT010615—UN—06MAR14

2. Lubricate front universal joint of engine drive shaft (A) with John Deere Multi-Purpose SD Polyurea Grease or John Deere Multi-Purpose HD Lithium Complex Grease.
3. Pump grease into two grease fittings (B) until it can be seen seeping from all four bearing caps on the inside of each universal joint.


OUO2005,000036B-19-06MAR14

Lubricating PTO Shaft

1. Park machine safely. (See Parking Safely in the SAFETY Section.)

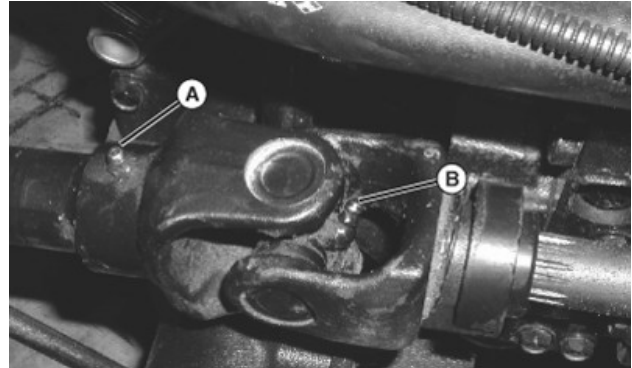

TCAL43333—UN—14MAR13

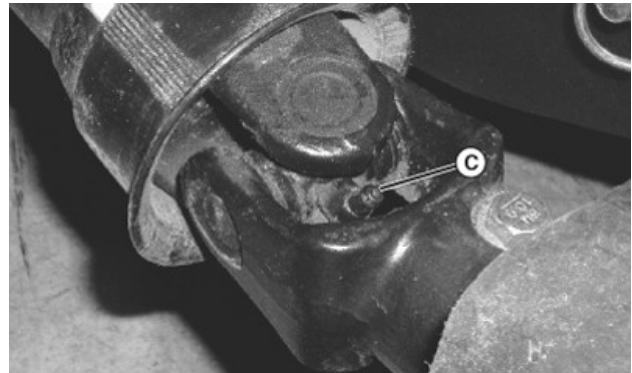


TCAL43334—UN—14MAR13

2. Lubricate grease fittings (A-C) with John Deere Multi-Purpose SD Polyurea Grease or John Deere Multi-Purpose HD Lithium Complex Grease.
3. Pump grease into grease fittings (B and C) until it can be seen seeping from all four bearing caps on the inside of each universal joint.

OUO1023,000049A-19-14MAR13

Lubricating Steering Spindles (2WD Only)

1. Park machine safely. (See Parking Safely in the SAFETY Section.)

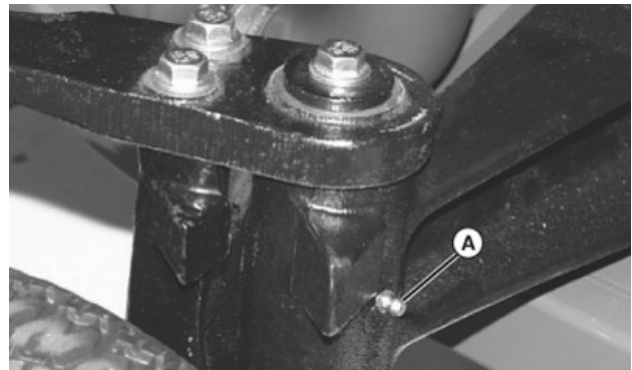

TCAL43335—UN—14MAR13

2. Locate steering spindle grease fitting (A) on front

Service Lubrication


side of rear axle steering spindles (two wheel drive models only).

3. Lubricate linkage with John Deere Multi-Purpose HD Lithium Complex Grease or John Deere Moly High Temperature EP Grease.
4. Repeat for steering spindle grease fitting on other side of machine.

OUO1023,000049B-19-13MAR13

Lubricating Brake Pedal Linkage

1. Park machine safely. (See Parking Safely in the SAFETY section.)

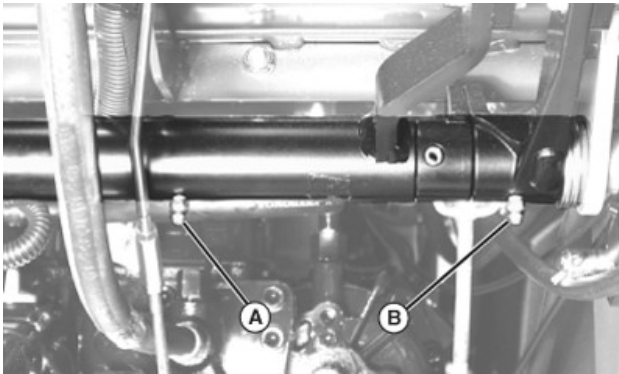


TCAL43336—UN—14MAR13

2. Locate brake pedal linkage grease fittings (A and B) under the front left of the operator's platform.
3. Lubricate linkage with John Deere Multi-Purpose HD Lithium Complex Grease or John Deere Moly High Temperature EP Grease.

OUO1023,000049C-19-13MAR13

Lubricating Steering Column Tilt-Lock

1. Park machine safely. (See Parking Machine Safely in the SAFETY section.)

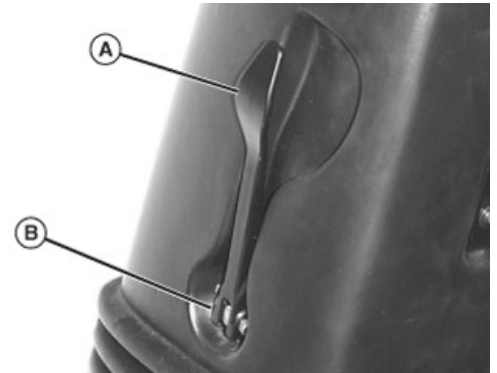


TCAL43338—UN—14MAR13

2. Pull lever (A) outward to release steering column.
3. Lubricate cam mechanism (B) using a dry lubricant such as John Deere Super Lube™.

OUO1023,000049E-19-13MAR13

Lubricating Operator Seat Slides

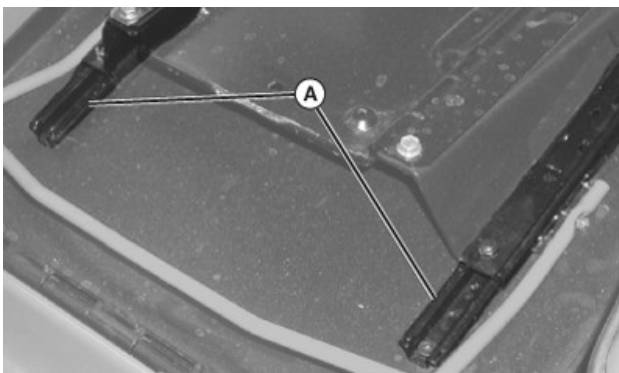

TCAL43337—UN—14MAR13

1. Lubricate operator seat slides (A) using a dry, teflon lubricant, such as John Deere Super Lube.
2. Spray seat slides while moving seat forward and back.

OUO1023,000049D-19-01APR15

Service Engine

Avoid Fumes

CAUTION: Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.

- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.
- Connect a pipe extension to the engine exhaust pipe to direct the exhaust fumes out of the area.
- Allow fresh outside air into the work area to clear the exhaust fumes out.

OUO1023,000049F-19-13MAR13

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

MX00654,0000026-19-30APR14


Raising and Lowering the Seat Platform

Raising the Seat Platform

1. Park machine safely. (See Parking Safely in the SAFETY section.)

CAUTION: Fingers and hands can be pinched or crushed. Be aware of potential pinch points and keep hands away.

Engine Oil

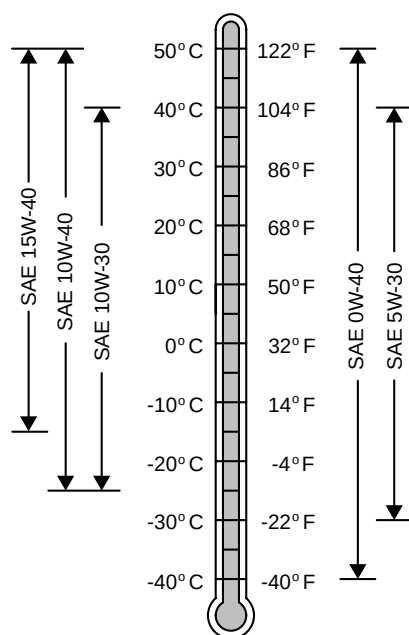

TS1691—UN—18JUL07

Oil Viscosities for Air Temperature Ranges


Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following John Deere oils are preferred:

- PLUS-50™ II
- TORQ-GARD SUPREME™

Other oils may be used if above John Deere oils are not available, provided they meet the following specification:

- API Service Classification CJ-4
- ACEA Specification E6 or E9
- JASO Specification DH-2

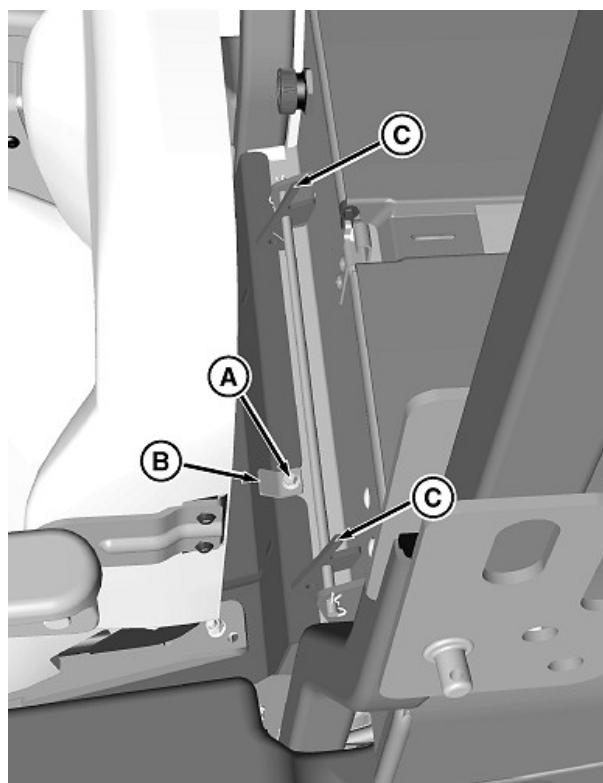


TCT009090—UN—05NOV13

2. Remove screw (A) and lock plate (B).
3. Pull forward on the release lever (C), while pulling forward on the backrest of the operator's seat.
 - The seat platform will rise until the gas strut extends and latches in the open position.

Service Engine

Lowering the Seat Platform

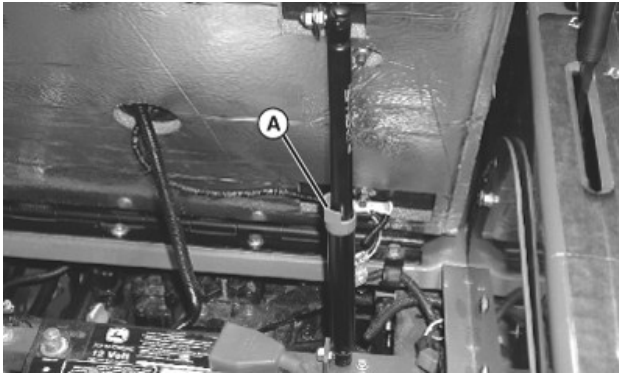

TCAL43343—UN—14MAR13

1. Push in the lock lever (A) on the gas strut.
2. Pull rearward on the seat backrest until the seat platform lowers and latches.
3. Install lock plate and screw.

OUC2005,00002A1-19-05NOV13


Checking Engine Oil Level

IMPORTANT: Avoid damage! Avoid dirt and other contaminants from entering the oil dipstick tube location. Clean area around dipstick before removing.

Failure to check the oil level regularly could lead to serious engine problems if oil level is low:


- Check oil level before operating.
- Check oil level when the engine is cold and not running.
- Keep level between the full and the add marks.
- Shut off engine before adding oil.
- Check oil level twice a day if you run engine over 4 hours a day.

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Tilt operator's seat platform forward.

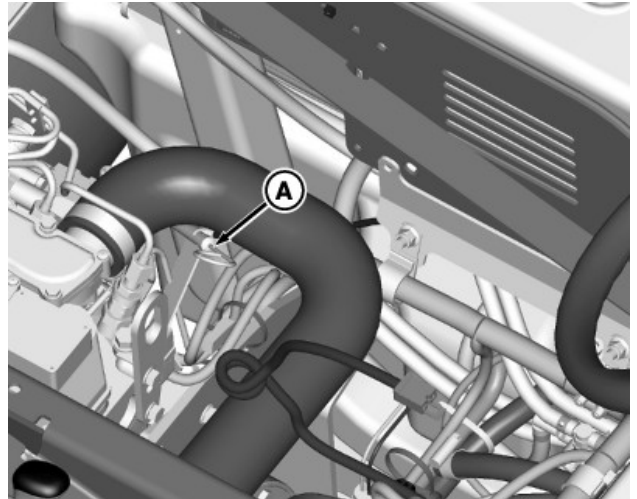


TCT010630—UN—21MAR14

Picture Note: Model 1550 shown.

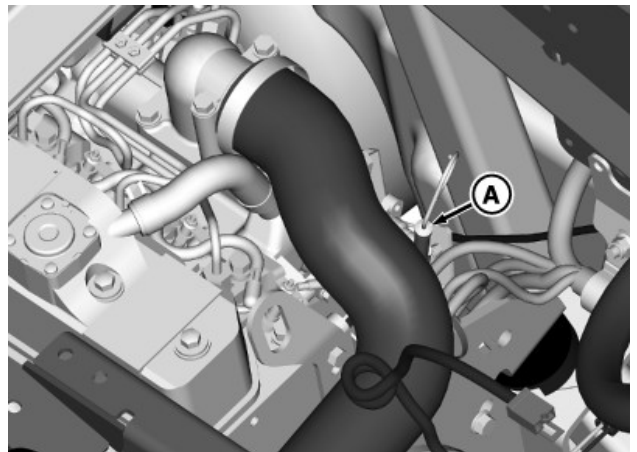

TCT010753—UN—27MAR14

Picture Note: Model 1570, 1575 shown.

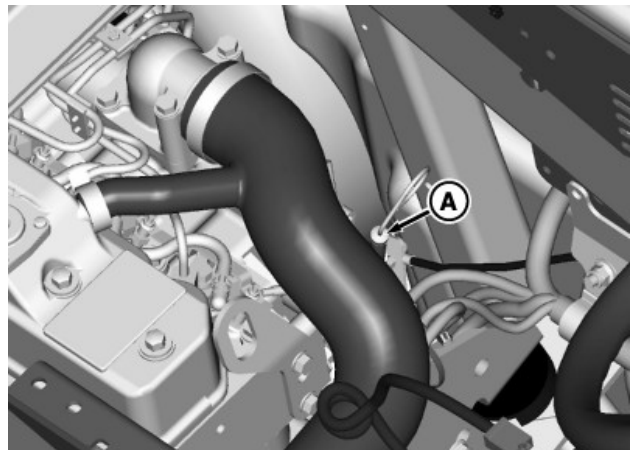


TCT010754—UN—27MAR14

Picture Note: Model 1580, 1585 shown.

3. Remove dipstick (A) located on the left side of the engine under the seat. Wipe dipstick with a clean cloth.

Service Engine

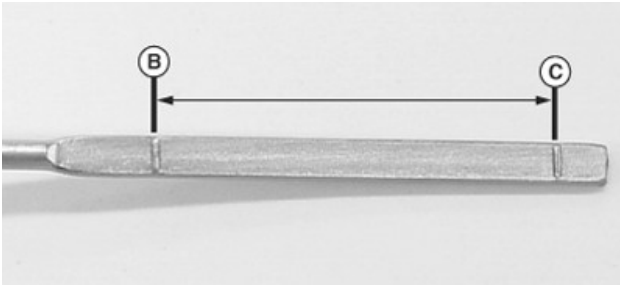


TCAL43345—UN—14MAR13

4. Install dipstick, then remove again. Check oil level. Oil should be between levels (B) and (C) on the dipstick.
 - If oil is low, add oil to bring oil level no higher than level (B) on the dipstick.
 - If oil is above level (B) on the dipstick, drain to proper level.
5. Install dipstick.
6. Lower operator's seat platform.

OUMX068,0000693-19-27MAR14

Changing Engine Oil and Filter

1. Run engine to warm oil.
2. Park machine safely. (See Parking Safely in the SAFETY section.)
3. Open engine cover and seat platform.
4. Place a drain pan under the oil drain location.

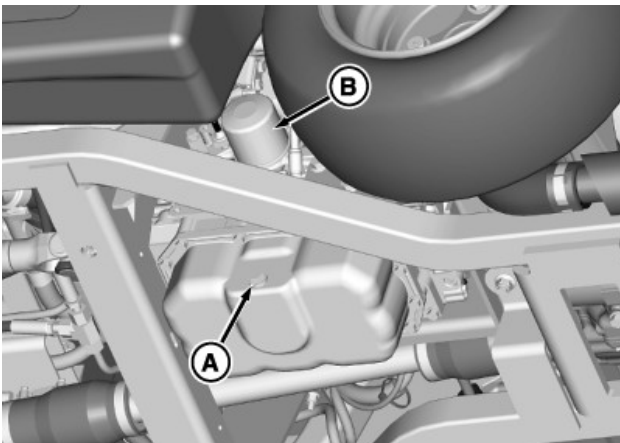


TCT010631—UN—21MAR14

Picture Note: Model 1550 is shown, other models are similar.

5. Remove drain plug (A) located under the engine.
6. Remove oil filter (B) located on the lower left side of the engine. Turn filter counterclockwise to remove.
7. Clean filter mounting surface on engine with a clean cloth.

8. Apply a film of clean engine oil on gasket of new filter.
9. Install new filter.
 - Turn filter clockwise until filter makes contact with the mounting surface. Tighten 1/2-3/4 turn after gasket contact.
10. Install oil drain plug. Do not overtighten.

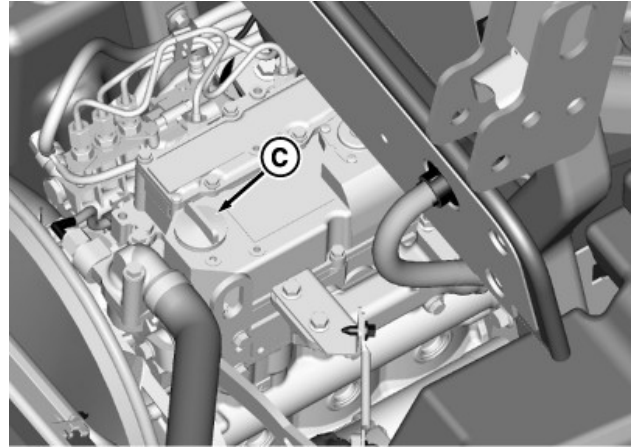

TCT010632—UN—21MAR14

Picture Note: Model 1550 is shown, other models are similar.

11. Remove oil fill cap (C) on top of engine.
12. Add oil to engine as follows:

Engine Oil — Specification

1550—Capacity.	3.1 L (3.3 qt.)
1570, 1575—Capacity.	4.1 L (4.3 qt.)
1580, 1585—Capacity.	4.8 L (5.1 qt.)

13. Install oil fill cap.
14. Start engine.
 - Run engine at slow idle speed for approximately 2 minutes.
 - Check area under engine for oil leaks.
15. Stop engine.
16. After approximately 2 minutes check engine oil level.

IMPORTANT: Avoid damage! Avoid dirt and other contaminants from entering the oil dipstick tube location. Clean area around dipstick before removing.

Failure to check the oil level regularly could lead to serious engine problems if oil level is low:

- Check oil level before operating.
- Check oil level when the engine is cold and not running.

Service Engine

- Keep level between the full and the add marks.
- Shut off engine before adding oil.
- Check oil level twice a day if you run engine over 4 hours a day.

17. Remove dipstick. Wipe with a clean cloth.

18. Install dipstick.

19. Check oil level.

- If oil is low, add oil to bring oil level to fill mark on the dipstick.
- If oil is above fill mark on the dipstick, drain to proper level.

20. Install dipstick.

21. Close engine cover and lower seat platform.

OUMX068,0000694-19-27MAR14

Cleaning Air Intake Screen

⚠ CAUTION: Compressed air can cause debris to fly a long distance.

- Clear work area of bystanders.
- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to 210 kPa (30 psi).

IMPORTANT: An obstructed air intake screen can cause engine damage due to overheating. Keep air intake screen and other external surfaces of the engine, including cooling fins, clean at all times to allow adequate air intake.

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Open engine cover.



TCT007884—UN—11JUL13

3. Clean screens (A) with a brush, compressed air or water.

4. Close engine cover.

OUC2005,0000074-19-29JUL13

Cleaning Oil Cooler and Radiator

⚠ CAUTION: Avoid injury! Compressed air can cause debris to fly a long distance.

- Clear work area of bystanders.
- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to 210 kPa (30 psi).

IMPORTANT: Avoid damage! Oil cooler coils and radiator cooling fins must be clean to prevent the engine from overheating and to allow adequate air intake.


1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Open engine cover.

IMPORTANT: Avoid damage! When cleaning the oil cooler and radiator, keep the compressed air or power washer nozzle at least 15 cm (6 in.) away from fins while cleaning. Spray radiator from front side (fan side) only.

Service Engine

4. Swing oil cooler away from radiator:

Machines without AC

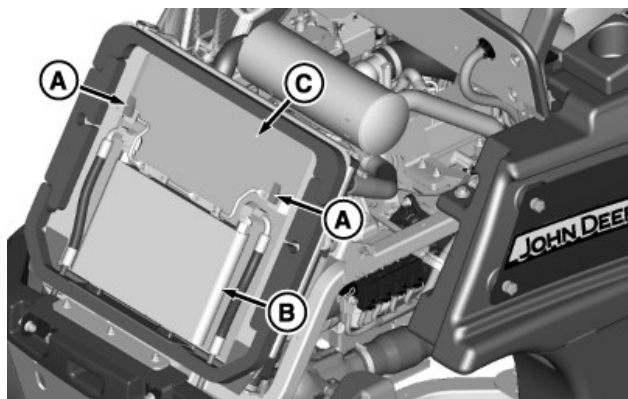

TCT010971—UN—27MAR14


- Rotate two handles (A) forward to release oil cooler (B) from radiator frame.
- Move engine oil cooler (B) open slightly to access radiator cooling fins (C).

Machines with AC



TCT007885—UN—21MAR14

- Rotate handle (A) up and towards front of machine to release latch on air conditioner condenser (B).

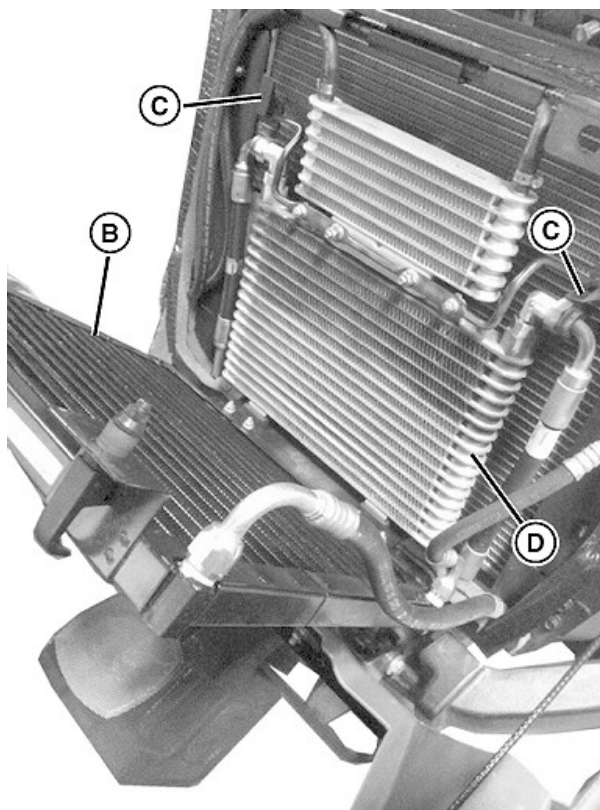

TCT007886—UN—13AUG13

- Swing air conditioner condenser (B) forward, as shown.
 - Rotate two handles (C) forward and swing oil cooler (D) forward.
5. Remove dirt and debris from radiator and oil cooler using compressed air or water sprayed from the front to the rear.
 6. Check oil cooler coils and radiator fins for damage.
- NOTE: Before rotating oil cooler back into position, be certain to route and install all hoses into brackets.*
7. Swing oil cooler against radiator and secure with two handles.
 8. Machines with AC: Install air conditioner condenser back onto frame and secure with release latch handle.
 9. Close engine cover.


OUMX068,0000695-19-27MAR14

Checking Air Filter Restriction Indicator


1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Raise seat platform or remove battery cover.

NOTE: Indicator will not function correctly if plastic indicator housing is damaged.

Service Engine

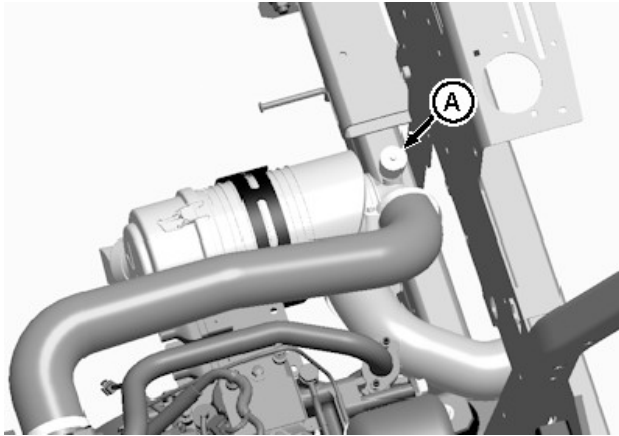

TCT011364—UN—03NOV15

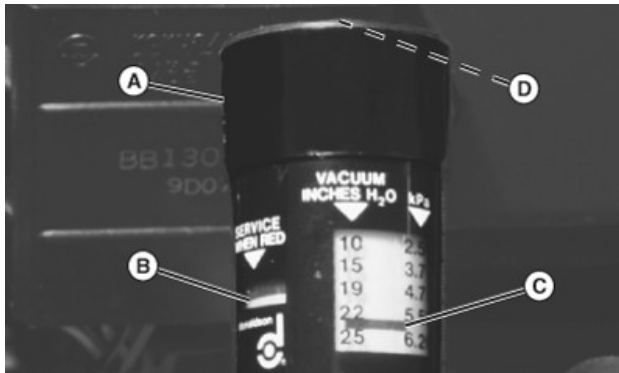

TCAL43352—UN—14MAR13

3. Check air restriction indicator (A).
 - When the indicator window (B) is yellow, no air cleaner service is required.
 - When the indicator window is red, air cleaner element needs replacement.
 - Vacuum scale (C) on indicator shows how restricted the air cleaner elements are becoming.
4. Depress the rubber button (D) on top of the housing to reset indicator.
5. Lower seat platform or install battery cover.

OUC2005,0000292-19-03NOV15


Servicing Air Cleaner Elements

IMPORTANT: When operating the machine in extreme heat, dust or other severe conditions, check the air restriction indicator daily.

- Never run the engine without the air cleaner elements installed.
- Do not wash the paper elements.
- Do not attempt to clean paper element by tapping against another object.
- Do not use pressurized air to clean element.


Primary Air Cleaner Element

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Raise seat platform.

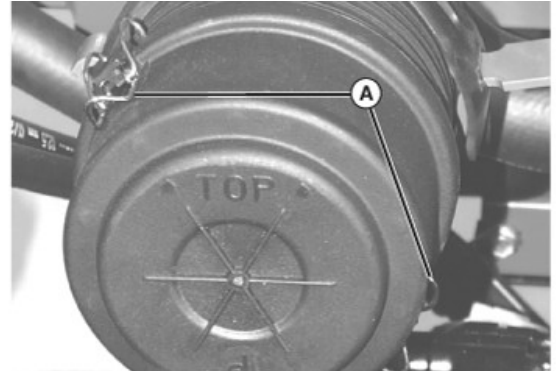

TCAL43353—UN—14MAR13

4. Release spring latches (A), and unhook latches from air cleaner housing.

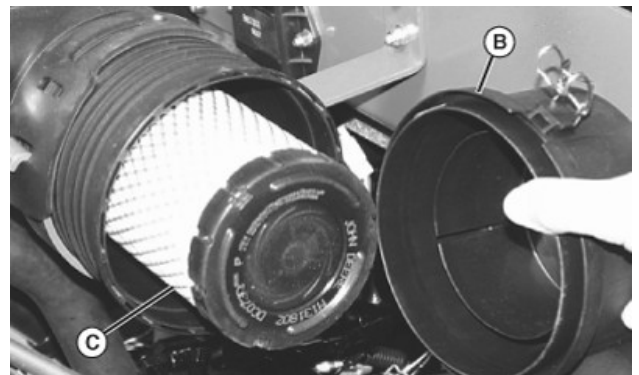


TCAL43354—UN—14MAR13

5. Remove air cleaner cover (B).
6. Remove and discard primary element (C).
7. Install new primary element.
8. Install air cleaner cover, making sure the word "TOP" is facing upwards.
9. Reset air restriction indicator.
10. Start engine and run at high idle for 1 minute.
11. Stop engine. Check air restriction indicator:
 - If indicator window remains yellow, air cleaner is ready for operation.
 - If indicator window has turned red, change secondary air filter element.

Secondary Air Filter Element

1. Remove air cleaner cover.
2. Remove primary air cleaner element.

Service Engine

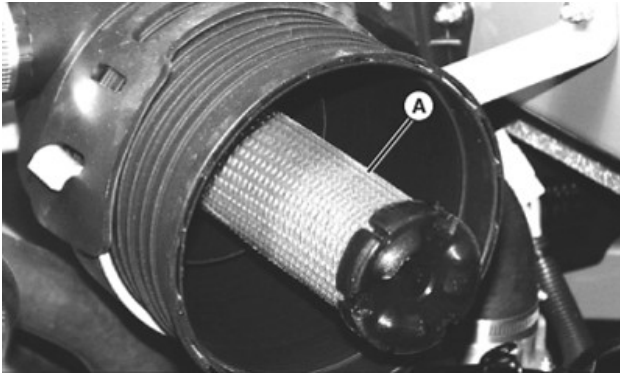

TCAL43355—UN—14MAR13


3. Remove and discard secondary element (A).
4. Install a new secondary element.
5. Install primary air cleaner element.
6. Install air cleaner cover, making sure the word "TOP" is facing upwards.
7. Lower seat platform.

OUC02005,0000293-19-04NOV13

Cleaning Dust Unloading Valve

IMPORTANT: Do not operate engine without air cleaner element and rubber dust unloading valve installed.

1. Park the vehicle safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Access the engine compartment.

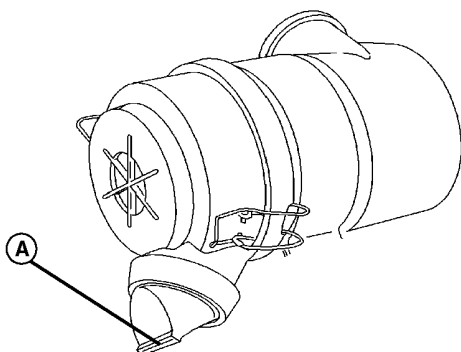

TCAL43356—UN—14MAR13


4. Squeeze dust unloading valve (A) to clean. Remove and replace if damaged.

OUC1023,00004A9-19-13MAR13

Checking Air Intake Hoses and Clamps

1. Park machine safely. (See Parking Safely in the SAFETY section.)

2. Allow engine to cool.
3. Open engine cover.

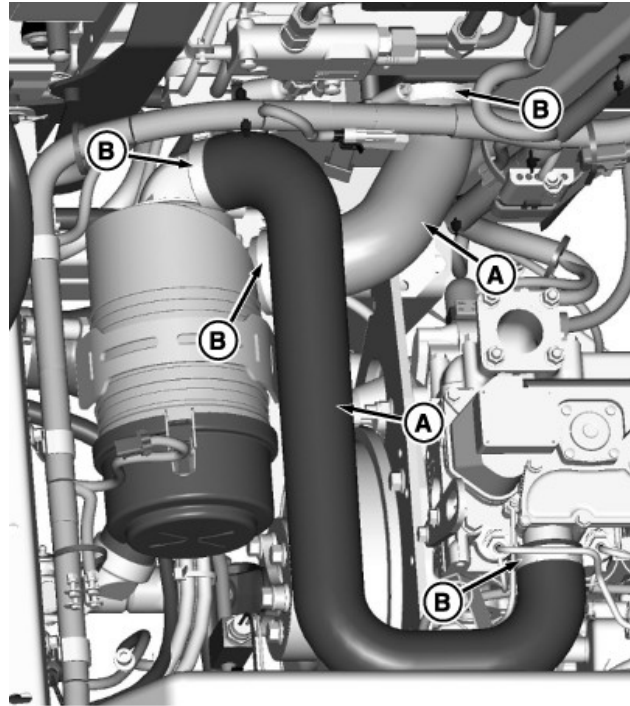

TCT010972—UN—27MAR14

Picture Note: Model 1550 shown, other models similar.

4. Check air intake hoses (A) for cracks or damage. Replace if necessary.
5. Tighten hose clamps (B).

OUMX068,0000696-19-27MAR14

Checking Radiator Hoses and Clamps

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Open engine cover.
4. Check both radiator hoses and overflow hose for cracks or damage. Replace if necessary.
5. Tighten radiator hose clamps and overflow hose clamps, if needed.
6. Close engine cover.

OUC1023,00004AB-19-13MAR13

Recommended Engine Coolant

IMPORTANT: Using incorrect coolant mixture can cause overheating and damage to the radiator and engine:

- Do not operate engine with plain water.

Service Engine

- Do not exceed a 50% mixture of coolant and water.
- Aluminum engine blocks and radiators require approved ethylene-glycol based coolant.

The engine cooling system is filled to provide year-round protection against corrosion and cylinder liner pitting, and winter freeze protection to -37 degrees C (-34 degrees F). If protection at lower temperatures is required, consult your John Deere dealer for recommendations.

The following coolants are preferred:

- John Deere COOL-GARD™ II Premix
- John Deere COOL-GARD™ Premix
- John Deere COOL-GARD™ PG Premix

John Deere COOL-GARD™ II Premix and John Deere COOL-GARD™ Premix are available in a concentration of 50% propylene glycol.

John Deere COOL-GARD™ PG Premix is available in a concentration of 55% propylene glycol.

Additional recommended coolants:

- John Deere COOL-GARD™ II Concentrate in a 40% to 60% mixture of concentrate with water.
- John Deere COOL-GARD™ Concentrate in a 40% to 60% mixture of concentrate with water.

If the recommended coolants are unavailable, use an ethylene glycol or propylene glycol base coolant that meets the following specification:

- ASTM D3306 prediluted (50%) coolant.
- ASTM D3306 coolant concentrate in a 40% to 60% mixture of concentrate with water.


Check container label before using to be sure it has the appropriate specifications for your machine. Use coolant with conditioner or add conditioner to coolant before using.

Water Quality

- Water quality is important to the performance of the cooling system. Distilled, deionized, or demineralized water is recommended with ethylene glycol base engine coolant concentrate.

OUC1023,00004AC-19-14MAR13

Service Cooling System Safely

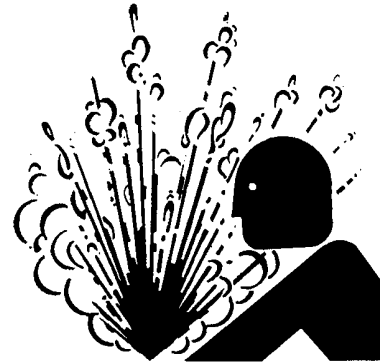

TCAL42226—UN—08MAR13

CAUTION: The radiator will be hot and can burn skin. Built-up pressure may cause explosive release of coolant when the radiator cap is removed:

- Shut off the engine and allow to cool.
- Do not remove the cap unless the radiator and the engine are cool enough to touch with bare hands.
- Slowly loosen the cap to the first stop to release all pressure. Then remove the cap.

OUC1023,00004AD-19-14MAR13

Checking Coolant Level

IMPORTANT: Using incorrect coolant mixture can damage the radiator:

- Do not operate engine with plain water.
- Do not exceed a 50% mixture of coolant and water.
- Aluminum engine blocks and radiators require approved ethylene-glycol based antifreeze.


1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool. Open engine cover.



TCAL43359—UN—14MAR13

Service Engine

3. Slowly open and remove radiator cap (A), and check that coolant level is up to filler neck.
4. If coolant level is low, open air bleed vent on right side of radiator, add coolant, and close air bleed.
5. Install radiator cap.
6. Check coolant recovery tank. Make sure the overflow hose is not touching the bottom of the recovery tank.

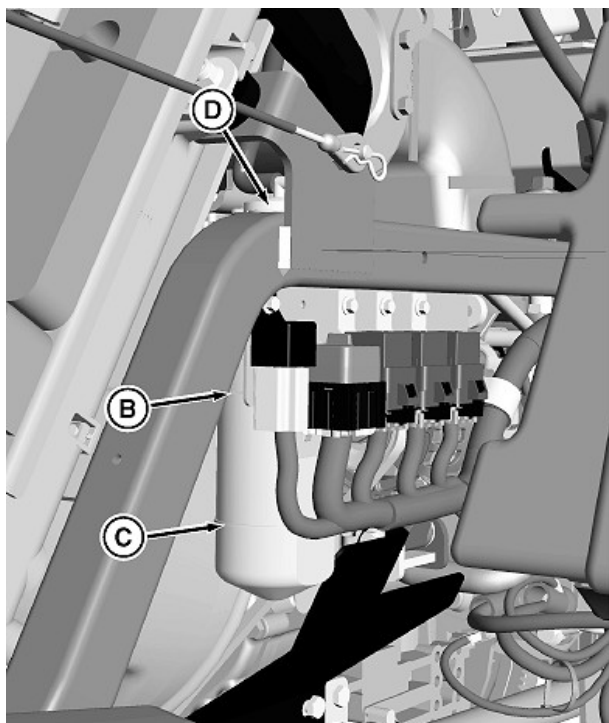

TCT009084—UN—04NOV13


7. Coolant recovery tank should be approximately between FULL (B) and LOW (C) lines at engine operating temperature.
8. Remove cap (D) and add coolant if level is low.
9. Check condition of hoses and clamps. Check for leaks or loose connections.

OUC02005,0000295-19-04NOV13

Servicing Cooling System

Draining Cooling System

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Open engine cover.
4. Slowly open radiator cap to the first stop to release all pressure.

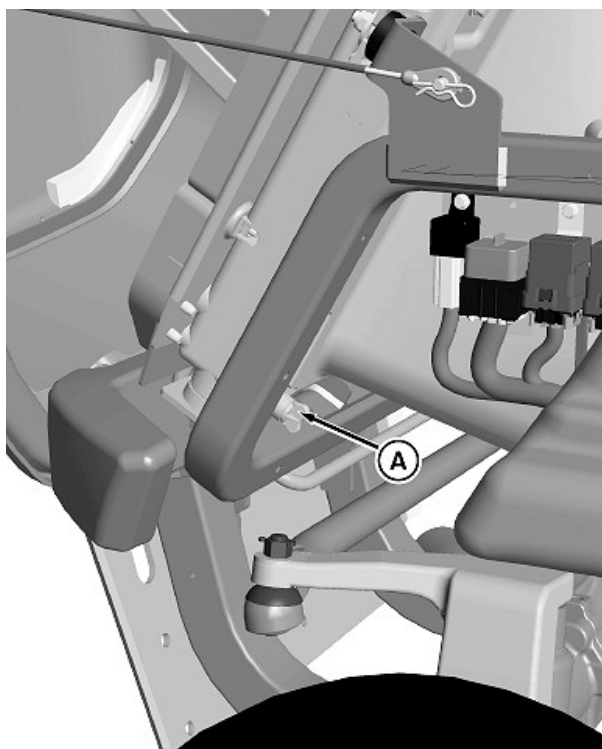

TCT009085—UN—04NOV13

5. Open the radiator drain (A) located on the bottom of the radiator, under the rear bumper. Drain coolant into a pan.
6. Close radiator drain after all coolant has drained from the radiator.
7. Flush the cooling system.

Flushing Cooling System

1. Drain cooling system and add John Deere Cooling System Cleaner, or John Deere Cooling System Quick Flush or equivalent. Fill system with clean water. Follow directions on can.
2. Install and tighten radiator cap.
3. Start and run engine until it reaches operating temperature.
4. Stop engine.
5. Open radiator drain valve. Drain cooling system immediately before rust and dirt settle.
6. Close radiator drain valve.
7. Fill cooling system with clean water and repeat flushing until system is clean.
8. Drain system and fill with coolant.

Filling Cooling System

IMPORTANT: Using incorrect coolant mixture can damage the radiator:

- Do not operate engine with plain water.

Service Engine

- **Do not exceed a 50% mixture of coolant and water.**
- **Aluminum engine blocks and radiators require approved ethylene-glycol based antifreeze.**

1. With engine and cooling system cool, open radiator cap to the first stop to release all pressure. Press down on cap slightly and turn counterclockwise to remove.
2. Fill cooling system.

- Cooling system capacity is as follows:

Cooling System — Specification

1550—Capacity. 7.1 L (7.5 qt)
1570, 1575, 1580 and
1585—Capacity. 7.6 L (8.0 qt)

- Certain geographical areas may require lower temperature protection. See the label on your antifreeze container or consult your John Deere dealer to obtain the latest information and recommendations.
 - John Deere Cooling System Sealer or its equivalent may be added to the radiator to seal leaks. Do not use any other additives in the cooling system.
3. Start engine and watch coolant level in radiator. Add coolant if necessary to bring coolant level up to filler neck.
 4. Install and tighten radiator cap. Run engine until at operating temperature.
 5. Stop engine and allow to cool down.
 6. Add coolant, if necessary, to coolant recovery tank.
 7. Check condition of hoses and clamps. Check for leaks or loose connections.

NOTE: Coolant recovery tank is used to catch overflow from radiator, and will remain about half full during operation. Coolant will flow back into radiator as needed after system cools.

OUC02005,0000076-19-04NOV13

Servicing Fuel Filter (1550)


⚠ CAUTION: Avoid injury! Fuel vapors are explosive and flammable:

- **Do not smoke while handling fuel.**
- **Keep fuel away from flames or sparks.**
- **Shut off engine before servicing.**
- **Cool engine before servicing.**
- **Work in a well-ventilated area.**
- **Clean up spilled fuel immediately.**

NOTE: Change filter when fuel level is low.

Checking

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Open engine cover.

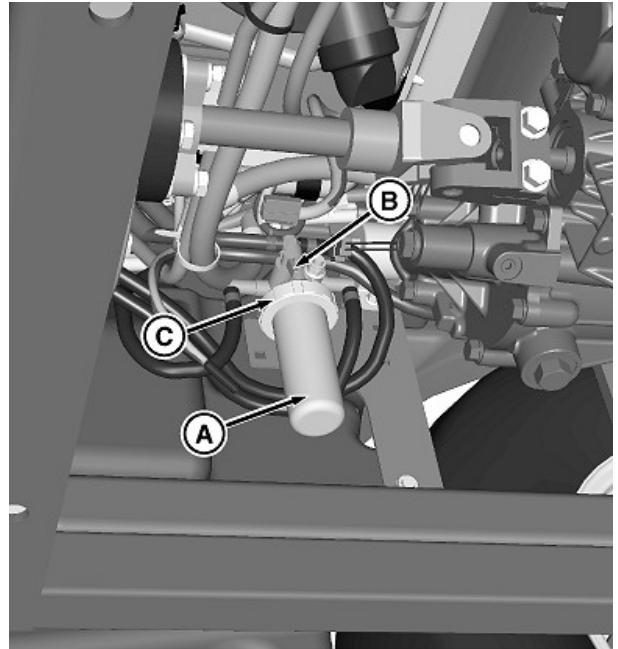

TCT008013—UN—29JUL13

4. Locate the fuel filter sediment bowl (A) on the left side of the engine.
5. Look for water in the sediment bowl indicated by the red float ring being lifted up off the bottom.

Cleaning and Replacing

1. Close fuel shut-off valve (B) by turning to the horizontal position.
2. Unscrew collar (C) to remove bowl and filter. Discard filter.
3. Clean bowl and install new filter.
4. Install bowl and collar. Tighten collar hand tight.
5. Open fuel shut-off valve by turning lever to vertical position (shown).
6. Prime fuel system using primer lever on fuel pump.
7. Start engine and check for leaks.


OUMX068,0000697-19-27MAR14

Draining Water Separator (1570, 1575, 1580, 1585)

1. Park machine safely. (See Parking Safely in the SAFETY section.)

Service Engine

2. Allow engine to cool.

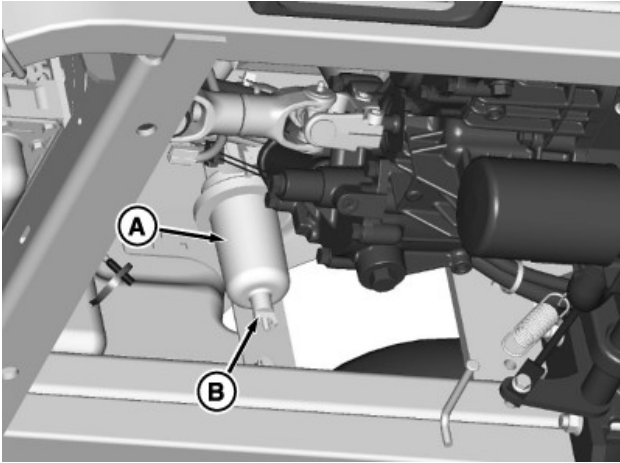

TCT010973—UN—27MAR14

3. Locate the fuel filter sediment bowl (A) on the left side of the engine.
4. Look for water in the sediment bowl indicated by the red float ring being lifted up off the bottom.
5. If water is present, loosen drain (B) at the bottom of the sediment bowl and drain water.
6. Close drain (B).

OUMX068,0000699-19-27MAR14


Changing Fuel Filter (1570, 1575, 1580, 1585)

CAUTION: Avoid injury! Fuel vapors are explosive and flammable:

- Do not smoke while handling fuel.
- Keep fuel away from flames or sparks.
- Shut off engine before servicing.
- Cool engine before servicing.
- Work in a well-ventilated area.
- Clean up spilled fuel immediately.

NOTE: Change filter when fuel level is low.

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Open engine cover.
4. Turn fuel shutoff, located on water separator, to the OFF position.

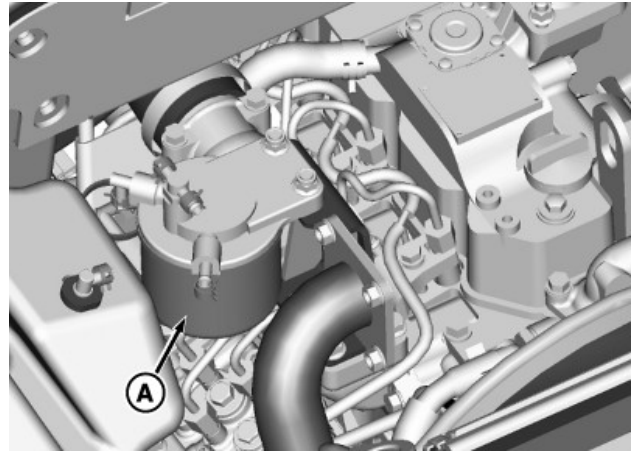

TCT010974—UN—27MAR14

5. Turn fuel filter (A) counterclockwise to remove.
6. Apply a film of clean fuel on gasket of new filter.
7. Install new fuel filter.
8. Turn fuel shutoff to ON position.
9. Start engine and check for leaks.


OUMX068,0000698-19-27MAR14

Priming Fuel System

NOTE: It may be necessary to prime the fuel system after running out of fuel or changing the fuel filter.

1. Make sure the machine is on a level surface, not a slope.
2. Turn off PTO switch.
3. Lower attachments to the ground.
4. Lock the park brake.
5. Remove the key.

Service Engine

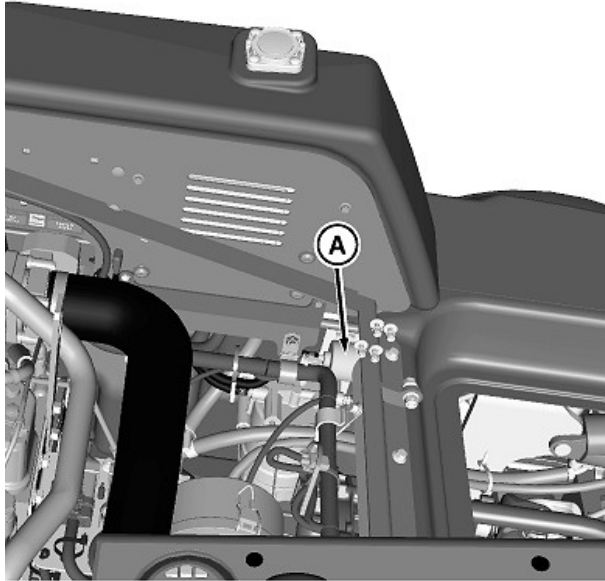

TCT009484—UN—11DEC13

Electric boost pump is located under the seat on the left side of machine.

6. Turn key switch to RUN position for 2 minutes prior to starting engine. The fuel pump (A) will pressurize the fuel and remove any air in the system.
7. Start engine. If engine will not start, repeat previous step.


OUC02005,00002D3-19-20MAR14

Checking and Adjusting Alternator Belt

CAUTION: Rotating parts can catch fingers, loose clothing, or long hair. Wait for engine and all moving parts to stop before leaving operator's station to adjust or service machine.

Checking Belt Tension

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Open engine cover.

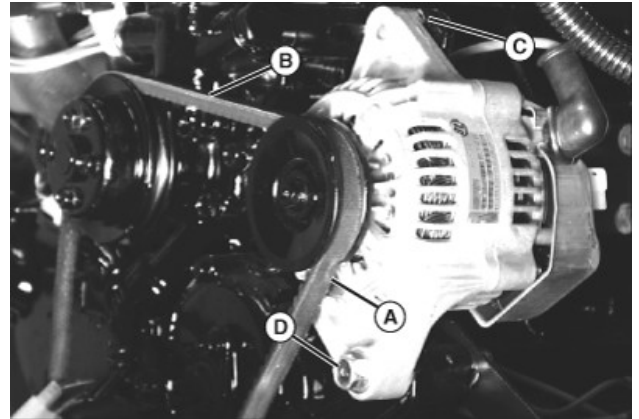

TCAL43368—UN—14MAR13

4. Check alternator belt (A).

- Inspect belt for excessive wear, damage or stretching while mounted on engine.
- Apply finger pressure to the belt approximately halfway between the alternator and water pump pulleys at (B). Belt should deflect the specified distance. Adjust if too tight or too loose.

Specification

Alternator Belt—Deflection. 10-15 mm (3/8-1/2 in.)

Adjusting Belt Tension

1. Loosen adjustment bolt (C).
2. Loosen alternator mounting bolt (D).
3. Apply outward pressure to the alternator housing.
4. Tighten adjustment bolt (C) and mounting bolt (D).
5. Check belt tension.
6. Close engine cover.


OUC1023,00004B5-19-14MAR13

Replacing Alternator Belt

CAUTION: Touching hot surfaces can burn skin. The engine, components, and fluids will be hot if the engine has been running. Allow the engine to cool before servicing or working near the engine and components.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Allow engine to cool.
3. Open engine cover.

Service Engine

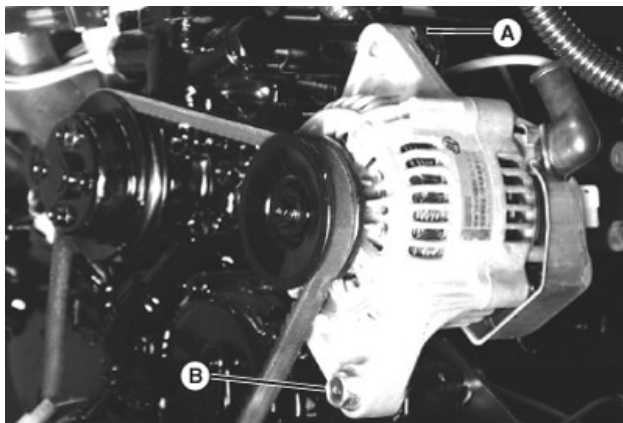

TCAL43369—UN—14MAR13

4. Loosen adjustment bolt (A).
5. Loosen alternator mounting bolt (B).
6. Push alternator in towards engine to loosen alternator belt tension.
7. Remove the worn alternator belt from the machine.


NOTE: It may be necessary to remove alternator adjustment bolt to loosen belt enough for it to come off of pulleys.

8. Install new belt over fan blades and install onto engine and alternator pulleys.
9. Adjust alternator belt tension.
10. Close engine cover.

OUO2005,000007A-19-29JUL13

Service Transmission

Transaxle Oil

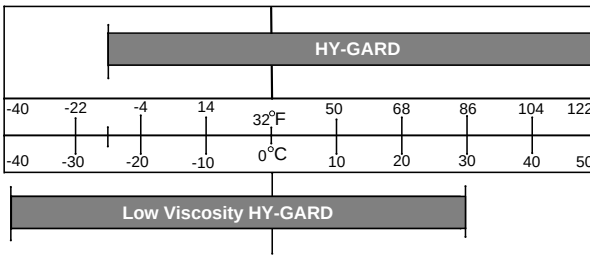

TCAL43372—UN—14MAR13

NOTE: Transaxle is filled with John Deere HY-GARD® (J20C) transmission oil at the factory. DO NOT mix oils.

Use only HY-GARD® (J20C) transmission oil.

Do not use type “F” automatic transmission fluid.


John Deere HY-GARD® (J20C) transmission oil is specially formulated to provide maximum protection against mechanical wear, corrosion, and foaming.

IMPORTANT: If operating temperatures are below – 18°C (0°F), you must use Low Viscosity HY-GARD® (J20D) or transmission damage will occur.

OUC1023,00004B8-19-13MAR13

Checking the Transaxle Oil Level

1. Run engine for 30 seconds before checking transaxle oil level.
2. Park machine safely. (See Parking Safely in the SAFETY section.)
3. Open service hatch on operator's platform.

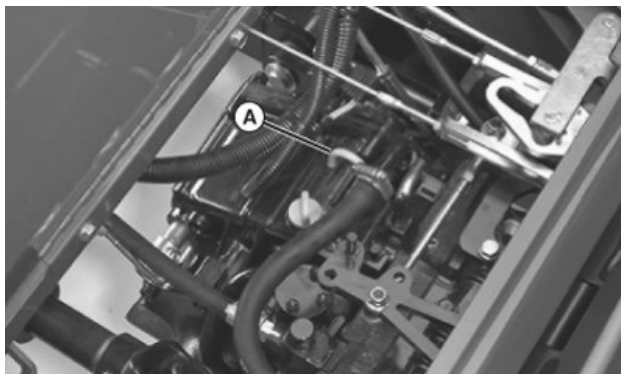

TCAL43373—UN—14MAR13

4. Locate the dipstick (A) on the top of the transaxle.
5. Remove the dipstick and wipe off with a clean shop towel.
6. Insert the dipstick fully into the transaxle housing and remove again.

7. Oil level should be in XXX range on dipstick. Add oil to transaxle if level does not show on dipstick. Remove oil if level is too high.
8. Install dipstick and close service hatch. If oil was added, check oil level after driving machine.


OUC1023,00004B9-19-13MAR13

Changing the Transaxle Oil and Filter

CAUTION: Escaping fluid under pressure can penetrate skin and cause serious injury, including gangrene.

- Relieve pressure before disconnecting hydraulic or other pressurized lines.
- Use a piece of cardboard to search for leaks. Do not expose hands or body to high pressure fluids.
- Tighten all connections before applying pressure.

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Lower all attachments to the ground.
3. Place a drain pan under the transaxle.

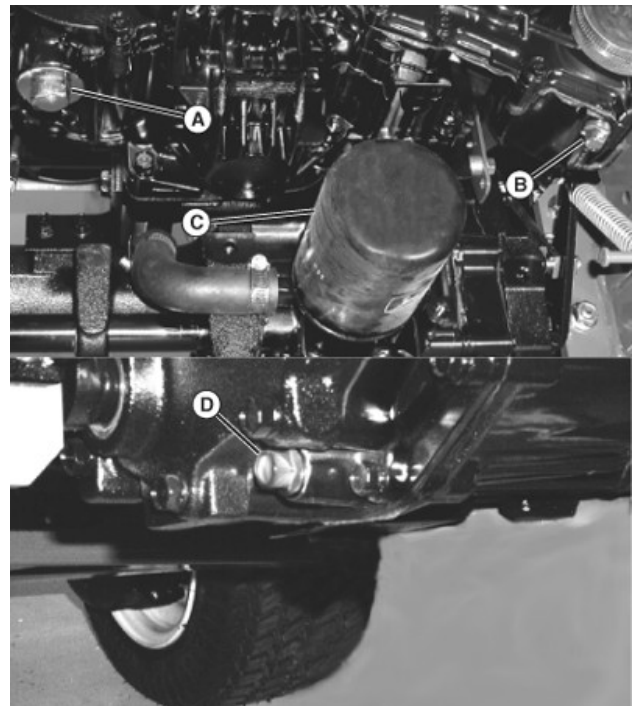


TCAL43374—UN—14MAR13

4. Clean away debris and remove drain plugs (A, B, and D) from locations shown above. Allow transaxle to drain.
5. Remove transaxle oil filter (C) and allow transaxle to drain. Clean oil filter mounting flange with a clean shop towel.

Service Transmission

6. Lubricate the gasket of a new oil filter with a few drops of transaxle oil, and install the filter onto the mounting flange. Tighten filter 1/2 to 3/4 turn after it contacts the flange.
7. Install drain plugs.

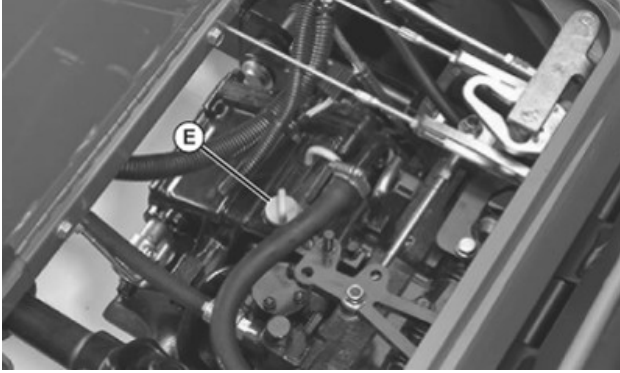

8. Raise service hatch and remove transaxle oil filler cap (E).
9. Fill transaxle with recommended oil until level is up to top of XXX marks on dipstick. Dry transaxle capacity is listed below, but it may take less when performing an oil change. Do not overfill.

Specification

Transaxle (2WD)—Capacity.	8.5 L (9 qt)
Transaxle (4WD - 1550, 1570)—Capacity.	8.7 L (9.2 qt)
Transaxle (4WD - 1575, 1580, 1585)—Capacity.	10.0 L (10.5 qt)

10. Run machine, cycling forward and reverse pedals to purge air from transaxle. Stop machine and recheck oil level.

OUO2005,000007B-19-29JUL13

Adjusting Forward and Reverse Pedals

Adjust forward and reverse pedals to make sure hydrostatic transmission will operate within full range of speed.

Checking Forward and Reverse Pedal Travel

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Fully depress forward pedal.
3. Measure distance between bottom of pedal and floor plate. Bottom of pedal should be specified distance from floor plate. If not, adjust pedal travel.


Specification

Forward/Reverse Pedal to Floor Plate—Distance.	12.5 mm (0.5 in.)
--	-------------------

4. Repeat steps 2 and 3 for reverse pedal.

Adjusting Forward and Reverse Pedal Travel

1. Open service hatch.

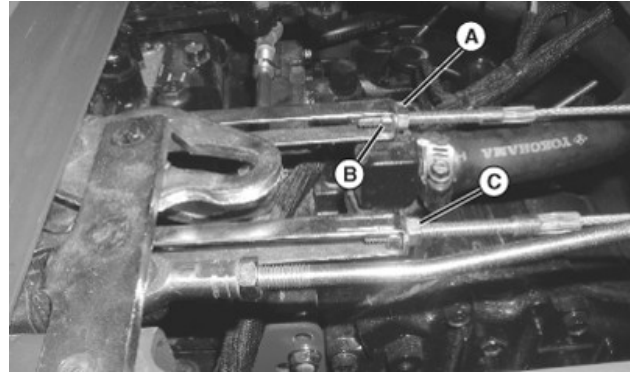

2. Loosen nuts (A and B) from forward pedal linkage.
3. Rotate nuts along cable end until the distance between floor plate and bottom of forward pedal is within specifications with forward pedal fully depressed.

Specification

Forward/Reverse Pedal to Floor Plate—Distance.	12.5 mm (0.5 in.)
--	-------------------

4. Tighten nuts (A and B).
5. Repeat procedure for reverse pedal linkage (C).

OUO1023,00004BB-19-13MAR13

Adjusting Transaxle Neutral

CAUTION: Do not attempt this adjustment unless you are a qualified and properly trained technician. Improper adjustment can result in an unsafe machine.

Adjust transmission neutral to assure that machine does not creep forward or rearward when pedals are in the neutral position.

1. Park machine on a firm, level surface. Place controls in following position:
 - PTO disengaged.
 - 4WD disengaged (if equipped).
 - Differential lock disengaged.
 - Attachment removed or service latch locked.
 - Park brake locked.
 - Engine off.
 - Service hatch on operator's platform unlocked.
2. Chock rear tires and raise front of machine so front tires are off of ground. Place jack stands under left and right side of front axle and lower machine onto jack stands.
3. If 4WD option is installed, jack up rear of machine

Service Transmission


so tires are off of ground. Place jack stands under left and right side of rear axle and lower machine onto jack stands.

CAUTION: Do not raise or lower attachment, engage 4WD, differential lock, or PTO during adjustment. Keep people clear of machine while running.

Always raise all four wheels off ground if 4WD option is installed. 4WD is always engaged and will push the machine off jack stands if any of the tires are able to get traction.

Stay away from tires while making adjustments.

4. Start engine. Unlock the park brake.
5. Watch tires for forward or rearward rotation.
6. Cycle forward and reverse hydrostatic pedals and allow to them to return to the centered, neutral position. Check again for tire rotation while in neutral, indicating a neutral adjustment is necessary.

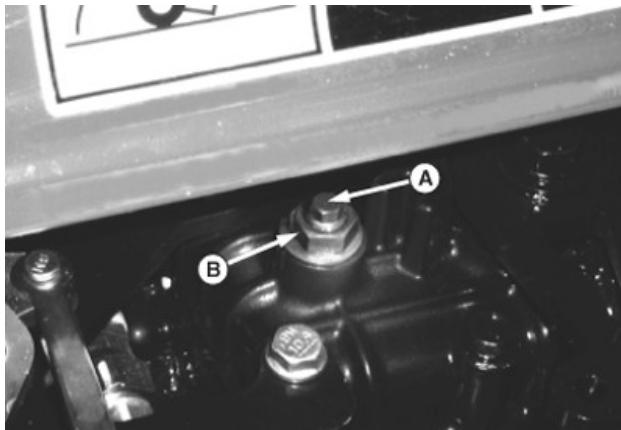

TCAL43377—UN—14MAR13

7. Open service hatch in operator's platform. Locate neutral adjuster screw (A) on top of transaxle.
8. Loosen lock nut (B).
9. Rotate screw until tires stop rotating.
10. Tighten lock nut. Cycle hydrostatic drive pedals and allow to return to neutral. Adjust screw again if necessary.


OOU1023,00004BC-19-13MAR13

4WD Oil

- John Deere GL-5 Gear Lubricant is recommended.
- Other oils may be used provided they meet the following specifications:
 - API Class GL-5.

OOU1023,00004BD-19-13MAR13

Checking the 4WD Oil Level

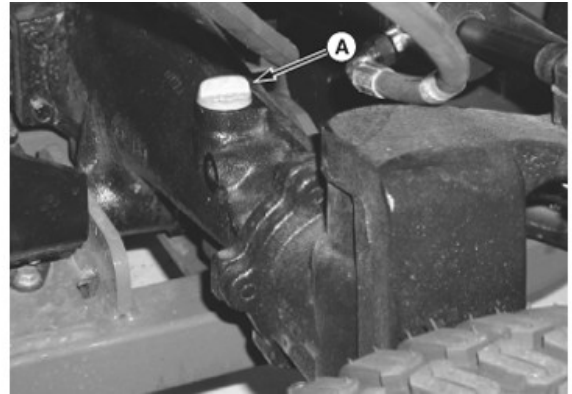


TCAL43378—UN—14MAR13

1. Open the engine cover and locate the rear axle filler cap and dipstick (A) on the right rear side of the rear axle.
2. Unscrew filler cap and wipe dipstick clean.
3. Install filler cap back into axle housing but do not turn threads back in.
4. Remove dipstick and check oil level on it. Oil should be in XXX area on dipstick but not above top mark.
5. Add oil if needed. Do not overfill.

OOU1023,00004BE-19-13MAR13

Changing the 4WD Oil


1. Park machine safely. (See Parking Safely in the Safety section.)
2. Raise rear of machine so tires are off of ground, and support rear axle with jack stands.
3. Remove rear wheels from axle.

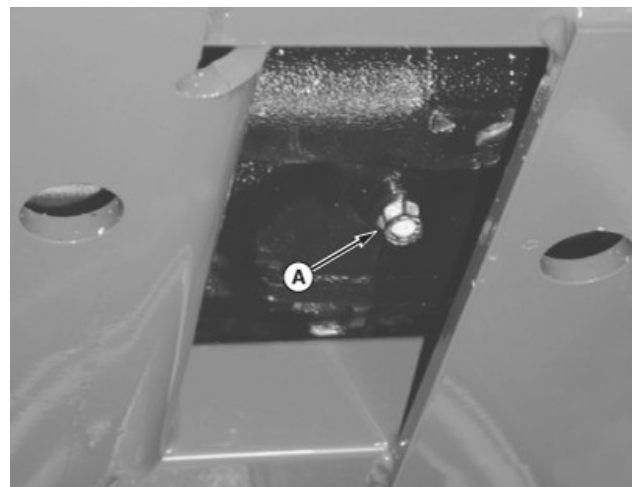

TCAL43379—UN—14MAR13


4. Place drain pan under center of rear axle housing and remove center drain plug (A).
5. Install center drain plug.

Service Transmission

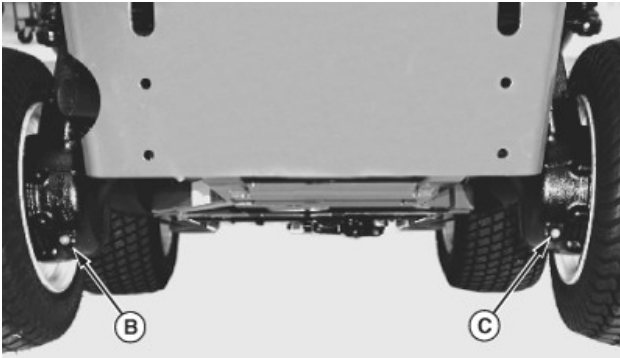

TCAL43380—UN—14MAR13

6. Remove left side final drive housing drain plug (B), and allow to drain.
7. Install drain plug.
8. Repeat steps six and seven for right side housing (C).

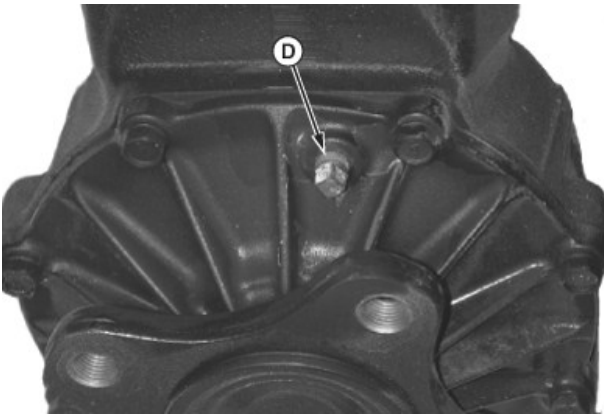

TCAL43381—UN—14MAR13

9. Remove air bleed screw (D) from top of left and right side final drive gear case.
10. Fill rear axle housing with recommended oil until oil begins to run out of air bleed screws. Install air bleed screws and continue filling rear axle until specified amount of oil has been put in. Do not overfill. Check oil level with dipstick. Run machine in 4WD, and check oil level.

Specification

Rear Axle Housing


Oil—Capacity. 2.1 L (2-1/4 qt)

OUO1023,00004BF-19-13MAR13

Service Steering & Brakes

Adjusting Toe-In

1. Park the machine safely. (See Parking Safely in the Safety section.)

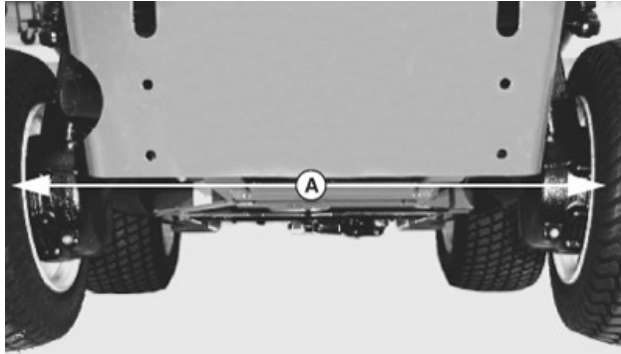


TCAL43382—UN—14MAR13

2. Measure the distance (A) between the rear tires at the rear of tires.
3. Measure the distance between rear tires at front of tires.
4. Distance between tires (toe-in) should be less within specifications in front than in rear.

Specification

Distance Between Tire (Toe-In)—Distance. 3-9 mm (0.12-0.35 in.)

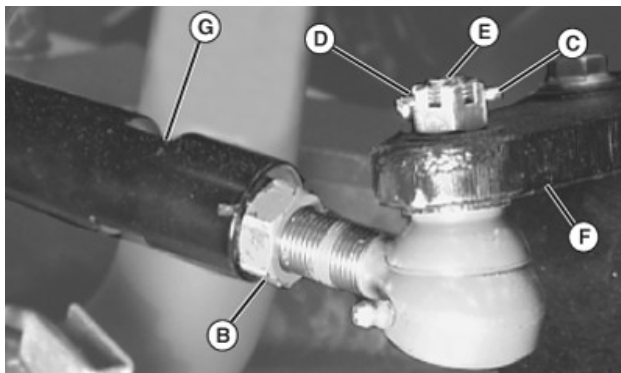

TCAL43383—UN—14MAR13

5. If toe-in requires adjustment, proceed as follows:
 - a. Loosen lock nuts (B) on left and right side of tie-rod ends. (Left side lock nut has left-hand threads.)
 - b. Remove the cotter key (C) from tie-rod castle nut (D) and remove nut.
 - c. Remove tie-rod mounting stud (E) from the steering arm (F).
 - d. Turn body of tie-rod (G) to adjust toe-in, keeping tie-rod mounting stud upright while turning tie-rod.
 - e. Install tie-rod stud into steering arm and loosely install castle nut onto stud.
 - f. Measure toe-in again. If correct, tighten castle

nut and install cotter key. Tighten lock nuts on left and right side of machine.


OOU1023,00004C0-19-13MAR13

Adjusting Brakes

CAUTION: Do not attempt this adjustment unless you are a qualified and properly trained technician. Improper adjustment can result in an unsafe machine.

Checking Brake Pedal Free Play

1. Park machine safely on level ground. (See Parking Safely in the Safety section.)
2. Unlock the parking brake.
3. Remove the brake return springs from brake linkage.
4. Block the turn brake and master brake pedals up to their highest position.

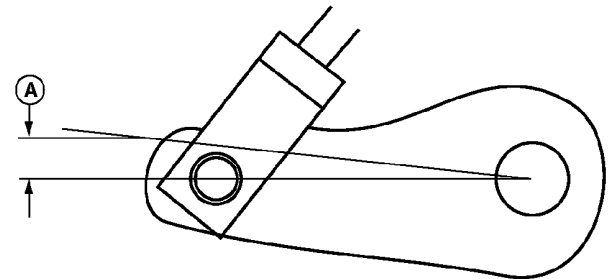


TCAL43384—UN—14MAR13

5. Check the left and right brake cam arm freeplay (A). The freeplay should be within specifications as measured from the end of the cam arm. If freeplay is greater than 5 mm, adjust brakes.

Specification

Brake Pedal—Play. 3-5 mm

Adjusting Brakes

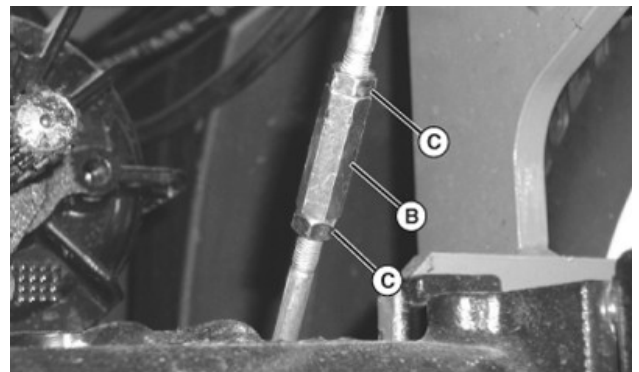

TCAL43385—UN—14MAR13

1. Locate the adjustment turnbuckles (B) on the brake rods under the operator's platform.

Service Steering & Brakes

2. Loosen the lock nuts (C), and adjust the turnbuckles until the brake cam freeplay is within specifications.

Specification


Brake Pedal—Play. 3-5 mm

3. Repeat for brake rod on other side of machine, keeping left and right side pedals adjusted evenly.
4. Tighten all turnbuckle lock nuts.
5. If brakes cannot be adjusted within the range of the turnbuckles, see your John Deere Dealer.

OUC1023,00004C1-19-13MAR13

Adjusting Steering Column Tilt-Lock


1. Park machine safely. (See Parking Machine Safely in the SAFETY section.)

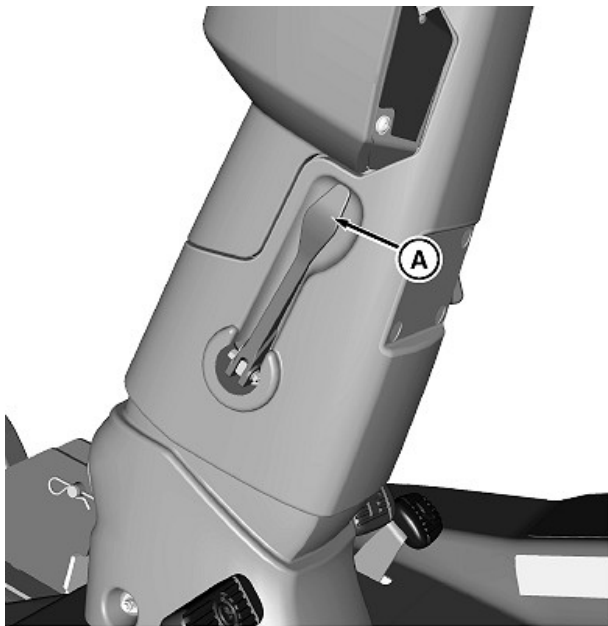

TCT009086—UN—04NOV13

2. Pull lever (A) outward to release steering column.
3. Move steering column forward or rearward to center steering column in its travel range.

NOTE: A small amount of dry lubricant on the tilt-lock lever will ease amount of force required to move lever.

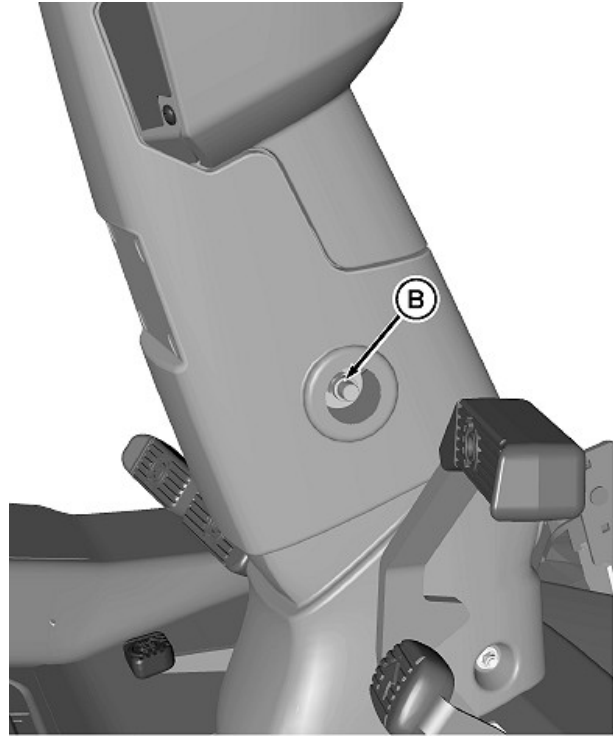

TCT009087—UN—04NOV13

4. Tighten nylock nut (B) on steering column to operator's preference, but do not exceed specifications.

Specification

Steering Column Nylock

Nut—Torque. 48 N·m (35 ft-lb)

OUC2005,0000296-19-04NOV13

Service Electrical

Service the Battery Safely



TCAL42287—UN—08MAR13

CAUTION: Battery electrolyte contains sulfuric acid. It is poisonous and can cause serious burns:

- Wear eye protection and gloves.
- Keep skin protected.
- If electrolyte is swallowed, get medical attention immediately.
- If electrolyte is splashed into eyes, flush immediately with water for 15-30 minutes and get medical attention.
- If electrolyte is splashed onto skin, flush immediately with water and get medical attention if necessary.

The battery produces a flammable and explosive gas. The battery may explode:


- Do not smoke near battery.
- Wear eye protection and gloves.
- Do not allow direct metal contact across battery posts.
- Remove negative cable first when disconnecting.
- Install negative cable last when connecting.

OUC1023,00004C4-19-15MAR13

Checking Battery Electrolyte Level

NOTE: Add only distilled water to replace battery electrolyte.

1. Park the machine safely. (See Parking Safely in the SAFETY section.)
2. Remove battery cell caps. Make sure cap vents are not plugged.

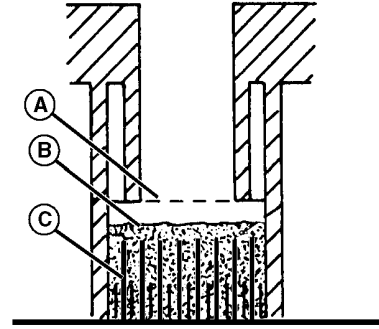

TCAL41096—UN—18JAN13

3. Check electrolyte level. Electrolyte (B) should be approximately halfway between bottom of filler neck (A) and top of plates (C).

IMPORTANT: Do not overfill battery. Electrolyte can overflow when battery is charged and cause damage.


4. Add only distilled water if necessary.
5. Install battery cell caps.

OUC1023,00004C5-19-14MAR13

Removing and Installing the Battery

Removing


1. Park machine safely. (See Parking Safely in the SAFETY section.)

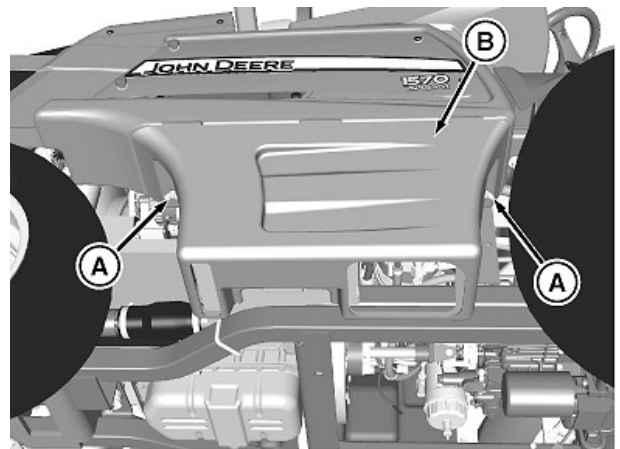

TCT008205—UN—02AUG13

2. Remove two wing nuts (A) and battery cover panel (B).

Service Electrical

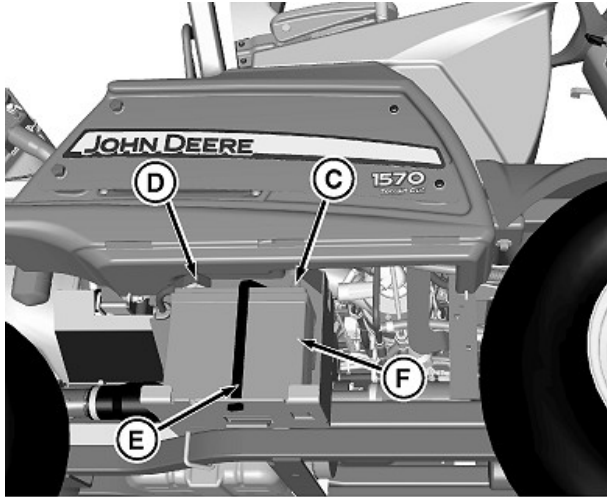

TCT008508—UN—20SEP13

3. Disconnect negative (–) battery cable (C).
4. Pull up red plastic cover (D) from positive (+) battery clamp and disconnect positive (+) cable clamp from battery terminal.
5. Remove rubber strap (E) from bottom of battery hold-down bracket.
6. Remove battery (F) from machine. Do not use battery terminals to lift battery.

Installing

1. Install battery with positive terminal (+) toward rear side of machine.
2. Install rubber strap on bottom of battery hold-down bracket.
3. Install positive cable clamp (red cable) onto positive (+) battery terminal. Pull red plastic cover over positive cable clamp.
4. Install negative cable clamp (black cable) onto negative (–) battery terminal.
5. Apply spray lubricant on battery terminals to help prevent corrosion.
6. Install battery cover panel with two wing nuts.

OUC02005,0000201-19-20SEP13

Cleaning Battery and Terminals

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Disconnect and remove battery.
3. Wash battery with solution of four tablespoons of baking soda to one gallon of water. Be careful not to get the soda solution into the cells.
4. Rinse the battery with plain water and dry.
5. Clean terminals and battery cable ends with wire brush until bright.


6. Install battery.
7. Attach cables to battery terminals, beginning with the positive cable, using washers and nuts.
8. Apply spray lubricant to terminal to prevent corrosion.

OUC1023,00004C7-19-13MAR13

Using Booster Battery

CAUTION: The battery produces a flammable and explosive gas. The battery may explode:

- Do not smoke or have open flame near battery.
- Wear eye protection and gloves.
- Do not jump start or charge a frozen battery. Warm battery to 16°C (60°F).
- Do not connect the negative (–) booster cable to the negative (–) terminal of the discharged battery. Connect at a good ground location away from the discharged battery.

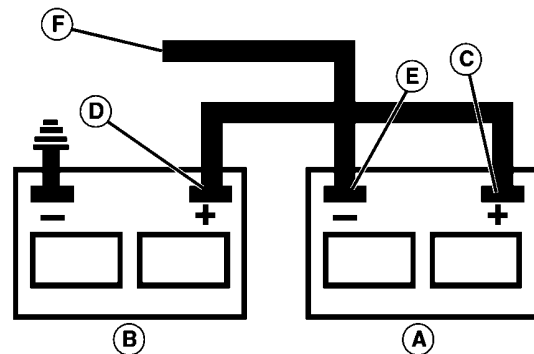

TCAL42290—UN—08MAR13

A—Booster Battery
B—Disabled Vehicle Battery

1. Connect positive (+) booster cable to booster battery (A) positive (+) post (C).
2. Connect the other end of positive (+) booster cable to the disabled vehicle battery (B) positive (+) post (D).
3. Connect negative (–) booster cable to booster battery negative (–) post (E).

IMPORTANT: Electric charge from booster battery can damage machine components. Do not install negative booster cable to machine frame. Install only to the engine block.

Install negative booster cable away from moving parts in the engine compartment, such as belts and fan blades.

4. Connect the other end (F) of negative (–) booster

Service Electrical

cable to a metal part of the disabled machine engine block away from battery.


5. Start the engine of the disabled machine and run machine for several minutes.
6. Carefully disconnect the booster cables in the exact reverse order: negative cable first and then the positive cable.

OOU01023,00004C8-19-14MAR13

Checking and Replacing Fuses


Replacing Main Fuse

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Raise or remove the seat platform.

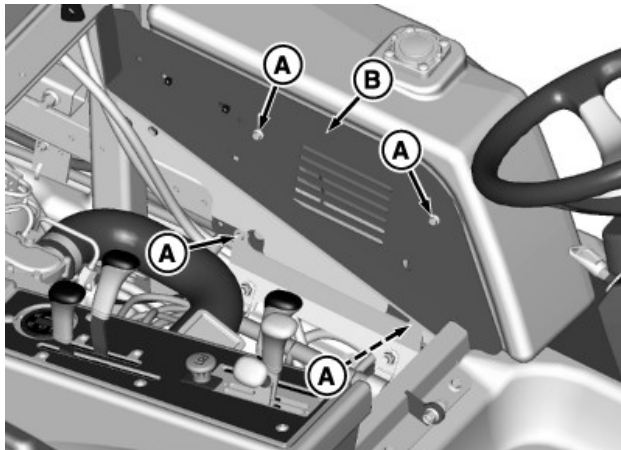


TCT010635—UN—31MAR14

3. Remove four screws (A) securing panel (B) to the left side of the machine.
4. Carefully remove the panel to locate the electrical control box.

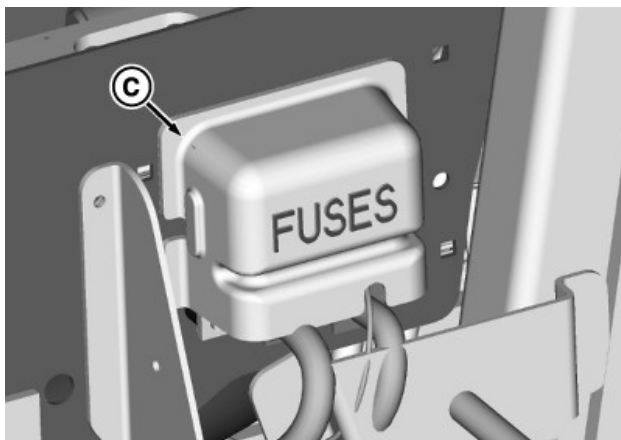

TCT010636—UN—24MAR14

5. Remove the cover (C) from the electrical control box.

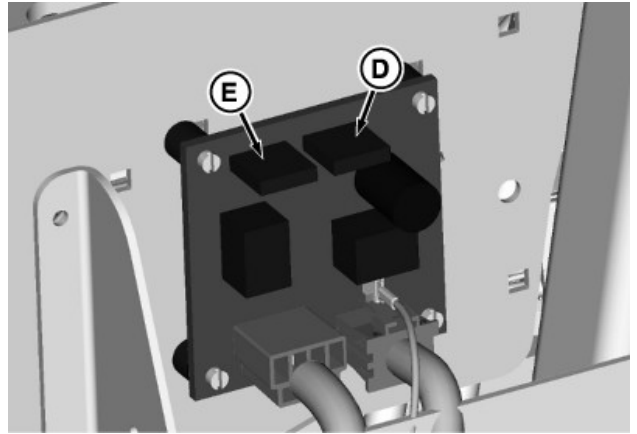


TCT010637—UN—24MAR14

6. Fuse (D) is a 15 amp fuse and controls the work lamps on the steering column.
7. Fuse (E) is a 15 amp fuse that controls all other electrical functions.
8. Test fuses with voltmeter or test lamp and replace if burned out. Never replace fuses with larger amp value. Replace with same type of fuse.
9. Install cover onto electrical control box.
10. Install cover to the left side of the machine with the screws removed earlier.
11. Install or lower seat platform.
12. Close engine cover.

Replacing 12-Volt Power Outlet Fuse

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Open engine cover.

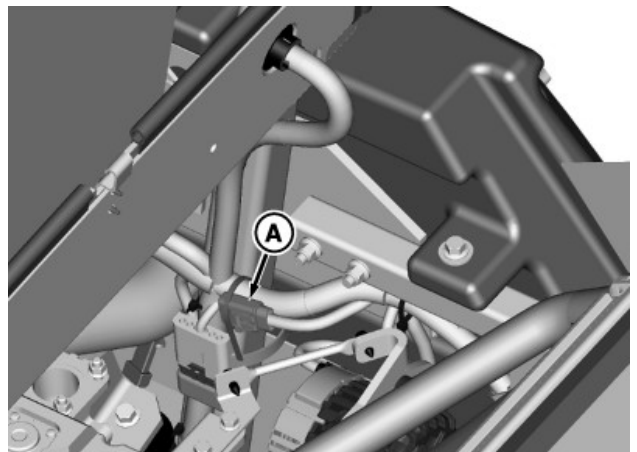

TCT010617—UN—24MAR14

3. Locate the 12 volt power outlet fuse (A) tied back to the harness on the right hand side.

Service Electrical




TCT010638—UN—24MAR14

4. Pull out lock tab (B) and pull base of fuse holder down from cap.
5. Test fuse using a voltmeter or test lamp. Both sides of fuse should be hot with key switch in RUN position.
6. Replace fuse if burned out (10 amp). Never replace fuse with larger amp value. Replace with same type of fuse.
7. Install fuse holder in cap.
8. Close engine cover.


OUMX068,0000691-19-14NOV18

Checking and Replacing Cab Fuses (1575, 1585)

1. Park machine safely. (See Parking Safely in the SAFETY section.)

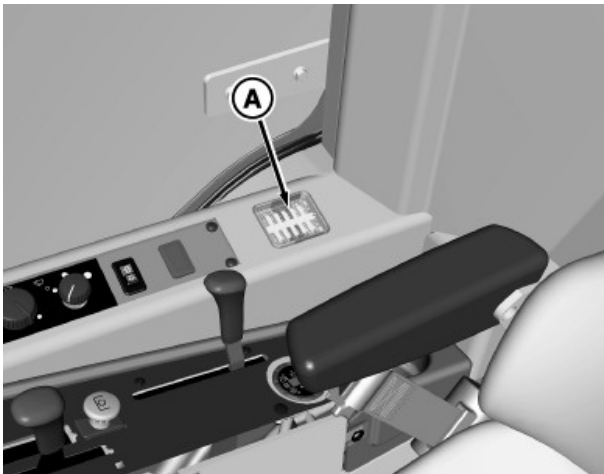

TCT009089—UN—24MAR14

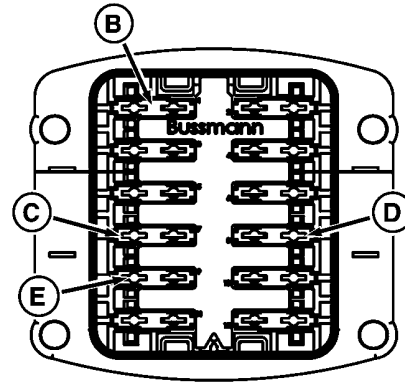

TCT010639—UN—24MAR14

- A—Fuse Panel
- B—Position 1 (20 Amp)
- C—Position 7 (30 Amp)
- D—Position 8 (20 Amp)
- E—Position 9 (20 Amp)

2. Locate the fuse panel (A) just to the right of seat.
3. Fuse (B) is a 20 amp fuse and controls the Windshield Wiper and Radio.
4. Fuse (C) is a 30 amp fuse and controls the Worklights, Turn Signals/Flashers, and Beacon Light (if equipped).
5. Fuse (D) is a 20 amp fuse and controls the Dome Light and Right Blower.
6. Fuse (E) is a 20 amp fuse and controls the Left Blower.
7. Test fuses with a voltmeter or test lamp and replace if burned out.
8. Never replace fuses with larger amp value. Replace with same type of fuse.

OUMX068,000068D-19-09NOV18

Service Miscellaneous

Using Proper Fuel (Diesel)

Use the proper diesel fuel to help prevent decreased engine performance and increased exhaust emissions. Failure to follow the fuel requirements listed below can void your engine warranty.

Consult your local fuel distributor for properties of the diesel fuel in your area.

In general, diesel fuels are blended to satisfy the low temperature requirements of the geographical area in which they are marketed.

Diesel fuels specified to EN 590 or ASTM D975 are recommended.

Required fuel properties

In all cases, the fuel shall meet the following properties:

Cetane number of 45 minimum. Cetane number greater than 50 is preferred, especially when temperatures are below -20°C (-4°F) or elevations above 1500 m (5000 ft).

Cold Filter Plugging Point (CFPP) should be at least 5°C (9°F) below the expected lowest temperature or Cloud Point below the lowest ambient temperature.

Fuel lubricity should pass a maximum scar diameter of 0.45 mm as measured by ASTM D6079 or ISO 12156-1.

IMPORTANT: Improper fuel additive usage may cause damage on fuel injection equipment of diesel engines.

If a fuel of low or unknown lubricity is used, addition of John Deere PREMIUM DIESEL FUEL CONDITIONER at the specified concentration is recommended.

Sulfur Content

- Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.
- Use only ultra low sulfur diesel (ULSD) fuel with a maximum of 0.0015% (15mg/kg) sulfur content.

IMPORTANT: Do not mix diesel engine oil or any other type of lubricating oil with diesel fuel.

Using Bio-Diesel Fuel

Bio-diesel fuels may be used only if the bio-diesel fuel properties meet the latest edition of ASTM D6751, ASTM D7467, EN14214, or equivalent specification.

The current maximum allowable bio-diesel concentration is a 5% blend (also known as B5) in petroleum diesel fuel.

Concentrations up to B20 may be used if machine is modified with genuine John Deere B20 kit. Use of B6-B20 fuel will require maintenance interval changes from

some components, and special procedures for fuel handling and machine storage.

To learn of any changes to the recommendations for bio-diesel usage with your diesel engine, ask your John Deere dealer or reference the Services and Support link on the John Deere Commercial and Consumer Equipment website.

Handling and Storing Diesel Fuel

CAUTION: Handle fuel carefully. Do not fill the fuel tank when engine is running.

Do not smoke while you fill the fuel tank or service the fuel system.

IMPORTANT: Do not use galvanized containers—diesel fuel stored in galvanized containers reacts with zinc coating in the container to form zinc flakes. If fuel contains water, a zinc gel will also form. The gel and flakes will quickly plug fuel filters and damage fuel injectors and fuel pumps.

- Fill the fuel tank at the end of each day's operation to prevent water condensation and freezing during cold weather.
- When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel and to prevent water condensation. Contact your fuel supplier for recommendations.

OUO1023,00004CA-19-15MAR13

Filling Fuel Tank

CAUTION: Fuel vapors are explosive and flammable:

- Shut engine off before filling fuel tank.
- Allow engine to cool before refueling.
- Do not smoke while handling fuel.
- Keep fuel away from flames or sparks.
- Fill fuel tank outdoors or in well ventilated area.
- Clean up spilled fuel immediately.
- Use clean approved non-metal container to prevent static electric discharge.

IMPORTANT: Dirt and water in fuel can cause engine damage:

- Clean dirt and debris from the fuel tank opening.
- Use clean, fresh, stabilized fuel.
- Fill the fuel tank at the end of each day's operation to keep condensation out of the fuel tank.

Service Miscellaneous

- If using a funnel, make sure it is plastic and has no screen or filter.

Fill fuel tank at the end of each day's operation to prevent condensation and freezing during cold weather.


1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Allow engine to cool.
3. Remove any trash from area around fuel tank cap.
4. Remove fuel tank cap slowly to allow any pressure built up in tank to escape.
5. Fill fuel tank only to bottom of filler neck. Do not overfill.
6. Install fuel tank cap.
 - Gas models: Turn cap until clicks.

OUC1023,00004CB-19-05AUG16

Using Service Latches

⚠ CAUTION: Avoid Injury! Unlatch service chain before moving the machine to avoid possible injury. The machine can become unstable when driving on slopes or at high speeds with front attachment raised or removed. Travel at slow speeds and avoid sudden braking with attachment raised or removed. The PTO continues to run after the attachment is raised. Turn off PTO when not in use.


1. Stop machine on a level surface, not a slope.
2. Turn off PTO switch.
3. Raise mower deck to highest level.
4. Lock the park brake.
5. Stop the engine and remove the key.
6. Wait for engine and all moving parts to stop before you leave the operator's seat.

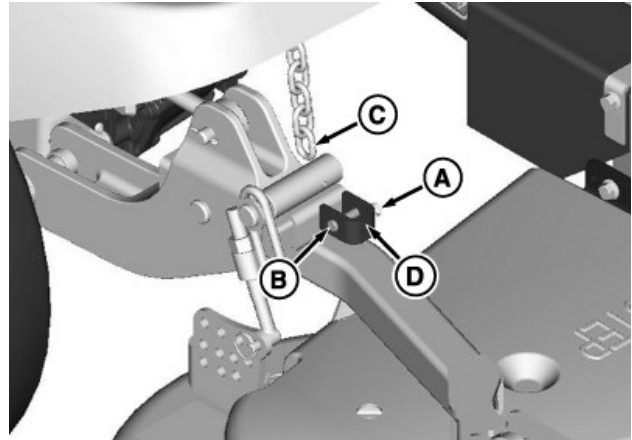

TCT010375—UN—20FEB14

7. Remove spring pin (A) and clevis pin (B) from mower deck lift arm.
8. Insert bottom link of service latch chain (C) into welded bracket (D) on mower deck lift arm.

NOTE: Service latch chain has 7 links to accommodate all configurations. Select chain link that provides the tightest fit.

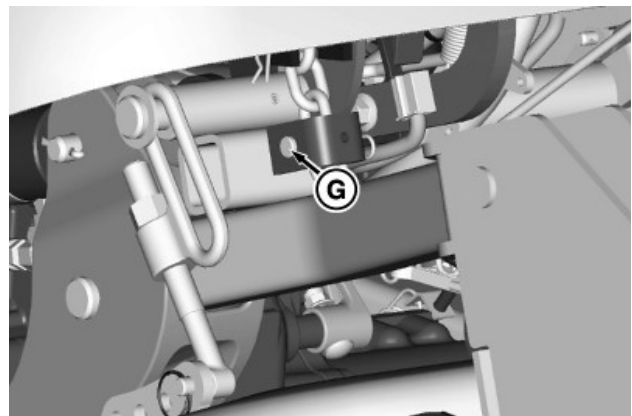

TCT010376—UN—20FEB14

9. Install clevis pin (G) through bracket and chain, and secure with spring pin.

OUMX068,00003B5-19-20FEB14

Servicing Cab Air Conditioner

NOTE: Compressor is filled with oil at the factory, you do not need to add oil.

Air Conditioner Checks


Check the following if air conditioner will not cool, or if cooling is intermittent:

IMPORTANT: Avoid damage! R134a refrigerant must be used. This requires special equipment and procedures. See your John Deere dealer.

Service Miscellaneous

NOTE: Some oil seepage from compressor shaft seal, on the lower front, is normal.

1. If air conditioner clutch slips after machine has been in storage, compressor may be stuck.
 - Stop engine and turn ignition switch to stop (off) position.
 - Raise hood and rotate clutch hub back and forth to free compressor.

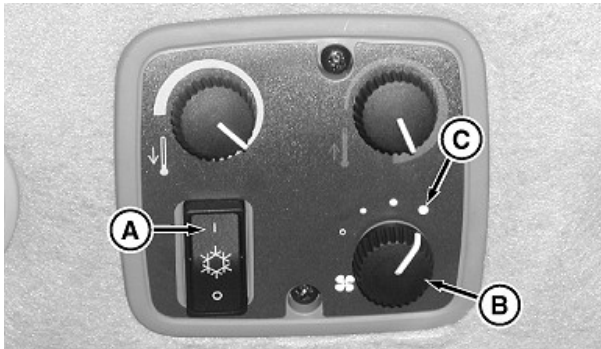


TCT008316—UN—13AUG13

2. Run engine at 2000 rpm. Push top half of A/C and defrost switch (A) and set blower control knob (B) to high position (C). If cooling is intermittent, clean hood grille, radiator and condenser. If problem is not solved, see your John Deere dealer.
3. Inspect operator enclosure (cab) filter for restriction. If problem persists, see your John Deere dealer to have evaporator core cleaned.

Cleaning Air Conditioner Condenser


CAUTION: Avoid injury! Compressed air can cause debris to fly a long distance.

- Clear work area of bystanders.
- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to 210 kPa (30 psi).

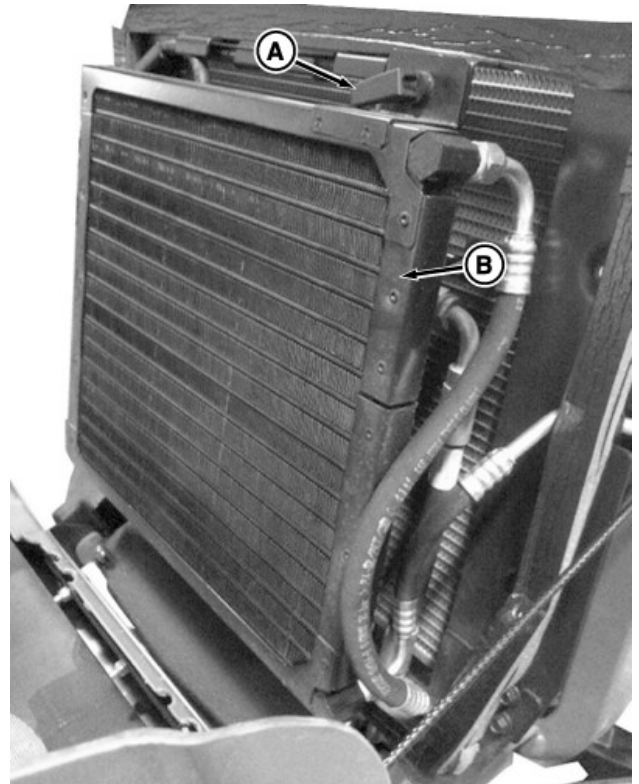

TCT007885—UN—21MAR14

1. Rotate handle (A) up and towards front of machine to release latch on air conditioner condenser (B).

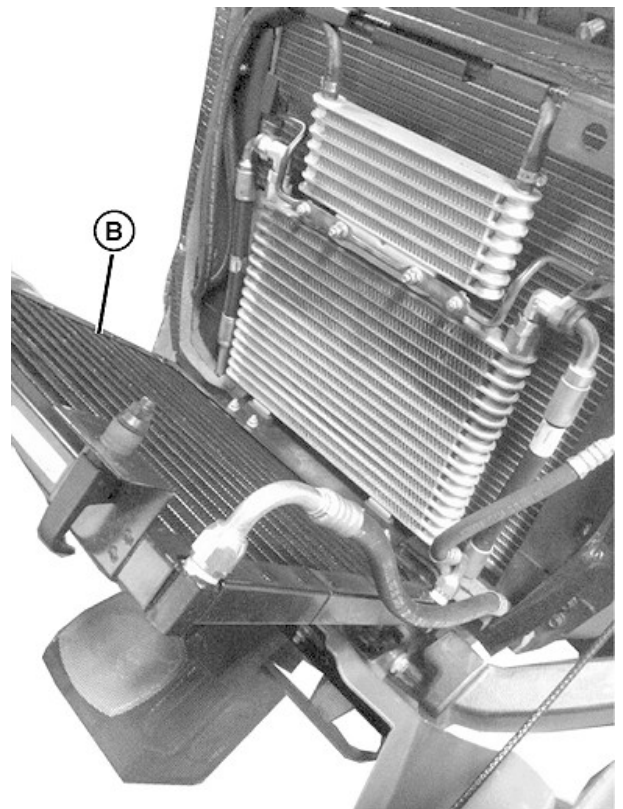

TCT008317—UN—13AUG13


2. Swing air conditioner condenser (B) forward, as shown.

Service Miscellaneous


3. Check air conditioner condenser (B) for dirt and debris. Clean condenser using a brush or compressed air.
4. If a more thorough cleaning is necessary, clean both sides of condenser with compressed air or water. Straighten any bent fins.

OUC02005,0000112-19-18DEC14

Cleaning Cab Air Filter

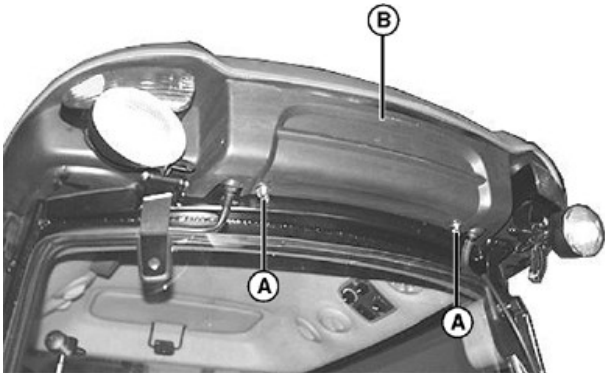

LVAL13682—UN—08NOV10

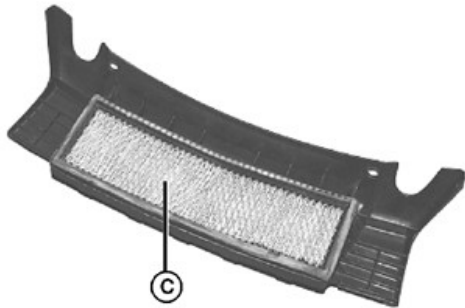


LVAL13683—UN—08NOV10

A—Wing Bolt (2 used)
B—Filter Base
C—Filter

1. Remove two wing bolts (A), washers, and filter base (B).
2. Remove filter (C) from filter base, and clean with compressed air. Inspect filter for damage. Replace if necessary.
3. Install filter back into filter base.

IMPORTANT: Avoid Damage! Be sure the six tabs (D) on the roof panel fit into the slots (E) on filter base.

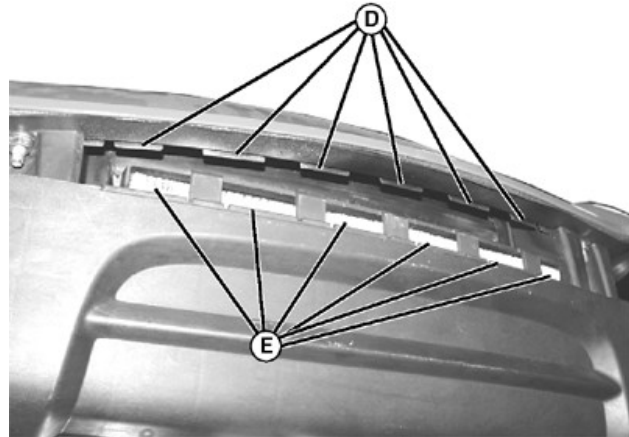

LVAL13684—UN—08NOV10

D—Tabs
E—Slots

4. Install filter base, making sure six tabs (D) on roof panel are installed into slots (E) in filter base. Secure base assembly back into roof panel with two washers and wing bolts.

OUMX258,0000A7B-19-21MAR13

Cleaning and Repairing Metal Surfaces

Cleaning:

Follow automotive practices to care for your vehicle painted metal surfaces. Use a high-quality automotive wax regularly to maintain the factory look of your vehicle's painted surfaces.

Repairing Minor Scratches (surface scratch):

1. Clean area to be repaired thoroughly.

IMPORTANT: Do not use rubbing compound on painted surfaces.

2. Use automotive polishing compound to remove surface scratches.
3. Apply wax to entire surface.

Repairing Deep Scratches (bare metal or primer showing):

1. Clean area to be repaired with rubbing alcohol or mineral spirits.
2. Use paint stick with factory-matched colors available from your authorized dealer to fill scratches. Follow directions included on paint stick for use and for drying.
3. Smooth out surface using an automotive polishing compound. Do not use power buffer.
4. Apply wax to surface.

OUC1023,00004CD-19-14MAR13

Service Miscellaneous

Cleaning Plastic Surfaces

IMPORTANT: Improper care of machine plastic surfaces can damage that surface:

- Do not wipe plastic surfaces when they are dry. Dry wiping will result in minor surface scratches.
 - Use a soft, clean cloth (bath towel, diaper, automotive mitt).
 - Do not use abrasive materials, such as polishing compounds, on plastic surfaces.
1. Rinse hood and entire machine with clean water to remove dirt and dust that may scratch the surface.
 2. Wash surface with clean water and a mild liquid automotive washing soap.
 3. Dry thoroughly to avoid water spots.
 4. Wax the surface with a liquid automotive wax. Use products that specifically say "contains no abrasives."

IMPORTANT: Do not use a power buffer to remove wax.

5. Buff applied wax by hand using a clean, soft cloth.

OUC1023,00004CE-19-14MAR13

2. Inspect cab protection system mounting hardware every 500 hours for proper torque or replacement.



TCT008318—UN—13AUG13

3. Lift up rubber floor mat (A) to access front mounting hardware.
4. Check two front mounting hardware locations (B).
5. Check mounting pivot hardware (C).
6. Tighten the mounting hardware to 260 N·m (192 lb.-ft.).
7. Repeat on opposite side of cab.

OUC2005,0000113-19-06MAR14

Checking Cab Rollover Protection System Installation

CAUTION: Avoid injury! To maintain operator protection and ROPS certification:

- Do not repair or revise the ROPS.
- Any alteration of the ROPS must be approved by the manufacturer.

IMPORTANT: Avoid damage! Make certain all parts are installed correctly. If cab protection system is loosened or removed for any reason, tighten mounting capscrews to specification.

The protection offered by cab protection system will be impaired if cab protection system is subjected to structural damage, as in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged cab protection system should be replaced, not reused. Any alteration to the cab protection system must be approved by the manufacturer.

1. When installation of equipment on a machine necessitates loosening or removing cab protection system, mounting capscrews should be tightened to specification.

Removing and Installing Front Wheels

CAUTION: Remove wheels safely.

- Use a safe lifting device and support machine securely on jack stands.
- Block front and rear of wheel not raised to prevent machine movement.
- Wheel can be heavy or difficult to handle when removing.

Raising Front of Machine


1. Park machine safely. (See Parking Safely in the Safety section.)
2. Remove attachment from the machine.
3. Block rear tires.

Service Miscellaneous



TCAL43399—UN—14MAR13


- Using a floor jack on the frame behind the front wheel, lift machine until front tire is off the ground. Do not use jack on transaxle or oil filter will be damaged.

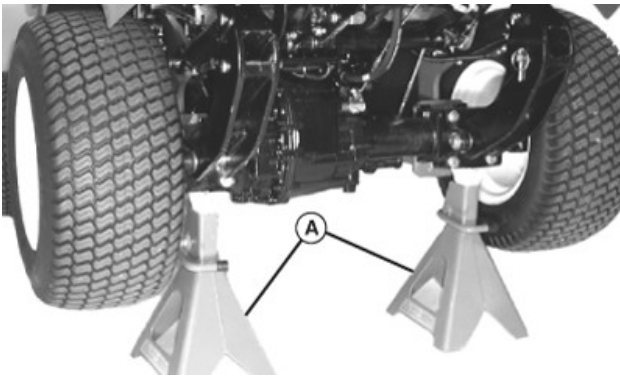

TCAL43400—UN—14MAR13

- Install jack stands (A) under left and right side of the front axle.

Removing Front Wheels

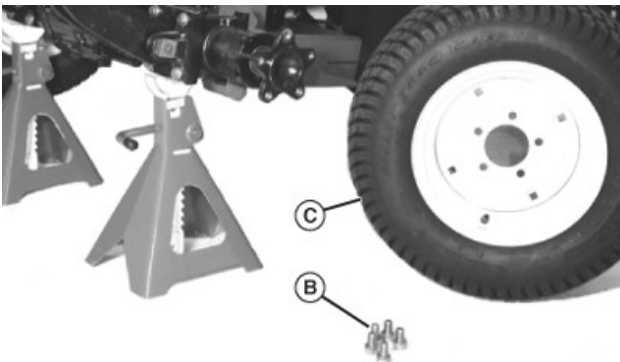

TCAL43401—UN—14MAR13

- Remove front wheel bolts (B), washers, and reinforcement plate.
- Remove front wheel (C) from the front axle.

Installing Front Wheels

CAUTION: Remove wheels safely.

- Use a safe lifting device and support machine securely on jack stands.
- Block front and rear of wheel not raised to prevent machine movement.

- Wheel can be heavy or difficult to handle when removing.



TCAL43402—UN—14MAR13

- Install wheels onto axle hubs with valve stems (A) facing outward. Make sure that there is a washer installed on each wheel bolt (B), and install bolts into the reinforcement plate, wheel, and hub.
- Tighten front wheel bolts to specifications using a torque wrench.

Specification

Front Wheel Bolts—Torque. 122 N·m (90 lb·ft)

- Lower machine to ground and remove floor jack.
- Remove wheel blocks from rear tires.
- Check wheel bolt torque:
 - After traveling 30 m (100 ft) while changing direction.
 - After 3—10 hours of use.
 - Often during the next 100 hours of operation.

OUC1023,00004D0-19-13MAR20

Removing and Installing Rear Wheels

CAUTION: Remove wheels safely.

- Use a safe lifting device and support machine securely on jack stands.
- Block front and rear of wheel not raised to prevent machine movement.
- Wheel can be heavy or difficult to handle when removing.

Raising Rear of Machine

- Park machine safely. (See Parking Safely in the SAFETY section.)

Service Miscellaneous



2. Using a floor jack at the center of the rear frame, lift machine until rear tires are off ground. Alternatively, the rear frame plate (A) can be used as a jacking or lifting point, but care must be taken not to damage the muffler (B).




3. Install jack stands under left and right side of the rear frame.
4. Lower machine onto jack stands.

Removing Rear Wheels – 2WD




1. Remove rear wheel bolt and washer (A) from the center of the rear wheel.
2. Pull wheel and tire assembly straight off the rear axle.

Removing Rear Wheels – 4WD

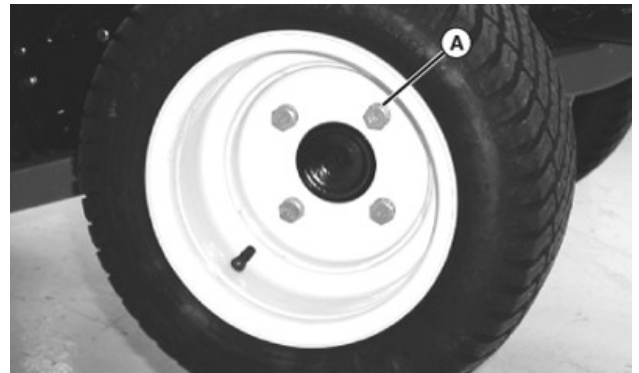

Remove wheel bolts and washers (A). Remove wheel from the rear axle.

Installing Rear Wheels – 2WD

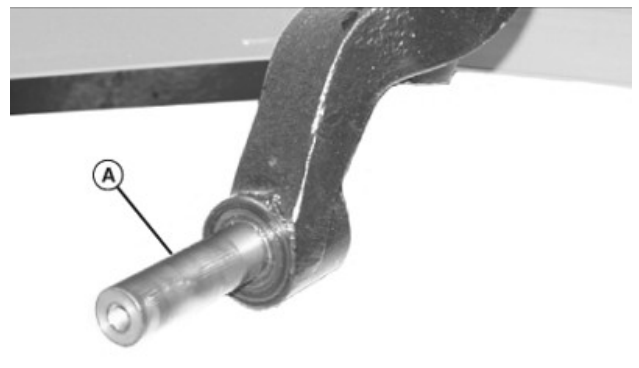

1. Apply recommended grease to the rear axle shaft (A) before installing rear wheel.
2. Install rear wheel onto the axle hub with valve stem facing outward.



3. Install washer and wheel bolt (B). Tighten rear wheel mounting bolt to specifications using torque wrench.


Specification

Rear Wheel Bolts—Torque. 82 N·m (60 lb·ft)

4. Raise up machine at center of the rear frame. Remove jack stands, and lower machine to the ground.

Service Miscellaneous

Installing Rear Wheels – 4WD

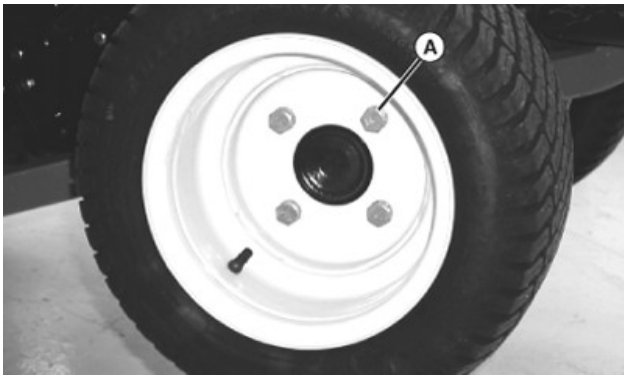

TCAL43409—UN—14MAR13

- 1. Install rear wheel onto the axle hub with valve stem facing outward.
- 2. Install washers and wheel bolts. Tighten rear wheel mounting bolts (A) to specifications using torque wrench.

Specification

Rear Wheel Bolt—Torque. 122 N·m (90 lb·ft)

- 3. Jack up the machine at center of the rear frame. Remove jack stands, and lower machine to the ground.

OUC1023,00004D1-19-13MAR20

Troubleshooting

Using Troubleshooting Chart

If you are experiencing a problem that is not listed in this chart, see your authorized dealer for service.

and you are still experiencing the problem, see your authorized dealer.

OUC1023,00004D2-19-14MAR13

When you have checked all the possible causes listed

Engine

IF	CHECK
Poor Engine Performance	Dirt in fuel system or fuel is old. Replace fuel with fresh stabilized fuel. Obtain fuel from another supplier before suspecting machine problems. Suppliers blend fuels differently and changing suppliers will generally solve any performance problems. Fuel blended for cold or warm climate may contribute to performance problems if used in the wrong season, especially if fuel is stored for several months or more. Obtain fresh fuel.
Engine Will Not Start (Starter Does Not Engage)	Seat switch not being actuated due to seat spring adjustment being too stiff. PTO switch is on. Master brake pedal is not depressed. Electrical problem - See Electrical Troubleshooting section.
Engine Will Not Start (Starter Engages and Turns Engine)	Fuel shutoff valve is in OFF position. Out of fuel or improper fuel. Plugged fuel filter. Electrical problem - See Electrical Troubleshooting section.
Engine Is Hard To Start	Improper use of choke or engine preheater. Plugged fuel filter. Stale or improper fuel.
Engine Runs Unevenly	Choke not fully off. Fuel line or fuel filter plugged. Stale or dirty fuel. Fuel injector clogged. Air cleaner element plugged.
Engine Misses Under Load	Choke not fully off. Stale or dirty fuel. Plugged fuel filter.
Engine Overheats	Engine air intake screen plugged. Engine coolant level is low. Engine oil level is low or too high. Engine operated too long at slow idle speed.
Engine Will Not Idle	Choke not used properly. Fuel level too low. Air cleaner element dirty. Operator rising off the seat without park brake locked.
Engine Knocks	Stale fuel. Engine overloaded. Low engine speed.
Engine Stops or Misses when Operating on Hillsides	Fuel level too low. Operator rising off the seat.
Engine Backfires	Operator rising off the seat.
Engine Loses Power	Engine overheating. Too much oil in engine. Dirty air cleaner. Travel speed is too fast for conditions. Improper fuel.
Black Exhaust Smoke	Choke not fully off. Air filter element is dirty.

OUC1023,00004D3-19-15MAR13

Troubleshooting

Electrical

IF	CHECK
Starter Does Not Engage	Brake pedal is not depressed. PTO switch is in ON position. Battery not charged. Fuse is blown.
Battery Will Not Charge	Dead cell in the battery. Battery cables and terminals are dirty. Low engine speed or excessive idling.
Indicator Lamps Not Working	Light plug disconnected. Loose or burned-out bulb.

OUO1023,00004D4-19-15MAR13

Machine

IF	CHECK
Machine Will Not Move with Engine Running	Transaxle bypass valve plate is in engaged position.

OUO1023,00004D5-19-15MAR13

Storage

Storing Safety

⚠ CAUTION: Fuel vapors are explosive and flammable. Engine exhaust fumes contain carbon monoxide and can cause serious illness or death:

- Run the engine only long enough to move the machine to or from storage.
- Machine fires and structure fires can occur if a machine is stored before allowing it to cool, or if debris is not removed from around the engine and muffler, or if stored near combustible materials.
- Do not store vehicle with fuel in the tank inside a building where fumes may reach an open flame or spark.
- Allow the engine to cool before storing the machine in any enclosure.

OUO1023,00004D6-19-14MAR13

Preparing Machine for Storage

1. Repair any worn or damaged parts. Replace parts if necessary. Tighten loose hardware.
2. Repair scratched or chipped metal surfaces to prevent rust.
3. Remove grass and debris from machine.
4. Clean under the deck and remove grass and debris from inside chute and bagger.
5. Wash the machine and apply wax to metal and plastic surfaces.
6. Run machine for five minutes to dry belts and pulleys.
7. Apply light coat of engine oil to pivot and wear points to prevent rust.
8. Lubricate grease points and check tire pressure.

OUO1023,00004D7-19-14MAR13

Preparing Fuel and Engine For Storage

Fuel:

If you have been using "Stabilized Fuel," add stabilized fuel to tank until the tank is full.

NOTE: Filling the fuel tank reduces the amount of air in the fuel tank and helps reduce deterioration of fuel.

If you are not using "Stabilized Fuel:"

1. Park machine safely in a well-ventilated area. (See Parking Safely in the SAFETY section.)

NOTE: Try to anticipate the last time the machine will be used for the season so very little fuel is left in the fuel tank.

2. Turn on engine and allow to run until it runs out of fuel.
3. For machines equipped with key switch, turn key to off position.

IMPORTANT: Stale fuel can produce varnish and plug carburetor or injector components and affect engine performance.

- Add fuel conditioner or stabilizer to fresh fuel before filling tank.

4. Mix fresh fuel and fuel stabilizer in separate container. Follow stabilizer instructions for mixing.
5. Fill fuel tank with stabilized fuel.
6. Run engine for a few minutes to allow fuel mixture to circulate through carburetor on gas engine or fuel injectors on diesel engine.

Engine:

Engine storage procedure should be used when vehicle is not to be used for longer than 60 days.

1. Change engine oil and filter while engine is warm.
2. Service air filter if necessary.
3. Clean debris from engine air intake screen.
4. On gas engines:
 - Remove spark plugs. Put 30 mL (1 oz) of clean engine oil in cylinder(s).
 - Install spark plugs, but do not connect spark plug wires.
 - Crank the engine five or six times to allow oil to be distributed.
5. Clean the engine and engine compartment.
6. Remove battery.
7. Clean the battery and battery posts. Check the electrolyte level, if your battery is not maintenance free.
8. Close fuel shut-off valve, if your machine is equipped.
9. Store the battery in a cool, dry place where it will not freeze.

NOTE: The stored battery should be recharged every 90 days.

10. Charge the battery.

Storage

IMPORTANT: Prolonged exposure to sunlight could damage the hood surface. Store machine inside or use a cover if stored outside.

11. Store the vehicle in a dry, protected place. If vehicle is stored outside, put a waterproof cover over it.

OUO1023,00004D8-19-14MAR13

Storage for BioDiesel Fuel

IMPORTANT: Biodiesel fuel must be used within three months of the date of production by the fuel supplier.

Before placing a biodiesel fueled machine in long term storage (without operating the engine):

- Drain all biodiesel fuel from the fuel tank.
- Fill the tank with conventional petroleum fuel as indicated in the Operator's Manual.
- Start the engine and run for a minimum of five hours.

OUO1023,00004D9-19-14MAR13

Removing Machine From Storage

1. Check tire pressure.
2. Check engine oil level.
3. Check battery electrolyte level, if your battery is not maintenance free. Charge battery if necessary.
4. Install battery.
5. On gas engines: Check spark plug gap. Install and tighten plugs to specified torque.
6. Lubricate all grease points.
7. Open fuel shut-off valve, if your machine is equipped.
8. Run the engine 5 minutes without the mower or any attachments running to allow oil to be distributed throughout engine.
9. Be sure all shields and guards or deflectors are in place.

OUO1023,00004DA-19-14MAR13

Assembly

Parking Safely


1. Stop machine on a level surface, not on a slope.
2. Disengage mower blades or any other attachments.
3. Lower attachments to the ground.
4. Lock the park brake.
5. Stop the engine.
6. Remove the key.
7. Wait for engine and all moving parts to stop before you leave the operator's seat.
8. Close fuel shut-off valve, if your machine is equipped.
9. Disconnect the negative battery cable or remove the spark plug wire(s) (for gasoline engines) before servicing the machine.

OUO2005.0000215-19-05FEB13

Assemble Machine

1. Place pallet on flat, level surface, with enough room to work safely. Remove pallet from work area after dismantling to prevent injuries from falls, nails, and splinters.
2. Remove plastic cover from machine.

IMPORTANT: Avoid damage! If using an overhead hoist to raise front of machine, do not hook to the steering wheel, operator's platform, or any other location that is not a part of the structural frame!

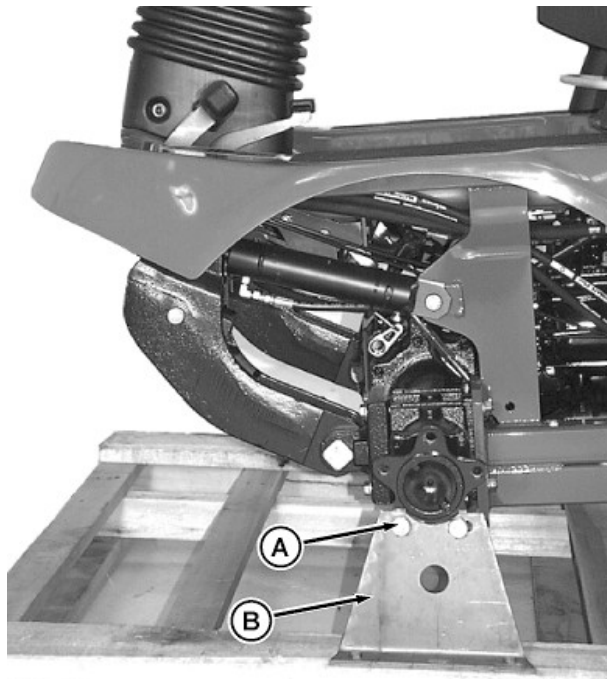

TCT009073—UN—30OCT13

3. Using a floor jack under the front transaxle housing,

take the weight off of the front axle until the lug bolts and washers (A) can be removed from the shipping brackets (B).

4. Remove four lug bolts and washers from left and right side of front axle.
5. Remove shipping brackets from left and right side of shipping container.
6. Lift front of machine high enough to install front wheels.
7. Locate bag of parts. Remove bag from machine and take out six lug bolts and six lock washers.
8. Install seat and power outlet.



TCT009074—UN—30OCT13

9. Install wheels onto axle hubs with valve stems facing outward. Make sure there is a washer installed on each wheel bolt, and install bolts into reinforcement plate (C), wheel, and hub. Tighten bolts to 225 N·m (165 lb.-ft.).
10. Lower machine off of floor jack.



TCT009075—UN—30OCT13

11. Using a pry bar and hammer, remove the wheel

Assembly

blocks (D) from behind the left and right side rear tires.

12. Cut shipping straps holding rear axle to pallet.
13. Drive machine straight off of pallet.

OUO2005,0000298-19-05NOV13

Charge and Connect Battery

CAUTION: Avoid injury! The battery produces a flammable and explosive gas. The battery may explode:

- Do not smoke or have open flame near battery.
 - Wear eye protection and gloves.
 - Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.
 - Do not jump start or charge a frozen battery. Warm battery to 16°C (60°F).
1. Remove and discard the red positive (+) protective cap from the positive (+) battery terminal.
 2. Charge the battery.
 - Battery is fully charged at 12.6 volts.
 3. Connect positive (+) battery cable to battery.
 4. Connect negative (–) battery cable.
 5. Apply general purpose grease or silicone spray to terminal to help prevent corrosion.
 6. Slide red cover over positive battery cable.

OUO2005,0000299-19-05NOV13

Check Tire Pressure

CAUTION: Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

1. Check tires for damage.
2. Check tire pressure with an accurate gauge.
3. Check that tires have equal air pressure. Add or remove air, if necessary. (See SPECIFICATIONS Section for correct tire pressures.)


OUO2005,000029A-19-27MAR14

Checking Engine Oil Level

IMPORTANT: Avoid damage! Avoid dirt and other contaminants from entering the oil dipstick tube location. Clean area around dipstick before removing.

Failure to check the oil level regularly could lead to serious engine problems if oil level is low:


- Check oil level before operating.
 - Check oil level when the engine is cold and not running.
 - Keep level between the full and the add marks.
 - Shut off engine before adding oil.
 - Check oil level twice a day if you run engine over 4 hours a day.
1. Park machine safely. (See Parking Safely in the SAFETY section.)
 2. Tilt operator's seat platform forward.

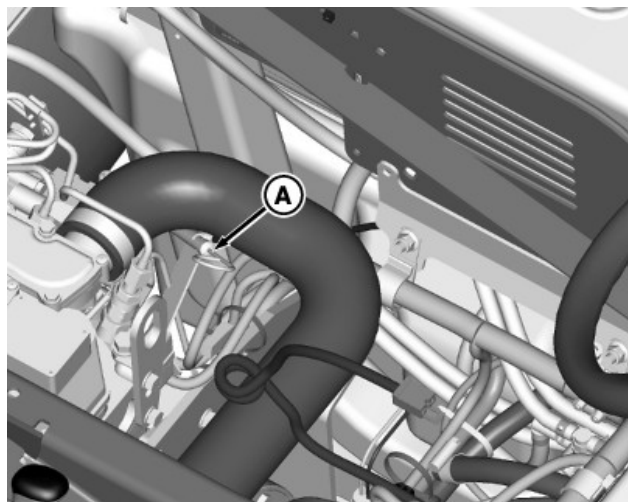

TCT010630—UN—21MAR14


Picture Note: Model 1550 shown.

Assembly

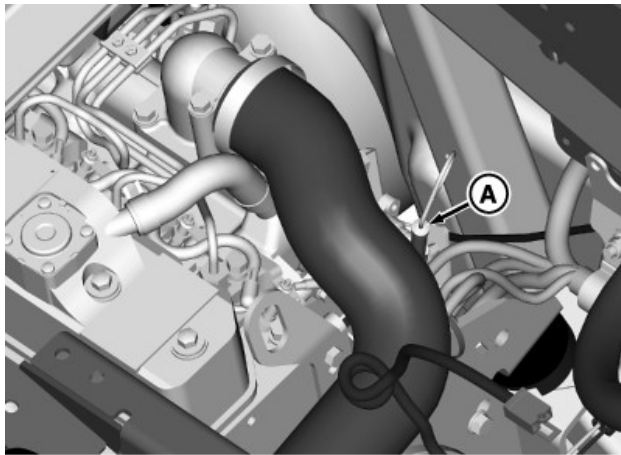

TCT010753—UN—27MAR14


Picture Note: Model 1570, 1575 shown.

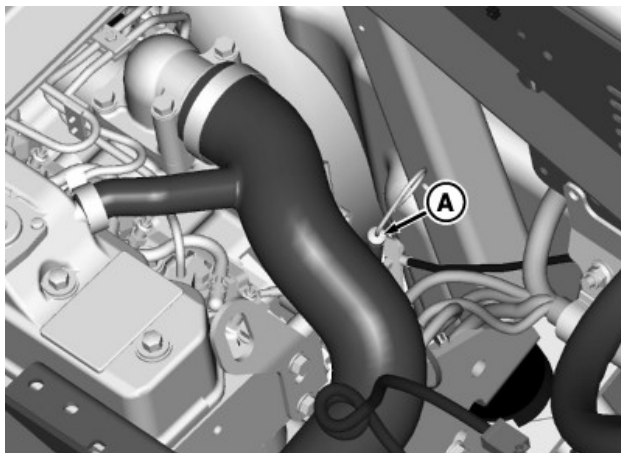

TCT010754—UN—27MAR14

Picture Note: Model 1580, 1585 shown.

3. Remove dipstick (A) located on the left side of the engine under the seat. Wipe dipstick with a clean cloth.

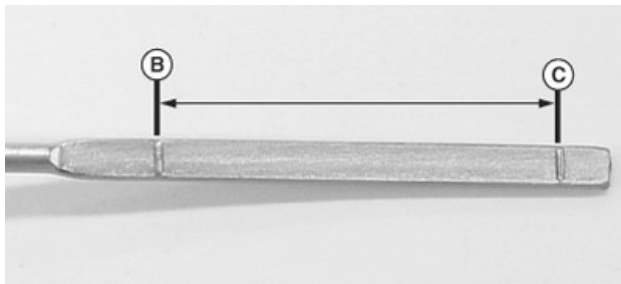


TCAL43345—UN—14MAR13

4. Install dipstick, then remove again. Check oil level. Oil should be between levels (B) and (C) on the dipstick.
 - If oil is low, add oil to bring oil level no higher than level (B) on the dipstick.
 - If oil is above level (B) on the dipstick, drain to proper level.
5. Install dipstick.

6. Lower operator's seat platform.


OUMX068,0000693-19-27MAR14

Raise ROPS

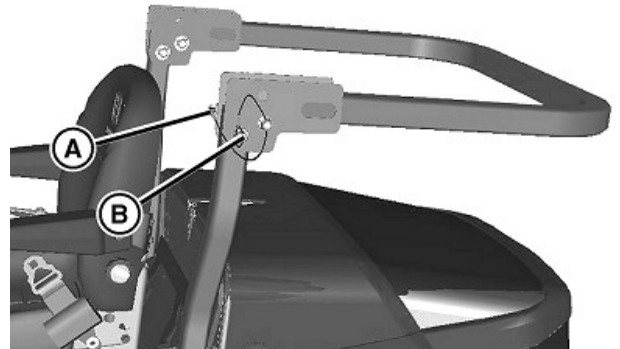

TCT007882—UN—11JUL13

1. Remove spring pin (A) from drilled pin (B) on left and right side of ROPS.
2. Remove drilled pin from left and right side of ROPS.

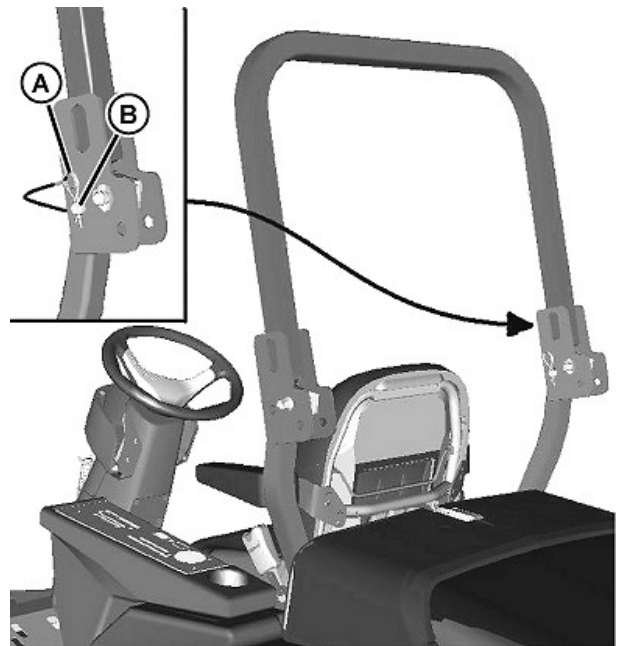


TCT007883—UN—01NOV13

3. Push ROPS into upright position.
4. Install drilled pin (B) into holes on left and right side of ROPS, and secure in place with spring pins (A).

OOU2005,000029B-19-05NOV13

Assembly

Testing Safety Systems

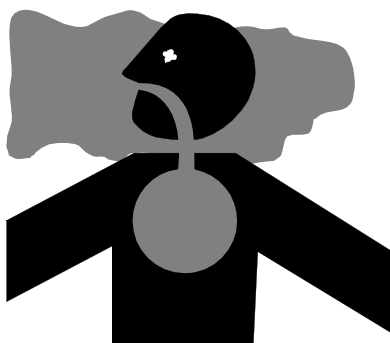

TCAL41599—UN—22JAN13

CAUTION: Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.

- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.
- Connect a pipe extension to the engine exhaust pipe to direct the exhaust fumes out of the area.
- Allow fresh outside air into the work area to clear the exhaust fumes out.

The safety systems installed on your machine should be checked before each machine use. Be sure you have read the machine operator manual and are completely familiar with the operation of the machine before performing these safety system checks.

Use the following checkout procedures to check for normal operation of machine.

If there is a malfunction during one of these procedures, do not operate machine. **See your authorized dealer for service.**

Perform these tests in a clear open area. Keep bystanders away.

OUO1023,0000464-19-14MAR13

Testing PTO Switch

1. Sit on the seat and verify seat is properly adjusted for operator's weight. (Seat should spring down slightly so seat switch is actuated.)
2. Lock the park brake.
3. Turn on the PTO switch: Pull PTO knob on switch up to the "ON" position.
4. Try to start engine.

Result: The starting motor must not engage. If it does, there is a problem with the safety interlock circuit.

5. Unlock the park brake (keep the PTO switch on). Try to start engine.

Result: The starting motor must not engage. If it does, there is a problem with the safety interlock circuit.

OUO2005,0000062-19-04NOV13

Testing Seat and Park Brake Switch

1. Sit on the seat and verify seat is properly adjusted for operator's weight. (Seat should spring down slightly so seat switch is actuated.)
2. Turn off the PTO switch: Push PTO knob on switch down to the "OFF" position.
3. Push down master brake pedal.
4. Start engine.
5. Release master brake pedal.
6. Rise up off of seat, but do not get off machine.

Result: Engine should stop after a few seconds. If engine does not stop, there is a problem with the safety interlock circuit.

OUO2005,0000063-19-04NOV13

Testing the Park Brake

Stop machine on a 17° slope (30% grade). Stop the engine and lock the park brake.

Result: Park brake must hold the machine stationary. (ANSI standards permit movement of no more than 61cm (24 in.) in one hour.) If machine moves more than that, brakes need to be adjusted. See your John Deere Dealer.

OUO1023,0000467-19-13MAR13

Specifications

Engine

1550 Engine

Engine Model Number	Yanmar 3TNV80
Engine Type	4-Cycle, 3-Cylinder, In-Line Diesel
Displacement	1.267 L (77.3 cu in.)
Bore	.80 mm (3.15 in.)
Stroke	.84 mm (3.31 in.)
Valve Clearance	0.2 mm (0.008 in.)
Cooling	Liquid Cooled
Injection Type	Indirect
Air Cleaner	Dry, Replaceable Dual Element
Starting Aid	Glow Plugs

1570, 1575 Engine

Engine Model Number	Yanmar 3TNV82A
Engine Type	4-Cycle, 3-Cylinder, In-Line Diesel
Displacement	1.331 L (81.2 cu in.)
Bore	.82 mm (3.07 in.)
Stroke	.84 mm (3.31 in.)
Valve Clearance	0.2 mm (0.008 in.)
Cooling	Liquid Cooled
Injection Type	Direct
Air Cleaner	Dry, Replaceable Dual Element
Starting Aid	Glow Plugs

1580, 1585 Engine

Engine Model Number	Yanmar 3TNV88
Engine Type	4-Cycle, 3-Cylinder, In-Line Diesel
Displacement	1.642 L (100.2 cu in.)
Bore	.88 mm (3.46 in.)
Stroke	.90 mm (3.54 in.)
Valve Clearance	0.2 mm (0.008 in.)
Cooling	Liquid Cooled
Injection Type	Direct
Air Cleaner	Dry, Replaceable Dual Element
Starting Aid	Glow Plugs

OUO2005,000007C-19-27MAR14

Capacities

Fuel Tank	60.5 L (16.0 gal)
Coolant (1550)	7.1 L (7.5 qt)
Coolant (1570, 1575, 1580, 1585)	7.6 L (8.0 qt)
Hydrostatic Transmission (2WD)	8.5 L (9 qt)
Hydrostatic Transmission (1550, 1570; 4WD)	8.7 L (9.2 qt)
Hydrostatic Transmission (1575, 1580, 1585)	10.0 L (10.5 qt)
Rear Axle (4WD)	4.7 L (5 qt)
Engine Oil Capacity 1550 (with Filter)	3.1 L (3.3 qt)
Engine Oil Capacity 1570, 1575, 1580, 1585 (with Filter)	4.1 L (4.3 qt)
Cab Refrigerant	1.13 kg (2.5 lbs)

OUO2005,000007D-19-09NOV18

Specifications

Tightening Torques

Front Wheels	122 N·m (90 lb·ft)
Rear Wheels - 4WD	122 N·m (90 lb·ft)
Rear Wheels - 2WD	82 N·m (60 lb·ft)

OUO2005,000007F-19-13MAR20

Travel Speeds

1550, 1570, 1575

Forward	0-12 km/h (0-7.5 mph)
Reverse	0-5 km/h (0-3.1 mph)

1580, 1585

Forward (Low Range)	0-13.7 km/h (0-8.5 mph)
Forward (High Range)	0-24.1 km/h (0-15.0 mph)
Reverse (Low Range)	0-6.8 km/h (0-4.2 mph)
Reverse (High Range)	0-12.9 km/h (0-8.0 mph)

OUO2005,0000080-19-30JUL13

Tire Dimensions

1550, 1570

Front Drive Tires - Standard	23x10.50-12
Front Drive Tires - Optional	23x8.50-12
Front Drive Tires - Dual	23x8.50-12
Rear Tires - 2WD	18x8.50-8
Rear Tires - 4WD	18x8.50-10

1575

Front Drive Tires - Standard	23x10.5-12
Rear Tires	18x8.5-10

1580, 1585

Front Drive Tires - Standard	26x12-12
Rear Tires	20x10-10

OUO2005,0000081-19-30JUL13

Specifications

Tire Inflation Pressures

1550

Front and Rear Tires 140 kPa (20 psi)

1570, 1575

Front 140 kPa (20 psi)

Rear Tires - 2 wheel drive 140 kPa (20 psi)

Rear Tires - 4 wheel drive 220 kPa (32 psi)

1580, 1585

Front 210 kPa (30 psi)

Rear Tires 220 kPa (32 psi)

OUO2005,000007E-19-18DEC14

Dimensions

Height (With Cab) 2.2 m (86.6 in.)

Width (With Standard Tires) 1.3 m (51.7 in.)

Length (Without Mower Deck) 2.2 m (86.6 in.)

Wheelbase 1.3 m (49.2 in.)

Weight (Without Mower Decks or Fuel) 844 kg (1860 lb.)

Ground Clearance (1550, 1570, 1575) 16.5 cm (6.5 in.)

Ground Clearance (1580, 1585) 17.8 cm (7 in.)

OUO2005,0000082-19-17MAR14

Sound Measurements

Averaged Sound Level at Work Station According to ISO 11201:1995

Item	Specification
1550 without mower deck	85 ± 1 dB(A) at 3170 r/min engine speed
1570 without mower deck	84 ± 1 dB(A) at 3090 r/min engine speed
1575 without mower deck	86 ± 1 dB(A) at 3170 r/min engine speed
1580 without mower deck	84 ± 1 dB(A) at 3080 r/min engine speed
1585 without mower deck	87 ± 1 dB(A) at 3210 r/min engine speed

OUO2005,000029C-19-26JUN14

Sound Level

Measurement method in accordance with Directive 2009/63/EC (2)

Item	Specification
Maximum pass-by noise	84 dB(A)

OUO2005,000029D-19-26JUN14

Specifications

Vibration Measurements

The total vibration which the "hand-arm" system is subjected does not exceed a weighted 2.5 m/s² rms.

Whole Body Measured Per ISO5395-1 0.4 to 1.0 ± 0.1 m/s²

NOTE: The value or range listed above represents the weighted root means square acceleration to which the whole body is subjected on a representative machine during actual mowing and transport conditions. The acceleration value depends upon the roughness of the ground, the speed at which the tractor is operating and the operator weight and driving habits. Measurements were obtained through actual field data according to STD Procedure in ISO5395-1.

Vibration

Local John Deere dealers can provide assistance in assessing vibration stress.

Measures to reduce vibration may include:

OUO2005,000029E-19-07JAN15

- Appropriate style of driving, e.g. not too fast
- Correctly adjusted operator's seat
- Correct tire pressure
- Machine serviced to maintenance plan

OUO2005,000029F-19-09NOV18

Sound Measurements 60 in. Side-Discharge Mower Deck

Sound Measurements

1550 Front Mower	86 ± 1 dB(A) at 3140 r/min engine speed
1570 Front Mower	86 ± 1 dB(A) at 3085 r/min engine speed
1575 Front Mower	85 ± 1 dB(A) at 3150 r/min engine speed
1580 Front Mower	86 ± 1 dB(A) at 3100 r/min engine speed
1585 Front Mower	88 ± 1 dB(A) at 3180 r/min engine speed

Sound Power Measurements

1570 Front Mower	102 ± 1 dB(A) at 3085 r/min engine speed
1575 Front Mower	103 ± 1 dB(A) at 3150 r/min engine speed
1580 Front Mower	105 ± 1 dB(A) at 3100 r/min engine speed
1585 Front Mower	106 ± 1 dB(A) at 3180 r/min engine speed

OUMX068,0000676-19-07JAN15

Sound Measurements 60 in. GLC Side-Discharge Mower Deck

Sound Measurements

1570 Front Mower	93 ± 1 dB(A) at 3090 r/min engine speed
1580 Front Mower	93 ± 1 dB(A) at 3000 r/min engine speed
1585 Front Mower	88 ± 1 dB(A) at 3070 r/min engine speed

Specifications

Sound Power Measurements

1570 Front Mower	108 ± 1 dB(A) at 3090 r/min engine speed
1580 Front Mower	107 ± 1 dB(A) at 3000 r/min engine speed
1585 Front Mower	108 ± 1 dB(A) at 3040 r/min engine speed

OUMX068,0000677-19-07JAN15

Sound Measurements 62 in. Rear-Discharge Mower Deck

Sound Measurements

1550 Front Mower	87 ± 1 dB(A) at 3150 r/min engine speed
1570 Front Mower	86 ± 1 dB(A) at 3080 r/min engine speed
1575 Front Mower	83 ± 1 dB(A) at 3140 r/min engine speed
1580 Front Mower	86 ± 1 dB(A) at 3060 r/min engine speed
1585 Front Mower	87 ± 1 dB(A) at 3210 r/min engine speed

Sound Power Measurements

1570 Front Mower	103 ± 1 dB(A) at 3080 r/min engine speed
1575 Front Mower	103 ± 1 dB(A) at 3140 r/min engine speed
1580 Front Mower	104 ± 1 dB(A) at 3060 r/min engine speed
1585 Front Mower	104 ± 1 dB(A) at 3060 r/min engine speed

OUMX068,0000678-19-07JAN15

Sound Measurements 72 in. Side-Discharge Mower Deck

Sound Measurements

1550 Front Mower	87 ± 1 dB(A) at 3150 r/min engine speed
1570 Front Mower	85 ± 1 dB(A) at 3080 r/min engine speed
1575 Front Mower	86 ± 1 dB(A) at 3140 r/min engine speed
1580 Front Mower	85 ± 1 dB(A) at 3050 r/min engine speed
1585 Front Mower	87 ± 1 dB(A) at 3160 r/min engine speed

Sound Power Measurements

1570 Front Mower	103 ± 1 dB(A) at 3080 r/min engine speed
1575 Front Mower	104 ± 1 dB(A) at 3140 r/min engine speed
1580 Front Mower	105 ± 1 dB(A) at 3050 r/min engine speed
1585 Front Mower	104 ± 1 dB(A) at 3160 r/min engine speed

OUMX068,0000679-19-07JAN15

Specifications

Sound Measurements 72 in. GLC Side-Discharge Mower Deck

Sound Measurements

1570 Front Mower	95 ± 1 dB(A) at 3060 r/min engine speed
1580 Front Mower	93 ± 1 dB(A) at 3000 r/min engine speed
1585 Front Mower	89 ± 1 dB(A) at 3070 r/min engine speed

Sound Power Measurements

1570 Front Mower	108 ± 1 dB(A) at 3060 r/min engine speed
1580 Front Mower	107 ± 1 dB(A) at 3000 r/min engine speed
1585 Front Mower	107 ± 1 dB(A) at 3070 r/min engine speed

OUMX068,000067A-19-07JAN15

Declaration of Conformity

EC Declaration of Conformity

Deere & Company
Moline, Illinois U.S.A.

The person named below declares that

Machine Type: Front Mower (DSL FRT MOW)

Models: 1550

Serial Numbers: See Product Identification Page

fulfills all relevant provisions and essential requirements of the following directives:

DIRECTIVE	NUMBER	CERTIFICATION METHOD
Machinery Directive	2006/42/EC	Self-Certification
Electromagnetic Compatibility Directive	2014/30/EU	Self-Certification
Noise Directive	2000/14/EC (Annex VI, Procedure 2)	Third-Party Certification
		NOTIFIED BODY
Measured Sound Power Level		AV Technology Unit 2 Easter Court Europa Boulevard Warrington, Cheshire WA5 7ZB, United Kingdom
1550	103.6 dB(A)	
Guaranteed Sound Power Level		
1550	105 dB(A)	

Name and address of the person in the European Community authorized to compile the technical construction file:

Brigitte Birk
John Deere GmbH & Co. KG
Mannheim Regional Center
John Deere Strasse 70
D-68163 Mannheim

Place of Declaration: Fuquay-Varina, NC USA

Date of Declaration: 31 January 2016

Manufacturing Unit: John Deere Turf Care



DXCE01—UN—28APR09

TCT015240—UN—28MAR17

Name: Dan Thiemke

Title: Product Engineering Manager, Commercial
Mowing

OUO2005,0000370-19-17JUL17

Declaration of Conformity

EC Declaration of Conformity

Deere & Company
Moline, Illinois U.S.A.

The person named below declares that

Machine Type: Front Mower (DSL FRT MOW)

Models: 1570, 1575, 1580, 1585

Serial Numbers: See Product Identification Page

fulfills all relevant provisions and essential requirements of the following directives:

DIRECTIVE	NUMBER	CERTIFICATION METHOD
Machinery Directive	2006/42/EC	Self-Certification
Electromagnetic Compatibility Directive	2014/30/EU	Self-Certification

Name and address of the person in the European Community authorized to compile the technical construction file:

Brigitte Birk
John Deere GmbH & Co. KG
Mannheim Regional Center
John Deere Strasse 70
D-68163 Mannheim

Place of Declaration: Fuquay-Varina, NC USA

Date of Declaration: 31 January 2016

Manufacturing Unit: John Deere Turf Care



DXCE01—UN—28APR09

TCT015240—UN—28MAR17

Name: Dan Thiemke

Title: Product Engineering Manager, Commercial
Mowing

MX00654,0000032-19-17JUL17

Service Statement

John Deere Parts



TCT007370—UN—07MAY13

We help minimize downtime by putting genuine John Deere parts in your hands in a hurry.

That is why we maintain a large and varied inventory; to stay a jump ahead of your needs.

OUMX068,00004C0-19-07MAY13

Training schools are held regularly to be sure that our personnel know your equipment and how to maintain it. Result? - Experience you can count on!

OUMX068,00004C2-19-07MAY13

Prompt Service



TCT007589—UN—07MAY13

Our goal is to provide prompt, efficient care when you want it and where you want it.

We can make repairs at your place or at ours, depending on the circumstances: see us, depend on us.

John Deere Service Superiority: We are around when you need us.

OUMX068,00004C3-19-07MAY13

The Right Tools



TCT007371—UN—07MAY13

Precision tools and testing equipment enable our Service Department to locate and correct troubles quickly, to save you time and money.

OUMX068,00004C1-19-07MAY13

Well-Trained Technicians



TCT007588—UN—07MAY13

School is never out for John Deere service technicians.

Service Record

Record Service Dates

Oil Change	Oil Filter Change	Lubricate Machine	Air Cleaner Element Check/Clean	Fuel Filter Change	Coolant Change

TH84124,000022B-19-05SEP12

Index

A	F
Air Cleaner Elements, Servicing 47	Filter Restriction Indicator, Checking 46
Alternator Belt, Adjusting 53	Four Wheel Drive (1550, 1570 and 1575).....29
Assemble Machine 77	Four Wheel Drive (1580 and 1585) 30
Attachment, Raising and Lowering 32	Fuel filter
Axle Pivot Pin, Lubricating.....39	Changing (1570, 1575, 1580 and 1585).....52
	Servicing (1550) 51
B	Fuel safety.....17
Battery and Terminals, Cleaning 62	Fuel shutoff valve, using 31
Battery, Charge and Connect at Assembly.....78	Fuel Storage.....75
Battery, Removing and Installing 61	Fuel system
Battery, Service Safely.....61	Priming.....52
Battery, Using Booster 62	Fuel Tank, Filling.....65
Belt, Replacing Alternator.....53	Fuses
Brake Pedal Linkage, Lubricating.....41	Checking and replacing.....63
Brake, Testing Park.....24, 80	Cab, 1575 and 1585 64
Brakes, Using 31	
Break-In Service Intervals 37	G
	Grease 39
C	H
Cab air filter, cleaning 68	Hose and Clamp Check, Air Intake 48
Cab controls 27	Hose Check, Radiator.....48
Cab, Checking ROPS Installation	Hydrostatic Linkage, Lubricating.....40
ROPS Installation, Checking Cab 69	
Cab, Entering and Exiting 23	M
Cab, Servicing Air Conditioner	Measurements
Air Conditioner, Servicing Cab 66	Sound 83
Cleaning Oil Cooler and Radiator 45	Vibration 84
Controls, Operator Station.....18	Metal Surfaces, Repairing and Cleaning 68
Coolant Level, Checking 49	Moving Machine 34
Coolant, Engine.....48	
Cooling System, Service Safely 49	O
Cooling System, Servicing.....50	Oil Level, Transaxle 55
Creep Adjust 56	Oil, Changing Transaxle 55
	Oil, Engine.....42
D	Operator display, using 30
Diesel Fuel, Using 65	Operator Training Required 11
Dust Unloading Valve, Cleaning 48	
E	P
Electrical Troubleshooting 74	Parts, Replacement 36
Electrolyte Level, Checking Battery 61	Pedal, Using Traction Assist 31
Emissions	Pedals, Using Hydrostatic 31
Required language	Plastic and Painted Surfaces, Avoid Damage To ...23
EPA 2	Plastic Surfaces, Cleaning.....69
Engine Cover, Opening 28	Preparation 11
Engine oil	PTO Shaft, Lubricating.....40
Level, checking 43, 78	PTO Switch, Testing.....24, 80
Engine oil	
Filter, changing.....44	R
Engine Troubleshooting.....73	Rear Axle Oil 57
Engine, Starting.....33	Rear Axle Oil Level.....57
Engine, Stopping 33	Rear Axle Oil, Changing 57
	Reverse and Forward Pedal Adjusting.....56

Index

ROPS, Raising and Lowering	32
ROPS, Raising at Assembly	79

S

Safety Labels, Warning - Avoid Crushing - TCU31702	8
Safety Systems, Testing	23, 80
Safety, tire	17
Screen, Cleaning Engine Cover	45
Seat Platform, Raising and Lowering	42
Seat Slides, Lubricating	41
Seat, Adjusting	25
Seat, Adjusting (Deluxe Suspension)	24
Service Hatch, Opening	29
Service latches, using	66
Steering Column Tilt- Lock, Lubricating	41
Steering column, adjusting	26
Steering Cylinder, Lubricating	39
Steering Spindle, Lubricating	40
Storage, Preparing Machine for	75
Storage, Removing Machine from	76
Storing Safety	75
Switch, Testing Seat and Park Brake	24, 80
Switch, Using Key	26
Switch, Using PTO	26

T

Technical Manual	36
Throttle Lever, Using	27
Tie Rod Toe- In Adjustment	59
Tie Rod, Lubricating	39
Tilt- Lock Adjustment, Steering Column	60
Tire Pressure at Assembly, Check	78
Tow loads safely	15
Trailer the Machine	34
Transaxle Drive Shaft, Lubricating	40
Transaxle Oil	55
Transporting Machine	33
Troubleshooting Chart	73

V

Vibration	84
-----------------	----

W

Water Separator, Draining (1570, 1575, 1580 and 1585)	51
Wheel Removal and Installation, Front	69
Wheel Removal and Installation, Rear	70