

9RX Tractors (Serial No. 820021-) Export Edition I1



JOHN DEERE

OPERATOR'S MANUAL

9RX Tractors (Serial No. 820021-)
Export Edition

OMTR118877 ISSUE I1 (ENGLISH)

John Deere Waterloo Works

Export Edition
PRINTED IN U.S.A.

Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for an agreed upon period, schedule an after-sale inspection with your John Deere dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its

particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

REGISTER USED PRODUCTS. If you purchased used John Deere products from an authorized John Deere dealer, the warranty registration information was updated by the dealer and requires no further information on your part.

If you purchased any used John Deere product from an auction, through a trader or from a farmer, please register it now. John Deere and John Deere dealers value their customer's safety and satisfaction. Your local John Deere dealer is best equipped and anxious to provide you superior levels of support for your machine. Please enter your product details and your address online, using the John Deere website corresponding to your country. Then select the dealer of your choice.

RW29387,00000CC-19-22JUL19

Emissions Performance and Tampering

Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system will void the European Union (EU) type approval and applicable emissions-related warranties.

DX,EMISSIONS,PERFORM-19-12JAN18

Trademarks

Trademarks	
AccuDepth™	Trademark of Deere and Company
ActiveCommand Steering (ACS™)	Trademark of Deere and Company
ActiveSeat™	Trademark of Deere and Company
AirCushion™	Trademark of Deere and Company
AMBLYGON™	Trademark of Kluber Lubrication
AMPSEAL 16™	Trademark of Tyco Electronics
Apex™	Trademark of Delphi International

Introduction

Trademarks	
Apple CarPlay®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
AutoLoad™	Trademark of Deere and Company
AutoPowr™	Trademark of Deere and Company
AutoQuad™	Trademark of Deere and Company
AutoTrac™	Trademark of Deere and Company
Avdel™	Trademark of Avdel UK Limited
Bio Hy-Gard™	Trademark of Deere and Company
Bluetooth®	Trademark of Bluetooth SIG
Break-In™	Trademark of Deere and Company
CINCH™	Trademark of Cinch Inc.
ClimaTrak™	Trademark of Deere and Company
ComfortCommand™	Trademark of Deere and Company
ComfortGard™	Trademark of Deere and Company
CommandARM™	Trademark of Deere and Company
CommandCenter™	Trademark of Deere and Company
CommandPRO™	Trademark of Deere and Company
CommandView™	Trademark of Deere and Company
Cool-Gard™	Trademark of Deere and Company
CoolScan™	Trademark of Deere and Company
CPC™	Trademark of AMP Incorporated
Cummins®	Trademark of Cummins Inc.
DEUTSCH™	Trademark of Deutsch Company
DURABUILT™	Trademark of Camoplast Inc.
e18™	Trademark of Deere and Company
e23™	Trademark of Deere and Company
eAutoPowr™	Trademark of Deere and Company
Efficiency Manager™	Trademark of Deere and Company
ExactRate™	Trademark of Deere and Company
FieldCruise™	Trademark of Deere and Company
Field Doc™	Trademark of Deere and Company
GreenStar™	Trademark of Deere and Company
Hy-Gard™	Trademark of Deere and Company
HydraCushion™	Trademark of Deere and Company
ILS™ (Independent-Link Suspension)	Trademark of Deere and Company
iPhone®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
iPod®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
iPod Touch®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
iTEC™	Trademark of Deere and Company
IVT™ (Infinitely Variable Transmission)	Trademark of Deere and Company
JDLINK™	Trademark of Deere and Company
John Deere FarmSight™	Trademark of Deere and Company
Loctite™	Trademark of Henkel Corporation
MATE-N-LOC™	Trademark of AMP Incorporated
METRIMATE™	Trademark of AMP Incorporated
METRI-PACK™	Trademark of Delphi Packard Electric Systems
NEVER-SEEZ™	Trademark of Bostik-Findley Inc.
Oilscan™	Trademark of Deere and Company
PLUS-50™	Trademark of Deere and Company
PowerShift™	Trademark of Deere and Company
PowerTech™	Trademark of Deere and Company

Introduction

Trademarks	
PowerZero™	Trademark of Deere and Company
PowrQuad™	Trademark of Deere and Company
PowrQuad™ PLUS	Trademark of Deere and Company
QUICK METAL™	Trademark of Henkel Corporation
Quik-Tatch™	Trademark of Deere and Company
Service ADVISOR™	Trademark of Deere and Company
SERVICEGARD™	Trademark of Deere and Company
Siri®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
SiriusXM™	Trademark of Sirius XM Radio Inc
StarFire™	Trademark of Deere and Company
STC™	Trademark of Aeroquip Corporation
StellarSupport™	Trademark of Deere and Company
SUMITOMO™	Trademark of Sumitomo Corporation
TEFLON™	Trademark of DuPont Co.
TLS™ (Triple-Link Suspension)	Trademark of Deere and Company
TouchSet™	Trademark of Deere and Company
Weather Pack™	Trademark of Packard Electric
YAZAKI™	Trademark of Yazaki Corporation

RX33672,0000DEE-19-17AUG21

Contents

	Page		Page
Glossary			
Glossary of Terms	00-1	Tightening Wheel Retaining Bolts/Nuts	05-17
Safety		Avoid High-Pressure Fluids	05-17
Recognize Safety Information	05-1	Do Not Open High-Pressure Fuel System	05-18
Understand Signal Words	05-1	Store Attachments Safely	05-18
Follow Safety Instructions	05-1	Decommissioning — Proper Recycling and	
Prepare for Emergencies	05-1	Disposal of Fluids and Components	05-18
Wear Protective Clothing	05-2	Safety Signs	
Protect Against Noise	05-2	Operator's Manual	05A-1
Handle Fuel Safely—Avoid Fires	05-2	Seat Belt	05A-1
Handle Starting Fluid Safely	05-2	Hinge Area	05A-2
Fire Prevention	05-3	Park Brake (Stored Energy)	05A-2
In Case of Fire	05-3	Track Accumulators	05A-3
Avoid Static Electricity Risk When Refueling	05-4	Rear Hitch (If Equipped for China Only) [Ag]	05A-3
Keep ROPS Installed Properly	05-4	Engine Cooling System (For China Only)	05A-3
Use Foldable ROPS and Seat Belt Properly	05-4	Rear PTO (If Equipped for China Only) [Ag]	05A-4
Stay Clear of Rotating Drivelines	05-5	Vehicle Overview	
Use Steps and Handholds Correctly	05-5	9RX Series Tractor	10-1
Read Operator's Manuals for ISOBUS		Engine Operation	
Controllers	05-6	Engine Settings—Access	20-1
Use Seat Belt Properly	05-6	Engine Settings	20-1
Operating the Tractor Safely	05-6	Engine Settings—Engine Power	20-3
Avoid Backover Accidents	05-7	Engine Settings—Max Engine Speed	20-3
Limited Use in Forestry Operation	05-7	Engine Settings—Exhaust Filter System	
Operating the Loader Tractor Safely	05-8	Overview	20-4
Keep Riders Off Machine	05-8	Engine Settings—AUTO Exhaust Filter	
Instructional Seat	05-8	Cleaning	20-5
Use Safety Lights and Devices	05-9	Engine Settings—Disable AUTO Exhaust	
Transport Towed Equipment at Safe Speeds	05-9	Filter Cleaning	20-5
Use Caution on Slopes, Uneven Terrain, and		Engine Settings—Parked Filter Cleaning	20-6
Rough Ground	05-10	Engine Settings—Decelerator	20-7
Freeing a Mired Machine	05-10	Engine Settings—Advanced	20-7
Avoid Contact with Agricultural Chemicals	05-11	Required Machine Stop Warning	20-8
Handle Agricultural Chemicals Safely	05-11	Engine Fuel System and Power Rating	20-9
Handling Batteries Safely	05-12	Battery Disconnect Switch	20-9
Avoid Heating Near Pressurized Fluid Lines	05-12	Start the Engine	20-9
Remove Paint Before Welding or Heating	05-13	Theft Deterrent Systems	20-10
Handle Electronic Components and Brackets		Run the Engine	20-11
Safely	05-13	Stop the Engine	20-11
Practice Safe Maintenance	05-13	Restart Engine That Has Run Out of Fuel	20-11
Avoid Hot Exhaust	05-14	Reduce Fuel Consumption	20-11
Clean Exhaust Filter Safely	05-14	Battery Booster or Charger	20-12
Work In Ventilated Area	05-15	Cold Weather Operation	
Support Machine Properly	05-15	Cold Weather Starting—With Starting Aid	20A-1
Prevent Machine Runaway	05-15	Change Starting Fluid Canister	20A-1
Park Machine Safely	05-16	Engine Coolant Heater Use	20A-1
Transport Tractor Safely	05-16		
Service Cooling System Safely	05-16		
Service Accumulator Systems Safely	05-16		
Service Tires Safely	05-17		
Service Front-Wheel Drive Tractor Safely	05-17		

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Emissions Equipment

Aftertreatment Indicators Overview	20B-1
Selective Catalytic Reduction (SCR) System Overview	20B-3
Diesel Particulate Filter (DPF) Service	20B-4

Front Console

Front Console	30-1
Adjust Steering Wheel and Column	30-1
Operate Horn	30-1
Operate Wipers and Washers	30-1
Key Switch	30-2
Operate Turn Signals	30-2
Pedals	30-2
Operate Lights	30-3
Differential Lock Switch	30-4

Corner Post Display

Corner Post Display	30A-1
---------------------------	-------

CommandARM™ Controls

CommandARM™	30B-1
CommandARM™ Hitch Controls [Ag]	30B-1
CommandARM™ SCV Control Levers	30B-2
CommandARM™ PTO Control Levers [Ag]	30B-2
CommandARM™ Climate, Radio, and Lighting Controls	30B-2
Push-To-Talk (PTT)	30B-4
CommandARM™ Controls—Left Side	30B-4
CommandARM™ Secondary Brake Lever	30B-6
CommandARM™ Navigation Bar	30B-6
Adjust CommandARM™ Position	30B-7

CommandCenter™

Generation 4 Display	30C-1
Rear Hitch or PTO Availability	30C-1
Machine Settings Overview	30C-1
Navigate Generation 4 CommandCenter™	30C-3
Compatible Universal Displays	30C-4
Power Display On and Off	30C-4
Change Pages and Values	30C-4
Factory and Service ADVISOR™ Installed Onscreen Help	30C-5
Radar Calibration	30C-5
Slip Calibration	30C-5
Steering Settings—Access	30C-6
Steering Settings	30C-6
Steering Settings—Steering Wheel Resistance	30C-7
Controls Setup	30C-7
Install Video Display Camera	30C-8

Intelligent Total Equipment Control (iTEC™)

CommandARM™ Control Functions	40-1
iTEC™ Station Description	40-1
CommandCenter™ Pages Descriptions and Functions	40-1
Status Area	40-2
All Sequence Page	40-2
Add New Sequence	40-2
Sequence Step Status	40-3
Edit or Remove Sequence	40-3
Sequence Sets Page	40-4

Perform Sequence	40-5
Recommendations (AutoLearn)	40-5
iTEC™ Functions—Efficiency Manager™	40-6

Tractor-Implement Automation (TIA)

TIA—General Information	40A-1
Activate TIA Equipment	40A-1
Operate TIA	40A-1
PTO Requirements [Ag]	40A-2
SCV Requirements	40A-2
PowerShift™ Transmission Requirements	40A-2
AutoTrac™ Guidance Requirements	40A-2
Rear Hitch Requirements [Ag]	40A-3

Drivetrain

Drivetrain Overview	50-1
Differential Lock	50-1
Drivetrain Protection	50-1

Brakes

Trailer Brake System Settings—Access	50A-1
Trailer Brake System Settings	50A-1
Trailer Brake System Settings—Brake Gain	50A-2
Trailer Brake System Settings—Pre-Brake Offset	50A-2
Trailer Brake System Settings—Trailer Brake Test	50A-3
Trailer Brake System Settings—Advanced	50A-3
Brake Use	50A-3
Trailer Brakes Regulation (EAEU-compliant Tractors Only)	50A-4
Hydraulic Trailer Brakes (If Equipped)	50A-4

Transmission—General Information

Transmission Settings—Access Advanced	50B-1
Transmission Settings—Advanced	50B-1
Warm-Up Transmission-Hydraulic System	50B-3
Backup Alarm	50B-4

e18™ PowerShift™ Transmission

Operate Transmission—e18™	50G-1
Shift Transmission—e18™	50G-1
e18™ Set Speeds and Efficiency Manager™	50G-3
e18™ Transmission Settings—Access	50G-4
e18™ Transmission Settings	50G-4
e18™ Transmission Settings—Mode	50G-6
e18™ Transmission Settings—Custom	50G-6
e18™ Transmission Settings—Droop	50G-6
e18™ Transmission Settings—ECO	50G-7
e18™ Transmission Settings—Max Speeds	50G-7

PTO [Ag], Hitch [Ag], and Drawbar

Scraper Tractor Drawbar [Scraper]	60-1
Attach PTO-Driven Implement [Ag]	60-1

PTO—General Information [Ag]

PTO Settings—Access	60A-1
PTO Settings	60A-1
PTO Settings—Advanced	60A-2
PTO Settings—Engagement Rate	60A-2
PTO Settings—Rear PTO Cruise	60A-3
PTO Settings—Auto Disengage	60A-3
Operating Instructions	60A-4

	Page		Page
Operate PTOs	60A-4	Selective Control Valves	
External PTO Switches	60A-5	SCV Settings—Access	70A-1
Select Correct Engine Speed	60A-5	SCV Settings	70A-1
Rear PTO [Ag]		SCV Settings—Standard Mode	70A-3
Use PTO Master Shield (If Equipped)	60C-1	SCV Settings—Independent Mode	70A-3
Rear Hitch [Ag]		SCV Settings—Feature Mode	70A-4
Hitch Lift Capacities	60E-1	SCV Settings—Flow Adjustment	70A-4
Rear Hitch Settings—Access	60E-1	SCV Settings—Time Adjustment	70A-5
Rear Hitch Settings	60E-1	SCV Settings—Advanced	70A-5
Rear Hitch Settings—Upper Limit	60E-3	SCV Settings—Activating Independent Mode	70A-6
Rear Hitch Settings—Drop Rate	60E-3	SCV Settings—Automation	70A-6
Rear Hitch Settings—Raise Rate	60E-3	SCV Settings—Assignment	70A-6
Rear Hitch Settings—Load Depth	60E-4	SCV Settings—Flow Adjustment Sensitivity	70A-7
Rear Hitch Settings—Slip Sensitivity	60E-4	SCV Settings—Flow Assist	70A-7
Rear Hitch Settings—Position	60E-5	SCV Control Lever Adjustments	70A-7
Rear Hitch Settings—Position Control	60E-6	Total SCV Flow	70A-9
Rear Hitch Settings—Draft Control	60E-6	Flow Sharing	70A-10
Hitch Control Lever Adjustments	60E-7	Hydraulic Connections	
Hitch Depth Set Point	60E-8	Connect/Disconnect Hydraulic Hoses	70B-1
Float Operation	60E-8	Implements Requiring Large Volumes of Hydraulic Oil	70B-2
Rear Hitch Components	60E-8	Using Load-Sensing Hydraulic System— Power-Beyond	70B-2
External Hitch Switches	60E-9	Component Identification and Location [Ag]	70B-4
Hitch Manual Lowering	60E-9	Using Hydraulic Spray Pumps [Ag]	70B-7
Adjust Sway Blocks	60E-9	Implement Connection Example [Ag]: Closed Center Valve and Pump at High Pressure —Less Hitch	70B-8
Attach Implement to Quick-Hitch	60E-10	Implement Connection Example [Ag]: Planter with Vacuum Motor and Return Line to SCV Using Motor Return Tip	70B-9
Detach Implement from Quick-Hitch	60E-10	Implement Connection Example [Ag]: Planter with Vacuum Motor and Return Line to Motor Return—With Hitch and Implement Lift Assist	70B-10
Adjust Implement Level	60E-10	Implement Connection Example [Ag]: Pressure Control Valve Applications— Less Hitch (Grain Drills or Air Seeders with Constant Down-Pressure System)	70B-12
Adjust Lateral Float	60E-11	Implement Connection Example—High-Flow Hydraulics [Ag]: Implement Control Valves —Less Hitch	70B-13
Hitch Conversion— Category 4/4N Convertible Quick-Hitch	60E-11	Component Identification and Location [Scraper]	70B-13
Convert Category 4N/3 Convertible Quick- Hitch Lower Hooks	60E-12	Scraper Hydraulic Hose Tips [Scraper]	70B-14
Convert Category 4N/3 Convertible Quick- Hitch Upper Hook	60E-12	Implement Connection Example [Scraper]: Pulling 1, 2, and 3 Scrapers	70B-15
Drawbar [Ag]		TouchSet™ Depth Control	
Drawbar Load Limitations	60F-2	TouchSet™ Depth Control Settings and Adjustments	70C-1
Scraper Applications	60F-2	Connect/Disconnect the Implement Position Connector	70C-1
Calculate Static Vertical Drawbar Load	60F-3	Laser Scraper Control [Ag]	
Calculate Vertical Drawbar Load Distance Behind Rear Axle	60F-3	Laser Scraper—Scrapers Equipped with Scraper Control Unit	70D-1
Selecting Drawbar Position	60F-3	Scraper Information [Scraper]	
Adjusting Drawbar Side-to-Side	60F-4	Scraper Operation Cycle	70E-1
Install Clevis Assembly—Category 5 Drawbar	60F-4	Weight Transfer Limits	70E-2
Clevis Assembly Use	60F-4	Scraper/Tractor Attachment	70E-2
Use Correct Drawbar Pin—Category 5 to 4	60F-5	Loading Techniques	70E-2
Drawbar [Scraper]			
Scraper Applications	60G-1		
Calculate Static Vertical Drawbar Load	60G-1		
Calculate Vertical Drawbar Load Distance Behind Rear Axle	60G-1		
Install Drawbar or Quick-Attach in Short Drawbar Support	60G-2		
Short Scraper Drawbar Conversion	60G-2		
Tow Cable	60G-3		
Hydraulics—General Information			
Hydraulic System Overview	70-1		

	Page		Page
Connect AutoLoad™ Harness	70E-3	HVAC Settings—Air Conditioning	90E-3
AutoLoad™ Settings—Access	70E-4		
AutoLoad™ Settings	70E-4	Performance Ballasting	
AutoLoad™ Settings—Scraper Status	70E-5	General Ballasting Information	100-1
AutoLoad™ Settings—Initial Draft	70E-6	General Guidelines	100-1
AutoLoad™ Settings—Scraper Position	70E-6	General Weight Split Guidelines	100-3
AutoLoad™ Settings—Average Draft	70E-7	Ballast Options	100-3
AutoLoad™ Settings—Advanced	70E-7	Measure Slip	100-4
AutoLoad™ Settings—Scraper Dimensions	70E-7	Quik-Tatch™ Weight Use	100-5
		Idler Weight Use	100-6
Tracks—General Information		Implement Guidelines	100-6
General Track Use Guidelines	80-1	Calculate Tractor Ballast Package	100-7
Tracks Service	80-1	Unballasted Tractor Weight Chart (9RX: 490, 540, and 590)	100-9
		Unballasted Tractor Weight Chart (9RX 640) ...	100-12
Seats		Transport	
Adjust Air Seat	90-1	Weight Chart—Narrow Track (If Equipped)	
Operator Presence Sensor	90-3	[Ag]	110-1
Adjust Instructional Seat	90-3	Driving Tractor on Roads	110-2
		Extended Road Transport	110-2
Mirrors		Towed Mass	110-3
Adjust Mirrors	90A-1	Towed Loads and Transport with Ballast	110-4
		Transport Rear Mounted Implements with Ballast	110-4
Lights		Safety Chains Use	110-4
Light Identification (Version A)	90C-1	Tow Points	110-5
Light Identification (Version B)	90C-1	Carrier Transport	110-5
Lights Settings—Access	90C-2	Load Extended Axle Width Track Tractor [Ag] ...	110-8
Lights Settings	90C-3	Tow Mode—Engine Will Start	110-9
Lights Settings—Field Lights Presets	90C-4	Tow Mode—Engine Will Not Start	110-9
Lights Settings—Hood/Belt Line Lights	90C-4	Freeing a Mired Tractor	110-10
Lights Settings—Advanced	90C-4		
Hazard and Extremity Lights	90C-5	Fuel, Lubricants, and Coolant—General Information	
Beacon Light	90C-5	Determine Tractor Engine Type	200-1
7-Pin Outlet (Version A Lighting)	90C-5	Minimizing the Effect of Cold Weather on Diesel Engines	200-1
7-Pin Outlet (Version B Lighting)	90C-6	Oil Filters	200-2
Trailer Lights	90C-6		
Accessories		Fuel	
Right-Hand Side Console	90D-1	Diesel Fuel	200A-1
CommandARM™ Storage	90D-1	Supplemental Diesel Fuel Additives	200A-1
Right-Hand Front Corner Post	90D-2	Biodiesel Fuel	200A-2
Left-Hand Rear Corner Post	90D-2	Lubricity of Diesel Fuel	200A-3
Right-Hand Rear Corner Post	90D-3	Handling and Storing Diesel Fuel	200A-3
Refrigerator and Cool/Storage Box	90D-3	Fill Fuel Tank	200A-3
Sunshade	90D-4	Testing Diesel Fuel	200A-4
Storage Compartments	90D-4	Fuel Filters	200A-4
Monitor Bracket Mounts	90D-4		
Emergency Exit	90D-4	Diesel Exhaust Fluid (DEF)	
Install Business Band/Citizens Band (CB) Antenna and/or Radio	90D-5	Fill DEF Tank—Final Tier 4/Stage V Engine	200B-1
Mount StarFire™ Receiver	90D-6	Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines	200B-1
Mount RTK (Real-Time Kinematic) Radio	90D-6	Storing Diesel Exhaust Fluid (DEF)	200B-2
Implement Connector	90D-7	Refilling Diesel Exhaust Fluid (DEF) Tank	200B-3
RS232 Serial Communication Connection	90D-7	Testing Diesel Exhaust Fluid (DEF)	200B-3
AutoLoad™ Harness Connector [Scraper]	90D-8	Disposal of Diesel Exhaust Fluid (DEF)	200B-4
Chain Box	90D-8		
HVAC		Engine Oil	
HVAC Settings—Access	90E-1	Diesel Engine Oil Service Interval for Operation at High Altitude	200C-1
HVAC Settings	90E-1		
HVAC Settings—Climate Control Automation ...	90E-2		
HVAC Settings—Set Temperature	90E-2		
HVAC Settings—Air Flow Mode	90E-3		
HVAC Settings—Fan Speed	90E-3		

	Page		Page
John Deere Break-In Plus™ Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V	200C-1	Service—Record Charts	
Break-In Engine Oil Use—Cummins 15 L Engines	200C-1	Service Record Chart Overview	210B-1
Diesel Engine Oil — Tier 2 and Stage II	200C-2	Service Interval Chart	210B-1
Engine Oil and Filter Service Intervals — Tier 2 and Stage II Engines	200C-2	Service Record Chart	210B-2
Diesel Engine Oil — Tier 3 and Stage IIIA	200C-3	Service—Clean	
Engine Oil and Filter Service Intervals — Tier 3 and Stage III A — PowerTech™ Plus Engines	200C-3	Cleaning Diesel Exhaust Fluid (DEF) Tank	220A-1
Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V	200C-4	DEF Tank Filler Neck Filter	220A-1
Engine Oil and Filter Service Intervals — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V Engines	200C-5	Tractor Exterior	220A-2
Engine Coolant		Clean Display	220A-2
Diesel Engine Coolant (engine with wet sleeve cylinder liners)	200D-1	Engine Cooling System—13.6 L Engine	220A-2
John Deere COOL-GARD™ II Coolant Extender	200D-1	Engine Cooling System—15 L Engine	220A-3
Operating in Warm Temperature Climates	200D-2	Dual Beam Radar Sensor	220A-4
Water Quality for Mixing with Coolant Concentrate	200D-2	Aftertreatment Fuel Injector—15 L Engine	220A-4
Testing Coolant Freeze Point	200D-2	Optional Fuel Water Separator	220A-4
Disposing of Coolant	200D-3	Implement Connector	220A-5
Other Lubricants		Service—Check	
Transmission and Hydraulic Oil	200E-1	Engine Coolant Level	220B-1
Transmission and Hydraulic Oil Use	200E-1	Engine Coolant Freeze Point	220B-1
Multipurpose Extreme Pressure (EP) Grease ..	200E-1	Water Separator	220B-2
Lubricant Storage	200E-2	Engine and Exhaust Compartments	220B-3
Mixing of Lubricants	200E-2	Air Conditioning System	220B-3
Alternative and Synthetic Lubricants	200E-2	Engine Water Pump Weep Hole—13.6 L Engine	220B-3
Service—General Information		Engine Water Pump Seal—15 L Engine	220B-4
Service Sections Overview	210-1	Fuel Tank Sump	220B-4
Service Tasks Performed As Required	210-1	Engine Oil Level—13.6 L Engine	220B-4
Identify Tractor Engine Emissions Status	210-1	Engine Oil Level—15 L Engine	220B-4
Open Hood	210-1	Hydraulic System Oil Level	220B-5
Open Hood (If Equipped)	210-2	Track Alignment	220B-6
Remove Engine Access Panel	210-2	Track Tension	220B-8
Remove Front Engine Side Shield	210-2	Track Wear and Trash Buildup	220B-11
Remove Rear Engine Side Shield	210-2	Undercarriage	220B-12
Remove Cab Rear Panel	210-3	Cab Suspension Bushings	220B-13
Access Battery Compartment	210-3	Undercarriage Articulation Bumper Stops	220B-13
Jack Up Tractor—Lifting Points and Support Stand Placement	210-3	Drive, Mid-Rollers, and Idler Wheels	220B-13
Service and Connect STC® (Snap-to- Connect) Fittings	210-6	Mid-Rollers and Idler Wheel Hub Oil Level	220B-14
Transmission Calibration	210-6	Drive Wheel Scraper Clearance	220B-15
Abort Transmission Calibration	210-9	Secondary Brake	220B-15
Do Not Modify Fuel System	210-9	Transmission PARK System	220B-16
Bleed Fuel System	210-9	Engine Air Intake System—13.6 L/Stage II	220B-16
Identify Zinc-Flake Coated Fasteners	210-10	Engine Air Intake System—13.6 L Final Tier 4/Stage V or Tier 3/Stage IIIa Engine	220B-16
Metric Bolt and Screw Torque Values	210-10	Engine Air Intake System—15 L Engine	220B-17
Unified Inch Bolt and Screw Torque Values	210-11	Seat Belts	220B-17
Service—Break-In (100 Hours or Less)		Engine Auxiliary Drive Belt and Drive Belt Tensioner	220B-18
Perform Break-In Services	210A-1	Engine Valve Clearance	220B-19
Perform Track Systems Break-In	210A-1	Suspension Mount Clearance (Narrow Track) (For Australia Only)	220B-19
		Front Driveshaft Health (FDH) Sensor System	220B-20
		Drawbar Sensor Calibration [Scraper]	220B-20
		Drawbar Wear	220B-20
		Engine Brake	220B-21
		Service—Tighten	
		Mid-Roller, Drive, and Idler Wheel Fasteners ..	220C-1
		Drawbar Support Cap Screws	220C-1
		Service—Change	
		Fan Belt—13.6 L Tier 2/Stage II or Tier 3/IIIA Engines	220D-1

Engine Auxiliary Drive Belt—13.6 L Engine	220D-1
Engine Auxiliary Drive Belt—15 L Engine	220D-2
Engine Water Pump Drive Belt—15 L Engine	220D-2
Engine Oil and Filter—13.6 L Engine	220D-3
Engine Oil and Filter—15 L Engine	220D-4
Fuel Filters—13.6 L Engine	220D-5
Fuel Filters—15 L Engine	220D-6
Optional Fuel Water Separator Filter Element	220D-7
Fuel Tank Vent Filters	220D-8
Cab Filters	220D-8
Engine Primary and Secondary Air Filters— Tier 2/Stage II or Tier 3/Stage IIIA Engine	220D-9
Engine Primary and Secondary Air Filters— Final Tier 4/Stage V Engine	220D-11
Fuel Tank Vent Filters	220D-11
SCV Pilot Valve Filter	220D-12
Diesel Exhaust Fluid (DEF) Tank Vent Filter	220D-12
Access Diesel Exhaust Fluid (DEF) In-Line Filter	220D-13
Change Diesel Exhaust Fluid (DEF) In-Line Filter	220D-13
Access Diesel Exhaust Fluid (DEF) Dosing Unit Filter	220D-15
Change Diesel Exhaust Fluid (DEF) Dosing Unit Filter	220D-16
Hydraulic System Oil and Filters	220D-17
Engine Cooling System Radiator Cap—15 L Engine	220D-20
Engine Coolant—13.6 L Engine	220D-20
Engine Coolant—15 L Engine	220D-23
Engine Crankshaft Damper—13.6 L Engine	220D-23
Engine Crankcase Breather Filter Element— 15 L Engine	220D-23
Front Drive Shaft U-Joints	220D-23

Service—Lubricate

Heavy Duty Lift Link Pins (Optional)	220E-1
Hinge Pins	220E-1
Steering Pins	220E-1
PTO Drive Shaft	220E-2
Track Tension Cylinder	220E-2
Heavy-Duty Gudgeon Bearings	220E-2
Lower Drive Line Bearings	220E-3
Rear Hitch	220E-3
Lift Cylinders and Rockshaft	220E-4

Service—Electrical

Service—Electrical Overview	220F-1
Welding Near Electronic Control Units	220F-1
Keep Electronic Control Unit Connectors Clean	220F-1
Compressed Air Use	220F-2
High-Pressure Washer Use	220F-2
Disconnect Battery	220F-2
Service Batteries and Connections	220F-2
Load Center—Cab	220F-3
Load Center—Front	220F-5
Access Master Fuses	220F-6
Access Implement Power Relay Module Relays	220F-7
Handle Halogen Light Bulbs Safely	220F-7
Change Halogen Bulbs	220F-8
Change Front HID/LED Light Assembly	220F-8
Adjust Front Grille Lights	220F-8

Aim Headlights	220F-9
Change Brake or Turn Signal Light Bulb	220F-11
Change Cab Roof Light	220F-11
Change Wrap-Around Cab Light	220F-11
Change Extremity Light—Cab	220F-12
Change Cab Dome Light	220F-12
Change Trailing Light Bulb	220F-12

Troubleshooting—Procedures

Troubleshooting Features	300A-1
Electrical System	300A-1
Engine	300A-2
Hitch	300A-5
Hydraulic System	300A-7
Operator Enclosure	300A-7
Selective Control Valve (SCV)	300A-9
Steering System	300A-10
Tractor Operation	300A-11
Transmission	300A-11

Troubleshooting—Diagnostic Trouble

Codes (DTC)

STOP, Service, and Information Alerts on CommandCenter™	300B-1
Access Diagnostic Trouble Codes	300B-1

Service—Storage

Place Tractor in Storage	400-1
Remove Tractor from Storage	400-1

Specifications

Engine: John Deere	500A-1
Engine: QSX15 Cummins®	500A-3
Capacities	500A-4
Hydraulics	500A-5
Transmission and Power Train	500A-6
PTO [Ag], Hitch [Ag], and Drawbar	500A-7
Electrical	500A-8
Integrated Technology	500A-8
Overall Dimensions	500A-9
Maximum Permissible Static Vertical Load	500A-11
Sound Level	500A-12
Vibration Level	500A-12
Cab Classification According to EN 15695-1 (for Application of Crop Protection Chemicals and Liquid Fertilizer)	500A-12
Ground Speeds—e18™ PowerShift™ Transmission	500A-13
Eurasian Economic Union	500A-13
Machine Design Life	500A-13
Required Emission-Related Information	500A-14
Carbon Dioxide Emissions (CO ₂)	500A-14
Third-Party Software Notifications and Licenses	500A-14

Identification Numbers

Identification Plates	500B-1
Product Identification Number	500B-1
Product Identification Number (China Only)	500B-1
Engine Serial Number	500B-2
Cab Serial Number	500B-3
Transmission Serial Number	500B-3
PTO Drop Box Serial Number [Ag]	500B-3

	Page
PTO Clutch Serial Number [Ag]	500B-3
Track Serial Numbers	500B-4
Keep Proof of Ownership	500B-4
Keep Machines Secure	500B-4
Change of Ownership	
Subsequent Ownership	600A-1
Predelivery	
Predelivery Checklist	700-1
Delivery Checklist and Certificate	700-3

Glossary

Glossary of Terms

ITEM	ABBREVIATION	DESCRIPTION
Agriculture Tractor	[AG]	Tractor primary application
Scraper Tractor	[Scraper]	Tractor primary application
Air Conditioning	A/C	System used for conditioning the air in the cab
Automatic PowerShift™	APS	Transmission feature
Controller Area Network	CAN	A communication system linking on-board electronics
Cold Cranking Amperes	CCA	Refers to a battery's capability to perform during cold-weather operation
Chassis Control Unit	CCU	Computerized system for tractor monitoring
Diesel Exhaust Fluid	DEF	Abbreviation
Diesel Particulate Filter	DPF	Filter that prevents ash and soot from entering the atmosphere
Diagnostic Trouble Codes	DTC	Codes that inform the operator of stop, service, or information alerts
Economy Mode	ECO	Abbreviation
Engine Control Unit	ECU	Abbreviation
Engine Revolutions Per Minute	erpm	Abbreviation
Gallons per Minute	gpm	Fluid flow measured over a period of 1 minute
Global Positioning System	GPS	Abbreviation
Heavy Duty	HD	Abbreviation
High Intensity Discharge	HID	Type of Xenon working light used for front lighting
Heating Ventilating Air Conditioning	HVAC	Abbreviation
International Standards Organization	ISO	Abbreviation
John Deere Central Tire Inflation System	John Deere CTIS	Abbreviation
Left-Hand	LH	Abbreviation
Liters per Minute	L/min	Fluid flow measured over a period of 1 minute
Light Emitting Diode	LED	Abbreviation
Low Temperature Circuit	LTC	Abbreviation
Maximum Ballast Weight	MBW	Abbreviation
Mechanical Front Wheel Drive	MFWD	Powered front axle which is driven mechanically from the transmission
Product Identification Number	PIN	Serial number relating to tractor identification
PowerShift™ Transmission	PST	Abbreviation
EVT/eAutoPowr™ Transmission Control Unit	PTE	Abbreviation
IVT™/AutoPowr™ Transmission Control Unit	PTI	Abbreviation
Power Take-Off	PTO	Abbreviation
PowerShift™ Transmission Control Unit	PTP	Computerized system used to control IVT transmission shift functions
Roll-Over Protective Structure	ROPS	Abbreviation
Right-Hand	RH	Abbreviation
Revolutions per Minute	rpm	Abbreviation
Society of Automotive Engineers	SAE	Engineering Standards Organization
Selective Control Valve	SCV	Device used to control remote hydraulic functions
Tire Pressure System	TPS	Abbreviation
Voltage Class-B	VC-B	Abbreviation

RX32825,000179D-19-17AUG21

Safety

Recognize Safety Information



T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-29SEP98

Understand Signal Words



▲ WARNING

▲ CAUTION

TS187—19—30SEP88

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.


WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL-19-05OCT16

Follow Safety Instructions

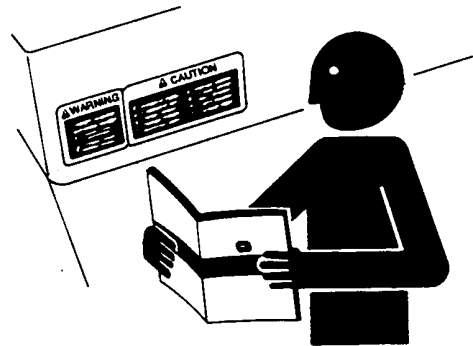

TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.


Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-16JUN09

Prepare for Emergencies

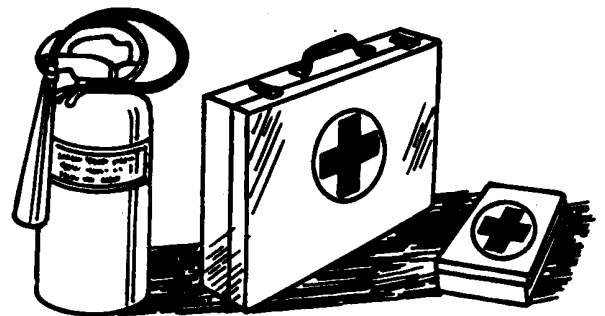

TS291—UN—15APR13


Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

Wear Protective Clothing

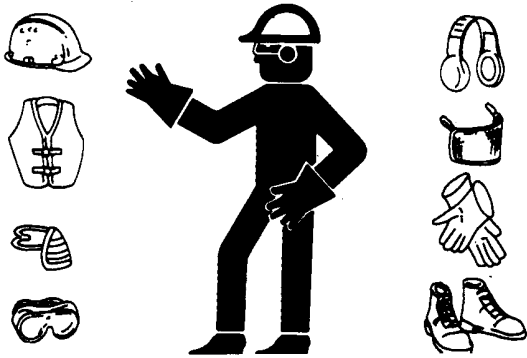

TS206—UN—15APR13

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

DX,WEAR2-19-03MAR93

Protect Against Noise



TS207—UN—23AUG88

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

Always wear hearing protection. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

DX,NOISE-19-03OCT17

Handle Fuel Safely—Avoid Fires



TS202—UN—23AUG88

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.

Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1-19-12OCT11

Handle Starting Fluid Safely



TS1356—UN—18MAR92

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.

DX,FIRE3-19-14MAR14

Fire Prevention

To reduce the risk of fire, your tractor should be regularly inspected and cleaned.

- Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.
- A build up of grass, crop material and other debris may occur during normal operation. This is especially true when operating in very dry conditions or conditions where airborne crop material or crop dust is present. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.
- Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in the Operator's Manual greatly reduce the risk of fire and the chance of costly downtime.
- Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.
- Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace if necessary.

Follow all operational and safety procedures posted on the machine and the Operator's Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

DX,WW,TRACTOR,FIRE,PREVENTION-19-12OCT11

In Case of Fire



TS227—UN—15APR13

CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:


1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

DX,FIRE4-19-22AUG13

Avoid Static Electricity Risk When Refueling



RG22142—UN—17MAR14

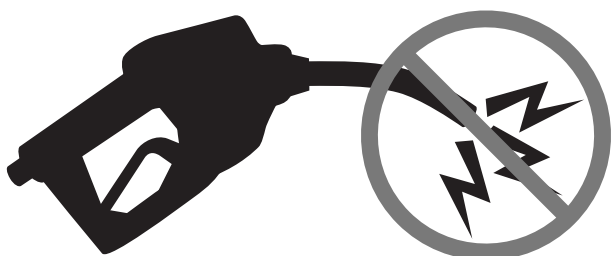

RG21992—UN—21AUG13

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.


Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

DX,FUEL,STATIC,ELEC-19-12JUL13

Keep ROPS Installed Properly

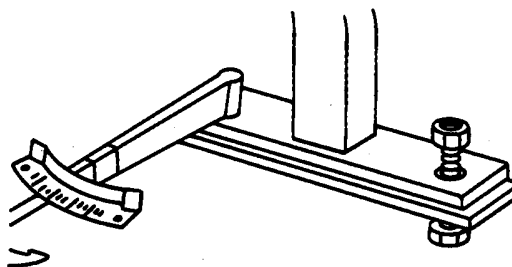

TS212—UN—23AUG88

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.


The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

The seat is part of the ROPS safety zone. Replace only with John Deere seat approved for your tractor.

Any alteration of the ROPS must be approved by the manufacturer.

DX,ROPS3-19-12OCT11

Use Foldable ROPS and Seat Belt Properly

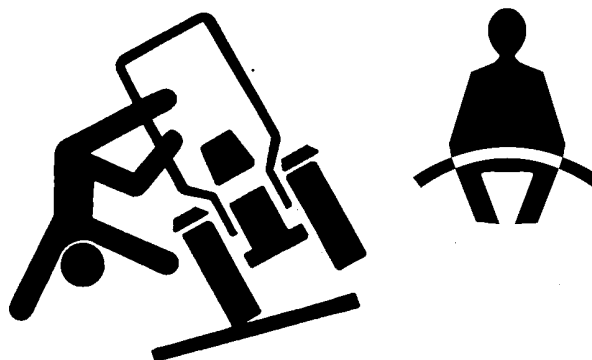

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

- If this machine is equipped with a foldable rollover protective structure (ROPS), keep the ROPS in the fully extended and locked position. USE a seat belt when you operate with a ROPS in the fully extended position.
 - Hold the latch and pull the seat belt across the body.
 - Insert the latch into the buckle. Listen for a click.
 - Tug on the seat belt to make sure that the belt is securely fastened.


- Snug the seat belt across the hips.
- If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. DO NOT USE a seat belt with the ROPS folded.
- Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

DX,FOLDROPS-19-22AUG13

Stay Clear of Rotating Drivelines



TS1644—UN—22AUG95

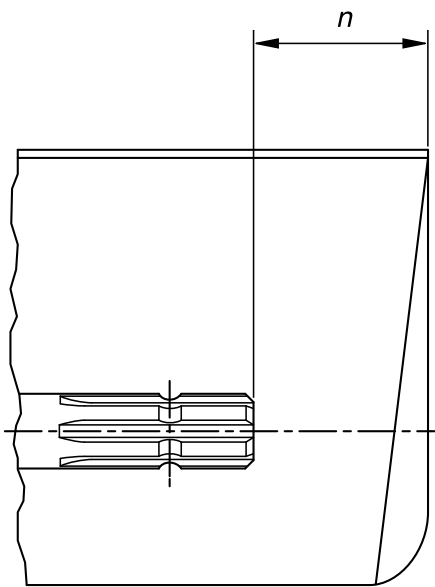

H96219—UN—29APR10

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Only use power take-off driveshafts with adequate guards and shields.

Wear close fitting clothing. Stop the engine and be sure that PTO driveline is stopped before making

adjustments, connections, or cleaning out PTO driven equipment.

Do not install any adapter device between the tractor and the primary implement PTO driveshaft that will allow a 1000 rpm tractor shaft to power a 540 rpm implement at speeds higher than 540 rpm.

Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft and the added adaptor device as outlined in the table.

The angle at which the primary implement PTO driveshaft can be inclined may be reduced depending on the shape and size of the tractor master shield and the shape and size of the guard of the primary implement PTO driveshaft.


Do not raise implements high enough to damage the tractor master shield or guard of primary implement PTO driveshaft. Detach the PTO driveline shaft if it is necessary to increase implement height. (See Attching/ Detaching PTO Driveline)

When using Type 3/4 PTO, inclination and turning angles may be reduced depending on type of PTO master shield and coupling rails.

PTO Type	Diameter	Splines	$n \pm 5 \text{ mm (0.20 in.)}$
1	35 mm (1.378 in.)	6	85 mm (3.35 in.)
2	35 mm (1.378 in.)	21	85 mm (3.35 in.)
3	45 mm (1.772 in.)	20	100 mm (4.00 in.)
4	57.5 mm (2.264 in.)	22	100 mm (4.00 in.)

DX,PTO-19-28FEB17

Use Steps and Handholds Correctly

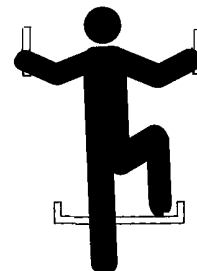

T133468—UN—15APR13

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps, handholds, and handrails.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease

or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

DX,WW,MOUNT-19-12OCT11


Read Operator's Manuals for ISOBUS Controllers

In addition to GreenStar™ Applications, this display can be used as a display device for any ISOBUS Controller that meets ISO 11783 standard. This includes capability to control ISOBUS implements. When used in this manner, information and control functions placed on the display are provided by the ISOBUS Controller and are the responsibility of the ISOBUS Controller manufacturer. Some of these functions could pose a hazard to either the operator or a bystander. Read the Operator's Manual provided by the ISOBUS Controller manufacturer and observe all safety messages in manual and on ISOBUS Controller product prior to use.

NOTE: ISOBUS refers to the ISO Standard 11783

DX,WW,ISOBUS-19-15JUL15

Use Seat Belt Properly

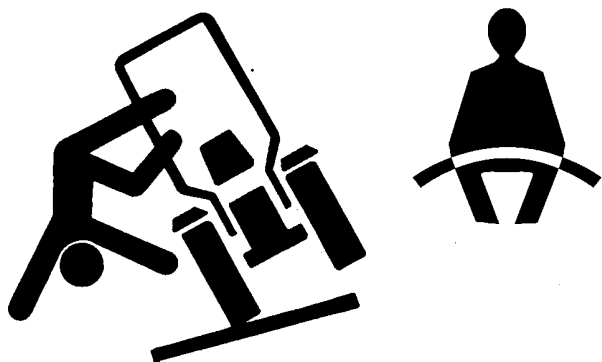

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

This machine is equipped with a rollover protective structure (ROPS). USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage,

such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

DX,ROPS1-19-22AUG13

Operating the Tractor Safely

You can reduce the risk of accidents by following these simple precautions:

- Use your tractor only for jobs it was designed to perform, for example, pushing, pulling, towing, actuating, and carrying a variety of interchangeable equipment designed to conduct agricultural work.
- Operators must be mentally and physically capable of accessing the operator's station and/or controls, and operating the machine properly and safely.
- Never operate machine when distracted, fatigued, or impaired. Proper machine operation requires the operator's full attention and awareness.
- This tractor is not intended to be used as a recreational vehicle.
- Read this operator's manual before operating the tractor and follow operating and safety instructions in the manual and on the tractor.
- Follow operation and ballasting instructions found in the operator's manual for your implements/ attachments, such as front loaders.
- Follow the instructions outlined in the operator's manual of any mounted or trailed machinery or trailer. Do not operate a combination of tractor-machine or tractor-trailer unless all instructions have been followed.
- Make sure that everyone is clear of machine, attached equipment, and work area before starting engine or operation.
- Stay clear of the three-point linkage and pickup hitch (if equipped) when controlling them.
- Keep hands, feet, and clothing away from power-driven parts.

Driving Concerns

- Never get on or off a moving tractor.
- Complete any required training prior to operating vehicle.
- Keep all children and nonessential personnel off tractors and all equipment.
- Never ride on a tractor unless seated on a John Deere approved seat with a seat belt.
- Keep all shields/guards in place.
- Use appropriate visual and audible signals when operating on public roads.
- Move to side of road before stopping.
- Reduce speed when turning, applying individual

brakes, or operating around hazards on rough ground or steep slopes.

- Stability degrades when attached implements are at high position.
- Couple brake pedals together for road travel.
- Pump brakes when stopping on slippery surfaces.
- Regularly clean fenders and fender valances (mud flaps) if installed. Remove dirt before driving on public roadways.

Heated and Ventilated Operator's Seat

- An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.

Towing Loads

- Be careful when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.
- Consider the total weight of the equipment and its load.
- Hitch towed loads only to approved couplings to avoid rearward upset.

Parking and Leaving the Tractor

- Before dismounting, shut off SCVs, disengage PTO, stop engine, lower implements/attachments to ground, place implement/attachment control devices in neutral, and securely engage park mechanism, including the park pawl and park brake. In addition, if the tractor is left unattended, remove key.
- Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Never go near an operating PTO or an operating implement.
- Wait for all movement to stop before servicing machinery.

Common Accidents

Unsafe operation or misuse of the tractor can result in accidents. Be alert to hazards of tractor operation.

The most common accidents involving tractors are:

- Tractor rollover
- Collisions with motor vehicles
- Improper starting procedures
- Entanglement in PTO shafts
- Falling from tractor

- Crushing and pinching during hitching

DX,WW,TRACTOR-19-08MAY19

Avoid Backover Accidents



PC10857XW—UN—15APR13

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.

DX,AVOID,BACKOVER,ACCIDENTS-19-30AUG10


Limited Use in Forestry Operation

The intended use of John Deere tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS). Contact John Deere dealer for special components.

DX,WW,FORESTRY-19-12OCT11

Operating the Loader Tractor Safely

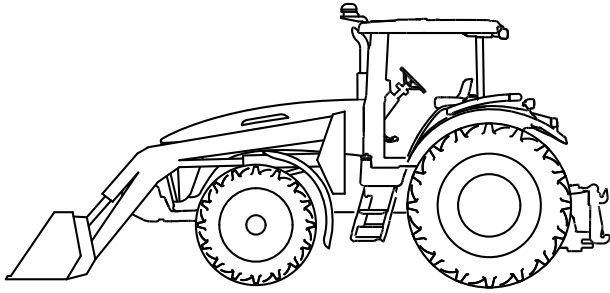

TS1692—UN—09NOV09

When operating a machine with a loader application, reduce speed as required to ensure good tractor and loader stability.

To avoid tractor rollover and damage to front tires and tractor, do not carry load with your loader at a speed over 10 km/h (6 mph).

To avoid tractor damage do not use a front loader or a sprayer tank if the tractor is equipped with a 3 Meter Front Axle.

Never allow anyone to walk or work under a raised loader.

Do not use loader as a work platform.

Do not lift or carry anyone on loader, in bucket, or on implement or attachment.


Lower loader to ground before leaving operators station.

The Rollover Protective Structure (ROPS) or cab roof, if equipped, may not provide sufficient protection from load falling onto the operators station. To prevent loads from falling onto the operators station, always use appropriate implements for specific applications (that is, manure forks, round bale forks, round bale grippers, and claspers).

Ballast tractor in accordance to Ballast Recommendations in PREPARE TRACTOR section.

DX,WW,LOADER-19-18SEP12

Keep Riders Off Machine

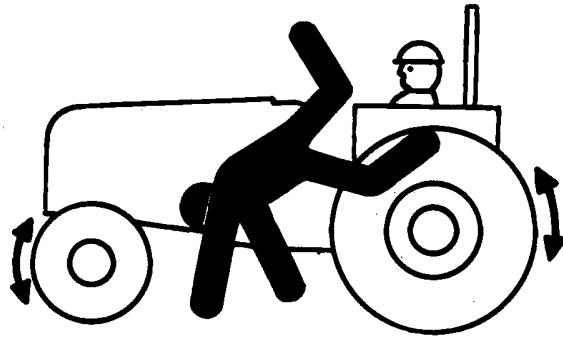

TS290—UN—23AUG88

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

DX,RIDER-19-03MAR93

Instructional Seat




TS1730—UN—24MAY13

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

DX,SEAT,NA-19-22AUG13

Use Safety Lights and Devices

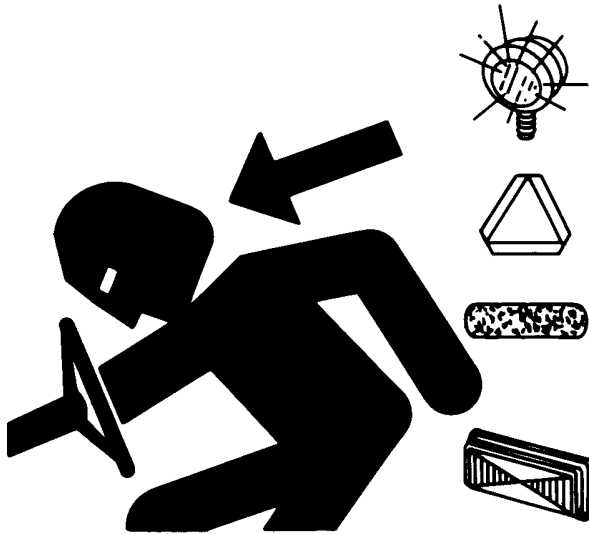


TS951—UN—12APR90

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

DX,FLASH-19-07JUL99

Transport Towed Equipment at Safe Speeds

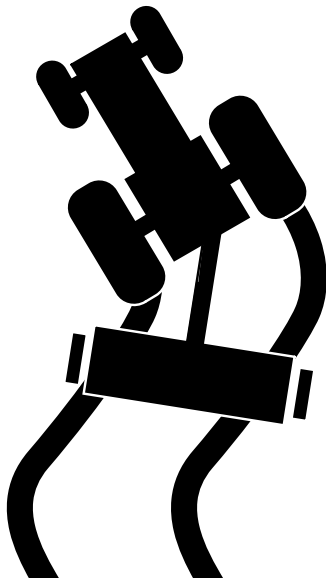

TS1686—UN—27SEP06

Do not exceed the maximum transport speed. This towing unit may be capable of operating at transport speeds that exceed the maximum allowable transport speed for towed implements.

Before transporting a towed implement, determine from signs on the implement or information provided in the implement's operator manual the maximum transport speed. Never transport at speeds that exceed the implement's maximum transport speed. Exceeding the implement's maximum transport speed can result in:

- Loss of control of the towing unit/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to the implement structure or its components

Implements shall be equipped with brakes if the maximum fully loaded weight is greater than 1500 kg (3307 lbs) and greater than 1.5 times the weight of the towing unit.

Example: Implement mass is 1600 kg (3527 lbs) and towing unit mass is 1600 kg (3527 lbs), example implement is not required to have brakes.

Implements without brakes: Do not transport at speeds greater than 32 km/h (20 mph).


Implements with brakes:

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the towing unit weight.
- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the towing unit weight.

When towing a trailer, become familiar with the braking characteristics and ensure the compatibility of the tractor/trailer combination in regard to the deceleration rate.

DX,TOW1-19-28FEB17

Use Caution on Slopes, Uneven Terrain, and Rough Ground

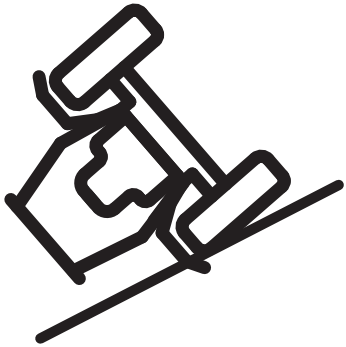

RXA0103437—UN—01JUL09

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on slopes. Avoid sharp uphill turns.

Driving forward out of a ditch, mired condition, or up a steep slope could cause the tractor to tip over rearward. Back out of these situations if possible.

Danger of overturn increases greatly with narrow tread setting, at high speed.

Not all conditions that can cause a tractor to overturn are listed. Be alert for any situation in which stability may be compromised.

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.

Uneven terrain or rough ground can cause loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on uneven terrain or rough ground requires extra caution.

Never drive near the edge of a gully, drop-off, ditch, steep embankment, or a body of water. The machine could suddenly roll over if a wheel goes over the edge or the ground caves in.


Choose a low ground speed so you will not have to stop or shift while on a slope.

Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.

Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.

DX,WW,SLOPE-19-28FEB17

Freeing a Mired Machine

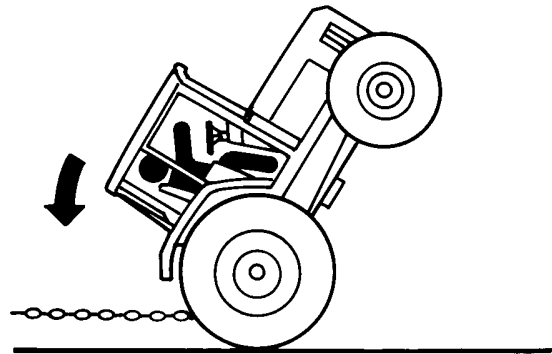

TS1645—UN—15SEP95



TS263—UN—23AUG88

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.


Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack; a sudden pull could snap any towing device causing it to whip or recoil dangerously.

DX,MIRE-19-07JUL99

Avoid Contact with Agricultural Chemicals

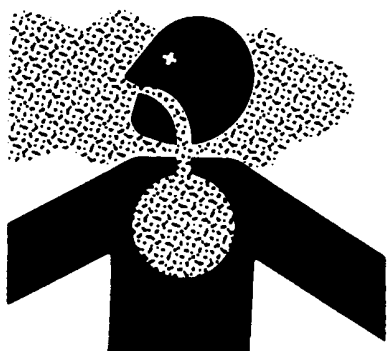

TS220—UN—15APR13



TS272—UN—23AUG88

This enclosed cab does not protect against inhaling vapor, aerosol or dust. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.


Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

DX,CABS-19-25MAR09

Handle Agricultural Chemicals Safely



TS220—UN—15APR13

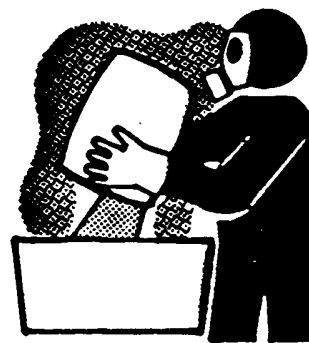

A34471

A34471—UN—11OCT88

Chemicals used in agricultural applications such as fungicides, herbicides, insecticides, pesticides, rodenticides, and fertilizers can be harmful to your health or the environment if not used carefully.

Always follow all label directions for effective, safe, and legal use of agricultural chemicals.

Reduce risk of exposure and injury:

- Wear appropriate personal protective equipment as recommended by the manufacturer. In the absence of manufacturer's instructions, follow these general guidelines:
 - Chemicals labeled '**Danger**': Most toxic. Generally require use of goggles, respirator, gloves, and skin protection.
 - Chemicals labeled '**Warning**': Less toxic. Generally require use of goggles, gloves, and skin protections.
 - Chemicals labeled '**Caution**': Least toxic. Generally require use of gloves and skin protection.
- Avoid inhaling vapor, aerosol or dust.
- Always have soap, water, and towel available when working with chemicals. If chemical contacts skin, hands, or face, wash immediately with soap and water. If chemical gets into eyes, flush immediately with water.
- Wash hands and face after using chemicals and before eating, drinking, smoking, or urination.
- Do not smoke or eat while applying chemicals.
- After handling chemicals, always bathe or shower and change clothes. Wash clothing before wearing again.
- Seek medical attention immediately if illness occurs during or shortly after use of chemicals.
- Keep chemicals in original containers. Do not transfer chemicals to unmarked containers or to containers used for food or drink.
- Store chemicals in a secure, locked area away from human or livestock food. Keep children away.
- Always dispose of containers properly. Triple rinse


empty containers and puncture or crush containers and dispose of properly.

DX,WW,CHEM01-19-24AUG10

Handling Batteries Safely



TS204—UN—15APR13

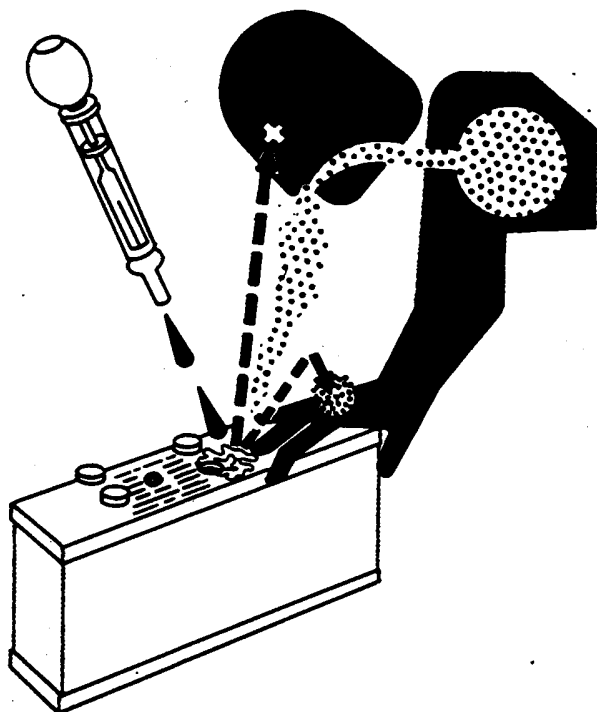

TS203—UN—23AUG88

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and

strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

DX,WW,BATTERIES-19-02DEC10

Avoid Heating Near Pressurized Fluid Lines




TS953—UN—15MAY90

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.

DX,TORCH-19-10DEC04

Remove Paint Before Welding or Heating

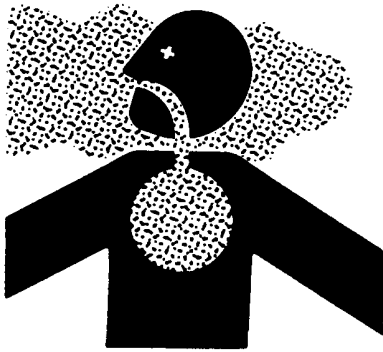

TS220—UN—15APR13

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX, PAINT-19-24JUL02

Handle Electronic Components and Brackets Safely



TS249—UN—23AUG88

Falling while installing or removing electronic

components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.

DX, WW, RECEIVER-19-24AUG10

Practice Safe Maintenance



TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed.

Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-28FEB17

Avoid Hot Exhaust



RG17488—UN—21AUG09

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.


Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

DX,EXHAUST-19-20AUG09


Clean Exhaust Filter Safely



TS227—UN—15APR13

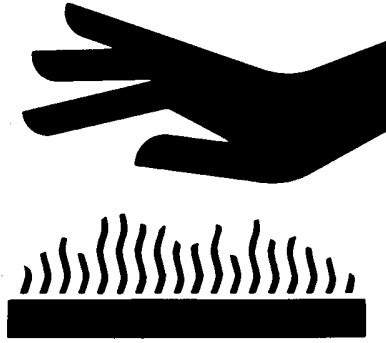

TS271—UN—23AUG88

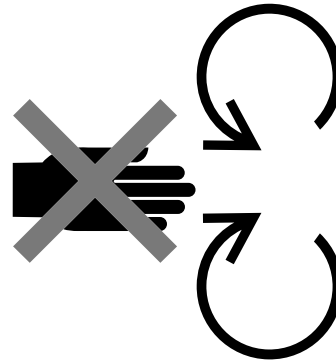

TS1693—UN—09DEC09



TS1695—UN—07DEC09

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.

If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine


Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

DX,EXHAUST,FILTER-19-12JAN11

Work In Ventilated Area

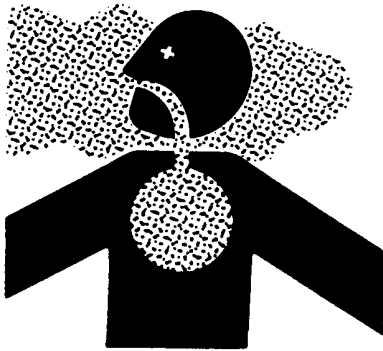


TS220—UN—15APR13

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

DX,AIR-19-17FEB99

Support Machine Properly

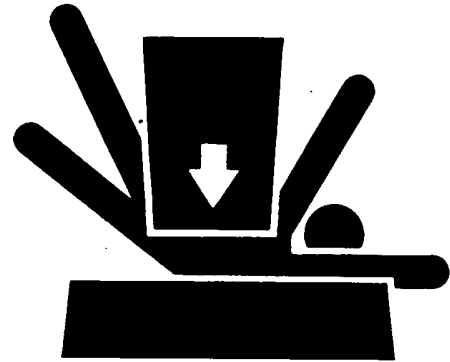

TS229—UN—23AUG88


Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

DX,LOWER-19-24FEB00

Prevent Machine Runaway

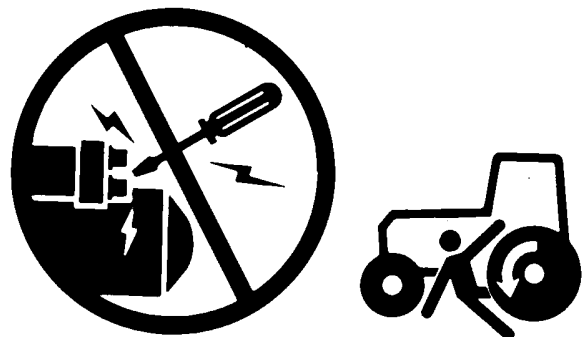

TS177—UN—11JAN89


Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

DX,BYPAS1-19-29SEP98

Park Machine Safely

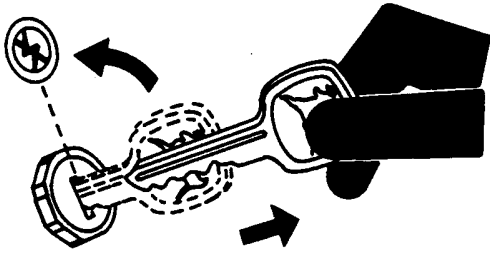


TS230—UN—24MAY89

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

DX,PARK-19-04JUN90

Service Cooling System Safely

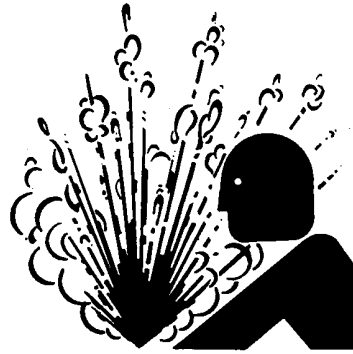


TS281—UN—15APR13

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

DX,WW,COOLING-19-19AUG09

Transport Tractor Safely

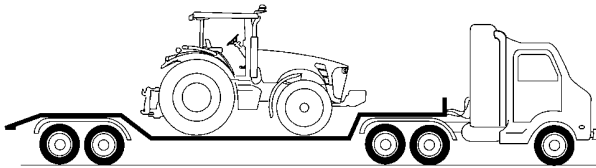

RXA0103709—UN—01JUL09


A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier. The axles and tractor frame are suitable attachment points.

Before transporting the tractor on a low-loader truck or flatbed rail wagon, make sure that the hood is secured over the tractor engine and that doors, roof hatch (if equipped) and windows are properly closed.

Never tow a tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

DX,WW,TRANSPORT-19-19AUG09

Service Accumulator Systems Safely

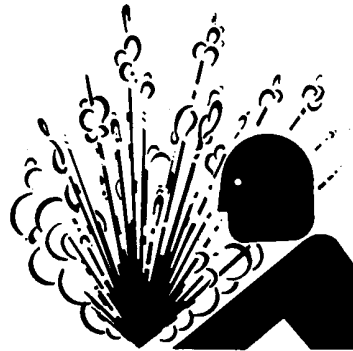

TS281—UN—15APR13

Escaping fluid or gas from systems with pressurized accumulators that are used in air conditioning, hydraulic, and air brake systems can cause serious injury. Extreme heat can cause the accumulator to burst, and pressurized lines can be accidentally cut. Do not weld or use a torch near a pressurized accumulator or pressurized line.

Relieve pressure from the pressurized system before removing accumulator.

Relieve pressure from the hydraulic system before removing accumulator. Never attempt to relieve hydraulic system or accumulator pressure by loosening a fitting.

Accumulators cannot be repaired.

DX,WW,ACCLA2-19-22AUG03

Service Tires Safely



RXA0103438—UN—11JUN09

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.


When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims, or missing lug bolts and nuts.

Wheels and tires are heavy. When handling wheels and tires use a safe lifting device or get an assistant to help lift, install, or remove.

DX,WW,RIMS-19-28FEB17

Service Front-Wheel Drive Tractor Safely

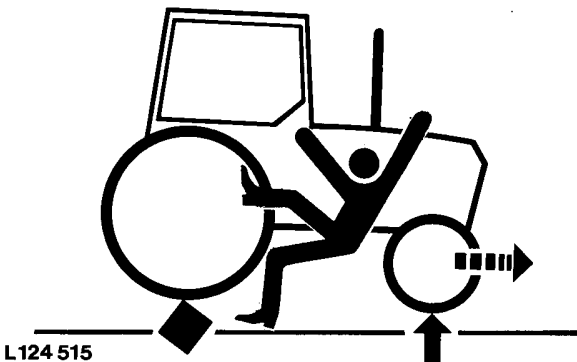

L124 515


L124515—UN—06AUG94

When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front

wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

DX,WW,MFWD-19-19AUG09

Tightening Wheel Retaining Bolts/Nuts

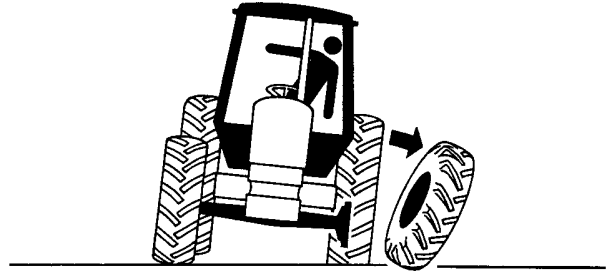


L124 516

L124516—UN—03JAN95

Torque wheel retaining bolts/nuts at the intervals specified in section Break-In Period and Service.

DX,WW,WHEEL-19-12OCT11

Avoid High-Pressure Fluids

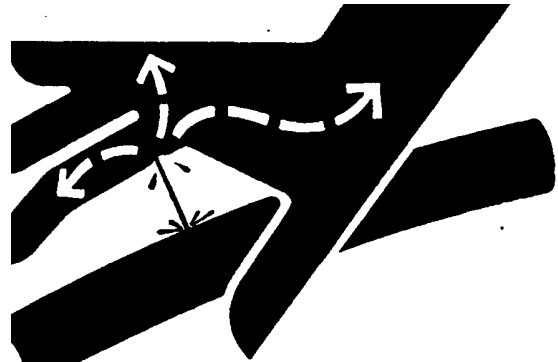

X9811—UN—23AUG88

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.

Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any

fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID-19-12OCT11

Do Not Open High-Pressure Fuel System



TS1343—UN—18MAR92

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)

DX,WW,HPCR1-19-07JAN03

Store Attachments Safely




TS219—UN—23AUG88

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

DX,STORE-19-03MAR93

Decommissioning — Proper Recycling and Disposal of Fluids and Components

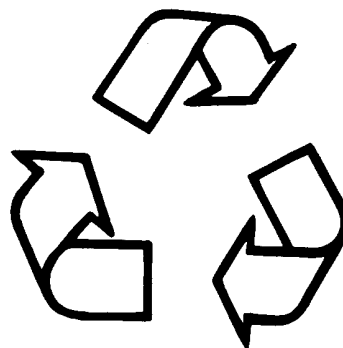

TS1133—UN—15APR13

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:


- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.
- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.
- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid); filters; batteries; and, other substances or parts. Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.
- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
- Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.

- Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.


DX,DRAIN-19-01JUN15

Safety Signs

Operator's Manual

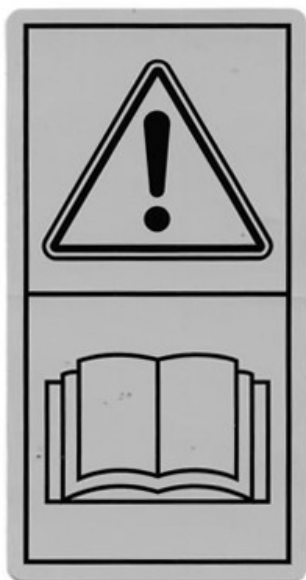

RXA0179015—UN—05AUG20

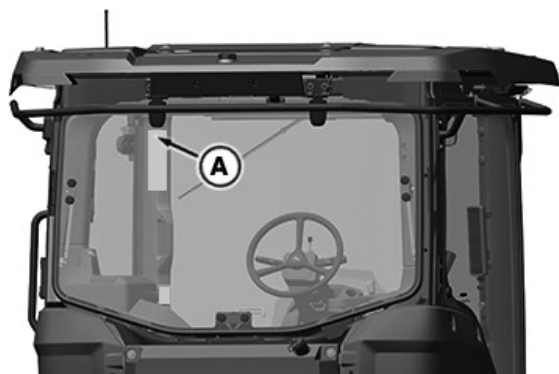

A—Operator's Manual Label

CAUTION: Avoid the risk of injury.


This Operator's Manual contains important information necessary for safe machine operation and explanation of safety signs. Carefully observe all safety rules to avoid accidents.

RD47322,0000842-19-27OCT20

Seat Belt



RXA0179016—UN—05AUG20

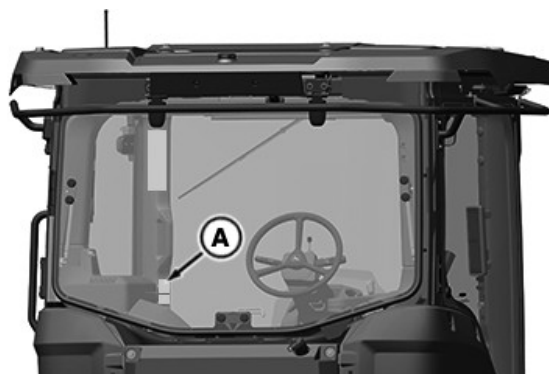

RXA0180321—UN—27OCT20

A—Seat Belt Label

Use Seat Belt Properly.

CAUTION: Avoid crushing injury or death during rollover.

This machine is equipped with a roll-over protective structure (ROPS).

USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure the belt is securely fastened.
- Snug the seat belt across the hips.

RD47322,0000376-19-09SEP21

Hinge Area



RXA0179018—UN—05AUG20



RXA0139174—UN—30MAY14


A— Hinge Area Labels (Left-Hand and Right-Hand)

CAUTION: Avoid crushing and pinching.


Crushing injury may result in hinge area if machine is turned. Make sure people are clear of machine before starting engine or moving steering wheel. Attach steering lockouts before performing service near center of machine or transporting on a truck.

RD47322,0000844-19-07AUG17

Park Brake (Stored Energy)

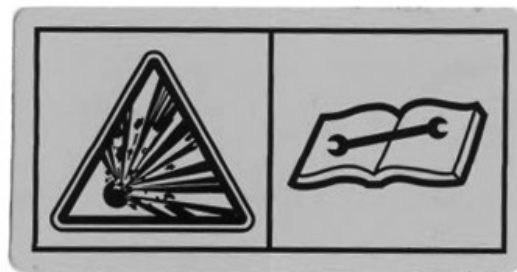

RXA0179011—UN—05AUG20

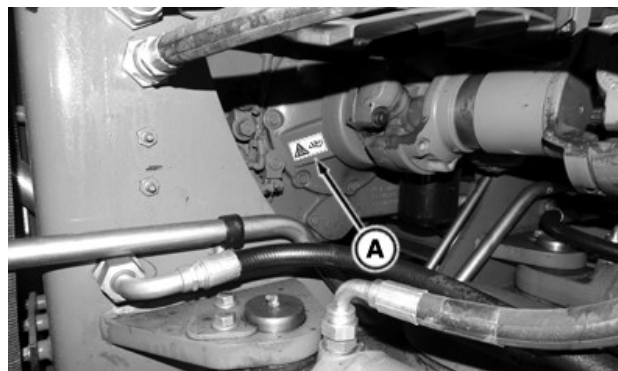

RXA0139186—UN—07FEB14

A—Park Brake Label

CAUTION: Avoid injury from sudden release of stored energy.


Park brake contains spring under load. Remove park brake cover cap screws evenly.

RD47322,0000846-19-07AUG17

Track Accumulators



RXA0179013—UN—05AUG20

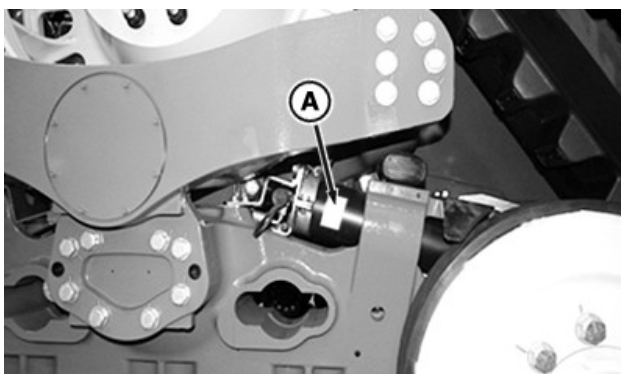

RXA0180366—UN—03NOV20

A—Accumulator Label (Left-Hand and Right-Hand, Front and Rear Axles)

CAUTION: Avoid crushing and fluid injection.


Releasing pressure may cause machine movement and exposure to fluid under pressure. See dealer for instruction on relieving pressure before servicing system.

RD47322,00008F8-19-04NOV20

Rear Hitch (If Equipped for China Only) [Ag]



RXA0179014—UN—05AUG20

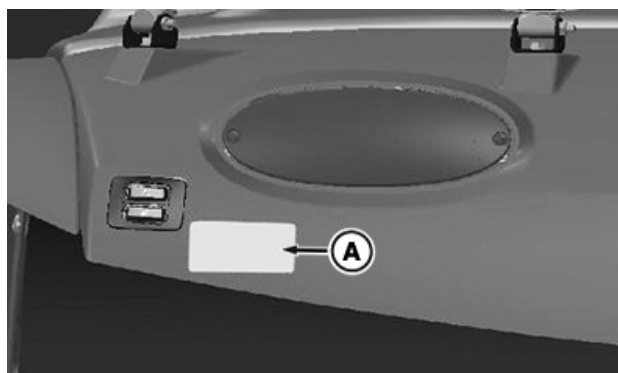

RXA0180291—UN—26OCT20

A—Left-Hand Label

CAUTION: Avoid crushing.


When attaching or detaching an implement, there is a risk of crushing in the area between the tractor and implement. When attaching to the hitch, stay clear of the area where the three-point hitch rises and do not permit anyone to be in the area.

RD47322,0000847-19-26OCT20

Engine Cooling System (For China Only)



RXA0135618—UN—13NOV13

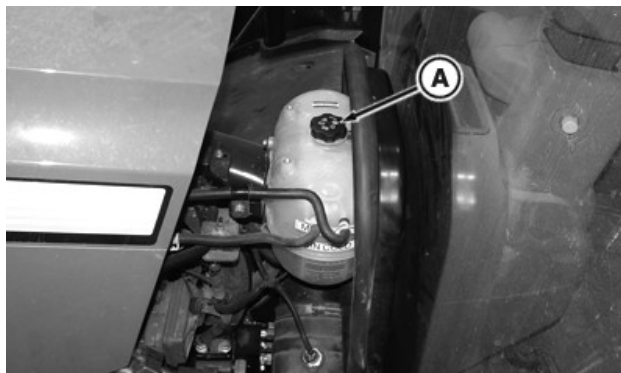

RXA0139435—UN—14FEB14

A— De-aeration Tank Cap

⚠ CAUTION: Avoid entanglement.

Keep hands, feet, and clothing away from rotating components. Shut off the engine and wait until all components have stopped turning. Keep all shields in place.

EC82310,0000694-19-26JUL18

⚠ CAUTION: Avoid scalding.

Coolant is under high pressure. Before removing the cap, allow sufficient time for the cooling system to cool down and for pressure to drop.


Shut off the engine, open the hood and wait until the cooling system has cooled down. Do not open the cap unless the hoses of the cooling system are cool enough to be touched with your bare hand. First open the cap only far enough to allow the pressure to drop, then unscrew it completely.

KT81203,00009A2-19-02NOV17

Rear PTO (If Equipped for China Only) [Ag]



RXA0179012—UN—05AUG20

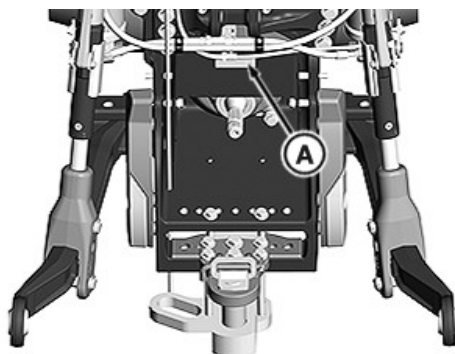

RXA0162409—UN—07MAR18

A— PTO Label

Vehicle Overview

9RX Series Tractor



9RX Series Tractor (Typical)

RXA0185294—UN—01SEP21

KD34109,00001DA-19-01SEP21

Engine Operation

Engine Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Engine

RXA0175176—UN—17FEB20

3. Engine

Access Application Through Navigation Bar:



Engine

RXA0168449—UN—30MAY19


Press engine button on navigation bar below display.

KD34109,00005AC-19-20JAN21

Engine Settings

The Engine application is used to access and adjust engine settings.

NOTE: Some items only display if machine is equipped with the associated option.

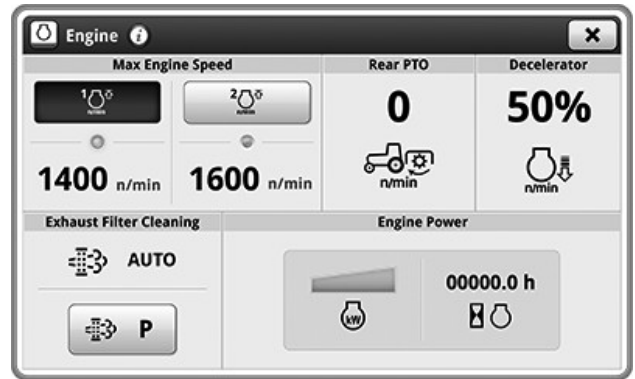

RXA0175172—UN—13FEB20

Engine Example

Items Accessible on the Engine Main Page:



Engine Power

RXA0175187—UN—13FEB20

Engine Power — select to display the current engine power level. See Engine Settings—Engine Power in this Operator's Manual section.

00000.0 h



Engine Hours

RXA0175162—UN—17FEB20

Engine Hours — displays the accumulated engine hours.

Max Engine Speed Items:



Max Engine Speed 1

RXA0175183—UN—17FEB20

Enable Max Engine Speed 1 — select to enable the saved maximum speed.

1400 n/min

Max Engine Speed 1 Value

RXA0175194—UN—18FEB20

Max Engine Speed 1 — select to adjust the maximum speed setting. See Engine Settings—Max Engine Speed in this Operator's Manual section.



RXA0175184—UN—17FEB20

Max Engine Speed 2

Enable Max Engine Speed 2 — select to enable the saved maximum speed.

1600 n/min

RXA0175195—UN—18FEB20

Max Engine Speed 2 Value

Max Engine Speed 2 — select to adjust the maximum speed setting. See Engine Settings—Max Engine Speed in this Operator's Manual section.



RXA0175181—UN—13FEB20

Indicator

Active Indicator — illuminates orange when a Max Engine Speed is enabled.

Standby Indicator — appears gray when a Max Engine Speed is disabled.

Rear PTO Items:



RXA0175189—UN—02APR20

Rear PTO Speed

Rear PTO — displays the current PTO speed.

Exhaust Filter Cleaning Items:

NOTE: Final Tier 4/Stage V engines only.



RXA0175166—UN—17FEB20

AUTO Exhaust Filter Cleaning

AUTO Exhaust Filter Cleaning — select to enable/disable an automated process to perform Exhaust Filter Cleaning during normal operation. See Engine Settings—Exhaust Filter System Overview in this Operator's Manual section.



RXA0175186—UN—18FEB20

Parked Filter Cleaning

Parked Filter Cleaning — select to start a process to perform Exhaust Filter Cleaning while the machine is

parked. See Engine Settings—Exhaust Filter System Overview in this Operator's Manual section.



RXA0175191—UN—18FEB20

Request Exhaust Filter Cleaning

Request Exhaust Filter Cleaning — select to start a more intense cleaning procedure than Parked Filter Cleaning. See Engine Settings—Exhaust Filter System Overview in this Operator's Manual section.

Decelerator Items:

50%



RXA0175169—UN—13FEB20

Decelerator

Decelerator — select to adjust how much the engine rpm decreases when the foot decelerator is used.

Engine Braking Items:



RXA0167071—UN—21MAR19

Advanced Settings

Advanced Settings — access further adjustments and less common settings.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the Generation 4 Display operator's manual.

Example:



RXA0175178—UN—17FEB20

Engine Power

NOTE: Different modules may be available for your application.

Engine Power — quick access to the Engine Power module.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the Generation 4 Display operator's manual.

Example:



ON

RXA0175174—UN—17FEB20

NOTE: Different shortcut keys may be available for your application.


Engine Brake — quick access to turn the Engine Brake ON and OFF.

KD34109,00005AD-19-16JUN20

Engine Settings—Engine Power

The Engine Power page displays a graph of the current Engine Power level and the number of accumulated engine hours.

Items Accessible on Engine Power Page:

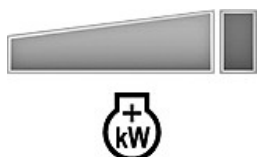

Power Level

RXA0175180—UN—17FEB20

The green fill indicates the amount of Engine Power being used. A reading does not display until 40% of the available Engine Power is being used.

00000.0 h



Engine Hours

RXA0175162—UN—17FEB20

Accumulated engine operating hours for the machine are displayed.

KD34109,00005AE-19-03SEP21

Engine Settings—Max Engine Speed

Limiting engine speed in light load situations can improve fuel economy. Max Engine Speed utilizes a constant speed governor curve, providing an instant response to varying loads. The setting can be adjusted 1100—2150 rpm. Two different speeds can be set,

enabling the operator to toggle quickly from one to the other.

Procedure to Modify:

NOTE: The engine must be running to adjust the Max Engine Speed.

1400 n/min

Max Engine Speed Value

RXA0175194—UN—18FEB20

1. Select Max Engine Speed value.



Adjust Speed

RXA0175163—UN—17FEB20

2. Select (+/++) to increase or (-/-) to decrease the setting. Use (++) and (-/-) to increase or decrease the value at a higher rate than (+) and (-). The value is shown in the display box.



Close

RXA0167129—UN—25MAR19

3. Select to close.

PTO Items:



Rear PTO Speed

RXA0175189—UN—02APR20

Rear PTO — displays the current PTO speed.

External Sources:

Max Engine Speed Button — enable/disable Max Engine Speeds using the button on the CommandARM™. See CommandARM™ Controls—Left Side in CommandARM™ Controls section of this Operator's Manual. The last Max Engine Speed selected in the CommandCenter™ is used. A box

displays on the page around the Max Engine Speed that was enabled last.

Interaction with Transmission Modes:

NOTE: The transmission mode is changed on the Transmission page. For more information, see Transmission section.

- **Full AUTO** — at full throttle, the minimum engine speed is 1500 rpm with the PTO off. The transmission downshifts and the engine speeds up to the Max Engine Speed to compensate for increasing workloads. The available engine speed range is 1500 rpm to Max Engine Speed.
- **Custom** — two minimum engine speed settings are also available, ECO ON and ECO OFF. ECO ON runs the engine as low as possible for light loads that do not change quickly. ECO OFF can handle quick load changes.
- **Manual** — the operator sets the engine speed using the hand throttle. The engine speed stays constant and is limited by the Max Engine Speed.

KD34109,00005B0-19-11MAR21

Engine Settings—Exhaust Filter System Overview

Final Tier 4/Stage V engines clean and filter the exhaust. Under normal machine operation and with filter cleaning in AUTO mode, minimal interaction is required.

To avoid unnecessary buildup of diesel particulates or soot in the exhaust filter system:

- Utilize the AUTO Exhaust Filter Cleaning mode.
- Avoid unnecessary idling.
- Use proper engine oil.
- Use only ultra-low sulfur fuel.

CAUTION: When AUTO, Parked, or Requested Filter Cleaning is in progress, the exhaust temperature can be high under no load or light load conditions at certain times during the Exhaust Filter Cleaning cycle.

Servicing the machine or attachments during the Exhaust Filter Cleaning can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

During the AUTO and manual/stationary Exhaust Filter Cleaning operations, the engine runs at elevated idle and hot temperatures for an extended period. Exhaust gases and exhaust filter components reach temperatures hot enough to cause burns to people, or to ignite or melt common materials.

Never perform exhaust cleaning procedures in a closed building unless suitable exhaust is provided.

Corner post display indicators and CommandCenter™ prompts provide information related to the exhaust filter system activity.



AUTO

RXA0175166—UN—17FEB20

AUTO Exhaust Filter Cleaning

NOTE: Exhaust Filter Cleaning automatically resets back to AUTO mode after every key cycle.

AUTO Exhaust Filter Cleaning — an automated process to perform Exhaust Filter Cleaning during normal operation. See Engine Settings—AUTO Exhaust Filter Cleaning in this Operator's Manual section.



DISABLED

RXA0175164—UN—17FEB20

AUTO Exhaust Filter Cleaning Disabled

Disable AUTO Exhaust Filter Cleaning — use in conditions where it can be unsafe for elevated exhaust temperatures. See Engine Settings—Disable AUTO Exhaust Filter Cleaning in this Operator's Manual section.



RXA0175186—UN—18FEB20

Parked Filter Cleaning

NOTE: The process requires about 1 hour to complete.

Parked Filter Cleaning — a process to perform Exhaust Filter Cleaning while machine is parked. See Engine Settings—Parked Filter Cleaning in this Operator's Manual section.



RXA0175191—UN—18FEB20

Request Exhaust Filter Cleaning

NOTE: The process requires about 2—3 hours to complete.

Request Exhaust Filter Cleaning — a more intense cleaning procedure than Parked Filter Cleaning. See Engine Settings—Parked Filter Cleaning in this Operator's Manual section.

Exhaust Filter Cleaning Indicator — illuminates on the corner post display when the exhaust filter system is

actively performing an Exhaust Filter Cleaning. See Corner Post Display in Corner Post Display section of this Operator's Manual.

KD34109,00005B1-19-09JUN20

Engine Settings—AUTO Exhaust Filter Cleaning

NOTE: Final Tier 4/Stage V engines only.

The Exhaust Filter Cleaning page allows you to enable/disable AUTO mode. AUTO mode automatically performs Exhaust Filter Cleaning as required.

NOTE: Tractors equipped with 15L engines will automatically perform an initial exhaust filter cleaning after a few hours of operation. This procedure may have occurred prior to tractor delivery. If the procedure begins, allow the full process to complete.

CAUTION: When AUTO, Parked, or Requested Filter Cleaning is in progress, the exhaust temperature can be high under no load or light load conditions at certain times during the Exhaust Filter Cleaning cycle.

Servicing the machine or attachments during the Exhaust Filter Cleaning can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

During the AUTO and manual/stationary Exhaust Filter Cleaning operations, the engine runs at elevated idle and hot temperatures for an extended period. Exhaust gases and exhaust filter components reach temperatures hot enough to cause burns to people, or to ignite or melt common materials.

Never perform exhaust cleaning procedures in a closed building unless suitable exhaust is provided.

IMPORTANT: Disable AUTO Exhaust Filter Cleaning when temporarily connected to an indoor ducted exhaust system for diagnostic and repair activities, or in any elevated exhaust temperature conditions that are unsafe. See Engine Settings—Disable AUTO Exhaust Filter Cleaning in this Operator's Manual section.

Do not disable AUTO Exhaust Filter Cleaning unless absolutely necessary. Repeated disabling or ignoring prompts to perform manual or Parked Filter Cleaning procedure will cause additional engine power limitation and can eventually lead to required dealer service.

Damage to exhaust cleaning components can occur if the engine is turned off while performing Exhaust Filter Cleaning or shortly after the cleaning is complete.

Procedure to Modify When Disabled:



DISABLED

RXA0175164—UN—17FEB20

AUTO Exhaust Filter Cleaning Disabled

1. Select to open the AUTO Exhaust Filter Cleaning page.

NOTE: Exhaust Filter Cleaning automatically resets back to AUTO mode after every key cycle.



RXA0167628—UN—26APR19

ON/OFF

2. Select ON to enable AUTO Exhaust Filter Cleaning.



RXA0167129—UN—25MAR19

Close

3. Select to close.

KD34109,00005B2-19-21APR20

Engine Settings—Disable AUTO Exhaust Filter Cleaning

NOTE: Final Tier 4/Stage V engines only.

AUTO Exhaust Filter Cleaning can be disabled in certain conditions.

IMPORTANT: Disable the AUTO Exhaust Filter Cleaning system only when necessary.

Modify When:

- Indoors or under a roof, unless a high temperature externally vented exhaust system is connected.
- There is not enough time available for the machine to complete a cleaning cycle before it is shut down.
- Operating in high crop dust or chaff conditions.
- Next to a fueling area.

Procedure to Modify:




1. Select to open the AUTO Exhaust Filter Cleaning page.

NOTE: Exhaust Filter Cleaning automatically resets back to AUTO mode after every key cycle.



2. Select OFF to disable AUTO Exhaust Filter Cleaning.

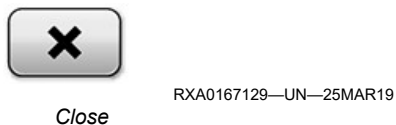

3. Select to close.



The DISABLED icon and text will display on the main page.

KD34109,00005B3-19-18FEB20

Engine Settings—Parked Filter Cleaning

NOTE: Final Tier 4/Stage V engines only.

Parked Filter Cleaning is an operator-initiated process to clean the exhaust filter.

During the process, the system controls engine speed and the machine must remain parked to complete the procedure. The time required for the Parked Filter Cleaning process is dependent upon the level of exhaust filter restriction, ambient temperatures, and the current exhaust gas temperature.

Modify When:

- The Exhaust Filter Cleaning indicator is flashing on the corner post display.
- Constantly disabling AUTO Exhaust Filter Cleaning mode.
- Idling excessively.
- Incorrect fuel quality is used.

NOTE: If Parked Filter Cleaning is ignored and the soot level gets too high, Request Filter Cleaning, a more intense cleaning procedure, will be forced.

CAUTION: When AUTO, Parked, or Requested Exhaust Filter Cleaning is in progress, the exhaust temperature can be high under no load or light load conditions at certain times during the Exhaust Filter Cleaning cycle.

Servicing the machine or attachments during the Exhaust Filter Cleaning can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

During the AUTO and manual/stationary Exhaust Filter Cleaning operations, the engine runs at elevated idle and hot temperatures for an extended period. Exhaust gases and exhaust filter components reach temperatures hot enough to cause burns to people, or to ignite or melt common materials.

Never perform exhaust cleaning procedures in a closed building unless suitable exhaust is provided.

Procedure to Modify:

1. Select appropriate procedure:




- a. Parked Filter Cleaning



- b. Request Exhaust Filter Cleaning

2. Verify that the machine is configured for Parked Filter Cleaning.

- Stop machine motion.
- Set the engine speed to low idle.
- Engage the park brake.
- Disengage the PTO (front and rear).

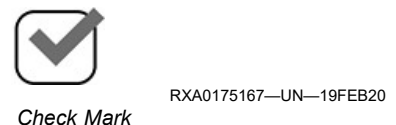

Once a condition has been met, a green check mark displays next to the condition.



Next

RXA0175185—UN—19FEB20

3. Once all conditions have been met, select Next.

NOTE: The exhaust filter system controls the engine speed to increase the exhaust temperature.



Progress Indicator

RXA0175188—UN—19FEB20

A progress indicator displays while Exhaust Filter Cleaning is running.



Complete

RXA0175168—UN—19FEB20

The system informs you when each of the two stages is complete:

- Preparation — the exhaust filter system controls engine speed to increase the exhaust temperature.
- Cleaning — diesel particulates (soot) are cleaned from the exhaust filter system. The process may exceed 40 minutes.



Close

RXA0167129—UN—25MAR19

4. Select to close.

NOTE: The system defaults to AUTO mode when cleaning is complete.

If you are not returning the machine to service immediately after the procedure, allow the engine enough time to return to normal operating temperature before turning off the engine.

Cancel Procedure:



Abort

RXA0175161—UN—19FEB20

To cancel the process, select Abort at any time during the cleaning procedure.

The process is also canceled by:

- Advancing the throttle.
- Engaging the transmission.
- Stopping the engine.
- Engaging the PTO (front or rear).

KD34109,00005B4-19-23NOV20

Engine Settings—Decelerator

The Decelerator page allows a percentage adjustment of the maximum engine rpm for the foot decelerator. When the decelerator is active, the full range of the throttle is affected.

When using Efficiency Manager™ and depressing the foot decelerator, transmission downshifts to the startup gear may occur in order to reduce wheel speed. To reduce the number of shifts, adjust the start gear.

Procedure to Modify:



Increase/Decrease Value

RXA0175170—UN—17FEB20

1. Select (+) to increase or (-) to decrease the percentage. The default setting is 65% and can be adjusted 50—95%. The value is shown in the display box.



Close

RXA0167129—UN—25MAR19

2. Select to close.

KD34109,00005B5-19-24FEB20

Engine Settings—Advanced

Advanced settings allow you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:



AUTO ON/OFF

RXA0175165—UN—17FEB20

IMPORTANT: Avoid injury and/or engine damage:


- The Engine Braking system assists the service brakes in slowing the vehicle down. **Never use only the engine brakes to stop the vehicle.**
- **Do not exceed the governed engine speed when operating the engine brakes.**

Automatic Engine Braking — reduces the tractor speed using engine compression, allowing less wear on the service brakes. Use when traveling under load on level surfaces. Select ON to enable or OFF to disable.

KD34109,0000617-19-08SEP20

Required Machine Stop Warning

Machine Stop Mandate Occurs

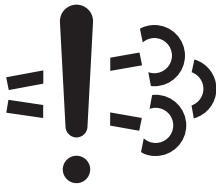

RG22491—UN—21AUG13

IMPORTANT: In some situations, machine engine power may be reduced as described. On notification, immediately place the machine in a safe state and or move it to a safe location. A mandated machine stop can only be removed by a service technician.

Engine Emissions System Malfunction Indicator illuminates when an emission-related fault occurs.



RG22492—UN—21AUG13

Warning Indicator illuminates when a condition exists which requires operator action.




RG22493—UN—21AUG13

Engine Stop Indicator illuminates when a condition

exists which requires immediate operator action and service.



Emission System Fault Has Occurred

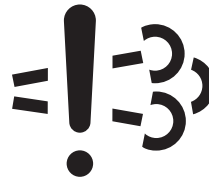

RG26361—UN—04SEP14

30 minutes remaining, Engine Emissions System Malfunction and Warning Indicators are illuminated and alarm sounds to warn operator of emissions-related fault. "Less than 30 minutes to Power Restriction" displayed on machines with display.


- Engine power is normal.
- Machine operation is normal.
- Place machine in a safe state.
- Contact service provider.

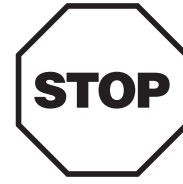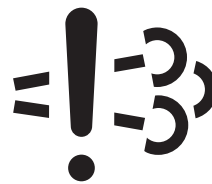

RG26972—UN—26MAR15

20 minutes remaining, Engine Emissions System Malfunction and Engine Stop Indicators are illuminated and alarm sounds to warn operator of emissions-related fault. "Less than 20 minutes to Power Restriction" displayed on machines with displays.

- Engine power and torque are reduced.
- Key Off - Key On will temporarily provide full power.
- Place machine in a safe state.
- Contact service provider.

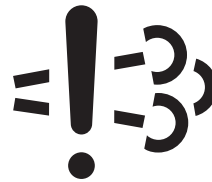

RG26972—UN—26MAR15

2 minutes or less remaining, Engine Emissions System Malfunction and Engine Stop Indicators are illuminated and alarm sounds to warn operator of emissions-related fault which has not been corrected. "Power Restriction" displayed on machines with displays.

- Engine power is idle only.
- Place machine in a safe state.
- Contact service provider.

DX,MACHSTOPWARN,AG-19-02OCT15

Engine Fuel System and Power Rating

Fuel System

IMPORTANT: Modification or alteration of injection system or emission control devices will terminate warranty to purchaser.

Do not attempt to service injection system. Special training and special tools are required. See your John Deere dealer.


Engine Certification/Power Rating

kW (hp) rating on engine emissions certification label specifies gross engine kW (hp), which is flywheel power without fan.

TS36762,0000174-19-18NOV16

Battery Disconnect Switch

CAUTION: Avoid injury or damage to the tractor systems from inadvertent contact with electrical power. Disconnect the battery when directed.

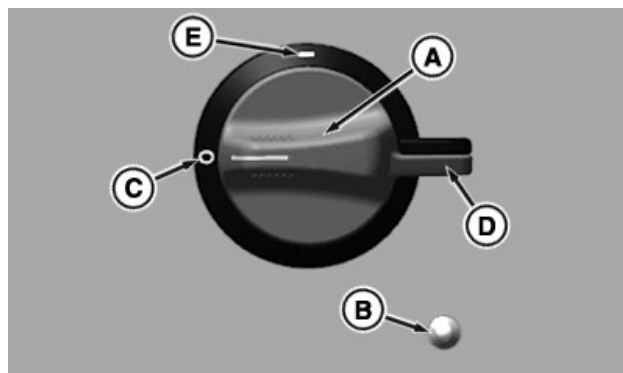

RXA0180392—UN—06NOV20

The battery disconnect switch is located near the tractor stairs.

IMPORTANT: Prevent damage to the tractor electrical system and emissions system. Never turn off the power using the battery disconnect switch (A) when the:

- Engine is running.
- Battery disconnect light (B) is illuminated.

During a long storage period, always turn the battery disconnect switch to the off position. If the battery disconnect switch is left on, the battery could lose charge.

1. Before using the battery disconnect switch, ensure that the:
 - a. Tractor is stopped.
 - b. Transmission is placed into PARK.

c. Key is switched to OFF.

2. When the battery disconnect switch indicator light has gone out, turn the battery disconnect switch off (C).
3. If desired, secure the battery disconnect switch in the off position using holes (D) provided.
4. Turn the battery disconnect switch on (E) before operating tractor.

EC82310,0000F58-19-09NOV20

Start the Engine

Before Starting the Engine

1. Move the SCV levers to the NEUTRAL position.
2. Disengage the PTO (if equipped).
3. Move the hand throttle to the low idle position.
4. Move the transmission shift lever to the PARK position.

CAUTION: Avoid possibility of serious injury or death. Be sure that the tractor and attached equipment are clear of people and other objects.

5. Depress clutch and brake pedals.
6. Sound horn.

Start the Engine



RXA0167042—UN—20MAR19

1. Turn the key switch (A) fully clockwise to the start position. The Engine Control Unit (ECU) senses the key position and sends a signal to the starter to start the engine. The key can be released.

2. If the engine fails to start after a time period determined by the ECU, based on ambient conditions, the ECU will terminate the start attempt until the cranking motor has had time to cool. Depending on conditions, the ECU can:
 - Attempt to start the engine for up to 2 minutes.
 - Prevent a second start attempt for up to 2 minutes.
3. The engine start attempt continues until any of the following conditions occur:
 - The engine starts.
 - The starting process is canceled by turning the key switch to OFF.
 - Or an engine problem is detected by the ECU.
 - The engine was unable to start after attempting for up to 2 minutes.
4. If the engine:
 - Starts—begin desired operations.
 - Does not start—attempt a second start. If the engine still does not start, go to step 5.

NOTE: If the engine fails to start, the ECU can prevent additional cranking attempts for up to 2 minutes, allowing the cranking motor sufficient time to cool.

5. Check the:
 - Quantity and quality of the fuel.
 - Electrical system.
 - Ambient temperature. In cold weather (at or below -6°C [21°F]), follow the steps listed in the appropriate Cold Weather Starting topic in Cold Weather Operation section of this Operator's Manual.
6. If all factors in step 5 are acceptable, attempt to start the engine again. If the engine fails to start after three attempts, see your John Deere dealer.

KT81203,0000136-19-03NOV20

Theft Deterrent Systems

Immobilizer Keys

Immobilizer is a system that must have a programmed key for that tractor. If the key does not have the specific electronic device, the engine starts, but only runs briefly before shutting off. Continued attempts with key not programmed for tractor will result in tractor engine turning over, but will not start.



RXA0108294—UN—24JUN10

Immobilizer Key Compared To Standard John Deere Key

NOTE: Immobilizer keys (A) can be identified because they are slightly thicker than a normal ignition key (B). Immobilizer keys are programmed for a specific tractor. There is only a limited number of keys available for any given tractor.

Immobilizer equipped tractors are delivered with two keys to the dealer. Up to three additional keys can be ordered through your John Deere dealer.

CESAR Datatag



RXA0117725—UN—09JUN11

CESAR Datatag

This theft deterrent system helps reduce tractor theft and also helps with recovery of stolen tractors.

Tractors equipped with the CESAR Datatag will have 2 large and 2 small waterproof, triangle shaped, identification plates located around the machine. These tags contain small Radio Frequency Identification (RFID) chips that can be read by a Datatag scanner to identify a machine if the serial numbers have been removed. Other secure items are used to identify tractors and/or tractor components if the machine is stolen.

TS36762,00002A7-19-14MAY19

Run the Engine

IMPORTANT: Do not start engine with throttle pushed completely forward.

Avoid excessive engine idling (more than 5 minutes). Prolonged idling may cause engine coolant temperature to fall below normal range. Prolonged idling causes crankcase oil dilution, due to incomplete fuel combustion, and permits formation of gummy deposits on valves, pistons, and piston rings. It promotes rapid accumulation of engine sludge and unburned fuel in exhaust system.

Operate engine between 1500—2100 rpm. Do not operate engine constantly below 1500 rpm during heavy draft usage or when tractor is under full PTO [Ag] load.

For maximum tractor performance:

- Ensure that tractor is correctly ballasted, see Performance Ballasting section of this Operator's Manual.
- For transmission information, see e18™ PowerShift™ Transmission section of this Operator's Manual.

If engine stalls, start immediately to provide lubrication to critical engine parts.

Allow engine to idle for 20 seconds before turning key switch to OFF position.

IMPORTANT: Contact your John Deere dealer if any symptoms that may be early signs of engine problems are detected:

- Sudden drop in oil pressure
- Abnormal coolant temperatures
- Unusual noise or vibration
- Sudden loss of power
- Excessive fuel consumption
- Excessive oil consumption
- Fluid leaks

KT81203,00000C9-19-12NOV19

Stop the Engine

IMPORTANT: Before stopping an engine that has been operating at working load, idle engine at least 2 minutes at 1000—1200 rpm to cool hot engine parts. If an exhaust filter cleaning has just been performed, increase engine idle time to 4 minutes. If service work is going to be performed on exhaust filter, increase engine idle time to 10 minutes.

IMPORTANT: Prevent damage to tractor emissions system. Battery disconnect switch with indicator light: Tractor is equipped with an engine which uses a Selective Catalytic Reduction (SCR) system. Light is illuminated during Diesel Exhaust Fluid (DEF) purge from system. Do not turn disconnect switch off until light goes out.

Battery disconnect switch without indicator light: Engine not equipped with SCR system. No waiting period is required before turning off switch.

See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.

1. Stop tractor and pull throttle back to slow idle position.
2. Depress clutch and brake pedals.
3. Put transmission in PARK position.
4. Lower all equipment to the ground.
5. Make sure SCV levers are in NEUTRAL position.
6. [Ag] Pull rear PTO (if equipped) switch rearward to disengage PTO.

 **CAUTION: Remove key to prevent accidents.**

7. Turn key switch to OFF position and remove key.

KT81203,00000D1-19-21AUG18

Restart Engine That Has Run Out of Fuel

1. Fill fuel tank.
2. Turn key switch to RUN position to start electric fuel pump and bleed air from fuel system.

NOTE: Steps two and three may need to be repeated as necessary if fuel tanks have been removed or drained.

3. Allow pump to run for 30 seconds to 1 minute before attempting to restart engine.

Fuel pump will turn off after 1 minute. Key switch must be turned to OFF and back to RUN to turn pump back on.

TS36762,0000179-19-18NOV16

Reduce Fuel Consumption

Following are guidelines to reduce fuel consumption:

- Replace air cleaner elements and fuel, engine oil, and transmission/hydraulic filter elements at specified service intervals, see Service—Record

Charts section of this Operator's Manual or when indicated by CommandCenter™ display messages.

- Use recommended oils and lubricants only, see Fuel, Lubricants, and Coolant sections of this Operator's Manual.
- Adjust hitch function for most efficient operation, see TouchSet Depth Control Section of this Operator's Manual.
- Ballast tractor for conditions, see Performance Ballasting Section of this Operator's Manual.
- Always drive in highest possible gear with reduced engine speed. Choose a gear so engine speed drops 150-250 rpm when tractor is operating and engine is under load. See e18™ PowerShift™ Transmission section of this Operator's Manual.

NOTE: For light work, reduce engine speed below 2000 rpm. Select a gear so that engine speed drops 200—300 rpm when operating.

Using Max Engine Speed may improve fuel economy. For more information on Max Engine Speed settings, see Engine Settings in this Operator's Manual section.

KT81203,00000D2-19-22APR21

Battery Booster or Charger

CAUTION: Gas given off by batteries is explosive. Keep sparks and flames away from batteries. Make the last connection and first disconnection at a point away from booster batteries.

IMPORTANT: Be sure that polarity is correct before making the connections. Reversed polarity damages the electrical system or possibly cause the battery to explode.

If two or more booster batteries are used, they must be connected in parallel ensuring booster batteries are producing 12 volt charge.

Prevent damage to the tractor emissions system. Never disconnect the battery disconnect switch while the battery disconnect light is illuminated. See Battery Disconnect Switch in this Operator's Manual section.

Booster Battery



RXA0185275—UN—01SEP21

The battery jumper terminal posts are located near the tractor steps.

1. Remove the tractor battery terminal post caps.
2. Attach the red (positive) batter cable to the:
 - a. Remote positive starter terminal (A).
 - b. Positive terminal of the booster battery.
3. Attach the black (ground) battery cable to the:
 - a. Negative terminal of the booster battery.
 - b. Remote negative starter terminal (B).
4. When the tractor has started, remove the:
 - a. Negative cable from the tractor.
 - b. Negative cable from the booster battery.
 - c. Positive cable from the battery.
 - d. Positive cable from the tractor.

Battery Charger

IMPORTANT: Set battery charger at nominal 12 volt and no more than 16 volt maximum. Consult the battery charger manufacturers operator's manual.

1. Assure the battery charger is turned off.
2. Remove the tractor terminal post caps and attach the:
 - a. Positive (red) charger lead to the remote positive starter terminal.
 - b. Black (ground) negative charger lead to remote ground post.
3. Switch on the charger and charge battery according to charger manufacturers operator's manual.
4. Switch off the charger.
5. When the tractor has started, remove from the tractor the:
 - a. Negative charger lead.

- b. Positive charger lead.

EC82310,0000F59-19-31AUG21

Cold Weather Operation

Cold Weather Starting—With Starting Aid

CAUTION: Starting fluid is extremely flammable. While using this product, do not smoke and make sure to extinguish all flames. Turn off all pilot lights, stoves, heaters, electrical motors, and other sources of ignition while using this product and/or if vapors are still present.

Tractors equipped with cold weather starting aid from the factory utilize an automatic starting aid injection system. System will automatically inject starting aid as needed based on fuel and engine coolant temperatures. Manually spraying starting fluid into air intake screens is not recommended or required.

If the engine fails to start:


- Check quantity and quality of fuel.
- Verify that starter fluid canister has fluid.
- Check FE14 fuse and KE14 relay.
- If engine fails to start after three attempts, consult your John Deere dealer.

To replace starting aid canister, see Change Starting Fluid Canister in this section of the Operator's Manual.

GH15097,00003E1-19-09MAR20

Change Starting Fluid Canister

CAUTION: Do not use starting fluid near fire, sparks or flames. Read caution information on container. Protect container against damage. Do not carry starting fluid cans inside cab.

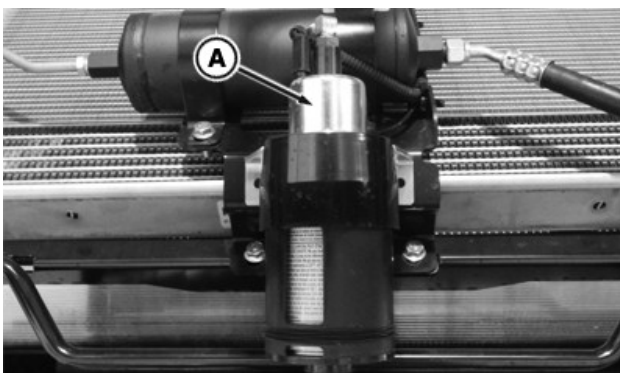

RXA0141914—UN—05JUN14

1. Raise hood to access canister (A).
2. Remove safety cap and plastic spray nozzle from new can.
3. Loosen canister and remove old can.

IMPORTANT: To avoid drawing dust into engine, always keep starting fluid can in position or clean bottom of canister and install bottom side up.

4. Install new can and tighten canister.

TO84419,000039B-19-25JUL17


Engine Coolant Heater Use

CAUTION: To avoid electrical shock or fire, use 3-wire, 14 AWG (14 gauge), heavy-duty electrical cord with 15-amp rating, suitable for outdoor use. Always plug electrical cord into 220 volt (120 volt if equipped) outlet protected by GFI (Ground Fault Interrupter).

Before connecting heater to power source, be sure that element is immersed in coolant. NEVER energize heater in air. Doing so can cause element sheath to burst causing personal injury.

IMPORTANT: Ground fault interrupter on tractor protects tractor only, not electrical wiring supplying power to tractor. Test ground fault interrupter before each use.

NOTE: Extremely cold weather may require 1—2 hours to heat engine.

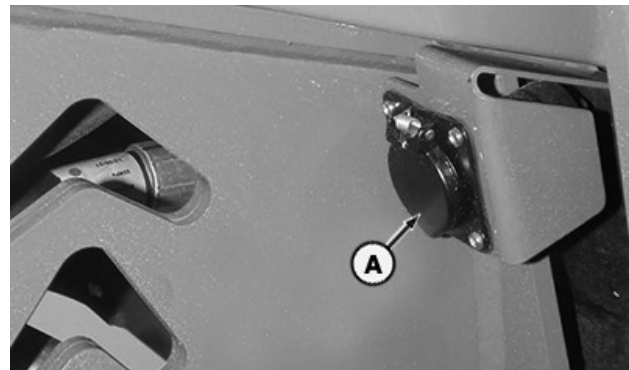

RXA0164452—UN—05SEP18

Front Right-Hand Side of Tractor

Connect engine coolant heater plug (A), located on right-hand side of engine, to a ground fault protected 220 volt (120 volt if equipped) electrical outlet.

BH38674,0000D8D-19-25AUG21


Emissions Equipment

Aftertreatment Indicators Overview




RG22487—UN—21AUG13

Diesel Exhaust Fluid Indicator

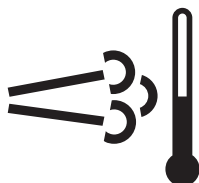


RG22488—UN—21AUG13

Engine Emissions Temperature Indicator

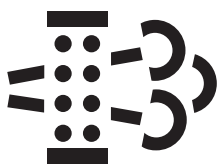


RG22489—UN—21AUG13

Exhaust Filter Indicator

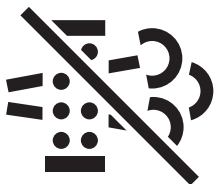

RG22490—UN—21AUG13

Auto Cleaning Disabled Indicator

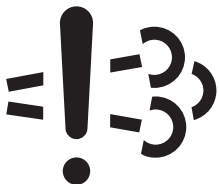

RG22491—UN—21AUG13

Engine Emissions System Malfunction Indicator



RG22492—UN—21AUG13

Warning Indicator



RG22493—UN—21AUG13

Engine Stop Indicator

IMPORTANT: The operator will be informed by the operator warning system when the emission control system does not function correctly and/or an engine malfunction is detected by the engine control unit. Ignoring the operator warning signals will lead to an emission related derate, resulting in an effective disablement of non-road mobile machinery operation.

It is essential to take prompt action to rectify any incorrect operation, use or maintenance of the emissions control system in accordance with the rectification measures indicated by the warnings referenced below.

The Diesel Exhaust Fluid (DEF) indicator illuminates when the DEF is low. Fill DEF tank.

When the DEF indicator is combined with the warning indicator or engine stop indicator engine performance is reduced by the Engine Control Unit (ECU) because the DEF is below a measurable level. Fill DEF tank.

When engine emissions temperature indicator illuminates exhaust gas temperature is high, elevated idle is active, or exhaust filter cleaning is in process. The machine can be operated as normal unless the operator determines the machine is not in a safe location for high exhaust temperatures and disables auto cleaning.

When engine emissions temperature indicator is combined with the warning indicator or engine stop indicator engine performance is reduced by the ECU because the exhaust gas temperature is higher than expected. Follow Diagnostic Trouble Code (DTC) procedure or see your authorized servicing dealer.

When the exhaust filter indicator illuminates the exhaust filter cleaning is in process, aftertreatment system has a fault, or the exhaust filter is in need of cleaning and the operator has disabled auto exhaust filter cleaning. If conditions are safe, the operator should enable the auto exhaust filter clean setting or perform manual service regeneration or follow DTC procedure.

When the exhaust filter indicator is combined with the warning indicator engine performance is reduced by the ECU because there is an aftertreatment system fault or the soot level of the exhaust filter is moderately high. If conditions are safe, the operator should enable the auto exhaust filter clean function. If conditions are not safe, the operator should move the machine to a safe location and engage the auto exhaust filter cleaning mode.

Perform manual service regeneration or follow DTC procedure.

When the exhaust filter indicator is combined with the engine stop indicator engine performance is further reduced by the ECU because there is an aftertreatment system fault or the soot level of the exhaust filter is extremely high. If this combination is present, see your authorized servicing dealer.

The auto cleaning disabled indicator illuminates when the operator has engaged the request to disable the auto exhaust filter cleaning function. This icon remains illuminated until the operator re-engages automatic exhaust filter cleaning from the diagnostic gauge. Disabling auto mode is not recommended for any situation unless it is safety-related or if the fuel tank


lacks the required fuel to complete the cleaning process.

The engine emissions system malfunction indicator illuminates when engine emissions are outside of normal operating range or engine emissions system fault. Follow DTC procedure or see your authorized servicing dealer.

When the engine emissions system malfunction indicator is combined with the warning indicator engine performance is reduced by the ECU because the engine emissions are outside of normal operating range or engine emissions system fault. Follow DTC procedure or see your authorized servicing dealer.

DX,AFTRTREAT,INDCATRS-19-12FEB18

Selective Catalytic Reduction (SCR) System Overview

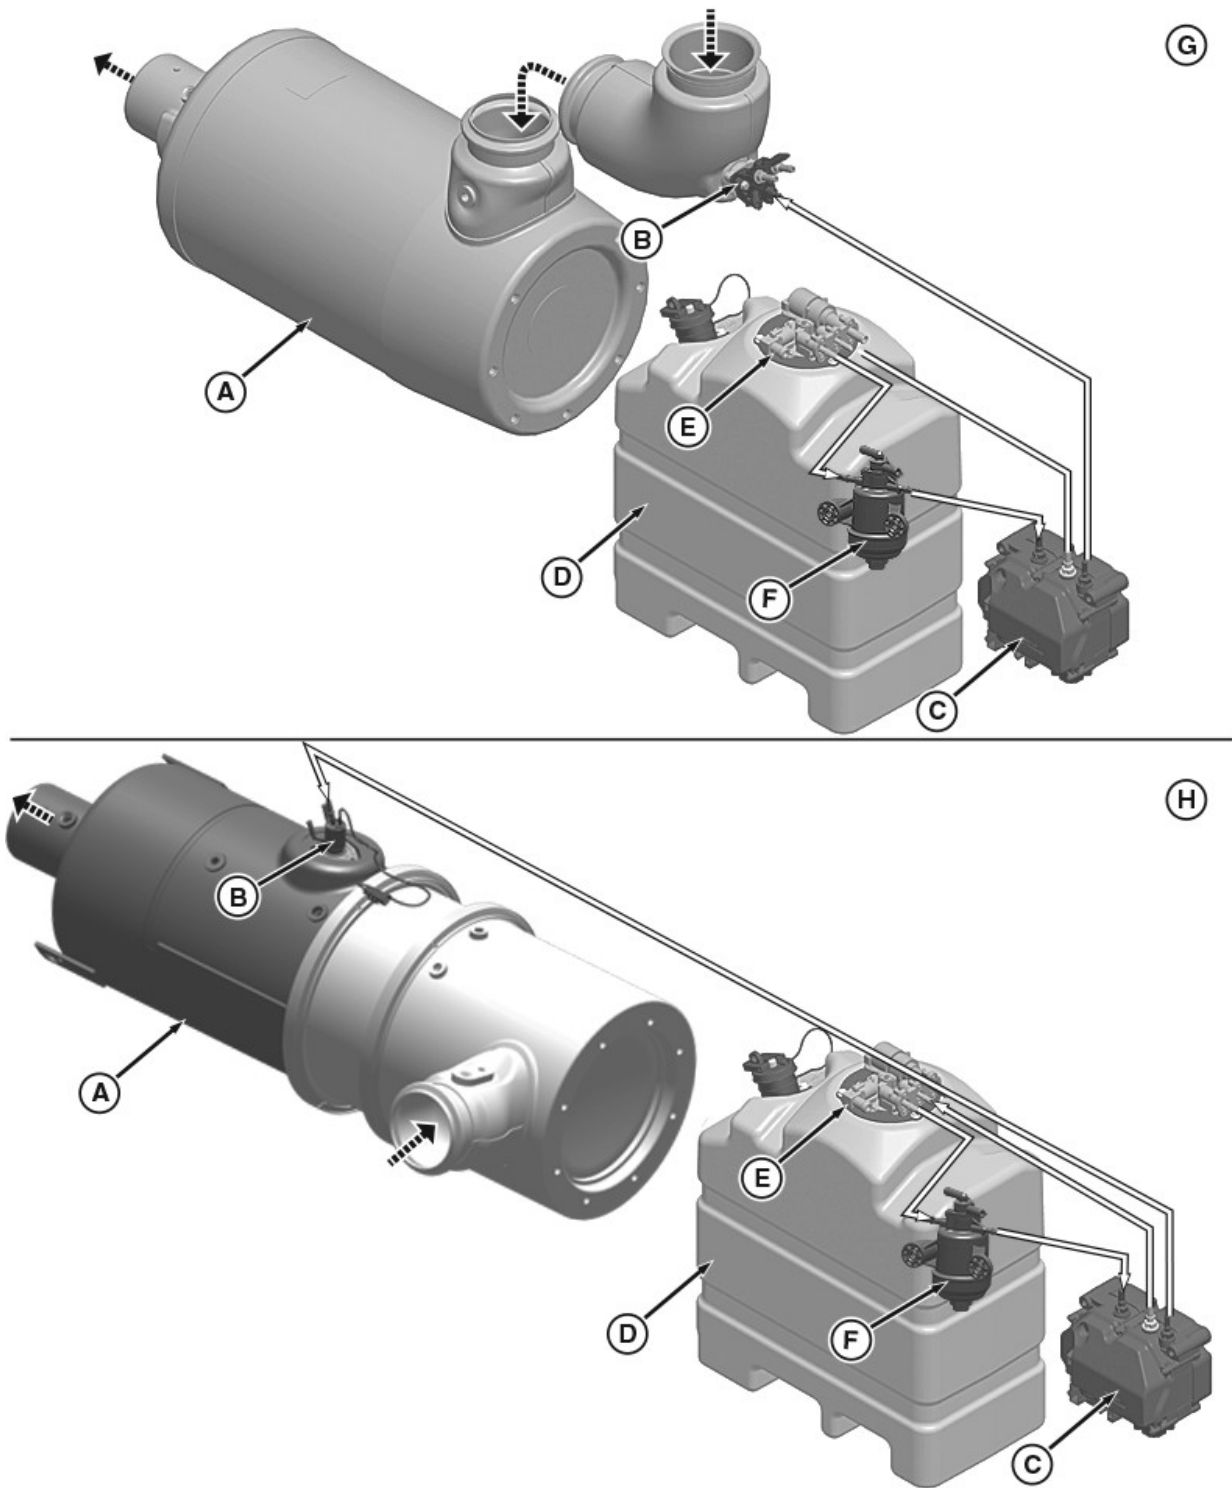

SCR System

RG22427A—UN—07JAN20

A—SCR Catalyst
B—DEF Dosing Injector
C—DEF Dosing Unit
D—DEF Tank

E—DEF Tank Header Assembly
F—Inline DEF Filter (If Equipped)
G—Modular Canning Configuration
H—Inline Canning Configuration

IMPORTANT: Do not remove battery leads for at least 4 minutes after engine stops. The SCR system automatically purges itself of Diesel Exhaust Fluid (DEF) immediately after the engine is stopped. If adequate time is not allowed for lines to be purged, residual DEF can freeze and possibly damage components of the SCR system during cold-weather exposure.

In order to comply with national and local emission requirements, this engine series contains a Selective Catalytic Reduction (SCR) system. The main components of the SCR system include the SCR catalyst (A), DEF dosing injector (B), DEF dosing unit (C), DEF tank (D), and DEF tank header assembly (E). The SCR system is effective at reducing the nitrogen oxides (NOx) emissions. NOx is a major component of smog and acid rain.

During combustion, NOx molecules are formed in the exhaust. DEF is injected into the exhaust stream before the SCR catalyst. Through a chemical reaction in the SCR, NOx is converted into nitrogen and water.

Water vapor is a normal by-product of combustion. During cold-weather operation at low exhaust temperatures, this water vapor can condense and resemble white smoke from the exhaust. This will dissipate as operating temperature increases and the water is further vaporized. This situation is considered normal.

A DEF solution begins to crystallize and freeze at -11 °C (12 °F). With climate temperatures that can range much colder than this, DEF is expected to freeze in the DEF tank. For this reason, the DEF tank contains a heating element that provides rapid thawing of DEF upon start-up. The heating element cycles to maintain fluidity during operation as needed. DEF is not dosed upon initial start-up, therefore it is not necessary to have liquid DEF at cold start-up.

If DEF quality deteriorates and it is no longer within specifications, the engine can derate. DEF should be crystal clear with a light ammonia smell. If DEF appears cloudy, has a colored tint, or has a profound ammonia smell, it is likely not within specification.

DX,SCR,OVERVIEW-19-30MAR20

Diesel Particulate Filter (DPF) Service

CAUTION: Correctly dispose of an exhaust filter that has reached the end of its useful life. The exhaust filter contains DPF ash that:

- Can be classified as a hazardous waste.
- Requires disposal in accordance with all applicable federal, state, and local laws or regulations governing hazardous waste disposal.

Used exhaust filters, including the DPF, can be exchanged at any John Deere dealer or qualified service provider.

- Always allow a qualified service provider to remove ash from the DPF.
- See your John Deere dealer or other qualified service provider for assistance.

Failure to follow approved DPF ash removal methods can:

- Violate U.S. federal, state, and local hazardous waste law.
- Damage the DPF, resulting in potential denial of the emissions warranty.

IMPORTANT: Avoid damage to the aftertreatment system. Never:

- Use incorrect or unapproved aftertreatment components.
- Interchange aftertreatment components between Interim Tier 4/Stage III B and other vehicles equipped with other aftertreatment systems.

The exhaust filter includes a DPF. The DPF is designed to:

- Retain residual ash, which is a noncombustible result of additives used in crankcase lubrication oils and the fuel.
- Provide many hours of maintenance-free operation. However, the DPF requires professional service to remove the accumulated ash at some point. The exact number of hours of operation before professional service is required depends on:
 - The engine power category, duty cycle, operating conditions, fuel quality, and ash content of the engine oil.
 - Adhering to the recommended oil and fuel specifications to maximize the hours of operation.

The engine owner is responsible for performing the required maintenance described in this Operator's Manual. During normal equipment operation:

- DPF maintenance requirements depend on the rate at which ash accumulates in the DPF.
- As ash levels rise in the DPF, the capacity for soot storage is reduced and the backpressure of the exhaust system rises more frequently.
- The dash lamp indicator or diagnostic gauge indicates when the DPF needs servicing.

EC82310,0000FOA-19-17JUN20

Front Console

Front Console

NOTE: See transmission section for left-hand reverser.




RXA0177210—UN—14APR20

Front Console Example

KD34109,00005E2-19-13APR20


Adjust Steering Wheel and Column

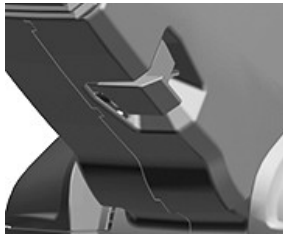

RXA0167453—UN—12APR19

Tilt/Telescope Stop Lever

Tilt/Telescope Stop Lever — pull lever away from steering column to unlock adjustments. While unlocked, extend/retract and tilt of steering wheel can be adjusted. Push lever back toward steering column to lock into desired position.

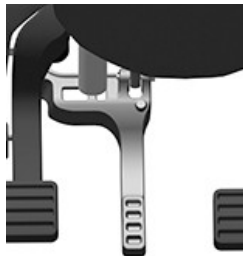

RXA0167454—UN—12APR19

Memory Tilt Pedal

Memory Tilt Pedal — push pedal to tilt steering column up away from operator or down closer to operator. Release pedal to lock into position.

KD34109,00004CB-19-29MAY19

Operate Horn



RXA0167455—UN—12APR19

Horn Button

Horn — push button at end of left-hand lever on steering column to sound horn.

KD34109,00004CC-19-29MAY19

Operate Wipers and Washers

Wiper and washer controls are on right-hand lever on steering column.

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0167456—UN—12APR19

Front Wiper Speed

Front Wiper Speed — turn knob at the end of wiper/washer lever. The higher the setting, the faster the wiper operates. Bottom setting is off (circle shown). Arrow indicates current setting.



RXA0167457—UN—12APR19

Front Washer Button

Front Wiper Washer — push and hold button at end of wiper/washer lever. Let go of button to stop washer.



RXA0167458—UN—12APR19

Select Right-Hand/Rear Wiper Lever

Select Right-Hand/Rear Wiper — to select active wiper/wipers, move lever to one of the following positions:

- Left for right-hand wiper
- Center for right-hand and rear wipers
- Right for rear wiper



RXA0167459—UN—12APR19
Right-Hand/Rear Wiper Speed/Washer Lever

Right-Hand/Rear Wiper Speed/Washer — move lever up from off position (circle shown) to operate active wiper/wipers. The higher the setting, the faster the wiper operates. Push and hold lever down to operate washer. Release lever to stop washer.


KD34109,00004CD-19-26AUG19

Key Switch



RXA0168011—UN—17MAY19
Key Switch

Key switch is on right-hand side of steering column and has three positions:

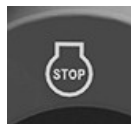

STOP

RXA0168012—UN—17MAY19

STOP — turns off all engine and accessory functions.



Run

RXA0168013—UN—17MAY19

Run — allows all accessories functions and engine to run once it has been started.



Start

RXA0168014—UN—17MAY19

Start — starts engine and returns to run position.

KD34109,00004CE-19-30MAY19

Operate Turn Signals



Turn Signal Lever

RXA0168015—UN—17MAY19

Turn signal control is left-hand lever on steering column.

Lane Change Turn Signal — move lever one position (up for right-hand signal, down for left-hand signal) to activate. Signal automatically turns off after three flashes.

Self-Canceling Turn Signal — move lever two positions (up for right-hand signal, down for left-hand signal) to activate. Signal turns off upon turn or by moving lever one position in the same direction.

KD34109,00004CF-19-29MAY19

Pedals

NOTE: Some items are only available if machine is equipped with the associated option.



Brake Pedal

RXA0177205—UN—14APR20

Brake Pedal — use to slow and stop machine. For more information on brakes, see Brakes section of this Operator's Manual.



Clutch Pedal

RXA0177207—UN—14APR20

Clutch Pedal — use to disengage clutch.



Speed Control Pedal

RXA0177203—UN—13APR20

Speed Control Pedal:

NOTE: The tractor can be equipped with one of the speed control pedals or no pedal.

- **Accelerator Function (Orange)** — use to control engine or ground speed depending on transmission mode.
- **Decelerator Function (Gray)** — use to lower the engine rpm based on the decelerator setting. For setting adjustments, see Engine settings in Engine Operation section of this Operator's Manual.

KD34109,00005E0-19-11AUG21

Operate Lights



Lights Lever

RXA0168015—UN—17MAY19

High beams and lighting presets are controlled using left-hand lever on steering column. For additional lighting controls, including field and road lights buttons, see CommandARM™ Climate, Radio, and Lighting Controls in CommandARM™ section of this Operator's Manual.

- **Low/High Beam Position** — with road lights enabled, push lever toward window and release to

toggle between low and high beam modes. Indicator on corner post display lights when in high beam mode.

- **Momentary High Beam (Flash-to-Pass)** — with road lights enabled, pull lever away from window and hold to momentarily activate high beam mode. Release to return to low beam mode. Setting also momentarily activates high beam lights in park or off modes.
- **Field Lights Presets** — with field lights enabled, pull lever away from window or push lever toward window to change active preset.



Convenience Lights Button

RXA0168021—UN—17MAY19

Convenience Lights (If Equipped) — press convenience lights button to turn on, press again to turn off. For convenience light locations, see Light Identification in Lights section of this Operator's Manual.

Button location:

- 7R, 8RW, and 8RX: Left-hand side of machine, between steps.
- 8RT and 9RT: Left-hand side of machine, next to battery disconnect.
- 9RW and 9RX: Left-hand side of machine, next to steps.



Trailing Lights Switch

RXA0173051—UN—09DEC19

Trailing Lights (If Equipped) — press top of switch to turn on or bottom of switch to turn off trailing lights. Switch is located near the radio. For trailing lights location, see Trailing Lights in Lights section of this Operator's manual.

KD34109,00004D1-19-14APR20

Differential Lock Switch



RXA0177202—UN—13APR20

Differential Lock Floor Switch

Differential Lock Floor Switch — to enable manual differential lock mode:

- 9RW Tractors: Press and release the floor switch. To disable, press the brake or the differential lock button on the CommandARM™. For button location, see CommandARM™ Controls—Left Side in CommandARM™ Controls section of this Operator's Manual.
- 9RX Tractors: Press and hold the floor switch. To disable, release the floor switch.

For more information on differential lock, see Differential Lock in Drivetrain section of this Operator's Manual.

KD34109,00005E1-19-05NOV20

Corner Post Display

Corner Post Display



RXA0168459—UN—29MAY19
Corner Post Display

NOTE: Some items only display if machine is equipped with the associated option.



RXA0167737—UN—06MAY19
Left-Hand Turn Indicator

Left-Hand Turn Indicator — flashes when left turn signal or hazard lights are on.



RXA0167738—UN—06MAY19
Right-Hand Turn Indicator

Right-Hand Turn Indicator — flashes when right turn signal or hazard lights are on.



RXA0167739—UN—06MAY19
High Beam Indicator

High Beam Indicator — illuminates when high beam lights are on.



RXA0167740—UN—06MAY19
Trailer Turn Indicator

Trailer Turn Indicator — trailer symbol and 1 flash when turn signal or hazard lights are on and one trailer is attached. Symbol, 1, and 2 flash when turn signal or hazard lights are on and two trailers are attached.



RXA0167741—UN—06MAY19
Engine Preheat Indicator

NOTE: 6.8L engines only.

Engine Preheat Indicator — illuminates when key is in run position. Indicator turns off when engine can be started.



RXA0167742—UN—06MAY19
Tachometer

Tachometer — displays engine speed in revolutions per minute (rpm). If (- - -) is displayed, no speed signal is being received.



RXA0167743—UN—06MAY19
IPM Indicator

Intelligent Power Management (IPM) Indicator — illuminates when IPM is active.



RXA0167744—UN—06MAY19
Max Engine Speed Indicator

Maximum Engine Speed Indicator — illuminates when max engine speed one or two is active.



RXA0167745—UN—06MAY19
Manual Engine Speed Indicator

Manual Engine Speed Indicator — illuminates when engine speed is in manual mode on machines equipped with CommandPRO™ joystick.



RXA0167746—UN—06MAY19
Max Engine Speed/Engine Set Speed Number

Engine Set Speed Number — illuminates 1 when engine set speed one is active. Illuminates 2 when engine set speed two is active.



RXA0167747—UN—06MAY19

Exhaust Filter Cleaning Indicator

Exhaust Filter Cleaning Indicator — illuminates when exhaust filter cleaning is active.



RXA0167748—UN—06MAY19

Ground Speed

Ground Speed — displays travel speed in either miles per hour (mph) or kilometers per hour (km/h), depending on operator-selected units (U.S. or metric). If (- - -) is displayed, no speed signal is being received. When engine preheat indicator (6.8L engines) is activated, engine start time is displayed.



RXA0167749—UN—06MAY19

Ground Set Speed Direction and Number

Ground Set Speed Direction and Number — displays active set speed direction (forward—F or reverse—R) and number (1 or 2).



RXA0167750—UN—06MAY19

Ground Set Speed Indicator

Ground Set Speed Indicator — illuminates when ground set speed one or two is active.



RXA0167751—UN—06MAY19

Ground Set Speed Value

Ground Set Speed Value — displays speed value (in orange) for active set speed. Displays max set speed if CommandPRO™ joystick is equipped and set speed is not active. Displays (- - -) if no max set speed or set speed signal is being received.



RXA0167752—UN—06MAY19

CommandPRO™ Set Speed Indicator

CommandPRO™ Set Speed Indicator — illuminates when CommandPRO™ set speed one or two is active.



RXA0167753—UN—06MAY19

CommandPRO™ Max Set Speed Indicator

CommandPRO™ Maximum Set Speed Indicator — illuminates when CommandPRO™ max set speed is active.



RXA0167754—UN—06MAY19

Direction of Travel Indicator

Direction of Travel Indicator — tractor symbol and top arrow illuminate when machine is in forward. Symbol and bottom arrow illuminate when in reverse.



RXA0167755—UN—06MAY19

Current Gear

Current Gear — displays gear machine is in.



RXA0167756—UN—06MAY19

Park/Neutral

Park/Neutral — displays P if machine is in park or N if machine is in neutral.



RXA0167757—UN—06MAY19

AutoTrac™ Indicator

AutoTrac™ Indicator — illuminates when AutoTrac™ is active.



RXA0167758—UN—06MAY19

Automatic Shifting Indicator

Automatic Shifting Indicator — illuminates when auto shift is on.



RXA0167759—UN—06MAY19
Inching Mode Indicator

Inching Mode Indicator — illuminates when set speed is reduced below 2 km/h (1 mph) or higher set speed is limited to a factor of 2.5 to avoid big speed increases.



RXA0167760—UN—06MAY19
Speed Control Pedal Mode Indicator

Speed Control Pedal Mode Indicator — illuminates when Pedal mode is active.



RXA0167761—UN—30MAY19
iTEC™ Indicator

iTEC™ Indicator — illuminates when iTEC™ is enabled.



RXA0167762—UN—06MAY19
Tractor Automation Indicator

Tractor Automation Indicator — illuminates when some tractor automation is active.



RXA0167763—UN—06MAY19
Joystick Indicator

Joystick Indicator — illuminates when joystick is active.



RXA0167764—UN—06MAY19
Differential Lock Indicator

Differential Lock Indicator — illuminates when differential lock is active.



RXA0167765—UN—06MAY19
MFWD Indicator

Mechanical Front-Wheel Drive (MFWD) Indicator — illuminates when MFWD is active.



RXA0167766—UN—06MAY19
Front PTO Indicator

Front PTO Indicator — tractor and front PTO symbols illuminate when front PTO is active. 1000 illuminates when 1000 mode is active.



RXA0167767—UN—06MAY19
Rear PTO Indicator

Rear PTO Indicator — tractor and rear PTO symbols illuminate when rear PTO is active. PTO gear information illuminates for corresponding active PTO gear.



RXA0167768—UN—06MAY19
Trailer Air Brake Pressure Gauge

Trailer Air Brake Pressure Gauge — displays percent of air pressure for trailer air brake. Segments in red zone indicate brake pressures from no pressure (0%) to low pressure (66%). Segments in green zone indicate brake pressures from just above low pressure (66.4%) to full pressure (100%). When air pressure is low, segments in red zone flash.



RXA0167769—UN—06MAY19
Coolant Temperature Gauge

Coolant Temperature Gauge — displays engine coolant temperature between 40—120°C (104—248°F). All segments are off when coolant temperature is below 40°C (104°F). All segments are lit when temperature is 120°C (248°F) and above. When temperature reaches red zone, segments in red zone and icon flash.



RXA0167770—UN—06MAY19

Fuel Level Gauge

Fuel Level Gauge — displays fuel level in tank. Each lighted segment represents 5% of fuel tank total capacity. When fuel tank is full, all segments are lit. When fuel level is low, segments in red zone flash. When fuel level reaches red zone, an alarm signal sounds once.



RXA0167771—UN—06MAY19

DEF Level Gauge

NOTE: Diesel exhaust fluid is only used on Final Tier 4/ Stage V engine equipped tractors. DEF gauge will not display on machines equipped with other engines.

Diesel Exhaust Fluid (DEF) Level Gauge — displays diesel exhaust fluid level. Each lighted segment represents 5% of DEF tank total capacity. When DEF tank is full, all segments are lit. When DEF level is low, segments in red zone flash. When DEF level reaches red zone, an alarm signal sounds once. DEF tank should be filled whenever fuel tank is filled.

Alert Indicators:

Alert indicators are accompanied by an informative message, diagnostic trouble code, and/or fault description shown on CommandCenter™. For more information on CommandCenter™ alerts, see STOP, Service, and Information Alerts in Troubleshooting—Diagnostic Trouble Codes (DTC) section of this Operator's Manual.



RXA0167772—UN—06MAY19

STOP Alert Indicator

STOP Alert Indicator — flashes and an alarm pattern sounds continuously, indicating a serious malfunction requiring immediate attention.



RXA0167773—UN—06MAY19

Service Alert Indicator

Service Alert Indicator — flashes and an alarm pattern sounds five times, indicating a performance or operational problem has been detected and must be resolved as soon as possible.



RXA0167774—UN—06MAY19

Information Alert Indicator

Information Alert Indicator — illuminates continuously, and when GSix is on the bus, an alarm pattern sounds for 2 seconds, indicating a possible fault condition.

Warning Indicators:

When a warning occurs:

- Park tractor on level ground and prevent tractor from rolling away.
- Diagnostic trouble code (DTC) will display on CommandCenter™. Follow instructions to fix the fault.
- If fault cannot be fixed, see your John Deere dealer.



RXA0167775—UN—06MAY19

Steering Warning Indicator

Steering Warning Indicator — illuminates when a serious fault has been detected in the steering system.



RXA0167776—UN—06MAY19

Yellow Brake Warning Indicator

Yellow Brake Warning Indicator — illuminates when an electrical fault has been detected that affects the ability to detect additional faults.



RXA0167777—UN—06MAY19

Red Brake Warning Indicator

Red Brake Warning Indicator — indicates the following:

NOTE: Brake warning indicator (red) illuminates while trailer air brakes reach operating pressure. Indicator turns off once operating pressure is reached.

- Illuminates when a serious fault has been detected that affects brake system performance. Stop tractor immediately.
- Flashes when park lock cannot engage.

TS36762.0000189-19-17AUG21

CommandARM™ Controls

CommandARM™



RXA0168022—UN—17MAY19
CommandARM™ Example

KD34109,00004E7-19-20JUN19



RXA0168025—UN—17MAY19
Hitch Depth Adjust Dial

NOTE: Dial will not raise hitch above upper limit.

Hitch Depth Adjust Dial — use to raise or lower hitch.



Set Button

RXA0168026—UN—17MAY19

Set Button — press to store a set point.



Lock Button

RXA0168027—UN—17MAY19

Lock Button — press to lock hitch. Press again to unlock.



Resume Button

RXA0168028—UN—17MAY19

Resume Button — press to move hitch to set point position.



Upper Limit Hitch Dial

RXA0168029—UN—17MAY19

Upper Limit Hitch Dial — use to adjust Upper Limit setting. A drop-down will display on CommandCenter™ to view adjustment.

CommandARM™ Hitch Controls [Ag]

NOTE: Some items are only available if machine is equipped with the associated option.

Front Hitch Items:



Front Hitch Lever

RXA0168023—UN—17MAY19

NOTE: Lever will not raise hitch above upper limit.

Front Hitch Lever — allows adjustment of front hitch position. See Hitch Control Lever in Rear Hitch section of this Operator's Manual.

Rear Hitch Items:



Rear Hitch Lever

RXA0168024—UN—17MAY19

NOTE: Lever will not raise hitch above upper limit.

Rear Hitch Lever — allows adjustment of rear hitch position. See Hitch Control Lever in Rear Hitch section of this Operator's Manual.



RXA0168030—UN—17MAY19

Drop Rate Hitch Dial

Drop Rate Hitch Dial — use to adjust Drop Rate setting. A drop-down will display on CommandCenter™ to view adjustment.



RXA0168031—UN—17MAY19

Load Depth Hitch Dial

Load Depth Hitch Dial — use to adjust Load Depth setting. A drop-down will display on CommandCenter™ to view adjustment.

KD34109,00005E4-19-15APR20

CommandARM™ SCV Control Levers

NOTE: SCV control levers can be reconfigured to control tractor functions and implements. See Controls Setup in CommandCenter™ section of this Operator's Manual.



RXA0168032—UN—17MAY19

SCV I Lever

SCV Control Levers allow you to adjust SCV flow. Number of levers varies by machine. See SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual.

KD34109,00004E1-19-20JAN21

CommandARM™ PTO Control Levers [Ag]

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0168033—UN—17MAY19

Front PTO Lever

Front PTO Lever — engage/disengage front PTO. See Operate PTOs in PTO—General Information section of this Operator's Manual.



RXA0168034—UN—17MAY19

Rear PTO Lever

Rear PTO Lever — engage/disengage rear PTO. See Operate PTOs in PTO—General Information section of this Operator's Manual.

KD34109,00005E5-19-19APR21

CommandARM™ Climate, Radio, and Lighting Controls



RXA0168035—UN—17MAY19

Volume

Volume — press (+) to increase or (-) to decrease volume.



RXA0168036—UN—17MAY19

Previous/Next

Previous/Next — press top arrow for next track/station or bottom arrow for previous track/station.



RXA0168037—UN—28JUN19

Mute

Mute — press to silence speaker volume, press again to unmute. Does not mute microphone during an active call. Microphone can only be muted from phone or radio faceplate.



PTT/Accept Call

RXA0178830—UN—22JUL20

NOTE: If equipped with non-touch screen radio, button only accepts incoming calls.

Push-To-Talk (PTT)/Accept Call — allows operator to perform various functions depending on radio state and length of button press. See Push-To-Talk (PTT) in this Operator's Manual section.



End Call

RXA0178829—UN—22JUL20

End Call — press to end call in progress or active voice recognition (VR) session.



Air Flow Mode

RXA0167638—UN—26APR19

Air Flow Mode — press to select mode of air flow. Each press moves to next mode.



Temperature

RXA0167640—UN—26APR19

Temperature — press (+) to increase or (-) to decrease temperature.



Fan Speed

RXA0167644—UN—26APR19

Fan Speed — press (+) to increase or (-) to decrease fan speed.



Hazard Lights

RXA0168040—UN—17MAY19

Hazard Lights — press to turn on hazard lights, press again to turn off. Indicator light is on when active.



Parking Lights

RXA0168041—UN—17MAY19

Parking Lights — press to turn on parking lights, press again to turn off. Indicator light is on when active.



Road Lights

RXA0168042—UN—17MAY19

Road Lights — press to turn road lights on. Press again to turn off. Indicator light is on when active. If equipped, hood/belt line lights page automatically displays when selected. Page disappears after 10 seconds of inaction. See Lights Settings in Lights section of this Operator's Manual.



Field Lights

RXA0168043—UN—17MAY19

Field Lights — press to turn on field lights, press again to turn off. Indicator light is on when active. Active preset page will automatically display. Page disappears after 10 seconds of inaction. See Lights Settings in Lights section of this Operator's Manual.



Beacon Lights

RXA0168044—UN—17MAY19

Beacon Lights — press to turn on beacon lights (if equipped). Press again to turn off. Indicator light is on when active. Beacon lights automatically turn on when road lights are turned on.

KD34109,00004E3-19-21JUL20

Push-To-Talk (PTT)

PTT button allows operator to perform various functions depending on radio state and length of button press.

Current State of Radio	Apple CarPlay® Not Running	
	Short Press (less than 2 seconds)	Long Press (4 seconds or more)
Idle	Start Native ^a VR Session	
Idle (Phone Connected Through Bluetooth®)	Start Native ^a VR Session	Start Device VR (Siri® or other phone voice assistant)
Incoming Phone Call	Accept Phone Call	—
Active Phone Call	Start Native ^a VR Session	—
Listening for Command	—	Abort Native ^a VR Session
Processing Command	—	
Playing Voice Prompt	Interrupt Voice Prompt	

^aVR is running through radio.

Current State of Radio	Apple CarPlay® Running
	Short or Long Press
Idle	Talk to Siri®
Incoming Phone Call	Accept Phone Call (When Released)
Active Phone Call	—
Active VR Session	Ends VR Session

KD34109,00004FB-19-06JAN20

CommandARM™ Controls—Left Side

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0171324—UN—10OCT19
Speed/Shift Control Example

Speed/Shift Control — use to operate transmission. For more information on the control equipped on your machine, see your Transmission section of this Operator's Manual.



RXA0168423—UN—30MAY19
AutoTrac™ Resume Button (AUTO)

AutoTrac™ Resume Button (AUTO) — press to enable Tractor-Implement Automation (TIA) after preparing implement as indicated in implement operator's manual.



RXA0168424—UN—30MAY19
iTEC™ Buttons

1—4 Buttons — press to enable assigned function. For assignment information, see Controls Setup in CommandCenter™ section of this Operator's Manual.



RXA0168425—UN—30MAY19
MFWD Button

MFWD Button — press to enable manual mechanical front-wheel drive (MFWD) mode. See Mechanical Front-Wheel Drive (MFWD) in Drivetrain section of this Operator's Manual.



RXA0168426—UN—30MAY19
AUTO MFWD Button

AUTO MFWD Button — press to enable AUTO mechanical front-wheel drive (MFWD) mode. See Mechanical Front-Wheel Drive (MFWD) in Drivetrain section of this Operator's Manual.



RXA0168427—UN—30MAY19
Differential Lock Button

Differential Lock Button — to enable manual differential lock mode:

- 7R, 8RW, 8RX, and 9RW Tractors: Press and release the button. To disable, press the button again or press the brake pedal/pedals.
- 9RX Tractors: Press and hold the button. To disable, release the button.

For more information on differential lock, see Differential Lock in Drivetrain section of this Operator's Manual.



RXA0168428—UN—30MAY19
AUTO Differential Lock Button

AUTO Differential Lock Button — press to enable AUTO differential lock mode. See Differential Lock in Drivetrain section of this Operator's Manual.



RXA0168429—UN—30MAY19
SCV Lock Button

SCV Lock Button — press to lock out SCV levers. Indicator on button illuminates when levers are locked. Press again to unlock.



RXA0168430—UN—30MAY19
ISB Button

CAUTION: Avoid injury. Verify button function in a safe and open area that is clear of bystanders.

ISOBUS (ISB) Button — press to signal ISOBUS to stop operations started at implement. Verify that implement is compatible with ISB button in implement Operator's Manual.



Hand Throttle

RXA0168431—UN—30MAY19

NOTE: Hand throttle commands engine speed only, not wheel speed.

Hand Throttle — use to increase or decrease engine speed.



Maximum Engine Speed Button

RXA0168432—UN—30MAY19

Maximum Engine Speed Button — press to enable maximum engine speed setting. Press again to disable. Indicator on button illuminates when enabled. See Engine Settings—Max Engine Speed in Engine Operation section of this Operator's Manual.



ECO Button

RXA0168433—UN—30MAY19

ECO Button — press to enable ECO Performance. ECO is only available in Custom Transmission mode. Press again to disable. Indicator on button illuminates when enabled. For ECO setting (if equipped) information, see your Transmission section of this Operator's Manual.



Speed Control Pedal Lock Button

RXA0168434—UN—30MAY19

NOTE: The speed control pedal will not lock if the button is held for more than 1 second. If the speed control pedal decelerator function is equipped, the pedal lock/unlock button does not function.

Speed Control Pedal Lock/Unlock Button — press to lock speed control pedal to maintain commanded speed. Indicator on button illuminates when locked. Commanded speed will discontinue if button is pressed again, pedal is depressed after locking, brake is depressed, or machine is placed in PARK.



RXA0168435—UN—30MAY19
Engine Set Speed 1 Button

NOTE: Machines equipped with CommandPRO™ joystick only.

Engine Set Speed 1 Button — press to enable engine set speed 1 setting. Press again to disable. Indicator on button illuminates when enabled. See Engine Settings —Engine Set Speed in Engine Operation section of this Operator's Manual.



RXA0168436—UN—30MAY19
Engine Set Speed 2 Button

NOTE: Machines equipped with CommandPRO™ joystick only.

Engine Set Speed 2 Button — press to enable engine set speed 2 setting. Press again to disable. Indicator on button illuminates when enabled. See Engine Settings —Engine Set Speed in Engine Operation section of this Operator's Manual.



RXA0168437—UN—30MAY19
Engine Manual Mode Button

NOTE: Machines equipped with CommandPRO™ joystick only.

Engine Manual Mode Button — press to enable manual engine mode. Engine speed is determined by hand throttle. Press again to disable. Indicator on button illuminates when enabled.

KD34109,00004E4-19-27MAY21

CommandARM™ Secondary Brake Lever



RXA0169485—UN—02JUL19
Secondary Brake Lever

NOTE: Only applies brakes to rear axle.

Pull lever (if equipped) back and hold to engage secondary brake. To release secondary brake, release lever.

KD34109,00004FE-19-01JUL19

CommandARM™ Navigation Bar



RXA0171956—UN—12NOV19
Navigation Bar Example



RXA0168445—UN—30MAY19
Adjustment Dial

Adjustment Dial — turn clockwise to increase or counterclockwise to decrease selected input field. Button in center of adjustment wheel is used to close CommandCenter™ pages.



RXA0168446—UN—30MAY19
Run Page Scroll

Run Page Scroll — press to scroll through custom run pages.



RXA0168447—UN—30MAY19
SCV

SCV — press to open SCV application.



Rear Hitch

RXA0168448—UN—30MAY19

NOTE: Ag machines only.

Rear Hitch — press to open Rear Hitch application.



Engine

RXA0168449—UN—30MAY19

Engine — press to open Engine application.



Transmission

RXA0168450—UN—30MAY19

Transmission — press to open Transmission application.



PTO

RXA0168451—UN—30MAY19

NOTE: Ag machines only.

PTO — press to open PTO application.



iTEC™

RXA0168452—UN—30MAY19

iTEC™ — press to open iTEC™ application.



Lights

RXA0168455—UN—05JUN19

Lights — press to open Lights application.



HVAC

RXA0168456—UN—30MAY19

HVAC — press to open HVAC application.



Controls Setup

RXA0168457—UN—30MAY19

Controls Setup — press to open Controls Setup application.



AutoLoad™

RXA0168458—UN—30MAY19

NOTE: Scraper machines only.

AutoLoad™ — press to open AutoLoad™ application.

KD34109,00004E6-19-12NOV19

Adjust CommandARM™ Position



CommandARM™ Adjustment

RXA0167304—UN—02APR19


NOTE: Both adjustment knobs must be loosened to adjust height.



Height Only Adjustment

RXA0167305—UN—02APR19

Adjustment Knob (Height Only) — turn adjustment knob counterclockwise to loosen. Move CommandARM™ to desired position and tighten by turning knob clockwise.

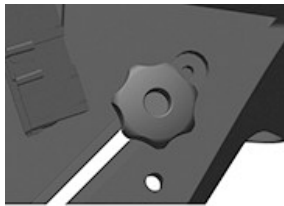

RXA0167306—UN—02APR19

Height and Tilt Adjustment

Adjustment Knob (Height and Tilt) — turn adjustment knob counterclockwise to loosen. Move CommandARM™ to desired position and tighten by turning knob clockwise. If adjusting tilt but not height, only this knob is needed.

TS36762.000023C-19-20JAN20

CommandCenter™

Generation 4 Display

For additional information on Generation 4 Display hardware and software functionality, reference the Generation 4 Display Operator's Manual and the Help Center application on the display. To obtain a copy of the Operator's Manual, contact your dealer, use the Help Center application on the display, or visit techpubs.deere.com.

DX,PC,DISPLAY,REFERENCE-19-21MAY20

Rear Hitch or PTO Availability

[Ag] PTO or rear hitch options are available only on an agricultural tractor.

[Scraper] For scraper tractor, ignore CommandCenter™ content that pertains to these options.

RX32825,0000004-19-09AUG18

Machine Settings Overview

NOTE: Some items only display if machine is equipped with the associated option.



RXA0167076—UN—20MAR19

Access machine-specific applications from the Machine Settings tab. Available applications vary depending on tractor configuration.



AutoLoad™

RXA0180073—UN—09OCT20

AutoLoad™

- Use AutoLoad™ application to adjust AutoLoad™ settings.
- For more information, see Scraper Information section of this Operator's Manual.



Engine

RXA0175176—UN—17FEB20

Engine

- Use Engine application to adjust engine and exhaust filter system settings.
- For more information, see Engine Settings in Engine Operation section of this Operator's Manual.



ExactRate™ Tractor Tank

RXA0178628—UN—08JUL20

ExactRate™ Tractor Tank

- Use ExactRate™ Tractor Tank application to view ExactRate™ fill information.
- For more information, see ExactRate™ Tractor Tank Settings in ExactRate™ Tractor Tanks section of this Operator's Manual.



Front Hitch

RXA0169132—UN—25JUN19

Front Hitch

- Use Front Hitch application to adjust front hitch settings.
- For more information, see Front Hitch Settings in Front Hitch section of this Operator's Manual.



HVAC

RXA0167626—UN—26APR19

HVAC

- Use HVAC application to adjust heating, ventilation, and air conditioning settings.
- For more information, see HVAC Settings in HVAC section of this Operator's Manual.



John Deere CTIS

RXA0177902—UN—14MAY20

John Deere CTIS

- Use John Deere CTIS application to adjust John Deere CTIS settings.
- For more information, see John Deere CTIS Settings

in John Deere CTIS section of this Operator's Manual.



Lights

RXA0168488—UN—05JUN19

Lights

- Use Lights application to adjust lights settings.
- For more information, see Lights settings in Lights section of this Operator's Manual.



Maintenance and Calibrations

RXA0134981—UN—07AUG13

Maintenance and Calibrations

- Use Maintenance and Calibrations application to add/edit service intervals and perform ground radar and slip calibrations.



PTO

RXA0167685—UN—30APR19

PTO

- Use PTO application to adjust PTO settings.
- For more information, see PTO Settings in PTO—General Information section of this Operator's Manual.



Rear Hitch

RXA0169204—UN—26JUN19

Rear Hitch

- Use Rear Hitch application to adjust rear hitch settings.
- For more information, see Rear Hitch Settings in Rear Hitch section of this Operator's Manual.



SCV

RXA0173516—UN—03JAN20

SCV

- Use SCV application to adjust SCV settings.
- For more information, see SCV Settings in Selective Control Valves section of this Operator's Manual.



Steering

RXA0171926—UN—06NOV19

Steering

- Use Steering application to adjust steering settings.
- For more information, see Steering Settings in this Operator's Manual section.



Suspension

RXA0174230—UN—28JAN20

Suspension

- Use Suspension application to adjust suspension settings.
- For more information, see Suspension Settings in Drive Train section of this Operator's Manual.



Trailer Brake

RXA0177626—UN—28APR20

Trailer Brake

- Use Trailer Brake application to adjust brake and pre-brake settings and/or to test trailer brakes.
- For more information, see Trailer Brake System Settings in Brakes section of this Operator's Manual.



Transmission

RXA0167077—UN—20MAR19

Transmission


- Use Transmission application to adjust transmission settings.
- For more information, see appropriate transmission section of this Operator's Manual.

KD34109,00005E3-19-19APR21

Navigate Generation 4 CommandCenter™

NOTE: Images are for reference and may differ by tractor configuration or operator settings. As the operator pages through the CommandCenter™, more in-depth information is presented, allowing the operator to fine-tune tractor functions.

Navigating CommandCenter™ Pages:

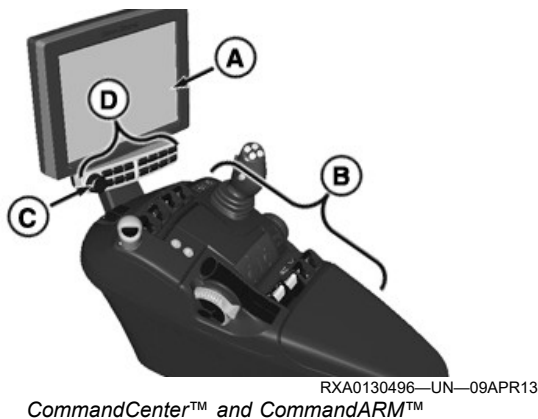

RXA0130496—UN—09APR13


CommandCenter™ and CommandARM™

Use touchscreen CommandCenter™ buttons or icons to make selections. To adjust input box values, enter the value on the keypad or select the input box and scroll the adjustment dial (C) to the desired value. A yellow highlight box appears around the selected input box and indicates that the adjustment dial is active.

A—CommandCenter™: A touchscreen display attached to the CommandARM™ (B) that allows the operator to access pages required to operate the tractor. The operator can select (touch) options on the screen to move through pages and access tractor functions.

B—CommandARM™: Made up of buttons, switches, and a joystick (if equipped) that allow the operator to manage tractor or implement functions.

C—Adjustment Dial/Close Window Button: Rotate the adjustment dial clockwise to raise or counterclockwise to lower input box values. Press the button one time to close a window. Press and hold the button to close all open windows.

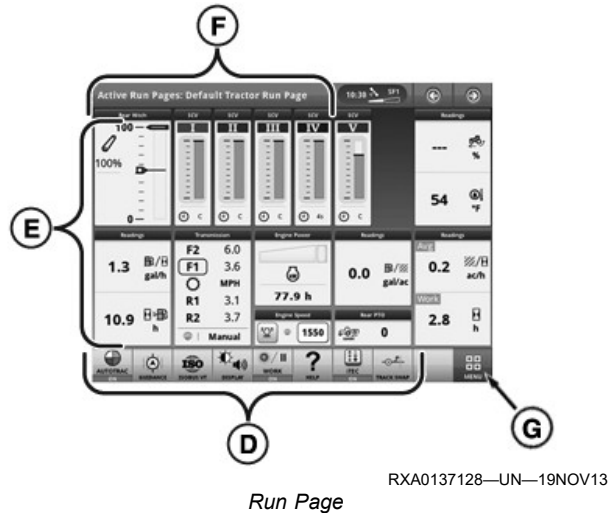

RXA0137128—UN—19NOV13


Run Page

D—Shortcut Keys: Allow quick access to application functions from the shortcut bar.

E—Run Page Modules: Allow quick access to application functions from the run pages.

F—Title Bar: Select to access available run pages or add a new run page.

G—Menu: Select to access all applications installed on the display and machine. Select left-hand tabs to view different groups of applications.

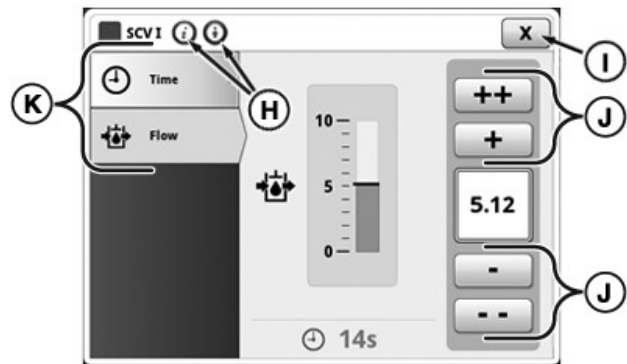

RXA0137084—UN—13DEC13

Module Functions

H—Help/Advanced Settings Buttons: While in an application, select the title bar to view the help pages or change additional settings for that application.

I—Close Button: Select to close the current page.

J—Increase/Decrease Value Buttons: Select to change a value within input boxes. Use (++) and (-) buttons to make larger incremental changes when adjusting the value, rather than touching (+) or (-) buttons. For areas that require tighter adjustments, only (+) and (-) buttons are available.

K—Tabs: Select to change to different section topics.

KT81203,00004A1-19-05MAY20

Compatible Universal Displays

Generation 4 CommandCenter™ may be configured to run with the following John Deere universal displays connected at the corner post.

- GreenStar™ 3 2630 Display
- 4640 Universal Display
- 4240 Universal Display (7R and 8R Series Tractors only)

KD34109,000058C-19-11SEP20


Power Display On and Off

The Generation 4 CommandCenter™ display turns on and off with the tractor key switch.

- **Warm boot** occurs when the CommandCenter™ display has been on within the last 24 hours. The display rests in hibernation state during the 24-hour or less time period that it has been off. When turned back on, the display powers up quickly (approximately 10 seconds).
- **Cold boot** occurs if the display has not been operated for 24 hours or more, or if the unswitched power has been disconnected. During this period, the display shuts down completely to conserve battery power. The next power-up takes approximately 60 seconds.

NOTE: After turning off the engine, avoid turning the key switch back on until the display screen has gone black.

- **Hard reset** is required when the display is unresponsive for more than a few minutes under normal operating conditions.

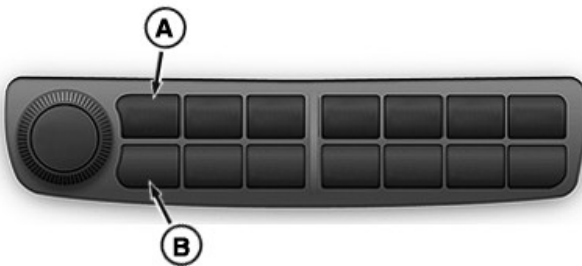

Navigation Bar

RXA0148512—UN—25JUN15

Perform a hard reset by simultaneously pressing the left-most upper and lower buttons (A and B) on the navigation bar for 5 seconds. If the display does not reset, pull fuse nine from the load center and replace it after 5 seconds. For more information on load center fuses, see Access Load Center Fuses in Service—

Electrical section of this Operator's Manual. If the problem persists, see your John Deere dealer.

KT81203,00004A2-19-21APR21


Change Pages and Values

Various methods are provided to allow selection and modification of CommandCenter™ pages and values.



RXA0181011—UN—22JAN21

- **A—Section Tab:** Select to change to a different section topic.
- **B—Icons:** Select to open an application.

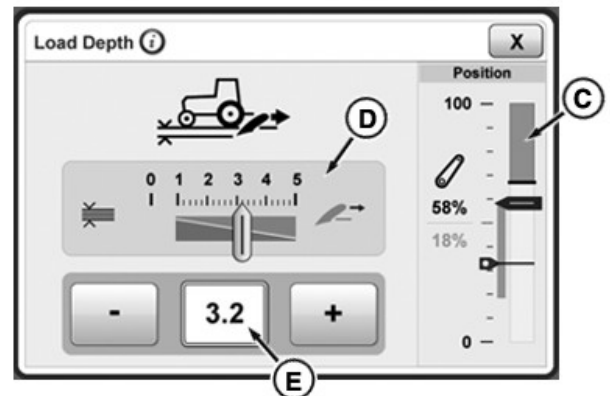

RXA0130123—UN—23APR13

- **C—Bar Graph:** Shows setting information using the filled portion of the bar.
- **D—Slider Bar:** Shows the setting within the minimum and maximum value range.
- **E—Input Box:** Shows the set value. Select (+) to increase or (-) to decrease the value.

NOTE: When changing values using the adjustment dial, rotating the dial faster increases or decreases the value faster.

If a large range of values is available, a numeric keypad appears, allowing direct input of the desired value.

KT81203,00004A7-19-21JAN21

Factory and Service ADVISOR™ Installed Onscreen Help

Tractor Application Help Package with Service ADVISOR™ or Service ADVISOR™ Remote is installed at the factory for the following eight languages:

- Chinese
- English
- French
- German
- Italian
- Portuguese
- Russian
- Spanish

Generation 4 Operating System Help Package is installed for all languages at factory.

For instructions on how to install and update Onscreen Help packages, see the Generation 4 Display operator's manual.

KT81203,00004A9-19-15JUN20

Radar Calibration

CAUTION: Avoid injury. Perform calibration in safe and open area that is clear of objects and bystanders.


Perform radar calibration if:

- Radar speed and wheel/track speed are not equal when slip is not present.
- Radar device was installed/replaced.
- Tire size was changed.
- Ballast of tractor was changed.
- Speed source was changed.



RXA0147926—UN—13APR15

1. Select Menu.
2. Select Machine Settings tab.
3. Select Maintenance & Calibrations icon.
4. Select Calibrations tab.
5. Select Radar Calibration icon.
6. Drive unloaded tractor on hard, dry, and level surface at approximately 3.2 km/h (2.0 mph).

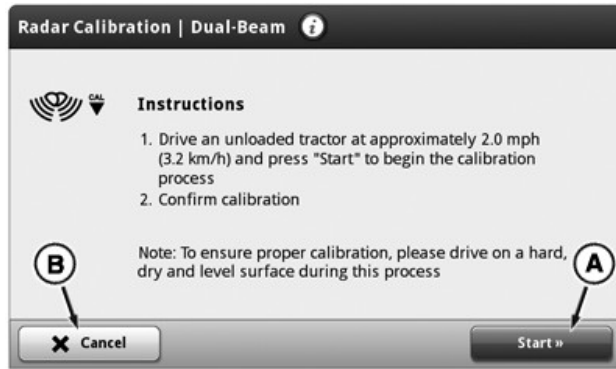

RXA0147580—UN—10MAR15

NOTE: Radar calibration can be canceled by selecting Cancel (B).

7. Select Start (A) to begin radar calibration process.



RXA0147581—UN—10MAR15

8. Select OK (C) to complete radar calibration.

If radar calibration is unsuccessful after three attempts, see your John Deere dealer.

KD34109,00004DE-19-06JAN20

Slip Calibration

CAUTION: Avoid injury. Perform calibration in safe and open area that is clear of objects and bystanders.

Perform slip calibration if:

- Radar calibration has been performed.
- Slip is displayed when slip should not be present.
- Ballast of tractor was changed.
- Speed source was changed.




RXA0147928—UN—13APR15

1. Select Menu.

2. Select Machine Settings tab.
3. Select Maintenance & Calibrations icon.
4. Select Calibrations tab.

NOTE: Tractor must be in motion for slip calibration icon to appear.


5. Select Slip Calibration icon.

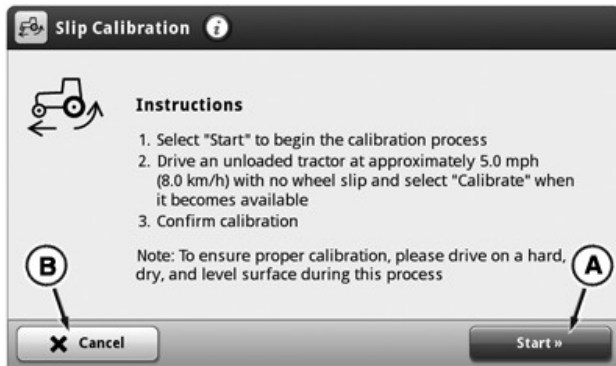

RXA0147582—UN—10MAR15


NOTE: Slip calibration can be canceled by selecting Cancel (B).

6. Select Start (A) to begin slip calibration process.
7. Drive unloaded tractor on hard, dry, and level surface at least 8 km/h (5 mph).

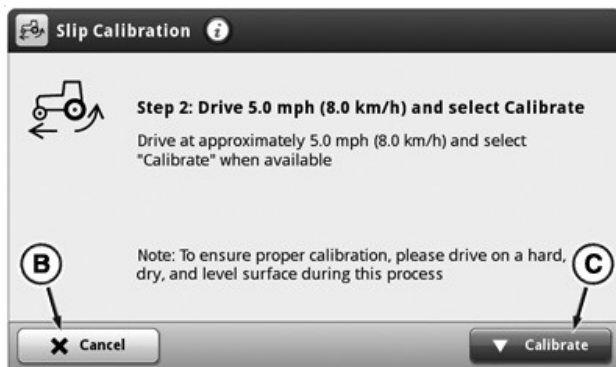

RXA0147583—UN—10MAR15

8. Select Calibrate (C).

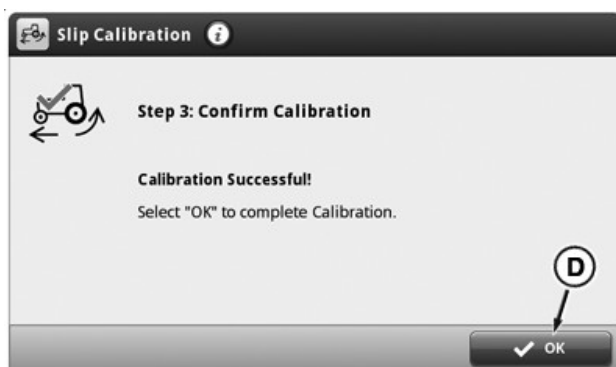

RXA0147584—UN—10MAR15

9. Select OK (D) to complete slip calibration.

If slip calibration is unsuccessful after three attempts, see your John Deere dealer.

KT81203,000020F-19-06JAN20

Steering Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Steering

RXA0171926—UN—06NOV19


3. Steering

KD34109,0000571-19-05NOV19

Steering Settings

Steering application is used to access and adjust steering settings.

Items Accessible on Steering Main Page:

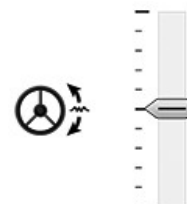

Resistance Status

RXA0174749—UN—05FEB20

Steering Wheel Resistance — select to adjust setting for force required to turn steering wheel. See Steering

Settings—Steering Wheel Resistance in this Operator's Manual section.

KD34109,0000572-19-05FEB20

Steering Settings—Steering Wheel Resistance

Steering Wheel Resistance setting allows operator to adjust setting for force required to turn steering wheel.

Procedure to Modify:



RXA0171921—UN—07NOV19

Increase/Decrease Value

Select (+) to increase or (-) to decrease value.

- Maximum: 2
- Minimum: -2
- Increment: 0.1
- Default: 0

KD34109,0000573-19-25MAR20

Controls Setup



PC15326—UN—08JUL13

Controls Setup configures the integrated tractor joystick, CommandARM™ levers, 1—4 buttons, and third-party devices to control tractor or implement functions. ISO Aux implements configure to the tractor joystick or a third-party device.

Set up assignments:

1. Select Menu.
2. Select Applications tab.
3. Select Controls Setup application.
4. Select from the following tabs on the left-hand side of the page:

NOTE: Unlock the tractor joystick (if equipped) to activate default and custom (manually set) assignments. See CommandARM™ Joystick in CommandARM™ Controls section of this Operator's Manual.

- **CommandPRO™ Joystick:** Assign to control tractor and implement functions (example: rear hitch).
- **Integrated Tractor Joystick:** Assign to control tractor and implement functions (example: front hitch).
- **CommandARM™ Levers and 1—4 Buttons:** Assign to control tractor and implement functions (example: rear hitch).
- **Third-Party Devices:** Any mechanism, John Deere, or non-John Deere, attached to ISOBUS. Once attached, assign control to tractor and implement functions (example: wagon).
- **ISO Aux implements:** Assign implement (example: wagon) function to a specific button on the tractor joystick.

5. Select reconfigurable assignment module.

Depending on the selected source, the following combinations (assignments) are possible:

- **Integrated Tractor Joystick, CommandARM™ Levers, 1—4 buttons, and Third-Party Devices:** Input + Source + Function
- **ISO Aux Implements:** Function + Device + Input

Manage Assignments:




RXA0156706—UN—11JAN17

To edit assignments for the tractor joystick, CommandARM™ levers, or 1—4 buttons, select the desired reconfigurable assignment module. To remove an assignment, select the desired assigned module and then select Remove Assignment (A).

To edit assignments for third-party devices or ISO Aux implements, select edit (B) in the desired reconfigurable assignment module. To remove an assignment, select trash (C).

Activate Custom, ISO Aux, and Defaults:

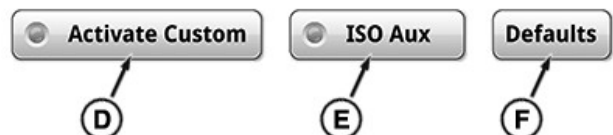

RXA0166821—UN—05MAR19


Select Activate Custom and ISO Aux buttons to enable custom assignments for ISO Aux implements

Activate Custom (D): Enables all customized assignments across all groups.

ISO Aux (E): Determines if messages from the tractor joystick are sent to the ISO Aux implement. Select to enable implement functions, select again to disable. Functions are stored until the operator edits a corresponding assignment.

Defaults (F): Clears and restores any custom control assignments to factory default settings.

KT81203,00005B2-19-25AUG21

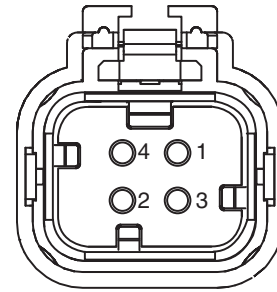

RXA0107925—UN—28MAY10

Video Connector Pin Identification

Install Video Display Camera


IMPORTANT: Avoid damaging camera by mounting camera securely to equipment and in location where camera will not be pinched, crushed, kicked, or knocked off.

NOTE: Camera placement is limited to video camera cable length. Consider camera field of view when selecting location.

Tractors equipped with 4200 processor will have one camera input connector and 4600 processor will have four camera input connectors.

If camera/cameras factory equipped:

- 4600 processor: Up to two of four video inputs will be occupied.
- 4200 processor: Video input will be occupied.

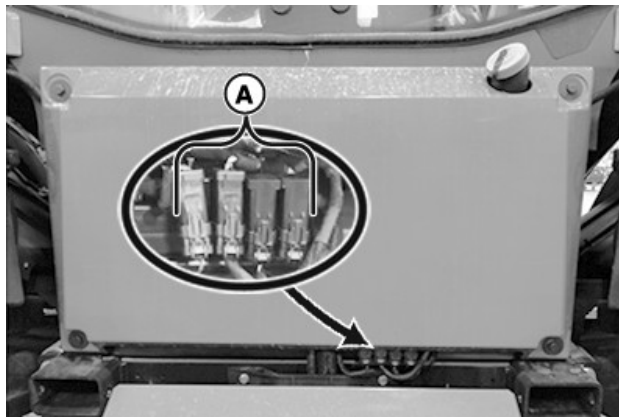

RXA0169767—UN—31JUL19

Machine Equipped with 4600 Processor

1. Locate 4-pin video connectors (A) at bottom opening of rear cab panel.

Pin Number	Function
1	Power
2	Ground
3	Signal
4	Signal—Ground

NOTE: After connecting camera to port, may need to cycle key switch for camera to function.

2. Connect camera cable into 4-pin connector.
3. Route camera cable.
4. Mount camera at desired location.

For information on how to adjust Video settings, see the Generation 4 Display operator's manual.

KD34109,00004B4-19-15JUN20


Intelligent Total Equipment Control (iTEC™)

CommandARM™ Control Functions

Intelligent Total Equipment Control, iTEC™, allows multiple reoccurring tasks to be performed with touch of one button, up to four sequences. Sequences remain in memory until deleted or overwritten, even if electrical current is switched off. Each sequence can include up to 20 functions.

A sequence is a course of events from start of first function to completion of last function. Sequence can be started by pressing one of the sequence (1—4) buttons.

iTEC™ pages are accessed through Generation 4 CommandCenter™. See additional information in this Operator's Manual section on how to set up and edit a sequence.

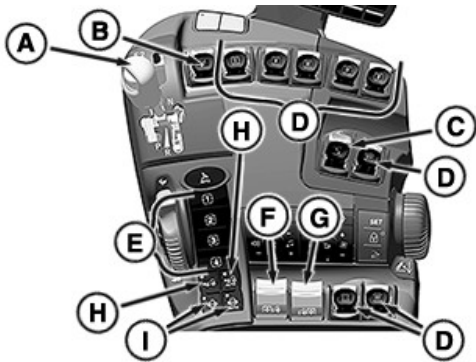

RXA0156096—UN—09DEC16

The following iTEC™ functionality chart describes item and function from CommandARM™ image.

NOTE: Some items are only available if machine is equipped with the associated option.

iTEC™ Functionality		
	Component	Functions
A	IVT™ -AutoPowr™, EVT-eAutoPowr™, and 16-Speed PowerShift™	Change Set Speed Forward
	e18™ and e23™ Transmission	Upshift or Downshift in forward gear
B	Rear Hitch	Raise Detent, Lower Detent, and Fast Lower Detent
C	Front Hitch	Raise, Lower, Float, and Cancel
D	SCVs	Extend, Retract, Float, and Cancel
E	1—4 Buttons ^a	Sequence Set 1, 2, 3, or 4
F	Front PTO	On/Off
G	Rear PTO	On/Off
H	MFWD	On/Off/Auto
I	Differential Lock (7R, 8RW, 8RX, and 9RW)	On/Off/Auto
	Differential Lock (9RX)	Auto

^aButtons are reconfigurable and must be assigned to iTEC™ to run sequence sets.

KT81203,000093C-19-18AUG21

iTEC™ Station Description

CAUTION: Do not operate front loaders in conjunction with Intelligent Total Equipment Control (iTEC™) to avoid sudden movements and possible accidents.

A sequence is defined as the start of the first recorded function to completion of last recorded function. Example of two sequences would be, one sequence made up of a series of functions, operations and distances used at start of field and a second sequence used at a water way in the center of the field. Each program can include up to 20 functions. The programs remain in the memory until they are deleted or overwritten, even if the electrical current is switched off.

DB71512,0000142-19-15DEC16

CommandCenter™ Pages Descriptions and Functions

CAUTION: Avoid unwanted movement and possible accidents. Do not operate front loaders in conjunction with Intelligent Total Equipment Control (iTEC™).

iTEC™ Main Page




RXA0168452—UN—30MAY19

Use shortcut button or follow alternative path:



RXA0145566—UN—01OCT14

1. Select **Menu**.
2. Select **Machine Settings** tab.
3. Select **iTEC™** Icon.

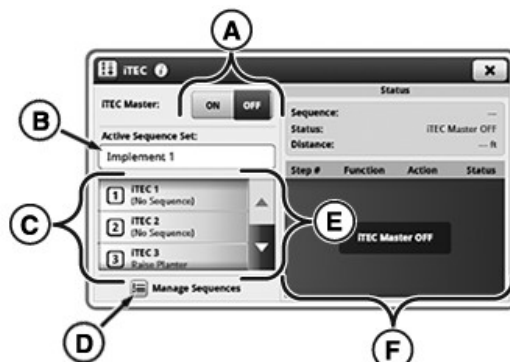

RXA0158043—UN—02MAR17

iTEC is a trademark of Deere & Company

- **A — iTEC™ Master Toggle:** Toggle iTEC™ ON/OFF.
- **B — Active Assignment Set Button:** Select or create an assignment set.
- **C — Assignments List:** List of sequences that can be assigned to 1—4 buttons.
- **D — Manage Sequences Button:** Edit sequence and assign buttons.
- **E — Scroll Bar:** Scroll up or down.
- **F — Status List:** Shows status of each iTEC™ sequence step as sequence progresses.

KT81203,00004D7-19-18DEC19

- **Error** - One or more sequence steps did not execute.

KT81203,00004D8-19-10APR18


All Sequence Page



RXA0129723—UN—06MAR13

Select **Manage Sequences** button on iTEC™ main page.

Status Area

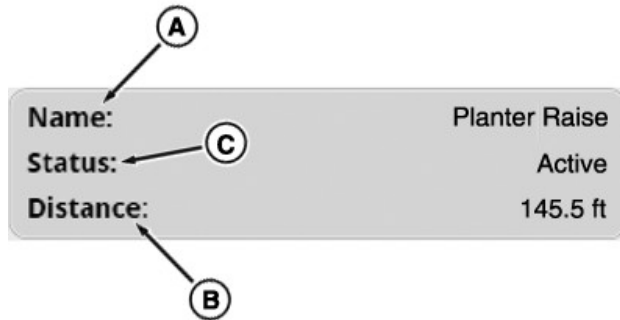


RXA0131243—UN—08MAR13

- **A—Name:** Name of sequence that is currently running.
- **B—Distance:** Displays accumulated distance while iTEC™ sequence is running.
- **C—Status:** Indicator of current iTEC™ status.
 - **Off** - No sequence execution possible.
 - **Ready** - Waiting for iTEC™ button to which a sequence is assigned to be pressed.
 - **Active** - iTEC™ sequence execution active.
 - **RPM Limit** - Engine speed is out of range.¹
 - **Park** - Transmission indicates that park lock is engaged.²
 - **Operator Presence** - No operator presence, no iTEC™ execution allowed. Operator returns to seat.¹
 - **Wheel Speed Low** - Wheel speed < 0.5 km/h (0.3 MPH), execution is paused.
 - **Complete** - Sequence successfully completed.
 - **Aborted** - Sequence execution aborted by operator or active abort condition.

iTEC is a trademark of Deere & Company

¹ Sequences pauses or cannot start if this condition exists. Correct condition to resume sequence.

² Sequence pauses or cannot start if this condition exists. Correct condition to resume sequence.

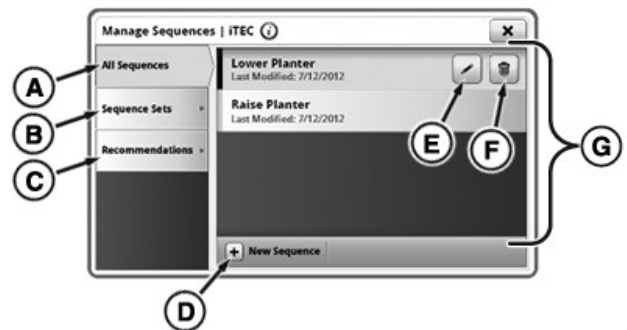

RXA0158044—UN—02MAR17

- **A—All Sequences Tab:** View available, delete saved, edit saved, or add new sequences.
- **B—Sequence Sets Tab:** View assigned sequences or give sequence assignment.
- **C—Recommendations (AutoLearn):** View and edit learned sequences.
- **D—New Sequence Button:** Manually program new sequence.
- **E—Edit Button:** Edit saved sequence.
- **F—Trash Button:** Deleted saved sequence.
- **G—Sequence List:** List of saved sequences.

DB71512,000013B-19-22AUG17

Add New Sequence

NOTE: For complete list of functions available, see CommandCenter™ Pages Descriptions and Functions in this Operators Manual section.


From iTEC™ main page, follow steps listed below:



RXA0158059—UN—02MAR17


1. Select **Manage Sequences** button.
2. Select **All Sequences** tab.
3. Select **New Sequence** button.
4. Select **Add Step** button.

NOTE: Select Cancel button (F) to exit editing process without saving changes.

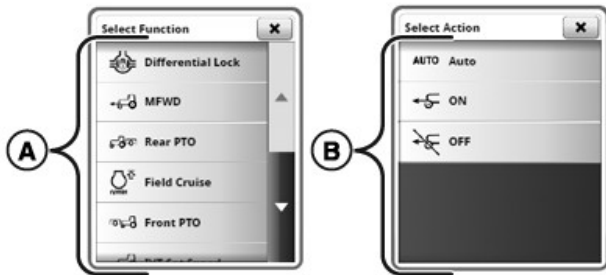


RXA0158057—UN—02MAR17

5. Select from list of functions (A).
6. Select from list of actions (B).

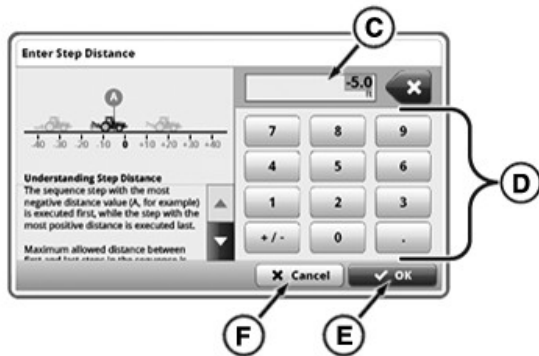

RXA0158047—UN—02MAR17

7. On Step Distance page, use keypad (D) to enter distance into step distance box (C).
8. Select OK Button (E).
9. Repeat steps 4-8 to add steps to sequence.
10. Press **Next** button to continue.

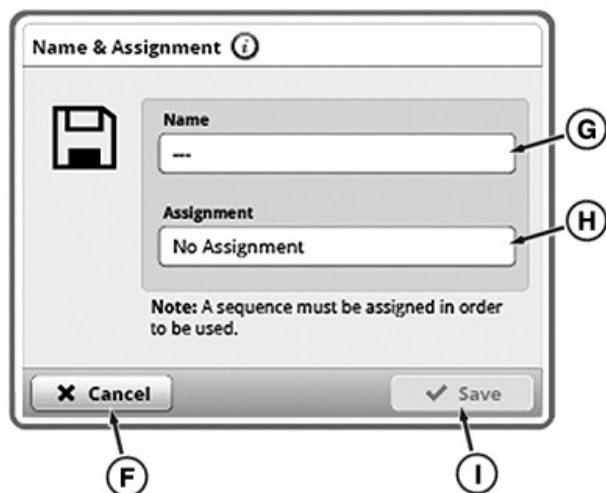

RXA0158048—UN—02MAR17


11. Select Sequence Name box (G). Type name of sequence. Select **Save/OK** button when complete.

NOTE: A sequence must be assigned in order to be used.

12. Select Sequence Assignment box (H). Select assignment, if desired, and select **Save/OK** button when complete.
13. Select **Save** button (I) to save sequence.

KT81203,00004D9-19-08NOV17

Sequence Step Status

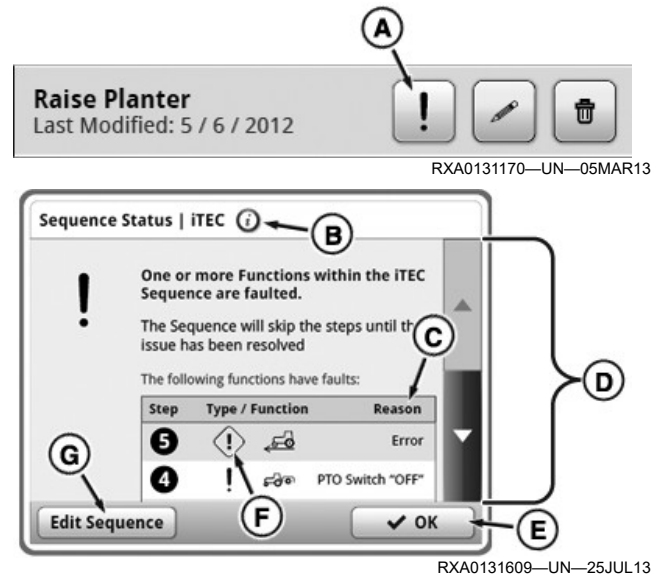

RXA0131170—UN—05MAR13

NOTE: Press Information Button (B) on any iTEC™ page to access a general status page. General status page will list all functions that are part of the sequences of current selected implement.

Whenever execution of a sequence step is not possible or is interrupted, iTEC™ system informs operator about new issue by displaying Information Alert (A) or Fault Alert (F) next to the sequence or sequence step. Press **Alert Symbol** next to the sequence (in assignment area or sequence assignment tab) to access the sequence status page to read steps with errors. Use scroll bars (D) to scroll up and down list. Select edit sequence button (G) if you want to edit a sequence. Press **Alert Symbol** next to a sequence step (while in EDIT) for information about the issue just for that step. Both views will show a short reason (C) for issue. Press OK button (E) to exit.

KT81203,00004DA-19-28AUG17

Edit or Remove Sequence


From iTEC™ main page:

iTEC is a trademark of Deere & Company



RXA0129723—UN—06MAR13

1. Select **Manage Sequences** button.

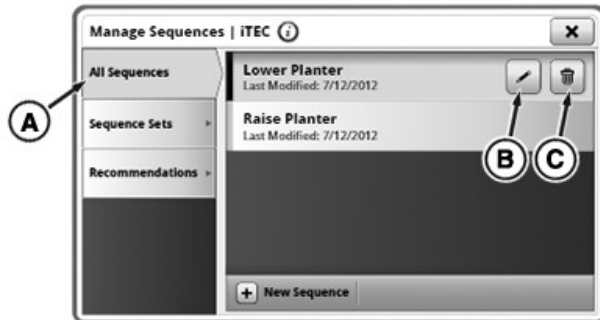


RXA0158049—UN—02MAR17

2. Select All Sequences tab (A).

3. Select desired sequence.


NOTE: Trash button (C) removes sequence or step within sequence.

4. To update sequence steps, select Edit button (B).

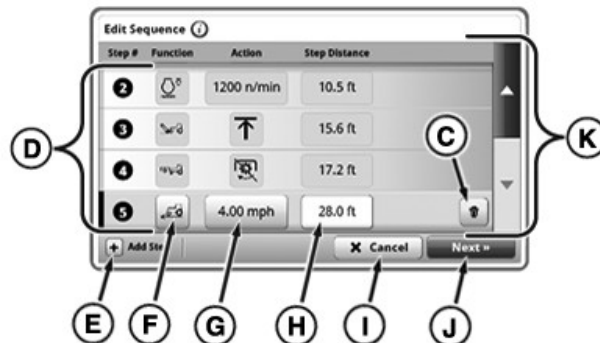

RXA0158050—UN—02MAR17

5. Select desired step to edit from sequence step list (D). If needed, use scroll bar (K) to locate step.

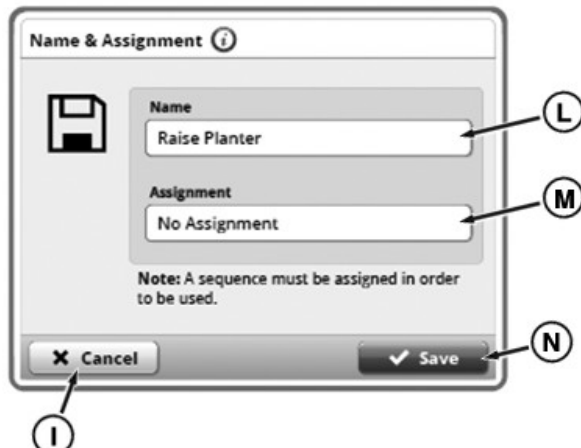

RXA0158051—UN—02MAR17

NOTE: To exit editing process without saving changes, select Cancel button (I).

6. To edit step, select add new step (E), function (F), or action (G) buttons or use distance input box (H).

7. Select Next button (J).

8. If needed, edit sequence name (L) or sequence assignment (M).

9. Select Save button (N).

KT81203,00004DB-19-11AUG17


Sequence Sets Page

From iTEC™ main page, use following steps:



RXA0129723—UN—06MAR13


1. Select **Manage Sequences** button.

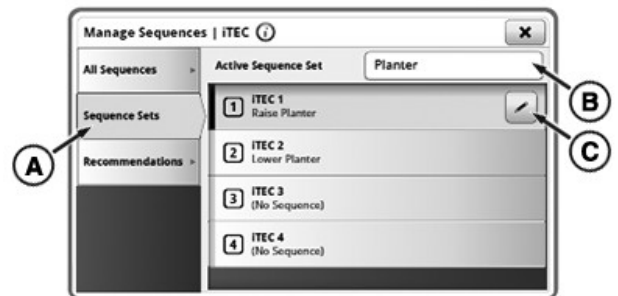

RXA0158311—UN—15MAR17


2. Select **Sequence Sets** tab (A).

3. If needed, select Active Sequence Set (B) and follow steps 4-6. If not, skip to step 7.

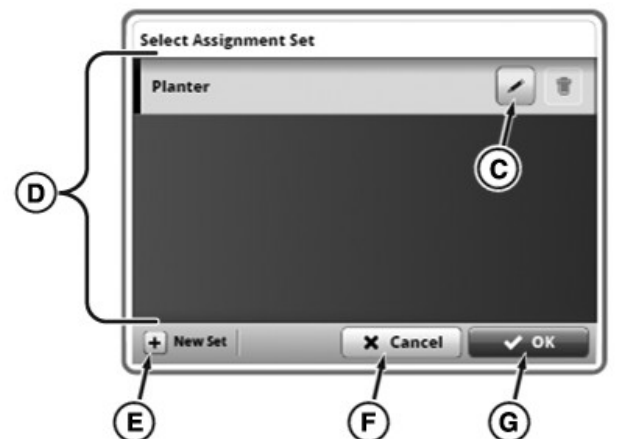

RXA0158312—UN—15MAR17

iTEC is a trademark of Deere & Company

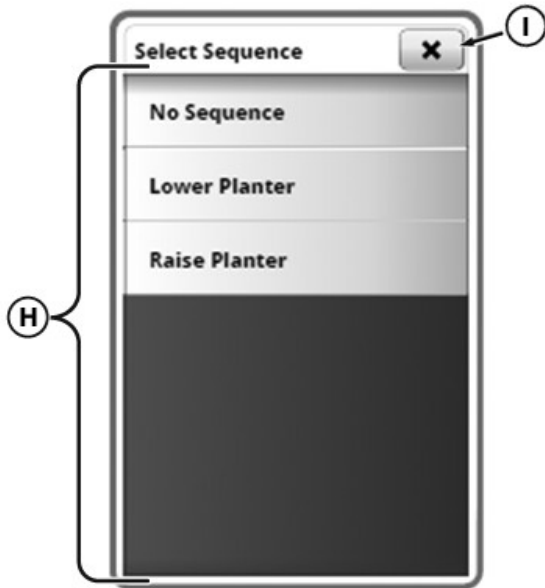

RXA0158313—UN—15MAR17

NOTE: To exit page without saving changes, select Cancel (F) or Close (I) button.

4. Select sequence set from Sequence Set list (D).
5. If needed, select Edit (C) or New Set (E) button.
6. Select OK button (G).
7. Select desired iTEC™ button to assign.
8. Select Edit button (C).
9. Select sequence from Sequence list (H).

KT81203,00004DD-19-01SEP17


Perform Sequence

iTEC™ sequence execution requires that certain tractor controls are operated in a particular way. Sequence will not execute with tractor in PARK position. Transmission shift lever must be in forward position when executing set speeds, gears, or automatic gear shift. Tractor ground speed must be at least 0.5 km/h (0.31 mph).

Before performing sequence using SCV functions, relevant SCV levers must be in neutral position.

Abort current sequence at any time by pressing same assigned iTEC™ sequence button used for starting sequence. Currently active commanded functions will be canceled (example: hitch (if equipped) motion or SCV flow will stop if previously initiated as part of sequence).

iTEC™ Indicator is illuminated when active. For indicator location, see Corner Post Display in Corner Post Display section of this Operator's Manual.

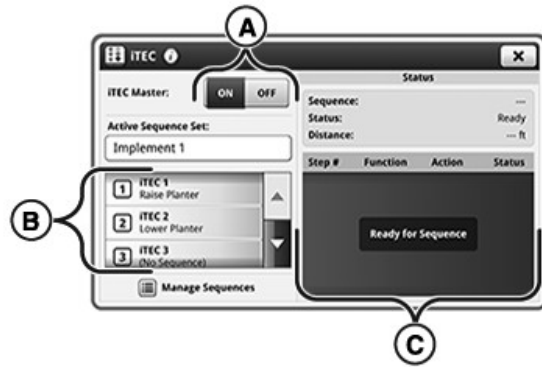

RXA0173766—UN—13JAN20

During sequence execution, a function can be actuated manually at any time without execution of sequence being interrupted. Functions that are actuated manually are ignored by iTEC™ for the rest of sequence. Relevant alert icon for this function appears in Status area (C).

1. Turn iTEC™ Master toggle (A) to ON position.
2. Select iTEC™ sequence button assigned to desired sequence (B).
3. Sequence steps appear in Status area (C) and show progression of steps.

KT81203,00004DF-19-09JUL21

Recommendations (AutoLearn)

When AutoLearn is ON, the system learns every action the machine completes in the background. When the same patterns, actions, or steps are recognized, AutoLearn creates a sequence. AutoLearn then recommends assignment to an iTEC™ button.


Sequences can be deleted when no longer needed. When a sequence is deleted, all button assignments clear and sequence is no longer available for use.

From iTEC™ main page, use following steps:



RXA0129723—UN—06MAR13

1. Select Manage Sequences.

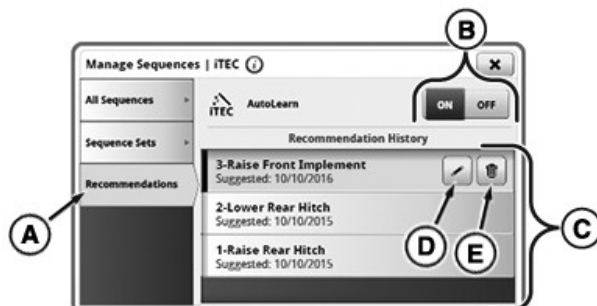


NOTE: AutoLearn is ON by default. To turn AutoLearn OFF, use AutoLearn ON/OFF toggle (B).

2. Select Recommendations (AutoLearn) tab (A).
3. Review Recommendation History (C).
4. To edit or assign recommended sequence, select edit (D). To remove sequence from list, select trash (E).

KT81203,00004E0-19-19JUN19

iTEC™ Functions—Efficiency Manager™

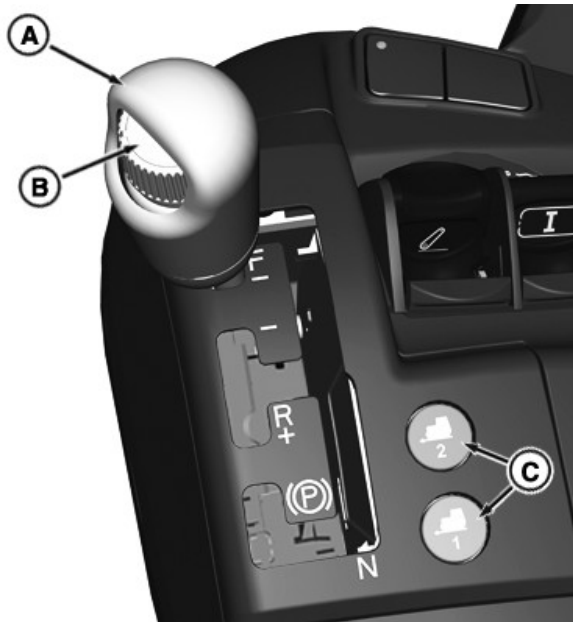

RXA0139446—UN—17MAR14

Efficiency Manager™ Set Speed Buttons (C): The current forward set speed can be changed up or down with the set speed adjusting wheel (B) on shift knob (A). Transmission changes will be executed at the normal rate once the set speed has been changed.

The minimum set speed that can be saved is 0.8 km/h (0.5 mph). Changing the set speed or shifting during execution of a sequence will not cause iTEC™ to abort, but set speed changes will not be executed for the remainder of the sequence.

When a set speed is changed by an iTEC™ sequence, transmission will react as if the operator changed set speed, shifting up or down as a result.

KT81203,00004E2-19-07MAR19

Tractor-Implement Automation (TIA)

TIA—General Information

CAUTION: Although phrases "transfer control" and "disengage control" are terms commonly used with TIA equipment, at NO time is implement in total control of an operation. Operator ALWAYS has the ability to override TIA implement. It is operator's responsibility to make sure that implement operation does not damage equipment, or pose danger of injury or death to operator or others close by.

Do not operate TIA when driving on public roads or when other persons are close by.

For ISO-compliant tractors, TIA-compatible implements have the ability to control certain individual tractor functions. See your implement operator's manual or contact your John Deere dealer with any questions regarding TIA-compatible implements.

KD34109,0000901-19-14APR21

Activate TIA Equipment

Response Codes, Text Descriptions, and Corrective Actions		
Common Response Codes	Text Displayed	Corrective Action
0	Code Accepted	None Required
4	Implement Not Available to Deactivate	Implement already deactivated
5	Implement Already Activated	None Required, implement should work as expected
6 and 11	Space Unavailable for Activation	Contact your dealer for assistance
17	Demonstration Activation Replaced With Permanent Activation	None Required


NOTE: To obtain tractor serial number, see *Product Identification Number in Identification Numbers* section of this Operator's Manual.

An activation code is required to allow TIA to function. Contact your John Deere dealer with tractor serial number and implement make, model, and serial number. Dealer obtains activation code through John Deere StellarSupport™.



RXA0166970—UN—08MAR19

1. Select Menu.
2. Select System tab.
3. Select Software Manager icon.

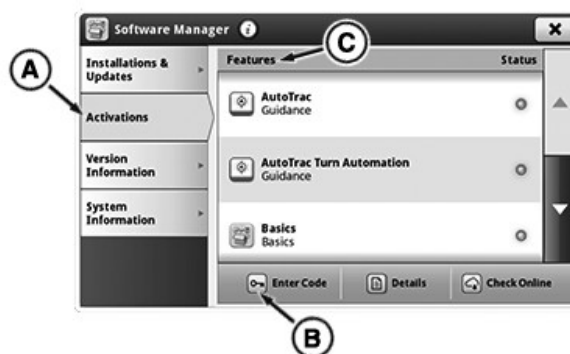

RXA0166931—UN—08MAR19

4. Select Activations tab (A).
5. When Activations page displays, press Enter Code (B). Keyboard appears.

NOTE: Some tractor automation activation page keyboard characters are grayed out and are not used in activation codes. If provided activation code includes any characters that are grayed out on tractor automation activation page keyboard, request dealers reconfirm activation code.

6. Using keyboard, enter activation code, then select OK.
7. If activation code is entered correctly, confirmation code appears in the enter activation overlay and message is displayed. Code Accepted indicates that activation is complete.
8. If message other than Code Accepted appears, see Response Codes, Text Descriptions, and Corrective Actions table. If message not listed appears, check and reenter code. If problem persists, contact your John Deere dealer.

Up to 20 implement names can be viewed on Activations page at any given time. When a new entry shows up in Features list (C), that entry is labeled Unknown Implement.

KD34109,0000902-19-14APR21

Operate TIA

IMPORTANT: For TIA to function correctly, the tractor and implements must meet various requirements. See requirements information in this Operator's Manual section and the implement operator's manual sections.

1. Connect TIA equipment to tractor using ISO connection. See Right-Hand Front Corner Post in Accessories section of this Operator's Manual.
2. Select AutoTrac™ Resume (AUTO) button on CommandARM™. For button location, see CommandARM™ Controls—Left Side in

CommandARM™ Controls section of this Operator's Manual.

3. Follow implement operator's manual instructions to operate implement.

KD34109,0000903-19-16APR21

PTO Requirements [Ag]

Before transferring control to implement, prepare implement as indicated in implement operator's manual. Transfer control using AutoTrac™ resume button as described in implement operator's manual.

Following conditions must be met before transferring control to implement:

- Operator in seat.
- No PTO faults present.
- PTO remote control off.

NOTE: Implement cannot engage PTO when tractor is stopped unless it is authorized to do so. However, implement can disengage PTO at any time including when tractor is stopped.

While operating and depending on PTO system capabilities, implement has the ability to engage/disengage PTO or adjust PTO speed.

To disengage control, turn PTO switch off.

KD34109,000090F-19-15APR21

SCV Requirements

Before transferring control to implement, prepare implement as indicated in implement operator's manual. Transfer control using AutoTrac™ resume button as described in implement operator's manual.

Following conditions must be met before transferring control to implement:

- Operator in seat.
- No SCV faults present.
- SCV control levers (if assigned) in neutral position.
- Unlock all assigned SCV controls.

NOTE: Set maximum SCV flow limit which cannot be exceeded by implement.

NOTE: Implement cannot adjust SCV flow when tractor is stopped unless it is authorized to do so. However, implement can stop SCV flow at any time including when tractor is stopped.

While operating, implement has ability to:

- Control SCVs during operations.

- Change SCV flow rate up to set limit.

To disengage control, perform any of the following:

- Actuate specific SCV lever.
- Lock all assigned SCV controls.
- Actuate remote control switch on fender.
- Remove inputs assigned to SCVs.

KD34109,0000905-19-15APR21

PowerShift™ Transmission Requirements

NOTE: These requirements also apply to the e23™ transmission.

Before transferring control to implement, prepare implement as indicated in implement operator's manual. Transfer control using AutoTrac™ resume button as presented in the implement operator's manual.

NOTE: The implement cannot exceed ground speed set by the operator.

Following conditions must be met before transferring control to implement:

- Operator in seat.
- No PowerShift™ transmission faults present.
- Shift lever in forward.

NOTE: When transferring control to the implement, Efficiency Manager™ mode will engage.

Speed may always be reduced.

Set speed limit may be increased within 2 seconds after engaging travel speed auto mode. Current travel speed can be limited by other processes (e.g. iTEC™). This limit might be observed; however, the limit will not be considered as an intervention by operator.

To disengage control using the shift lever:

- During driving: Shift up or down manually.
- Increasing the speed will end the auto mode. The implement has all information to inform the operator that this intervention will end the travel speed auto mode. See implement operator's manual.

KD34109,0000908-19-27APR21

AutoTrac™ Guidance Requirements

Before transferring control to implement, prepare implement as indicated in implement operator's manual. Transfer control using AutoTrac™ resume button as presented in implement operator's manual.

Following guidelines must be met before transferring control to implement.

- Operator in seat.
- Steering system functional.
- AutoTrac™ is off.
- Steering wheel stationary.
- Vehicle speed below maximum automated speed.
- Transmission not in PARK.

While operating, implement has ability to automatically steer tractor.

To disengage control:

- Turn steering wheel.
- Place tractor in PARK.

KD34109,0000909-19-15APR21

Rear Hitch Requirements [Ag]

Before transferring control to implement, prepare implement as indicated in implement operator's manual. Transfer control using AutoTrac™ resume button as presented in implement operator's manual.

Implement can automatically control hitch depth.

Set raise limit using CommandCenter™.

IMPORTANT: Implement cannot exceed limit.

Following guidelines must be met before transferring control to implement:

- Operator in seat.
- No hitch faults present.
- Hitch control lever in neutral position.
- Hitch unlocked.

NOTE: On a tractor that is standing still, only the implements authorized by John Deere can control the hitch depth.

To disengage control, perform any of the following:

- Move hitch control lever.
- Lock hitch.
- Activate fender-mounted hitch switch (if equipped).

KD34109,000090E-19-15APR21

Drivetrain

Drivetrain Overview

Tractor drivetrain consists of:

- Transmission: e18™ PowerShift™
- Differential: Differential, differential lock, final drives, and axles
- Brakes: Rear or front and rear
- Mechanical, electronic, and hydraulic control systems

KD34109,000023F-19-13NOV19

Differential Lock

Differential lock latches front and rear axles together to provide best traction for slippery field conditions. When one wheel/track begins to slip, select one of two operating modes.

IMPORTANT: Damage to differential could occur if differential lock is engaged after wheels/tracks begin to slip. Engage before slip occurs.

Differential Lock Operating Modes:

Manual Lock — engages when differential lock button or floor switch is pressed. See CommandARM™ Controls—Left Side in CommandARM™ Controls section or Differential Lock Switch in Front Console section of this Operator's Manual. Icon on the button and indicator on the corner post display illuminate.

AUTO Differential Lock — engages when AUTO differential lock button is pressed. See CommandARM™ Controls—Left Side in CommandARM™ Controls section of this Operator's Manual. Icon on the button and indicator on the corner post display illuminate. In AUTO mode, differential lock automatically:

- Disengages when wheel/track speeds are above 23 km/h (14 mph), brake pedal is pressed, or steering angle is greater than selected value. For steering angle settings, see Transmission Advanced Settings in Transmission—General Information section of this Operator's Manual.
- Engages when wheel/track speed falls below 19 km/h (12 mph), steering angle is below selected value, and when the brake pedal is released. For steering angle settings, see Transmission Advanced Settings in Transmission—General Information section of this Operator's Manual.

Alternate Braking — braking mode engages when wheel/track speed is above 5 km/h (3.1 mph) and the brake pedal is pressed. Both front and rear differential locks disengage when wheel/track speed is 5 km/h (3 mph)—45 km/h (28 mph) and steering angle is greater than the braking mode steering threshold. Rear differential lock disengages and front differential lock

remains engaged if any of the following occur in braking mode:

- Wheel/track speed falls below 3 km/h (2 mph)
- Wheel/track speed exceeds 47 km/h (29 mph)
- Wheel/track speed is 5 km/h (3 mph)—45 km/h (28 mph) and steering angle is less than the braking mode steering threshold

Once the brake is released:

- If differential lock was in manual mode before pressing the brake pedal, manual mode is disengaged.
- If differential lock was in AUTO mode before pressing the brake pedal, AUTO mode resumes.

KD34109,00005E6-19-16APR21

Drivetrain Protection

IMPORTANT: To extend drivetrain and track life, avoid excessive soil compaction, and reduce rolling resistance: avoid adding excessive ballast. Never add ballast that results in operating with heavy loads and with continuous full-power below 6.6 km/h (4.1 mph). For 9RX Narrow [Ag], avoid operation with continuous full-power loads below 7.5 km/h (4.7 mph).

NOTE: When tractor is operated under heavy load and low engine rpm, PowerShift™ transmission may default to NEUTRAL. PARK engages once track speed drops below 1.75 km/h (1.0 mph) for vehicle protection.

To engage transmission, move PowerShift™ transmission lever to PARK, reduce load, and then shift back into desired operating gear.

A TIP Diagnostic Trouble Code (DTC) is and displayed when default to PARK condition occurs.

Drivetrain protection system is gear-sensitive and is not apparent in most situations. It does not affect load starting and only affects operations in gears with maximum operating speeds below 6.6 km/h (4.1 mph). Full engine horsepower, plus 10 percent power bulge is available in all other gears. Tractor is traction limited, not power limited, at slow ground speeds.

Electronic engine controls provide protection from drivetrain overloading. Engine horsepower is automatically reduced to protect drivetrain components when:

- Air Filter Restriction Warning DTC is activated (CCU 000107.00). Engine performance is reduced. Service engine air filter immediately. See Engine Primary and Secondary Air Filters in Service—Change section of this Operator's Manual.

- Fuel filter(s) become plugged resulting in a loss of power due to a reduction in delivered fuel. Service engine fuel filter immediately. See Fuel Filters in Service—Change section of this Operator's Manual.
- See your John Deere dealer.

Seeding Hydraulic Intelligent Power Management (IPM)

IPM provides controlled power boost of up to 18 kW (25 hp) and additional power in derate situations up to 55 kW (75 hp) to tractor when, at least one SCV numbered V to VIII is:

- Set to continuous flow
- Set to 50% or greater flow rate
- Detent activated

Adjust transmission settings for IPM maximum efficiency. Suggested settings may increase shift occurrences, but allows engine to stay in the desired boosted power range.

- Select transmission custom mode page. See E18™ Transmission Settings—Custom in e18™ PowerShift™ Transmission section of this Operator's Manual.
- Select Engine Speed Droop PTO ON module.
- Adjust droop percentage to 15%.
- Select Engine Speed Droop PTO OFF module.
- Adjust droop percentage to 15%.

IPM is available as a factory- or dealer-installed option. See your John Deere dealer.

Power increase is only provided when required by system.

Gear	Maximum Engine Power Available [Ag] hp (kW)				
	9RX 540	9RX 590		9RX 640	
		Without IPM	With Hydraulic IPM	Without IPM	With Hydraulic IPM
1	540 (397)	540 (397)	615 (452)	540 (397)	665 (489)
2	540 (397)	540 (397)	615 (452)	564 (415)	665 (489)
3	540 (397)	564 (415)	615 (452)	590 (434)	665 (489)
4	540 (397)	590 (434)	615 (452)	614 (452)	665 (489)
5	540 (397)	590 (434)	615 (452)	640 (471)	665 (489)
6	540 (397)	590 (434)	615 (452)	640 (471)	665 (489)
7	540 (397)	590 (434)	615 (452)	640 (471)	665 (489)

Gear	Maximum Engine Power Available [Scraper] hp (kW)		
	9RX 540	9RX 590	9RX 640
1	490 (360)	490 (360)	N/A
2	490 (360)	490 (360)	N/A
3	514 (378)	514 (378)	N/A
4	540 (397)	540 (397)	N/A
5	540 (397)	564 (434)	N/A
6	540 (397)	590 (434)	N/A
7	540 (397)	590 (434)	N/A

KT81203,0000261-19-02SEP21

Brakes

Trailer Brake System Settings—Access

Access Application Through Display:



RXA0167075—UN—20MAR19

Menu

1. Menu



RXA0167076—UN—20MAR19

Machine Settings

2. Machine Settings tab



RXA0177626—UN—28APR20

Trailer Brake System

3. Trailer Brake System

KD34109,00005EF-19-28APR20

Trailer Brake System Settings

The Trailer Brake System application is used to access and adjust trailer brake settings.



RXA0177625—UN—28APR20

Trailer Brake System Example

Items Accessible on the Trailer Brake System Main Page:

NOTE: Some items only display if machine is equipped with the associated option. If the trailer brake adjustability settings do not display and assistance is needed to improve tractor-trailer compatibility, see your John Deere dealer.

Trailer Brake Gain Items:

3



RXA0177620—UN—28APR20

Gain Value and Status

Gain — select to adjust the aggressiveness of the trailer brakes. See Trailer Brake System Settings—Brake Gain in this Operator's Manual section.

Trailer Pre-Brake Items:

+5



RXA0177621—UN—28APR20

Pre-Brake Value and Status

Pre-Brake — select to adjust the trailer brake initiation timing. See Trailer Brake System Settings—Pre-Brake Offset in this Operator's Manual section.

Trailer Brake Test Controls and Settings Items:

Trailer Brake Test Controls

RXA0177627—UN—28APR20

Trailer Brake Test Controls

Trailer Brake Test Controls — select to access the test to confirm that the park brake will hold both the tractor and the trailer. See Trailer Brake System Settings—Trailer Brake Test in this Operator's Manual section.



RXA0167071—UN—21MAR19

Advanced Settings

Advanced Settings — access further adjustments and less common settings. See Trailer Brake System Settings—Advanced in this Operator's Manual section.

KD34109,00005F0-19-13MAY20


Trailer Brake System Settings—Brake Gain

The Brake Gain adjustment allows the operator to adjust the braking aggressiveness to match the trailer requirements.

Modify When:

- The trailer is slow to stop.
- The trailer wheels lock up when the brakes are applied.

Procedure to Modify:

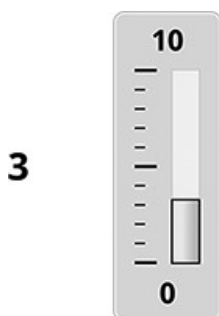

RXA0177620—UN—28APR20
Gain Value and Status

1. Select the Gain value.



RXA0177616—UN—28APR20
Increase/Decrease Value

2. Select (+) to increase or (-) to decrease the value. The value is shown in the display box.

- Maximum: 10
- Minimum: 0
- Increment: 1



Close

RXA0167129—UN—25MAR19

3. Select to close.

KD34109,00005F1-19-13MAY20


Trailer Brake System Settings—Pre-Brake Offset

Pre-Brake Offset allows the operator to change the timing of the trailer brake initiation. The trailer brake initiation may need to be adjusted to prevent the trailer from pushing the tractor forward.

Modify When:

- Connecting the trailer to the tractor.

Procedure to Modify:

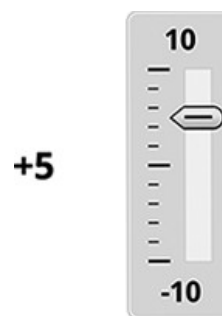

RXA0177621—UN—28APR20
Pre-Brake Value and Status

1. Select the Pre-Brake value.



RXA0177622—UN—28APR20
Increase/Decrease Value

2. Select (+) to increase or (-) to decrease the value. The value is shown in the display box.

- Maximum: 10
- Minimum: -10
- Increment: 1



Close

RXA0167129—UN—25MAR19

3. Select to close.

KD34109,00005F2-19-28APR20

Trailer Brake System Settings—Trailer Brake Test

Use the Trailer Brake Test to confirm that the tractor park brake will hold both the tractor and the trailer. This condition is necessary when the tractor is parked and the trailer brakes are released. The test overrides the default park state and forces the trailer brakes to release.

NOTE: Available on tractors equipped with dual-line hydraulic trailer brakes.

Test When:

- Verifying park brake performance.
- Attaching a different trailer.

The tractor must be in PARK and the trailer brakes must be engaged to perform the trailer brake test. If these conditions are not met, the Release Trailer Brakes key is grayed out. The statuses of these conditions are displayed on the page.

Prerequisite — one of the following statuses is displayed next to Machine must be in park:



Check Mark

RXA0177617—UN—28APR20

- The check mark indicates that the machine is in PARK.



Fault

RXA0177619—UN—28APR20

- The fault icon indicates that the machine is not in PARK.

Brake Control — one of the following statuses is displayed regarding the trailer brake:

- (---) is displayed when the trailer brake is not engaged.
- Brakes Engaged is displayed when the trailer brake is engaged.

- Brakes Released is displayed when the Release Trailer Brakes key is held.
- Fault Present and the fault icon are displayed when a fault is present in the brake control.

Procedure to Modify:

1. Place the tractor in PARK.

Trailer Brake Test Controls

RXA0177627—UN—28APR20

Trailer Brake Test Controls

2. Select Trailer Brake Test Controls.

Release Trailer Brakes

RXA0177623—UN—28APR20

Release Trailer Brakes

3. Select and hold Release Trailer Brakes long enough to ensure that the tractor and trailer do not move.

Done

RXA0177618—UN—28APR20

Done

4. Press Done to close.

KD34109,00005F3-19-12MAY20

Trailer Brake System Settings—Advanced

Advanced settings allow you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:

Reset

RXA0177624—UN—28APR20

Reset

Reset to Default — select Reset to return the trailer brake settings to factory default values. When selected, a page displays to verify the selection. Select OK to continue or Cancel to return to the previous page without resetting the values.

KD34109,00005F4-19-28APR20


Brake Use

CAUTION: Avoid possible personal injury. Reduce speed if towed load weighs more than tractor or transporting loads under adverse conditions. Avoid hard braking applications, see implement manual and Transport Section.

IMPORTANT: Avoid unnecessary wear on brakes. DO NOT rest foot on brake pedal during tractor operation.

NOTE: Brake life can be extended when stopping large loads by using a combination of engine motoring and service brake torque to slow the vehicle. This can be achieved by downshifting and then using service brakes to further slow vehicle and bring engine speed to idle.

Test brakes with engine stopped to be sure manual brake system is functioning, see Service—Check section of this Operator's Manual.

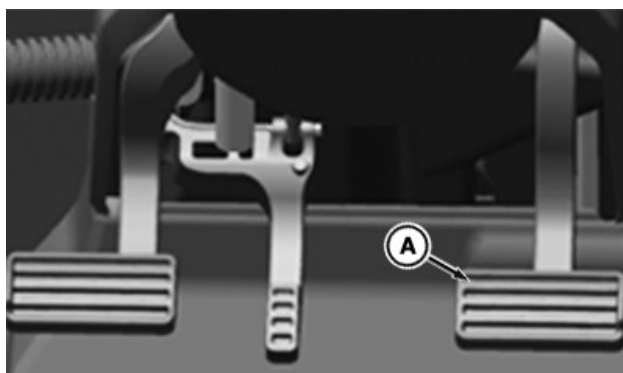

RXA0180381—UN—05NOV20

Press brake pedal (A) to stop tractor while disengaging clutch.

Maintain at least 1800 engine rpm during aggressive braking events to ensure adequate cooling oil flow is directed to vehicle brakes. Do not over speed engine as it may cause damage to engine or transmission components.

TO84419,00000C9-19-21APR21

Trailer Brakes Regulation (EAEU-compliant Tractors Only)

Tractor is equipped with a braking system control for hydraulic or pneumatic system of brakes. According to the agreement with the customer the tractor may be sold without a trailer brake system.

CAUTION: Avoid loss of control. Always observe maximum permissible mass and speeds.

Tractor without a trailer brake system used for towing of trailers or implements on public roads with towed load not to exceed:

- 50% total permissible mass of tractor and speed no greater than 40 km/h (24 mph).
- Total permissible mass of the tractor at speeds no greater than 10 km/h (6 mph).

Tractor may also be used in conjunction with hitch-mounted implements for pushing, transportation, or actuation.

EC82310,00007DA-19-15APR19

Hydraulic Trailer Brakes (If Equipped)

CAUTION: Avoid possible injury from losing control of tractor when operating on downhill slopes. Tractor wheels can lock and skid on steep or slippery downhill slopes.

IMPORTANT: Operating tractor with three scrapers requires tractor and all scraper pans be equipped with hydraulic trailer brakes. See in the Transport section of this Operator's Manual:

- Towed Loads.
- Transport with Ballast.

IMPORTANT: Recommendations to reduce brake wear:

- Make sure that the pressure hose is connected.
- Select same gear for both downhill and uphill driving.
- Check hydraulic trailer brake regularly for proper operation.



RXA0180505—UN—23NOV20

Remove cap from trailer brake coupler (A). Ensure that the hose coupler is clean before connecting to the trailer brake coupler.

To operate the hydraulic trailer brake, depress the brake pedal. The braking effect depends on pressure applied to the brake pedals.

TO84419,00000CA-19-23NOV20

Transmission—General Information

Transmission Settings—Access Advanced

Access Through Display:



RXA0167075—UN—20MAR19

Menu

1. Menu



RXA0167076—UN—20MAR19

Machine Settings

2. Machine Settings tab



RXA0167077—UN—20MAR19

Transmission

3. Transmission



RXA0167071—UN—21MAR19

Advanced Settings

4. Advanced Settings

Access Through Navigation Bar:



RXA0167078—UN—20MAR19

Transmission

1. Press transmission button on navigation bar below display.



RXA0167071—UN—21MAR19

Advanced Settings

2. Select advanced settings.

Transmission Settings—Advanced

Advanced Settings allows you to access further adjustments and less common settings.

NOTE: Some items only display if machine is equipped with the associated option.

Items Accessible on Advanced Settings Page:



RXA0167133—UN—21MAR19

Selection Box

True Ground Speed Input — allows the choice of Radar or GPS as the ground speed source. Touch the selection box to display the selection list. If the speed source is changed, perform radar calibration, then slip calibration. For information on calibrations, see Radar Calibrations and Slip Calibrations in CommandCenter™ section of this Operator's Manual.



RXA0167134—UN—22MAR19

OFF/LOW/MED/HIGH

NOTE: IVT™ and EVT without CommandPRO™ joystick and e23™ only.

AutoClutch Sensitivity — select OFF to disable or select the level of sensitivity for AutoClutch. If set to OFF and the key is cycled, the setting reverts to the last LOW, MED, or HIGH setting.

Sensitivity levels:

- LOW - recommended for driving in extremely hilly terrain with implements (drawn or attached), particularly if driving conditions are slippery.
- MED - recommended for driving in moderately hilly terrain with implements (drawn or attached).
- HIGH - recommended for driving without an implement or with an implement in flat terrain.




RXA0167133—UN—21MAR19

Selection Box


Start Gears — choose which gear the Transmission starts in. Touch the selection box next to the desired setting to be adjusted. A gear list displays. Select the desired gear from the list.

 Options displayed depend on the Transmission:



Forward Start Gear
RXA0172259—UN—18NOV19

 - Some transmissions have a setting for a forward start gear.



Reverse Start Gear
RXA0172260—UN—18NOV19

- Some transmissions have a setting for a reverse start gear.



Multiple Start Gears
RXA0172261—UN—18NOV19

- Some transmissions have settings for multiple forward start gears.



Selection Box
RXA0167136—UN—22MAR19

Reverse/Forward Ratio — select the ratio for reverse and forward Set Speeds. Reverse Set Speed will automatically set to the forward Set Speed times the selected setting. For example, if Fx0.3 is selected, reverse Set Speed will be 30% of what forward Set Speed is set to. If set to Independent, reverse and forward Set Speeds function independent of each other and are set separately.



ON/OFF
RXA0167187—UN—22MAR19

Backup Alarm (If Equipped) — select ON to enable or OFF to disable the alarm that sounds when the tractor is in reverse. See Backup Alarm in this Operator's Manual section.



AUTO MFWD Toggle
RXA0167137—UN—22MAR19

NOTE: Machines configured with mechanical front-wheel drive only.

AUTO MFWD — MFWD disengages to enable a tighter turning radius or to reduce ground disturbance in the area of the turn. Select the desired steering angle to disengage MFWD or disable by selecting OFF. Disabling the steering angle leaves Auto MFWD with the speed dependency only. See Mechanical Front-Wheel Drive (MFWD) in Drivetrain section of this Operator's Manual.



AUTO Diff Lock Example
RXA0167138—UN—22MAR19

NOTE: Machines configured with differential lock only. Options displayed depend on the machine.

AUTO Diff Lock — higher disengage steering angles require the operator to turn the steering wheel further before differential lock disengages. Use in high slip field conditions that require large steering corrections to maintain the desired path. Differential lock remains engaged while making steering corrections across the field but automatically disengages on headland turns. Select the desired steering angle to disengage differential lock.

- Moderate disengage steering angles are useful in loader situations. Differential lock remains engaged when entering a pile, but quickly disengages while turning.
- Lower disengage steering angles allow differential lock to disengage sooner (less movement of the steering wheel), which is useful in high-traction conditions (example: paved surface). Differential lock remains engaged during straight-line work, while minimizing tractor jerk when disengaged or re-engaged during turns.

See Differential Lock in Drivetrain section of this Operator's Manual.



Forward Speed Limit
RXA0167139—UN—21MAR19

7.0
mph



Reverse Speed Limit
RXA0167140—UN—21MAR19

3.0
mph

NOTE: Machines equipped with CommandPRO™ joystick only.

Speed Limits — adjust the maximum allowed speed in both forward and reverse directions. See CommandPRO™ Transmission Settings—Speed Limits

in IVT™-AutoPowr™ Transmission with CommandPRO™ Joystick section of this Operator's Manual.




This tractor is equipped with Large Square Baler Ride Control.

RXA0176726—UN—07APR20

Ride Control

Ride Control — displays to indicate that the machine is equipped with Large Square Baler (LSB) Ride Control. For more information on LSB Ride Control, see Large Square Baler (LSB) Ride Control in Drivetrain section of this Operator's Manual.

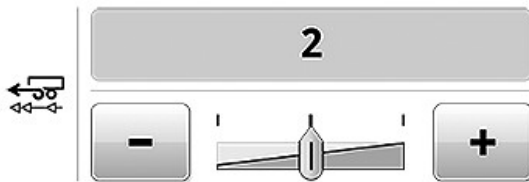

RXA0178631—UN—10JUL20

Implement Traction Assist Aggressiveness


Implement Traction Assist Aggressiveness — select (+) to increase or (-) to decrease the aggressiveness.

NOTE: EVT only.

KD34109,00004AB-19-07SEP21


Warm-Up Transmission-Hydraulic System

IMPORTANT: Avoid machine damage. Do not operate tractor under load until transmission-hydraulic system has warmed up. Tractor-hydraulic warm-up procedure is recommended when temperature is at or below -5°C (23°F).

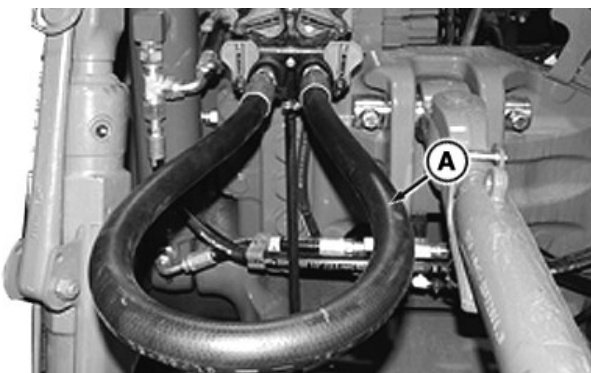

RXA0180455—UN—17NOV20


Jumper Hose Install to SCV Coupler [Ag]

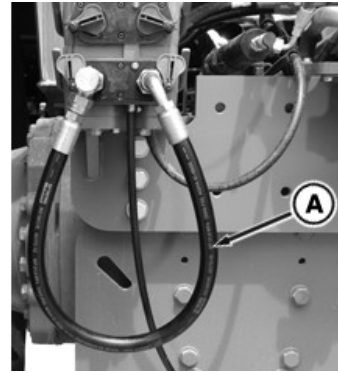

RXA0180455—UN—17NOV20


Jumper Hose Install to SCV Coupler [Scraper]

1. Install jumper hose (A) into SCV I couplers.
2. Place transmission lever in PARK position.
3. Turn key switch to start position.
4. Press SCV shortcut button on navigation bar.
5. Select SCV I module.
6. Set detent Time to C (continuous). See SCV Settings—Time in Selective Control Valves section of this Operator's Manual.
7. Set detent Flow to 8.00 or above. See SCV Settings—Flow in Selective Control Valves section of this Operator's Manual.
8. Select SCV II module and repeat steps 6 and 7.

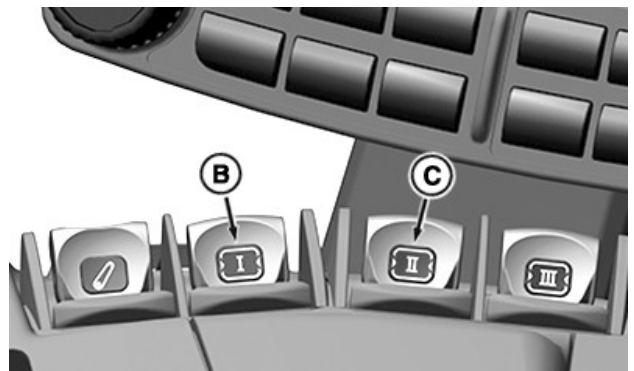

RXA0166860—UN—06MAR19

 
9. Pull SCV I (B) and SCV II (C) levers to extend detent. See SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual.
10. Operate engine at 1400 rpm.
11. Monitor Hydraulic Oil Temperature until it reaches 38°C (100°F).



RXA0126813—UN—12JUN12

- a. Select Menu.

- b. Select Applications tab.
- c. Select Machine Monitor icon.

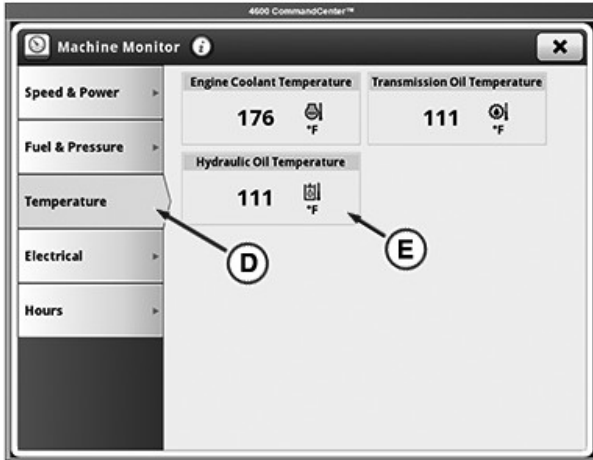

RXA0181012—UN—22JAN21

- d. Select Temperature tab (D).
- e. Select Hydraulic Oil Temperature reading (E).

12. Return SCV levers I and II to neutral position.
13. Disconnect jumper hose and return to normal operation.

KT81203,0000252-19-22JAN21

Backup Alarm

The backup alarm is located on rear of machine. It is standard on scraper machines and is available as a factory or field installed option on agricultural machines. Backup alarm emits an audible sound to alert anyone nearby when key switch is on and machine is in reverse gear. For information on how to enable/disable alarm, see Transmission Advanced Settings in this Operator's Manual section.

Adjust Volume



RXA0171844—UN—31OCT19

Volume can be adjusted using switch (A) on back of alarm.

Volume settings:

- High (left-hand position)
- Low (middle position)
- Medium (right-hand position)

KD34109,000056F-19-25MAR20

e18™ PowerShift™ Transmission

Operate Transmission—e18™

IMPORTANT: Avoid machine damage from overspeed. If overspeed occurs, a diagnostic trouble code (DTC) appears, indicating transmission speed is extremely high and should be reduced. For more information on DTCs, see Troubleshooting—Diagnostic Trouble Codes (DTC) section of this Operator's Manual.

IMPORTANT: Prevent transmission or clutch damage:

- Never depress clutch pedal while tractor is rolling downhill or coasting. Overspeed can cause serious damage to transmission.
- Never attempt to start tractor by towing or pushing.
- Shift lever can be moved to PARK position at any time. However, park brake will not engage until ground speed is below 1.75 km/h (1.0 mph).
- Avoid excessive ballast.
- Avoid continuous operation under full throttle and full load conditions below 1800 rpm.
- Fully depress clutch pedal to completely disengage clutch.

CAUTION: Avoid possible injury from losing control of tractor while operating on a downhill slope. Observe following precautions:

- Select Manual mode on CommandCenter™ Transmission page.
- Adjust Set Speed to safe downhill operating speed.
- Do not make major speed reductions with right-hand reverser.

NOTE: When machine load is causing below idle speed:

- Transmission can default to NEUTRAL for power train protection.
- Park brake engages when wheel speed drops below 1.75 km/h (1.0 mph).
- Diagnostic trouble code displays.

To re-engage transmission, move lever to PARK, reduce load, and shift into desired operating gear.

NOTE: Operator presence sensor prevents initiation of movement with operator out of seat. See Operator Presence Sensor in Seats section of this Operator's Manual.



RXA0171366—UN—10OCT19

Speed Adjustment Wheel

Speed Adjustment Wheel — turn wheel clockwise to increase or counterclockwise to decrease speed.



RXA0171324—UN—10OCT19

Right-Hand Reverser

NOTE: The engine will start with the shift lever in any position. However, the tractor will not move until the lever is moved into and out of NEUTRAL or PARK.

Right-Hand Reverser — lever on CommandARM™ used to shift transmission. For information on shifting, see Shift Transmission—e18™ in this Operator's Manual section.

With right-hand reverser:

- Transmission can be shifted into forward or reverse without use of clutch pedal.
- Clutch pedal is used when selecting forward or reverse for more precise movement (such as connecting implements).
- Gear information displays on corner post display. See Corner Post Display in Corner Post Display section of this Operator's Manual.
- Bump the lever (move and release) to increase (+) or decrease (-) forward and reverse gears.

KD34109,000055F-19-21APR21

Shift Transmission—e18™

IMPORTANT: Avoid damage to park brake. Repeated engagement of park brake while machine is moving may damage the park brake. Shift lever can be moved to PARK position at any time. However, park brake will not engage until ground speed is below 1.75 km/h (1.0 mph).

Command Gears:

NOTE: Optimum engine speed is 1800—2200 rpm in full load conditions. Using higher gear and lower engine speed for light load operation saves fuel and reduces wear.

Each time transmission is placed in forward or reverse, transmission starts in commanded gear when clutch pedal is released. Commanded gear displays on corner post display. Commanded gear temporarily changes to the last gear used when shuttling between forward and reverse or shifting from gear to NEUTRAL.

Startup commanded gear defaults are 7F and 2R. To change startup gears, see Transmission Advanced Settings in Transmission—General Information section of this Operator's Manual.

Manually Preselect Gears:

- Forward — depress clutch pedal, put reverser lever in forward position, and bump gear up or down until desired command gear (between F1 and F13) displays.
- Reverse — depress clutch pedal, put reverser lever in reverse position, and bump gear up or down until desired command gear (between R1 and R5) displays.

Cold Weather Starting:

When temperature is -10°C (14°F) or lower, it can take up to 1 minute to release the park brake and shift transmission lever in gear (with operator in the seat). Several shifts between PARK and NEUTRAL can be required to release park brake in extremely cold conditions.

When temperature is above -10°C (14°F), it can take up to 3 seconds to release park brake with operator in seat.

When reverser lever is moved to NEUTRAL, corner post display shows N for 3 seconds. If park brake does not release, N changes back to P. Move reverser lever back to PARK, then back to NEUTRAL until N displays for more than 3 seconds.

Transmission will not shift above F13 until normal operating temperature has been reached. Delayed shift, slow hydraulic operation, hard steering, and limited engine rpm can also be noticeable until operating temperature is obtained.

Transport Shift:

When tractor is in light load condition, transmission can shift faster by rapidly bumping lever until desired transport speed is reached. To reach transport speed quickly from a stop, depress clutch and bump lever to desired gear. When clutch pedal is released, transmission shifts directly to selected gear.

Shuttle Shift (Direction Change):

Move reverser lever between forward and reverse positions to modulate directly to opposite direction of travel without clutching or braking. Shuttle shift occurs between last commanded forward and reverse gears.

Ground Speed Matching:

CAUTION: Avoid possible accident and injury from loss of vehicle control. Never allow machine to coast downhill.

NOTE: Custom and Full AUTO modes only.

If clutch pedal is released while machine is traveling above default startup gear speed, transmission automatically shifts gears to match speed. However, if clutch pedal is released while machine is traveling below default startup gear speed, transmission will stay at startup gear, even if machine stops.

Right-Hand Reverser Positions:

PARK Position

RXA0171316—UN—10OCT19

PARK — park brake is applied when lever is placed in position next to P.



NEUTRAL Position

RXA0171315—UN—10OCT19

NEUTRAL — park brake releases when lever is placed anywhere in right-hand gate.



RXA0171317—UN—10OCT19

Reverse Position

Reverse — machine moves in reverse when placed in gate labeled with an R.



RXA0171314—UN—10OCT19

Forward Position

Forward — machine moves forward when placed in gate labeled with an F.

KD34109,0000560-19-16APR21

e18™ Set Speeds and Efficiency Manager™

Efficiency Manager™:

- Controls transmission gearshift and engine speed to maintain desired ground speed (Set Speed).
- Will not shift gears if clutch pedal is partially depressed.
- Selects startup gear and may reduce engine speed if clutch pedal is fully depressed and machine is stationary.
- Selects startup gear speed if clutch pedal is fully depressed and machine is moving below startup gear speed.
- Selects a gear and engine speed to match ground speed if clutch pedal is fully depressed and machine is moving above startup gear speed.
- Selects startup gear when shifting from NEUTRAL or PARK to gear.
- Is always running when in Full AUTO and Custom modes.
- Runs in Manual mode when Set Speed buttons are active.

Engine throttle should be fully forward for maximum rpm:

- To reach Set Speeds.
- In high load applications.

Shift decisions are based on load conditions, throttle command, and operator settings. However, transmission may shift gears if hand throttle or speed control pedal are adjusted.

NOTE: Efficiency Manager™ Set Speeds can be programmed in iTEC™ application. See Intelligent Total Equipment Control (iTEC™) section of this Operator's Manual.



RXA0171325—UN—10OCT19

Set Speed 1 Button

Set Speed 1 Button — select to activate Set Speed one. Select again to disengage.



RXA0171326—UN—10OCT19

Set Speed 2 Button

Set Speed 2 Button — select to activate Set Speed two. Select again to disengage.



RXA0171366—UN—10OCT19

Speed Adjustment Wheel

Speed Adjustment Wheel — while Set Speed is active, turn wheel clockwise to increase or counterclockwise to decrease setting.

In Full AUTO and Custom Modes:

- It is recommended that the hand throttle is placed in full forward position at all times.
- On corner post display, Set Speed value and automatic shifting indicator always display. However, Set Speed number displays only when Set Speed is active. See Corner Post Display in Corner Post Display section of this Operator's Manual.
- Bumping right-hand reverser increases Set Speed value. However, Set Speed disengages, and adjusted speed is not stored.

In Manual Mode:

- On corner post display, automatic shifting indicator and Set Speed information display only when Set Speeds are active. See Corner Post Display in Corner Post Display section of this Operator's Manual.
- Bumping right-hand reverser or drive lever disengages Set Speed.

KD34109,0000615-19-31AUG20

e18™ Transmission Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Transmission

RXA0167077—UN—20MAR19

3. Transmission

Access Application Through Navigation Bar:



Transmission

RXA0167078—UN—20MAR19

Press transmission button on navigation bar below display.

KD34109,0000562-19-21OCT19

e18™ Transmission Settings

Transmission application is used to display transmission information and adjust settings.

NOTE: Some items only display if machine is equipped with the associated option.



Transmission

RXA0171369—UN—17OCT19

Items Accessible on e18™ Transmission Main Page:



Transmission Mode

RXA0171377—UN—14OCT19

Mode — select desired transmission mode. See e18™ Transmission Settings—Mode in this Operator's Manual section.



Custom Settings

RXA0171389—UN—11OCT19

Custom Settings — adjust engine settings for PTO, hitch, and SCV. See e18™ Transmission Settings—Custom in this Operator's Manual section.




ECO


RXA0171378—UN—10OCT19

NOTE: Only available in Custom mode.


Performance — select ECO to enable/disable reduced fuel consumption for light loads. Indicator is illuminated orange when enabled. For ECO button information, see CommandARM™ Controls—Left Side in CommandARM™ Controls section of this Operator's Manual.

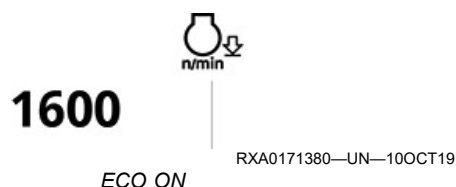


ECO ON — adjust Minimum Engine Speed setting when ECO is enabled. See e18™ Transmission Settings—ECO in this Operator's Manual section.

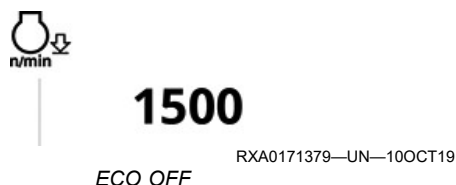

ECO OFF — adjust Minimum Engine Speed setting when ECO is disabled. See e18™ Transmission Settings—ECO in this Operator's Manual section.

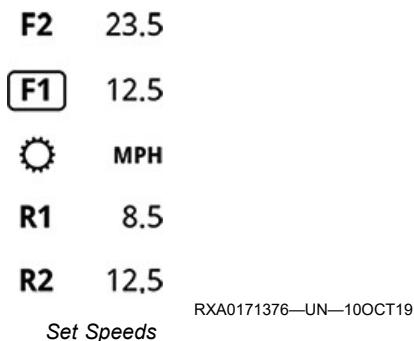

 Set Speeds — displays current forward and reverse Set Speeds. A box displays around active Set Speed. See e18™ Set Speeds and Efficiency Manager™ in this Operator's Manual section.




Forward Max Speed — adjust setting for maximum speed in forward gear. See e18™ Transmission Settings—Max Speeds in this Operator's Manual section.



Reverse Max Speed — adjust setting for maximum speed in reverse gear. See e18™ Transmission Settings—Max Speeds in this Operator's Manual section.



Forward Start Gear — toggle between selected forward start gears 1 or 2. Gears are selected in Advanced Settings.

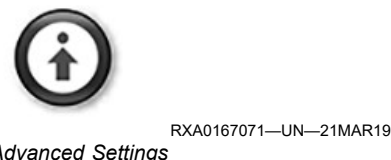


Advanced Settings — access further adjustments and less common settings. See Transmission Advanced Settings in Transmission—General Information section of this Operator's Manual.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the Generation 4 Display operator's manual.

Example:

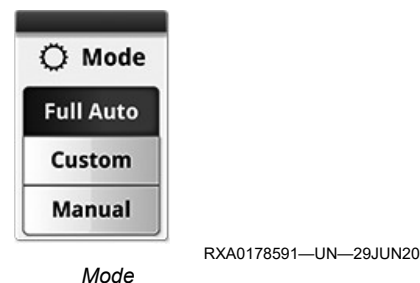

NOTE: Different modules may be available for your application.

Mode — quick access to adjust the Transmission Mode.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the Generation 4 Display operator's manual.

Example:



NOTE: Different shortcut keys may be available for your application.

Backup Alarm — quick access to enable/disable the Backup Alarm.

KD34109,0000616-19-16APR21

e18™ Transmission Settings—Mode



RXA0171357—UN—10OCT19

Full AUTO Mode

Full AUTO — adjusts Minimum Engine Speed automatically to maximize fuel economy under light loads. Load Anticipation responds to operation of rear hitch, SCVs, and PTOs. Engine speed Droop is maintained at maximum tractor power.



RXA0171356—UN—10OCT19

Custom Mode

Custom — customize settings for engine speed Droop, Minimum Engine Speed, and Load Anticipation reaction. See e18™ Transmission Settings—Custom in this Operator's Manual section.



RXA0171358—UN—10OCT19

Manual Mode

Manual — all fuel economy and load control functions are manual.

KD34109,0000564-19-13NOV19

e18™ Transmission Settings—Custom

Custom Settings are only available when transmission mode is set to Custom. See e18™ Transmission Settings—Mode in this Operator's Manual section. Settings allow for increased efficiency depending on current operation.

NOTE: Some items only display if machine is equipped with the associated option.

Procedure to modify:



RXA0167122—UN—25MAR19
PTO On



RXA0167123—UN—25MAR19
PTO Off

Droop — percentage of maximum engine rpm change before transmission shifts down. See e18™

Transmission Settings—Droop in this Operator's Manual section.



PTO ON/OFF

RXA0167125—UN—21MAR19

Load Anticipation (PTO) — when enabled and PTO is in use, engine speed increases to obtain the desired PTO speed. Select ON to enable or OFF to disable.



Hitch ON/OFF

RXA0167126—UN—21MAR19

Load Anticipation (Hitch) — when enabled and hitch is lowered, engine speed increases as needed to reduce ground speed fluctuations. Select ON to enable or OFF to disable.



SCV ON/OFF

RXA0167127—UN—21MAR19

Load Anticipation (SCV) — when enabled, engages if flow rate is 25% or greater and/or SCV is set to continuous time detent. Engine speed increases as needed to reduce ground speed fluctuations or to provide desired hydraulic flow. Select ON to enable or OFF to disable.



Close

RXA0167129—UN—25MAR19

Select to close.

KD34109,0000565-19-18FEB20

e18™ Transmission Settings—Droop

Adjust percentage of engine rpm drop before transmission downshifts. Lower percentage causes transmission downshifts earlier and to shift more. Higher percentage causes transmission downshifts later and to shift less.

NOTE: PTO On adjustments do not affect transmission operation for machines without PTO.

PTO On — use when operating PTO driven equipment to maintain a consistent rpm. Selection results in reduced rpm change before a transmission downshift.

PTO Off — use for implements that do not require a

consistent rpm range, such as pulling ground engaging equipment.

Procedure to Modify:

1. Select desired setting icon:



PTO On

RXA0167122—UN—25MAR19

- a. PTO On



PTO Off

RXA0167123—UN—25MAR19

- b. PTO Off



Increase/Decrease Value

RXA0167165—UN—21MAR19

2. Select (+) to increase or (-) to decrease value.



Close

RXA0167129—UN—25MAR19

3. Select to close.

KD34109,0000566-19-20NOV19


e18™ Transmission Settings—ECO

ECO ON — adjust Minimum Engine Speed setting when ECO is enabled.

ECO OFF — adjust Minimum Engine Speed setting when ECO is disabled.

Procedure to Modify:

1. Select desired setting:

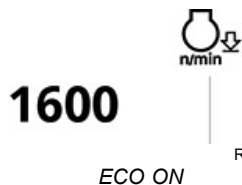

RXA0171380—UN—10OCT19

- a. ECO ON



1500

ECO OFF

RXA0171379—UN—10OCT19

- b. ECO OFF



Increase/Decrease Value

RXA0171328—UN—10OCT19

2. Select (+) to increase or (-) to decrease value.



Close

RXA0167129—UN—25MAR19

3. Select to close.

KD34109,0000567-19-30OCT19

e18™ Transmission Settings—Max Speeds

Adjust settings for maximum speed in forward and reverse gears. Set Speed setting cannot exceed this setting and will automatically adjust accordingly.

Procedure to Modify:

1. Select desired setting icon:



Forward Max Speed

RXA0171384—UN—10OCT19

- a. Forward Max Speed



Reverse Max Speed

RXA0171385—UN—10OCT19

- b. Reverse Max Speed



RXA0171354—UN—10OCT19

Increase/Decrease Value

2. Select (+) to increase or (-) to decrease value.



RXA0167129—UN—25MAR19

Close

3. Select to close.

KD34109,0000568-19-13NOV19

PTO [Ag], Hitch [Ag], and Drawbar

Scraper Tractor Drawbar [Scraper]

Scraper tractors are only equipped with a drawbar. There is no hitch or PTO option for a scraper tractor.

KD34109,0000764-19-20APR18

Attach PTO-Driven Implement [Ag]




TS1644—UN—22AUG95

CAUTION: Entanglement in rotating driveline can cause serious injury or death.

Keep PTO shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning PTO-driven equipment.

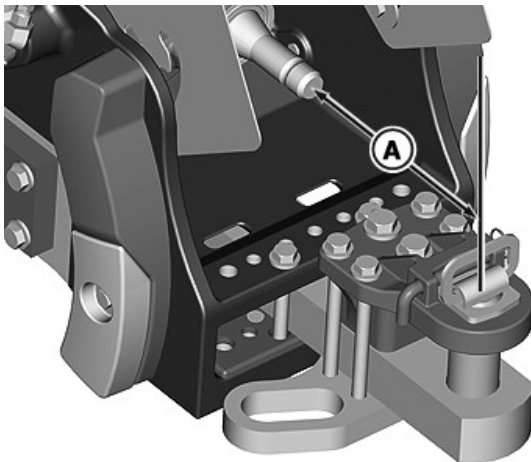

RXA0142225—UN—09JUN14

PTO Shaft	PTO Shaft End to Hitch Pin Hole (A) mm (in)
1000 rpm - 20 Splines ^a	508 (20)

^a45 mm (1-3/4 in) Shaft Diameter

1. Lock drawbar in center position.
2. Remove clevis assembly.

3. Attach implement to drawbar before connecting PTO driveline. If implement will be connected to quick-hitch, be sure drawbar will not interfere.
4. Connect drive line to PTO shaft. Turn shaft slightly by hand to line up splines. Be sure yoke is in correct position and firmly locked.
5. Move PTO shield into position for PTO shaft size being used

GH15097,0000647-19-16JUL18

PTO—General Information [Ag]

PTO Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings



PTO

RXA0167685—UN—30APR19

3. PTO

Access Application Through Navigation Bar:



PTO

RXA0167686—UN—30APR19

Press PTO button on navigation bar below display.

KD34109,00004BE-19-01AUG19

PTO Settings

The PTO application is used to access and adjust PTO settings.

NOTE: Some items only display if machine is equipped with the associated option.



RXA0169840—UN—06AUG19

PTO Example

Items Accessible on PTO Main Page:

0



Front PTO

RXA0167687—UN—30APR19

Front PTO (If Equipped) — view current speed of front PTO. Operate PTO using front PTO lever and correct engine speed. See Operate PTOs in this Operator's Manual section.

0



Rear PTO

RXA0167688—UN—30APR19

Rear PTO — view current speed of rear PTO. Operate PTO using rear PTO lever and correct engine speed. See Operate PTOs in this Operator's Manual section.



ON/OFF

RXA0167628—UN—26APR19

NOTE: To allow override of shutdown when operator is out of seat, toggle displays even if machine is not equipped with external PTO switches.

Remote PTO Toggle — select ON to enable or OFF to disable external PTO switches (if equipped). See External PTO Switches (If Equipped) in this Operator's Manual section.

1000 

Rear PTO Cruise

RXA0167689—UN—30APR19

Rear PTO Cruise Speed — adjust speed of rear PTO at maximum throttle. See PTO Settings—Rear PTO Cruise in this Operator's Manual section.



ON/OFF

RXA0167628—UN—26APR19

Rear PTO Cruise Toggle — select ON to enable or OFF to disable Rear PTO Cruise Speed setting.



Rear PTO Gear Example

RXA0167690—UN—30APR19

IMPORTANT: Incorrect PTO speed could result in severe damage to implement. Before engaging PTO, make sure that selected PTO gear is correct for attached implement.

NOTE: Gears displayed vary by machine.

Rear PTO Gear — select rear PTO gear for current operation.



Advanced Settings

RXA0167071—UN—21MAR19

Advanced Settings — access further adjustments and less common settings. See PTO Settings—Advanced in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the Generation 4 Display operator's manual.

Example:



ON/OFF

RXA0167691—UN—30APR19

NOTE: Different modules may be available for your application.

PTO Remote — quick access to enable/disable external PTO switches.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the Generation 4 Display operator's manual.

Example:



ON

RXA0167692—UN—30APR19

NOTE: Different shortcut keys may be available for your application.

PTO Gear — quick access to enable/disable PTO gear.

KD34109,00004BF-19-15JUN20

PTO Settings—Advanced

Advanced settings allows you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:



Engagement Rate Selection Box

RXA0167700—UN—30APR19


PTO Engagement Rate — select Rear or Front (if equipped) PTO Engagement Rate selection box to adjust rate at which PTO engages. See PTO Settings—Engagement Rate in this Operator's Manual section.

KD34109,00004C1-19-27AUG19

PTO Settings—Engagement Rate

PTO Engagement Rate page allows you to adjust the rate at which the PTO engages.

Procedure to Modify:

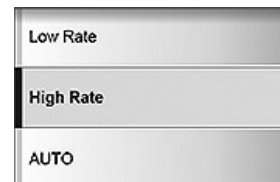

Engagement Rate List

RXA0167693—UN—30APR19

Select best rate for current operation.

- Low Rate is used when gradual PTO start-up is

required or if AUTO engagement is too aggressive or inconsistent.

- High Rate is used for applications where PTO clutch engagement must be aggressive.

IMPORTANT: Avoid power train damage. If operator is experiencing problems with PTO clutch engagement in AUTO setting, change setting to High Rate.

- AUTO is used for most implements and is factory setting in CommandCenter™. This setting provides software logic to determine engagement rate for PTO clutch, based on PTO speed sensor feedback. If PTO does not turn fast enough during initial PTO clutch engagement, engagement rate is automatically increased to avoid clutch slip and PTO shutdown.



OK

RXA0167694—UN—30APR19

Select OK to exit and save changes.



Cancel

RXA0167695—UN—30APR19

Select Cancel to exit without saving changes.

KD34109,00004C0-19-25OCT19

PTO Settings—Rear PTO Cruise

Rear PTO Cruise allows you to adjust speed of rear PTO at maximum throttle. When enabled, engine speed is also limited in relation to PTO speed. If max engine speed is also enabled, lower limit applies.

NOTE: Only available on machines equipped with an electronic shift PTO.

Procedure to Modify:



Adjust Rear PTO Cruise

RXA0167699—UN—30APR19

Select (+) to increase or (-) to decrease setting. Value is shown in display box.



Front PTO Speed

RXA0167687—UN—30APR19

View current front PTO speed (if equipped).



Rear PTO Speed

RXA0167688—UN—30APR19

View current rear PTO speed.



Close

RXA0167129—UN—25MAR19

Select to close.

KD34109,00004C2-19-27AUG19

PTO Settings—Auto Disengage

PTO Auto Disengage allows operator easy access to enable remote PTO switches when leaving the seat. When operator leaves seat, page displays, an audible warning sounds, and service alert indicator on corner post display flashes. If page is ignored, PTO will automatically disengage after 7 seconds.

NOTE: Page does not display if Enable PTO Remote is already turned ON.

Procedure to Modify:



Enable PTO Remote

RXA0167701—UN—30APR19

Select Enable PTO Remote to enable external PTO switches after exiting seat.



RXA0167129—UN—25MAR19


Close

Select close to allow PTO to disengage.

NOTE: 7R and 8R Tractors connected to an implement: If the PTO is disengaged and the operator is out of the seat for an additional 3 seconds, the engine will shut down.

KD34109,00004C3-19-19APR21


Operating Instructions

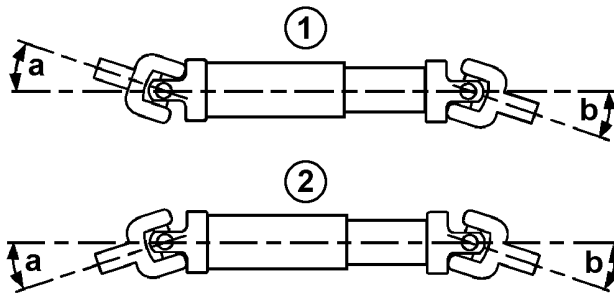

LX1049749

LX1049749—UN—21MAY10

Articulation on drive shaft

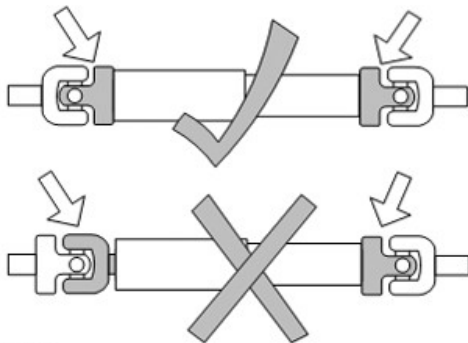

LX1049900

LX1049900—UN—22FEB11

Align forks correctly

1—Z-shaped layout
2—W-shaped layout

Angles (a) and (b) at universal joints should be equal at both ends of drive shaft.

In applications where this does not occur (e.g. sharp turns with PTO engaged), it is recommended to use a continuous-velocity drive shaft.

NOTE: Two schematic drawings do not show any guards on drive shaft. A guard is mandatory when using drive shafts.

IMPORTANT: Only operating conditions described in operator's manuals of various implements are permitted. This applies to maximum permissible angle of articulation, to use of freewheel clutches and overload clutches, and to prescribed amount of overlap when shaped pipes are pushed together.

IMPORTANT: Before using a PTO-driven implement, take action to ensure that drive shaft is lubricated regularly. Comply with instructions in operator's manual provided by manufacturer.

IMPORTANT: On multi-component, telescopic drive shafts, yokes at each end must be aligned as shown. Yokes at each end must NOT be at 90° to one another (see arrows in illustration on right-hand side).

KT81203,0000842-19-20MAR17

Operate PTOs

PTOs are engaged using CommandARM™ PTO control levers. See CommandARM™ PTO Control Lever in CommandARM™ Controls section of this Operator's Manual. Once engaged for use with the machine in motion, use the correct engine speed listed in Select Correct Engine Speed in this Operator's Manual section.

CAUTION: Avoid personal injury. Stop engine and PTO driveline before adjustment or connections are made, or before cleaning PTO-driven equipment. Always disengage PTO when not in use.

IMPORTANT: Avoid PTO clutch damage. If operating PTO with excessive load, PTO automatically disengages. Wait 15 seconds before attempting to re-engage. If a problem occurs during re-engagement, try decreasing PTO speed.

If PTO disengages during start-up in cold-weather operation, wait 5 minutes before re-engaging.

NOTE: Rear PTO automatically disengages if:

- PTO speed is less than 100 rpm for more than 1 second.
- Engine speed drops below 500 rpm to prevent engine from stalling.

Front PTO (if equipped) automatically disengages if:


- 7R and 8R Tractors: Clutch slip is greater than 40% for more than 1 second.

- *8R Tractors: Clutch slip is greater than 10% for more than 45 seconds.*
- *7R and 8R Tractors: Engine speed drops below 500 rpm to prevent engine from stalling.*

For information on corner post display indicators, see Corner Post Display in Corner Post Display section of this Operator's Manual.

NOTE: *If the engine is stopped while the PTO is running, the PTO will not operate when the engine is restarted. The lever must be re-engaged to operate the PTO.*

Lever Adjustments:

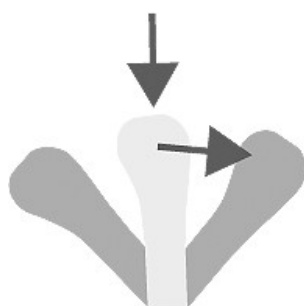

Engage PTO

RXA0167697—UN—30APR19

Push lever down and forward to engage PTO. Lever will return to center.



Disengage PTO

RXA0167696—UN—30APR19

Pull lever back to disengage PTO. Lever will return to center.

Outside of Cab Operation :

To operate the PTO outside of the cab using external PTO switches (if equipped), wheel/track speed must be less than 0.5 km/h (0.3 mph). See External PTO Switches in this Operator's Manual section. If the operator leaves the seat for 7 seconds or more and Remote PTO is disabled, the PTO Auto Disengage page displays. See PTO Settings—Auto Disengage in this Operator's Manual section.

KD34109,00004C4-19-09NOV20

External PTO Switches

External PTO switches (if equipped) allow you to operate PTOs from outside the cab. Front PTO external

switches are on the front of the machine. Rear PTO external switches are on the rear of the machine.

Procedure to Modify:



ON/OFF

RXA0167628—UN—26APR19

1. Select ON to enable remote PTO switches on PTO main page (an audible warning sounds and hazard warning lights flash).



Remote PTO Switch

RXA0167698—UN—30APR19

2. Press and hold remote PTO switch. PTO starts slowly.

NOTE: *If equipped with front and rear PTO and only one PTO is started with the remote PTO switch, hazard warning sound/lights continue. Enabling external PTO switches enables both front and rear PTO and the system recognizes that one of the PTOs has not started.*

- If held for at least 4 seconds, hazard warning sound/lights turn off and PTO continues to operate.
- If released within 4 seconds, PTO slowly stops and hazard warning sound/lights continue.

To turn off PTO, press remote PTO switch (an audible warning sounds and hazard warning lights flash) or pull back PTO control lever inside cab.

To return PTO control lever back to normal function, disable remote PTO.

KD34109,00004C5-19-25MAY21

Select Correct Engine Speed


Speed rpm	PTO		Engine Speed ^a rpm
	Shaft Diameter mm (in)	Spline	
1000	45 (1-3/4)	20	1895

^aTachometer displays current engine speed. See Corner Post Display in Corner Post Display section of this Operator's Manual.

KD34109,00005EA-19-20APR20


Rear PTO [Ag]

Use PTO Master Shield (If Equipped)

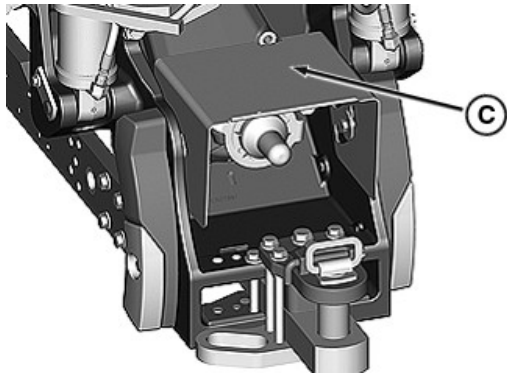


RXA0142441—UN—11JUN14
PTO Master Shield (Standard Position)

CAUTION: Avoid possible injury. Tractor master shield should be in place at all times except for special applications as directed in the implement operator's manual. Do not use shield as a step.

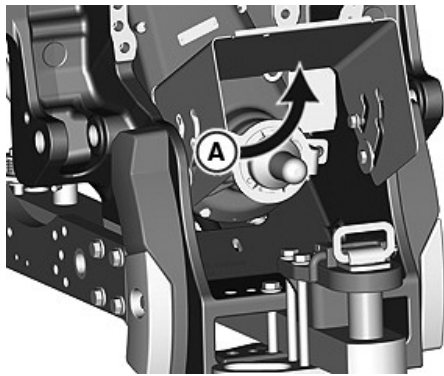

RXA0142439—UN—11JUN14

Master shield can be tipped up in raised position (A) to provide clearance while connecting PTO shaft. **DO NOT** operate PTO with shield in raised position.

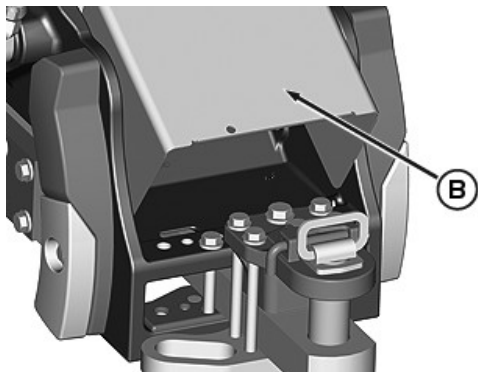

RXA0142440—UN—11JUN14

Master shield can be lowered (B) to improve drawbar visibility, when drawbar is being used without PTO.

GH15097,0000648-19-06SEP17

Rear Hitch [Ag]

Hitch Lift Capacities

IMPORTANT: Avoid equipment damage. Never exceed axle load capacities.

Rear Hitch Sustained Lift Capacity ^a kg (lb)				
Model		9RX		
		490	540	590
Hitch Category	4N/4	Optional		
Lift Cylinder Diameter mm	100	6804 (15000)		
	110	9072 (20000)		

^a610 mm (24 in) behind the coupling points.

KT81203,0000840-19-24AUG21

Rear Hitch Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Rear Hitch

RXA0169204—UN—26JUN19

3. Rear Hitch

Access Application Through Navigation Bar:



Rear Hitch

RXA0169205—UN—26JUN19


Press rear hitch button on navigation bar below display.

KD34109,00004EE-19-27AUG19

Rear Hitch Settings

Rear Hitch application is used to access and adjust rear hitch settings.


NOTE: Some items only display if machine is equipped with the associated option.

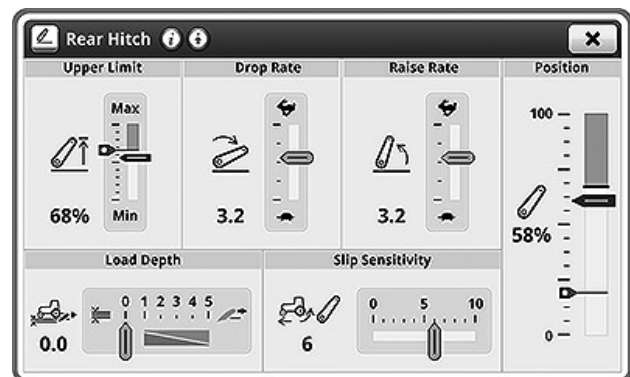

RXA0169346—UN—27JUN19

Rear Hitch Example


Items Accessible on Rear Hitch Main Page:

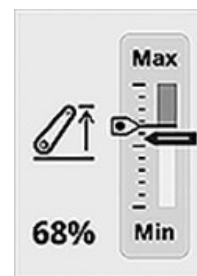

Upper Limit

RXA0169206—UN—25JUN19

Upper Limit — upper set point that cannot be exceeded unless using external switches. See Rear Hitch Settings—Upper Limit in this Operator's Manual section.

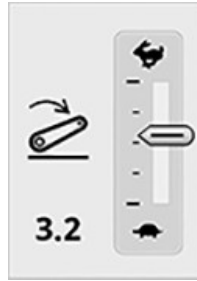

RXA0169207—UN—25JUN19

Drop Rate

Drop Rate — speed at which the rear hitch is lowered. See Rear Hitch Settings—Drop Rate in this Operator's Manual section.



RXA0169208—UN—25JUN19

Raise Rate

Raise Rate — speed at which the rear hitch is raised. See Rear Hitch Settings—Raise Rate in this Operator's Manual section.



RXA0169209—UN—26JUN19

Load Depth

Load Depth — sensitivity to changing terrain or soil conditions. See Rear Hitch Settings—Load Depth in this Operator's Manual section.




RXA0169210—UN—26JUN19

Slip Sensitivity

NOTE: Only available if equipped with radar and Load Depth is set to draft control mode.

Slip Sensitivity — how much the hitch reacts to wheel slip. See Rear Hitch Settings—Slip Sensitivity in this Operator's Manual section.

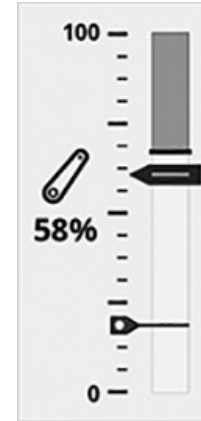

RXA0169211—UN—25JUN19

Position

Position — displays information for current rear hitch settings. See Rear Hitch Settings—Position in this Operator's Manual section. For hitch position adjustments, see Hitch Control Lever Adjustments in this Operator's Manual section.



RXA0167071—UN—21MAR19


Advanced Settings

Advanced Settings — access further adjustments and less common settings. See Rear Hitch Settings—Advanced in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the Generation 4 Display operator's manual.

Example:

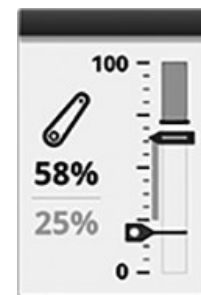

RXA0169212—UN—25JUN19

Position

NOTE: Different modules may be available for your application.

Position — quick access to position module.

KD34109,00004EF-19-15JUN20

Rear Hitch Settings—Upper Limit

Upper Limit page allows you to adjust Upper Limit setting and view current hitch settings. Rear hitch will only move above Upper Limit setting using external switches.

NOTE: Fully down position is 0% and fully raised position is 100%.

Procedure to Modify:



RXA0169139—UN—25JUN19

Adjust Upper Limit

Select (+) to increase or (-) to decrease Upper Limit set point. Value is shown in display box.



RXA0169140—UN—25JUN19

Position Indicator

Indicates current position of rear hitch on slider.



RXA0169141—UN—25JUN19

Upper Limit Indicator

Indicates position of Upper Limit on slider.



RXA0167129—UN—25MAR19

Close

Select to close.

Alternative Method to Modify:

Upper Limit Hitch Dial (If Equipped) — dial on CommandARM™ to adjust Upper Limit setting. A drop-down will display on CommandCenter™ to view adjustment. See CommandARM™ Hitch Controls in CommandARM™ Controls section of this Operator's Manual.

KD34109,00004F0-19-29OCT19

Rear Hitch Settings—Drop Rate

Drop Rate page allows you to adjust the speed at which the rear hitch is dropped and view current hitch settings.

CAUTION: Avoid injury or machine damage. Do not lower implement too quickly. Fully lowering implement should take at least 2 seconds.

Procedure to Modify:



RXA0169142—UN—25JUN19

Adjust Drop Rate

Select (+) to increase or (-) to decrease Drop Rate. Value is shown in display box.



RXA0169143—UN—25JUN19

Drop Rate Indicator

Indicates setting on slider.



RXA0167129—UN—25MAR19

Close

Select to close.

Alternative Method to Modify:

Drop Rate Hitch Dial (If Equipped) — dial on CommandARM™ to adjust Drop Rate setting. A drop-down will display on CommandCenter™ to view adjustment. See CommandARM™ Hitch Controls in CommandARM™ Controls section of this Operator's Manual.

KD34109,00004F1-19-29OCT19

Rear Hitch Settings—Raise Rate

Raise Rate page allows you to adjust the speed at which the rear hitch is raised and view current hitch settings.

Procedure to Modify:



Adjust Raise Rate

RXA0169142—UN—25JUN19

Select (+) to increase or (-) to decrease Raise Rate. Value is shown in display box.



Raise Rate Indicator

RXA0169143—UN—25JUN19

Indicates setting on slider.



Close

RXA0167129—UN—25MAR19

Select to close.

KD34109,00004F2-19-29OCT19

Rear Hitch Settings—Load Depth

Load Depth control (draft response) allows control of movement of hitch while working. The higher the value, the larger the range of movement (more draft response). The lower the value, the smaller the range of movement (less draft response). Correct adjustment provides better control of implement depth and operating efficiency.

Procedure to Modify:



Adjust Load Depth

RXA0169213—UN—26JUN19

Select (+) to increase or (-) to decrease Load Depth setting. Value is shown in display box.

- For position control only, set Load Depth to 0.0. See Rear Hitch Settings—Position Control in this Operator's Manual section.
- Higher settings are used for draft control. See Rear Hitch Settings—Draft Control in this Operator's Manual section.



Load Depth Indicator

RXA0169214—UN—26JUN19

Indicates setting on slider.



Close

RXA0167129—UN—25MAR19

Select to close.

Alternative Method to Modify:

Load Depth Hitch Dial (If Equipped) — dial on CommandARM™ to adjust Load Depth setting. A drop-down will display on CommandCenter™ to view adjustment. See CommandARM™ Hitch Controls in CommandARM™ Controls section of this Operator's Manual.

KD34109,00004F3-19-29OCT19

Rear Hitch Settings—Slip Sensitivity

Slip Sensitivity page allows you to adjust how much the hitch reacts to wheel slip. The higher the setting, the more the hitch reacts. Slip Sensitivity setting only adjusts hitch up and takes priority over draft control setting, which adjusts hitch down. See Rear Hitch Settings—Draft Control in this Operator's Manual section. After wheel slip goes below slip setting, hitch will resume normal draft control. Appropriate setting depends on implement type, soil conditions, and tractor setup.

NOTE: Only available if equipped with radar and Load Depth is set to draft control mode.

Procedure to Modify:



Adjust Slip Sensitivity

RXA0169215—UN—26JUN19

Select (+) to increase or (-) to decrease setting. Value is shown in display box.



Slip Sensitivity Indicator

RXA0169214—UN—26JUN19

Indicates setting on slider.



Close

RXA0167129—UN—25MAR19


Select to close.

KD34109,00004F4-19-29OCT19

Rear Hitch Settings—Position

Position allows you to view current rear hitch information.


Items Accessible on Position Module:

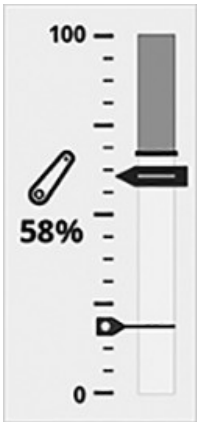

Position

RXA0169211—UN—25JUN19

Position Example — items may change based on status.

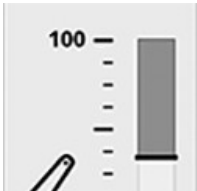

Upper Limit Setting

RXA0169222—UN—25JUN19

Upper Limit Setting — line indicates position of upper limit. Shaded area at the top indicates amount out of range (above upper limit).



Hitch Depth Indicator

RXA0169223—UN—26JUN19

Hitch Depth Indicator — indicates stored operating depth. See Hitch Depth Set Point in this Operator's Manual section.




Position Indicator

RXA0169140—UN—25JUN19

Position Indicator — indicates current position of rear hitch on slider. Use hitch control lever or adjustment dial to adjust hitch position. See Hitch Control Lever Adjustments in this Operator's Manual section.


Rear Hitch Position Statuses:

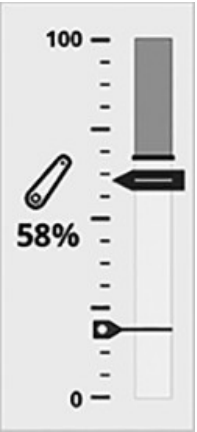

At Rest

RXA0169224—UN—25JUN19

Hitch at rest.

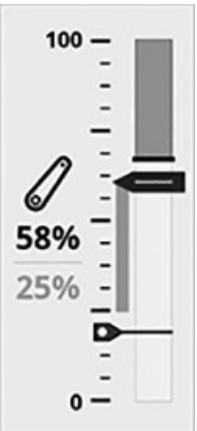

Commanded to Position

RXA0169225—UN—25JUN19

Hitch commanded to 25% position. Green value is commanded position and green line indicates distance between current hitch position and commanded position.



Float

RXA0169226—UN—25JUN19

Hitch set to float position. Icon displays above current hitch position value.



Float Unavailable

RXA0169227—UN—25JUN19

Float unavailable. Icon displays above current hitch position value.



Locked

RXA0169149—UN—25JUN19

Hitch locked. Icon displays below current hitch position value. See CommandARM™ Hitch Controls in CommandARM™ Controls section of this Operator's Manual.



Lock Damping

RXA0169228—UN—25JUN19

Lock damping enabled. Icon displays below current hitch position value.



Return to Lower Set Point Unavailable

RXA0169229—UN—25JUN19

Return to lower set point unavailable. Icon displays below current hitch position value.




Fast Lower

RXA0169230—UN—25JUN19

Hitch set to fast lower. Icon displays below current hitch position value.

KD34109,00004F6-19-29OCT19

Rear Hitch Settings—Position Control

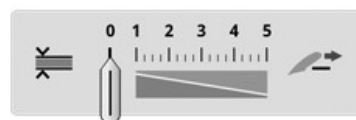

RXA0163992—UN—18JUL18

Use position control to operate non-ground engaging implements and implements that fully rest on gauge wheels to control depth. Set Load Depth to 0 for position control.

KD34109,00004F7-19-29OCT19

Rear Hitch Settings—Draft Control

Draft control helps to maintain operating depth of non-floating tillage equipment in rolling terrain. Draft control also helps if tractor altitude/pitch and rear wheel sinkage force implement deeper than desired. Higher Load Depth values respond better to rolling terrain but are more sensitive to soil density variation. Lower values stay more consistent with field soil changes but are less responsive to hills. Ideal setting depends on implement type and field conditions.

While in draft control mode, hitch can move above and below setting based on soil type and/or terrain. If setting is causing implement to go lower than desired, set to 1 and increase Slip Sensitivity.



Control or change operating depth by pressing resume button or performing lower detent with control lever. See CommandARM™ Hitch Controls in CommandARM™ Controls section of this Operator's Manual.

Examples of Load Depth Settings:





RXA0163993—UN—18JUL18

 If soil varies, high value causes more depth variation.

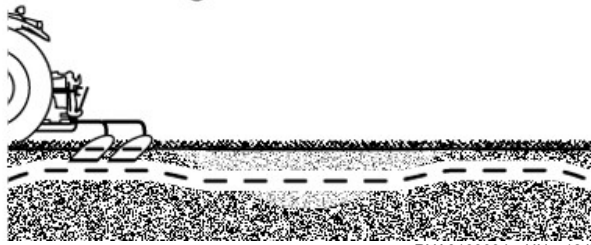



RXA0163994—UN—18JUL18

 If soil varies, middle value causes less depth variation.

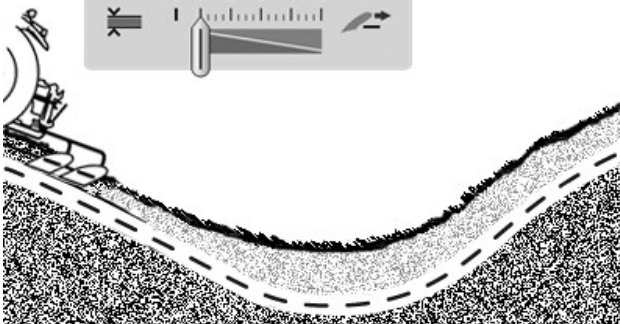

RXA0163995—UN—18JUL18

 In rolling terrain, low value causes more depth variation.

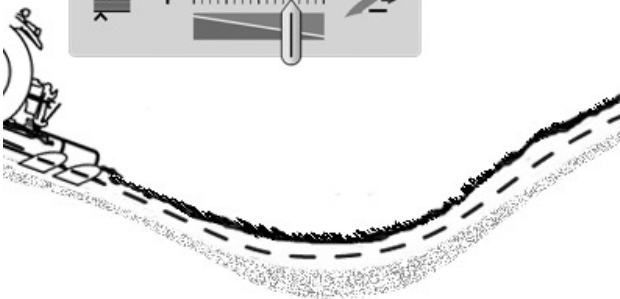

RXA0163996—UN—18JUL18


In rolling terrain, high value causes less depth variation.

KD34109,00004F8-19-29OCT19

Hitch Control Lever Adjustments

Hitch control levers on the CommandARM™ allow you to adjust the hitch position. Levers will not raise hitch above upper limit.


Hitch Control Lever Adjustments:

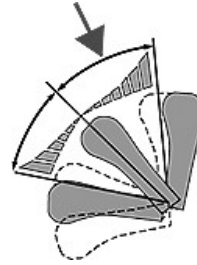

RXA0169216—UN—26JUN19

Raise Proportionally


Raise Proportionally — moving lever within this range will raise hitch. Rate of movement depends on how far lever is from center position.

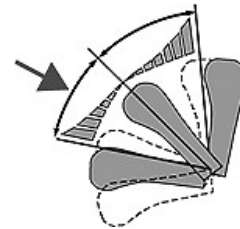

RXA0169217—UN—26JUN19

Lower Proportionally


Lower Proportionally — moving lever within this range will lower hitch. Rate of movement depends on how far lever is from center position.

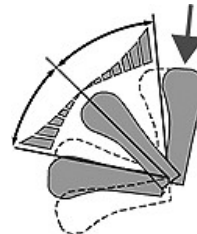

RXA0169218—UN—26JUN19

Raise Detent

Raise Detent — moving lever to this position and releasing will raise hitch to Upper Limit set point.

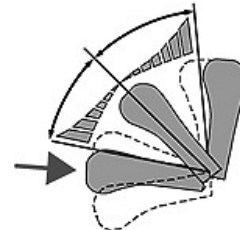


RXA0169219—UN—26JUN19

Lower Detent

NOTE: If machine is moving during this operation, hitch will also raise to lower set point.

Lower Detent — moving lever to this position and releasing will lower hitch to hitch depth set point. See Hitch Depth Set Point in this Operator's Manual section.

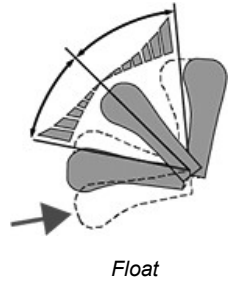

RXA0169220—UN—26JUN19

Float — moving lever to this position allows hitch to move freely and is useful when detaching implement. See Float Operation in this Operator's Manual section.

Alternative Method to Modify:

Hitch Depth Adjust Dial — dial on CommandARM™ to raise and lower hitch. Dial will not raise hitch above Upper Limit. See CommandARM™ Hitch Controls in CommandARM™ Controls section of this Operator's Manual.

KD34109,00004F9-19-29OCT19

Hitch Depth Set Point

Hitch depth set point (lower set point) is a frequently used operating depth that can be set and recalled. Controls used to adjust setting are found on CommandARM™.

Procedure to Modify:

1. Move hitch to desired position using hitch control lever or adjustment dial. See Hitch Control Lever Adjustments in this Operator's Manual section.



RXA0168026—UN—17MAY19

2. Select SET button to store set point.



RXA0168028—UN—17MAY19

NOTE: If hitch is below set point, resume will only engage if the tractor is moving.

3. Select resume button when wanting to return to set point position. Lower detent on control lever can also be used to recall set point.

KD34109,00004FA-19-27AUG19

Float Operation

Implements that fully rest on the depth gauge wheels for depth control require the hitch to float and follow the ground contour.


Put the hitch control lever in the float position. For more information on the hitch control lever, see CommandARM™ Hitch Controls in the CommandARM™ Controls section of this Operator's Manual. Lift links can be adjusted for the lateral float. See Adjust Lateral Float in this Operator's Manual section.

Forced Float

When the hitch is commanded to the lower set point but is unable to reach it, the hitch enters forced float mode. While in this mode, the hitch acts as though the control lever is in the float position. If the hitch reaches the lower set point while in forced float mode, the hitch returns to the mode that the lever is set to.

TS36762,00001DB-19-28JUN21

Rear Hitch Components

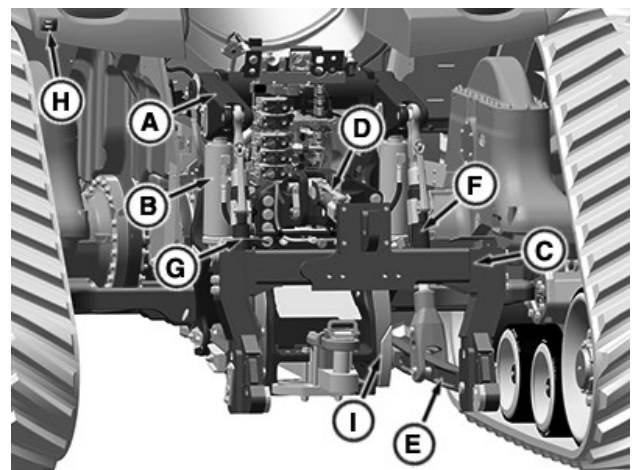

RXA0184123—UN—16JUN21


- A—Lift Arm
- B—Lift Cylinder
- C—Quick-Hitch
- D—Center Link
- E—Draft Link
- F—Lift Link
- G—Quick-Hitch Handle
- H—External Hitch Switches (if equipped)
- I—Sway Block (if equipped)

All the components except the center link and the quick-hitch are on the left-hand and the right-hand sides.

GH15097,0000927-19-13JUL21

External Hitch Switches

CAUTION: Prevent injury or tractor damage. Be sure that the transmission is in the **PARK** position before using the remote raise and lower switches. Stay clear of interference points when using the remote raise and lower switches.

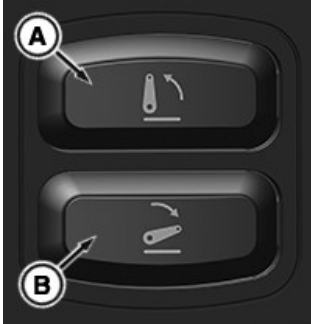

RXA0183164—UN—12MAY21

NOTE: The hitch control lever cannot be used simultaneously with the remote raise and lower switches.

External hitch switches (if equipped) allow hitch operation from outside the cab. Front external hitch switches are on the front of the machine. Rear external hitch switches are on the rear of the machine. Press and hold the remote switches to raise (A) or lower (B) the hitch. The hitch initially moves at slow speed when using the remote switches. However, the longer the switch is pressed the faster the hitch moves.


GH15097,00007EA-19-25JUN21

Hitch Manual Lowering

CAUTION: Avoid injury or death. Do not disconnect any hitch sensors, solenoids, or connectors from the hitch control valve while the engine is operating or the key switch is **ON**. Unexpected hitch movement may occur. Stay clear of the hitch area when starting the engine or manually lowering the hitch.

NOTE: The hitch cannot be raised manually. Both hydraulic and electrical power are required to raise the hitch.

Hitch manual lowering is possible when hydraulic pressure and/or electrical power is not available.

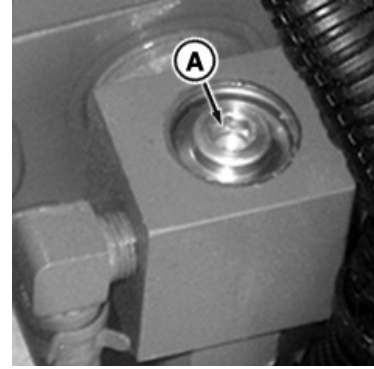


RXA0184070—UN—14JUN21

1. Remove the plug to access the manual lowering valve (A).
2. Turn the valve counterclockwise slowly to lower the hitch until the desired rate of drop is achieved.
3. Turn the valve clockwise and install the plug after the hitch has been lowered.

BH38674,0000BE4-19-28JUN21

Adjust Sway Blocks

IMPORTANT: Avoid equipment damage. Prevent interference of the draft links with the tracks. Be sure that the distance between the tracks is at least 1168 mm (46 in) with equal distance from the middle of the tractor. If the distance between the tracks must be less than 1168 mm (46 in), the sway is limited.

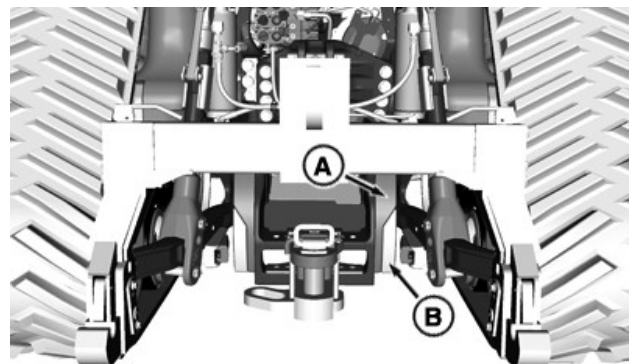

RXA0147843—UN—29APR15


1. Install the sway blocks (B) with the thick end toward the frame to minimize the side sway of the hitch.
2. Tighten the attaching bolts to 230 N·m (170 lb·ft).
3. Move each sway block to the opposite side of the tractor to allow sway when the hitch is lowered.
4. Install the sway blocks with the tapered sides (A) outward from the frame.

GH15097,0000928-19-13JUL21

Attach Implement to Quick-Hitch

CAUTION: Avoid injury or machine damage:

- Put the transmission in the **PARK** position and check the full range of the hitch motion for interference, binding, and PTO separation whenever an implement is attached.
- Make sure that the implement is correctly attached. Incorrect attachment can allow the implement to be pulled over the tractor wheel and onto the operator station.
- Do not stand between the tractor and implement.

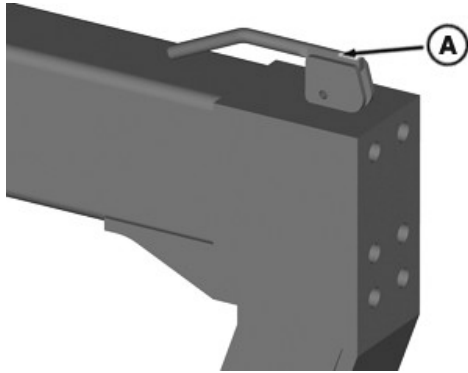

RXA0184116—UN—14JUN21


1. Pull up on the coupler latch handles (A).
2. Extend the hitch control lever until the quick-hitch hooks are lower than the implement hitch pins. For more information on the hitch control lever, see CommandARM™ Hitch Controls in the CommandARM™ Controls section of this Operator's Manual.
3. Back up the tractor to the implement.
4. Raise the hitch enough to engage the implement pins into the hooks.
5. Push the coupler latch handles down to lock the implement to the quick-hitch.
6. Connect the hydraulic hoses and the electrical connections.

IMPORTANT: Check for implement interference. Drawbar removal may be necessary.

7. Slowly retract the hitch control lever to raise the implement. Lower the implement to ground and adjust the upper height limit control if necessary.

TO84419,000011A-19-09SEP21

Detach Implement from Quick-Hitch

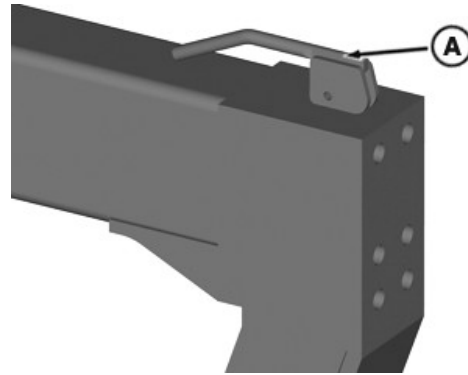


RXA0184116—UN—14JUN21

1. Raise both latch handles (A) with the implement raised.
2. Disconnect the hydraulic hoses and the electrical connections.
3. Lower the implement to the ground. Continue lowering the quick-hitch until the hook clears the implement hitch pins.
4. Carefully drive the tractor away from the implement.

TO84419,000011B-19-09SEP21

Adjust Implement Level

1. Adjust the center link to level the implement front-to-rear:

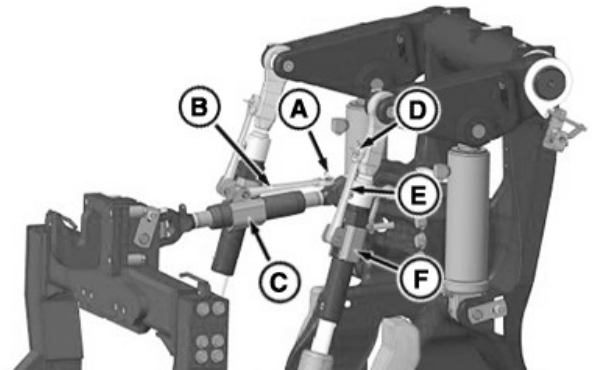


RXA0180511—UN—24NOV20

- a. Remove the lock ring (A).
- b. Disengage the adjustment handle (B).
- c. Slide the adjustment sleeve over the adjustment lock and use the handle to rotate the body of the center link (C) to adjust the length of the center link.
- d. Measure between the centers of attaching pins. The adjustment range is 726.0—881.0 mm (28.6—34.7 in).
- e. Engage the adjustment handle to lock it down.
- f. Install the lock ring to hold the center link in position.

2. Adjust the left-hand and right-hand lift links to level the implement side-to-side:
 - a. Remove the lock ring (D).
 - b. Disengage the adjustment handle (E).
 - c. Slide the adjustment sleeve over the adjustment lock and use the handle to rotate the body of the lift link (F) to adjust the length of the lift link.
 - d. Measure between the centers of the attaching pins. The adjustment range is 1110.0—1270.0 mm (43.7—50.0 in).
 - e. Engage the adjustment handle to lock it down.
 - f. Install the lock ring to hold the center link in position.

RW29387,000061E-19-17JUN21

Adjust Lateral Float

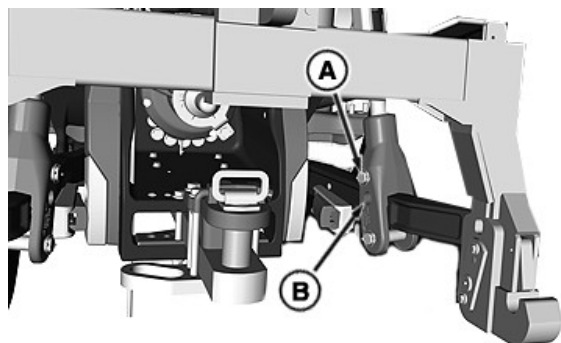

RXA0141373—UN—16JUN14

Place the lateral float pins in the lower holes (B) to hold the implement rigid.

Put the lateral float pins in the upper holes (A) of the draft arms for the float position. The draft links raise slightly as the implement follows the ground surface.

RW29387,000061F-19-09SEP21

Hitch Conversion—Category 4/4N Convertible Quick-Hitch


Quick-hitch is convertible to Category 4 or Category 4N. Use the Category 4 whenever possible, especially for heavy loads. Greater width gives more strength.

NOTE: Your John Deere™ Dealer can supply the parts to adapt the Category 4/4N quick-hitch to the Category 3 implements.

Use the following procedure to convert the quick-hitch:

CAUTION: Avoid injury. Use the proper lifting device when converting the coupler.


1. Support the center of the quick-hitch.

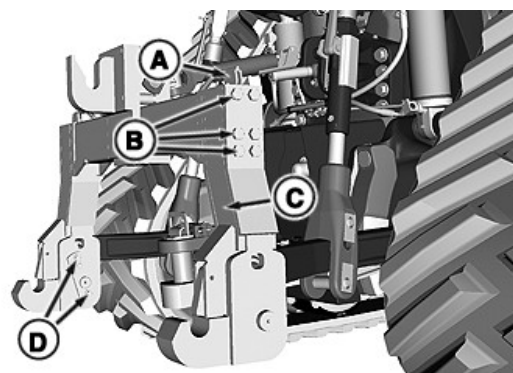

RXA0147956—UN—06MAY15


2. Remove the pin retaining bolts (D) and the pins from the draft link.
3. Remove the side member cap screws (B).
4. Switch the ends with the quick-hitch side members (C) (left-hand member to right-hand end and right-hand member to left-hand end). Tighten the cap screws to 425 N·m (315 lb·ft).

IMPORTANT: The lower coupler hook must be kept under pressure before removing the roll pin, to hold the lock rod in place.

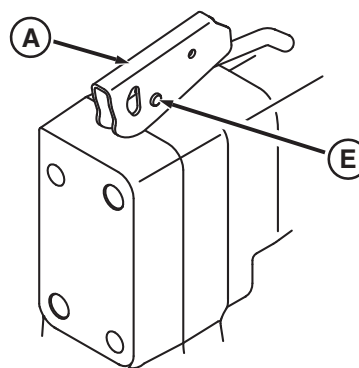

RXA0142591—UN—16JUN14

5. Flip the latch handle around by removing the roll pin (E).
6. Turn the coupler latch handle (A) inward and reinstall the roll pin (E).
7. Flip the handle down in the lock position.

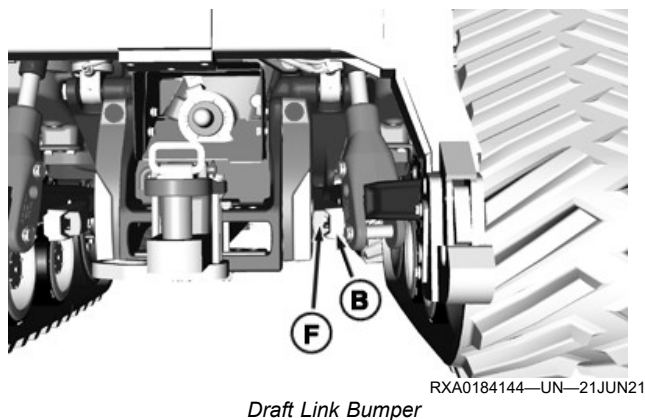

Draft Link Bumper

8. Loosen the draft link bumper retaining the cap screw (F).

NOTE: Position the thick ends (G) forward on the draft links for Category 4 or the thin ends back for Category 4N.

9. Adjust the bumper by sliding on the draft link on the cap screw to the desired clearance position.
10. Tighten the cap screw to 230 N·m (170 lb·ft).
11. Perform the same steps on the opposite side for equal clearance between the sway blocks and the bumpers.
12. Cycle the hitch to ensure that there is no hitch interference.


GH15097,000092D-19-21JUN21

Convert Category 4N/3 Convertible Quick-Hitch Lower Hooks

CAUTION: Avoid injury. Use proper lifting device when converting the coupler. A second person is recommended to align the components during the conversion.

IMPORTANT: If the Category 4N lower hooks are to be used on the Category 3 implements, bushings are needed over the Category 3 pins. Bushings can be purchased through your John Deere dealer.

Lower hooks are not marked for left-hand or right-hand side. Do not move the lower hooks from one side to the other.

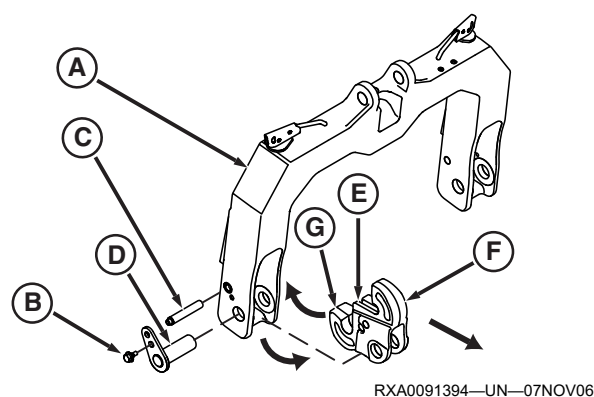

RXA0091394—UN—07NOV06

1. Support the quick-hitch frame (A).
2. Remove the cap screw (B).
3. Remove the retainer (C), then the pin (D).

NOTE: Because the lower hook (E) has a Category 3 hook (F) on one end and a Category 4N hook (G) on the opposite end, it is used for both Category 3 and 4N simply by turning it end for end.


4. Remove the lower hook by rotating it down and to the rear of the coupler, then sliding it out at the front of the coupler.
5. Install the lower hook with the desired end facing rearward. Using a reverse motion of removal, rotate it up and in.
6. Install the pin, retainer, and cap screw. Tighten to 100 N·m (74 lb·ft).

BH38674,0000BEC-19-10SEP21

Convert Category 4N/3 Convertible Quick-Hitch Upper Hook


CAUTION: Avoid injury. Use proper lifting device when converting the coupler. A second person is recommended to align the components during the conversion.

IMPORTANT: It is recommended to use the Category 4 upper hook if the implement setup allows. The Category 3 upper hook may be overloaded with very high draft loads.

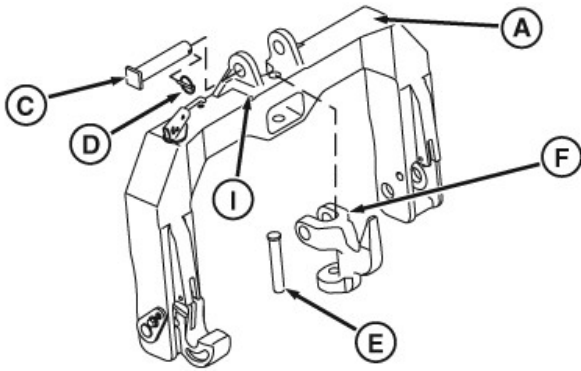


RXA0142708—UN—17JUN14

1. Support the quick-hitch frame (A).

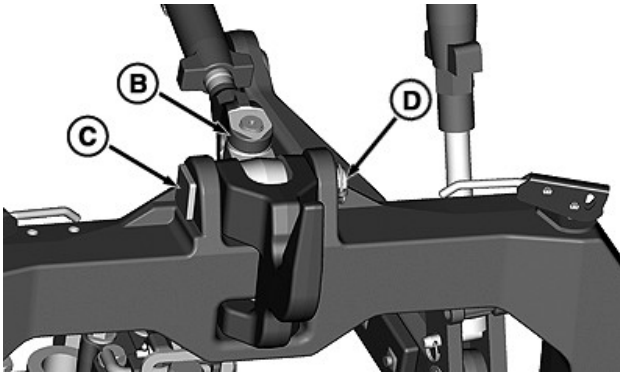

RXA0142706—UN—17JUN14

2. Remove the quick-lock pin (D) and pin (C) to release the center link (B).
3. Remove the pin (E) and the upper hook (F).

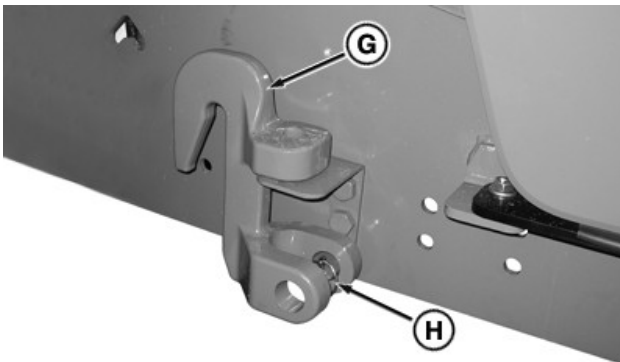

RXA0147950—UN—29APR15

4. Remove the pin (H) to remove the stored upper hook (G).

NOTE: Pin (C) must be installed left to right. Shoulder (I) will keep retaining the pin (B) from being installed if the pin (C) is installed incorrectly.

5. Place the upper hook (F) in the storage location.
6. Install the upper hook (G) on the quick-hitch.

GH15097.000092F-19-09SEP21


Rear Hitch [Ag]

Drawbar Load Limitations

IMPORTANT: Avoid damage to tractor and attachments. Certain heavy equipment can place excessive strain on drawbar. Speed and rough ground greatly increased strain.

Never exceed maximum static vertical load limit or drawbar and PTO position limitations.

For information using scraper drawbars, see Scraper Applications in this Operator's Manual section.

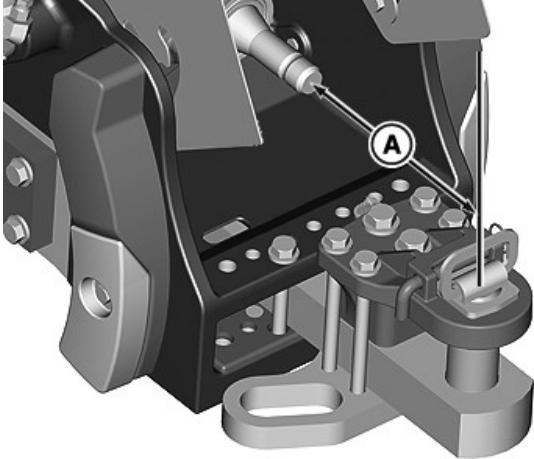

RXA0179941—UN—24SEP20

Drawbar Load Limits Based on Drawbar Position and Length				
Drawbar			End of PTO Shaft to Drawbar Pin Hole Distance (A) mm (in)	Maximum Vertical Static Load kg (lb)
Category	Support	Position		
5 ^{ab}	Heavy Duty	Short	358 (14)	5440 (12000) ^c
		Regular (PTO)	508 (20)	4080 (9000) ^c

^a70 mm (2.75 in) diameter pin

^bIf equipped with Category 4 conversion pin, pin diameter is 51 mm (2 in)

^c3000 kg (6614 lb) applies to EAEU, CIS, Georgia, and Ukraine tractors only.

KD34109,00005C5-19-25SEP20


Scraper Applications

IMPORTANT: Avoid tractor damage. This tractor is designed solely for use in agricultural or similar operations. The warranty period is limited to 90 days if heavy-duty land-leveling use exceeds:

- The maximum drawbar vertical load.
- 150 hours per year.

See your John Deere dealer if the:

- Drawbar is not John Deere approved.
- Drawbar vertical load or distance behind the rear axle exceeds the following table values.

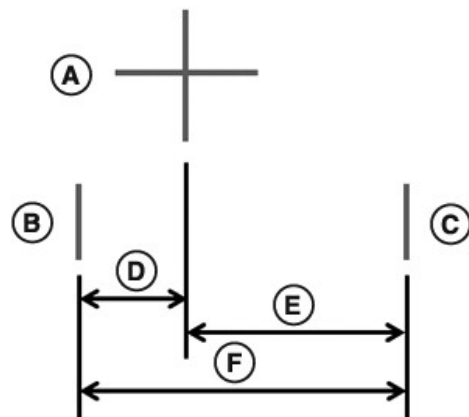

RXA0179306—UN—21AUG20

A—Rear Axle Center Line
B—Front Drawbar Pin Center Line
C—Rear Drawbar Pin Center Line
D—Front Drawbar Pin Distance in Front of Rear Axle
E—Vertical Load Distance Behind Rear Axle

F—Drawbar Length

Maximum Vertical Load kg (lb)	Maximum Vertical Load Distance Behind Rear Axle (E) mm (in)	Front Drawbar Pin Distance in Front of Rear Axle (D) mm (in)
8359 (18500)	1239 (48.8)	522 (20.6)

For load and distance measurement procedures, see Calculate Static Vertical Drawbar Load and Calculate Vertical Drawbar Load Distance Behind Rear Axle in this Operator's Manual section.

EC82310,0000F1B-19-30SEP20


Calculate Static Vertical Drawbar Load

For static vertical drawbar load:


1. Measure and record front and rear axle weights of tractor without implement connected.
2. Add front and rear axle weights together for total bare tractor weight.
3. Measure and record front and rear axle weights of tractor with loaded implement connected.
4. Add front and rear axle weights together for total loaded tractor weight.
5. Subtract total bare tractor weight (step 2) from total loaded tractor weight (step 4).

KD34109,0000610-19-30SEP20

Calculate Vertical Drawbar Load Distance Behind Rear Axle

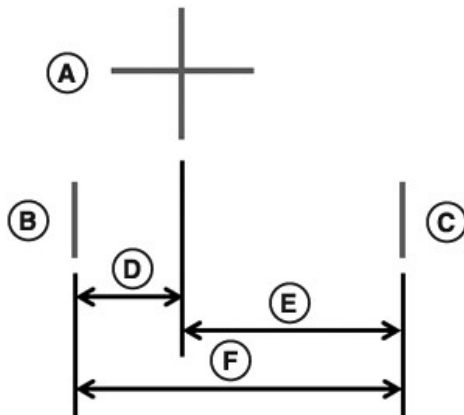

RXA0179306—UN—21AUG20

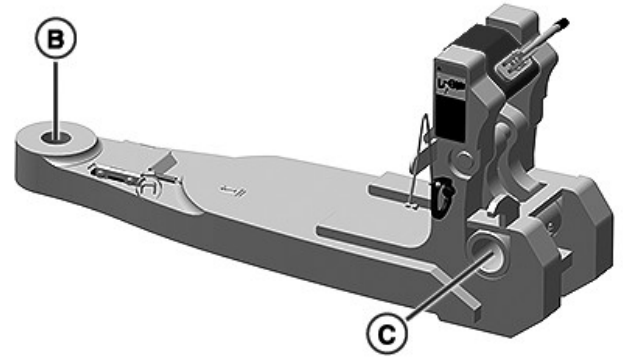

RXA0179874—UN—23SEP20

For vertical drawbar load distance behind rear axle (E):


1. Measure the length of the drawbar (F) from the front drawbar pin center line (B) to the rear drawbar pin center line (C).
2. Determine the rear axle center line (A). Subtract the front drawbar pin distance in front of rear axle (D) from the drawbar length (F). For front drawbar pin distance in front of rear axle (D), see the table in Scraper Applications in this Operator's Manual section.

NOTE: If the front drawbar pin distance in front of rear axle value provided is negative, subtracting a negative will provide a distance longer than the measured drawbar length.

KD34109,0000611-19-06OCT20

Selecting Drawbar Position


IMPORTANT: Drawbar must be positioned, as instructed in Attach PTO-Driven Implement in PTO, Hitch, and Drawbar section of this Operator's Manual, for PTO-driven implement.

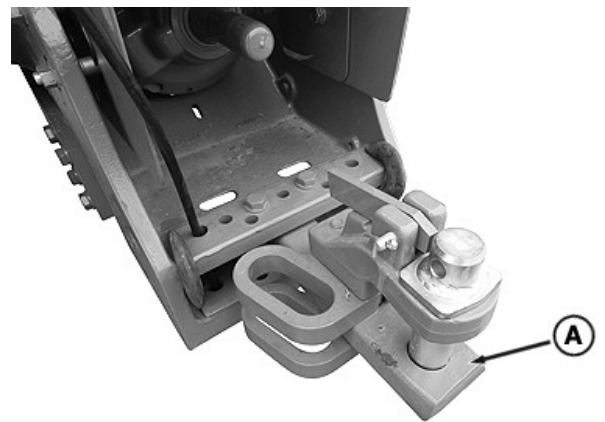

RXA0141864—UN—13JUN14

Drawbar (A) length can be extended:


1. Loosen drawbar locking bolts.

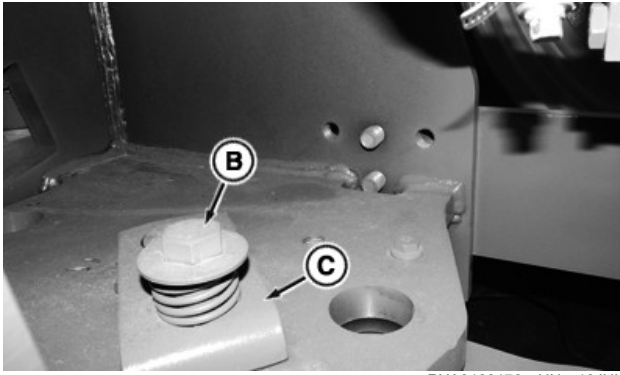

RXA0160176—UN—10JUL17

2. Remove front pivot pin retainer cap screws, washers, and spacers (B). Remove pivot pin retainer (C).
3. Slide drawbar to desired position.
4. Install pivot pin retainer, spacers, washers, and cap screws. Tighten cap screws to 435 N·m (322 lb·ft).
5. Install and tighten drawbar locking bolts to 435 N·m (322 lb·ft).

GH15097,0000640-19-27NOV17

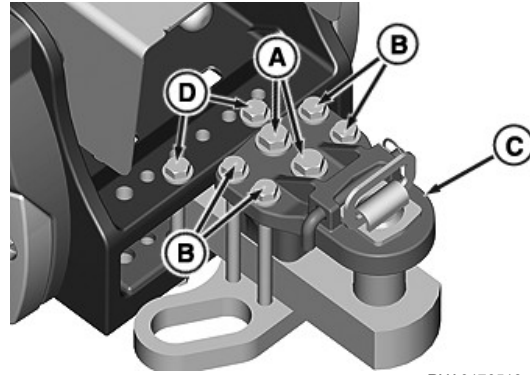


RXA0176518—UN—18MAR20

1. Attach clevis assembly (C) to top of drawbar.
2. Tighten two center M24 cap screws (A) to 750 N·m (553 lb·ft).
3. Tighten four outer M20 cap screws (B) to 610 N·m (450 lb·ft).
4. Tighten two M20 cap screws (D) to 610 N·m (450 lb·ft).

AK08008,00004F4-19-18MAR20

Adjusting Drawbar Side-to-Side

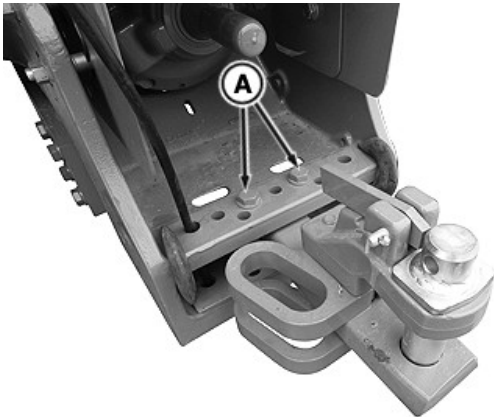

RXA0141865—UN—13JUN14

1. Remove drawbar locking bolts (A).
2. Slide drawbar to desired position.
3. Install a locking bolt against each side of drawbar. Tighten to 435 N·m (322 lb·ft).


GH15097,0000641-19-27NOV17

Install Clevis Assembly—Category 5 Drawbar

IMPORTANT: Avoid equipment damage: correctly attach clevis assembly.

Clevis Assembly Use

IMPORTANT: When PTO shaft may cause interference, remove clevis assembly.

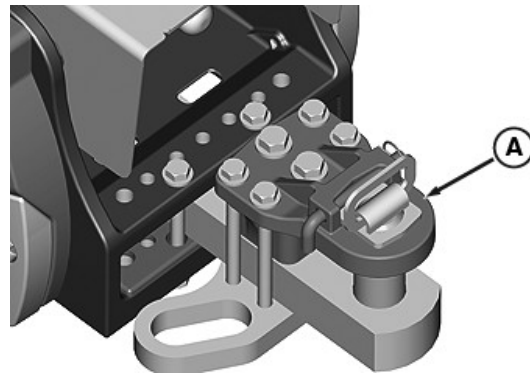

RXA0111485—UN—27OCT10

Category 5


Clevis assembly (A) must be attached *only* to the top of the drawbar.

If towed implement also has a clevis assembly, insert pin only through tractor drawbar. DO NOT insert pin through all four members.


EC82310,0000F5C-19-09NOV20

Use Correct Drawbar Pin—Category 5 to 4

IMPORTANT: Use Category 5 drawbar pin for implements that produce drawbar loads requiring more than 348 kW (467 HP) engine power level rating or 300kW (400 HP) PTO power level rating for proper operation. Contact implement manufacturer for information on how to properly convert implement to accept Category 5 drawbar pin.

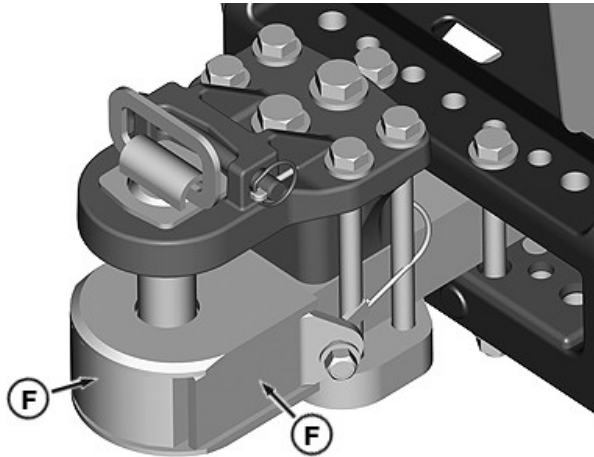


RXA0141903—UN—05JUN14

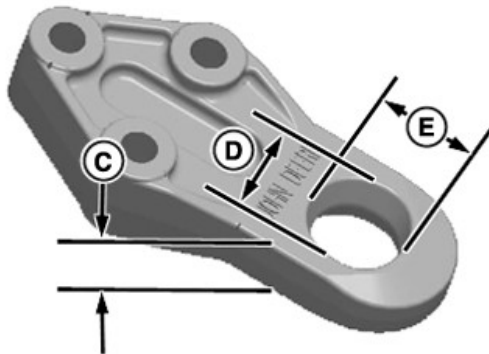

See your John Deere dealer to purchase an Adapter Kit (F) for tractors equipped with a Category 5 drawbar when attaching to implements equipped with a Category 4 hitch link if approved by implement manufacturer.

Use Category 5 drawbar pin furnished with tractor to attach implements that have a Category 5 hitch link. See table for dimensions. Consult implement Operator's Manual or manufacturer to determine proper size of drawbar pin for implement attaching system. Operating tractor and implements with drawbar category combinations which are improperly sized for implement power requirements could result in premature wear or failure of hitch components.

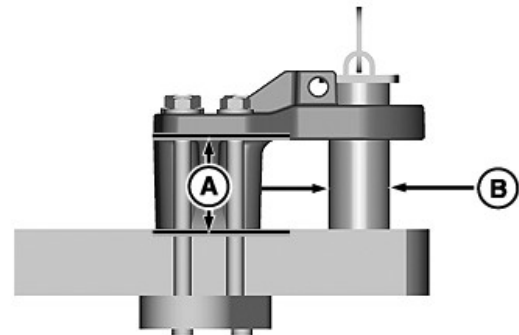

RXA0160175—UN—10JUL17

Category	Hitch Link Dimensions mm (in)				
	Tractor Drawbar		Implement Hitch Link		
	Hitch Pin Diameter (B)	Drawbar Opening Height (A)	Slot Length (E)	Slot Width (D) (Minimum)	Link Thickness (C)
5	70 (2.76)	100 (3.94)	73 — 85 (2.87 — 3.35)	73 (2.87)	60 (2.36)

EC82310,0000F5D-19-09NOV20


Drawbar [Scraper]

Scraper Applications

IMPORTANT: Avoid tractor damage. Never exceed the maximum drawbar vertical load.

See your John Deere dealer if the:

- Drawbar is not John Deere approved.
- Drawbar vertical load or distance behind the rear axle exceeds the following table values.

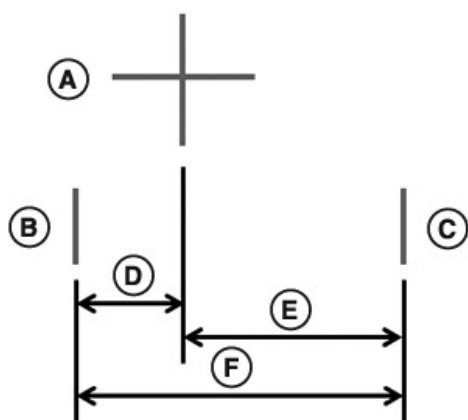

RXA0179306—UN—21AUG20

A—Rear Axle Center Line
B—Front Drawbar Pin Center Line
C—Rear Drawbar Pin Center Line
D—Front Drawbar Pin Distance in Front of Rear Axle
E—Vertical Load Distance Behind Rear Axle
F—Drawbar Length

Maximum Vertical Load kg (lb)	Maximum Vertical Load Distance Behind Rear Axle (E) mm (in)	Front Drawbar Pin Distance in Front of Rear Axle (D) mm (in)
12020 (26500)	741 (29.2)	522 (20.6)

For load and distance measurement procedures, see Calculate Static Vertical Drawbar Load and Calculate Vertical Drawbar Load Distance Behind Rear Axle in this Operator's Manual section.

EC82310,0000F19-19-24AUG21

Calculate Static Vertical Drawbar Load


For static vertical drawbar load:

1. Measure and record front and rear axle weights of tractor without implement connected.
2. Add front and rear axle weights together for total bare tractor weight.
3. Measure and record front and rear axle weights of tractor with loaded implement connected.
4. Add front and rear axle weights together for total loaded tractor weight.


5. Subtract total bare tractor weight (step 2) from total loaded tractor weight (step 4).

KD34109,0000610-19-30SEP20

Calculate Vertical Drawbar Load Distance Behind Rear Axle

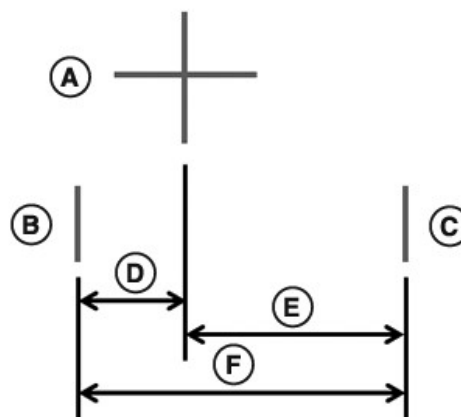

RXA0179306—UN—21AUG20

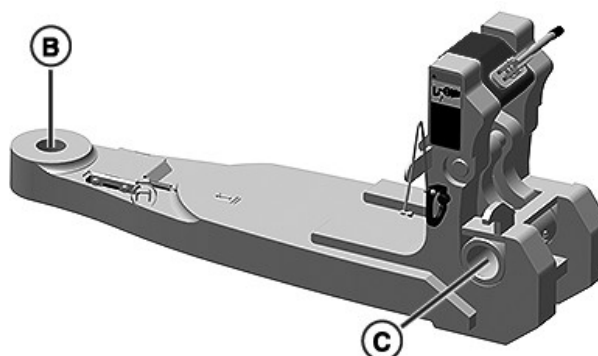

RXA0179874—UN—23SEP20

For vertical drawbar load distance behind rear axle (E):


1. Measure the length of the drawbar (F) from the front drawbar pin center line (B) to the rear drawbar pin center line (C).
2. Determine the rear axle center line (A). Subtract the front drawbar pin distance in front of rear axle (D) from the drawbar length (F). For front drawbar pin distance in front of rear axle (D), see the table in Scraper Applications in this Operator's Manual section.

NOTE: If the front drawbar pin distance in front of rear axle value provided is negative, subtracting a negative will provide a distance longer than the measured drawbar length.

KD34109,0000611-19-06OCT20

Install Drawbar or Quick-Attach in Short Drawbar Support

Use scraper drawbar when scraper tongue weight exceeds design specifications of agricultural tractor drawbar. The scraper drawbar is shorter which minimizes weight transfer to rear axle. Follow scraper recommendations for drawbar installation.

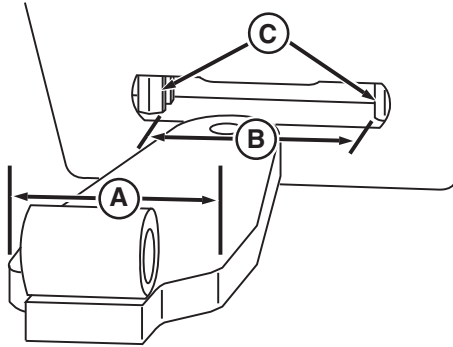


RXA0064878—UN—23JAN03

IMPORTANT: Adjust hex bushings (C) when installing scraper drawbar.


NOTE: All four (4) locking bolts should be kept clean to maintain maximum torque.

1. Loosen drawbar locking bolts and bushings, underside of support.
2. Measure width of drawbar area (A) resting on drawbar support.
3. Rotate bushings so distance (B) between bushings is as close to drawbar width as possible.

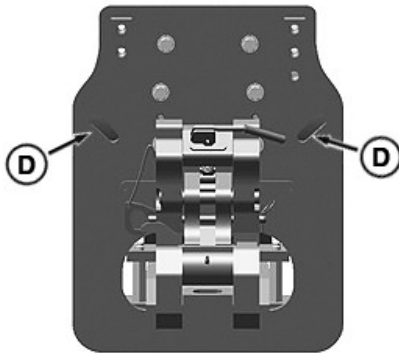

RXA0142716—UN—21JUL14

Scraper Drawbar Support

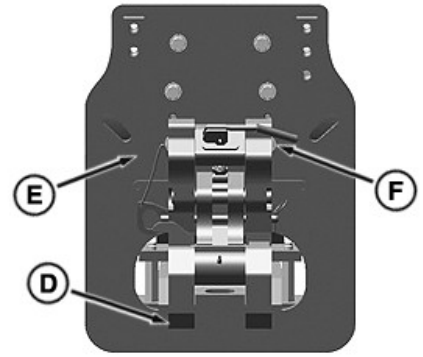

RXA0148253—UN—29MAY15

Quick-Attach Drawbar

4. Slide short drawbar or quick-attach drawbar (D) into support.
5. Install front drawbar pin.
6. Tighten drawbar locking bolts to 430 N·m (320 lb·ft).
7. Remove locking pin (E) and lift handle (F) to operate quick-attach drawbar.

IMPORTANT: Recheck Locking Bolt Torque Specification.

8. Check and retighten drawbar support bolts after first 10, 50, and 100 hours of scraper operation.


RW29387,00004F2-19-30AUG17

Short Scraper Drawbar Conversion

Scraper drawbar support is designed to accept a larger drawbar and can be converted for use with smaller scraper drawbar. Follow scraper recommendations for drawbar installation.




RXA0082032—UN—05JUL05

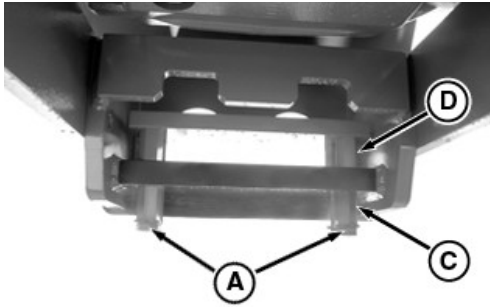

RXA0082012—UN—05JUL05
Smaller Scraper Drawbar Support Setup

IMPORTANT: Adjust hex bushings (C) when installing scraper drawbar.

NOTE: All four locking bolts must be kept clean to maintain maximum torque.

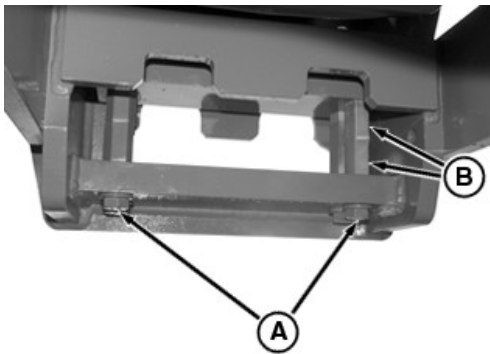

RXA0082010—UN—05JUL05
Larger Scraper Drawbar Support Setup

1. Loosen and remove drawbar support cap screws (A) and bushings (B).
2. Place lower bushings on cap screws with lock washers.
3. Reinstall cap screws with lower bushings and upper bushings (D) to drawbar support.
4. Measure width of drawbar area with drawbar resting on drawbar support.
5. Rotate bushings so distance between bushings is as close to drawbar width as possible.
6. Slide drawbar into support.
7. Install front drawbar pin.
8. Tighten drawbar locking bolts to 430 N·m (320 lb·ft).

IMPORTANT: Recheck Locking Bolt Torque Specification.


9. Check and retorque drawbar support bolts after first 10, 50, and 100 hours of scraper operation.

RW29387,00004F3-19-30AUG17

Tow Cable


IMPORTANT: Avoid possible tractor damage:

1. Correctly use tow cable by pulling from front of tractor in straight forward direction.
2. Keep cable tight to limit cable side movement and interference with right front track.
3. Do not use tow cable to hook tractors in tandem to pull draft load.
4. Pulling tractor with loaded equipment can cause excessive strain on drawbar support and is greatly increased by speed and rough ground conditions.
5. Inspect tow cable and/or drawbar pin for wear and replace when necessary.
6. Attach tow cable to storage bracket and keep tight, when not in use.

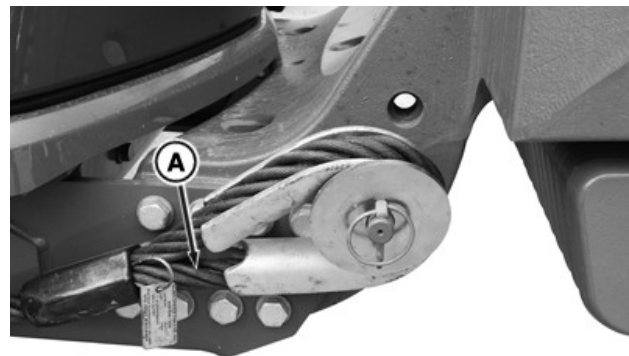

RXA0142715—UN—24JUN14

Use tow cable (A) to pull tractor or tractor with scraper from soft or wet soil conditions.

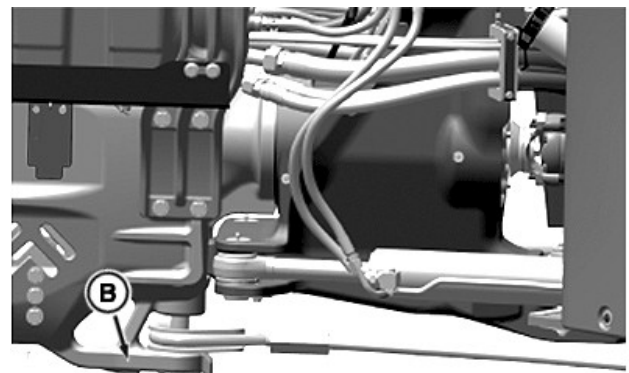

RXA0185286—UN—31AUG21

Attach tow cable to drawbar support (B).

GH15097,0000932-19-01SEP21

Hydraulics—General Information

Hydraulic System Overview

Hydraulics system provides lubrication, power and control to many tractor subsystems. Transmission, steering, brakes, and hitch [Ag] are covered in other sections of this Operator's Manual. The next several sections deal with selective control valves, including adjustment, function, and connections as well as special control systems.

TS36762,00002C7-19-23APR18

Selective Control Valves

SCV Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



SCV

RXA0173516—UN—03JAN20

3. SCV

Access Application Through Navigation Bar:



SCV

RXA0173515—UN—03JAN20


Press SCV button on navigation bar below display.

KD34109,000057C-19-07JAN20

SCV Settings

SCV application is used to access and adjust SCV modes and settings for equipped SCVs.

NOTE: Display will depend on current mode of SCV and number of SCVs available.

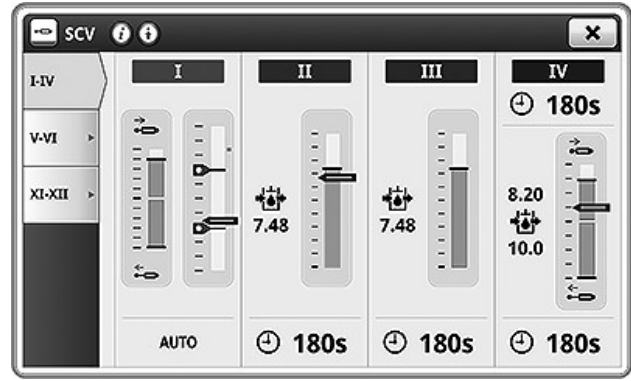

RXA0178901—UN—23JUL20

SCV Example


Items Accessible on SCV Main Page:



SCV Tab Example

RXA0173519—UN—06JAN20


SCV Tabs — tabs display when there are more than four SCVs. Only available SCVs display.

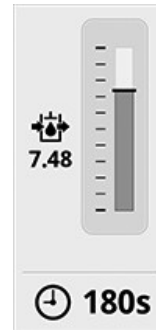

RXA0173523—UN—02JAN20

Standard Mode Example

Standard Mode — set one detent time value and one detent flow value for both extend and retract. See SCV Settings—Standard Mode in this Operator's Manual section.

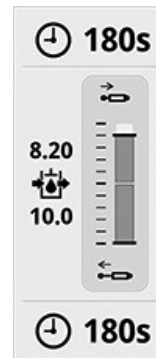

RXA0173504—UN—03JAN20

Independent Mode Example

Independent Mode — set different detent time and flow

values for extend and retract. See SCV Settings—Independent Mode in this Operator's Manual section.



Feature Mode Example

RXA0173490—UN—02JAN20

Feature Mode — detent time is controlled by implement. To enable, connect implement using optional connector before turning on vehicle. See SCV Settings—Feature Mode in this Operator's Manual section.



Hydraulic Flow Indicator

RXA0173500—UN—03JAN20

Hydraulic Flow Indicator — indicates current flow and displays when SCV is selected, active, and oil is flowing.



Advanced Settings

RXA0167071—UN—21MAR19

Advanced Settings — access further adjustments and less common settings. See SCV Settings—Advanced in this Operator's Manual section.

Operate SCVs:



SCV I Lever

RXA0173518—UN—06JAN20

SCV Control Lever Adjustments — SCV levers on the CommandARM™ are used to adjust SCV flow. See SCV Control Lever Adjustments in this Operator's Manual section.

Other SCV Statuses:



Flow Active Example

RXA0173494—UN—02JAN20

Flow Active — indicator will move with flow level. Fill area between 0 point and indicator displays green.



Time Active Example

RXA0173525—UN—02JAN20

Time Active — yellow box displays during time adjustment and when it is active.



Float

RXA0173768—UN—13JAN20

Float — cylinder is free to extend or retract, letting implement follow ground contour.



Float Disabled

RXA0173492—UN—02JAN20

Float Disabled — if lever is in float position at engine start-up, float function will be disabled until lever is cycled to neutral.



Locked

RXA0173506—UN—03JAN20

Locked — SCV is locked.



AUTO

RXA0173483—UN—02JAN20

AUTO — AUTO mode is enabled and active.



AUTO Disabled

RXA0173484—UN—02JAN20

AUTO Disabled — AUTO mode is ON but not active.

Run Page Modules

Add modules for this application to run pages using

Layout Manager. See the Generation 4 Display operator's manual.

NOTE: SCV assignment for module can be changed if accessing settings this way. See SCV Settings—Assignment in this Operator's Manual section.

Example:



Standard Mode

RXA0173524—UN—02JAN20

NOTE: Different modules may be available for your application.


Standard Mode — quick access to standard mode module.

KD34109,0000618-19-19AUG21

SCV Settings—Standard Mode

Set one detent time value and one detent flow value for both extend and retract.

Items Accessible in Standard Mode:

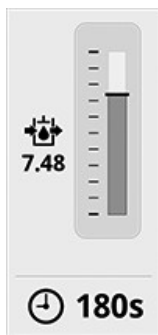

Standard Mode Example

RXA0173523—UN—02JAN20

Standard Mode Example — items may change based on status.



Time Tab

RXA0173530—UN—02JAN20

Time — select to adjust detent time value for extend and retract. See SCV Settings—Time Adjustment in this Operator's Manual section.



Flow Tab

RXA0173503—UN—03JAN20


Flow — select to adjust detent flow value for extend and retract. See SCV Settings—Flow Adjustment in this Operator's Manual section.

KD34109,000057E-19-09JAN20

SCV Settings—Independent Mode

Set different detent time and flow values for extend and retract. Enable independent mode in advanced settings. See SCV Settings—Advanced in this Operator's Manual section.

Items Accessible in Independent Mode:

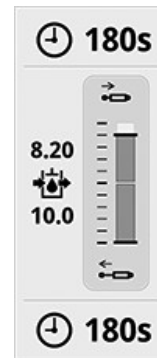

Independent Mode Example

RXA0173504—UN—03JAN20

Independent Mode Example — items may change based on status.



Time Retract Tab

RXA0173529—UN—02JAN20

Time Retract — select to adjust detent time retract value. See SCV Settings—Time Adjustment in this Operator's Manual section.



Flow Retract Tab

RXA0173502—UN—03JAN20

Flow Retract — select to adjust detent flow retract value. See SCV Settings—Flow Adjustment in this Operator's Manual section.



Flow Extend Tab

RXA0173501—UN—03JAN20

Flow Extend — select to adjust detent flow extend value. See SCV Settings—Flow Adjustment in this Operator's Manual section.



Time Extend Tab

RXA0173528—UN—02JAN20

Time Extend — select to adjust detent time extend value. See SCV Settings—Time Adjustment in this Operator's Manual section.

KD34109,000057F-19-10JAN20

SCV Settings—Feature Mode

Feature mode allows the implement to control the application. To enable, connect feature mode compatible implement using optional connector before turning on vehicle. When connected through ISOBUS or implement connector, SCVs automatically enter feature mode and page displays with feature options.

Items Accessible in Feature Mode:




Feature Mode Example

RXA0173490—UN—02JAN20

Feature Mode Example — items may change based on status.

 NOTE: Tab appearance and quantity will vary since feature mode is used in combination with standard and independent modes.



Time Tab Example

RXA0173527—UN—02JAN20

Time — controlled by implement and will be grayed out since no adjustments can be made.



Flow Tab Example

RXA0173503—UN—03JAN20

Flow — select to adjust detent flow value for extend and retract. See SCV Settings—Flow Adjustment in this Operator's Manual section.



Automation Tab

RXA0173485—UN—02JAN20

NOTE: Not available for AutoLoad™.

Automation — enable/disable feature mode. See SCV Settings—Automation in this Operator's Manual section.

KD34109,0000580-19-03FEB20

SCV Settings—Flow Adjustment

Adjust amount of SCV flow based on demand. For information on approximate SCV flow output settings and available pump flow, see Total SCV Flow in this Operator's Manual section.

Procedure to Modify:




Adjust Flow

RXA0173495—UN—02JAN20

NOTE: Flow adjustment is from 0.04 to 10. Selecting (+) increases flow in increments of 0.04 and (++) increases flow in increments of 1.00. Selecting (-) or (--) decreases flow by the same increments.

Select (+/++) to increase or (-/--) to decrease flow. Value is shown in display box.

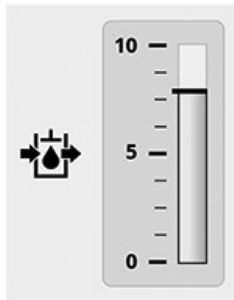

Flow Gauge

RXA0173499—UN—03JAN20

Flow setting also displays on flow gauge.



Close

RXA0167129—UN—25MAR19

Select to close.

Items Accessible for TouchSet™ Depth Control:



RXA0173522—UN—06JAN20
Set Upper Point



RXA0173521—UN—06JAN20
Set Point Indicator

Upper Set Point — select upper SET key to set a frequently used height that can be recalled. Set point is displayed by upper yellow indicator.



RXA0173520—UN—06JAN20
Set Lower Point



RXA0173521—UN—06JAN20
Set Point Indicator

Lower Set Point — select lower SET key to set a frequently used depth that can be recalled. Set point is displayed by lower yellow indicator.



Position Indicator

RXA0173500—UN—03JAN20

Position Indicator — displays current implement position.

KD34109,0000582-19-21JAN20

SCV Settings—Time Adjustment

Adjust amount of time operation of attached implement will run.

Procedure to Modify:



Adjust Time

RXA0173526—UN—02JAN20

NOTE: Time adjustment is from 0 seconds to C for continuous flow. Time increases by 1 second increments up to 10 seconds, then in 2 second increments up to 20, then 5 second increments up to 30, then 10 second increments up to 60, then 30 second increments up to 120, then by 60 second increments up to C.

Select (+) to increase or (-) to decrease time. Value is shown in display box.



Time Setting

RXA0173525—UN—02JAN20

Time setting also displays under flow gauge. A yellow box displays around the time while adjustment is taking place.



Close

RXA0167129—UN—25MAR19

Select to close.

KD34109,0000583-19-06FEB20

SCV Settings—Advanced

Advanced settings allow you to access further adjustments and less common settings.

NOTE: Some items only display if machine is equipped with the associated options.

Items Accessible on Advanced Settings Page:



RXA0173517—UN—03JAN20

SCV Independent Mode Example

SCV Independent Mode — turn independent mode ON or OFF for each SCV. See SCV Settings—Activating Independent Mode in this Operator's Manual section.



RXA0173496—UN—02JAN20

Flow Adjustment Sensitivity

Flow Adjustment Sensitivity — select the desired flow response curve for the SCV control lever and joystick. See SCV Settings—Flow Adjustment Sensitivity in this Operator's Manual section.



RXA0167187—UN—22MAR19

ON/OFF

Loader Mode — prevents unwanted loader movement by ignoring the SCV flow and time settings. Select ON to enable or OFF to disable.



RXA0167187—UN—22MAR19

ON/OFF

Flow Sharing — reduces flow to non-critical functions, ensuring priority flow to critical functions. Select ON to enable or OFF to disable. See Flow Sharing in this Operator's Manual section.

KD34109,0000587-19-03FEB20

SCV Settings—Activating Independent Mode

Allows you to set different detent time and flow values for extend and retract. Independent mode is enabled/disabled for each SCV separately.

NOTE: Only available SCVs display.

Procedure to Modify:



RXA0167187—UN—22MAR19

ON/OFF

Independent Mode — select ON to enable or OFF to disable.

KD34109,0000581-19-11FEB20

SCV Settings—Automation

Automation allows you to enable/disable SCV adjustments in feature mode. When disabled, SCV displays adjustments for either standard mode or independent mode, whichever the SCV is set to.

Procedure to Modify:



RXA0167187—UN—22MAR19

ON/OFF

Auto Mode — select ON to enable or OFF to disable.

 
KD34109,0000584-19-14JAN20

SCV Settings—Assignment

Reassign an SCV run page module to a different SCV.

NOTE: Only accessible from run page module.

Procedure to Modify:



RXA0173514—UN—03JAN20

SCV Assignment Tab


1. Select SCV Assignment tab.



RXA0173512—UN—03JAN20

Assigned SCV Box

2. Select Assigned SCV box.

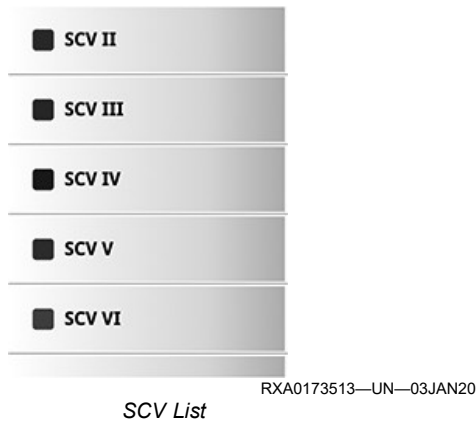

3. Select desired SCV from list.



4. Select to close.

 
KD34109,0000585-19-14JAN20

SCV Settings—Flow Adjustment Sensitivity


Procedure to Modify:




1. Select the box to set the desired response curve for the SCV control lever or the joystick.
2. Select one of the following response curves:



 - **Linear** — the flow rate of the SCV corresponds to the distance traveled by the SCV control lever/ joystick lever.



 - **Progressive** — initially, the flow rate of the SCV is less than that traveled by the SCV control lever/ joystick lever (giving a more sensitive start to the movement).



- **Combination** — an intermediate stage between linear and progressive.



Select OK to exit and save changes.



Select Cancel to exit without saving changes.

KD34109,0000588-19-03FEB20

SCV Settings—Flow Assist

Flow Assist automatically adjusts engine speed, while maintaining constant wheel speed in order to meet pump flow demand for all hydraulic functions. Engine speed operator limits are followed (including the throttle position as the upper limit).

Hydraulic flow demand includes (but is not limited to):

- SCV
- Hitch
- Steering
- Power Beyond

Flow Assist can be enabled/disabled in Full AUTO and Custom transmission modes.

In these modes, engine speed and transmission gear are also automatically adjusted based on:

- Load
- Commanded wheel speed

KD34109,00005DF-19-19APR21

SCV Control Lever Adjustments

CAUTION: Avoid personal injury or machine damage:

- **Ensure that hoses are not reversed. If hoses are reversed, cylinder extends when it should retract.**
- **To prevent unintentional implement movement, shut off engine, move SCV**


control levers to neutral position, and press SCV lock button before attaching implement. For lock button identification, see CommandARM™ Controls—Left Side in CommandARM™ Controls section of this Operator's Manual.

- SCV does not disengage when operator leaves seat. For more information, see Operator Presence Sensor in Seats section of this Operator's Manual.

SCV control levers on the CommandARM™ allow you to make adjustments to the SCV flow. For more information on SCV levers, see CommandARM™ SCV Control Levers in CommandARM™ Controls section of this Operator's Manual.

NOTE: SCV control levers can be reconfigured to control tractor functions and implements. See Controls Setup in CommandCenter™ section of this Operator's Manual.

SCV Control Lever Adjustments:

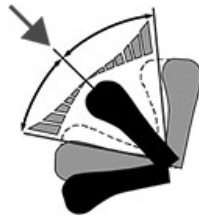


Neutral

RXA0173507—UN—03JAN20

NOTE: SCV control lever should be in neutral position at tractor start-up.


Neutral — flow continues until timed detent expires. If no timed detent is commanded, flow is turned off.

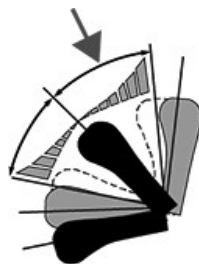

Extend

RXA0173488—UN—02JAN20


Extend — operator controlled variable flow to extend cylinder. Oil flows at a rate that varies depending on how far lever is moved. Slowest oil flow is when lever is closest to neutral position. Lever is returned to neutral position when released.

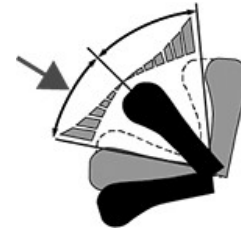

Retract

RXA0173510—UN—03JAN20

Retract — operator-controlled variable flow to retract cylinder. Oil flows at a rate that varies depending on how far lever is moved. Slowest oil flow is when lever is closest to neutral position. Lever is returned to neutral position when released.

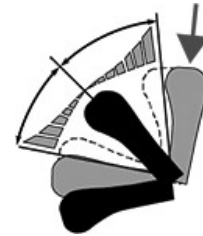

Extend Detent

RXA0173489—UN—02JAN20

Extend Detent — timed flow to extend cylinder based on time and flow detent settings. Lever returns to neutral position, but flow continues at flow detent setting rate until detent time setting has elapsed.



Retract Detent

RXA0173511—UN—03JAN20

Retract Detent — timed flow to retract cylinder based on time and flow detent settings. Lever returns to neutral position, but flow continues at flow detent setting rate until detent time setting has elapsed.



Float

RXA0173491—UN—02JAN20

NOTE: If lever is in float position at engine start-up, float function will be disabled until lever is cycled to neutral.

To relieve hydraulic pressure in implement, move lever to float position while engine is running.

Float — SCV opens to allow free flow of oil from head-to-rod end of implement hydraulic cylinder, allowing implement to follow ground contour. Lever and SCV remain in float position until lever is manually returned to neutral. Cycle cylinder fully in both directions after being used in float position to ensure that cylinder is filled with oil. Float can be used to allow hydraulic cylinders to coast when shutting down implement.

KD34109,0000589-19-05MAY20

Total SCV Flow

1. Check flow setting for each function independently. For correct motor flow settings, refer to the implement Operator's Manual.

The following may cause pump to operate at high pressure:

- Down-pressure systems (drills, air seeders, disks) — can be considered to be zero flow demand after completion of raise or lower cycle. For more information, see implement connection examples in Hydraulic Connections section of this Operator's Manual.
 - Auxiliary flow control valves (vacuum flow control) — open the implement flow control valve and adjust tractor flow rate to desired setting. For more information, see implement connection examples in Hydraulic Connections section of this Operator's Manual.
 - Cylinder functions where line or orifice restrictions control flow — adjust the tractor flow control to point where function speed begins to decrease.
 - Auxiliary control valves (implement stack valves, row guidance) — adjust the tractor flow control to lowest setting that results in correct operation.
2. Determine total flow demand by adding flow requirements for each SCV using settings determined in Step 1. Include hitch and power beyond flow requirements if applicable (refer to SCV flow chart for settings based on approximate flow output).
 3. Determine if flow demand exceeds available pump flow (refer to SCV pump flow chart for approximate available pump flow).
- If flow demand:
- Is less than available pump flow but has performance concern, see your John Deere dealer.
 - Exceeds pump flow:
 - Increase engine rpm if possible.

- Decrease flow setting on noncritical functions.
- Convert implement open center valves to closed center operation, if equipped.

NOTE: Flow measurements made without steering or hitch being used.

Pump Flow (Approximate) ^a L/min (gal/min)		
Engine rpm	Pump	
	85 cc	85 cc + 85 cc
1000	100.9 (27)	201.8 (53)
1500	151.4 (40)	302.8 (80)
2000	201.8 (53)	403.7 (106)
2100	211.9 (56)	423.9 (112)

^aTypical flows were taken from new tractors. Component wear may cause slightly lower values. More than one SCV is needed to achieve full flow at each rpm listed.

Power Beyond Maximum Flow	
Coupler	L/min (gal/min)
1/2-Inch	132 (35)
3/4-Inch	211.9 (56)

SCV Flow (Approximate) ^a L/min (gal/min)		
SCV Flow Settings	Standard-Flow SCV 1/2-Inch Coupler ^b	High-Flow SCV 3/4-Inch Coupler ^c
0.04 ^d	—	—
1.0	1.9 (0.5) ^e	4.3 (1.1)
2.0	6.1 (1.6)	11.3 (3.0)
3.0	13.6 (3.6)	19.4 (5.1)
4.0	20.4 (5.4)	27.6 (7.3)
5.0	28.0 (7.4)	35.2 (9.3)
6.0	40.9 (10.8)	49.9 (12.4)
7.0	62.1 (16.4)	72.0 (19.0)
8.0	81.4 (21.5)	95.3 (25.2)
9.0	107.1 (28.3)	118.6 (31.4)
10.0	132.0 (35.0)	159.0 (42.0)

^aAt 2000 rpm and 454 kg (1000 lb) of load at point-of-use.

^b85 cc pump.

^c85 cc and 85 cc pumps.

^dMinimum flow setting.

^eObserved under no load.

Hitch Cylinder Diameter mm	Hitch Flow [Ag] L/min (gal/min)
90/100	71 (18.7)
120/120	88 (23.2)

KD34109,0000586-19-06MAY21

Flow Sharing

To maintain productivity, hydraulic flow sharing reduces flow to non-critical SCV functions, ensuring priority flow to critical SCV functions. To enable or disable flow sharing, see SCV Settings—Advanced in this Operator's Manual section.

NOTE: Continuous setting receives priority over timed detent. If all SCVs are set to C (continuous) and requested flow is exceeded, flow is equally reduced to all SCVs to ensure that all functions are still active.

6. If implement functions remain slow, see your John Deere dealer.

KD34109,000057B-19-16NOV20

For Maximum Performance:

- Properly connect SCVs and implement according to implement operator's manual.
- If implement operator's manual is unavailable, refer to appropriate hydraulic connection example in Hydraulic Connections section of this Operator's Manual. On agricultural tractors equipped with high-flow hydraulics, SCVs can be supplied by different pumps. For more information, see Connecting Implements to High-Flow Hydraulic SCVs [AG] in Hydraulic Connections section of this Operator's Manual.
- Make sure SCV flow settings match flow requirements for function. For more information, see Total SCV Flow in this Operator's Manual section.
- Setting detent time (recommendation in implement operator's manual) slightly longer than needed is preferred. However, setting time much longer than necessary or to C (continuous) could result in activation of flow sharing and excess fuel burn.

If implement functions operate slower than expected, perform flow sharing diagnostic procedure.

Flow Sharing Diagnostic Procedure:

1. Check all connections for proper hookup. Whenever possible, connect return connections to SCV return ports or power beyond return port.
2. For every SCV set to C (continuous) flow, adjust the flow rate to be the lowest rate possible for optimal implement operation. Not all functions require continuous flow, and timed SCVs set too long can lead to flow sharing if they overlap with continuous flow SCVs.
3. Hydraulic flow is engine speed dependent. If a function is slow, increase engine rpm to increase flow.
4. Adjust flow first and then timed detent SCVs (as necessary from observation) to provide proper implement function.
5. On high-flow hydraulic system equipped tractors, try to balance hydraulic loading between the two circuits.

Hydraulic Connections

Connect/Disconnect Hydraulic Hoses

CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury.

- Avoid injury, always:
 - Protect the hands and body from high-pressure fluids.
 - Inspect hydraulic hoses periodically – at least once per year – for damage. Signs of wear or damage include, but are not limited to, leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, and exposed wire braid.

Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

- Tighten all connections before applying pressure.
- Ensure that all connected lines are as straight as possible.
- Search for leaks with a piece of cardboard.
- Relieve pressure from the hydraulic system before disconnecting a hydraulic line or other lines.
- If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene can result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.


Unintentional implement movement can cause injury. To avoid injury, before attaching or detaching hydraulic hoses, always engage the:

- SCV control lever lock. See CommandARM™ SCV Control Levers in the CommandARM™ Controls section of this Operator's Manual.
- Joystick lock (If Equipped). See Operate SCVs with CommandARM™ Joystick in the Selective Control Valves section of this Operator's Manual.

IMPORTANT: Dirt, dust, or other foreign material can damage the hydraulic system. Avoid damage to the hydraulic system and thoroughly clean hydraulic hoses and hose ends, and SCVs before connecting an implement.

Steam cleaning or using a high pressure washer in the area around the SCV connections and electronics can damage equipment. Keep a minimum distance of 200 mm (8 in) between the pressure washer nozzle and hydraulic connections for any pressure washer exceeding 6895 kPa (69 bar) (1000 psi).

SCV Coupler Component Identification and Location

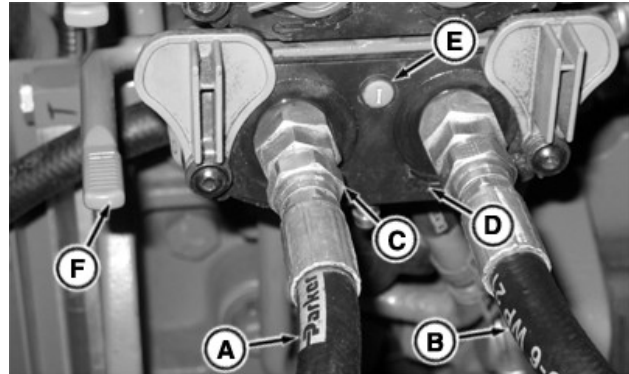

RXA0177992—UN—22JUN20

- A—Extend Port
- B—Retract Port
- C—Coupler Identification Plate—Extend Port
- D—Coupler Identification Plate—Retract Port
- E—Remote Cylinder Coupler Identification
- F—SCV Hydraulic Hose Release Lever

NOTE: Remote cylinder couplers are designated I through VIII (E) with I being the bottom coupler.

Verify that the remote hydraulic hoses are connected to the correct SCV couplers to ensure desired system control operation.

Connect Hydraulic Hoses

1. From within the cab, lock out the SCV controls.
2. From outside the cab:
 - a. Before connecting the hydraulic hoses, determine:
 1. If the symbols on the coupler identification plate (C) or (D) indicating cylinder movement, match the desired cylinder travel direction.
 2. The desired SCV connection based on whether the implement uses single-acting or double-acting cylinders. For:
 - Single-acting cylinders, use the extend (A) port.
 - Double-acting cylinders, use the extend (A) and retract (B) ports.
 - b. To connect the hydraulic hose to the SCV:
 1. Clean the dust covers/caps.
 2. Rotate up or remove the dust covers to expose the SCV couplers.

3. Push the hydraulic coupler sleeve forward. (If Equipped)
4. Push the hydraulic hose firmly into the SCV coupler.
5. Pull the hydraulic coupler sleeve backward to lock the house coupler into the receptacle. (If Equipped)

4. Recheck the oil level when the implement is removed.
5. Add or remove hydraulic oil as necessary. If the oil must be drained, see Hydraulic System Oil and Filters in the Service—Change section of this Operator's Manual.

EC82310,0000EF4-19-02SEP21

Disconnect Hydraulic Hoses

1. From within the cab:
 - a. Start the tractor.
 - b. Use the appropriate SCV lever to lower the implement to the ground.
 - c. Relieve the hydraulic pressure in hoses by moving the SCV control lever or joystick (If Equipped) to the float position for a few seconds.
 - d. Lock out the SCV controls.
 - e. Shut off the tractor.
2. From outside the cab:
 - a. Push the SCV hose release lever (F) down slightly to relieve any pressure buildup of trapped oil.
 - b. Remove the hoses from the SCV couplers.
 - c. Clean the SCV coupler area.
 - d. Rotate down or replace the dust covers to protect the SCV couplers.

EC82310,0000EF3-19-06AUG20


Using Load-Sensing Hydraulic System—Power-Beyond

Power-beyond is used as a pressure/flow source for auxiliary functions equipped with independent flow control valves. Use power-beyond when:

- Tractor SCV control is not needed.
- No other SCV outlet is available.

Power-beyond functions require a "load-sense" signal to regulate pump pressure, therefore, a "load-sense" hydraulic line is used. Certain equipment can require modification. See your John Deere dealer.

Component Identification

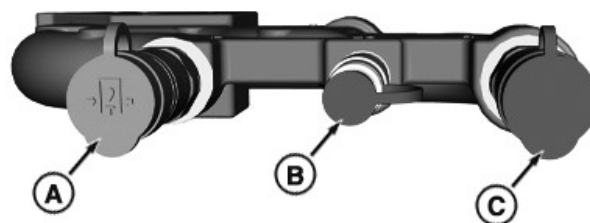

RXA0177993—UN—20MAY20


Power-Beyond Coupler—Mid/Upper

Implements Requiring Large Volumes of Hydraulic Oil

IMPORTANT: Avoid damage to the hydraulic system:

- Lower the implement to the ground to return most of the oil to the reservoir during the checking procedure.
- Never add hydraulic oil to reservoir with engine running as doing so can cause the hydraulic reservoir to overflow.
- Do not overfill the hydraulic reservoir.

1. Cycle all the implement cylinders after starting the tractor.
2. Lower the implement to the ground to return the most oil to the reservoir.
3. Check the hydraulic oil level at the transmission-hydraulic oil sight gauge. See Hydraulic System Oil Level in the Service—Check section of this Operator's Manual.

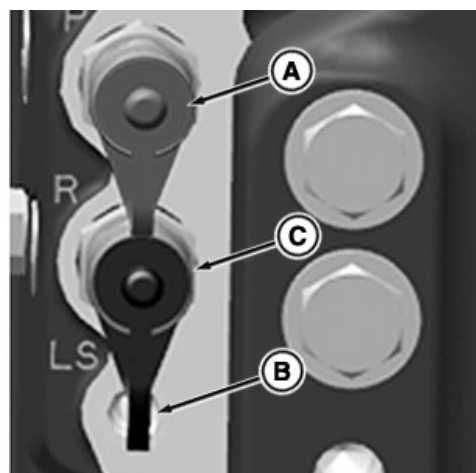


RXA0179032—UN—06AUG20

Power-Beyond Coupler—Hitch Casting

- A— Pressure Coupler
 B— Load Sense Coupler
 C— Return Coupler (Motor Return)

Example 1

NOTE: Example 1 is the preferred practice.

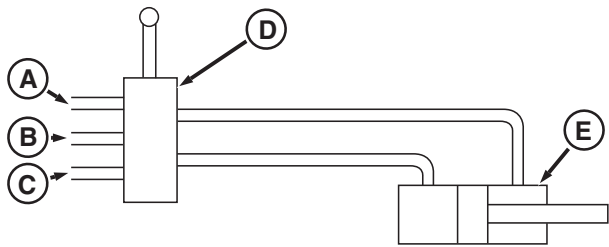


RXA0177994—UN—20MAY20

- A— Pressure Coupler
- B— Load Sense Coupler
- C— Return Coupler (Motor Return)
- D— Control Valve
- E— Cylinder

Control valves with a load-sense provide a load-sense signal to hydraulic system and can be operated manually or by solenoids.

Example 2

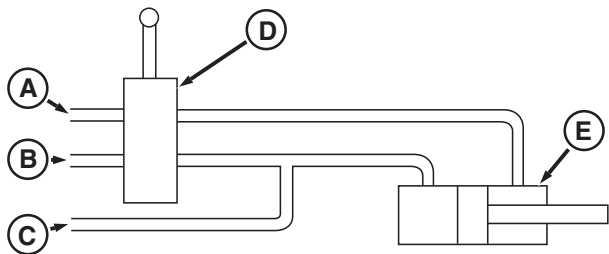


RXA0177995—UN—20MAY20

- A— Pressure Coupler
- B— Load Sense Coupler
- C— Return Coupler (Motor Return)
- D— Control Valve
- E— Cylinder

IMPORTANT: Circuit allows cylinder "leak-down" through load-sense line (C). If leakage is not acceptable for operation, use Example 3.

Control valve directs oil into extend or retract circuits. Connect load-sense line to circuit requiring pressure. An example is a wagon lift cylinder with load supported by mechanical stops in full down position. Load-sense signals pump when increased pressure is needed. Pressure remains low when load is supported by mechanical stops.

Example 3

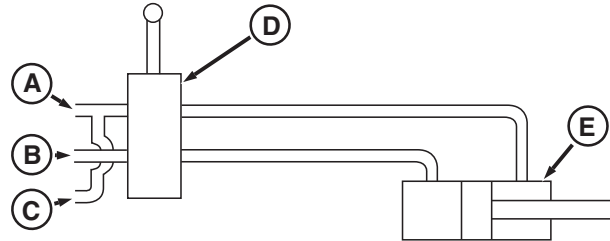


RXA0177996—UN—20MAY20

- A— Pressure Coupler
- B— Load Sense Coupler
- C— Return Coupler (Motor Return)
- D— Control Valve
- E— Cylinder

IMPORTANT: System will maintain a maximum pressure of 20000 kPa (200 bar) (2900 psi) as long as power-beyond hoses are connected.

Control valve directs oil into extend or retract circuits, either requiring high pressure. Connect load-sense line to pressure line before control valve. An example is a folding implement, where pressure is needed to extend or retract cylinders.

Example 4

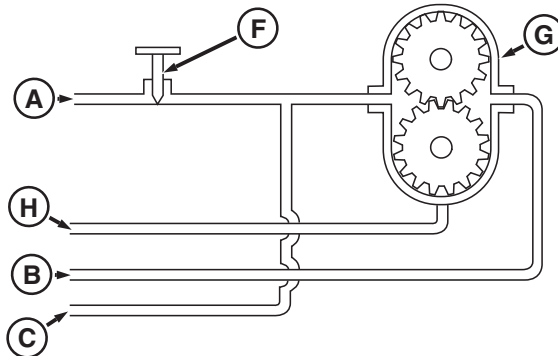

RXA0138270—UN—17JAN14

- A— Pressure Line
- B— Return Line
- C— Load-Sense Line
- F— Pressure-Compensated Flow Valve
- G— Hydraulic Motor
- H— Motor Case Drain (Sump Line)

NOTE: Motor speed can fluctuate when other functions cause system pressure change. Minimize fluctuations by installing a pressure-compensated flow control valve.

For Ag high flow, it is recommended that the hydraulic motor be connected to the top SCVs (85 cc high flow pump).

High-flow scraper hydraulics is not recommended for motor application.

Pressure-compensated flow control valve is used to

regulate hydraulic motor speed. Connect load-sense line to pressure line after control valve.


EC82310,0000EF5-19-05AUG20

Component Identification and Location [Ag]

SCVs are color coded for easier identification. Hose identification kits are available from your John Deere dealer.


SCV Numbers and Corresponding Colors	
SCV	
Number	Color
I	Green
II	Blue
III	Brown
IV	Black
V	Violet
VI	Gray
VII	White
VIII	Light Green

Standard Flow Hydraulics

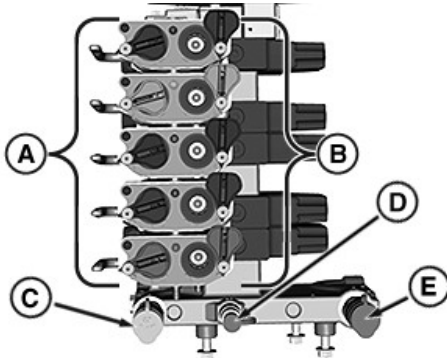


RXA0177997—UN—20MAY20

Component Identification and Location [Ag]—Standard Flow with Power-Beyond in Upper Location

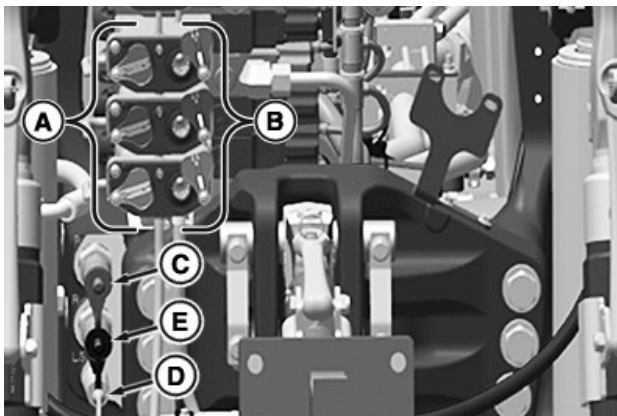

RXA0178744—UN—16JUL20

Component Identification and Location [Ag]—Standard Flow with Power-Beyond in Hitch Casting

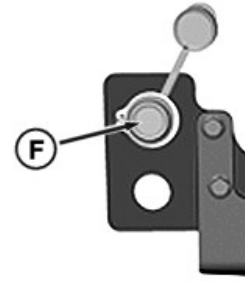


RXA0177998—UN—20MAY20

Component Identification and Location [Ag]—Standard Flow: (F) Sump Coupler—Motor Case Drain

- A—Extend Couplers
- B—Retract Couplers
- C—Power-Beyond: Pressure Coupler
- D—Power-Beyond: Load Sense Coupler
- E—Power-Beyond: Return Coupler (Motor Return)
- F—Sump Coupler (Motor Case Drain)


1/2 inch SCVs VII and VIII are only available as field installation kits.

High-Flow Hydraulics

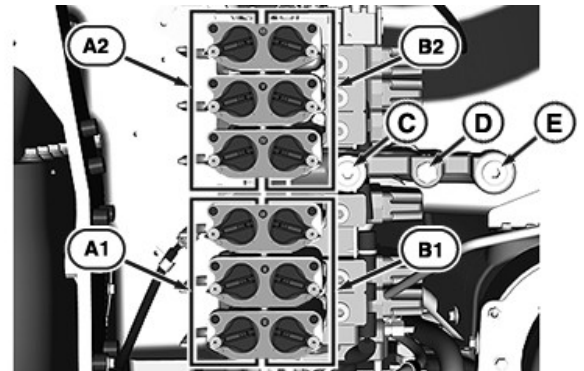


RXA0178141—UN—10JUN20

High-Flow SCV with Couplers I—VI

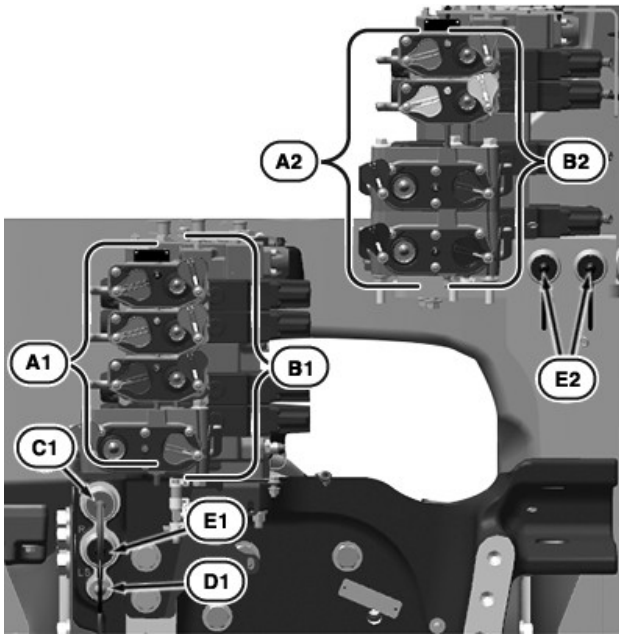

RXA0178746—UN—17NOV20

High-Flow SCV with Couplers I-VIII

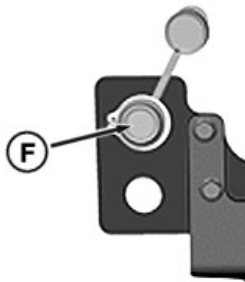

RXA0177998—UN—20MAY20

Component Identification and Location [Ag]—High-Flow Hydraulics: (F) Sump Coupler—Motor Case Drain


- A1—Extend Couplers (Primary Hydraulic Pump)
- A2—Extend Couplers (Secondary Hydraulic Pump)
- B1—Retract Couplers (Primary Hydraulic Pump)
- B2—Retract Couplers (Secondary Hydraulic Pump)
- C—Power-Beyond: Pressure Coupler
- C1—Power-Beyond: Pressure Coupler (Primary Hydraulic Pump)
- C2—Power-Beyond: Pressure Coupler (Secondary Hydraulic Pump)
- D—Power-Beyond: Load Sense Coupler
- D1—Power-Beyond: Load Sense Coupler (Primary Hydraulic Pump)
- D2—Power-Beyond: Load Sense Coupler (Secondary Hydraulic Pump)
- E—Power-Beyond: Return Coupler (Motor Return)
- E1—Power-Beyond: Return Coupler (Motor Return) (Primary Hydraulic Pump)
- E2—Power-Beyond: Return Coupler (Motor Return) (Secondary Hydraulic Pump)

For high-flow hydraulic systems with:

- Six SCVs:
 - I—III (A1, B1) are supplied by the primary pump.
 - IV—VI (A2, B2) (If Equipped) are supplied by the secondary pump. These SCVs are recommended for orbital motor use.


- Eight SCVs:
 - I-IV (A1, B1) are supplied by the primary pump.
 - V-VIII (A2, B2) are supplied by the secondary pump. These SCVs are recommended for an orbital motor or air seeder use.
 - VII—VIII. A tractor equipped with SCVs VII and VIII is also equipped with Intelligent Power Management (IPM). If an air seeder is connected to SCV VI—VIII, follow the guidelines found in the air seeder operators manual (example: John Deere 1870 or 1895 Air Seeder). See Drivetrain Protection in the Drivetrain section of this Operator's Manual.

Connecting Implements to High-Flow Hydraulics SCVs

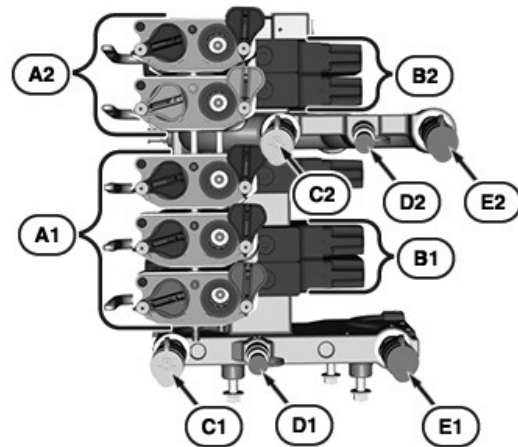


RXA0178144—UN—17JUN20

High Flow Hydraulic SCV Stack—Five SCVs with Power-Beyond in Upper Location

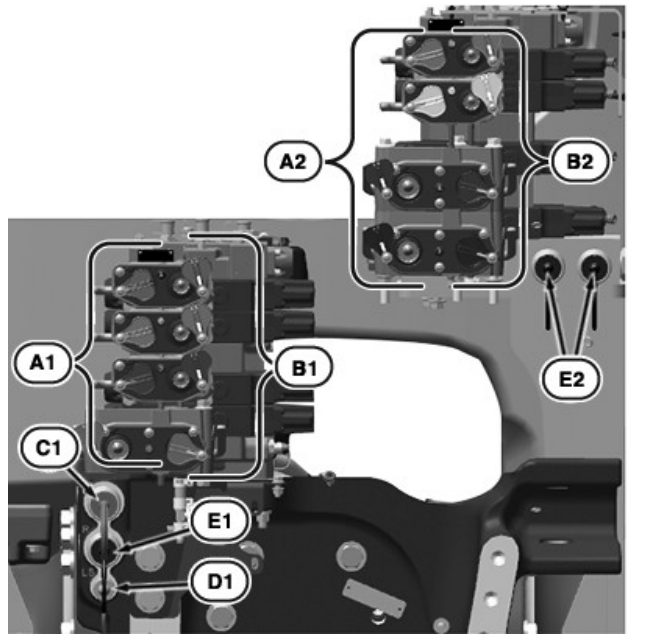

RXA0178746—UN—17NOV20

High Flow Hydraulic SCV Stack—Eight SCVs with Power-Beyond in Hitch Casting

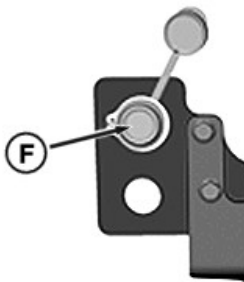

RXA0177998—UN—20MAY20

Component Identification and Location [Ag]—High-Flow Hydraulics: (F) Sump Coupler—Motor Case Drain

- A1—Extend Couplers (Primary Hydraulic Pump)
- A2—Extend Couplers (Secondary Hydraulic Pump)
- B1—Retract Couplers (Primary Hydraulic Pump)
- B2—Retract Couplers (Secondary Hydraulic Pump)
- C1—Power-Beyond: Pressure Coupler (Primary Hydraulic Pump)
- C2—Power-Beyond: Pressure Coupler (Secondary Hydraulic Pump)
- D1—Power-Beyond: Load Sense Coupler (Primary Hydraulic Pump)
- D2—Power-Beyond: Load Sense Coupler (Secondary Hydraulic Pump)
- E1—Power-Beyond: Return Coupler (Motor Return) (Primary Hydraulic Pump)
- E2—Power-Beyond: Return Coupler (Motor Return) (Secondary Hydraulic Pump)
- F—Sump Coupler (Motor Case Drain)


IMPORTANT: Avoid damage to the hydraulic and cooling systems due to overheating. Ensure that the implement is properly connected to the hydraulic system.

This system is not recommended for high-flow scraper hydraulics.


The high-flow hydraulic system utilizes two pumps. The pumps consist of a:

1. Primary hydraulic pump supplying SCVs (A1) and (B1). The primary pump is recommended for high pressure and low flow functions, such as air seeders, large cylinders, and active down force systems.
2. Secondary hydraulic pump supplying SCVs (A2) and (B2). Secondary hydraulic pump is recommended for low pressure and high flow functions. Most hydraulic motors use 19—26.5 L/min (5—7 gal/min) per motor and a pressure of around 1450 psi (100 bar) to operate. The secondary hydraulic pump can:
 - a. Operate hydraulic motors such as air seeders, sprayers, and vacuum planters. Using the secondary hydraulic pump when operating hydraulic motors:
 - Can improve fuel economy, reduce power loss, and reduce heating of hydraulic oil.
 - Reduces hydraulic system interactions with steering, brakes, raise, lower, active down force, and so forth.
 - b. Provide high pressure to the same functions as the primary hydraulic pump, however:
 - The benefits of the improved fuel economy and reduced power loss disappear.
 - There is an increased chance of system interactions with hydraulic motors being on the same pump as other hydraulic functions which typically means increased vacuum level or blower motor speed fluctuations.
 - Under some conditions, more heat can be generated which places increased load on the cooling system.

Connecting Implements to Air Seeder Special High-Flow Hydraulics SCVs

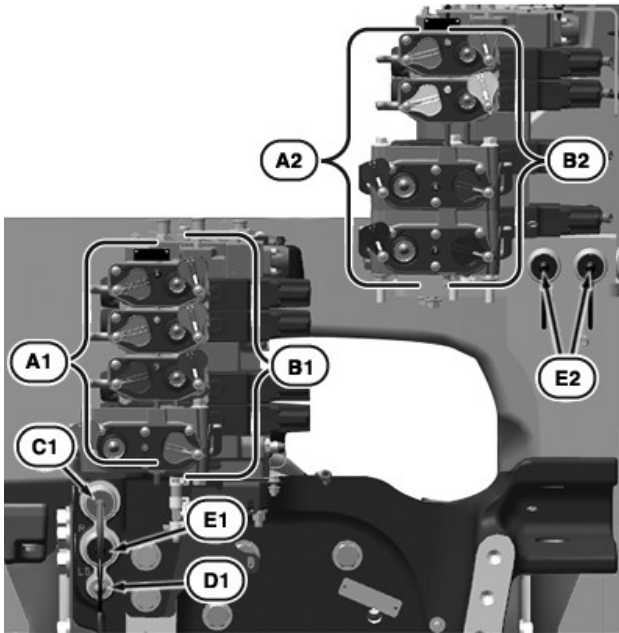

RXA0178746—UN—17NOV20
High-Flow Hydraulic SCV Stack

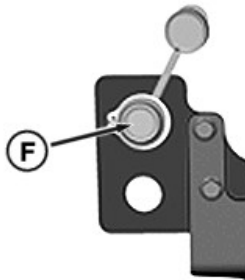

RXA0177998—UN—20MAY20
Component Identification and Location [Ag]—High-Flow Hydraulics: (F) Sump Coupler—Motor Case Drain

- A1—Extend Couplers (Primary Hydraulic Pump)
- A2—Extend Couplers (Secondary Hydraulic Pump)
- B1—Retract Couplers (Primary Hydraulic Pump)
- B2—Retract Couplers (Secondary Hydraulic Pump)
- C1—Power-Beyond: Pressure Coupler (Primary Hydraulic Pump)
- D1—Power-Beyond: Load Sense Coupler (Primary Hydraulic Pump)
- E1—Power-Beyond: Return Coupler (Motor Return) (Primary Hydraulic Pump)
- E2—Power-Beyond: Return Coupler (Motor Return) (Secondary Hydraulic Pump)
- F—Sump Coupler (Motor Case Drain)

IMPORTANT: Avoid hydraulic and cooling system overheating. Ensure that the implement is correctly connected to the hydraulic system.

- Recommended setup for high-flow agriculture applications, connect the:
 - Hydraulic motor supply to the secondary hydraulic pump SCVs (A2) and (B2).
 - Hydraulic motor return coupler to a Power-Beyond return coupler connection (E2).

- It is not recommended to connect scraper hydraulic systems to the high-flow SCVs.

The high-flow hydraulic system utilizes two pumps:

- Primary hydraulic pump supplying SCVs (A1) and (B1).
- Secondary hydraulic pump supplying SCVs (A2) and (B2).

Primary Hydraulic Pumps SCVs

Use these SCVs for high pressure and low flow functions, such as large cylinders and active down force systems.

Secondary Hydraulic Pump SCVs

Use these SCVs for low pressure and high flow functions, such as hydraulic motor operation associated with air seeders, sprayers, and vacuum planters.

Operating hydraulic motors through the secondary hydraulic pump:

- Reduces hydraulic system interactions with steering and brakes, raise and lower functions, and active down force.
- Improves fuel economy, decreases power loss, and reduces heating of hydraulic oil.

EC82310,0000EF7-19-02NOV20


Using Hydraulic Spray Pumps [Ag]

IMPORTANT: For motors using the SCV pressure and return couplers, avoid damage to the hydraulic system pump seals due to high-pressure oil trapped between the SCV and the pump. To stop the pump:

- Always move the SCV lever to the float position, which allows the motor to coast to a stop.
- Never move the SCV lever to the neutral position as this action can cause the motor to stop abruptly.

NOTE: Connecting the hydraulic motor to the 85 cc high-flow pump is the preferred method of connection.

1. Follow the recommendations provided by the spray pump manufacturer for pump model selection, setup, and operation.

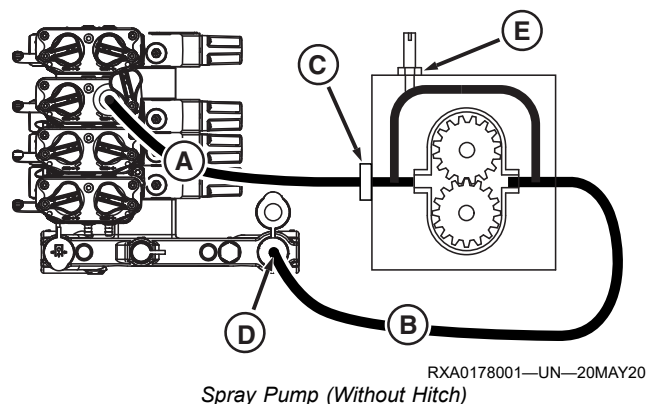

A—Pressure Line
B—Return Line
C—Inlet Line Orifice (Remove)
D—Power-Beyond Return Coupler—Motor Return
E—Needle Valve (Closed)

2. Connect the motor pressure line to the retract port of the SCV (right-hand side).

In general:

- Select the smallest displacement motor recommended for multiple hydraulic function operation. The smaller displacement lowers total hydraulic flow demand and improve overall system performance.

- Use SCV:

- III, IV, or V for a standard hydraulic system.
- III or IV for a high-flow hydraulic system with a hitch.
- IV or V for a high-flow hydraulic system without a hitch.

3. Connect the return line to the Power-Beyond return coupler.

IMPORTANT: Some motors are not equipped with over-speed protection. Extended operation above the recommended speed can cause failure.


4. Activate the SCV by:

- a. Moving the SCV lever forward to the retract detent position.
- b. Adjusting the hydraulic flow rate to the pump manufacturers guidelines.

5. Shut off the spray pump by moving the SCV control lever to the float position (full forward and down).

EC82310,0000EF6-19-04AUG20

Implement Connection Example [Ag]: Closed Center Valve and Pump at High Pressure—Less Hitch

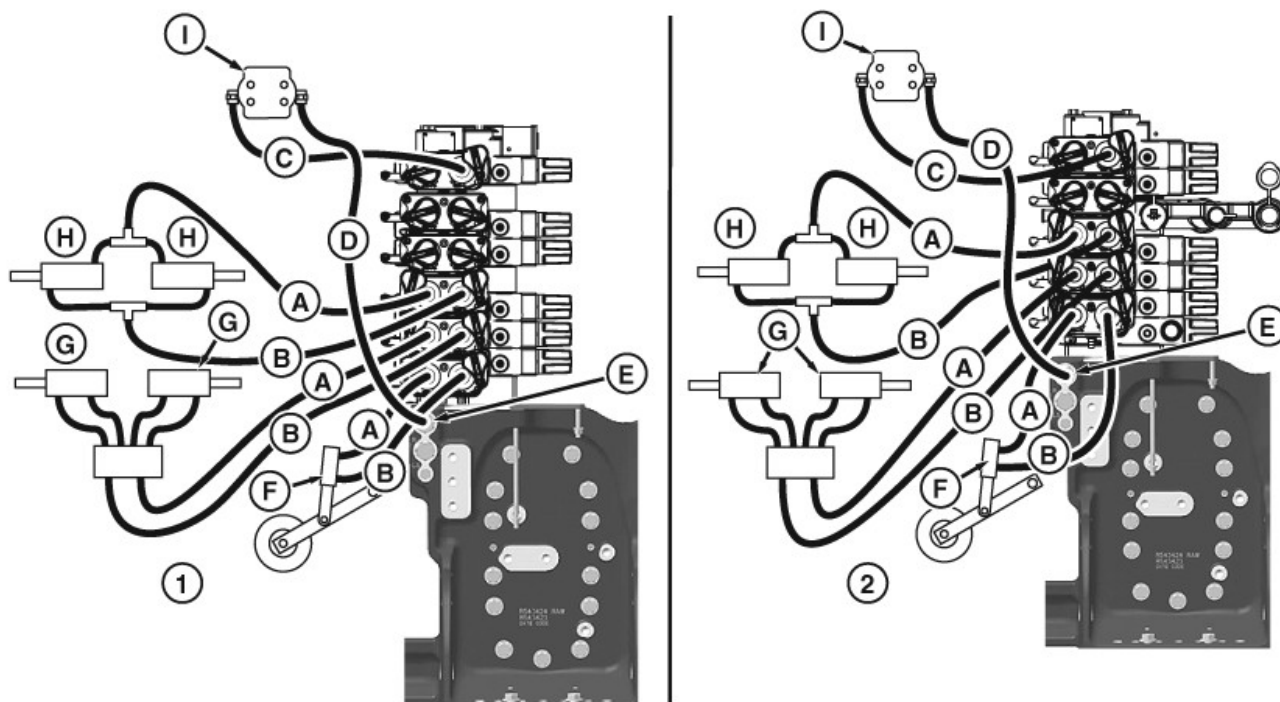

RXA0185298—UN—01SEP21

- 1—Standard-Flow Hydraulics
- 2—High-Flow Hydraulics
- A—Extend Coupler Line
- B—Retract Coupler Line
- C—Pressure Line
- D—Return Line

IMPORTANT: To avoid damage to the hydraulic system seals due to the incorrect positioning of the SCV levers after the hydraulic motor is shutoff:

- Always move the SCV lever to the float position, which allows the motor to coast to a stop.
- Never move the SCV lever to the neutral position as this action can cause the motor to stop abruptly.

NOTE: Connecting the hydraulic motor to the secondary high-flow pump is the preferred method of connection.


- E—Power-Beyond Return Coupler—Motor Return
- F—Raise/Lower Cylinder
- G—Markers
- H—Fold
- I—Hydraulic Motor

In this application:


- The hydraulic return coupler is routed to the Power-Beyond return port.
- The hydraulic motor receives pressure oil from the SCV retract port.
- If the hydraulic oil return hose is:
 - Connected to the Power-Beyond port, a special return hose tip is not required.
 - Not connected to the Power-Beyond port, use a special return hose tip to connect the hydraulic oil return to any of the left-hand side SCV couplers.

EC82310,0000EF8-19-02SEP21

Implement Connection Example [Ag]: Planter with Vacuum Motor and Return Line to SCV Using Motor Return Tip

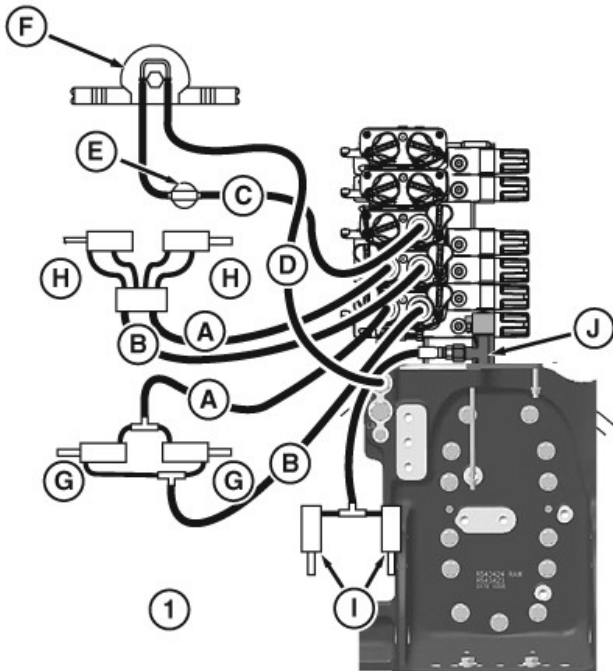

- 1—Standard-Flow Hydraulics
- 2—High-Flow Hydraulics
- A—Extend Coupler Line
- B—Retract Coupler Line
- C—Pressure Line
- D—Return Line
- E—Flow Control Valve

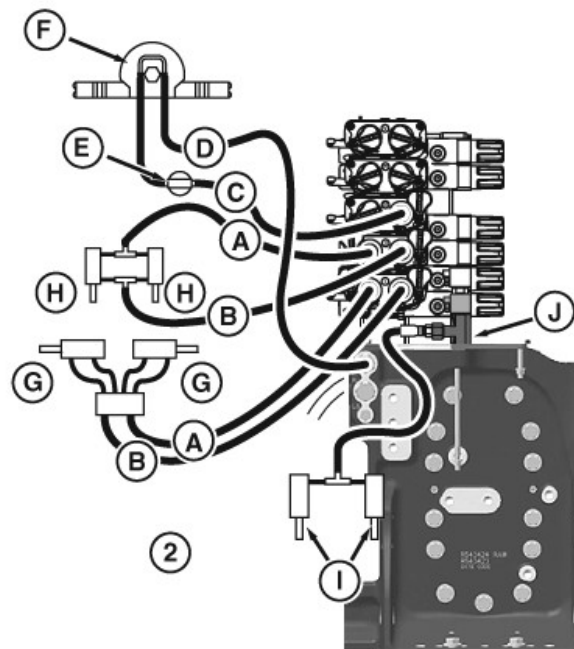

- F—Vacuum Motor
- G—Marker
- H—Fold
- I—Special Hose Tip
- J—Implement Lift Assist
- K—T-fitting and Hydraulic Hose

RXA0185299—UN—01SEP21

IMPORTANT: Avoid damage to the hydraulic oil. If the ambient air temperature is high, hydraulic oil can overheat when the hydraulic pump operates at maximum pressure.

- Flow control valve controls the flow with standard-flow hydraulics.
- Valve is used to control the oil flow with high-flow hydraulics.

Avoid damage to the hydraulic system seals due to the incorrect positioning of the SCV levers after the hydraulic motor is shutoff:

- Always move the SCV lever to the float position, which allows the motor to coast to a stop.
- Never move the SCV lever to the neutral position as this action can cause the motor to stop abruptly.

Avoid damage to the hydraulic system seals due to high-pressure hydraulic return oil moving back toward the motor through the SCV connection. The installation of a special return hose tip with a check valve is required.


NOTE: Connecting the hydraulic motor to the secondary high-flow pump is the preferred method of connection.

In this application:


- A vacuum motor, similar to a planter blower, receives pressure oil from the SCV retract coupler.
- If using an SCV to control the flow to the vacuum motor, use the SCV panel for standard-flow or high-flow hydraulics. If the planter is equipped with a flow control valve on the vacuum motor it needs to be in the wide-open position.
- Connect the lift assist cylinders with a T-fitting and a hydraulic hose to the hitch-lowering valve. The hitch lever controls the lift assist cylinders.

EC82310,0000EFB-19-02SEP21

Implement Connection Example [Ag]: Planter with Vacuum Motor and Return Line to Motor Return—With Hitch and Implement Lift Assist

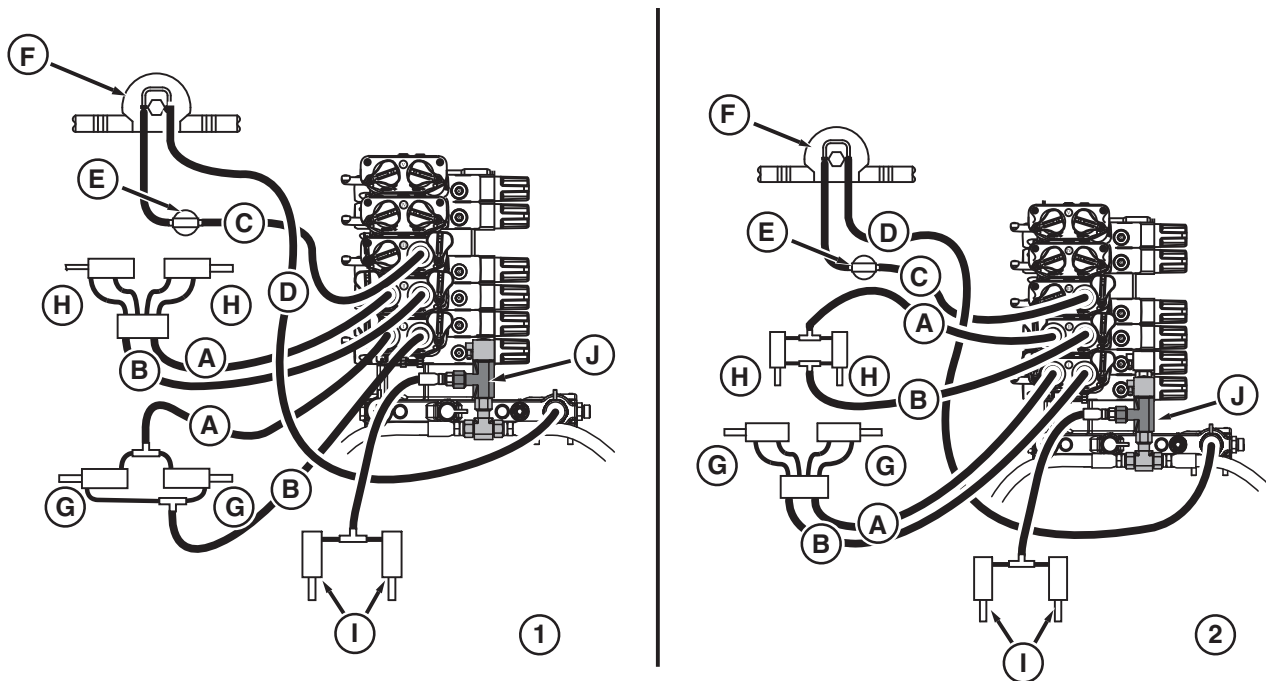

RXA0178004—UN—17JUN20

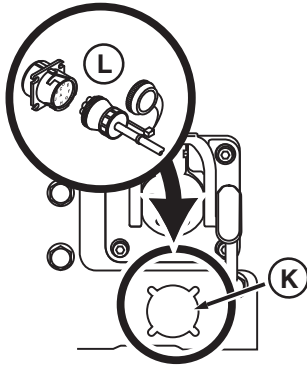

RXA0178005—UN—20MAY20

- 1—Standard-Flow Hydraulics
- 2—High-Flow Hydraulics
- A—Extend Coupler Line
- B—Retract Coupler Line
- C—Pressure Line
- D—Return Line (Power-Beyond Return Coupler—Motor Return)
- E—Flow Control Valve
- F—Vacuum Motor
- G—Markers
- H—Fold
- I—Implement Lift Assist
- J—T-Fitting and Hydraulic Hose
- K—9-Pin Implement Connector
- L—9-Pin Connector for TouchSet™ Depth Control

IMPORTANT: Avoid damage to the hydraulic oil. If the ambient air temperature is high, hydraulic oil can overheat when the hydraulic pump operates at maximum pressure.

- Flow control valve controls the flow with standard-flow hydraulics.
- Valve is used to control the oil flow with high-flow hydraulics.

Avoid damage to the hydraulic system seals due to the incorrect positioning of the SCV levers after the hydraulic motor is shutoff:

- Always move the SCV lever to the float position, which allows the motor to coast to a stop.
- Never move the SCV lever to the neutral

position as this action can cause the motor to stop abruptly.

Avoid damage to the hydraulic system seals due to high-pressure hydraulic return oil moving back toward the motor through the SCV connection. The installation of a special return hose tip with a check valve is required.


NOTE: Connecting the hydraulic motor to the secondary high-flow pump is the preferred method of connection.

In this application, the:

- Vacuum motor receives pressure oil from the SCV retract coupler.
- Flow control valve is:
 - Set in a wide-open position.
 - Controlled by the tractor panel.
- Return oil is routed to the Power-Beyond return port.
- Return hose can be connected directly to the left-hand side of coupler three. For:
 - Standard-flow hydraulics equipped with a special return hose tip.
 - High-flow hydraulics equipped with a special planter return hose tip.
- Implement lift assist cylinders are connected to the hitch-lowering valve using a T-fitting and a hydraulic hose.
 - The hitch lever controls the implement lift assist cylinders when activating the hitch valve.
 - SCV I is used to control both the hitch valve and the implement lift assist.
 - The 9-pin implement connector harness contains a loop circuit that disables the tractor hitch control unit when it is connected to the 9-pin connector for TouchSet™ depth control that is wired into tractor main electrical harness.

EC82310,0000EFE-19-02NOV20

Implement Connection Example [Ag]: Pressure Control Valve Applications—Less Hitch (Grain Drills or Air Seeders with Constant Down-Pressure System)

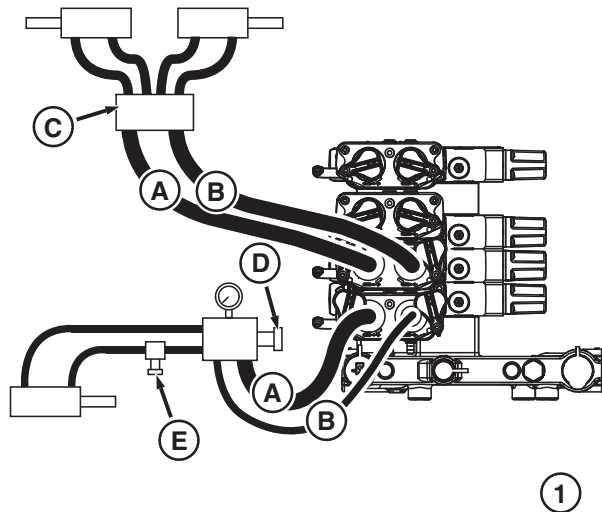

- 1—Standard-Flow Hydraulics
2—High-Flow Hydraulics
A—Extend Coupler Line
B—Retract Coupler Line
C—Selector Valve


IMPORTANT: Avoid damage to the hydraulic oil. Using more than one implement requiring the use of active downforce can damage the hydraulic system due to overheated hydraulic oil when:

- The ambient air temperature is high.
- The hydraulic pump is set to operate at maximum pressure.

If the ambient air temperature is high do not use more than one implement at any given time.

Avoid damage to the hydraulic system seals due to the incorrect positioning of the SCV levers after the hydraulic motor is shutoff. After the hydraulic motor is shutoff:

- Always move the SCV lever to the float position, which allows the motor to coast to a stop.
- Never move the SCV lever to the neutral position as this action can cause the motor to stop abruptly.

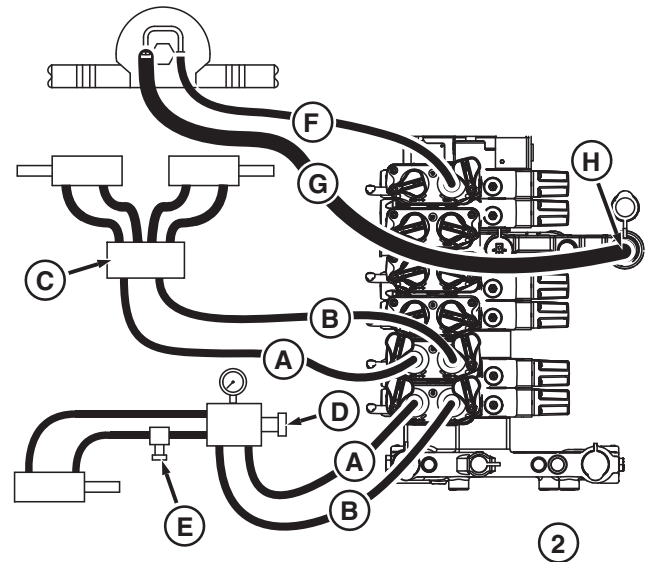

- D—Pressure Control Valve
E—Transport Lock Valve
F—Pressure Line
G—Return Line (Power-Beyond Return Coupler—Motor Return)
H—Special Hose Tip

Avoid damage to the hydraulic system seals due to high-pressure hydraulic return oil moving back toward the motor through the SCV connection: Route the return oil to the:

- Extend port of the SCV. This option requires the installation of a special return hose tip.
- Power-Beyond return port. This option does not require the installation of a special return hose tip.


NOTE: Connecting the hydraulic motor to the secondary high-flow pump is the preferred method of connection.

In this application:

- The vacuum motor receives pressure oil from the retract port of SCV.
- When using implements requiring active down force, set the hydraulic pump to operate at maximum pressure by:
 - Setting the flow control to continuous.
 - Move the SCV lever to the detent position.

EC82310,0000F01-19-02NOV20

Implement Connection Example—High-Flow Hydraulics [Ag]: Implement Control Valves—Less Hitch

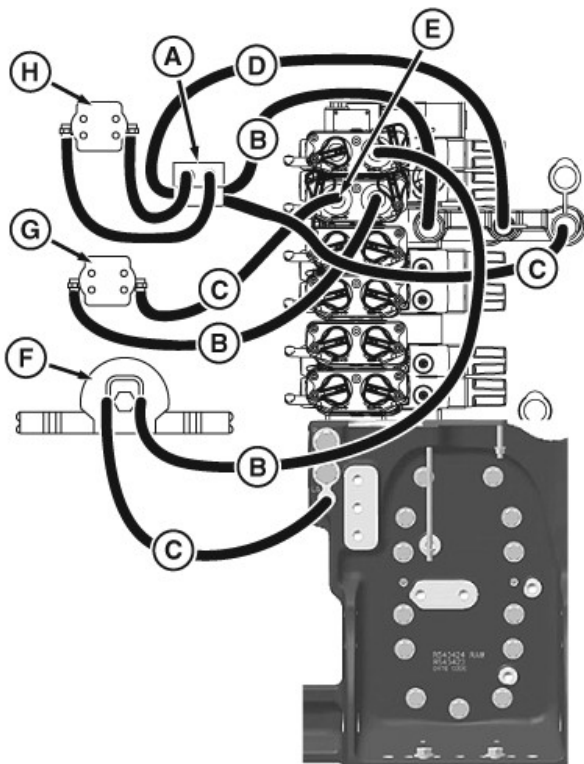

RXA0185300—UN—01SEP21

- A—Pressure Line
- B—Return Line (Power-Beyond Return Coupler—Motor Return)
- C—Variable Rate Drive (Power-Beyond Pressure Coupler)
- D—Power-Beyond Load Sense Line
- E—Return Hose Tip
- F—Vacuum Motor
- G—Hydraulic Motor
- H—Hydraulic Motor

IMPORTANT: Avoid damage to the hydraulic system seals due to the incorrect positioning of the SCV levers after the hydraulic motor is shutoff:

- Always move the SCV lever to the float position, which allows the motor to coast to a stop.
- Never move the SCV lever to the neutral position as this action can cause the motor to stop abruptly.

Avoid damage to the hydraulic system seals due to the high-pressure hydraulic return oil moving back toward the motor through the SCV connection. Routing the return oil to the:

- Extend port of the SCV requires the installation of a special return hose tip.
- Power-Beyond return port does not require the installation of a special return hose tip.

NOTE: Connecting the hydraulic motor to the secondary high-flow pump is the preferred method of connection.

In this application, the:

- Secondary hydraulic pump operates the:
 - Hydraulic motors.
 - Vacuum motor.
- Return oil is routed to the high-flow Power-Beyond return port. If the return hose is equipped with a special return hose tip, it can be connected directly to left-hand side of coupler.
- Hydraulic motor (G) receives pressure oil from the retract port of SCV. Since the return oil is routed to the extend port of an SCV, a special return hose tip is required.
- Hydraulic motor (H):
 - Receives pressure oil from the Power-Beyond port.
 - Return oil is routed to the Power-Beyond return port.


EC82310,0000F06-19-02SEP21

Component Identification and Location [Scraper]

SCV covers are color coded for easy identification.

SCV Numbers and Corresponding Colors	
SCV	
Number	Color
I	Green
II	Blue
III	Brown
IV	Black
V	Violet
VI	Gray


Standard-Flow Hydraulics

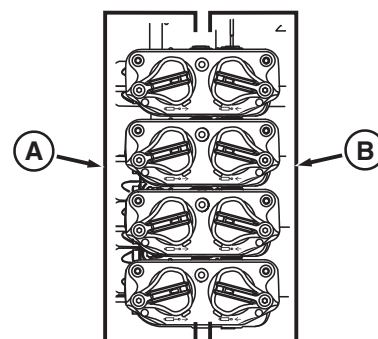

RXA0179031—UN—11AUG20

- A—Extend Ports
- B—Retract Ports

High-Flow Hydraulics (Premium)

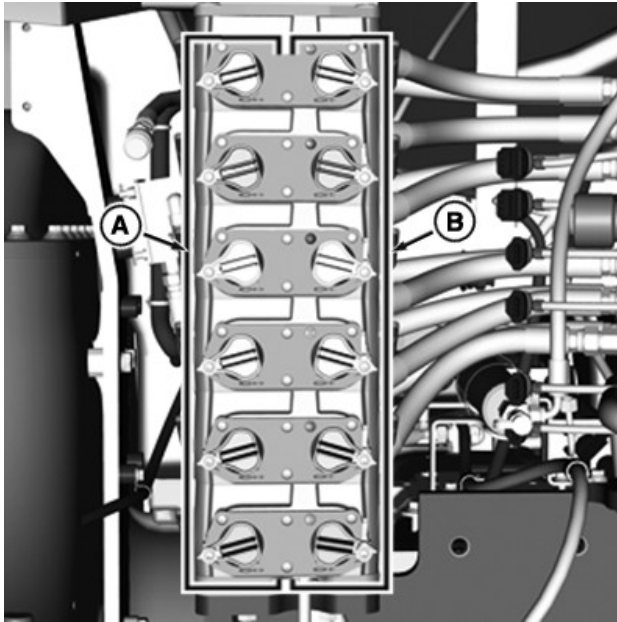


RXA0178008—UN—20MAY20

A—Extend Ports
B—Retract Ports

Both the primary hydraulic pump and the secondary hydraulic pump supply hydraulic oil to all six SCVs.

Features	SCV Coupler Option
	Premium
3/4" Connection	Yes
Float	Yes
Couple/Decouple Under Pressure	Yes
Breakaway Capability	Yes

Select SCV Coupler

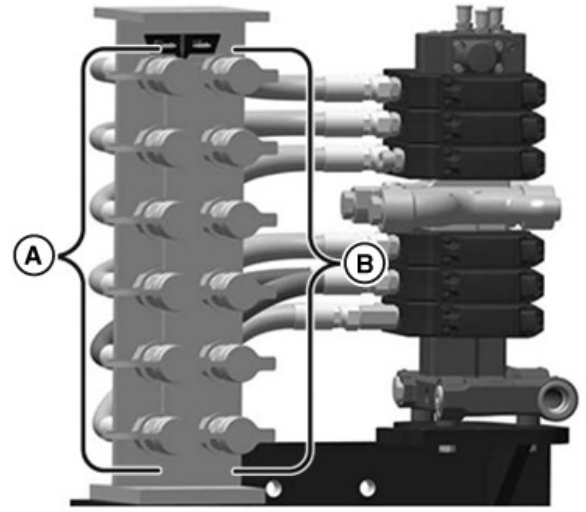

RXA0178009—UN—20MAY20

A—Extend Ports
B—Retract Ports

Features	SCV Coupler Option
	Select
3/4" Connection	Yes
Float	Yes
Couple/Decouple Under Pressure	No
Breakaway Capability	No

EC82310,0000F07-19-02NOV20

Scraper Hydraulic Hose Tips [Scraper]

Recommended John Deere scraper hydraulic hose tips for hoses with flat face O-ring seal connectors and couplers with O-ring boss ports.


Size			Part Number	
Hydraulic Hose		SCV Coupler mm (in)	Hose Tip	Hose-to-Coupler Adapter
Dash Number	Inner Diameter mm (in)			
-8	12.5 (0.50)	12 (0.5)	AR94522 ^a	38H1161
-12	19 (0.75)		AN233013	38H1163
		19 (0.75)	AT117365 ^b	

^aStandard Ag Coupler

^bHigh Flow Coupler

EC82310,0000F08-19-12MAY20

Implement Connection Example [Scraper]: Pulling 1, 2, and 3 Scrapers

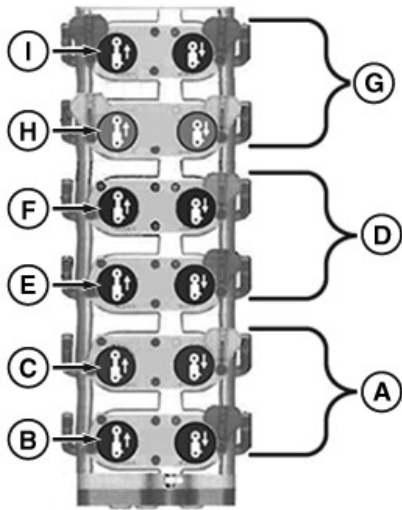

RXA0178010—UN—20MAY20

Pull Scraper Connection Examples

- A—Scraper 1
- B—SCV 1 (Lift Cylinders)
- C—SCV 2 (Gate/Dump Cylinders)
- D—Scraper 2
- E—SCV 3 (Lift Cylinders)
- F—SCV 4 (Gate/Dump Cylinders)
- G—Scraper 3
- H—SCV 5 (Lift Cylinders)
- I—SCV 6 (Gate/Dump Cylinders)

EC82310,0000F09-19-11JUN20

TouchSet™ Depth Control

TouchSet™ Depth Control Settings and Adjustments

CAUTION: Avoid personal injury or death. Do not attempt to install depth control sensors on implements not intended for this system. See implement operator's manual.

While engine is running, moving the implement control unit, sensor, connectors, or linkages can result in unexpected movement. Stay clear of implement when starting engine.

TouchSet™ depth control allows a frequently used height and depth to be set and easily recalled. To use TouchSet™ depth control, SCV I must be properly connected and set to feature mode.

For more information on:

- Proper connection, see Attach Implement and Control System in this Operator's Manual section.
- Feature mode, see SCV Settings—Feature Mode in Selective Control Valves section of this Operator's Manual.
- Height and depth settings, see SCV Settings—Flow Adjustment in Selective Control Valves section of this Operator's Manual.

SCV lever adjustments:

- To move implement to upper or lower set point, briefly hold SCV lever in extend detent or retract detent position.
- To adjust implement position up or down by a fixed amount, tap SCV lever into extend or retract position.

For more information on SCV lever positions, see SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual.

KD34109,000058D-19-24MAY21

Connect/Disconnect the Implement Position Connector

CAUTION: Prevent possible personal injury. To prevent implement movement, before connecting/disconnecting implements, always:

1. Shut off the engine.
2. Move the SCV lever to the neutral position.
3. Lock out the SCV controls.

IMPORTANT: Always shut off the engine before connecting or disconnecting the implement position connector. Connecting or disconnecting the implement position connector with the engine running can cause:

- The implement not to respond to commands.
- Diagnostic Trouble Codes (DTC) to appear.


If a DTC appears or the implement fails to respond to commands, reset the implement position connector. See Reset the Implement Position Connector.

Connect the Implement Position Connector

1. Position the rear of the tractor at the front of the implement.
2. Shut off the engine.

CAUTION: Prevent personal injury and equipment damage. Always set the hitch pin into the locked position.

3. Attach the implement to the drawbar.
4. Connect the implement hydraulic hoses. See Connect/Disconnect Hydraulic Hoses in the Hydraulic Connections section of this Operator's Manual.

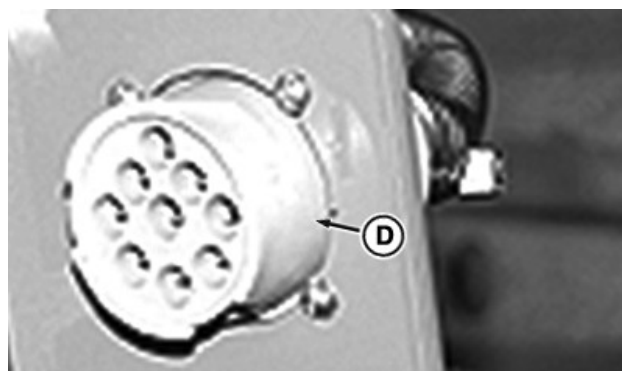

RXA0179273—UN—20AUG20
Tractor Wiring Harness Connector (D) is on a Bracket to the Right of the SCV Stack

5. Install the implement position connector to the tractor wiring harness connector (D).

Disconnect the Implement Position Connector

1. Shut off the engine.
2. Uninstall the implement position connector from the tractor wiring harness connector.
3. Disconnect the implement hydraulic hoses.
4. Detach the implement from the drawbar.

Reset the Implement Position Connector

To reset the implement connection:

1. Shut off the engine and allow the CommandCenter™ to shut down completely.
2. Disconnect the implement harness from the implement connector.

3. Start the tractor and allow the CommandCenter™ to start completely.
4. Shut off the engine and allow the CommandCenter™ to shut down completely.
5. Connect the implement harness to the implement connector.
6. Start the engine and allow the CommandCenter™ to start completely.
7. Operate the implement. If a DTC appears or the implement fails to respond to commands, see your John Deere dealer.

TS36762,0000202-19-26AUG21

Laser Scraper Control [Ag]

Laser Scraper—Scrapers Equipped with Scraper Control Unit

 **CAUTION:** Avoid personal injury or death. While engine is running, moving the scraper control unit, connectors, or linkages can result in unexpected movement. Stay clear of implement when starting engine.

NOTE: The system is used primarily in areas requiring an automated laser guidance system for scraper applications.

Automatic scraper control system allows raising, lowering, and setting the depth for the implement electronically without leaving the cab.

Setup

1. Connect implement to tractor using SCV I, III, or V.
2. Set connected SCV to AUTO. See SCV Settings—Feature Mode in Selective Control Valves section of this Operator's Manual.
3. Set flow for connected SCV. See SCV Settings—Flow Adjustment in Selective Control Valves section of this Operator's Manual.


Activation

To activate automatic scraper control system, briefly move corresponding SCV lever to extend detent or retract detent position. For more information on SCV lever positions, see SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual.

KD34109,000058E-19-10NOV20

Scraper Information [Scraper]

Scraper Operation Cycle

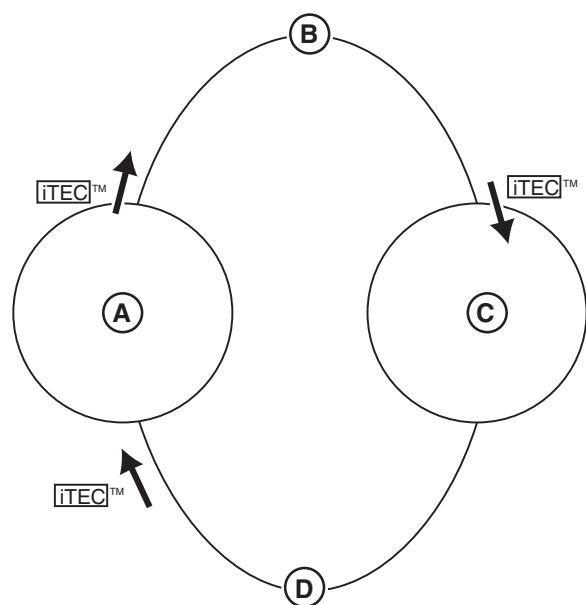

RXA0179362—UN—26AUG20

Scraper Cycle Diagram

A—Dig Area
B—Transport—Loaded
C—Dump Area
D—Transport—Unloaded

IMPORTANT: Operating the tractor with three scrapers requires the tractor and all scraper pans be equipped with hydraulic trailer brakes. See Towed Loads and Transport with Ballast in the Transport Section of this Operator's Manual.

Never exceed:

- Maximum tractor ballast of 28123 kg (62000 lb) with 65% on the front axle.
- 10206 kg (22500 lb) maximum scraper tongue load with short scraper drawbar.
- 8391 kg (18500 lb) maximum for scraper tractors with regular long scraper (Ag) drawbar support.

Towed Scrapers

Scraper Tractor Application Guidelines	
Trailer Brakes	Maximum Towed Load
Without	1.5 times tractor weight ^a
With	4.5 times tractor weight.

^aLimited to 32 km/h (20 mph) without trailer brakes

Follow manufacturer's Scraper Operation Recommendations and instruction in attaching and using scraper:

NOTE: Following these operating guidelines could result in extended tractor and scraper life as well as increased production.

- Limit depth of cut to maintain a loading speed no greater than 6.2 km/h (3.8 mph).¹ For maximum power performance operate in 5th forward gear.
- Maintain minimum engine rpm of 1850 or higher in the cut.
- Ballast tractor correctly to maintain optimum slip of 8-12%.
- Shallow cuts at higher speeds will extend drivetrain life and increase overall productivity.
- Use iTEC™ (Intelligent Total Equipment Control) to combine downshifts/upshifts, raise/lower scrapers or other functions when returning to dig area or to/from transport part of cycle. (See Intelligent Total Equipment Control (iTEC™) Section.)
- Drawbar height should be set so scraper cutting edge hits the ground before the scraper bottom. See Scraper operator's manual.
- Load downhill and/or towards the fill area when conditions allow.
- Set scraper(s) on ground before top loading.
- Activate differential lock before loading, disengage before turning.
- Use of differential lock should be limited to tough and wet areas or during the cut.
- Do not downshift below ground speeds of 6.2 km/h (3.8 mph) when under load.¹
- Reduce speed, and shift down before descending a hill.
- When possible load in 6th gear or above and target 1900-2150 rpm.
- Minimize all steering input during scraper loading.
- Avoid high speed dynamic maneuvers especially when loaded. (Sudden turns, transitions from slopes to flat surfaces, or heavy or sudden braking maneuvers.)
- Do not load in a turn.
- Do not turn tires or tracks into the tongue of the scraper.
- Maintain a smooth haul road and fill area.
- See operators manual for operating/service instructions and AutoLoad™ setup if equipped.

Efficiency Manager™ Recommendations

NOTE: Using AutoLoad™ will exit Efficiency Manager™.

- Use Transmission Efficiency Manager™ for transport.
- Use both Efficiency Manager™ speed settings for transport. One speed setting at transport speed and

¹ These values vary depending upon the tractor configuration.

the other at digging speed. Use the second Efficiency Manager™ speed setting to downshift tractor and bring ground speed closer to dig speed before switching to manual mode.

Example:

- Use set speed 2 for transport, set speed 1 for approaching loading and unloading area.
- Disengage efficiency manager before entering the cut.

RD47322,00009DE-19-26AUG21

Weight Transfer Limits

IMPORTANT: Do not exceed 10206 kg (22500 lb) maximum scraper tongue load transfer to short scraper drawbar and 8391 kg (18500 lb) maximum scraper tongue load transfer to long scraper drawbar. Excess weight transferred to tractor may cause structural or drivetrain damage.

When pulling a direct mounted scraper a portion of scraper and payload weight will be transferred to tractor. This additional weight on tractor can significantly improve productivity during the load cycle, especially when pulling two scrapers in tandem. After first scraper is loaded, tractor will have more pulling capability and will be able to load second bowl much faster, resulting in significantly reduced cycle times.

RD47322,00000EC-19-07JAN19

Scraper/Tractor Attachment

IMPORTANT: Failure to observe operating limits and follow proper operating procedures may reduce life of tractor and cause premature chassis, drivetrain and track system failures.

Proper machine operation is important to extend life of tracks, drivetrain and undercarriage, avoid downtime, and maximize operating efficiency.

Tongue Height

Height of scraper tongue determines angle of cutting edge relative to ground. If tongue is too low, bottom of scraper bowl will drag in cut. If tongue is too high, scraper will be difficult to control in cut. Optimum height for tongue is 46 to 53 cm (18 to 21 in) from ground. Adjust tongue up or down through assemblies of hitch and yoke. When operating in soft conditions raising tongue height may improve ground clearance during transport. Tongue of rear scraper should be set at same height as front. See scraper operator's manual.

Drawbar Height

Drawbar height should be set so scraper cutting edge hits the ground before scraper bottom. See scraper operator's manual.

RD47322,00000ED-19-07JAN19

Loading Techniques

Loading Methods


There are three common loading techniques.

- Pull Loading - tractor pulling scraper(s) is preferred loading method. Generally the most economical method for loading scrapers.
- Push Loading - uses separate vehicle to push scraper. Only push load a scraper which is designed to be push loaded (i.e. ejector models). It is critical that push vehicle speed not exceed pull tractor speed or track overrun and slippage on drive wheels can result.

IMPORTANT: To prevent excessive shock loading into tractor through drawbar and hydraulic system during loading sequence when top loading, always lower scraper to ground before beginning loading cycle.

- Top Loading (i.e. excavator) - uses scraper as a haul unit loaded by an excavator.

Working Cycle Automation

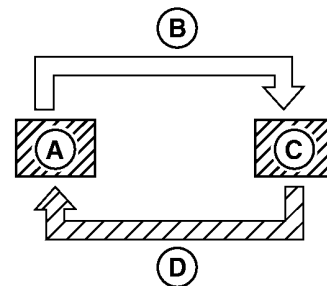

RXA0119628—UN—09AUG11

Working Cycle Automation

- A— Dig Area
- B— Loaded Transport
- C— Dump Area
- D— Unloaded Transport


Use iTEC™ (Intelligent Total Equipment Control) to combine downshifts and upshifts, raise or lower scrapers or automate other functions when returning to dig area (A) or entering loaded (B) or unloaded transport (D) parts of cycle. See Intelligent Total Equipment Control (iTEC™) section of this Operator's Manual.

Use Efficiency Manager™ for transport portions of

cycle, not during loading operations. See e18™ Set Speeds and Efficiency Manager™ in e18™ PowerShift™ Transmission section of this Operator's Manual.

Limit depth of cut to maintain a loading speed higher than 6.4 km/h (4 mph)

Loading Sequence

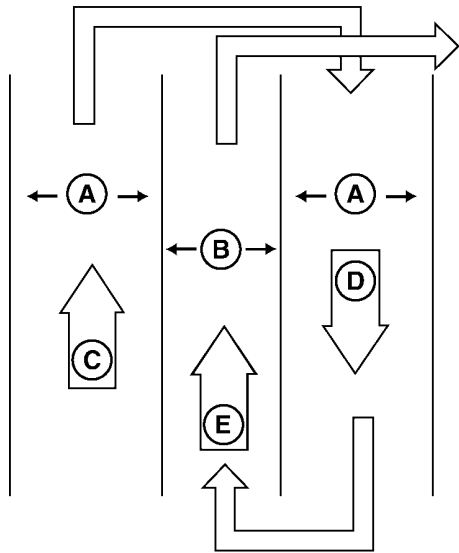

RXA0119629—UN—09AUG11

- A— Scraper Width
- B— Less Than Scraper Width
- C— First Cut
- D— Second Cut
- E— Third Cut

After making first cut (C), make second cut (D) parallel to first at a distance from first cut that is less than scraper width (B). On third pass (E) pick up material between first two cuts.

When loading a direct mounted scraper in tandem with another scraper it is most efficient to load front scraper bowl first.

RD47322,00000EE-19-12NOV19

Connect AutoLoad™ Harness

IMPORTANT: Always shut off the engine before connecting or disconnecting the AutoLoad™ harness. Connecting or disconnecting the AutoLoad™ harness with the engine running can cause:

- The scraper pan to not respond to Autoload™ commands.
- Diagnostic Trouble Codes (DTC) to appear.

If a DTC appears or the AutoLoad™ harness fails to respond to commands, reset the harness. See Reset the AutoLoad™ Harness.

1. Shut off the engine.



RXA0179346—UN—24AUG20

AutoLoad™ Harness Connector Outlet is Above the SCV Stack

2. Connect the AutoLoad™ harness from the scraper to the tractor AutoLoad™ harness connector outlet (A).
3. Refer to the Scraper Operation label for proper scraper operation or Scraper Operation Cycle in this Operator's Manual section.

Reset the AutoLoad™ Harness

To reset the harness connection:

1. Shut off the engine and allow the CommandCenter™ to shut down completely.
2. Disconnect the AutoLoad™ harness from the connector outlet.
3. Start the tractor and allow the CommandCenter™ to start completely.
4. Shut off the engine and allow the CommandCenter™ to shut down completely.
5. Connect the AutoLoad™ to the connector outlet.
6. Start the engine and allow the CommandCenter™ to start completely.
7. Operate the scraper pan. If a DTC appears or the AutoLoad™ fails to respond to commands, see your John Deere dealer.

AK08008,0000B3C-19-27AUG21

AutoLoad™ Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



AutoLoad™

RXA0180073—UN—09OCT20

3. AutoLoad™

Access Application Through Navigation Bar:



AutoLoad™

RXA0168458—UN—30MAY19

Press AutoLoad™ button on navigation bar below display.

KD34109,000063A-19-12OCT20

AutoLoad™ Settings


The AutoLoad™ application is used to access and adjust AutoLoad™ settings. AutoLoad™ only functions in tractor gears 5—13.

NOTE: If a window shade appears saying that the SCV function stalled and to increase the flow rate, verify that the tractor is in one of the required gears (5—13).

When an AutoLoad™ scraper is connected to the tractor, the SCV page displays with the connected SCV (I, III, and/or V) in feature mode. For more information, see SCV Settings in Selective Control Valves section of this Operator's Manual. For the best reading accuracy, perform the drawbar sensor calibration annually. For the

calibration procedure, see Drawbar Sensor Calibration in Service—Check section of this Operator's Manual.

NOTE: Some items only display if the machine is equipped with the associated option.

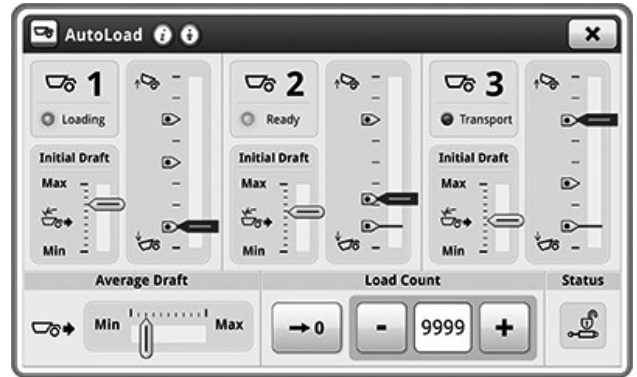

RXA0180074—UN—09OCT20

AutoLoad™ Example

Items Accessible on AutoLoad™ Main Page:



Status Indicator

RXA0177921—UN—14MAY20

NOTE: A module is displayed for each attached AutoLoad™ compatible scraper.

Scraper Position Status Indicator — view the status of the scraper position relative to the set points. See AutoLoad™ Settings—Scraper Status in this Operator's Manual section.



Initial Draft

RXA0180085—UN—09OCT20

NOTE: A module is displayed for each attached AutoLoad™ compatible scraper.

Initial Draft — view and adjust the current initial draft setting. See AutoLoad™ Settings—Initial Draft in this Operator's Manual section.



RXA0180092—UN—09OCT20

Scraper Position

NOTE: A module is displayed for each attached AutoLoad™ compatible scraper.

Scraper Position — view and adjust the current scraper position and set points. See AutoLoad™ Settings—Scraper Position in this Operator's Manual section.



RXA0180075—UN—09OCT20

Average Draft

Average Draft — view and adjust the current average draft setting. See AutoLoad™ Settings—Average Draft in this Operator's Manual section.



RXA0180071—UN—09OCT20

Load Count

NOTE: After the counter reaches the maximum value (9999 loads), the count resets to zero.

Load Count — view and manually adjust the number of scraper loads hauled. To enable/disable automatic load counting, see AutoLoad™ Settings—Advanced in this Operator's Manual section.



RXA0180090—UN—09OCT20

Reset Load Count

Reset Load Count — reset the load count to zero. A page will display to verify the selection.



RXA0180094—UN—09OCT20
SCVs Unlocked



RXA0180093—UN—09OCT20
SCVs Locked

Status — view the SCVs locked or unlocked status.



RXA0167071—UN—21MAR19

Advanced Settings

Advanced Settings — access further adjustments and less common settings. See AutoLoad™ Settings—Advanced in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the Generation 4 Display operator's manual.

Example:



RXA0180089—UN—09OCT20

Position

NOTE: Different modules may be available for your application.

Position — quick access to position module.

KD34109,000063B-19-21APR21

AutoLoad™ Settings—Scraper Status

The status indicator shows the current position of the scraper relative to the set points. The color of the indicator will change depending on the current status (phase of the digging process) of the AutoLoad™ system.

Status Indicators:



RXA0177921—UN—14MAY20

Status Indicator

- **Black Indicator** — the indicator is illuminated black when the scraper is in the Transport position.
- **Gray Indicator** — the indicator is not illuminated and appears gray when a Fault is detected.
- **Green Indicator** — the indicator is illuminated green when the scraper is in the Entering the cut position.
- **Blue Indicator** — the indicator is illuminated blue when the scraper is in the Loading position.
- **Orange Indicator** — the indicator is illuminated orange when the scraper is in the Ready position.

KD34109,000063C-19-24NOV20

AutoLoad™ Settings—Initial Draft

The Initial Draft setting is means by which the operator can tune the work load of the system when entering the cut. The setting affects roughly the first half of the cut.

NOTE: A module is displayed for each attached AutoLoad™ compatible scraper.

Procedure to Modify:



RXA0180084—UN—09OCT20
Increase



RXA0180078—UN—09OCT20
Decrease

Select (+/++) to increase or (-/-) to decrease the setting. Use (++) and (- -) to increase or decrease the value at a higher rate than (+) and (-).



Value

RXA0180098—UN—09OCT20

The value is shown in the display box which is highlighted while being adjusted.



Indicator

RXA0169143—UN—25JUN19

The indicator shows the current setting. The closer to the maximum setting (250), the more aggressive (heavier) the cut will be. The closer to the minimum setting (0), the less aggressive (lighter) the cut will be.

KD34109,000063D-19-10DEC20

AutoLoad™ Settings—Scraper Position

The Scraper Position page shows the current position of

the scraper and allows adjustments to the scraper set points.

NOTE: A module is displayed for each attached AutoLoad™ compatible scraper.

Procedure to Modify:



RXA0180095—UN—09OCT20

Set Point Indicators

Set Point Indicators — small yellow indicators that represent the three scraper position set points. All three positions must be set for AutoLoad™ to operate.

- Transport (upper)
- Ready (lower)
- Loading (ground level)



RXA0180097—UN—09OCT20

Set Upper Limit

Transport — the desired position for scraper transport. After the scraper is moved to the desired position, select the set upper limit key. The corresponding SCV lever can be moved to extend detent to move the scraper to the transport position. If the scraper is above the set position when the lever is moved, the scraper will not move. For more information on SCV control lever adjustments, see SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual section.



RXA0180086—UN—09OCT20

Set Lower Limit

Ready — the desired dumping position for the scraper. After the scraper is moved to the desired position, select the set lower limit key. The corresponding SCV lever can be moved to retract detent to move the scraper to the ready position. If the scraper is below the set position when the lever is moved, the scraper will not move. For more information on SCV control lever

adjustments, see SCV Control Lever Adjustments in Selective Control Valves section of this Operator's Manual section.



Set Ground Level
RXA0180082—UN—09OCT20

NOTE: John Deere recommends that the drop center blades are lowered to penetrate the ground. Lowering drop center blades allows the outer blades to touch the ground when setting ground level loading (entering the cut) position.

Loading — the desired position for the scraper to enter the cut. After the scraper is moved to the desired position, select the set ground level key.



Scraper Position Indicator
RXA0169140—UN—25JUN19

Position Indicator — indicates the current position of the scraper.

KD34109,000063E-19-16FEB21

AutoLoad™ Settings—Average Draft

The Average Draft setting is means by which the operator can tune the work load of the system after fully entering the cut. The setting affects roughly the last half of the cut. The setting is the same for all scrapers and only set in one location.

Procedure to Modify:



Decrease
RXA0180077—UN—09OCT20



Increase
RXA0180083—UN—09OCT20

Select (+/++) to increase or (-/- -) to decrease the setting. Use (++) and (- -) to increase or decrease the value at a higher rate than (+) and (-).



Input Box
RXA0180098—UN—09OCT20

The value is shown in the display box which is highlighted while being adjusted.



Indicator
RXA0169143—UN—25JUN19

The indicator shows the current setting. The closer to the maximum setting (250), the more aggressive (heavier) the cut will be. The closer to the minimum setting (0), the less aggressive (lighter) the cut will be.

KD34109,000063F-19-16FEB21

AutoLoad™ Settings—Advanced

Advanced Settings allows you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:



Setup Wizard
RXA0180096—UN—09OCT20

AutoLoad™ Setup — the Setup Wizard takes you through the steps to set up the AutoLoad™ scraper positions.



Auto Dimensions



Manual Dimensions

Auto/Manual Dimensions
RXA0180091—UN—09OCT20

Scraper Dimensions — set dimensions using the scraper model or by entering them manually. See AutoLoad™ Settings—Scraper Dimensions in this Operator's Manual section.



ON/OFF
RXA0167187—UN—22MAR19

NOTE: AutoLoad™ will increment the load count each time the automated cut is deactivated, either by manually taking over scraper control or by detenting to the upper set position. If the automated cut is stopped and restarted, the load count increments twice. The load count needs to be manually corrected, if desired. AutoLoad™ counts each individual scraper load, not the number of cycles.

Load Count — select ON to enable or OFF to disable automatic load counting.

KD34109,0000640-19-16FEB21

AutoLoad™ Settings—Scraper Dimensions

Set up scraper dimensions manually or by model.

Procedure to Modify:

To set up by selecting model:



Auto Dimensions

RXA0180072—UN—09OCT20

Auto Dimensions

1. Select Auto Dimensions.



RXA0180076—UN—09OCT20

Model Selection Box

2. Select the model selection box.



RXA0180088—UN—09OCT20

Model List

3. Select the model from the list.

To set up by entering dimensions:

NOTE: Scraper dimensions can only be entered if the tractor, drawbar, and scraper are equipped with AutoLoad™ components.




Manual Dimensions

RXA0180087—UN—09OCT20

Manual Dimensions

1. Select Manual Dimensions.

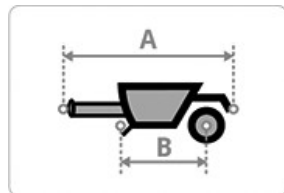

RXA0180081—UN—09OCT20

Dimension Reference

- Dimension A (scraper length) is the distance between the scraper front tongue pin and the rear pin connecting a tandem scraper.
- Dimension B (blade-to-axle) is the distance from the shallowest cutting blade tip to the rear axle.

A

22 ft

RXA0180079—UN—09OCT20

Dimension A

2. Select input box A to enter the scraper length dimension. A number pad will display to enter the dimension.

B

13 ft

RXA0180080—UN—09OCT20

Dimension B

3. Select input box B to enter the blade-to-axle dimension. A number pad will display to enter the dimension.

John Deere Scraper Dimension Chart		
Scraper Model	Scraper Tongue Pin to Rear Pin Length (A)	Scraper Blade to Rear Axle Length (B)
	ft	
1510C	24.3	8.3
1510DC	24.3	8.3
1512C	23.3	7.6
1810C	27.0	9.3
1810DC	27.0	9.3
1812C	24.3	8.3
1812DC	24.3	8.3
1814C	24.6	7.6
1814DC	24.6	7.6
2112C	29.2	9.6
2112DC	29.2	9.6
1512E	27.7	7.8
1612DE	27.7	7.8
1810E	29.2	9.3
2010DE	29.2	9.3
2010DE Two Tire	31.2	10.5
1814E	26.3	7.8
2014DE	26.3	7.8
2112E	31.6	9.8
2412DE	32.8	9.8
2412DE Two Tire	33.9	10.5

KD34109.0000641-19-22FEB21

Tracks—General Information

General Track Use Guidelines

IMPORTANT: Avoid track and track system component damage, pre-condition tracks.

- Before driving tractor on road for first time, pre-condition tracks, see Perform Track Systems Break-In in Service—Break-In (100 Hours or Less) section in this Operator's Manual.
- Avoid traveling at high speeds with new set of tracks and wheels, especially during the first 50-100 hours.

To extend drivetrain and track life, avoid excessive soil compaction, and reduce rolling resistance: avoid adding excessive ballast. Never add ballast that results in operating with heavy loads and with continuous full-power below 6.6 km/h (4.1 mph). For 9RX Narrow [Ag], avoid operation with continuous full-power loads below 7.5 km/h (4.7 mph).

Avoid track and drivetrain damage. For tractors equipped with 30- and 36- inch tracks and 120 inch spacing, never use:

- 3-point hitch
- Spray tanks
- Front-mounted blade
- Scraper

Trash buildup can cause fire from increased friction. Remove trash from trash buildup points between track and tractor frame.

Avoid operating track in grease, oil, or other petroleum chemicals. Avoid spilling these materials on track and wheels during service.

Maximizing Track Life

Track carcasses are designed to exceed tread wear out, so long as integrity of carcass is maintained. It is critical to keep moisture out of the steel carcass and to avoid situations where localized cable overloading could occur. Track machine owners are advised to follow these guidelines to achieve maximum track life and avoid operational problems, all of which results in lower cost per operating hour:

- **Minimize roading. Excessive roading can increase track wear up to 15 times field wear rates**
 - Minimize transport weight during road transport.
 - Reduce maximum travel speed especially during high ambient conditions.
- **Use correct operational techniques**
 - Avoid skidding and tread bar scrubbing on hard surfaces to reduce track wear.
 - Use care when crossing ditches or transitions while making turns. Diagonal crossing of ditches

causes track to become unsupported in the center and with idler hitting opposite embankment, can cause momentary loss of tension that can drop center section down and outside drive or idler wheels, making derailing a much higher risk if in a turn.

- **Maintain correct track tension**
 - Under-tension causes rapid wear on tracks and inside surface of track due to slippage and potentially cause material buildup.
 - Over-tension adds extra load and stress to undercarriage bearings, internal track cables, and track frame.
- **Keep irregular material out of tracks**

Sharp hard material inside the track is primary reason for localized track tears and subsequent entry points for moisture into track carcass.

EC82310,000060F-19-23APR21

Tracks Service

Service information for track system is located in Service sections of this Operators Manual.

Service Tasks	See
Track Wear	Service—Check
Track Alignment	
Track Tension	
Drive and Idler Wheels, and Mid-Rollers	
Trash Buildup	
Drive Wheel Hub Housing Oil	
Mid-Rollers Oil Level	Service—Tighten
Drive Wheel, Idler Wheel, and Mid-Roller Cap Screws	
Track Tension Cylinder	Service—Lubricate

EC82310,0000525-19-22APR21

Seats

Adjust Air Seat



Air Seat

RXA0167353—UN—03APR19

NOTE: Select, premium, or ultimate indicates the comfort and convenience package the feature is included with if not included with all.



Armrest Height Control

RXA0167320—UN—03APR19

Left-Hand Armrest Height — turn adjustment knob counterclockwise to loosen. Move armrest up or down to desired position and tighten by turning knob clockwise.



Armrest Inclination Control

RXA0167321—UN—03APR19

Left-Hand Armrest Inclination — turn adjustment knob to adjust incline angle of armrest.



Swivel Lockout Control

RXA0167322—UN—03APR19

Seat Swivel — place lever in up position to allow seat to swivel. Place in down position (shown) to lock out seat


from swiveling. Seat can be locked out in several positions.



RXA0167344—UN—03APR19

Fore/Aft Attenuation Lockout Control

Fore/Aft Attenuation — place lever in forward position (shown) to allow movement. Place lever in rear position to lock out movement. Seat must be in center position to lock.

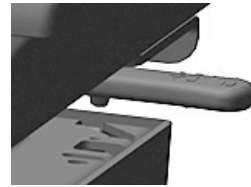

RXA0167345—UN—03APR19

Left/Right Attenuation Lockout Control

Left/Right Attenuation — place lever in forward position (shown) to allow movement. Place lever in rear position to lock out movement. Seat must be in center position to lock.



RXA0167343—UN—03APR19

Ride Firmness Control

Ride Firmness — move lever to one of three levels of ride firmness:


- Most firm (forward position)
- Medium firmness (center position)
- Least firm (rear position)



RXA0167326—UN—03APR19

Seat Height Control


Seat Height — push up (up arrow shown) to raise seat or down (down arrow shown) to lower seat.

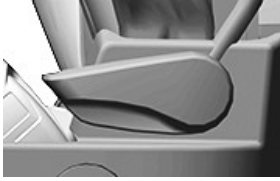

RXA0167340—UN—03APR19

Backrest Angle Control - Select

Backrest Angle (Select) — pull lever up and adjust angle. Release lever when desired angle is reached. Backrest locks into nearest detent.

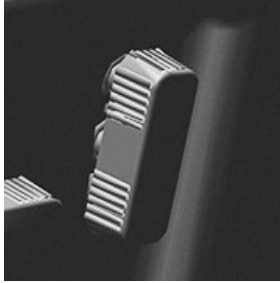

RXA0167327—UN—03APR19

Backrest Angle Control - Premium and Ultimate

Backrest Angle (Premium and Ultimate) — push control in the same direction as desired for backrest to move.



RXA0167341—UN—03APR19

Fore/Aft Position Control - Select


Fore/Aft Seat Position (Select) — pull up on bar and adjust position. Release bar when desired position is reached. Seat locks into nearest detent.



RXA0167328—UN—03APR19

Fore/Aft Position Control - Premium and Ultimate

Fore/Aft Seat Position (Premium and Ultimate) — push control in the same direction as desired for seat to move.

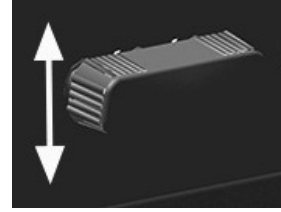

RXA0167329—UN—03APR19

Cushion Tilt Control - Premium and Ultimate

Cushion Tilt (Premium and Ultimate) — push front of control in the same direction as desired for front of cushion to move.



RXA0167342—UN—03APR19

Lumbar Adjustment Control - Select

Lumbar Adjustment (Select) — move lever to adjust amount of lumbar support. Continue to move lever until desired amount of support is reached.



RXA0167330—UN—03APR19

Lumbar Height Control - Premium

Lumbar Height (Premium) — push up (up arrow) to raise lumbar support or down (down arrow) to lower lumbar support.



RXA0167331—UN—03APR19

Lumbar Height Control - Ultimate

Lumbar Height (Ultimate) — push up (top control) to raise lumbar support or down (bottom control) to lower lumbar support.



RXA0167332—UN—03APR19

Lumbar Extension Control - Premium

Lumbar Extension (Premium) — push add (+) or remove (-) to adjust amount of air in lumbar support.



RXA0167333—UN—03APR19

Lumbar Extension Control - Ultimate

Lumbar Extension (Ultimate) — push add (right-hand control) or remove (left-hand control) to adjust amount of air in lumbar support.



RXA0167334—UN—03APR19

Cushion Length Control - Premium and Ultimate

Cushion Length (Premium and Ultimate) — push increase (top) or decrease (bottom) to adjust cushion length.



RXA0167335—UN—03APR19

Back Bolsters Control - Ultimate

Back Bolsters (Ultimate) — push add (+) or remove (-) to adjust amount of air in backrest bolsters.



RXA0167337—UN—03APR19

Massage Control - Ultimate

Massage (Ultimate) — push down (1) to select massage pattern one or up (2) to select massage pattern two. Press the selected pattern again to turn off massaging. Massage feature times out after 10 minutes.



RXA0173802—UN—14JAN20

Vent/Heat Control - Ultimate

Vent/Heat (Ultimate) — push left (blue icon) to select vent or right (red icon) to select heat.



RXA0173801—UN—14JAN20

Vent/Heat Intensity Control - Ultimate

Vent/Heat Intensity (Ultimate) — select one of three settings:

- High (top)
- Off (center)
- Low (bottom)

KD34109,00004B0-19-09DEC20

Operator Presence Sensor

CAUTION: Avoid injury. SCV does not automatically disengage when system senses that operator is out of seat.

If operator leaves seat, an audible warning sounds for 5 seconds when:

- Brake and clutch pedals are not depressed, and machine is stopped in NEUTRAL or speed is zero. Machine goes into PARK after 7 seconds.
- PTO is engaged. If Auto Disengage is ignored, PTO automatically disengages after 7 seconds. For more information on Auto Disengage, see PTO Settings—Auto Disengage in PTO—General Information section of this Operator's Manual.
- SCV lever is in detent flow position.

TS36762,000023D-19-19APR21

Adjust Instructional Seat

CAUTION: Keep all other riders off tractor and equipment to avoid injury. Instructional seat is provided only for training operators or diagnosing machine problems. Always wear seat belt.



RXA0167301—UN—02APR19

Instructional Seat



RXA0167302—UN—02APR19

Backrest Down

Seat Backrest — push backrest forward to use as a writing surface.



RXA0167303—UN—02APR19

Cushion Up

Seat Cushion — push seat cushion up to allow more room for entering and exiting cab.

KT81203,000058D-19-02APR19

Mirrors

Adjust Mirrors

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0173907—UN—15JAN20
Mirror Example — Dual Mirror

Manual Mirror — push mirror edges to adjust angle. Mirrors with one mirror and the bottom mirror on dual mirrors are adjusted manually.



RXA0167461—UN—12APR19
Manual Telescoping Lock Lever

Manual Telescoping — pull lock lever down to allow adjustment. Slide mirror arm to desired position. Push lock lever back up to lock into desired position.



RXA0168462—UN—31MAY19
Electric Mirror Controls Example


Electric mirror controls are next to radio.



RXA0167462—UN—12APR19
Select Left/Right Mirror

Select Mirror — select left-hand arrow to allow adjustments to left-hand electric mirror. Select right-


hand arrow to allow adjustments to right-hand electric mirror.

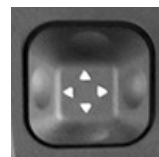

RXA0167463—UN—12APR19
Electric Mirror Adjustment

NOTE: Mirror angle controls are on right-hand side.

Electric Mirror — after selecting mirror to be adjusted, select arrows to adjust mirror angle in corresponding direction. The top mirror on a dual mirror is an electric adjustment.

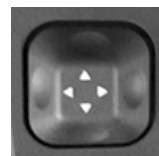

RXA0167463—UN—12APR19
Electric Telescoping Adjustment

NOTE: Telescoping controls are on left-hand side.

Electric Telescoping — after selecting mirror to be adjusted, select left-hand arrow to extend or right-hand arrow to retract mirror arm.



RXA0167464—UN—12APR19
Heat Adjustment



Heated Mirror — push up to turn on or down to turn off mirror heat. Icon is illuminated when heat is on.

KD34109,00004B2-19-16JAN20

Lights

Light Identification (Version A)

Version A does not have the larger Extremity Lights or Registration Plate Lights. Version B has these lights.

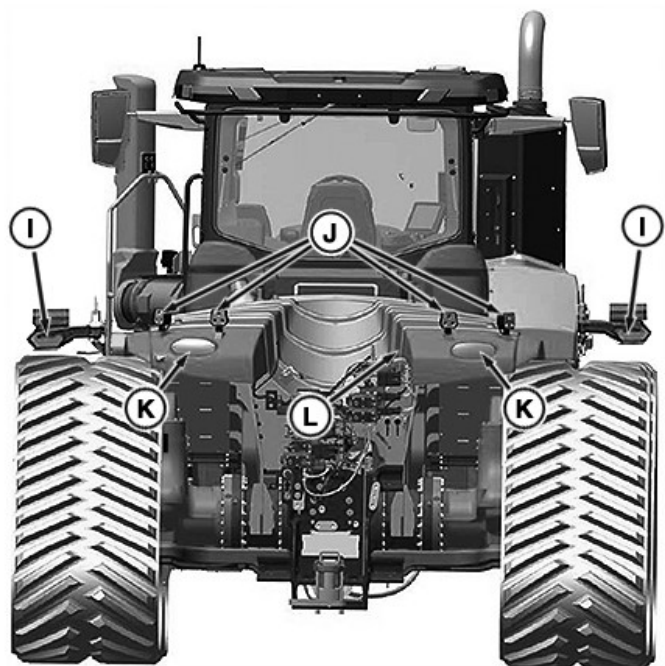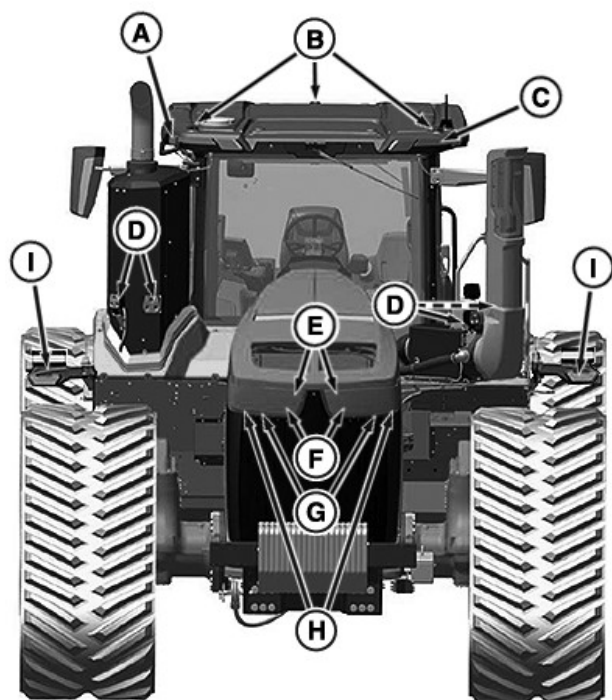

A—Roof Work Lights (Qty 8)
B—Beacon Lights (Qty 3)
C—Hazard Warning Lights (Qty 4)
D—Front Mid-Body Work Light (If Equipped)
E—Headlight Front Work Light
F—Headlight Low Beam - Road


G—Headlight High Beam - Road
H—Headlight Corner Work Light
I—Extremity Warning Lights (Qty 4)
J—Rear Work Lights Fender (Qty 4)
K—Fender Tail Lights
L—Rear Auxiliary Work Light (If Equipped)

RXA0185325—UN—03SEP21

KT81203.0000247-19-02SEP21

Light Identification (Version B)

Version A does not have the larger Extremity Lights or Registration Plate Lights. Version B has these lights.

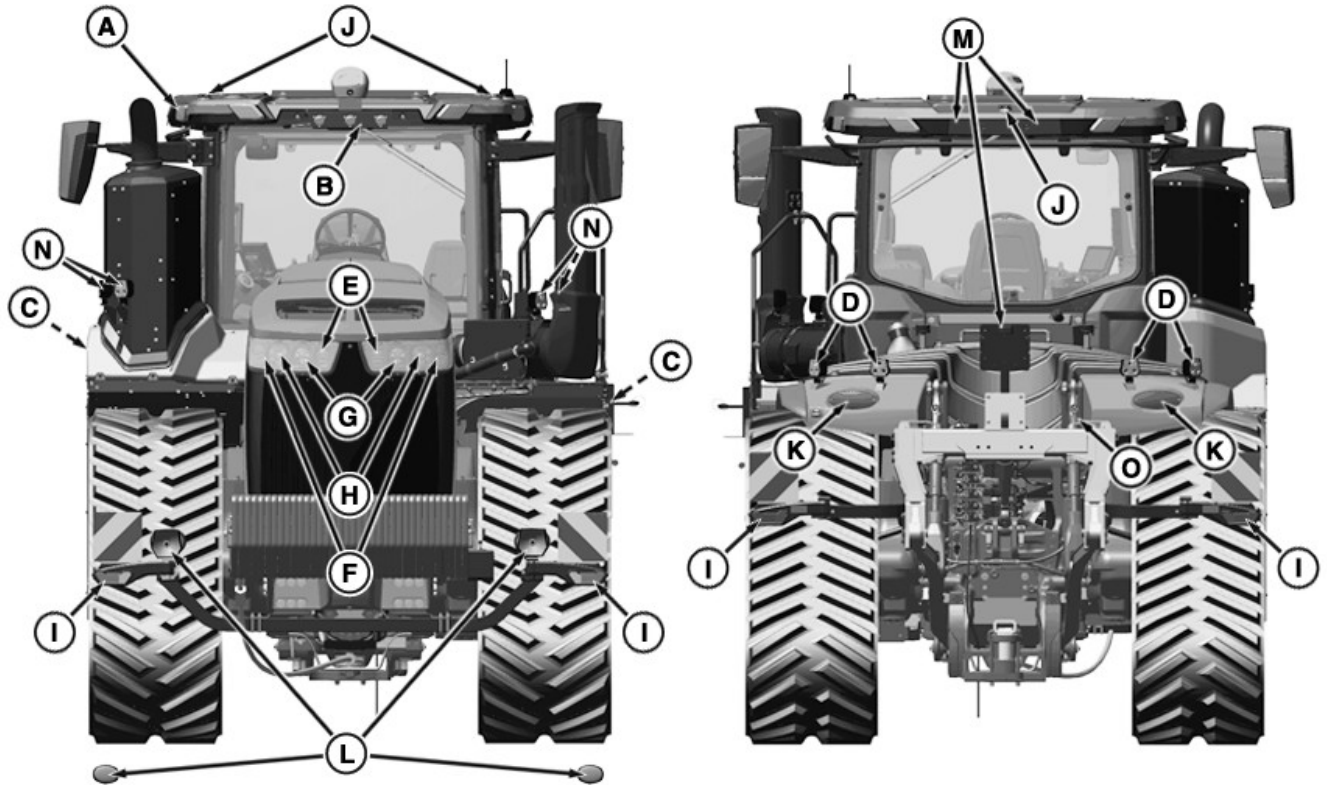

RXA0185326—UN—07SEP21

A—Roof Work Lights (Qty 8)
B—Trailing Lights (If Equipped)
C—Side Marker Lights (If Equipped)
D—Rear Work Lights Fender (Qty 4)
E—Headlight Front Work Light
F—Headlight Corner Work Light
G—Headlight Front Work Light
H—Headlight High Beam—Road

I—Extremity Warning Lights (Qty 4)
J—Beacon Lights (Qty 3)
K—Fender Tail Lights
L—Auxiliary Drive Light (If Equipped)
M—Registration Plate Lights (If Equipped)
N—Front Mid-Body Work Lights (If Equipped) (Qty 4)
O—Rear Auxiliary Work Light (If Equipped)

KT81203,0000248-19-02SEP21

Lights Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



Lights

RXA0168488—UN—05JUN19

3. Lights

Access Application Through Navigation Bar:



Lights

RXA0168455—UN—05JUN19

Press lights button on navigation bar below display.

KD34109,00004D2-19-27AUG19

Lights Settings

Lights application allows you to access light preset configurations. To adjust settings for presets, select corresponding tab. For lights specific to your machine, see Light Identification in this Operator's Manual section. For lighting controls, see Operate Lights in Front Console section of this Operator's Manual.

NOTE: Field lights are configurable. Road lights are not configurable.

Items Accessible on Lights Main Page:

NOTE: Some items only display if machine is equipped with the associated option.



Field Lights Preset 1

RXA0168489—UN—31MAY19

Field Lights Preset 1 — easily turn on a group of frequently used lights. See Lights Settings—Field Lights Presets in this Operator's Manual section.



Field Lights Preset 2

RXA0168490—UN—31MAY19

Field Lights Preset 2 — easily turn on a group of frequently used lights. See Lights Settings—Field Lights Presets in this Operator's Manual section.



Hood/Belt Line Lights

RXA0168491—UN—31MAY19

Hood/Belt Line Lights — toggle between hood and belt line lights when lights are in road mode. See Lights Settings—Hood/Belt Line Lights in this Operator's Manual section.



Highlighted Tab

RXA0168492—UN—31MAY19

Highlighted Tab — indicates which tab is selected.



Light with Fault

RXA0168493—UN—31MAY19

Light with Fault — exclamation point indicates that light is in error. Example: light bulb is burnt out.



Advanced Settings

RXA0167071—UN—21MAR19

Advanced Settings — access further adjustments and less common settings. See Lights Settings—Advanced in this Operator's Manual section.

Implement Light Connection:

7-Pin Outlet — connect implement lights to tractor. See 7-Pin Outlet in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the Generation 4 Display operator's manual.

Example:



Road Lights

RXA0168494—UN—31MAY19

NOTE: Different modules may be available for your application.

Road Lights — quickly toggle between hood and belt line light groups.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the Generation 4 Display operator's manual.

Example:



Road Lights

RXA0168495—UN—31MAY19

NOTE: Different shortcut keys may be available for your application.

Road Lights — quickly toggle between hood and belt line light groups.

KD34109,00004D3-19-15JUN20

Lights Settings—Field Lights Presets

Customize light presets for specific customer needs.

Procedure to Modify:

1. Select desired tab:



Field Lights Preset 1

RXA0168489—UN—31MAY19

- a. Field lights preset 1.



Field Lights Preset 2

RXA0168490—UN—31MAY19

- b. Field lights preset 2.



Linked

RXA0168546—UN—31MAY19

- Select Link on toggle to link paired left-hand and right-hand lights for simultaneous on and off operation on all tabs.



Unlinked

RXA0168547—UN—31MAY19

- Select Unlink on toggle to allow paired left-hand and right-hand lights individual on and off operation on all tabs.



Light

RXA0168548—UN—31MAY19



Light Pair

RXA0168549—UN—31MAY19



Wagon Light

RXA0168550—UN—31MAY19

2. Select desired light, light pair, and/or wagon light keys for lights you want illuminated.



Highlighted Key

RXA0168551—UN—31MAY19

NOTE: Key is highlighted when selected.

KD34109,00004D4-19-05AUG19

Lights Settings—Hood/Belt Line Lights

Hood/belt line lights tab allows you to toggle between hood and belt line lights when lights are in road mode.

Procedure to Modify:



Hood Lights Enabled

RXA0168552—UN—31MAY19

Select to enable hood lights.



Belt Line Lights Enabled

RXA0168553—UN—31MAY19

Select to enable belt line lights.

KD34109,00004D5-19-27AUG19

Lights Settings—Advanced

Advanced settings allows you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:




Check Box - Enabled

RXA0168554—UN—31MAY19

Machine Entrance/Exit Lighting — select to illuminate convenience lights upon entrance and exit of machine. Box will display with a check mark when enabled. For

 convenience light locations, see Light Identification in this Operator's Manual section.



Selection Box

RXA0168555—UN—31MAY19

Engine Off Delayed Lighting — lighting remains on for a specified duration after engine is turned off. Select box to display a list of exit lighting durations to choose from. List also contains OFF to disable exit lighting.



ON/OFF

RXA0167628—UN—26APR19

Daytime Running Lights — lighting to increase visibility during the day while machine is turned on or in motion. Select ON to enable or OFF to disable.

TS36762,000024C-19-14OCT19

Hazard and Extremity Lights

CAUTION: Avoid injury or death caused by a collision with another vehicle. Always:

- Use road lights, extremity lights, and turn signals when operating tractor on a road or highway at night or during the day.
- Follow local laws and regulations for all equipment lighting and marking.
- Comply with all traffic regulations.

Extremity lights alert other vehicles of the tractor's extended width. If the tractor width changes, refer to local laws and regulations to ensure that the tractor remains in compliance.

NOTE: Depending on region and installed equipment, amber hazard lights can cease to operate as indicator lights when the Hazard Switch is activated.

Push hazard lights button to activate flashing hazard and extremity lights.

- For the hazard lights button location, see CommandARM™ Climate, Radio, and Lighting Controls in CommandARM™ section of this Operator's Manual.
- For hazard and extremity lights locations, see Light Identification in this section of this Operator's Manual. Hazard and extremity indicator lights include:
 - Front and rear roof lights.
 - Rear fender lights (equipped with an amber lens).

- Belt line lights.

IMPORTANT: To avoid damage, extremity lights can be retracted when parking tractor in a storage building.

Extremity lights. Extremity lights are lit when these functions are active:

- Hazard flashers.
- Turn indicators.
- Position lamps.

TS36762,0000250-19-03MAR20

Beacon Light

Three beacon lights are on the top of the cab:

- Two beacon lights at each front corner.
- One beacon light at the center rear.

For exact location, see Light Identification in this section of this Operator's Manual.

Push beacon light button to activate rotary beacon light. For beacon light button location, see CommandARM™ Climate, Radio, and Lighting Controls in CommandARM™ section of this Operator's Manual.

TS36762,0000251-19-06FEB20

7-Pin Outlet (Version A Lighting)


CAUTION: Avoid accidents. Always use auxiliary light on towed implement when tractor rear signals and other lights are obscured.

7-pin outlet allows operator to connect implement lights to the tractor.

Contact your John Deere dealer for:

- Matching 7-pin plug.
- Methods to connect tractor light switch with 7-pin connector accessory wires.

Outlet Diagram and Terminal Functions Chart

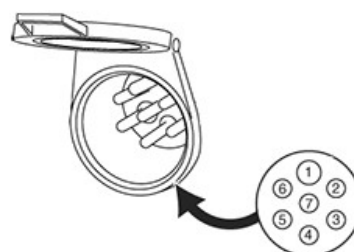

Outlet Diagram

RXA0168557—UN—31MAY19

Lights

Terminal Numbers	Function	
	Rear Connection	Front Connection
1	Ground	
2	Flood (Implement Lights)	
3	Left Turn Signal	
4	Brake Lights	Not Used
5	Right Turn Signal	
6	Tail Light	
7	Accessory	Not Used

KD34109,00004DA-19-27AUG19

7-Pin Outlet (Version B Lighting)


CAUTION: Avoid accidents. Always use auxiliary light on towed implement when tractor rear signals and other lights are obscured.

7-pin outlet allows operator to connect implement lights to the tractor.

Contact your John Deere dealer for:

- Matching 7-pin plug.
- Methods to connect tractor light switch with 7-pin connector accessory wires.

Outlet Diagram and Terminal Functions Chart

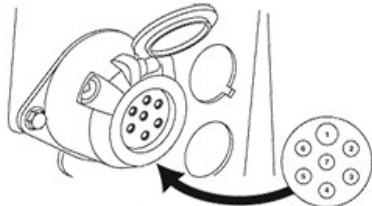

RXA0168556—UN—31MAY19

Outlet Diagram

NOTE: Accessory fuse F11 is removed. Some trailers use this connection for fog lights. This can be enabled by inserting a 30 A fuse into F11.

Terminal Numbers	Function	
	Rear Connection	Front Connection
1	Left Turn Signal ^a	
2	Accessory	
3	Ground	
4	Right Turn Signal ^b	
5	Right Tail Lights ^c	
6	Brake Lights ^d	Not Used

Terminal Numbers	Function	
	Rear Connection	Front Connection
7	Left Tail Lights ^e	

^aIncludes left extremity light.

^bIncludes right extremity light.

^cIncludes right front clearance and right extremity clearance lights.

^dIncludes cab.

^eIncludes license plate, left front clearance, and left extremity clearance lights.

KD34109,00004DB-19-27AUG19

Trailer Lighting

CAUTION: To prevent possible accident, always operate trailering lights when traveling on highway or public roads while towing an implement or trailer.



RXA0177584—UN—24APR20

Use control next to radio to turn on trailering lights, see Operate Lights in Front Console section of this Operator's Manual.

KT81203,00005AF-19-24APR20


Accessories

Right-Hand Side Console



RXA0167972—UN—17MAY19
Right-Hand Side Console Example

NOTE: Some items are only available if machine is equipped with the associated option.

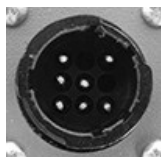

RXA0169821—UN—02AUG19
ISO 11783 Connector

ISO 11783 Connector — use to connect ISO 11783 compliant components.



RXA0167979—UN—17MAY19
CommandCenter™ USB Input

CommandCenter™ USB Input — use to transfer data and reprogram CommandCenter™. Input does not charge devices.



RXA0169780—UN—30JUL19
12 V Accessory Outlets

12 V Accessory Outlet — use to connect auxiliary equipment.



RXA0167982—UN—17MAY19
Outlet Pins

Outlet pins provide the following:

- Ground - pictured at top
- Unswitched battery power - pictured bottom left
- Switched power (key) - pictured bottom right



RXA0167983—UN—17MAY19
Radio AUX and USB Inputs

NOTE: AUX and USB inputs are only available if a radio is equipped.

Radio AUX and USB Inputs — use to connect AUX and USB devices to radio. Provides 500 mA output current for charging USB devices.



RXA0167984—UN—17MAY19
Diagnostic Connector (Dealer Use Only) — used for dealer diagnostics.

KD34109,000052C-19-22MAR21

CommandARM™ Storage



RXA0183536—UN—02JUN21
CommandArm™ Storage Accessories



RXA0167981—UN—17MAY19
12 V Accessory Outlet

12 V Accessory Outlet — use to connect auxiliary equipment.

KD34109,000052D-19-03JUN21


Right-Hand Front Corner Post



RXA0167974—UN—17MAY19

Right-Hand Front Corner Post Example

NOTE: Some items are only available if machine is equipped with the associated option.

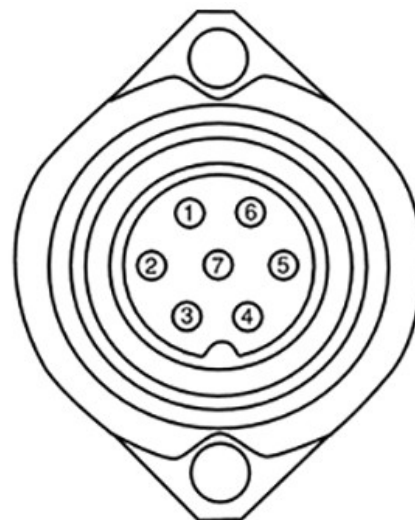

RXA0169832—UN—05AUG19

ISO 11786 Outlet Diagram



RXA0167986—UN—17MAY19

Display Connector

Display Connector — use to connect a universal display.



RXA0167987—UN—17MAY19

Ethernet Connector

Ethernet Connector — use to connect an Ethernet cable.



RXA0167988—UN—17MAY19

GreenStar™ Display Connector

GreenStar™ Display Connector — use to connect GreenStar™ Display.



RXA0167989—UN—17MAY19

ISO 11786 Connector

ISO 11786 Connector — use to connect implements to receive radar or GPS speed signal.

Terminal Numbers	Function
1	True Ground Speed
2	Buffered Wheel Speed
3	—
4	—
5	—
6	Implement Switch
7	Ground

KD34109,000052E-19-13AUG19

Left-Hand Rear Corner Post



RXA0167975—UN—17MAY19

Left-Hand Rear Corner Post Example

NOTE: Some items are only available if machine is equipped with the associated option.



RXA0167981—UN—17MAY19

12 V Accessory Outlet

12 V Accessory Outlet — use to connect auxiliary equipment.



AC Outlets

RXA0167990—UN—17MAY19

AC (Alternating Current) Outlet — use to power devices with AC connections. One of two outlet types displayed will be equipped on machine, 120 V (pictured left) or 230 V (pictured right).

KD34109,000052F-19-09AUG19

Right-Hand Rear Corner Post



Right-Hand Rear Corner Post Example

RXA0167976—UN—17MAY19


NOTE: Some items are only available if machine is equipped with the associated option.



USB Charging Ports

RXA0167985—UN—17MAY19

USB Charging Ports — use to charge devices with USB cable. Provides charging capability of up to 5 A (60 watt) per port.

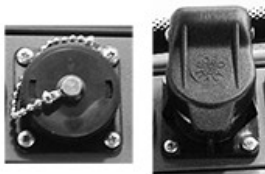

12 V Accessory Outlets

RXA0167980—UN—17MAY19

12 V Accessory Outlet — use to connect auxiliary equipment.



Outlet Pins

RXA0167982—UN—17MAY19

Outlet pins provide the following:

- Ground - pictured at top
- Unswitched battery power - pictured bottom left
- Switched power (key) - pictured bottom right

KD34109,0000530-19-14AUG19

Refrigerator and Cool/Storage Box



Refrigerator and Cool/Storage Box Example

RXA0167977—UN—17MAY19

NOTE: Some items are only available if machine is equipped with the associated option.

Cool/Storage Box Items:



Vent

RXA0167991—UN—17MAY19

Vent — open vent to allow storage contents to match temperature being delivered through HVAC system.

Refrigerator Items:



Power

RXA0167992—UN—17MAY19

Power — press to turn on cooling. Press again to turn off.



Power/Troubleshooting Indicator

RXA0167993—UN—17MAY19

Power/Troubleshooting Indicator — indicates when

power is on or gives flashing patterns for troubleshooting areas when there is a problem. For pattern information, refer to Troubleshooting—Procedures section of this Operator's Manual.



RXA0167994—UN—17MAY19

Cold Setting

Cold Setting — press button to select cold setting. Each press moves to next setting. Indicator for selected setting is illuminated. The larger the indicator, the colder the setting is.

KD34109,0000531-19-21APR21

Sunshade



RXA0169822—UN—02AUG19

Sunshade

Pull-down sunshade reduces glare when operating in bright sunlight. The pull-down sunshade allows operator flexibility in amount of window coverage.

KD34109,0000532-19-02AUG19

Storage Compartments



RXA0177578—UN—23APR20
9RW and 9RX Fender Storage



RXA0167996—UN—17MAY19
9RT Fender Storage

Fender Storage — storage compartment inside cab under passenger/instructional seat.



RXA0167997—UN—17MAY19

Overhead Storage

Overhead Storage — storage compartment on inside roof of cab.



RXA0167998—UN—17MAY19

Operator's Manual Storage

Operator's Manual Storage — compartment on right-hand side of passenger/instructional seat to store Operator's Manual.

KD34109,00005EB-19-04MAY20

Monitor Bracket Mounts



RXA0167999—UN—17MAY19

Monitor Bracket Mount Example

Mount implement monitors using brackets and M10 cap screws. See your John Deere dealer for brackets.

Mounting Locations:


- Front right-hand corner post (two mounts)
- Rear right-hand corner post (two mounts)
- Rear left-hand corner post (one mount) if emergency hammer is not equipped

KD34109,0000534-19-30JUL19

Emergency Exit

If cab door is blocked in an emergency situation, removable rear cab window provides large exit path.

CAUTION: Avoid injury from broken glass. Before using hammer, cover eyes, face, and uncovered skin. Use emergency exit only when cab door is blocked.

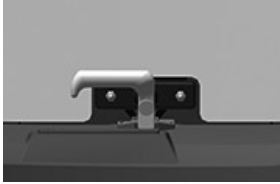

RXA0168000—UN—17MAY19

Rear Window Lever

Rear Window Lever — lift lever and push out glass to exit.



RXA0168001—UN—17MAY19

Emergency Hammer

Emergency Hammer (If Equipped) — use hammer to break window if exits are blocked.

KD34109,00005EC-19-23JUL20

Install Business Band/Citizens Band (CB) Antenna and/or Radio

Custom CB or business band radio installation requires special tools and skills to tune antenna for lowest possible voltage standing wave ratio (VSWR). Qualified professional should be employed or consulted before attempting installation. Contact your John Deere dealer for recommendations. Included specifications are useful to installer.

CAUTION: Avoid personal injury. Never mount business band radio antenna to rear of cab. Never route antenna cable near harness for electrical system controllers or operator controls. Failure to follow these precautions could expose operator to radio frequency energy levels higher than recommended by American National Standards Institute (ANSI) and/or could cause undesirable performance of electronically controlled systems.

Disconnect battery ground cable before any electrical repair.

NOTE: Do not mount microphones or accessories to bottom of radio bezel.

Business band radios are specially licensed radios in

the US and Canada that operate in the UHF/VHF frequency bands.

Specifications for Factory Installed Radio Installation Kit:

- Roof Antenna Mount: NMO type.
- Cable Specifications: Cable length is 3.35 m (11 ft) from antenna mount to PL-259 radio connector. RG-58/U cable has 50 ohms intrinsic impedance.
- Roof Ground Plane: Grounded large antenna counterpoise foil under green cab roof allows installation of either 1/4 or 1/2 wave antenna.
- CB Antenna: Normal CB antenna can be attached to factory installed NMO antenna mount through use of an appropriate adapter. Special CB antenna already equipped with NMO base may alternatively be used.

Procedure to Install:



RXA0168002—UN—17MAY19

Radio Bezel

1. Remove radio bezel by pulling.




RXA0169831—UN—05AUG19

Antenna and Power Cables

2. Release antenna and power cables from bracket.

Power cable wire identification:

- A - Switched power (key) - red
- B - Ground - black
- C - Unswitched power - red

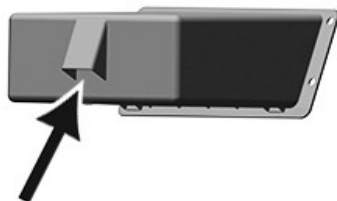


RXA0168004—UN—17MAY19
Hole for Connectors

3. Route cables through hole in back of compartment.
4. Connect cables to radio.
5. Place radio in compartment.
6. Replace radio bezel.

KD34109,0000536-19-16DEC19


Mount StarFire™ Receiver

Mount StarFire™ Receiver to machine using mounting kit and following procedure. To order kit, see your John Deere dealer.

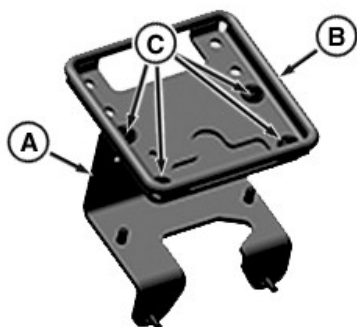

RXA0167843—UN—08MAY19

1. Attach bracket (A) to bracket (B) using cap screws (C).

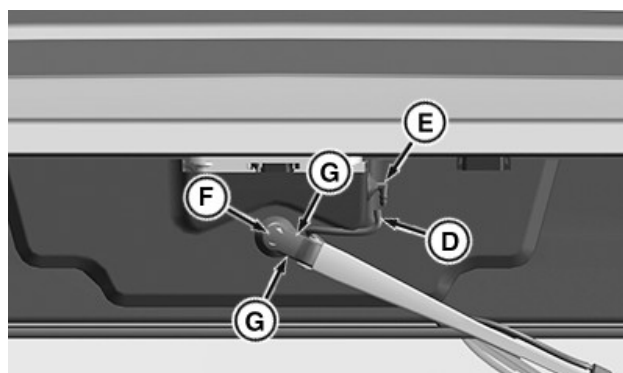

RXA0167897—UN—10MAY19


2. Disconnect front washer fluid hose (D) from fitting (E).
3. Pull tabs (G) apart to remove cover (F).
4. Remove nut from wiper motor shaft.

5. Remove wiper.



RXA0167898—UN—13MAY19

6. Remove cap screws (H).
7. Remove cover (I).

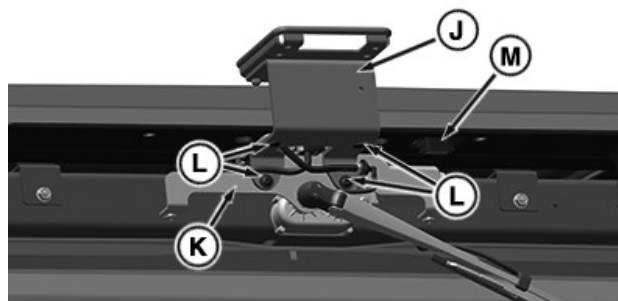

RXA0167845—UN—05AUG19

8. Attach StarFire™ bracket (J) to front wiper support (K) using cap screws (L).
9. Complete steps 2—7 in reverse to reassemble.
10. Mount receiver to bracket.

NOTE: If StarFire™ Integrated Receiver is equipped, it does not function when external StarFire™ Receiver is connected.


11. Connect receiver to connector (M).

KD34109,00004C8-19-19DEC19

Mount RTK (Real-Time Kinematic) Radio

NOTE: If machine was ordered with RTK radio, mounting bracket and radio are installed from factory. Radio must be removed from bracket to drill antenna hole. Reinstall radio and install antenna (located in cab) using information from the following procedure.


Mount RTK radio to machine using mounting kit and following procedure. To order kit, see your John Deere dealer.

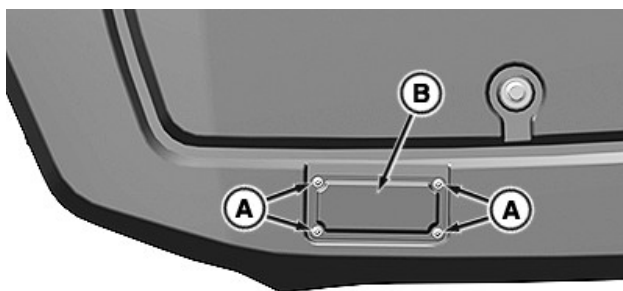

RXA0167853—UN—09MAY19


Right-Hand Side Roof

1. Remove cap screws (A) and cover (B).

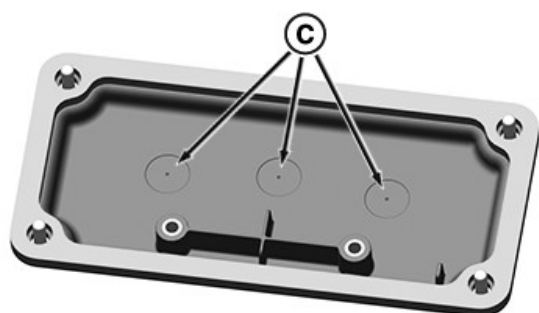


RXA0167854—UN—09MAY19

2. Drill a 31.8 mm (1.25 inch) hole at marker (C) corresponding to antenna location for your radio.

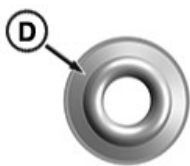


RXA0167855—UN—09MAY19

3. Attach grommet (D) to drilled hole.

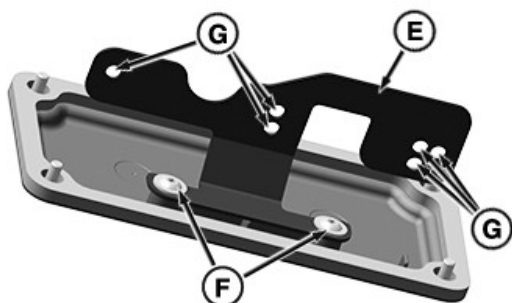

RXA0167856—UN—09MAY19

4. Attach bracket (E) to cover using cap screws (F).
5. Attach radio to bracket using holes (G).

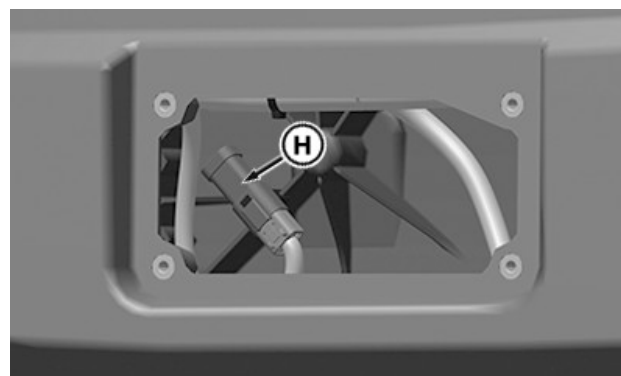


RXA0167857—UN—10MAY19

6. Connect radio to connector (H).
7. Reattach cover.
8. Attach antenna.

KD34109,00004C9-19-29APR21

Implement Connector

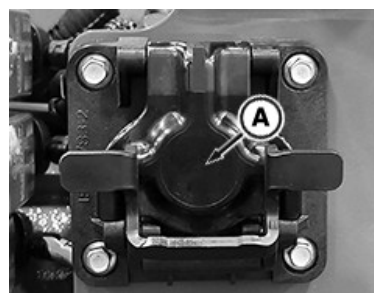


RXA0169781—UN—30JUL19

Implement connector (A) is on the rear of the tractor above the SCV stack.

KD34109,00005ED-19-29APR20

RS232 Serial Communication Connection

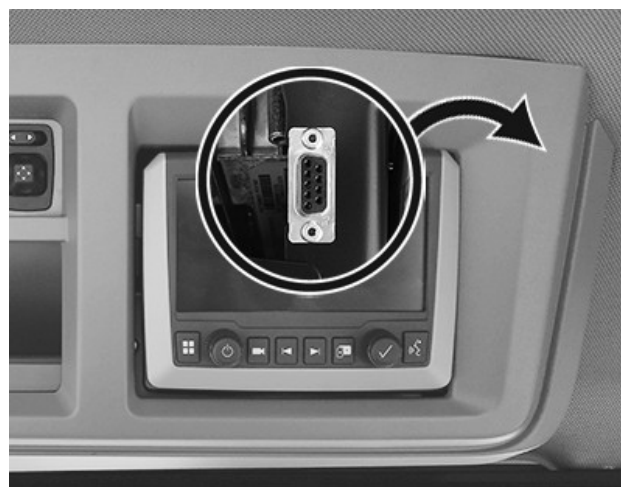


RXA0169820—UN—02AUG19

RS232 Serial Communication Connection

Connection provides NMEA0183 GPS data and is located behind upper right-hand side of radio bezel.

KD34109,0000538-19-02AUG19

AutoLoad™ Harness Connector [Scraper]

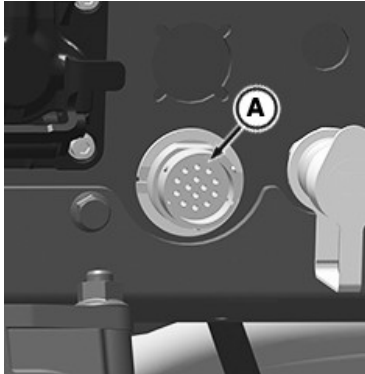

RXA0177640—UN—29APR20

AutoLoad™ harness connector (A) is on the rear of the tractor above the SCV stack.

KD34109,00005F5-19-29APR20



RXA0177580—UN—23APR20

9RW and 9RX Tractors

A chain box is equipped on the left-hand platform of the tractor.



RXA0177581—UN—23APR20

Rear Chain Box

If the tractor is not equipped with a PTO and is equipped with a category 5 drawbar, a rear chain box is also equipped.

KD34109,00005EE-19-23APR20

Chain Box



RXA0177579—UN—23APR20

9RT Tractors

HVAC

HVAC Settings—Access

Access Application Through Display:



Menu

RXA0167075—UN—20MAR19

1. Menu



Machine Settings

RXA0167076—UN—20MAR19

2. Machine Settings tab



HVAC

RXA0167626—UN—26APR19

3. HVAC

Access Application Through Navigation Bar:



HVAC


RXA0167627—UN—26APR19

Press HVAC button on navigation bar below display.

KD34109,00004B7-19-01AUG19

HVAC Settings

HVAC application is used to adjust the temperature, fan speed, and air flow mode inside the cab.

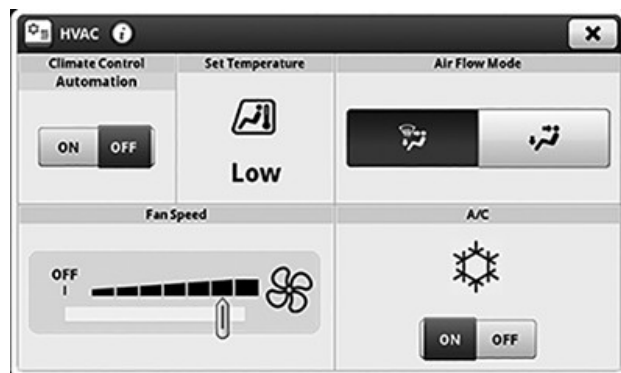

RXA0169839—UN—06AUG19

HVAC Example

Items Accessible on HVAC Main Page:



ON/OFF

RXA0167628—UN—26APR19

Climate Control Automation — enable or disable automatic control of Fan Speed, Air Flow Mode, and A/C. See HVAC Settings—Climate Control Automation in this Operator's Manual section.



75° F

Set Temperature

RXA0167629—UN—26APR19

Set Temperature — set desired temperature inside cab. See HVAC Settings—Set Temperature in this Operator's Manual section.



Air Flow Mode

RXA0167630—UN—26APR19

Air Flow Mode — adjust distribution of air flow inside cab. See HVAC Settings—Air Flow Mode in this Operator's Manual section.



Fan Speed

RXA0167631—UN—26APR19

Fan Speed — control fan speed inside cab. See HVAC Settings—Fan Speed in this Operator's Manual section.



A/C

RXA0167632—UN—26APR19

Air Conditioning (A/C) — enable or disable air conditioning. See HVAC Settings—Air Conditioning in this Operator's Manual section.

Run Page Modules

Add modules for this application to run pages using Layout Manager. See the Generation 4 Display operator's manual.

Example:



A/C

RXA0167633—UN—26APR19

NOTE: Different modules may be available for your application.

A/C — toggle gives you direct access to enable/disable the A/C.

Shortcut Keys

Add shortcut keys for this application to the shortcut bar using Layout Manager. See the Generation 4 Display operator's manual.

Example:



ON

RXA0167634—UN—26APR19

NOTE: Different shortcut keys may be available for your application.

A/C — quick access to turn air conditioning ON and OFF.

KD34109,00004B8-19-15JUN20

HVAC Settings—Climate Control Automation

Climate Control Automation automatically controls Fan Speed, Air Flow Mode, and A/C based on Set Temperature.

When enabled, the following conditions apply:

- Changing Set Temperature does not disable AUTO mode.
- Selecting Fan Speed, Air Flow Mode, or A/C overrides and disables AUTO mode.
- Pressing Fan Speed or Air Flow Mode buttons on CommandARM™ overrides and disables AUTO mode.



ON/OFF

RXA0167628—UN—26APR19

Select ON to enable or OFF to disable.

KD34109,00004B9-19-26AUG19

HVAC Settings—Set Temperature

Use Set Temperature to select a desired cab temperature.

Procedure to Modify:



75° F

Set Temperature

RXA0167629—UN—26APR19

1. Select Set Temperature module to display Set Temperature page.



Adjust Set Temperature

RXA0167639—UN—26APR19

2. Select (+) to increase or (-) to decrease value.



Close

RXA0167129—UN—25MAR19

3. Select to close.

Alternate Procedure to Modify:

Temperature Button — button on CommandARM™ to adjust temperature. See CommandARM™ Climate, Radio, and Lighting Controls in CommandARM™ Controls section of this Operator's Manual.

KD34109,00004BA-19-01AUG19

HVAC Settings—Air Flow Mode

Air Flow Mode is used to adjust distribution of air flow inside the cab.

NOTE: Air conditioning automatically turns on when defrost air flow mode is selected.

Procedure to Modify:

RXA0167630—UN—26APR19

Air Flow Mode

Select desired air flow mode on toggle bar.



RXA0169349—UN—28JUN19

AUTO

If Climate Control Automation is enabled, toggle bar changes to AUTO. If selected, Climate Control Automation is overridden and disabled.



RXA0167636—UN—26APR19

Defrost/Operator/Floor

Defrost, Operator, and Floor — directs air flow at operator and floor, and defrosts the windshield.



RXA0167637—UN—26APR19

Operator/Floor

Operator and Floor — directs air flow at operator and floor.

Alternate Procedure to Modify:

Air Flow Mode Button — button on CommandARM™ to select mode of air flow. See CommandARM™ Climate, Radio, and Lighting Controls in CommandARM™ Controls section of this Operator's Manual.

KD34109,00004BB-19-03APR20

HVAC Settings—Fan Speed

Fan Speed page allows control of the fan speed inside the cab.

Procedure to Modify:

RXA0167641—UN—26APR19

Fan Speed

1. Select Fan Speed module to display Fan Speed page.



RXA0167642—UN—26APR19

Adjust Fan Speed

2. Select (-) to decrease or (+) to increase speed setting.



Close

RXA0167129—UN—25MAR19

3. Select to close.



RXA0167643—UN—26APR19

AUTO

If Climate Control Automation is enabled, setting display changes to AUTO. If selected, Climate Control Automation is overridden and disabled.

Alternate Procedure to Modify:

Fan Speed Button — button on CommandARM™ to adjust fan speed. See CommandARM™ Climate, Radio, and Lighting Controls in CommandARM™ Controls section of this Operator's Manual.

KD34109,00004BC-19-01AUG19

HVAC Settings—Air Conditioning

IMPORTANT: To avoid possible compressor damage, turn air conditioning OFF if system is not cooling properly.

NOTE: Air conditioning turns ON when defrost air flow mode is selected.

Procedure to Modify:



RXA0167628—UN—26APR19

ON/OFF

Select ON to enable or OFF to disable air conditioning.



RXA0167645—UN—26APR19

AUTO

If Climate Control Automation is enabled, toggle bar changes to AUTO. If selected, Climate Control Automation is overridden and disabled.

KD34109,00004BD-19-18OCT19

Performance Ballasting

General Ballasting Information

This section covers maximum weights, proper setup, and ballast limitations.

Adjust ballast to allow 1—5% slippage when operating. Field tests show that maximum available horsepower occurs in this range.

Major Considerations

Proper ballast configuration is required to ensure proper:

- Weight distribution for braking and steering authority.
- Traction to pull a high draft load efficiently.
- Total weight and static balance for a given implement type (towed, integral, or semi-integral). Always reevaluate the ballast configuration when changing from one implement or attachment to another.

Effects of an improper ballast configuration:

Too Little Ballast	Too Much Ballast
Excessive slip	Soil compaction
Power transfer loss	Power loss
Tread wear	Increased load
Fuel waste	
Reduced productivity	

Ballast Limitations

IMPORTANT: Exceeding Maximum Ballast Weight (MBW) can void the warranty due to “overload” conditions. The maximum ballast weight (MBW) for:

Tractor			Maximum Ballast Weight (MBW) kg (lb)
Type	Undercarriage	Model	
Ag	Narrow ^a	All (9RX 490 and 540)	Do not add ballast.
Scraper	Wide ^b	9RX: 490, 540, and 590	27216 (60000)
Ag	Wide ^b	9RX: 490 and 540	28123 (62000)
Ag	Wide ^b	9RX: 590 and 640	30390 (67000)

^aNarrow undercarriages use 18 in (457 mm) or 24 in (610 mm) track belts.

^bWide undercarriages use 30 in (762 mm) or 36 in (914 mm) track belts.

To extend drive-train life never operate the tractor with continuous full-power loads below 7.1 km/h (4.4 mph). With any transmission, ground speed can slow briefly in hard-pull situations, but recover to faster speeds during normal operations.

Tractors equipped with narrow undercarriages —do not add ballast. Normally equipped tractors are sufficiently ballasted without additional weight. High draft loads at speeds below 7.5 km/h (4.7 mph) can cause damage to the tracks that is not covered by warranty.

MBW is the vehicle weight and any added ballast at which the tractor power transmission system is qualified for operation under full draft load for extended periods of time. MBW:

- Does not include the vertical load induced by hitch or drawbar-mounted implements.
- Includes fluids at the maximum level (fuel, DEF, and hydraulic oil) and operator.

Adherence to MBW ensures satisfactory power-train life and minimal ground compaction. Increases in the vehicle weight, while decreasing speed results in higher torque through the power train components (such as gears/shafts/bearings/clutches). If ballast limitations are not followed and the vehicle is operated at slow speeds, premature failure of the power train can occur.

Ballast is limited to the lowest capacity of either the tire or the tractor. Never exceed the carrying capacity of each tire. If more weight is needed, consider installing larger tires. See Tire Load Index in the Wheels and Tires —General Information section of this Operator's Manual.

If the vehicle weight exceeds the MBW due to mounted commodity tanks or other attachments, draft load shall be limited to the MBW-equivalent draft to ensure long-term damage to the drivetrain of the vehicle does not occur. Care shall be taken to not operate the vehicle in such a manner that a single tire/track section loses contact with the ground or permanent damage to the vehicle structure may occur.

EC82310,0000F71-19-24AUG21

General Guidelines

IMPORTANT: Avoid damage to the tractor. Never exceed the maximum ballast weight when operating with heavy draft loads. The maximum ballast weight (MBW) for:

Tractor			Maximum Ballast Weight (MBW) kg (lb)
Type	Undercarriage	Model	
Ag	Narrow ^a	All (9RX 490 and 540)	Do not add ballast.
Scraper	Wide ^b	9RX: 490, 540, and 590	27216 (60000)
Ag	Wide ^b	9RX: 490 and 540	28123 (62000)

Tractor			Maximum Ballast Weight (MBW) kg (lb)
Type	Undercarriage	Model	
Ag	Wide ^b	9RX: 590 and 640	30390 (67000)

^aNarrow undercarriages use 18 in (457 mm) or 24 in (610 mm) track belts.

^bWide undercarriages use 30 in (762 mm) or 36 in (914 mm) track belts.

Tractor Weight Based on Engine Power

A guide to ballasting tractors is to use engine horsepower combined with necessary ballast for a particular job—light, medium, or heavy. Start the process with the lightest ballast that can handle the job. Then add ballast as necessary to get the performance desired.

NOTE: Correct weight split must be maintained when adding or removing ballast. Cast weight is preferred to obtain the best tractive performance.

More or less weight is necessary when different travel speeds are used. Higher speeds do not require as much weight. Final indication of correct ballast is slip measured in the field.

NOTE: Use radar or GPS to monitor slip. Checking slip is manually possible, but only shows slip in the area of the field where the check is performed. See *Measuring Slip* in this Operator's Manual section.

The correct tractor weight to efficiently deliver power to the ground for draft applications depends on travel speed. Consult table for recommended weight based on expected travel speed and drawbar/hitch load.

Recommended Travel Speeds	
Implement Draft	Ground Speed km/h (mph)
Light	8.7 (5.4) and faster
Medium	7.2—8.7 (4.5—5.4)
Heavy	7.2 (4.5) and slower

Light Implement—45 kg/PS (101 lb/hp)

Examples: Drawn planters, air seeders, and PTO-operated equipment that place small vertical loads on the drawbar.

		Tractor Type	
		Ag	Scraper
		Undercarriage Type ^{ab}	
		Wide	Wide
PS	HP	Ballast Weight kg (lb)	
490	483	22050 (48612)	22050 (48612)
540	533	24300 (53572)	24300 (53572)

		Tractor Type	
		Ag	Scraper
		Undercarriage Type ^{ab}	
		Wide	Wide
PS	HP	Ballast Weight kg (lb)	
590	582	26550 (58533)	26550 (58533)
640	631	28880 (63493)	— ^c

^aWide undercarriages use 30 in (762 mm) or 36 in (914 mm) track belts. Narrow undercarriages use 18 in (457 mm) or 24 in (610 mm) track belts.

^bDo not add ballast to tractors with Narrow Undercarriages. Normally equipped tractors are sufficiently ballasted without additional weight

^cModel not available.

Medium Implement—47 kg/PS (105 lb/hp)

Examples: Implements that place a larger vertical load on the drawbar such as disks, chisel plows, and field cultivators.

		Tractor Type	
		Ag	Scraper
		Undercarriage Type ^{ab}	
		Wide	Wide
PS	HP	Ballast Weight kg (lb)	
490	483	23030 (50772)	23030 (50772)
540	533	25380 (55953)	25380 (55953)
590	582	27730 (61134)	27216 (60000) ^c
640	631	30080 (66315)	— ^d

^aWide undercarriages use 30 in (762 mm) or 36 in (914 mm) track belts. Narrow undercarriages use 18 in (457 mm) or 24 in (610 mm) track belts.

^bDo not add ballast to tractors with Narrow Undercarriages. Normally equipped tractors are sufficiently ballasted without additional weight

^c[Scraper] Maximum Ballast Weight (MBW) 27216 kg (60000 lb)

^dModel not available.

Heavy Implement—49 kg/PS (110 lb/hp)

Examples: Implements that place large vertical loads on the hitch or the drawbar such as rippers or hitch-mounted planters.

Optional front axle reinforcements and frame supports are recommended for high drawbar vertical loads or high draft loads.

		Tractor Type	
		Ag	Scraper
		Undercarriage Type ^{ab}	
		Wide	Wide
PS	HP	Ballast Weight kg (lb)	
490	483	34010 (52933)	24010 (52933)
540	533	26460 (58334)	26460 (58334)
590	582	28910 (63736)	27216 (60000) ^c
640	631	30390 (67000) ^d	— ^e

^aWide undercarriages use 30 in (762 mm) or 36 in (914 mm) track

belts. Narrow undercarriages use 18 in (457 mm) or 24 in (610 mm) track belts.

^bDo not add ballast to tractors with Narrow Undercarriages. Normally equipped tractors are sufficiently ballasted without additional weight

^c[Scraper] Maximum Ballast Weight (MBW) 27216 kg (60000 lb)

^d[Ag] Maximum Ballast Weight (MBW) 32000 kg (70548 lb) for 9RX: 590 and 640 models with wide undercarriage.

^eModel not available.

EC82310,0000F72-19-07SEP21

General Weight Split Guidelines

CAUTION: Avoid physical injury or equipment damage. Never exceed maximum listed speed for load at drawbar and rear axle. See Weight Chart—Narrow Track (If Equipped) [Ag] and Extended Road Transport in the Transport section of this Operator's Manual.

IMPORTANT: Avoid damage to the tractor. Never exceed the maximum ballast weight when operating with heavy draft loads. The maximum ballast weight (MBW) for:

Engine		Tractor Type	
		Ag	Scraper
		Undercarriage Type ^{ab}	
		Wide	Wide
PS	HP	Ballast Weight kg (lb)	
490	483	34010 (52933)	24010 (52933)
540	533	26460 (58334)	26460 (58334)
590	582	28910 (63736)	27216 (60000) ^c
640	631	30390 (67000) ^d	— ^e

^aWide undercarriages use 30 in (762 mm) or 36 in (914 mm) track belts. Narrow undercarriages use 18 in (457 mm) or 24 in (610 mm) track belts.

^bDo not add ballast to tractors with Narrow Undercarriages. Normally equipped tractors are sufficiently ballasted without additional weight

^c[Scraper] Maximum Ballast Weight (MBW) 27216 kg (60000 lb)

^d[Ag] Maximum Ballast Weight (MBW) 32000 kg (70548 lb) for 9RX: 590 and 640 models with wide undercarriage.

^eModel not available.

The weight split varies depending on the application. Increase front axle weight to insure steering authority when using a heavy drawbar load or hitch-mounted implements.

Weight split requirements are based on the type of implement or attachment being used. Maintaining sufficient weight on the front and the rear axles to provide steering authority under both field and transport conditions is a primary consideration. Other factors as indicated in following tables must also be considered.

Recommended Weight Splits

[Ag]		
Implement	Weight Split ^a %	
	Front	Rear
Towed	51—55	49—45
Hitch-Mounted	55—60	45—40
High Load Transfer	65—70	35—30

^aUse 60—65 weight split on the front when operating with a heavy draft implement causing extreme weight transfer from front to rear.

[Scraper]		
Implement	Weight Split ^a %	
	Front	Rear
Towed Implement and Dolly-Wheel Scrapers	51—55	49—45
High Load Transfer Implement (Scrapers without Dolly-Wheel)	65—70	35—30

^aUse 60—65 weight split on the front when operating with a heavy draft implement causing extreme weight transfer from front to rear.

EC82310,0000F73-19-07SEP21

Ballast Options

IMPORTANT: Avoid damage to the tractor. Never exceed the maximum ballast weight when operating with heavy draft loads. The maximum ballast weight (MBW) for:

Engine		Tractor Type	
		Ag	Scraper
		Undercarriage Type ^{ab}	
		Wide	Wide
PS	HP	Ballast Weight kg (lb)	
490	483	34010 (52933)	24010 (52933)
540	533	26460 (58334)	26460 (58334)
590	582	28910 (63736)	27216 (60000) ^c
640	631	30390 (67000) ^d	— ^e

^aWide undercarriages use 30 in (762 mm) or 36 in (914 mm) track belts. Narrow undercarriages use 18 in (457 mm) or 24 in (610 mm) track belts.

^bDo not add ballast to tractors with Narrow Undercarriages. Normally equipped tractors are sufficiently ballasted without additional weight

^c[Scraper] Maximum Ballast Weight (MBW) 27216 kg (60000 lb)

^d[Ag] Maximum Ballast Weight (MBW) 32000 kg (70548 lb) for 9RX: 590 and 640 models with wide undercarriage.

^eModel not available.

Quick-Tatch™ Suitcase Weights

Quick-Tatch™ weights weigh 43 kg (95 lb) each. Up to:

- 36 weights can be installed on the front weight

support. These combinations are limited by tractor options.

- [Ag] 18 weights can be installed on the rear weight frame. Tractors with a rear PTO can install up to 13 weights.

Idler Weights

Idler weights weigh 70 kg (154 lb) each. One weight can be installed on each of the eight outside track idlers. It is recommended to install the idler weights in groups of four—installing one axle first, then installing on the other axles.

Weight Adjustment


Ballast			Weight Adjustment kg (lb)	
Location	Type	Weight kg (lb)	Front	Rear
Front	Standard Weight Support	436 (961)	+661 (+1457)	-225 (-496)
	Quick-Tatch™ Suitcase Weights	43 (95)	+72 (+159)	-29 (-64)
	Idler Weights (4)	280 (617)	+280 (+617)	0 (0)
Rear	Quick-Tatch™ Suitcase Weights	43 (95)	-30 (-66)	+73 (+161)
	PTO	415 (915)	-43 (-95)	+458 (+1010)
	Hitch	685 (1510)	-106 (-234)	+791 (+1744)
	Idler Weights (4)	280 (617)	0 (0)	+280 (+617)

EC82310.0000F74-19-07SEP21

Measure Slip

IMPORTANT: Slip measurement requires an implement attached to tractor. Manual measurement also requires an assistant. Avoid physical injury. Ensure that the assistant is clear of tractor and implement during procedure.

NOTE: Tractors equipped with an optional radar unit or GPS can automatically determine percentage of slip. Radar and GPS must be calibrated correctly. (See the CommandCenter™ section in this Operator's Manual).

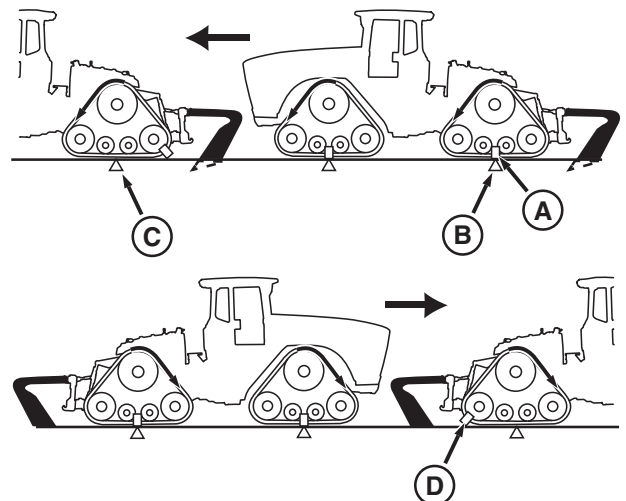

RXA0180493—UN—19NOV20

1. Mark a location on the rear track (A) easily viewable by the assistant.
2. Mark a starting point on the ground (B), with the tractor moving and the implement lowered in the ground.
3. Lower the implement and drive the tractor forward at working speed.
4. Have the assistant follow the tractor and mark the ground when the rear track completes ten full revolutions (C).
5. Raise the implement and return the tractor to the original starting point. Line up the mark on the rear

track with the starting point or make a new mark on the rear track.

6. With the implement raised, drive the tractor forward at working speed.
7. Have the assistant follow the tractor and count the rear track revolutions (to the nearest 1/4 revolution) (D) until the previously marked end point is reached.
8. Use the second count and the chart to determine slip.

NOTE: 1—5% slippage is allowable when operating.

9. Adjust ballast or the load to give the correct slippage.

NOTE: Available horsepower is greatly reduced when the slip drops below minimum percent.

Drive Wheel Revolutions (Step 4)	% Slip	Action
10	0	Remove Ballast
9-7/8	1	No Adjustment Required
9-3/4	2	
9-1/2	5	
9-1/4	7	Add Ballast
9	10	Add Ballast


EC82310,0000F75-19-20NOV20

Quik-Tatch™ Weight Use

Front Frame Weight

Standard Front Weight Support

No more than 36 Quik-Tatch™ weights can be installed on the tractor standard front weight support.

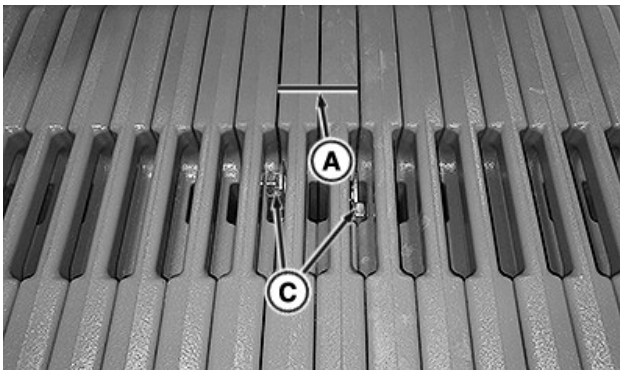


RXA0173127—UN—10DEC19

Front Weight Support (A) and (C)

1. Install Quik-Tatch™ weights balanced on each side of the center point. The first two weights must be installed as a pair (A).
2. To install:

- Two to six weights:

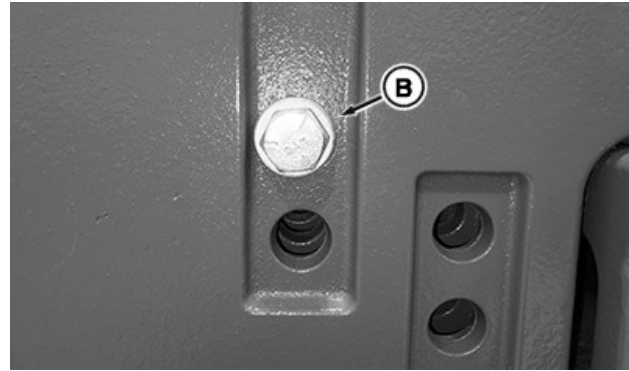

RXA0173128—UN—10DEC19

Front Weight Support (B)


- a. Insert one retaining bolt (B) through the hole in one side of the weights and secure the bolt with a nut on the other side of the weights.
- b. Tighten the bolt to 230 N·m (170 lb·ft).

- Eight or more weights:

- a. Insert and position two retainers (C) between the weights. Position one retainer with the threaded hole pointing upward, and position one retainer with the threaded hole pointing downward.
- b. Run two retaining bolts (B) through the holes at both sides of the weights, threading each bolt into the threaded hole on the retainer.
- c. Tighten the bolts to 230 N·m (170 lb·ft).


3. Retighten the retaining bolts after 10 hours of use.

Rear Frame Weight

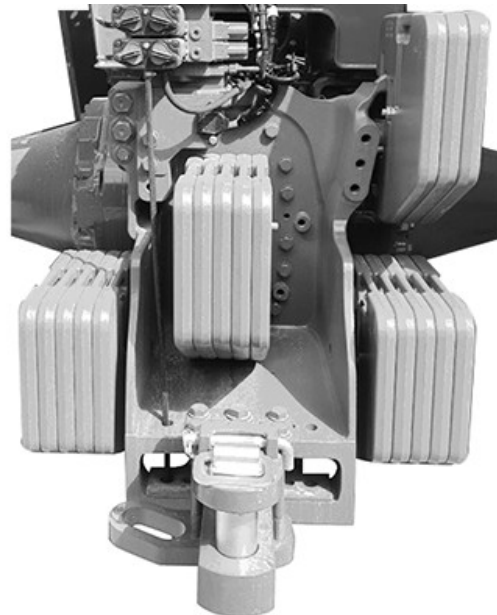

RXA0152658—UN—07SEP16

Maximum Ballast Configuration Without PTO and Hitch

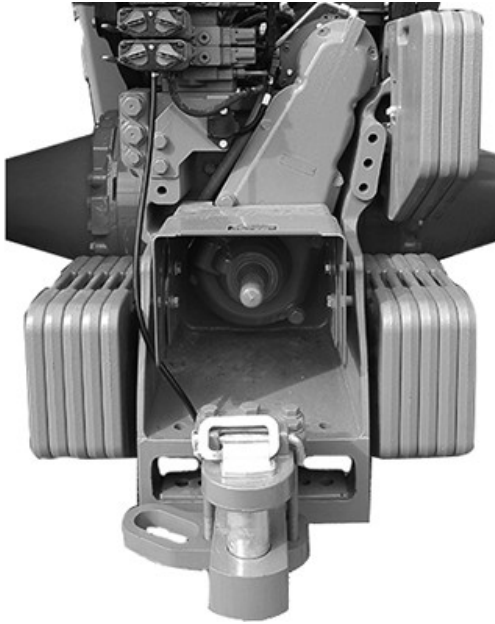

RXA0153814—UN—07SEP16
Maximum Ballast Configuration With PTO

Rear weight support affects both axles due to the weight transfer effect.

Additional ballast not allowed if tractor equipped with hitch, or hitch and PTO.

Equipment configuration determines maximum quantity of Quik-Tatch™ weights. A maximum of 18, 43 kg (95 lb) Quik-Tatch™ weights can be added to rear of tractor as long as the MBW is not exceeded.

Install Quik-Tatch™ Weights

To install five or fewer weights:


1. Position the weight on the bracket.
2. Install the retaining bolts through the hole.
3. Tighten the bolts to 230 N·m (170 lb·ft).
4. Retighten the retaining bolts after 10 hours of use.

EC82310,0000F6B-19-20NOV20

Idler Weight Use

CAUTION: Avoid injury when installing the idler weights. Use appropriate lifting devices for installation or have the job performed by your John Deere dealer.

IMPORTANT: After installation, tighten the idler weight bolts every 3 hours and 10 hours (daily) for the first week of operation or until bolts do not move when tightened.

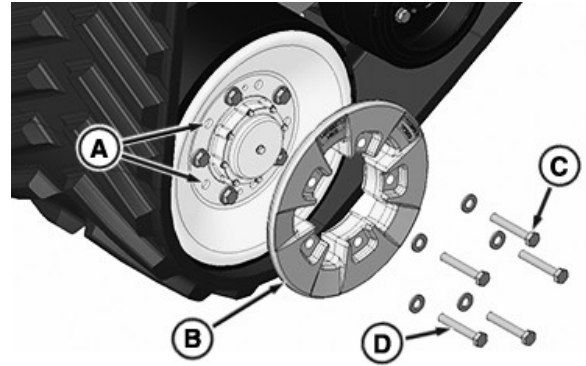

RXA0180494—UN—19NOV20

1. Remove five of the existing M24 x 60 idler bolts (A) in an every-other pattern.
2. Align idler weight (B) through holes with the available bolt holes in the idler hub.
3. Insert M24 x 140 bolts (D) through the washers (C) and the idler weight. Tighten to 1070 N·m (790 lb·ft).
4. Drive the tractor 100 m (100 yd) and retighten the idler weight bolts.
5. Repeat the steps for all idler weights.

EC82310,0000F76-19-19NOV20

Implement Guidelines

IMPORTANT: Under scraper or severe applications, tighten wheel bolts every 2 hours until all cap screws remain at 610 N·m (450 lb·ft).

Front-Mounted Implements

Front frame reinforcement is recommended whenever tractor has front-mounted dozer blades or spray tanks, is used in scraper applications, or is equipped with front frame ballast.

Reinforcement attaches to the underside of the front axle and to outside of the front frame behind the front axle. See your John Deere dealer for parts and assistance.

Towed Scrapers

Follow manufacturers instruction in attaching and using scraper.

Non-Approved Uses

- **Spray Tanks** - Mounted forward of the grille screen.
- **Spray Tanks** - Unbalanced.
- **Scrapers** - Without proper tractor/scraper drawbar and frame/axle supports (9RX: 490, 540, 590, and 640).
- **Front Hitches** - Are not approved.
- **Tiling Plows** - Are not approved.
- **Fully Mounted Hitch Implements** - Center of

gravity greater than 609 mm (24 in) beyond hitch points.

- **Fully Mounted Hitch Implements** - Total weight exceeds 6350 kg (14000 lb)—Category 4 (Without additional implement mounted lift assist).
- **Fully Mounted Hitch Implements** - Total weight exceeds 6123 kg (13500 lb)—Category 3 (Without additional implement mounted lift assist).
- **9RX: 490, 540, 590, and 640 with Category 3 Hitch** - Deep ripping/plowing applications using full horsepower (Use Category 4 hitch).
- **Extreme Draft Loads** - Requiring two tractors hooked in tandem.
- **Tow Hooks** - Adding tow hooks is not an option.

JL41210,0000AD1-19-25AUG21

Calculate Tractor Ballast Package

CAUTION: Avoid physical injury or equipment damage due to improper ballast or tire pressure. Never:

- Operate the tractor if the ballast package causes instability or unsafe conditions.
- Exceed maximum axle load capacity.

Tractor efficiency and service life are increased when the:

- Tractor is correctly ballasted for the work task.
- Weight is split appropriately between the front and rear of the tractor.

Examples show correct method of integrating data from tables and information from this Operator's Manual section to determine best possible working ballast for individual tractors and operations.

Example 1

Step 1: Tractor Configuration

1A—Show tractor options.

Model	9RX 590
Tread Spacing (mm (in))	2210 (87)
Hitch/PTO	Yes/Yes
Fuel Fill	Full
Engine Power (PS/hp)	590 (582)

1B—Show tread options.

Tracks (mm (in))
762 (30) Ag 4500

1C—List ballast options.

Axle		Front	Rear
Ballast Weights	Weight Support	Yes	—
	Quik-Tatch™ Suitcase Weights	—	—
	Idler Weights	—	—

Step 2: Calculate Total Tractor Weight

Find and show:

- Unballasted tractor weight. See Unballasted Tractor Weight in this section of this Operator's manual.
- Ballast weights. See Ballast Options in this section of this Operator's Manual.
- Add or subtract the front and rear axle weights to find the adjusted tractor weight for each axle.
- Add the front and rear adjusted tractor weights to calculate the total tractor weight.

Axle		Front kg (lb)	Rear kg (lb)
Unballasted Tractor Weight		15386 (33926)	12554 (27682)
Ballast Weights	Weight Support	661 (553)	-225 (-172)
	Quik-Tatch™ Suitcase Weights	—	—
	Idler Weight	—	—
Tractor Weight	Adjusted	16047 (34480) ^a	12329 (27510) ^a
	Total	28376 (61989)	

^aWeigh axle for actual load.

Step 3: Results

3A—Calculate weight split.

- Front axle: Divide the front axle weight by the total tractor weight to find the weight split, then multiply the result by 100.
- Rear axle: Subtract the front axle result from 100.

See General Weight Split Guidelines in this section of this Operator's Manual for ideal weight split.

Axle	Front	Rear
Weight Split %	57	43

3B—Calculate power to weight ratio.

- Divide the total tractor weight by Engine PS to find the weight to power ratio. See General Guidelines in this section of this Operator's Manual for listings of Engine PS by model.

Ballast Ratio (kg/PS (lb/hp))	48 (107)
-------------------------------	----------

3C—Find recommended implement draft and travel speed.

- Find recommended implement draft and travel speed with Engine power to weight ratio as calculated in Step 3B. See General Guidelines for Tractor Weight Based on Engine Power in this section of this Operator's Manual.

Recommended	Implement Draft	Medium
	Travel Speed km/h (mph)	7.2—8.7 (4.5—5.4)

4—Adjust ballast.

- If the power to weight ratio calculated or weight split is not correct for the application, return to Step 2 and adjust the ballast package. Repeat until results are optimized for application.
- In field adjustments may still need be required in order to achieve desired performance.

Example 2**Step 1: Tractor Configuration****1A—Show tractor options.**

Model	9RX 640
Tread Spacing (mm (in))	3048 (120)
Hitch/PTO	No/No
Fuel Fill	Full
Engine Power (PS/hp)	640 (631)

1B—Show tread options.

Tracks (mm (in))	762 (30) Ag 4500
------------------	------------------

1C—List ballast options.

Axle		Front	Rear
Ballast Weights	Weight Support	Yes	—
	Quik-Tatch™ Suitcase Weights	36	18
	Idler Weights	—	—

Step 2: Calculate Total Tractor Weight

Find and show:

- Unballasted tractor weight. See Unballasted Tractor Weight in this section of this Operator's manual.
- Ballast weights. See Ballast Options in this section of this Operator's Manual.
- Add or subtract the front and rear axle weights to find the adjusted tractor weight for each axle.
- Add the front and rear adjusted tractor weights to calculate the total tractor weight.

Axle		Front kg (lb)	Rear kg (lb)
Unballasted Tractor Weight		16081 (35459)	11206 (24709)
Ballast Weights	Weight Support	661 (553)	-225 (-172)
	Quik-Tatch™ Suitcase Weights	Front	2592 (5715)
		Rear	-540 (-1191)
	Idler Weight	—	—
Tractor Weight	Adjusted	18794 (40537) ^a	11251 (25133) ^a
	Total	30045 (65669)	

Example 2: Calculations

^aWeigh axle for actual load.

Step 3: Results**3A—Calculate weight split.**

- Front axle: Divide the front axle weight by the total tractor weight to find the weight split, then multiply the result by 100.
- Rear axle: Subtract the front axle result from 100.

See General Weight Split Guidelines in this section of this Operator's Manual for ideal weight split.

Axle	Front	Rear
Weight Split %	63	37

3B—Calculate power to weight ratio.

Divide the total tractor weight by Engine kW to find the weight to power ratio. See General Guidelines in this section of this Operator's Manual for listings of Engine kW by model.

Ballast Ratio (kg/PS (lb/hp))	47 (104)
-------------------------------	----------

3C—Find recommended implement draft and travel speed.

- Find recommended implement draft and travel speed with Engine power to weight ratio as calculated in Step 3B. See General Guidelines for Tractor Weight Based on Engine Power in this section of this Operator's Manual.

Recommended	Implement Draft	Medium
	Travel Speed km/h (mph)	7.2—8.7 (4.5—5.4)

4—Adjust ballast.

- If the power to weight ratio calculated or weight split is not correct for the application, return to Step 2 and adjust the ballast package. Repeat until results are optimized for application.

- In field adjustments may still need be required in order to achieve desired performance.

JL41210,000AD2-19-07SEP21

Unballasted Tractor Weight Chart (9RX: 490, 540, and 590)

NOTE: Unballasted weights are calculated by averaging and are figured based on tractor with a full tank of fuel. Each tractor will be different. Have your tractor weighed for exact weight splits.

2032 mm (80 in) Tread Spacing for 457 mm (18 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15071 (33156)	14803 (43580)	14841 (32650)	14803 (43580)
	Rear	10236 (22519)	11604 (22519)	10880 (23936)	12018 (26440)
	Total	25307 (55675)	26407 (58095)	25722 (56588)	26821 (59006)
Weight Split (%)		60 / 40	56 / 44	58 / 42	55 / 45

2235 mm (88 in) Spacing for 457 mm (18 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15219 (33482)	14952 (32894)	14990 (32978)	14952 (32894)
	Rear	10386 (22849)	11753 (25857)	11030 (24266)	12168 (26770)
	Total	25605 (56331)	26705 (58751)	26020 (57244)	27120 (59664)
Weight Split (%)		59 / 41	56 / 44	58 / 42	55 / 45

3048 mm (120 in) Tread Spacing for 457 mm (18 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15504 (34109)	15237 (33521)	15275 (33605)	15237 (33521)
	Rear	10675 (23485)	12043 (26495)	11319 (24902)	12457 (27405)
	Total	26179 (57594)	27279 (60014)	26594 (58507)	27694 (60927)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

2032 mm (80 in) Tread Spacing for 609 mm (24 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15262 (33576)	14995 (32989)	15033 (33073)	14995 (32989)
	Rear	10410 (22902)	11777 (25909)	11053 (24317)	12191 (26820)
	Total	25671 (56476)	26771 (58896)	26086 (57389)	27186 (59809)
Weight Split (%)		59 / 41	56 / 44	58 / 42	55 / 45

2235 mm (88 in) Spacing for 609 mm (24 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15410 (33902)	15143 (33315)	15181 (33398)	15143 (33315)
	Rear	10559 (23230)	11926 (26237)	11203 (24647)	12341 (27150)
	Total	25970 (57134)	27070 (59554)	26384 (58045)	27484 (60465)
Weight Split (%)		59 / 41	56 / 44	58 / 42	55 / 45

3048 mm (120 in) Tread Spacing for 609 mm (24 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15695 (34529)	15428 (33942)	15466 (34025)	15428 (33942)
	Rear	10849 (23868)	12216 (29875)	11492 (25282)	12630 (27786)
	Total	26544 (58397)	27644 (60817)	26958 (59308)	28058 (61728)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

2218 mm (87 in) Tread Spacing for 762 mm (30 in) Camso [Ag] 4500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15653 (34437)	15386 (33949)	15424 (33933)	15386 (33949)
	Rear	10773 (23701)	12140 (26708)	11416 (25115)	12554 (27619)
	Total	26426 (58137)	27525 (60555)	26840 (59048)	27940 (61468)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

3048 mm (120 in) Tread Spacing for 762 mm (30 in) Camso [Ag] 4500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	16081 (35378)	15814 (34791)	15852 (34874)	15814 (34791)
	Rear	11206 (24653)	12573 (27661)	11850 (26070)	12988 (28574)
	Total	27287 (60031)	28387 (62451)	27702 (60944)	28802 (63364)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

2218 mm (87 in) Tread Spacing for 762 mm (30 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15588 (34294)	15321 (33706)	15359 (33790)	15321 (33706)
	Rear	10714 (23571)	12082 (26580)	11358 (24988)	12496 (27491)
	Total	26303 (57867)	27402 (60284)	26717 (58777)	27817 (61197)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

3048 mm (120 in) Tread Spacing for 762 mm (30 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	16016 (35235)	15749 (34648)	15787 (34731)	15749 (34648)
	Rear	11148 (24526)	12515 (27533)	11792 (25942)	12930 (28446)
	Total	27164 (59761)	28264 (62181)	27579 (60674)	28679 (63094)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

Performance Ballasting

2218 mm (87 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15826 (34817)	15559 (34230)	15597 (34313)	15559 (34230)
	Rear	10927 (24040)	12294 (27047)	11571 (25456)	12709 (27960)
	Total	26754 (58859)	27853 (61277)	27168 (59770)	28268 (62190)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

3048 mm (120 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 4500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	16254 (35759)	15987 (35171)	16025 (35255)	15987 (35171)
	Rear	11361 (24994)	12728 (28002)	12005 (26411)	13143 (28915)
	Total	27615 (60753)	28715 (63173)	28030 (61666)	29130 (64086)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

2218 mm (87 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15746 (34641)	15479 (34054)	15517 (34137)	15479 (34054)
	Rear	10856 (23883)	12223 (26891)	11499 (25298)	12637 (27801)
	Total	26602 (58524)	27702 (60944)	27016 (59435)	28116 (61855)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

3048 mm (120 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	16174 (35583)	15907 (34995)	15945 (35079)	15907 (34995)
	Rear	11289 (24836)	12656 (27843)	11933 (26253)	13071 (28756)
	Total	27464 (60421)	28563 (62839)	27878 (61332)	28978 (63752)
Weight Split (%)		59 / 41	56 / 44	57 / 43	55 / 45

2218 mm (87 in) Tread Spacing for 762 mm (30 in) Camso [Scraper] 6500 Tracks					
Model		9RX: 490, 540, and 590			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	15687 (34511)	—	—	—
	Rear	10803 (23767)	—	—	—
	Total	26490 (58278)	—	—	—
Weight Split (%)		59 / 41	—	—	—

EC82310,0000F79-19-07SEP21

Unballasted Tractor Weight Chart (9RX 640)

2032 mm (80 in) Tread Spacing for 457 mm (18 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	20530 (45166)	20173 (44381)	20224 (44493)	20173 (44381)
	Rear	5064 (11141)	6521 (14346)	5785 (12727)	6936 (15259)
	Total	25594 (56307)	26694 (58727)	26009 (57220)	27109 (59640)
Weight Split (%)		80 / 20	76 / 24	78 / 22	74 / 26

2235 mm (88 in) Spacing for 457 mm (18 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	20729 (45604)	20372 (44818)	20423 (44931)	20372 (44818)
	Rear	5163 (11359)	6621 (14566)	5884 (12945)	7035 (15477)
	Total	25893 (56965)	26992 (59382)	26307 (57875)	27407 (60295)
Weight Split (%)		80 / 20	75 / 25	78 / 22	74 / 26

3048 mm (120 in) Tread Spacing for 457 mm (18 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	21110 (46442)	20753 (45657)	20804 (45769)	20753 (45657)
	Rear	5356 (11783)	6814 (14991)	6077 (13369)	7228 (15902)
	Total	26466 (58225)	27566 (60645)	26881 (59138)	27981 (61558)
Weight Split (%)		80 / 20	75 / 25	77 / 23	74 / 26

2032 mm (80 in) Tread Spacing for 609 mm (24 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	20786 (45729)	20428 (44942)	20480 (45056)	20428 (44942)
	Rear	5172 (11378)	6630 (14586)	5894 (12967)	7044 (15497)
	Total	25959 (57110)	27058 (59528)	26373 (58021)	27473 (60441)
Weight Split (%)		80 / 20	75 / 25	78 / 22	74 / 26

2235 mm (88 in) Spacing for 609 mm (24 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	20985 (46167)	20628 (45382)	20679 (45494)	20628 (45382)
	Rear	5272 (11598)	6729 (14804)	5993 (13185)	7144 (15717)
	Total	26257 (57765)	27357 (60185)	26672 (58678)	27771 (61096)
Weight Split (%)		80 / 20	75 / 25	78 / 22	74 / 26

Performance Ballasting

3048 mm (120 in) Tread Spacing for 609 mm (24 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	21366 (47005)	21008 (46218)	21059 (46330)	21008 (46218)
	Rear	5465 (12023)	6922 (15228)	6186 (13609)	7337 (16141)
	Total	26831 (59028)	27931 (61448)	27245 (59939)	28345 (62359)
Weight Split (%)		80 / 20	75 / 25	77 / 23	74 / 26

2218 mm (87 in) Tread Spacing for 762 mm (30 in) Camso [Ag] 4500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	21310 (46882)	20952 (46094)	21003 (46207)	20952 (46094)
	Rear	5403 (11887)	6760 (14872)	6124 (13473)	7275 (16005)
	Total	26713 (58767)	27815 (61193)	27127 (59679)	28227 (62099)
Weight Split (%)		80 / 20	75 / 25	77 / 23	74 / 26

3048 mm (120 in) Tread Spacing for 762 mm (30 in) Camso [Ag] 4500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	21883 (48143)	21525 (47355)	21576 (47467)	21525 (47355)
	Rear	5692 (12522)	7149 (15728)	6413 (14109)	7564 (16641)
	Total	27574 (60663)	28674 (63083)	27989 (61576)	29089 (63996)
Weight Split (%)		79 / 21	75 / 25	77 / 23	74 / 26

2218 mm (87 in) Tread Spacing for 762 mm (30 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	21223 (46691)	20865 (45903)	20916 (46015)	20865 (45903)
	Rear	5367 (11807)	6824 (15013)	6088 (13394)	7239 (15926)
	Total	26590 (58498)	27689 (60916)	27004 (59409)	28104 (61829)
Weight Split (%)		80/20	75/25	77 / 23	74 / 26

3048 mm (120 in) Tread Spacing for 762 mm (30 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	21796 (47951)	21438 (47164)	21489 (47276)	21438 (47164)
	Rear	5656 (12443)	7113 (15649)	6377 (14029)	7528 (16562)
	Total	27451 (60392)	28551 (62812)	27866 (61305)	28966 (63725)
Weight Split (%)		79 / 21	75 / 25	77 / 23	74 / 26

2218 mm (87 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 4500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	21541 (47390)	21184 (46605)	21235 (46717)	21184 (46605)
	Rear	5499 (12098)	6957 (15305)	6220 (13684)	7371 (16216)
	Total	27041 (59490)	28140 (61908)	27455 (60401)	28555 (62821)

Performance Ballasting

2218 mm (87 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 4500 Tracks				
Model	9RX 640			
Hitch/PTO Option	No/No	Yes/No	No/Yes	Yes/Yes
Weight Split (%)	80 / 20	75 / 25	77 / 23	74 / 26

3048 mm (120 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 4500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	22114 (48651)	21757 (47865)	21808 (47978)	21757 (47865)
	Rear	5788 (12734)	7246 (15941)	6509 (14320)	7660 (16852)
	Total	27902 (61384)	29002 (63804)	28317 (62297)	29417 (64717)
Weight Split (%)		79 / 21	75 / 25	77 / 23	74 / 26

2218 mm (87 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	21434 (47155)	21757 (47865)	21128 (46482)	21077 (46369)
	Rear	5455 (12001)	7246 (15941)	6176 (13587)	7327 (16119)
	Total	26889 (59156)	29002 (63804)	27303 (60067)	28403 (62487)
Weight Split (%)		80 / 20	75 / 25	77 / 23	74 / 26

3048 mm (120 in) Tread Spacing for 914 mm (36 in) Camso [Ag] 6500 Tracks					
Model		9RX 640			
Hitch/PTO Option		No/No	Yes/No	No/Yes	Yes/Yes
Weight kg (lb)	Front	22007 (48415)	21757 (47865)	21701 (47742)	21649 (47628)
	Rear	5744 (12637)	7246 (15941)	6465 (14223)	7616 (16755)
	Total	27751 (61052)	29002 (63804)	28165 (61963)	29265 (64383)
Weight Split (%)		79 / 21	75 / 25	77 / 23	74 / 26

JL41210,0000AD3-19-08SEP21

Transport

Weight Chart—Narrow Track (If Equipped) [Ag]

CAUTION: Avoid physical injury or equipment damage. Never exceed maximum listed speed for load at drawbar and rear axle.

IMPORTANT: Failure to follow road transport recommendations could cause track damage and void warranty.

- Attachments such as chemical tanks can add significant axle loads.
- Never exceed tractor's or implement's maximum transport speed. Speed is based on tractor capability.
- Speed settings can be locked. See Users and Access in the CommandCenter™ section of this Operator's Manual.

NOTE: If track vibration occurs, increase or decrease ground speed in increments of 0.3 km/h (0.2 mph) until vibration decreases.


and rear axles individually when payload is added - include front-mounted spray tanks.

Maximum Transport Speed with Axle Weight

Highest Single Axle Weight	18" Tracks Max Speed	24" Tracks Max Speed
Tractor ¹	26mph (42km/h)	26mph (42km/h)
35,000lbs (15,900kg)	21mph (34km/h)	26mph (42km/h)
45,000lbs (20,400kg)	16mph (26km/h)	23mph (37km/h)
55,000lbs (24,900kg)	13mph (21km/h)	20mph (32km/h)

1. Tractor only, or up to 32,000lbs (14,500kg) on a single axle.

- High transport speeds with heavy axle loads can damage track components.
- Always operate with tracks fully supported - avoid driving on the edge of the road.
- Speeds shown are for 75°F (24°C) outside air temperature. Reduce speed by 1mph (1.6km/h) for every 15°F (8°C) warmer than 75°F (24°C).
- Maximum speed can be restricted in the CommandCenter™.
- See Operators Manual Transport Section for detailed speed restriction during transport.

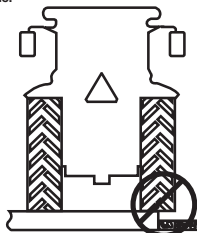

Loads listed in table are for reference only. Weigh front

RXA0164450—19—05SEP18

Weight and Recommended Speed with Typical Implements					
Application	Implement	Weight/Load kg (lb)		Maximum Transport Speed km/h (mph)	
		Drawbar/Hitch	Rear Axle	Tracks	
				18 inch	24 inch
Primary Tillage	11 shank disk ripper (gangs, without rolling baskets)	220 (484)	13608 (30000)	41.8 (26) ^a	41.8 (26) ^a
Secondary Tillage	45' field cultivator	499 (1100)	14061 (31000)	41.8 (26) ^a	41.8 (26) ^a
Secondary Tillage	40' vertical tillage tool	817 (1800)	14515 (32000)	41.8 (26) ^a	41.8 (26) ^a
Secondary Tillage	60' liquid applicator (2400 gal) - empty	1637 (3608)	15422 (34000)	35.4 (22) ^a	41.8 (26) ^a
Secondary Tillage	45' mulch finisher	1905 (4200)	15876 (35000)	33.7 (21) ^a	41.8 (26) ^a
Other	1500 bu grain cart - empty	1724 (3800)	15876 (35000)	33.7 (21) ^a	41.8 (26) ^a
Planters	24 row 30" spacing planter with central bulk hopper	3493 (7700)	18144 (40000)	28.9 (18)	40.2 (25) ^a
Planters	47 row 15" spacing planter with central bulk hopper	3783 (8340)	18597 (41000)	27.3 (17)	38.6 (24) ^a
Planters	36 row 30" planter with central bulk hopper	5579 (12300)	20865 (46000)	25.7 (16)	37.0 (23) ^a
Planters	Hitch-mounted, 24 row 30" spacing planter with central bulk hopper	5897 (13000)	21319 (47000)	24.1 (15)	35.4 (22) ^a
Planters	48 row 30" planter with central bulk hopper	7983 (17600)	24500 (54000)	20.9 (13)	32.1 (20)

^aNever exceed implement's maximum transport speed. For guidelines on towing equipment with and without trailer brakes, see Towed Loads and Transport with Ballast in this Operator's Manual section.

BH38674,0000BFB-19-25AUG21

Driving Tractor on Roads



CAUTION: Avoid personal injury or death from losing control of tractor. When driving tractor on roads:

- Wear Seat belts.
- Reduce speed when driving on icy, wet, or graveled surfaces.
- Ballast tractor correctly (See Performance Ballasting section in this Operator's Manual).
- Prevent wheels from locking and skidding on tractors transporting heavy loads.
- Avoid holes, ditches, sharp turns, hillsides and obstructions which may cause tractor to roll over.
- Frequently check for traffic from rear, especially in turns, and use turn signal lights.
- Always operate flashing lights when traveling on a highway or public roads, except where prohibited by law.

Lights—Use headlights and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

Brakes—Tap brake pedal to ensure differential lock is NOT engaged. Avoid hard application of brakes.

Remote Cylinders—Position transport lock switch(es) to eliminate possibility of lowering an implement during transport by inadvertently bumping extend/retract lever (s). (See procedure in Six Position SCV Control Levers in Selective Control Valves section of this Operator's Manual.)

[Ag] Rear Hitch—Position or lock hitch in transport position to eliminate possibility of lowering an implement during transport by inadvertently bumping control lever. (See procedure in Hitch section of this Operator's Manual.)

TO84419,0000151-19-26APR18

Extended Road Transport

IMPORTANT: Never exceed implement's maximum transport speed. Avoid roading at high speeds with a new set of tracks and wheels, especially during first full season of operation.


Reduce transport speed for long distances with implements at maximum allowable weight:

- Hitch [Ag] 9072 kg (20000 lb)
- Vertical Drawbar [Ag] 5440 kg (12000 lb)
- Vertical Drawbar [Scraper] 10,206 kg (22,500 lb)

Damage to tracks and elastomeric coated wheels may result due to heat if operating at or near these load limits, especially at high ambient temperatures, for more than two hours. If continuous travel greater than two hours is required, it is recommended to reduce transport speed or long term track, mid-roller, or idler wheel heat damage may result.

9RX Narrow Track Tractors Only [Ag]


IMPORTANT: Driving on edge of road may cause severe damage to track components.

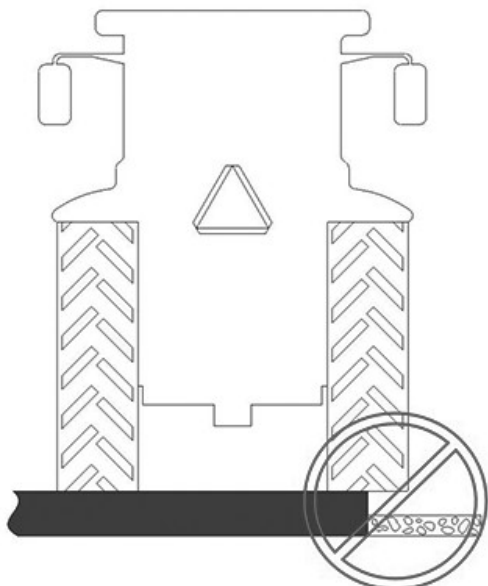

RXA0160970—UN—14SEP17

- 75°F (24°C) outside air temperature. Reduce speed by 1 mph (1.6 kph) for every 15°F (8°C) warmer than 75°F (24°C).
- Failure to follow road transport recommendations could void warranty.

Extended high transport speed will activate warning. If warning is visible, verify speed and axle weights match reference charts.

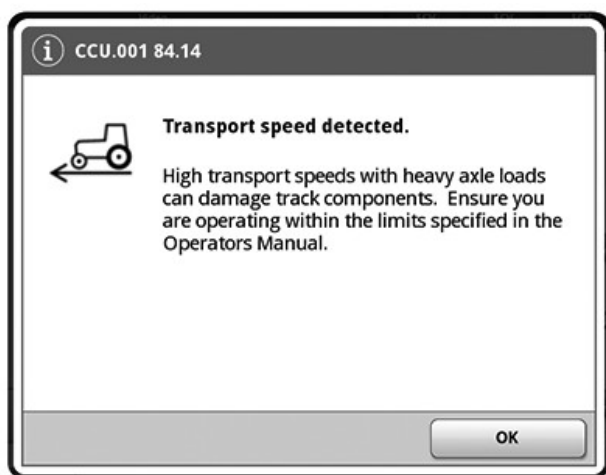

RXA0161251—UN—01NOV17

Maximum Transport Speed by Weight 18 inch Track	
Single Axle Weight ^a kg (lb)	Transport Speed km/h (mph)
14500 (32000)	42 (26)
15000 (33000)	37 (23)
15400 (34000)	35 (22)
15900 (35000)	34 (21)
16300 (36000)	32 (20)
17200 (38000)	31 (19)

Maximum Transport Speed by Weight 18 inch Track	
Single Axle Weight ^a kg (lb)	Transport Speed km/h (mph)
18100 (40000)	29 (18)
19500 (43000)	27 (17)
20900 (46000)	26 (16)
22200 (49000)	24 (15)
23600 (52000)	23 (14)
25400 (56000)	21 (13)
27200 (60000)	19 (12)

^aExtra weight can be caused by fuel, DEF fluid, mud, and debris.

Maximum Transport Speed by Weight 24 inch Track	
Single Axle Weight ^a kg (lb)	Transport Speed km/h (mph)
16800 (37000)	42 (26)
18100 (40000)	40 (25)
19500 (43000)	38 (24)
20900 (46000)	37 (23)
22200 (49000)	35 (22)
23600 (52000)	34 (21)
24900 (55000)	32 (20)
27200 (60000)	31 (19)

^aExtra weight can be caused by fuel, DEF fluid, mud, and debris.

TS36762,000035E-19-10MAY18

Towed Mass

Trailer/implement brake system determine maximum permissible towable mass and maximum speed. There may be legal limits in force that restrict maximum towed mass and/or travel speeds to figures lower than those quoted here.

Trailer/Implement Brake System	Maximum Permissible		
	Model	Towed Mass kg (lb)	Speed km/h (mph)
Unbraked	9RX: 490, 540, 590, and 640	3500 (7716)	25 (16)
Independently-Braked		5000 (11023)	
Inertia-Braked		8000 (17635)	
Hydraulic		26000 (57320)	

EC82310,000053A-19-26AUG21

Towed Loads and Transport with Ballast

⚠ CAUTION: Avoid possible injury from losing control while towing a load. Stopping distance increases with speed and weight of towed loads, and on slopes.

Tractor tracks may lock and skid on slippery downhill slopes when tractors are transporting heavy loads.

Never exceed implement's maximum transport speed. Before transporting a towed implement, refer to implement operator's manual and implement decals to determine the maximum transport speed. This tractor is capable of operating at transport speeds which exceed maximum allowable transport speed for most towed implements. Failure to adhere to the implement's maximum transport speed or to have correct ballast can result in:

- Loss of control of tractor/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to implement structure or components

Guidelines for Towing Equipment without Brakes:

- Do not transport at speeds greater than 25 km/h (15.5 mph).
- Must weigh less than 1.5 times the ballasted tractor weight.

Guidelines for Towing Equipment with Brakes:

- If manufacturer does not specify a maximum transport speed, do not transport at speeds above 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) fully loaded implement must weigh less than 4.5 times tractor weight.
- When transporting at speeds between 40 km/h (25 mph) and 50 km/h (31 mph), fully loaded implement must weigh less than 3 times the tractor weight.

Tractor must be heavy and powerful enough with adequate braking power for towed load. Add ballast to tractor or lighten implement load.

Drive slowly enough to maintain safe control. Be alert for skids. Shift to a lower gear for hillsides, rough ground, and sharp turns, especially when transporting heavy equipment.

Never operate with transmission in neutral position or with clutch disengaged.

Transport Rear Mounted Implements with Ballast

⚠ CAUTION: Avoid possible injury when transporting heavy rear-mounted implements.

Drive slowly over rough ground, regardless of how much ballast used.


Add weight if needed for stability. Add enough ballast to maintain steering control.

TO84419,0000154-19-04NOV15

Safety Chains Use

⚠ CAUTION: Avoid possible accident and injury by using a safety chain on drawn equipment. Use a safety chain with a strength rating equal to or greater than the gross weight of equipment. Provide only enough slack in the chain to permit turning.

IMPORTANT: Never use safety chain for towing or possible damage to tractor, implement, and drawbar may result. Safety chain is provided only for transport.

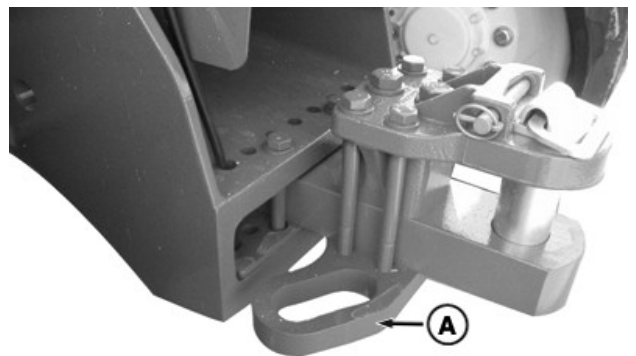

RXA0150482—UN—08DEC15


Route safety chain through loop (A) and attach to drawbar support.

KT81203,0000259-19-13JUN19

Tow Points



RXA0180443—UN—13NOV20

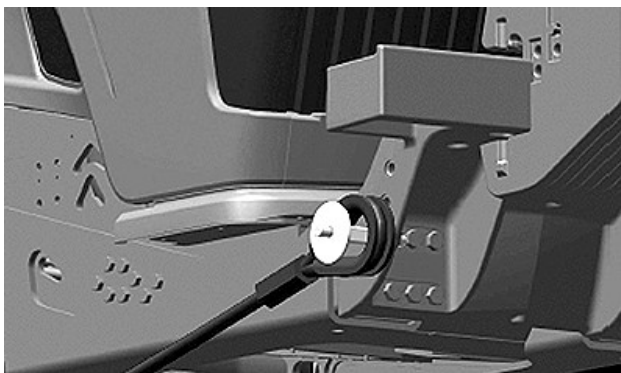

RXA0180444—UN—13NOV20

CAUTION: Avoid physical injury or equipment damage. Only use tow points shown to maneuver and tow the tractor on hard-surfaced roads only.

Before towing the tractor on hard-surfaced roads with the tow points:

- Cable needs to be removed from the storage position before use.
- Remove any trailers or mounted implements.
- Never use a tow-rope; always use an approved towbar.

To free a mired tractor, see Freeing a Mired Tractor in this Owner's Manual section

Tow points are integrated into the front end of the tractor to allow the tractor to be maneuvered and towed on hard-surfaced roads.

EC82310,0000F60-19-08JAN21

Carrier Transport

CAUTION: Shift transmission lever into PARK, stop engine and remove key before working in hinge area.

IMPORTANT: Avoid track and track system damage. When transporting track tractor equipped with extended axles, special procedures and equipment are required. See Load Extended Axle Width Track Tractor in this Operator's Manual section.

Install hinge lock, originally equipped with tractor, on hinge cylinders before transporting tractor. Remove the hinge lock from the hinge area before operating the tractor.

15 L engine equipped tractor: avoid equipment damage, remove exhaust tip before transport.




RXA0180512—UN—24NOV20

Avoid equipment damage. Never use the front weight support (A) as a tie-down location.

Best method of transporting a disabled tractor is to haul it on a flatbed carrier.


Steer tractor straight ahead, shift transmission lever into PARK and turn OFF engine.

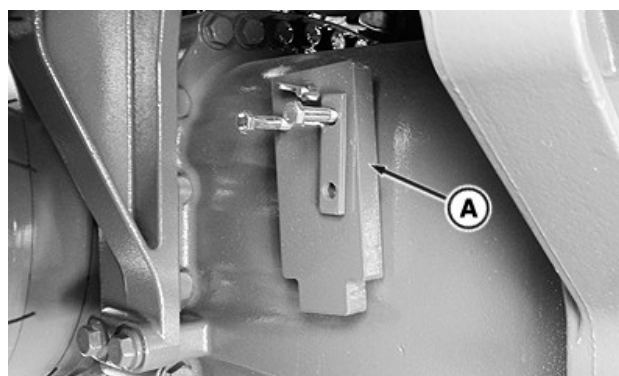

RXA0142230—UN—24JUN14

Left Side Stored Hinge Lock

Remove the left and right hinge locks (A) from tractor frame storage location.

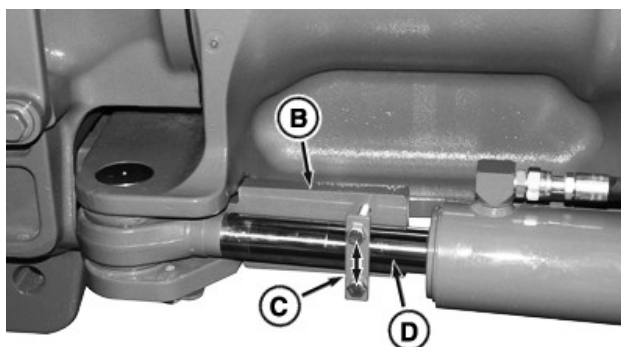

RXA0142229—UN—11JUN14

Install lock (B) behind the cylinder and secure with cap screws (C) and retaining plate (D). Tighten cap screws to hold in place.

Chain tractor to carrier securely. Drive slowly.

Remove hinge locks before unloading tractor.



Replace locks on tractor frame storage location as shown (A).

Tie-Down on Transport Carrier


CAUTION: To avoid accident or injury, use tie-down devices to secure tractor to carrier. Drive carefully.

IMPORTANT: A disabled tractor should be hauled on a flat-bed carrier.

Transport Regulations vary - contact your local transportation officials for your local transportation requirements.

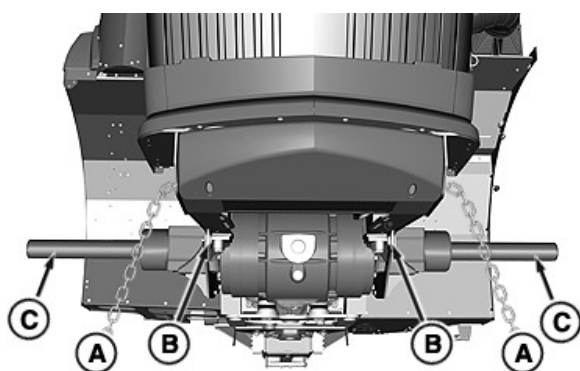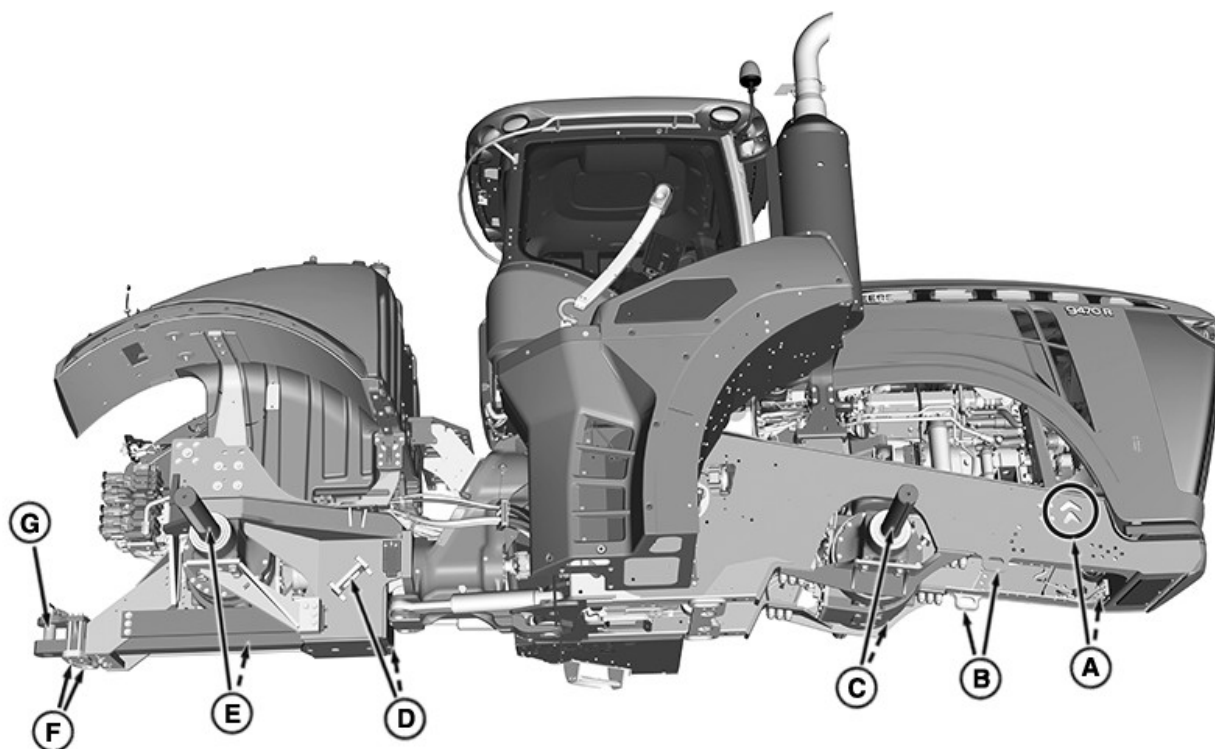

RXA0143571—UN—16JUL14

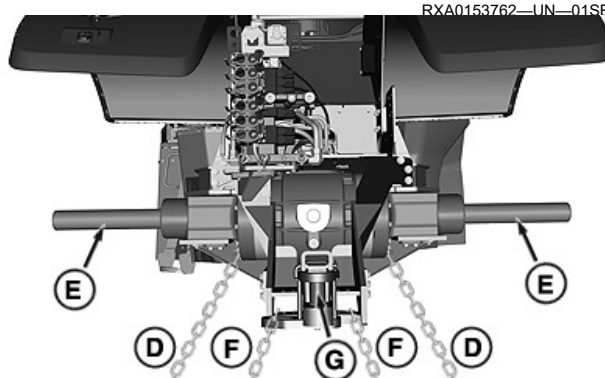

RXA0153762—UN—01SEP16

RXA0160226—UN—17JUL17



RXA0142104—UN—04JUN14
Tie-Down Label (If Equipped)

Attach tie-down devices to front frame T-hook slots (A), front frame tie-down loops (B), front axles (C), rear frame tie-down loops (D), rear axles (E), drawbar support (F) and drawbar pin (G) as required per local regulations.

T-Hook Locations


CAUTION: To avoid accident or injury, securely chain tractor to carrier. Drive carefully.

IMPORTANT: Attach tie-downs only to frame T-hook slots and drawbar support when securing tractor on a carrier.

15 L engine equipped tractor: avoid equipment damage, remove exhaust tip before transport.

Best method of transporting a disabled tractor is to haul it on a flatbed carrier.

1. Engage PARK position.

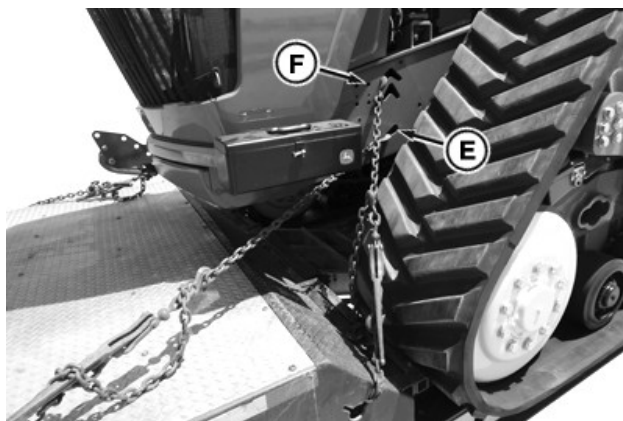

RXA0160583—UN—16AUG17


2. Attach chain using left- and right-hand side front tie-down loops (E) and/or left- and right-hand side T-hook slots (F) and tension chains forward and down to trailer frame.



RXA0160584—UN—16AUG17


3. Attach chain to rear tie-down loop (G) on left- and right-hand side of frame and tension chains forward and down to trailer frame.

NOTE: Use a protective material to prevent paint damage to drawbar support.

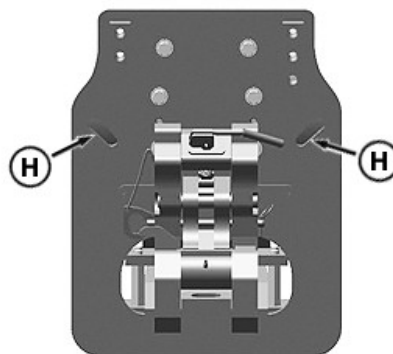

RXA0160585—UN—16AUG17

4. Attach chains to each side of drawbar support (H) to secure tractor to carrier.

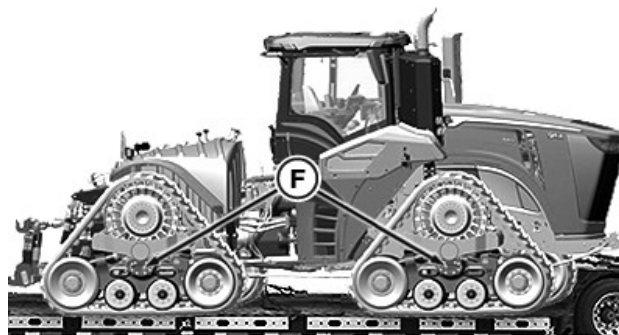

RXA0185296—UN—01SEP21

5. Fold left- and right-hand side mirrors (I) forward.

6. Fold left- and right-hand extremity lights forward, if equipped.

7. Attach over-dimension flags (J) to axles.

8. Travel a short distance then check tie-downs to ensure they are secure.

Load Extended Axle Width Track Tractor [Ag]


IMPORTANT: Avoid damage to track and track systems. Load and transport track tractor equipped with extended axles only as instructed. Always use wooden ramps described, even if trailer is equipped with pull-out ramps.

Transport tractor only on removable gooseneck trailer equipped with aluminum or cast iron outriggers. Install 51 mm (2 in) by 305 mm (12 in) wooden planks placed onto outriggers.

Build Loading Ramps


Use wooden ramps to load and unload tractor. Ramps reduce the incline tracks must ascend and descend when moving tractor. Ramps are constructed of 51 mm (2 in) by 102 mm (4 in) lumber. Cutting list:

Part	Length mm (in)	Number of Pieces
A	483 (19)	3
B	737 (29)	3
C	915 (36)	6
D	305 (12)	17

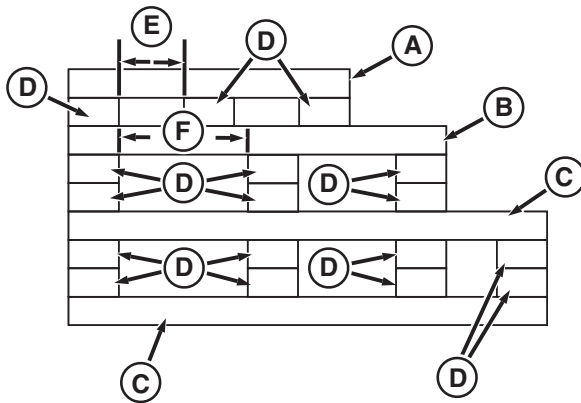

RXA0162412—UN—07MAR18

Left-Hand Side View (Image Not to Scale)

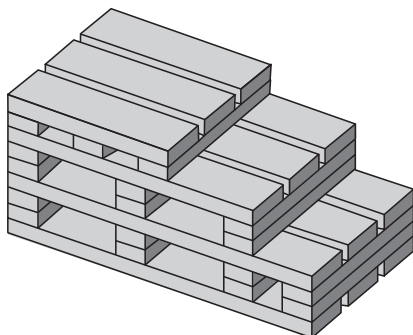

RXA0162413—UN—07MAR18


Pictorial View (Image Not to Scale)

Assemble as shown. Dimensions E (102 mm (4.025 in)) and F (229 mm (9.025 in)) locate center support blocks. Secure parts with 102 mm (4 in) nails or screws. Install parts A through C evenly across parts D. There will be gaps between the long deck parts (A through C) after installation (see pictorial view).

Load Tractor




RXA0162414—UN—07MAR18

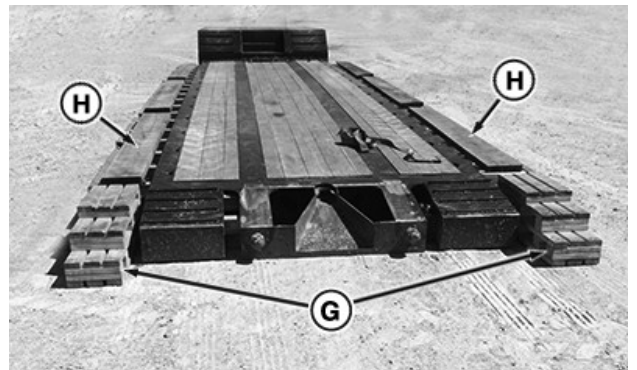

RXA0163199—UN—09MAY18

1. Place wooden ramps (G) 305 mm (12 in) or less behind and aligned with outriggers equipped with 51 mm (2 in) by 305 mm (12 in) wooden planks (H).

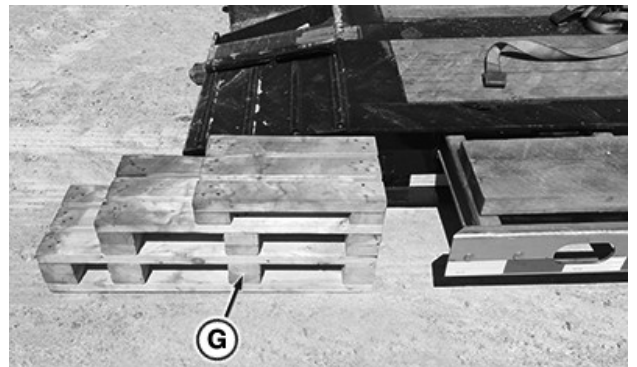

RXA0162416—UN—07MAR18

CAUTION: Avoid injury and damage to equipment. Place observers a distance from loading process to assure that ramps do not move and tractor is loaded correctly.

2. Move tractor slowly toward ramps, aligning tracks with ramps.



RXA0162417—UN—07MAR18

IMPORTANT: Avoid machine damage:

- **Never attempt to start machine by towing.**
- **Never tow machine faster than 8 km/h (5 mph) for a maximum distance of 8 km (5 miles).**
- **Never tow machine without releasing park brake.**
- **Never operate or tow machine with a filter restriction code. If lube or filter STOP or Warning code displays, change appropriate filter. See Service—Change section of this Operator's Manual.**

NOTE: Special tools are required to release park brake. See your John Deere dealer.

3. Drive tractor slowly up ramps and then onto outrigger planks.
4. Place tractor in Park and shutoff engine.
5. Secure tractor to trailer, see Carrier Transport in this OM section.
6. Unload tractor using ramps and observers. Drive slowly.

RX32825,0000007-19-17JUL18

Tow Mode—Engine Will Start

IMPORTANT: Avoid damage to transmission and hydraulic systems:

- **Operate engine above 1250 rpm (provides adequate system lubrication).**
- **Verify all pressure indicator lights are off.**
- **Never tow machine faster than 8 km/h (5 mph) for a maximum distance of 8 km (5 miles).**

1. Verify hydraulic oil reservoir level is within normal operation range. See Hydraulic System Oil Level in Service—Check section of this Operator's Manual.
2. Attach tow bar to drawbar.
3. With transmission in PARK, start machine.
4. Operate engine above 1250 rpm.
5. Place shift lever in NEUTRAL.
6. Steer and brake machine while being towed.
7. After towing is complete, place shift lever in PARK.

RX32825,000018A-19-02SEP21

Tow Mode—Engine Will Not Start

CAUTION: Avoid injury. If hydraulic oil temperature is less than -10°C (14°F), backup pump will not turn on and brakes or steering will not function. If machine still must be moved, contact your John Deere dealer.



RXA0169804—UN—01AUG19

1. Ensure hydraulic oil reservoir level in sight gauge is between FULL COLD (A) and MIN COLD (B) marks. If level is below MIN COLD mark, remove cap (C) and add hydraulic oil.
2. Attach tow bar to drawbar.

IMPORTANT: If machine has no electrical power, a 100 Amp electrical source must be connected. See Battery Booster or Charger in Engine Operation section of this Operator's Manual.

3. Open load center next to operator seat. See Access Load Center Fuses in Service—Electrical section of this Operator's manual.
4. Remove fuse 32 and install in fuse 22 location.
5. Remove 10 Amp spare fuse and install in fuse 21 location.
6. Install appropriate park brake release hand pump kit components.
7. Turn key switch to on position.
8. Follow kit instructions to manually release spring-applied park brake.
9. Enable backup steering in Diagnostic Addresses on Controller Diagnostics tab. See Diagnostic Center in CommandCenter™ section of this Operator's Manual.
10. Select correct control unit:

- TSB – two-track machines
- XSB – wheel and four-track machines equipped with ACS™ (ActiveCommand Steering)
- XSC – wheel and four-track machines equipped with AutoTrac™

NOTE: When Back Up Mode is enabled, turning steering wheel activates backup pump.

11. Go to address 025 and select Back Up Mode ON.
12. Press Accept.
13. Go to PTP 055 to monitor park brake pressure.
14. Pump power pack to displayed target value of 1800 kPa (18 bar) (261 psi).
15. Press X to close diagnostic windows.
16. Place shift lever in NEUTRAL and verify on corner post display.
17. Steer and brake machine while being towed.
18. After towing is complete, place shift lever in PARK.
19. Cycle key switch on and off to return address 025 to Back Up Mode Off.
20. Return all removed fuses to original locations.

RX32825,0000189-19-27JUL21

Freeing a Mired Tractor



CAUTION: Freeing a mired tractor can involve safety hazards. Avoid physical injury, tractor damage, or property damage:

- Verify that the tractor surroundings are clear of people and other hazards before attempting to free a mired tractor.
- A tow chain or tow bar could fail and recoil from a stretched condition.
- A mired tractor could tip rearward.
- The towing machine could overturn.

IMPORTANT: H-casting is not to be used for stuck tractor retrieval.

IMPORTANT: Avoid tractor damage or property damage:

- Never:
 - Use the front weight support as a tow point or to push other tractors or implements.
 - Use the front suspended axle to tow the tractor.
 - Attempt to start the tractor by towing.
 - Attempt to clear excess soil material by driving the tractor after the mired tractor is freed.
 - Use H-hook attached to the tow cable (If Equipped)

• Always:

- Have an operator steer and brake the mired tractor. If possible, maintain a minimum of 1250 engine rpm to provide power for lubrication, steering, and brakes.
- Tow the tractor in as straight a line as possible. Pulling at an angle causes heavy side loads and can damage the suspended axle or frame.
- Stop immediately if the tracks are spinning and begin to dig below the surface level of soil. Track damage can occur due to material ingestion between the track and drive system components.
- Remove excess material from the undercarriage and drive system components of the freed tractor before driving the tractor under its own power.

To Free a Mired Tractor

1. Unhitch and move any towed implements.
2. Attach a tow chain or tow bar to the mired tractor. If the mired tractor is to be pulled:
 - Forward: Use the tow cable (preferred if equipped with a tow cable) or attach at the tow point.
 - Rearward: Attach at the drawbar (preferred if not equipped with a tow cable).
3. Pull the mired tractor.

EC82310,0000B46-19-26AUG21

Fuel, Lubricants, and Coolant—General Information

Determine Tractor Engine Type

IMPORTANT: To determine tractor engine type, see **Engine Serial Number in Identification Numbers section of this Operator's Manual.**

Correct engine oil specification and oil change interval is determined by a number of factors. One important consideration is type of engine aftertreatment installed. To determine engine type, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

RX32825,0001798-19-14DEC16

Minimizing the Effect of Cold Weather on Diesel Engines

John Deere diesel engines are designed to operate effectively in cold weather.

However, for effective starting and cold-weather operation, a little extra care is necessary. The following information outlines steps that can minimize the effect that cold weather may have on starting and operation of your engine. See your John Deere dealer for additional information and local availability of cold-weather aids.

Use Winter Grade Fuel

When temperatures fall below 0°C (32°F), winter grade fuel (No. 1-D in North America) is best suited for cold-weather operation. Winter grade fuel has a lower cloud point and a lower pour point.

Cloud point is the temperature at which wax begins to form in the fuel. This wax causes fuel filters to plug.

Pour point is the lowest temperature at which movement of the fuel is observed.

NOTE: On average, winter grade diesel fuel has a lower Btu (heat content) rating. Using winter grade fuel may reduce power and fuel efficiency, but should not cause any other engine performance effects. Check the grade of fuel being used before troubleshooting for low-power complaints in cold-weather operation.

Air Intake Heater

An air intake heater is an available option for some engines to aid cold weather starting.

Ether

An ether port on the intake is available to aid cold weather starting.

 **CAUTION:** Ether is highly flammable. Do not use ether when starting an engine equipped with glow plugs or an air intake heater.

Coolant Heater

An engine block heater (coolant heater) is an available option to aid cold weather starting.

Seasonal Viscosity Oil and Proper Coolant Concentration

Use seasonal grade viscosity engine oil based on the expected air temperature range between oil changes and a proper concentration of low silicate antifreeze as recommended. (See DIESEL ENGINE OIL and ENGINE COOLANT requirements in this section.)

Diesel Fuel Cold Flow Additive

Use John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula), which contains anti-gel chemistry, or equivalent fuel conditioner to treat non-winter grade fuel (No. 2-D in North America) during the cold-weather season. This generally extends operability to about 10° C (18°F) below the fuel cloud point. For operability at even lower temperatures, use winter grade fuel.

IMPORTANT: Treat fuel when outside temperature drops below 0°C (32°F). For best results, use with untreated fuel. Follow all recommended instructions on label.

Biodiesel

When operating with biodiesel blends, wax formation can occur at warmer temperatures. Begin using John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula) or equivalent at 5°C (41°F) to treat biodiesel fuels during the cold-weather season. Use B5 or lower blends at temperatures below 0°C (32°F). Use only winter grade petroleum diesel fuel at temperatures below -10°C (14°F).

Winterfronts

Use of fabric, cardboard, or solid winterfronts is not recommended with any John Deere engine. Their use can result in excessive engine coolant, oil, and charge air temperatures. This can lead to reduced engine life, loss of power and poor fuel economy. Winterfronts may also put abnormal stress on fan and fan drive components potentially causing premature failures.

If winterfronts are used, they should never totally close off the grill frontal area. Approximately 25% area in the center of the grill should remain open at all times. At no time should the air blockage device be applied directly to the radiator core.

Radiator Shutters

If equipped with a thermostatically controlled radiator shutter system, this system should be regulated in such a way that the shutters are completely open by the time the coolant reaches 93°C (200°F) to prevent excessive intake manifold temperatures. Manually controlled systems are not recommended.

If air-to-air aftercooling is used, the shutters must be

completely open by the time the intake manifold air temperature reaches the maximum allowable temperature out of the charge air cooler.

For more information, see your John Deere dealer.

DX,FUEL10-19-13JAN18

Oil Filters

Filtration of oils is critically important for proper operation and lubrication. John Deere brand oil filters have been designed and produced specifically for John Deere applications.

John Deere filters adhere to engineering specifications for quality of the filter media, filter efficiency rating, strength of the bond between the filter media and the element end cap, fatigue life of the canister (if applicable), and pressure capability of the filter seal. Non-John Deere branded oil filters might not meet these key John Deere specifications.

Always change oil filters regularly as specified in this manual.

DX,FILT1-19-11APR11

Fuel

Diesel Fuel

Consult your local fuel distributor for properties of the diesel fuel available in your area.

In general, diesel fuels are blended to satisfy the low temperature requirements of the geographical area in which they are marketed.

Diesel fuels specified to EN 590 or ASTM D975 are recommended. Renewable diesel fuel produced by hydrotreating animal fats and vegetable oils is basically identical to petroleum diesel fuel. Renewable diesel that meets EN 590, ASTM D975, or EN 15940 is acceptable for use at all percentage mixture levels.

Required Fuel Properties

In all cases, the fuel shall meet the following properties:

Cetane number of 40 minimum. Cetane number greater than 47 is preferred, especially for temperatures below -20°C (-4°F) or elevations above 1675 m (5500 ft.).

Cloud Point should be below the expected lowest ambient temperature or **Cold Filter Plugging Point** (CFPP) should be a maximum 10°C (18°F) below the fuel cloud point.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

Diesel fuel quality and sulfur content must comply with all existing emissions regulations for the area in which the engine operates. DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

Materials such as copper, lead, zinc, tin, brass and bronze should be avoided in fuel handling, distribution and storage equipment as these metals can catalyze fuel oxidation reactions which can lead to fuel system deposits and plugged fuel filters.

E-Diesel fuel

DO NOT use E-Diesel (Diesel fuel and ethanol blend). Use of E-Diesel fuel in any John Deere machine may void the machine warranty.

 **CAUTION: Avoid severe injury or death due to the fire and explosion risk from using E-Diesel fuel.**

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III A and B, Stage IV, and Stage V Engines Above 560 kW

- Use ONLY diesel fuel with a maximum of 500 mg/kg (500 ppm) sulfur content.

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III B, Stage IV Engines, and Stage V Engines

- Use ONLY ultra low sulfur diesel (ULSD) fuel with a maximum of 15 mg/kg (15 ppm) sulfur content.

Sulfur Content for Tier 3 and Stage III A Engines

- Use of diesel fuel with sulfur content less than 1000 mg/kg (1000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 1000—2000 mg/kg (1000—2000 ppm) REDUCES the oil and filter change interval.
- BEFORE using diesel fuel with sulfur content greater than 2000 mg/kg (2000 ppm), contact your John Deere dealer.

Sulfur Content for Tier 2 and Stage II Engines

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 2000—5000 mg/kg (2000—5000 ppm) REDUCES the oil and filter change interval.¹
- BEFORE using diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm), contact your John Deere dealer.

Sulfur Content for Other Engines

- Use of diesel fuel with sulfur content less than 5000 mg/kg (5000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm) REDUCES the oil and filter change interval.

IMPORTANT: Do not mix used diesel engine oil or any other type of lubricating oil with diesel fuel.

Improper fuel additive usage may cause damage on fuel injection equipment of diesel engines.

DX,FUEL1-19-13JUL20

Supplemental Diesel Fuel Additives

Diesel fuel can be the source of performance or other operational problems for many reasons. Some causes include poor lubricity, contaminants, low cetane number, and a variety of properties that cause fuel system deposits. These and others are referenced in other sections of this Operator's Manual.

To optimize engine performance and reliability, closely follow recommendations on fuel quality, storage, and handling, which are found elsewhere in this Operator's Manual.

To further aid in maintaining performance and reliability of the engine's fuel system, John Deere has developed a family of fuel additive products for most global markets. The primary products include Fuel-Protect Diesel Fuel Conditioner (full feature conditioner in winter

¹ See DX,ENOIL12,OEM, DX,ENOIL12,T2,STD, or DX,ENOIL12,T2,EXT for more information on Engine Oil and Filter Service Intervals.

and summer formulas) and Fuel-Protect Keep Clean (fuel injector deposit removal and prevention). Availability of these and other products varies by market. See your local John Deere dealer for availability and additional information about fuel additives that might be right for your needs.

DX,FUEL13-19-07FEB14

Biodiesel Fuel

Biodiesel fuel is comprised of monoalkyl esters of long chain fatty acids derived from vegetable oils or animal fats. Biodiesel blends are biodiesel mixed with petroleum diesel fuel on a volume basis.

Before using fuel containing biodiesel, review the Biodiesel Use Requirements and Recommendations in this Operator's Manual.

Environmental laws and regulations can encourage or prohibit the use of biofuels. Operators should consult with appropriate governmental authorities prior to using biofuels.

John Deere and Cummins® Stage V Engines Operating in the European Union

Where the engine is to be operated within the Union on diesel or non-road gas-oil, a fuel with a FAME content not greater than 8% volume/volume (B8) shall be used.

John Deere and Cummins® Engines with Exhaust Filter Except Stage V Engines Operating in the European Union

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

Biodiesel concentrations above B20 can harm the engine's emission control systems and should not be used. Risks include, but are not limited to, more frequent stationary regeneration, soot accumulation, and increased intervals for ash removal.

John Deere Fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B20, and are recommended when using lower biodiesel blends.

John Deere Engines Without Exhaust Filter

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

These John Deere engines can operate on biodiesel blends above B20 (up to 100% biodiesel). Operate at levels above B20 ONLY if the biodiesel is permitted by law and meets the EN 14214 specification (primarily available in Europe). Engines operating on biodiesel

blends above B20 might not fully comply with or be permitted by all applicable emissions regulations. Expect up to a 12% reduction in power and an 18% reduction in fuel economy when using 100% biodiesel.

John Deere fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B100, and are recommended when using lower biodiesel blends.

Biodiesel Use Requirements and Recommendations

The petroleum diesel portion of all biodiesel blends must meet the requirements of ASTM D975 (US) or EN 590 (EU) commercial standard.

Biodiesel users in the U.S. are strongly encouraged to purchase biodiesel blends from a BQ-9000 Certified Marketer and sourced from a BQ-9000 Accredited Producer (as certified by the National Biodiesel Board). Certified Marketers and Accredited Producers can be found at the following website: <http://www.bq9000.org>.

Biodiesel contains residual ash. Ash levels exceeding the maximums allowed in either ASTM D6751 or EN14214 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present).

The fuel filter can require more frequent replacement when using biodiesel fuel, particularly if switching from diesel. Check engine oil level daily prior to starting engine. A rising oil level can indicate fuel dilution of the engine oil. Biodiesel blends up to B20 must be used within 90 days of the date of biodiesel manufacture. Biodiesel blends above B20 must be used within 45 days from the date of biodiesel manufacture.

When using biodiesel blends up to B20, the following must be considered:

- Cold-weather flow degradation
- Stability and storage issues (moisture absorption, microbial growth)
- Possible filter restriction and plugging (usually a problem when first switching to biodiesel on used engines)
- Possible fuel leakage through seals and hoses (primarily an issue with older engines)
- Possible reduction of service life of engine components

Request a certificate of analysis from your fuel distributor to ensure that the fuel is compliant with the specifications provided in this Operator's Manual.

Consult your John Deere dealer for John Deere fuel products to improve storage and performance with biodiesel fuels.

The following must also be considered if using biodiesel blends above B20:

- Possible coking or blocked injector nozzles, resulting

in power loss and engine misfire if John Deere fuel additives and conditioners or equivalent containing detergent/dispersants are not used

- Possible crankcase oil dilution (requiring more frequent oil changes)
- Possible lacquering or seizure of internal components
- Possible formation of sludge and sediments
- Possible thermal oxidation of fuel at elevated temperatures
- Possible compatibility issues with other materials (including copper, lead, zinc, tin, brass, and bronze) used in fuel handling, distribution, and storage equipment
- Possible reduction in water separator efficiency
- Possible damage to paint if exposed to biodiesel
- Possible corrosion of fuel injection equipment
- Possible elastomeric seal and gasket material degradation (primarily an issue with older engines)
- Possible high acid levels within fuel system
- Because biodiesel blends above B20 contain more ash, using blends above B20 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present)

IMPORTANT: Raw pressed vegetable oils are NOT acceptable for use as fuel in any concentration in John Deere engines. Their use could cause engine failure.

EC82310,0000953-19-04NOV20

Lubricity of Diesel Fuel

Most diesel fuels manufactured in the United States, Canada, and the European Union have adequate lubricity to ensure proper operation and durability of fuel injection system components. However, diesel fuels manufactured in some areas of the world may lack the necessary lubricity.

IMPORTANT: Make sure the diesel fuel used in your machine demonstrates good lubricity characteristics.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

If fuel of low or unknown lubricity is used, add John Deere Fuel-Protect Diesel Fuel Conditioner (or equivalent) at the specified concentration.

Lubricity of BioDiesel Fuel

Fuel lubricity can improve significantly with BioDiesel

blends up to B20 (20% BioDiesel). Further increase in lubricity is limited for BioDiesel blends greater than B20.

DX,FUEL5-19-07FEB14

Handling and Storing Diesel Fuel

⚠ CAUTION: Reduce the risk of fire. Handle fuel carefully. DO NOT fill the fuel tank when engine is running. DO NOT smoke while you fill the fuel tank or service the fuel system.

Fill the fuel tank at the end of each day's operation to prevent water condensation and freezing during cold weather.

Keep all storage tanks as full as practical to minimize condensation.

Ensure that all fuel tank caps and covers are installed properly to prevent moisture from entering. Monitor water content of the fuel regularly.

When using biodiesel fuel, the fuel filter may require more frequent replacement due to premature plugging.

Check engine oil level daily prior to starting engine. A rising oil level may indicate fuel dilution of the engine oil.

IMPORTANT: The fuel tank is vented through the filler cap. If a new filler cap is required, always replace it with an original vented cap.

When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel. Keeping the free water drained and treating the bulk fuel storage tank quarterly with a maintenance dose of a biocide will prevent microbial growth. Contact your fuel supplier or John Deere dealer for recommendations.

DX,FUEL4-19-13JAN18

Fill Fuel Tank




TS202—UN—23AUG88

CAUTION: Avoid possible personal injury or fire:

- Fuel is highly flammable, handle it with care.
- Do not refuel while smoking or when near open flame or sparks.
- Stop engine when refueling.
- Clean up spilled fuel.
- Fill fuel tank outdoors.
- Keep machine clean of accumulated trash, grease, and debris.

IMPORTANT: Prevent damage to tractor fuel injection system, emissions system, and other components. Never put Diesel Exhaust Fluid (DEF) into fuel tank or fuel system. If DEF is introduced into the fuel tank, see your John Deere dealer.

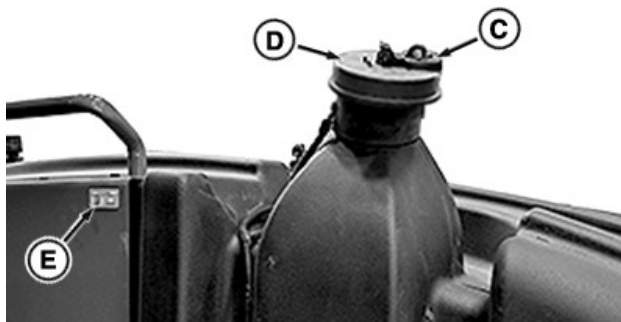

RXA0162574—UN—26MAR18


IMPORTANT: Prevent damage to engine and emissions system components. If tractor is equipped with Final Tier 4/Stage V engine, use only ultra low sulfur fuel as prescribed by decal (E). Tractors with other emissions specifications may use other fuels. See Diesel Fuel in this Operator's Manual section.

To determine which engine your tractor is equipped with, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

NOTE: Final Tier 4/Stage V engine equipped tractors require DEF to operate. It is suggested that DEF tank is filled each time tractor is refueled. See Fill DEF Tank - FT4/Stage V Engine in Diesel Exhaust Fluid (DEF) section of this Operator's Manual.

IMPORTANT: Each fuel tank is vented through filter at top of each tank. See Fuel Tank Vent Filters in Service—Change section of this Operator's Manual.

NOTE: When digital display fuel gauge flashes, approximately 20 to 25 gallons of fuel remains.

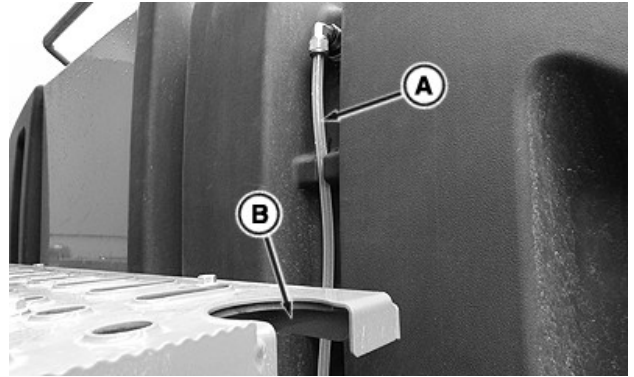

RXA0158720—UN—07APR17

Approximately 132 L (35 gal) of fuel remains when fuel level is at bottom of sight tube (A).

1. Place fuel nozzle in fuel nozzle holder (B) before climbing steps.
2. Stand on platform.
3. Raise fuel cap lock lever (C).
4. Rotate fuel cap (D) counterclockwise.
5. Remove fuel cap and fill fuel tanks. Filling fuel tanks at end of each day prevents condensation in tank.
6. Place fuel nozzle back in fuel nozzle holder and replace and lock cap before climbing down from platform.

KD34109,0000753-19-22APR21

Testing Diesel Fuel

A fuel analysis program can help to monitor the quality of diesel fuel. The fuel analysis can provide critical data such as calculated cetane index, fuel type, sulfur content, water content, appearance, suitability for cold weather operations, bacteria, cloud point, acid number, particulate contamination, and whether the fuel meets ASTM D975 or equivalent specification.

Contact your John Deere dealer for more information on diesel fuel analysis.

DX,FUEL6-19-13JAN18

Fuel Filters

The importance of fuel filtration cannot be overemphasized with modern fuel systems. The combination of increasingly restrictive emission regulations and more efficient engines requires fuel system to operate at much higher pressures. Higher pressures can only be achieved using fuel injection components with very close tolerances. These close manufacturing tolerances have significantly reduced capacities for debris and water.

John Deere brand fuel filters have been designed and produced specifically for John Deere engines.

To protect the engine from debris and water, always change engine fuel filters as specified in this manual.

DX,FILT2-19-14APR11


Diesel Exhaust Fluid (DEF)

Fill DEF Tank—Final Tier 4/Stage V Engine

CAUTION: DEF contains urea. Do not get the substance in eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Do not take internally. In event DEF is ingested, contact a physician immediately. Reference Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: To determine tractor engine type, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

Never put DEF in diesel fuel tank, or diesel fuel in DEF tank.

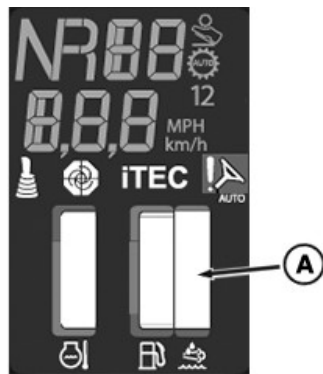

RXA0152790—UN—13JUL16

To avoid drastic changes in tractor performance, always keep DEF level above topmost red mark on corner post display (A). Monitor DEF level on cornerpost display and refill as necessary. Refill DEF tank every time tractor is refueled, see Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines in this Operator's Manual section.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and may distort some plastic and rubber components.

To fill DEF tank:

1. Before using containers, funnels, etc. to dispense DEF, wash and rinse items thoroughly with distilled water to remove contaminants.



RXA0167615—UN—23APR19

2. Wipe DEF tank filler cap (B), area around cap and filler neck to reduce chance of contaminating DEF.
3. Lift DEF tank cap latch lever and turn cap 90° counterclockwise.
4. Lift cap from filler neck.

IMPORTANT: Avoid overfilling DEF tank.

Completely filling DEF tank at lower temperatures can cause a blockage in filler neck. If temperatures are expected to reach below -11°C (12°F), do not fill DEF tank more than half way according to DEF level display on corner post. Observe temperature guidelines to assure ability to refill tank.

5. Using funnel, carefully fill DEF tank. DO NOT over fill DEF tank. Best final fill level is determined by ambient air temperature guide:
 - Ambient air temperature at or above -11°C (12°F): Completely fill tank.
 - Ambient air temperature below -11°C (12°F): Keep fill tank level below the filler neck. Although main portion of DEF tank is heated to keep DEF from freezing, filler neck is not heated. Fluid in neck may freeze, preventing refill DEF tank until fluid melts.
6. Replace and securely latch DEF tank cap. Cap can be locked with a padlock.
7. Carefully clean any spills, using clean (preferably distilled) water.

If an unapproved fluid, such as diesel fuel, or engine coolant is added to vehicle DEF tank, see Diesel Exhaust Fluid (DEF) Tank in Service—Clean section of this Operator's Manual.

DB71512,0000071-19-21APR21

Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines

In order to maintain the emissions performance of the

engine, it is essential to use and refill DEF in accordance with the specification.

Diesel exhaust fluid (DEF) is a high purity liquid that is injected into the exhaust system of engines equipped with selective catalytic reduction (SCR) systems. Maintaining the purity of DEF is important to avoid malfunctions in the SCR system. Engines requiring DEF shall use a product that meets the requirements for aqueous urea solution 32 (AUS 32) according to ISO 22241-1.

The use of John Deere Diesel Exhaust Fluid is recommended. John Deere Diesel Exhaust Fluid is available at your John Deere dealer in a variety of package sizes to suit your operational needs.

If John Deere Diesel Exhaust Fluid is not available, use DEF that is certified by the American Petroleum Institute (API) Diesel Exhaust Fluid Certification Program or by the AdBlue™ Diesel Exhaust Fluid Certification Program. Look for the API certification symbol or the AdBlue™ name on the container.



RG30211—UN—08MAR18

In some cases, DEF is referred to by one or more of these names:

- Urea
- Aqueous Urea Solution 32
- AUS 32
- AdBlue™
- NOx Reduction Agent
- Catalyst Solution

DX,DEF-19-13JAN18

Storing Diesel Exhaust Fluid (DEF)

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: It is unlawful to tamper with or remove any component of the aftertreatment system. Do not use DEF that does not meet the required specifications or operate the engine with no DEF.

Never attempt to create DEF by mixing agricultural grade urea with water. Agricultural grade urea does not meet the necessary specifications and can damage the aftertreatment system.

Do not add any chemicals or additives to DEF in an effort to prevent freezing. Any chemicals or additives added to DEF can damage the aftertreatment system.

Never add water or any other fluid in place of, or in addition to DEF. Operating with a modified DEF or using an unapproved DEF can damage the aftertreatment system.

Storage information provided below is for reference and is to be used as a guideline only.

It is preferred to store DEF out of extreme ambient temperatures. DEF freezes at -11°C (12°F). Exposure to temperatures greater than 30°C (86°F) can degrade DEF over time. Do not store DEF in direct sunlight.

Dedicated DEF storage containers must be sealed between uses to prevent evaporation and contamination. Containers made of polyethylene, polypropylene, or stainless steel are recommended to transport and store DEF.

Ideal conditions for storage of DEF are:

- Store at temperatures between -5°C and 30°C (23°F and 86°F)
- Store in dedicated containers sealed to avoid contamination and evaporation

Under these conditions, DEF is expected to remain useable for a minimum of 18 months. Storing DEF at higher temperatures can reduce its useful life by approximately 6 months for every 5°C (9°F) temperature above 30°C (86°F).

If unsure how long or under what conditions DEF has been stored, test DEF. See Testing Diesel Exhaust Fluid (DEF).

Long-term storage in the DEF tank (over 12 months) is not recommended. If long-term storage is necessary, test DEF prior to operating engine. See Testing Diesel Exhaust Fluid (DEF).

It is recommended to purchase DEF in quantities that will be consumed within 12 months.

DX,DEF,STORE-19-15JUL20

Refilling Diesel Exhaust Fluid (DEF) Tank



TS1731—UN—23AUG13

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: Use only distilled water to rinse components that are used to deliver DEF. Tap water can contaminate DEF. If distilled water is not available, rinse with clean tap water, then thoroughly rinse with ample amounts of DEF.

If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

If DEF is filled into engine fuel tank or other fluid compartment, do not operate engine until system is properly purged of DEF. Contact your John Deere dealer immediately to determine how to clean and purge the system.

Reasonable care should be taken when refilling the DEF tank. Ensure that the DEF tank cap area is free of debris before removing the cap. Seal containers of DEF between use to prevent contamination and evaporation.

Avoid splashing DEF and do not allow DEF to come into contact with skin, eyes, or mouth.

DEF is not harmful to handle, but DEF can be corrosive to materials such as steel, iron, zinc, nickel, copper, aluminum, and magnesium. Use suitable containers to transport and store DEF. Containers made of polyethylene, polypropylene, or stainless steel are recommended.

Avoid prolonged contact with skin. In case of accidental contact, wash skin immediately with soap and water.

Keep anything used to store or dispense DEF clean of dirt and dust. Wash and rinse containers or funnels thoroughly with distilled water to remove contaminants.

If an unapproved fluid, such as diesel fuel or coolant is added to the DEF tank, contact your John Deere dealer immediately to determine how to clean and purge the system.

If water has been added to the DEF tank, a tank cleaning is necessary. See Cleaning DEF Tank in this manual. After refilling the tank, check the DEF concentration. See Testing Diesel Exhaust Fluid (DEF).

The operator must maintain appropriate DEF levels at all times. Check the DEF level daily and refill the tank as needed. The filling port is identified by a blue colored cap embossed with the following DEF symbol.

DX,DEF,REFILL-19-15JUL20

Testing Diesel Exhaust Fluid (DEF)

IMPORTANT: Using DEF with the correct concentration is critical to engine and aftertreatment system performance. Extended storage and other conditions can adversely alter the DEF concentration.

If DEF quality is questionable, draw a sample out of the DEF tank or storage tank into a clear container. DEF must be crystal clear with a light ammonia smell. If DEF appears cloudy, has a colored tint, or has a profound ammonia smell, it is likely not within specification. DEF in this condition should not be used. Drain tank, flush with distilled water and refill with new or good DEF. After refilling the tank, check the DEF concentration.

If the DEF passes the visual and smell test, check the DEF concentration with a handheld refractometer calibrated to measure DEF.

DEF concentration should be checked when the engine has been stored for extended periods, or if there is suspicion the engine or packaged DEF fluid has been contaminated with water.

Two approved tools are available through your John Deere dealer:

- JDG11594 Digital DEF Refractometer—A digital tool providing an easy to read concentration measurement
- JDG11684 DEF Refractometer—Low-cost alternative tool providing an analog reading

Follow instructions included with either tool to obtain the measurement.

The correct DEF concentration is 31.8—33.2% urea. If the DEF concentration is not within specification, drain the DEF tank, flush with distilled water and fill with new or good DEF. If packaged DEF is not within specification, dispose of DEF packages and replace with new or good DEF.

DX,DEF,TEST-19-13JUN13

Disposal of Diesel Exhaust Fluid (DEF)

Although there is little issue with minor spillage of DEF on the ground, large amounts of DEF should be contained. If large spills occur, contact local environmental authorities for assistance with clean-up.

If a substantial quantity of DEF is not within specification, contact the DEF supplier for assistance with disposal. Do not dump substantial quantities of DEF onto the ground or send DEF to wastewater treatment facilities.

DX,DEF,DISPOSE-19-13JUN13

Engine Oil

Diesel Engine Oil Service Interval for Operation at High Altitude

To avoid excessive oil degradation and potential engine damage, reduce oil and filter service intervals to 50% of the original recommended values when operating engines at altitudes above **1675 m (5500 ft)**.

Oil analysis may allow longer service intervals.

Use only approved oil types.

Example of Original Hours	Corresponding High Altitude Hours
125	60
150	75
175	85
200	100
250	125
275	135
300	150
350	175
375	185
400	200
500	250

DX,ENOIL,SERV,HIALT-19-11NOV14

John Deere Break-In Plus™ Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V

New engines are filled at the factory with John Deere Break-In Plus™ Engine Oil. During the break-in period, add John Deere Break-In Plus™ Engine Oil, as needed to maintain the specified oil level.

Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.

During the initial operation of a new or rebuilt engine, change the oil and filter between a minimum of 100 hours and maximum equal to the interval specified for John Deere Plus-50™ II oil.

After engine overhaul, fill the engine with John Deere Break-In Plus™ Engine Oil.

If John Deere Break-In Plus™ Engine Oil is not available, use an SAE 10W-30 viscosity grade diesel engine oil meeting one of the following:

- API Service Category CK-4
- API Service Category CJ-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E6

If one of these oils is used during the initial operation of

a new or rebuilt engine, change the oil and filter between a minimum of 100 hours and a maximum of 250 hours.

IMPORTANT: Do not use any other engine oils during the initial break-in of a new or rebuilt engine.

John Deere Break-In Plus™ Engine Oil can be used for all John Deere diesel engines at all emission certification levels.

After the break-in period, use John Deere Plus-50™ II or other diesel engine oil as recommended in this manual.

DX,ENOIL16-19-13JAN18

Break-In Engine Oil Use—Cummins 15 L Engines

IMPORTANT: Special "break-in" engine oils (including John Deere Break-In or Break-In Plus™ Oil) are not recommended for new or rebuilt 15 L engines. Use the same lubricating oil that will be used during normal operation, see Diesel Engine Oil - Interim Tier 4, Final Tier 4, Stage IIIB, and Stage V in this Operator's Manual section.


15 L engines are not shipped from the factory with break-in oil installed. Use recommended diesel engine oils. Do not use break-in oils.

RX32825,000017A-19-05NOV20

Break-In Plus is a trademark of Deere & Company

Plus-50 is a trademark of Deere & Company.

Diesel Engine Oil — Tier 2 and Stage II

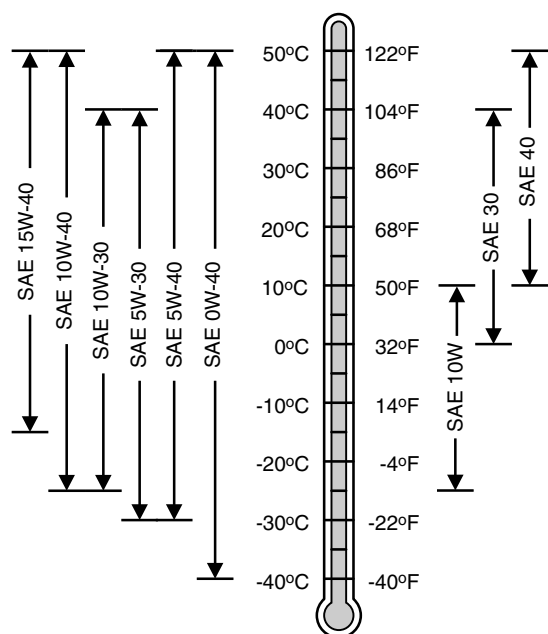

TS1743—UN—25APR19

Oil Viscosities for Air Temperature Ranges

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50™ II oil is preferred.

John Deere Plus-50™ is also recommended.

John Deere Torq-Gard™ is also allowed.

Other oils may be used if they meet one or more of the following standards:

- API Service Category CK-4
- API Service Category CJ-4
- API Service Category CI-4 PLUS
- API Service Category CI-4
- API Service Category CH-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E7
- ACEA Oil Sequence E6
- ACEA Oil Sequence E5
- ACEA Oil Sequence E4

Multi-viscosity diesel engine oils are preferred.

Diesel fuel quality and fuel sulfur content must comply

with all existing emissions regulations for the area in which the engine operates.

DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

DX,ENOIL7-19-23APR19

Engine Oil and Filter Service Intervals — Tier 2 and Stage II Engines

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Use oil analysis to evaluate the condition of the oil and to aid in selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

Diesel fuel sulfur content affects engine oil and filter service intervals.

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is **RECOMMENDED**.
- Use of diesel fuel with sulfur content 2000—5000 mg/kg (2000—5000 ppm) **REDUCES** the oil and filter change interval.
- **BEFORE** using diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm), contact your John Deere dealer or qualified service provider.

IMPORTANT: To avoid engine damage:

- **Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20. Oil analysis may allow longer service intervals.**
- **Use only approved oil types.**

Approved Oil Types:

- “Plus-50 Oils” include John Deere Plus-50™ II and John Deere Plus-50™
- “Other Oils” include John Deere Torq-Gard™, API CK-4, API CJ-4, API CI-4 PLUS, API CI-4, API CH-4, ACEA E9, ACEA E7, ACEA E6, ACEA E5, and ACEA E4

NOTE: The 500-hour extended oil and filter change interval is only allowed if all of the following conditions are met:

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm).

Plus-50 is a trademark of Deere & Company
Torq-Gard is a trademark of Deere & Company


- Use of John Deere Plus-50™ II or John Deere Plus-50™ oil.
- Use of an approved John Deere oil filter.

Engine Oil and Filter Service Intervals	
Fuel Sulfur	Less than 2000 mg/kg (2000 ppm)
Plus-50 Oils	500 hours
Other Oils	250 hours
Fuel Sulfur	2000—5000 mg/kg (2000—5000 ppm)
Plus-50 Oils	400 hours
Other Oils	150 hours
Fuel Sulfur	5000—10 000 mg/kg (5000—10 000 ppm)
Plus-50 Oils	250 hours (see John Deere dealer)
Other Oils	125 hours (see John Deere dealer)

Oil analysis may extend the service interval of "Other Oils", to a maximum not to exceed the interval for Plus-50 Oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 oils is reached.

DX,ENOIL12,T2,EXT-19-13JAN18

Diesel Engine Oil — Tier 3 and Stage IIIA

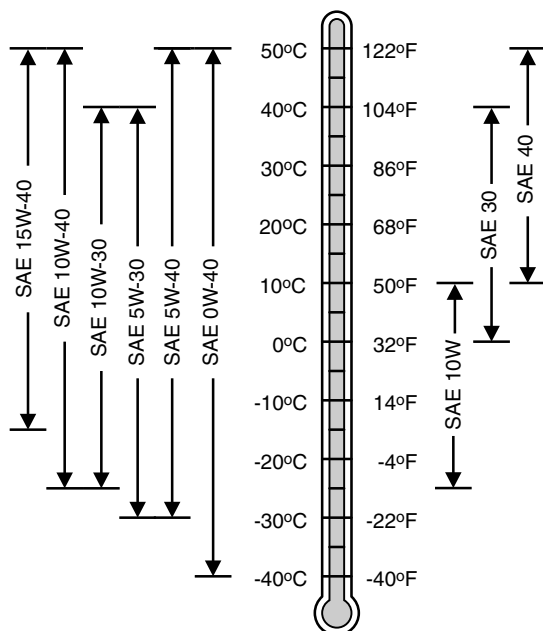

TS1743—UN—25APR19

Oil Viscosities for Air Temperature Ranges

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50™ II oil is preferred.

John Deere Plus-50™ is also recommended.

John Deere Torq-Gard™ is also allowed.

Other oils may be used if they meet one or more of the following standards:

- API Service Category CK-4
- API Service Category CJ-4
- API Service Category CI-4 PLUS
- API Service Category CI-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E7
- ACEA Oil Sequence E6
- ACEA Oil Sequence E5
- ACEA Oil Sequence E4

Multi-viscosity diesel engine oils are preferred.

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

DX,ENOIL11-19-23APR19

Engine Oil and Filter Service Intervals — Tier 3 and Stage III A — PowerTech™ Plus Engines

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Approved Oil Types:

- "Plus-50 Oils" include John Deere Plus-50™ II and John Deere Plus-50™.
- "Other Oils" include John Deere Torq-Gard™, API CK-4, API CJ-4, API CI-4 PLUS, API CI-4, ACEA E9, ACEA E7, ACEA E6, ACEA E5, and ACEA E4.

Use oil analysis to evaluate the condition of the oil and to aid in selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

Plus-50 is a trademark of Deere & Company
Torq-Gard is a trademark of Deere & Company

Diesel fuel sulfur content affects engine oil and filter service intervals.

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is **RECOMMENDED**
- **BEFORE** using diesel fuel with sulfur content greater than 2000 mg/kg (2000 ppm), contact your John Deere dealer or qualified service provider
- **DO NOT** use diesel fuel with sulfur content greater than 10000 mg/kg (10000 ppm)

NOTE: The 500 hour extended oil and filter change interval is only allowed if all of the following conditions are met:

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm)
- Use of John Deere Plus-50™ II or Plus-50 Oil
- Use of an approved John Deere oil filter

Engine Oil and Filter Service Intervals	
Fuel Sulfur	Less than 2000 mg/kg (2000 ppm)
Plus-50 Oils	500 hours
Other Oils	250 hours
Fuel Sulfur	2000—10000 mg/kg (2000—10000 ppm)
Plus-50 Oils	Contact John Deere dealer
Other Oils	Contact John Deere dealer


Oil analysis may extend the service interval of "Other Oils", to a maximum not to exceed the interval of Plus-50 Oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 oils is reached.

IMPORTANT: To avoid engine damage:

- **Reduce oil and filter service intervals by 50% when using BioDiesel blends greater than B20. Oil analysis may allow longer service intervals**
- **Use only approved oil types**

DX,ENOIL13,T3,PTP,220toMAX-19-13JAN18

Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V

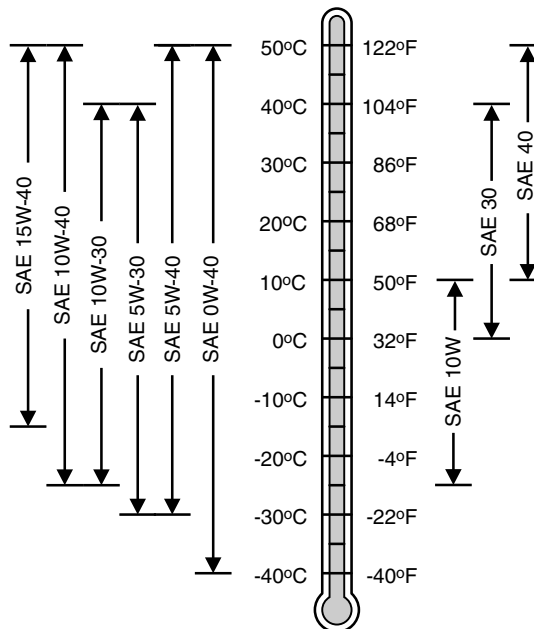

TS1743—UN—25APR19

Oil Viscosities for Air Temperature Ranges

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50™ II is the recommended engine oil.

Extended service intervals may apply when John Deere Plus-50™ II engine oil is used. Refer to the engine oil drain interval table and consult your John Deere dealer for more information.

If John Deere Plus-50™ II engine oil is not available, engine oil meeting one or more of the following may be used:

- API Service Category CK-4
- API Service Category CJ-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E6

DO NOT use engine oil containing more than 1.0% sulfated ash, 0.12% phosphorus, or 0.4% sulfur.

Multi-viscosity diesel engine oils are preferred.

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

Plus-50 is a trademark of Deere & Company

IMPORTANT: Use only ultra low sulfur diesel (ULSD) fuel with a maximum sulfur content of 15 mg/kg (15 ppm).

DX,ENOIL14-19-23APR19

Engine Oil and Filter Service Intervals — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V Engines

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of the diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Approved Oil Types:

- John Deere Plus-50™ II
- “Other Oils” include API CK-4, API CJ-4, ACEA E9, and ACEA E6

Use oil analysis to evaluate the condition of the oil and to aid in selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

Diesel fuel sulfur content affects engine oil and filter service intervals. Higher fuel sulfur levels reduce oil and filter service intervals.

Use of diesel fuel with sulfur content less than 15 mg/kg (15 ppm) is **REQUIRED**.

Engine operation at high altitude decreases oil change intervals. See Diesel Engine Oil Service Interval for Operation at High Altitude for additional information.

NOTE: The 500 hour extended oil and filter change interval is only allowed if all of the following conditions are met:

- Use of diesel fuel with sulfur content less than 15 mg/kg (15 ppm)
- Use of John Deere Plus-50™ II oil
- Use of an approved John Deere oil filter

Plus-50 is a trademark of Deere & Company

Engine Oil and Filter Service Intervals

John Deere Plus-50™ II	500 hours
Other Oils	250 hours

Oil analysis may extend the service interval of “Other Oils” to a maximum not to exceed the interval of Plus-50™ II oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 II oils is reached.

IMPORTANT: To avoid engine damage:

- **Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20. Oil analysis may allow longer service intervals.**
- **Use only approved oil types.**

DX,ENOIL15,IT4,120toMAX-19-13JAN18

Engine Coolant

Diesel Engine Coolant (engine with wet sleeve cylinder liners)

Failure to follow applicable coolant standards and drain intervals can result in severe engine damage that may not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere coolants, parts, or service.

Preferred Coolants

The following pre-mix engine coolants are preferred:

- John Deere COOL-GARD™ II
- John Deere COOL-GARD II PG

COOL-GARD II pre-mix coolant is available in several concentrations with different freeze protection limits as shown in the following table.

COOL-GARD II Pre-Mix	Freeze Protection Limit
COOL-GARD II 20/80	-9°C (16°F)
COOL-GARD II 30/70	-16°C (3°F)
COOL-GARD II 50/50	-37°C (-34°F)
COOL-GARD II 55/45	-45°C (-49°F)
COOL-GARD II PG 60/40	-49°C (-56°F)
COOL-GARD II 60/40	-52°C (-62°F)

Not all COOL-GARD II pre-mix products are available in all countries.

Use COOL-GARD II PG when a non-toxic coolant formulation is required.

Additional Recommended Coolants

The following engine coolant is also recommended:

- John Deere COOL-GARD II Concentrate in a 40—60% mixture of concentrate with quality water.

IMPORTANT: When mixing coolant concentrate with water, do not use less than 40% or greater than 60% concentration of coolant. Less than 40% gives inadequate additives for corrosion protection. Greater than 60% can result in coolant gelation and cooling system problems.

Other Coolants

Other ethylene glycol or propylene glycol base coolants may be used if they meet the following specification:

- Pre-mix coolant meeting ASTM D6210 requirements
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Coolant concentrate meeting ASTM D6210 requirements in a 40—60% mixture of concentrate with quality water

If coolant meeting one of these specifications is unavailable, use a coolant concentrate or pre-mix coolant that has a minimum of the following chemical and physical properties:

- Provides cylinder liner cavitation protection according to either the John Deere Cavitation Test Method or a fleet study run at or above 60% load capacity
- Is formulated with a nitrite-free additive package
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion

Water Quality

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

Coolant Drain Intervals

Drain and flush the cooling system and refill with fresh coolant at the indicated interval, which varies with the coolant used.

When COOL-GARD II or COOL-GARD II PG is used, the drain interval is 6 years or 6000 hours of operation.

If a coolant other than COOL-GARD II or COOL-GARD II PG is used, reduce the drain interval to 2 years or 2000 hours of operation.¹

IMPORTANT: Do not use cooling system sealing additives or antifreeze that contains sealing additives.

Do not mix ethylene glycol and propylene glycol base coolants.

Do not use coolants that contain nitrites.

DX,COOL3-19-25AUG20

John Deere COOL-GARD™ II Coolant Extender

Some coolant additives gradually deplete during engine operation. For COOL-GARD™ II pre-mix and COOL-GARD II Concentrate, replenish coolant additives between drain intervals by adding COOL-GARD II Coolant Extender.

COOL-GARD is a trademark of Deere & Company

¹ Coolant analysis may extend the service interval of other "Coolants" to a maximum not to exceed the interval of Cool-Gard II coolants. Coolant analysis means taking a series of coolant samples at 1000 hour increments beyond the normal service interval until either the data indicate the end of useful coolant life or the maximum service interval of Cool-Gard II is reached.

COOL-GARD is a trademark of Deere & Company

COOL-GARD II Coolant Extender should not be added unless indicated by COOL-GARD II Test Strips. These test strips provide a simple, effective method to check the freeze point, additive levels, and pH of your engine coolant.

Test the coolant solution at intervals of 12 months and whenever excessive coolant is lost through leaks or overheating.

IMPORTANT: Do not use COOL-GARD II Test Strips with COOL-GARD II PG.

COOL-GARD II Coolant Extender is a chemically matched additive system for use with all COOL-GARD II coolants. COOL-GARD II Coolant Extender is not intended for use with nitrite-containing coolants.

IMPORTANT: Do not add a supplemental coolant additive when the cooling system is drained and refilled with any of the following:

- John Deere COOL-GARD II
- John Deere COOL-GARD II PG

The use of non-recommended supplemental coolant additives can result in additive drop-out, gelation of the coolant, or corrosion of cooling system components.

Add the recommended concentration of COOL-GARD II Coolant Extender. DO NOT add more than the recommended amount.

DX,COOL16-19-15MAY13

Operating in Warm Temperature Climates

John Deere engines are designed to operate using recommended engine coolants.

Always use a recommended engine coolant, even when operating in geographical areas where freeze protection is not required.

IMPORTANT: Water may be used as coolant in emergency situations only.

Foaming, hot surface aluminum and iron corrosion, scaling, and cavitation occur when water is used as the coolant, even when coolant conditioners are added.

Drain cooling system and refill with recommended engine coolant as soon as possible.

DX,COOL6-19-17FEB20

Water Quality for Mixing with Coolant Concentrate

Engine coolants are a combination of three chemical

components: ethylene glycol (EG) or propylene glycol (PG) antifreeze, inhibiting coolant additives, and quality water.

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

All water used in the cooling system should meet the following minimum specifications for quality:

Chlorides	<40 mg/L
Sulfates	<100 mg/L
Total solids	<340 mg/L
Total dissolved I hardness	<170 mg/L
pH	5.5—9.0

IMPORTANT: Do not use bottled drinking water because it often contains higher concentrations of total dissolved solids.

Freeze Protection

The relative concentrations of glycol and water in the engine coolant determine its freeze protection limit.

Ethylene Glycol	Freeze Protection Limit
40%	-24°C (-12°F)
50%	-37°C (-34°F)
60%	-52°C (-62°F)
Propylene Glycol	Freeze Protection Limit
40%	-21°C (-6°F)
50%	-33°C (-27°F)
60%	-49°C (-56°F)


DO NOT use a coolant-water mixture greater than 60% ethylene glycol or 60% propylene glycol.

DX,COOL19-19-13JAN18

Testing Coolant Freeze Point



TS1732—UN—04SEP13
SERVICEGARD™ Part Number 75240

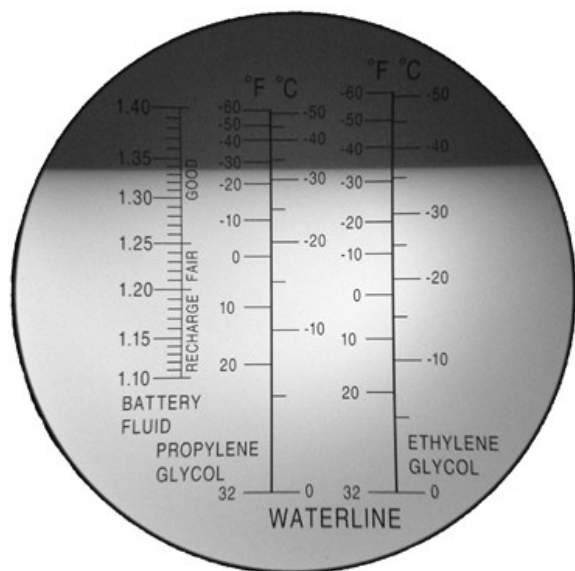

TS1733—UN—04SEP13
Image with a Drop of 50/50 Coolant Placed on the Refractometer Window

The use of a handheld coolant refractometer is the quickest, easiest, and most accurate method to determine coolant freeze point. This method is more accurate than a test strip or a float-type hydrometer which can produce poor results.


A coolant refractometer is available through your John Deere dealer under the SERVICEGARD™ tool program. Part number 75240 provides an economical solution to accurate freeze point determination in the field.

To use this tool:

1. Allow cooling system to cool to ambient temperatures.
2. Open radiator cap to expose coolant.
3. With the included dropper, collect a small coolant sample.
4. Open the lid of the refractometer, place one drop of coolant on the window and close the lid.
5. Look through the eyepiece and focus as necessary.
6. Record the listed freeze point for the type of coolant (ethylene glycol coolant or propylene glycol) being tested.

DX,COOL,TEST-19-13JUN13

Disposing of Coolant

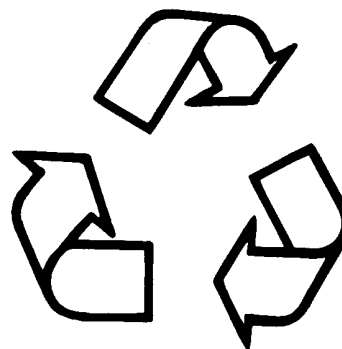

Recycle Waste

TS1133—UN—15APR13

Improperly disposing of engine coolant can threaten the environment and ecology.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.


Do not pour waste onto the ground, down a drain, or into any water source.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere engine distributor or servicing dealer.

RG, RG34710, 7543-19-26APR18

Other Lubricants

Transmission and Hydraulic Oil

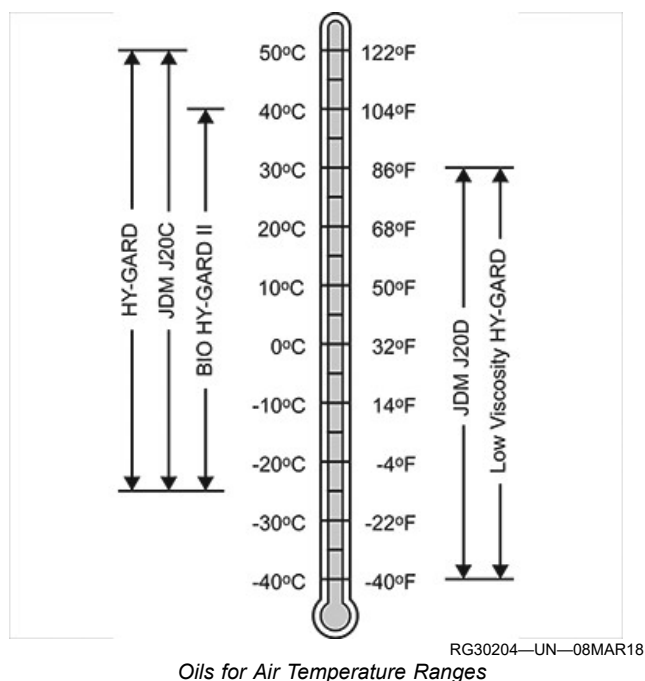

Oils for Air Temperature Ranges

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following oils are preferred:

- John Deere Hy-Gard™
- John Deere Low Viscosity Hy-Gard™

Other oils may be used if they meet one of the following:

- John Deere Standard JDM J20C
- John Deere Standard JDM J20D

Use John Deere Bio Hy-Gard™ II oil when a biodegradable fluid is required.¹

DX,ANTI-19-01JAN18

Transmission and Hydraulic Oil Use

IMPORTANT: To ensure proper shift quality, an oil meeting Hy-Gard™ or JDM J20C specifications must be used.

Shift quality problems and/or drivetrain damage may occur if the Hy-Gard™ or JDM J20C specifications are not followed.

Hy-Gard is a trademark of Deere & Company
Bio Hy-Gard is a trademark of Deere & Company


¹ Bio Hy-Gard II meets or exceeds the minimum biodegradability of 80% within 21 days according to CEC-L-33-T-82 test method. Bio Hy-Gard II should not be mixed with mineral oils, because this reduces the biodegradability and makes proper oil recycling impossible.

Tractor transmission/axle and hydraulic reservoir is factory filled with John Deere Hy-Gard™ JDM J20C oil.

EC82310,0000F57-19-05NOV20

Multipurpose Extreme Pressure (EP) Grease

IMPORTANT: For automated lubrication systems different ambient air temperatures need to be considered.

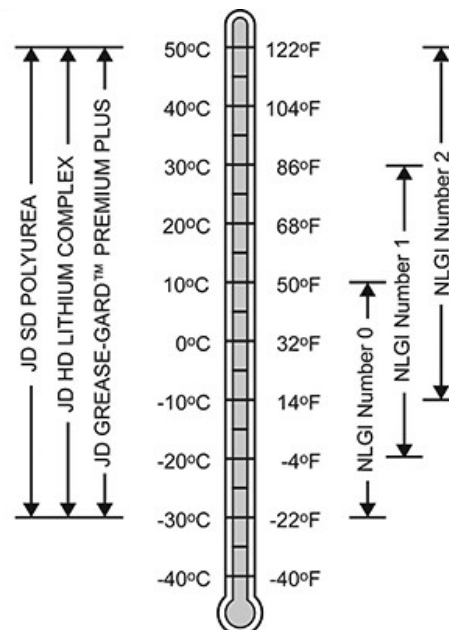

Greases for Air Temperature Ranges

Use grease based on NLGI consistency numbers and the expected air temperature range during the service interval.

John Deere SD Polyurea Grease is preferred.

The following greases are also recommended:

- John Deere HD Lithium Complex Grease
- John Deere Grease-Gard™ Premium Plus

Other greases may be used if they meet the following:

- NLGI Performance Classification GC-LB
- ISO-L-X-BDHB 2 or DIN KP 2 N-10 Lithium Complex, Non-Synthetic Base Oil (100 to 220 mm²/s @ 40°C)

Grease-Gard is a trademark of Deere & Company

IMPORTANT: Some types of thickeners, base oils, and additives used in greases are not compatible with others. Mixing greases should be avoided. Consult your grease supplier before mixing different types of grease.

Re-refined base stock products may be used if the finished lubricant meets the performance requirements.

DX,ALTER-19-13JAN18

DX,GREA1-19-13JAN18

Lubricant Storage

Your equipment can operate at top efficiency only when clean lubricants are used.

Use clean containers to handle all lubricants.

Store lubricants and containers in an area protected from dust, moisture, and other contamination. Store containers on their side to avoid water and dirt accumulation.

Make certain that all containers are properly marked to identify their contents.

Properly dispose of all old containers and any residual lubricant they may contain.

DX,LUBST-19-11APR11

Mixing of Lubricants

In general, avoid mixing different brands or types of oil. Oil manufacturers blend additives in their oils to meet certain specifications and performance requirements.

Mixing different oils can interfere with the proper functioning of these additives and degrade lubricant performance.

Consult your John Deere dealer to obtain specific information and recommendations.

DX,LUBMIX-19-18MAR96

Alternative and Synthetic Lubricants

Conditions in certain geographical areas may require lubricant recommendations different from those printed in this manual.

Some John Deere brand coolants and lubricants may not be available in your location.

Consult your John Deere dealer to obtain information and recommendations.

Synthetic lubricants may be used if they meet the performance requirements as shown in this manual.

The temperature limits and service intervals shown in this manual apply to John Deere branded fluids or fluids that have been tested and/or approved for use in John Deere equipment.

Service—General Information

Service Sections Overview

CAUTION: Avoid personal injury. After completing any service procedure, reinstall any shields or covers that have been removed and close and securely latch hood.

IMPORTANT: This publication is not a detailed service manual. Procedures shown cover routine maintenance and service. For more detailed service information, purchase a Technical Manual through your John Deere dealer.

Recommended service intervals are for average conditions. Service more often if tractor is operated under adverse conditions.

Service sections provide information on service processes and procedures.

Fuel, Lubrication, and Coolants Sections:

Information on approved fluids for operation and service. Also included are guides to selection of correct service intervals for such procedures as engine oil refill.

Break-In Service: Perform listed services during first 100 hours of operation.

Service—Record Charts: Charts are provided to:

- Determine what service tasks must be performed when.
- Record when services have been performed.

Service Procedure Sections: Various scheduled and unscheduled service procedures are organized by procedure type within six sections. Appropriate Service sections and task names are referenced in Service Record Charts (example: Change: Engine Oil and Filter). Electrical section includes all service information for lighting, fuses, and relays.

Troubleshooting Sections: Procedural troubleshooting is provided, as well as information on dealing with Diagnostic Trouble Codes (DTCs) that may display on the CommandCenter™.

RX32825,00000A5-19-26MAR21

Service Tasks Performed As Required

IMPORTANT: Perform service tasks when instruments or tractor function indicates that they are required, even if at a time other than specified in Service Interval charts.

Occasionally, operating conditions may require a scheduled service to be performed sooner than indicated on Service Interval charts (for example, air

filters). When such a task is performed, record its completion in an As Required Service chart.

RX32825,00017C6-19-04JAN17

Identify Tractor Engine Emissions Status


IMPORTANT: To determine tractor engine type, see Engine Serial Number in Identification Number Section of this Operator's Manual.

Some service procedures differ depending upon emissions equipment with which tractor engine is equipped.

RX32825,0001764-19-14DEC16


Open Hood

CAUTION: Avoid injury. Close and latch hood securely before starting engine.

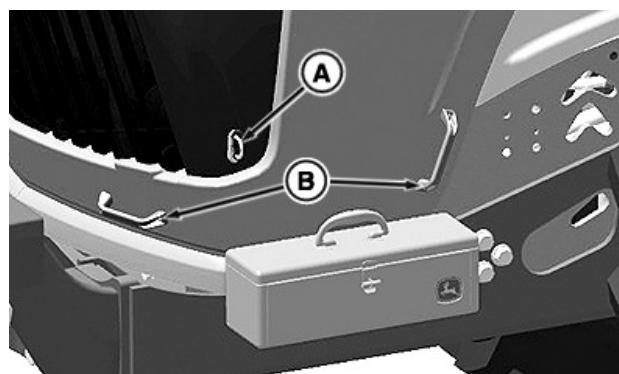

RXA0180112—UN—12OCT20

If Equipped

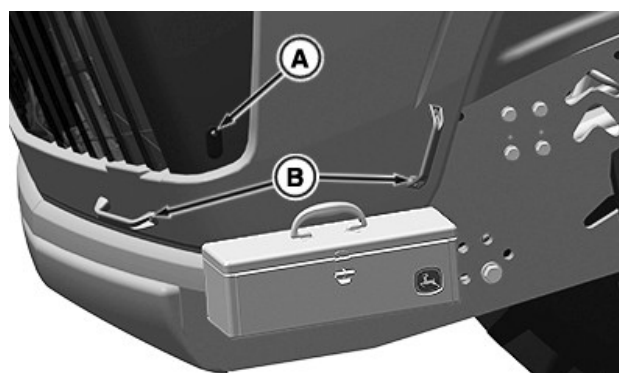


RXA0180141—UN—15OCT20

If Equipped

1. Pull hood release (A).
2. Using hood handles (B), raise hood

JL41210,0000A92-19-21APR21

Open Hood (If Equipped)

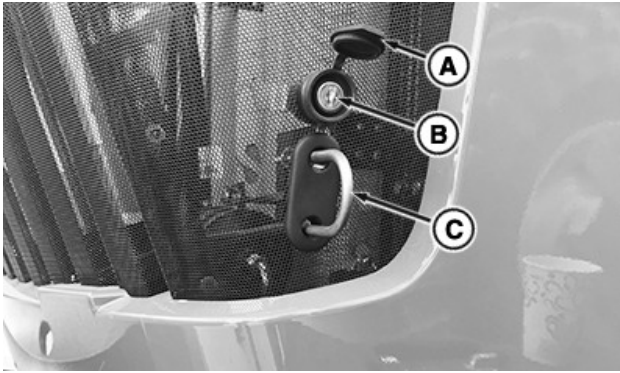

1. Open cover (A) and insert key into lock (B).
2. Turn key clockwise to unlock hood latch (C).
3. Pull hood latch and lift hood to open.

CAUTION: Avoid injury. Close and latch hood securely before starting engine.


4. Close hood and turn key counterclockwise to lock hood latch.

BH38674,0000D20-19-27APR18

Remove Engine Access Panel

CAUTION: Avoid physical injury and equipment damage:

- Never start engine with shields removed or hood open.
- Always close and securely latch hood.

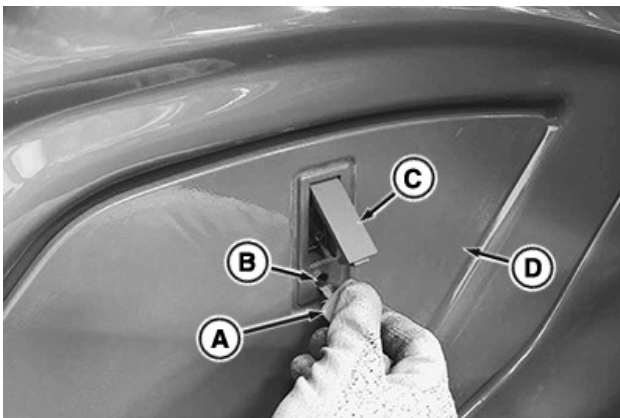

1. Insert key (A) into the panel lock (B).
2. Panel latch (C) opens.
3. Remove engine access panel (D).


BH38674,0000D1B-19-21APR21

Remove Front Engine Side Shield

CAUTION: Avoid physical injury and equipment damage:

- Never start engine with shields removed or hood open.
- Always close and securely latch hood.

1. Open hood. See Open Hood in this Operators Manual section.

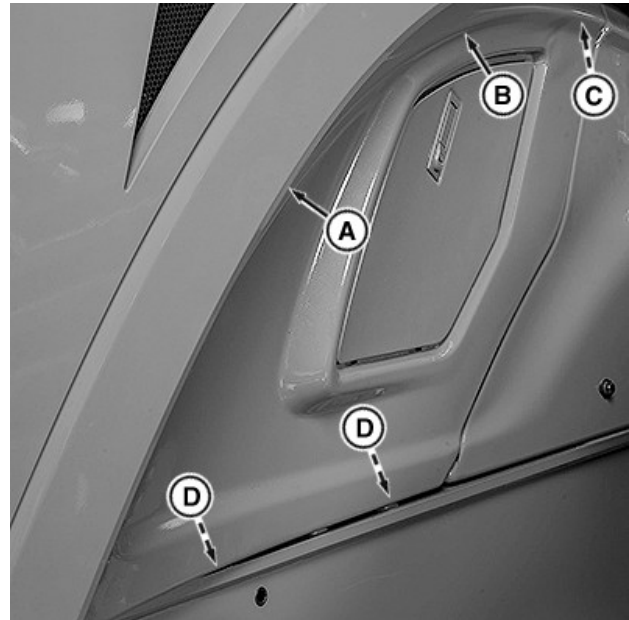

2. Push latch (A).
3. Remove top of engine side shield (B) from magnet (C).
4. Lift engine side shield from alignment posts (D).


BH38674,0000D1C-19-22APR21

Remove Rear Engine Side Shield

CAUTION: Avoid physical injury and equipment damage:

- Never start engine with shields removed or hood open.
- Always close and securely latch hood.

1. Open hood. See Open Hood in this Operator's Manual section.
2. Remove front engine side shield. See Remove Front Engine Side Shield in the Operator's Manual section.

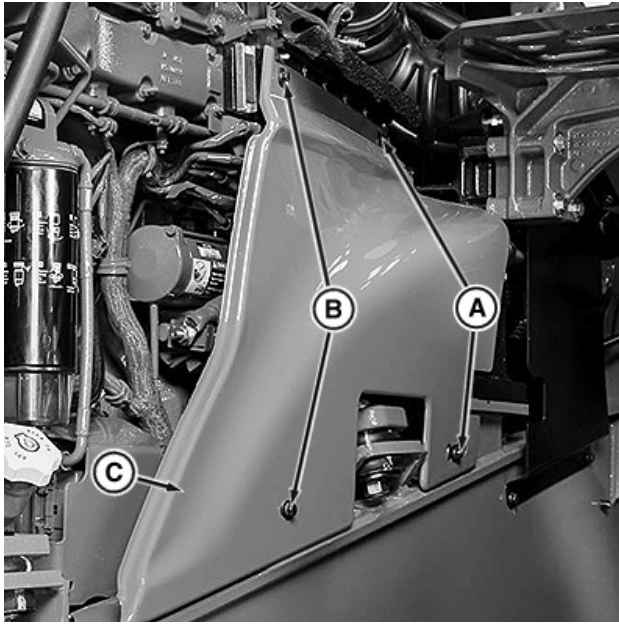


RXA0185233—UN—27AUG21

3. Remove cap screws (A) and (B).
4. Remove rear engine side shield (B).
5. When reinstalling rear engine side shield torque bolts (A) to 37 N·m (37 lb·ft) and (B) to 25 N·m (18 lb·ft).

BH38674,0000D1D-19-27AUG21

Remove Cab Rear Panel

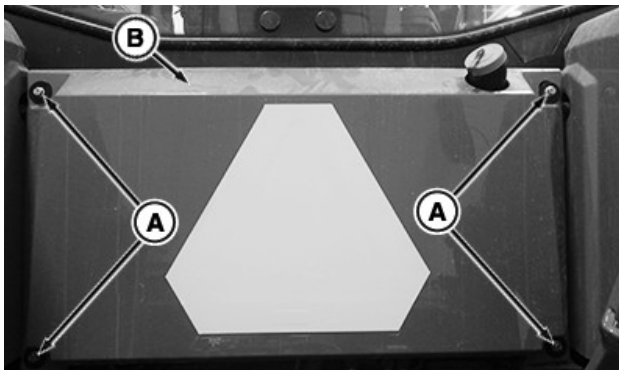


RXA0170334—UN—06SEP19

1. Remove the four rear cab panel screws (A).
2. Remove the cab rear panel (B).

EC82310,0000F61-19-21APR21

Access Battery Compartment


Open the Battery Compartment

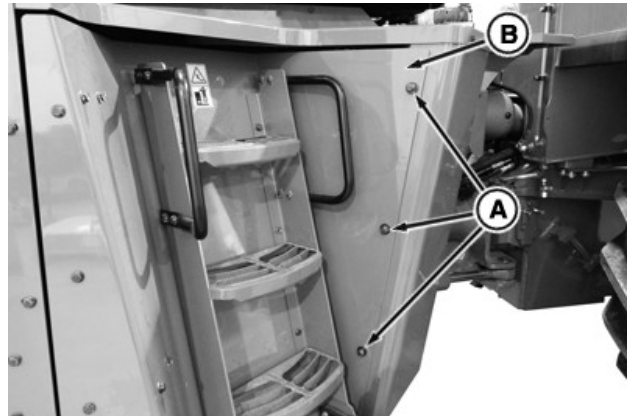

RXA0141965—UN—02JUN14

1. Remove three caps screws (A).
2. Swing open the battery compartment cover (B).

Close the Battery Compartment

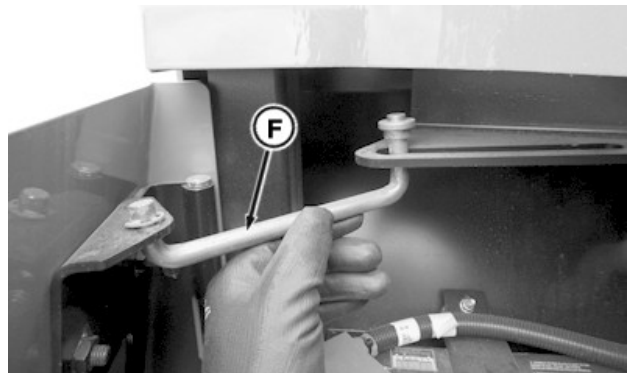

RXA0158218—UN—09MAR17

1. Lift up the battery panel latch (F).
2. Swing the battery compartment cover closed.
3. Reinstall the three cap screws and tighten the cap screws to 73 N·m (54 lb·ft).

EC82310,0000F5B-19-21APR21


Jack Up Tractor—Lifting Points and Support Stand Placement

- CAUTION:** Use approved lifting equipment only.
- Install DFRW254-Gudgeon Oscillation Stop-Axle (J) to prevent oscillation during axle removal. Failure to do so may result in injury. DFRW254 is shown on the following page.

Jack up tractor on firm, level ground only. Before doing any further work on tractor, secure it using suitable support stands.


Special John Deere tools shown can be used for this purpose. Support stands are available from your John Deere dealer.

Recommended lifting points for jacking up tractor. Use appropriate and suitable lifting device.

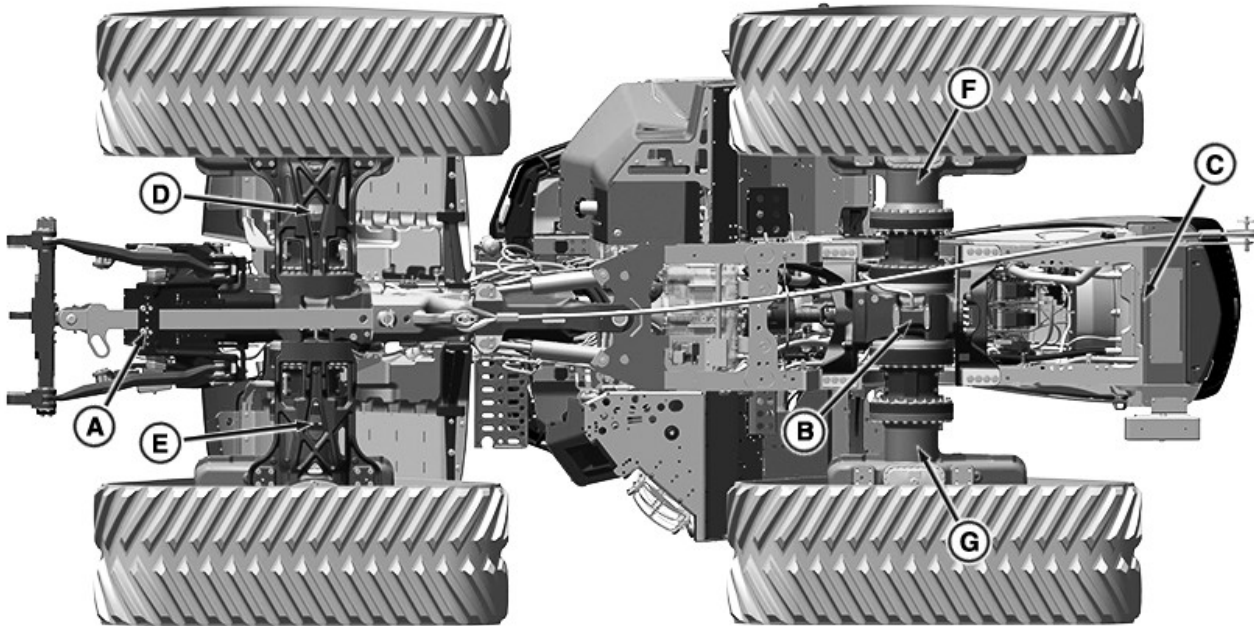


RXA0185295—UN—01SEP21

Underside Lift Points

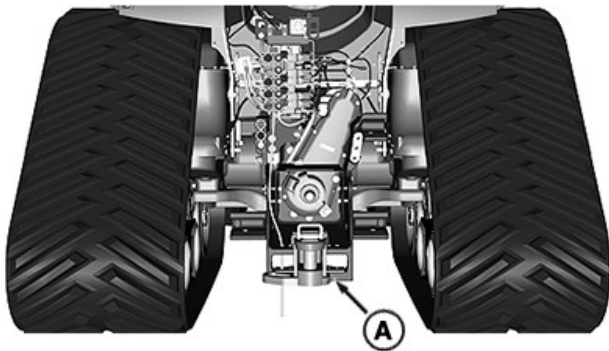

RXA0162497—UN—13MAR18

Rear Drawbar

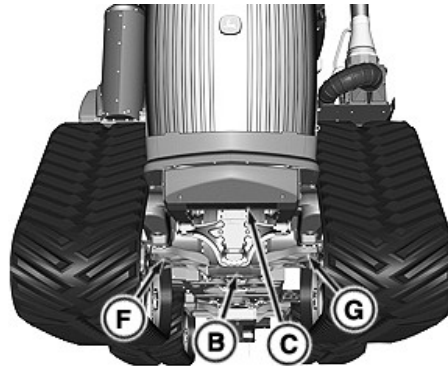

RXA0162399—UN—01MAR18

Front Lift Points



RXA0179021—UN—05AUG20

Lifting Points Label (If Equipped)

A— Raise rear of tractor (example: to remove or adjust rear tracks)

B— Raise center of front differential housing

⚠ CAUTION: Never attempt to lift tractor using front weights, front weight support, or the cooling package cleanout cover.

C— Raise front end of tractor under the frame

D— Raise right-hand side of rear axle (example: to remove right-hand rear track)

E— Raise left-hand side of rear axle (example: to remove left-hand rear track)

F— Raise right-hand side of front differential (example: to remove right-hand front track)

G— Raise left-hand side of front differential (example: to remove left-hand front track)

1. Disconnect battery ground cable. See Service Batteries and Connectors in Service—Electrical section of this Operator's Manual.

⚠ CAUTION: Avoid personal injury. Always use appropriate equipment to install, change, or uninstall weights. If appropriate equipment is not available, have job performed by your John Deere dealer.


2. Install front support stands:

NOTE: Grease fitting may need removed to allow for tool access.



RXA0162411—UN—06MAR18

- a. Install DFRW254—Gudgeon Oscillation Stop (J) to keep frame from oscillating.
- b. Lift tractor until approximately 200 mm (8 in) clearance exists between track tread and ground.

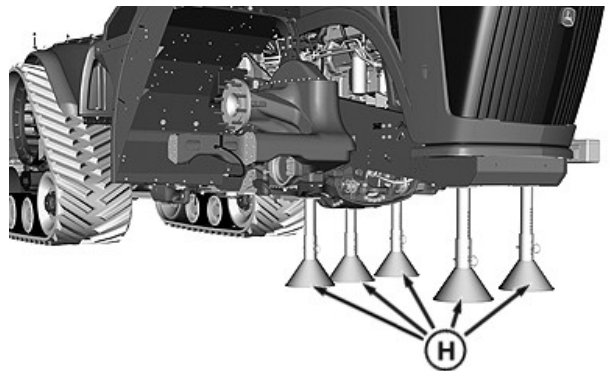


RXA0162400—UN—01MAR18

JT07211 Support Stands Placement

- c. Install JT07211 Support Stands (H) under each placement point.
3. Install rear support stands:

NOTE: Grease fitting may need removed to allow for tool access.

- a. Install DFRW254—Gudgeon Oscillation Stop (J) to keep frame from oscillating.
- b. Lift tractor until approximately 200 mm (8 in) clearance exists between track tread and ground.

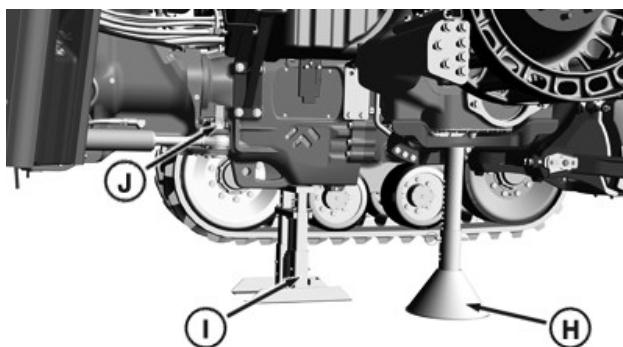


RXA0162401—UN—01MAR18

c. Install JT05725 Universal Support Stand (I).

EC82310,0000513-19-01SEP21

Service and Connect STC® (Snap-to-Connect) Fittings

CAUTION: Do not disconnect STC® (Snap-to-Connect) fitting when under pressure. Failure to relieve pressure before disconnecting fitting may result in personal injury, damage to equipment or both.

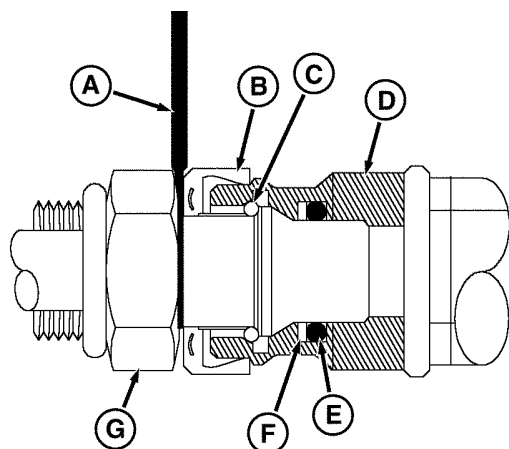

RXA0080095—UN—31MAR05

STC® fittings are used on steel lines, hose connections and come in a variety of sizes. JDG1885 STC® tool (A) is designed as a spacer to move release ring (B) inward which releases retaining ring (C). Purchase tool from your John Deere dealer.

IMPORTANT: Do not use tool to pry fittings apart. Prying with tool may damage fitting and tool.

NOTE: If retaining ring, back up ring (F) or O-ring (E) are damaged. See your John Deere dealer for replacement kit, and replace all three parts.

1. Insert correct STC® tool between release ring and fitting.
2. Remove hose or line from connector.

3. Before connecting STC® fitting and mating check surfaces for:

- Nicks
- Scratches
- Flat spots

4. Check for wear or damage:

- O-ring
- Back up ring
- Retaining ring

5. Check for contaminants:

- Female end (D)
- Male end (G)

6. Place release ring on male end fitting.

7. Push fitting halves together until a definite snap and solid stop is felt.

8. Pull back on hose to make sure that fitting halves are locked together.

RX32825,000175C-19-16JUN17


Transmission Calibration

When to Calibrate

Transmission calibration is recommended when:

- A clutch solenoid or valve is replaced.
- Shift quality has degraded.
- Transmission filters are replaced.
- Transmission hydraulic fluid is changed.
- Transmission system control unit (PTP) is replaced.
- Transmission is removed for maintenance or replaced for any reason.

Check Oil Level and Warm-Up Procedure Before Calibration.

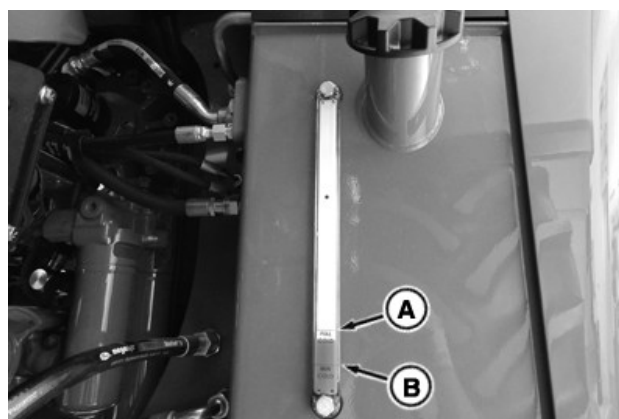

RXA0142195—UN—10JUN14

1. Check oil level sight gauge in hydraulic oil reservoir.

Oil level should be between Full Cold (A) and Min. Cold (B) marks.

NOTE: Only calibrate transmission if shift characteristics change after transmission oil and filter change.

Do not perform oil check soon after transporting tractor in 15th or a higher gear.

IMPORTANT: Poor shift quality or transmission damage may occur if incorrect transmission-hydraulic oil is used, see Transmission and Hydraulic Oil in Other Lubricants section of this Operator's Manual.

- Heat hydraulic oil, see Warm-Up Transmission-Hydraulic System in Transmission—General Information section of this Operator's Manual.
- When oil is at 50°C (122°F), drive to a level surface.

NOTE: DO NOT depress brake pedal during this portion of oil warming procedure. If brake pedal is depressed, additional oil will flow to axles and result in inaccurate oil level reading.

- Shift transmission lever to PARK. Set engine speed at 1800 rpm and run for 5 minutes.

IMPORTANT: Do not operate tractor if oil level is below "Min Cold" mark (B) in sight gauge with engine off.

NOTE: Reduce engine speed to slow idle, shut engine OFF, and wait 5 minutes for oil to stabilize.


CAUTION: Perform transmission calibration with tractor in an open, outdoor area on flat ground. Do not permit others near tractor during procedure.

Verify park brake is functioning properly.

While calibrating, remain in the operator's seat. Depending on transmission-hydraulic oil temperature at start of procedure, calibration typically takes 12-15 minutes.

IMPORTANT: Serious damage to transmission may result if oil level is inadequate.

- Make sure Efficiency Manager™ is disabled.

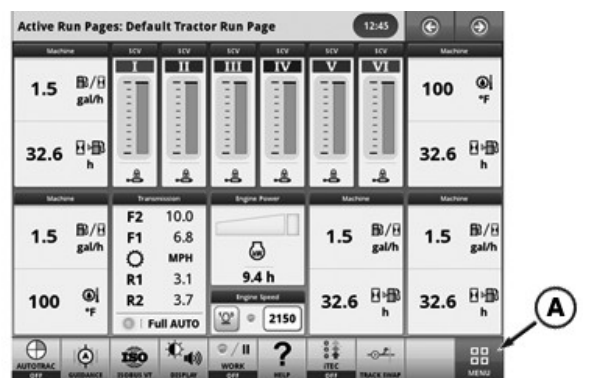


RXA0142149—UN—10JUN14




RXA0142150—UN—10JUN14

- Press Menu (A) and System tab (B).
- Select Diagnostic Center icon (C).

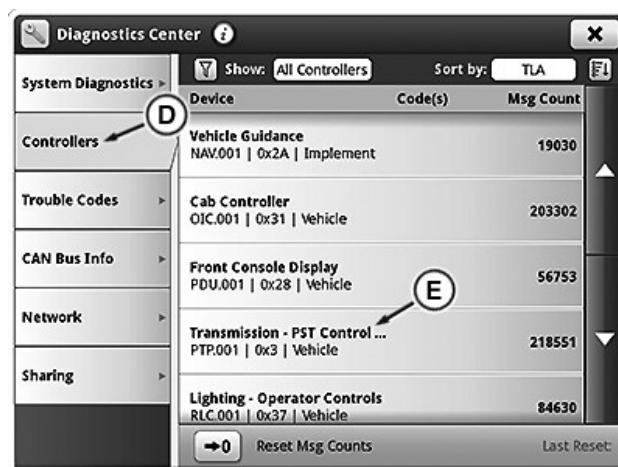

RXA0174962—UN—11FEB20


- Select Controllers tab (D).
- Select Transmission-PST Control (PTP.001) (E) from list.

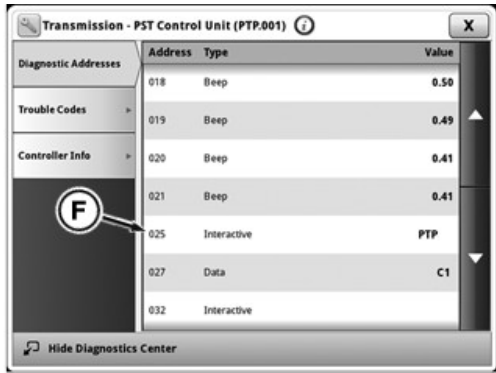

RXA0174963—UN—11FEB20

10. Select Address 025 (F) in drop-down menu.


CAUTION: Leave shift lever in PARK. Placing shift lever in F or R results in tractor movement.

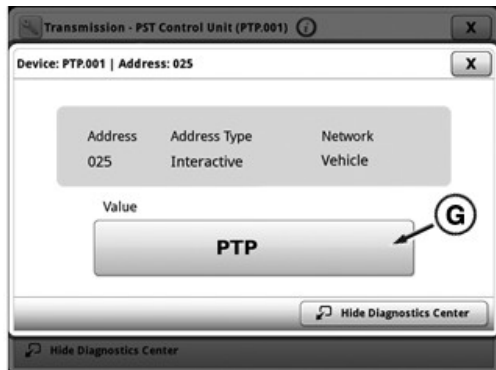

RXA0174964—UN—11FEB20

11. PTP should appear on CommandCenter™ display. Press PTP (G).

IMPORTANT: Do not leave seat. Operator presence must be detected in this step to allow calibration to continue.

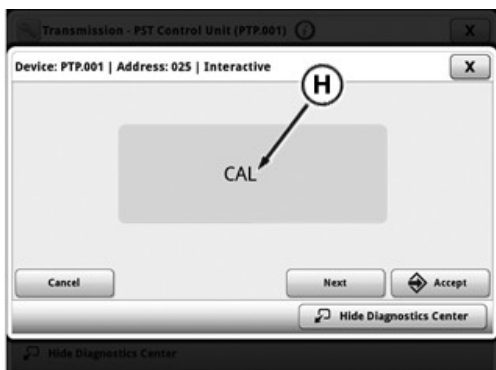

RXA0174965—UN—11FEB20

12. When CAL (H) appears on CommandCenter™ display, transmission calibration is ready to begin.

13. Adjust throttle to 1650 engine rpm.

CAUTION: If “P” is NOT displayed on corner post display, do not proceed with calibration. Leave shift lever in PARK. Lever movement to F position will result in unintended tractor movement. Return to Step 2.


14. Move shift lever to N position. P should be displayed on the corner post PDU display.

15. Move shift lever to F position to start calibration.

16. If CLD appears, transmission oil temperature has dropped to less than 50°C (122°F) PTP will halt calibration until temperature has increased sufficiently to allow calibration to restart. If oil temperature (available in PTP Address 33) is more than a few degrees below 50°C (122°F), manually heat oil.

NOTE: Once calibration begins, do not manually change throttle position, move shift lever, or depress clutch pedal. Calibration will be aborted.


NOTE: If calibration aborts due to a fault (for example: no engine or transmission activity is heard for a period of 30 seconds or longer), a three-letter fault message is displayed. Record code. Another calibration attempt may be made if desired, see Abort Transmission Calibration in this section of this Operator's Manual.

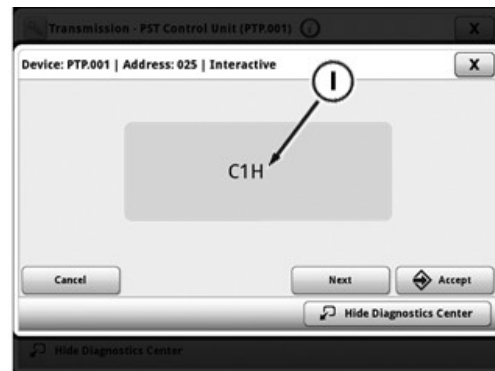

RXA0174966—UN—12FEB20

17. When calibration starts, C1H (I) appears. C1H indicates Clutch 1 Hold calibration is in progress. As calibration continues, clutch hold calculations for clutches C2, CR, CA, CB, CC, CL, CM, and CH follows. Display indicates which step is being performed during process.

18. When all nine clutch hold stage calibrations are complete, C1F displays as next phase of calibration begins. C1F indicates that Clutch 1 Fill time calibration is in progress. As calibration continues, clutch fill calculations for clutches C2, CR, CA, CB, CC, CM, and CH follows. Display indicates which step is being performed during process.

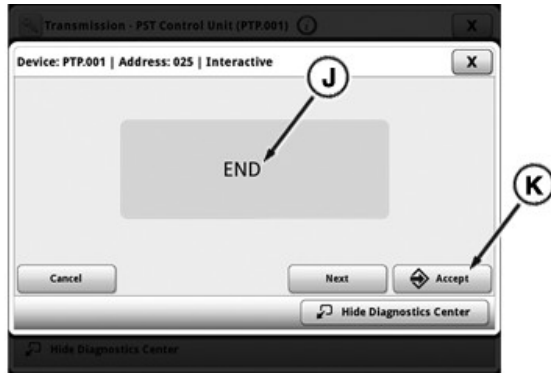

RXA0174967—UN—12FEB20

19. When END (J) appears, calibration is complete.

NOTE: Use correct calibration exit procedure to avoid generating unnecessary Diagnostic Trouble Codes (DTCs).

20. Move shift lever from F to PARK.

21. Throttle down.

22. Press Accept (K) to save and exit calibration.

NOTE: Display shows instructions for operator and malfunctions that have occurred. If a malfunction is displayed during calibration, new data is not stored.

23. Turn off the engine. PTP will store new calibration.

Calibration Fault	Meaning	Instruction
CLD	Transmission oil is below 50°C (122°F). Automatic warm-up is in progress.	No action required. Wait for automatic warm-up to warm oil to 50°C (122°F). Calibration begins automatically once temperature is reached.
OIL	Transmission oil temperature is below minimum temperature of 10°C (50°F) to begin automatic warm-up.	Manually heat hydraulic oil to 50°C (122°F), see manual Warm-up for Calibration at beginning of this section.
SPD	Engine speed is not within required range of 1600-1700 rpm to begin or continue calibration.	Set engine speed to 1650 rpm.
CLU	Clutch pedal is not UP or was depressed by operator during calibration.	Make sure that clutch pedal is fully UP, and do not depress during calibration.
NOP	Operator is not in seat when calibration is initiated.	Remain seated during transmission calibration.
FLT	Transmission oil filters are restricted.	Replace transmission filters. Retry calibration after filter replacement.

SV81855,0000256-19-11AUG21

Abort Transmission Calibration

PTP aborts calibration, and makes no changes to stored calibration values from last complete calibration if:

- Significant tractor motion is detected
- Address number is incremented or decremented by operator
- System detects problem during calibration
- Shift lever is moved out of gear
- Engine speed moves above or below calibration limits

If calibration aborts, transmission system reverts to last good calibration. If recalibration is still required, a new calibration procedure must be started. Calibration cannot be restarted from point at which it stopped.

SV81855,0000257-19-20JAN15

Do Not Modify Fuel System

IMPORTANT: Increasing horsepower, or altering any aspect of fuel and air delivery on emissions certified engines beyond factory rating, causes emission levels beyond what is approved by United States Environmental Protection Agency (EPA) or equivalent agency. Violations of regulations may result in substantial fines to persons or companies committing such violations.

Tractor warranty is void if power level is changed from factory specifications.

Do not attempt to service injection pump or fuel injectors yourself. Special training and special tools are required. See your John Deere dealer.

RX32825,000175E-19-01AUG17

Bleed Fuel System

If Diagnostic Trouble Code (DTC) indicates fuel system problem, and fuel system and filters are found to be correct - or if (even without a DTC present) tractor does not run correctly or fails to start, fuel injection system may need to be bled of air.

1. Turn key switch to run position. Electric fuel pump starts and bleeds air from the fuel system.
2. Allow pump to run for 30 seconds to 1 minute before attempting to restart engine. If the problem persists, see your John Deere dealer.

SV61855,00001F2-19-05MAR19

Standard cap screws (A) are of a reflective silver color.


Zinc Plated cap screws (B) are of a reflective bright silver or gold color.

Zinc-Flake Coated cap screws (C) are of a dull silver or gold color.

NOTE: Zinc-Flake Coated fasteners are tightened to lubricated specifications, unless otherwise noted. See Torque Value Charts in this Operator's Manual section.


RX32825,0001761-19-08NOV17

Identify Zinc-Flake Coated Fasteners

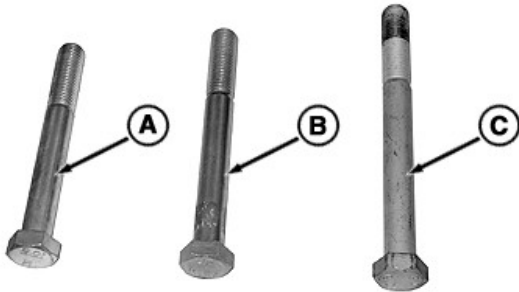

RXA0073812—UN—03MAR04


Metric Bolt and Screw Torque Values

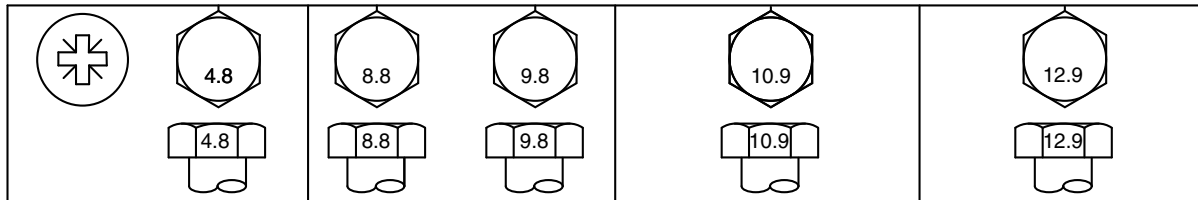

TS1742—UN—31MAY18

Bolt or Screw Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
M6	3.6	31.9	3.9	34.5	6.7	59.3	7.3	64.6	9.8	86.7	10.8	95.6	11.5	102	12.6	112
									N·m	lb·ft	N·m	lb·ft	N·m	lb·ft	N·m	lb·ft
M8	8.6	76.1	9.4	83.2	16.2	143	17.6	156	23.8	17.6	25.9	19.1	27.8	20.5	30.3	22.3
			N·m	lb·ft	N·m	lb·ft	N·m	lb·ft								
M10	16.9	150	18.4	13.6	31.9	23.5	34.7	25.6	46.8	34.5	51	37.6	55	40.6	60	44.3
	N·m	lb·ft														
M12	—	—	—	—	55	40.6	61	45	81	59.7	89	65.6	95	70.1	105	77.4
M14	—	—	—	—	87	64.2	96	70.8	128	94.4	141	104	150	111	165	122
M16	—	—	—	—	135	99.6	149	110	198	146	219	162	232	171	257	190
M18	—	—	—	—	193	142	214	158	275	203	304	224	322	245	356	263
M20	—	—	—	—	272	201	301	222	387	285	428	316	453	334	501	370
M22	—	—	—	—	365	263	405	299	520	384	576	425	608	448	674	497
M24	—	—	—	—	468	345	518	382	666	491	738	544	780	575	864	637
M27	—	—	—	—	683	504	758	559	973	718	1080	797	1139	840	1263	932
M30	—	—	—	—	932	687	1029	759	1327	979	1466	1081	1553	1145	1715	1265
M33	—	—	—	—	1258	928	1398	1031	1788	1319	1986	1465	2092	1543	2324	1714

Service—General Information

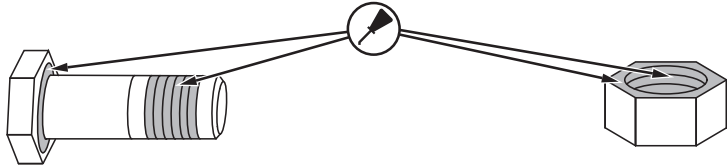Bolt or Screw Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b	
M36	—	—	—	—	1617	1193	1789	1319	2303	1699	2548	1879	2695	1988	2982	2199
The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.									Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.							
• Make sure that fastener threads are clean. • Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image. • Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil. • Properly start thread engagement.																
																

TS1741—UN—22MAY18


TS1741—UN—22MAY18

^aHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^bHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ2-19-30MAY18


Unified Inch Bolt and Screw Torque Values

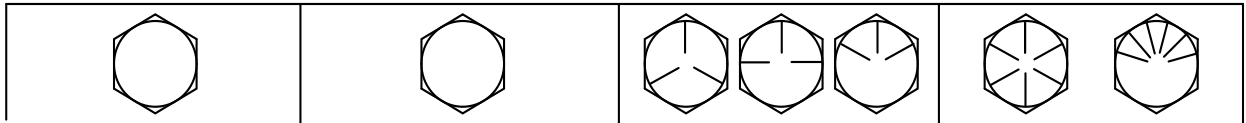

TS1671—UN—01MAY03

Bolt or Screw Size	SAE Grade 1 ^a				SAE Grade 2 ^b				SAE Grade 5, 5.1 or 5.2				SAE Grade 8 or 8.2			
	Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
1/4	3.1	27.3	3.2	28.4	5.1	45.5	5.3	47.3	7.9	70.2	8.3	73.1	11.2	99.2	11.6	103
													N·m	lb·ft	N·m	lb·ft
5/16	6.1	54.1	6.5	57.7	10.2	90.2	10.9	96.2	15.7	139	16.8	149	22.2	16.4	23.7	17.5
									N·m	lb·ft	N·m	lb·ft				
3/8	10.5	93.6	11.5	102	17.6	156	19.2	170	27.3	20.1	29.7	21.9	38.5	28.4	41.9	30.9
					N·m	lb·ft	N·m	lb·ft								
7/16	16.7	148	18.4	163	27.8	20.5	30.6	22.6	43	31.7	47.3	34.9	60.6	44.7	66.8	49.3
	N·m	lb·ft	N·m	lb·ft												
1/2	25.9	19.1	28.2	20.8	43.1	31.8	47	34.7	66.6	49.1	72.8	53.7	94	69.3	103	75.8
9/16	36.7	27.1	40.5	29.9	61.1	45.1	67.5	49.8	94.6	69.8	104	77	134	98.5	148	109
5/8	51	37.6	55.9	41.2	85	62.7	93.1	68.7	131	96.9	144	106	186	137	203	150
3/4	89.5	66	98	72.3	149	110	164	121	230	170	252	186	325	240	357	263
7/8	144	106	157	116	144	106	157	116	370	273	405	299	522	385	572	422
1	216	159	236	174	216	159	236	174	556	410	609	449	785	579	860	634
1-1/8	305	225	335	247	305	225	335	247	685	505	751	554	1110	819	1218	898
1-1/4	427	315	469	346	427	315	469	346	957	706	1051	775	1552	1145	1703	1256
1-3/8	564	416	618	456	564	416	618	456	1264	932	1386	1022	2050	1512	2248	1658

Service—General Information

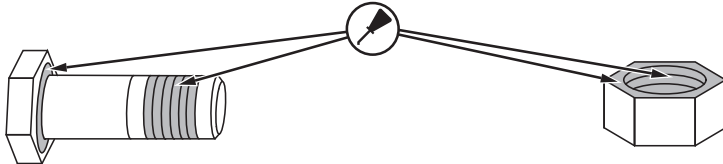Bolt or Screw Size	SAE Grade 1 ^a				SAE Grade 2 ^b				SAE Grade 5, 5.1 or 5.2				SAE Grade 8 or 8.2			
	Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d	
1-1/2	743	548	815	601	743	548	815	601	1665	1228	1826	1347	2699	1991	2962	2185
The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.									Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.							
• Make sure that fastener threads are clean. • Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image. • Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil. • Properly start thread engagement.																
																

TS1741—UN—22MAY18

TS1741—UN—22MAY18

^aGrade 1 applies for hex cap screws over 6 in (152 mm) long, and for all other types of bolts and screws of any length.

^bGrade 2 applies for hex cap screws (not hex bolts) up to 6 in (152 mm) long.

^cHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^dHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX, TORQ1-19-30MAY18

Service—Break-In (100 Hours or Less)

Perform Break-In Services

IMPORTANT: To confirm which engine your tractor is equipped with, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

Special "break-in" engine oils (including John Deere Break-In™ or Break-In™ Plus Oil) are not recommended for new or rebuilt 15 L engines. Use the same lubricating oil that will be used during normal operation. See Diesel Engine Oil in Engine Oil section of this Operator's Manual. Maximum service interval is the same as service interval recommended for your engine listed in Engine Oil and Filter Service Intervals for your engine. For subsequent oil changes, see Engine Oil and Filter Service Intervals Engine Oil section of this Operator's Manual.

Initial break-in service interval of a new or rebuilt wet sleeve engine with John Deere Break-In™ Plus must last at least 100 hours to assure surface mating of rings and liners has had an opportunity to occur. 100 hour minimum applies to all new or rebuilt John Deere engines. Maximum service interval is the same as service interval recommended for your engine listed in Engine Oil and Filter Service Intervals for your engine. For subsequent oil changes, see Engine Oil and Filter Service Intervals in Engine Oil section of this Operator's Manual.

Engine is ready for normal operation. During first 100 hours of operation:

- Operate engine at heavy loads without reaching sustained maximum load.
- Avoid idling engine longer than 5 minutes. If engine will idle longer than 5 minutes, stop engine.
- Closely observe coolant temperature during operation.
- Check engine air intake system hoses and clamps. See Service—Check Section of this Operator's Manual.
- Check for fluid leaks.
- Tighten drive and idler wheel-to-hub cap screws after 3 hours, after 10 hours and daily for first week of operation. See Service—Tighten section of this Operator's Manual.
- Follow tracks systems break-in procedures. See Perform Track Systems Break-In in this section of this Operator's Manual.
- Tractors equipped with 15 L engines will automatically perform an initial engine regeneration after at least 4 hours of operation. This procedure may have occurred prior to tractor delivery. If regeneration begins, allow full completion of process. See Engine Settings—AUTO Exhaust Filter Cleaning in Engine Operation section of this Operator's Manual.

Daily or 10 Hour Service

Perform normal daily or 10 hour services. See 10 Hour or Daily Service in Service—Record Charts section of this Operator's Manual.

For first 100 hours of tractor operation, also perform these additional services daily or every 10 hours:

- Drain water separator. See Water Separator in Service—Check section of this Operator's Manual.
- Check coolant level. See Service—Check section of this Operator's Manual.
- Lubricate hitch (if equipped) components. See Service—Lubricate section of this Operator's Manual.
- Inspect tracks for any damage. See Perform Track Systems Break-In in this section of this Operator's Manual.

After service is performed, reset appropriate service interval hours display to zero. See Service Intervals in the CommandCenter™ section of this Operator's Manual.

After the break-in period, use John Deere Plus-50™ II or other diesel engine oil as recommended in this manual.

RX32825,0000004-19-23APR21

Perform Track Systems Break-In

Break-In Overview

IMPORTANT: Improper track break-in may cause damage or reduction of track component life. Damage caused by improper break-in is not covered under machine warranty.

Track system break-in takes place during first season of use. Correct break-in helps reduce amount of initial drive lug wear. During break-in, drive lugs and idlers undergo a "polishing in" process which:

- Scours out excess rubber flash on rubber wheels.
- Embeds fine dust particles in rubber surfaces to remove tackiness of new rubber.
- Reduces frictional heating in track system.

Initial Break-In

IMPORTANT: Avoid track and track system damage. Do not road tractor for extended distances until break-in period is completed. Even after break-in period is completed, dry lubricant or soil is required to prevent heat generated damage.

When operating with new or cleaned tracks or other frictional components, follow these operational guidelines for first 100 hours:

DO:

- Use tractor in field with loose soil conditions.
- Avoid transport and roading operations.
- Apply dry lubricant to track system if transport is required or if tractor is unable to be operated in conditions with loose soil¹.
- Apply dry lubricant to track system every 16 km (10 miles) if unable to avoid driving long distances (over 16 km (10 miles)).
- If unable to avoid driving long distances, reduce speed by 6.5 km/h (4 mph)².
- Ensure that track is properly aligned.

DO NOT:

- Attempt long-distance transport (more than 16 km (10 miles)).
- Exceed maximum transport speed shown in implement operator's manual, if towing implement. Most implements have max transport speed of 24-32 km/h (15-20 mph).
- Operate in environments where tractor is not exposed to loose soil without adding dry lubricant every 15 minutes.
- Operate with track on edge of road.
- Operate at speeds above those shown in Weight Charts in Tracks—General Information section of this Operators Manual.

After Break-In

IMPORTANT: After initial 100 hour break-in and alignment, long-term break-in process (up to 400 hours) will likely occur. During this period, maximize exposure of tracks to soft soil and minimize high speed, heavily loaded transport operation. See General Track Use Guidelines in Tracks—General Information of this Operators Manual.

TS36762,000034B-19-20APR21

¹ Dry lubricant may consist of: Soil, oil-dry, cat litter, talc powder, other clay based lubricants.

² Reduce 6.5 km/h (4 mph) from maximum speed shown on weight chart in Tracks—General Information. Do not exceed maximum recommended speed shown in implement operator's manual, if towing implement

Service—Record Charts

Service Record Chart Overview

The service record chart is provided to:

- Record when services have been performed.
- Document additional service details as needed.

Suggested Documentation

- **Engine Oil and Filter Change:** Indicate which oil was used for refill and record date and hours of operation at each service.
- **As Required Service:** Record services and repairs that are performed at other than regular service intervals.
- **Yearly Service:** The listed service tasks are performed annually or at some multiple of years. Record service date and hours.

10-hour (Daily) and 50-hour Service Tasks

It is not recommended to record 10-hour (daily) and 50-hour service tasks on the service record chart. If desired, record the completion of these services in a separate notebook.

Service Interval Chart

Charts show which service tasks must be completed at what engine operating hours or years. If a service task indicates a year and an hourly interval, adhere to whichever interval occurs first. Perform service on items at multiples of the original requirement.

First word of each task title (For example: CHECK or LUBRICATE) directs the person performing service to the appropriate Service Procedure section in this Operator's Manual. Upon completion of a service task, verify that there are no additional tasks to perform at the same time.

Record service tasks when completed on the Service Record Chart found in this section of this Operator's Manual.

Use the engine hour meter display to determine when service must be performed. The hour meter operates whenever the engine is running and shows the accumulated hours of engine operation. Although the hour meter is factory set to 250 hours, it can be reset to any desired elapsed time. See Service Intervals in CommandCenter™ section of this Operator's Manual.

RX32825,0000022-19-05APR21

Service Task	Operating Hours or Interval									
	Year/s	Daily or 10	50	250	500	1000	1500	3000	5000	6000
CHECK engine oil level		•								
CHECK hydraulic system oil level		•								
CHECK optional fuel water separator		•								
CHECK track alignment		•								
CHECK track wear and trash buildup		•								
CHECK drive and idler wheels and mid-rollers		•								
CHECK hydraulic accumulator [Scraper]		•								
CHECK drive wheel scraper clearance		•								
LUBRICATE hinge pins			•							
LUBRICATE steering pins			•							
LUBRICATE heavy duty lift link pins [Ag] ^a			•							
LUBRICATE hose support bracket [Scraper]			•							
LUBRICATE lower drive line bearings		^b		•						
LUBRICATE rear hitch			^c	•						
CHECK secondary brake				•						
CHECK transmission PARK system				•						
LUBRICATE track tension cylinder fittings				•						
LUBRICATE heavy-duty gudgeon bearings				•						
LUBRICATE PTO drive shaft [Ag]				•						
CHANGE engine oil and filter ^d	1				•					
CHANGE fuel filters ^e					•					
CHANGE optional fuel water separator					•					
CHECK engine air intake system					•					
TIGHTEN drive wheel nuts, idler wheel, and mid-roller cap screws					•					
TIGHTEN drawbar support cap screws					•					

Service—Record Charts

Service Task	Operating Hours or Interval									
	Year/s	Daily or 10	50	250	500	1000	1500	3000	5000	6000
CLEAN dual beam radar sensor						•				
CHECK engine coolant freeze point	1					•				
CHANGE cab recirculation air filter	1					•				
CHANGE cab fresh air filter	1					•				
CHANGE engine primary and secondary air filters	1					•				
CHANGE DEF dosing unit filter ^f	3						•			
CALIBRATE transmission							•			
CHANGE fuel tank vent filter							•			
CHANGE SCV pilot valve filter							•			
CHANGE transmission hydraulic vent filter							•			
CHANGE hydraulic system oil and filters							•			
CHECK auxiliary drive belt and drive belt tensioner							•			
CLEAN aftertreatment fuel injector ^{gh}							•			
CHANGE engine cooling system radiator cap ^g							•			
CHECK idler wheel hub and mid-roller oil level							•			
CHANGE DEF tank vent filter ^f							•			
CHANGE DEF in-line filter ^f	3							•		
CHECK engine valve clearance—Final Tier 4/Stage V engine ^{gh}								•		
CHANGE engine crankcase breather filter element ^g								•		
CHANGE engine crankshaft damper ⁱ									•	
CHECK engine brake ^h									•	
CHECK engine valve clearance—Final Tier 4/Stage V engine ^{gh}	2									•
CHECK Drawbar Sensor Calibration [Scraper]	1									

^aIf hitch is in use.

^bNormal lubrication is every 250 operating hours. If used daily, lubricate every 10 operating hours.

^cNormal lubrication is every 250 operating hours. If used daily, lubricate every 50 operating hours.

^dService in accordance with information in appropriate Diesel Oil and Filter Service Intervals topic in Engine Oil section of this Operator's Manual. Record oil used in Service—Record Charts - Engine Oil and Filter

^eChange every 500 hours or as indicated, whichever occurs first

^fFinal Tier 4/Stage V engine

^g15 L engine.

^hSee your John Deere dealer.

ⁱ13.6 L engine.

^jInitial service is 2 years or 6000 operating hours, whichever occurs first. Second service interval is 5 years or 10000 operating hours, whichever occurs first.

JL41210,0000A91-19-07SEP21

Service Record Chart

Record details of service intervals in the space provided. If more space is required, use a separate notebook.

Date	Hours	Notes

Date	Hours	Notes

Service—Record Charts

[illegible][illegible]

[illegible]

Date	Hours	Notes

EC82310,0000B12-19-05AUG20

Service—Clean

Cleaning Diesel Exhaust Fluid (DEF) Tank

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

If foreign material or fluid has been added to the DEF tank, drain the DEF tank, flush, and fill with new DEF.

If DEF quality is in question, pull a sample out of the DEF tank and place into a clear container. DEF should be crystal clear with a light ammonia smell. If DEF appears cloudy, has a colored tint, or has a profound ammonia smell, it is likely not within specification. DEF in this condition should not be used.

1. Remove drain plug (if equipped), and drain or siphon bad DEF from DEF tank.

NOTE: Cleaning can take place with DEF tank installed or removed.

2. Clean DEF tank with new DEF.

DEF must pass visual, smell, and concentration checks before running the engine. See Diesel Exhaust Fluid (DEF) – For Use In Selective Catalytic Reduction (SCR) Equipped Engines in the Fuels, Lubricants, and Coolants Section for more information.

3. Drain or siphon DEF tank.

NOTE: Repeat steps 2—3 until DEF tank has been cleaned.

4. **Early version:** Change DEF dosing unit filter and DEF tank header suction screen.

Later version: Change DEF dosing unit filter and DEF inline filter.

5. If removed, install DEF tank drain plug.

6. If removed, install DEF tank.

7. Fill DEF tank with new DEF.

8. Check DEF concentration with DEF refractometer, such as JDG11594 or JDG11684. The correct DEF

concentration is 31.8% — 33.2%. See your authorized dealer for more information.

9. If DEF is not within specification, does not appear clear, or does not have a slight ammonia smell, contact your authorized dealer.

DX,DEF,CLEANTANK-19-18SEP19

DEF Tank Filler Neck Filter


If DEF fill slows, clean tank filler neck filter.

1. Place transmission in Park and shut off engine.



RXA0167615—UN—23APR19

2. Open DEF tank cap (A).

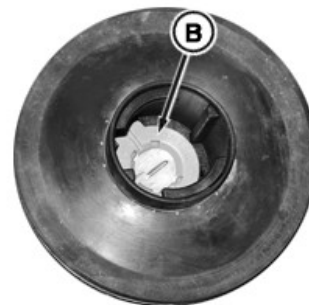

RXA0180368—UN—04NOV20

3. Turn filter retainer (B) counterclockwise until it unlocks, then pull straight out of DEF tank.



RXA0180369—UN—04NOV20

4. Clean filler neck filter (C) with warm water to remove any debris.

5. Install in reverse order.

SV81855,000027F-19-31AUG21

Tractor Exterior

IMPORTANT: Avoid damage to the engine, components, and tractor exterior.

- **Never direct liquid spray to the engine air intake area.** If water is sprayed into the engine air intake, drain filter housing and allow housing and filter to dry before starting engine.
- **For high-pressure washer use: always use reduced pressure and spray at a 45—90° angle. Never spray pressurized water directly at:**
 - Electronic/electrical components and connectors.
 - Bearings and hydraulic seals.
 - Fuel injection pumps.
 - Exhaust outlet.
 - Engine air intake.
 - Fluid tanks' fill openings and breathers.
 - Any sensitive parts and components.
- **Never use strong soaps, chemical detergents, or cleaning agents containing acids, caustics, or abrasives.** It is best to use commercially available non-detergent car wash products which will not remove protective wax, and which may be applied to paint finish.
- Wash tractor regularly, particularly if it has been exposed to herbicides, pesticides, road salt, or other chemical agents.
- Never wash the tractor in direct sunlight.
- Rinse all cleaning agents away promptly. Never allow them to dry on the painted surface.
- Waxing tractor occasionally is recommended to remove residue from and further protect paint finish. Never use waxes containing abrasive compounds.
- Inspect paint surface during washing or waxing for chips and scratches. Repaint any areas where paint has been damaged.

See your John Deere dealer for cleaners, waxes, and touch-up paints to help enhance paint finishes and which are compatible with your equipment.

RX32825,0001777-19-21APR21

Clean Display

IMPORTANT: Always clean display screen with power off. Cleaning screen while operating could result in unintended button selections.

To clean display, power down and wipe screen with a soft cloth sprayed with a non-ammonia based cleaner, such as John Deere glass or multipurpose cleaner.

DX,PC,CLEAN,DISP-19-21OCT16

Engine Cooling System—13.6 L Engine


Turn engine OFF.



RXA0180466—UN—19NOV20

Clean grille screen (A) using a brush or compressed air.


Clean trash from engine compartment shields.

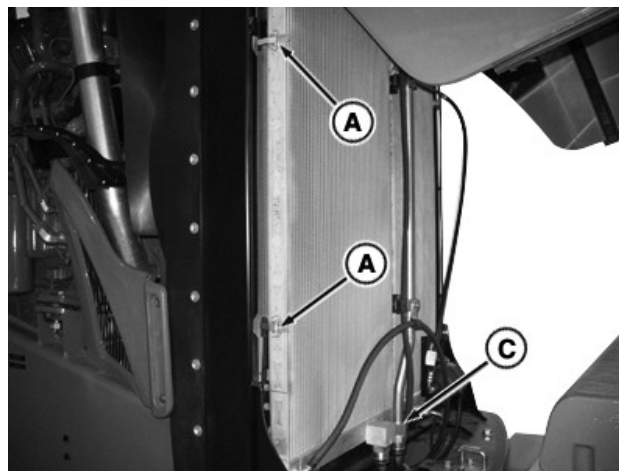

RXA0118331—UN—24JUN11


Use caution when oil cooler is opened. Rubber hose may contact air conditioner line when cooler is at a 30° angle, and can cause damage to the line fitting if extended too far.

Release hood latch and raise hood.

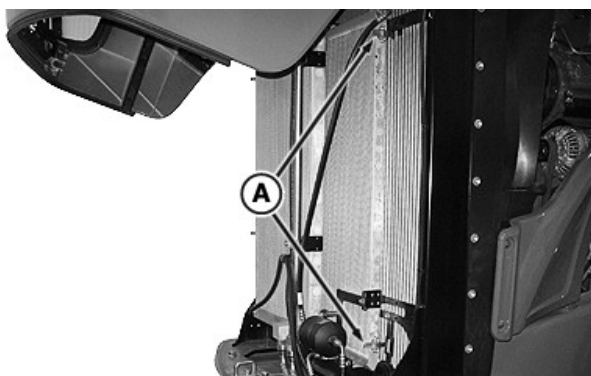


RXA0148090—UN—29MAY15

Release air conditioning condenser retaining clips (A) to swing condenser forward for better cleaning access.

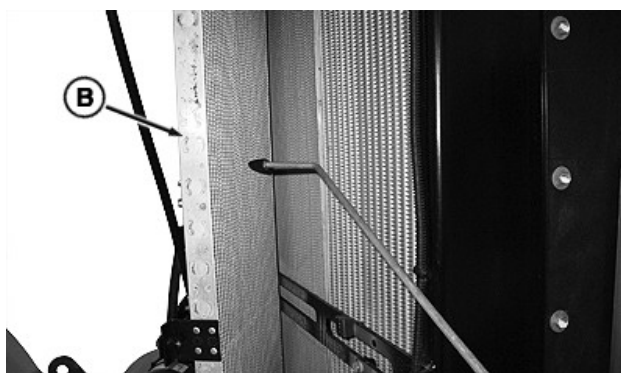

RXA0118338—UN—23JUN11

Use compressed air to clean air conditioning condenser (B).

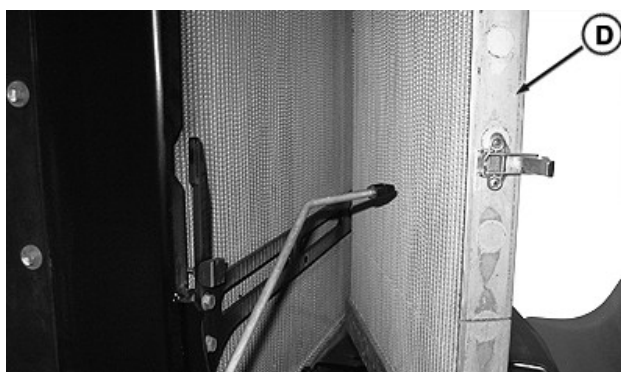

RXA0118333—UN—23JUN11

Release oil-fuel cooler retaining clips (A) to swing cooler (D) forward.

Use compressed air to clean radiator. Straighten any bent radiator fins.

Close air conditioning condenser and oil cooler and lock the retaining clips.

Gently lower hood and firmly close until hood latch is locked.

SV81855,0000363-19-30AUG21

Engine Cooling System—15 L Engine

Turn engine OFF.




RXA0180466—UN—19NOV20


Clean grille screen (A) using a brush or compressed air.

Clean trash from engine compartment shields.

Release hood latch and raise hood.

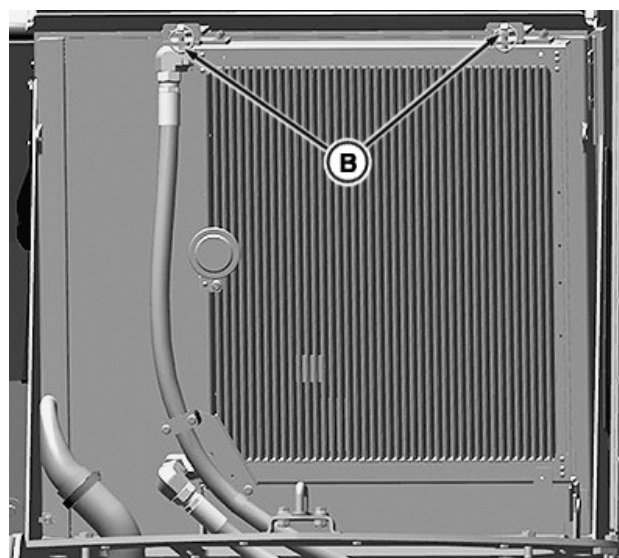


RXA0180117—UN—14OCT20

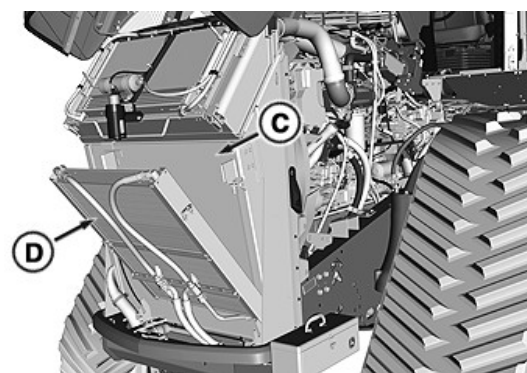

RXA0161241—UN—01NOV17

Release oil cooler (D) retaining pins (B) to lower oil cooler forward carefully for easier cleaning access.


Use compressed air to clean oil cooler and radiator (C).

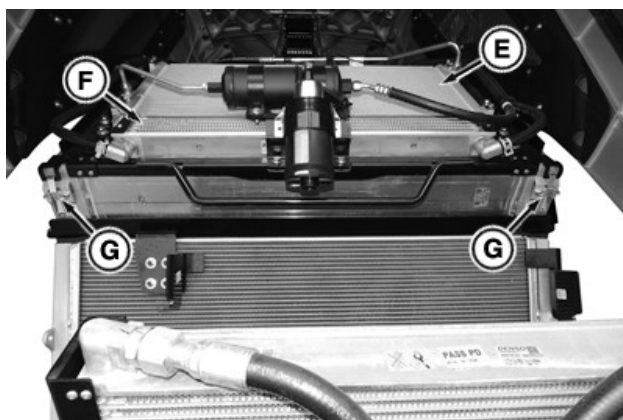

RXA0161242—UN—01NOV17

Release Air Conditioning retaining pins (G) and lift air conditioning condenser (E) and fuel cooler (F) up for easier cleaning access.

Use compressed air to clean air conditioning condenser and fuel cooler.

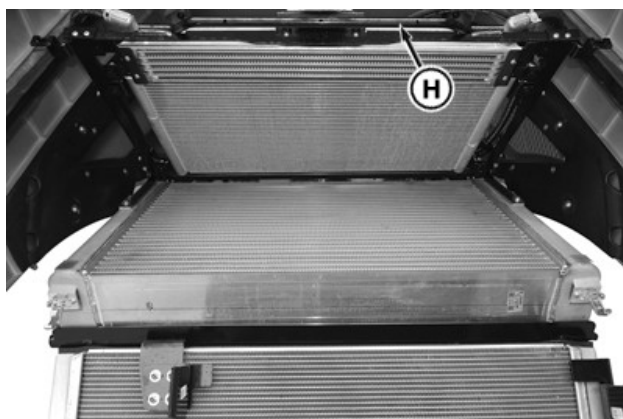

RXA0161243—UN—01NOV17

Close air conditioning condenser and oil-fuel cooler using handle (H). Pull air conditioning condenser and fuel cooler out to unlock and lower carefully. Lock retaining pins.

Lift oil cooler up and lock retaining pins.

Gently lower hood and firmly close until hood latch is locked.

SV81855,0000364-19-30AUG21


Dual Beam Radar Sensor

IMPORTANT: Inspect radar sensor horns for dirt or debris build up, which affects accuracy performance.

Avoid use of high-pressure washer nozzle pointed directly at radar.

Avoid damage to radar and wiring harness when using sharp tools to remove dirt or packed mud around radar.

1. Check radar sensor for damage.

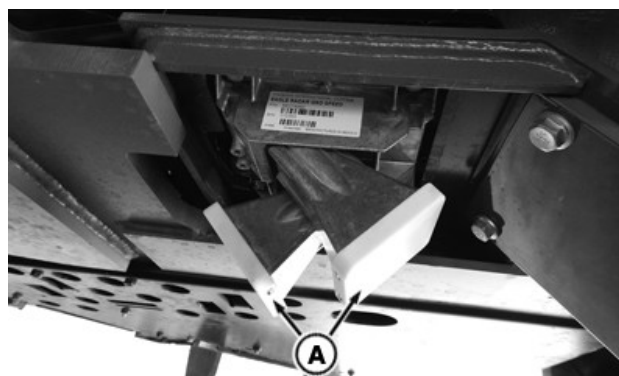

RXA0141826—UN—02JUN14

2. Clean radar sensor horns (A) with warm water and mild soap.

3. Dry with clean soft cloth.

RX32825,000064B-19-19JUL17


Aftertreatment Fuel Injector—15 L Engine

See your John Deere dealer to perform this service.

SV81855,00002C1-19-19JUL17

Optional Fuel Water Separator

1. Park machine on a flat, level surface.
2. Lower equipment to ground.
3. Shut off engine.

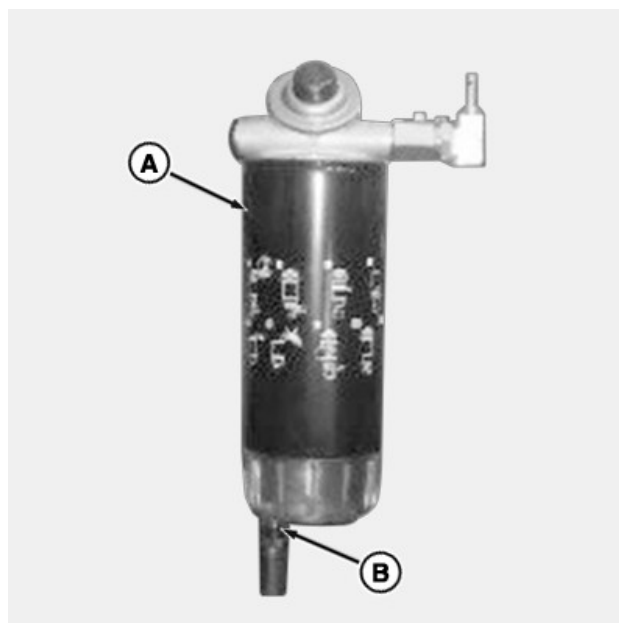

RXA0168512—UN—03JUN19

Priming button cap may differ

4. Thoroughly clean the exterior of the fuel filter and water separator assembly (A) and surrounding area.

5. Place a suitable container under the drain hose.
6. Open drain valve (B).
7. Allow water and sediment to drain into a suitable container.
8. Close drain valve.
9. Dispose of waste properly.
10. Bleed fuel system. See Bleed Fuel System in the Service—General Information section of this Operator's Manual.


EC82310,0000982-19-21APR21

Implement Connector

IMPORTANT: Inspect implement connector for dirt or debris buildup. Service may be required more often in some operating conditions.

Avoid damage to implement connector. Do not use compressed air or pressurized water to clean implement connector.

1. Locate the implement connector. See Implement Connector in Accessories section of this Operator's Manual.

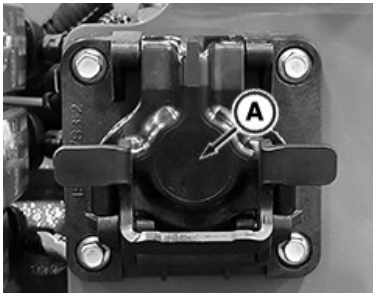

RXA0169781—UN—30JUL19

2. Open implement connector cover (A).
3. Clean implement connector with John Deere Electronic Contact Cleaner.


JL41210,0000ABB-19-16APR21

Service—Check

Engine Coolant Level


Coolant level is monitored electrically. When coolant is low a diagnostic trouble code will appear on the CommandCenter™.

1. Open hood. See Open Hood in the Service—General Information section of this Operator's Manual.

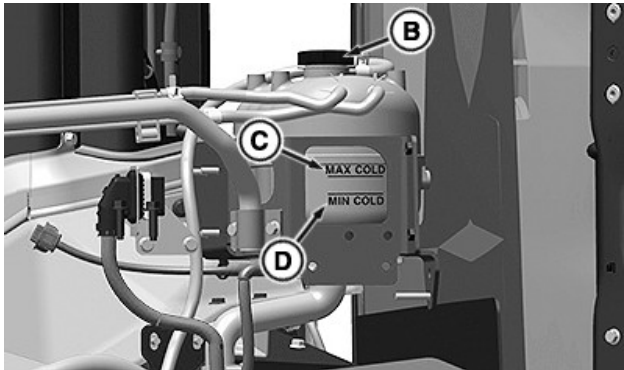

13.6 L Engine

RXA0180388—UN—06NOV20

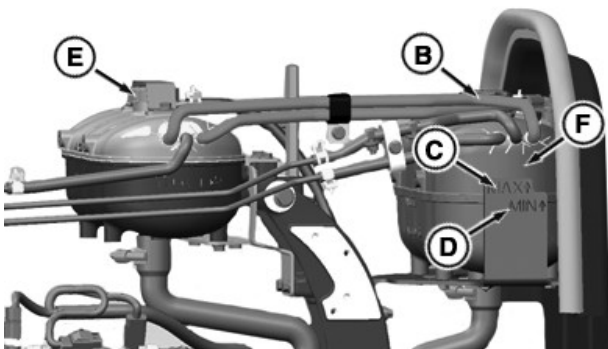

15 L Engine (Left-Hand Side)

RXA0143415—UN—14JUL14

2. Check coolant level on side of de-aeration tank. Level should be at or above MIN COLD line (D). If level is low, before adding coolant check for any signs of leakage. Repair if necessary.

IMPORTANT: Do not open de-aeration tank cap (B) when engine is warm. Doing so will add air to coolant system.

NOTE: If coolant level is low, but there is no sign of an external leak, there may be an internal coolant leak. Contact your John Deere dealer.

NOTE: 15 L engine, fill rear coolant tank (F) through de-aeration tank cap (B).

Radiator pressure cap (E) controls pressure in coolant tanks and for water pump.

3. Wait until engine is cool. Remove de-aeration tank cap (B) and add coolant as specified in Engine Coolant section of this Operator's Manual. Do not fill

above MAX COLD line (C). Reinstall de-aeration tank cap.

4. Lower and secure hood.

SV81855,00001C6-19-21APR21

Engine Coolant Freeze Point

IMPORTANT: Test coolant system and add coolant conditioner every 1000 hours, or annually - whichever comes first.

1. Open hood. See Open Hood in the Service—General Information section of this Operator's Manual.


CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

Avoid personal injury. Do not remove fill cap when engine is hot. Stop engine and wait until engine has cooled.

IMPORTANT: Do not open de-aeration tank cap when engine is warm. Doing so will add air to coolant system.

NOTE: De-aeration tank will not be full of coolant when cap is removed. When looking in tank, if coolant tank is at least half full, do not add additional coolant.

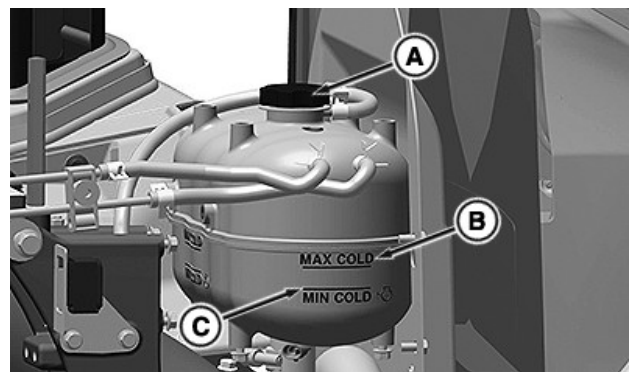

13.6 L Engine

RXA0180467—UN—18NOV20

A—Cap
B—Max Cold Line
C—Min Cold Line

2. Slowly turn de-aeration tank cap (A) to relieve pressure. Remove cap (B).
3. Test coolant. A more precise test device is available from your John Deere dealer, see Testing Coolant


Freeze Point in Engine Coolant section of this Operator's Manual.

4. Visually inspect tank cap gasket for sealing effectiveness. No apparent scratches or leak paths should be seen. Replace cap if problem is observed.
5. Install de-aeration tank cap and lower hood.

EC82310,0000F50-19-20NOV20

Water Separator

IMPORTANT: Water can damage fuel systems. If excessive water is found, draining fuel tanks may be required, see Fuel Tank Sump in this section of this Operator's Manual.

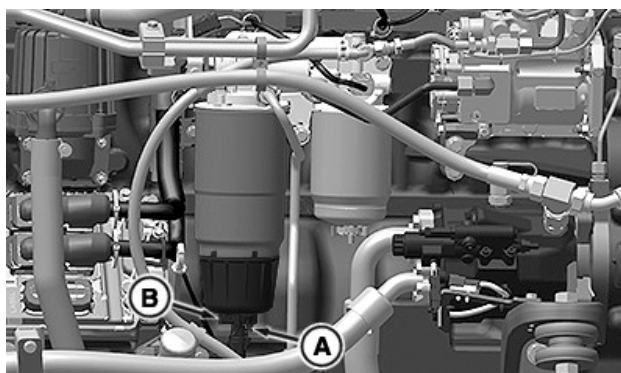

13.6 L Engine

RXA0180389—UN—06NOV20

13.6 L engine: In addition to a Fuel Water Separator, water can also be drained from fuel system through fuel filters. Turn drain valve nut (A) to release water from fuel filters.

On some filters, tabs (B) are visible and will drop when drain valve nut is opened. Turn drain valve nut completely counterclockwise to drain water.



RXA0185254—UN—30AUG21

15 L Engine

15 L engine without fuel water separator: Fuel filter is located on gudgeon step. Turn drain valve (C) to drain water.

Optional Fuel/Water Separator

1. Shut off engine.



RXA0185251—UN—30AUG21

2. Close fuel shut-off valve (A).
3. Open drain valve (B) to release any water from fuel water separator.
4. Close drain valve and reopen fuel shut-off valve.

SV81855,000028A-19-07SEP21

Engine and Exhaust Compartments

IMPORTANT: Accumulated crop residue inside engine compartment can reduce engine and cooling system performance. If tractor has been operated in field conditions which might have caused debris accumulation, inspect and clean engine compartment as necessary.

Directing pressurized water at electronic/electrical components, connectors, bearings and hydraulic seals, fuel injection pump, engine air intake, or other sensitive parts and components may cause product malfunctions. Reduce pressure, and spray at a 45° to 90° angle. See Tractor Exterior in Service—Clean section of this Operator's Manual.

Directing pressurized air at electronic/electrical components or connectors, may cause buildup of static electricity and product malfunctions.

Never steam clean or pour cold water on an injection pump that is operating or hot. Pump could seize.

1. Shut off engine and allow time for engine to cool.
2. Remove front engine side shield. See Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.
3. Remove any crop or debris within engine and exhaust compartments, especially around turbocharger, exhaust manifold, and exhaust aftertreatment system.
4. Reinstall all engine side shields.
5. Close and securely latch hood.

TS36762,000012C-19-05APR21

Air Conditioning System



X9811—UN—23AUG88

CAUTION: Avoid possible injury. Improper servicing may cause refrigerant to penetrate eyes and skin or cause burns.

IMPORTANT: R-134a refrigerant must be used in air conditioning system. Service requires special equipment and procedures. See your John Deere dealer.

NOTE: Some oil seepage from compressor shaft seal is normal.

Perform following checks if air conditioning system does not cool, or cooling is intermittent:


- Confirm that system does not function correctly. Access HVAC page on CommandCenter™. Set fan speed to highest setting and temperature to coldest setting. See HVAC Settings—Fan Speed in HVAC section of this Operator's Manual. Operate engine at 2000 rpm. Check air vents to confirm that cold air is not present.
- Inspect and clean cab air filters. Replace filters if necessary. See Cab Filters in Service—Change section of this Operator's Manual.
- Clean grille and radiator. See Engine Cooling System in Service—Clean section of this Operator's Manual.
- Check air vents for cold air flow.

If problems persist, see your John Deere dealer.

TS36762,000012D-19-02SEP21

Engine Water Pump Weep Hole—13.6 L Engine

1. Remove front engine side shield, see Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.

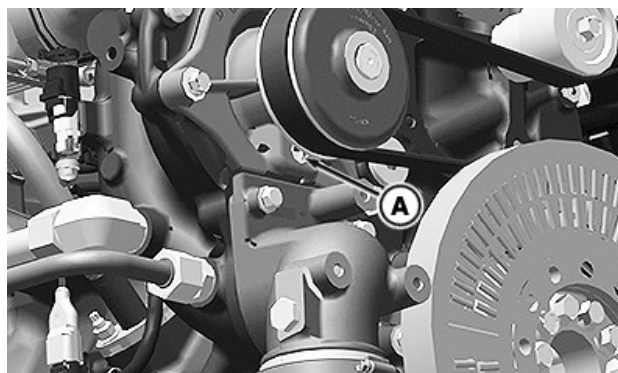

RXA0180468—UN—18NOV20


2. Inspect weep hole (A) on under side of water pump for oil or coolant leakage.
 - Coolant leakage indicates a damaged front seal.

If leakage is detected, see your John Deere dealer.
3. Install front engine side shield, close and secure hood.

TO84419,00001CE-19-27AUG21

Engine Water Pump Seal—15 L Engine

1. Remove front engine side shield, see Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.

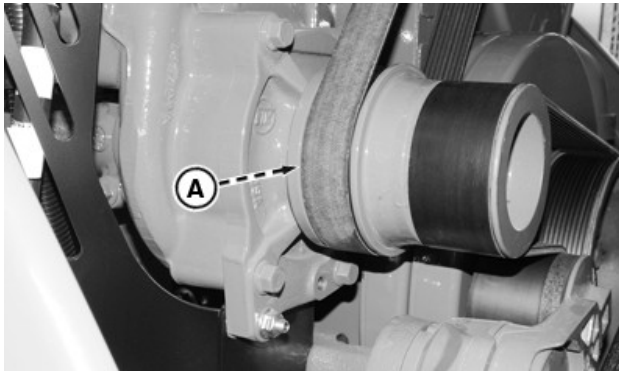

RXA0141838—UN—02JUN14

2. Visually inspect engine, especially around water pump (A), and ground below engine for any leaks or puddles.

If leakage is detected, see your John Deere dealer.

3. Install front engine side shield and close hood.


SV81855,000028D-19-21APR21

Fuel Tank Sump

NOTE: Drain fuel tank sump if fuel filters are replaced frequently or water in the fuel tank. Service may be required more often under some conditions.

1. Place a catch pan under the drain tee.

IMPORTANT: Use wrench to hold drain fitting while opening or closing tee or damage to tank threads can occur.

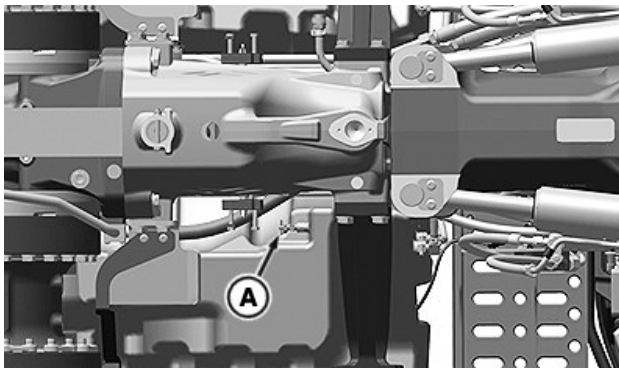

RXA0180465—UN—18NOV20


2. Turn drain tree (A) by hand. Drain fuel until clean, water free fuel appears.
3. Tighten drain tree by hand to close.

JL41210,0000AA0-19-23NOV20

Engine Oil Level—13.6 L Engine

1. Remove engine access panel, see Remove Engine Access Panel in Service—General Information section of this Operator's Manual.


NOTE: Most reliable oil level is determined before starting engine, after tractor has been parked on level ground for several hours or overnight.

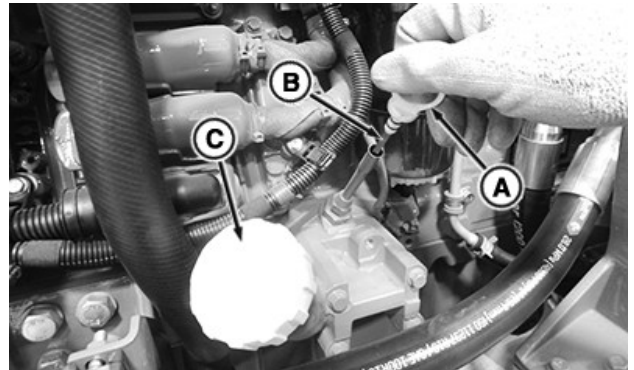

RXA0185141—UN—19AUG21

13.6 L Engine

2. Remove fill cap (A) and check oil level on dipstick (B) with tractor on level ground.

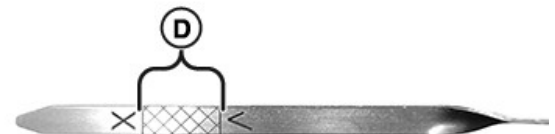

RXA0185140—UN—20AUG21

3. Oil level on dipstick is considered FULL when oil is within cross-hatched area (D).

IMPORTANT: Do not operate engine with oil level below cross-hatched area on dipstick.

4. If oil is required:

- Remove fill cap.
- Add oil through fill tube (C), see Diesel Engine Oil in Engine Oil section of this Operator's Manual.

Tighten fill cap securely and install engine access panel.


RX32825,000062F-19-23AUG21

Engine Oil Level—15 L Engine


1. Remove engine access panel, see Remove Engine

Access Panel in Service—General Information section of this Operator's Manual.

NOTE: Most reliable oil level is determined before starting engine, after tractor has been parked on level ground for several hours or overnight.

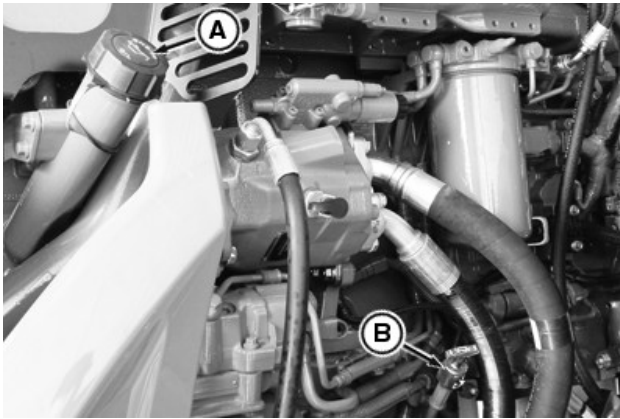

RXA0141821—UN—02JUN14

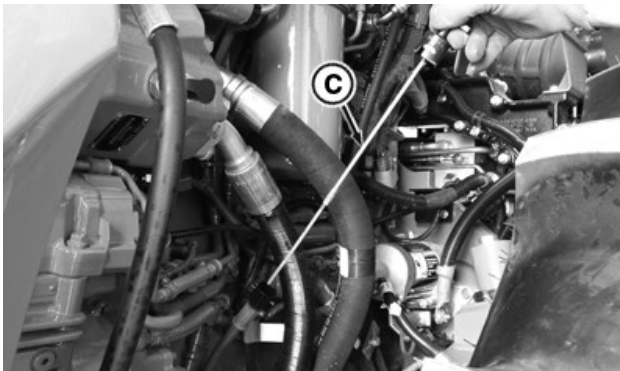

RXA0141822—UN—02JUN14

NOTE: Dipstick is a different location (B) than fill tube.

Remove dipstick (C) and check oil level with tractor on level ground before starting tractor.



RXA0141823—UN—02JUN14

3. Oil level on dipstick is considered FULL when oil is within cross-hatched area (D).

IMPORTANT: Do not operate engine with oil level below cross-hatched area on dipstick.

4. If oil is required:


- Remove fill cap.
- Add oil, see Diesel Engine Oil in Engine Oil section of this Operator's Manual.

5. Insert dipstick and install engine access panel.

RD47322,000033E-19-21APR21

Hydraulic System Oil Level

IMPORTANT: Poor shift quality or transmission damage may occur if incorrect oil is used, see Transmission and Hydraulic Oil in Other Lubricants section of this Operator's Manual.

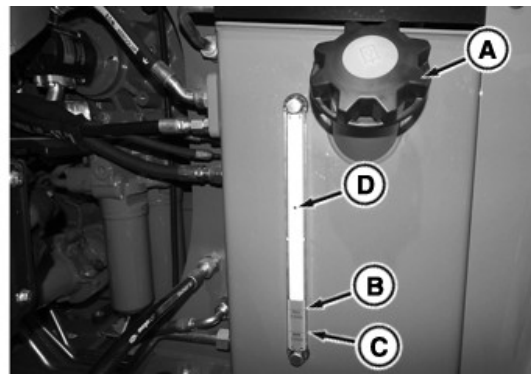

RXA0141848—UN—02JUN14

Hydraulic Oil Sight Gauge

Do not operate tractor if oil level is at or below MIN COLD mark (C) in sight gauge with engine off.

If topping off oil in hydraulic reservoir, use sight gauge marks to estimate volume and add to transmission fill tube.

Hydraulic oil reservoir does not hold all system hydraulic oil capacity. Transmission and front and rear axles hold additional system oil. If possible, check oil level prior to first start of day. Ambient temperature should be 7° C (45° F) or above.

For implements and applications requiring high volumes of oil transfer (for example - large air seeders or pulling 3 scrapers), hydraulic reservoir can be filled up to High Volume Takeout Oil Mark (D). Additional capacity is 58.5 L (15.4 gal) above MIN COLD (C).

1. Check tractor and implement for leaks daily, before start-up.
2. Park tractor on level ground with implement fully lowered.
3. Place transmission shift lever in PARK.
4. Start engine and set engine speed set to 1200 rpm.
5. Run engine for five minutes.

- Shut off engine and wait five minutes for oil level to stabilize.

IMPORTANT: Contaminated or overheated oil may cause damage to transmission-hydraulic system components. Oil which is:

- **Milky or foamy may be contaminated with water. Change oil immediately.**
- **Discolored or smells burned may have been overheated. See your John Deere dealer.**

- Check hydraulic reservoir oil level using sight gauge located on right-hand side of gudgeon area. Examine oil in sight gauge for milky or foamy appearance.

NOTE: As tractor and hydraulic system temperature increases, oil level will rise in reservoir.

Oil level in reservoir fluctuates depending upon volume of oil exchanged with an attached implement. If low oil level results in hydraulic pressure drop, a STOP engine light will come on.

- Open hydraulic reservoir cap (A). Check for burned oil odor.
- If reservoir oil level is between FULL COLD (B) and MIN COLD (C) marks, tractor can be used for normal operation. Volume difference between MIN COLD and FULL COLD marks is about 11.4 L (3 gal).
- If reservoir oil level is below MIN COLD mark, ensure oil levels are equalized between reservoir, transmission, and axle compartments. Heat up transmission-hydraulic oil (see Warm-Up Transmission-Hydraulic System in Transmission—General Information section of this Operator's Manual) so oil temperature is $> 50^{\circ}\text{C}$ (125°F) and run tractor at 2100 rpm for five minutes. Stop engine and allow to settle for five minutes. Check hydraulic reservoir level. If still below MIN COLD mark, add oil to hydraulic oil reservoir. See Hydraulic System Oil in Service—Change section of this Operator's Manual.

RX32825,000184B-19-02SEP21

Track Alignment

IMPORTANT: Avoid operating track in grease, oil, or other petroleum chemicals. Avoid spilling these materials on tracks during servicing of tractor.

Avoid debris buildup in any of the frame area. Clean as necessary.


NOTE: When tractor is new, track alignment has been preset at factory. Alignment should not be adjusted until after completion of initial break-in.

After initial break-in and alignment have been completed, the complete break-in process will occur during the first full operating season. During this time, operate tractor:

- *In soft soil as much as possible.*
- *In high speed transport situations as little as possible - especially when pulling an implement.*



RXA0158367—UN—16MAR17

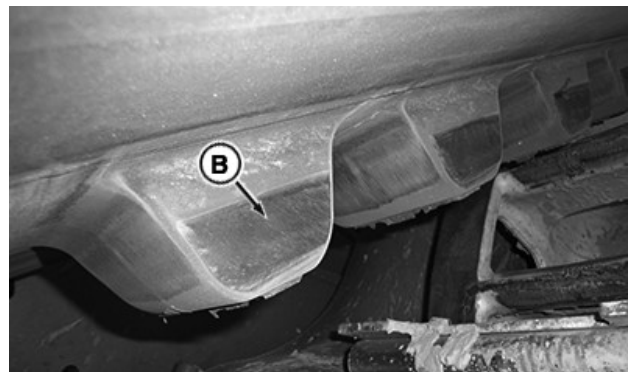


RXA0158368—UN—16MAR17

- Inspect drive lugs (A) for side wear. Compare wear on inboard and outboard sides of drive lugs. Even in routine operating conditions, drive lugs will exhibit wear as shown (B), especially during break-in side slope operation. Only perform alignment if there is significant difference in wear between the two sides of a drive lug.
- If significant differences in drive lug wear are noted, go to step 3.

IMPORTANT: Tracks will typically move from side to side during operation, so some drive lug side contact is normal. Track does not need to be centered to achieve proper alignment. If track passes shim check, track alignment is correct.

- Fabricate 77 mm (3 in) by 204 mm (8 in) track alignment check gauge (shim) from:
 - 3.2 mm (1/8 in) thick metal (wide track).
 - 4.8 mm (3/16 in) thick metal (narrow track).
- Drive tractor 45 m (150 ft) on level ground. A road is generally not suitable, due to crown of road surface.

5. While still moving, shift to neutral and allow tractor to coast to a stop with no braking or steering input.
6. When tractor stops, shift tractor to PARK and shut off engine.

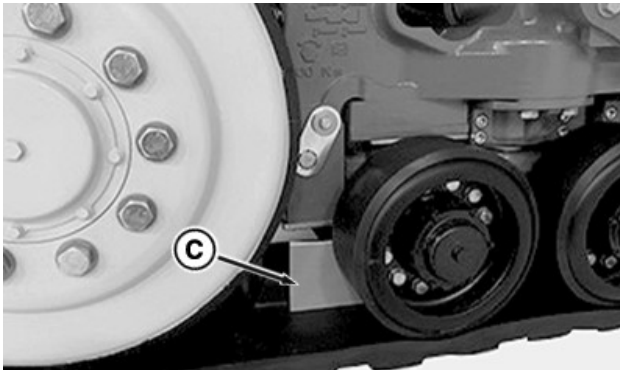


RXA0158393—UN—20MAR17

7. Insert fabricated shim between outboard front mid-roller and drive lug (C). Shim should fit freely all the way down to the track inner surface.
8. Repeat clearance check on outboard front mid-rollers.

NOTE: Complete alignment check on all track assemblies before performing any adjustment.

9. If track is aligned but drive lug side wear does not decrease after break-in or have recently accelerated, contact see your John Deere dealer.
10. No alignment adjustment is required if shim fits freely on both sides of drive lug and drive lug is not contacting front mid-roller - even if not equally centered in distance inboard to outboard sides. Go to step 18.

If shim does not fit on one side, adjust track alignment. Go to step 11.

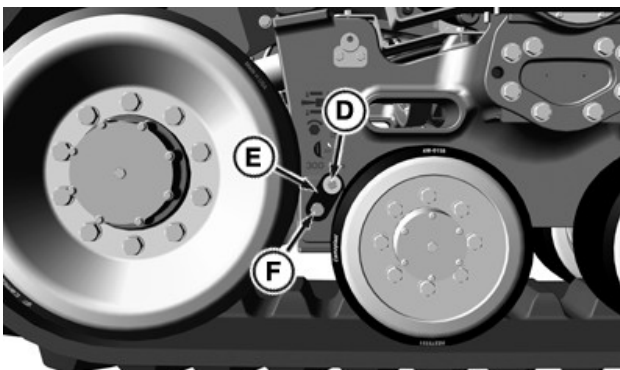


RXA0158388—UN—16MAR17

11. Remove lock plate spacer and bolts (D) and lock plates (E) from inboard and outboard sides of track to be adjusted.
12. On side you want track to move away from, loosen adjustment bolt (F) one turn.

IMPORTANT: Avoid damage to special cap screws through incorrect installation or tightening procedures. Use only unpowered hand tools and ratcheting “click” type or equivalent torque wrench to tighten properly.

IMPORTANT: Do not apply excessive force to adjustment bolt. Damage to track frame casting can occur from over-torque.

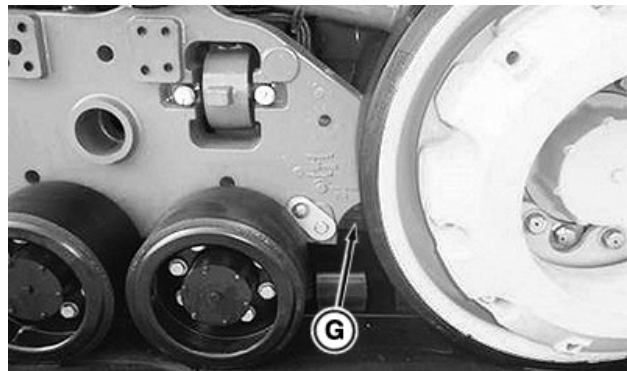

RXA0161031—UN—05OCT17

Check to see if adjustment lever (G) has been adjusted to it's maximum lateral position.

- If lever is hitting casting, refer to diagram on casting. Adjust alignment bolts to first re-center lever. Then apply one turn to move track left on undercarriage.
- If lever movement is hindered by debris buildup, clean as needed.

NOTE: One turn is the recommended increment. One half turn may be used as a final adjustment. Adjustments larger than one turn may result in unpredictable alignment results.


13. Tighten adjustment bolt on the opposite side to 300 N·m (221 lb·ft).
14. Tighten adjustment bolt, loosened in Step 12 to 300 N·m (221 lb·ft).

IMPORTANT: Avoid incorrect alignment and potential damage to track and track assembly components. Never make adjustments larger than one turn. Unpredictable track alignment results may occur.

NOTE: One turn is the recommended adjustment increment. One-half turn may be used as the final adjustment.


15. In most circumstances, a single adjustment is all that should be done. Track should then run until next scheduled adjustment check in order to give it time to stabilize in new setting.

NOTE: Lock plates are reversible to double the available index increments. It may be necessary to increase torque on special cap screw slightly to advance it to next available lock plate index position.

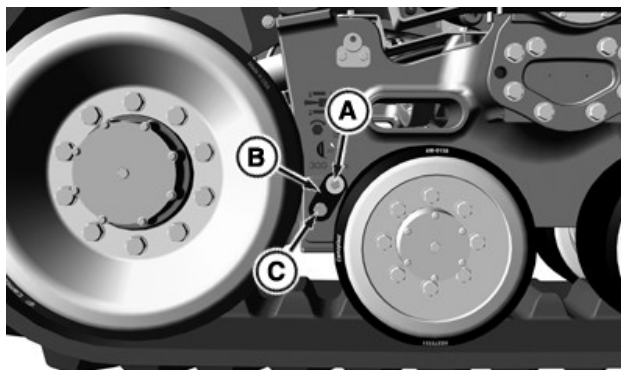

RXA0147877—UN—06APR15

Outside Track Frame

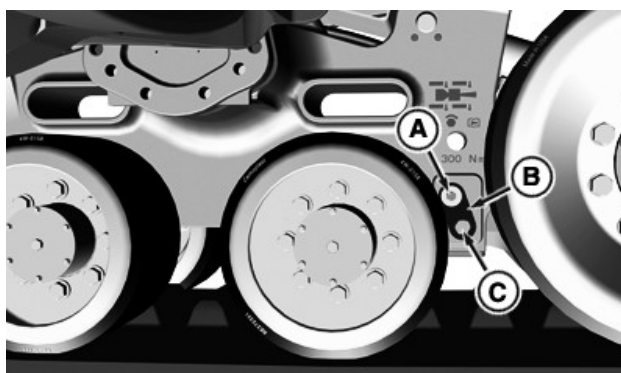

RXA0147878—UN—06APR15

Inside Track Frame

16. Install lock plates (B) and with spacer and bolt (A). Tighten bolt to 130 N·m (95 lb·ft).
17. Confirm inside and outside adjustment bolts (C) are tight on each track frame.
18. If track has been aligned but drive lug side wear does not decrease after break-in or has recently accelerated, see your John Deere Dealer.


TS36762,0000346-19-21AUG18

Track Tension

IMPORTANT: If light indicator on Corner Post Display and Diagnostic Trouble Code (DTC) appear indicating tracks need tensioning follow procedure below.


Tension Track

NOTE: Requires track tension hose kit, see your John Deere dealer.

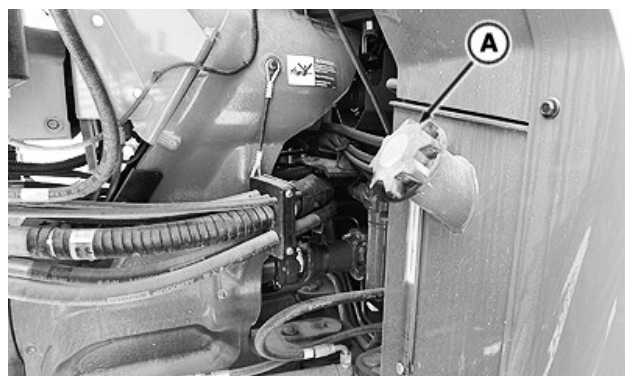

RXA015270—UN—20OCT15


1. Remove hydraulic oil reservoir fill cap (A).

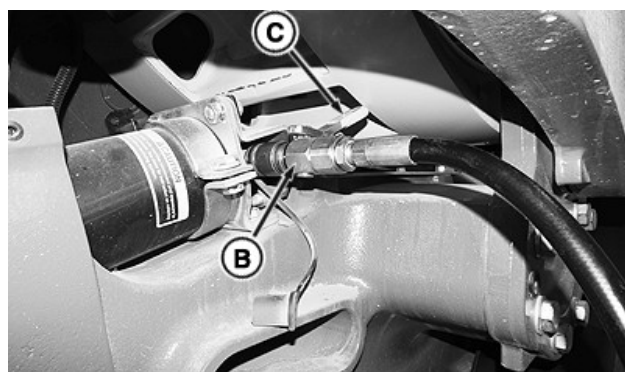

RXA015271—UN—20OCT15

Track Tension/Detension Hose

2. Remove cap from tension cylinder receptacle and attach tension hose coupler (B)

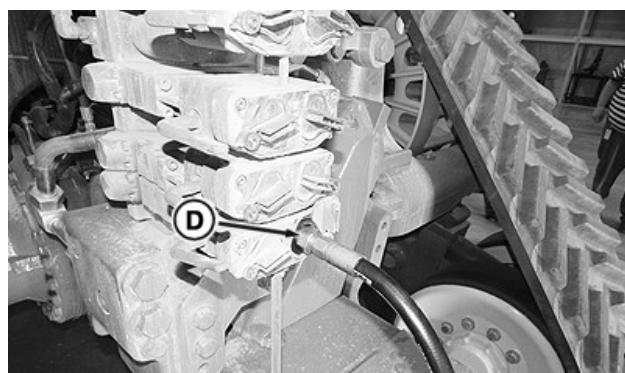


RXA015272—UN—20OCT15

3. With the hose valve handle (C) closed, install other end of tension hose into extend side of SCV I coupler (D).




RXA0168447—UN—30MAY19

4. Start engine and press SCV shortcut button on Navigation Bar.

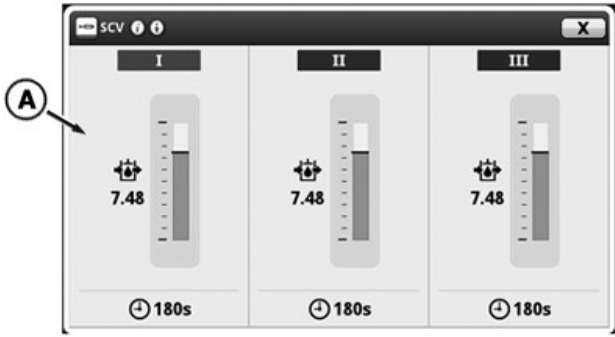

RXA0131602—UN—19AUG13


5. Select SCV I (A) on SCV main page.

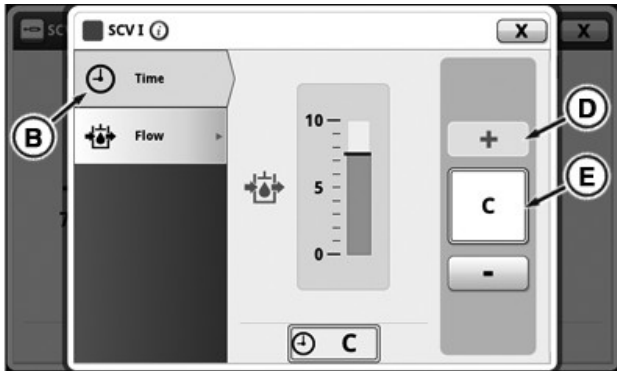

RXA0143723—UN—16JUL14

SCV Detent Time


6. Select Time tab (B).
7. Press (+) (D) detent time button to increase detent time to continuous (E).

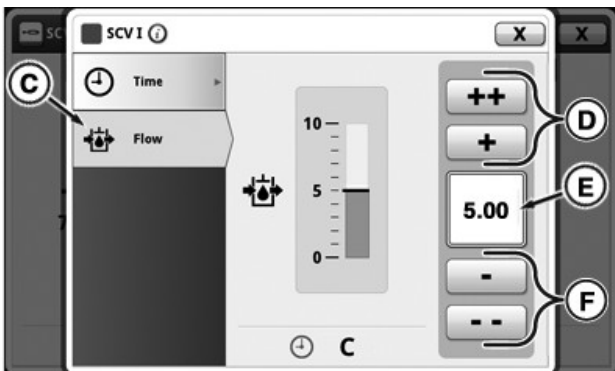

RXA0143724—UN—16JUL14


SCV Detent Flow

8. Select Flow tab (C).
9. Press (+ or ++) (D) detent flow buttons to increase or (- or --) (F) to decrease detent flow setting to 5.00 (E).
10. Pull SCV I control lever rearward to **extend** position.

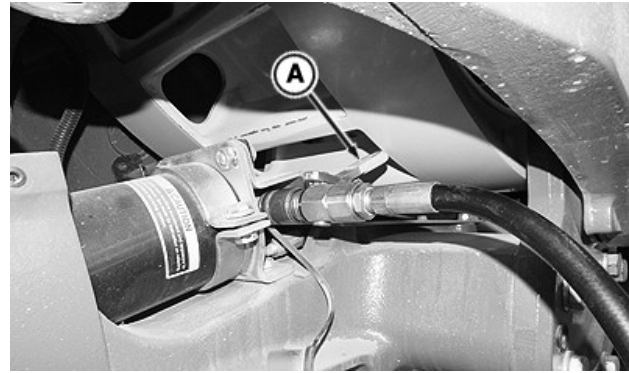

RXA015273—UN—20OCT15

11. Exit tractor and open hose valve handle (A) on tension hose.
12. Allow track to tension for three minutes.
13. Push SCV I lever back to neutral position
14. Stop engine.
15. Close hose valve handle and disconnect hose from tension cylinder receptacle.

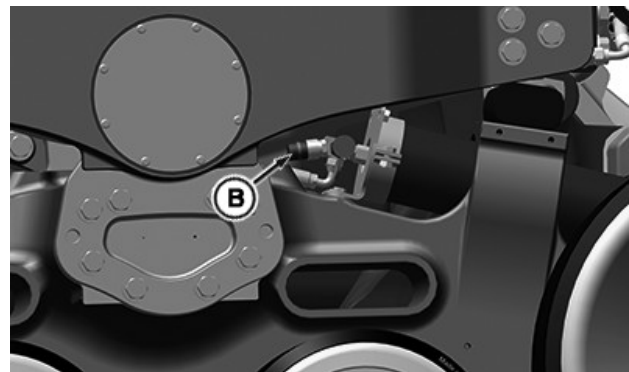

RXA0185297—UN—01SEP21

16. Check tension gauge (B) to ensure that the gauge is green.
17. Clean up any oil that may have spilled or leaked during process.

CAUTION: If any oil has spilled or bubbled out of reservoir fill spout during tensioning process, contact your John Deere Dealer for possible repair of track tensioning system.

18. Replace cap on hydraulic reservoir.

Detension Track

CAUTION: Escaping fluid under pressure can penetrate skin and cause serious injury.

Avoid hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.


If an accident occurs, see a doctor immediately. Any fluid injected into skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

CAUTION: Avoid possible personal injury. Tension kit valve should be in closed position when attaching either end of hose.

IMPORTANT: Foreign material can damage the hydraulic system. Keep hydraulic couplers free from debris.


IMPORTANT: Track tensioning is best performed when hydraulic oil in reservoir is less than 38°C (100°F), and track tensioning components are at least 4.5°C (40°F).

Use track tension/detension hose kit obtained from your John Deere™ Dealer.

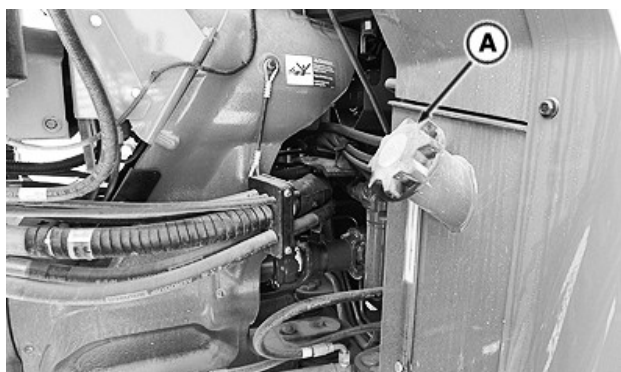

RXA015270—UN—20OCT15


1. Remove hydraulic oil reservoir fill cap (A).

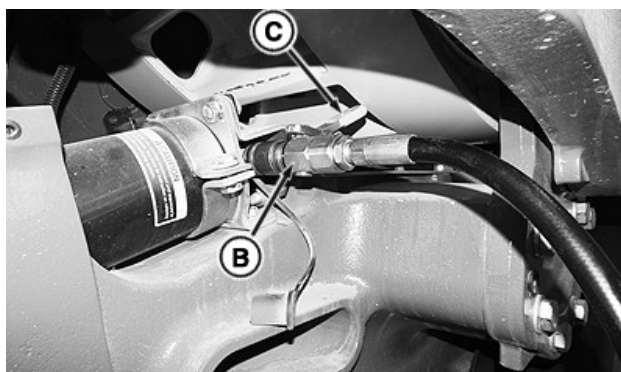

RXA015271—UN—20OCT15

Track Tension/Detension Hose

2. Remove cap from tension cylinder receptacle and attach tension hose coupler (B).

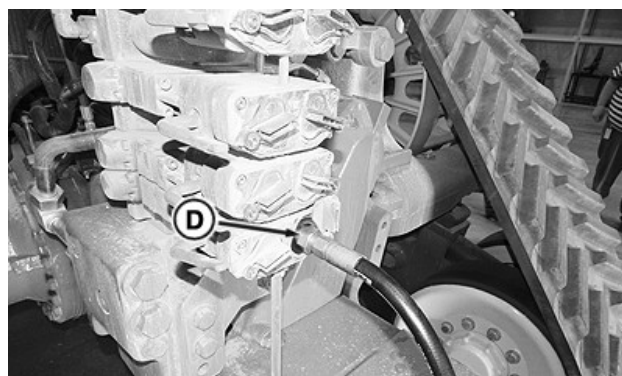

RXA015272—UN—20OCT15


SCV I Coupler

3. With the hose valve handle (C) closed, install other end of tension hose into SCV I extend side of receptacle (D).




RXA0168447—UN—30MAY19

4. Start engine and press SCV shortcut button on Navigation Bar.

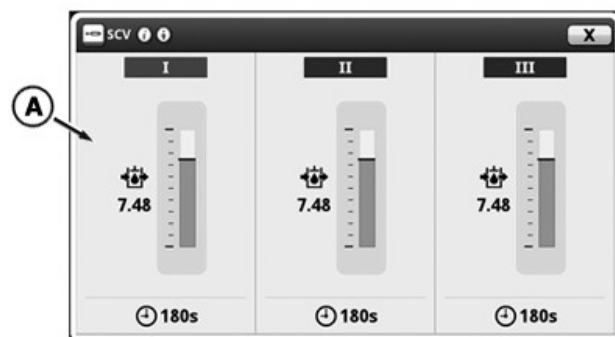

RXA0131602—UN—19AUG13


5. Select SCV I (A) on SCV main page.

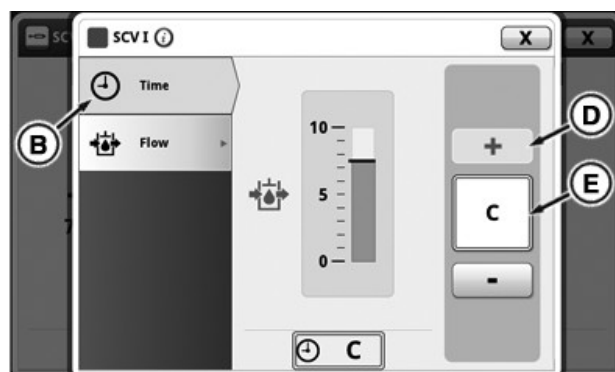

RXA0143723—UN—16JUL14

SCV Detent Time

6. Select Time tab (B).

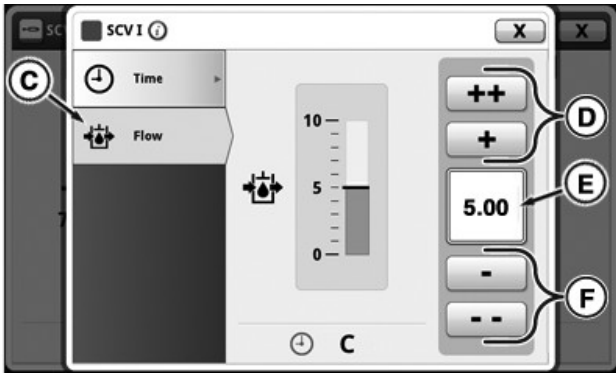

RXA0143724—UN—16JUL14

SCV Detent Flow

7. Press (+) (D) detent time button to increase detent time to continuous (E).
8. Select Flow tab (C).
9. Press (+ or ++) (D) detent flow buttons to increase or (- or --) (F) to decrease detent flow setting to 5.00 (E).
10. **Push** SCV I control lever forward to **retract** position.



RXA015273—UN—20OCT15

11. Exit tractor and open hose valve handle (A) on tension hose.
12. Allow track to detension for three minutes.
13. Pull SCV I lever back to neutral position.
14. Stop engine.
15. Close hose valve handle and disconnect hose from tension cylinder receptacle.
16. Clean up any oil that may have spilled or leaked during process.

CAUTION: If any oil has spilled or bubbled out of reservoir fill spout during detensioning process, contact your John Deere Dealer for possible repair of track tensioning system.

17. Replace cap on hydraulic reservoir.

EC82310,0000026-19-01SEP21

Track Wear and Trash Buildup


Track Wear

CAUTION: Trash buildup can cause fire from increased friction. Remove trash from trash buildup points between track and tractor frame. Remove Trash Buildup.

IMPORTANT: Avoid operating tractor in grease, oil, or other petroleum chemicals. Avoid spilling these materials on track and wheels during service.

Avoid damage to hydraulic components. Use care around tension cylinder connections and hydraulic lines.

Remove any embedded sharp objects from inside or outside of tracks.

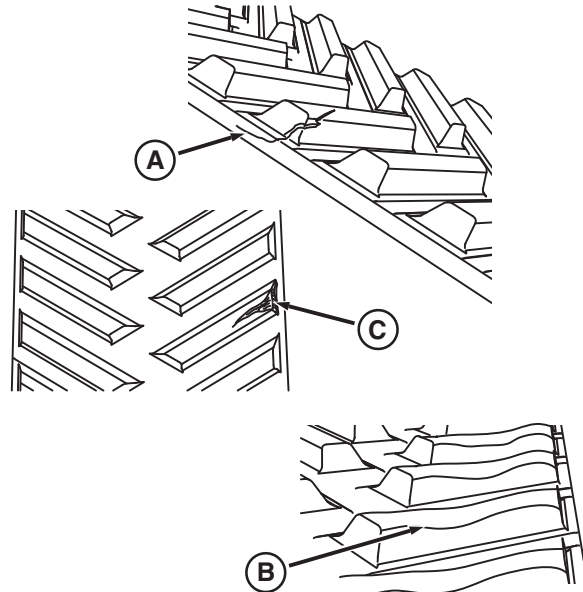


RXA0147257—UN—17JUN15

Check track for major operational problems. It is normal to see cracking (A), uneven wear (B), or chipping or chunking (C) on tracks during use.

Check inside of track for any exposed cables. If any loose ends are seen, cut off cable flush with track surface. Then see your John Deere dealer.


Check track for torn or missing treads. If tread has been damaged and part of tread is loose, trim loose portion off to avoid further damage to track carcass.

Check track inner guide or drive lugs for condition. Note if wear patterns have changed since the last inspection and if track alignment may need to be checked. If any guide or drive lugs are loose or missing, see your John Deere dealer.

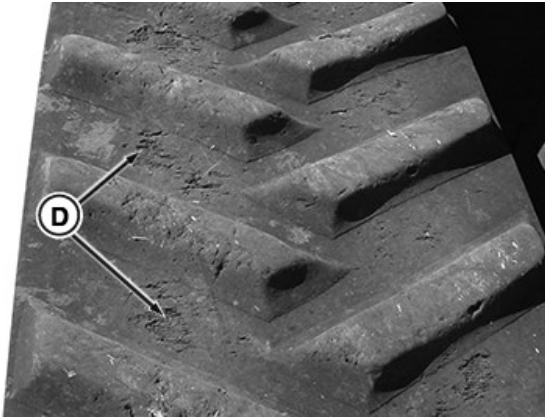

RXA0158650—UN—05APR17

Check for exposed plies (D) between tread. It is normal during mid to end of life to see some exposed plies between the treads. If large sections of the track carcass are torn, loose, or missing, see your John Deere dealer.

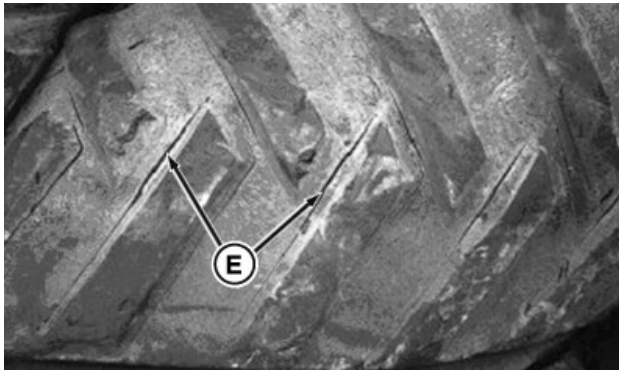

RXA0158651—UN—05APR17

Check for flex cracking (E). It is normal to see some flex cracking develop during life of track.

Track Trash Buildup

IMPORTANT: Avoid grease, oil, or other petroleum chemicals on tracks and wheels. Constant exposure to petroleum-based chemicals may damage rubber surfaces.

Trash buildup can cause fire from increased friction. Remove trash from trash buildup points between track and tractor frame.

Undercarriage Inspection and Maintenance

1. Remove any debris or material buildup on top of frame reaction arms. Buildup can wear down rubber on drive wheels and reduce their ability to transfer power to track.
2. Check for material buildup between drive wheels and front idler wheels. Buildup can damage or crush guide lugs and can increase chances of derailing track. If guide lug tip damage is seen, it may be due to material buildup.
3. Look over drive wheels and idlers for visible cracks around bolt pattern or the rim. If seen, see your John

Deere dealer for best recommendation for repair or replacement.

4. Remove any embedded rocks, nails, or other sharp object in track belt or mid-rollers.

TS36762,000034E-19-02SEP21

Undercarriage

CAUTION: Avoid possibility of fire. Trash build-up can cause fire from increased friction. Remove trash from trash build-up points (G) between track and tractor frame.

IMPORTANT: Avoid operating tractor in grease, oil, or other petroleum chemicals. Avoid spilling these materials on track and wheels during service. Replace mid-rollers in sets if significant thickness wear is seen on an opposite side wheel.

IMPORTANT: Do not pair worn idlers or mid-roller wheels with new wheels on the same axle. Overloading of the opposite side mid-roller may occur. Or correct track alignment may become more difficult in the case of different circumference idler wheels.


1. Remove any debris or material buildup on top of frame reaction arms. Buildup can wear down rubber on drive wheels and reduce their ability to transfer power to track.

2. Check for material buildup between drive wheels and front idler wheels. Buildup can damage or crush guide lugs and increase chances of derailing track. If drive lug tip damage is seen, it may be due to material buildup.


3. Check for material buildup inside the sprocket, in sprocket pockets where the drive lug engages, or on outer surface of sprocket. Remove any buildup in pockets or external surface to avoid damage to track and drive lugs. If material buildup is noted on sprocket, adjust scraper if required. See Drive Wheel Scraper Clearance in Service—Check section of this Operator's Manual.

TS36762,0000348-19-22APR21

Cab Suspension Bushings

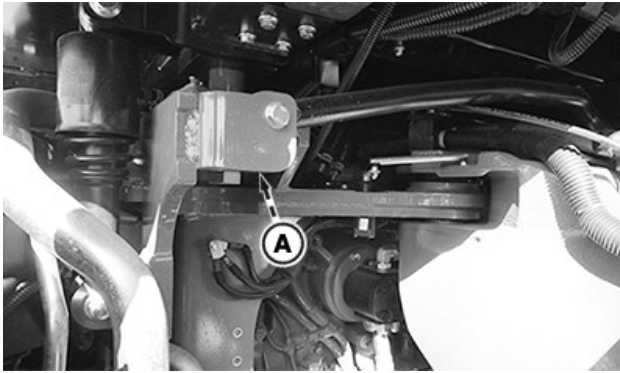

RXA0163831—UN—03JUL18
Left-Hand Side Behind and Below Cab

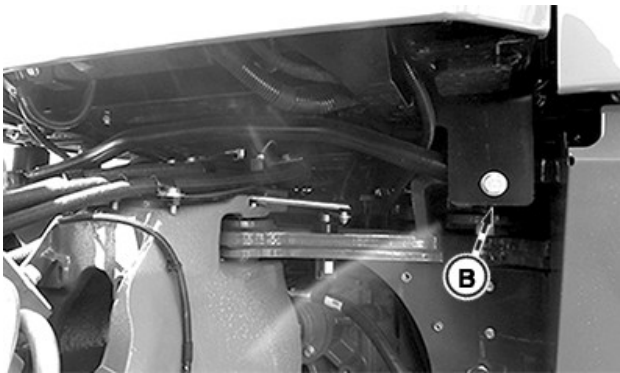

RXA0163832—UN—03JUL18
Right-Hand Side Behind and Below Cab



RXA0157989—UN—06MAR17
Left-Hand Side Below Cab Door


Check bushings: Left-hand (A), right-hand (B), and left-hand side under cab door (C) for degraded or missing rubber. If rubber is damaged replace complete bushing assembly.

BH38674,0000D55-19-22AUG18

Undercarriage Articulation Bumper Stops

Inspect articulation bumper stop:


1. Park tractor on level surface to inspect bumpers.

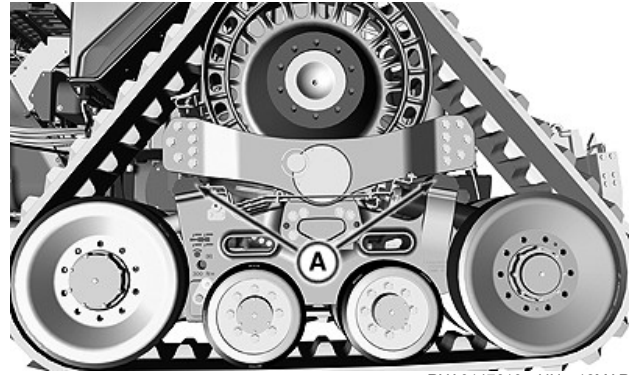

RXA0147610—UN—12MAR15

2. Inspect each articulation bumper stop (A) for damage, excessive wear, or if it is bent or deformed.
3. Damage may be chunking, chipping, or cracking of bumper. If any damage is found, replace bumper.

Replace articulation bumper stop:

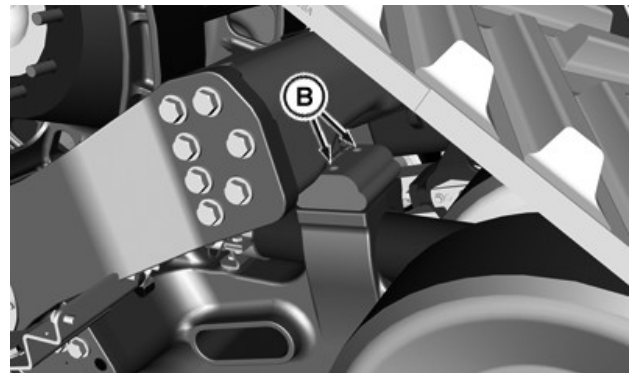

RXA0147611—UN—12MAR15

1. Remove cap screws (B).
2. Install new bumper stop.
3. Tighten cap screws to 10 N·m (7 lb·ft).

SV81855,00003A4-19-21FEB18

Drive, Mid-Rollers, and Idler Wheels


CAUTION: Trash build-up can cause fire from increased friction. Remove trash from trash build-up points between track and tractor frame, see Service Check - Remove Trash Buildup.

IMPORTANT: Avoid operating tractor in grease, oil, or other petroleum chemicals. Avoid spilling these materials on track and wheels during service.

Replace mid-rollers in sets if significant difference in coating thickness is seen on an opposite side of axle wheel.


Do not pair worn idler and mid-roller wheels with new wheels on the same axle. Unevenly worn mid-rollers may overload and damage opposite mid-rollers. Unevenly worn drive or idler wheels may negatively impact track alignment.

Avoid damage to hydraulic components. Use care around tension cylinder connections and hydraulic lines.

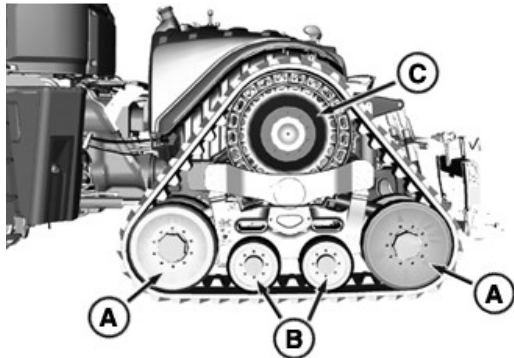


RXA0147242—UN—11FEB15

Wide Track

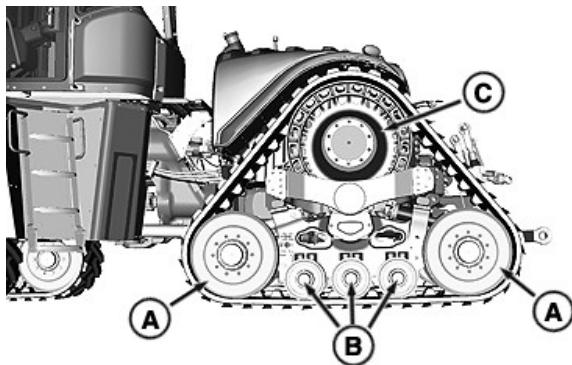

RXA0148370—UN—12JUN15

Narrow Track

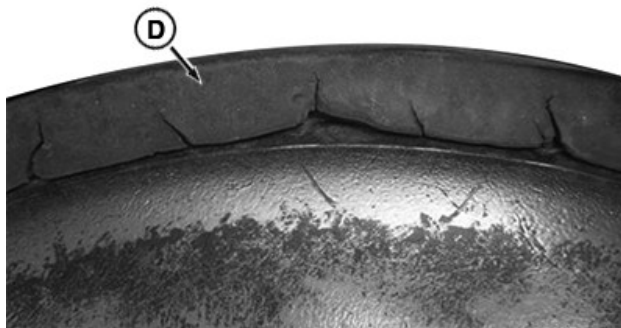

RXA0158389—UN—17MAR17

Check rubber coating for chunking, chipping, or cracking on idler (A) and mid-rollers (B). Wheels typically see rubber wear at edges. Significant edge wear (D) may be evident, but wheel will still perform as intended.

Typical wear patterns in the rubber are numerous small

nicks and chunks, some small sections with rubber loss, and slight amount of rubber separation at edges.

Check rubberized wheels for embedded rocks, nails, or other sharp objects. Remove if found. Embedded objects can cause internal damage to track if left in place.

Check wheel bolts for signs of being loose. Wheels are subjected to very high track tension loads and bolts can become loose if not correctly tightened, see Mid-Roller and Drive and Idler Wheel Fasteners in Service—Tighten section of this Operator's manual.

Inspect and remove any material build up on face of drive wheel (C). remove any material in pockets and between drive bars. Remove excessive material within undercarriage frame.

Inspect idlers and mid-rollers for operational problems. It is normal to see some edge wear on idlers or mid-rollers during service. Replace wheels when:


- More than 1/3 of the coating is missing all the way around wheel.
- Any area where coating loss extends across entire wheel width.
- Lack of coating thickness causes dirt build-up on wheel outer surface to begin.
- Any flat spots are visible which may indicate wheel has stopped turning.

KT81203,0000969-19-22APR21

Mid-Rollers and Idler Wheel Hub Oil Level

Mid Rollers

1. Park tractor on level surface.
2. Shut off tractor and put transmission into PARK.

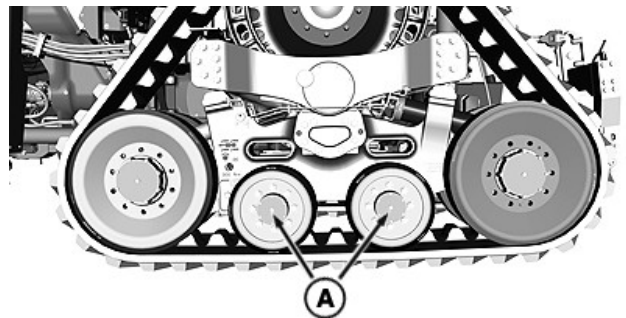

RXA0147253—UN—13FEB15


3. Remove oil fill plug (A) on each mid-roller on front and rear axles.
4. Check oil levels.
5. If oil level is below bottom of a plug hole, fill to bottom of plug hole with John Deere Hy-Gard™ oil or

equivalent, see Transmission and Hydraulic Oil in Other Lubricants section of this Operator's Manual.

6. Reinstall plugs and tighten to 34 N·m (24 lb·ft) torque.
7. Repeat procedure on opposite side of tractor.

Idler Wheel Hub


1. Park tractor on level surface.
2. Shut off tractor and put transmission into PARK.

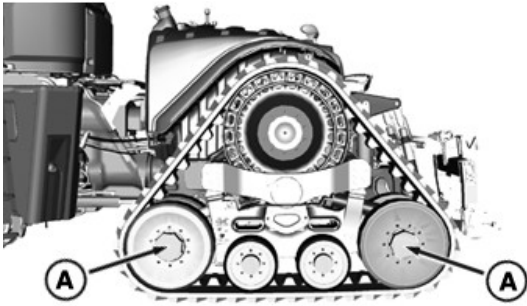

RXA0147254—UN—12FEB15

3. Remove oil fill plug (A) on each idler wheel hub on front and rear axles.
4. Check oil levels.
5. If oil level is below bottom of a plug hole, fill to bottom of plug hole with John Deere Hy-Gard™ oil or equivalent, see Transmission and Hydraulic Oil in Other Lubricants section of this Operator's Manual.
6. Reinstall plugs and tighten to 34 N·m (24 lb·ft) torque.
7. Repeat procedure on opposite side of tractor.

SV81855,0000371-19-07SEP21

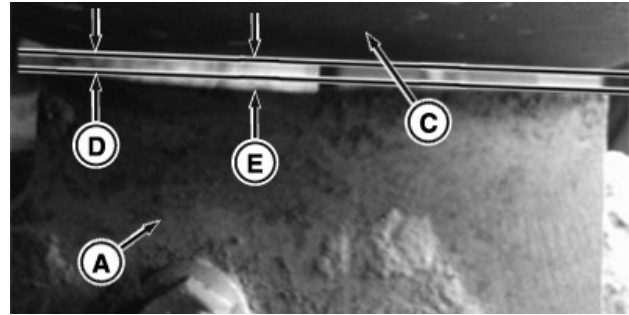

RXA0151763—UN—05APR16

Each drive wheel (C) has a scraper (A) to remove debris from drive wheel and prevent damage to inner track components and drive lugs.


1. Measure clearance between scraper edge and drive wheel face. Minimum clearance is 3 mm (1/8 in) (D) and maximum clearance is 5 mm (3/16 in) (E).

To adjust scraper:

2. Loosen cap screws (B).
3. Position scraper 3 mm (1/8 in) from face of drive wheel and proceed to step 7. If any part of scraper edge exceeds 5 mm (3/16 in) clearance, proceed to step 4.
4. Remove cap screws.
5. Choose option for scraper service:
 - Grind scraper edge flat perpendicular to scraper side.
 - Flip scraper end-to-end.
 - Replace scraper.
6. Position scraper to 3 mm (1/8 in) of clearance.
7. Tighten cap screws to 120 N·m (88 lb·ft).

SV81855,00003A3-19-26OCT17

Drive Wheel Scraper Clearance

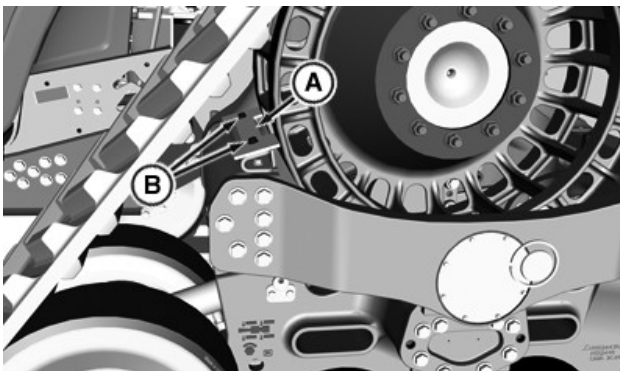

RXA0147612—UN—12MAR15

Secondary Brake

1. Park tractor on incline. Incline should be steep enough to allow tractor to roll easily when tractors is place in Neutral.



RXA0158409—UN—28MAR17

- For e18™, move transmission shift lever (A) to Neutral position.



RXA0143603—UN—23JUL14

- Engage secondary brake (B).


If tractor does not hold with secondary brake engaged, see your John Deere™ dealer.

SV81855,00002D3-19-16AUG17

Transmission PARK System

CAUTION: Avoid personal injury. Make sure that everyone is clear of tractor.

- Position tractor on a 20 % incline (0.6 m (2 ft) vertically for every 3.0 m (10 ft) horizontally) with front of tractor facing downward.

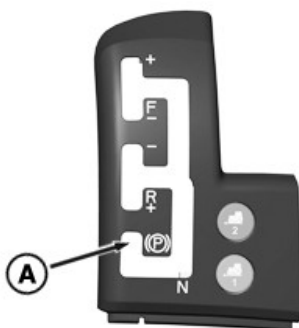

RXA0140499—UN—16APR14

Right-Hand Reverser Lever PARK Position

- Move transmission shift lever (A) into PARK position.

CAUTION: If tractor fails this test, contact your John Deere™ dealer immediately.

- If tractor does not hold on incline in PARK position, repair transmission PARK system immediately, see your John Deere dealer.

RX32825,000063D-19-18JUL17

e18 is a trademark of Deere & Company
John Deere is a trademark of Deere & Company

Engine Air Intake System—13.6 L/Stage II

- Open hood, see Open Hood in Service—General section of this Operator's Manual.
- Remove front and rear engine side shield, see Remove Front Engine Side Shield and Remove Rear Engine Side Shield of this Operator's Manual.


IMPORTANT: Operating engine with loose air intake clamps may allow dust entry into system and damage to engine.

NOTE: Not all air intake clamps are shown, but all need to be checked and tightened.



RXA0180449—UN—19NOV20

Air Intake System—Left Side

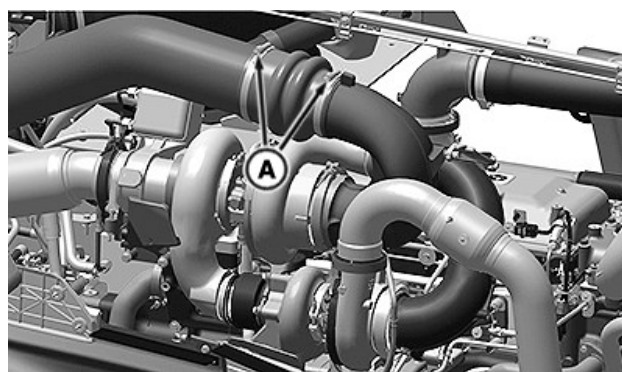

RXA0180399—UN—10NOV20

Air Intake System—Right Side

- Check air intake system for loose clamps (A) or cap screws.
- Tighten air intake system clamps to 8 N·m (5 lb·ft).


JL41210,0000A9A-19-23APR21

Engine Air Intake System—13.6 L Final Tier 4/Stage V or Tier 3/Stage IIIa Engine

- Open hood, see Open Hood in Service—General section of this Operator's Manual.
- Remove front and rear engine side shield, see Remove Front Engine Side Shield and Remove Rear Engine Side Shield of this Operator's Manual.


IMPORTANT: Operating engine with loose air intake clamps may allow dust entry into system and damage to engine.

NOTE: Not all air intake clamps are shown, but all need to be checked and tightened.

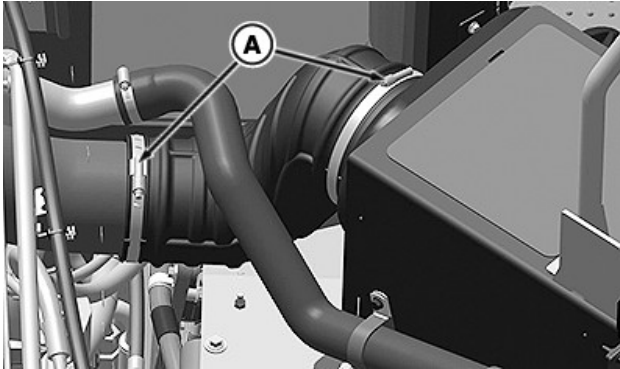


RXA0180398—UN—10NOV20

Air Intake System—Left Side

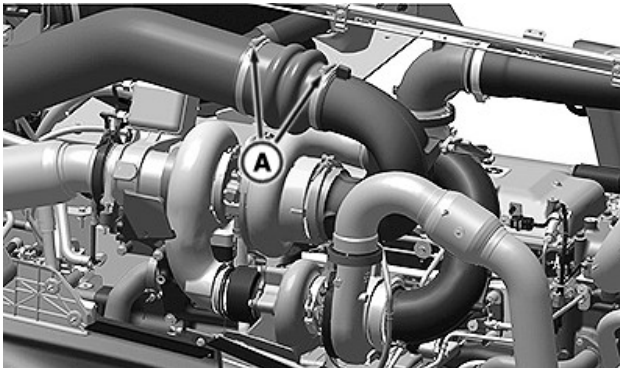


RXA0180399—UN—10NOV20

Air Intake System—Right Side

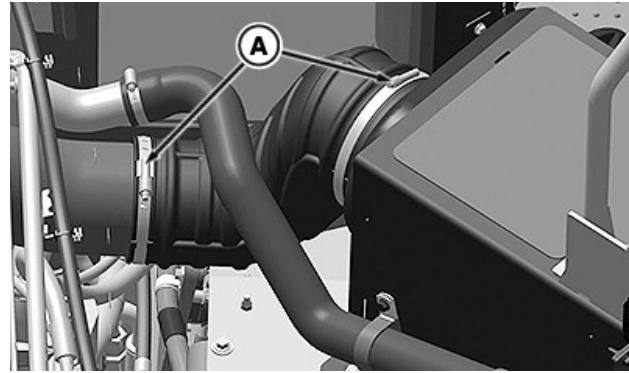

RXA0180398—UN—10NOV20

Left-Hand Side of Engine

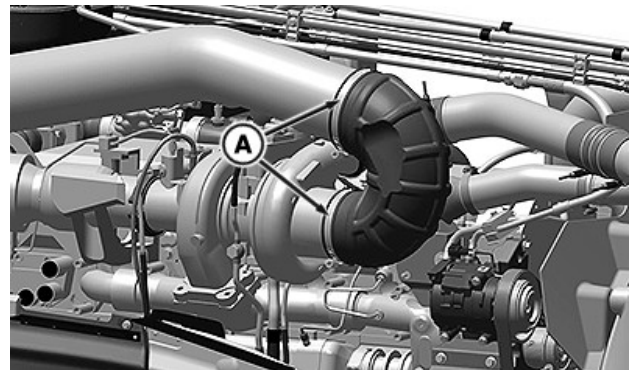

RXA0180400—UN—10NOV20

Right-Hand Side of Engine

Check air intake system for loose clamps (A) or cap screws.

Tighten air intake system clamps to 8 N·m (70 lb·in).

SV81855,0000285-19-10NOV20

3. Check air intake system for loose clamps (A) or cap screws.
4. Tighten air intake system clamps to 8 N·m (5 lb·ft).

SV81855,0000283-19-23APR21


Engine Air Intake System—15 L Engine

IMPORTANT: Operating engine with loose air intake clamps may allow dust entry into system and damage to engine.

NOTE: Not all air intake clamps are shown, but all need to be checked and tightened.

Seat Belts

⚠ CAUTION: If the seat belt system, including the mounting hardware, buckle, belt or retractor shows any sign of damage such as cuts, fraying, extreme or unusual wear, discoloration or abrasion, the entire seat belt system should be replaced immediately. Replace the belt system only with replacement parts approved for your machine.

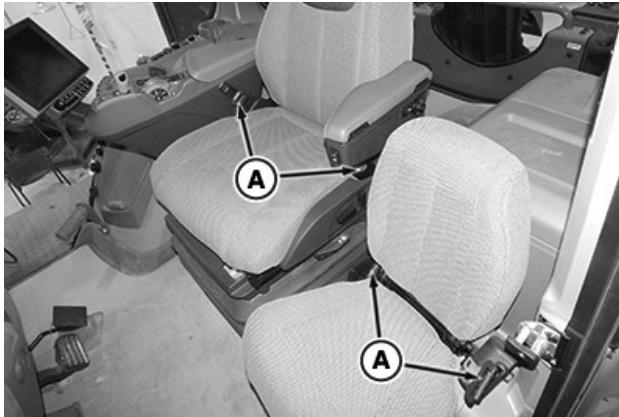

RXA0185279—UN—30AUG21

Inspect seat belts (A) and mounting hardware. If seat belts or system components require replacement, see your John Deere dealer.

RX32825,000065F-19-31AUG21


Engine Auxiliary Drive Belt and Drive Belt Tensioner

NOTE: Fan belt tensioner is only used on a 13.6 L Tier 2/Stage II or Tier 3/Stage IIIA engine.

Pulley or dust shield can be serviced separately from spring tensioner. Spring tensioner is serviced as an assembly.

For clarity, alternator and other components are not shown. Belt tensioner assembly remains on tractor during tests.

1. Remove front engine side shields. See Remove Front Engine Side Shields in Service—General Information section of this Operator's Manual.

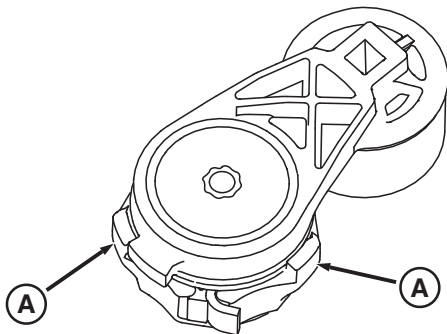


RXA0162898—UN—18APR18

2. Examine belt tensioner assembly. Replace tensioner if:
 - A spring stop (A) is cracked or missing.
 - Any part of tensioner assembly is cracked or broken.

If tensioner will not be replaced, go to step 3.


If tensioner must be replaced, replace, and then go to step 9.

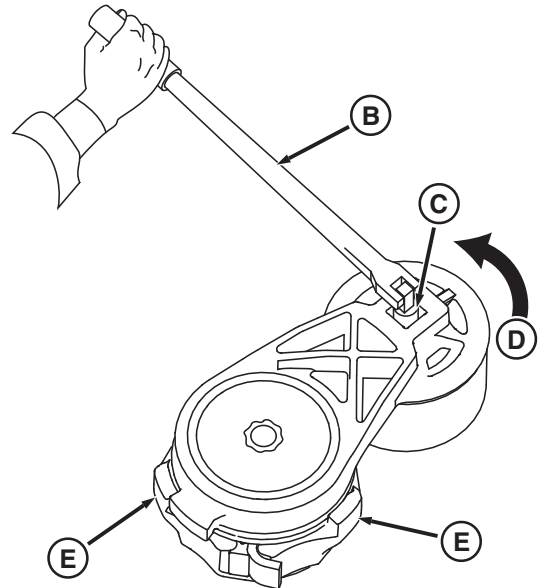

RXA0162899—UN—18APR18

3. With belt installed, insert 1/2 inch drive ratchet or breaker bar (B) into the square hole (C) on belt tensioner arm.
4. Twist tensioner arm (D) to reduce tension on belt. Twist as far as tensioner allows.
5. If belt is against free arm stops (E) replace belt. See step 13 for belt service procedure locations. After replacing belt, go to step 5.
6. With belt tension released, examine belt tracking (wear) mark on pulley. If tracking mark is 6.4 mm (1/4 inch) or more wider than belt, replace tensioner assembly. If tensioner assembly will:
 - Not be replaced, go to step 7.
 - Be replaced, replace and then go to step 9.
7. Remove belt. See step 14 for belt service procedure locations.

IMPORTANT: Do not pry between pulley and spring case.

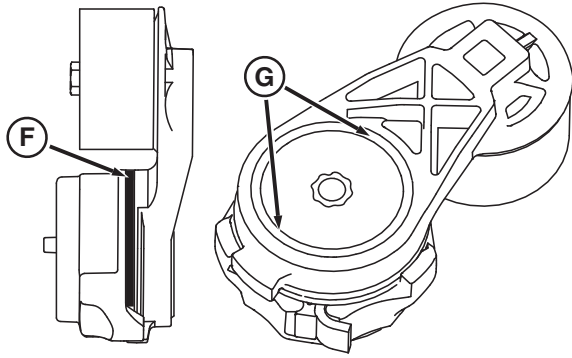

RXA0162900—UN—18APR18

8. Rotate tension arm slowly using 1/2 inch drive ratchet or breaker bar. Replace tensioner if:
 - Arm does not rotate smoothly between arm stops (E).
 - Metal to metal contact is present between arm and spring case (F) or arm and end cap (G).

If tensioner will not be replaced, go to step 9.

If tensioner must be replaced, replace, and then go to step 14.

9. If tensioner must be replaced, release tension on belt and remove belt (if not already done).
10. Remove tensioner pivot cap screw.
11. Replace tensioner assembly.
12. Apply thread lock and sealer Loctite® 242 to pivot cap screw.
13. Install cap screw and tighten to 70 N·m (51 lb·ft) torque.
14. Install belt. Depending upon engine type, in Service—Change section of this Operator's Manual, see:
 - Fan Belt—13.6 L Tier 2/Stage II or Tier 3/Stage IIIA Engine in this Operator's Manual section.
 - Engine Auxiliary Drive Belt—13.6 L Engine

CAUTION: Never start engine without side shields installed and hood securely closed and latched.

15. Install front engine side shields.
16. Close and securely latch hood.

RX32825,000066F-19-21APR21

See your John Deere dealer.


TS36762,0000148-19-14DEC16

Suspension Mount Clearance (Narrow Track) (For Australia Only)

1. Remove implements.


CAUTION: Dispose of chemicals in manner consistent with local regulations.

2. Drain contents of spray tanks.
3. Park tractor on level surface. Stop tractor and remove key.

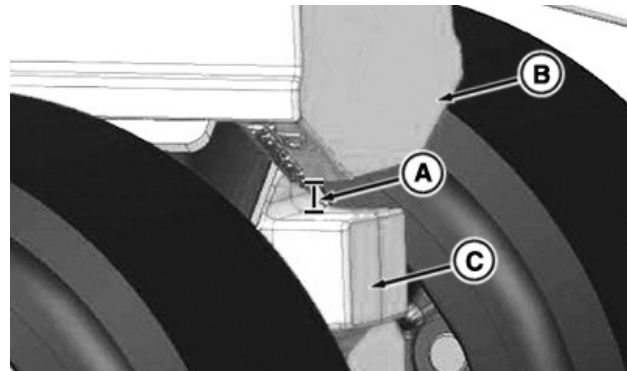

RXA0156203—UN—15DEC16

4. Measure gap (A) between V-block vertical stop (B) and beam vertical stop (C) at front and rear on all four undercarriage units.

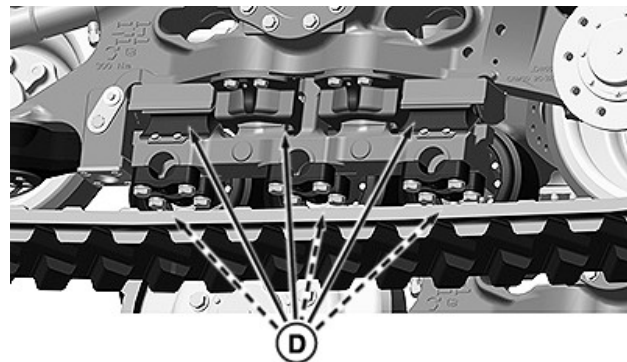

RXA0156204—UN—03OCT17

Midrollers removed for illustration purposes.

5. If either measured gap on an undercarriage unit is less than 6 mm (0.25 in.), replace all six suspension mounts (D) on that undercarriage unit. See your John Deere dealer.

KT81203,00009A1-19-23OCT17

Engine Valve Clearance

NOTE: To confirm which engine your tractor is equipped with, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

Loctite is a trademark of Henkel Corporation

Front Driveshaft Health (FDH) Sensor System



RXA0162182—UN—15FEB18

FDH sensor system monitors front driveshaft for proper operation when rotating. If a problem occurs, sensor triggers a Stop Engine (A) or Service Alert (B) light, an audible warning, and causes a diagnostic code to be displayed on CommandCenter™.


1. If Stop Engine warning occurs, stop tractor immediately in a safe location.
2. If Service Alert warning occurs, FDH system requires service and may be disabled. Service FDH system as soon as possible.
3. See your John Deere dealer to fully diagnose and repair problem indicated by code.

BH38674,0000CB8-19-14MAR18

Drawbar Sensor Calibration [Scraper]

Calibration requires a drawbar sensor calibration plug. See your John Deere dealer.


1. Fully load the scraper.
2. Raise the scraper above the ground level.
3. Stop the tractor.
4. Place transmission into PARK.
5. Turn off engine.

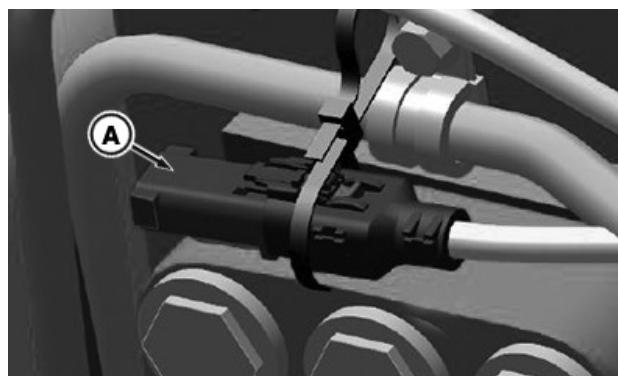

RXA0185235—UN—27AUG21

Draft Sensor Harness Connection

6. Remove the dust cover (A) from the draft sensor harness connection. The draft sensor harness connection is located to the left of the rear SCV stack.

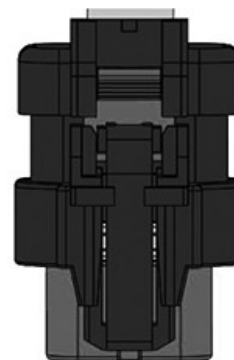

RXA0185234—UN—27AUG21


Draft Sensor Calibration Plug

7. Install the draft sensor calibration plug into the draft sensor harness connection.
8. Start engine and run for a minimum of 15 seconds.
9. Turn off engine. Sensor calibration is complete.
10. Remove and store the draft sensor calibration plug.
11. Replace the dust cover.

EC82310,00009A1-19-30AUG21

Drawbar Wear


CAUTION: Avoid equipment damage. Replace parts that have reached or exceeded their wear limit.

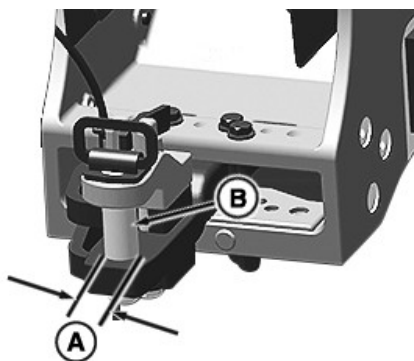

RXA0179145—UN—20AUG20

1. Check the diameter (A) of the pin (B).

Hitch Pin Specification		
Drawbar Category	Measurement mm (in)	
	Nominal Diameter	Wear Limit or Minimum Diameter
4	50.80 (1.50)	47.60 (1.87)
5	70.00 (2.75)	65.60 (2.58)

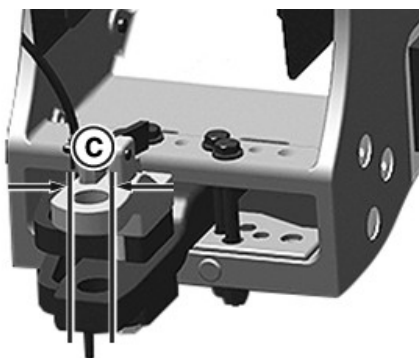

RXA0179146—UN—20AUG20

2. Check the diameter (C) at the top and bottom of the pin receiver hole.

Top and Bottom Receiver Hole Specification		
Drawbar Category	Measurement ^a mm (in)	
	Nominal Diameter	Wear Limit or Maximum Permissible Diameter ^b
4	52.80 (2.07)	55.40 (2.18)
5	72.75 (2.86)	76.30 (3.00)

^aMeasured in the direction of travel.^bOval

EC82310,0000F7A-19-21APR21

Engine Brake

See your John Deere dealer.

JL41210,0000A93-19-16OCT20


Service—Tighten

Mid-Roller, Drive, and Idler Wheel Fasteners

IMPORTANT: Avoid operating tractor in grease, oil, or other petroleum chemicals. Avoid spilling these materials on track and wheels during service.

If tractor is operated with loose cap screws, they may become worn and it may be necessary to replace them.

Retighten track cap screws after working 3 hours, and daily or every 10 hours during the first week of operation.

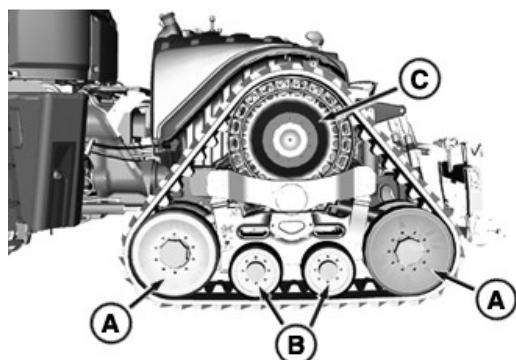

RXA0147242—UN—11FEB15


Inspect and tighten cap screws to specifications.

Torque — Specification

Front Idler Wheel (A).	1070 N·m (789 lb·ft)
Mid-Roller (B).	450 N·m (332 lb·ft)
Mid-Roller (B) (Narrow).	320 N·m (236 lb·ft)
Drive Wheel (C).	650 N·m (479 lb·ft)

KT81203,0000968-19-11DEC17

Drawbar Support Cap Screws

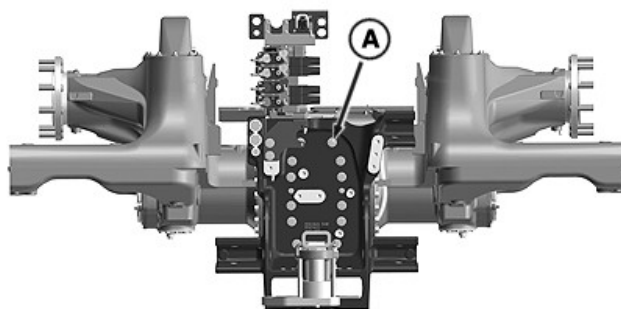

RXA0150415—UN—05NOV15

Heavy-Duty Drawbar Support

Inspect and tighten stabilizer cap screws and drawbar support cap screws (A) to 490 N·m (361 lb·ft).


SV81855,00003FB-19-12MAR20

Service—Change

Fan Belt—13.6 L Tier 2/Stage II or Tier 3/IIIA Engines


IMPORTANT: Fan drive belt is equipped with an automatic belt tensioner which does not require adjustment. Regular inspection of tensioner is required. See Inspect Fan Belt Tensioner in 1500 Hour Service section of this Operator's Manual.

1. Remove front engine side shield, see Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.

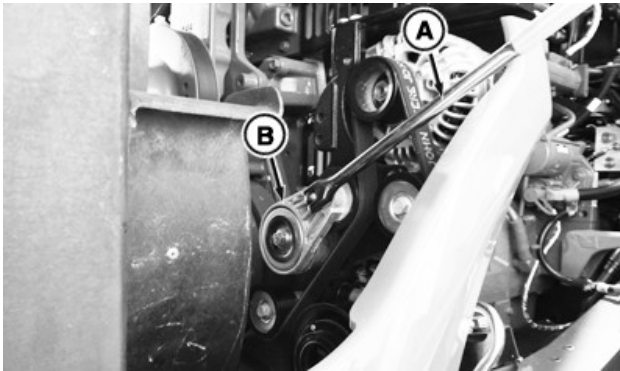

RXA0163070—UN—26APR18

2. Release tension on belt using 1/2 in drive ratchet or breaker bar (A) on belt tensioner (B).
3. While continuing to apply pressure with breaker bar, remove belt from tensioner pulley.

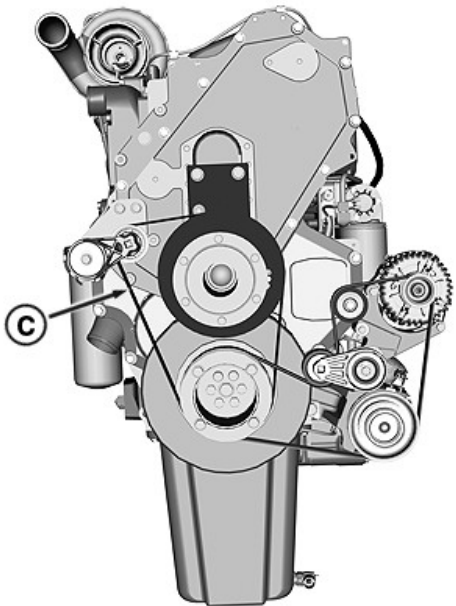

RXA0163071—UN—26APR18

13.6 L Fan Belt Layout

4. Relax tension and completely remove belt (C).
5. Install new belt on all pulleys, except tensioner pulley. See fan belt layout diagram for correct belt routing.

6. Using breaker bar, release tension on tensioner pulley and position belt over pulley.
7. Slowly relax force on breaker bar.
8. Install front engine side shield, close and secure hood.


SV81855,000039D-19-22APR21

Engine Auxiliary Drive Belt—13.6 L Engine

1. Remove front engine side shield, see Remove Front Engine Side Shield in Service - General section of this Operator's Manual.

IMPORTANT: Keep tension off belt during removal.

NOTE: Removal and installation of fan belt requires an assistant.

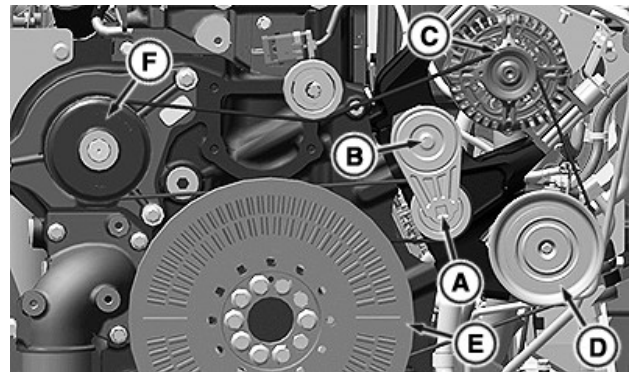

RXA0180387—UN—06NOV20

1/2 in Drive Socket Wrench


2. Insert 1/2 in drive socket wrench into square hole (A) on tensioner arm (B).
3. Push down on wrench handle to relieve tension on drive belt.
4. Have assistant remove auxiliary belt from alternator pulley (C).
5. Remove belt from idler air conditioner pulley (D), crankshaft pulley (E), and water pump (F).
6. Discard old belt.
7. Install new belt to water pump, crankshaft pulley, idler then air conditioner pulley.
8. Install belt on alternator pulley.
9. Remove 1/2 in drive socket wrench and restore tension on new belt.
10. Install front engine side shield and close hood.

BH38674,0000CC0-19-06NOV20

Engine Auxiliary Drive Belt—15 L Engine

1. Remove front engine side shield, see Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.

IMPORTANT: Removal of belt requires an assistant.

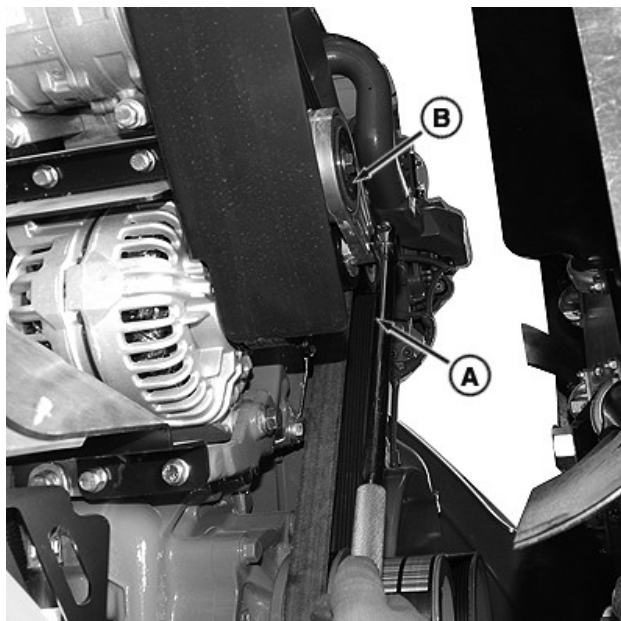


RXA0142200—UN—12JUN14

2. Release tension on drive belt. Insert 1/2 inch drive socket wrench into square hole (A) on tensioner arm (B). Twist tensioner clockwise.
3. While continuing to apply force with breaker bar, have assistant remove auxiliary belt from air conditioner pulley (C).
4. Relax tension and completely remove belt.

IMPORTANT: Belt tension is controlled by an automatic belt tensioner. Tensioner does not require adjustment.

5. Inspect belt tensioner. See Engine Auxiliary Drive Belt and Drive Belt Tensioner in Service—Check section of this Operator's Manual.

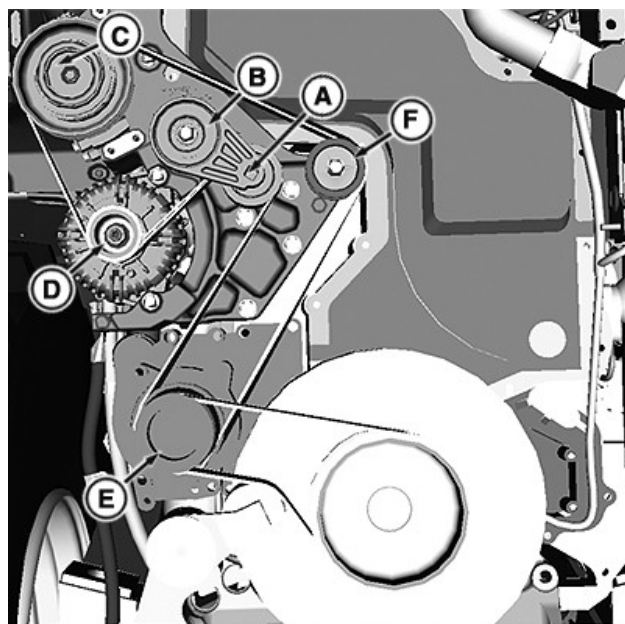

RXA0142199—UN—06JUN14

Auxiliary Drive Belt Layout

Install new belt on all pulleys except tensioner pulley. Drive belt layout chart shows correct belt routing.

7. Using breaker bar, release tension on tensioner pulley and position belt over pulley.
8. Slowly relax force on breaker bar.
9. Check engine water pump belt for wear or damage. Replace if necessary. See Engine Water Pump Drive Belt in this Operator's Manual section.

CAUTION: Never start engine without side panels installed and hood securely closed and latched.


10. Install engine side shields.
11. Close and secure hood.

SV81855,00001D1-19-21APR21

Engine Water Pump Drive Belt—15 L Engine

1. Remove front engine side shield, see Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.

IMPORTANT: Removal of belt requires an assistant.

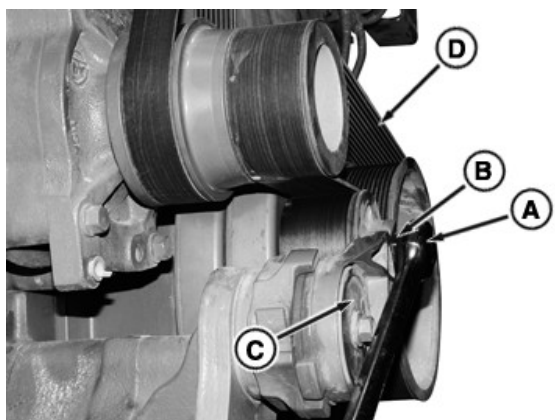

RXA0163099—UN—02MAY18

2. Release tension on drive belt. Insert 1/2 inch drive ratchet or breaker bar (A) into square hole (B) on tensioner arm (C). Twist tensioner counterclockwise.
3. While continuing to apply force with breaker bar, have assistant remove water pump belt from water pump pulley (D).
4. Relax tension and completely remove belt.

IMPORTANT: Belt tension is controlled by an automatic belt tensioner. Tensioner does not require adjustment.

5. Inspect belt tensioner. See Engine Auxiliary Drive Belt and Drive Belt Tensioner in Service—Check section of this Operator's Manual.
6. Install new belt on all pulleys except tensioner pulley.
7. Using breaker bar, release tension on tensioner pulley and position belt over pulley.
8. Slowly relax force on breaker bar.
9. Check auxiliary engine drive belt for wear or damage. Replace if necessary. See Engine Auxiliary Drive Belt—15 L Engine in this Operator's Manual section.

CAUTION: Never start engine without side panels installed and hood securely closed and latched.

10. Install engine side shields.
11. Close and secure hood.

RX32825,0000009-19-21APR21


Engine Oil and Filter—13.6 L Engine

IMPORTANT: Sulfur content should not exceed 0.10%. Sulfur content less than 0.10% is preferred. Refer to Fuel, Lubricants, and Coolant section for more information on oil change intervals.

NOTE: The initial break-in service interval of a new or rebuilt wet sleeve engine with Break-In Plus must go at least 100 hours to assure the surface mating of the rings and liners has had an opportunity to occur. The 100 hour minimum applies to all new or rebuilt engines. The maximum service interval is the same as the service interval recommendations listed in Engine Oil and Filter Service Intervals for your engine. To confirm which engine your tractor is equipped with, see Engine Serial Number in Identification Numbers section of this Operator's Manual.


For subsequent oil changes, see Engine Oil and Filter Service Intervals for your engine located in the Engine Oil section of this Operator's Manual.

1. Operate engine approximately 5 minutes to warm oil.
2. Stop engine.

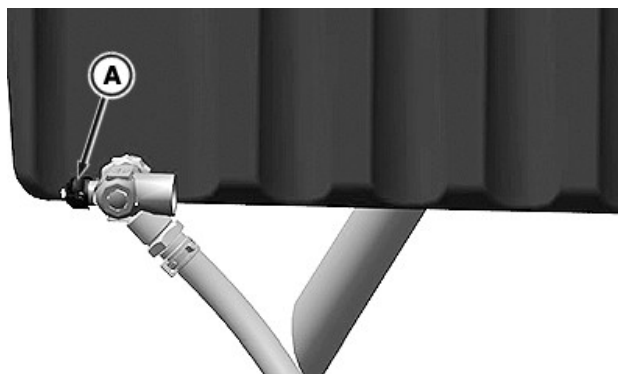

RXA0185138—UN—19AUG21

3. Turn crankcase drain fitting (A) to drain oil. Use enough containers for 75.7 L (20.0 gal) and direct flow with attached valve hose.
4. Tighten fitting after oil is completely drained.
5. Remove front engine side shield, see Remove Front Engine Side Shield in Service—General Information section of this Operator's Manual.

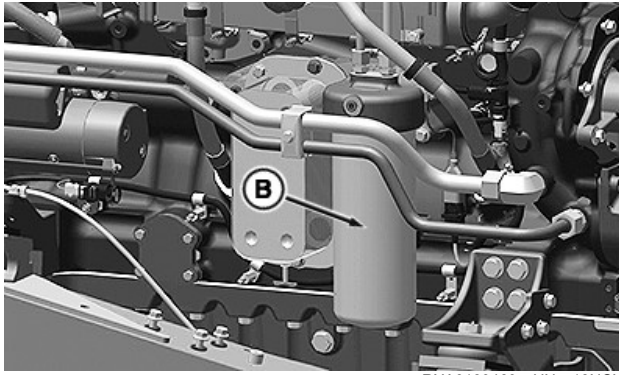

RXA0180469—UN—18NOV20

6. Remove filter (B) and remove old O-ring. Clean filter mounting surface with clean dry cloth.
7. Apply a thin film of oil to new O-ring and install new filter.
8. Hand-tighten filter element, then turn filter element 1/2 - 3/4 turn after gasket contact. Filter wrench is required. Do not overtighten.



RXA0185248—UN—30AUG21

9. Remove engine oil fill cap (C) and refill crankcase using fill tube. Use seasonal viscosity grade oil as specified in Engine Oil section of this Operator's Manual. For crankcase capacity, see Capacities in the Specifications section of this Operator's Manual.
10. Start and run engine for a two minutes. Then stop engine and check for oil leaks.

NOTE: Engine oil level indicator is a dipstick with a "crosshatched" area with a "safe" zone. Anywhere in the dipstick crosshatched safe zone is considered FULL.



RXA0185140—UN—20AUG21

11. Recheck oil level with dipstick to ensure that level is in crosshatched (D) "safe" zone area.
12. Reinstall front engine side shield and close hood.

RX32825,0000648-19-30AUG21


Engine Oil and Filter—15 L Engine

IMPORTANT: Fuel sulfur content should not exceed 0.10%. Fuel sulfur content less than 0.10% is preferred. Refer to Fuel, Lubricants, and Coolant section for more information on oil change intervals.

NOTE: No initial break-in service required for new or rebuilt engines. The maximum service interval is the same as the service interval recommendations listed in Engine Oil and Filter Service Intervals for your engine. To confirm which engine your tractor is equipped with, see Engine Serial Number in Identification Numbers section of this Operator's Manual.

For subsequent oil changes, see Engine Oil and Filter Service Intervals in Engine Oil section of this Operator's Manual.


1. Operate engine approximately 5 minutes to warm oil.
2. Stop engine.

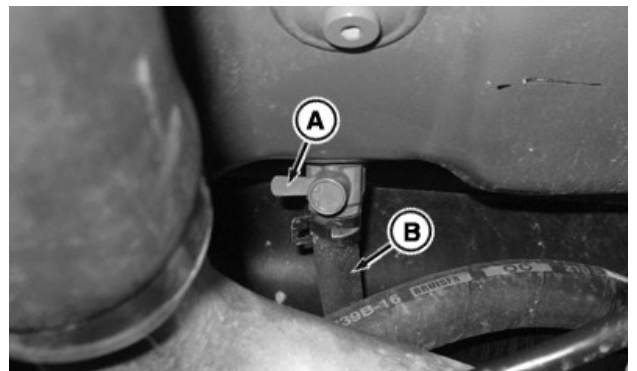

RXA0147883—UN—20APR15

3. Locate engine drain valve (A) located inside right-hand engine side frame.


4. Turn crankcase drain valve (A) to drain engine oil. Use enough containers for 75.7 L (20 gal) capacity and direct oil flow with engine oil drain hose (B).
5. Close drain valve after all oil has been drained.
6. Remove front engine side shield, see Remove Front Engine Side Shield in Service General - Information section of this Operator's Manual.

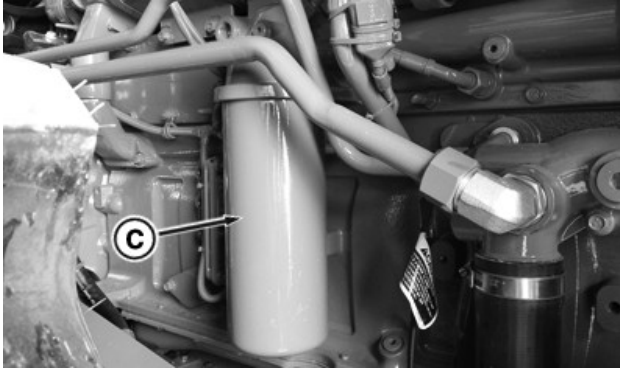

RXA0147884—UN—20APR15


7. Remove filter (C) and old gasket. Clean filter mounting surface with clean dry cloth.
8. Apply thin film of oil to new gasket.
9. Fill filter with clean engine oil, approximately 1.9 L (0.5 gal).
10. Install gasket and filter.
11. Hand-tighten filter element until gasket contacts filter head surface. Use filter wrench to tighten an extra 3/4 to 1 turn after gasket contact. Refer to instructions on filter. Do not overtighten.

IMPORTANT: Do not overfill engine. Excess oil can cause loss of efficiency.

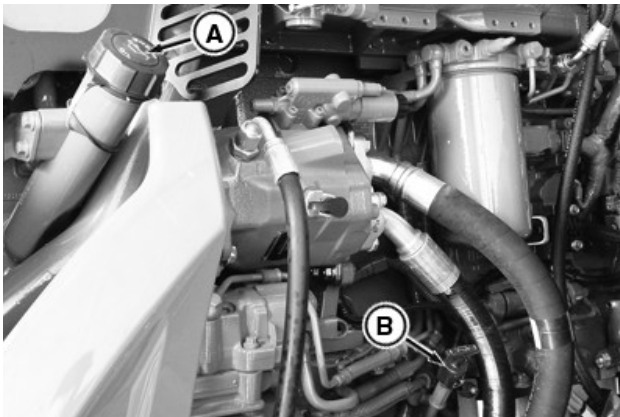

RXA0141925—UN—03JUN14

12. Remove engine oil fill cap (A) and fill crankcase using fill tube. Use seasonal viscosity grade oil as specified in Engine Oil section of this Operator's Manual. For crankcase capacity, see Capacities in Specifications section of this Operator's Manual.

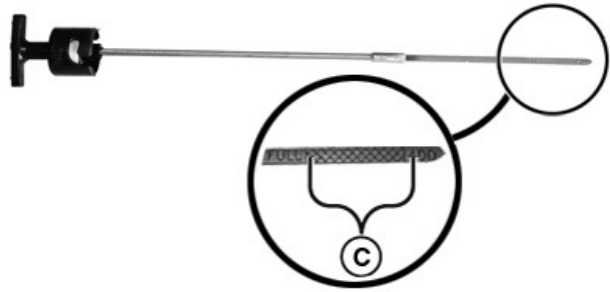

RXA0141926—UN—03JUN14

13. Check oil level with dipstick (B), to ensure that oil level is in crosshatched "safe" area (C).
 14. Start and run engine for two minutes. Then stop engine and check for oil leaks.
- NOTE: Engine oil level indicator is a dipstick with a "crosshatched" area with a "safe" zone. Anywhere in the dipstick crosshatched safe zone is considered full.*
15. Recheck oil level with dipstick (B), to ensure that oil level is in crosshatched "safe" zone area (C).
 16. Install front engine side shield and close hood.

SV81855,000027B-19-26APR18


Fuel Filters—13.6 L Engine

1. Remove engine access panel, see Remove Engine Access Panel in Service—General section of this Operator's Manual.

IMPORTANT: Replace fuel filter elements anytime audible alarm sounds and diagnostic trouble codes indicate plugged fuel filters (low fuel pressure). If no alarm sounds, replace filters after 500 hours operation.

2. Thoroughly clean exterior of fuel filter/water separator assembly and surrounding area.


NOTE: It is recommended to install a 6 ft, 5/16 in fuel hose to the bottom of the fuel filters to aid with draining into a suitable container.

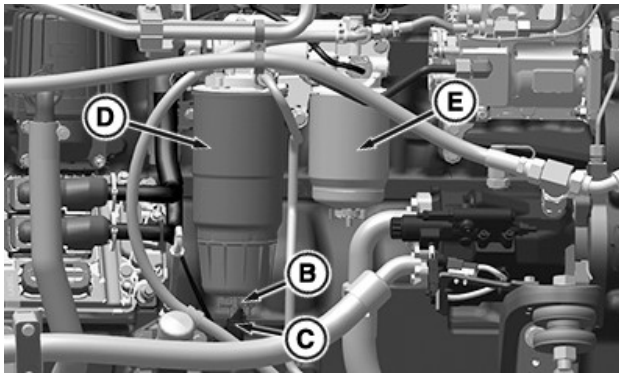

RXA0180430—UN—12NOV20

3. Drain water and contaminants from primary filter into suitable container by opening drain valve (A) on bottom of separator.
4. Dispose of drained material in accordance with local laws and ordinances.
5. Disconnect the water-in-fuel sensor connector (B) from primary filter.
6. Remove primary filter (C), secondary filter (D), and gaskets and discard.

IMPORTANT: DO NOT prefill either fuel filter with fuel.

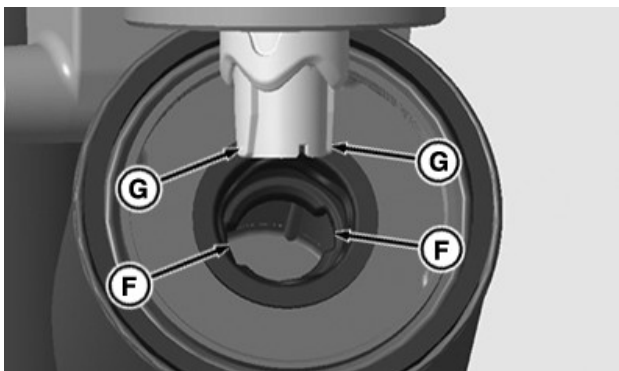

RXA0185335—UN—08SEP21

7. Lubricate gasket for primary fuel filter with fuel, and install canister onto base. Align fuel filter slots (F) on the fuel filter to the fuel filter header tabs (G) on the fuel filter header. Tighten 1/2 turn after packing contacts base.
8. Lubricate primary fuel filter water separator gasket with fuel and install onto filter canister. Tighten 1/2 of a full turn after gasket contacts the base.
9. Lubricate gasket for secondary fuel filter with fuel, and install filter onto base. Align fuel filter slots (F) on the fuel filter to the fuel filter header tabs (G) on the fuel filter header. Tighten 1/2 turn after packing contacts base.
10. Connect water-in-fuel separator sensor harness.
11. Install engine access panel.

IMPORTANT: To provide time to prefill fuel filters, key must be in run position for a total of 3 minutes. Turn key to run position for 60 seconds, three times. The priming pump only stays on for 60 seconds every key cycle. Fuel system is self-bleeding.

Do not try to start engine until after 3 minute time elapses or an air lock in the fuel system may occur.

12. Start engine and run high idle for 2 minutes.


RX32825,000064D-19-09SEP21

Fuel Filters—15 L Engine

1. Remove front engine access panel, see Remove Engine Access Panel in Service—General Information section of this Operator's Manual.


IMPORTANT: Replace fuel filter elements anytime audible alarm sounds and diagnostic trouble codes indicate plugged fuel filters (low fuel pressure). If no alarm sounds replace filters after 400 hours operation

2. Thoroughly clean exterior of fuel filter/water separator assembly and surrounding area.

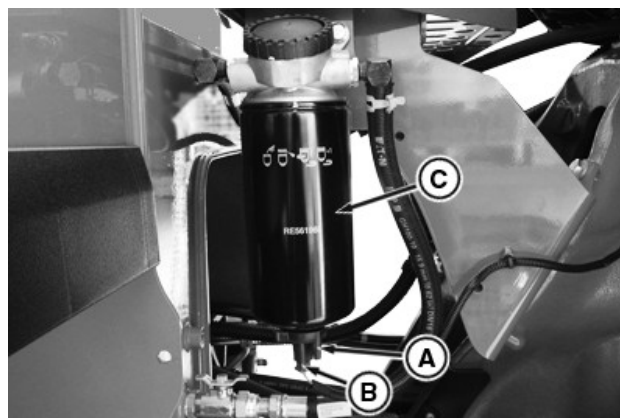

RXA0141928—UN—02JUN14

3. Drain water and contaminants from primary filter into suitable container by opening drain valve (A) on bottom of filter.
4. Dispose of drained material in accordance with local laws and ordinances.
5. Disconnect the water-in-fuel sensor connector (B) from primary filter.

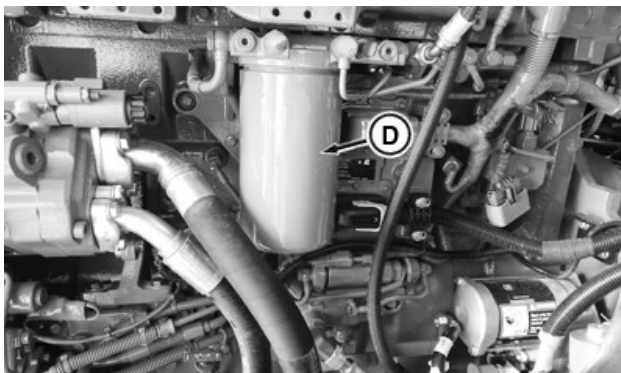

RXA0141924—UN—02JUN14

6. Remove primary filter (C), secondary filter (D), and gaskets and discard filters.

IMPORTANT: Remove secondary filter plug (if equipped) before installing. DO NOT prefill either fuel filter with fuel.

7. Lubricate gasket for primary fuel filter with fuel, and install canister onto base. Tighten 3/4 turn after packing contacts base.
8. Lubricate primary fuel filter water separator gasket with fuel and install onto filter canister. Tighten 3/4 of a full turn after gasket contacts the base.
9. Lubricate gasket for secondary fuel filter with fuel, and install filter onto base. Tighten 3/4 turn after gasket contacts base.
10. Connect water-in-fuel sensor connector harness.
11. Install engine access panel.

IMPORTANT: To provide time to prefill fuel filters, key must be in run position for a total of 3 minutes. Turn key to run position for 60 seconds, three times. The priming pump only stays on for 60 seconds every key cycle. Fuel system is self-bleeding. Do not try to start engine until after 3 minute time elapses or an air lock in the fuel system may occur.


Do not attempt to start engine until prefill is complete or a fuel system air lock may occur.

12. Start engine and run high idle for 2 minutes.

SV81855,000027A-19-26JUL21

Optional Fuel Water Separator Filter Element

1. Park machine on a flat, level surface.
2. Lower equipment to ground.
3. Shut off engine.

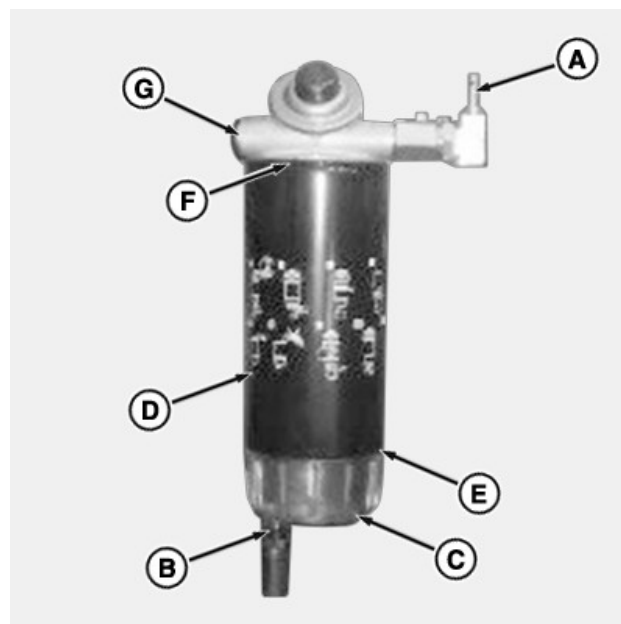

RXA0168513—UN—03JUN19

Priming button cap may differ

4. Close fuel shutoff valve (A).
5. Thoroughly clean fuel filter assembly and surrounding area to prevent dirt and debris from entering the fuel system.

CAUTION: Fuel in filter is under high pressure. Open drain valve on bottom of the fuel filter housing to relieve pressure before removing filter.


NOTE: Catch fluids with an approved container and dispose of according to employer and government guidelines.

6. Connect a fuel drain line to the filter drain valve (B) on bottom of the filter housing.
7. Open filter drain valve.
8. Drain all fuel.
9. Close drain valve.
10. Remove and retain water separator bowl (C) from filter element.
11. Remove and discard filter element (D).
12. Clean water separator bowl with compressed air.
13. Inspect filter housing and filter canister sealing surfaces. Clean as required.
14. Place new seal (E) on the water separator bowl.
15. Lubricate seal with clean diesel fuel.
16. Install water separator bowl onto new filter element. Tighten water separator bowl 1/2 of a turn after seal contacts filter element.

17. Lubricate new filter element seal (F) with clean diesel fuel.
18. Install filter element assembly to the filter housing (G).
19. Tighten filter element 1/2—3/4 of a turn after seal contacts filter housing.
20. Open fuel shutoff valve.
21. Bleed fuel system. See Bleed Fuel System in the Service—General Information section of this Operator's Manual.

EC82310,0000983-19-21APR21

Fuel Tank Vent Filters

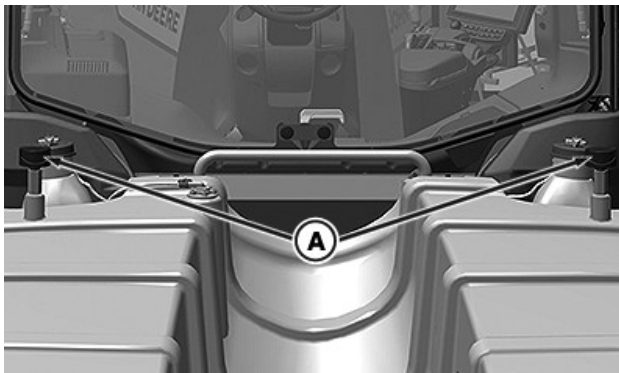

RXA0180431—UN—11NOV20

The fuel tank vent filters (A) are at the front top of the left-hand and right-hand fuel tanks.

1. Clean the area around the fuel tank vent filter before removing it.
2. Remove and replace the tank vent filter.
3. Repeat the procedure for the remaining fuel tank vent filter.

RW29387,00001A5-19-21APR21


Cab Filters

Cab Recirculation Air Filter

CAUTION: Avoid personal injury. The cab recirculation air filter is not designed to filter out harmful chemicals. Before using agricultural chemicals, review and adhere to all cautions and instructions located in the:

- Implement operator's manual.
- Chemical Material Safety Data Sheets (MSDS).


IMPORTANT: Avoid damage to the cab air recirculation system:

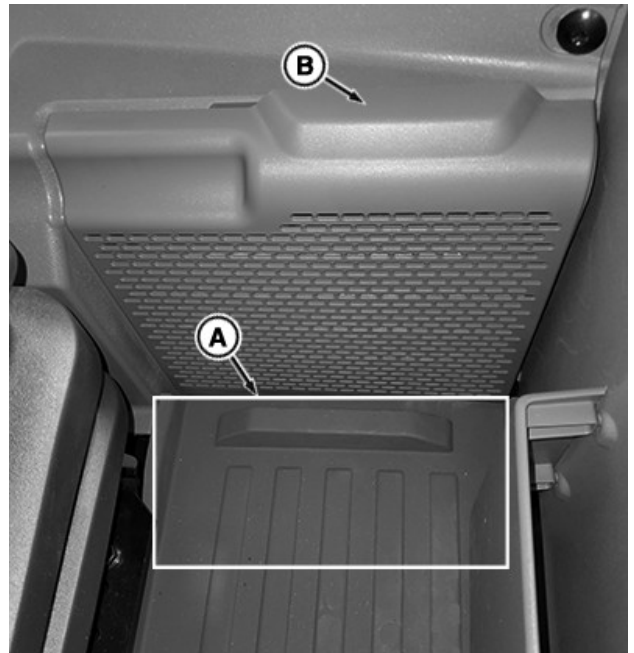

RXA0172354—UN—03DEC19

- The cab air recirculation system creates enough suction to pull lightweight material onto the cab recirculation air intake cover. Keep the area directly in front of the cab recirculation air intake (A) clear of lightweight material. Failure to do so can cause reduced HVAC performance.
- Replacement interval varies according to operating conditions. Normal service is 1000 hours or annually, whichever occurs first.

1. Switch off the HVAC fan.
2. Locate the cab recirculation air intake behind the operators seat on the lower left-hand side of the rear cab wall.
3. Remove the cab recirculation air intake cover by grasping handle (B) and pulling the intake cover forward and up.

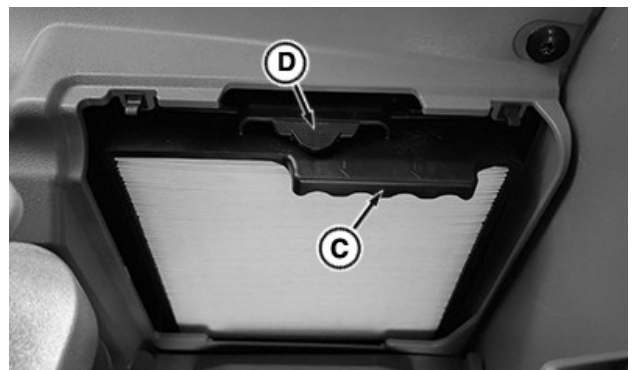

RXA0172355—UN—19NOV19

4. Remove the cab recirculation air filter by grasping the air filter handle (C) while pressing tab (D) and pull the air filter forward.
5. Insert a new cab recirculation air filter.

- Replace the cab recirculation air intake cover.

Cab Fresh Air Filter

CAUTION: Cab air filters are not designed to filter out harmful chemicals. Follow instructions in implement operator's manual and those given by chemical manufacturer when using agricultural chemicals.


IMPORTANT: Replacement interval can vary according to operating conditions. Normal service is 1000 hours or annually, whichever occurs first.



RXA0099137—UN—19SEP08


- Support cover (A).

NOTE: Filter cover latch has three positions; open, latched, and locked. Cover is not locked when in latched position.

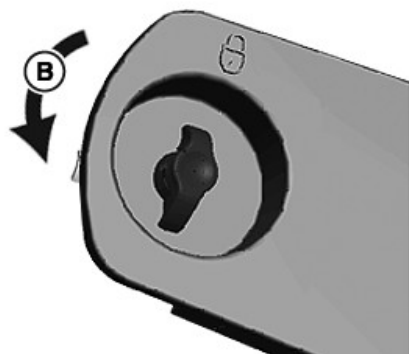


RXA0155037—UN—18OCT16

- Turn knob fully counterclockwise (B) to unlatch cover.

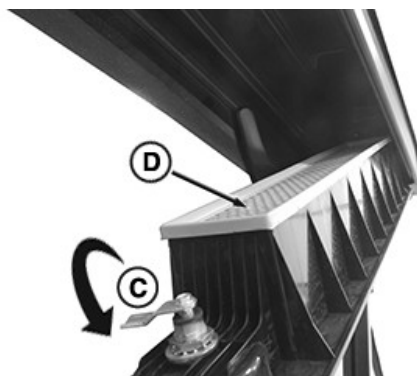

RXA0172403—UN—22NOV19

- Swing down (C) cover.
- Remove and discard old fresh air filter (D).
- Wipe down inside and outside of filter cover with a clean cloth.
- Install new filter.

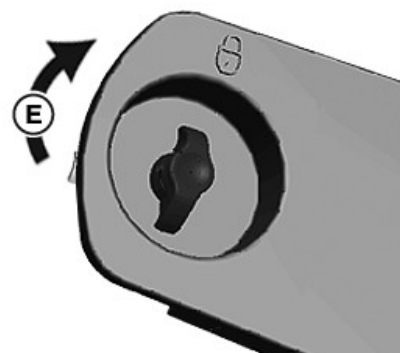

RXA0155035—UN—18OCT16

- Close cover and turn knob fully clockwise (E) to securely lock latch.


TS36762,000014F-19-18JUN21

Engine Primary and Secondary Air Filters—Tier 2/Stage II or Tier 3/Stage IIIA Engine

IMPORTANT: When Engine Air Filter Restriction Warning DTC is activated, engine performance is reduced. Inspect engine air intake system and filters immediately. Follow procedure, replace filters only if damaged.


Service interval varies due to operating conditions. Replace secondary air filter every second primary air filter change.

- Turn off engine.
- Inspect air filter cover exterior for damage. Replace cover if seal gap or damage is found.

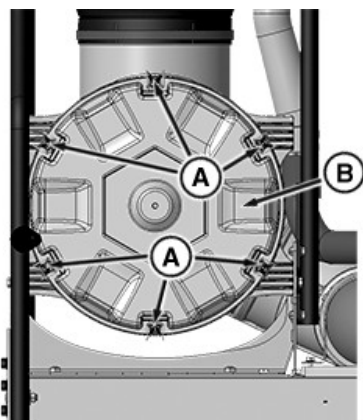

RXA0169023—UN—17JUN19

3. Unfasten clips (A).
4. Remove air filter cover (B).
5. Inspect air filter cover interior for damage. Replace cover if seal gap or damage is found.

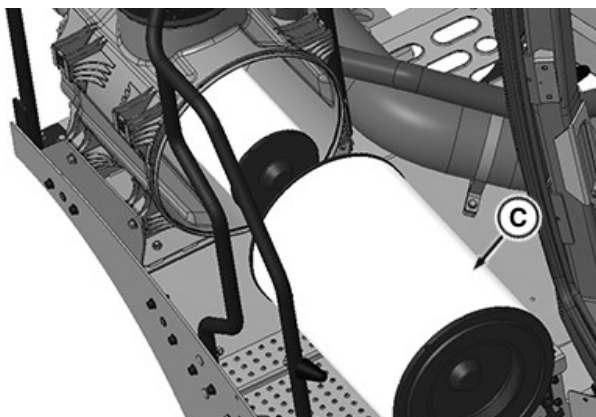

RXA0169024—UN—17JUN19


6. Grasp primary filter frame (C) and remove from housing.

IMPORTANT: Avoid engine damage. Always replace used filters with new filters. Never attempt to clean or reuse engine air filters.

7. Inspect primary filter for damage or waviness in pleats. Such conditions may indicate contact with water or overuse. See your John Deere dealer.

IMPORTANT: Avoid engine damage. Replace secondary filters every other primary filter change.


To prevent dust from entering the air intake system, install new secondary filters immediately.

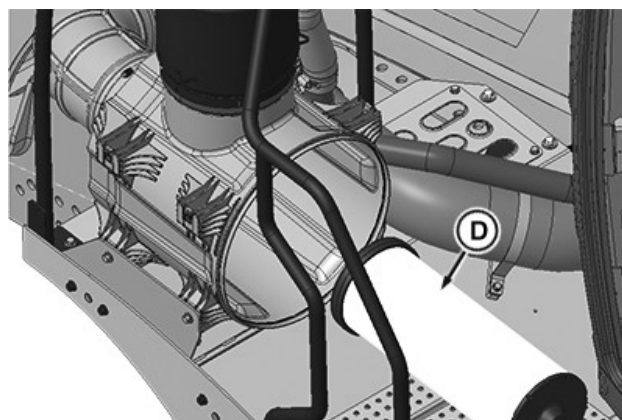

RXA0169025—UN—17JUN19

8. Grasp secondary filter (D) and remove from housing.
9. Inspect secondary filter for damage. Replace if necessary or if primary filter is being replaced for the second time.

NOTE: It is normal for a small amount of dust to coat the interior of the filter housing. If larger debris or significant amount of dust or dirt is found, check filters, filter housing, and air intake system for leaks.

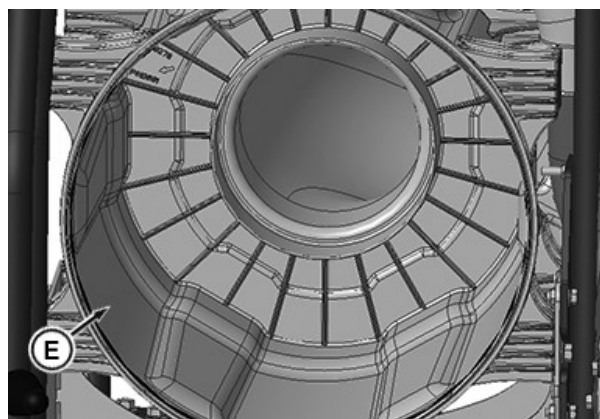

RXA0169026—UN—17JUN19

10. Clean debris and dirt from the filter housing (D). Use cloth dampened with water.

IMPORTANT: Avoid engine damage. Verify correct alignment of the secondary filter tab.


11. Replace secondary air filter if necessary.
12. Push filters firmly back into housing; ensure that filters are seated properly.
13. Install air filter cover and fasten cover clips.
14. Run engine.
15. If diagnostic trouble code appears, see your John Deere dealer.

Engine Primary and Secondary Air Filters— Final Tier 4/Stage V Engine

IMPORTANT: When Engine Air Filter Restriction Warning is activated, engine performance is reduced. Service engine air filters immediately.


Service interval may vary due to operating conditions. Replace secondary air filter every second primary air filter change.

1. Inspect filters and intake seals. Replace filter if seal gap or damage is found.
2. Replace primary engine air filters if diagnostic trouble code remains on.

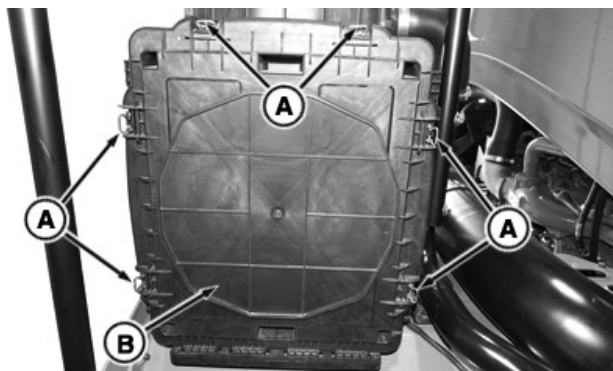

RXA0141984—UN—03JUN14

3. Unfasten clips (A) and remove air filter cover (B).

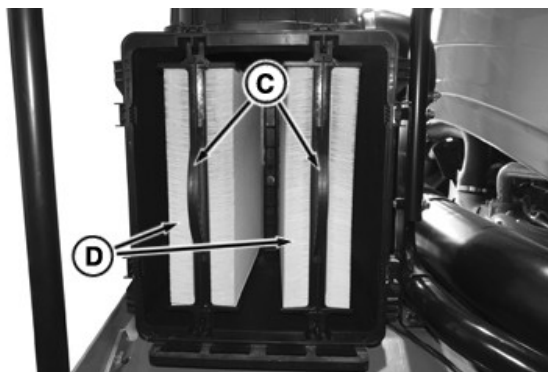

RXA0164245—UN—15AUG18


4. Grasp primary filter frame (C). Pull air filters (D) from filter housing track.

IMPORTANT: Do not attempt to clean engine air filters.

5. Inspect filter for damage or waviness in pleats. Such conditions may indicate overuse or contact with water. Replace filter if problem is found.

IMPORTANT: Replace secondary filters every other primary filter change.


Install new secondary filters immediately to prevent dust from entering air intake system.

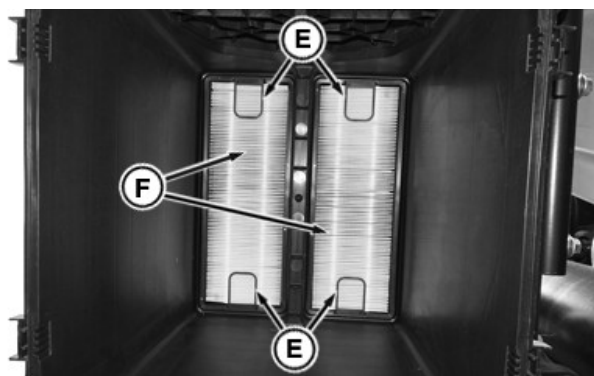

RXA0164246—UN—15AUG18

6. Pull on tabs (E) to remove secondary filters (F).
7. Inspect filters for damage. Replace if necessary.

NOTE: A very small amount of dust coating interior surface of filter housing is not unusual. If larger debris or significant amount of dust or dirt is found, check filters, filter housing, and air intake system for leaks.

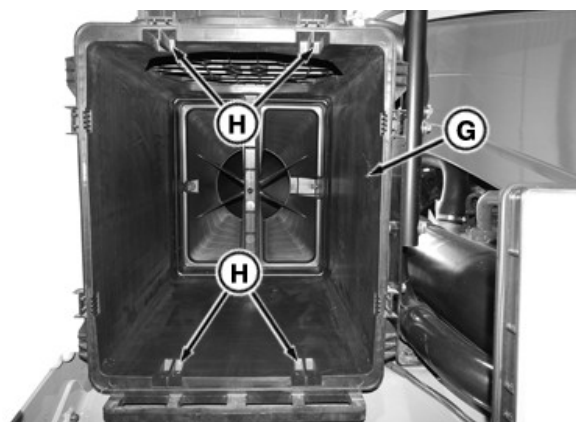

RXA0164247—UN—15AUG18

8. Clean debris and dirt from filter housing (G). Use cloth dampened with water.


IMPORTANT: Incorrect installation of secondary filter tab may result in engine damage.

9. Replace secondary air filters.
10. Push filters firmly back to properly seat in filter housing.
11. Install primary filters into filter housing slots (H).
12. Install air filter cover and fasten cover clips.

JL41210,00009CB-19-24JUL19

Fuel Tank Vent Filters

1. Clean off dirt and debris before removing vent filters.

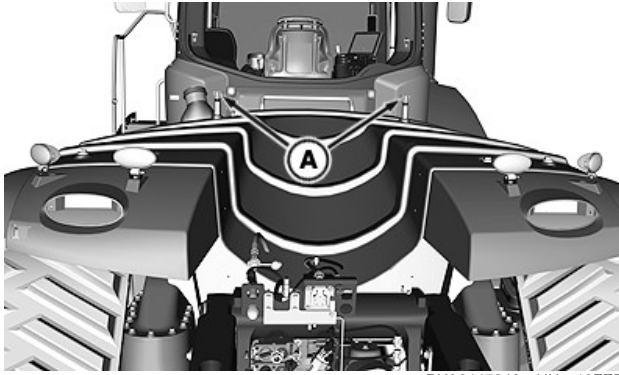


RXA0147249—UN—13FEB15

2. Remove left-hand and right-hand fuel tank vent filters (A).
3. Replace with new tank vent filters.


SV81855,000036F-19-26JUL17

SCV Pilot Valve Filter

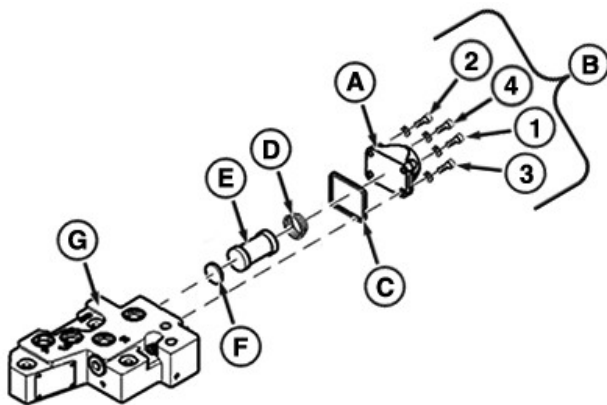

RXA0152694—UN—11JUL16

1. Remove cap screws (B).

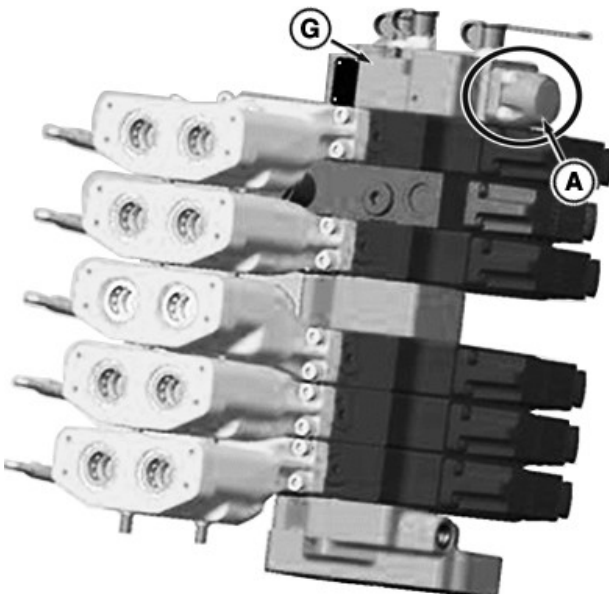

RXA0152693—UN—11JUL16

2. Remove SCV pilot filter cover (A) from SCV pilot filter housing (G).
3. Remove old spring (D), SCV pilot filter (E), and O-ring (F).
4. Install new O-ring, SCV pilot filter, and spring.
5. Replace gasket (C) and SCV pilot filter cover.
6. Install cap screws and tighten to 6 N·m (53 lb·in) in sequence (1, 4, 3, 2).

TS36762,0000157-19-08NOV17

Diesel Exhaust Fluid (DEF) Tank Vent Filter

CAUTION: Avoid possible personal injury. In case of DEF contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information. Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: Avoid corrosion of vehicle parts or surfaces. If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components. Spilled DEF, if left to dry or if only wiped away with a cloth, will leave a white residue. Improperly cleaned DEF spill may interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

Replace the DEF tank vent filter every 1500 hours of operation.



RXA0142031—UN—03JUN14

The DEF tank vent filter (C) is in the battery compartment, above the DEF dosing unit.

1. Open the battery compartment door. See Access

Battery Compartment in the Service—General Information section of this Operator's Manual.


2. Remove and replace the DEF tank vent filter.

AK08008,000019D-19-21APR21

Access Diesel Exhaust Fluid (DEF) In-Line Filter

IMPORTANT: Avoid damage to the emissions system:

- Replace the in-line DEF filter every 3000 hours or every 3 years, whichever occurs first.
- Do not begin service on the DEF in-line filter until the light on the battery disconnect switch has gone out. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.

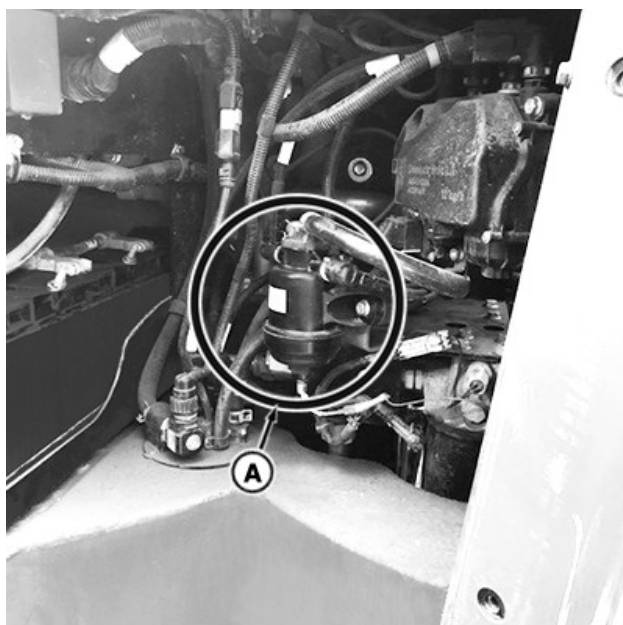

RXA0163952—UN—24JUL18

The DEF in-line filter (A) is inside the battery compartment.

1. Open the battery compartment door. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.
2. To replace the DEF in-line filter, see Change Diesel Exhaust Fluid (DEF) In-Line Filter in this section of the Operator's Manual.

AK08008,00007DE-19-21APR21


Change Diesel Exhaust Fluid (DEF) In-Line Filter

⚠ CAUTION: Avoid possible personal injury. In case of DEF contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information. Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: Avoid corrosion of vehicle parts or surfaces. If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components. Spilled DEF, if left to dry or if only wiped away with a cloth, will leave a white residue. Improperly cleaned DEF spill may interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

NOTE: See your John Deere equipment technical manual or OEM manufacturer's technical manual for in-line DEF filter location.

IMPORTANT: Avoid system and filter damage. Ensure that DEF system is not frozen before changing filter. If system is frozen, operate engine until system has thawed completely.

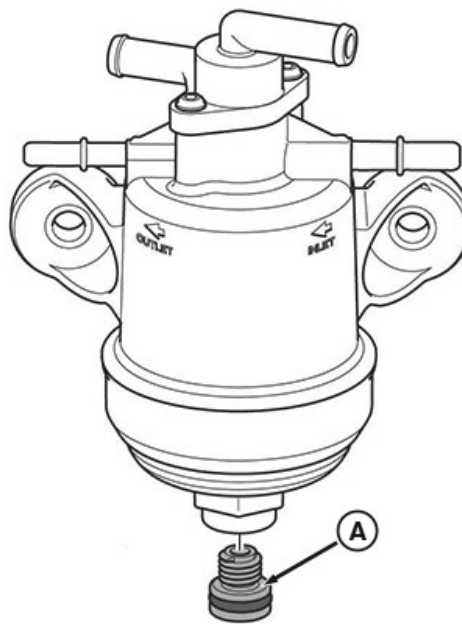

RG30728—UN—08AUG18


DEF Fluid Removal

A—Drain Plug with O-Ring

1. Remove drain plug with O-ring (A) and discard.

NOTE: Container must be DEF compatible and hold at least 300 mL (0.32 qt).

2. Drain DEF into a proper container.

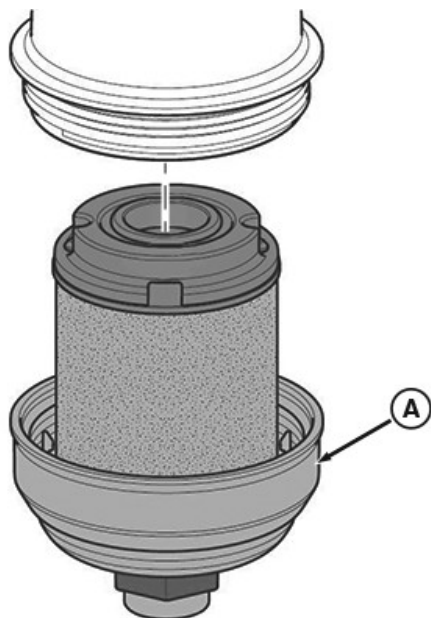


Filter Removal

RG30727—UN—08AUG18

A—Filter Housing

3. Rotate filter housing (A) counterclockwise and pull down.
4. Remove and discard filter from housing (A).

NOTE: If necessary, tap filter to loosen from filter housing (A).

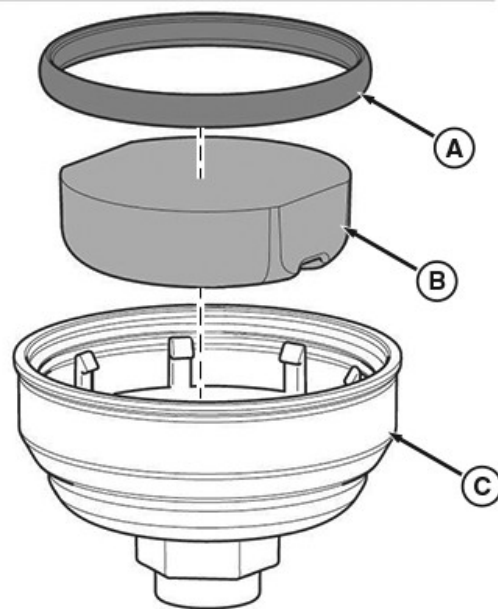

Filter Housing Components


RG30726—UN—08AUG18

- A—O-Ring**
B—Foam Compensation Element
C—Filter Housing

5. Remove and discard O-ring (A) and foam compensation element (B).

NOTE: Filter housing should be cleaned with clean DEF before installing new components to remove any sediment debris or contamination.

6. Install new O-ring (A) and foam compensation element (B) into filter housing (C).

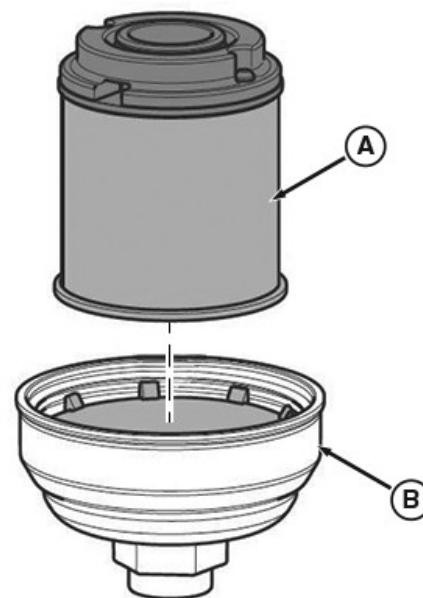


Filter Housing and Components Installation

RG30725—UN—08AUG18

A—Filter
B—Filter Housing

7. Install new filter (A) into filter housing (B).

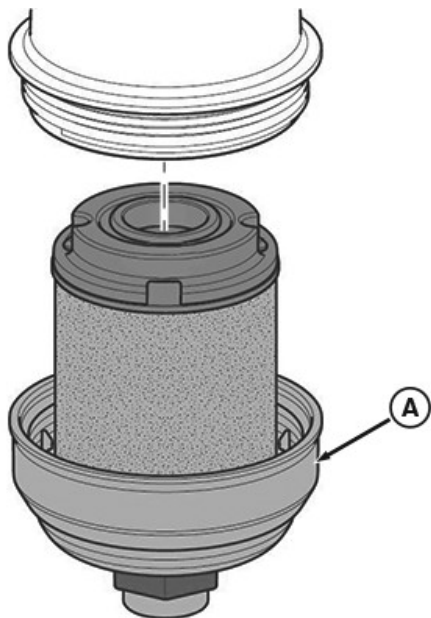


RG30727—UN—08AUG18
In-Line DEF Filter Housing Installation

A—Filter Housing

8. Install filter housing (A) with O-ring, foam compensation element, and filter element.
9. Rotate filter housing (A) clockwise and tighten to specification.

Specification

In-Line DEF Filter
Housing—Torque. 25 N·m
(221 lb·in)

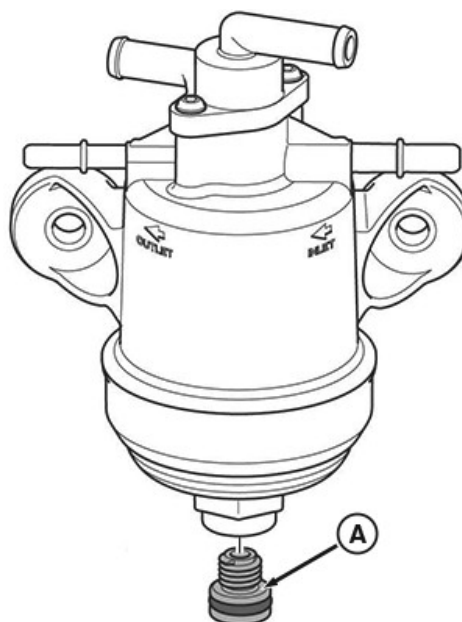

RG30728—UN—08AUG18
In-Line DEF Filter Drain Plug

A—Drain Plug with O-Ring

10. Install new drain plug with O-ring (A). Tighten to specification.

Specification


In-Line DEF Filter Drain
Plug—Torque. 4 N·m
(35 lb·in)

DX,DEF,CHANGE,INLINE,FILT-19-15APR20

Access Diesel Exhaust Fluid (DEF) Dosing Unit Filter

IMPORTANT: Avoid damage to the emissions system:

- Replace the DEF dosing unit filter every 1500 hours or every 3 years, whichever occurs first.
- Do not begin service on the DEF dosing unit filter until the light on the battery disconnect switch has gone out. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.

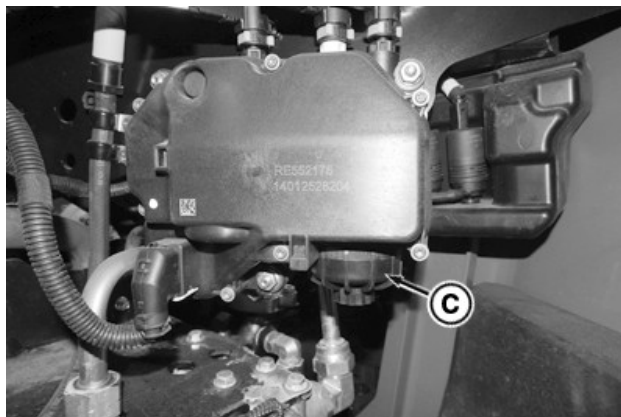


RXA0161214—UN—26OCT17
The DEF dosing unit filter (C) is in the battery compartment, at the bottom of the DEF dosing unit.

1. Open the battery compartment door. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.
2. To replace the DEF dosing unit filter, see Change Diesel Exhaust Fluid (DEF) Dosing Unit Filter in this section of the Operator's Manual.

AK08008,00007E2-19-21APR21

Change Diesel Exhaust Fluid (DEF) Dosing Unit Filter

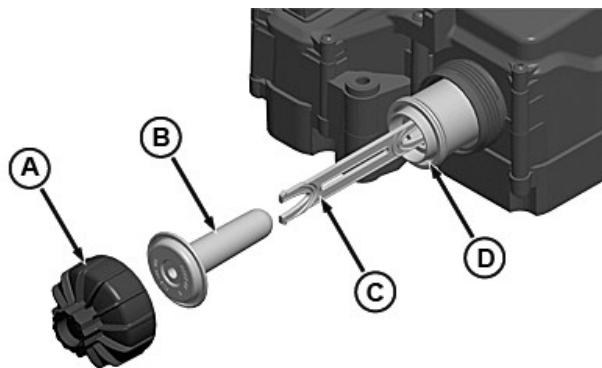

RG22534—UN—21MAR13
DEF Dosing Unit Filter

- A—DEF Dosing Unit Filter Cover
B—DEF Dosing Unit Filter Equalizing Element
C—DEF Dosing Unit Filter Tool (supplied with new filter)
D—DEF Dosing Unit Filter

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

NOTE: See your John Deere equipment technical manual or OEM manufacturer's technical manual for DEF dosing unit filter location.

IMPORTANT: Avoid system and filter damage. Ensure that DEF system is not frozen before changing filter. If system is frozen, operate engine until system has thawed completely.

1. Remove DEF dosing unit filter cover (A).
2. Remove and discard DEF dosing unit filter equalizing element (B).

NOTE: DEF dosing unit filter tool (C) is supplied with replacement filter.

3. Insert "Black" end of DEF dosing unit filter tool (C) into DEF dosing unit filter (D) until CLICK is felt or heard indicating DEF dosing unit filter tool is fully engaged.

NOTE: A tool such as a screwdriver can be inserted into DEF dosing unit filter tool slot to assist removal.

4. Pull DEF dosing unit filter tool and DEF dosing unit filter from DEF dosing unit. Discard DEF dosing unit filter and DEF dosing unit filter tool.
5. Clean DEF dosing unit threads and mating surfaces with distilled water.
6. Lubricate DEF filter O-rings with clean DEF. Carefully insert DEF dosing unit filter into DEF dosing unit.
7. Install new DEF dosing unit filter equalizing element into DEF dosing unit filter.
8. Install DEF dosing unit filter cover and tighten to specification.

Specification

DEF Dosing Unit Filter	
Cover—Torque.	23 N·m (204 lb·in)

DX,DEF,CHANGE,FILT-19-31OCT19


Hydraulic System Oil and Filters

IMPORTANT: Prevent premature axle failure.
Carefully follow drain and fill procedure.

NOTE: Recalibrate transmission only if transmission shift characteristics change after transmission oil and filter change, see *Transmission Calibration* in *Service—General Information* section of this *Operator's Manual*.


Maximum transmission/hydraulic oil reservoir/axles volume is 265.5 L (71.0 gal), depending on option configuration. Select appropriately sized containers for draining oil.

1. Park tractor on level ground, place transmission in PARK and shut off engine. Allow oil to cool for few minutes.

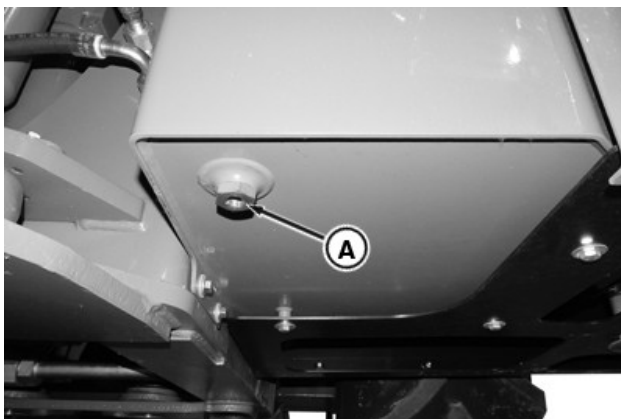


RXA0141856—UN—02JUN14

2. Remove hydraulic reservoir drain plug (A) in gudgeon area and direct oil into a catch oil container.

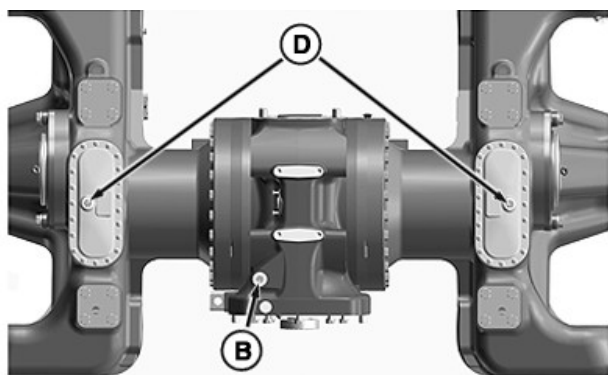


RXA0150421—UN—11NOV15

3. Remove axle plug (B) to drain oil.

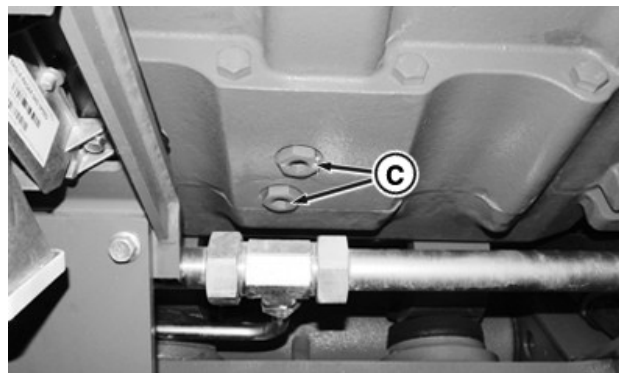

RXA0142109—UN—06JUN14


4. Remove two transmission plugs (C) to drain oil.
5. Remove final drive drain plugs (D) to drain oil

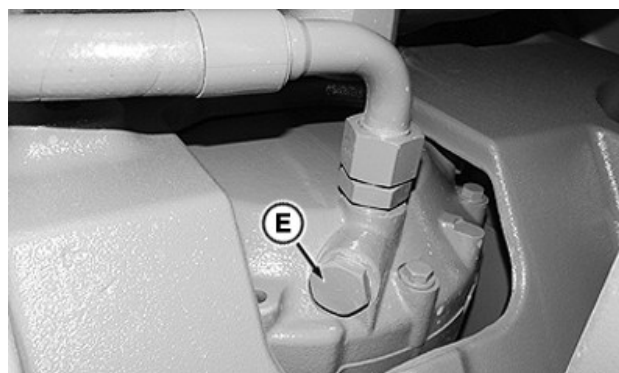

RXA0161062—UN—16OCT17

6. If PTO equipped, remove dropbox plug (E).
7. Reinstall reservoir drain plug.
8. Reinstall transmission drain plug and tighten to 70 N·m (52 lb·ft).
9. Reinstall all removed front and rear axle drain plugs. Tighten to 70 N·m (52 lb·ft).
10. If equipped, reinstall PTO dropbox drain plug and tighten to 70 N·m (52 lb·ft).


NOTE: Some parts in illustration have been removed to better show transmission suction screen.

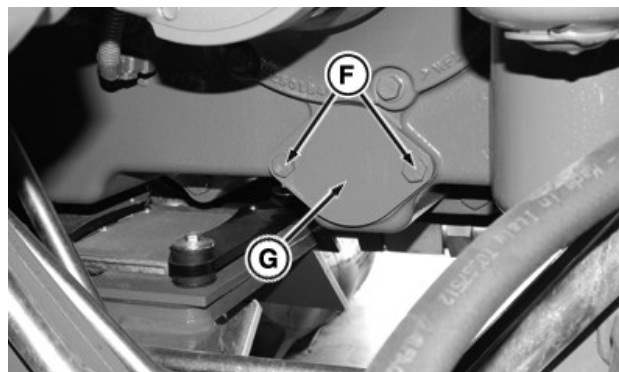

RXA0161063—UN—16OCT17


Transmission-Rear View

11. Remove suction screen cover cap screws (F) and remove cover (G) from rear of transmission.

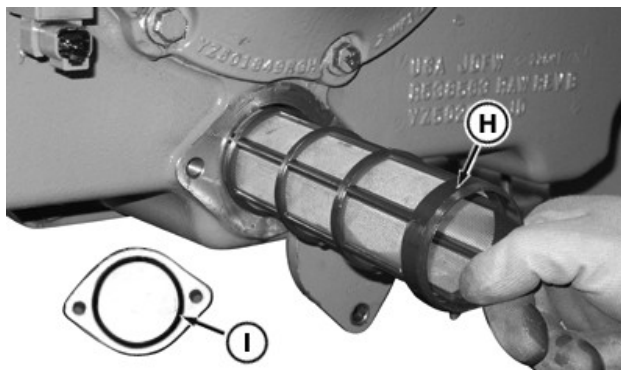


RXA0161064—UN—16OCT17

12. Remove suction screen (H) and clean with a solvent.
13. Remove and discard O-ring (I) on suction screen cover.
14. Inspect for debris in suction screen cavity using a flashlight or magnet.
15. Install new O-ring on cover.
16. Reinstall suction screen and cover. Tighten cap screws to 55 N·m (40 lb·ft).

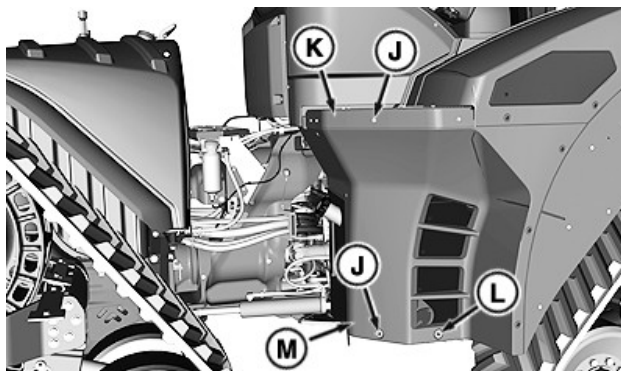


RXA0161268—UN—03NOV17

17. Remove platform cap screws (J) and remove platform step (K).
18. Remove panel cap screws (L) and remove lower shield panel (M).

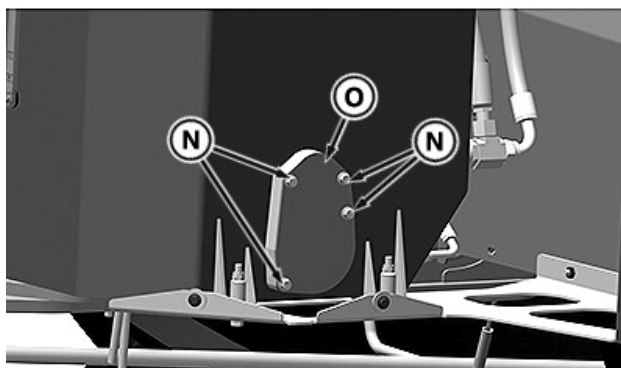

RXA0185158—UN—26AUG21

19. Remove screen cover cap screws (N) and both screen covers (O).

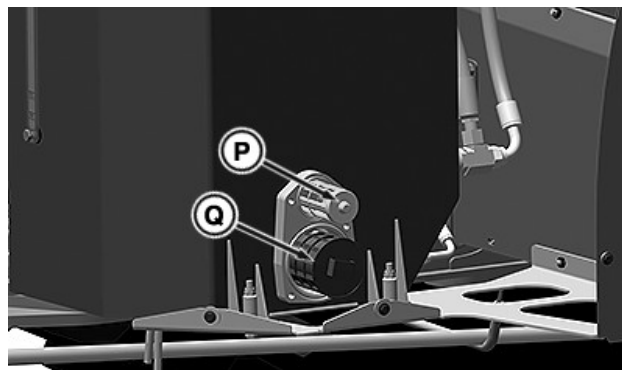

RXA0185159—UN—26AUG21

20. Remove axle lube suction screen (P) and clean with a solvent.
21. Remove charge pump suction screen (Q) and clean with a solvent.
22. Reinstall suction screens and covers. Tighten cap screws to 79 N·m (58 lb·ft).
23. Reinstall lower panel and tighten cap screws to 37 N·m (27 lb·ft).
24. Reinstall platform and tighten cap screws to 73 N·m (54 lb·ft).


NOTE: Approximately 1.9 L (2 qts) of oil is lost when changing filter. Size drain pan accordingly.



RXA0161068—UN—16OCT17

25. Remove transmission oil filters (R), at right-hand rear of transmission.
26. Lubricate new filter O-rings with hydraulic oil and install filters. Tighten one-half turn after O-rings contact filter housing base.

IMPORTANT: Replace hydraulic oil or axle oil filters every 1500 hours or when indicator illuminates.

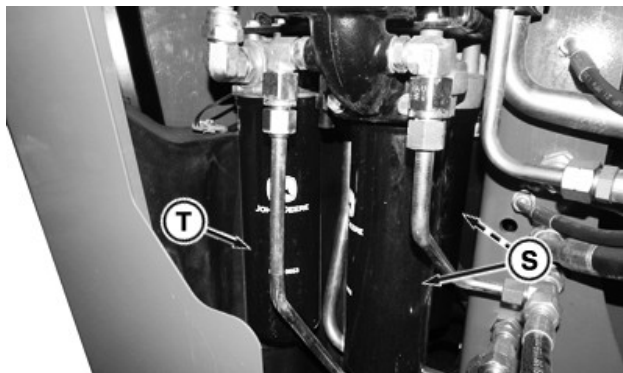

RXA0161070—UN—16OCT17


27. Remove hydraulic oil filters (S), on left-hand side of gudgeon.
28. Replace axle oil filter (T), located next to hydraulic oil filters (S).
29. Lubricate hydraulic oil and axle oil filter O-rings with hydraulic oil and install on tractor. Tighten one half turn after O-ring contacts filter housing base.

NOTE: Hydraulic oil reservoir does not hold all system hydraulic oil. Transmission and front and rear axles also hold additional system oil.

If possible, check oil level prior to first start of day. Ambient temperature should be 7°C. (45°F) or above. Oil level in the reservoir fluctuates depending upon the volume of oil exchanged with an attached implement.

For applications or implements requiring high volumes of oil transfer (for example - large air seeders or pulling three scrapers), hydraulic reservoir can be filled up to High Volume Takeout Oil Mark 58.5 L (15.4 gal) above MIN COLD.


NOTE: For Transmission-Hydraulic Oil System Capacities (with Filters), see Capacities in Specifications section of this Operator's Manual.

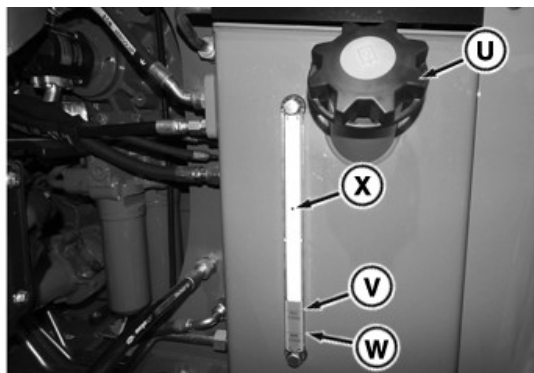

RXA0161071—UN—16OCT17

30. Remove hydraulic oil reservoir fill cap (U) and add hydraulic oil to the reservoir.
31. Reinstall and tighten hydraulic reservoir fill cap.

IMPORTANT: Fill transmission with prescribed quantity of oil to ensure lubrication of transmission lube pump at startup.

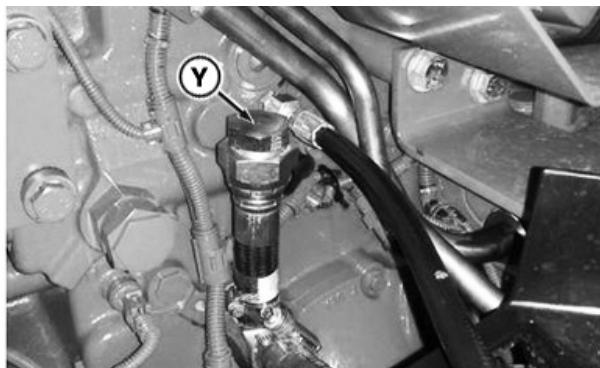

RXA0161072—UN—16OCT17

32. Prefill transmission with 37.9 L (10.0 gal) of transmission-hydraulic oil at fill tube (Y). See Transmission and Hydraulic Oil in Other Lubricants section of this Operator's Manual.

IMPORTANT: Do not depress brake pedal during this step. If brake pedal is depressed, additional oil flows to axles and result in an inaccurate oil level check.

33. Place transmission in PARK.
 - a. Start Engine
 - b. Run engine at 1200 rpm for 5 minutes.
34. Shut engine OFF and wait 5 minutes for oil level to stabilize.

NOTE: Confirm that oil level does not fall too low if tractor is to be used with implements with large hydraulic cylinders that remove large volumes of oil from the hydraulic system. Place implement in position that requires maximum amount of oil. Oil level should be near High Volume Takeout Oil Mark position on sight gauge.

35. Check to ensure transmission-hydraulic reservoir oil level is visible between Min Cold and Full Cold marks in the sight gauge. If oil level is visible between Min Cold and Full Cold, tractor can be used for normal operation. Oil level in reservoir rises as temperature increases. Replace the transmission-hydraulic oil reservoir vent filter, see Transmission-Hydraulic Vent Filter in this Operator's Manual section.

NOTE: Volume capacity between Min Cold mark and Full Cold mark is 11.4 L (3 gal).


36. If oil level is below Min Cold is sight gauge, add oil through reservoir cap.

IMPORTANT: Excess hydraulic oil can result in decreased engine power and decrease fuel economy.

37. If oil level is above Full Cold mark, remove enough oil to bring it down to Full Cold mark level.


Remove drain plug under hydraulic oil reservoir and direct oil into a container.

Transmission-Hydraulic Vent Filter

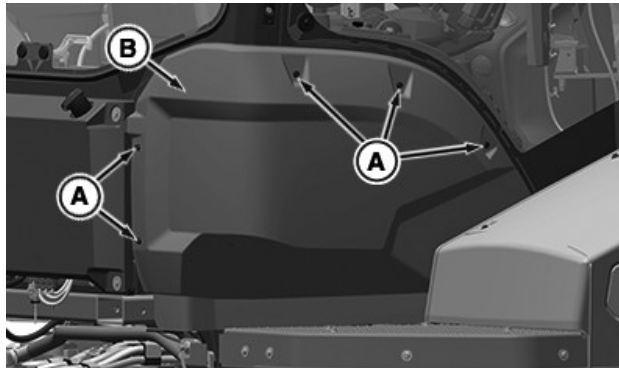

RXA0185252—UN—30AUG21

1. Remove right-hand rear cab panel retaining cap screws (A) and remove cab panel (B).

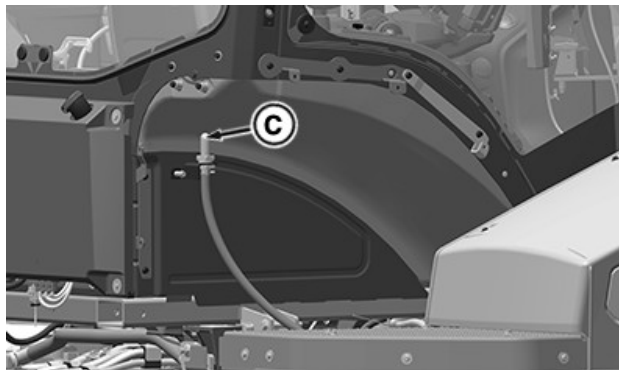

RXA0185253—UN—30AUG21

2. Release retaining hose clamps to remove vent filter (C) from hose.
3. Install new filter onto hose and secure with retaining hose clamps.


IMPORTANT: Do not over tighten retaining screws. Overtightening may result in damage to cab panels.

4. Reinstall cab panel and tighten retaining cap screws.

SV81855,0000370-19-07SEP21

Engine Cooling System Radiator Cap—15 L Engine

1. Raise hood.

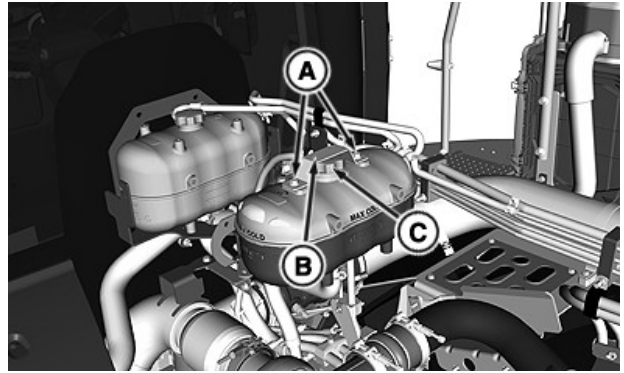

RXA0143144—UN—02JUL14

2. Remove cap screws (A) and bracket (B) from over cap.
3. Remove radiator pressure cap (C)
4. Replace with new radiator pressure cap.
5. Reinstall bracket and tighten cap screws to 20 N·m (15 lb·ft).
6. Close hood.

SV81855,00002C2-19-09NOV17

Engine Coolant—13.6 L Engine

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

IMPORTANT: READ ENTIRE PROCEDURE BEFORE BEGINNING. Special tools and other products are required to complete the procedure.

Replace the thermostat, thermostat gasket, and de-aeration tank cap whenever the system is flushed.

See your John Deere dealer for recommendations on cleaning solutions.

INITIAL change interval is 6 years or 6000 operating hours, provided cooling system is topped off using only John Deere Cool-Gard™ II and premix. SCHEDULED interval (2 years or 2000 operating hours) can be extended up to 6 years and 6000 operating hours, depending upon coolant being used. See Drain Intervals for Diesel Engine Coolant in Engine Coolant section of this Operator's Manual.

NOTE: When service is performed on cooling system, make sure to check coolant daily for the next three days of operation. The most effective way to check coolant level is when tractor engine is cool. If coolant is low, fill de-aeration tank to mark on tank.


1. Park the tractor.
2. Turn the key switch to OFF.
3. Allow the radiator to cool.
4. Open the hood. See Open Hood in the Service—General Information section of this Operator's Manual.
5. Remove the front and rear engine side shields. See Remove Front Engine Side Shield and Remove Rear Engine Side Shield in Service—General Information section of this Operator's Manual.

NOTE: To ensure that the fluids in the heating and air conditioning system are drained, maintain these settings throughout the entire procedure:

- Key switch in the RUN position.
 - Temperature control set to the hottest setting.
6. Turn the key switch to RUN. See Key Switch in the Front Console section of this Operator's Manual.
 7. Adjust the temperature control to the hottest setting. See CommandARM™ Climate, Radio, and Lighting Controls in the CommandARM™ Controls section of this Operator's Manual.
 8. Remove the de-aeration tank cap.


CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

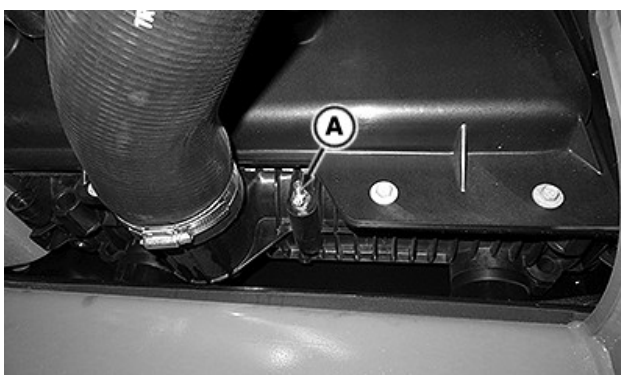


RXA0184960—UN—10AUG21

9. Place catch pan under radiator drain valve (A).
10. Open radiator drain valve and drain coolant into catch pan.
11. Place catch pan under engine drain valve.

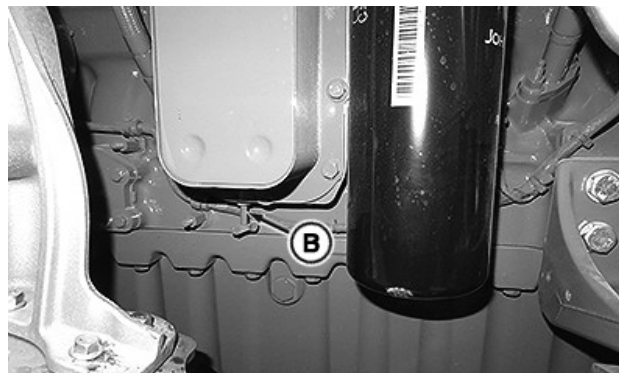


RXA0184961—UN—10AUG21

12. Open engine drain valve (B) and drain coolant into catch pan.
13. Allow radiator and engine to drain.

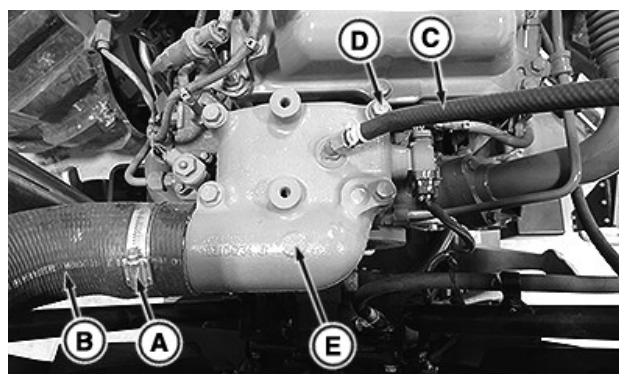


RXA0184962—UN—10AUG21

14. Remove clamp (A), radiator hose (B), and coolant return hose (C).
15. Remove cap screws (D) and thermostat housing (E).

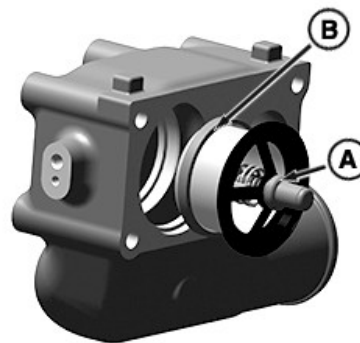

RXA0184963—UN—10AUG21

16. Remove thermostat (A) and seal (B).
17. Install new thermostat and seal.

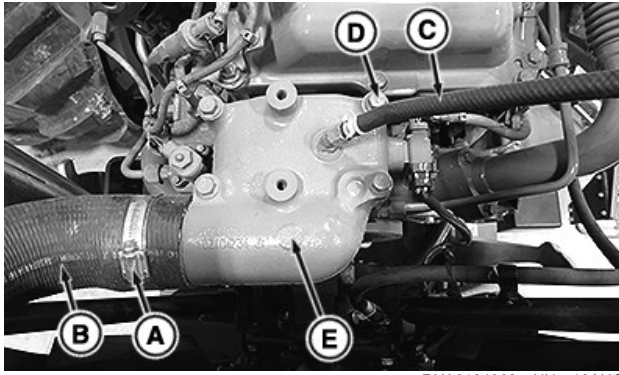

RXA0184962—UN—10AUG21

18. Install thermostat housing (E), cap screws (D). Tighten cap screws to 50 N·m (39 lb·ft)
19. Install coolant return hose (C), radiator hose (B), and clamp (A).
20. Close engine drain valve, and radiator drain valve.
21. Dispose of old coolant in accordance with local laws and ordinances.

IMPORTANT: Never pour cold water or coolant into hot engine.

NOTE: See your John Deere dealer for recommendations on cleaning solutions.

22. Fill high pressure coolant system at de-aeration tank with cooling system cleaning solution.
23. Install de-aeration cap and close hood.

CAUTION: Make sure hood is closed before starting engine.

24. Start engine and run at a minimum of 1500 rpm for 15 minutes.
25. Shut off engine and allow cleaning solution to cool.
26. Make sure that temperature control is turned to hottest setting, then turn key switch to Run position.

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

27. Open hood, remove de-aeration cap, put drain pans in place, then open radiator and engine drain valves.
28. Allow cooling system to completely drain.
29. Close engine drain valve, and radiator drain valve.
30. Dispose of cleaning solution in accordance with local laws and ordinances.

31. Fill high pressure coolant system at de-aeration tank with clean water.

IMPORTANT: Never pour cold water or coolant into hot engine.

32. Install de-aeration cap and close hood.

CAUTION: Make sure hood is closed before starting engine.

33. Start engine and run at a minimum of 1500 rpm for 15 minutes.
34. Shut off engine and allow water to cool.
35. Make sure that temperature control is turned to hottest setting, then turn key switch to Run position.

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Only remove cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

36. Open hood, remove de-aeration cap, put drain pans in place, then open radiator and engine drain valves.
37. Allow radiator to drain.
38. Close engine drain valve and radiator drain valve.
39. Dispose of drain clean water in accordance with local laws and ordinances.
40. Fill high pressure coolant system at de-aeration tank with new coolant solution. For cooling system capacity, see Capacities in Specifications section of this Operator's Manual.

CAUTION: Make sure hood is closed before starting engine.

IMPORTANT: Never pour cold water or coolant into hot engine.

NOTE: Coolant may seep out of the de-aeration tank overflow vent as air is purged from the coolant system.

Level may change when tractor is running or during the next few cycles.

It is highly recommended the cooling system is checked for leaks after draining, flushing and refilling to ensure tractor performance. Consult your John Deere Dealer for procedure and appropriate tools.

41. Install de-aeration cap, Install engine side shields,

close hood, start engine, and run for a minimum of 1500 rpm for 15 minutes.

SV81855,0000341-19-31AUG21

6. Reinstall finger guard and tighten cap screw to 73 N·m (54 lb·ft).

7. Close hood.

RW29387,00000D5-19-09NOV17

Engine Coolant—15 L Engine

See your John Deere dealer.

SV81855,000029C-19-23FEB17

Front Drive Shaft U-Joints

See your John Deere dealer.

KD34109,0000312-19-28MAR17


Engine Crankshaft Damper—13.6 L Engine

See your John Deere dealer.

RW29387,00001BC-19-01SEP20

Engine Crankcase Breather Filter Element—15 L Engine


1. Open hood.

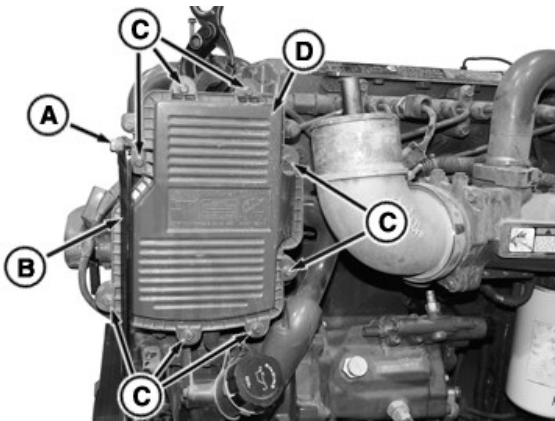

RXA0142546—UN—16JUN14

2. Remove cap screw (A) and finger guard (B).

3. Remove eight cap screws (C) and cover (D).

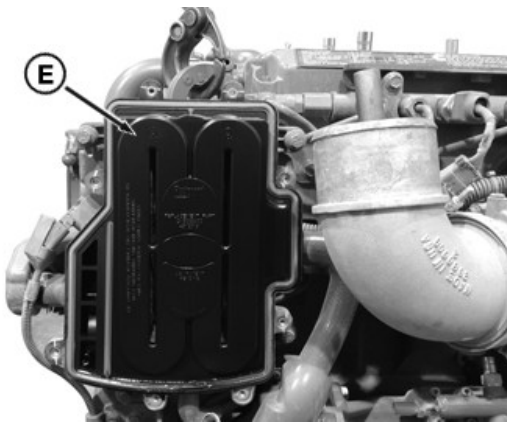

RXA0142547—UN—17JUN14


4. Replace and install new filter (E).

5. Replace cover and tighten cap screws to 5 N·m (45 lb·in).

Service—Lubricate

Heavy Duty Lift Link Pins (Optional)

IMPORTANT: Prevent damage to hitch pins. Grease daily when hitch is in use.

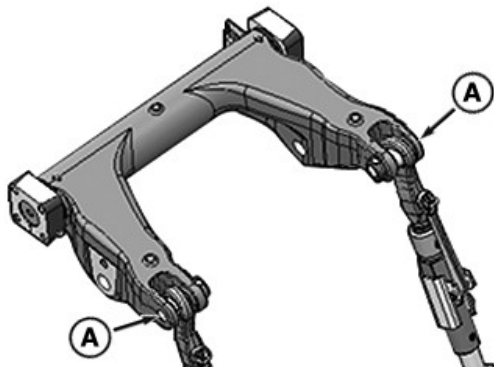

RXA0158577—UN—29MAR17

Lubricate hitch lift link pins (A). Use John Deere SD Polyurea grease or equivalent. See Grease in Other Lubricants section of this Operator's Manual.

RX32825,0000638-19-13JUL17

specified in Fuel, Lubricants and Coolant section of this Operator's Manual.

TS36762,0000352-19-30AUG21

Steering Pins


CAUTION: Place tractor in PARK and remove key before working in hinge area.




RXA0141971—UN—02JUN14

Hinge Pins


CAUTION: Place tractor in PARK and remove key before working in hinge area.

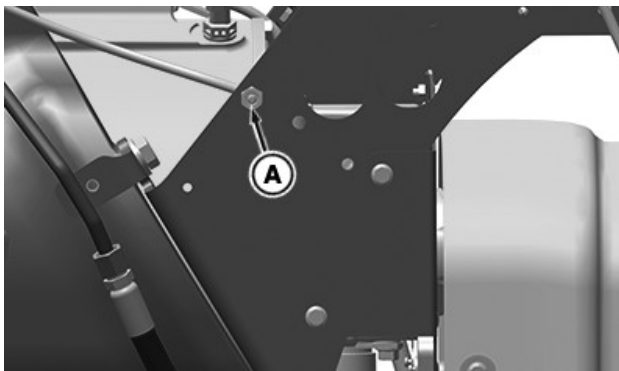

RXA0162410—UN—06MAR18

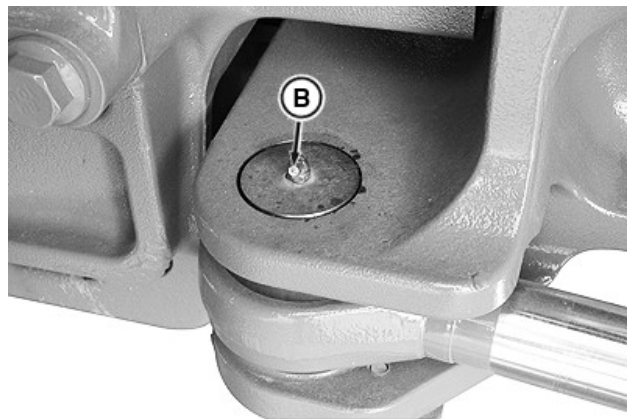

RXA0141972—UN—02JUN14

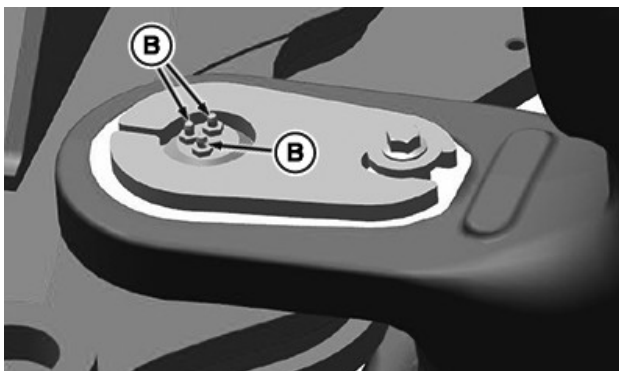


RXA0185249—UN—30AUG21

Lubricate upper (A) and lower hinge pins (B).

Use John Deere SD Polyurea grease or other grease as



RXA0141973—UN—02JUN14

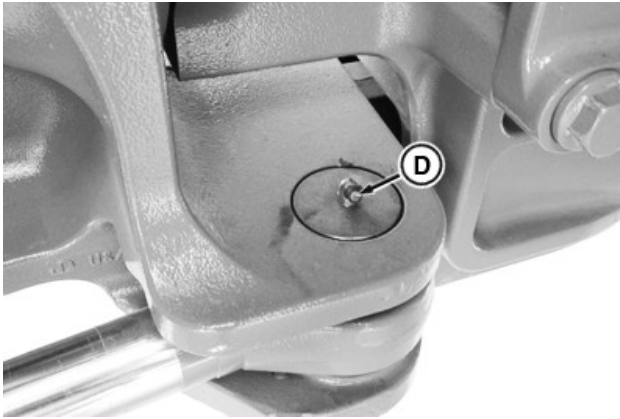


RXA0141974—UN—02JUN14

Lubricate right-hand front (A) and rear (B), left-hand front (C) and rear (D) steering pin bushings.

Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.

RX32825,000063A-19-13JUL17

PTO Drive Shaft

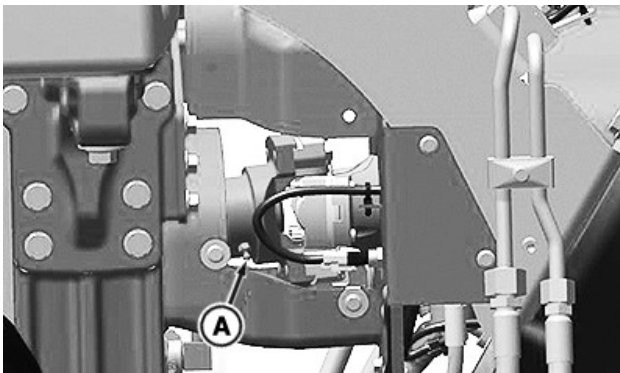


RXA0185281—UN—31AUG21

Lubricate rear PTO shaft fitting (A). Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.

RX32825,0000640-19-31AUG21

Track Tension Cylinder

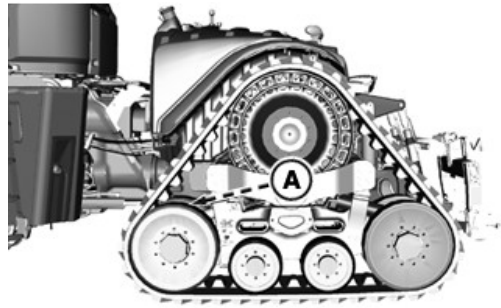

RXA0147245—UN—11FEB15

Tension Cylinder Fittings



RXA0147246—UN—13FEB15

Lower Tension Cylinder Fitting

Apply several shots of grease to tension cylinder grease fittings (A) at each end of cylinder.


Use John Deere HD Grease. See Grease in Other Lubricants section of this Operator's Manual.

SV81855,0000368-19-26JUL17


Heavy-Duty Gudgeon Bearings

IMPORTANT: Over-lubrication of bearings may result in damage to bearings, seals, and drive shaft.

Use only hand pump grease gun. other grease gun types fill grease cavity too quickly and displace bearing seal. Grease then may bypass bearing, leaving it improperly lubricated.

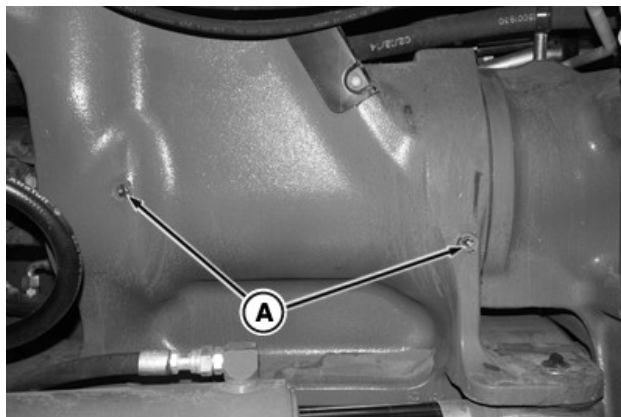

RXA0142539—UN—16JUN14

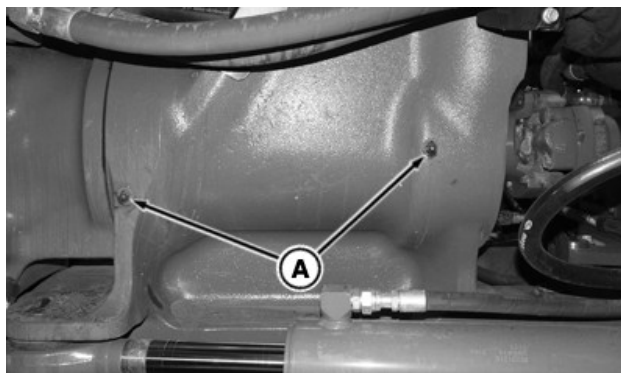


RXA0142540—UN—16JUN14


Lubricate heavy-duty gudgeon tapered roller bearing fittings (A) on both left-hand and right-hand side and on top of gudgeon. Give each fitting approximately 40 pumps of grease.

Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.

RX32825,0000641-19-13JUL17

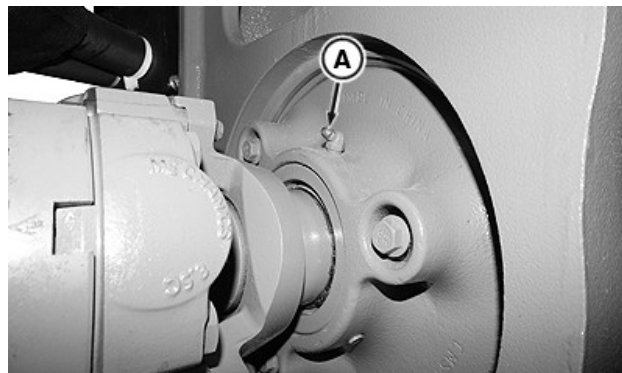

RXA0141923—UN—02JUN14

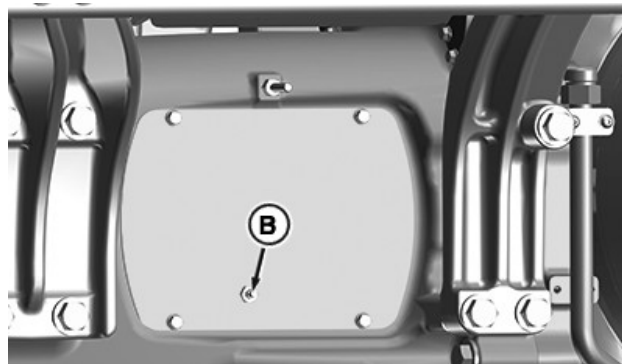

RXA0161215—UN—26OCT17

Lubricate front (A) and rear (B, if equipped) lower drive line bearing lubrication fittings.

Use John Deere SD Polyurea grease or other grease as specified in Grease in Other Lubricants section of this Operator's Manual.

RX32825,0000642-19-16FEB18

Lower Drive Line Bearings


IMPORTANT: Normal lubrication is every 250 operating hours. If used in extremely wet conditions, lubricate daily or every 10 operating hours.

IMPORTANT: Avoid drivetrain damage. Operate tractor at low speeds (below 10 mph (16 km/h)) for first 6 hours.


IMPORTANT: Use only hand pump grease gun. Other types of grease guns fill the grease cavity at greater speed. This can push retention seal out of position, allowing grease to enter gudgeon center cavity and leaving bearing improperly lubricated.

Rear Hitch

IMPORTANT: Normal service is every 250 hours. If used daily, service every 50 hours.

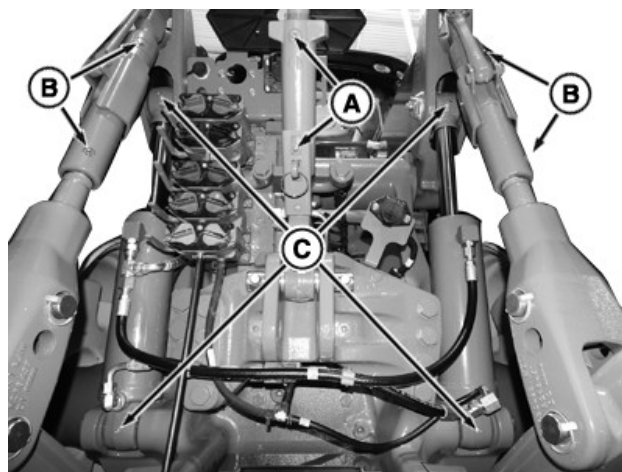

RXA0150422—UN—11NOV15

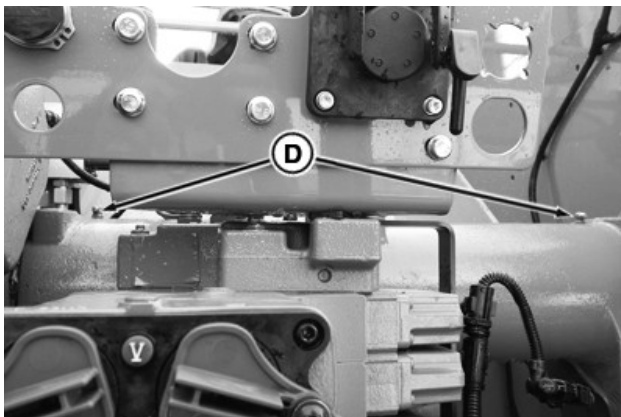

RXA0150423—UN—11NOV15

Lubricate center link (A), lift link (B), lift cylinders (C), and rockshaft (D) hitch fittings.


Use John Deere SD Polyurea grease or equivalent. See Grease in Other Lubricants section of this Operator's Manual.

RX32825,0000643-19-08NOV17


rockshaft fittings. See Grease in Other Lubricants section of this Operator's Manual for correct grease to use.

TO84419,0000199-19-13JUL17

Lift Cylinders and Rockshaft

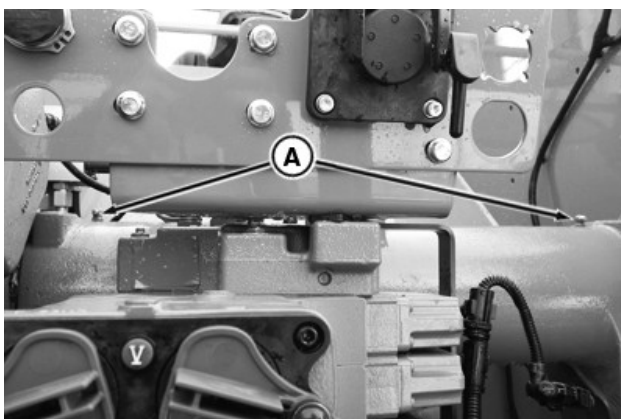

RXA0141976—UN—02JUN14

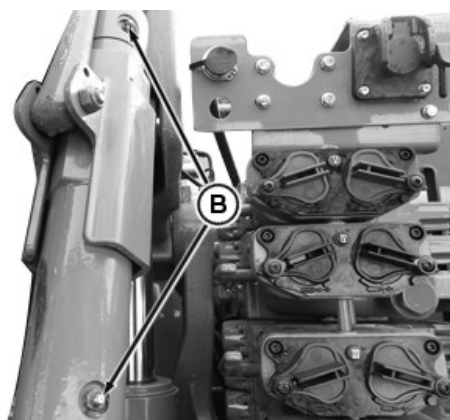

RXA0141977—UN—20JUN14

Rockshaft Assembly

Lubricate lift cylinder pin fittings (B) on both sides of tractor. Lubricate left-hand (A) and right-hand side

Service—Electrical

Service—Electrical Overview

In addition to fuses and relays mounted in fuse panels (behind operator's seat), tractors are also equipped with solid state load centers located in two electronic control units.

These solid-state load centers replace fused relay circuits previously used. Their primary function is to control the majority of high current loads such as rear fender lights and horn. Load center circuitry monitors loads and voltages providing fast reaction time and ability to alert operator if a circuit overloads or if voltage is out of specification, i.e. open circuit (undercurrent) or short circuit (over-current).

If circuit is faulty and a diagnostic trouble code is generated, circuit will stay OFF and diagnostic trouble code will remain active until circuit is recycled by operator. If circuit or one of its components is turned back ON and problem is no longer present, system will function normally.

As an example, if a light circuit is determined to have an over-current condition, load center system will shut the circuit off. If operator turns light switch off and back on, and system senses zero amps when light controlled by the switch is off, system will turn system back on and normal operation will turn back on.

If total current load of load center exceeds a preset level, software will automatically shut down system, turning off one circuit at a time. Logic circuit will wait a few seconds between circuit shutdowns to determine if total controller current has fallen below preset level, or if additional circuits should be turned off.

Solid state circuits are rated for a fixed value. If additional electrical devices need to be added to tractor, it is recommend to use a power strip or convenience outlets in conjunction with an off/on switch. Splicing into a wire in the wrong location could cause circuit to overload and shut circuit down.

If extra implement lights and controls, such as switches are needed, contact your John Deere dealer. A dealer can provide information on correct method to tie in a light switch with one of accessory wires located in 7 pin terminal on back of tractor.

TS36762,000015E-19-25MAR21

Welding Near Electronic Control Units



TS953—UN—15MAY90

IMPORTANT: Do not jump-start engines with arc welding equipment. Currents and voltages are too high and may cause permanent damage.

1. Disconnect the negative (-) battery cable(s).
2. Disconnect the positive (+) battery cable(s).
3. Connect the positive and negative cables together. Do not attach to vehicle frame.
4. Clear or move any wiring harness sections away from welding area.
5. Connect welder ground close to welding point and away from control units.
6. After welding, reverse Steps 1—5.

DX,WW,ECU02-19-14AUG09


Keep Electronic Control Unit Connectors Clean

IMPORTANT: Do not open control unit and do not clean with a high-pressure spray. Moisture, dirt, and other contaminants may cause permanent damage.

1. Keep terminals clean and free of foreign debris. Moisture, dirt, and other contaminants may cause the terminals to erode over time and not make a good electrical connection.
2. If a connector is not in use, put on the proper dust cap or an appropriate seal to protect it from foreign debris and moisture.
3. Control units are not repairable.
4. Since control units are the components LEAST likely to fail, isolate failure before replacing by completing a diagnostic procedure. (See your John Deere dealer.)
5. The wiring harness terminals and connectors for electronic control units are repairable.

DX,WW,ECU04-19-11JUN09

Compressed Air Use

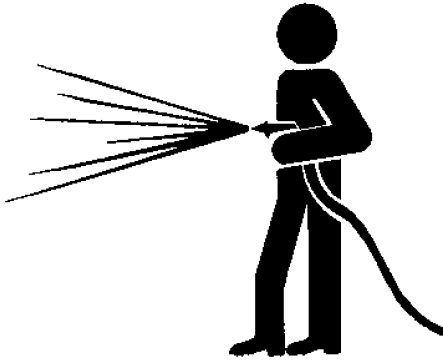


RW56455—UN—30JUN97

IMPORTANT: Directing pressurized air at electronic/electrical components or connectors, may cause buildup of static electricity and product malfunctions.

TO84419,0000228-19-25JUL17

High-Pressure Washer Use

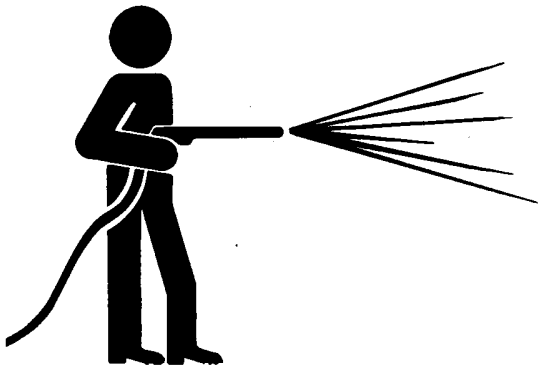

T6642EJ—UN—18OCT88

IMPORTANT: Directing pressurized water at electronic/electrical components or connectors, bearings and hydraulic seals, fuel injection pumps, exhaust outlet or other sensitive parts and components may cause product malfunctions. Reduce pressure, and spray at a 45 to 90 degree angle. When washing do not direct any water towards the exhaust or any fill tank openings.

TO84419,0000215-19-20JAN17

Disconnect Battery

CAUTION: Avoid injury or damage to tractor systems from inadvertent contact with electrical power. Disconnect battery when directed.

IMPORTANT: Prevent damage to the tractor emissions system. Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.

TS36762,0000161-19-11FEB20

Service Batteries and Connections

CAUTION: It can cause a buildup of static charge leading to potential injury.

Battery gas can explode. Keep sparks and flames away from batteries. Use flashlight to check battery electrolyte level.

Never check the battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove battery ground cables before positive battery cables and connect them last. Do not let disconnected ground terminal touch metal surface.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

CAUTION: Avoid contact with poisonous sulfuric acid in battery electrolyte. Battery acid can burn skin, damage clothing, and cause blindness if splashed into eyes.

NOTE: Although this battery is a maintenance free battery, conditions such as long periods of operation at high ambient temperatures and excessive engine cranking may require adding water. See label on battery.

For optimum battery performance, keep battery terminals clean and tight. For replacement batteries, follow manufacturer's recommendations.


IMPORTANT: Prevent damage to tractor:

- Emissions system. Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See Battery Disconnect Switch in the Engine Operations section of this Operator's Manual.
- Electrical system. Ensure that the key switch is in the OFF position before servicing the batteries and connections.

1. Turn off the battery disconnect switch. See Battery


Disconnect Switch in the Engine Operation section of this Operator's Manual.

2. Open the battery compartment cover. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.

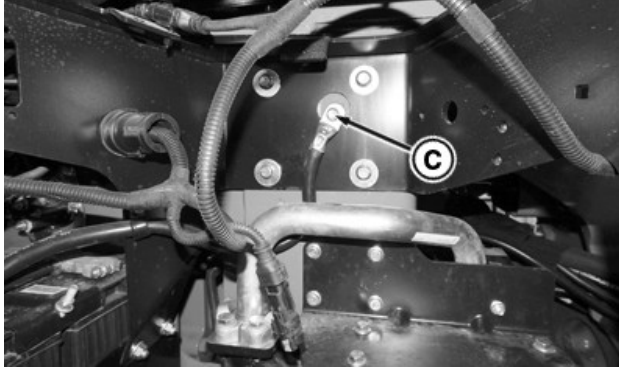

RXA0141966—UN—02JUN14

3. Disconnect the single point ground cable (C).

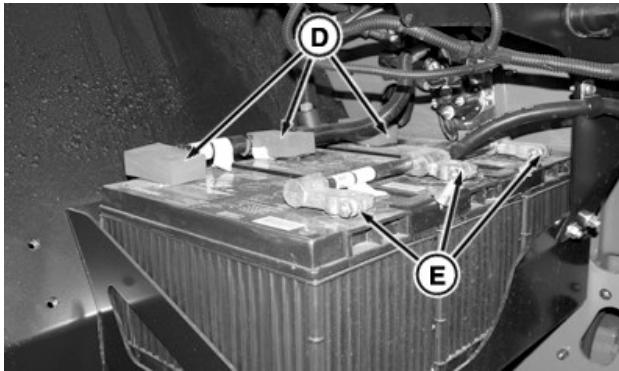

RXA0158217—UN—09MAR17

4. Disconnect negative battery cables (E), then positive battery cables (D).

IMPORTANT: Never use compressed air to clean batteries.

5. Remove any corrosion with a terminal brush, then clean terminals and battery posts using a baking soda and water solution.
6. Rinse the batteries with clean water and air dry.
7. If the batteries have been removed for service, slide batteries back into compartment.
8. Install the battery retaining clamp.
9. Connect the:
 - a. Positive battery cables.
 - b. Negative battery cables.

10. Apply a thin coating of grease to cable ends.
11. Connect the single point ground cable to the tractor frame.
12. Close the battery compartment cover. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.
13. Turn on the battery disconnect switch.


RX32825,0000018-19-21APR21

Load Center—Cab

IMPORTANT: Prevent damage to the tractor:

- **Emissions System. Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.**
- **Electrical system.**
 - Ensure that the key switch is in the OFF position before changing fuses.
 - Replacement fuse must be the same rating as the original fuse.

Access Cab Load Center

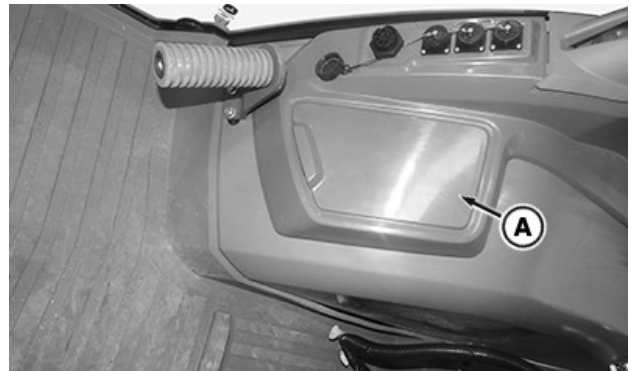


RXA0167377—UN—05APR19

The cab load center is behind the side panel (A) at lower right of the operator's seat.

Remove the side panel to access the cab load center.

Cab Load Center—Relay/Fuse Identification

K—Relay
F—Fuse

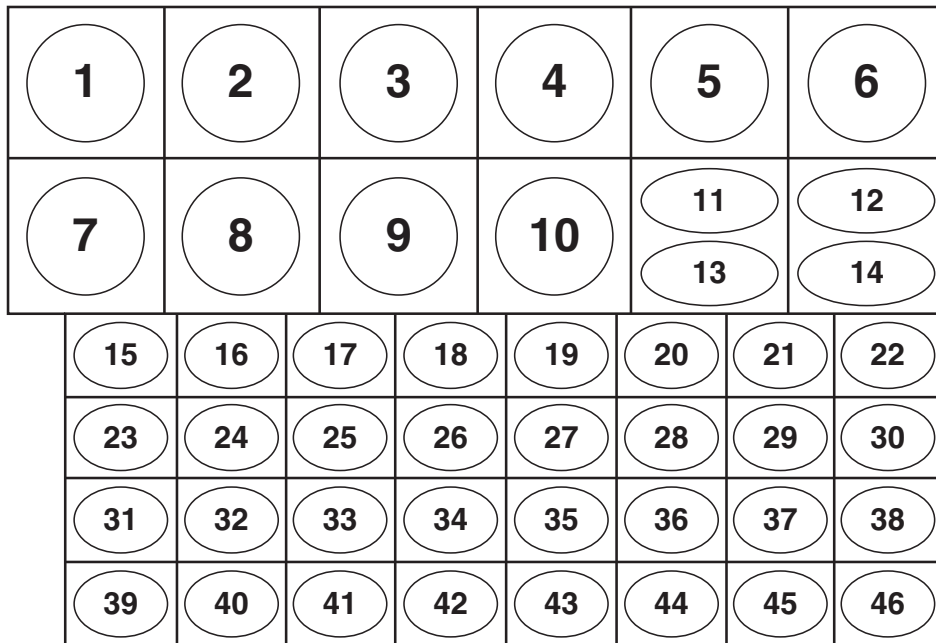

RXA0173765—UN—13JAN20

1—K2: Ignition
 2—K18: HVAC Blowers
 3—Not Used
 4—K4: Trailer Accessory Lighting
 5—K20: Seat
 6—K6: Accessory
 7—K9: 2-Track Suspension
 8—K8: Trailer Flood
 9—K9: Buzzer
 10—Not Used
 11—F35: Active Seat (If equipped) (40A)
 12—F40: DC-AC Inverter (40A)
 13—F33: Accessory (70A)
 14—F37: HVAC Blowers (40A)
 15—F15: Convenience, Lighter, and CB (30A)
 16—F01: Key/Switch Battery (05A)
 17—F02: Operator Presence Switch (10A)
 18—F03: Automatic Temperature Control (10A)
 19—F17: USB Power Armrest (05A)
 20—F20: Radio ACC Power (10A)
 21—F24: Cameras (10A)
 22—F23: CB, Refrigerator (30A)
 23—F05: Radio (10A)


24—F07: MTG JDLINK Controller, Ethernet Switch, and GPS Receiver (10A)
 25—F09: CommandCenter™ Server (10A)
 26—F10: Trailer Flood (30A)
 27—Spare (15A)
 28—F27: Convenience Outlets (30A)
 29—F31: Power Mirrors; Trailing Lights (If Equipped) (20A)
 30—F54: Auxiliary Outlets (30A)
 31—F11: Trailer Lighting (30A)
 32—F08: Armrest Controller (15A)
 33—F13: Steering Controller (15A)
 34—Spare (05A)
 35—F32: Come Home (10A)
 36—F19: Seat Suspension (20A)
 37—F41: Seat Top (20A)
 38—F42: Seat Top (30A)
 39—F18: Primary Display Unit (05A)
 40—F47: Cab Front Console Controller (15A)
 41—F16: 2-Track Suspension Motor (30A)
 42—Spare (10A)
 43—Come Home Use Only
 44—Come Home Use Only
 45—F49: Accessory (Low current), Subwoofer (20A)
 46—F46: USB Power C-Post (05A)

SV81855,0000349-19-21APR21

Load Center—Front

IMPORTANT: Prevent damage to the tractor:

- **Emissions system.** Never disconnect the battery disconnect switch while the light is illuminated. See **Battery Disconnect Switch** in **Engine Operation** section of this **Operator's Manual**.
- **Electrical system.**
 - Ensure that the key switch is in the **OFF** position before changing fuses.
 - Replacement fuse must be the same rating as the original fuse.

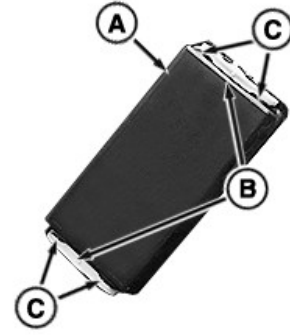


RXA0180445—UN—13NOV20

The front load center (A) is located above the batteries.

Access Front Load Center

1. Open the battery compartment. See **Access Battery Compartment** in **Service—General Information** section of this **Operator's Manual**.
2. To release the front load center cover and access the front load center:
 - a. Gently slide the yellow locking tabs (B) towards the load center cover front face.
 - b. Squeeze the four black tabs (C) inward towards the load center cover.
3. Replace the front load center cover when the service is complete.
4. Close the battery compartment.

Front Load Center—Relay/Fuse Identification

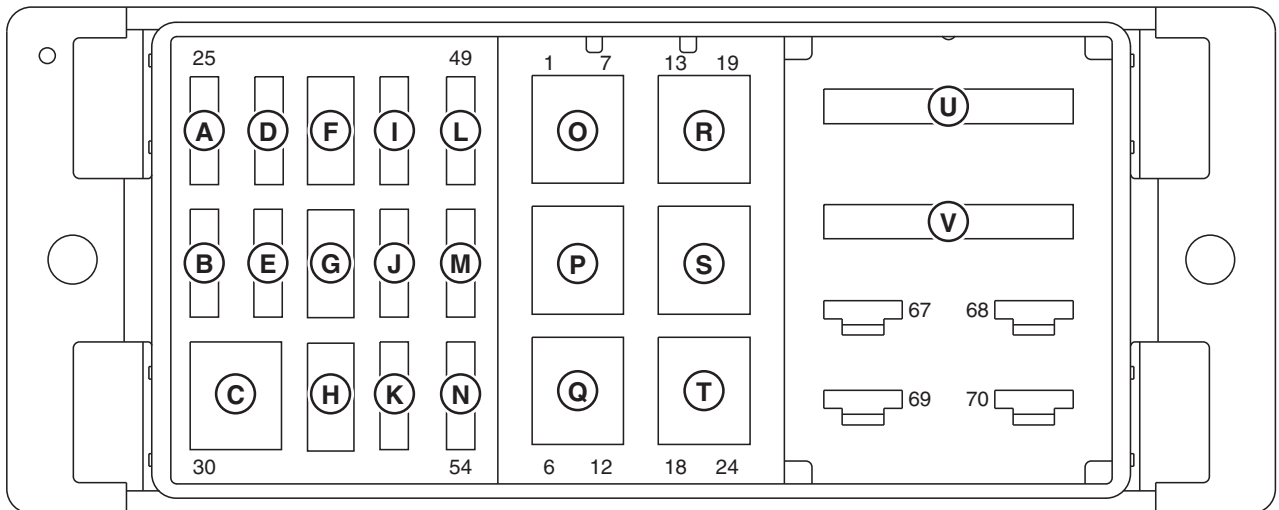

RXA0180447—UN—13NOV20

KE—Relay
FE—Fuse

Relay/Fuse Identification 13.6 L Engine				
Location	Relay/Fuse Identification	Engine	Size	Description
A	FE28	13.6 L	10A	Rear Chassis Controller
B	FE101	13.6 L	10A	Aux Light

Relay/Fuse Identification 13.6 L Engine				
Location	Relay/Fuse Identification	Engine	Size	Description
C	KE14	13.6 L	Relay	Ether
D	FE13	13.6 L	2A	ECU
E	FE14	13.6 L	15A	Ether
J	FE07	13.6 L	10A	Ignition
L	FE01	13.6 L	20A	ECU
M	FE02	13.6 L	25A	ECU
N	FE03	13.6 L	25A	ECU
U	FE100	13.6 L	60A	Implement Power
V	FE30	13.6 L	30A	Implement ECU Power

Relay/Fuse Identification 15 L Engine				
Location	Relay/Fuse Identification	Engine	Size	Description
A	FE28	15 L	10A	Rear Chassis Controller
C	KE14	15 L	Relay	Ether
E	FE14	15 L	15A	Ether
F	FE09	15 L	15A	Heater
G	FE11	15 L	5A	ECM
H	FE12	15 L	5A	Alternator
I	FE06	15 L	10A	AC Compressor
J	FE07	15 L	10A	Ignition
K	FE08	15 L	15A	Steering Controller
L	FE01	15 L	30A	ECM
M	FE04	15 L	10A	Aftertreatment
N	FE05	15 L	10A	DEF
O	KE18	15 L	Relay	Aftertreatment
P	KE19	15 L	Relay	AC Compressor
Q	KE13	15 L	Relay	DEF
R	KE15	15 L	Relay	Heater
S	KE16	15 L	Relay	Heater
T	KE17	15 L	Relay	Heater
U	FE100	15 L	60A	Implement Power
V	FE30	15 L	30A	Implement ECU Power

EC82310,0000F54-19-16AUG21

Access Master Fuses

CAUTION: Disconnect both negative and positive battery connections from both batteries prior to fuse inspection or replacement.

IMPORTANT: Prevent damage to tractor:

- **Emissions system.** Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See **Battery Disconnect Switch** in the **Engine Operations** section of this Operator's Manual.

- **Electrical system.** Ensure that the key switch is in the OFF position before servicing the batteries and connections.
- **Do not attempt to disassemble the master fuses unless instructed by your John Deere dealer.** Replacement fuses must be the same rating as original.


To access the master fuses:

1. Turn the key switch to the OFF position.
2. Turn off the battery disconnect switch. See **Battery Disconnect Switch** in the **Engine Operation** section of this Operator's Manual.

3. Access the battery compartment. See Access Battery Compartment in the Service—General Information section of this Operator's Manual.
4. Disconnect the battery ground (-) cable.

NOTE: The master fuse is connected across both posts of the junction box.

The master fuses are:

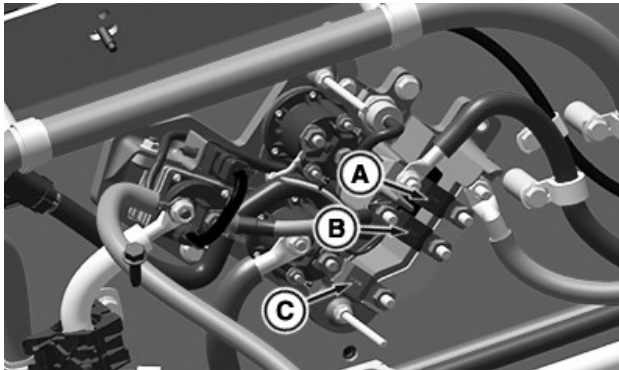

RXA0180457—UN—17NOV20

Master Fuse (A) is at the back of the battery compartment.


- A—Master Fuse (300A)
- B—Alternator Battery Fuse (300A)
- C—Backup Hydraulic Pump Fuse (175A)

TO84419,00001D9-19-21APR21

Access Implement Power Relay Module Relays

IMPORTANT: Prevent damage to the tractor electrical system. Ensure that the key switch is in the OFF position before replacing the implement power relay module relays.

To access the implement power relay module relays, remove the cab rear panel. See Remove Cab Rear Panel in the Service—General Information section of this Operator's Manual.

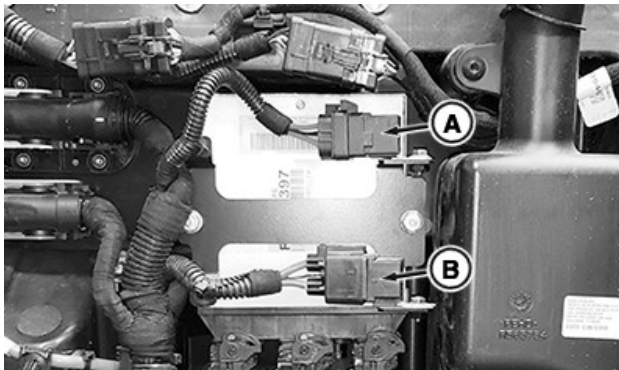

RXA0180458—UN—17NOV20

The implement power relay module relays are in the upper right-hand corner of the cab back panel.

- A—KE01 ISOBUS Control Unit Power
- B—KE100 ISOBUS Implement Power

Replace the Relays


NOTE: The associated fuses are on the front load center. To replace the associated fuses, see Load Center—Front in this Operator's Manual section.

To replace the relays:

1. Disconnect the wiring harness from the relay.
2. Remove the old relay.
3. Attach the new relay.
4. Connect the wiring harness to the relay.

TO84419,00001DA-19-21APR21

Handle Halogen Light Bulbs Safely

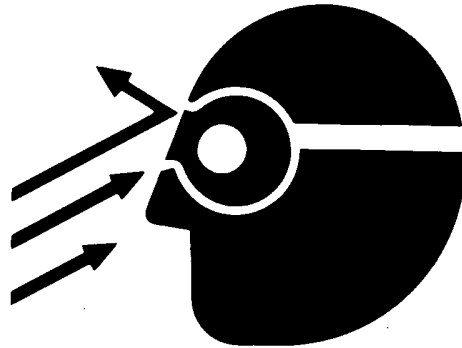

TS266—UN—23AUG88



H39474—UN—30JUN00

CAUTION: Halogen bulbs (A) contain gas under pressure. Handling a bulb improperly could cause it to shatter into flying fragments. To avoid possible injury:


- Turn light switch off and allow bulbs to cool before changing. Leave switch off until bulb change is done.
- Wear eye protection.
- Handle bulb by its base. Keep bulb oil free; wear gloves to avoid touching glass.

- Do not drop or scratch bulb. Keep moisture away.
- Place used bulb in the new bulb carton and dispose of properly. Keep out of reach of children.

TS36762,0000165-19-05SEP17

Change Halogen Bulbs

1. Disconnect wiring harness plug by lifting retaining tab (B).

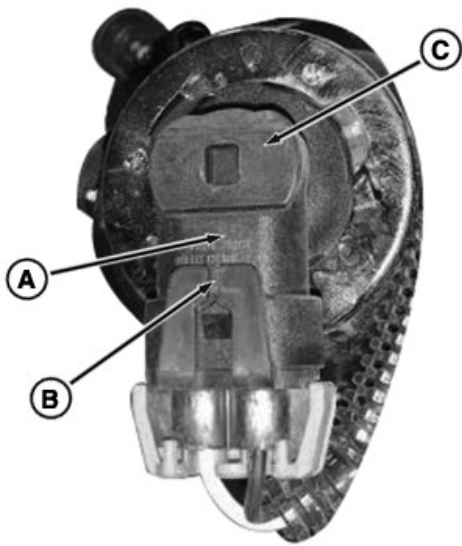


RXA0173828—UN—03FEB20
Right-Hand Side Shown

2. Rotate halogen headlight (A) counterclockwise with 1/4 of a turn and remove.
3. Replace halogen light assembly (C).

TS36762,0000167-19-13MAY20

Change Front HID/LED Light Assembly

1. Raise hood.

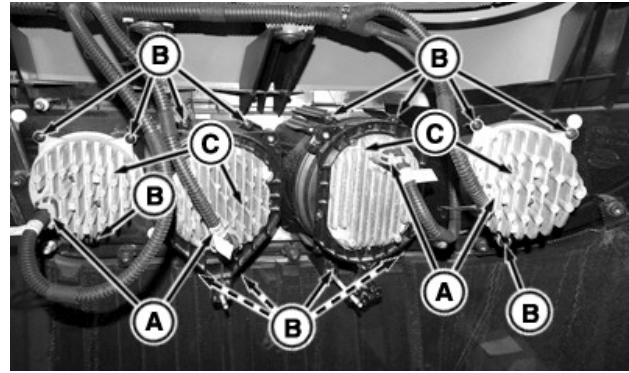

RXA0158062—UN—03MAR17
Right-Hand Side Shown


2. Disconnect harness connector (A).
3. Remove screws (B) and light assembly (C).
4. Replace light assembly.
5. Install new light assembly in reverse order of removal.
6. Close and secure hood.

SV81855,00001FA-19-20JUL17

Adjust Front Grille Lights


To adjust front grille lights:

For Low Beam Headlights:

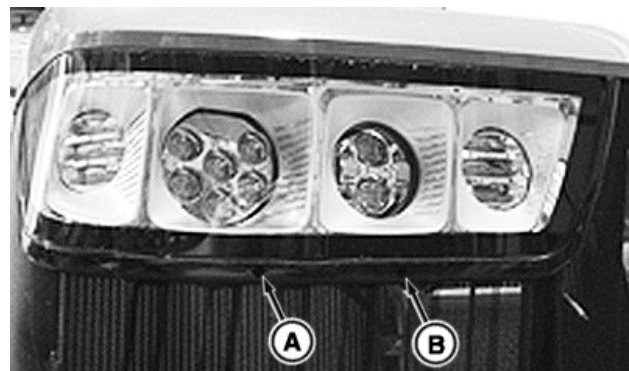

RXA0169633—UN—15JUL19

1. To lower low beam aim, turn low beam adjustment screw (A) clockwise.

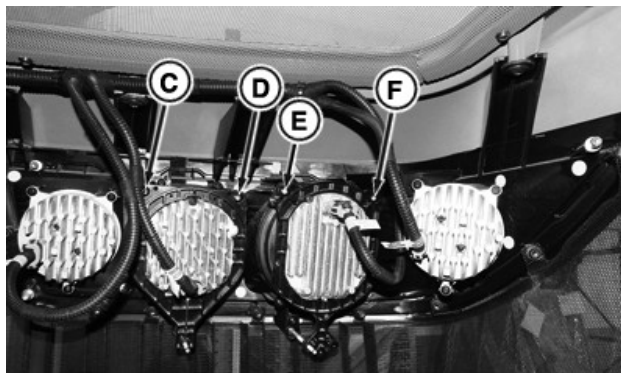

RXA0142138—UN—05JUN14

To raise and tilt out low beam headlights, turn low beam adjustment screw (E) clockwise.

To raise and tilt in low beam headlights, turn low beam adjustment screw (F) clockwise.

For High Beam Headlights:

- To lower high beam aim, turn high beam adjustment screw (B) clockwise.

To raise and tilt out high beam, turn high beam adjustment screw (C) clockwise.

To raise and tilt in high beam, turn high beam adjustment screw (D) clockwise.

- Repeat for opposite side of tractor.

SV81855,00002B7-19-17JUL19

Aim Headlights

CAUTION: Avoid unacceptable lighting display. As adjustments are made, observe local requirements and regulations.


Lighting options provide different combinations and locations of light. See Light Identification in Lights section of this Operator's Manual to identify which lights are high- and low-beam headlights.

High- and low-beam headlights are adjustable to provide desired lighting coverage. In some options packages, LED high- and low-beam headlights are mounted together and cannot be adjusted separately. In others the high- and low-beam lights are mounted separately and must be adjusted individually.

All halogen high- and low-beam headlights can be adjusted individually.

Before aiming headlights, adjust the tractor to duplicate transport conditions. Adjust tire pressures to correct values. Neutralize front axle suspension system (if equipped).


NOTE: Diagrams are not drawn to scale.

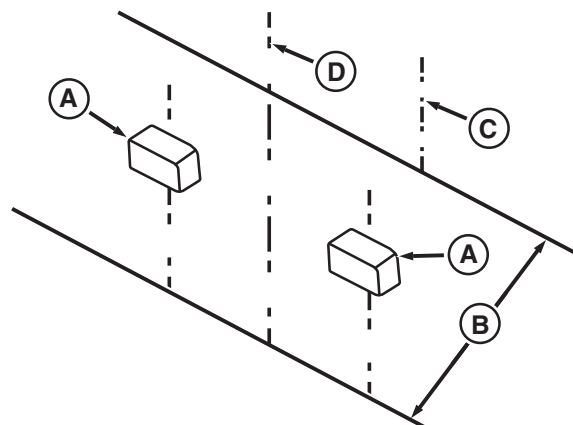

RXA0172851—UN—19DEC19

- Park the tractor on a level surface with the low-beam headlight lenses (A) 7.5 meters (25 ft) (B) from a flat, straight, and vertical wall. Tractor must be perpendicular to the wall.
- Mark a vertical line on the wall (C) corresponding to the tractor vertical center line (D).

NOTE: If tractor is equipped with LED headlights without separate low-beam headlights, both high and low beams are adjusted with the low-beam adjustment screws. Use low-beam aiming and adjustment procedures.

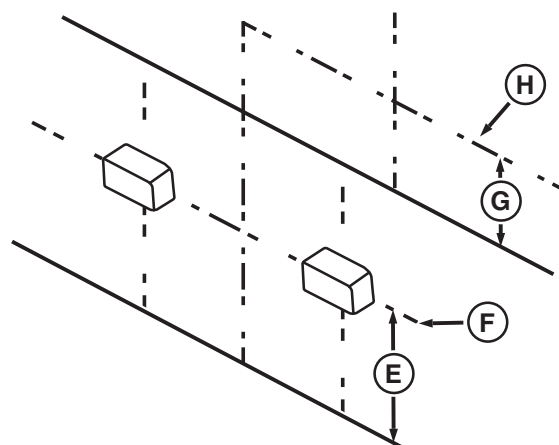

RXA0172852—UN—02JAN20


- On the tractor, measure the vertical distance (E) from the ground to the horizontal center of the light to be adjusted (F).

4. Multiply light vertical height by the appropriate height adjustment factor. Height adjustment factor:

- High Beam = 0.95
- Low Beam = 0.75


Example: High-beam light center line height from floor (F) is 1.52 m (60 in). Multiplying times 0.95 equals 1.45 m (57 in) height for the wall high-beam horizontal center line (G).

5. Mark a horizontal line (I) on wall at the height calculated in step 4 (J).

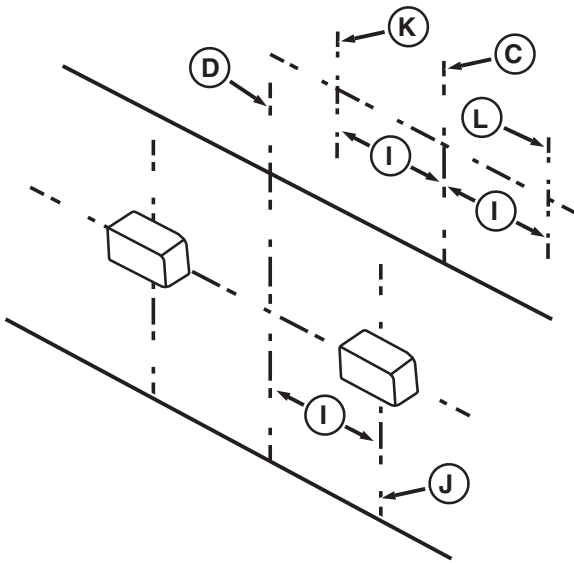

RXA0172853—UN—02JAN20

6. Measure the distance (I) from the hood vertical center (D) to the vertical center (L) of the desired right-hand light lens.
7. Place left-hand (K) and right-hand (J) vertical center lines on the wall. Position lines on either side of the tractor center line (C) at the distance (I) measured in step 3.
8. Cover left-hand light.
9. Turn on desired lights.

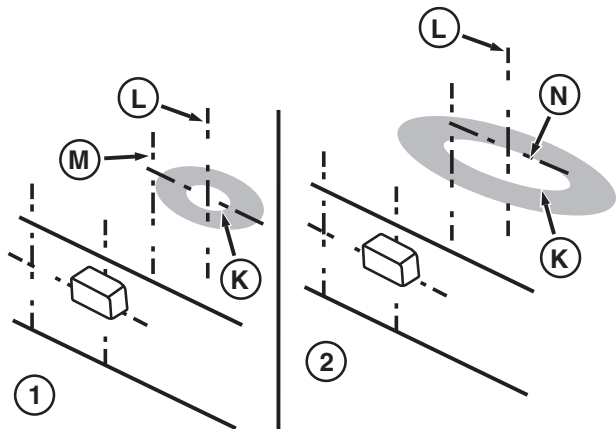

RXA0172854—UN—19DEC19

Right-Hand Headlight Adjustment

- 1—High-Beam Headlight
- 2—Low-Beam Headlight

10. Adjust brightest point of the light beam (hot spot) (K) so that it shines in the correct position. Center the hot spots on the light vertical center lines (L). High beams are centered on the high-beam light horizontal center line (M).


Adjust low beams so that the top of the hot spot (K) is on the low-beam light horizontal center line (N).

See appropriate adjustment information in this Operator's Manual section.

11. Transfer the cover from the left-hand light to right-hand light.
12. Repeat adjustment procedure with the left-hand light.
13. To adjust other lights, return to step 3.


RX32825,00000B4-19-05AUG21

Change Brake or Turn Signal Light Bulb

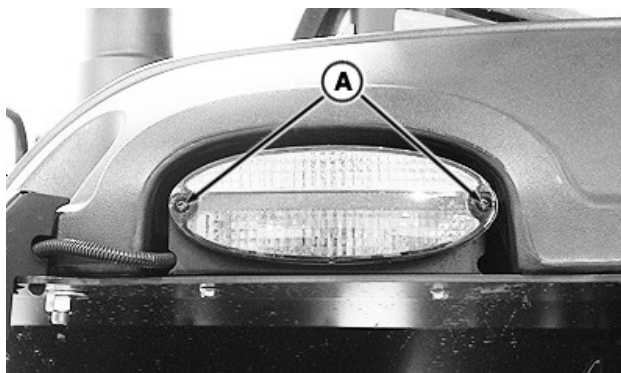

RXA0137101—UN—19NOV13

1. Remove screws (A) and take out light assembly.

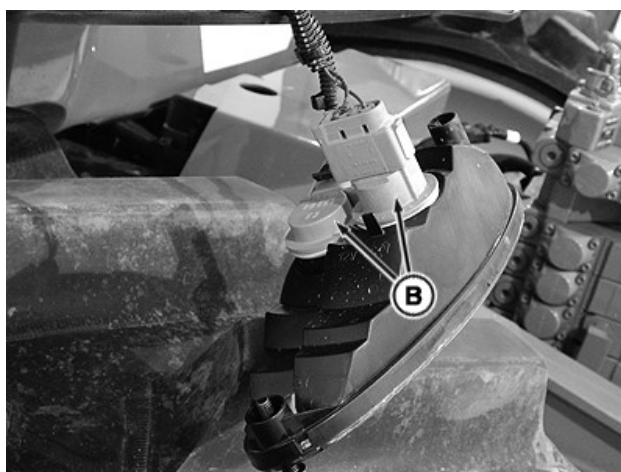

RXA0137102—UN—19NOV13

2. Turn bulb (B) counterclockwise 1/4 turn and pull out to remove.
3. Install new bulb in fixture and turn 1/4 turn clockwise.
4. Reinstall assembly and screws.

SV81855,00001FF-19-11JUL17

Change Cab Roof Light



RXA0172759—UN—03DEC19

Cab Roof Light—LED Light Option Shown

1. Gently pry light out the light assembly using a flat tip screwdriver in slot (A).
2. The cab roof light is equipped with either an LED assembly or a halogen bulb. To replace the cab roof light if the light assembly contains:
 - An LED assembly:
 - a. Disconnect the harness connector.
 - b. Replace the LED assembly.
 - c. Reconnect the harness connector.
 - d. Insert the cab roof light assembly into the cab roof until it snaps into place.
 - A halogen bulb:
 - a. Remove the halogen bulb base from the light assembly.
 - b. Remove and replace the halogen bulb from the halogen bulb base.
 - c. Insert the halogen bulb base into the light assembly.
 - d. Insert the cab roof light assembly into the cab roof until it snaps into place.

EC82310,0000B84-19-14MAY20

Change Wrap-Around Cab Light



RXA0172758—UN—03DEC19

1. Pry light out using flat tip screwdriver in slot (A).
2. Disconnect harness connectors.
3. Replace light assembly.
4. Reconnect harness connectors.
5. Insert light assembly into cab until it snaps into place.

EC82310,0000B83-19-14MAY20


Change Extremity Light—Cab



RXA0172768—UN—03DEC19

Extremity Light—Example


1. Remove screws (A). Some extremity light arms have more screws than shown.

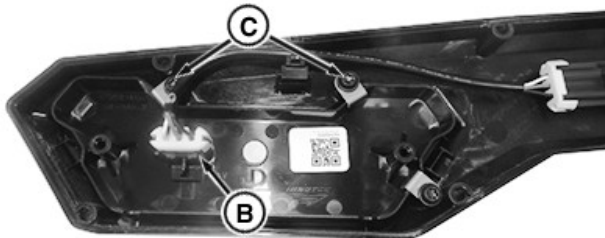

RXA0172769—UN—03DEC19

2. Remove screws (B).
3. Disconnect the light assembly (C).
4. Replace with new light assembly.

EC82310,0000B89-19-20FEB20

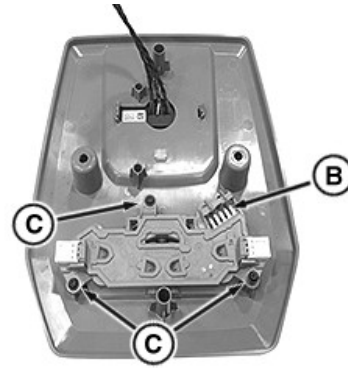


RXA0172764—UN—05DEC19

2. Disconnect wiring harness (B).
3. Remove screws (C) holding the light assembly.
4. Replace with new light assembly.

EC82310,0000B8A-19-12DEC19

Change Trailing Light Bulb

NOTE: Fuse number F31 is used for trailing lights.

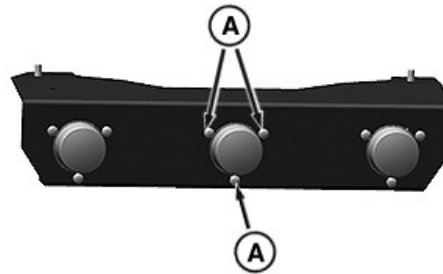

RXA0177583—UN—24APR20

1. Remove the light cover screws (A).




RXA0172763—UN—03DEC19

1. Remove screws (A).



RXA0127823—UN—23AUG12

2. To remove the light cover (B) from the light socket (C), while holding the light socket in one hand:
 - a. Turn the light cover counterclockwise until the light cover unlocks.
 - b. Pull the light cover away from the light socket.

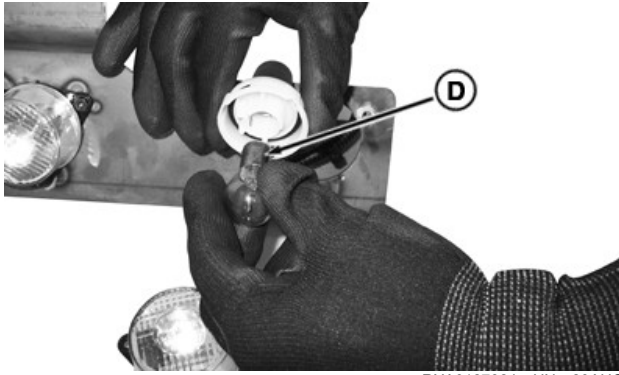

RXA0127824—UN—23AUG12

3. Replace the light bulb (D).
4. Reassemble in the reverse order.

ZZASX1U,000003D-19-27APR20

Troubleshooting—Procedures

Troubleshooting Features

Some features listed in this Operator's Manual section may not be applicable to all tractor configurations and

regions. See your John Deere dealer for unresolved product issues.

KD34109,0000944-19-19JUL21

Electrical System

Low Battery Voltage (Key Switch on and Engine off)

Problem	Solution
Defective battery.	Check that battery voltage is 12.0—14.5 V. See your John Deere dealer.
Low charging voltage with engine running.	See your John Deere dealer.
High resistance in charging circuit.	See your John Deere dealer.

Low Charging Voltage (Engine Running)

Problem	Solution
Low engine speed.	Increase engine speed.
Auxiliary drive belt slips and is not fully powering the alternator.	Check the auxiliary drive belt tension.
Defective battery.	Check that battery voltage is 12.0—14.5 V. See your John Deere dealer.
Defective alternator.	See your John Deere dealer.
Excessive electrical load.	Decrease electrical load. See your John Deere dealer.
Loose or corroded connections.	Clean and tighten connections.
Sulfated or worn-out batteries.	Check that battery voltage is 12.0—14.5 V. See your John Deere dealer.
Loose or defective alternator belt.	Check the auxiliary belt tension. Replace belt.

Excessive Charging Voltage (Engine Running)

Problem	Solution
Faulty connection to the alternator.	Check wiring connections.
Defective regulator.	See your John Deere dealer.

Starter Inoperative

Problem	Solution
Faulty starter or starter solenoid.	See your John Deere dealer.
Loose or corroded connections.	Clean and tighten loose connections.
Low battery output.	See your John Deere dealer.
Failed fuse.	Check fuses. See Access Front Load Center Fuses in Service—Electrical section of this Operator's Manual. Check the alternator/battery relay fuse. See Access Master Fuses in Service—Electrical section of this Operator's Manual.
Failed relay.	See your John Deere dealer.
Excessive cranking attempts.	To protect the starter, the engine control unit may prevent starting if several crank/no start events have occurred. Wait 2 minutes and attempt starting again.

Starter Turns over Slowly

Problem	Solution
Low battery output.	Check that battery voltage is 12.0—14.5 V. See your John Deere dealer.
Crankcase oil too heavy.	Use the correct viscosity oil. See Engine Oil section of this Operator's Manual.
Loose or corroded connections.	Clean and tighten loose connections.
Excessive hydraulic load.	Ensure SCVs are in neutral and disconnect the implement hose in the rear load sense port (if used).

Entire Electrical System Does Not Function

Problem	Solution
Faulty battery connection.	Clean and tighten connections.
Battery disconnect system switch in the off position.	Turn the battery disconnect switch to the on position.
Sulfated or worn out batteries.	Check that battery voltage is 12.0—14.5 V. See your John Deere dealer.
Failed fuse.	Check the master fuse. See Access Master Fuses in Service—Electrical section of this Operator's Manual.

KD34109,000093A-19-22,JUL21

Engine

Engine Is Hard to Start or Does Not Start

Problem	Solution
Incorrect starting procedure.	Review the starting procedure.
Failed relay.	Check the relay. See Access Load Center Fuses in Service—Electrical section of this Operator's Manual.
Failed fuse.	Check the fuses. See Access Front Load Center Fuses in Service—Electrical section of this Operator's Manual.
No fuel.	Check the fuel tank.
Air in the fuel line.	Bleed the fuel line. With the engine off, turn the key to the run position for 60 seconds.
Cold weather.	Check the ether can and other cold weather starting aids. See Cold Weather Operation section of this Operator's Manual.
Slow starter speed.	See Starter Turns over Slowly in Electrical System in this Operator's Manual section.
Crankcase oil is too heavy.	Use the correct viscosity oil. See Engine Oil section of this Operator's Manual.
Incorrect type of fuel.	Use the correct fuel type for the operating conditions. Consult the fuel supplier to determine if necessary.
Water, dirt, or air in the fuel system.	Drain, flush, fill, and bleed the system. See Service—General Information section of this Operator's Manual.
Clogged fuel filter.	Replace the filter elements. See Service—Change section of this Operator's Manual.
Dirty or faulty injectors.	See your John Deere dealer.
Excessive hydraulic load.	Ensure SCVs are in neutral and disconnect the implement hose in the rear load sense port (if used).

Engine Knocks

Problem	Solution
Insufficient oil.	Add oil. See Engine Oil section of this Operator's Manual.
During warm-up, the pilot injection system activates and deactivates depending on the engine operating temperature.	It is normal for the pilot injection system to activate and deactivate depending on the engine operating temperature.
Low engine coolant temperature.	Replace the thermostats. See Service—Change section of this Operator's Manual.
Engine overheats.	See Engine Overheats later in Engine Troubleshooting.

Engine Runs Irregularly or Stalls Frequently

Problem	Solution
Low coolant temperature.	Replace the thermostats. See Service—Change section of this Operator's Manual.
Clogged fuel filters.	Replace the filter elements. See Service—Change section of this Operator's Manual.
Water, dirt, or air in the fuel system.	Drain, flush, fill, and bleed the system. See Service—General Information section of this Operator's Manual.
Water in the fuel system.	See Fuel Tank Sump in Service—Check section of this Operator's Manual.
Fuel tank vent is obstructed.	Clean the vent. Check the vent lines for restrictions. Replace the vent filter. See Service—Change section of this Operator's Manual.
Dirty or faulty injectors.	See your John Deere dealer.

Below Normal Engine Temperature

Problem	Solution
Defective thermostat.	Replace the thermostat. See Service—Change section of this Operator's Manual.
Defective temperature gauge or sender.	See your John Deere dealer.

Fan Drive Speed Surges at a Low Engine rpm

Problem	Solution
Fan drive problem.	See your John Deere dealer.

Throttle Does Not Allow Full Engine rpm

Problem	Solution
Maximum Set Speed is on and limiting maximum engine rpm.	Adjust Maximum Set Speed to maximum rpm.
Cold oil can limit the engine speed to 1500 rpm.	Warm up the transmission-hydraulic oil. See your John Deere dealer.
Engine derate is active.	Check the CommandCenter™ for Diagnostic Trouble Codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual.

Lack of Power

Problem	Solution
Engine is overloaded.	Reduce load or shift to a lower gear.
Low or high idle speed.	Adjust or turn off the Max Engine Speed setting. Set IVT™/AutoPowr™ or EVT/eAutoPowr™ correctly. Check the applicable Transmission section of this Operator's Manual. See your John Deere dealer.
Intake air restriction.	Service the air cleaner. See Service—Check section of this Operator's Manual.

Troubleshooting—Procedures

Problem	Solution
Clogged fuel filters.	Replace the fuel filter elements. See Service—Change section of this Operator's Manual.
Water in the fuel system.	See Fuel Tank Sump in Service—Check section of this Operator's Manual.
Incorrect type of fuel.	Use the correct fuel. See the appropriate fuel information in Fuel section of this Operator's Manual.
Engine is overheated.	See Engine Overheats later in Engine Troubleshooting.
Below normal engine temperature.	Check the thermostat. See Service—Change section of this Operator's Manual.
Incorrect valve clearance.	See your John Deere dealer.
Dirty or faulty injectors.	See your John Deere dealer.
Turbocharger does not function.	See your John Deere dealer.
Leaking exhaust manifold gasket.	See your John Deere dealer.
Implement adjusted incorrectly.	See implement operator's manual.
Restricted fuel inlet.	Clean or replace the fuel line. See Service—Change section of this Operator's Manual.
Incorrect ballast.	Adjust the ballast to load. See Performance Ballasting section of this Operator's Manual.

Low Oil Pressure

Problem	Solution
Low oil level.	Add oil. See Engine Oil section of this Operator's Manual.
Incorrect type of oil.	Drain and refill the crankcase with the correct quality and viscosity of oil. See Engine Oil section of this Operator's Manual.

High Oil Consumption

Problem	Solution
Crankcase oil is too light.	Use the correct viscosity oil. See the appropriate engine oil information in Engine Oil section of this Operator's Manual.
Oil leakage.	Check for leaks in the lines and around the gaskets and the drain plug.
Defective turbocharger.	See your John Deere dealer.
Restricted engine breather tube.	Clean the engine breather tube.

Engine Emits Smoke

Problem	Solution
Incorrect type of fuel.	Use the correct fuel. See the appropriate fuel information in Fuel section of this Operator's Manual.
Clogged or dirty air cleaner.	Service the air cleaner.
Engine is overloaded.	Reduce the load or shift to a lower gear.
Injection nozzles are dirty.	See your John Deere dealer.
Turbocharger does not function.	See your John Deere dealer.

Engine Overheats

Problem	Solution
Dirty radiator core, oil cooler, or grille screens.	Remove all trash and clean the coolers. See Service—Check section of this Operator's Manual.
Engine is overloaded.	Reduce the load or shift to a lower gear.
Low engine oil level.	Check the oil level and add oil as required. See Engine Oil section of this Operator's Manual.
Low coolant level.	Fill the de-aeration tank to the correct level. Check the radiator and hoses for loose connections or leaks.
Faulty radiator cap.	Replace the radiator cap.

Problem	Solution
Fan drive malfunction.	See your John Deere dealer.
Cooling system blockage.	Flush the cooling system. See Service—Clean section of this Operator's Manual. See your John Deere dealer.
Defective thermostat.	Replace the thermostat. See Service—Change section of this Operator's Manual.
Defective temperature gauge or sender.	See your John Deere dealer.

High Fuel Consumption

Problem	Solution
Clogged or dirty air cleaner.	Service the air cleaner. See Service—Check section of this Operator's Manual.
Engine is overloaded.	Reduce the load or shift to a lower gear.
Injection nozzles are dirty.	See your John Deere dealer.
Implement is incorrectly adjusted.	See implement operator's manual.
Excessive ballast.	Adjust the ballast to load. See Performance Ballasting section of this Operator's Manual.

KD34109,000093B-19-18AUG21

Hitch

Insufficient Transport Clearance

Problem	Solution
Center link is too short.	Adjust the center link.
Center link is in the wrong position.	Put the hitch center link in the correct hole. See Rear Hitch section of this Operator's Manual.
Lift links are too short.	Adjust the lift links.
Implement is not level.	Level the implement.
Implement is not adjusted correctly.	See implement operator's manual.
Upper Limit is not set correctly.	Adjust Upper Limit in the CommandCenter™.
Suspension (if equipped) leveling does not function correctly or extends above level.	Refer to suspension information in this Operator's Manual.

Hitch Fails to Follow the Lever

Problem	Solution
Malfunction in the lever position sensor circuit or hitch position sensor.	See your John Deere dealer.

Poor Position Control

Problem	Solution
Hitch Load Depth is not set correctly.	Adjust Load Depth in the CommandCenter™.
Malfunction in the lever position sensor circuit or hitch position sensor.	See your John Deere dealer.
Suspension (if equipped) leveling does not function correctly during large draft changes.	Refer to suspension information in this Operator's Manual.

Hitch Drops Slowly

Problem	Solution
Hitch Drop Rate is not set correctly.	Adjust Drop Rate in the CommandCenter™. See Rear Hitch section of this Operator's Manual.

Hitch Fails to Lift or Lifts Slowly

Problem	Solution
Excessive load on the hitch.	Reduce load.
Center link is in the wrong position.	Put the hitch center link in the correct hole.
Hitch valve leaks.	See your John Deere dealer.
Hitch Upper Limit setting limits lift height.	Adjust Upper Limit in the CommandCenter™.
Lack of lubrication.	Lubricate the hitch mechanisms. See Service—Lubricate section of this Operator's Manual.
Manual hitch drain is open.	See Hitch Manual Lowering in Rear Hitch section of this Operator's Manual. Ensure that the screw is not in the open position.
Cold hydraulic oil.	Allow the oil to heat up to the operating temperature.

Implement Not Operating at the Desired Depth

Problem	Solution
Lift links are too short.	Adjust the lift links.
Lack of soil penetration.	See implement operator's manual.
Draft sensor fails.	See your John Deere dealer.
Implement is not level.	See implement operator's manual.

Insufficient or No Hitch Response to Draft Load

Problem	Solution
Hitch Load Depth is not set correctly.	Adjust Load Depth in the CommandCenter™.
Hitch Drop Rate is too slow.	Adjust Drop Rate in the CommandCenter™.

Hitch Too Responsive

Problem	Solution
Hitch Load Depth is not set correctly.	Adjust Load Depth in the CommandCenter™. See Rear Hitch section of this Operator's Manual.

Hitch Settles Too Fast After Tractor Is Parked and Engine Is Shut Off

Problem	Solution
Internal leakage.	See your John Deere dealer.
Manual hitch drain is open.	See Hitch Manual Lowering in Rear Hitch section of this Operator's Manual. Ensure that the screw is not in the open position.

Hitch Does Not Move (Controls Not Working, Including Rear Raise/Lower Switch)

Problem	Solution
Failed fuse.	Replace the fuse. See Access Load Center Fuses in Service—Electrical section of this Operator's Manual.
Hitch does not move with an intact fuse.	Check the CommandCenter™ for diagnostic trouble codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual.

External Raise/Lower Switch Does Not Move the Hitch

Problem	Solution
Failure of the raise/lower switch, connector, or wiring harness.	See your John Deere dealer.
Lever is in transport lock.	Move the lever out of transport. Unlock in the CommandCenter™.

Pick-up Hitch Operates Incorrectly

Problem	Solution
Pick-up hitch does not latch.	Adjust the pick-up hitch. See Rear Hitch section of this Operator's Manual.

Excessive Implement Movement

Problem	Solution
Hitch sways too much.	Adjust the sway blocks to minimize hitch movement. See Rear Hitch section of this Operator's Manual.

KD34109,000093C-19-28,JUL21

Hydraulic System

Entire Hydraulic System Fails to Function

Problem	Solution
Low oil supply.	Check the transmission-hydraulic oil level.
Clogged hydraulic filter.	Replace the transmission-hydraulic oil filters. See Service—Change section of this Operator's Manual.
Clogged hydraulic oil suction screen.	Clean the screen. See Service—Clean section of this Operator's Manual.
Oil cooler air passages are clogged.	Clean the oil cooler.
High-pressure internal leak.	See your John Deere dealer.

Hydraulic Oil Overheats

Problem	Solution
Low or high oil supply.	Check the transmission-hydraulic oil level. See Service—Change section of this Operator's Manual.
Clogged oil cooler air passages.	Clean the oil cooler and condenser in the front cooling module.
Internal leaks.	See your John Deere dealer.
Implement hydraulic load is not matched to the tractor or not properly routed back into the tractor hydraulic system.	See Hydraulic Connections section of this Operator's Manual. See implement operator's manual. See your John Deere dealer.
Clogged transmission oil screen.	Clean the filter screen. See Service—Change section of this Operator's Manual. See your John Deere dealer.

KD34109,000093D-19-22,JUL21

Operator Enclosure

Excessive Dust Enters Operator Enclosure

Problem	Solution
Defective seal around the cab filter element, door seal, or window seal.	Check the condition of the seals. Check that the filter installation is correct. See Service—Change Section of this Operator's Manual.
Defective cab filter.	Check the cab recirculation air filter and cab fresh air filter. See Service—Change Section of this Operator's Manual.
Inadequate blower air flow.	See Blower Air Flow Too Low later in Operator Enclosure Troubleshooting.

Blower Air Flow Too Low

Problem	Solution
Clogged filter or air intake screen.	Inspect the cab recirculation and cab fresh air filters and the screen for blockage. See Service—Change section of this Operator's Manual.
Clogged heater core or evaporator core.	Clean the heater core or evaporator core.
Frozen heater core.	Thaw the heater core. See your John Deere dealer.

Blower Malfunctioning

Problem	Solution
Blower does not work.	Check the CommandCenter™ for Diagnostic Trouble Codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. See your John Deere dealer.
Failed fuse.	Check the air conditioner fuses. See Access Load Center Fuses in Service—Electrical section of this Operator's Manual.
Failed relay.	Check the air conditioning relay. See Access Load Center Fuses in Service—Electrical section of this Operator's Manual.

Heater Does Not Switch Off

Problem	Solution
Heater hoses are connected incorrectly.	See your John Deere dealer.
Failed water valve actuator.	See your John Deere dealer.

Air Conditioner Not Cooling

Problem	Solution
Low refrigerant.	See your John Deere dealer.
Debris blocks the condenser.	Clean the condenser.
Belt slips.	Check the belt tension. See Service—Check section of this Operator's Manual.
CommandCenter™ air-conditioning is set to OFF on the HVAC page.	Set the air-conditioning to ON in the CommandCenter™. See HVAC Settings in HVAC section of this Operator's Manual.

Seat Suspension Not Working

Problem	Solution
Failed fuse.	Check the seat fuses. See Access Load Center Fuses in Service—Electrical section of this Operator's Manual.

Radio Does Not Function

Problem	Solution
Failed fuse.	Check the radio fuses. See Access Load Center Fuses in Service—Electrical section of this Operator's Manual.
Radio cutting in and out.	Check the antenna and ground connection.

Selective Control Valve (SCV)

Remote Cylinder Does Not Lift a Load

Problem	Solution
Flow blockage (worn hydraulic tips).	Cycle the SCV levers. Replace the hydraulic tips and check the connections.
Excessive load.	Reduce load.
SCV lever or joystick is not assigned to the expected SCV.	Change the SCV hose to the desired SCV. Reassign the SCV lever or joystick control to the desired SCV. See Selective Control Valves section of this Operator's Manual.
Hoses are not installed correctly.	Install the hoses correctly and firmly into SCV.
Incorrect remote cylinder size.	Use the correct cylinder size. See Hydraulic Connections section of this Operator's Manual.
SCV control lever lock is engaged.	Release the SCV control lever lock.
Incorrect or damaged hose tips.	Replace the hose tips.

Remote Cylinder Rate of Travel Too Fast or Too Slow

Problem	Solution
Incorrect flow rate.	Adjust the Flow setting.

Direction of Remote Cylinder Travel Is Reversed

Problem	Solution
Incorrect hose connections.	Reverse the hose connections.

Hoses Do Not Couple

Problem	Solution
Incorrect hose male connectors.	Replace the hose tips with ISO-5675 fittings.
Too much system pressure.	Release pressure from the implement or tractor.

Detent Does Not Hold or Releases Too Soon

Problem	Solution
Detent time set incorrectly.	Set the correct detent time.
SCV lever is not released to neutral soon enough.	Return the SCV lever to the center after being in the detent position for more than 0.8 seconds.

SCV Lever Does Not Release

Problem	Solution
SCV is unexpectedly in float mode.	Do not push the lever down when in the forward position.
Lever mechanism failed.	See your John Deere dealer.
Flow control or detent release setting incorrect.	Adjust the detent relief setting.

Implement Does Not Operate or Does Not Operate Correctly

Problem	Solution
Incorrect hose connections.	See implement operator's manual. See your John Deere dealer.

Feedback from Top SCVs or Hydraulic Pump

Problem	Solution
Hydraulic pump is making noise.	Make sure that continuous flow oil is not returning to a pressure free port. See Hydraulic Connections section of this Operator's Manual.

SCV Is Unresponsive

Problem	Solution
SVC is not operating correctly.	Check the CommandCenter™ for Diagnostic Trouble Codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. Verify that transport lock is off.

KD34109,0000940-19-22JUL21

Steering System

Difficult or No Steering

Problem	Solution
Electrical or hydraulic malfunction.	Check the CommandCenter™ for Diagnostic Trouble Codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. See your John Deere dealer.
Tractor is over-ballasted or the front axle is overloaded.	See Performance Ballasting section of this Operator's Manual.

Tractor Turning Radius Larger Than Desired or Tractor Difficult to Turn When Under Load

Problem	Solution
Implement causes side-loading greater than the steering system can overcome when attempting to turn.	Raise the implement. Slow down during a turn or execute a turn by doing a series of brief short turns. Let the drawbar swing. Add ballast. See Performance Ballasting section of this Operator's Manual. See Drawbar section of this Operator's Manual.
Electrical or hydraulic malfunction.	Check the CommandCenter™ for Diagnostic Trouble Codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. See your John Deere dealer.

Tractor Drifts or Pulls to One Side

Problem	Solution
Implement causing side load on the tractor.	Adjust the implement to eliminate any side draft. Let the drawbar swing. Widen the rear wheels out to the stops or add duals. See Rear Wheels and Tires section of this Operator's Manual. Add ballast. See Performance Ballasting section of this Operator's Manual. See Drawbar section of this Operator's Manual.

Tractor Turning Radius Larger Than Desired with No Load

Problem	Solution
Electrical or hydraulic malfunction.	Check the CommandCenter™ for Diagnostic Trouble Codes. See Troubleshooting—Diagnostic Trouble Codes section of this Operator's Manual. See your John Deere dealer.
Attempting to turn while stopped (loose soil, heavy ballast); steering load exceeds the system capacity.	Maintain forward or reverse motion while turning. Increase vehicle speed and/or hold the steering wheel against the stop for a couple of seconds to allow greater steering force. Check the steering stops. See Steering Stop, Fender, and Tread Settings section of this Operator's Manual.

Tractor Turning Radius Larger Than Desired with the Tractor in High Gear or with Low Engine Speed

Problem	Solution
Minimum turn radius is greater in high gears and at a higher speed.	Utilize the turn brakes for a narrower turning radius. Downshift before the turn. See the appropriate transmission section of this Operator's Manual. Reduce vehicle speed before a turn to reduce over steering.
Maximum steering pump oil flow is less at a lower engine speed, reducing the power available to make the turn.	Increase engine speed before a turn.

KD34109,0000941-19-22,JUL21

Tractor Operation

Tractor Bounces or Jumps

Problem	Solution
Power hop or wheel hop.	See Performance Ballasting section of this Operator's Manual.
Loose wheel hardware.	Tighten the hardware to the correct specification. See Service—Tighten section of this Operator's Manual.
Wheel slip.	Check the CommandCenter™ for the wheel slip percentage.
ILS™ (if equipped) malfunction.	Refer to ILS™ in this Operator's Manual section.

KD34109,0000942-19-22,JUL21

Transmission

Hydraulic Oil Leak Between Transmission and Engine

Problem	Solution
Clogged transmission vent screen.	Clean the vent screen. See the appropriate Transmission section of this Operator's Manual. See your John Deere dealer.

Transmission Shifts Slowly and Tractor Steers Hard

Problem	Solution
Cold oil.	See Transmission—General Information section of this Operator's Manual.

Transmission Slips, Shifts Roughly or Abruptly After Oil Change

Problem	Solution
Recalibrate the transmission.	See your John Deere dealer.

Transmission Starts Out Too Quickly or Slowly

Problem	Solution
No identifiable problem.	Change the start-up gear through CommandCenter™ settings (16-Speed PST and e23 only). See the appropriate Transmission section of this operator's manual. Adjust the CommandPRO™ settings (if equipped). See CommandPRO™ Joystick—Acceleration/Deceleration Response in IVT™-AutoPowr™ Transmission with CommandPRO™ Joystick section of this Operator's Manual.

AutoClutch Engages Too Quickly or Too Slowly When Pressing Brake Pedals

Problem	Solution
No identifiable problem.	Verify that the brake pedals are latched together. Adjust the AutoClutch sensitivity settings. See Transmission—General Information section of this Operator's Manual.

Tractor Will Not Achieve Maximum Speed

Problem	Solution
Break pedals unlocked.	Ensure that the brake pedals are latched together. See Brakes section of this Operator's Manual.

Incorrect Wheel Speed Displayed

Problem	Solution
Incorrect tire size calibration or wheel slip value.	Complete the radar and wheel slip calibrations. See CommandCenter™ section of this Operator's Manual.

KD34109,0000943-19-23AUG21


Troubleshooting—Diagnostic Trouble Codes (DTC)

STOP, Service, and Information Alerts on CommandCenter™

CommandCenter™ alert overlays display control unit, diagnostic trouble code (DTC), system, and solution. If condition is out of range, the control unit followed by an industry standard number displays. Numbers to the left of the decimal indicate the system and numbers to the right of decimal indicate the condition.


Some alert indicators can be acknowledged by pressing OK. If condition still exists, diagnostic trouble code may reappear later. Follow solution on CommandCenter™. If situation cannot be corrected, contact your John Deere dealer. For more information on DTCs, refer to Diagnostics Center. For access information, see Access Diagnostic Trouble Codes in this Operator's Manual section.

IMPORTANT: Engine will shut down automatically if STOP signal is received when operator is out of the seat for longer than 3 seconds and the transmission control is in PARK. CommandCenter™ display can be reset by cycling key switch.

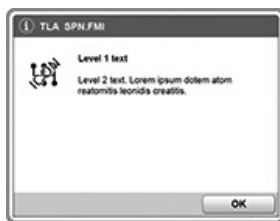

RXA0167778—UN—06MAY19
Information Alert Overlay


Information Alert — in some situations, information (INFO) indicator light comes on continuously and alarm pattern sounds for 2 seconds, indicating a fault condition. Tractor operations can continue without damage but performance of some functions may be degraded. Operating in a different manner may correct and clear an out-of-range condition.

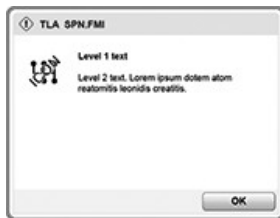

RXA0167779—UN—06MAY19
Service Alert Overlay

Service Alert — light flashes and an alarm pattern sounds five times. A performance or operational problem has been detected and must be resolved as soon as possible. Continued operations can cause a service alert to escalate into a STOP alert. If appropriate corrective action is not taken soon (service, repair,

operate in a different manner), a significant reduction in performance and/or damage to machine will occur.

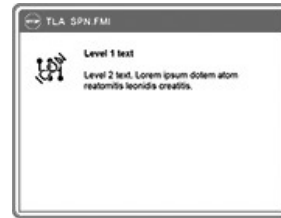

RXA0167780—UN—06MAY19
STOP Alert Overlay

STOP Alert — light flashes and an alarm pattern sounds continuously. A serious malfunction requiring immediate attention has occurred. If situation allows, stop operations immediately, reduce engine speed to idle, and shut down engine. Turn key to run position to observe CommandCenter™ display for problem identification and solution. It may be necessary to access the stored codes. See Access Diagnostic Trouble Codes in this Operator's Manual section. Correct problem before restarting. If ignored, damage to machine will occur.

TS36762,0000281-19-16OCT19

Access Diagnostic Trouble Codes


NOTE: If problem is not resolved after cycling power to tractor or following solution on CommandCenter™ page, see your John Deere dealer.

Not all active DTCs are displayed. Follow steps to retrieve stored DTCs.



RXA0133360—UN—26JUL13

1. Select Menu.
2. Select System tab.
3. Select Diagnostics Center icon.
4. Select Trouble Codes tab.

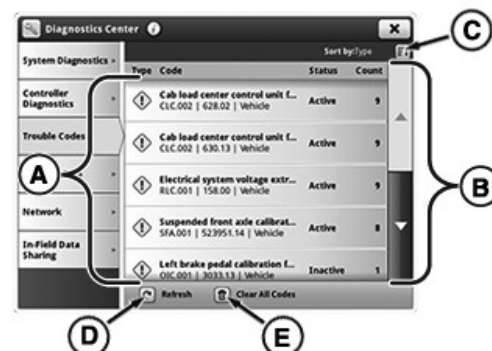

RXA0166979—UN—14MAR19

5. Select desired diagnostic trouble code from list (A).
Use arrow keys (B) to access additional diagnostic trouble codes in the list.

Additional Features on Trouble Codes Page

Sort by: (C) — select to sort list by Code, Controller, Count, Status, or Type.

Refresh (D) — select to display the most up-to-date list of codes and counts. Page automatically refreshes upon entry.

Clear All Codes (E) — select to clear inactive DTCs and reset counts to zero. A message displays to verify action since it cannot be undone.

TS36762,0000283-19-17OCT19

Service—Storage

Place Tractor in Storage

IMPORTANT: If tractor will not be used for more than three months, the following recommendations for storage and removal from storage will minimize corrosion and deterioration.

NOTE: Whenever possible store tractor in a building or under a roof to avoid damage resulting from prolonged exposure to the elements.

1. Lower hitch.
2. Change engine oil and replace filter (if required).

NOTE: Do not add BioDiesel fuel if placing tractor in storage.

3. Drain fuel tank and add back approximately 19 L (5 gal) of fuel.

IMPORTANT: Final Tier 4/Stage V Engines Only: To determine tractor engine type, see Engine Serial Number in Identification Numbers section of this Operator's Manual. Long-term storage of Diesel Exhaust Fluid (DEF) in vehicle (over six months) is not recommended. If long-term storage is necessary, periodic testing of DEF is recommended to ensure that urea concentration does not fall out of specification.

4. Final Tier 4 and Stage V tractors: Diesel Exhaust Fluid (DEF) has a limited shelf life, but may be stored in vehicle for as long as six months, depending upon storage conditions, see Storing DEF in Diesel Exhaust Fluid (DEF) section of this Operator's Manual. If draining DEF tank is necessary, see Draining DEF Tank in Fuel, Lubricants, and Coolant section of this Operator's Manual for proper procedure.
5. Using plastic bags and either tape or tie-bands, seal air inlets and exhaust, crankcase vent tube, radiator overflow hose, and transmission-hydraulic system fill cap.

IMPORTANT: Prevent damage to the tractor emissions system. Never disconnect the battery disconnect switch while the battery disconnect switch light is illuminated. See Battery Disconnect Switch in Engine Operation section of this Operator's Manual.

6. Turn off the battery disconnect switch.
7. Disconnect batteries. See Service Batteries and Connections in Service—Electrical section of this Operator's Manual.

8. Remove and store batteries in a cool, dry location. Keep batteries charged.¹
9. Coat all exposed (machined) metal surfaces such as lift cylinders and steering cylinder rods with light coat of grease.
10. Lubricate all grease fittings.

If tractor must be stored outside, follow these additional precautions.

1. Cover instrument panel, control levers, and seat with sheets of material or cardboard to protect against sun rays.
2. Thoroughly clean tractor, touching up any scratched or chipped painted surfaces.
3. Wax or cover entire tractor with waterproof material.
4. Raise tires or tracks off the ground and/or cover them to protect from heat and sunlight.

TS36762,0000284-19-21APR21

Remove Tractor from Storage

1. Remove all coverings placed in or on tractor while preparing for storage.

IMPORTANT: To avoid engine damage, unseal crankcase vent tube.

2. Unseal all openings sealed during storage.
3. Remove any accumulated trash or debris, especially around engine and inside engine compartment.

IMPORTANT: If air conditioning compressor is locked up, engine operation with compressor clutch engaged may damage drive belt or compressor.

4. Rotate air conditioner compressor pulley several turns. If pulley does not turn freely, compressor components may be seized, see your John Deere dealer.
5. Check auxiliary drive belt for cracking and, if serviceable, install auxiliary drive belt on air conditioning compressor pulley.
6. Check under and around tractor for any evidence of fluid leaks.

¹ Disconnect battery ground cable for short-term storage periods (20 to 90 days).

IMPORTANT: If transmission-hydraulic oil level was correct at time of storage, and there is no evidence of hydraulic oil leaks, there should be no concern starting tractor even if transmission-hydraulic oil sight glass level is low. Over a period of storage, hydraulic oil may drain into transmission, causing sight glass to read low even when adequate amount of oil is available. If there are indications of oil leaks, do not start tractor until the source has been determined and repairs made. If there are no leakage indications, but there is any doubt about oil level at time of storage, check hydraulic oil level as soon as possible after starting tractor.

18. Warm up tractor before putting tractor under load.

RX32825,00000FE-19-21APR21

7. Check transmission-hydraulic oil level. Add oil as required.
8. Check all other fluid levels. Fill as required.
9. Fill fuel tank.

IMPORTANT: To confirm which engine your tractor is equipped with, see **Engine Serial Number in Identification Numbers** section of this **Operator's Manual**.

10. (Final Tier 4 and Stage V engines) If Diesel Exhaust Fluid (DEF) tank has not been drained, test urea concentration, see Testing Diesel Exhaust Fluid (DEF) in Diesel Exhaust Fluid (DEF) section of this Operator's Manual. If concentration is not within specifications, drain and replace with new or good DEF. If DEF tank has been drained, fill tank, see Fill Diesel Exhaust Fluid (DEF) Tank in Diesel Exhaust Fluid (DEF) section of this Operator's Manual for appropriate procedures.
11. Inspect tracks for cuts, rips or tears, see Tracks section of this Operator's Manual.
12. Perform all Daily or 10 Hour services and any other scheduled services as required, see 10 Hour or Daily Service in Service—Record Charts section of this Operator's Manual.
13. Install batteries and connect cables.
14. Turn battery disconnect switch on.
15. Turn key switch to RUN position for one minute to allow fuel system to prime.

NOTE: While operating engine at low idle, visually check all instruments and indicators to ensure they function properly.

16. Start and operate engine at low idle for several minutes.
17. Check tractor functions and systems, including air conditioning.

Specifications

Engine: John Deere

[Ag]	9RX		
	490	540	590
POWER			
Final Tier 4/Stage V Engine			
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R120)	490 hp (360 kW)	540 hp (397 kW)	590 hp (434 kW)
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R24)	470 hp (346 kW)	518 hp (381 kW)	566 hp (417 kW)
Rated PTO power (hp SAE) at rated PTO speed (1895 erpm) ^{bcd}	335 hp (249 kW)		
Tier 3/Stage IIIA Engine			
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R120)	490 hp (360 kW)	540 hp (397 kW)	590 hp (434 kW)
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R24)	442 hp (325 kW)	492 hp (362 kW)	542 hp (399 kW)
Rated PTO power (hp SAE) at rated PTO speed (1895 erpm) ^{bcd}	335 hp (249 kW)		
Tier 2/Stage II Engine			
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R120)	490 hp (360 kW)	540 hp (397 kW)	590 hp (434 kW)
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R24)	442 hp (325 kW)	492 hp (362 kW)	542 hp (399 kW)
Rated PTO power (hp SAE) at rated PTO speed (1895 erpm) ^{bcd}	335 hp (249 kW)		
ENGINE			
Manufacturer			
Final Tier 4/Stage V, Tier 3/Stage IIIA, and Tier 2/Stage II	John Deere PowerTech™ 13.6 L (827 in ³) / JD14X		
Type	Diesel, in-line, 6-cylinder, wet-sleeve cylinder liners with 4 valves-in-head		
Aspiration			
Final Tier 4/Stage V	Single wastegated turbocharger air-to-air aftercooling and cooled exhaust gas recirculation	Dual series turbocharger with wastegated first stage, fixed geometry second stage, air-to-air aftercooling and cooled exhaust gas recirculation	
Tier 3/Stage IIIA	Single variable geometry turbocharger air-to-air aftercooling and cooled exhaust gas recirculation	Dual series turbocharger with wastegated first stage, fixed geometry second stage, air-to-air aftercooling and cooled exhaust gas recirculation	
Tier 2/Stage II	Dual Series Turbocharger with fixed geometry first stage, variable geometry second stage, air-to-air aftercooling		
Filter, engine air	Dual-stage with exhaust aspiration		
Displacement	13.6 L (827 in ³)		
Bore and Stroke	132 x 165 mm (5.20 x 6.50 in)		
Compression Ratio	15.9:1		
Rated Speed	2100 rpm		
Lubrication	Full-pressure, full-flow filtration with bypass		
Filter, Oil	Replaceable spin-on style oil filter		
FUEL SYSTEM			
Injection Pump Type	Electronically-Controlled, High-Pressure Common Rail with Electric Fuel Transfer Pump (Self-Priming)		
Filter System	Two-stage with water separator and service indicator light		
Filter, Primary	10-micron replaceable cartridge with water indication sensor and drain		

Specifications

[Ag]	9RX		
	490	540	590
Filter, Secondary	2-micron spin-on element		
Required Fuel Type			
Final Tier 4/Stage V	Ultra-Low Sulfur Diesel (B20 Diesel Compatible)		
Tier 3/Stage IIIA	50 ppm Sulfur Fuel (B20 Max Diesel Compatible)		
Tier 2/Stage II	500 ppm Sulfur Fuel (B20 Max Diesel Compatible)		

^aGerman term for horsepower in which one PS is equivalent to .9863 SAE horsepower.

^bDoes not include optional equipment losses.

^c80% Factory Observed MOE value.

^dRated values are stated when tractor is stationary.

[Scraper]	9RX		
	490	540	590
POWER			
Final Tier 4/Stage V Engine			
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R120)	490 hp (360 kW)	540 hp (397 kW)	590 hp (434 kW)
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R24)	470 hp (346 kW)	518 hp (381 kW)	566 hp (417 kW)
Tier 3/Stage IIIA Engine			
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R120)	490 hp (360 kW)	540 hp (397 kW)	590 hp (434 kW)
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R24)	442 hp (325 kW)	492 hp (362 kW)	542 hp (399 kW)
Tier 2/Stage II Engine			
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R120)	490 hp (360 kW)	540 hp (397 kW)	590 hp (434 kW)
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R24)	442 hp (325 kW)	492 hp (362 kW)	542 hp (399 kW)
ENGINE			
Manufacturer			
Final Tier 4/Stage V, Tier 3/Stage IIIA, and Tier 2/Stage II	John Deere PowerTech™ 13.6 L (827 in³) / JD14X		
Type	Diesel, in-line, 6-cylinder, wet-sleeve cylinder liners with 4 valves-in-head		
Aspiration			
Final Tier 4/Stage V	Single wastegated turbocharger air-to-air aftercooling and cooled exhaust gas recirculation	Dual series turbocharger with wastegated first stage, fixed geometry second stage, air-to-air aftercooling and cooled exhaust gas recirculation	
Tier 3/Stage IIIA	Single variable geometry turbocharger air-to-air aftercooling and cooled exhaust gas recirculation	Dual series turbocharger with wastegated first stage, fixed geometry second stage, air-to-air aftercooling and cooled exhaust gas recirculation	
Tier 2/Stage II	Dual Series Turbocharger with fixed geometry first stage, variable geometry second stage, air-to-air aftercooling		
Filter, engine air	Dual-stage with exhaust aspiration		
Displacement	13.6 L (827 in³)		
Bore and Stroke	132 x 165 mm (5.20 x 6.50 in)		
Compression Ratio	15.9:1		
Rated Speed	2100 rpm		
Lubrication	Full-pressure, full-flow filtration with bypass		
Filter, Oil	Replaceable spin-on style oil filter		

Specifications

[Scraper]	9RX		
	490	540	590
FUEL SYSTEM			
Injection Pump Type	Electronically-Controlled, High-Pressure Common Rail with Electric Fuel Transfer Pump (Self-Priming)		
Filter system	Two-stage with water separator and service indicator light		
Filter, primary	10-micron replaceable cartridge with water indication sensor and drain		
Filter, secondary	2-micron spin-on element		
Required Fuel Type			
Final Tier 4/Stage V	Ultra-Low Sulfur Diesel (B20 Diesel Compatible)		
Tier 3/Stage IIIA	50 ppm Sulfur Fuel (B20 Max Diesel Compatible)		
Tier 2/Stage II	500 ppm Sulfur Fuel (B20 Max Diesel Compatible)		

^aGerman term for horsepower in which one PS is equivalent to .9863 SAE horsepower.

AK08008,0001496-19-24AUG21

Engine: QSX15 Cummins®

NOTE: 9RX 640 [Ag] is available in Final Tier 4/Stage V and Tier 3/Stage IIIA tractors.

[Ag]	9RX
	640
POWER	
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R120)	640 hp (471 kW)
Rated Engine power PS ^a (hp ISO) at 2100 engine rpm (ECE-R24)	614 hp (452 kW)
Rated PTO power (hp SAE) at rated PTO speed (1895 erpm) ^{bcd}	335 hp (250 kW)
ENGINE	
Manufacturer	Cummins® QSX15 15 L (912 in ³)
Type	Diesel, in-line, 6-cylinder, wet-sleeve cylinder liners with 4 valves-in-head
Aspiration	Single variable geometry turbocharger, air-to-air aftercooling, and cooled exhaust gas recirculation
Filter, engine air	Dual-stage with exhaust aspiration
Displacement	15 L (912 in ³)
Bore and Stroke	137 x 169 mm (5.39 x 6.65 in)
Compression Ratio	17.2:1
Rated Speed	2100 rpm
Lubrication	Full-pressure, full-flow filtration with bypass
Filter, Oil	Replaceable spin-on style oil filter
FUEL SYSTEM	
Injection Pump Type	High-pressure common rail (self-priming)
Filter System	2-stage with water separator and service indicator light
Filter, Primary	7-micron spin-on style with water in fuel sensor and drain
Filter, Secondary	3-micron spin-on element
Required Fuel Type	
Final Tier 4/Stage V	Ultra-Low Sulfur Diesel (B20 Diesel Compatible)

Specifications

[Ag]	9RX
	640
Tier 3/Stage IIIA	50 ppm Sulfur Fuel (B20 Max Diesel Compatible)

^aGerman term for horsepower in which one PS is equivalent to .9863 SAE horsepower

^bDoes not include optional equipment losses.

^c80% Factory Observed MOE value.

^dRated values are stated when tractor is stationary.

AK08008,0001497-19-24AUG21

Capacities

[Ag]	9RX			
	490	540	590	640
FUEL TANK	1514.0 L (400.0 gal)			
DEF TANK ^a	120.0 L (31.7 gal)			
COOLING SYSTEM (Includes de-aeration tank)				
Final Tier 4/Stage V and Tier 3/Stage IIIA	56.5 L (14.9 gal)			62.0 L (16.3 gal)
Tier 2/Stage II	56.5 L (14.9 gal)			—
ENGINE CRANKCASE OIL (Includes filter)				
Final Tier 4/Stage V and Tier 3/Stage IIIA	60.8 L (16.1 gal)			43.5 L (11.5 gal) ^b
Tier 2/Stage II	60.8 L (16.1 gal)			—
HYDRAULIC/TRANSMISSION/AXLE OIL				
Final Tier 4/Stage V and Tier 3/Stage IIIA				
Without 3-point rear hitch and PTO	234.7 L (62.0 gal)			
With 3-point rear hitch and PTO	242.3 L (64.0 gal)			
Tier 2/Stage II				
Without 3-point rear hitch and PTO	234.7 L (62.0 gal)			—
With 3-point rear hitch and PTO	242.3 L (64.0 gal)			—
HYDRAULIC RESERVOIR REFERENCE MARKS				
FULL COLD Mark	103.0 L (27.2 gal)			
MIN COLD Mark	91.8 L (24.3 gal)			
High-volume take-out oil mark ^{cd}	150.0 L (39.6 gal)			
TRANSMISSION/HYDRAULIC RESERVOIR				
High-flow hydraulics	268.5 L (71.0 gal)			

^aFinal Tier 4/Stage V Engine Only

^b41.6 L Crankcase, 1.9 Prefill Filter (11.0 gal Crankcase, 0.5 gal Pre-fill Filter)

^cDot half way up the sight tube.

^dFor applications requiring large volumes of oil (For example, an Air Seeder.)

[Scraper]	9RX		
	490	540	590
FUEL TANK	1514.0 L (400.0 gal)		
DEF TANK ^a	120.0 L (31.7 gal)		
COOLING SYSTEM (Includes de-aeration tank)			
Final Tier 4/Stage V, Tier 3/Stage IIIA, and Tier 2/Stage II	56.5 L (14.9 gal)		

Specifications

[Scraper]	9RX		
	490	540	590
ENGINE CRANKCASE OIL (Includes filter)			
Final Tier 4/Stage V, Tier 3/Stage IIIA, and Tier 2/Stage II	60.8 L (16.1 gal)		
HYDRAULIC RESERVOIR VOLUME REFERENCE MARKS			
FULL COLD Mark	103.0 L (27.2 gal)		
MIN COLD Mark	91.8 L (24.3 gal)		
High Volume Take Out Oil Mark (Dot half way up the sight tube) ^b	150.0 L (39.6 gal)		
HYDRAULIC/TRANSMISSION/AXLE OIL			
Without 3-point rear hitch and PTO	234.7 L (62.0 gal)		

^aFinal Tier 4/Stage V Engine Only

^bFor applications requiring large volumes of oil (For example, pulling three scrapers.)

AK08008,0001498-19-24AUG21

Hydraulics

[Ag]	9RX			
	490	540	590	640
Type	Closed-Center, Pressure/Flow Compensated/Partially Charged			
Selective Control Valves	Electro-Hydraulic: Standard—4; Optional—5, 6, 7, and 8			
Maximum Pressure	21029 kPa (3050 psi)			
Hydraulic Pumps				
Type	Axial Piston			
Displacement (Per pump)	85 cm ³ (5.2 in ³)			
PUMP FLOW—Maximum				
Single Hydraulic Pump	219 L/min (58 gal/min)			
Dual Hydraulic Pump	435 L/min (115 gal/min)			
PUMP FLOW—Available ^a				
Single Hydraulic Pump				
At one 1/2" SCVs	140 L/min (35 gal/min)			
At two 1/2" SCVs	220 L/min (58 gal/min)			
Dual Hydraulic Pump				
Top two 1/2" SCVs	215 L/min (57 gal/min)			
Bottom three 1/2" SCVs	220 L/min (58 gal/min)			
At one 3/4" coupler	159 L/min (42 gal/min)			

^aApproximate flow values @ 2100 engine rpm.

[Scraper]	9RX		
	490	540	590
Type	Closed-Center, Pressure/Flow Compensated/Partially Charged		
Selective Control Valves (SCVs)	Electro-Hydraulic: Standard—4; Optional—6		
Maximum Pressure	21029 kPa (3050 psi)		
Hydraulic Pumps			
Type	Axial Piston		
Displacement (Per pump)	85 cm ³ (5.2 in ³)		

Specifications

[Scraper]	9RX		
	490	540	590
PUMP FLOW—Maximum			
Single Hydraulic Pump	219 L/min (58 gal/min)		
Dual Hydraulic Pump	435 L/min (115 gal/min)		
PUMP FLOW—Available ^a			
Single Hydraulic Pump			
At a single SCV - 3/4" coupler	140 L/min (35 gal/min)		
At two SCVs	219 L/min (58 gal/min)		
Dual Hydraulic Pump			
At one 3/4" SCV	159 L/min (42 gal/min)		
At multiple 3/4" SCVs	435 L/min (115 gal/min)		

^aApproximate flow values @ 2100 engine rpm.

AK08008,000128E-19-22JUN21

Transmission and Power Train

[Ag]	9RX			
	490	540	590	640
TRANSMISSION				
e18™ PowerShift™ Transmission with Efficiency Manager™ (40 km/h (25 mph)) ^a (18 forward, 6 reverse)	Standard			
AXLE FINAL DRIVES				
Bull gear and double idler with floating pinion	Standard			
AXLES				
Front and rear axle supports	Optional ^{bc}			
TRACKS	Camso™ 3500-, 4500-, and 6500-Series Tracks Camso™ DURABUILT™ 3500 and Camso™ DURABUILT™ 6500 Series Tracks with Duradrive™ Technology			
457 mm (18 in) wide tracks	Optional		—	
610 mm (24 in) wide tracks	Optional		—	
762 mm (30 in) wide tracks	Standard			
914 mm (36 in) wide tracks	Optional			
DIFFERENTIAL LOCK				
Full-locking electrohydraulic	Standard			
Auto disengagement for various selectable turn angles	Standard			
STEERING				
Hydraulic power-steering with electric pump back-up	Standard			
ActiveCommand Steering (ACS™)	Optional			
BRAKES				
Hydraulic power, wet disc, self-adjusting on front and rear axle	Standard			

Specifications

[Ag]	9RX			
	490	540	590	640
Hydraulic trailer brakes	Optional			

^aFor ground speed data, see Ground Speeds—e18™ PowerShift™ Transmission in this Operator's Manual section.

^bWith 30 or 36 in tracks

^cIncluded with 3-point hitch

[Scraper]	9RX		
	490	540	590
TRANSMISSION			
e18™ PowerShift™ Transmission with Efficiency Manager™ (40 km/h (25 mph)) ^a (18 forward, 6 reverse)	Standard		
AXLE FINAL DRIVES			
Bull gear and double idler with floating pinion	Standard		
AXLES			
Front and rear axle supports	Standard		
TRACKS			
762 mm (30 in) wide tracks	Camso™ DURADRIIVE™ 6500 Scraper Special Tracks		
	Standard		
DIFFERENTIAL LOCK			
Hydraulic power-steering with electric pump back-up	Standard		
STEERING			
Hydraulic power-steering with electric pump back-up	Standard		
ActiveCommand Steering (ACS™)	Optional		
BRAKES			
Hydraulic power, wet disk, self-adjusting on front and rear axle	Standard		
Hydraulic trailer brakes	Optional		

^aFor ground speed data, see Ground Speeds—e18™ PowerShift™ Transmission in this Operator's Manual section.

AK08008,000149A-19-28JUL21

PTO [Ag], Hitch [Ag], and Drawbar

[Ag]	9RX			
	490	540	590	640
PTO (Independent)				
1-3/4 in, 20-spline 1000-rpm	Optional			
3-POINT HITCH (Electric-Hydraulic with Draft-Sensing)				
Category 4N/4 with Quik-Coupler				
6804 kg (15000 lb)	Optional			
9072 kg (20000 lb)	Optional			
DRAWBAR				
For Drawbar Load Limitations, see Drawbar Load Limitations in the Drawbar [Ag] section of this Operator's Manual.				

Specifications

[Scraper]	9RX		
	490	540	590
DRAWBAR			
For Drawbar Load Limitations, see Scraper Applications in the Drawbar [Scraper] section of this Operator's Manual.			

AK08008,000149B-19-24AUG21

Electrical

[Ag]	9RX			
	490	540	590	640
Alternator/Battery	Standard—240 amp/12 Volt; Optional—330 amp/12 Volt			
Total Cold Cranking Amps	2775 (3-925 CCA) ^a		3700 (4-925 CCA) ^b	

^aThree batteries in parallel, negative ground

^bFour batteries in parallel, negative ground

[Scraper]	9RX		
	490	540	590
Alternator/Battery	Standard—240 amp/12 Volt; Optional—330 amp/12 Volt		
Total Cold Cranking Amps	2775 (3-925CCA) ^a		3700 (4-925 CCA) ^b

^aThree batteries in parallel, negative ground

^bFour batteries in parallel, negative ground

AK08008,0001291-19-22JUN21

Integrated Technology


AutoTrac™ Ready	Standard
Modular Telematics Gateway (MTG)	Available with JDLINK™ hardware, activations, and Ethernet Harness ^a
Service ADVISOR™ Remote	Available with JDLINK™ hardware and activations
CommandCenter™	
8.4 inch (213 mm) Video with 4200 Processor	Single video input ^b
10.0 inch (254 mm) Video with 4600 Processor	Four video inputs ^b

^aAvailability dependent upon destination

^b(Tyco Connector PN 776536-1) For camera using PAL or NTSC signal. Integrated behind rear cab cover. Camera and extension harness available through parts.

AK08008,0000F09-19-12OCT20

Overall Dimensions

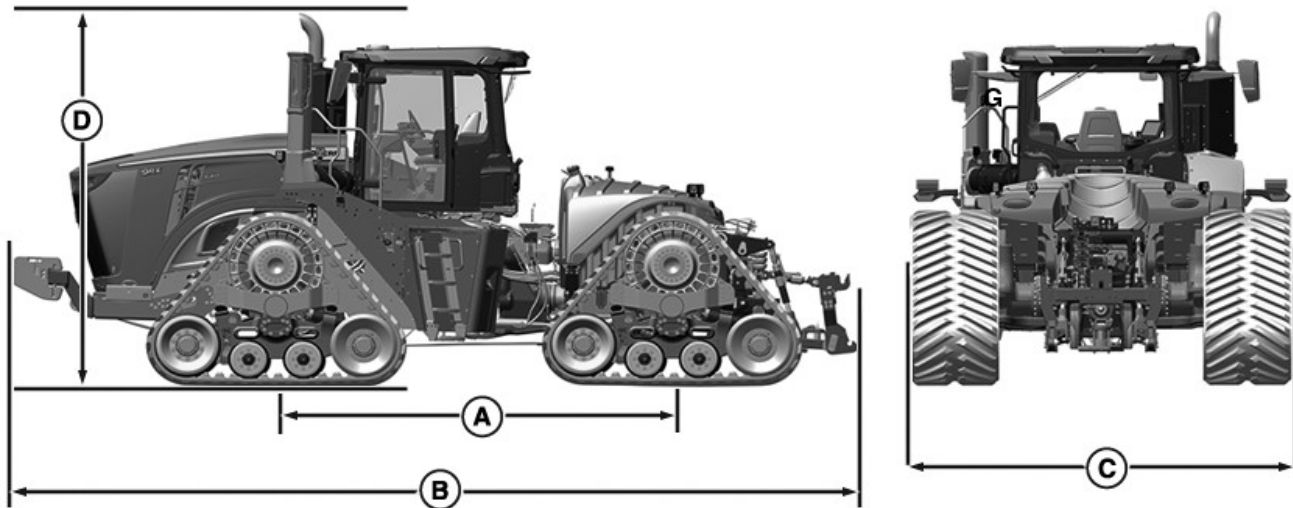

RXA0183326—UN—28MAY21

[Ag]	9RX			
	490	540	590	640
LENGTH				
Wheelbase (A)	4128 mm (162.3 in)			
Overall Length (including hitch and coupler) (B)	8795 mm (346.3 in)			
OVERALL WIDTH (C)				
Belt Width - 457 mm (18 in)				
Track Spacing				
2032 mm (80 in)	2489 mm (98.0 in)	—		
2235 mm (88 in)	2692 mm (106.0 in)	—		
3048 mm (120 in)	3505 mm (138.0 in)	—		
Belt Width - 610 mm (24 in)				
Track Spacing				
2032 mm (80 in)	2642 mm (104.0 in)	—		
2235 mm (88 in)	2845 mm (112.0 in)	—		
3048 mm (120 in)	3658 mm (144.0 in)	—		
Belt Width - 762 mm (30 in)				
Track Spacing				
2218 mm (87 in)	2980 mm (117.3 in)			
3048 mm (120 in)	3810 mm (150.0 in)			
Belt Width - 914 mm (36 in)				
Track Spacing				
2218 mm (87 in)	3132 mm (123.3 in)			
3048 mm (120 in)	3962 mm (156.0 in)			
OVERALL HEIGHT (D)				
Top of Roof	3716 mm (146.3 in)			


Specifications

[Ag]	9RX			
	490	540	590	640
With optional FOPS	3730 mm (146.9 in)			
With StarFire™ receiver bracket	3729 mm (146.8 in)			
With integrated StarFire™ receiver	3747 mm (147.5 in)			
With universal StarFire™ receiver	3866 mm (152.2 in)			
Top of Exhaust				
13.6 L				
Final Tier 4	3685 mm (145.1 in)			—
Stage V	3949 mm (155.5 in)			—
Tier 3/Stage IIIA and Tier 2/Stage II	3690 mm (145.3 in)			—
15 L	—			4101 mm (161.5 in) ^a / 3690 mm _b (145.3 in)
TURNING DIAMETER				
457 mm (18 in) tracks, 610 mm (24 in) tracks, 762 mm (30 in) tracks, and 914 mm (36 in) tracks	6.4 m (21.0 ft)			
Drawbar ^c	325 mm (12.8 in)			
ESTIMATED SHIPPING WEIGHT				
Tractor equipped with Tier 4/Stage V engine, 30 inch standard tracks, 87 inch spacing, unladen, a full fuel tank, no PTO, and no 3-point hitch	26426 kg (58259 lb)			26713 kg (58892 lb)
Tractor equipped with Tier 3/Stage IIIA engine, 30 inch standard tracks, 87 inch spacing, unladen, a full fuel tank, no PTO, and no 3-point hitch	26267 kg (57909 lb)			26509 kg (58442 lb)
Tractor equipped with Tier 2/Stage II engine, 30 inch standard tracks, 87 inch spacing, unladen, a full fuel tank, no PTO, and no 3-point hitch	26267 kg (57909 lb)			—
Maximum Ballast Level	28123 kg (62000 lb)		30390 kg (67000 lb)	

^aFinal Tier 4/Stage V

^bTier 3/Stage IIIA

^cGround to bottom of drawbar support.

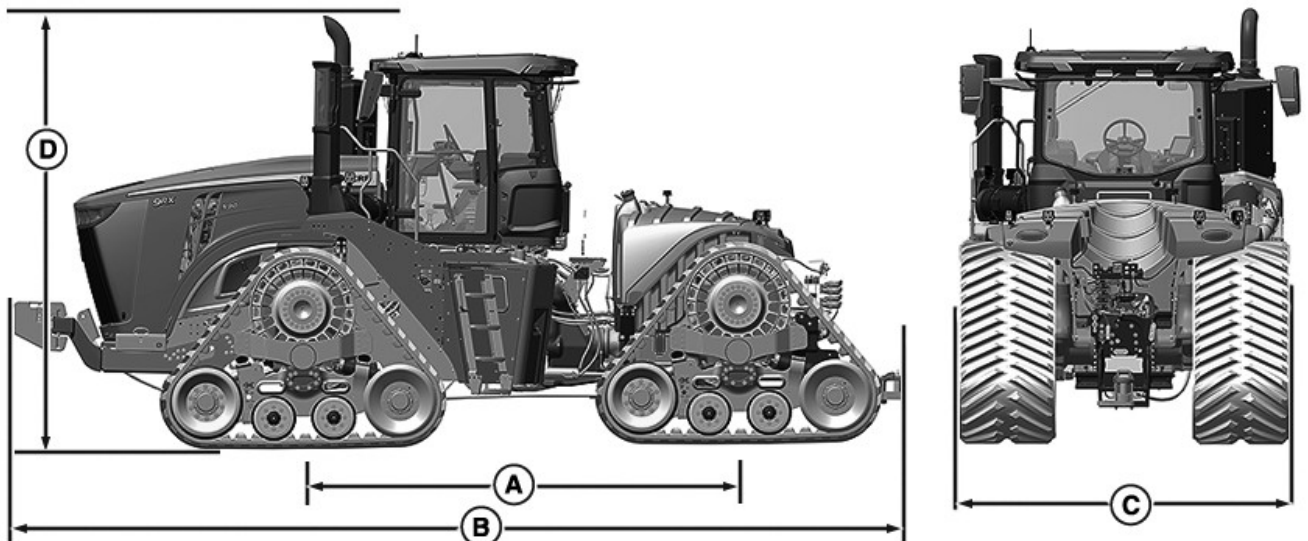

RXA0183327—UN—28MAY21

Specifications

[Scraper]	9RX		
	490	540	590
LENGTH			
Wheelbase (A)	4128 mm (162.5 in)		
Overall Length with Front Weights and Drawbar ^a (B)	8454 mm (332.8 in)		
OVERALL WIDTH (C)			
Overall Width ^b	2980 mm (117.3 in)		
OVERALL HEIGHT (D)			
Top of Roof	3730 mm (146.9 in)		
With integrated StarFire™ receiver	3747 mm (147.5 in)		
With universal StarFire™ receiver	3866 mm (152.2 in)		
Top of Exhaust			
13.6 L			
Final Tier 4	3685 mm (145.1 in)		
Stage V	3949 mm (155.5 in)		
Tier 3/Stage IIIA and Tier 2/Stage II	3690 mm (145.3 in)		
TURNING DIAMETER			
762 mm (30 in) tracks	9.2 m (30.2 ft)		
Drawbar ^c			
325 mm (12.8 in)			
ESTIMATED SHIPPING WEIGHT			
Tractor equipped with Tier 4/Stage V engine, 30 inch standard tracks, 87 inch spacing, unladen, and a full fuel tank	26490 kg (58400 lb)		
Tractor equipped with Tier 3/Stage IIIA and Tier 2/Stage II engine, 30 inch standard tracks, 87 inch spacing, unladen, and a full fuel tank	26331 kg (58050 lb)		
Maximum Ballast Level			
27216 kg (60000 lb)			

^aCategory 5 drawbar in farthest back position.

^bBelt Width—762 mm (30 in).

^cGround to bottom of drawbar support.

AK08008,000149E-19-24AUG21

Maximum Permissible Static Vertical Load

Maximum Permissible Load [Ag] kg (lb)				
Axle	9RX			
	490	540	590	640
Front	16000 (35274)			
Rear	16000 (35274)			
Total	32000 (70548)			

Maximum Permissible Load [Scraper] kg (lb)			
Axle	9RX		
	490	540	590
Front	14061 (31000)		
Rear	14061 (31000)		
Total	28123 (62000)		

- Average Contact Pressure (at technically permissible maximum mass):
 - Front Axle: 458 kPa (66.4 psi)
 - Rear Axle: 458 kPa (66.4 psi)

For drawbar loads, see Drawbar Load Limitations in the

Drawbar [Ag] section or Scraper Applications in the Drawbar [Scraper] section of this Operator's Manual.

AK08008,0001294-19-25AUG21

Sound Level

Maximum sound level at operator's ear^a: 86 dB

Maximum pass-by noise^b: 89 dB

^aMeasurement method in accordance with Directive 2009/76/EC (1), Supplement II

^bMeasurement method in accordance with Directive 2009/63/EC (2)

NOTE: Sound level at operator ear is below the directive requirement of 86 dB with cab windows and doors closed. Drive-by sound level is below the directive requirement of 89 dB.

AK08008,00014A2-19-19NOV19

Vibration Level


Maximum vibration level at operator's seat^a: 2.4 m/s²

Maximum vibration level at steering wheel^a: 1.8 m/s²

^aMeasurement method in accordance with GOST 31193

EC82310,0000F4D-19-14JAN21

Cab Classification According to EN 15695-1 (for Application of Crop Protection Chemicals and Liquid Fertilizer)

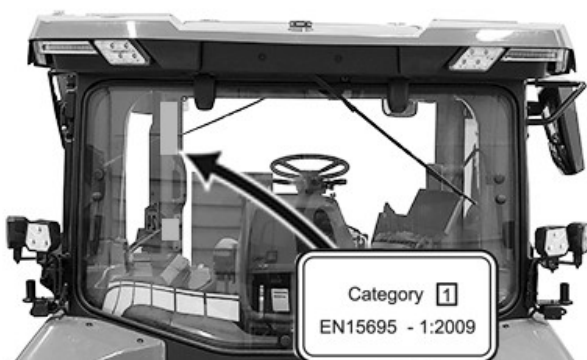

RXA0171868—UN—05NOV19

Label Shown for Illustration Purposes Only (May Not Indicate the Category of the Cab Installed)

Cab classification according to EN 15695-1 provides information on the effectiveness of protection against harmful substances offered by the cab.

Categories 1—4 are used for classification and specified on a label inside the cab.

Replace label if missing or damaged. See your John Deere dealer.

NOTE: EU and EAEU-compliant tractors are only equipped with a Category 1 cab.

Category 1—Cab does not offer any protection against substances which are harmful to health.

Category 2—Cab offers protection against solid airborne particles such as dust, but not against aerosols and vapors.

Category 3—Cab offers protection against dust and aerosols (liquid airborne substances such as spray), but not against vapors.

Category 4—Cab offers protection against dust, aerosols, and vapors.

CAUTION: Before working in an environment containing hazardous substances (for example: when using pesticides) check whether the cab offers sufficient protection. Refer to spraying liquid manufacturer's product data sheets specifying Category cab required.

In case of Category 3 and 4 cabs, determine whether the installed filters have been checked according to EN 15695-2:2009 and whether they are suitable for the chemical being used (refer to the manufacturer's information) before working in an environment containing hazardous substances.

Cab fresh air and recirculation air filters must be serviced as specified. Change filters every 1000 hours or annually, whichever occurs first. See Cab Recirculation Air Filter and Cab Fresh Air Filter in Service—Change section of this Operator's Manual.

Refer to product data sheets and product identification of the crop protection chemicals. These contain important information on how to avoid hazards.

The following requirements must be met to offer best protection:

1. All seals (on door, windows, and roof) in good condition.
2. Doors, windows, and roof closed.
3. Grommets for cables in the cab sealed properly.
4. Fan on.
5. Cab air filters in good condition.

EC82310,0000CF2-19-22APR21

Ground Speeds—e18™ PowerShift™ Transmission

Forward Speeds

Gear	Ground Speeds ^a km/h (mph)
1	4.1 (2.5)
2	5.0 (3.1)
3	5.5 (3.4)
4	6.2 (3.9)
5	6.8 (4.2)
6	7.7 (4.8)
7	8.4 (5.2)
8	9.4 (5.8)
9	10.4 (6.5)
10	11.6 (7.2)
11	12.8 (8.0)
12	14.0 (8.7)
13	15.7 (9.8)
14	17.3 (10.7)
15	21.4 (13.3)
16	25.0 (15.5) ^{bc}
	26.4 (16.4) ^p
17	25.0 (15.5) ^{bc}
	32.4 (20.1) ^p
18	25.0 (15.5) ^b @ 1316 erpm ^c
	39.9 (24.8) ^p

^aGround speeds are at a rated engine speed of 2100 erpm (unless otherwise noted).

^bIf equipped.

^cEngine speed is electronically limited.

Reverse Speeds

Gear	Ground Speeds km/h (mph)
R1	4.1 (2.5)
R2	5.5 (3.4)
R3	6.2 (3.9)
R4	8.4 (5.2)
R5	9.4 (5.8)
R6	12.8 (8.0)

KD34109,0000947-19-27JUL21

Eurasian Economic Union



TS1738—UN—26APR16

EAC Marking

This information applies only to products which bear the EAC conformity mark of the Eurasian Economic Union member states.

Manufacturer:

Deere & Company, Moline, Illinois U.S.A.

Name of the authorized representative in the Eurasian Economic Union:

Limited Liability Company
“John Deere Rus”

Address of the authorized representative:

142050, Russia, Moscow region, Domodedovo district,
Domodedovo, Beliy Stolbi micro district, vladenye
“Warehouse 104”, Building 2

For technical support, contact your dealer.

Date of manufacture is denoted by the product marking on or near the serial number plate.

DX,EAC-19-27APR16

Machine Design Life

This machine is designed and manufactured to provide a long life of productive operation, however actual attainable life depends on a number of factors including the severity of working conditions and completion of recommended maintenance. (See the Service section of this manual.)

Periodically inspect and review the machine in conjunction with your John Deere dealer. The review may result in recommendations for service, component repair, remanufacture or replacement, or, if at the end of life, that the machine be removed from operation. (See separate decommissioning section of this manual for information on disposal and recycling of machine components.)

No machine should be operated if safety-related components are missing or in need of service. All missing or damaged safety-related components, including safety signs, should be repaired or replaced before operating.

DX,MACH,DESIGN,LIFE-19-14SEP15


Required Emission-Related Information

Service Provider

A qualified repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.

DX,EMISSIONS,REQINFO-19-12JUN15

Carbon Dioxide Emissions (CO₂)

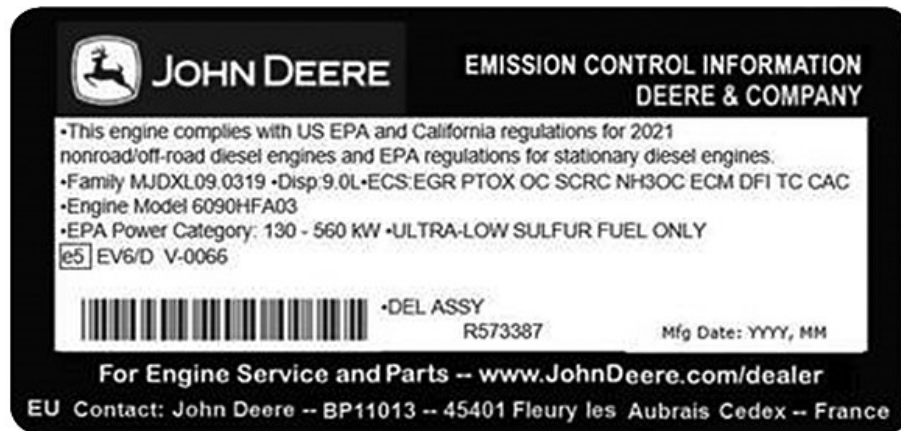

SAMPLE - Engine Emissions Label

RG33429—UN—04FEB21

To identify the carbon dioxide (CO₂) output, locate the engine emissions label. Find the appropriate family on the emissions label and reference the chart.

NOTE: The first letter of the family number is not utilized for family identification on the chart.

Emissions Label Family	CO ₂ Result
_JDXL02.9323	952 g/kW-hr
_JDXL02.9327	784 g/kW-hr
_JDXL04.5337	819 g/kW-hr
_JDXL04.5338	682 g/kW-hr
_JDXL04.5304	1004 g/kW-hr
_JDXN04.5174	792 g/kW-hr
_JDXL06.8324	720 g/kW-hr
_JDXL06.8328	683 g/kW-hr
_JDXL06.8336	701 g/kW-hr
_JDXN06.8175	771 g/kW-hr
_JDXL09.0319	646 g/kW-hr
_JDXL09.0325	695 g/kW-hr
_JDXL09.0329	657 g/kW-hr
_JDXL09.0333	650 g/kW-hr
_JDXL13.5326	684 g/kW-hr
_JDXL13.6320	651 g/kW-hr
_JDXL13.5340	632 g/kW-hr

Emissions Label Family	CO ₂ Result
_JDXL18.0341	683 g/kW-hr
F28	870 g/kW-hr
F32	710 g/kW-hr
F33	677 g/kW-hr

This CO₂ measurement results from testing over a fixed test cycle under laboratory conditions a(n) (parent) engine representative of the engine type (engine family) and shall not imply or express any guarantee of the performance of a particular engine.

DX,EMISSIONS,CO2-19-20JUL21

Third-Party Software Notifications and Licenses

The copyrights for certain portions of the Software on this machine may be owned or licensed by other third parties ("Third Party Software") and is used and distributed under those licenses. The License Agreement link in the System Information section of the CommandCenter™ Software Manager includes the acknowledgements, notices and licenses for such Third Party Software. The Third Party Software notices are included with the distribution of this License Agreement. If you are unable to locate these Third Party Software notices, please write to the address included below. The

Third Party Software is licensed according to the applicable Third Party Software license notwithstanding anything to the contrary in this Agreement. If the Third Party Software contains copyrighted software that is licensed under the GPL/LGPL or other copyleft licenses, copies of those licenses are included in the Third Party Notices. You may obtain the complete corresponding source code for such Third Party Software from Deere for a period of three years after our last shipment of the Software by sending a request to:

Deere Open Source Compliance Team
P.O. Box 1202
Moline, IL 61266-1202
USA

Please include name of the product and the version number of the software in the request letter. This offer is valid to anyone in receipt of this information.

EC82310,0000F7B-19-27JAN21

Identification Numbers

Identification Plates

Each tractor is equipped with the identification plates shown in this section. The complete series of letters and numbers stamped on the plates:

- Identify a component or assembly.
- Are required when ordering parts or identifying a tractor or component for any John Deere product support program.

For each identification plate, accurately record the identification numbers in the space provided.

RW29387,00003B7-19-04MAR20

Position 11		
Code		Transmission and Configuration Option
[Ag]	[Scraper]	
J	L	e18™ Powershift™

SV81855,0000386-19-25AUG21

Product Identification Number (China Only)

* _____ *

Record the PIN in the Space Provided

Product Identification Number

* _____ *

Record the PIN in the Space Provided



RXA0185230—UN—25AUG21

PIN Plate (A) is on the Right-Hand Side of the Tractor Frame



RXA0185273—UN—30AUG21

PIN Plate (A) is on the Right-Hand Side of the Tractor Frame

Position 8—Trim and Series Code

Position 10—Character designating calendar year of manufacture

Position 11—Transmission and Configuration Option Code

Position 8			
Trim Code	Series Code		
	2	4	6
R	D	M	S

Position 10					
Code	M	N	P	R	S
Year	2021	2022	2023	2024	2025

JOHN DEERE	
PRODUCT IDENTIFICATION NUMBER 出厂编号	

TRACK TRACTOR 履带式拖拉机	_____
MADE IN USA 美国制造	
DEERE & COMPANY WATERLOO, IOWA, USA 迪尔公司 美国, 爱荷华州, 滑铁卢市	
ENGINE POWER 发动机标定功率 (12 小时)	_____
BUILD DATE 制造日期	_____
STANDARD NUMBER 拖拉机执行标准	_____

RXA0162315—UN—27FEB18

PIN Plate

Position 8—Trim and Series Code

Position 10—Character designating calendar year of manufacture

Position 11—Transmission and Configuration Option Code

Identification Numbers

Position 8			
Trim Code	Series Code		
	2	4	6
R	D	M	S

Position 10					
Code	M	N	P	R	S
Year	2021	2022	2023	2024	2025

Position 11		
Code		Transmission and Configuration Option
[Ag]	[Scraper]	
J	L	e18™ Powershift™


KD34109,000081E-19-30AUG21

Engine Serial Number

_____*

Record the Serial Number in the Space Provided

John Deere Engine Serial Plate

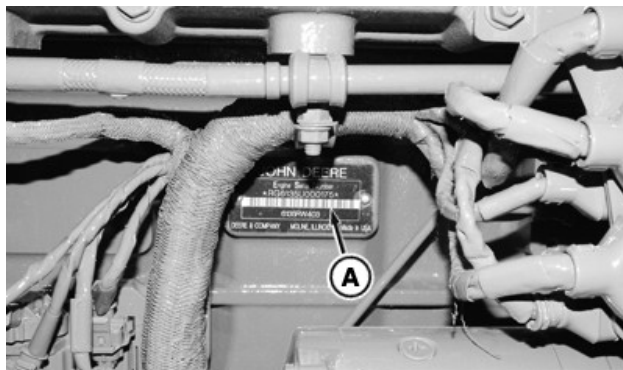

RXA0160356—UN—03AUG17

Engine Serial Number Plate (A) is on the Left-Hand Side of the Engine Near the Starter (Parts Removed For Clarity)



RXA0184055—UN—10JUN21

Engine Serial Number Plate Example

Position 7—Engine emission configuration code (B)

Position 7	
Code	Engine Emission Configuration
U	Final Tier 4/Stage V
L	Tier 3/Stage IIIA
G	Tier 2/Stage II

Cummins® 15 L Engine Dataplate

_____*

Record the Serial Number in the Space Provided



RXA0160138—UN—07JUL17

Engine Serial Number Plate (C) is on the Left-Hand Side of the Engine Valve Cover

The engine dataplate, on top of the rocker lever cover, provides the model identification and other important data about the engine.

Have the following engine data available when communicating with a Cummins® Authorized Repair Location. The information on the dataplate is **mandatory** when sourcing service parts:

- 1.Engine serial number (ESN)
- 2.Control parts list (CPL)
- 3.Model
- 4.Indicates the Emissions Control Systems



RXA0160139—UN—07JUL17

Engine Control Module (ECM) Dataplate (D) is on the Left-Hand Side of the Engine (on Front of the ECM)

The abbreviations on the dataplate are explained as follows:


- P/N = part number
- ESN = engine serial number
- S/N = serial number
- D/C = date code
- E/C = engine calibration

RW29387,0000A27-19-09JUN21

Cab Serial Number

* _____ *

Record the Serial Number in the Space Provided

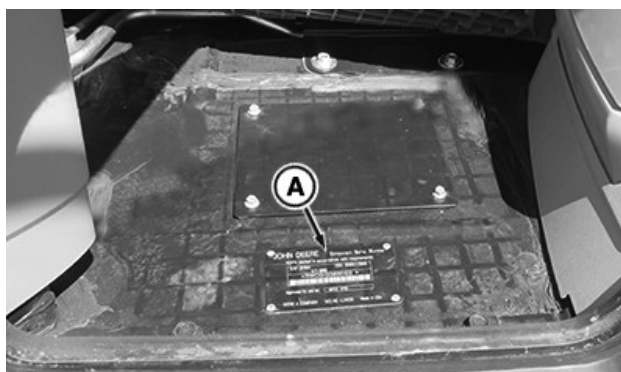

RXA0179149—UN—18AUG20


Cab Serial Number Plate (A) is Underneath the Cab Floor Mat at the Cab Door

EC82310,000006F-19-22OCT20

Transmission Serial Number

* _____ *

Record the Serial Number in the Space Provided

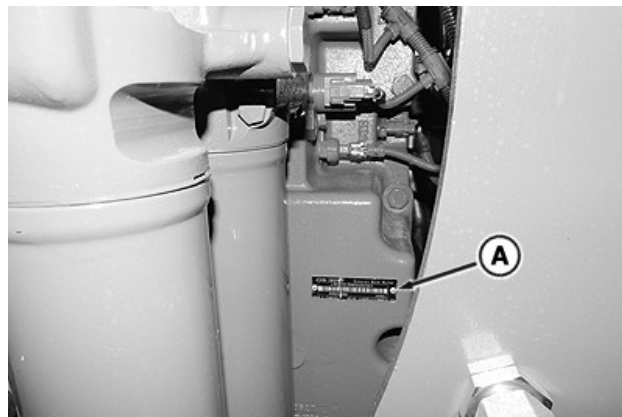

RXA0142107—UN—05JUN14


Transmission Serial Number (A) is on the Right-Hand Rear of the Transmission Case (Near the Transmission Filters)

TO84419,000021F-19-22OCT20

PTO Drop Box Serial Number [Ag]

* _____ *

Record the Serial Number in the Space Provided

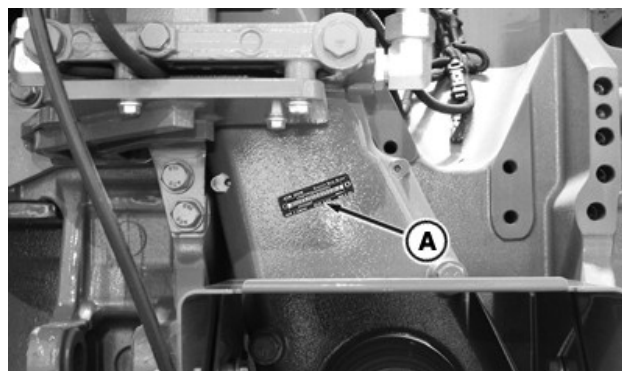

RXA0142515—UN—24JUN14


PTO Drop Box Serial Number (A) is on the PTO Drop Box at the Rear of the Tractor

TO84419,0000220-19-22OCT20

PTO Clutch Serial Number [Ag]

* _____ *

Record the Serial Number in the Space Provided

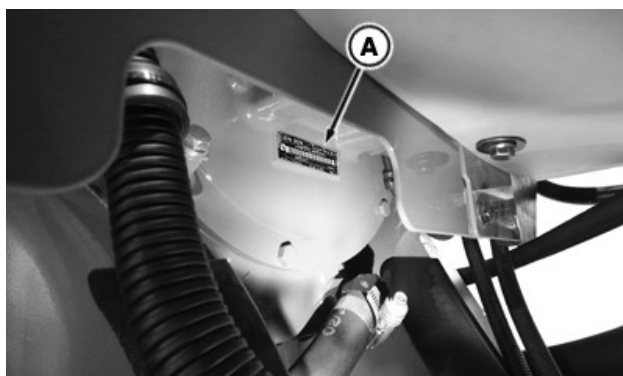

RXA0142514—UN—24JUN14

PTO Clutch Serial Number (A) is on the PTO Clutch in the Gudgeon Area

TO84419,0000221-19-22OCT20

Track Serial Numbers

Front Tracks

* _ _ _ _ _ *

Record the Left Track Serial Number in the Space Provided

* _ _ _ _ _ *

Record the Right Track Serial Number in the Space Provided

Rear Tracks


* _ _ _ _ _ *

Record the Left Track Serial Number in the Space Provided

* _ _ _ _ _ *

Record the Right Track Serial Number in the Space Provided

Track identification numbers consists of:

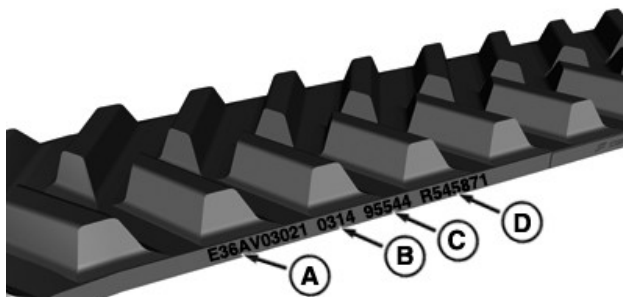

RXA0145009—UN—23SEP14


- Camso manufacturer serial number (A) is made up of a combination of ten numbers and letters on track edges.
- Camso track manufacturer date (B): four digits

indicating date of manufacture. Example: 0314 (March 2014).

- Five to six digits indicate track serial number (C).
- John Deere part number (D) is a letter followed by six numbers. Example: R123456.

KD34109,000081D-19-27OCT20

Keep Proof of Ownership

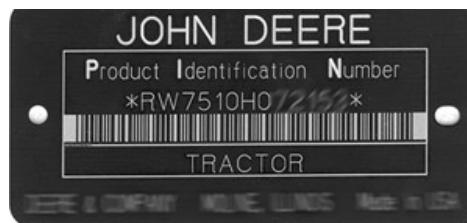


TS1680—UN—09DEC03

1. Maintain in a secure location an up-to-date inventory of all product and component serial numbers.
2. Regularly verify that identification plates have not been removed. Report any evidence of tampering to law enforcement agencies and order duplicate plates.
3. Other steps you can take:

- Mark your machine with your own numbering system
- Take color photographs from several angles of each machine

DX,SECURE1-19-18NOV03

Keep Machines Secure

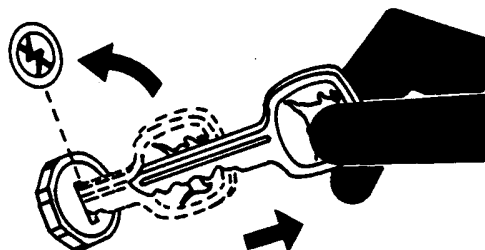

TS230—UN—24MAY89

1. Install vandal-proof devices.
2. When machine is in storage:
 - Lower equipment to the ground

- Set wheels to widest position to make loading more difficult
 - Remove any keys and batteries
3. When parking indoors, put large equipment in front of exits and lock your storage buildings.
 4. When parking outdoors, store in a well-lighted and fenced area.
 5. Make note of suspicious activity and report any thefts immediately to law enforcement agencies.
 6. Notify your John Deere dealer of any losses.

DX, SECURE2-19-18NOV03

Change of Ownership

Subsequent Ownership

Second Owner

Serial Number:	Tractor Model:
Engine Number:	Registration Number:
Previous Owner:	New Owner:
Address:	Address:
Purchase Date: Hours at Purchase:	Dealer's Stamp <i>(only if sold through a dealer)</i>

Third Owner

Serial Number:	Tractor Model:
Engine Number:	Registration Number:
Previous Owner:	New Owner:
Address:	Address:
Purchase Date: Hours at Purchase:	Dealer's Stamp <i>(only if sold through a dealer)</i>

TS36762,000029B-19-23NOV16

Predelivery

Predelivery Checklist

NOTE: Make a copy of this checklist and complete while performing.

Tractors equipped with 15 L engines will automatically perform an initial engine regeneration after at least 4 hours of operation. This procedure could occur before the tractor is delivered. If regeneration begins, allow full completion of process. See Engine Settings—AUTO Exhaust Filter Cleaning in Engine Operation section of this Operator's Manual.

Some listed options are not available on specific tractors.

The following inspection, adjustment, and service work were performed before delivery of this machine.

Complete the Air Conditioning Pre-Run Procedure

IMPORTANT: Reduce chance of air conditioner compressor damage. Complete pre-run procedure when the tractor:

- Arrives at the dealership.
- Has not been run for over 29 days.

- ☐ 1. Complete the pre-start checks.
- ☐ 2. Start tractor and run the engine at a low idle.
- ☐ 3. Switch the air conditioning system to high.
- ☐ 4. Run the tractor for at least three minutes.
- ☐ 5. Shut off the tractor.

Complete the Following Pre-Start Checks Before Operating the Tractor

- ☐ 1. Engine oil level is between Low and Full marks.
- ☐ 2. Coolant level is correct.
- ☐ 3. Air cleaner elements are installed correctly.
- ☐ 4. Air intake system clamps are tight.
- ☐ 5. Transmission-hydraulic and axle oil levels are correct.
- ☐ 6. Lubrication fittings are greased.
- ☐ 7. Shields, guards, handrails, and steps are installed correctly.
- ☐ 8. Paint is free of defects.
- ☐ 9. Exterior and interior labels are smooth and neat.
- ☐ 10. Protective plastic film removed from seats and panels.

Start the tractor before continuing the checks.

- ☐ 11. Start and run tractor at a low idle for at least three minutes.

IMPORTANT: Determine if the air conditioning pre-run procedure is needed. Run if necessary.

- ☐ 12. Complete the air conditioning pre-run procedure.
- ☐ 13. Shut off the tractor.

Inspect the tractor for:

- ☐ 14. Coolant leaks.
- ☐ 15. Engine oil leaks.
- ☐ 16. Fuel leaks.
- ☐ 17. Transmission, hydraulic, and axle oil leaks.

Complete the Following Checks Inside the Cab

- ☐ 1. Check for diagnostic trouble codes. If diagnostic trouble codes are present, record the codes and see Service ADVISOR™ to resolve and repair as needed. Clear all the codes.
- ☐ 2. All brake systems operate correctly:
 - Service brakes.
 - Hydraulic and air trailer brakes.
 - Parking brake.
 - Secondary brake.
- ☐ 3. Transmission operates correctly (including PARK position).
- ☐ 4. Neutral start switch operates correctly.
- ☐ 5. SCVs operate correctly.
- ☐ 6. Hitch operates correctly.
- ☐ 7. PTO operates correctly.
- ☐ 8. Warning system lights and instrument displays and gauges operate correctly.
- ☐ 9. All lights operate correctly in all switch positions.
- ☐ 10. Engine high and low idle are set correctly.
- ☐ 11. Seat can be adjusted properly.
- ☐ 12. Check seat belt integrity. Seat belt latches function correctly.
- ☐ 13. Doors operate correctly.
- ☐ 14. Cab is clean and upholstery appearance neat.
- ☐ 15. Premium radio region code set for location.
- ☐ 16. Radio operates correctly.
- ☐ 17. Washers and wipers operate correctly.
- ☐ 18. Heater, ventilation, and air conditioning system operate correctly. For details, see separate information leaflet in tractor cab.
- ☐ 19. All optional equipment is installed and operates correctly.

Complete These Dealer Services Before Delivery to the Customer

- ☐ 1. Thoroughly wash the tractor.
- ☐ 2. Charge the battery and set the battery date code.

IMPORTANT: Muffler extension and radio antenna increase tractor height. Be aware of clearance restrictions when transporting tractor.

- ☐ 3. Replace the transport rain cap with the muffler extension. For 15 L engines, align the muffler extension with the index pin to ensure proper placement.
- ☐ 4. Install the AM/FM radio antenna if necessary.¹
- ☐ 5. Check and adjust the tire pressure.
- ☐ 6. Adjust the wheel spacings for the customer needs:
 - ☐ If equipped with dual tires with John Deere CTIS, see R572695 installation instructions.
 - ☐ If equipped with front dual tires without John Deere CTIS, see R572069 installation instructions for the front extension.
- ☐ 7. Check track tread settings and track alignment.
- ☐ 8. Check and adjust the steering stops.²

IMPORTANT: Failure to follow track tractor road transport recommendations can void the tractor warranty. See Transport section and General Track Use Guidelines in Tracks—General Information section of this Operator's Manual.

- ☐ 9. Perform the track system break-in procedure. See Perform Track Systems Break-In in Service—Break-In (100 Hours or Less) section of this Operator's Manual.

⚠ CAUTION: Avoid the possibility of personal injury. Never operate the tractor with loose wheel or wheel weight bolts. Failure to follow torquing procedure can result in personal injury. Wheel and wheel weight bolts are critical and require repeated torquing to assure secure tightness.

IMPORTANT: Failure to follow correct tightening procedure could result in equipment damage. Retighten bolts after working 3 hours, 10 hours, and daily during the first week of operation.

- ☐ 10. Tighten wheels and weights to specifications (even if no adjustments are made).
- ☐ 11. Tighten the track drive (sprocket) wheel, drive (sprocket) wheel sleeve, idler wheel, and mid-roller fasteners to specifications (even if no adjustments are made).
- ☐ 12. Reposition all components from shipping to operating positions (i.e. mirrors).
- ☐ 13. Adjust all lights, including extremity warning lights and beacon light. Check all lights for compliance with local regulations.
- ☐ 14. Adjust the hitch components and lock in position.
- ☐ 15. Install the Slow Moving Vehicle emblem (if necessary).

¹ Located in the cab.

² To avoid equipment damage on tractors equipped with ILS™ and group 43 or larger tires remove both transport steering stops and adjust tread settings.

- ☐ 16. Set up the display to customer preference.
- ☐ 17. Activate the Automatic Exhaust Cleaning Mode in CommandCenter™.
- ☐ 18. Install the StarFire™ receiver.
- ☐ 19. Perform the Connected Machine Setup Process together with customer. See CCMS Solution 206001 for details.
- ☐ 20. Perform a test drive. Verify correct function of all systems, including transmission, brakes, and steering.
- ☐ 21. Calibrate the radar.
- ☐ 22. Check for diagnostic trouble codes. If codes are present, record codes and see Service ADVISOR™ to resolve and repair as needed. Clear all codes.
- ☐ 23. Install RTK antenna (if equipped). See Mount RTK (Real-Time Kinematic) Radio in Accessories section of this Operator's Manual.
- ☐ 24. Check the ExactRate™ tractor tanks for leaks (if equipped):
 - a. Fill the ExactRate™ tanks with 38 L (10 gal) of water. See Fill the Tanks in the ExactRate™ Tractor Tanks section of this Operator's Manual.
 - b. Drive the tractor for 5 to 10 minutes with the ExactRate™ pump on and circulating water.
 - c. Check the system for leaks.
 - d. Drain the ExactRate™ tanks. See Drain the System in the ExactRate™ Tractor Tanks section of this Operator's Manual.
 - e. Tighten the ExactRate™ tank straps. See Tank Straps in the Service—Tighten section of this Operator's Manual.

Date and Signature of Dealer/Service Technician

KD34109,00005B8-19-31AUG21

Delivery Checklist and Certificate

Make two copies of this form. Complete one copy for customer and retain a second copy for dealer records.

☐ Customer Copy

☐ Dealer Copy

Delivery Checklist

At the Dealer:

- ☐ Predelivery inspection completed
- ☐ All necessary forms and literature available
- ☐ Labels installed
- ☐ Customer specified attachments and options are installed or available

CAUTION: Avoid the possibility of personal injury. Never operate tractor with loose wheel or wheel weight bolts. Failure to follow torquing procedure may result in personal injury. Wheel and wheel weight bolts are critical and require repeated torquing to assure secure tightness.

IMPORTANT: Failure to follow correct tightening procedure could result in equipment damage. Retighten wheel bolts after working 3 hours, 10 hours, and daily during first week of operation.

At Delivery Area with Customer: (shown and explained)

- ☐ All warning labels on machine
- ☐ Location of all serial numbers on machine
- ☐ Operator's Manual
- ☐ Help Text access and function
- ☐ Lubrication and service points on machine and attachments
- ☐ Tire or track maintenance and care
- ☐ Use of lubrication and maintenance schedules
- ☐ Break-in service procedures
- ☐ Warranty coverage and procedure

Demonstrated operating procedures:

- ☐ Engine—throttle, starting and stopping
- ☐ Transmission
- ☐ Steering
- ☐ Brakes
- ☐ Hitch and SCVs
- ☐ Differential lock
- ☐ PTO
- ☐ Three-point hitch adjustment
- ☐ iTEC™ system
- ☐ Lights
- ☐ Wipers
- ☐ Heater
- ☐ Air conditioning
- ☐ CommandCenter™ display and controls
- ☐ Operator's seat

- ☐ Check hardware is tight on frame, drawbar support, wheels, and wheel weights or track system component

Delivery Certificate

Serial number:

Vehicle Model:

OM Number:

Issue:

Registration No.:

Engine No.:

Delivery Date:

Owner's Name:

Delivery Hours:

Street Address:

Dealership:

City/State:

Dealer's Stamp:

ZIP/Postal Code/Country:

Predelivery

I hereby confirm receiving the tractor in complete and good condition. I have received the Operator's Manual. All necessary work upon delivery has been carried out and I have been informed of the safe method of operation and the mandatory daily maintenance work as per the Delivery Checklist.

Customer's Signature: _____ Dealership Instructor's Signature: _____

Date: _____ Date: _____

BH38674,0000D3E-19-11SEP19

Index

A

AC Compressor Belt	
Replacing	220D-1, 220D-2
Activating Independent Mode	
SCV	70A-6
Aftertreatment	
Fuel Injector	
Clean aftertreatment fuel injector	220A-4
Aftertreatment indicators overview	20B-1
Air Conditioning	
Checking	220B-3
Air Conditioning (A/C)	90E-3
Air Flow Mode	90E-3
Alternator Belt	
Replacing	220D-1, 220D-2
Applications	
Control Setup	30C-7
Assignment	
SCV	70A-6
AutoLoad™	
Harness Connector	90D-8
AutoLoad™ Settings	
Access	70E-4
Advanced	70E-7
Average Draft	70E-7
Initial Draft	70E-6
Main Page	70E-4
Scraper Dimensions	70E-7
Scraper Position	70E-6
Scraper Status	70E-5
Automation	
SCV	70A-6
AUX Input	
Radio	90D-1
Auxiliary drive belt	220D-2
Auxiliary fuel filter and water separator	
Check and drain	220A-4
Avoid static electricity risk when fueling	05-4
Axle oil	
Hydraulic oil	220D-17

B

Backup alarm	
Volume control	50B-4
Ballast	
Determining ballasted	
Required tire inflation pressures	100-7
Tractor axle loads	100-7
Tractor weight	100-7
Tractor weight split	100-7
Battery Handling, Safety	
Safety, Battery Handling	05-12
Belt	
Tensioner	
Belt tensioner	
Check belt tensioner	220B-18

Belts	220D-1, 220D-2
Biodiesel fuel	200A-2
Bolt and screw torque values	
Metric	210-10
Unified inch	210-11
Bracket Mounts	
Monitor	90D-4
Brake light bulb	
Replacing	220F-11
Brake warning indicators	30A-1
Brakes	50A-3
Hydraulic Trailer Brakes (If Equipped)	50A-4
Secondary brake	220B-15
Break-in engine oil	
Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	200C-1
Bumper Stop	
Inspect	220B-13
Business band and antenna	
Installing	90D-5

C

Cab	
Classification	500A-12
Cab Air Filters	
Inspecting or replacing	220D-8
Cab Classification	
(EU 1322/2014)	500A-12
Camso track serial numbers	
Identification numbers	500B-4
Carbon Dioxide Emissions	500A-14
Carging Ports	
USB	90D-3
Cat. 5 to 4 drawbar pin	
Drawbar pin adapter	60F-5
Chain Box	90D-8
Change engine oil	220D-4
Change engine oil and filter - 15 L engine	220D-4
Change starting fluid canister	20A-1
Check	
Mid-roller oil level	220B-14
Suspension Mount Clearance	220B-19
Check drive wheel scraper clearance	
Drive wheel	220B-15
Check Idler Wheel Hub Oil Level	220B-14
Check track alignment	
Daily or 10 Hour	220B-6
Check track tension	
Track tension	
Tension	
Detension	220B-8
Checking	
Track alignment	220B-6
Tracks, drive wheels, mid-rollers and idler wheels	220B-11
Water pump seal	220B-4

Weep hole.....	220B-3	Set Assignments	40-4
Clean dual beam radar sensor		Light identification	90C-1
500 hour service		Lights settings main page	90C-3
Dual beam radar	220A-4	Machine settings menu	30C-1
Clean oil-fuel cooler, A/C condenser		Power on/off.....	30C-4
Cooler-A/C condenser	220A-2, 220A-3	Shortcut buttons	30B-6
Cleaning		Compressed air	220F-2
Engine Exhaust Filter	20-4	Connector	
Clevis		Diagnostic	90D-1
Cat. 5	60F-4	Display	90D-2
Climate controls.....	30B-2	Ethernet.....	90D-2
Cold Weather Operation		GreenStar™ Display	90D-2
Engine Coolant Heater Use	20A-1	Implement	
Cold weather starting		ISO 11783.....	90D-7
Engine		ISO 11783.....	90D-1
With starting aid	20A-1	ISO 11786	90D-2
CommandARM™		Control Setup	30C-7
Climate controls.....	30B-2	Coolant	
Example	30B-1	Diesel engine	
Hitch controls	30B-1	Engine with wet sleeve cylinder liners.....	200D-1
Left side controls	30B-4	Disposing	200D-3
Lighting controls	30B-2	John deere COOL-GARD II coolant extender	200D-1
Navigation bar	30B-6	Mixing with concentrate, water quality	200D-2
Position, adjusting	30B-7	Testing freeze point	200D-2
PTO control levers	30B-2	Warm temperature climates	200D-2
Push-to-talk (PTT).....	30B-4	Cooling system	
Radio controls.....	30B-2	Draining, flushing and refilling	220D-23
Right-Hand Reverser		Corner Post Display	30A-1
e18™ Transmission.....	50G-1	Crankcase breather filter element	
SCV control levers	30B-2	15 L Engine	220D-23
Secondary brake lever.....	30B-6		
Speed Adjustment Wheel			
e18™ Transmission.....	50G-1		
CommandCenter			
Camera	30C-8		
iTEC			
Control functions	40-1		
Video display capability.....	30C-8		
CommandCenter™	30C-5		
Access Lights	90C-2		
Advanced Lighting Settings	90C-4		
Calibration			
Slip	30C-5		
Calibrations			
Radar	30C-5		
Compatible Displays	30C-4		
Field lights presets	90C-4		
Hood/belt line lights	90C-4		
Input Fields.....	30C-4		
iTEC™			
Abort conditions	40-3		
Cancel conditions	40-3		
CommandCenter™ functions	40-1, 40-2		
Inhibit conditions.....	40-3		
Interrupt conditions.....	40-3		
Perform sequence.....	40-5		

D

DEF	
Disposal	200B-4
Dosing unit filter, change	220D-16
In-line filter, change	220D-13
Storing	200B-2
Tank, cleaning.....	220A-1
Tank, refilling	200B-3
Testing	200B-3
Use in SCR equipped engines.....	200B-1
DEF dosing unit filter	
Change	220D-16
DEF in-line filter	
Change	220D-13
DEF tank	
Cleaning	220A-1
Depth set point	
Rear hitch	60E-8
Diagnostic Trouble Codes	
Accessing.....	300B-1
Diesel engine oil	
Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	200C-4
Service interval for operation at high altitude	200C-1

Tier 2 and stage II	200C-2
Tier 3 and stage IIIA	200C-3
Diesel engines, cold weather effect	200-1
Diesel Exhaust Fluid	
DEF	
Filler neck filter	220A-1
Diesel Exhaust Fluid (DEF)	
Fill DEF Tank-Final Tier 4/Stage V Engine ...	200B-1
Diesel fuel	200A-1
Supplemental additives	200A-1
Diesel fuel, testing	200A-4
Differential lock	50-1
Differential Lock	
Floor Switch	30-4
Disconnect Battery	
Purgw DEF Lines	
DEF, Purgie Lines	
Battery, Disconnect	220F-2
Draft control	
Rear hitch	60E-6
Draft response	
Rear hitch	60E-4
Draining	
Fuel Filters	220B-2
Fuel tank sump	220B-4
Drawbar	60F-2
Calculate Static Vertical Load	60F-3, 60G-1
Calculate Vertical Load Distance Behind Rear Axle	
60F-3, 60G-1	
Specifications	500A-7
Tow cable	60G-3
Drawbar support and cap screws	
Inspect drawbar support and cap screws	
500 hour service	220C-1
Drive Wheel	
500 Hour Service Re-Torque	220C-1
Drivetrain Protection	50-1
Drop rate	
Rear hitch	60E-3

E

e18™ Transmission	
Operate	50G-1
Set Speeds and Efficiency Manager™	50G-3
Shift	50G-1
e18™ Transmission Settings	50G-4
Access	50G-4
Custom	50G-6
Droop	50G-6
ECO	50G-7
Max Speeds	50G-7
Mode	50G-6
Effect of cold weather on diesel engines	200-1
Electrical system	
Introduction	220F-1
Emergency Exit	90D-4

Emissions	
Required language	
EPA	500A-14
Emissions Equipment	
DPF Service	20B-4
Emissions Performance	
Tampering	2
Engine	
Air filters	
Inspect	220D-9, 220D-11
Change starting fluid canister	20A-1
Check engine and exhaust compartments	
Check for debris	220B-3
Cold weather starting	
Change starting fluid canister	20A-1
With starting aid	20A-1
Crankshaft damper	220D-23
Emissions certification	20-9
Operating	20-9
Reduce Fuel Consumption	20-11
Restarting when Out of Fuel	20-11
Engine Access Panel, Remove	210-2
Engine auxiliary drive belt	220D-1
Engine Brake	
5000 hour service	220B-21
Engine coolant	
Disposing of	200D-3
Engine oil	200-1
Break-In	
Interim tier 4, final tier 4, stage IIIB, stage IV, and	
stage V	200C-1
Diesel	
Interim tier 4, final tier 4, stage IIIB, stage IV, and	
stage V	200C-4
Service interval for operation at high altitude	
200C-1	
Tier 2 and stage II	200C-2
Tier 3 and stage IIIA	200C-3
Engine Oil	
Break-In Engine Oil Use-Cummins 15 L Engine ...	
200C-1	
Engine oil and filter service intervals	
Interim tier 4, final tier 4, stage IIIB, stage IV, and	
stage V	
0.12 L/kW or greater oil pan	200C-5
Operation at high altitude	200C-1
Tier 2 and stage II	
Extended drain oil pan	200C-2
Tier 3 and stage IIIA	
PowerTech Plus	
0.22 L/kW or greater oil pan	200C-3
Engine Operation	
Battery Booster or Battery Charger	20-12
Battery Disconnect Switch	20-9
Start the Engine	20-9

Engine Settings		Front Engine Side Shield, Remove.....	210-2
Access	20-1	Front grille lights	
Advanced	20-7	Adjusting	220F-8
AUTO Exhaust Filter Cleaning	20-5	Fuel	
Automatic Engine Braking	20-7	Biodiesel	200A-2
Decelerator	20-7	Diesel	200A-1
Disable AUTO Exhaust Filter Cleaning	20-5	Filters	220D-5, 220D-6
Exhaust Filter Cleaning Overview	20-4	Handling and storing	200A-3
Main Page	20-1	Lubricity	200A-3
Max Speeds	20-3	System	20-9
Parked Filter Cleaning	20-6	Tank	200A-3
Power	20-3	Tank sump	220B-4
Engine Speed		Fuel filter	
PTO	60A-5	Water separator, auxiliary, check and drain ..	220A-4
Engine Valve Clearance		Fuel Filters	
2000 hour service	220B-19	Filters, Fuel	200A-4
Exhaust Filter, Safety		Fuel system	
Safety, Exhaust Filter	05-14	Bleeding	210-9
External Switches		Do not modify	210-9
Hitch	60E-9	Fuel tank vent filters, replace	
PTO	60A-5	Fuel vent filters	220D-11
F		G	
Fan belt		Gauges	30A-1
Replacing	220D-1	Glossary	00-1
Fan Speed	90E-3	GPS	
Feature Mode		Configure Tractor	50B-1
SCV	70A-4	GPS Data	
Filter		RS232 Serial Communication Connection	90D-7
Axle	220D-17	Grease	
Fuel (water separator), auxiliary, check and drain ..	220A-4	Multipurpose Extreme Pressure (EP)	200E-1
Transmission	220D-17	Ground Speed	30A-1
Filters		Ground Speeds	
Cab air		e18™ PowerShift™ Transmission	500A-13
Inspecting or replacing	220D-8	H	
Cab recirculation		Halogen light bulbs	
Replacing	220D-8	Handling	220F-7
Fuel	220D-5	Handling	
15 L	220D-6	Halogen light bulbs	220F-7
Hydraulic	220D-17	Hardware torque values	
Filters, Oil		Metric	210-10
Oil Filters	200-2	Unified inch	210-11
Flow Adjustment		Hauling tractor	110-8
SCV	70A-4	High-pressure washer use	220A-2
Determine	70A-9	High-pressure washers	220F-2
Flow Adjustment Sensitivity		Hinge pins	220E-1
SCV	70A-7	Hitch	
Flow Sharing		Adjust Implement Level	60E-10
SCV	70A-10	Adjust Lateral Float	60E-11
Freeing a Mired Tractor		Adjust Sway Blocks	60E-9
Transport	110-10	Components	60E-8
Front console		Conversion	60E-11
Example	30-1	Convertible Quick-Hitch Upper Hook	
Front Drive Line U-Joints		Category 4N/3	60E-12
Service	220D-23		

External Switches	60E-9	Idler Wheel Hub Housing Oil	
Quick-Hitch		Check	220B-14
Attach Implement.....	60E-10	Idler, front.....	220B-13
Detach Implement.....	60E-10	Implement Connector	
Hitch (Rear)		Clean Implement connector	220A-5
Convertible Quick-Hitch Lower Hooks		ISO 11783	90D-7
Category 4N/3	60E-12	Independent Mode	
Float Operation	60E-8	SCV	70A-3
Manual Lowering	60E-9	Indicators	
Hitch [Ag]		Alert	30A-
Specifications	500A-7	Digital	30A-1
Hitch control lever		Information	300B-1
Adjustments	60E-7	Service alert.....	300B-1
Hitch controls.....	30B-1	STOP	300B-1
Hood, Open	210-1	Warning.....	30A-1
Horn		Indicators overview	20B-1
Operate	30-1	Inspect air intake system- 15 L engine	
HVAC		Air intake system	
Settings		500 hour service.....	220B-17
Access	90E-1	Inspecting	
Air Conditioning.....	90E-3	Or replacing cab air filters	220D-8
Air Flow Mode	90E-3	Or replacing recirculation filter	220D-8
Climate Control Automation.....	90E-2	Instructional seat.....	90-3
Fan Speed	90E-3	Intelligent Total Equipment Control (iTEC™)	
Main page	90E-1	Abort conditions	40-3
Set Temperature.....	90E-2	Cancel conditions.....	40-3
Hydraulic		CommandARM™ control functions.....	40-1
Warm-up.....	50B-3	CommandCenter™ description	40-1, 40-2
Hydraulic Connection		Inhibit conditions.....	40-3
Implement Connection Example [Ag] 70B-8, 70B-10,		Interrupt conditions	40-3
70B-12, 70B-13		Perform sequence	40-5
Implement Connection Example [Scraper] ...	70B-15	Recommendations (AutoLearn).....	40-5
Hydraulic Connections		Set Assignments.....	40-4
Component Identification [Ag].....	70B-4	Set up a sequence	40-2
Component Identification [Scraper].....	70B-13	Introduction to	
Connect/Disconnect Hydraulic Hoses.....	70B-1	Electrical system.....	220F-1
Implements Requiring Large Volumes of Hydraulic		iTEC™	
Oil	70B-2	Functions	
Using Hydraulic Spray Pumps [Ag]	70B-7	Efficiency manager transmission	40-6
Hydraulic oil	200E-1	iTEC™ station description.....	40-1
Hydraulic reservoir vent filter			
Reservoir vent filter, replace	220D-17	J	
Hydraulic System		Jack up the tractor.....	210-3
Load Sense			
Power-Beyond	70B-2	K	
		Key switch	30-2
I			
Identification Number		L	
Cab Serial Number.....	500B-3	Lateral Float.....	60E-11
Identification Plates.....	500B-1	Lifting points for jacking up.....	210-3
Track Serial Numbers	500B-4	Lighting controls	30B-2
Identification Numbers		Lights	
Engine Serial Number	500B-2	7-Pin Outlet	90C-6
Product Identification Number	500B-1	Access Settings.....	90C-2
Idler Wheel		Adjusting front grille lights	220F-8
500 Hour Service Re-Torque.....	220C-1		

Aim headlights	
Headlights	220F-9
Daytime running lights setting	90C-4
Engine off delayed lighting setting	90C-4
Entrance/exit lights setting	90C-4
Extremity warning lights	90C-5
Field lights presets settings	90C-4
Front grille flood light bulbs	
Replacing	220F-8
Hazard lights	90C-5
Hood/belt line settings	90C-4
Identification	90C-1
Light identification	220F-11, 220F-12
Main page	90C-3
Operate	30-3
Replacing brake light bulb	220F-11
Rotary beacon light	90C-5
Lights	
7-pin outlet	90C-5
Load depth	
Rear hitch	60E-4
Lubricant	
Mixing	200E-2
Lubricant Storage	
Storage, Lubricant	200E-2
Lubricants, safety	200E-2
Lubricate lift cylinders and rockshaft	220E-4
Lubricate PTO drive shaft	220E-2
Lubrication	
Heavy-Duty gudgeon bearings	220E-2
Lower drive line bearing	220E-3
Lubrication and maintenance	
As required	
Cleaning DEF tank	220A-1
Lubricity of diesel fuel	200A-3

M

Machine design life	500A-13
Machine stop warning, required	20-8
Maximum Permissible Static Vertical Load	
Specifications	500A-11
Metric bolt and screw torque values	210-10
Mid-Roller	
500 Hour Service Re-Torque	220C-1
Mid-Roller Oil Level	
Check	220B-14
Mid-rollers	220B-13
Mirrors	
Adjust	90A-1
Mixing lubricants	200E-2
Multipurpose Extreme Pressure (EP) grease ..	200E-1

N

Navigating Generation 4 CommandCenter™ ..	30C-3
Navigation bar	30B-6

O

Oil	
Engine	200-1
Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	200C-4
Tier 2 and stage II	200C-2
Tier 3 and stage IIIA	200C-3
Filter	220D-17
Hydraulic	200E-1
Transmission	200E-1
Oil change	
Transmission	
Powershift	220D-17
Onscreen Help	30C-1
Operator Station	
Business Band or CB, Install	90D-5
Optional Fuel Water Separator Filter Element (30 Micron)	
Service—Change	220D-7
Other Lubricants	
Transmission and Hydraulic Oil Use	200E-1
Outlet	
12V Accessory	90D-1, 90D-3
AC (Alternating Current)	90D-2

P

Paint care	220A-2
Pedals	30-2
Performance Ballasting	
Ballast Options	100-3
General Ballasting Information	100-1
General Guidelines	100-1
General Weight Split Guidelines	100-3
Idle Weight Use	100-6
Implement Guidelines	100-6
Measure Slip	100-4
Quik-Tatch™ Weight Use	100-5
Unballasted Tractor Weight Chart	100-9, 100-12
PowerShift™	
Calibration	210-6
Predelivery	
Predelivery Checklist	700-1
Product identification	500B-1
Psotion	
Rear hitch	60E-5
Psotion control	
Rear hitch	60E-6
PTO	
Correct Engine Speed	60A-5
External Switches	60A-5
Operate	60A-4
Operating Instructions	60A-4
Settings	
Access	60A-1
Advanced	60A-2
Auto Disengage	60A-3

Engagement Rate	60A-2
Main Page	60A-1
Rear PTO Cruise	60A-3
PTO [Ag]	
Specifications	500A-7
PTO control levers	30B-2

Q

Quick-Hitch	60E-10
Category 4/4N quick-hitch	60E-11

R

Radars	
Configure Tractor	50B-1
Radars Calibration	30C-5
Radiators	
Clean	220A-2, 220A-3
Radio controls	30B-2
Push-to-talk (PTT)	30B-4
Raise rate	
Rear hitch	60E-3
Rear Engine Side Shield, Remove	210-2
Rear hitch	
Depth set point	60E-8
Lubricate rear hitch	220E-3
Rear Hitch [Ag]	
Hitch Lift Capacities	60E-1
Rear hitch settings	
Access	60E-1
Draft control	60E-6
Drop rate	60E-3
Load depth	60E-4
Main Page	60E-1
Position	60E-5
Position control	60E-6
Raise rate	60E-3
Slip sensitivity	60E-4
Upper limit	60E-3
Recirculation Air Filter	
Inspecting or replacing	220D-8
Record engine serial number	500B-2
Record product identification number	500B-1
Product identification number (china only)	500B-1
Record PTO clutch serial number	500B-3
Record PTO dropbox serial number	500B-3
Record transmission serial number	500B-3
Refrigerator	90D-3
Refueling, avoid static electricity risk	05-4
Remove tractor from storage	
Remove tractor storage	400-1
Replace radiator pressure cap	
Radiator pressure cap	
15 L Engine	
Coolant	220D-20

Replace trailing light bulb	
Electrical system service	220F-12
Replacing	
Brake light bulb	220F-11
Required machine stop warning	20-8
Restarting when Out of Fuel	20-11
RS232 Serial Communication Connection	90D-7
RTK Receiver	
Installation	90D-6
Running engine	20-11

S

Safety	
Handling Halogen light bulbs	220F-7
Protect against noise	05-2
Rotating drivelines, stay clear	05-5
Safe maintenance, practice	05-13
Tires, service safely	05-17
Towed equipment, transport at safe speeds	05-9
Tractor, operating safely	05-6
Use caution on slopes, uneven terrain, and rough ground	05-10
Safety chains	110-4
Safety Lights and Devices	
Rotary Beacon Light	90C-5
Safety, Avoid High-Pressure Fluids	
Avoid High-Pressure Fluids	05-17
Safety, Fire Prevention	
Fire Prevention	05-3
Safety, Forestry Operations	
Limited Use in Forestry Operation	05-7
Safety, Handle Fuel Safely, Avoid Fires	
Avoid Fires, Handle Fuel Safely	05-2
Safety, lubricants	200E-2
Safety, ROPS	
ROPS, Keep Installed Properly	05-4
Safety, Steps and Handholds	
Use Steps and Handholds Correctly	05-5
Safety, Tightening Wheel Retaining Bolts/Nuts	
Tightening Wheel Retaining Bolts/Nuts	05-17
SCR	
System overview	20B-3
Scraper Applications [Ag]	60F-2
Scraper Applications [Scraper]	60G-1
Scraper clearance	
Daily	220B-15
Scraper Information	
Connect AutoLoad™ Harness	70E-3
Scraper Information [Scraper]	
Scraper Operation Cycle	70E-1
SCV Control Lever	
Adjustments	70A-7
SCV control levers	30B-2
SCV Settings	70A-1
Access	70A-1
Activating Independent Mode	70A-6

Advanced.....	70A-5	Engine Air Intake System-13.6 L Final Tier 2/Stage II.....	220B-16
Assignment.....	70A-6	Engine Air Intake System-13.6 L Final Tier 4/Stage V or Tier 3/Stage IIIA Engine.....	220B-16
Automation.....	70A-6	Engine Coolant Level.....	220B-1
Feature Mode.....	70A-4	Engine Oil Level-13.6 L Engine.....	220B-4
Flow Adjustment.....	70A-4	Service—Clean	
Flow Adjustment Sensitivity.....	70A-7	Tractor Exterior.....	220A-2
Flow Assist.....	70A-7	Service—Electrical	
Independent Mode.....	70A-3	Access Implement Power Relay Module Relays.....	220F-7
Standard Mode.....	70A-3	Access Master Fuses.....	220F-6
Time Adjustment.....	70A-5	Load Center-Cab.....	220F-3
TouchSet™ Depth Control.....	70A-4	Load Center-Front.....	220F-5
Seat		Service Batteries and Connections.....	220F-2
Air Seat.....	90-1	Service—General Information.....	210-1, 210-2
Belts.....	220B-17	Access Battery Compartment.....	210-3
Operator Presence Sensor.....	90-3	Remove Cab Rear Panel.....	210-3
Serial numbers.....	500B-1	ServiceADVISOR™.....	30C-5
Service		Servicing and Connecting Snap to Connect Fittings.....	210-6
10 hour or daily		Set Speed.....	30A-1
Draining water from fuel filters.....	220B-2	Short drawbar	
10 hour or Daily		Scraper drawbar conversion.....	60G-2
Checking track, drive wheels, mid-rollers and idler wheels		Short drawbar support	
Track trash buildup.....	220B-11	Short drawbar	
500 hours		Quick-attach drawbar.....	60G-2
Draining fuel tank sump.....	220B-4	Signal words, understand.....	05-1
1000 hours		Slip Calibration.....	30C-5
Inspecting recirculation filter.....	220D-8	Slip sensitivity	
1000 hours		Rear hitch.....	60E-4
Inspecting cab air filters.....	220D-8	Snap to Connect Fitting (STC)	
2000 hours		STC.....	210-6
Check engine valve clearance.....	220B-19	Sound Level.....	500A-12
As required		Specifications	
Cleaning DEF tank.....	220A-1	Capacities.....	500A-4
Check idler wheel hub oil level.....	220B-14	Dimensions.....	500A-9
Check mid-roller oil level.....	220B-14	Electrical.....	500A-8
Tracks.....	80-1	Engine: John Deere.....	500A-1
Service		Engine: QSX15 Cummins®.....	500A-3
1500 hours		Ground Speeds: e18™ PowerShift™ Transmission.....	500A-13
SCV Pilot Filter.....	220D-12	Hydraulics.....	500A-5
Service—Break-In (100 Hours or Less)		Integrated Technology.....	500A-8
Perform Break-In Services.....	210A-1	PTO [Ag], Hitch [Ag], and Drawbar.....	500A-7
Service—Change		Sound Level.....	500A-12
Access Diesel Exhaust Fluid (DEF) Dosing Unit		Transmission and Power Train.....	500A-6
Filter.....	220D-15	Vibration Level.....	500A-12
Access Diesel Exhaust Fluid (DEF) In-Line Filter ..	220D-13	Standard Mode	
Diesel Exhaust Fluid (DEF) Tank Vent Filter	220D-12	SCV.....	70A-3
Engine Coolant-13.6 L.....	220D-20	StarFire™ Reciever	
Engine Oil and Filter-13.6 L Engine.....	220D-3	Installation.....	90D-6
Fuel Tank Vent Filters.....	220D-8	Steering fault indicator.....	30A-1
Optional Fuel Water Separator Filter Element (30 Micron).....	220D-7	Steering pin bushings.....	220E-1
Service—Check		Steering Settings	
Drawbar Sensor Calibration [Scraper].....	220B-20	Access.....	30C-6
Drawbar Wear.....	220B-20		

Main Page	30C-6	Track Use	
Steering Wheel Resistance	30C-7	Guidelines	80-1
Steering wheel and column		Tracks, Drive Wheels, Mid-Rollers and Idlers	
Adjust	30-1	Checking	220B-11
Stop bumpers		Tractor	
Articulation		Storage	
Inspect		Preparation For	400-1
Undercarriage	220B-12	Tractor storage	400-1
Stopping engine	20-11	Tractor-Implement Automation (TIA)	
Storage		Activate	40A-1
Chain Box	90D-8	Introduction	40A-1
Cool Box	90D-3	Operate	40A-1
Fender	90D-4	PowerShift™ Transmission Requirements	40A-2
Operator's Manual	90D-4	Requirements for AutoTrac™	40A-2
Overhead	90D-4	Requirements for E-SCVs	40A-2
Removal From	400-1	Requirements for PTO	40A-2
Storing fuel	200A-3	Requirements for rear hitch	40A-3
Sunshade	90D-4	Tractor, operating safely	05-6
Sway Blocks	60E-9	Trailer Brake System Settings	
		Access	50A-1
		Advanced	50A-3
		Brake Gain	50A-2
		Main Page	50A-1
		Pre-Brake Offset	50A-2
		Trailer Brake Test	50A-3
		Trailering Lights	90C-6
		Transmission	
		Abort calibration	210-9
		Access Advanced Settings	50B-1
		Advanced Settings	50B-1
		Operate	
		e18™	50G-1
		Park system	220B-16
		PowerShift™	
		Calibration	210-6
		Set Speeds and Efficiency Manager™	
		e18™	50G-3
		Shift	
		e18™	50G-1
		Suction screen	220D-17
		Warm-up	50B-3
		Transmission oil	200E-1
		Transmission Settings	
		Access	
		e18™	50G-4
		Custom	
		e18™	50G-6
		Droop	
		e18™	50G-6
		ECO	
		e18™	50G-7
		Main Page	
		e18™	50G-4
		Max Speeds	
		e18™	50G-7

Mode	
e18™	50G-6
Transmission/hydraulic reservoir/axles	
Oil level check	220B-5
Transport	
Carrier Transport	110-5
Extended Road Transport	110-2
Freeing a Mired Tractor	110-10
Tow Points	110-5
Transporting	
Driving on roads	110-2
Tow Mode—Engine Will Not Start	110-9
Tow Mode—Engine Will Start	110-9
With ballast	110-4
Transporting tractor	110-8
Turn signals	
Operate	30-2

U

Unified inch bolt and screw torque values	210-11
Upper limit	
Rear hitch	60E-3
USB Input	
CommandCenter™	90D-1
Radio	90D-1

V

Vibration Level	500A-12
-----------------	---------

W

Water pump seal	
Checking	220B-4
Water separator	220B-2
Auxiliary, check and drain	220A-4
Weep hole	
Checking	220B-3
Wheels, drive	220B-13
Wipers and Washers	
Operate	30-1

Z

Zinc-Flake	
Coated Fasteners	210-10

John Deere Service Literature Available

Technical Information

Technical information can be purchased from John Deere. Publications are available in print or CD-ROM format.

Orders can be made using one of the following:

- John Deere Technical Information Store: **www.JohnDeere.com/TechInfoStore**
- Call 1-800-522-7448
- Contact your John Deere dealer

Available information includes:



TS189—UN—17JAN89

PARTS CATALOGS list service parts available for your machine with exploded view illustrations to help you identify the correct parts. It is also useful in assembling and disassembling.



TS191—UN—02DEC88

OPERATOR'S MANUALS providing safety, operating, maintenance, and service information.



TS224—UN—17JAN89

TECHNICAL MANUALS outlining service information for your machine. Included are specifications, illustrated assembly and disassembly procedures, hydraulic oil flow diagrams, and wiring diagrams. Some products have separate manuals for repair and diagnostic information. Some components, such as engines, are available in a separate component technical manual.



TS1663—UN—10OCT97

EDUCATIONAL CURRICULUM including five comprehensive series of books detailing basic information regardless of manufacturer:

- Agricultural Primer series covers technology in farming and ranching.
- Farm Business Management series examines “real-world” problems and offers practical solutions in the areas of marketing, financing, equipment selection, and compliance.
- Fundamentals of Services manuals show you how to repair and maintain off-road equipment.
- Fundamentals of Machine Operation manuals explain machine capacities and adjustments, how to improve machine performance, and how to eliminate unnecessary field operations.
- Fundamentals of Compact Equipment manuals provide instruction in servicing and maintaining equipment up to 40 PTO horsepower.

DX,SERV LIT-19-07DEC16

John Deere Service Keeps You On The Job

John Deere Parts



TS100—UN—23AUG88

We help minimize downtime by putting genuine John Deere parts in your hands in a hurry.

That's why we maintain a large and varied inventory—to stay a jump ahead of your needs.

DX,IBC,A-19-04JUN90

School is never out for John Deere service technicians.

Training schools are held regularly to be sure our personnel know your equipment and how to maintain it.

Result?

Experience you can count on!

DX,IBC,C-19-04JUN90

Prompt Service



TS103—UN—23AUG88

Our goal is to provide prompt, efficient care when you want it and where you want it.

We can make repairs at your place or at ours, depending on the circumstances: see us, depend on us.

JOHN DEERE SERVICE SUPERIORITY: We'll be around when you need us.

DX,IBC,D-19-04JUN90

The Right Tools



TS101—UN—23AUG88

Precision tools and testing equipment enable our Service Department to locate and correct troubles quickly . . . to save you time and money.

DX,IBC,B-19-04JUN90

Well-Trained Technicians



TS102—UN—23AUG88

