

**QuikTrak™ E Series
North American
Serial No 025001-**



JOHN DEERE

OPERATOR'S MANUAL

QuikTrak™ Q810E, Q820E

OMUC39924E ISSUE K5 (ENGLISH)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:



WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

John Deere Turf Care
North American Edition
Printed in U.S.A.

Introduction

Required Emission-Related Information

Service Provider

A repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.

DX,EMISSIONS,REQINFO-19-08DEC23

Emissions Performance and Tampering

Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system voids the European Union (EU) or other country's applicable type approval, certification, and emissions-related warranties.

DX,EMISSIONS,PERFORM-19-23DEC21

Thank You for Purchasing a John Deere Product

We appreciate having you as a customer and wish you many years of safe and satisfied use of your machine.

MX00654,000020B-19-17SEP25

Using Your Operator's Manual

This manual is an important part of your machine and should remain with the machine when you sell it.

Read this operator's manual, watch the safety video, and review the safety signs on your machine before use. They all contain important safety information and operating instructions that must be followed to help keep you and others safe. The operator's manual, safety video, and other important information is also available by scanning this QR code with your smartphone, or by visiting <https://www.deere.com/QR>. Be sure everyone who uses the machine has read the manual, reviewed the safety signs, and knows how to use the machine safely and properly.



TCP626370—UN—21MAY24

If you have an attachment, use the safety and operating information in the attachment operator's manual, along with the machine operator's manual, to operate the attachment safely and correctly.

This manual and safety signs on your machine may also be available in other languages (see your authorized dealer to order).

Sections in your operator's manual are placed in a specific order to help you understand all the safety messages and learn the controls so you can operate this machine safely. You can also use this manual to answer any specific operating or servicing questions. A convenient index located at the end of this book will help you find needed information quickly.

The machine shown in this manual may differ slightly from your machine, but will be similar enough to help you understand our instructions.

RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction that the machine will travel when going forward. When you see a broken line (-----), the item referred to is hidden from view.

Before delivering this machine, your dealer performed a predelivery inspection to ensure best performance.

mk71445,1692374813066-19-04AUG25

John Deere Is at Your Service



TS201—UN—15APR13

Customer satisfaction is important to John Deere.

Our dealers strive to provide you with prompt, efficient parts, and service:

- Maintenance and service parts to support your equipment.
- Trained service technicians and the necessary diagnostic and repair tools to service your equipment.
- **John Deere replacement parts, repair services, and information for maintenance or repair are available. For more information, please visit deere.com or deere.ca.**

DX,IFC,JDS-19-30SEP25

Special Messages

Your manual contains special messages to bring attention to potential safety concerns and machine damage, as well as helpful operating and servicing information. Please read all the information carefully to avoid injury and machine damage.

⚠ CAUTION: Avoid injury! This symbol and text highlight potential hazards or death to the operator or bystanders that may occur if the hazards or procedures are ignored.

IMPORTANT: Avoid damage! This text is used to tell the operator of actions or conditions that might result in damage to the machine.

NOTE: General information is given throughout the manual that may help the operator in the operation or service of the machine.

MX00654,000020D-19-04AUG25

Attachments for Your Machine

There is a John Deere attachment or kit to make your new machine perform more tasks or be more versatile, whether your machine is a lawn tractor, compact utility tractor, or a utility vehicle.

You can check out the entire line of attachments for your machine at JohnDeere.com or ask your John Deere dealer. From aerators to electric lift kits to tillers, there is a John Deere attachment or kit to fill every need.

OUMX068,000051C-19-05JUN17

Service Literature

If you would like to purchase a copy of the Parts Catalog or Technical Manual for this machine, visit The John Deere Technical Information Store at:

<https://techpubs.deere.com/>

or call:

- **U.S. & Canada:** 1-800-522-7448.
- **All Other Regions:** Your John Deere dealer.

TH84124,0000199-19-04AUG25

Parts

We recommend John Deere quality parts and lubricants, available at your John Deere dealer.

When you order parts, your John Deere dealer needs the serial number or product identification number (PIN) for your machine or attachment. These are the numbers that you recorded in the Product Identification section of this manual.

Order Service Parts Online

Visit <https://partscatalog.deere.com/jdrc/> for your Internet connection to parts ordering and information.

TC00531,00000E9-19-04AUG25

Contents

	Page		Page
Product Identification		Mount and Dismount Machine Safely	20-1
Record Identification Numbers	00-1	Raise and Lower Leaning Pad	20-1
Safety Label with Text		Raising and Lowering Deck	20-2
Safety Label Location	05-1	Check and Adjust Cutting Height	20-2
Understanding the Machine Safety Labels	05-2	Adjust Deck Lift Spring Tension	20-4
DANGER	05-2	Adjust Mower Deck Anti-Scalp Wheels	20-4
WARNING	05-2	Leveling Mower Deck	20-4
CAUTION	05-3	Test Safety Systems	20-6
CAUTION	05-3	Use Park Brake	20-6
CAUTION	05-3	Test PTO Switch	20-6
DANGER	05-3	Test Blade Clutch/Brake Switch	20-7
WARNING	05-4	Test Park Brake Switch	20-7
DANGER	05-4	Test Operator Presence Switch	20-7
DANGER	05-4	Test Park Brake	20-7
Certification	05-4	Use the Power Take-Off (PTO)	20-7
Safety		Use Fuel Shutoff Valve	20-8
Operator Training Required	10-1	Use the Throttle	20-8
Preparation	10-1	Use the Digital Hour Meter	20-8
Operating Safely	10-1	Use the Motion Control Levers	20-9
Using a Spark Arrestor	10-2	Start Engine	20-10
Checking Mowing Area	10-2	Engage Mower	20-11
Parking Safely	10-2	Stop the Engine	20-12
Rotating Blades are Dangerous	10-2	Check Fuel Tank and Fuel Lines	20-12
Protect Children	10-3	Use Pump Free-Wheel Valves	20-12
Avoid Tipping	10-3	Transport Machine on a Trailer	20-13
Keep Riders Off	10-4	Cut Quality and Mowing Tips	20-13
Avoid High Pressure Fluids	10-5	Mowing Travel Speeds	20-14
Driving Safely on Public Roads	10-5	Dismount to Inspect Mower	20-14
Checking Wheel Hardware	10-5	Service Intervals	
Wear Appropriate Clothing	10-5	Service Intervals	30-1
Maintenance and Storage	10-5	Service your Machine	30-1
Prevent Fires	10-6	Service Lubrication	
Hauling	10-7	Grease	35-1
Tire Safety	10-7	Lubrication	35-1
Handling Fuel Safely	10-7	Service Engine	
Handling Waste Product and Chemicals	10-7	Emissions Service Information	40-1
Machine Cleanout		Avoid Fumes	40-1
General Cleaning Guidelines	13-1	Gasoline Engine Oil	40-1
Cleanout Areas	13-1	Check Engine Oil Level	40-2
Operating Controls		Change Engine Oil and Filter	40-2
Operator Station Controls	15-1	Clean Engine Air Intake Screen and Fan	40-3
General Overview	15-2	Clean Engine Cooling Fins	40-4
Operating		Service HD Air Cleaner Elements	40-4
Daily Operating Checklist	20-1	Check Spark Plugs	40-5
Avoid Damage to Plastic and Painted Surfaces	20-1	Replace Fuel Filter	40-5
		Spark Arrestor Maintenance (If Equipped)	40-6
		Service Transmission	
		Hydraulic Oil	45-1

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2025
DEERE & COMPANY
Moline, Illinois
All rights reserved.
Previous Editions
Copyright © 2024

Contents

Page	Page
Check Hydraulic Oil Level	45-1
Change Hydraulic Oil and Filter	45-1
Bleed Air From Hydraulic System	45-3
Check and Replace Traction Drive Belt	45-4
Check and Adjust Motion Control Linkages	45-5
Check and Adjust Transmission Track	45-6
Adjust Traction Drive Belt Tension	45-8
Service Steering and Brakes	
Adjust Park Brake	50-1
Service Mower	
Removing and Installing Mower Deck Belt	
Shields	55-1
Replace Mower Deck Drive Belt	55-1
Check for Bent Mower Blades	55-2
Replace Mower Blades	55-2
Sharpen Blades	55-3
Balance Blades	55-4
Service Electrical	
Electrical	60-1
Service the Battery Safely	60-1
Service the Battery	60-1
Remove and Install Battery	60-1
Clean Battery and Terminals	60-2
Use Booster Battery	60-2
Replace Fuse	60-3
Service Miscellaneous	
Use Proper Fuel and Stabilizer	65-1
Fill Fuel Tank	65-1
Remove and Install Rear Drive Wheels	65-1
Tighten Rear Drive Wheel Hardware	65-2
Remove and Install Front Caster Wheels	65-2
Check Tire Pressure	65-3
Remove and Install Caster Wheel Yoke	
Assembly	65-3
Clean the Mower	65-4
Clean Plastic Surfaces	65-4
Clean and Repair Metal Surfaces	65-4
Troubleshooting	
Using Troubleshoot Chart	70-1
Engine	70-1
Electrical System	70-2
Machine	70-3
Park Brake	70-3
Steering	70-3
Mower	70-3
Storage	
Storing Safety	75-1
Preparing Fuel and Engine For Storage	75-1
Preparing Machine for Storage	75-1
Removing Machine From Storage	75-2
Specifications	
Engine	85-1
Drivetrain and Travel Speeds	85-2
Electrical System	85-2
Fuel System	85-2
Steering and Brakes	85-2
Tires	85-3
PTO	85-3
Mower Deck	85-3
Deck Blades	85-3
Battery	85-3
Capacities	85-4
Dimensions	85-4
Weights	85-4
Torque Values	85-4
Recommended Lubricants	85-5
Warranty	
Product Warranty	90-1
U.S. EPA Emission Control System Warranty	
Statement (Off-Road Engine Equipment)	90-1
Tire Warranty	90-3
Limited Battery Warranty For Factory	
Installed Batteries	90-3
John Deere Quality Statement	
John Deere Quality	JDQS-1
Service Record	
Record Service Dates	SR-1

Product Identification

Record Identification Numbers

QuikTrak™: Q810E and Q820E

PIN (025001-)

While contacting an Authorized Service Center for information on servicing, always provide the product model and serial number.

Locate the model and serial number for the machine and for the engine of your machine and record the information in the spaces provided below.

DATE OF PURCHASE:

DEALER NAME:

DEALER PHONE:


ENGINE MODEL CODE:



APY594858—UN—20MAY25


A—QR Code

mk71445,1715176843608-19-08MAY24

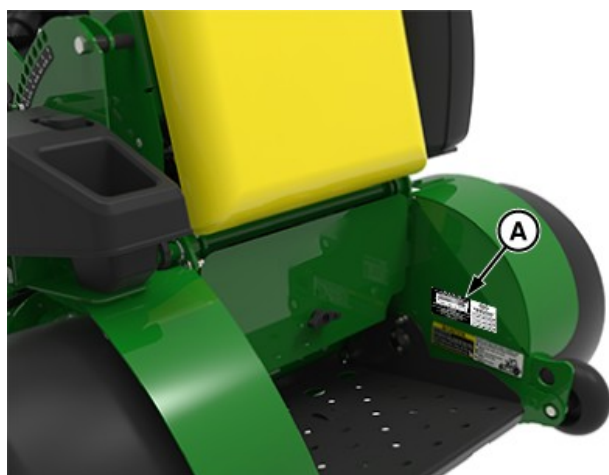

APY580222—UN—03JUN25

PRODUCT IDENTIFICATION NUMBER (A):

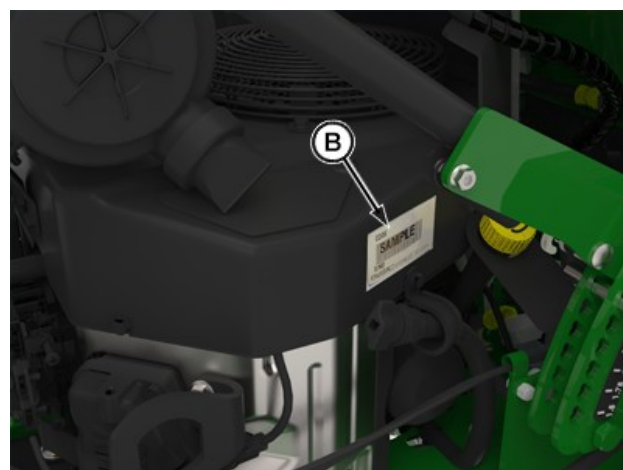


APY580223—UN—09AUG23

ENGINE SERIAL NUMBER (B):

Safety Label with Text

Safety Label Location

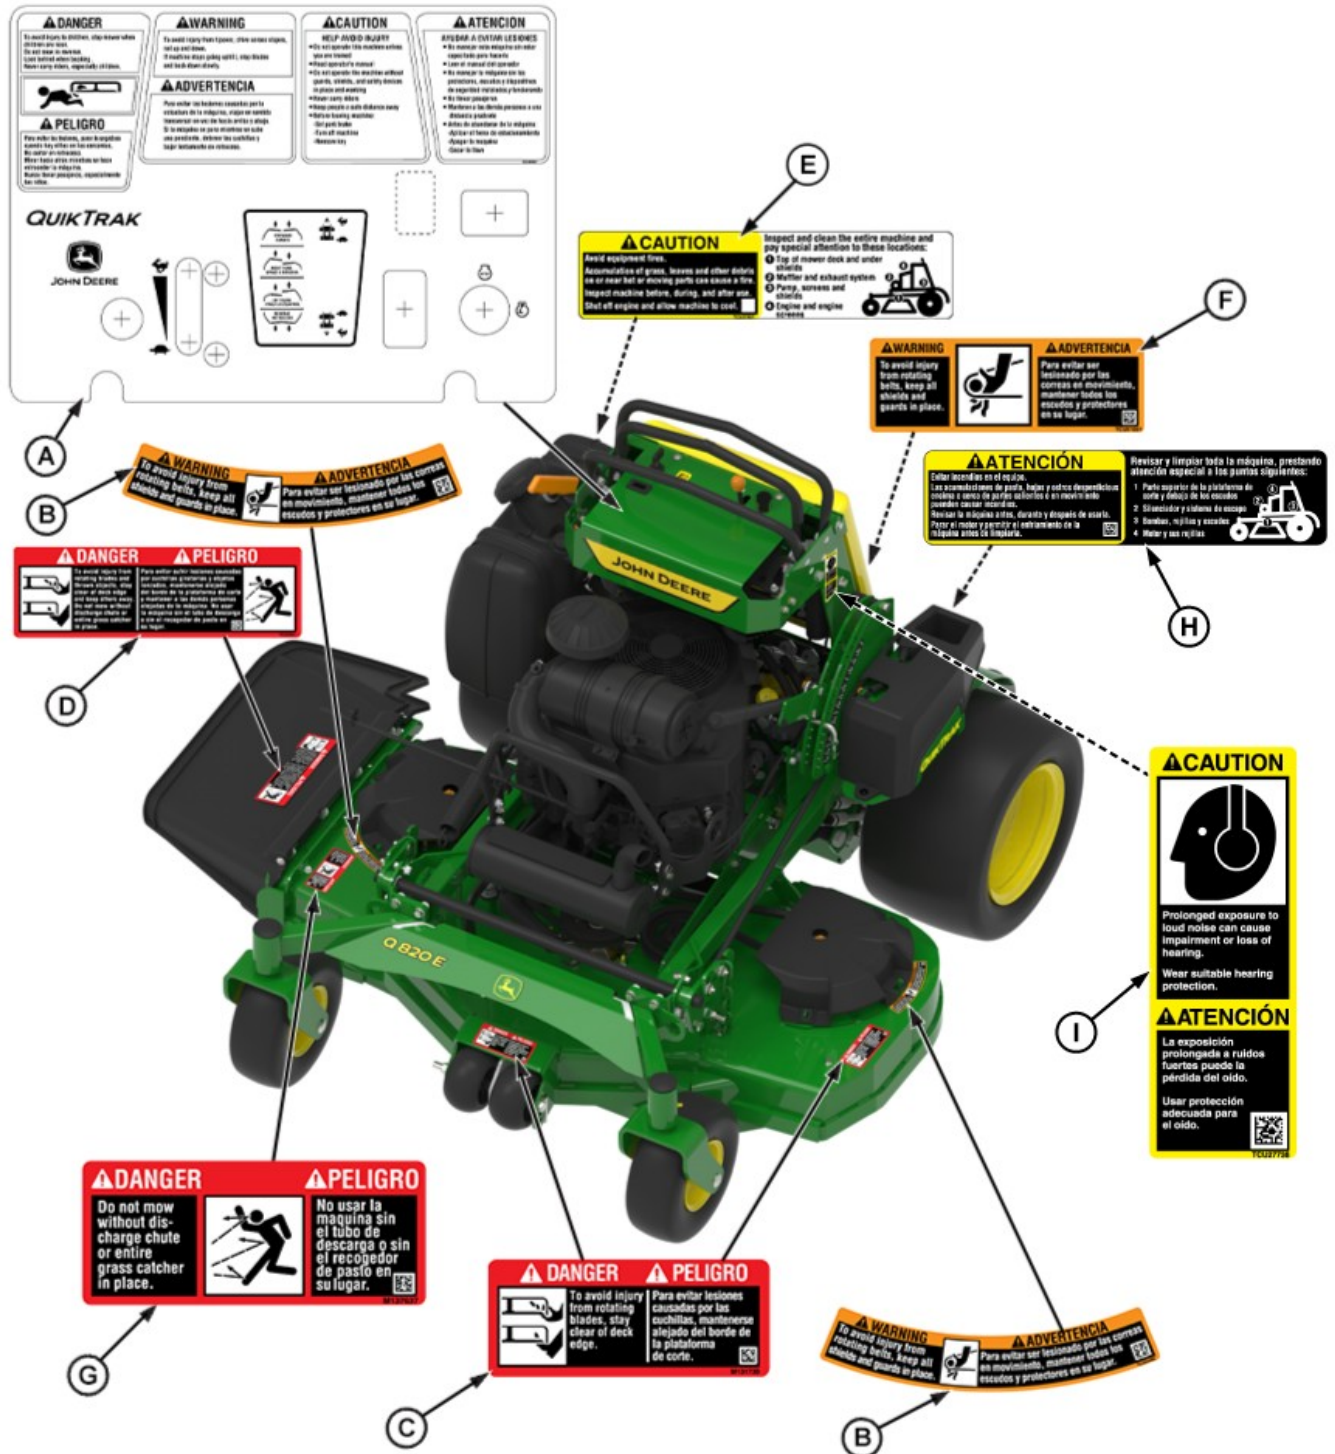

A—LABEL UC36002
B—WARNING TCU24465
C—DANGER M131739
D—DANGER TCU33341
E—CAUTION TCU37801

F—WARNING UC38920
G—DANGER M137637
H—ATENCION UC28595
I—CAUTION TCU27738

APY580987—UN—09MAY24

e48f9rz, 1685357849587-19-09MAY24

Understanding the Machine Safety Labels



MXAL42363—UN—22MAY13

The machine safety labels shown in this section are placed in important areas on your machine to draw attention to potential safety hazards. DANGER or WARNING safety labels are located near specific hazards.

The operator's manual also explains any potential safety hazards whenever necessary in special safety messages that are identified with the word, CAUTION, and the safety-alert symbol.

On your machine safety labels, the words DANGER, WARNING, and CAUTION are used with this safety-alert symbol. DANGER identifies the most serious hazards:

- **DANGER;** The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING;** The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION;** The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

Replace missing or damaged safety labels. Use this operator's manual for correct safety label placement.

There can be more safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

French or Spanish Safety Labels and Operator's Manual

Operator's manuals and safety labels with content in French or Spanish are available for this machine through authorized John Deere dealers. See your John Deere dealer.

NOTE: Both text and no-text labels are shown. Your machine is only equipped with one of these types of labels.

MP47322,00F4601-19-21FEB23

DANGER



APY591195—UN—31AUG23

To avoid injury to children, stop mower when children are near. Do not mow in reverse. Look behind when backing. Never carry riders, especially children.

OUMX068,00010AA-19-31AUG23

WARNING



APY591194—UN—31AUG23

To avoid injury from tipover, drive across slopes, not up and down. If machine stops going uphill, stop blades and back down slowly.

VS70618,0000DC8-19-31AUG23

CAUTION



APY591193—UN—31AUG23

HELP AVOID INJURY

- Do not operate this machine unless you are trained
- Read operator's manual
- Do not operate the machine without guards, shields, and safety devices in place and working
- Never carry riders
- Keep people a safe distance away
- Before leaving machine:
 - set park brake
 - turn off machine
 - remove key

VS70618,0000DC9-19-31AUG23

CAUTION



TCT014052—UN—15JUL16

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear suitable hearing protection.

OUMX068,000058D-19-15JUL16

CAUTION



APY591192—UN—31AUG23

Avoid equipment fires.

Accumulation of grass, leaves and other debris on or near hot or moving parts can cause a fire.

Inspect machine before, during, and after use.


Shutoff engine and allow machine to cool.

Inspect and clean the entire machine and pay special attention to these locations:

- 1.Top of mower deck and under shields
- 2.Muffler and exhaust system
- 3.Pump, screens and shields
- 4.Engine and engine screens

OUMX068,00010AD-19-31AUG23

DANGER

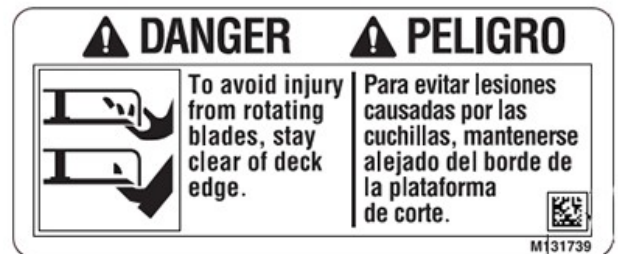

APY591191—UN—31AUG23

To avoid injury from rotating blades, stay clear of deck edge.

TH84124,000015A-19-31AUG23

WARNING

DANGER



APY593321—UN—31AUG23
To avoid injury from rotating belts, keep all shields and guards in place.

BB87125,0001516-19-31AUG23



APY591190—UN—31AUG23
Do not mow without discharge chute or entire grass catcher in place.


BB87125,0001519-19-31AUG23

DANGER

Certification

Your product has been certified for compliance with American National Standards Institute B-71.4, Safety Specifications for Commercial Turf Care Equipment.

OUMX068,0000587-19-03FEB14

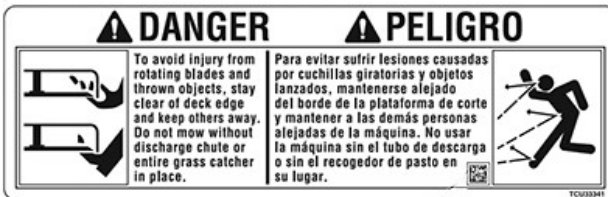

APY593320—UN—31AUG23
To avoid injury from rotating blades and thrown objects, stay clear of deck edge and keep others away.

Do not mow without discharge chute or entire grass catcher in place.

BB87125,0001518-19-31AUG23

Safety

Operator Training Required

- Read the operator's manual, attachment manuals, and other training material carefully. If the operator or mechanic cannot read English, it is the responsibility of the owner to explain this material to them. This publication is available in other languages.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- All operators and mechanics should be trained. The owner of the machine is responsible for training the users.
- Age, physical ability, and mental capacity can be factors in equipment-related injuries. Operators must be mentally and physically capable of operating the machine properly and safely.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people, or property.
- Operate the machine in an open, unobstructed area under the direction of an experienced operator.
- Test drive area with attachment lowered, if equipped, but not running. Slow down when you travel over rough ground.

OUO1082,000657E-19-18JUL25

Preparation

- Evaluate the terrain and determine what accessories and attachments are required to perform the job safely and properly. Only use accessories and attachments approved by the manufacturer.
- Wear appropriate clothing including, safety glasses, and hearing protection. Long hair, loose clothing, or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used. Remove all objects such as rocks, toys, and wire which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive.
 - a. Use only an approved container.
 - b. Never remove gas cap or add fuel when engine is running. Do not smoke.
 - c. Never refuel or drain the machine indoors.
- Check that the operator presence controls, safety switches, and shields are attached and functioning properly. Do not operate machine unless all safety devices are functioning properly.

OUO1082,000657F-19-15MAY18

Operating Safely

- Never run an engine in an enclosed area where dangerous carbon monoxide fumes can collect.
- Only operate in good light, keeping away from holes and hidden hazards.
- Be sure all drives are in neutral and park brake is engaged before starting engine. Only start engine from the operator's position.
- Keep a firm hold on the stationary handle at all times.
- Keep both feet on the operator platform at all times.
- Slow down and use extra care on hillsides. Be sure to travel in the recommended direction on hillsides. For this machine, drive across hillsides, not up and down. Turf conditions can affect the machine's stability. Use caution while operating near drop-offs.
- Slow down and use caution when making turns and when changing directions on slopes.
- Never raise the deck with the blades running.
- Never operate with the PTO shield, or other guards, not securely in place. Be sure all interlocks are attached, adjusted properly, and functioning properly.
- Never operate with the discharge deflector raised, removed or altered, unless using a grass catcher. Do not operate mower without discharge chute or entire grass catcher in place.
- Do not change the engine governor setting or overspeed the engine. Operating the engine at excessive speed can increase the hazard of personal injury.
- Stop on level ground, lower implements, disengage drives, engage park brake, and shut off engine before leaving the operator's position for any reason including emptying the grass catchers or unclogging the chute.
- Stop equipment and inspect blades after striking objects or if an abnormal vibration occurs. Make necessary repairs before resuming operations.
- Keep hands and feet away from the cutting units.
- Look behind and down before backing up to be sure of a clear path.
- Never carry passengers and keep pets and bystanders away.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop blades if not mowing. Watch for traffic when operating near or crossing roadways.
- Be aware of the mower discharge direction and do not point it at anyone.
- Do not operate the machine while under the influence of alcohol or drugs.
- Use care when loading or unloading the machine into or off of a trailer or truck.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.
- Inspect machine before you operate. Be sure

hardware is tight. Repair or replace damaged, badly worn, or missing parts. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before you operate.

- Before using, always visually inspect to see that the blades, blade bolts and the mower assembly are not worn and damaged. Replace worn and damaged blades and bolts in sets to preserve balance.
- Keep safety labels visible when installing accessories and attachments.
- Do not wear radio or music headphones. Safe service and operation require your full attention.
- When machine is left unattended, stored, or parked, lower the mower deck unless a positive mechanical lock is used.

e48f9rz,1685358028400-19-29MAY23

Using a Spark Arrestor

The California Public Resources Code, Section 4442.5 provides as follows:

No person shall sell, offer for sale, lease, or rent to any person any internal combustion engine subject to Section 4442 or 4443, and not subject to Section 13005 of the Health and Safety Code, unless the person provides a written notice to the purchaser or bailee, at the time of sale or at the time of entering into the lease or rental contract, stating that it is a violation of Section 4442 or 4443 to use or operate the engine on any forest-covered, brush-covered, or grass-covered land unless the engine is equipped with a spark arrestor, as defined in Section 4442, maintained in effective working order or the engine is constructed, equipped, and maintained for the prevention of fire pursuant to Section 4443. Cal. Pub. Res. Code 4442.5.

Other states or jurisdictions may have similar laws. A spark arrestor for your machine may be available from your authorized dealer. An installed spark arrestor must be maintained in good working order by the operator.

OUO2005,0000213-19-05JUL17

Checking Mowing Area



MXAL41932—UN—22MAY13

- Clear mowing area of objects that might be thrown. Keep people and pets out of mowing area.
- Low-hanging branches and similar obstacles can injure the operator or interfere with mowing operation. Before mowing, identify potential

obstacles, such as low-hanging branches, and trim or remove those obstacles.

- Study mowing area. Set up a safe mowing pattern. Do not mow where traction or stability is doubtful.
- Test drive area with mower lowered (if equipped) but not running. Slow down when you travel over rough ground.
- Survey all mowing sites to determine which slopes are safe for machine operation and which slopes should be maintained through other maintenance techniques.

MP47322,00F4617-19-05JUL17

Parking Safely

1. Stop machine on a level surface, not on a slope.
2. Disengage mower blades or any other attachments.
3. Lower attachments to the ground.
4. Lock the park brake.
5. Stop the engine.
6. Remove the key.
7. Wait for engine and all moving parts to stop before you leave the operator's platform.
8. Close fuel shut-off valve, if your machine is equipped.
9. Disconnect the negative battery cable or remove the spark plug wires (for gasoline engines) before servicing the machine.

SR99263,000006A-19-24AUG18

Rotating Blades are Dangerous



MXAL41928—UN—18FEB13

HELP PREVENT SERIOUS OR FATAL ACCIDENTS:

- Rotating blades can cut off arms and legs and throw objects. Failure to observe safety instructions could result in serious injury or death.
- Keep hands, feet, and clothing away from mower deck when engine is running.
- Be alert at all times; drive forward and in reverse carefully. People, especially children, can move quickly into the mowing area before you know it.
- Before backing up, stop mower blades or attachments and look down and behind the machine carefully, especially for children.
- Do not mow in reverse.
- Shut off blades when you are not mowing.

- Park machine safely before leaving the operator's station for any reason, including emptying the grasscatchers or unplugging the chute.
- The mower blades should stop in approximately five seconds when the mower is disengaged. If you believe that your blades may not be stopping in that period of time, take your machine to your authorized dealer where they can safely check and service your machine.

MP47322,00F4619-19-05JUL17

Protect Children

- Death or serious injury can occur when young children associate having fun with a lawn mowing machine simply because someone has given them a ride on a machine.
- Children are attracted to lawn mowing machines and mowing activities. They don't understand the dangers of rotating blades or the fact that the operator is unaware of their presence.
- Children who have been given rides in the past may suddenly appear in the mowing area for another ride and be run over or backed over by the machine.
- Tragic accidents with children can occur if the operator is not alert to the presence of children, especially when a child approaches a machine from behind. Before and while backing up, stop mower blades and look down and behind the machine carefully, especially for children.
- Never carry children on a machine or attachment, even with the blades off. Do not tow children in a cart or trailer. They can fall off and be seriously injured or interfere with safe machine operation.
- Never use the machine as a recreational vehicle or to entertain children.
- Never allow children or an untrained person to operate the machine. Instruct all operators not to give children a ride on the machine or in an attachment.
- Keep children indoors, out of the mowing area, and in the watchful eye of a responsible adult, other than the operator, when a mower is being operated.
- Stay alert to the presence of children. Never assume that children will remain where you last saw them. Turn the machine off if a child enters the work area.

OUO2005,0000217-19-05FEB13

Avoid Tipping

Identify Slopes for Safe Operation



- Establish your own special procedures and rules for operating on slopes. These procedure must include a survey of all mowing sites to determine which slopes are safe for machine operation. Always use common

sense and good judgement when performing this survey.

- Lay a straight piece of sturdy lumber 1.2 m (4 ft) long on the slope and measure the angle of the slope with an angle indicator or protractor level.
- Never mow or operate machine on slope angles greater than 20°.
- Exceeding the maximum recommended slope angle of 20° increases the risk of rollover accidents that can result in serious injury or death.
- Always consider potential turf conditions and slope angles when determining the risk of loss-of-control and tip-over accidents.
- On slope angles of 10° or less the risk of rollover is low, but as the slope angle increases to the John Deere recommended maximum of 20° the risk increases to a moderate level.
- The recommended slope angles are for a machine in its basic configuration. The basic configuration is mower deck only, no cab, MCS or other attachments. The addition of a cab, MCS or other attachments will increase the risk of a rollover and decrease the recommended operating slope.



Operate Safely on Slopes

- Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.
- Use lower speeds while mowing and operating on slopes.
- If you feel uneasy on a hillside, do not mow it.
- Mow across slopes, not up and down.
- Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Choose a low ground speed so you will not have to stop while on a slope.
- Rollover can occur before the tires lose traction.
- Use caution if mowing when grass is wet or slippery. Tires may lose traction. Tires may lose traction or slip on slopes even though the brakes are functioning properly.
- Avoid starting, stopping or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly down the slope.
- Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.
- Keep mower deck lowered to ground while operating on slopes. Raising mower deck while operating on slopes can cause machine to become unstable.

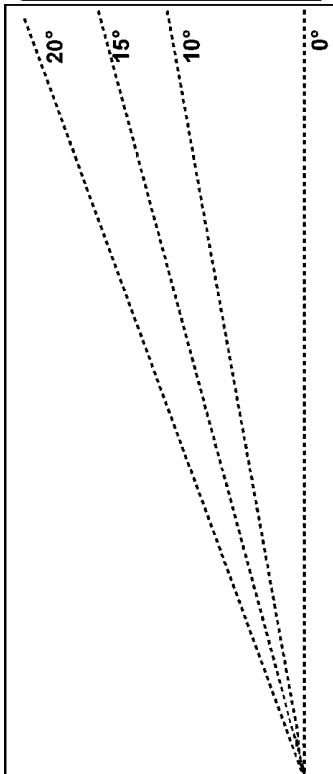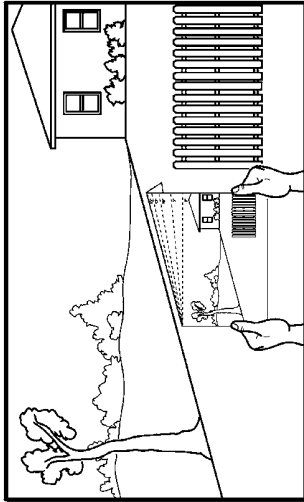

TCAL43869—UN—21MAR13

Operate Safely Near Edges

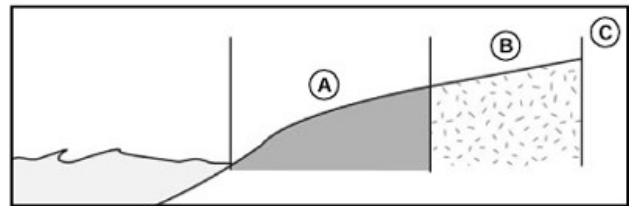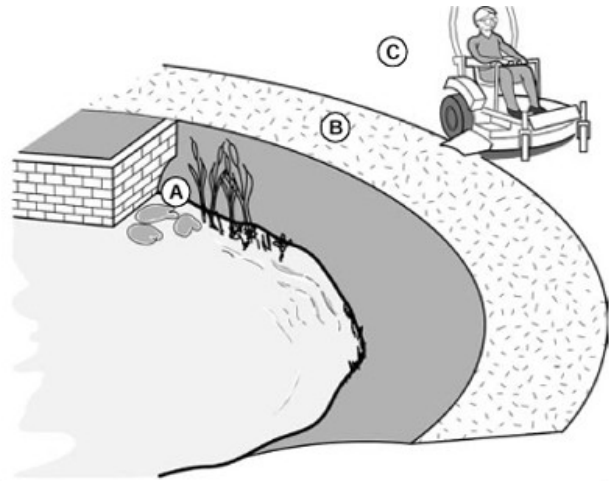

TCAL43870—UN—21MAR13
Example side view of slope and hazards, showing areas (A), (B), and (C)

- Do not mow or operate machine in areas adjacent to hazards that may cause the machine to roll over. The machine could suddenly lose traction, slide, and/or roll over if a wheel goes over the edge or if the edge breaks away.
- Hazards (A) include but are not limited to:
 - Drop-offs, ditches, embankments, or bodies of water and
 - Areas of unsafe slope, soft ground, edges along bodies of water, or area with holes, ruts, bumps, or other hidden objects.
- Maintain a buffer area (B) at least as wide as the machine between hazards (A) and the mowing area (C). Do not mow or operate the machine in the hazard area or buffer area.
- Use a walk-behind mower or string trimmer in and around areas (A) and (B).
- Only mow or operate the machine in the mowing area (C). Do not exceed the recommended slope operating angle. Refer to the "Operate Safely on Slopes" section.

OUMX068,0000A90-19-14NOV14

Keep Riders Off

- Only allow the operator on the machine. Keep riders off.
- Riders on the machine or attachment may be struck

by foreign objects or thrown off the machine causing serious injury.

- Riders obstruct the operator's view resulting in the machine being operated in an unsafe manner.

OUO2005,000021B-19-05FEB13

Avoid High Pressure Fluids



TCAL25960—UN—24MAY12

- Hydraulic hoses and lines can fail due to physical damage, kinks, age, and exposure. Check hoses and lines regularly. Replace damaged hoses and lines.
- Hydraulic fluid connections can loosen due to physical damage and vibration. Check connections regularly. Tighten loose connections.
- Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.
- Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.
- If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A. Information may be obtained in the United States and Canada only by calling 1-800-822-8262.

OUO2005,0000220-19-05FEB13

Driving Safely on Public Roads

Avoid personal injury or death resulting from a collision with another vehicle on public roads:

- Use safety lights and devices. Slow moving machines when driven on public roads are hard to see, especially at night.
- Whenever driving on public roads, use flashing warning lights and turn signals according to local regulations. Extra flashing warning lights may need to be installed.

OUO2005,000021C-19-05FEB13

Checking Wheel Hardware

- A serious accident could occur causing serious injury if wheel hardware is not tight.
- Check wheel hardware tightness often during the first 100 hours of operation.
- Wheel hardware must be tightened to specified torque using the proper procedure anytime it is loosened.

OUO2005,000021D-19-05FEB13

Wear Appropriate Clothing



TCT015572—UN—24MAY18

- Always wear safety goggles, or safety glasses with side shields when operating the machine.
- Wear close fitting clothing and safety equipment appropriate for the job.
- While mowing, always wear substantial footwear. Do not operate the equipment when barefoot or wearing open sandals.
- Wear a suitable protective device such as earplugs. Loud noise can cause impairment or loss of hearing.

TCO0531,000021E-19-17MAY18

Maintenance and Storage



TCAL43414—UN—15MAR13

- Never operate machine in a closed area where dangerous carbon monoxide fumes can collect.
- Disengage drives, lower implement (if equipped), lock parking brake, stop engine and remove key or disconnect spark plug (for gas engines). Wait for all movement to stop before adjusting, cleaning or repairing.
- Clean grass and debris from cutting units, drives, mufflers, and engine to help prevent fires. Clean up oil or fuel spillage.
- Let engine cool before storing and do not store near flame.
- Shut off fuel while storing or transporting. Do not store fuel near flames or drain indoors.
- Park machine on level ground. Never allow untrained

personnel to service machine. Understand service procedure before doing work.

- Use jack stands or lock service latches to support components when required. Securely support any machine elements that must be raised for service work.
- Before servicing machine or attachment, carefully release pressure from any components with stored energy, such as hydraulic components or springs.
- Release hydraulic pressure by lowering attachment or cutting units to the ground or to a mechanical stop and move hydraulic control levers back and forth.
- Disconnect battery (if equipped) or remove spark plug (for gas engines) before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- Use care when checking tines or blades. Wrap the tines or blades, or wear gloves, and use caution when servicing them. Only replace tines or blades. Never straighten or weld them.
- Keep hands, feet, clothing, jewelry and long hair away from moving parts. If possible, do not make adjustments with the engine running.
- Charge batteries (if equipped) in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.
- Keep all parts in good working condition and all hardware tightened. Replace all worn or damaged decals.
- Check grass catcher components and the discharge guard frequently and replace with manufacturer's recommended parts, when necessary. Grass catcher components are subject to wear, damage, and deterioration which could expose moving parts or allow objects to be thrown.
- Keep all nuts and bolts tight, especially tines or blades attachment bolts, to be sure the equipment is in safe working condition.
- Check brake operation frequently. Adjust and service as required.
- On multi-bladed machines, take care as rotating one tine or blade can cause others to rotate.

TH84124,00001DF-19-26JUL18

Prevent Fires

- Please review these recommendations with all operators. See your John Deere dealer with questions.
- Always follow all safety procedures posted on the machine and in this operator's manual. Before carrying out any inspection or cleaning, always shut

off engine, set parking brake, and remove ignition key.

- Besides routine maintenance, one of the best ways to keep your John Deere equipment running efficiently and to reduce fire risk is to regularly remove debris buildup from the machine.
- After operating, allow machine to cool in an open area before cleaning or storing. Do not park machine near flammable materials, such as wood, cloth, or chemicals, or near an open flame or other sources of ignition, such as a water heater or furnace.
- Completely remove any combustible materials from equipment before storing by emptying any grass catcher bags, containers, and cargo boxes.
- Debris can accumulate anywhere on the machine, especially on horizontal surfaces. Remove grass and debris completely from engine compartment, muffler area, and from the mower deck or cutting units both before and after operating machine. Additional cleaning may be necessary when mowing or mulching in dry conditions.
- In addition to cleaning machine before using and storing, keeping engine area clean provides the greatest impact on fire prevention. Other areas requiring regular inspection and cleaning include behind wheel rims, wire harness, hose or line routing, mowing attachments, etc. Compressed air, leaf blowers, or water assists in keeping these areas clean.
- Frequency of these inspections and cleaning will vary depending on a number of factors, including operating conditions, machine configuration, operating speeds, and weather conditions (particularly dry, hot, and windy conditions). When you are operating in these conditions, inspect and clean these areas frequently throughout the day.
- Excess lubrication or fuel/oil leaks or spills on the machine can also serve as collection sites for debris. Prompt machine repair and oil and fuel clean-up reduces the potential for debris collection.
- Bearing failures or overheating can result in a fire. To reduce this risk, always follow the instructions in the machine operator's manual regarding lubrication intervals and locations. Contact your local dealer or other service provider if you have any questions about the lubrication intervals or location and if any unusual noises are coming from areas where bearings might be located. Washing the machine while warm may also reduce bearing life and increase potential for premature bearing failure.
- Always shut off fuel when storing or transporting machine, if the machine has a fuel shutoff.
- Check fuel lines, tank, cap, and fittings frequently for cracks or leaks. Replace if necessary.

OUC2005,0000221-19-22JUL25

Hauling

- Use care when loading or unloading the machine into a trailer or truck.
- Use full width ramps for loading machine into trailer or truck.
- Tie the machine down securely using appropriate straps, chains, cable, or ropes. Both front and rear straps should be directed down and outward from the machine.
- Refer to Transport Machine on a Trailer section for more information.

e48f9rz,1715252855538-19-09MAY24

Tire Safety



TCAL25965—UN—24MAY12

Explosive separation of a tire and rim parts can cause serious injury or death:

- Do not attempt to mount a tire without the proper equipment and experience to perform the job.
- Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.
- When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly.
- Check tires for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

OUO2005,0000222-19-10MAY17

Handling Fuel Safely



MXAL41938—UN—18FEB13

To avoid personal injury or property damage, use extreme care in handling fuel. Fuel is extremely flammable and fuel vapors are explosive:

- Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
- Use only an approved fuel container. Use only non-metal, portable fuel containers approved by the Underwriter's Laboratory (U.L.) or the American Society for Testing & Materials (ASTM). If using a funnel, make sure it is plastic and has no screen or filter.
- Never remove the fuel tank cap or add fuel with the engine running. Allow engine to cool before refueling.
- Never add fuel to or drain fuel from the machine indoors. Move machine outdoors and provide adequate ventilation.
- Clean up spilled fuel immediately. If fuel is spilled on clothing, change clothing immediately. If fuel is spilled near machine, do not attempt to start the engine but move the machine away from the area of spillage. Avoid creating any source of ignition until fuel vapors have dissipated.
- Never store the machine or fuel container where there is an open flame, spark, or pilot light such as on a water heater or other appliance.
- Prevent fire and explosion caused by static electric discharge. Static electric discharge can ignite fuel vapors in an ungrounded fuel container.
- Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before fueling.
- Remove fuel-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment with a portable container, rather than from a fuel dispenser nozzle.
- Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until the fueling is complete. Do not use a nozzle lock-open device.
- Never overfill fuel tank. Replace fuel tank cap and tighten securely.
- Replace all fuel container caps securely after use.
- For gasoline engines, do not use gas with methanol. Methanol is harmful to your health and to the environment.

OUO2005,0000223-19-12OCT16

Handling Waste Product and Chemicals

Waste products, such as, used oil, fuel, coolant, brake fluid, and batteries, can harm the environment and people:

- Do not use beverage containers for waste fluids - someone may drink from them.

- See your local Recycling Center or authorized dealer to learn how to recycle or get rid of waste products.
- A Safety Data Sheet (SDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques. The seller of the chemical products used with your machine is responsible for providing the SDS for that product.

OUO2005.0000224-19-11OCT18

Machine Cleanout

General Cleaning Guidelines

Machine must be inspected periodically throughout the day. Buildup of debris must be removed to ensure proper machine function and to reduce the risk of fire. Frequency of these inspections and cleanings vary depending on a number of factors including operating conditions, machine configuration, operating speeds, and weather conditions. Inspections and cleanings may be required multiple times throughout the day particularly in dry, hot, and windy conditions.

IMPORTANT: Avoid fire! Regular and thorough cleaning of machine combined with other routine maintenance procedures listed in the Operator's Manual greatly reduce the risk of fire, downtime, and improve machine performance.

Besides proper maintenance the condition of the material being handled is the most significant factor contributing to fires. Dry, light, and fluffy materials that can create a dust cloud are the most likely to catch fire. Debris can accumulate in various areas especially on horizontal surfaces. Conditions such as wind speed and direction can change where the material accumulates. Be aware of these changing conditions and adjust your cleaning schedule and practices to ensure proper machine function and to reduce the risk of fire.

Always follow all safety procedures posted on the machine and in the Operator's Manual. Before carrying out any inspection or cleaning, always park machine safely. (See Parking Safely in the Safety Section).

The entire machine should be inspected, with extra attention given to the areas noted below.

OUMX068,0001043-19-03AUG25



APY591196—UN—20MAY25

Inspect and clean the entire machine and pay special attention to these locations:

- Top of mower deck and under shields (A)
- Muffler and exhaust system (B)
- Pump, screens, and shields (C)
- Engine, engine, and screens (D)

h57glet,1712672539750-19-09APR24


Cleanout Areas



APY580988—UN—12SEP23

Operating Controls

Operator Station Controls

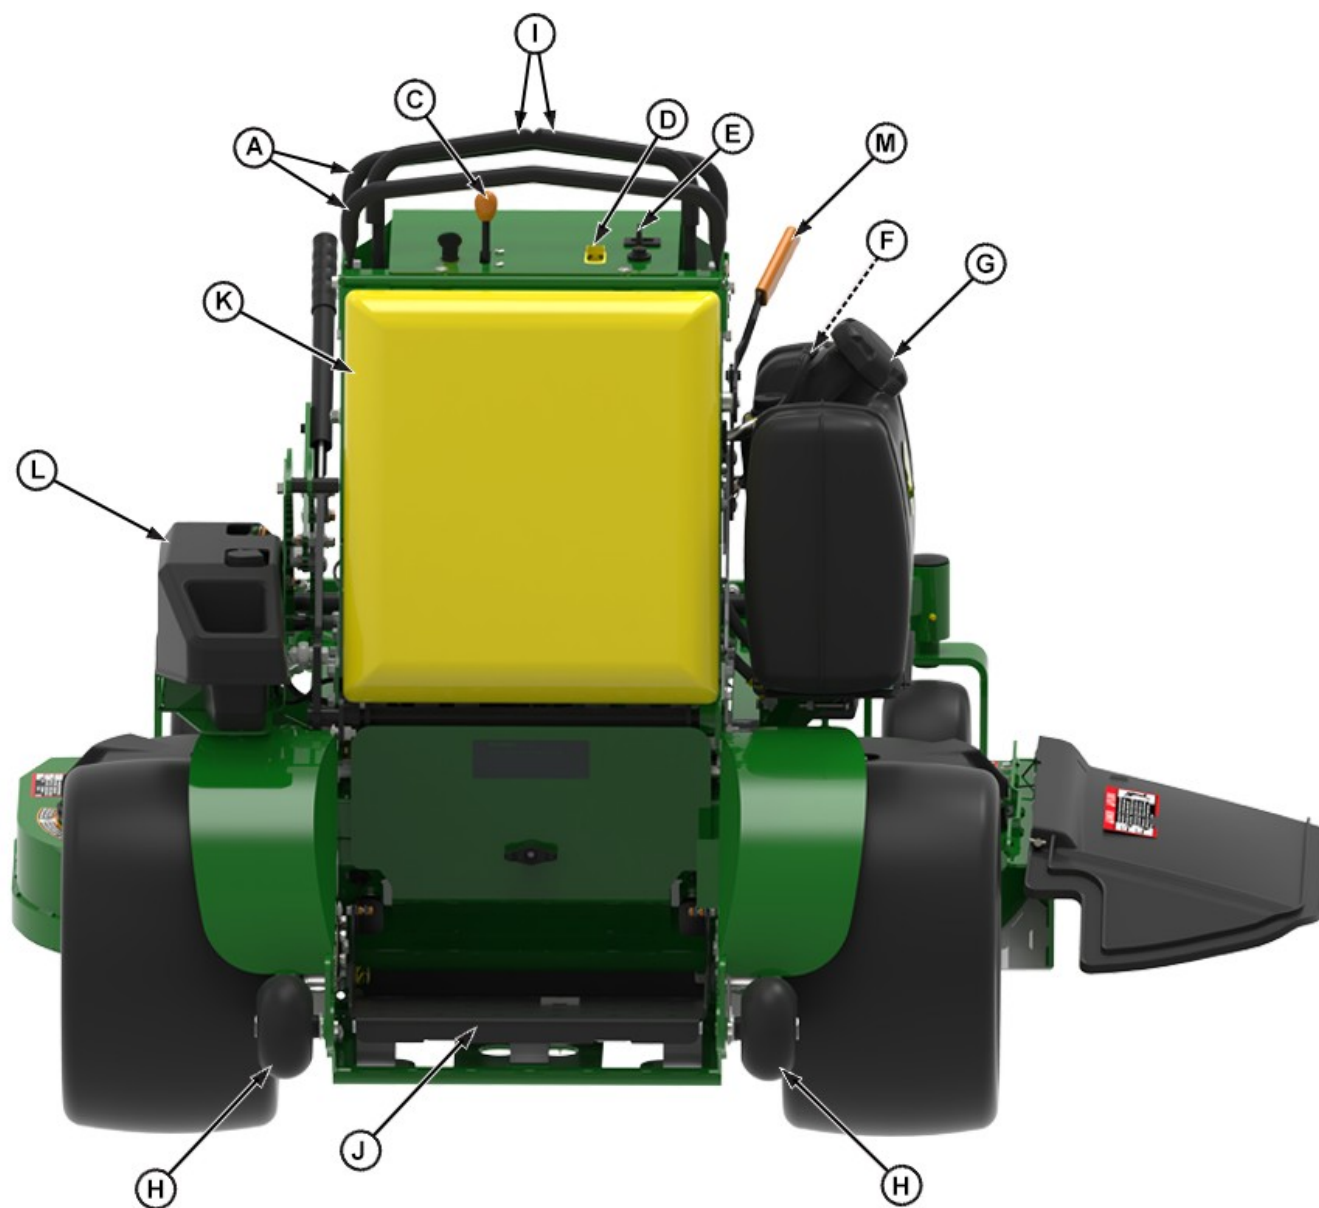

A—Stationary Handles
C—Throttle Lever
D—PTO Switch
E—Key Switch
F—Fuel Shutoff Valve
G—Fuel Fill Cap

H—Anti-Scalp Wheels
I—Motion Control Lever
J—Operator Platform
K—Leaning Pad
L—Battery Box
M—Brake Handle

APY580989—UN—12SEP23

e48f9rz, 1685358910784-19-09MAY24

General Overview



A—Fuel Tank
B—Engine
C—Motion Control Lever
D—Hour Meter
E—Air Cleaner
F—Muffler

G—Mower Deck
H—Front Caster Tire
I—Anti-Scalp Wheels
J—Discharge Chute Deflector
K—Deck Lift Lever

APY580992—UN—12SEP23

e48f9rz,1685358926810-19-09MAY24

Operating

Daily Operating Checklist

- ☐ Make sure all necessary guards and shields are safely and securely attached. Check for loose, missing, or damaged parts.
- ☐ Remove grass and debris from operator platform, air intake screen, engine cooling fins, hydraulic pumps, engine compartment, and muffler area.
- ☐ Test park brake.
- ☐ Test safety systems.
- ☐ Check engine and hydraulic oil level.
- ☐ Check for oil leaks.
- ☐ Check all belts for damage or cracking.
- ☐ Check tire pressure. Check tires for damage or cracking.
- ☐ Check mower level.
- ☐ Adjust cutting height if necessary.
- ☐ Remove mower deck belt shields. Inspect and clean grass and debris from belt area.
- ☐ Check and adjust steering control linkages.
- ☐ Lubricate front caster spindles and wheels.

OUO1082,0000A6D-19-19SEP13


Avoid Damage to Plastic and Painted Surfaces

- Do not wipe plastic parts unless rinsed first. Using a dry cloth may cause scratches.
- Insect repellent spray may damage plastic and painted surfaces. Do not spray insect repellent near machine.
- Be careful not to spill fuel on machine. Fuel may damage surface. Wipe up spilled fuel immediately.
- Prolonged exposure to sunlight will damage hood surfaces.

OUO1082,0000A6E-19-19SEP13

Mount and Dismount Machine Safely

1. Park machine safely. (See Parking Safely in the Safety section.)

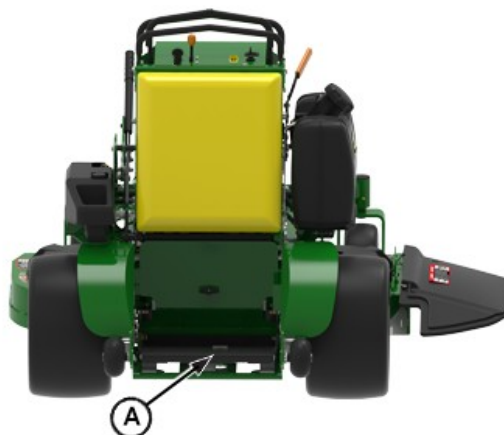


APY580993—UN—20MAY25

2. Step on operator platform (A) at the rear of machine to mount the machine.
3. Step off operator platform to dismount machine.
4. Keep operator platform clean.

e48f9rz,1685358982977-19-10AUG23

Raise and Lower Leaning Pad

1. Park machine safely. (See Parking Safely in the Safety section.)

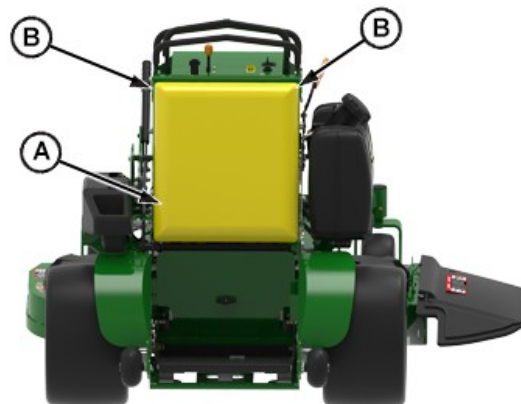

APY580994—UN—20MAY25

2. Lift up bottom portion of leaning pad (A), allowing it to swivel upward on hinges (B).

NOTE: Leaning pad is not intended to stay up on its own.


3. Push down leaning pad (A), allowing it to swivel downward on hinges (B).

e48f9rz,1685359003052-19-30AUG23

Raising and Lowering Deck

The deck lift handle allows the deck to be placed into the highest position for transporting.


1. Park machine safely. (See Parking Safely in the Safety section.)

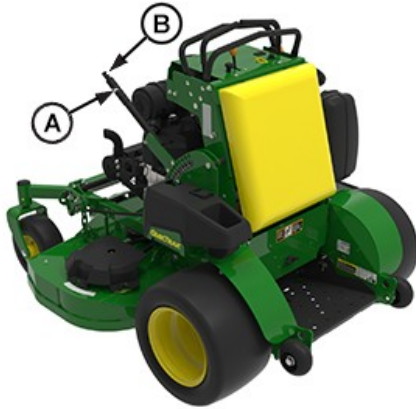

APY591204—UN—12SEP23

2. To raise and lock the mower deck, pull the deck lift handle (A) while pressing push-button (B) until the lift handle is past the highest position. Release push-button and an audible click will be heard. The deck is now locked in the highest position for transporting.

NOTE: The mower deck will only lower to the set height. (See Adjusting Mower Deck Height-of-Cut)

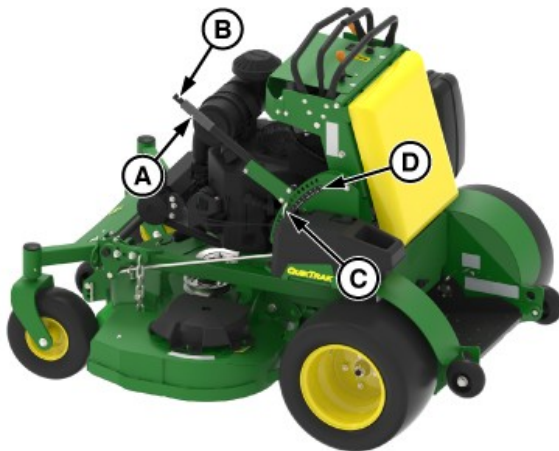

APY591205—UN—21MAY25

3. To unlock and lower the mower deck, pull the deck lift handle (A) back from the locked position and press push-button (B). Slowly lower the deck lift handle to the deck height setting (C).


e48f9rz,1693378614335-19-31AUG23

- Disconnect spark plug wire(s) or battery negative (-) cable to prevent engine from starting accidentally.
- Always wear gloves when handling mower blades or working near blades.

Checking Overall Cutting Height

1. Inflate tires to correct pressure.
2. Set mower deck to the 76 mm (3 in) cutting height.
3. Position right mower blade (discharge side) in the front-to-rear position (parallel to the direction of travel).
4. Measure from front of blade tip to the ground.
5. If blade tip height is not within 73—79 mm (2-7/8—3-1/8 in), an adjustment is needed.

Adjusting Level (Front-to-Rear)

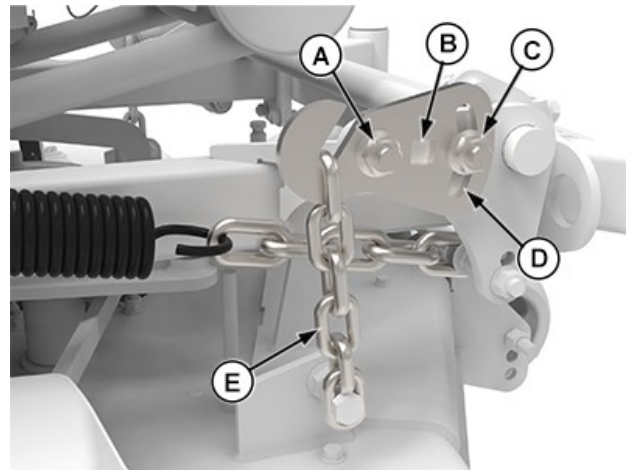

APY591200—UN—12SEP23

- A—Cap Screw
- B—Square Hole
- C—Adjusting Cap Screw
- D—Pivot Bracket
- E—Lift Chain

1. Support the weight of the deck with proper lifting device to relieve tension from lift chain (E).
2. Loosen cap screw (A) on both sides of mower deck.
3. Loosen adjusting cap screw (C) on pivot bracket (D) on both sides of mower deck.
4. Insert 1/2 in drive ratchet in square hole (B) and reposition pivot bracket (D).

NOTE: Procedure need to be performed several times to obtain correct measurements.

5. Tighten hardware to specification.

Specification

Bolt—Torque. 61 N·m
(45 lb·ft)

Check and Adjust Cutting Height

CAUTION: Rotating blades are dangerous. Before adjusting or servicing mower:

6. When adjustments have been made, verify measurements.

e48f9rz,1693377386378-19-31AUG23

Adjust Deck Lift Spring Tension

NOTE: Deck lift spring tension is adjusted at the factory. If the effort required to raise or lower the mower deck is not satisfactory, an adjustment may be necessary.


Check Spring Tension

1. Park machine on a hard, level surface.
2. Stop engine and lock park brake.
3. Raise the mower deck lift lever to the transport position.

Adjust Spring Tension

NOTE: Do not over-tension the deck lift arm spring. The further the spring is extended, the more freely the deck will float.

Decrease deck lift spring tension if operating in rough terrain.

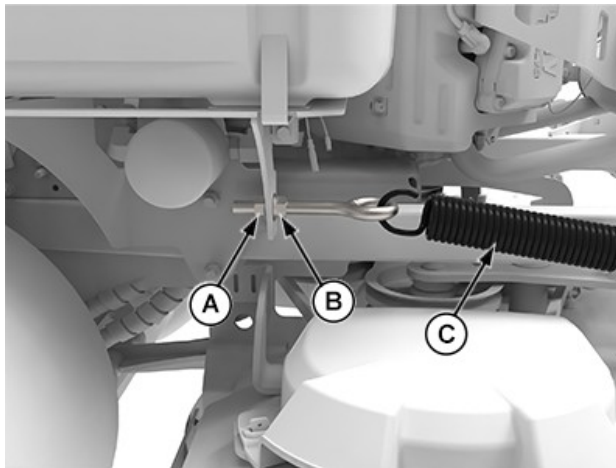

APY591199—UN—12SEP23

1. Loosen cap screw (B).

NOTE: Using a 3/8 in ratchet will help in the tension adjustment.

2. Face the front of the machine and adjust the spring tension:
 - To make the deck easier to lift, tighten cap screw (A) forward to increase spring tension (C).
 - To make the deck harder to lift, loosen cap screw (A) rearward to decrease spring tension (C).
3. When adjustments have been made, tighten cap screw (B).


e48f9rz,1693379927710-19-31AUG23

Adjust Mower Deck Anti-Scalp Wheels

NOTE: The flattest cut achieved by having all anti-scalp wheels adjusted off the ground. Check anti-scalp wheel adjustments each time the mower deck cutting height is changed.

It is recommended that all anti-scalp wheels be kept off the ground to minimize scuffing.

1. Inflate tires to correct pressure.
2. Adjust mower deck to desired cutting height.

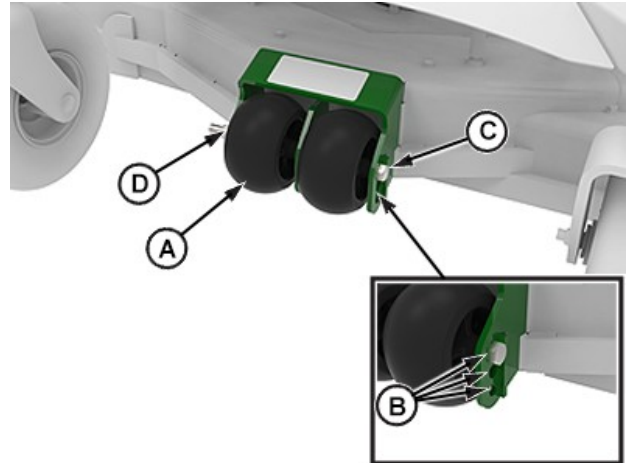

APY580998—UN—28JUN23

3. Adjust anti-scalp wheel (A) to one of three positions (B).
 - Remove cap screw (C) and lock nut (D).
 - Adjust wheel up or down so it is approximately 6—13 mm (1/4—1/2 in) above mowing surface.
4. Install wheel with attaching hardware.
5. Adjust all wheels to the same height.

e48f9rz,1685359092636-19-10AUG23

Leveling Mower Deck

CAUTION: Rotating blades are dangerous. Before adjusting or servicing mower:

- Disconnect spark plug wire(s) or battery negative (-) cable to prevent engine from starting accidentally.
- Always wear gloves when handling mower blades or working near blades.

NOTE: Mower deck anti-scalp wheels should not contact the ground.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Inflate tires to correct pressure.


3. Inspect mower blades for:

- Sharpness.
- Damage.
- Bent blades.

Checking Level (Side-to-Side)

NOTE: Mower deck anti-scalp wheels should not contact the ground.

1. Adjust mower deck to 76 mm (3 in) cutting height position.

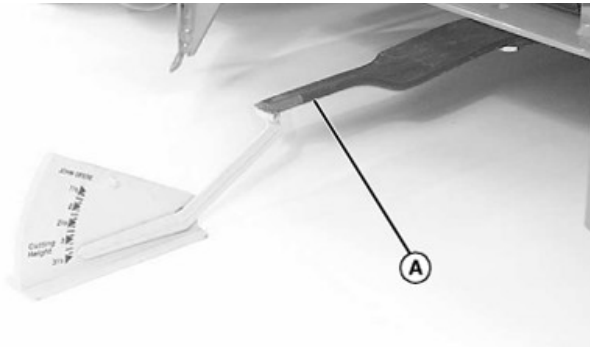

TCAL43602—UN—26MAR13


Discharge chute raised for photo clarity.

2. Position right mower blade (A) (discharge side) perpendicular to direction of travel.

NOTE: Use a short ruler or a leveling gauge (Part No. AM130907) to check the mower blade level.

3. Measure from outside blade tip to the ground.
4. Position left mower blade perpendicular to direction of travel.
5. Measure from outside blade tip to the ground.
 - The difference between measurements should be no greater than 3 mm (1/8 in.).
6. If side-to-side level is not within the tolerance, an adjustment is necessary.

Adjusting Level (Side-to-Side)

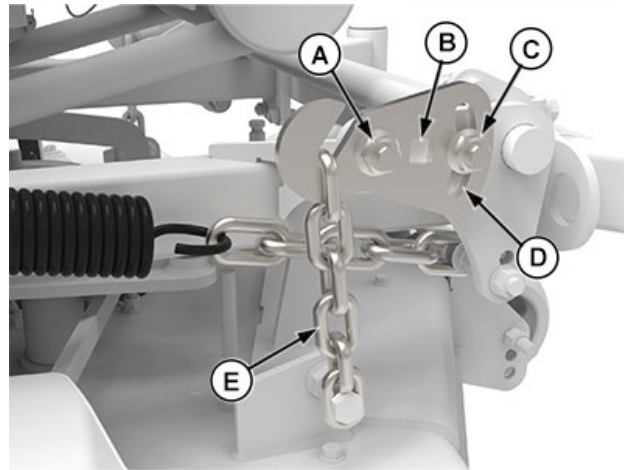

APY591200—UN—12SEP23

- A—Bolt
- B—Square Hole
- C—Adjusting Bolt
- D—Pivot Bracket
- E—Lift Chain

1. Support the weight of the deck with proper lifting device to relieve tension from lift chain (E).
2. Loosen bolt (A) on both sides of mower deck..
3. Loosen bolt (C) on pivot bracket (D) on both sides of mower deck.
4. Insert 1/2 in drive ratchet in square hole (B) and reposition pivot bracket (D) and tighten hardware to specification.

Specification

Bolts—Torque. 61 N·m
(45 lb·ft)


NOTE: Procedure may need to be performed several times to obtain correct measurements.

5. When adjustments have been made, verify measurements.

Checking Level (Front-to-Rear)

1. Set height-of-cut (HOC) to the 76 mm (3 in) cutting height position.
2. Position right mower blade (discharge side) parallel to direction of travel.
3. Measure from front blade tip to the ground.
4. Turn blade 180° and measure from rear blade tip to the ground.

NOTE: The height (A) of the rear blade tip should be between 3—6 mm (1/8—1/4 in) higher than the front blade tip.

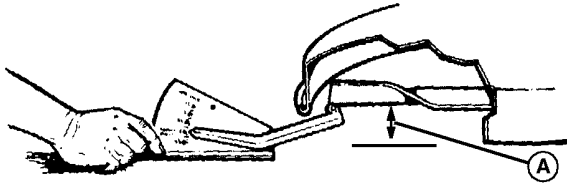

TCAL43605—UN—26MAR13

5. If the front-to-rear level is not within the given tolerance, an adjustment is necessary.

Adjusting Level (Front-to-Rear)

IMPORTANT: Adjust the left and right deck lift assist rods equally.


NOTE: Adjust side-to-side mower level before adjusting front-to-rear level.

Adjust both sides of the mower deck equally.

1. Set the height selector to 3 in.
2. Adjust the front adjusters to achieve 3in (See Checking and Adjusting Cutting Height.)
3. Adjust the rear hangers to reset the proper pitch. (See Adjusting Mower Deck Height-of-Cut)
4. Verify that adjustment on right and left sides is equal.
5. Check front-to-rear mower level.

e48f9rz,1693380307276-19-31AUG23

Test Safety Systems

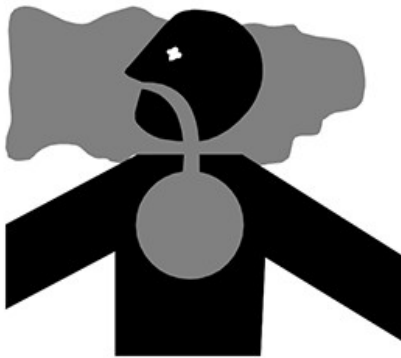

TCAL42193—UN—08MAR13

CAUTION: Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.

- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.
- Connect a pipe extension to the engine

exhaust pipe to direct the exhaust fumes out of the area.

- Allow fresh outside air into the work area to clear the exhaust fumes out.

The safety systems installed on your machine should be checked before each machine use. Be sure you have read the machine operator's manual and are completely familiar with the operation of the machine before performing these safety system checks.

Use the following checkout procedures to check for normal operation of machine.

If there is a malfunction during one of these procedures, do not operate machine. **See your authorized dealer for service.**

Perform these tests in a clear, open area. Keep bystanders away.

OOU1082,0000A74-19-10AUG23

Use Park Brake

Lock Park Brake



TC669456—UN—20MAY25

- Raise park brake lever (A) to lock park brake.

Unlock Park Brake

- Lower park brake lever (A) to unlock park brake.

e48f9rz,1685359140391-19-21MAY25

Test PTO Switch

1. Stand on the operator platform with motion control levers in the neutral position.
2. Lock park brake.
3. Press PTO switch to ON position to engage.
4. Turn key switch to the start position.

Result: The engine must not crank.

OUMX068,00010EA-19-29AUG23

Test Blade Clutch/Brake Switch

1. Stand on the operator platform with motion control levers in the neutral position.
2. Lock park brake.
3. Start the engine.
4. Move throttle lever to 3/4 speed setting.
5. Unlock park brake. Park brake must be released/disengaged for PTO to work.
6. Press PTO switch to ON position to engage.
7. Press PTO switch to OFF position to disengage.
8. Repeat steps 5 and 6 several times.

Result: The blade clutch must stop the blades within 7 seconds.

OUMX068,00010EB-19-21AUG23

Test Park Brake Switch

1. Press PTO switch to OFF position to disengage.
2. Unlock park brake.
3. Turn key switch to the start position.

Result: The engine must not crank.

OUMX068,00010EC-19-10AUG23

Test Operator Presence Switch

1. Stand on the operator platform with motion control levers in the neutral position.
2. Start engine.
3. Ensure the vehicle is on level ground then unlock park brake.
4. Move throttle lever to 3/4 speed setting.

CAUTION: Avoid injury! Before engaging mower, make sure that area is clear of bystanders, especially children.

5. Press PTO switch to ON position to engage.
6. Step completely off the operator platform.


Result: The engine must stop.

Note: Refer to Technical Manual for adjustments.

OUMX068,00010ED-19-24OCT23

Test Park Brake

1. Inflate tires to correct pressures.

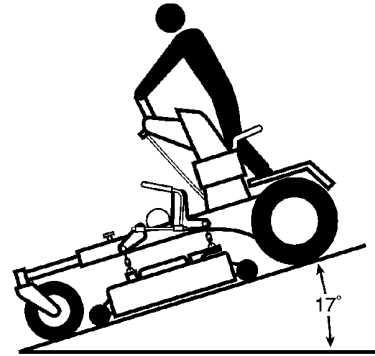

TCAL43612—UN—26MAR13

2. Stop machine on a 17° slope (30% grade). Engage park brake and turn off engine.

Result: Park brake must hold the machine stationary. If necessary, see your John Deere dealer or refer to adjusting park brake in the service steering and brake section.


e48f9rz,1692869834768-19-09MAY24

Use the Power Take-Off (PTO)

Engage PTO

CAUTION: Avoid injury! Before engaging mower, make sure that area is clear of bystanders especially children.

1. Stand on the operator platform with motion control levers in the neutral position.
2. Start engine.
3. Unlock park brake.
4. Move throttle lever to half—three-quarters of fast position.

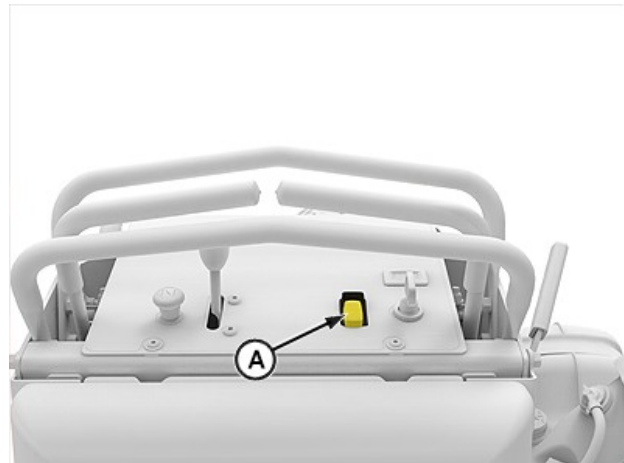

APY591187—UN—16AUG23


5. Press switch (A) to ON position, engaging mower deck.
6. Move throttle lever forward to the fast position for mowing.

Disengage PTO

1. Press switch (A) to OFF position.
2. Lock park brake.

e48f9rz,1685359163128-19-16AUG23

Use Fuel Shutoff Valve

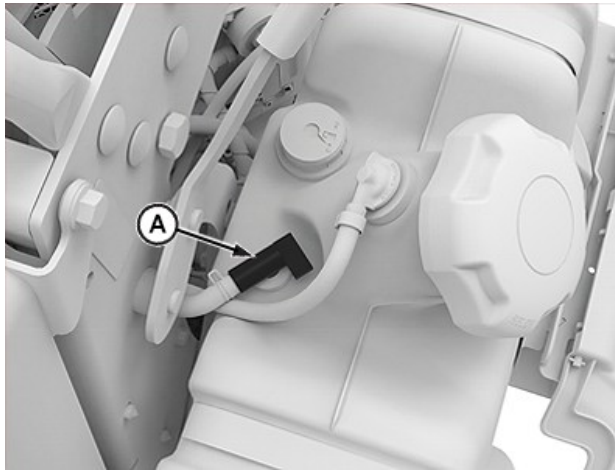


APY591178—UN—16AUG23

The fuel shutoff valve is located at the top of the tank. Move fuel shutoff valve (A) to the on position for normal operation. Move the fuel shutoff valve to the off position when the machine is not in use and during transport.

NOTE: Do not fill the tank completely; allow for expansion. Fill the tank to 25 mm (1 in) below the filler neck.

e48f9rz,1685359191844-19-16AUG23

Use the Throttle

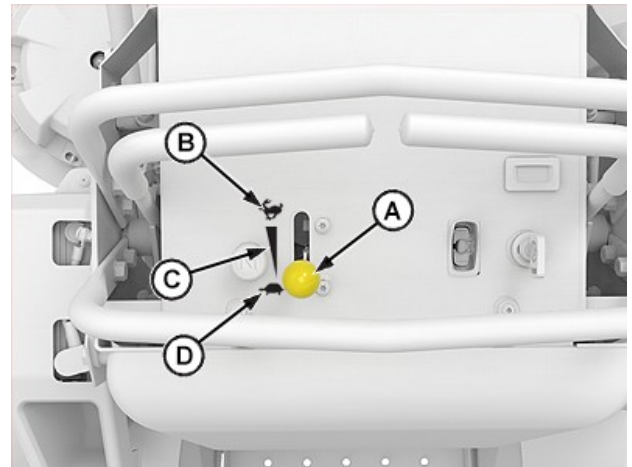


APY581002—UN—28JUN23

- Move throttle lever (A) forward to the fast position (B) when mowing.
- Move throttle lever (A) to the half fast position (C) when starting and warming the engine.
- Pull throttle lever (A) backward to the slow position (D) to idle engine. Do not run engine at slow idle any longer than necessary.

e48f9rz,1685359239974-19-16AUG23

Use the Digital Hour Meter

NOTE: Hour meter counts hours only when engine is running.

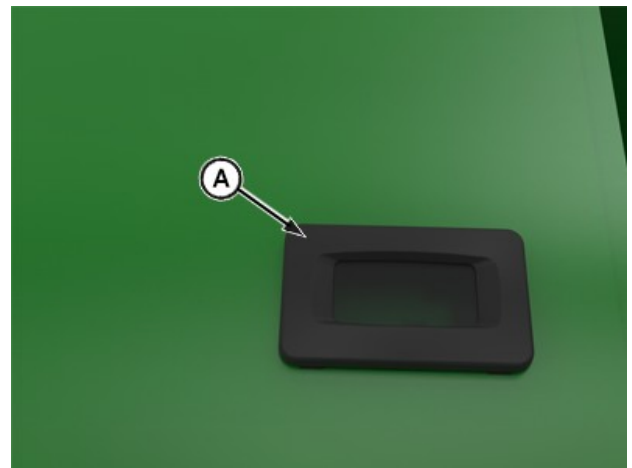

APY581003—UN—28JUN23

- Hour meter (A) shows number of hours machine has been operated.
- Use hour meter and service interval section to determine when machine needs service.

e48f9rz,1685359278438-19-10AUG23

Use the Motion Control Levers


CAUTION: Avoid injury! Learn how to use the motion control levers and practice at half throttle until becoming proficient and comfortable with the operation of the machine.

Do not move motion control levers from forward to reverse or from reverse to forward position rapidly. Sudden direction changes cause loss of control or damage the machine.

The functions of the motion control levers are:

- Steering
- Acceleration
- Deceleration

Neutral Position

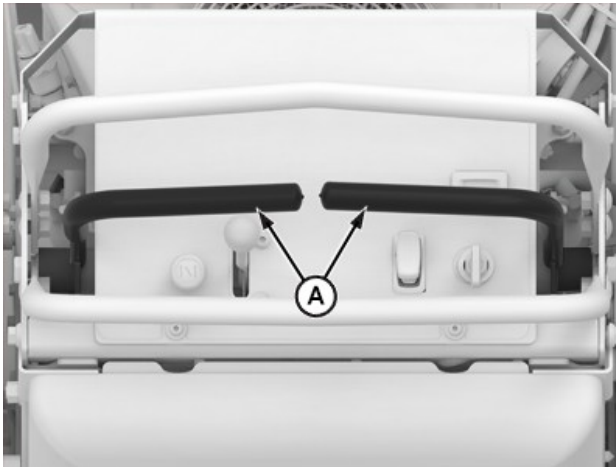

APY581004—UN—28JUN23

Motion Control Levers (A) shown in the Neutral Position.

- Machine speed, motion, and direction are controlled when the engine is running and the parking brake is unlocked.
- The operator exits the mower with the engine running when the PTO switch is disengaged.

Forward and Reverse Motion

CAUTION: Avoid injury! Children or bystanders injured by run over and rotating blades. Before traveling forward or rearward:

- Carefully check the area around the machine.
- Disengage the mower before backing up.

1. Move throttle lever to the fast position.
2. Unlock park brake.
3. Push motion control levers (A) forward to begin forward motion. The farther forward the control levers are moved, the faster the machine will travel.
 - Forward speed range: 0—12.9 km/h (0—8 mph)

4. Pull both motion control levers (A) rearward at the same time to begin reverse motion.
 - Reverse speed range: 0—5.6 km/h (0—3.5 mph)
5. To stop motion, slowly release motion levers (A) control forward or rearward until the machine comes to a stop.

NOTE: The motion control linkages are adjustable. If adjustment is required, see Checking and Adjusting Motion Control Linkages in the Service Transmission section.

Forward



APY581005—UN—28JUN23

- Push both motion control levers forward toward stationary bar at the same time.

Reverse



APY581006—UN—28JUN23

- Pull both motion control levers past center rearward toward stationary bar at the same time.

Gentle Left Turn



APY581007—UN—28JUN23

- Push right motion control lever farther forward than the left motion control lever.

Sharp Left Turn



APY581009—UN—28JUN23

- Push right motion control lever forward and pull left motion control lever rearward at the same time.

Gentle Right Turn



APY581008—UN—28JUN23

- Push left motion control lever farther forward than the right motion control lever.

Sharp Right Turn



APY581010—UN—28JUN23

- Push left motion control lever forward and pull right motion control lever rearward at the same time.

e48f9rz,1685359306363-19-24AUG23

Start Engine


Before Start the Engine

- Make sure that the motion control levers are in the exact neutral position.
- Lock park brake if it is not already locked.
- Ensure that PTO switch is off to disengage.
- Turn fuel valve to the on position.

CAUTION: Avoid injury! Engine exhaust fumes contain carbon monoxide, cause serious illness or death.

- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.
- Connect a pipe extension to the engine exhaust pipe to direct the exhaust fumes out of the area.
- Allow fresh outside air into the work area to clear out the exhaust fumes.

1. Turn fuel shut off valve to the on position.
2. Stand on the operator platform.
3. Lock park brake.
4. Put motion control levers in the neutral position.

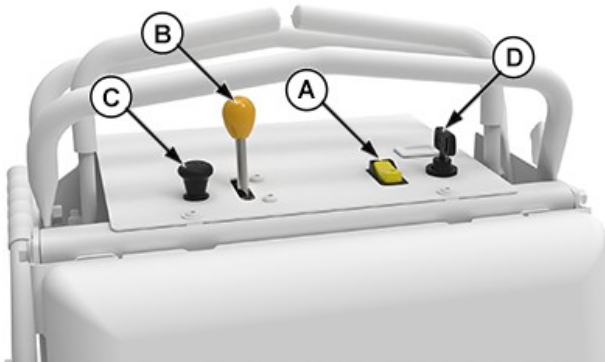

APY581011—UN—12SEP23

5. Press PTO switch (A) to OFF position, disengaging PTO.
6. Move throttle lever (B) to half throttle engine speed:
 - Cold engine: Set throttle lever at the half—three-quarters fast position.
 - Warm/hot engine: Set throttle lever to the fast position.
7. Position choke knob (C) (if equipped):
 - Cold engine: Pull knob up to the choke position.
 - Warm/hot engine: If necessary, pull knob up to the choke position.
8. Turn key switch (D) to the start position.
9. Release key to the run position when engine starts.
10. With engine started:
 - Push choke knob to the off position.
 - Move throttle lever to the fast position.
 - Unlock park brake.

e48f9rz,1685359343873-19-16AUG23

Engage Mower

CAUTION: Avoid injury! Clear mowing area of all bystanders when operating this machine. Thrown objects cause serious injury or death.


Keep hands and feet away from blades and discharge opening.

Do not mow in reverse unless necessary.

IMPORTANT: Avoid damage! To help prevent damage to PTO clutch:

- Do not engage PTO with the throttle in the fast position.

1. Adjust mower deck to desired cutting height.
2. Start engine.

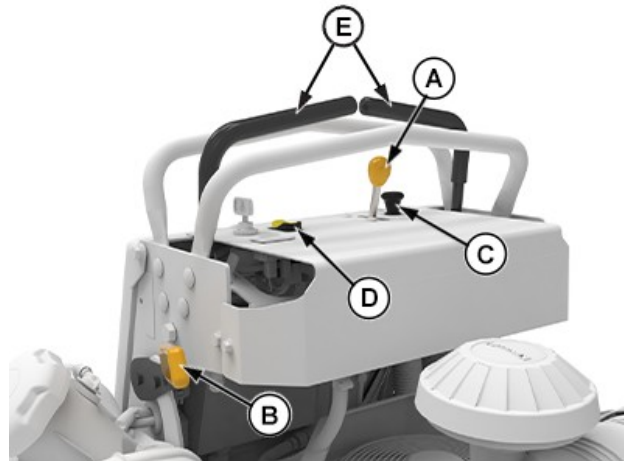

APY581012—UN—12SEP23

3. Move throttle lever (A) to the half fast position.
4. Unlock park brake (B).

NOTE: In cold weather or with a new machine, it is necessary to engage choke (C) (if equipped) at the same time as PTO switch (D) to prevent engine from stalling.

5. Press PTO switch (D) to ON position to engage mower deck.
6. Move throttle lever to the fast position.

NOTE: The travel speed and turn rate varies with the amount that the control levers are moved.

7. Push motion control levers (E) forward slowly. Mow at a safe travel speed.

e48f9rz,1685359375285-19-16AUG23

Stop the Engine

IMPORTANT: To help prevent engine backfiring, throttle lever should be set at the half throttle position and run for 30 seconds prior to stopping the engine.

Do not stop engine when mower is on a slope of more than 30° for an extended period of time. Oil may run through valve train into carburetor and muffler.

1. Lock park brake.
2. Move throttle lever to the half fast position, and run for 30 seconds.
3. Turn key switch to stop position.


CAUTION: Children or bystanders may attempt to move or operate an unattended machine.

Always lock the park brake and remove the key before leaving the machine unattended.

4. Remove key.
5. Turn fuel shutoff valve off.

d6vudh3,1656055065883-19-16AUG23

Check Fuel Tank and Fuel Lines

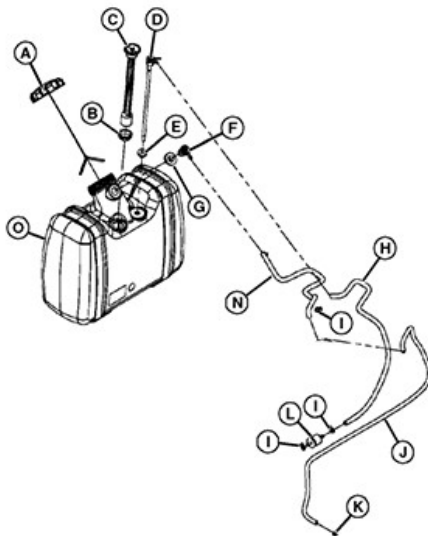


APY591203—UN—12SEP23

- A—Fuel Tank Cap
- B—Fuel Gauge Grommet
- C—Fuel Level Gauge
- D—Fuel Siphon
- E—Bushing
- F—Fuel Remote Vent
- G—Grommet
- H—Fuel Line
- I—Hose Clamp (5 used)
- J—Fuel Hose (3/16 in ID)

- K—Hose Clamp
- L—Fuel Filter
- M—Fuel Hose (3/16-in ID)
- N—Fuel Tank

- Do not alter or remove system components.

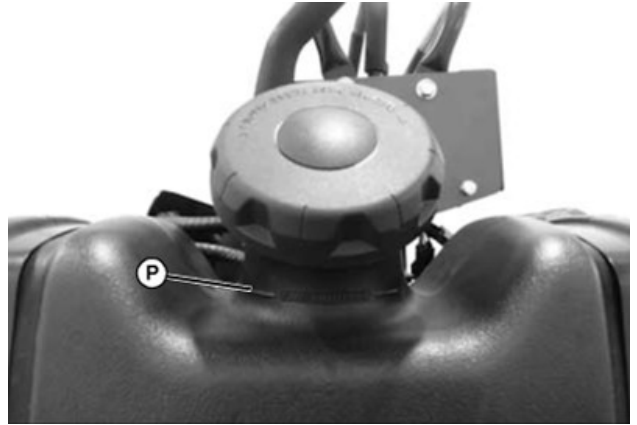

TCAL43628—UN—26MAR13

- Do not fill tank past “Max Fill Level” line (P).

OUC1082,0000A83-19-31AUG23

Use Pump Free-Wheel Valves

CAUTION: When the bypass valve is open, the machine will have unrestricted motion.

- Do not open the bypass valve when the machine is stopped on an incline to prevent it from going downhill out of control.

IMPORTANT: Transmission damage may occur if the machine is towed or moved incorrectly:


- Move machine by hand only.
- Do not use another vehicle to move machine.
- Do not tow machine.

NOTE: The pump free-wheel valves must be turned fully clockwise (closed) during normal machine operation.

When the machine needs to be moved without starting the engine, use the pump free-wheel valves:

1. Lock park brake.

NOTE: The pumps (A) are located at the rear of the engine. The bypass valves (B) accessed by lifting the leaning pad.

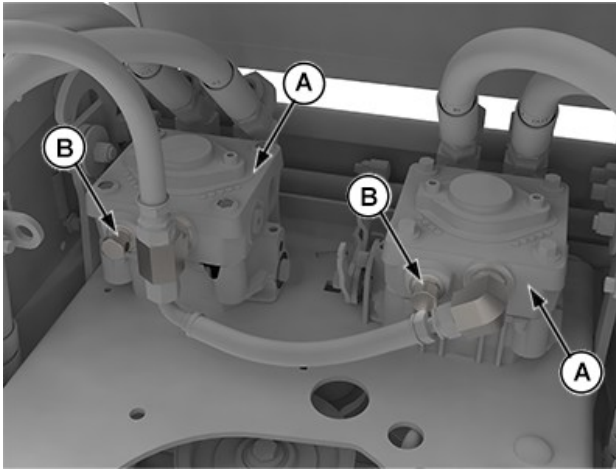

APY591197—UN—12SEP23

Turn both pump bypass valves (B) clockwise approximately half turn (open position).

3. Unlock park brake.
4. Push machine to desired location. Due to hydraulic system drag, machine move slowly.
5. Lock park brake.
6. Turn pump bypass valves (B) on both pumps half turn counterclockwise (closed position). Tighten valves to specification.

Specification

Valve—Torque. 11 N·m
(100 lb·in)

e48f9rz,1692871945425-19-30AUG23

Transport Machine on a Trailer

Use a heavy-duty trailer to transport the machine. Trailer have signs and lights required by law.


NOTE: *Trailer capacity exceed combined machine weight and attachment weight. (See Specifications section in Operator's Manual).*

CAUTION: Use extra care when loading the machine onto a trailer or truck or unloading it. Machine wheels go off the ramp or trailer, causing the machine to tip over.

- To load, back slowly and in a straight line. Keep wheels away from drop-offs and edges.
- Do not use two separate loading ramps. Use a full width loading ramp at least 30 cm (12 in) wider than machine to keep caster wheels from going off the ramp edge.
- Use a trailer with sides.


1. Park trailer on level surface.
2. Raise mower deck to the transport position.

3. Back machine onto heavy-duty trailer with full-width ramp.
4. Stop engine and lock park brake.
5. Lower mower deck completely.
6. Remove key.
7. Turn fuel shutoff valve to the off position.

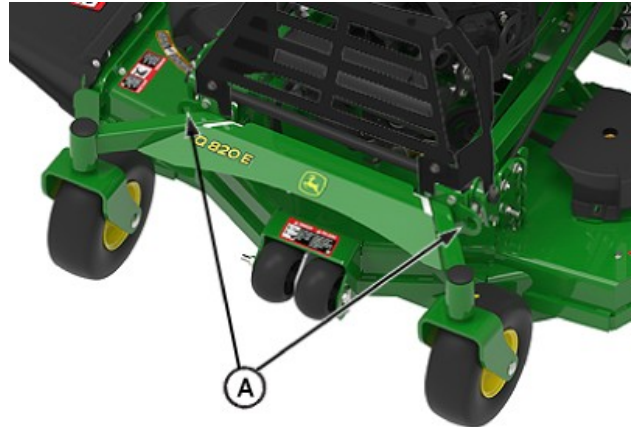

TC669448—UN—20MAY25

8. Fasten front of machine at both sides of the frame at points (A) to trailer with heavy-duty straps, chains, or cables. Straps directed down and outward from machine.

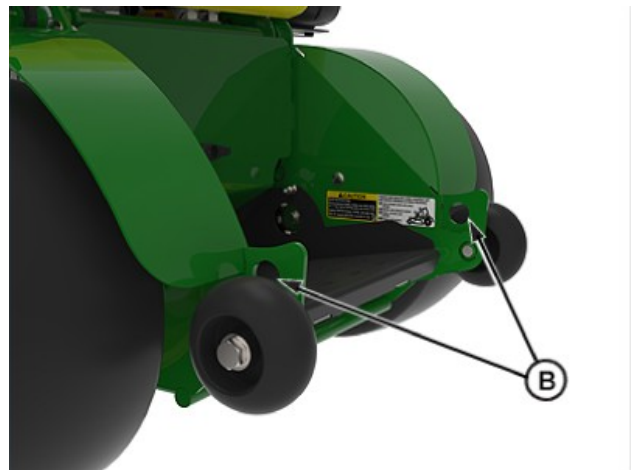

APY581014—UN—20MAY25

9. Fasten rear of machine at both sides of frame at points (B) to trailer with heavy-duty straps, chains, or cables. Straps directed down and outward from machine.

e48f9rz,1685359431525-19-21MAY25

Cut Quality and Mowing Tips

- Mow grass with throttle lever in the full fast/mow position.
- Mow grass when it is dry.
- Keep mower deck and discharge chute clean.

- Mow with sharp blades.
- Properly level mower deck for a smooth cut.
- Mow grass frequently.
- Use a travel speed that fits the conditions:
 - Mow tall or wet grass twice. Cut the first pass at one inch above the desired height - then cut at desired height.
 - Travel slow when mowing tall or thick grass.
 - Avoid damaging grass by slipping or skidding machine drive wheels. Practice smooth control lever movements.
 - When performing sharp turns, do not allow inside machine drive wheel to stop and twist on grass.

MK71445,0000363-19-30JUN20

Mowing Travel Speeds

Use slow travel speeds for:

- Slopes.
- Trimming.
- Close quarters.
- Tall grass.

Use faster travel speeds for:

- Normal mowing on level ground.

Travel Speeds

Forward speed range is approximately 0—12.4 km/h (0—8 mph)

Reverse speed range is approximately 0—5.6 km/h (0—3.5 mph)

e48f9rz,1692872163542-19-24AUG23

Dismount to Inspect Mower

 **CAUTION: Avoid injury! Help prevent serious injury. Keep hands and feet away from blades and the discharge opening.**

1. Park machine on a hard, level surface.
2. Press PTO switch to OFF position to disengage PTO.
3. Ensure motion control levers are in the neutral position.
4. Lock park brake.
5. Stop engine and remove key. Wait for mower blades to stop turning before leaving the operator platform.

e48f9rz,1690191350898-19-10AUG23

Service Intervals

Service Intervals

Before Each Use

- Check engine oil.
- Check hydraulic oil.
- Check for leaks.
- Inspect tires and check air pressure.
- Check safety interlock system.
- Check brake system.
- Check air filtration system.
- Check for loose, missing, or damaged parts.
- Check all safety guards and shields.
- Check belts.
- Check pedals and / or steering control.

After Each Use

- Check/fill fuel.
- Clean debris from machine.
- Clean debris from cooling system.
- Clean debris from underside of mower deck.
- Check mower blades.
- Lubricate machine after washing.

Break-In (After First 10 Hours)

- Check and tighten wheel hardware.
- Check hydraulic pump drive belt.

Every 50 Hours or Yearly

- Lubricate deck spindles.
- Clean battery terminals and check battery fluid level (if applicable).
- Lubricate traction and brake linkage components.
- Lubricate caster wheels.
- Check all control cables.

Every 100 Hours or Yearly

- Change engine oil and filter.
- Check, clean, and gap spark plugs. Replace if needed.
- Inspect mower deck drive belt.
- Inspect traction drive belt.
- Remove clean-out panels from cooling shroud and clean cooling fins and clean oil cooler (if equipped).

Every 200 Hours or Yearly

- Check all hoses and clamps.
- Check all lines and fittings.

Every 300 Hours

- Check primary air filter, replace if needed.
- Check and adjust valve clearance.

- Change transmission oil and filter.
- Change fuel filter.

Every 500 Hours

- Check engine high and low idle.
- Change secondary air filter, replace if needed.
- Remove combustion chamber deposits.
- Remove clean-out panels from cooling shroud and clean cooling fins and clean oil cooler (if equipped).

Every 1000 Hours


- Change spark plugs.

e48f9rz, 1692873614328-19-30AUG23

Service your Machine

IMPORTANT: Avoid damage! Operating in extreme conditions, require more frequent service intervals:

- Engine components become dirty or plugged when operating in extreme heat, dust, or other severe conditions.
- Engine oil degrade if machine is operated constantly at slow or low engine speeds or for frequent short periods of time.

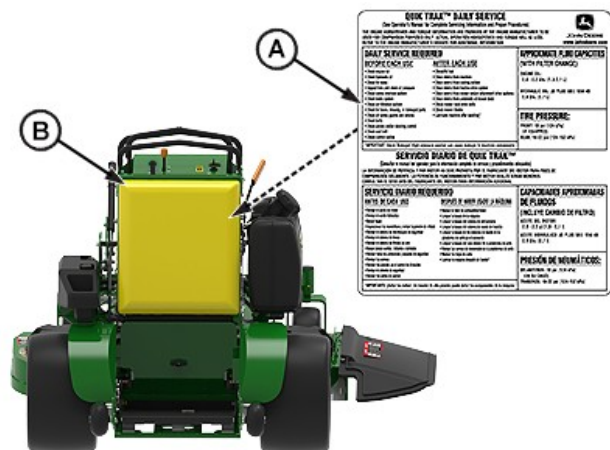

APY581015—UN—20MAY25

The service interval label (A) located on the underside of the leaning pad (B) when lifted.

Use the following timetables to perform routine maintenance on your machine.

e48f9rz, 1685359714115-19-31AUG23

Service Lubrication

Grease

IMPORTANT: Avoid damage! Use recommended John Deere greases to avoid component failure and premature wear.

The following grease is recommended for service:

- John Deere Multi-Purpose HD Lithium Complex Grease
- Grease-Gard Premium Plus


Not all grease types are compatible; John Deere does not recommend mixing greases. If using any product other than the recommended grease in service, purge any remaining grease from the system before application. If not practical, grease twice as often until all old grease is purged from the system.

OUMX068,0000642-19-12APR24

Lubrication

- Lock the park brake, stop engine, and remove the key.
- Clean grease fittings using a rag.
- Connect grease gun to fitting and pump until grease begins to ooze from the bearings.
- Wipe off excess grease.
- Do not use spray lube of any kind on choke and/or throttle cables.

Lubricate Front Caster Spindles and Wheels

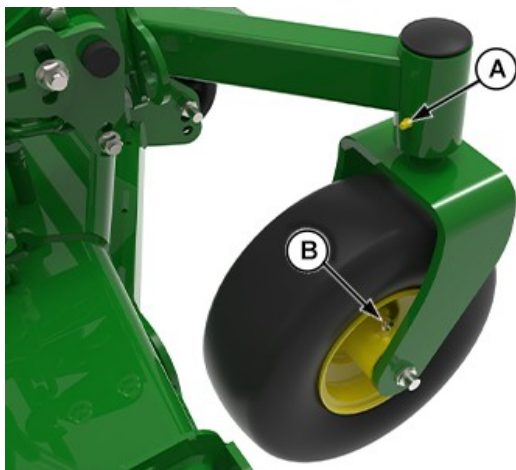


APY591198—UN—12SEP23

- Lubricate spindle grease fitting (A) on each front caster spindle and grease fitting (B) on wheel axle on both side.

Lubricate Mower Deck Spindles

NOTE: Removal of belt shields is not necessary to lubricate the spindles.

1. Remove rubber mat and mower deck foot plate.
2. Lubricate the mower deck spindles, as indicated.

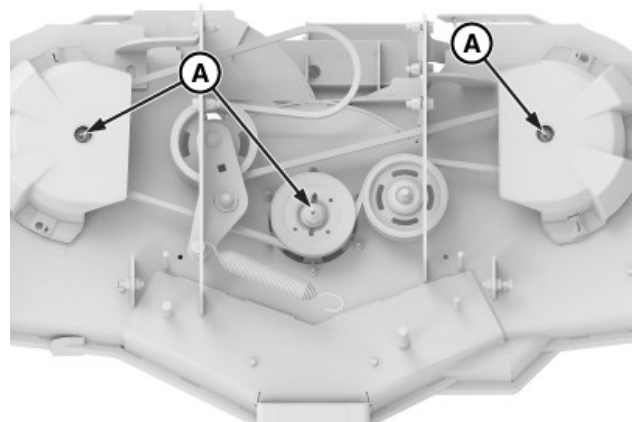

APY593324—UN—31AUG23

3. Lubricate three mower deck spindle grease fittings (A) with two pumps of grease at specified interval.

e48f9rz,1685359771802-19-31AUG23

Service Engine

Emissions Service Information

Within the warranty period, John Deere will reimburse reasonable service costs incurred at service providers outside the John Deere authorized network only in an unsafe, emergency condition if an authorized John Deere dealer is not available and the failure does not arise from the owner's misuse or failure to perform required maintenance. An emergency situation exists under this section if, after 30 days, the authorized John Deere network is unable to perform the repairs or source replacement parts.

Emission Control System Certification Label

NOTE: *Tampering with emission controls and components by unauthorized personnel may result in severe fines or penalties. Emission controls and components can only be adjusted by EPA and/or CARB authorized service centers. Contact your John Deere Retailer concerning emission controls and component questions.*

The presence of an emissions label signifies that the engine has been certified with the United States Environmental Protection Agency (EPA) and/or California Air Resources Board (CARB).

The emissions warranty applies only to those engines marketed by John Deere that have been certified by the EPA and/or CARB; and used in the United States and Canada in off-road mobile equipment.

Altitude Adjustment (Gasoline or Propane Converted Engines Only)

If your engine features a carburetor it is calibrated by the engine manufacturer and is not adjustable.

If your engine is operated at altitudes below 610 m (2,000 ft.), a high altitude carburetor jet kit is not required. If your engine is operated at altitudes above 610 m (2,000 ft.), a high altitude carburetor jet kit may be required for proper engine performance and emissions control. Operating the engine with the wrong carburetor configuration at a given altitude may increase the engine's emissions and decrease fuel efficiency and performance.

See a qualified service provider for details on jet kit requirements for your specific product.

TC00531,00000EC-19-20FEB25

Avoid Fumes


CAUTION: Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.

- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.

- Connect a pipe extension to the engine exhaust pipe to direct the exhaust fumes out of the area.
- Allow fresh outside air into the work area to clear the exhaust fumes out.

OUC1082,0000AF2-19-19SEP13

Gasoline Engine Oil

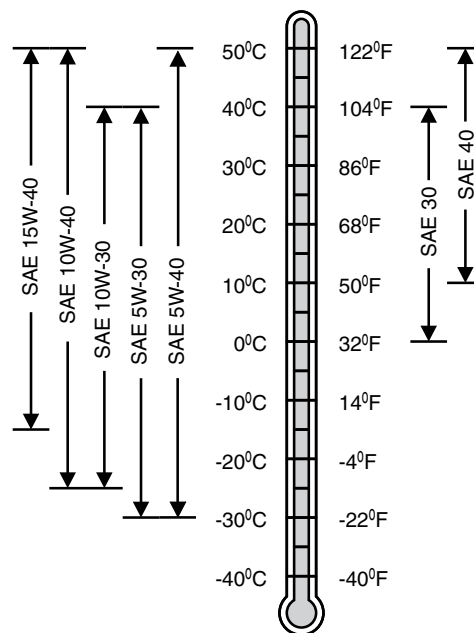

TS1744—UN—25AUG20

Oil Viscosities for Air Temperature Ranges

Use oil viscosity based on the expected air temperature range during the period between oil changes.

Using single viscosity grade oils such as SAE 30 or SAE 40 can reduce oil consumption in air cooled engines.

The following oils are approved:

- John Deere Plus-50™ II
- John Deere Turf-Gard™

Other oils may be used if they meet one or more of the following:

- ILSAC GF-6A
- API Service Category SP
- API Service Category SN
- API Service Category SM
- API Service Category SL
- API Service Category SJ
- ACEA Oil Sequence A3/B3
- ACEA Oil Sequence A3/B4

*Plus-50 is a trademark of Deere & Company
Turf-Gard is a trademark of Deere & Company*

- ACEA Oil Sequence A5/B5
- ACEA Oil Sequence C5
- ACEA Oil Sequence C4
- ACEA Oil Sequence C3
- ACEA Oil Sequence C2
- ACEA Oil Sequence C1

DX,ENOIL2-19-15JUL20

Check Engine Oil Level


IMPORTANT: Failure to check the oil level regularly lead to serious engine problems if oil level is low:

- Check oil level before operating.
- Keep oil level between the FULL and the ADD marks.
- Check oil level when engine is stopped, level, and is cooled so oil has had time to drain into the sump.

NOTE: Check oil twice a day if you run engine more than four hours in a day.

Make sure that engine is cold when checking engine oil level.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Allow engine to cool.

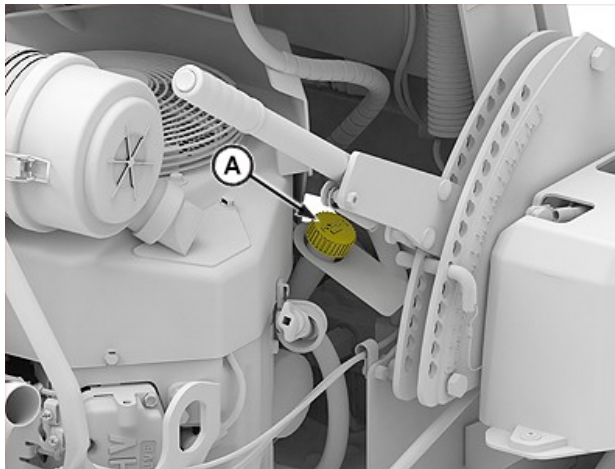

APY581389—UN—28JUN23

3. Clean area around dipstick cap (A).
 4. Remove dipstick cap (A). Wipe dipstick clean.
- NOTE: Do not tighten dipstick cap when checking oil level.*
5. Insert dipstick in tube. Do not tighten cap.
 6. Remove dipstick. Check oil level on dipstick. Oil level

should be in crosshatch area between ADD and FULL marks.

- If oil is low, add oil to bring oil level no higher than FULL mark on dipstick.
- If oil level is above FULL mark, drain to proper level.

7. Insert dipstick. Tighten cap.

e48f9rz,1685360131356-19-16AUG23


Change Engine Oil and Filter

CAUTION: Touching hot surfaces burn skin. The engine, components, and fluids will be hot if the engine has been running. Allow the engine to cool before servicing or working near the engine and components.

IMPORTANT: Change the oil more often if the machine is used in extreme conditions:

- Extremely dusty conditions.
- Frequent slow or low-speed operation.
- Frequent short trips.

1. Start engine and run until it reaches normal operating temperature.
2. Park machine safely. (See Parking Safely in the Safety section.)
3. Place oil drain pan under drain valve.

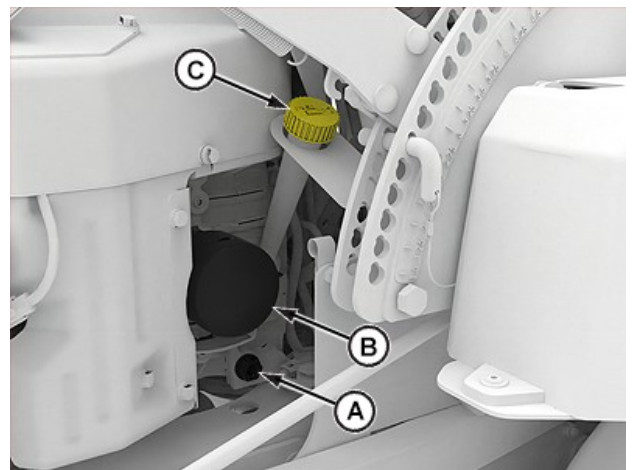

APY581388—UN—10AUG23

4. Remove drain valve outlet (A).
5. Allow oil to drain into oil drain pan.
6. After oil drains, install drain valve (A).
7. Turn oil filter (B) counterclockwise to remove.
8. Apply a film of clean engine oil to gasket of new filter.
9. Install filter.

10. Turn filter clockwise until gasket makes contact with mounting surface. Tighten half—three-quarters turn after gasket contact.
11. Clean area around dipstick cap (C).
12. Remove dipstick cap.
13. Add oil to specification.

Specification

Oil—Capacity. 2.1 L
(2.2 qt)

14. Insert dipstick. Tighten cap.
15. Start engine and run at slow throttle for approximately two minutes. Check for leaks around filter and drain valve.

16. Stop engine.

17. Check oil level:

- Remove dipstick cap. Wipe dipstick clean.

NOTE: Do not tighten dipstick cap when checking oil level.

- Insert dipstick. Do not tighten cap.
- Remove dipstick. Oil level should be between the ADD and FULL marks. Add oil if needed.

18. Insert dipstick. Tighten cap.

e48f9rz,1685360131493-19-16AUG23


Clean Engine Air Intake Screen and Fan

CAUTION: Compressed air cause debris to fly a long distance.

- Clear work area of bystanders.
- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to 210 kPa (30 psi).


IMPORTANT: An obstructed air intake screen cause engine damage due to overheating. Keep air intake screen and other external surfaces of the engine, including cooling fins, clean at all times to allow adequate air intake.

1. Park machine safely. (See Parking Safely in the Safety section.)

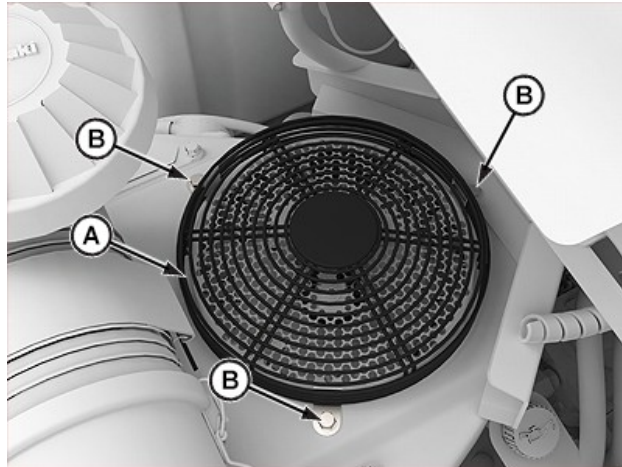


APY581390—UN—28JUN23

2. Clean outer air intake screen (A) with a rag, brush, or compressed air.
3. Remove three cap screws (B) and remove the outer air intake screen (A).

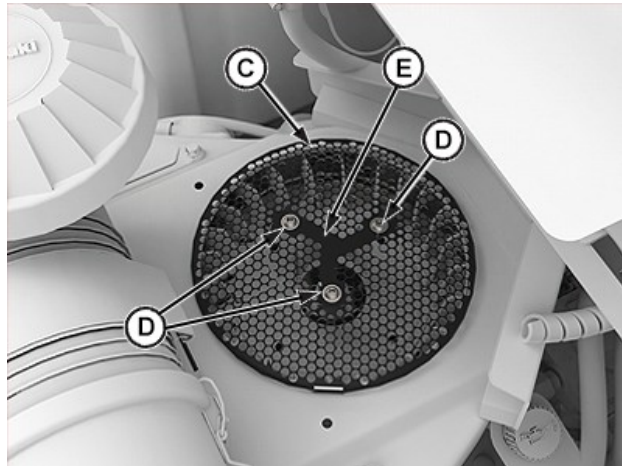

APY581391—UN—28JUN23

4. Clean inner screen (C) with a rag, brush, or compressed air.
5. Remove three screws (D), inner screen (C), and spacer (E).

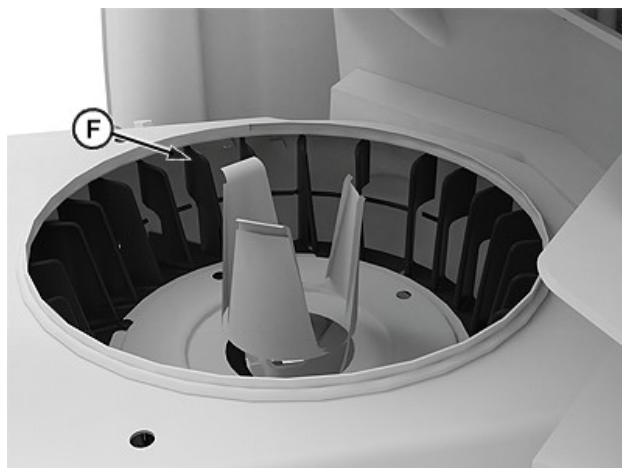

APY581392—UN—28JUN23

6. Clean fan (F) using a rag, brush, or compressed air.
7. Install inner screen and spacer, and secure with three screws.
 - Tighten screws to specification.

Specification

Screw—Torque. 9.9 N·m
(88 lb·in)


8. Install outer air intake screen and secure it to the engine with cap screws.

e48f9rz,1688460325187-19-16AUG23

Clean Engine Cooling Fins

IMPORTANT: An obstructed air intake screen cause engine damage due to overheating. Keep air intake screen and other external surfaces of the engine, including cooling fins, clean at all times to allow adequate air intake.

1. Park machine safely. (See Parking Safely in the Safety section.)

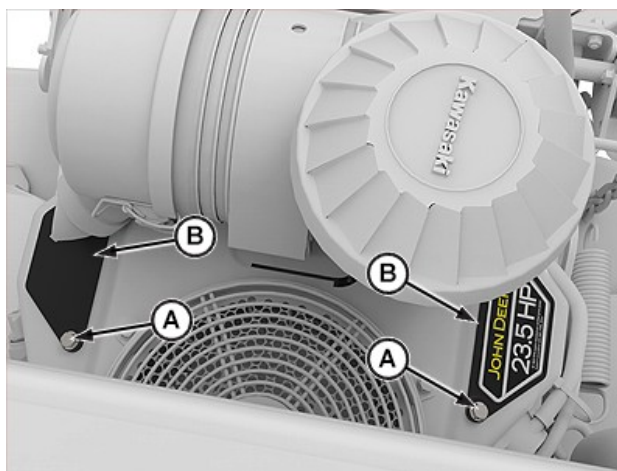

APY581393—UN—28JUN23

2. Remove two screws (A) and two covers (B).

CAUTION: Compressed air cause debris to fly a long distance.

- Clear work area of bystanders.
- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to 210 kPa (30 psi).

3. With compressed air, clean debris buildup.
4. Install two covers on shroud.


e48f9rz,1685360131718-19-10AUG23

Service HD Air Cleaner Elements

IMPORTANT: Dirt and debris enter the engine when removing the air cleaner elements. Service elements only at prescribed intervals.

Service Primary Air Cleaner Element

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Allow engine to cool.

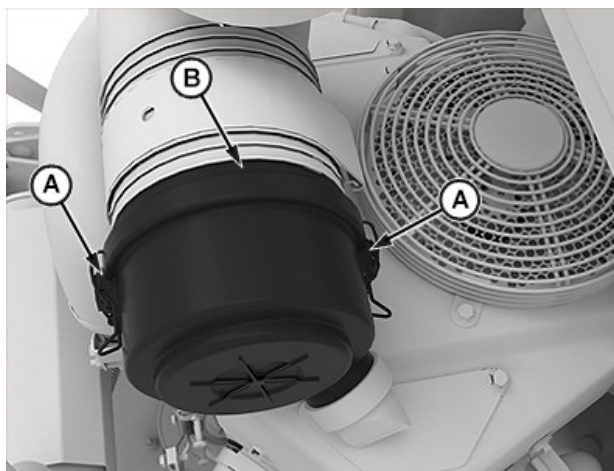

APY581394—UN—28JUN23

3. Release latches (A) and remove air cleaner canister cover (B).

NOTE: Inspect secondary air cleaner element. Replace if necessary.



APY581395—UN—10AUG23

4. Remove and discard primary element (C). Replace with new primary element.
5. Install air cleaner canister cover with rubber dust unloading valve pointing downward.

Service Secondary Air Cleaner Element (for Q820E)

1. Remove primary air cleaner element.



APY581396—UN—10AUG23

2. Remove and discard secondary air cleaner element (D). Install new secondary element.
3. Install primary air cleaner element.
4. Install air cleaner canister cover with rubber dust unloading valve pointing downward.


e48f9rz,1685360131922-19-30AUG23

Check Spark Plugs

CAUTION: Touching hot surfaces burn skin. The engine, components, and fluids will be hot if the engine has been running. Allow the engine to cool before servicing or working near the engine and components.

IMPORTANT: Do not clean spark plugs with abrasives.


1. Park machine safely. (See Parking Safely in the Safety section.)
2. Clean area around both spark plugs.

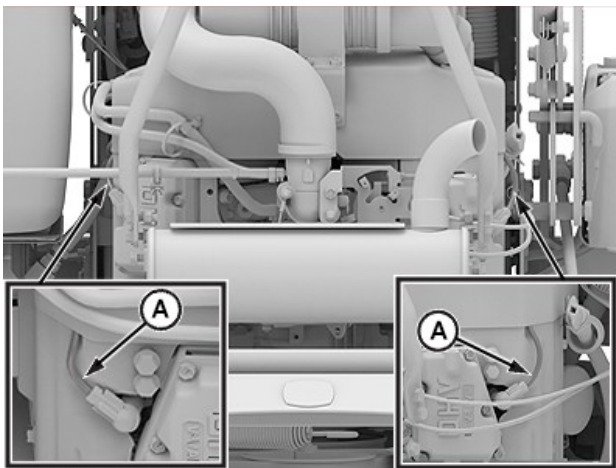

APY581397—UN—28JUN23

3. Disconnect the spark plug wire (A) from each plug.
4. Remove and inspect spark plugs:

- Clean each plug and check for damage. Replace if necessary.
- If plugs are in good condition, check gap.

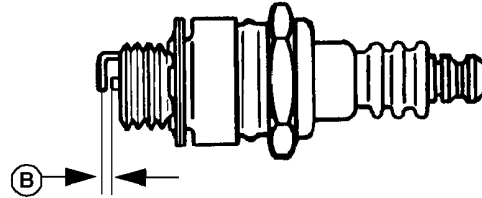

TCAL43655—UN—26MAR13

5. Check and adjust spark plug gap (B) to specification.

Specification

Spark Plug—Gap. 0.75 mm
(0.030 in)

6. Install spark plugs and tighten to specification.

Specification

Spark Plug—Torque. 22 N·m
(16 lb·ft)

7. Install both spark plug wires.

e48f9rz,1685360132003-19-10AUG23


Replace Fuel Filter

CAUTION: Fuel vapors are explosive and flammable:

- Do not smoke while handling fuel.
- Keep fuel away from flames or sparks.
- Shut off engine before servicing.
- Cool engine before servicing.
- Work in a well-ventilated area.
- Clean up spilled fuel immediately.


IMPORTANT: When installing a new fuel filter, the filter arrow pointed in the direction of the fuel flow.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Allow engine to cool.

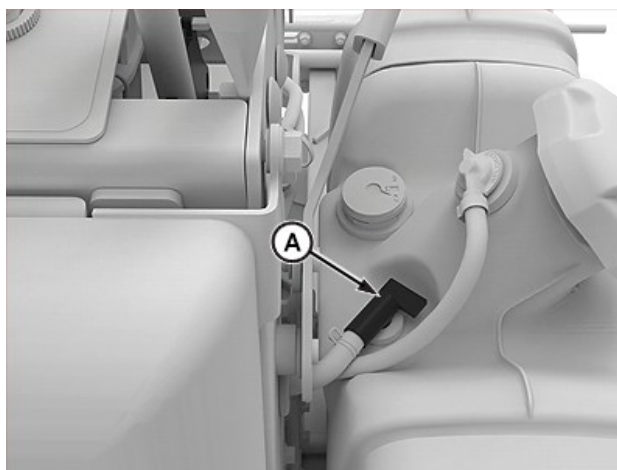

APY581398—UN—28JUN23

3. Turn fuel shutoff valve (A) to the off position.
4. Lift the leaning pad.

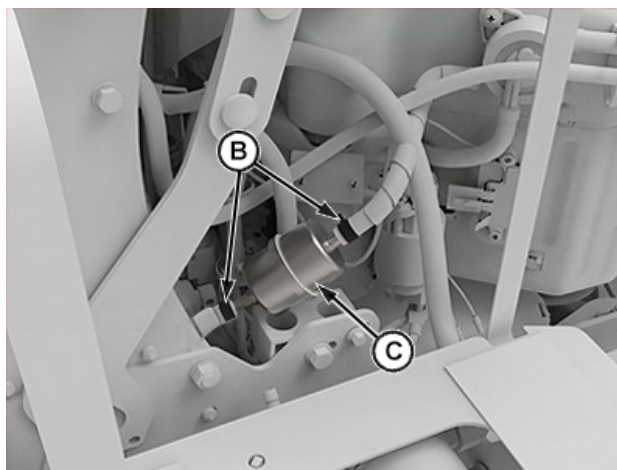

APY581399—UN—28JUN23

5. Slide hose clamps (B) away from fuel filter (C).
6. Place drain pan under hoses to catch any fuel that may be left in the hoses.
7. Disconnect hoses from fuel filter (C).
8. Install new fuel filter.
 - Make sure fuel filter is installed with arrow pointing in direction of fuel flow.
9. Connect hoses to new fuel filter.
10. Install hose clamps (B).

e48f9rz,1685360132080-19-24AUG23

cleaning the screen by brushing away loose dirt or carbon using a brush.

 
RM87422,00002DA-19-05JUL17

Spark Arrestor Maintenance (If Equipped)

Spark arrestor assemblies include a screen element that should be inspected and cleaned periodically. Visually inspect the screen for tears, broken wires, or loose welds. Replace the spark arrestor assembly if any of these conditions exist. If the screen is determined to be in good condition, proceed with

Service Transmission

Hydraulic Oil



TCAL43657—UN—08SEP23

Use the following oil viscosity based on the air temperature range. Operating outside of the recommended oil air temperature range may cause premature hydrostatic transmission failure.

IMPORTANT: Only use a quality oil in this transmission. Do not mix any other oils in this transmission. Do not use BIO - HY - GARD® in this transmission. Do not use Type F (Red) Automatic Transmission Fluid in this transmission.

The following oil is recommended:

- JD Plus 50® II 15W-40 Synthetic Blend

Oil must meet the following:

- API Service Classification SG or higher


OJ01082,0000A9B-19-19SEP13

Check Hydraulic Oil Level

IMPORTANT: Check oil level in reservoir tank when oil is cold.


Do not overfill oil reservoir tank. Oil will expand during operation and overflow.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Lift leaning pad.

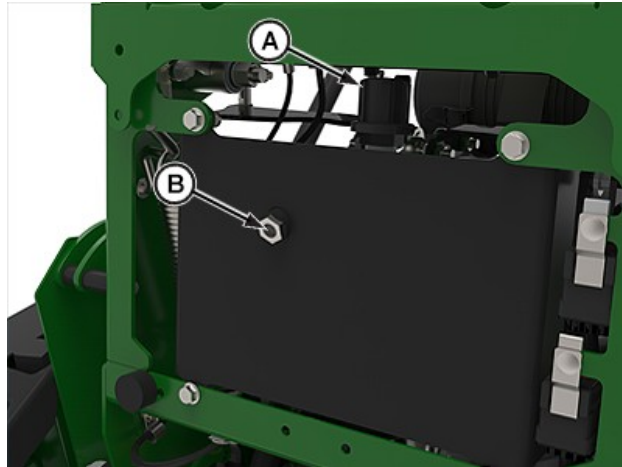

APY588913—UN—09AUG23

3. Clean area around the breather cap (A) and remove.

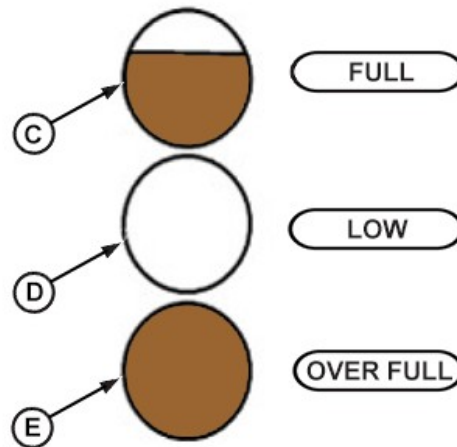

APY588926—UN—09AUG23

4. Locate the reservoir sight glass (B) and verify the hydraulic oil level is at the FULL mark (C):
 - If oil is low (D), add oil to bring oil level no higher than the FULL mark.
 - If oil is above FULL mark (E), drain oil to proper level.

5. Lower leaning pad.

e48f9rz, 1691117256220-19-24AUG23

Change Hydraulic Oil and Filter

CAUTION: Escaping fluid under pressure penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.


Use caution when filling and draining hydraulic oil. During periods of machine operation the hydraulic oil reservoir get hot. Allow engine and oil reservoir to cool before servicing.

IMPORTANT: Contamination of hydraulic fluid could cause transmission damage or failure. Do not open oil reservoir cap unless absolutely necessary.

Severe or unusual conditions may require a more frequent service interval.


1. Park machine safely. (Refer to Parking Safely in the Safety section.)
2. Allow engine and hydraulic oil reservoir to cool.
3. Lift the leaning pad.

NOTE: Place drain pan directly under filter head.

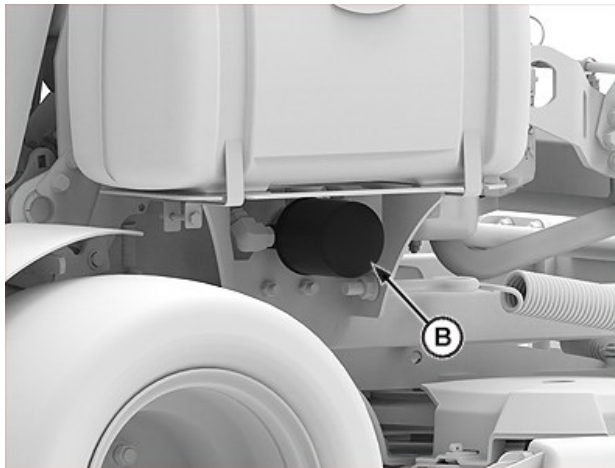

APY588917—UN—09AUG23


5. Turn oil filter (B) counterclockwise to remove. Allow hydraulic oil to drain into a drain pan with a capacity of at approximately 2.8 L (3 qt).
6. Apply a film of clean hydraulic oil onto the new filter gasket.
7. Install new filter. Turn the filter clockwise until the gasket makes contact with the mounting surface. Tighten 1/2 to 3/4 turn after gasket contact.

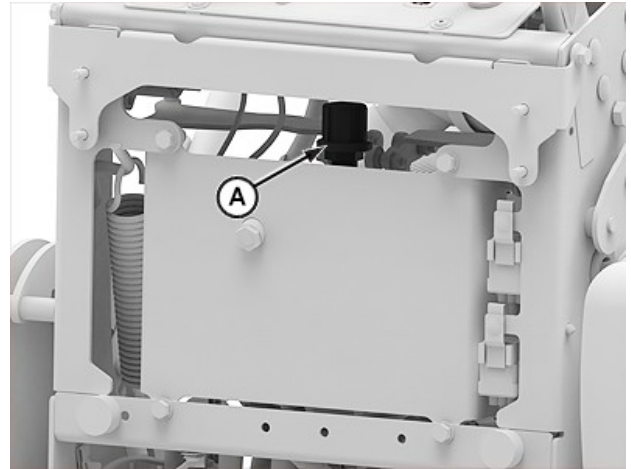

APY588914—UN—09AUG23

8. Clean area around the breather cap (A).

IMPORTANT: Do not add oil beyond FULL mark. Oil capacity after draining may be less than dry fill capacity. Check oil level before filling completely.

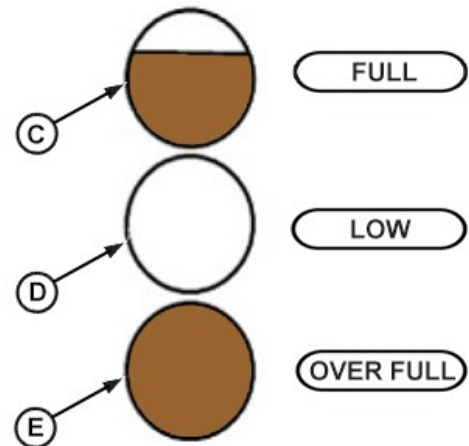


APY588926—UN—09AUG23

9. Remove breather cap and fill oil reservoir to the correct level (C), approximately 2.7 L (2.9 qt) of oil.
10. Before starting engine, bleed the hydraulic system. See Bleeding Air From Hydraulic System.
11. When the hydraulic system is free of all air, start engine.
12. Move throttle lever to the fast position.
13. Unlock park brake.

CAUTION: Remain alert to other people and the surroundings when operating the machine.

14. Cycle motion control levers forward and rearward several times. Check for leaks around filter.

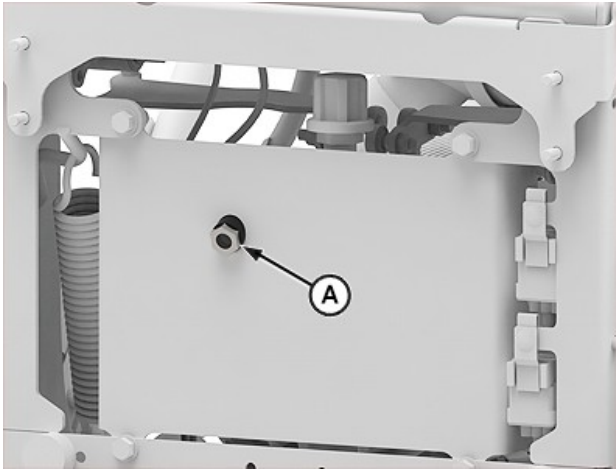

APY588915—UN—09AUG23

15. Stop engine. Check oil level, and add oil as necessary to bring oil level to FULL mark on the reservoir sight glass (A).

16. Lower leaning pad.

e48f9rz, 1691117256110-19-20SEP23

Bleed Air From Hydraulic System

Due to the effects air has on hydrostatic drives, it is critical that all air is removed or purged from the system, whenever the system has been opened for maintenance or repairs.

NOTE: When any of the hydraulic parts are disconnected or removed or when the oil is changed, air bled from the system.

Symptoms that Air is Trapped in the System

- Noisy operation.
- Lack of power or drive after short-term operation.
- High temperature and excessive expansion of oil.

⚠ CAUTION: Escaping fluid under pressure penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

Certain procedures require the vehicle engine to be operated and the vehicle to be raised off the ground.


Prevent possible injury to the servicing technician and/or bystanders, insure the vehicle is properly secured.

Use caution when filling and draining hydraulic oil. During periods of machine operation the hydraulic oil reservoir get hot. Allow engine and oil reservoir to cool before servicing.

IMPORTANT: Contamination of hydraulic fluid could cause transmission damage or failure. Do not open oil reservoir cap unless absolutely necessary.

If air enters into the system, loss of power, excessive heat, and damage to the hydraulic pumps may occur.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Ensure that hydraulic reservoir fluid is at the proper level before proceeding.

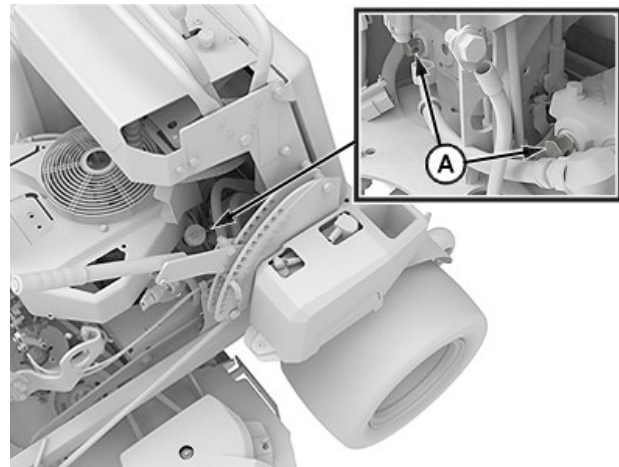

APY588921—UN—09AUG23

3. Open the bypass valve (A) on each hydraulic oil pump approximately 1/2 turn and start the engine.

NOTE: As air is purged from the system, the fluid level in the hydraulic reservoir will drop.

4. Slowly unlock the park brake, and carefully operate the control levers back and forth five-six times.
5. Shut the engine off and close the bypass valves (A).
6. Start the engine again, and slowly operate the control levers back and forth five-six times.
7. It is necessary to repeat this until all the air has been purged from the system.
8. After purging is complete, check the fluid level in the reservoir and add fluid if necessary.
9. When the machine moves at normal speed in forward and reverse and the fluid remains at a constant level, purging is complete.
10. Turn pump bypass valves (A) on both pumps 1/2 turn clockwise (closed position). Tighten valves to specification.

Specification

Valve—Torque. 11 N·m
(100 lb·in)

e48f9rz, 1691117256016-19-16AUG23


Check and Replace Traction Drive Belt

CAUTION: Rotating parts catch fingers, loose clothing, or long hair. Wait for engine and all moving parts to stop before leaving operator station to adjust or service machine.

NOTE: The traction drive belt does not require a tension adjustment. Belt is self-adjusted using a spring tensioner.

Check and Replace Traction Drive Belt

1. Park machine safely. (See Parking Safely in the Safety section.)

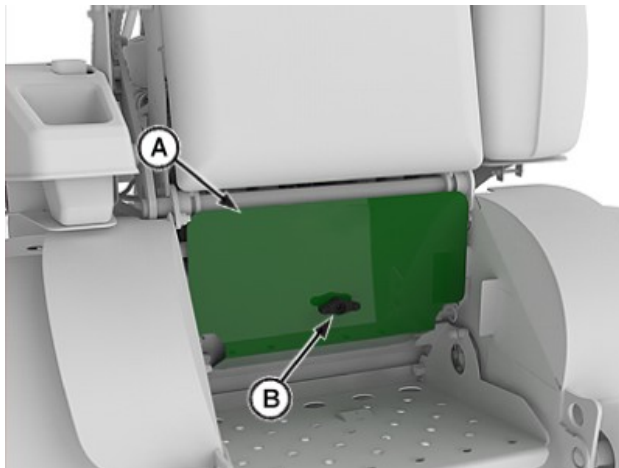


APY581402—UN—20MAY25

2. Remove knob (B) and remove belt access panel (A).
3. Inspect belt for excessive wear, damage, or stretching.

Remove Traction Drive Belt

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Remove mower deck drive belt. See Replacing Mower Deck Drive Belt in the Service Mower section.

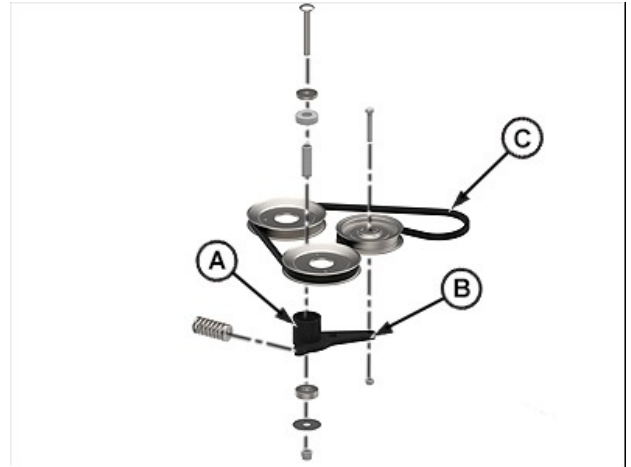


APY588925—UN—09AUG23

3. Insert a 1/2 in drive ratchet or breaker bar in square hole (A) in idler pulley arm (B).
4. Rotate idler pulley arm (B) to remove tension from drive belt (C).
5. While holding idler pulley arm, remove traction drive belt (C).

Install Traction Drive Belt

NOTE: Installing a new traction drive belt requires removal of the Deck Belt and Anti-Rotation Bracket.

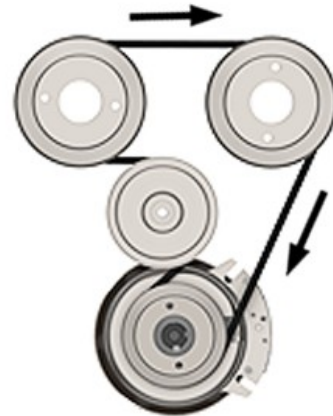

APY588920—UN—12SEP23

1. Use a 1/2 in drive ratchet or breaker bar to rotate idler pulley arm as shown above and hold in place.

IMPORTANT: Installing a new traction drive belt requires removal of the Deck Belt and Anti-Rotation Bracket.

2. Install traction drive belt on drive sheaves.
3. Slowly allow idler arm to rotate into belt.
4. Install belt shield.

5. Install mower deck drive belt (see Replace Mower Deck Drive Belt).

e48f9rz, 1691117255667-19-24AUG23

Check and Adjust Motion Control Linkages

CAUTION: Engine exhaust fumes contain carbon monoxide cause serious illness or death.

- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.
- Connect a pipe extension to the engine exhaust pipe to direct the exhaust fumes out of the area.
- Allow fresh outside air into the work area to clear the exhaust fumes out.

NOTE: Check and adjust motion control linkages with the machine parked on a firm, level surface.

CAUTION: The machine fall or slip from an unsafe lifting device or supports.

- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto jack stands or other stable supports and block wheels before servicing.

Check Neutral Position

Neutral refers to mower movement when the engine is at full throttle, park brake is off, and the control levers are in the neutral position. The mower should not move forward or backward during this time. If the mower is moving forward or backward, the neutral setting must be adjusted.



APY588918—UN—20MAY25

1. Raise rear of machine with safe lifting device:

- Use wheel chocks to block the front wheels.
- Support with wood blocks or jack stands.
- Rear drive wheels must be able to rotate freely.

2. Start engine.

3. Move throttle lever to the fast position.

4. Unlock park brake.

5. If the rear drive wheels begin to creep, an adjustment is required.

Adjust Neutral Position

CAUTION: The machine fall or slip from an unsafe lifting device or supports.

- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto jack stands or other stable supports and block wheels before servicing.



APY588918—UN—20MAY25

1. Raise rear of machine with safe lifting device:

- Use wheel chocks to block the front wheels.
- Support with jack stands.
- Rear drive wheels must be able to rotate freely.


2. Start engine.

3. Move throttle lever to the fast position.

4. Unlock park brake.

NOTE: If the right wheel turns in the neutral position, then the right pump requires adjustment.

Do not overtighten the return-to-neutral device screw.

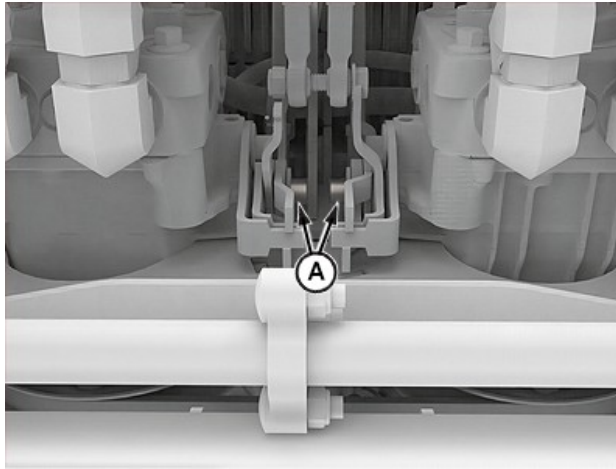

APY588922—UN—09AUG23

5. Loosen the 1/4 in screws (A) each side and rotate the return-to-neutral device on the pump corresponding to the wheel requiring adjustment. Rotate the return-to-neutral device until the neutral position is located. Tighten the screws.
6. Repeat step 5, as needed, for the other pump.


Change the Speed Sensitivity Adjustment

The control system torsion bar has two sets of holes where the control linkage installed. The holes farthest from the operator position are for slower, less sensitive setting, and the holes closest to the operator position are for the faster, more sensitive setting.

The controls are initially set with the speed/sensitivity adjustment in the faster, more sensitive position. If an operator is not completely familiar with the mower operation, the operator may desire to decrease the ground speed.

The slower setting has a corresponding decrease in the sensitivity of the controls. In other words, a given amount of movement of the control levers will cause about a 25-30% change in the ground speed, making the controls less sensitive.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Stop engine.
3. Lock park brake.

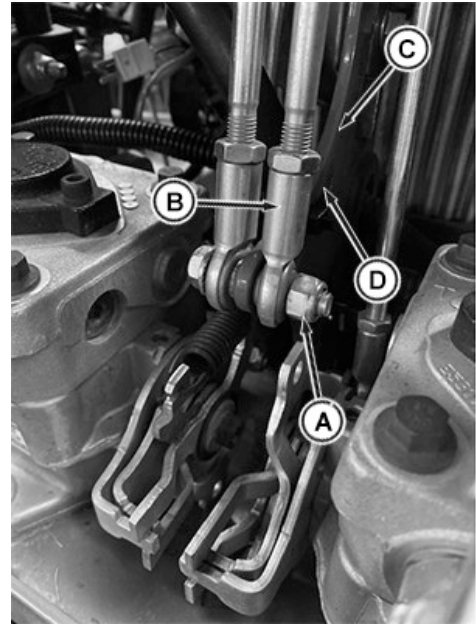

APY593325—UN—31AUG23

4. Remove lock nut (A) and disconnect the control linkage rod end (B) from the control system torsion bar (C).
5. Install the rod end (B) into the alternate hole (D).
6. Repeat steps 4 and 5 for the other control linkage rod.
7. Perform Checking and Adjusting Transmission Tracking.

e48f9rz, 1691117255877-19-31AUG23

Check and Adjust Transmission Track

⚠ CAUTION: Avoid injury! Engine exhaust fumes contain carbon monoxide cause serious illness or death.


- Move the machine to an outside area before running the engine.
- Do not run an engine in an enclosed area without adequate ventilation.
- Connect a pipe extension to the engine exhaust pipe to direct the exhaust fumes out of the area.
- Allow fresh outside air into the work area to clear the exhaust fumes out.

NOTE: Check and adjust transmission tracking with the machine parked on a firm, level surface.

Check Transmission Track

1. Inflate tires to correct pressure.
2. Start engine and run until it reaches normal operating temperature.

3. Move machine to an open, level area for operation.
4. Move throttle lever to the fast position.

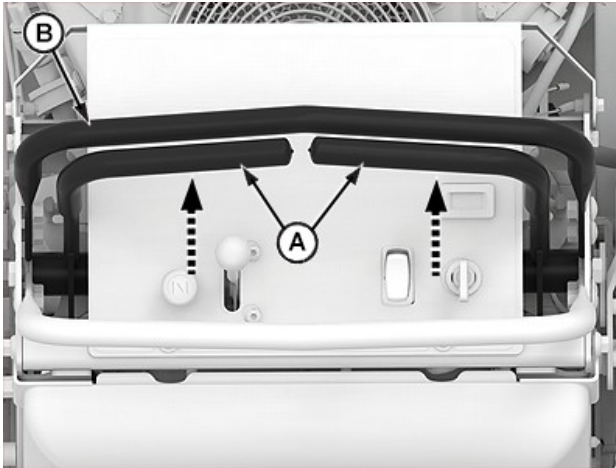

APY588919—UN—09AUG23

5. Drive machine forward, pushing both control levers (A) all the way to the stationary handle (B).
6. If machine does not drive in a straight line, an adjustment is required.

Adjust Transmission Track

Tracking is adjusted by shortening or lengthening the control rods.

- Shortening the control rod will increase the forward speed capability for that side of the mower.
- Lengthening the control rod will slow down that side of the mower.


If the mower is tracking to the left, either the left side needs to go faster (by shortening the left control rod) or the right side needs to go slower (by lengthening the right control rod).

If the mower is tracking to the right, either the right side needs to go faster (by shortening the right control rod) or the left side needs to go slower (by lengthening the left control rod).


The tracking adjustment will vary depending on which speed/sensitivity position the control rods are installed in. Use the procedure that matches your application.

Track Adjustment (speed sensitivity in slow position)

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Raise leaning pad.

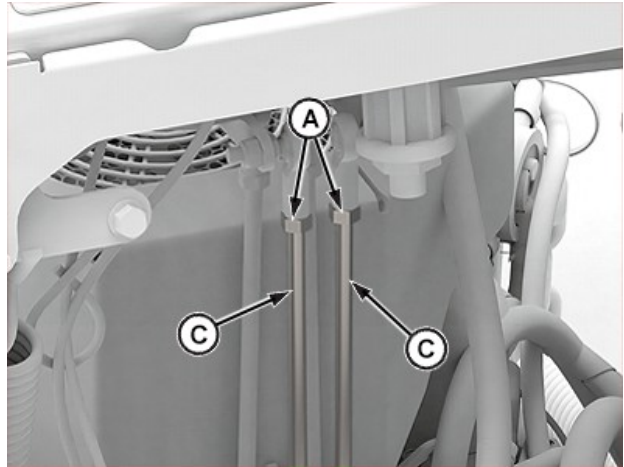

APY588924—UN—09AUG23

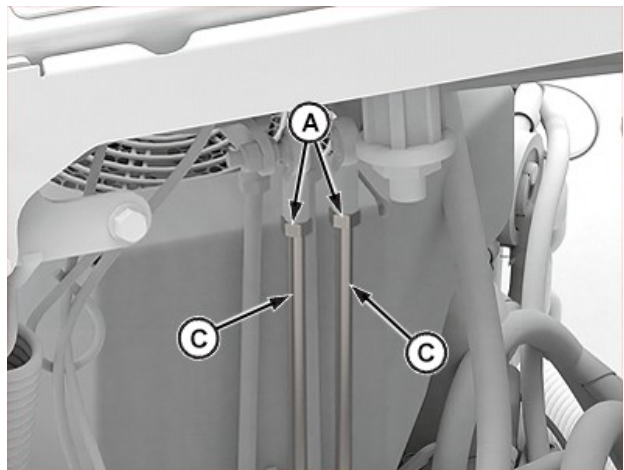

APY588924—UN—09AUG23

3. Loosen the upper (A) and lower (B) control rod lock nuts.

NOTE: The control rods should not be adjusted so that direct pressure is applied to the internal pump stop. This results in damage to the hydraulic pumps.

4. Rotate the control rod (C) clockwise (shorten) or counterclockwise (lengthen) as needed.
 - Shortening the control rod (C) will increase the forward speed of the mower on that side.
 - Lengthening the control rod (C) will decrease the forward speed of the mower on that side.


The only reference point to limit the adjustment from becoming far off is the relative position of the pump stop and the motion control levers in the speed sensitivity adjustment. If the adjustment is off either due to new parts having been installed or for other reasons:

- Position the control rods in the fast speed sensitivity setting. (See Changing the Speed Sensitivity Adjustment.)
- Adjust the tracking using the Tracking Adjustment (Speed Sensitivity in Fast Position) procedure.


- Reposition the control rods to the slow position (See Changing the Speed Sensitivity Adjustment.)
 - Adjust the tracking one or two turns on either side as needed.
5. Tighten lock nuts.
 6. Check tracking. (See Checking Transmission Tracking.) Repeat adjustment procedure as needed.
 7. Check neutral position adjustment. (See Checking Neutral Position.) Adjust as needed.

Track Adjustment (speed sensitivity in fast position)

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Raise leaning pad.

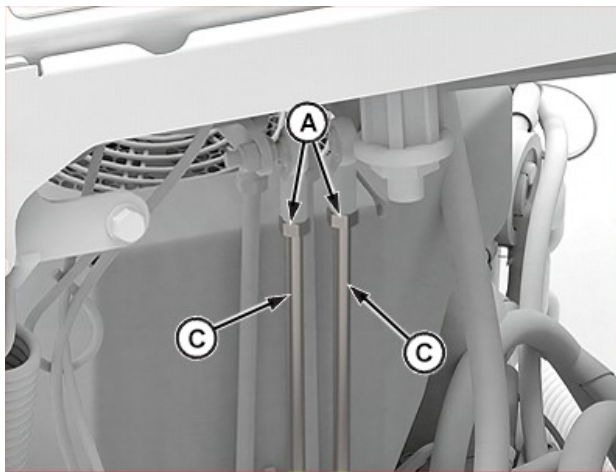

APY588924—UN—09AUG23

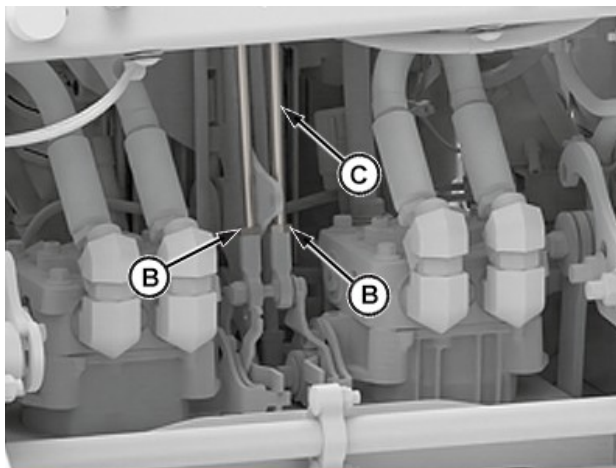

APY588923—UN—09AUG23

3. Loosen the upper (A) and lower (B) control rod lock nuts.

NOTE: The control rods should not be adjusted so that at full speed they pull the pump control lever against the internal pump stops. This results in damage to the hydraulic pumps.

4. Rotate the rod (C) clockwise (shorten) or counterclockwise (lengthen) as needed.
 - Shortening the control rod will increase the forward speed of the mower on that side.
 - Lengthening the control rod will decrease the forward speed of the mower on that side.

In the faster speed/sensitivity setting (factory setting), neither rod should be lengthened so much that at full speed it pulls the pump control lever (on the sides of the pumps) against the internal pump stop. To reach the maximum capable speed, the rods should be lengthened one turn at a time, in the hand control, that the internal pump stop has been contacted (a slight resistance is felt). Then shorten the rod one turn.

5. Tighten lock nuts.
6. Check tracking. (See Checking Transmission Tracking.) Repeat adjustment procedure as needed.
7. Check neutral position adjustment. (See Checking Neutral Position.) Adjust as needed.

e48f9rz, 1691117255739-19-24AUG23

Adjust Traction Drive Belt Tension

The drive belt is equipped with an automatic belt tensioner. (See Checking and Replacing Traction Drive Belt.)


e48f9rz, 1693387064612-19-30AUG23

Service Steering and Brakes

Adjust Park Brake

Test Park Brake

1. Inflate tires to correct pressures.

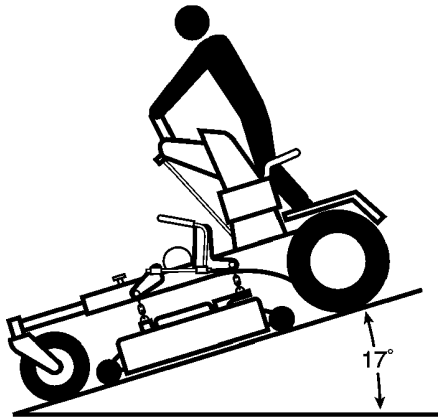

TCAL43677—UN—26MAR13

2. Stop machine on a maximum 17° slope.


3. Lock park brake.

- A properly adjusted park brake must prevent the drive wheels from turning.
- If the drive wheels turn, a brake adjustment will be necessary.

Adjust Park Brake

1. Park machine safely. (See Park Safely in the Safety section.)
2. Unlock park brake.

NOTE: Repeat procedure for both sides of machine.

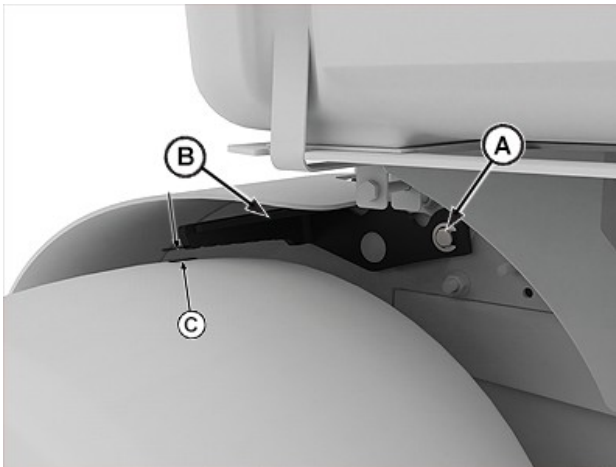

APY581400—UN—28JUN23

3. Loosen cap screw (A) that retain brake pawl (B).
4. Adjust distance (C) between pawl and tire to specification.

Specification

Brake Pawl—Distance. 9.5—13 mm
(3/8—1/2 in)

5. Tighten brake pawl retaining cap screw (A) to specification.

Specification

Cap Screw—Torque. 50—60 N·m
(37—44 lb·ft)

6. Test park brake. Adjust again, if required.
7. Release park brake and operate machine to verify tires do not hit brake pawls in the released position.

e48f9rz,1685360395857-19-16AUG23


Service Mower

Removing and Installing Mower Deck Belt Shields

CAUTION: Help prevent serious personal injury. Do not operate the mower without the belt shields installed.

Removing Belt Shields

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Lower mower deck to the lowest cutting height position.

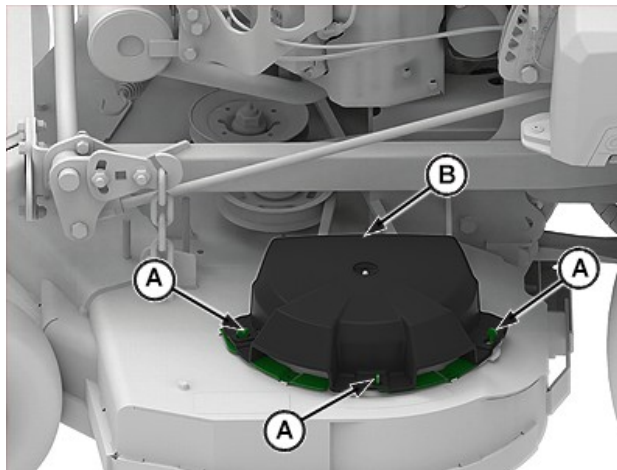

APY581401—UN—28JUN23

3. Disengage belt shield grommet by pulling up.
4. Turn belt shield (B) counter-clockwise.
5. Lift belt shield straight up to remove.

Installing Belt Shields

1. Line up keyholes in belt shield (B) with tabs on deck.
2. Turn belt shield (B) clockwise until grommet is lined up with pin on deck.
3. Engage the grommet on belt shield (B) by pushing straight down.


e48f9rz, 1693386871445-19-20SEP23

Replace Mower Deck Drive Belt

NOTE: This is not required for deck belt but, is required for the trac drive belt.

Remove Mower Deck Drive Belt (36 inch)


1. Park machine safely. (See Parking Safely in the Safety section.)

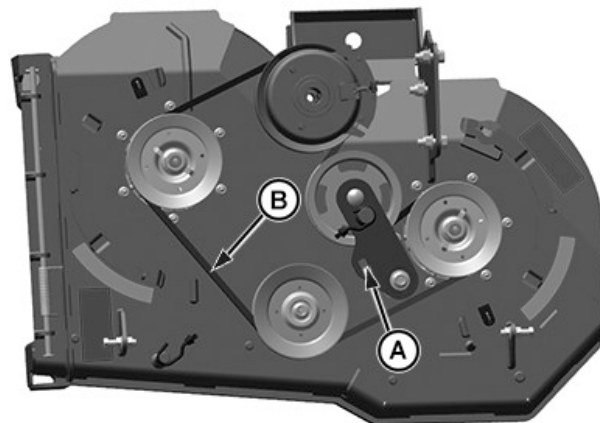

APY593322—UN—31AUG23

2. Release tension on belt (B) by inserting a 1/2 in ratchet and extension in hole (A) in tension bracket. Pivot the bracket clockwise. Remove mower deck belt.

Install Mower Deck Drive Belt (36 inch)

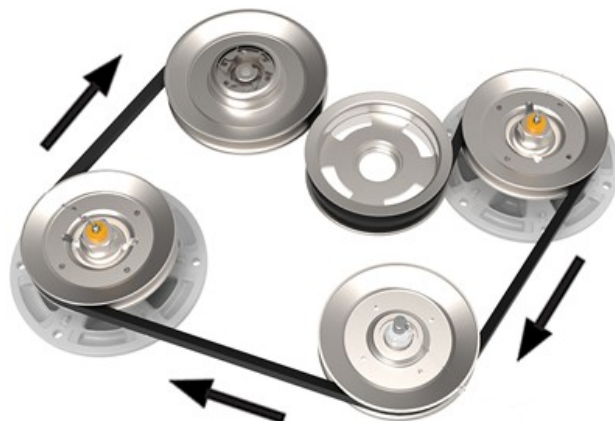


APY593323—UN—31AUG23

1. Install replacement mower deck drive belt in reverse order. Make sure that drive belt are installed properly on PTO clutch sheave, spindle sheaves, and idler pulleys.
2. Install both mower deck belt shields.
3. Adjust mower deck to desired cutting height.

Remove Mower Deck Drive Belt (48 inch)


1. Park machine safely. (See Parking Safely in the Safety section.)

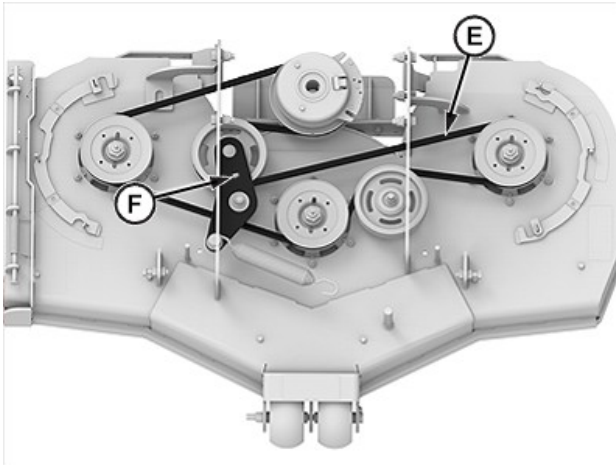

APY581404—UN—28JUN23

2. Release tension on belt (E) by inserting a 1/2 in ratchet and extension in hole (F) in tension bracket. Pivot the bracket clockwise. Remove mower deck belt.

Install Mower Deck Drive Belt (48 inch)

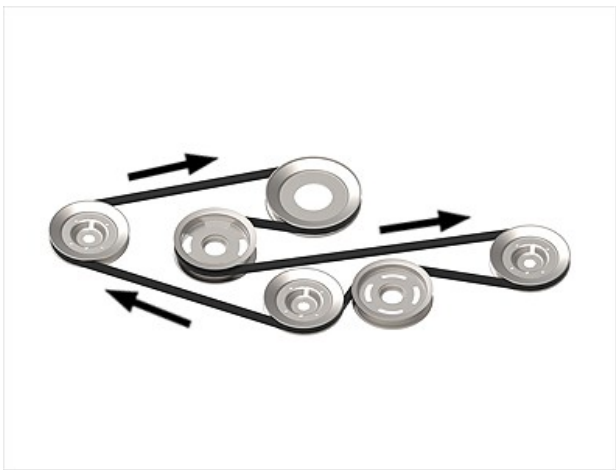

APY582086—UN—10AUG23

1. Install replacement mower deck drive belt in reverse order. Make sure that drive belt are installed properly on PTO clutch sheave, spindle sheaves, and idler pulleys.
2. Install both mower deck belt shields.
3. Adjust mower deck to desired cutting height.

e48f9rz, 1685360523688-19-20SEP23


Check for Bent Mower Blades

CAUTION: Blades are sharp. Always wear gloves when handling blades or working near blades.

Replace blades if defective. Never straighten or weld them.

1. Park machine safely. (See Parking Safely in the Safety section.)

2. Raise mower deck to highest position to access blades.

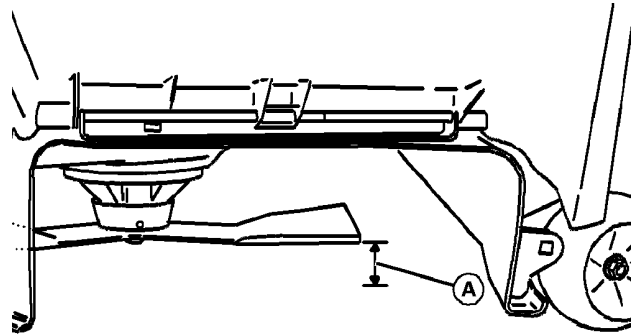

TCAL43685—UN—26MAR13

Mower deck with side discharge used for illustration.

3. Measure distance (A) between blade tip and flat ground surface.
4. Rotate blade 180° and measure distance between other blade tip and flat ground surface.
5. Install new blade if the difference between the two measurements is more than specification.

Specification

Blade—Distance. 3 mm
(1/8 in)

6. Repeat for all blades.

e48f9rz, 1685360551263-19-16AUG23

Replace Mower Blades

1. Park machine safely. (See Parking Safely in the Safety section.)

CAUTION: The machine fall or slip from an unsafe lifting device or supports.

- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto jack stands or other stable supports and block wheels before servicing.



APY581406—UN—09AUG23



APY581407—UN—09AUG23

2. Place jack (C) under the mower deck lip close to the center anti-scalp wheels (D).
3. Lift machine to desired working height.
4. Support the front of the machine with jack stands (F) under the caster arm (E).


CAUTION: Do not work near raised mower deck unless it is safely supported.

Mower blades are sharp. Wrap blades or wear gloves when servicing.

Before performing any service function, wait for all moving parts to stop turning.

Disconnect battery or remove spark plug wire before making repairs.

IMPORTANT: When replacing mower blades always use genuine John Deere service parts.

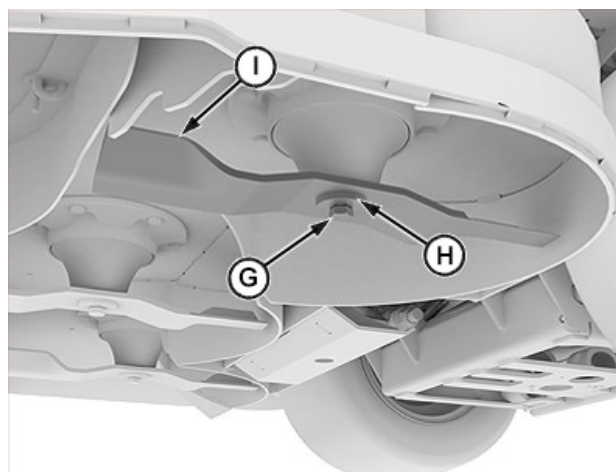

APY591188—UN—16AUG23

5. Insert wood block between blade (I) and mower to prevent the blade from turning when removing bolt.
6. Remove cap screw (G), washer (H), and blade (I).
7. Install new or re-sharpened blade:
 - Blade wing must face toward top of mower deck.

IMPORTANT: When installing the blade:

- Make sure that the blade is properly seated on the spindle.
- Make sure that the concave side of the large washer faces the blade.
- Mower blade wing must face toward top of mower deck.
- Install blade (I), washer (H), and cap screw (G).
- Tighten blade cap screw to specification.

Specification

Cap Screw—Torque. 68 N·m
(50 lb·ft)

8. Lower machine.
9. Adjust mower deck to a desirable cutting height.


e48f9rz, 1685360571142-19-20SEP23

Sharpen Blades

CAUTION: Avoid injury! Blades are sharp. Always wear gloves when handling blades or working near blades.

Always wear safety eye protection when grinding.

- Sharpen blades with grinder, hand file, or electric blade sharpener.

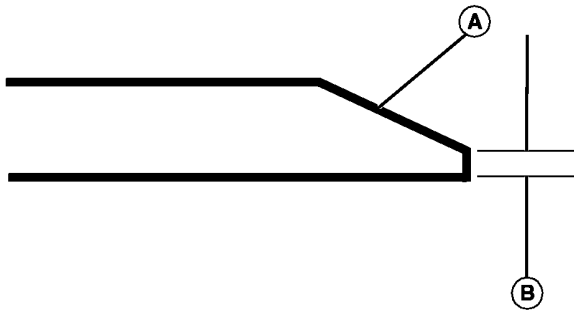

GXAL42041—UN—04MAR13

- Keep original bevel (A) when grinding.
- The blade cutting edge (B) should meet specifications.

Specification

Mower Blade Cutting

Edge—Distance. 0.40 mm
(1/64 in)


- Balance blades before installing.

e48f9rz,1685360583133-19-03AUG23

Balance Blades

⚠ CAUTION: Avoid injury! Blades are sharp.
Always wear gloves when handling blades or working near blades.

1. Clean blade.

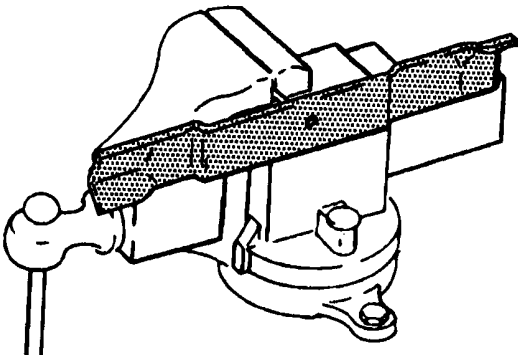

GXAL42042—UN—04MAR13

2. Put blade on nail in a vise. Turn blade to horizontal position.
3. Check balance. If blade is not balanced, heavy end of blade will drop.
4. Grind bevel of heavy end. Do not change blade bevel.

MX00654,000039F-19-17AUG23

Service Electrical

Electrical

WARNING: Avoid injury! Battery posts, terminals and related accessories contain lead and lead components, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

MP47322,00F466E-19-04AUG25

charging. Follow instructions of the battery charger for proper and safe charging. Always make sure the positive terminal is connected to the positive battery post and the negative terminal is connected to the negative battery post. Reversal could cause damage to the electrical system.

OUC1082,0000AAE-19-19SEP13

Service the Battery Safely



TCAL41233—UN—18JAN13

CAUTION: Battery electrolyte contains sulfuric acid. It is poisonous and can cause serious burns:

- Wear eye protection and gloves.
- Keep skin protected.
- If electrolyte is swallowed, get medical attention immediately.
- If electrolyte is splashed into eyes, flush immediately with water for 15—30 minutes and get medical attention.
- If electrolyte is splashed onto skin, flush immediately with water and get medical attention if necessary.

The battery produces a flammable and explosive gas. The battery may explode:

- Do not smoke near battery.
- Wear eye protection and gloves.
- Do not allow direct metal contact across battery posts.
- Remove negative cable first when disconnecting.
- Install negative cable last when connecting.

OUC1082,0000AAD-19-03AUG23


Remove and Install Battery

Removing

1. Park machine safely. (See Parking Safely in the Safety section.)

CAUTION: The battery produces a flammable and explosive gas. The battery explode:

- Do not smoke or have open flame near battery.
- Wear eye protection and gloves.
- Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.
- Do not jump start or charge a frozen battery. Warm battery to 16°C (60°F).

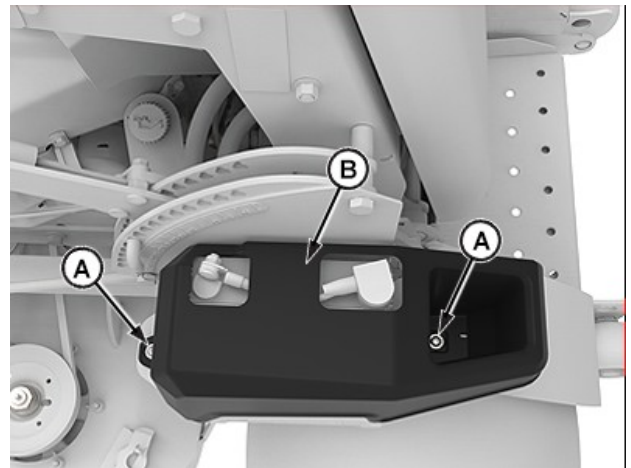


APY581410—UN—28JUN23

2. Remove two screws (A) and remove battery cover (B).

Service the Battery

The battery used is a 12-volt, maintenance-free battery. Charge the battery only if it will not start the mower effectively. Remove the battery from the mower before

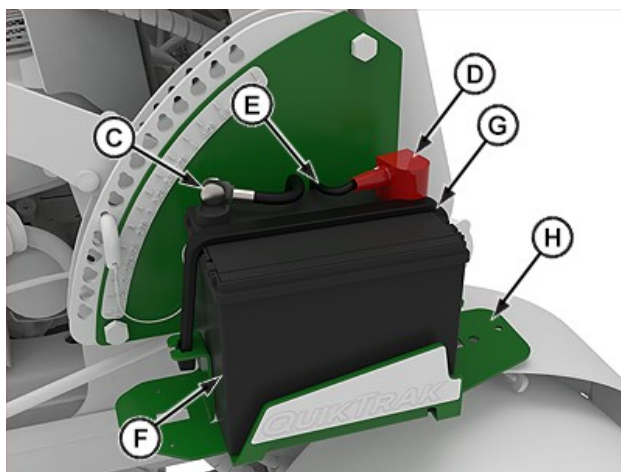

APY591186—UN—16AUG23

3. Disconnect negative (-) battery cable (C).
4. Slide back red cover (D) and disconnect positive (+) battery cable (E).
5. Remove battery holder (G) from battery mount (H) and take out battery (F).

Install

1. Place battery in battery holder. Ensure that the terminals are positioned correctly.
2. Connect the positive (+) battery cable first, then the negative (-) battery cable.
3. Apply dielectric grease to terminals to prevent corrosion.
4. Slide cover over battery terminal.
5. Install battery cover, and secure using retainer knob.

e48f9rz,1685360651503-19-16AUG23

Clean Battery and Terminals

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Disconnect and remove battery.
3. Wash battery with solution of four tablespoons of baking soda to one gallon of water. Be careful not to get the soda solution into the cells.
4. Rinse the battery with plain water and dry.
5. Clean terminals and battery cable ends with wire brush until bright.
6. Install battery.
7. Attach cables to battery terminals, beginning with the positive cable, using washers and nuts.
8. Apply spray lubricant to terminal to prevent corrosion.

MP47322,00F4671-19-17AUG23

Use Booster Battery

CAUTION: Avoid injury! The battery produces a flammable and explosive gas.


To prevent the battery from exploding:

- Do not smoke or have open flame near battery.
 - Wear eye protection and gloves.
 - Do not jump-start or charge a frozen battery.
- Warm battery to:

Specification

Battery—Temperature. 16°C (60°F)

- Do not connect the negative (-) booster cable to the negative (-) terminal of the discharged battery. Connect at a good ground location away from the discharged battery.

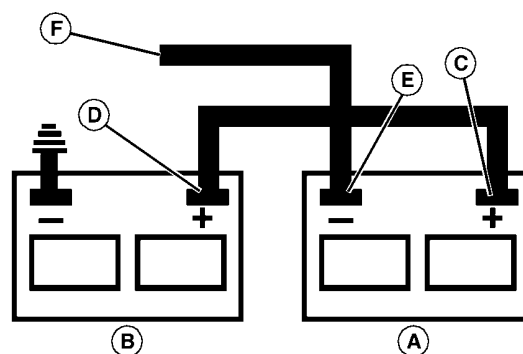

MXAL42872—UN—09APR13

A—Booster Battery
 B—Disabled Vehicle Battery
 C—Positive (+) Post
 D—Positive (+) Post
 E—Negative (-) Post
 F—Negative (-) Booster Cable End

1. Connect positive (+) booster cable to booster battery (A) positive (+) post (C).
2. Connect the other end of positive (+) booster cable to the disabled vehicle battery (B) positive (+) post (D).
3. Connect negative (-) booster cable to booster battery negative (-) post (E).

IMPORTANT: Avoid damage! Electric charges from the booster battery damages machine components. Do not install negative booster cable to machine frame. Install only to the engine block.

Install negative booster cable away from moving parts in the engine compartment, such as belts and fan blades.

4. Connect the other end (F) of negative (-) booster cable to a metal part of the disabled machine engine block away from battery.

5. Start the engine of the disabled machine and run machine for several minutes.
6. Carefully disconnect the booster cables in the exact reverse order: negative cable first and then the positive cable.

5. Install fuse holder cover and ensure plastic locking tab is secure.

e48f9rz, 1685360678042-19-16AUG23


MP47322,00F4672-19-10AUG23

Replace Fuse

The electrical system is protected by a 20-amp ATC fuse.


IMPORTANT: Make sure that replacement fuse is the correct size, prevent machine circuit damage.

1. Locate and replace the electrical system fuse located near the starter motor.

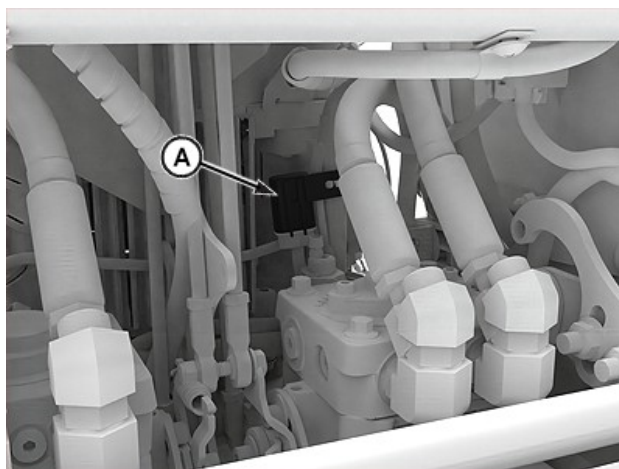

APY581412—UN—28JUN23

2. Remove fuse holder cover (A).

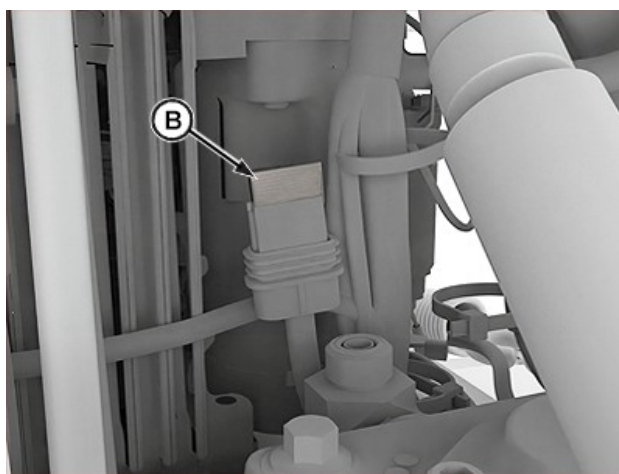

APY581413—UN—28JUN23

3. Check fuse element (B) and fuse window. Discard fuse if element is broken or shows other signs of damage. Inspect electrical system and wiring for damage and short circuits.
4. Install new 20-amp ATC fuse in socket.

Service Miscellaneous

Use Proper Fuel and Stabilizer

IMPORTANT: Avoid damage! Using stale, contaminated, or improper fuel result in engine and fuel system damage. Repairs caused by stale, contaminated, or improper fuel are not covered by warranty.

Use regular grade unleaded fuel with an octane rating of 87 octane or higher. Fuel blends containing up to 10% ethanol or up to 15% MTBE reformulated fuel are acceptable. Do not use fuel or additives containing methanol as engine damage can occur.

Always use fresh, clean fuel that is purchased in a quantity that can be used within approximately 30 days. Fuel stabilizer should always be added to the fuel each time fuel is purchased. Add stabilizer before filling the fuel container to insure proper mixing. Such practice helps prevent engine performance problems and allows fuel storage in the machine all year without draining.

Store fuel in plastic containers to reduce condensation. Make sure that the cap on the fuel container is tight to reduce fuel contamination and evaporation. For best fuel storage life, use a self-sealing gas can.

Fuel is blended to give best seasonal performance. To avoid engine performance problems such as hard starting or vapor lock, use in-season fuel. Use fuel during warm weather that was purchased during that season, and use fuel during cold weather that was purchased during that season.

Fuel can become stale in machines with engines that are used seasonally or infrequently during a season. Stale fuel can produce varnish and plug carburetor or EFI components which can affect engine performance.

Keep fuel storage container tightly covered and in a cool area out of direct sunlight. Fuel can break down and degrade if not sealed properly or exposed to sun and heat.

Condensation may collect in the fuel tank because of a variety of operating or environmental conditions and, over time, may affect your machine's operation. Fill machine fuel tank at the end of the day.

MP47322,00F4674-19-17AUG23

Fill Fuel Tank

 **CAUTION:** Avoid injury! Fuel vapors are explosive and flammable:

- Shut engine off before filling fuel tank.
- Allow engine to cool before refueling.
- Do not smoke while handling fuel.
- Keep fuel away from flames or sparks.
- Fill fuel tank outdoors or in ventilated area.
- Clean up spilled fuel immediately.

- Prevent static electric discharge by using a clean, approved, non metal container.

IMPORTANT: Avoid damage! Dirt and water in fuel causes engine damage:

- Clean dirt and debris from the fuel tank opening.
- Use clean, fresh, stabilized fuel.
- Fill the fuel tank at the end of operation each day to prevent condensation and freezing during cold weather.
- If using a funnel, make sure it is plastic and has no screen or filter.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Allow engine to cool.
3. Remove any debris from area around fuel tank cap.
4. Remove fuel tank cap slowly to allow any pressure built up in tank to escape.
5. Fill fuel tank only to bottom of filler neck. Do not overfill.

NOTE: On some models, the fuel tank cap will click when it is tight.

6. Install fuel tank cap and turn cap until it is tight.

MP47322,00F4675-19-10AUG23

Remove and Install Rear Drive Wheels

Removing

1. Park machine safely. (See Parking Safely in the Safety section.)


 **CAUTION:** The machine fall or slip from an unsafe lifting device or supports.

- Remove key before raising machine.
- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto stable supports or jack stands and block wheels before servicing.



APY581414—UN—20MAY25

2. Raise rear of machine with safe lifting device.
 - Use wheel chocks to block the front wheels.
 - Support with jack stands.

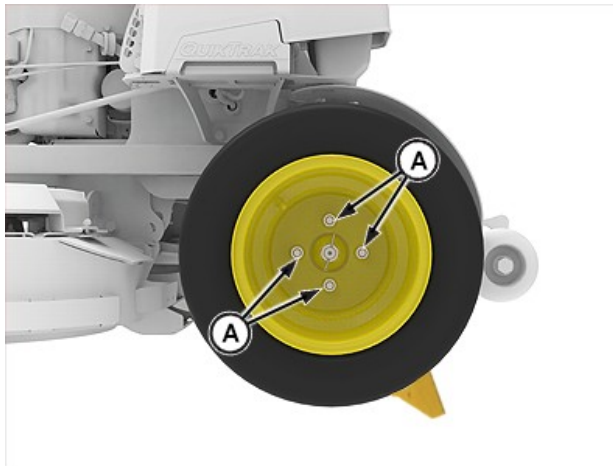

APY581415—UN—09AUG23

A—Wheel Nut (4 used)

3. Remove wheel nuts (A).
4. Remove wheel.

Install

1. Install new wheel.
2. Install and tighten wheel nuts to specification. Refer the wheel bolt tightening sequence given in Tighten Rear Drive Wheel Hardware in same group.

Specification


Rear Wheel Nut—Torque. 108—122 N·m
(80—90 lb·ft)

3. Lower machine.

e48f9rz, 1685360729045-19-16AUG23

Tighten Rear Drive Wheel Hardware

1. Tighten rear wheel nuts in an alternate pattern.

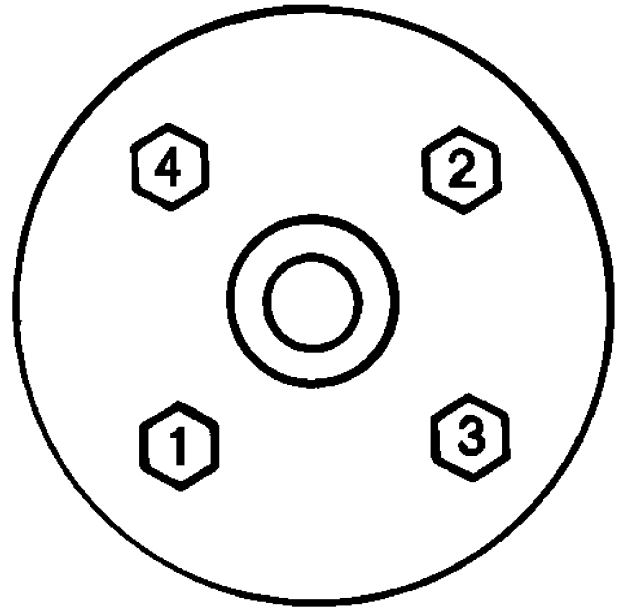

TCAL43701—UN—26MAR13

2. Tighten wheel nuts in numbered sequence shown for safe wheel installation. Tighten alternately until recommended torque value is reached.

Specification

Rear Wheel Nut—Torque. 108—122 N·m
(80—90 lb·ft)

e48f9rz, 1685360751023-19-10AUG23

Remove and Install Front Caster Wheels


Removal

1. Park machine safely. (See Parking Machine Safely in the Safety section.)

CAUTION: The machine can fall or slip from an unsafe lifting device or supports.

- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto jack stands or other stable supports and block wheels before servicing.

2. Lift front of machine with a safe lifting device.

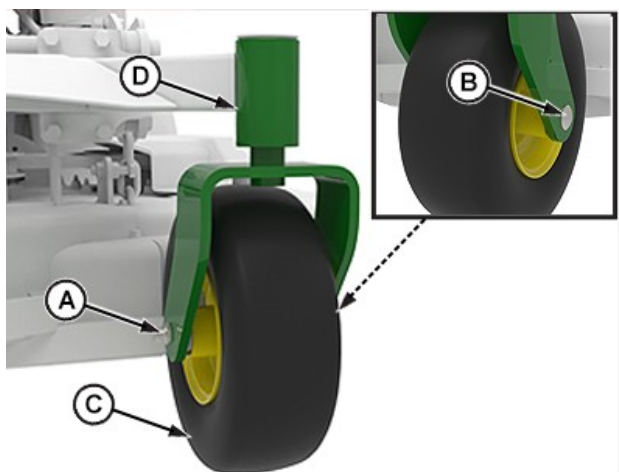

APY581416—UN—10AUG23

3. Remove hex nut (A) and cap screw (B).
4. Remove wheel and tire assembly (C) from yoke assembly (D).

Installation

1. Install replacement wheel and tire assembly (C) onto the yoke assembly (D).
2. Install cap screw (B) and hex nut (A).
3. Tighten hex nut (A) to specification.

Specification

Hex Nut—Torque. 36.6 N·m (27 lb·ft)

4. Lower machine.

e48f9rz,1685360780236-19-10AUG23

- Do not weld or heat a wheel and tire assembly. Heat cause an increase in air pressure resulting in an explosion. Welding structurally weaken or deform the wheel.
- Do not stand in front or over the tire assembly when inflating. Use a clip-on chuck and extension hose long enough to allow you to stand to one side.

Replace drive tires with less than 3/32 in of any tread groove left.

Always keep the correct tire pressure in the drive tires.

Higher pressures will cause the tires to have less traction, creating slower speeds and giving a harder ride.

Front casters are equipped with non-pneumatic tires and do not require any air, but should still be checked for wear and be replaced when excessively worn.

1. Check tires for damage.
2. Check tire pressure with an accurate gauge.
3. Fill air to specification, if necessary.

Tire	Tire Size	Pressure
Q810E	18x8.5	124-152 kPa (18-22 psi)
Q820E	18x10.5	124-152 kPa (18-22 psi)

e48f9rz,1685360802014-19-30MAY25

Check Tire Pressure



TCAL43703—UN—26MAR13

CAUTION: Explosive separation of tire and rim parts is possible when they are serviced incorrectly:

- Do not attempt to mount a tire without the proper equipment and experience to perform the job.
- Do not inflate the tires above the recommended pressure.


Remove and Install Caster Wheel Yoke Assembly

1. Park machine safely. (See Parking Machine Safely in the Safety section.)

CAUTION: The machine fall or slip from an unsafe lifting device or supports.

- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto jack stands or other stable supports and block wheels before servicing.

2. Raise and securely support the front of the machine.

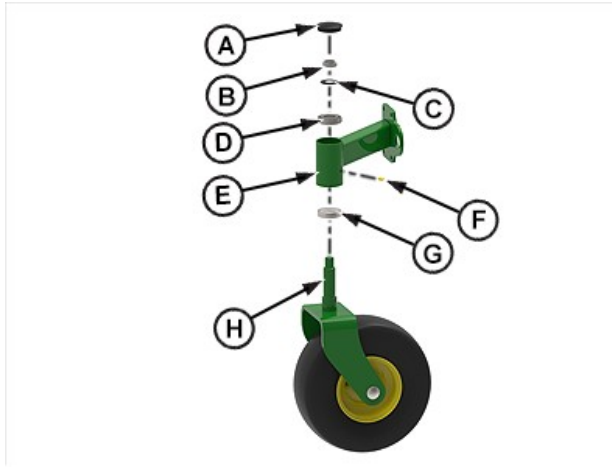

APY582098—UN—10AUG23

3. Remove cap (C) and nut (B) to remove wheel assembly (H) from caster yoke (E).
4. Remove washer (C), roller bearing (D), and roller bearing (G) from wheel assembly (H). Clean and inspect, replace as needed.
5. Perform reverse order for installation.

NOTE: Install washers (C), roller bearing (D), and roller bearing (G) in the same positions as noted during removal.

e48f9rz,1685360828159-19-17AUG23

Clean the Mower

IMPORTANT: Do not use high-pressure water to clean machine.

The underside of the mower deck should be checked and cleaned twice daily and more often if the grass being mowed is lush or wet. The entire mower should be cleaned daily at the end of the work day.

- Cleaning should be done with a leaf blower or low-pressure compressed air.
- Wash with water only when necessary. Do not use a pressure washer or nozzle, as the water enters bearings and electrical connections, causing an electrical short, rust, and corrosion.
- When washing with water, avoid spraying directly onto the PTO clutch just below the engine or near the hydro cap.
- Wait until the machine has cooled down. Washing a hot machine causes various unseen system damage.
- If water is used for cleaning, immediately dry the machine with a leaf blower or low-pressure compressed air and run with blades engaged for approximately 10 minutes.

- Once the wash is complete, always lubricate and grease all applicable areas.

e48f9rz,1685360862241-19-10AUG23

Clean Plastic Surfaces

IMPORTANT: Improper care of machine plastic surfaces can damage that surface:

- Do not wipe plastic surfaces when they are dry. Dry wiping will result in minor surface scratches.
- Use a soft, clean cloth (bath towel, diaper, automotive mitt).
- Do not use abrasive materials, such as polishing compounds, on plastic surfaces.

1. Wash surface with clean water and a mild liquid automotive washing soap.
2. Dry thoroughly to avoid water spots.

e48f9rz,1685360862484-19-10AUG23

Clean and Repair Metal Surfaces

Clean:

Follow automotive practices to care for your mower's painted metal surfaces. Use a high-quality automotive wax regularly to maintain the factory look of your mower's painted surfaces.

Repair Minor Scratches (surface scratch):

1. Clean area to be repaired thoroughly.

IMPORTANT: Do not use rubbing compound on painted surfaces.

2. Use automotive polishing compound to remove surface scratches.
3. Apply wax to entire surface.

Repair Deep Scratches (bare metal or primer showing):

1. Clean area to be repaired with rubbing alcohol or mineral spirits.
2. Use paint stick with factory-matched colors available from your authorized dealer to fill scratches. Follow directions included on paint stick for use and for drying.
3. Smooth out surface using an automotive polishing compound. Do not use power buffer.
4. Apply wax to surface.

e48f9rz,1685360862571-19-10AUG23

Troubleshooting

Using Troubleshoot Chart

If you are experiencing a problem that is not listed in this chart, see your Technical Manual, dealer, or other service provider for service.

MP47322,00F467B-19-17OCT25

Engine

If	Check
Poor Engine Performance	Fuel: • Dirt in fuel system or fuel is old. Replace fuel with fresh, stabilized fuel. Obtain fuel from another supplier before suspecting machine problems. Suppliers blend fuels differently and changing suppliers will generally solve any performance problems. • Fuel blended with alcohol or ether may contribute to performance problems by causing gum and varnish deposits, especially if fuel is stored for several weeks or more. Obtain fresh fuel.
Engine Will Not Start or Is Hard to Start	• Park brake lever not in the proper position. • Check that motion control levers are in neutral and roller bearing adjustment is correct. • PTO engaged. • Fuel shutoff valve in off position. • Stale or improper fuel/fuel level. • Plugged fuel filter. • Plugged air intake filter. • Spark plug wires loose or disconnected. • Spark plugs not gapped correctly. • Blown fuse. • Electrical problem - dead battery. • Choke adjusted incorrectly. See your John Deere dealer.
Engine Will Not Slow Idle	• Carburetion problems. See your John Deere dealer. • Bent or kinked throttle cable. • Bent governor control. • Incorrect governor idle control.
Engine Runs Rough or Stalls	• Plugged fuel filter. • Plugged air intake system. • Fuel cap vent dirty. • Stale or improper fuel/fuel level. • Spark plugs not gapped correctly. • Replace spark plugs. • Choke adjusted incorrectly. See your John Deere dealer. • Check carbon canister and fuel lines.
Engine Knocks	• Engine oil level low. • Reduce load. (Slower ground speed.) • Fuel is bad. Fill tank with fresh fuel, correct octane. • Idle speed too slow.
Engine Overheats	• Clean cooling fins. • Low oil level. • Do not operate at slow idle. Operate at fast idle. • Cooling air intake screen is dirty. • Plugged carburetor air intake filter. • Plugged air intake filter. • Operating at ground speed too fast for conditions.

Troubleshooting

If	Check
Engine Lacks Power	• Reduce load. • Plugged air intake system. • Plugged fuel filter. • Improper type of fuel. Drain tank and fill with correct fuel. • Clean cooling fins to help prevent overheating. • Replace spark plugs.
Engine Uses Too Much Oil	• Find and correct oil leaks. • Incorrect engine oil. • Plugged oil filter. • Plugged air intake filter.
Engine Backfires Through Muffler	• Throttle lever should be at 1/2 fast position for thirty seconds before turning off machine.
High Fuel Consumption	• Improper type of fuel. • Plugged air intake system. • Operating at ground speed too fast for conditions. • Improper valve clearance. See your John Deere dealer. • Restricted air intake system.

OUC1082,0000ABE-19-24AUG23

Electrical System

If	Check
Starter Will Not Work	• Blown fuse. • Park brake switch is faulty. • Loose or corroded battery connections. • Neutral switches faulty or not adjusted properly. See your John Deere dealer. • Key switch or starter faulty. See your John Deere dealer. • PTO engaged. • Motion control levers and park brake lever not in proper position.
Battery Will Not Charge	• Loose or corroded connections. • Blown fuse
PTO Switch Does Not Work/Engage	• Operator not on platform. • Faulty PTO switch.
Starter Turns Slowly	• Loose or corroded battery connections. • Low battery power – charge battery. • Engine oil viscosity too heavy.

OUC1082,0000ABF-19-12OCT17

Machine

If	Check
Excessive Machine Vibration	• Engine speed too slow. • Deck drive belt not tensioned correctly. • Mower blades not balanced.
Machine Will Not Move with Engine Running	• Park brake locked. • Transmission oil level low. • Transmission oil cold – allow engine to warm up. • Pump drive belt slipping or broken. • Pump free-wheel valves open. • Transmission problems. See your John Deere dealer.
Machine Creeps with Engine Running and Motion Control Levers in a Neutral Position	• Needs motion control linkage adjustment. • Engine speed too slow.

OUO1082,0000AC0-19-19SEP13

Park Brake

If	Check
Park Brake Not Working Correctly	• Park brake out of adjustment - adjust linkage.

OUO1082,0000AC1-19-19SEP13

Steering

If	Check
Steering Not Working	• Pump free-wheel valves partially open. • Improper tire inflation. • Hydrostatic transmission oil level low.

OUO1082,0000AC2-19-19SEP13

Mower

If	Check
Discharge Chute Plugged	• Grass is wet - mow grass only when dry. • Raise cutting height. • Mow at full fast throttle. • Ground speed too fast for conditions. • Correct installation of deck drive belt.
Mower Deck Vibrates	• Run engine at fast throttle. • Loose hardware. • Check/replace deck drive belt. • Blade bolts are loose. • Blades are bent or worn.

Troubleshooting

	• Sharpen and balance blades. • Remove belt shields and clean debris from sheaves. • Check sheaves for proper alignment or damage. See your John Deere dealer.
Mower Blades Do Not Engage	• Mower deck drive belt slipping or broken. • Deck belt tension spring not installed or broken. • PTO switch failure. • Fuse is blown. • Loose electrical connections.
Mower Mows Unevenly	• Mower deck not properly leveled. • Ground speed too fast for conditions. • Run engine at fast throttle. • Reduce ground speed when making turns. • Sharpen or replace blades. • Change mowing pattern. • Check air pressure in all traction unit tires.

OUC1082,0000AC3-19-11SEP23

Storage

Storing Safety

⚠ CAUTION: Avoid injury! Fuel vapors are explosive and flammable.

Engine exhaust fumes contain carbon monoxide and cause serious illness or death:

- Run the engine only long enough to move the machine to or from storage.
- If a machine is stored before allowing it to cool, machine fires and structure fires can occur. Fires can occur if debris is not removed from around the engine and muffler, or if stored near combustible materials.
- Do not store vehicle with fuel in the tank inside a building where fumes reach an open flame or spark.
- Allow the engine to cool before storing the machine in any enclosure.

MP47322,00F4680-19-06MAY15

Preparing Fuel and Engine For Storage

Fuel:

If you have been using "Stabilized Fuel," add stabilized fuel to the tank until the tank is full.

NOTE: Filling the fuel tank reduces the amount of air in the fuel tank and helps reduce deterioration of fuel.

If you are not using "Stabilized Fuel:"

1. Park machine safely in a well-ventilated area. (See Parking Safely in the Safety section.)

NOTE: Try to anticipate the last time the machine will be used for the season so very little fuel is left in the fuel tank.

2. Turn on engine and allow to run until it runs out of fuel.
3. For machines equipped with an ignition key switch, turn the ignition key switch to the OFF position.

IMPORTANT: Avoid damage! Stale fuel can produce varnish and plug carburetor or injector components and affect engine performance.

- Add fuel conditioner or stabilizer to fresh fuel before filling tank.
4. Mix fresh fuel and fuel stabilizer in a separate container. Follow stabilizer instructions for mixing.
 5. Fill fuel tank with stabilized fuel.
 6. Run engine for a few minutes to allow fuel mixture to circulate through the fuel system.

Engine:

Engine storage procedure should be used when vehicle is not to be used for longer than 60 days.

1. Change engine oil and filter while engine is warm.
2. Service air filter if necessary.
3. Clean debris from the engine air intake screen.
4. On gas engines:
 - Remove spark plugs. Put 30 ml (1 oz) of clean engine oil in cylinders.
 - Install spark plugs, but do not connect spark plug wires.
 - Crank the engine 5 or 6 times to allow oil to be distributed.
5. Clean the engine and engine compartment.
6. Remove battery.
7. Clean the battery and battery posts. Check the electrolyte level, if your battery is not maintenance free.
8. Store the battery in a cool, dry place where it will not freeze.

NOTE: The stored battery should be recharged every 90 days.

9. Charge the battery.

IMPORTANT: Avoid damage! Prolonged exposure to sunlight could damage the hood surface. Store machine inside or use a cover if stored outside.

10. Store the vehicle in a dry, protected place. If vehicle is stored outside, put a waterproof cover over it.

MP47322,00F4682-19-11APR24

Preparing Machine for Storage

1. Repair any worn or damaged parts. Replace parts if necessary. Tighten loose hardware.
2. To prevent rust, repair scratched or chipped metal surfaces.
3. Remove grass and debris from machine.
4. Clean under the rotary deck and remove grass and debris from inside chute and bagger, if applicable.
5. Wash the machine and apply wax to metal and plastic surfaces.
6. To dry belts and pulleys, run machine for five minutes.
7. To prevent rust, apply light coat of engine oil on pivot and wear points.

8. Lubricate grease points and check tire pressure.

MP47322,00F4681-19-13JUL16

Removing Machine From Storage

1. Check tire pressure.
2. Check engine oil level.
3. Check battery electrolyte level if your battery is not maintenance free. Charge battery if necessary.
4. Install battery.
5. On gas engines: check spark plug gap. Install and tighten plugs to specified torque.
6. Lubricate all grease points.
7. Open fuel shut-off valve if your machine is equipped.
8. Run the engine 5 minutes without the mower or any attachments running to allow oil to be distributed throughout engine.
9. Be sure all shields and guards or deflectors are in place.

MP47322,00F4683-19-17FEB23

Specifications

Engine

Model 810E

Make	Kawasaki
Model	FX600V
Power Rating Information	http://www.kawasaki-criticalpower.com
Type	Vertical - 4 cyc. - OHV
Maximum Power	14.16 kW (19 hp) @ 3600 rpm
Max Torque	44 N·m (32.45 lb·ft) @ 2200 rpm
Displacement	603 cm ³ (36.79 in ³)
PTO-Crank Shaft	25.4 mm (1.0 in) x L80 mm
Cylinders	Two V-Twin
Fast Idle (No Load)	3650 ± 100 rpm
Low Idle	1550 ± 50 rpm
Operating Range	1650—3750 rpm
Oil Crankcase Capacity / Dry	2.0 L (2.11 qt) / Filter
Oil Filter	Spin-on Full Flow, Cartridge Type
Lubrication	Full Pressure
Cooling System	Forced Air
Air Cleaner	Dry Type, Dual Stage with Unloader Valve
Bore	73 mm (2.87 in)
Stroke	72 mm (2.83 in)
Compression Ratio	8.1:1
Spark Plug	NGK BPR4ES
Spark Plug Gap	0.76 mm (0.030 in)
Spark Plug Torque	.22 N·m (16 lb·ft)
Valve Clearance (Intake and Exhaust) (Cold)	0.10—0.15 mm (0.004—0.006 in)

Model 820E

Make	Kawasaki
Model	FX730V
Power Rating Information	http://www.kawasaki-criticalpower.com
Type	Vertical - 4 cyc. - OHV
Maximum Power	17.5 kW (23.5 hp) @ 3600 rpm
Max Torque	53.8 N·m (39.68 lb·ft) @ 2400 rpm
Displacement	726 cm ³ (44.3 in ³)
PTO-Crank Shaft	28.5 mm (1-1/8 in) x L108.8 mm
Cylinders	Two V-Twin
Fast Idle (No Load)	3650 ± 100 rpm
Low Idle	1550 ± 150 rpm
Operating Range	1650—3750 rpm
Oil Crankcase Capacity / Dry	2.2 L (2.32 qt) / Filter
Oil Filter	Spin-on Full Flow, Cartridge Type
Lubrication	Full Pressure
Cooling System	Forced Air
Air Cleaner	Dry Type, Dual Stage with Unloader Valve
Bore	78 mm (3.07 in)
Stroke	76 mm (2.99 in)
Compression Ratio	8.2:1
Spark Plug	NGK BPR4ES
Spark Plug Gap	0.76 mm (0.030 in)
Spark Plug Torque	.22 N·m (16 lb·ft)
Valve Clearance (Intake and Exhaust) (Cold)	0.10—0.15 mm (0.004—0.006 in)

Drivetrain and Travel Speeds

Drivetrain

Type	Hydrostatic
Number of Speeds	Variable
Hydrostatic Pump Make	Hydro-Gear
Hydrostatic Pump Type	Axial Piston
Hydrostatic Pump Series	PK
Hydrostatic Pump Displacement	12 cm ³ /rev (0.73 cu. in./rev)
Wheel Motor Make	White Dove Engineering
Wheel Motor Displacement	245 cm ³ /rev (15.0 cu. in./rev)
Wheel Motor Design	4 Bolt Mount, 25.4 cm (1 in) Tapered Shaft
Drive System Filtration	Spin-on Full Flow, 25 Micron

Travel Speeds

Forward	0—12.87 km/h (0—8 mph) at full engine rpm
Reverse	0—5.63 km/h (0—3.5 mph) at full engine rpm

e48f9rz,1691399713794-19-11SEP23

Electrical System

Charging System	12 V 20 amp at 3600 rpm
Battery Voltage	12 volt
Cold Cranking Amp	300 amp
Starter	Solenoid Shift
Hour Meter	Digital
Operator Presence Control System	Mechanical Over Electrical
Ignition	Fly Wheel

e48f9rz,1691399713334-19-24AUG23

Fuel System

Fuel Type	Gasoline, Regular Unleaded
Fuel Tank Capacity	21.19 L (5.6 gal.)
Fuel System Certification	EPA - CARB Cert. w/Vapor Recovery
Fuel Tank Location	On Right Side of Operator

e48f9rz,1691399713618-19-10AUG23

Steering and Brakes

Steering	Twin Motion Control Levers/Hydrostatic
Braking	Twin Motion Control Levers/Hydrostatic
Park Brake	Mechanical Lever / Tire Engagement
Park Brake Actuation	Over Center Hand Lever

e48f9rz,1691399713583-19-07AUG23

Specifications

Tires

Drive (Rear) Tires(Q810E)	18x8.5-10
Drive (Rear) Tires(Q820E)	18x10.5-10
Drive (Rear) Tires Capacity	1200 lb. (544 kg) @ 22 psi
Front Casters	11 x 4—5
Front Caster Yoke	Steel w/Greasable Tapered Bearings

e48f9rz,1691399713741-19-10AUG23

PTO

Type	Electro-Magnetic-ccw (125 lb·ft) w/Brake
Deck Drive	B-Section V-belt w/Kevelar Cord

e48f9rz,1691399713550-19-30AUG23

Mower Deck

Width / Type	91.44 cm (36 in) and 112.92 (48 in) Side Discharge
Deck construction	Steel Fabricated w/Steel Reinforcements
Deck Shell Thickness	7 Gauge 4.5 mm (0.177 in)
Mower Deck Spindles	.8 in cast aluminum housing with greaseable ball bearings
Height-of-Cut Range	3.8 to 12.7 cm (1.5 to 5.0 in)
HOC Increments	0.25 in
Cutter Deck Anti-Scalp Rollers (48 in Deck)	Double Captured Center

e48f9rz,1691399713488-19-30AUG23

Deck Blades

Blade Size(36 in)	6.35 cm (3 in) (76.2 mm) x (18.0 in) (457.2 mm) x (0.25 in) (6.35 mm)
Blade Size(48 in)	6.35 cm (3 in) (76.2 mm) x (16.5 in) (419.1 mm) x (0.25 in) (6.35 mm)
Blade Tip Speed(810E)	18,000 rpm
Blade Tip Speed(820E)	17,200 rpm
Blade Mount	M12 x 1.75 x 25 grade 10.9 bolt
Number / Type (36 in Deck)	Two / High Lift
Number / Type (48 in Deck)	Three / High Lift

e48f9rz,1691399713835-19-11SEP23

Battery

Voltage	12 volt
CCA	300 amp
CA	365 amp
Reserve Capacity	38 minutes
BCI Group Size	U1

Capacities

Fuel Tank	21.19 L (5.6 gal)
Hydraulic Oil (With Filter/Wet)	5.7—5.8 L (6—6.12 qt)
Hydraulic Oil (With Filter/Dry)	2.9 L (3.1 qt)
Engine Oil (Q820E With Filter)	1.75 L (1.84 qt)
Engine Oil (Q810E With Filter)	1.7 L (1.79 qt)

Dimensions

Q810E

Wheel Base	1.05 m (41.37 in)
Overall Length	157.48 cm (62 in)
Overall Height	119 cm (47 in)
Overall Width (With Chute Up)	96.52 cm (38 in)
Overall Width (With Chute Down)	125.73 cm (49.5 in)

Q820E

Wheel Base	1.05 m (41.37 in)
Overall Length	151.76 cm (59.75 in)
Overall Height	119 cm (47 in)
Overall Width (With Chute Up)	127 cm (50 in)
Overall Width (With Chute Down)	157.48 cm (62 in)

Weights

Weight (With Engine Oil, Hydraulic Oil, and Fuel)

Q810E	326.58 kg (720 lb)
Q820E	362.87 kg (800 lb)

Torque Values

Wheel Motor Bolts (Securing the Motor to Support), With Loctite 2760	.54—68 N·m (40—50 lb·ft)
Clutch to Engine Shaft, With Loctite 2760	.68—75 N·m (50—55 lb·ft)
Wheel Hub to Wheel Motor	237—305 N·m (175—225 lb·ft)
Wheel Lug Nuts	108—122 N·m (80—90 lb·ft)
Blade Bolts	.68 N·m (50 lb·ft)

Recommended Lubricants

Engine Oil TURF-GARD™, Plus-50™ II
Hydraulic Oil JD Plus 50 II, 15W-40

Grease: (This may change for high-speed applications such as cutting units)

. John Deere Multi-Purpose HD Lithium Complex Grease
. Grease-Gard™ Premium Plus

(Specifications and design subject to change without
notice.)

e48f9rz,1691399713970-19-30AUG23

Warranty

Product Warranty

John Deere offers a standard warranty on new John Deere products. For a copy of the product warranty statement or for details on the warranty terms and conditions for products purchased in the United States and Canada, please contact your local John Deere Dealer or utilize the following resources:

United States

Website:

http://www.deere.com/en_US/services_and_support/warranty/warranty.page

Toll Free: 1-800-537-8233

Dealer Locator:

<http://dealerlocator.deere.com/servlet/country=US>

Canada

Website (English):

http://www.deere.ca/en_CA/services_and_support/service_plans_warranties/service_plans_warranties.page

Website (French):

http://fr.deere.ca/en_CA/services_and_support/service_plans_warranties/service_plans_warranties.page

Toll Free: 1-800-537-8233

Dealer Locator:

<http://dealerlocator.deere.com/servlet/country=CA>

Emission-related warranties are included in this Operator's Manual, and applicable if required by law or regulation.

For products purchased in a country other than the United States or Canada, please contact your local John Deere dealer for assistance.

MP47322,00F4690-19-27FEB24

U.S. EPA Emission Control System Warranty Statement (Off-Road Engine Equipment)

Your Warranty Rights and Obligations

John Deere and the United States Environmental Protection Agency are pleased to explain the emission control system's warranty on your off-road engine equipment. John Deere must warrant the emission control system on your off-road engine equipment for the period listed below provided there has been no abuse, neglect or improper maintenance of your off-road engine equipment leading to the failure of the emission control system.

Manufacturer's Warranty Coverage

Your evaporative emission control system is warranted for two years. Your off-road engine is warranted as follows: If your off-road engine equipment has a Briggs & Stratton engine, your off-road engine is warranted for two years. For all other off-road engines referenced in this Operator's Manual, your off-road engine is warranted for three years. If any emission-related part on your off-road equipment is defective, the part will be repaired or replaced by John Deere or an authorized John Deere service provider.

Owner's Warranty Responsibilities

- As the spark ignited off-road engine equipment owner, you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that you retain all receipts covering maintenance on your spark ignited off-road engine equipment, but John Deere cannot deny warranty coverage solely for lack of receipts or for your failure to ensure the performance of all scheduled maintenance.
- As the spark ignited off-road engine equipment owner, you should however be aware that John Deere may deny you warranty coverage if your spark ignited off-road engine equipment or a part has failed due to abuse, neglect, or improper maintenance or unapproved modifications.
- You are responsible for presenting your spark ignited off-road engine equipment to a John Deere Turf and Compact Utility distribution center or service center as soon as a problem exists. The warranty repairs shall be completed in a reasonable amount of time, not to exceed 30 days. If you have a question about your emission control warranty coverage, your emission control warranty rights and responsibilities, how to make an emission control system warranty claim or how to make arrangements for emission-related authorized repairs, you should contact your John Deere Turf and Compact Utility retailer, or the John Deere Customer Contact Center at 1-800-537-8233, or email John Deere from

<https://www.deere.com/en/our-company/contact-us/>.

General Emission Control System Warranty Coverage

The warranty period begins on the date the spark ignited off-road engine equipment is delivered to an ultimate purchaser. John Deere warrants to the ultimate purchaser and each subsequent purchaser that the spark ignited off-road engine equipment is:

- Designed, built and equipped so it conforms at the time of sale to the ultimate purchaser with applicable U.S. Environmental Protection Agency regulations under 40 CFR Parts 1054, 1048 and 1060; and,
- Free from defects in materials and workmanship that causes the failure of a warranted part to conform with

applicable regulations for the emission control system warranty period provided herein.

- For owners located more than 100 miles from a John Deere authorized service center, John Deere will pay either for shipping costs to and from an authorized service center, provide for a service technician to come to the owner to make the warranty repair, or pay for the repair to be made at a local non-authorized service center. These provisions do not apply to high-altitude counties within the following States: Alaska, Hawaii, Arizona, Colorado, Idaho, Montana, Nebraska, Nevada, New Mexico, Oregon, Texas, Utah, and Wyoming.

Emission Control System Warranty Interpretation

- Any warranted part that is not scheduled for replacement as required by the maintenance instructions in the Operator's Manual is warranted as provided herein. If any such part fails during the period of warranty coverage it will be repaired or replaced by John Deere or an authorized John Deere service provider. Any such part repaired or replaced under warranty is warranted for the remaining warranty period.
- Any warranted part that is scheduled only for regular inspection in the maintenance instructions in the Operator's Manual is warranted as provided herein. A statement in the Operator's Manual to the effect of "repair or replace as necessary" does not reduce the period of warranty coverage. Any such part repaired or replaced under warranty is warranted for the remaining warranty period.
- Any warranted part that is scheduled for replacement as required maintenance in the Operator's Manual is warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part will be repaired or replaced by John Deere or an authorized John Deere service provider. Any such part repaired or replaced under warranty is warranted for the remainder of the period prior to the first scheduled replacement point for the part.
- Repair or replacement of any warranted part under the warranty will be performed at no charge to the owner by John Deere or an authorized John Deere service provider.
- The owner will not be charged for diagnostic labor which leads to the determination that a warranted part is defective, provided such work is performed by John Deere or an authorized John Deere service provider.
- John Deere or an authorized John Deere service provider will repair damages to other engine components proximately caused by a failure under warranty of any emission-related warranted part.
- Add-on or modified parts that are not exempted by the California Air Resources Board may not be used. The use of any non-exempted add-on or modified

parts will be grounds for disallowing a warranty claim. John Deere or any authorized John Deere service provider will not be liable to warrant failures of warranted parts caused by the use of a non-exempted add-on or modified part.

Emission Control System Warranty Parts List

Coverage under this warranty includes, but is not limited to, the parts listed below (the emission control system parts) to the extent these parts were on the off-road equipment and engine purchased.

Fuel Metering System:

- Carburetor and internal parts (or fuel injection system)
- Air/fuel ratio feedback and control system
- Cold start enrichment system

Evaporative System:

- Fuel tank, fuel cap and tether
- Fuel hose, line, fittings, clamps
- Fuel pump, fuel shut-off valve
- Fuel vapor hoses, fittings
- Carbon canister
- Rollover/slant valve for fuel vapor control
- Purge and vent line

Air Induction System:

- Air cleaner
- Intake manifold

Ignition System:

- Spark plugs
- Magneto or electronic ignition system
- Spark advance/retard system
- Gaskets

Lubrication System:

- Oil pump and internal parts

Positive Crankcase Ventilation (PCV) System

- PCV Valve
- Oil filler cap

Exhaust System:

- Exhaust manifold
- Catalyst muffler

Miscellaneous Items Used in Above Systems

- Valves and Switches: vacuum, temperature, position, check, time-sensitive
- Electronic controls
- Hoses, belts, connectors and assemblies

Limited Liability

a) The liability of John Deere under this emission control system warranty is limited solely to the remedying of defects in materials or workmanship. Except as otherwise expressly provided herein, this warranty does not cover inconvenience or loss of use of the off-road equipment or engine or transportation of the equipment or engine to or from the John Deere Turf and Compact Utility retailer or authorized service provider. John Deere shall not be liable for any other expense, loss, or damage, whether direct, incidental, consequential (except as listed above under "coverage") or exemplary arising in connection with the sale or use of or inability to use the off-road equipment or engine for any other purpose.

b) No express emission control system warranty is given by John Deere with respect to the equipment or engine except as specifically set forth in this document. Any emission control system warranty implied by law, including any warranty of merchantability or fitness for a particular purpose, is expressively limited to the emission control system warranty terms set forth in this document.

c) No dealer or service provider is authorized to modify this Federal, California and John Deere Emission Control System Warranty.

mk71445,1710421168405-19-22MAR24

Tire Warranty

John Deere warranty applies for tires available through the John Deere parts system. For tires not available through the John Deere parts system, the tire manufacturer's warranty applicable to your machine may not apply outside the U.S. (See your John Deere dealer for specific information.)

MX00654,0000314-19-21AUG14

Limited Battery Warranty For Factory Installed Batteries

NOTE: Applicable in North America only. For complete machine warranty, reference a copy of the John Deere warranty statement. Contact your John Deere dealer to obtain a copy.

TO SECURE WARRANTY SERVICE

The purchaser must request warranty service from a John Deere dealer authorized to sell John Deere

batteries, and present the battery to the dealer with the top cover plate codes intact.

FREE REPLACEMENT PERIOD

Any new battery which becomes unserviceable (not merely discharged) due to defects in material or workmanship within the FREE REPLACEMENT PERIOD will be replaced free of charge. Installation costs will be covered by warranty if the unserviceable battery was installed by a John Deere factory or dealer and the replacement battery is installed by a John Deere dealer.

PRO RATA ADJUSTMENT (batteries with letter code identification only)

Any new battery which becomes unserviceable (not merely discharged) due to defects in material or workmanship within the Pro Rata Warranty Period will be replaced upon payment of the battery's current list price less a pro rata credit for unused months of service. The applicable adjustment period is determined from the Warranty Code printed at the top of the battery and table below. Installation costs are not covered after the battery warranty period has ended.

THIS WARRANTY DOES NOT COVER

- A. Breakage of the container, cover, or terminals.
- B. Depreciation or damage caused by lack of reasonable and necessary maintenance or by improper maintenance.
- C. Transportation, mailing, or service call charges for warranty service.
- D. Batteries that are merely discharged.

LIMITATION OF IMPLIED WARRANTIES AND PURCHASER'S REMEDIES

To the extent permitted by law, neither John Deere nor any company affiliated with it makes any warranties, representations, or promises as to the quality, performance or freedom from defect of the products covered by this warranty. IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT APPLICABLE, SHALL BE LIMITED IN DURATION TO THE APPLICABLE ADJUSTMENT PERIOD SET FORTH HERE. THE PURCHASER'S ONLY REMEDIES IN CONNECTION WITH THE BREACH OR PERFORMANCE OF ANY WARRANTY ON JOHN DEERE BATTERIES ARE THOSE SET FORTH HERE. IN NO EVENT WILL THE DEALER, JOHN DEERE OR ANY COMPANY AFFILIATED WITH JOHN DEERE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. (Note: Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages. So these limitations and exclusions may not apply to you.) This warranty gives you specific legal rights, and you may also have some rights which vary from state to state.

NO DEALER WARRANTY

The selling dealer makes no warranty of its own and the dealer has no authority to make any representation or promise on behalf of John Deere, or to modify the terms or limitations of this warranty in any way.

WARRANTY TERMS TABLE

NOTE: If your battery is not labeled with a warranty code, it is a warranty code 6.

Warranty Code	Free Replacement Period	Pro Rata Warranty Period
A	90 Days	40 Months
B	90 Days	36 Months
C	90 Days	24 Months
D	12 Months	48 Months
E	90 Days	12 Months
F	90 Days	60 Months
G	12 Months	60 Months
H	12 Months	60 Months
6	6 Months	0 Months
12	12 Months	0 Months
18	18 Months	0 Months

OUMX068,0000504-19-18OCT24

John Deere Quality Statement

John Deere Quality

John Deere equipment is more than just a purchase, it's an investment in quality. That quality goes beyond our equipment to your John Deere dealer's parts and service support. This support is needed to keep you a satisfied customer.

That's why John Deere has initiated a process to handle your questions or problems, should they arise. The following three steps will help guide you through the process.

Step 1

Refer to your operator's manual

A. It has many illustrations and detailed information on the safe and proper operation of your equipment.

B. It gives troubleshooting procedures, and specification information.

C. It gives ordering information for parts catalogs, service and technical manuals.

D. If your questions are not answered in the operator's manual, then go to Step 2.

Step 2

Contact your dealer

A. Your John Deere dealer has the responsibility, authority, and ability to answer questions, resolve problems, and fulfill your parts and service needs.

B. First, discuss your questions or problems with your dealer's trained parts and service staff.

C. If the parts and service people are unable to resolve your problem, see the dealership manager or owner.

D. If your questions or problems are not resolved by the dealer, then go to Step 3.

Step 3

Contact John Deere

A. Your John Deere dealer is the most efficient source in addressing any concern, but if you are not able to resolve your problem after checking your operator's manual and contacting your dealer, contact John Deere for assistance.

B. For prompt, effective service, please have the following ready before you call:

- The name of the dealer with whom you've been working.
- Your equipment model number.
- Number of hours on machine (if applicable).
- Your serial number which you recorded on the inside front cover of this manual.
- If the problem is with an attachment, your attachment identification number.

C. Then call 1-800-537-8233 (United States and Canada) and our advisor will work with your dealer to investigate your concern. If you are outside the United States and Canada, visit the following website:

<https://www.deere.com/en/global-country-selector/>

Select your country and then click on the Contact Us link at the bottom of the page.

SP66632,00043A7-19-04AUG25

[illegible]

Index

A		
Adjusting Cutting Height	20-2	
Adjustment, Altitude	40-1	
Air Cleaner Elements, HD, Servicing.....	40-4	
B		
Battery and Terminals, Cleaning	60-2	
Battery, Removing and Installing	60-1	
Battery, Service	60-1	
Battery, Service Safely	60-1	
Battery, Using Booster	60-2	
Belt Shields, Removing and Installing Mower Deck ...	55-1	
Belt, Replacing Mower Deck Drive	55-1	
Blade Clutch/ Brake Switch, Testing	20-7	
Blades, balancing.....	55-4	
Blades, Checking Mower	55-2	
Blades, Replacing Mower.....	55-2	
Blades, sharpening	55-3	
Bleeding Air From Hydraulic System.....	45-3	
Brake, Adjusting Park	50-1	
Brake, Testing Park.....	20-7	
C		
Caster Wheels		
Remove and Install Caster Wheels	65-2	
Remove and Install Yoke Assembly.....	65-3	
Certification	05-4	
Cut Quality and Mowing Tips	20-13	
D		
Deck, Leveling Mower	20-4	
Drive Belt, Checking and Replacing.....	45-4	
E		
Electrical	60-1	
Emissions		
Required language		
EPA	2	
Emissions Performance		
Tampering	2	
Engine		
Oil	40-1	
Engine Air Intake Screen and Fan		
Cleaning	40-3	
Engine, starting	20-10	
Engine, Stopping	20-12	
F		
Filter, Changing Engine Oil	40-2	
Filter, Changing Hydraulic	45-1	
Fins, Cleaning Engine Oil Cooling (Kawasaki) ...	40-4	
Fuel and Stabilizer, Using Proper.....	65-1	
Fuel Filter, Replacing	40-5	
Fuel Gauge, Using	20-8	
Fuel Lines, Checking	20-12	
Fuel safety.....	10-7	
Fuel Storage.....	75-1	
Fuel Tank, Filling.....	65-1	
Fuse, Replacing (Kawasaki).....	60-3	
G		
General Cleaning Guidelines.....	13-1	
General Overview	15-2	
Grease	35-1	
H		
Hour Meter, Using	20-8	
I		
Identification Numbers, Record	00-1	
J		
John Deere Quality	JDQS-1	
L		
Labels, safety with text.....	05-2	
Lever, Using Park Brake	20-6	
Linkages, Checking and Adjusting Motion Control	45-5	
Lubrication	35-1	
M		
Machine, Mounting and Dismounting Safely	20-1	
Machine, Transporting	20-13	
Metal Surfaces, Repairing and Cleaning	65-4	
Miscellaneous		
Remove and Install		
Caster Wheel Yoke Assembly	65-3	
Caster Wheels	65-2	
Motion control levers, using	20-9	
Mower Deck, Raising and Lowering.....	20-2	
Mower, Cleaning	65-4	
Mower, Dismounting to Inspect	20-14	
Mower, engaging	20-11	
O		
Oil		
Engine		
Gasoline	40-1	
Oil Level, Checking Engine.....	40-2	
Oil Level, Checking Hydraulic.....	45-1	
Oil, Hydrostatic Transmission and Hydraulic	45-1	
Operating Checklist, Daily	20-1	
Operating Thigh Pad	20-1	
Operator Presence Switch, Testing.....	20-7	
Operator Station Controls.....	15-1	
Operator Training Required	10-1	
Order Service Parts Online.....	3	

P

Park Brake Switch, Testing	20-7
Parts	3
Plastic and Painted Surfaces, Avoid Damage to	20-1
Plastic Surface Cleaning and Repairing Surfaces	65-4
Preparation	10-1
PTO Switch, Testing	20-6
PTO, using	20-7

R

Record Service Dates	SR-1
----------------------------	------

S

Safety Label Locations	05-1
Safety labels, with text	05-2
Safety Systems, Testing	20-6
Safety, tire	10-7
Service Information, Emissions	40-1
Service intervals	30-1
Service Literature	3
Spark arrestor, using	10-2
Spark Plugs, Checking	40-5
Special Messages	3
Specifications, Battery	85-3
Specifications, Capacities	85-4
Specifications, Deck Blades	85-3
Specifications, Dimensions	85-4
Specifications, Drivetrain and travel speeds	85-2
Specifications, Electrical System	85-2
Specifications, Engine	85-1
Specifications, Fuel System	85-2
Specifications, Mower Deck	85-3
Specifications, PTO	85-3
Specifications, Recommended Lubricants	85-5
Specifications, Steering and Brakes	85-2
Specifications, tires	85-3
Specifications, Torque	85-4
Specifications, weights	85-4
Spring Tension, Adjust Deck Lift	20-4
Storage, Preparing Machine for	75-1
Storage, Removing Machine from	75-2
Storing Safety	75-1

T

Thank You for Purchasing a John Deere Product ...	2
Throttle, using	20-8
Tire Pressure, Checking	65-3
Tracking, Checking and Adjusting Transmission	45-6
Traction Drive Belt Tension, Adjusting	45-8
Travel Speeds, Mowing	20-14
Troubleshooting	70-1
Troubleshooting chart	70-1

U

Using Your Operator's Manual	2
------------------------------------	---

V

Valves, Using Pump Free-Wheel	20-12
-------------------------------------	-------

W

Warranty, product	90-1
Wheel Hardware, Tightening Drive	65-2
Wheels, Adjusting Mower Deck Anti-Scalp	20-4
Wheels, Removing and Installing Rear Drive	65-1

