

Radar Sensor



JOHN DEERE

OPERATOR'S MANUAL

Window

OMPFP27660 ISSUE B6 (ENGLISH)

John Deere Ag Management Solutions
Edition



Introduction

Foreword

THANK YOU for purchasing a John Deere product.

READ THIS MANUAL carefully to learn how to operate and service your product correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your product may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your product and should remain with the product when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the machine or implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Operator's Manual. Accurately record all the numbers to help in tracing the product should it be stolen. Your dealer also needs these numbers when you order parts. File a backup of the identification numbers in a safe location off the machine or away from the product.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate or statement which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.

If you are not the original owner of this product, it is in your interest to contact your local John Deere dealer to inform them of this unit's serial number. This will help John Deere notify you of any issues or product improvements.

John Deere Technical Information Bookstore

Product functionality may not be fully represented in this document due to product changes occurring after time of printing. Read the latest Operator's Manual prior to operation. To obtain a copy, see dealer or visit techpubs.deere.com.

CZ76372,000071F-19-04AUG25

Serial Number: _____

JS56696,0000C4C-19-01AUG25

Contents

	Page
Safety	
Recognize Safety Information	03-1
Understand Signal Words	03-1
Follow Safety Instructions	03-1
Practice Safe Maintenance	03-2
Handle Electronic Components and Brackets Safely	03-2
Use Electronic Display Properly	03-2
Avoid Exposure to High Radio Frequency Fields	03-3
Disclosures	
Identify Date Code	04-1
EU Declaration of Conformity	04-2
Eurasian Economic Union – EAC	04-3
Independent Communications Authority of South Africa (ICASA)	04-5

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Safety

Recognize Safety Information



T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-03OCT22

Follow Safety Instructions



TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-01AUG22

Understand Signal Words



▲ WARNING

▲ CAUTION

TS187—19—30SEP88

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL-19-05OCT16

Practice Safe Maintenance



TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine and secure the machine. If equipped, remove the key, disconnect the battery, and allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-20JAN26

Handle Electronic Components and Brackets Safely



TS249—UN—23AUG88

Falling while installing or removing electronic components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.

DX,WW,RECEIVER-19-24AUG10

Use Electronic Display Properly

Electronic displays are secondary devices intended to aid the operator in performing field operations, increase comfort and provide entertainment. Displays offer a wide range of functionality, are used in many different machine system applications and can be used with other secondary devices such as handheld electronic devices.

A secondary device is any device that is not required to operate your machine for its primary use. The operator is always responsible for safe operation and control of the machine.

To prevent injury while operating the machine:

- Position the display according to the installation instructions. Ensure that the device is secured and does not obstruct the driver's view or interfere with the machine operating controls.
- Do not become distracted by the display. Stay alert. Pay attention to the machine and surrounding environment.
- Do not change settings or access any functions that require prolonged use of the display controls while machine is moving. Stop the machine in a safe

location and place in park position before attempting such operations.

- Never set the volume so high that you cannot hear outside traffic and emergency vehicles.

To promote safe operation, certain functions of displays may be disabled unless the machine movement is restricted and/or has been placed in the park position. Overriding this safety feature may violate applicable law and can result in damage, serious injury, or death.

Only use available display functionality when conditions permit you to do so safely and in accordance with instructions provided. Always observe safe driving rules, state, or local laws and traffic regulations when using any secondary device.

DX,ELEC,DISPLAY-19-13JAN15

Avoid Exposure to High Radio Frequency Fields



PC12632—UN—04JUN10

Prevent injury from exposure to high radio frequency fields at the Radar Sensor. Do not touch the radar while the system is transmitting.


Always disconnect power to the radar before installing or servicing.

The Radar Sensor should always be separated from the operator or nearby persons by a minimum distance of 20 cm (7.9 in).

ck71239,1769797929401-19-30JAN26


Disclosures

Identify Date Code

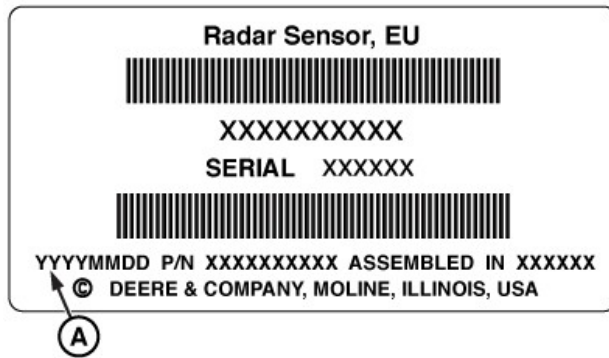

PC701286—UN—29JAN26

Product Label

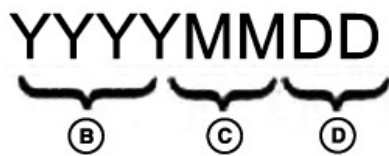

PC25149—UN—20DEC17

Date Code

A—Date Code (Date of Manufacture)

B—Year of Manufacture

C—Month of Manufacture

D—Day of Manufacture

Use the date code (A) on the product label to identify the date of manufacture. “YYY” (B) identifies the year of manufacture; “MM” (C) identifies the month of manufacture; “DD” (D) identifies the day of manufacture.

NOTE: The month number of manufacture ranges between 01-12.

The day number of manufacture ranges between 01-31.

Date Code		
YYY	Year of Manufacture	Example: 2011, 2012, 2013....
MM	Month Number for Year of Manufacture	Example: 01, 02, 03...12
DD	Day Number for Month of Manufacture	Example: 01, 02, 03...31

CH177NN,1769693237970-19-29JAN26

EU Declaration of Conformity

Deere & Company
Moline, Illinois, U.S.A.

The undersigned hereby declares that:

Product Name(s): Radar Sensor
Model(s): PH85241786

fulfill(s) all relevant provisions and essential requirements of the following directives:

DIRECTIVE	NUMBER	CERTIFICATION METHOD
Radio Equipment Directive (RED)	2014/53/EU	Annex II of the Directive
Electromagnetic Compatibility Directive	2014/30/EU	Annex II of the Directive
Low Voltage Directive	2014/35/EU	Annex III of the Directive

The product is in conformity with the following standards and/or other normative documents:

ISO 14982:2009	IEC 62368-1
EN ISO 13788-1:2018	EN 300 440-2 V2.1.1
EN 55035:2017/A11:2020	EN 62311
EN301 489-1 V2.2.3	EN 55032:2012/AC:2013
EN301 489-3 V2.1.1	

Name and address of the person in the European Community authorized to compile the technical construction file:

John Deere Walldorf
GmbH & Co. KG
Customer Support
Impexstraße 3
D-69190 Walldorf
EUConformity@John-
Deere.com

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Place of Declaration: Fargo, ND, USA
Date of Declaration: 19 September 2025
Manufacturing Unit: Deere & Company, Moline, IL 61265

Signed: Micheal Schlichtmann
Name: Micheal Schlichtmann
Title: Engineering Manager, Controller & Sensor
Modules



DXCE01—UN—28APR09

CH177NN,1767684513763-19-06JAN26

Eurasian Economic Union – EAC

Radar Sensor, EU

Eurasian Economic Union

Information for products that have a mark of conformity with the requirements of the EAEU technical regulations

Manufacturer: Deere & Company, One John Deere Place, Moline, IL, 61265-8098, USA

Product: Radar Sensor

Model: PH85241786

Factory:

- ISG – Fargo (Plant), 1441 44th Street NW, Fargo, ND 58102, USA
- ISG – Torreon, Boulevard Ferropuertos #305, Parque Industrial Ferropuertos Torreon, Coahuila 27400, Mexico

Name and address of the authorized representative in the territory of the Eurasian Economic Union:

"Central Laboratory" LLP.

Address: Bogenbai Batyra street, 248, office 28, 3rd floor, 050000, Almaty, Kazakhstan.

For technical support, please contact your dealer.



Radar Sensor EAC in English

PC701290—UN—09FEB26

Радар датчигі, ЕО

Еуразиялық Экономикалық Одақ

ЕАЕУ техникалық шарттарының талаптарына сәйкестік белгісі бар өнімдер туралы ақпарат

Өндіруші: Deere & Company, One John Deere Place, Moline, IL, 61265-8098, АҚШ

Өнім: Радарлық сенсор

Үлгі: PH85241786

Зауыт:

- ISG - Fargo (зауыт) 1441 44-ші Солтүстік Фарго көшесі, Солтүстік Дакота, 58102 АҚШ

- ISG - Torreon Ferropuertos бульвары #305, Parque Industrial Ferropuertos Torreon, Coahuila 27400 Мексика

Еуразиялық Экономикалық Одақ аумағындағы уәкілетті өкілдің атауы мен мекенжайы:

“Орталық зертхана” ЖШС.

Мекенжайы: Қазақстан Республикасы, Алматы, 050000, Бөгенбай батыр көшесі, 248, кеңсі 28, 3-қабат.

Техникалық қолдау алу үшін дилерге хабрласыңыз.



Radar Sensor EAC in Kazakh

PC701289—UN—09FEB26

Радиолокационный датчик, для стран ЕС

Евразийский экономический союз

Информация о продукции, имеющей знак соответствия требованиям технических регламентов ЕАЭС

Изготовитель: Deere & Company, One John Deere Place, Moline, IL, 61265-8098, USA (США)

Изделие: радиолокационный датчик

Модель: PH85241786

Завод:

— ISG — Fargo (Plant), 1441 44th Street NW, Fargo, ND 58102, USA (США)

— ISG — Torreon, Boulevard Ferropuertos #305, Parque Industrial Ferropuertos Torreon, Coahuila 27400, Mexico (Мексика)

Наименование и адрес уполномоченного представителя на территории Евразийского экономического союза:

ТОО "Центральная лаборатория".

Адрес: ул. Богенбай Батыра, д. 248, каб. 28, 3-й этаж, 050000, Алматы, Казахстан.

Для получения технической поддержки обращайтесь к дилеру, обслуживающему вашу организацию.



Radar Sensor EAC in Russian

PC701291—UN—09FEB26

CH177NN,1767684523460-19-06FEB26

Independent Communications Authority of South Africa (ICASA)



ICASA Certificate

PC701288—UN—05FEB26

CH177NN,1767684526903-19-04FEB26

Index

E

Electronic display, use properly 03-2

S

Safety

 Safe maintenance, practice 03-2

Signal words, understand..... 03-1