

S760, S770, S780, S785, S790, and HillMaster™ Combines

(Serial No. 135000 -)



JOHN DEERE

OPERATOR'S MANUAL

**S760, S770, S780, S785, S790, and
HillMaster™ Combines**

OMDXE12474T ISSUE G2 (ENGLISH)

John Deere Orenburg
European Edition
PRINTED IN U.S.A.

Introduction

Trademarks

Trademarks	
Active Terrain Adjustment™	Trademark of Deere & Company
ActiveVision™	Trademark of Deere & Company
ActiveYield™	Trademark of Deere & Company
AdBlue™	Trademark of VDA, the German Association of the Automotive Industry
AutoTrac™	Trademark of Deere & Company
Bluetooth®	Trademark of Bluetooth SIG
Break-In™	Trademark of Deere & Company
ClimaTrak™	Trademark of Deere & Company
Combine Advisor™	Trademark of Deere & Company
ComfortCommand™	Trademark of Deere & Company
CommandARM™	Trademark of Deere & Company
CommandCenter™	Trademark of Deere & Company
CommandTouch™	Trademark of Deere & Company
Cool-Gard™	Trademark of Deere & Company
CoolScan™	Trademark of Deere & Company
Dial-A-Speed™	Trademark of Deere & Company
Extreme-Gard™	Trademark of Deere & Company
GreenStar™	Trademark of Deere & Company
Harvest Monitor™	Trademark of Deere & Company
HarvestSmart™	Trademark of Deere & Company
HillMaster™	Trademark of Deere & Company
Hy-Gard™	Trademark of Deere & Company
HydraFlex™	Trademark of Deere & Company
John Deere	Trademark of Deere & Company
Kondex® Revolution™	Trademark of Kondex Corporation
MaxRound™	Trademark of Kondex Corporation
MaxThresh™	Trademark of Kondex Corporation
Oilscan™	Trademark of Deere & Company
Plus-50™	Trademark of Deere & Company
Posi-Torq™	Trademark of Deere & Company
PowerCast™	Trademark of Deere & Company
ProDrive™	Trademark of Deere & Company
RIVNUT®	Trademark of Böllhoff Inc.
RowSense™	Trademark of Deere & Company
SERVICEGARD™	Trademark of Deere & Company
SiriusXM™	Trademark of Sirius XM Radio Inc.
Torq-Gard™	Trademark of Deere & Company
TriStream™	Trademark of Deere & Company
VisionTrak™	Trademark of Deere & Company

OUC6075,0005245-19-09JUN22

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and

inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 20 to 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS COMBINE IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS COMBINE SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this combine will relieve the manufacturer of all liability for any resulting damage or injury.

REGISTER USED PRODUCTS. If you purchased used John Deere products from an authorized John Deere dealer, the warranty registration information was updated by the dealer and requires no further information on your part.


If you purchased any used John Deere product from an auction, through a trader or from a farmer, please register it now. John Deere and John Deere dealers value their customer's safety and satisfaction. Your local John Deere dealer is best equipped and anxious to provide you superior levels of support for your machine. Please enter your product details and your address online, using the John Deere website corresponding to your country. Then select the dealer of your choice and you will receive a voucher for a discount towards a qualifying purchase of John Deere parts.

A Message to Our Customers

We appreciate the confidence placed in us by the purchase of this machine. To ensure that the machine performs at the highest level, countless hours were spent designing and testing, before this machine was produced. To achieve the maximum performance, it is imperative that this machine is operated in accordance with the procedures outlined in this manual.


Information in this manual is divided into sections. The section names are identified in the table of contents and at the top of each page. Each section has a unique number and page count. Specific information within each section is organized into topics identified with bold headings.

The topic headings are listed in the table of contents with the section number and page number where the topic begins. Topics and information related to each topic are also referenced in the index along with the section and page number.

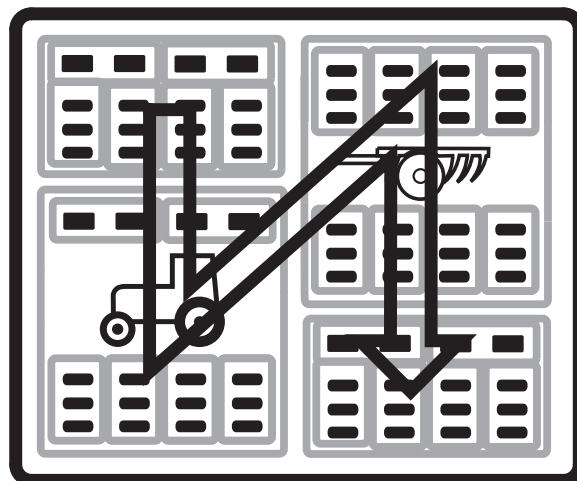

A100767—UN—07JUN18

The topic content flows down the left-hand side, then over and down the right-hand side, and repeats on the next page. Images precede the related text in the flow.

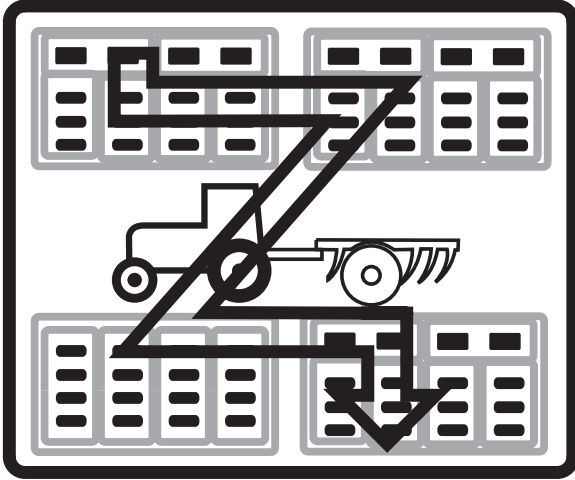

A100768—UN—07JUN18


The flow can divide both before and after the images and tables that span the width of a page.

Review this manual often to learn where to look for information.

Thanks again for purchasing this machine.

OUO6075,00049D4-19-08JUN18

Download Instructions

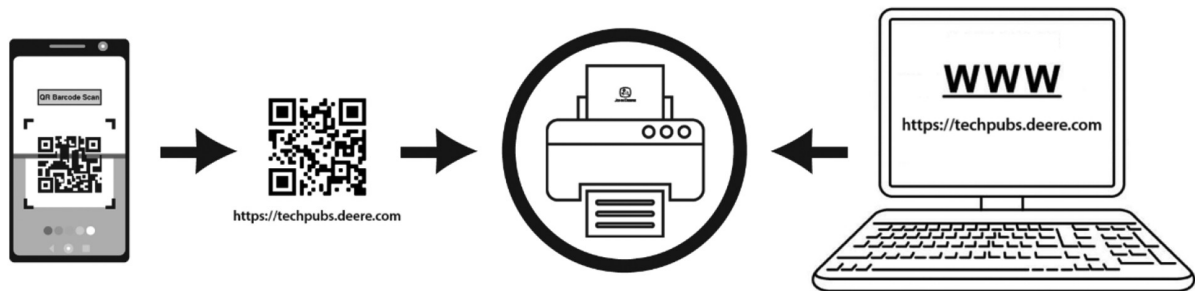

Instructions, manuals, and other documents may be downloaded at [www.techpubs.deere.com](https://techpubs.deere.com). Scanning the QR code on a mobile device will route to the site automatically.

Les instructions, les manuels et autres documents peuvent être téléchargés à cette adresse: [www.techpubs.deere.com](https://techpubs.deere.com). Scanner le QR code via un appareil mobile mène automatiquement au site.

Istruzioni, manuali e altri documenti possono essere scaricati su [www.techpubs.deere.com](https://techpubs.deere.com). La scansione del codice QR su un dispositivo portatile indirizza automaticamente al sito.

Anleitungen, Handbücher und andere Dokumente können unter [www.techpubs.deere.com](https://techpubs.deere.com) heruntergeladen werden. Durch Scannen des QR-Codes mit einem Mobilgerät wird man automatisch zur Webseite weitergeleitet.

Las instrucciones, los manuales y otros documentos se pueden descargar en [www.techpubs.deere.com](https://techpubs.deere.com). Al escanear el código QR en un dispositivo móvil, se abrirá automáticamente el sitio web.

Instruções, manuais e outros documentos podem ser baixados em [www.techpubs.deere.com](https://techpubs.deere.com). A leitura do código QR em um dispositivo móvel levará você automaticamente para o site.

Инструкции, руководства и другие документы можно загрузить на странице [www.techpubs.deere.com](https://techpubs.deere.com). Сканирование QR-кода на мобильном устройстве будет автоматически отправлять на сайт.

TS1746—UN—26APR21
DX.DOWNLOADINSTRUCTIONS.AT-19-27APR21

Emissions Performance and Tampering

Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system will void the European Union (EU) type approval and applicable emissions-related warranties.

DX,EMISSIONS,PERFORM-19-12JAN18

Identification View



H115702—UN—31AUG15
OUO6075,000413D-19-31AUG15

Contents

	Page		Page
Safety Features		Support Machine Properly	10-13
Machine Safety Features	05-1	Store Attachments Safely	10-13
Safety		Service Drive Belts Safely	10-13
Recognize Safety Information	10-1	Handle Electronic Components and Brackets Safely	10-14
Understand Signal Words	10-1	Avoid Backover Accidents	10-14
Follow Safety Instructions	10-1	Backup Alarm	10-14
Driving the Machine	10-1	Emergency Exit	10-14
Operator Ability	10-2	Handling Batteries Safely	10-15
Observe Road Traffic Regulations	10-2	Clean Exhaust Filter Safely	10-15
Check Machine Safety	10-2	Avoid Hot Exhaust	10-16
Use Handholds and Steps	10-2	Operator Presence System and Rotational Alarm System	10-16
Keep Riders and Children Off Machine	10-2		
Ballasting for Safe Ground Contact	10-3	Safety Signs	
Roadway Transport with Header Attached	10-3	Pictorial Safety Signs	15-1
Avoid Electrical Power Lines	10-3	Replace Safety Signs	15-1
Parking and Leaving the Machine	10-3	Front View Decals	15-1
Work In Ventilated Area	10-4	Left-Hand View Feeder House Decals	15-4
Handle Fuel Safely—Avoid Fires	10-4	Left-Hand Cab View Decals and Cab Ladder Decals	15-6
Prepare for Emergencies	10-4	Left-Hand View Decals	15-7
Handle Starting Fluid Safely	10-4	Left-Hand View Decals Continued	15-9
In Case of Fire	10-5	Left-Hand View Residue Decals (Chopper)	15-11
Avoid Static Electricity Risk When Refueling	10-5	Left-Hand View Residue Decals (Spreader)	15-12
Wear Protective Clothing	10-6	Rear View Decals and Engine View Decals	15-13
Stay Clear of Harvesting Units	10-6	Right-Hand View Residue Decals (Chopper)	15-15
Keep Hands Away From Knives	10-6	Right-Hand View Residue Decals (Spreader)	15-16
Use Safety Lights and Devices	10-6	Right-Hand View Decals	15-17
Use Seat Belts	10-7	Right-Hand Cab View Decals and Right-Hand View Decals Continued	15-20
Heated and Ventilated Operator's Seat	10-7	Right-Hand View Feeder House Decals	15-22
Instructional Seat	10-7	Top View Decals	15-24
Transport Combine With Header Safely	10-7		
Prevent Machine Runaway or Unexpected Movement	10-8	Operator's Station	
Practice Safe Maintenance	10-8	Radio Types (Optional)	20-1
Welding Near Electronic Control Units	10-8	After Market Radios	20-1
Remove Paint Before Welding or Heating	10-9	Program Radio for Local Area Frequency	20-1
Avoid Heating Near Pressurized Fluid Lines	10-9	Radio Controls	20-2
Avoid Contact With Moving Parts	10-9	Radio Antenna (Style A)	20-2
Cleaning Grain Tank and Removal of Blockages Safely	10-9	Radio Antenna (Style B)	20-2
Stay Clear of Rotating Drivelines	10-10	Communications/CB Radio Wiring	20-3
Install All Shields and Guards	10-10	Communications/CB Radio Mounting	20-3
Avoid High-Pressure Fluids	10-10	Cab Ladder Positions	20-4
Do Not Open High-Pressure Fuel System	10-10	Fire Extinguisher (Europe)	20-5
Service Accumulator Systems Safely	10-11	Fire Extinguishers (Australia and New Zealand)	20-6
Protect Against High Pressure Spray	10-11	Fire Extinguishers (Eurasian Economic Union)	20-6
Follow Tire Recommendations	10-11	Fire Extinguisher Locations	20-7
Service Tires Safely	10-11	Handrails and Right-Hand Landing Access	20-7
Decommissioning — Proper Recycling and Disposal of Fluids and Components	10-12		
Service Cooling System Safely	10-12		
Remove Accumulated Crop Debris	10-13		

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Break-In Service

Breaking-In Engine	25-1
Belt Drives Adjustment - First 50 Hours	25-3
Break-In Check Before First 100 Hours	25-3
Break-In Service After 100 Hours (Tier 2/ Stage II)	25-4
Break-In Service After 400 Hours (Final Tier 4/Stage V)	25-4

Prestarting Checks

Engine Oil Level	30-1
Hydrostatic/Hydraulic Oil Level	30-2
Coolant Level	30-2
Fuel System	30-3
Fuel Tank Breather	30-4
Diesel Exhaust Fluid (DEF) Tank Breather (Final Tier 4/Stage V)	30-4
Engine Air Scoop Positions	30-4
Position Engine Air Scoop (Standard Field Position)	30-5
Position Engine Air Scoop (Extended Field Position)	30-6
Position Engine Air Scoop (Transport Position)	30-7
Cleaning Engine Compartment	30-8

Operating the Engine

Clean Exhaust Filter Safely	35-1
Avoid Hot Exhaust	35-1
Aftertreatment Indicators Overview	35-2
Required Machine Stop Warning	35-3
Object Detection Sensor (Final Tier 4/Stage V)	35-4
Starting the Engine	35-4
Stopping the Engine	35-5
Engine Speed Management (ProDrive™ Machines)	35-5
Handle Starting Fluid Safely	35-6
Cold Weather Starting Aid (If Equipped)	35-6
Coolant Heater	35-6

CommandCenter™ Display Information

Generation 4 Display	40-1
----------------------------	------

CommandCenter™ Display Applications

CommandCenter™ Display Applications	45-1
---	------

Controls Setup Application

Access Controls Setup	45-A-1
Controls Setup Overview	45-A-1
Controls Setup Assignments	45-A-2
Controls Setup Status Indicators	45-A-3
Multi-Function Lever — Controls Setup	45-A-3
CommandARM — Controls Setup	45-A-5
Create Single Position Assignments	45-A-6
Create Dual Position Assignments	45-A-6
Scroll Wheel and Scroll Press Button	45-A-7
Application Function Assignments	45-A-7

Residue Management Application

Access Residue Management	45-B-1
Residue Management Main Page	45-B-1
Residue Mode	45-B-3

Separator Vane	45-B-3
Width	45-B-4
Speed	45-B-4
Direction	45-B-5
Swap	45-B-6
Out-of-Cab Adjustments	45-B-6
Knife Bank	45-B-7
Auto Swap	45-B-7

Header Application

Access Header	45-C-1
Header Main Page	45-C-1
Header Details	45-C-3
Width	45-C-4
Width Corn Head	45-C-5
Row Width	45-C-5
Minimum Reel Speed	45-C-5
Work Recording	45-C-6
Hours	45-C-6
Raise/Lower Speed	45-C-7
Tilt Speed	45-C-8
Height Sensitivity	45-C-9
Tilt Sensitivity	45-C-10
Fore/Aft Tilt	45-C-11
Auto Header Control	45-C-12
Control Preview	45-C-12
Header Automation	45-C-12
Height Resume	45-C-13
Height Sensing — Off Ground	45-C-15
Height Sensing — On Ground	45-C-16
Height Sensing (Hinged Draper)	45-C-18
Feeder House Float	45-C-20
Lateral Tilt	45-C-21
Resume Preferences	45-C-22
Fore/Aft Resume	45-C-23
Reel Position Resume	45-C-24
Deck Plate Position Resume	45-C-25
Cutterbar Position Resume	45-C-26
Auto Reel Speed	45-C-28
Auto Draper Belt Speed	45-C-29
HydraFlex™ Pressure	45-C-31
Draper Belt Speed	45-C-31
Draper Float Position	45-C-33
Cutterbar Tilt	45-C-33
Deck Plate Spacing	45-C-34
Backshaft Speed	45-C-34
Cutterbar Position	45-C-35
Header Down Force	45-C-36
Gauge Wheels	45-C-37
Advanced Settings	45-C-38
Limp Home Mode	45-C-38
Wing Leveling	45-C-39
Header Down Force Advanced Tuning	45-C-40

Grain Handling Application

Access Grain Handling	45-D-1
Grain Handling Main Page	45-D-1
Advanced Settings	45-D-2
Advanced Settings Grain Level Auto Beacon	45-D-2
Advanced Settings Tank Unloading Offset	45-D-2
Advanced Settings Custom Alarm Level	45-D-3
Grain Level	45-D-3
Moisture Settings	45-D-4

	Page		Page
Moisture Alarm	45-D-4	Transmission Application	
Moisture Correction	45-D-4	Access Transmission	45-I-1
Status Center	45-D-5	Transmission Main Page	45-I-1
Folding Application		Max Speed 1 and 2	45-I-2
Access Folding	45-E-1	Advanced Settings ProDrive™	45-I-2
Folding Main Page	45-E-1	Advanced Settings ProDrive™ Tow Mode	45-I-2
Grain Tank Covers	45-E-2	Advanced Settings ProDrive™ Limp Home Mode	45-I-4
Fountain Auger	45-E-3	Lights Application	
Folding Unloading Auger	45-E-4	Access Lights	45-J-1
Header Transport Position	45-E-5	Lights Main Page	45-J-1
Folding Corn Head (John Deere Models)	45-E-6	Worklights Preset 1—Low-Beam	45-J-2
Folding Corn Head (non-John Deere models)	45-E-7	Worklights Preset 2—Low-Beam	45-J-2
Manual Control	45-E-7	Worklights Preset 1—High-Beam	45-J-3
Harvest Settings Application		Worklights Preset 2—High-Beam	45-J-3
Access Harvest Settings	45-F-1	Exit Lights	45-J-4
Harvest Settings Main Page	45-F-1	Worklights Controls	45-J-4
Load Harvest Settings	45-F-2	Calibrations Application	
Load Harvest Settings Preset	45-F-3	Access Calibrations and Procedures	45-K-1
Load Harvest Settings Threshing Conditions	45-F-4	Calibrations and Procedures Overview	45-K-1
Load Harvest Settings Straw Conditions	45-F-5	Mass Flow Vibration	45-K-2
Load Harvest Settings Save Preset	45-F-6	Mass Flow Vibration Calibration Procedure	45-K-2
Load Harvest Settings Save Preset Factory Default	45-F-6	Moisture Sensor	45-K-2
Load Harvest Settings Save Preset Custom Preset	45-F-6	Moisture Sensor Procedure	45-K-2
Load Harvest Settings Effects of Crop Change	45-F-7	Threshing Clearance (STS Electric)	45-K-3
Current Settings Threshing Clearance	45-F-7	Threshing Clearance Calibration (STS Electric) Procedure	45-K-3
Current Settings Threshing Speed	45-F-8	Yield Calibration	45-K-4
Current Settings Cleaning Fan	45-F-9	Yield Calibration Quality	45-K-4
Current Settings Chaffer Clearance	45-F-10	Yield Status Indicator	45-K-5
Current Settings Sieve Clearance	45-F-10	Yield Record Sample	45-K-5
Current Settings Outside Configuration	45-F-11	Yield Match Scale Weight	45-K-6
Current Settings Adjustment States	45-F-12	Yield Advanced Settings	45-K-7
Advanced Settings	45-F-13	Yield Calibration Quality Indicator	45-K-7
Advanced Settings Separator Resolution	45-F-13	Yield Collected Sample Status	45-K-8
Advanced Settings Shoe Resolution	45-F-14	Yield Mass Flow Rate	45-K-8
Performance Target	45-F-15	Yield Weight Indicator	45-K-9
Engine Application		Yield Recording Status	45-K-9
Access Engine	45-G-1	Yield Reset	45-K-9
Engine Main Page	45-G-1	Yield Edit/Select Calibration	45-K-10
Engine Power	45-G-2	Yield Advanced Edit	45-K-11
Exhaust Filter System Overview	45-G-3	Yield Delete Unused Samples	45-K-11
AUTO Exhaust Filter Cleaning	45-G-3	ActiveYield™	45-K-12
Parked Filter Cleaning	45-G-4	ActiveYield™ Status Indicator	45-K-12
Disable AUTO Exhaust Filter Cleaning	45-G-5	ActiveYield™ Advanced Settings	45-K-13
Engine Cool Down In Progress	45-G-5	ActiveYield™ Reset	45-K-13
Debris Management Filter Capacity	45-G-6	ActiveYield™ Calibration Correction	45-K-14
Air Compressor	45-G-6	Chassis Tilt	45-K-15
Air Compressor Status	45-G-7	Chassis Tilt Calibration Procedure	45-K-15
HVAC Application		Threshing Clearance (Hydraulic)	45-K-15
Access HVAC	45-H-1	Threshing Clearance Calibration (Hydraulic) Procedure	45-K-16
Heating, Ventilation, and Air Conditioning (HVAC) Main Page	45-H-1	Unloading Auger Engage	45-K-16
Set Temperature	45-H-2	Unloading Auger Engage Calibration Procedure	45-K-16
Fan Speed	45-H-2	Deck Plate Spacing	45-K-17
Air Flow Mode	45-H-3	Deck Plate Spacing Calibration Procedure	45-K-17
Air Conditioning (A/C)	45-H-3	Feeder House Raise Speed	45-K-17
Outside Temperature	45-H-3	Feeder House Raise Speed Calibration Procedure	45-K-18
		Header Calibration	45-K-18
		Header Calibration Procedure	45-K-18

Contents

Page

Extendable Platform Header Self-Test	45-K-19
Extendable Platform Header Self-Test Calibration Procedure	45-K-19
Feeder House Tilt Fore/Aft Range	45-K-19
Feeder House Tilt Fore/Aft Range Calibration Procedure	45-K-20
Feeder House Lateral Tilt Range	45-K-20
Feeder House Lateral Tilt Range Calibration Procedure	45-K-20
Feeder House Lateral Tilt Speed	45-K-21
Feeder House Lateral Tilt Speed Calibration Procedure	45-K-21
Wings (Folding Corn Head)	45-K-21
Wings (Folding Corn Head) Calibration Procedure	45-K-21
Reel and Cutterbar Position	45-K-22
Reel and Cutterbar Position Calibration Procedure	45-K-22
Amber Flasher	45-K-23
Amber Flasher Calibration Procedure	45-K-23
Concave Air Removal	45-K-23
Concave Air Removal Calibration Procedure	45-K-23
Concave Leveling	45-K-24
Concave Leveling Calibration Procedure	45-K-24
Header Suspension Service Mode	45-K-24
Header Suspension Service Mode Procedure	45-K-25
Header Suspension Service Mode Pressure Control	45-K-25
Hinged Draper Wing Position	45-K-26
Hinged Draper Wing Position Calibration Procedure	45-K-26
Gauge Wheel Range	45-K-26
Gauge Wheel Range Calibration Procedure	45-K-27
Gauge Wheel Speed	45-K-27
Gauge Wheel Speed Calibration Procedure	45-K-27
Windscreen Position	45-K-28
Windscreen Position Calibration Procedure	45-K-28

Combine Advisor™ Application

Access Combine Advisor™	45-L-1
Combine Advisor™ Main Page	45-L-1
Advanced Settings	45-L-3
Grain System Video	45-L-3
History	45-L-4
Performance	45-L-4
Active	45-L-5
Completed	45-L-6
Offset Details	45-L-7
Adjustment Details	45-L-8
Lens Debris	45-L-8
Automation Status	45-L-9
HarvestSmart™ Settings	45-L-9
Speed Limit	45-L-10
Response Aggressiveness	45-L-11
HarvestSmart™ Automation	45-L-11
Engine Power Target	45-L-12
Active Terrain Adjustment™ Settings	45-L-13
Uphill Sensitivity	45-L-14
Downhill Sensitivity	45-L-14
HarvestSmart™ Status	45-L-15
Active Terrain Adjustment™ Status	45-L-16
Auto Maintain Status	45-L-17
Optimize Performance	45-L-18
Offset Tuning Chaffer	45-L-18

Page

Offset Tuning Sieve	45-L-19
Cannot Maintain Target	45-L-20
Offset Tuning Cleaning Fan	45-L-20
Set Performance Target	45-L-21
Performance Issues	45-L-22
Separator Losses	45-L-23
Shoe Losses	45-L-23
Unthreshed Losses	45-L-23
Broken Grain	45-L-23
Light Foreign Material	45-L-23
Heavy Foreign Material	45-L-23
Unthreshed Material	45-L-23
Straw Quality Issues	45-L-23
Excess Tailings	45-L-23
Solutions	45-L-24
Ground Speed Adjustment	45-L-24
Separator Vane Adjustments	45-L-25
Out-of-Cab Adjustments	45-L-26
Auto Maintain Settings	45-L-27
Response Aggressiveness	45-L-28
Grain Loss Sensitivity	45-L-28
Broken Grain Sensitivity	45-L-28
Foreign Material Sensitivity	45-L-29

Combine Overview

Combine Overview	45-M-1
Front Console	45-M-2
Corner Post Display	45-M-3
CommandARM™ Console and Display	45-M-6
Multi-Function Lever	45-M-6
Navigation Bar	45-M-8
Right-Hand Cab Items	45-M-9
Left-Hand Cab Items	45-M-11
Overhead Controls	45-M-11
Seat Controls	45-M-12
Key Switch	45-M-12
Adjusting Steering Wheel	45-M-13
Operate Lights	45-M-13
Operate Turn Signals, Horn and High and Low Beam	45-M-13
Operate Windshield Wiper and Washer	45-M-14
Operate Ether Injection (If Equipped)	45-M-15
ComfortCommand™ Operators Seat (Basic Seat)	45-M-15
ComfortCommand™ Operators Seat (Premium Cloth Seat)	45-M-16
ComfortCommand™ Operators Seat (Ultimate Leather Seat)	45-M-17
Seat Belts	45-M-19
Instructional Seat	45-M-20
Harvesting Controls	45-M-20
HVAC	45-M-22
Radio	45-M-22
Engine and Ground Drive	45-M-22
Lights	45-M-24
Console and Display	45-M-24
Feeder House Reverser	45-M-25
Belt Pickup Cleanout	45-M-25
Header Engage	45-M-26
Separator Engage	45-M-27
Threshing Clearance Adjust	45-M-27
Threshing Speed Adjust	45-M-28
Cleaning Fan Speed Adjust	45-M-28
Chaffer Adjust	45-M-29
Sieve Adjust	45-M-30

	Page		Page
Seek	45-M-30	Feeder House Top Shaft Sprockets	55-11
Push Button Shift Gear (If Equipped)	45-M-31	Feeder House Variable Speed Drive Belt—	
ProDrive™ (If Equipped)	45-M-31	Replacing	55-11
Road Transport Disconnect	45-M-31	Feeder House Variable Speed Drive Belt—	
Four-Wheel Drive (If Equipped)	45-M-32	Adjusting	55-13
Differential Lock (If Equipped)	45-M-32	Header Reel/Belt Pickup Pump Belt (Variable	
Park Brake	45-M-32	Speed Feeder House)—Replacing	55-15
High Exhaust System Temperature (HEST)		Header Reel/Belt Pickup Pump Belt (Variable	
Indicator	45-M-33	Speed Feeder House)—Adjusting	55-18
Fuel Level Indicator	45-M-33	Feeder House Fixed Speed Drive Belt—	
Diesel Exhaust Fluid (DEF) Level Indicator	45-M-33	Replacing	55-18
Quick Stop Switch	45-M-33	Feeder House Fixed Speed Drive Belt—	
Unloading Auger Swing Switch	45-M-34	Adjusting	55-19
Unloading Auger Drive Switch	45-M-34	Header Reel/Belt Pickup Pump Belt (Fixed	
AutoTrac™ Resume Button (If Equipped)	45-M-35	Speed Feeder House)—Replacing	55-19
Header Raise/Lower and Tilt Switch	45-M-35	Header Reel/Belt Pickup Pump Belt (Fixed	
Reel Raise/Lower, Reel Fore/Aft (If		Speed Feeder House)—Adjusting	55-21
Equipped) Switch	45-M-35	CommandTouch Multi-Speed Feeder House	
Feeder House Backshaft Speed, Adjustable		Drive Belt—Replacing	55-21
Corn Head Deck Plates (If Equipped)	45-M-36	CommandTouch Multi-Speed Feeder House	
Header Activation Buttons	45-M-36	Drive Belt—Adjusting	55-21
VisionTrak™	45-M-36	Header Reel/Belt Pickup Pump Belt	
		(CommandTouch Multi-Speed Feeder	
Lights and Signals		House)—Replacing	55-22
Lighting Locations (Front and Rear View		Header Reel/Belt Pickup Pump Belt	
Lights)	50-1	(CommandTouch Multi-Speed Feeder	
Lighting Locations (Front and Rear View		House)—Adjusting	55-23
Lights Continued)	50-2	Manual Tilt Indicator (Lateral Tilt System)	55-23
Lighting Locations (Front and Rear View		Attach Multicoupler and Single-Point	
Lights Continued)	50-3	Latching	55-24
Lighting Locations (Left and Right Side View		Attaching and Detaching Header from	
Lights)	50-4	Feeder House	55-25
Lighting Locations (Left and Right Side View		Single-Point Latching—Adjusting	55-26
Lights Continued)	50-5	Level Land Feeder House Lower Cable End	
Lighting Locations (Left and Right Side View		—Adjusting	55-27
Lights Continued)	50-7	Level Land Feeder House—Shim Adjusting	55-28
Lighting Delay/Timeout	50-8	Feeder House Latching Pins (Cleanout)	55-28
		Feeder House Manual Unlatching	55-28
		Shear Screw Location	55-29
Feeder House			
Hydraulic Cylinder Safety Stop	55-1	Shields	
Feeder House Side Shields	55-1	Gull Wing Doors	60-1
Feeder House Doors	55-2	Gull Wing Doors and Shields	60-1
Feed Accelerator Top Access Door	55-2	Gull Wing Door Cylinder Adjustment	60-2
Feeder House Bottom Door and Feed Plate		Toolbox (If Equipped)	60-2
Seal Support (Style A)	55-3	Left-Hand Side Shields	60-2
Feeder House Bottom Door and Feed Plate		Right-Hand Side Shields	60-4
Seal Support (Style B)	55-3	Separator Covers	60-4
Stone Trap	55-4		
Adjust and Set Feeder House Fore/Aft Tilt		Separator	
Frame (Manual Tilt)	55-5	Standard Feed Accelerator Wear Strips—	
Set Feeder House Fore/Aft Tilt Frame Zero		Replacing	65-1
Point (Hydraulic Tilt) (If Equipped)	55-6	Tough Crop Feed Accelerator Wear Strips—	
Feeder House Conveyor Chain—Adjusting	55-7	Replacing	65-1
Feeder House Conveyor Chain Links—		Tine Feed Accelerator Wear Strips—	
Removing	55-8	Replacing	65-2
Feeder House Drum (Manual Tilt)—Height		Tine Feed Accelerator Comb Floor (Rice	
Adjustment	55-8	Machines)	65-2
Feeder House Drum (Hydraulic Tilt) (If		Tine Feed Accelerator Comb Floor (Rice	
Equipped)—Height Adjustment	55-9	Machines)—Removing	65-3
Feeder House Conveyor Speed—Changing	55-9	Feed Accelerator Belt—Replacing	65-5
Feeder House Conveyor Drive Chain Links—		Feed Accelerator Belt—Adjusting	65-6
Removing	55-10	Standard Speed High Capacity Feed	
Feeder House Conveyor Drive Chain—		Accelerator—Changing Speed	65-7
Adjusting	55-11		

	Page		Page
High Speed High Capacity Feed Accelerator		Countershaft Right-Hand Front Belt—	
—Changing To Slow Speed	65-7	Adjusting	65-47
Concave Recommendations	65-8	Countershaft Right-Hand Front Belt—	
Concave Types	65-8	Replacing	65-47
Concave Types (MaxThresh™ and		Countershaft Right-Hand Rear Belt—	
MaxRound™)	65-9	Adjusting	65-47
Separator Grate Spacers	65-9	Countershaft Right-Hand Rear Belt—	
Separator Grate Types	65-10	Replacing	65-48
Separator Grate Covers (If Equipped)	65-10	Cleaning Shoe Air Chutes and Access Door	65-48
Heavy-Duty Welded Separator Grate		Cleaning Shoe Auger Gears—Manual	
Interrupters (If Equipped)	65-11	Cleanout Door (If Equipped)	65-48
Heavy-Duty Cast Separator Grate		Cleaning Shoe Auger Gears—Cleanout Door	
Interrupters (If Equipped)	65-11	(If Equipped)	65-49
Separator Grate Interrupter Locations (If		Shoe, Fan, and Conveyor Auger Belt—	
Equipped)	65-12	Adjusting	65-49
Separator Rail Liners (If Equipped)	65-13	Shoe, Fan, and Conveyor Auger Belt—	
Concave Sector Gear Shear Bolts (Standard		Replacing	65-50
Concave Adjust)	65-13	Cleaning Fan Actuator (Without Active	
Concave Sections (Standard Concave		Terrain Adjustment™)—Adjusting	65-50
Adjust)—Remove and Install	65-14	Cleaning Fan Actuator (Active Terrain	
Concave Sections (Active Concave Isolation)		Adjustment™)—Adjusting	65-50
—Remove and Install	65-17	Cleaning Fan Belt (Without Active Terrain	
Concave Leveling (Standard Concave		Adjustment™)—Replacing	65-51
Adjust)	65-23	Cleaning Fan Belt (Active Terrain	
Concave Leveling (Active Concave Isolation)	65-25	Adjustment™)—Replacing	65-51
Separator Top Cover Vanes (If Equipped)	65-29	Adjustable Front Chaffer (If Equipped)	65-52
Threshing Elements and Tines (TriStream		Fixed Front Chaffer	65-52
Rotor)—Remove and Install	65-29	Chaffer and Sieve—Measuring	65-52
Threshing Element and Separator Tine		General-Purpose Chaffer 30 mm (1-3/16 in)	65-53
Location (TriStream™ Rotor Standard		Deep-Tooth Chaffer 41 mm (1-5/8 in)	65-53
Configuration) (S760 and S770) (Australia		Premium Corn Chaffer 41 mm (1-5/8 in)	65-53
and New Zealand Only)	65-31	Flat-Tooth Comb Chaffer 30 mm (1-3/16 in)	65-54
Threshing Element and Separator Tine		General Purpose Sieve 30 mm (1-3/16 in)	65-54
Location (TriStream Rotor Tough Grain		Deep-Tooth Sieve 30 mm (1-3/16 in)	65-54
Configuration)	65-32	Chaffer/Sieve Adjusting Switch	65-55
Threshing Element and Separator Tine		Dual Zone Adjust Rear Chaffer—Adjusting	65-55
Location (TriStream Rotor Dense Pack		Chaffer/Sieve Elements—Remove and	
Configuration)	65-33	Install	65-56
Threshing Elements and Tines (Variable		Chaffer/Sieve/Return Pan Assemblies	65-58
Stream Rotor)—Remove and Install	65-34	Chaffer/Sieve Motor—Manual Adjust	65-58
Threshing Element and Separator Tine		Clean Grain Elevator Belt—Adjusting	65-59
Location (Variable Stream Rotor Standard		Clean Grain Elevator Belt—Replacing	65-59
Configuration)	65-36	Clean Grain Elevator Conveyor Chain—	
Threshing Element and Separator Tine		Adjusting	65-60
Location (Variable Stream Rotor Dense		Clean Grain Elevator Wear Plates and Door	
Pack Configuration)	65-37	(If Equipped)	65-61
Posi-Torq™ Separator—Dual-Range	65-37	VisionTrak™ Operational Checks	65-61
Separator Drive Sheave Gap—Adjusting	65-38	ActiveVision™ Clean Grain Elevator Camera	
Separator Variable Drive Belt—Replacing	65-39	(If Equipped)	65-62
Auger Bed Dividers	65-39	ActiveVision™ Tailings System Camera (If	
Discharge Beater Belt—Adjusting	65-40	Equipped)	65-62
Discharge Beater Belt—Replacing	65-40	Tailings System Elevator Sensors	65-63
Discharge Beater Wear Strips—Replacing (5		Tailings System Elevator Paddles	65-63
and 10 Wing Style)	65-43	Tailings Elevator Drive Belt—Adjusting (Style	
Standard Discharge Beater Wear Strips—		A)	65-64
Replacing (8 Wing Style)	65-44	Tailings System Elevator Paddle Chain—	
Tough Crop Discharge Beater Wear Strip—		Adjusting	65-64
Replacing	65-45	Upper Tailings Auger Drive Chain—Adjusting	
Overshot Beater Belt (If Equipped)—		(Style A)	65-65
Adjusting	65-45	Tailings System Drive Belt—Adjusting (Style	
Overshot Beater Belt (If Equipped)—		B)	65-65
Replacing	65-46	Tailings System Drive Belt—Replacing (Style	
Overshot Beater (If Equipped)—Wing		B)	65-65
Replacing	65-46	Tailings System Drive Chain—Adjusting	
		(Style B)	65-66

	Page		Page
Tailings System Drive Chain—Replacing (Style B)	65-66	Extra Fine Cut Chopper Blades—Replacing and Configuration	70-18
Tailings System Wear Strips and Rasp Bars —Remove and Install (Style B)	65-67	Middle Splitter Knife—Replacing (Advanced PowerCast™ Tailboard)	70-19
Tailings System Wear Strips and Rasp Bars —Adjusting (Style B)	65-69	Chopper Blades—Centering	70-20
Tailings System Return Concave—Adjusting (Style B)	65-70	Chopper Adjusting Switch	70-21
Tailings System Auger Cleanout Door (Style B)	65-70	Chopper Drive Speeds—Changing	70-21
Drive Belts—Left-Hand	65-71	Tailboard Vanes—Adjusting (Intermediate/Premium Residue)	70-22
Drive Belts—Right-Hand (Style A)	65-72	Tailboard Vanes (Electric Motor)—Adjusting (Intermediate/Premium Residue)	70-22
Drive Belts—Right-Hand (Style B)	65-72	Tailboard Vanes (Electrical Adjust)—Factory Settings (Intermediate/Premium Residue)	70-23
Feed Accelerator—Unplugging	65-73	Advanced PowerCast Spreader Disks—Replacing	70-24
Separator—Unplugging	65-73	Spreader (General Information)	70-25
Discharge Beater—Unplugging	65-73	Spreader—Windrow Position	70-25
Residue Management		Spreader—Lowering	70-26
Residue Material Handling Option (Intermediate/Deluxe Residue)	70-1	Spreader Disks (Single Speed)—Replacing	70-27
Residue Material Handling Option (Premium Residue)	70-1	Spreader Disks (Dual Speed)—Replacing	70-28
Residue Material Handling Option (Straw Spreader)	70-1	Wide Spread Straw Spreader (Optional)	70-28
General Windrowing Information (Intermediate/Deluxe Residue)	70-2	Chopper Drive Belt Tension—Adjusting	70-29
Straw Bumper—Adjusting	70-2	Chopper Belt—Replacing	70-29
Crop Diverter Vanes—Adjusting	70-3	Chopper Jackshaft Belt—Adjusting	70-32
General Windrowing Information (Premium Residue)	70-4	Chopper Jackshaft Belt—Replacing (Style A)	70-33
Windrow Convergence Rakes	70-4	Chopper Jackshaft Belt—Replacing (Style B)	70-35
Tailboard—Adjusting (Deluxe Residue)	70-4	Grain Tank and Unloading System	
Tailboard Vanes (Manual Adjust)—Adjusting (Deluxe Residue)	70-5	Grain Tank/Engine Ladder	75-1
Tailboard Vanes (Electric Motor)—Adjusting (Deluxe Residue)	70-5	Grain Tank Sample Trough	75-1
Tailboard Vanes (Manual Adjust)—Factory Settings (Deluxe Residue)	70-6	Grain Tank Cleanout Doors	75-1
Tailboard Vanes (Electrical Adjust)—Factory Settings (Deluxe Residue)	70-7	Grain Tank Fill Sensors—Adjusting	75-2
PowerCast™ Tailboard—Adjusting (Optional)	70-8	Grain Tank Covers (If Equipped)—Operating	75-2
PowerCast™ Tailboard Blade—Replacing (Optional)	70-8	Grain Tank Covers (If Equipped)—Adjusting	75-3
PowerCast™ Tailboard (Optional) Rear Shrouds	70-9	Grain Tank Cross Auger Covers	75-3
Crop Diverter	70-9	ActiveYield™ (If Equipped) Cross Auger Covers—Removing	75-4
Air Chutes	70-10	ActiveYield™ (If Equipped) Sensor Locations	75-4
Overshot Beater Floor (If Equipped)—Removing (Premium Residue)	70-10	Shear Bolt Location	75-6
Chopper Controller Bar (Optional)	70-11	Unloading Auger Drive Shear Bolt	75-6
Chopper Stationary Knife Bank (Without Electric Actuator)—Adjusting	70-11	Grain Tank Loading Auger Deflector	75-6
Chopper Stationary Knife Bank (Electric Actuator)—Removing (If Equipped)	70-12	Grain Tank Loading Auger (Grain Tank Extensions)—Folding	75-7
Chopper Stationary Knife Bank (Electric Actuator)—Installing (If Equipped)	70-13	Grain Tank Loading Auger (Grain Tank Covers)—Adjusting	75-7
Chopper Stationary Knives (Without Electric Actuator)—Replacing	70-14	Mass Flow Sensor Plate (Grain Tank Extensions)—Cleaning	75-8
Chopper Stationary Knives (Electric Actuator)—Replacing	70-15	Mass Flow Sensor Plate (Grain Tank Covers)—Cleaning	75-9
Chopper Access Door	70-16	Unloading Auger Drive Chain—Adjusting	75-9
Fine Cut Chopper Blades—Replacing and Configuration	70-17	Unloading Auger Drive Chain Links—Removing	75-9
		Unloading Auger Cradle Support—Adjusting	75-10
		Unloading Auger Position—Adjusting (Style A)	75-10
		Unloading Auger Position—Adjusting (Style B)	75-11
		Unloading Auger Lock Arm Positions	75-11
		Unloading Auger Drive Belt—Replacing (Style A)	75-12
		Unloading Auger Drive Belt—Replacing (Style B)	75-13

Service - Electrical System

Welding Near Electronic Control Units	80-1
Keep Electronic Control Unit Connectors Clean	80-1
Observe Electrical Precautions	80-1
Basic Electrical Component Handling / Precautions for Vehicles Equipped with Computer Controlled Systems	80-1
Handling Batteries Safely	80-2
Batteries—Safe Installation	80-3
Battery Cables—Connecting	80-3
Batteries—Charging	80-4
Batteries—Checking Specific Gravity	80-4
Batteries—Connecting Booster	80-5
Batteries—Removing and Installing (Style A)	80-5
Batteries—Removing and Installing (Style B)	80-6
Battery Disconnect Switch	80-6
Machine Fuse Center	80-7
Inline Fuses	80-8
Cab Fuse Center	80-9
Video Safety	80-9
Video Interface Capability	80-9
Adjust Cameras (If Equipped)	80-11
Safety Rules When Replacing Halogen Bulbs	80-11
Halogen Bulb Cab Headlights—Replacing	80-12
Halogen Bulb Cab Headlights—Adjusting	80-12
Halogen Bulb Cab Headlights (High and Low Beam)—Replacing	80-13
Halogen Bulb Cab Headlights (High and Low Beam)—Adjusting	80-13
Light Emitting Diode (LED) Cab Headlights (High and Low Beam) (If Equipped)— Replacing	80-13
Light Emitting Diode (LED) Cab Headlights (High and Low Beam) (If Equipped)— Adjusting	80-14
Halogen Bulb Fascia Lights (If Equipped)— Replacing	80-14
Light Emitting Diode (LED) Fascia Lights (If Equipped)—Replacing	80-15
Lower Driving Lights Bulb (If Equipped)— Replacing	80-15
Lower Driving Lights (If Equipped)— Adjusting	80-15
Light Emitting Diode (LED) Lights (Optional) —Replacing	80-16
Light Emitting Diode (LED) Lights (Optional) —Adjusting	80-17
Replace Beacon Lights (Style A)	80-18
Replace Beacon Lights (Style B)	80-18
Halogen Bulb Work Lights (If Equipped)— Replacing	80-19
Light Emitting Diode (LED) Work Lights (If Equipped)—Replacing	80-19
Halogen Bulb Side Finder Lights and Cleaning Shoe Lights (If Equipped)— Replacing	80-20
Light Emitting Diode (LED) Side Finder Lights and Cleaning Shoe Lights (If Equipped)—Replacing	80-20
Hazard/Marker Lights, Marker/Brake Lights, and Rear Hazard Lights—Replacing	80-21
Cab Interior Light—Replacing	80-21
Map Light—Replacing	80-21

Ground Drive and Rear Axle

Service Tires Safely	85-1
Roadway Transport with Header Attached	85-1
Care and Service of Tires	85-1
Basic Tire Information	85-2
Tire Tread Types	85-2
Front Tire Pressure (S760 and S770)	85-3
Front Tire Pressure (S780, S785, and S790)	85-5
Front Tire Pressure (HillMaster)	85-7
Rear Tire Pressure (S760 and S770)	85-8
Rear Tire Pressure (S780, S785, and S790)	85-9
Rear Tire Pressure (HillMaster)	85-10
Front and Rear Tire Information	85-10
Drive Wheel Starter Stud	85-11
Drive Wheel Bolt Torque	85-11
Front Drive Wheel Offset	85-11
Preparing Dual Wheels for Transport or Service	85-12
Jack Pocket Locations Decal	85-12
Jack Pocket Locations	85-13
Remove Front Wheels	85-14
Install Front Wheels	85-18
Rear Wheel Bolt Torque	85-22
Using Liquid Weight	85-22
Ballast Requirements	85-24
Ballast Requirements (HillMaster)	85-25

Transporting

Roadway Transport with Header Attached	90-1
Driving Machine on Roads	90-1
Transporting Machine on a Trailer	90-4
Machine Tie Down Locations Decal	90-10
Machine Tie Down Locations	90-10
Jack Pocket Locations	90-11
Transport Information	90-11
Towing Machine (Mechanical Shift Transmission Machines)	90-11
Manual Trailer Hitch—Attaching (Standard)	90-12
Semi-Automatic Trailer Hitch—Attaching (Optional)	90-12
Front Tow Hook	90-12
Rear Tow Hook	90-13

Harvesting Hints

Operation at Low Temperatures	95-1
Harvesting Tips	95-1
Auto Header Control Combinations	95-2
Change Tire Radius Code	95-4
Single Point Yield Calibration Or Multi-Point Yield Calibration	95-4

Crop Settings

Alfalfa and Barley	100-1
Canola and Chickpeas	100-2
Corn (Dry) and Corn (Wet)	100-3
Corn Cob Mix and Edible Beans	100-4
Flax and Grass Seed	100-5
Guar (Cluster Beans) and Lentils	100-6
Lupins and Millet	100-7
Mustard and Navy Beans	100-8
Oats and Peas	100-9
Popcorn and Rape Seed (Dry)	100-10
Rape Seed (Green) and Rice	100-11
Rye and Safflower	100-12

	Page		Page
Sorghum and Soybeans	100-13	Fire Extinguishers (Eurasian Economic Union)	115-4
Sunflower and Triticale	100-14	Fire Extinguisher Locations	115-5
Wheat Difficult and Wheat Normal	100-15	In Case of Fire	115-5
Footnotes Description Page	100-15	Cleaning Engine Compartment	115-5
Concave Recommendations	100-16		
Power Shutdown Procedure	100-16	Machine Cleanout	
Payable Moisture and Density Chart	100-18	General Cleaning Guidelines	120-1
Standard Weights Chart	100-18	Quick Response (QR) Code	120-1
		Cleaning Out Machine (Periodic Cleanout)	120-1
HillMaster™ Leveling System (If Equipped)		Cleaning Out Machine (Annual Cleanout and Specialty Crops)	120-7
HillMaster™ System (General Information)	105-1		
HillMaster™ Daily Operation Preparations	105-3	Fuels and Lubricants	
HillMaster™ Leveling Control Switches	105-3	Handle Fuel Safely—Avoid Fires	125-1
John Deere Tracks (If Equipped)		Avoid Static Electricity Risk When Refueling	125-1
Machine Photo	110-1	Fuel Tank—Filling	125-1
Safe Track Operating Practices	110-1	Handling and Storing Diesel Fuel	125-2
Operator's Manual	110-1	Diesel Fuel	125-2
Accumulator	110-1	Biodiesel Fuel	125-3
Cab/Platform Access Ladder	110-1	Lubricity of Diesel Fuel	125-4
Cab Ladder Positions (60.9 cm (24 in) Wide Tracks)	110-2	Supplemental Diesel Fuel Additives	125-4
Cab Ladder Positions (76.2 cm (30 in) and 91.4 cm (36 in) Wide Tracks)	110-2	Testing Diesel Fuel	125-5
Cab Ladder Positions (Fold/Unfold from Ground)	110-3	Minimizing the Effect of Cold Weather on Diesel Engines	125-5
Cab Ladder Positions (Fold/Unfold from Cab Landing)	110-3	Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines	125-6
Track Components	110-5	Testing Diesel Exhaust Fluid (DEF)	125-6
Track Features and Benefits	110-5	Storing Diesel Exhaust Fluid (DEF)	125-7
Operate Track Machines	110-6	Refilling Diesel Exhaust Fluid (DEF) Tank	125-7
Road Transport Speeds	110-7	Disposal of Diesel Exhaust Fluid (DEF)	125-8
Track Tensioning System	110-8	Diesel Engine Coolant (engine with wet sleeve cylinder liners)	125-8
Cleaning Tracks	110-8	John Deere COOL-GARD™ II Coolant Extender	125-9
Track Cleanout Areas	110-8	Operating in Warm Temperature Climates	125-9
Service Interval Chart	110-9	Water Quality for Mixing with Coolant Concentrate	125-9
Belt Care and Conditioning Break-In	110-9	Testing Coolant Freeze Point	125-10
Track Replacement Criteria	110-10	Diesel Engine Break-In Oil — Non-Emissions Certified and Certified Tier 1, Tier 2, Tier 3, Stage I, Stage II, and Stage III	125-10
Hydraulic Oil	110-10	John Deere Break-In Plus™ Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V	125-11
Check Oil	110-10	Diesel Engine Oil — Tier 2 and Stage II	125-12
Change Oil	110-11	Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V	125-12
Specifications	110-13	Diesel Engine Oil Service Interval for Operation at High Altitude	125-13
Track Module Dimensions	110-13	Engine Oil and Filter Service Intervals — Tier 2 and Stage II Engines	125-13
Combine Dimensions	110-14	Engine Oil and Filter Service Intervals — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V Engines	125-13
Dimension Reference Points	110-15	Oilscan™ and CoolScan™	125-14
EC Declaration Of Incorporation Of Partly Completed Machinery	110-16	ProDrive™ Transmission, CommandTouch™ Multi-Speed Feeder House Drive, Hydrostatic Drive System, Main Hydraulic System, and Main Engine Gear Case Oils ..	125-14
UK Declaration Of Incorporation Of Partly Completed Machinery	110-17		
Track Identification Plates	110-18		
Identification Plate Location	110-18		
Fire Prevention			
Recommended Fire Preventions	115-1		
Fire Extinguisher Operation	115-1		
Charge Liquid Fire Extinguisher (Europe, Australia, and New Zealand) (If Required)	115-2		
Handle Fuel Safely—Avoid Fires	115-2		
Prepare for Emergencies	115-2		
Handle Starting Fluid Safely	115-3		
Remove Accumulated Crop Debris	115-3		
Fire Extinguisher (Europe)	115-3		
Fire Extinguishers (Australia and New Zealand)	115-4		

Transmission (Mechanical Shift and Push-Button Shift), Final Drives, Loading Auger, Primary Countershaft, and Two-Speed Separator Drive Gear Case Oils	125-15
Feeder House Reverser Gear Case	125-16
Grease	125-16
Brake Fluid (If Equipped)	125-16
Oil Filters	125-17
Fuel Filters	125-17
Alternative and Synthetic Lubricants	125-17
Lubricant Storage	125-17
Mixing of Lubricants	125-17

Lubrication and Maintenance

Service Interval—Setup or Clearing	130-1
Lubrication Decal Locations	130-1
Hydraulic Hose Replacement	130-1
Hydraulic System Cleanliness	130-1
Accumulator Pressure	130-2
Using High-Pressure Washers	130-2
Using Pressurized Air	130-2
Lubrication Symbols	130-3
Service Your Machine at Specified Intervals	130-3
Important Considerations	130-3

Maintenance—Every 10 Hours

Service Interval Chart—Every 10 Hours	130-A-1
Engine Oil Level	130-A-2
Engine Coolant	130-A-3
Rotary Screen, Oil Cooler, Condenser, Radiator, and Charge Air Cooler	130-A-3
Hydrostatic/Hydraulic Oil	130-A-4
Main Engine Gear Case Oil	130-A-4
Air Compressor Reservoir (If Equipped)	130-A-5
Fuel Precleaner Filter	130-A-5
Two Speed Four-Wheel Drive Motor Pivots (Muddy Conditions)	130-A-5
Two-Wheel Drive Heavy-Duty and Extra Heavy-Duty Axle Spindle Bearings/Pivot Pins (Muddy Conditions)	130-A-5
Final Drive Outer Bearings (Muddy Conditions)	130-A-6
Air Conditioner Drain Hose	130-A-6
Variable Speed Feeder House Reverser Drive Gear Case (S760 and S770 Machines) (Severe Conditions)	130-A-6
Stone Trap	130-A-6
Tailings Elevator Slip Clutch (Tough Crop Conditions) (S780, S785, and S790 Machines)	130-A-7
ActiveVision™ Tailings System Camera (If Equipped)	130-A-7
ActiveVision™ Clean Grain Elevator Camera (If Equipped)	130-A-7
Central Lube Bank (If Equipped) (HillMaster™ Machines)	130-A-7
Final Drive Pivot (Without Central Lube Bank) (HillMaster™ Machines)	130-A-8
Header Tilt Primary Cylinder Pivot Pin (Without Central Lube Bank) (HillMaster™ Machines)	130-A-8
Leveling Cylinder Barrel (Without Central Lube Bank) (HillMaster™ Machines)	130-A-8

Maintenance—Every 50 Hours

Service Interval Chart—Every 50 Hours	130-B-1
Two Speed Four-Wheel Drive Motor Pivots (Normal Conditions)	130-B-2
Two-Wheel Drive Heavy-Duty and Extra Heavy-Duty Axle Spindle Bearings and Pivot Pins (Normal Conditions)	130-B-2
Final Drive Outer Bearings (Normal Conditions)	130-B-2
Variable Speed Feeder House Reverser Drive Gear Case (S760 and S770 Machines) (Normal Conditions)	130-B-2
Feeder House Reverser Drive Gear Case Oil	130-B-3
Variable Speed Feeder House Upper Sheaves (S760 and S770 Machines)	130-B-3
Lateral Tilt Feeder House	130-B-3
Separator Variable Speed Driven/Driver Sheaves	130-B-3
Separator Variable Speed Driven/Driver Sheaves (S770 Optional, S780, S785, and S790 Machines)	130-B-4
Cleaning Fan Variable Upper and Lower Sheaves	130-B-4
Fuel Precleaner Filter	130-B-4
Two-Speed Separator Drive Oil	130-B-5
Water Separator Primary Fuel Filter	130-B-5
Radiator, Charge Air Cooler, Oil Cooler, and Condenser	130-B-5
Mass Flow Sensor	130-B-5
Cab Fresh Air Filter	130-B-6
Moisture Sensor (If Equipped)	130-B-6
Moisture Sensor Bypass Auger (If Required) ..	130-B-6
ActiveVision™ Clean Grain Elevator Camera (If Equipped)	130-B-7
Tailings Sensor Bypass Auger (If Required) ...	130-B-7
ActiveVision™ Tailings System Camera (If Equipped)	130-B-7
Tailings Elevator Slip Clutch (Normal Crop Conditions) (S780, S785, and S790 Machines)	130-B-8
Final Drive Couplers	130-B-8

Maintenance—First 100 Hours

Service Interval Chart—First 100 Hours	130-C-1
Main Engine Gear Case Filter (S760 and S770 ProDrive™ Machines)	130-C-1
Main Engine Gear Case Lube Filter (ProDrive™ Machines)	130-C-1

Maintenance—Every 100 Hours

Service Interval Chart—Every 100 Hours	130-D-1
Tire Pressure and Bolt Torque	130-D-1

Maintenance—Every 200 Hours

Service Interval Chart—Every 200 Hours	130-E-1
Recirculating Filter	130-E-1
Primary Countershaft (Multi-Speed Feeder House on S770, S780, S785, and S790 Machines)	130-E-1
Separator Variable Speed Driven/Driver Sheaves (S760 and S770 Machines)	130-E-2

Maintenance—Every 250 Hours

Service Interval Chart—Every 250 Hours	130-F-1
--	---------

	Page		Page
Engine Oil and Filter (Tier 2/Stage II)	130-F-1	Header Electromagnetic Clutch Nut (Fixed Speed and Variable Speed Feeder House) ..	130-G-5
Engine Oil and Filter (Final Tier 4/Stage V) ...	130-F-2	Multi-Speed Feeder House Drive Gear Case (S770, S780, S785, and S790 Machines)	130-G-16
Fuel Tank Breather	130-F-3	Loading Auger Gear Case Oil	130-G-16
Diesel Exhaust Fluid (DEF) Tank Breather (Final Tier 4/Stage V)	130-F-3	Diesel Exhaust Fluid (DEF) Tank Breather (Final Tier 4/Stage V)	130-G-16
Maintenance—Every 400 Hours		Fuel Tank Breather	130-G-16
Service Interval Chart—Every 400 Hours	130-G-1	Air Filter Elements	130-G-16
Fuel Precleaner Filter	130-G-1	Moisture Sensor (If Equipped)	130-G-17
Water Separator	130-G-2	Moisture Sensor Bypass Auger (If Required)	130-G-17
Primary and Secondary Fuel Filter	130-G-2	ActiveVision™ Clean Grain Elevator Camera (If Equipped)	130-G-17
Variable Speed Driver/Driven Sheaves (Final Tier 4/Stage V) (S760 and S770 Machines)	130-G-3	Tailings Sensor Bypass Auger (If Required) .	130-G-18
Unloading Auger Upper Gear Case	130-G-3	ActiveVision™ Tailings System Camera (If Equipped)	130-G-18
Header/Reel Drive Pump Sheave Bearing	130-G-3	ActiveVision™ Camera Desiccant Cartridge (If Equipped)	130-G-18
Primary Countershaft Universal Joint Spline (Non-Multi-Speed Feeder House)	130-G-4	Maintenance—Every 800 Hours	
Vertical Unloading Auger Upper Gear Case (S780, S785, and S790 Machines)	130-G-4	Service Interval Chart—Every 800 Hours	130-H-1
Chopper/Unloading Driveshaft Bearing	130-G-4	Feeder House Reverser Gear Case	130-H-1
Variable Speed Driver Sheave	130-G-4	Maintenance—Every 1000 Hours	
Feed Accelerator Bearings	130-G-5	Service Interval Chart—Every 1000 Hours (ProDrive™ Machines)	130-I-1
Service Interval Chart—Every 400 Hours (Continued)	130-G-6	Change Main Engine Gear Case Oil	130-I-1
Tailings Auger Drive Slip Clutch (S760 and S770 Machines)	130-G-6	Hydraulic Reservoir Filter (S780, S785, and S790)	130-I-2
Conveyor Auger Drive Slip Clutch	130-G-7	Service Interval Chart—Every 1000 Hours (Continued)	130-I-3
Right-Hand Side Lube Bank	130-G-7	Change Brake Fluid (S760 and S770 Machines)	130-I-3
Overshot Beater Bearings (Optional) (S770, S780, S785, and S790 Machines)	130-G-7	Maintenance—Every 2000 Hours	
Discharge Beater Bearings	130-G-7	Service Interval Chart—Every 2000 Hours	130-J-1
Cleaning Fan Shaft Bearings	130-G-7	Hydraulic/Hydrostatic Reservoir Oil	130-J-1
Rear Axle Tie Rod	130-G-8	Engine Valve Lash	130-J-2
Spreader Disk (If Equipped)	130-G-8	Final Drive Oil	130-J-2
Overshot Beater Gear Case Oil (Optional) (S770, S780, S785, and S790 Machines) ..	130-G-8	Main Engine Gear Case Oil (Non-ProDrive™ Machines)	130-J-2
Separator Drive Oil	130-G-8	Separator Drive Oil	130-J-2
Final Drive Oil	130-G-8	Primary Countershaft Gear Case Oil (Fixed Speed and Variable Speed Feeder House) ..	130-J-3
Service Interval Chart—Every 400 Hours (Continued)	130-G-10	Transmission Oil (Mechanical Shift and Push-Button Shift Transmission)	130-J-3
Transmission Oil (S760 and S770 Non- ProDrive™ Machines)	130-G-11	Overshot Beater Gear Case Oil (Optional) (S770, S780, S785, and S790 Machines) ...	130-J-3
Park Brake Cylinder Cables (S760 and S770 Push-Button Shift Transmission Machines)	130-G-11	Service Interval Chart—Every 2000 Hours (Continued)	130-J-4
Batteries	130-G-11	Check Engine Crankshaft Damper (Final Tier 4/Stage V)	130-J-4
Hydraulic/Hydrostatic Filter (S760 and S770 Machines)	130-G-11	Maintenance—Every 2000 Hours or Three Years	
Hydrostatic Charge Filter	130-G-12	Service Interval Chart—Every 2000 Hours or Three Years	130-K-1
Main Engine Gear Case Filter	130-G-12	Changing Diesel Exhaust Fluid (DEF) Dosing Unit Filter (S780, S785, and S790 Machines)	130-K-1
Engine Debris Management Air Filter (Final Tier 4/Stage V)	130-G-12	Replace Diesel Exhaust Fluid (DEF) In-Line Filter (S780, S785, and S790 Machines) ...	130-K-2
Fire Extinguishers	130-G-13		
Primary Countershaft Gear Case Oil (Fixed Speed and Variable Speed Feeder House Drive)	130-G-13		
Brake Fluid (S760 and S770 Non-ProDrive™ Machines)	130-G-13		
Service Interval Chart—Every 400 Hours (Continued)	130-G-14		
Seat Belts	130-G-15		
ProDrive™/Main Engine Gear Case Lube Filter (ProDrive™ Machines)	130-G-15		
Feeder House Slip Clutch	130-G-15		

Maintenance—Every 3500 Hours or Three Years

Service Interval Chart—Every 3500 Hours or Three Years	130-L-1
Changing Diesel Exhaust Fluid (DEF) Dosing Unit Filter (S760 and S770 Machines)	130-L-1
Replace Diesel Exhaust Fluid (DEF) In-Line Filter (S760 and S770 Machines)	130-L-2

Maintenance—Every 4500 Hours or Five Years

Service Interval Chart—Every 4500 Hours or Five Years	130-M-1
Replace Engine Crankshaft Damper (Tier 2/ Stage II)	130-M-1

Maintenance—Every 6000 Hours or Six years

Service Interval Chart—Every 6000 Hours or Six Years	130-N-1
Engine Cooling System	130-N-1

Maintenance—As Required

Service Interval Chart—As Required	130-O-1
Recirculating Filter	130-O-1
Cab Fresh Air Filter	130-O-1
Windshield Washer Reservoir	130-O-2
Alternator Screen	130-O-2
Moisture Sensor (If Equipped)	130-O-2
Moisture Sensor Bypass Auger (If Required) ..	130-O-3
ActiveVision™ Clean Grain Elevator Camera (If Equipped)	130-O-3
Tailings Sensor Bypass Auger (If Required) ...	130-O-3
ActiveVision™ Tailings System Camera (If Equipped)	130-O-4
ActiveVision™ Camera Desiccant Cartridge (If Equipped)	130-O-4
Fire Extinguisher Bracket Straps (If Equipped)	130-O-5
Clean Windows, Mirrors, and Lights	130-O-5

Maintenance—As Required (Engine Fluids and Filters)

Required Emission-Related Information	130-P-1
Rear Ladder and Landing	130-P-1
Engine Filter Access Cover	130-P-1
Engine Access Covers	130-P-1
Changing Starting Fluid Can	130-P-1
Do Not Modify Engine Power or Fuel/Air System	130-P-2
Fuel System	130-P-2
Diesel Exhaust Fluid (DEF) Tank—Filling (Final Tier 4/Stage V)	130-P-2
Diesel Exhaust Fluid (DEF) Tank—Draining (Final Tier 4/Stage V)	130-P-3
Access Diesel Exhaust Fluid (DEF) Dosing Unit Filter (Final Tier 4/Stage V)	130-P-4
Access Diesel Exhaust Fluid (DEF) In-Line Filter (Final Tier 4/Stage V)	130-P-4
Cleaning Diesel Exhaust Fluid (DEF) Tank	130-P-4
Fuel Tank—Filling	130-P-5
Fuel Tank—Draining	130-P-5
Fuel Tank—Shut-Off Valve	130-P-6

Water Separator Primary Fuel Filter—Draining	130-P-6
Fuel Precleaner Filter—Cleaning	130-P-6
Heavy-Duty Fuel Precleaner Filter (Optional) —Flushing	130-P-7
Heavy-Duty Fuel Precleaner Filter (Optional) —Replacing and Cleaning	130-P-8
Primary and Secondary Fuel Filter Element —Replacing	130-P-8
Fuel System—Bleeding	130-P-10
Cooling System—Draining	130-P-10
Cooling System—Filling	130-P-12
Cooling System—Winterize	130-P-12
Air Cleaner Filters—Removing	130-P-13
Air Compressor System (If Equipped)	130-P-13
Diesel Particulate Filter Maintenance and Service (Final Tier 4/Stage V)	130-P-14
Exhaust Filter / Diesel Particulate Filter Ash Handling and Disposal (Final Tier 4/Stage V)	130-P-15
Exhaust Filter Disposal (Final Tier 4/Stage V) ..	130-P-15
Engine Debris Management Air Filter—Removing (Final Tier 4/Stage V)	130-P-15

Maintenance—As Required (9.0 L Engine Belts)

Engine Belt—Routing (Tier 2/Stage II)	130-Q-1
Engine Accessory/Fan Drive/Air Compressor (If Equipped) Belt—Replacing (Tier 2/ Stage II)	130-Q-1
Rotary Screen Belt—Routing	130-Q-3
Rotary Screen Belt—Replacing	130-Q-3
Rotary Screen Drive Belt—Replacing (Tier 2/ Stage II)	130-Q-4
Engine Belt—Routing (Final Tier 4/Stage V) ..	130-Q-5
Air Conditioner Compressor/Alternator Belt—Replacing (Final Tier 4/Stage V)	130-Q-5
Rotary Screen Drive Belt—Replacing (Final Tier 4/Stage V)	130-Q-7
Vacuum Fan Drive Belt—Replacing (Final Tier 4/Stage V)	130-Q-8
Vacuum Fan Driven Belt—Replacing (Final Tier 4/Stage V)	130-Q-8
Variable Speed Fan Drive Belt—Replacing (Final Tier 4/Stage V)	130-Q-9
Air Compressor Belt (If Equipped)—Replacing (Final Tier 4/Stage V)	130-Q-11
Rotary Screen Brush—Adjustment	130-Q-14
Engine Debris Management Belt—Replacing (Final Tier 4/Stage V)	130-Q-14


Maintenance—As Required (13.5 L Engine Belts)

Engine Belt—Routing (Tier 2/Stage II)	130-R-1
Engine Accessory/Air Compressor (If Equipped) Belt—Replacing (Tier 2/Stage II)	130-R-1
Fan Drive Belt—Replacing (Tier 2/Stage II) ...	130-R-3
Rotary Screen Belt—Routing	130-R-5
Rotary Screen Belt—Replacing	130-R-5
Rotary Screen Drive Belt—Replacing (Tier 2/ Stage II)	130-R-7
Engine Belt—Routing (Final Tier 4/Stage V) ..	130-R-7

	Page		Page
Air Conditioner Compressor/Alternator Belt— Replacing (Final Tier 4/Stage V)	130-R-7	Machine Identification Numbers	
Rotary Screen Drive Belt—Replacing (Final Tier 4/Stage V)	130-R-10	Interpreting Machine Serial Number	150-1
Vacuum Fan Drive Belt—Replacing (Final Tier 4/Stage V)	130-R-11	Identification Numbers	150-1
Air Compressor Belt (If Equipped)— Replacing (Final Tier 4/Stage V)	130-R-11	Combine (Product Identification) Type Plate	150-2
Fan Drive Belt—Replacing (Final Tier 4/ Stage V)	130-R-13	Machine Identification Plate Location	150-2
Rotary Screen Brush—Adjustment	130-R-15	Eurasian Economic Union Compliance Label Location	150-2
Engine Debris Management Belt—Replacing (Final Tier 4/Stage V)	130-R-15	Interpreting Engine Serial Number	150-2
Troubleshooting		Engine Serial Number (Tier 2/Stage II)	150-3
Feeder House	135-1	Engine Serial Number (Final Tier 4/Stage V)	150-3
Separator	135-1	Cab Serial Number	150-4
Hydrostatic Ground Drive	135-4	Hydrostatic Drive Unit Pump	150-4
Four-Wheel Drive (Optional)	135-7	Hydrostatic Drive Unit Motor	150-4
Steering	135-7	Two Speed Four-Wheel Drive Motor	150-4
Brakes	135-8	Engine Gear Case	150-5
Engine	135-8	Rotor Drive Gear Case	150-5
Electrical	135-16	Transmission	150-5
Heater	135-18	Feeder House Reverser	150-5
Air Conditioner	135-18	Multi-Speed Feeder House Gear Case (If Equipped)	150-5
Moisture Sensor (If Equipped)	135-19	Chopper (If Equipped)	150-6
Mass Flow Sensor (If Equipped)	135-19	Vane Tailboard (Deluxe, Intermediate and Premium Residue)	150-6
Combine Advisor™	135-19	Advanced PowerCast™ Tailboard (Intermediate and Premium Residue)	150-6
Storage		PowerCast Tailboard (Deluxe Residue)	150-6
Preparing Machine for Storage	140-1	Spreader (Deluxe Residue)	150-6
Removing Machine from Storage	140-1	Keep Proof of Ownership	150-7
Specifications		Keep Machines Secure	150-7
Operating Speeds (S760 and S770)	145-1		
Operating Speeds (S780, S785, and S790)	145-3		
Specifications (S760 and S770)	145-5		
Specifications (S780, S785, and S790)	145-8		
Dimensions (S760 and S770)	145-11		
Dimensions (S770 HillMaster™)	145-12		
Dimensions (S780, S785, and S790)	145-13		
Dimensions (S780 HillMaster™, S785 HillMaster™ and S790 HillMaster™)	145-14		
Dimension Reference Points	145-15		
Whole Body Vibration	145-16		
Sound Level	145-16		
Safety Note Regarding the Subsequent Installation of Electrical and Electronic Appliances and/or Components	145-16		
EU Declaration of Conformity	145-17		
UK Declaration of Conformity	145-18		
Eurasian Economic Union	145-19		
Machine Design Life	145-19		
Fluorinated Greenhouse Gas	145-19		
Carbon Dioxide Emissions (CO ₂)	145-19		
LICENSE AGREEMENT FOR JOHN DEERE IMAGE PROCESSING MODULE SOFTWARE	145-21		
Third-Party Software Notifications and Licenses for Image Processing Module	145-24		
Unified Inch Bolt and Screw Torque Values	145-24		
Metric Bolt and Screw Torque Values	145-25		

Safety Features

Machine Safety Features

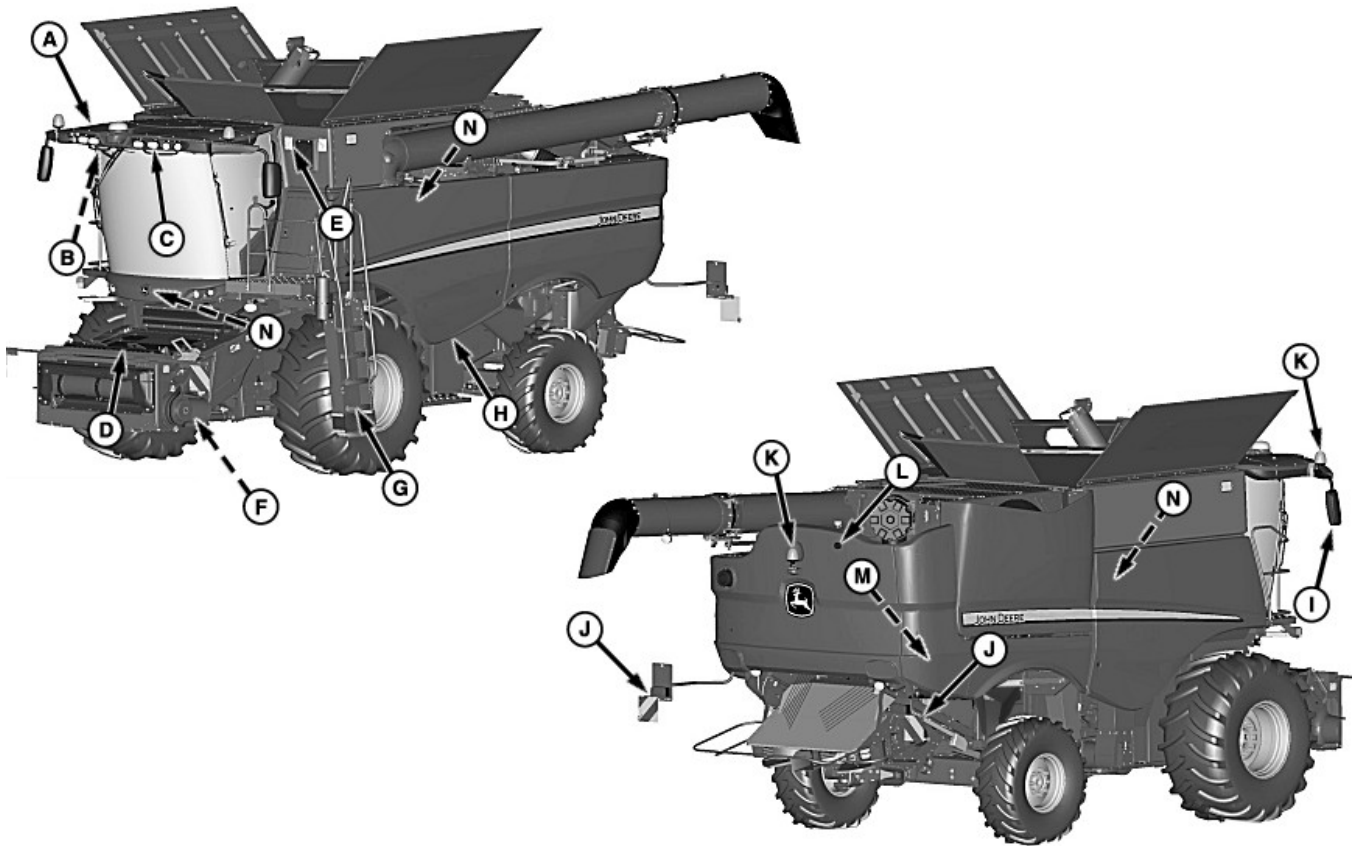

Front View/Rear View Safety Features

H115704—UN—31AUG15

A—Cab Safety Features: Operator's Presence System, Electronic Engine Start Lockout, Seat Belts, Horn, Emergency Exit Window, Park Brake, Turn Signals

B—Handholds

C—Headlights

D—Slip Resistant Skid Mats

E—Safety Signs

F—Mechanical Safety Stop (Feeder House)

G—Slip Resistant Steps and Platform with Handrails

H—Shields

I—Rear View Mirrors

J—Warning Lights and Reflective Tape

K—Beacon Lights

L—Back-Up Alarm

M—Slip Resistant Service Platform with Handrails

N—Rotational Alarm Safety Features: Discharge Light, Stubble Lights, Gullwing Service Lights

In addition to the safety features shown here, other components and systems, safety lights on the machine, and safety messages and instructions in the operator's manual contribute to the safe operation of this machine when combined with the care and concern of a capable operator.

OUO6075,000413E-19-31AUG15

Safety

Recognize Safety Information



T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-29SEP98

Understand Signal Words



▲ WARNING

▲ CAUTION

TS187—19—30SEP88

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.


WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL-19-05OCT16

Follow Safety Instructions

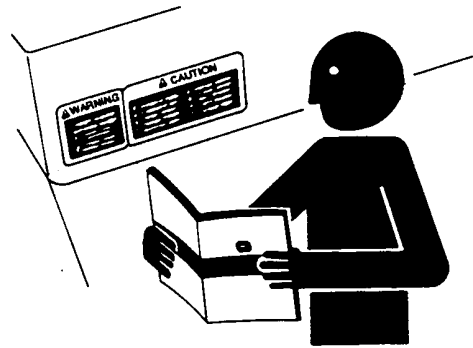

TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.


Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-16JUN09

Driving the Machine

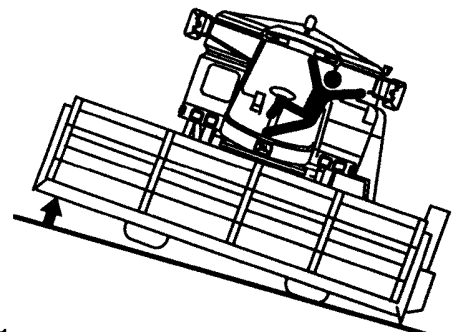

ZX002461

ZX002461—UN—16JUN95

Operate machine only when all guards are correctly installed. Operate machine with door and window (if equipped) closed.

Before moving away, always check immediate vicinity of the machine (example for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.

Always adapt ground speed to the road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope. Be especially careful when turning on slopes with a full grain tank.

Follow instructions in header Operator's Manual when attaching or detaching the header.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the machine swings out. Attachments and ground conditions affect the driving characteristics of the combine.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches, and obstructions which may cause the combine to tip, particularly on hillsides.

OUO6075,0004F12-19-17SEP20

Operator Ability

- Machine owners must make sure that operators are responsible, trained, have read the operating instructions and warnings, and know how to operate the machine properly and safely.
- Age, physical ability, and mental capacity can be factors in machine-related injuries. Operators must be mentally and physically capable of accessing the operator station and/or controls, and operating the machine properly and safely.
- Never allow a child or an untrained person to operate the machine. Instruct all operators not to give children a ride on the machine or an attachment.
- Never operate machine when distracted, fatigued, or impaired. Proper machine operation requires the operator's full attention and awareness.

DX,ABILITY-19-07DEC18

Observe Road Traffic Regulations

Always observe local road traffic regulations when using public roads.

OUO6075,0000032-19-22JAN01

Check Machine Safety


Always check the road and general operating safety of the machine before using.

FX,READY-19-28FEB91

Use Handholds and Steps



T6981AN—UN—15JUN89

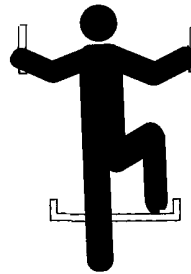

T133468—UN—15APR13

Falling is a major cause of personal injury.

Prevent falls by facing the machine when getting on and off.

When you get on and off the machine, maintain a 3-point contact with the steps, handholds, and handrails and face the machine. Unfold and use the handrail whenever you climb on top of the engine deck.

Use extra care when mud, snow, or moisture present slippery conditions. Keep the steps clean and free of grease or oil.

Never jump when exiting the machine. Never mount or dismount a moving machine.

OUO6075,0004E97-19-17JUN20

Keep Riders and Children Off Machine



TS253—UN—23AUG88

Only allow the operator on the machine. Keep riders off

the machine except for periods of training or short periods of observation.


Riders are subject to injury such as being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

Children should never be allowed on the machine or in the combine cab when the engine is running.

The instructional seat should only be used for instruction or short periods of machine observation, and not for the accommodation of children.

HX,AG,SF6904-19-22,JUL99

Ballasting for Safe Ground Contact

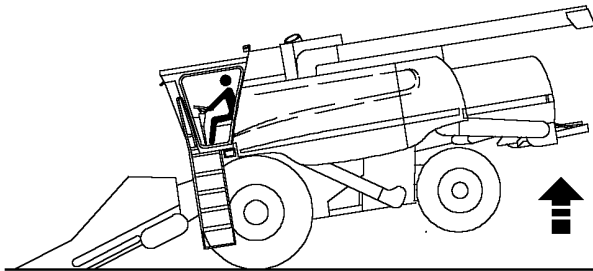

H51907—UN—10FEB99

Operating, steering and braking performance of combine can be considerably affected by heavy front end attachments which alter the center of gravity of the combine.

To maintain the necessary ground contact, ballast the combine at the rear end as necessary.

Observe the maximum permissible axle loads and total weights.

HX,AG,SF6782-19-05FEB99

Roadway Transport with Header Attached


Observe national and local laws regarding operation of the combine on public roadways.

Roadway transport in Germany must be approved by your local TUEV to achieve a road permission.

Apply for allowance at your dealership or at manufacturing factory.

OOU6075,0004672-19-16MAR17

Avoid Electrical Power Lines

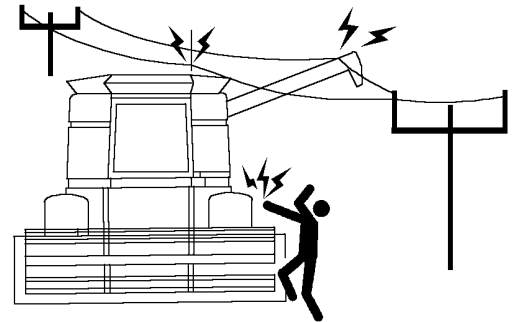


H52022—UN—14APR99

Put the grain tank unloading auger in transport position and lower the grain tank access handrail before driving on public roads.

Secure radio aerial in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

HX,STSSA,D-19-22,JUL99

Parking and Leaving the Machine

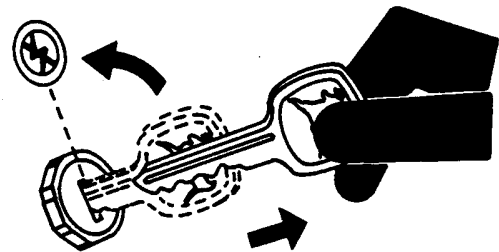

TS230—UN—24MAY89

Lower the combine's front-end equipment to the ground.


Before leaving the machine, disengage the header and separator. Move the multi-function lever to the neutral position and shut OFF the machine. Apply the park brake, remove key, and lock the operator's cab.

Never leave the machine unattended if the engine is running.

Never leave the operator's cab when driving.

OOU6075,0004E18-19-25JUN20

Work In Ventilated Area

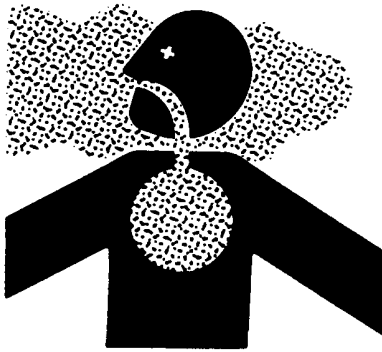

TS220—UN—15APR13

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.


If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

DX,AIR-19-17FEB99

flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1-19-12OCT11

Prepare for Emergencies

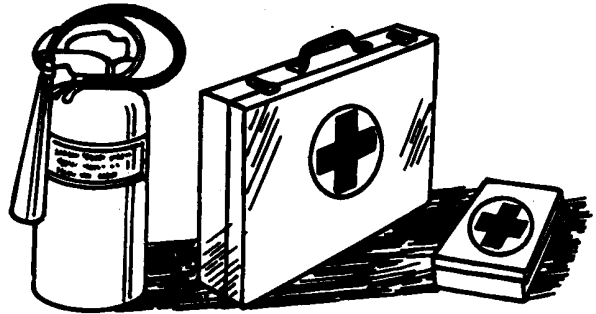

TS291—UN—15APR13

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

Handle Fuel Safely—Avoid Fires



TS202—UN—23AUG88

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.

Do not store fuel container where there is an open

Handle Starting Fluid Safely



TS1356—UN—18MAR92

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.

DX,FIRE3-19-14MAR14

In Case of Fire



TS227—UN—15APR13

CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:


1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

DX,FIRE4-19-22AUG13

Avoid Static Electricity Risk When Refueling



RG22142—UN—17MAR14

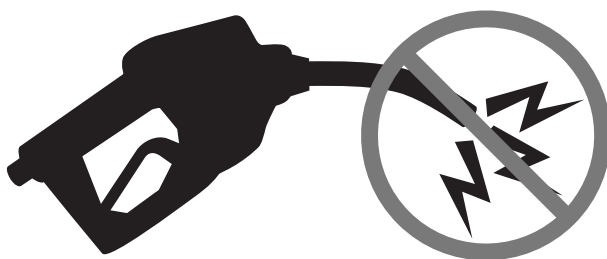

RG21992—UN—21AUG13

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.


Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

DX,FUEL,STATIC,ELEC-19-12JUL13

Wear Protective Clothing

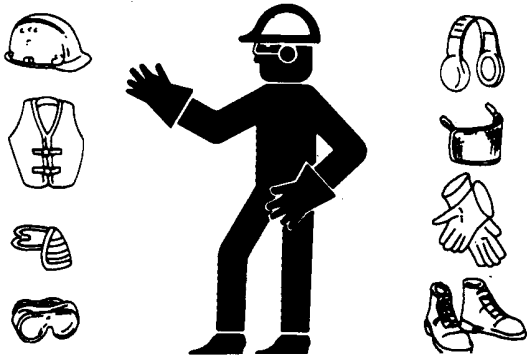

TS206—UN—15APR13

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

DX,WEAR2-19-03MAR93

Keep Hands Away From Knives



TS254—UN—23AUG88

Never attempt to clear obstructions in front of or on header unless separator is disengaged, parking brake is set, engine is shut off and key is removed.

Everyone must be clear of machine before starting engine.

OOU6075,00009E6-19-28SEP10

Stay Clear of Harvesting Units




ES 118 704

ES118704—UN—21MAR95

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine, set parking brake and remove key before servicing or unclogging machine.

OOU6075,00009E5-19-28SEP10

Use Safety Lights and Devices

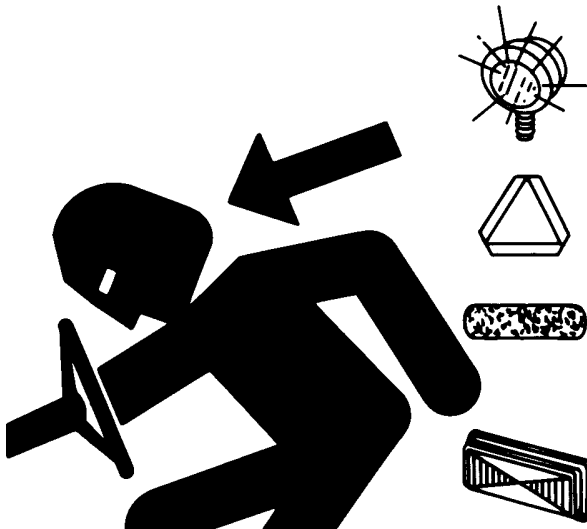

TS951—UN—12APR90

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean and in good working order. Replace or repair lighting and marking that has been damaged or lost.

HX,STSSA,O-19-22JUL99

Use Seat Belts



TS1730—UN—24MAY13

Use the seat belt whenever you operate the machine or ride as an observer.

OUO6075,0004E96-19-17JUN20

Instructional Seat



TS1730—UN—24MAY13

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

DX,SEAT,NA-19-22AUG13

Heated and Ventilated Operator's Seat




H124189—UN—11MAY18

An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.

DX,SEATHEATER-19-20NOV18

Transport Combine With Header Safely

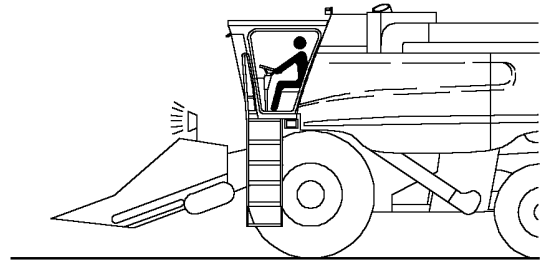

H51909—UN—07MAY99

Whenever possible avoid transporting on public roadways with the header attached.

If the combine must be transported with the header attached, make sure that the flashing warning lights on the header are operating and the reflective material is clean and visible.

The use of a spotter or pilot vehicle is recommended on busy, narrow or hilly roads and when crossing bridges.

Drive at a speed that is safe for conditions.

OUO6075,0000034-19-22JAN01

Prevent Machine Runaway or Unexpected Movement



H58737—UN—08JUL99

Avoid injury or death from unexpected movement of machine or components.

Do not start engine by shorting across starter or solenoid terminals. Machine or components may move if the normal circuitry is bypassed.

AG,OUO1035,792-19-08JUL99

controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-28FEB17

Practice Safe Maintenance



TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate

Welding Near Electronic Control Units




TS953—UN—15MAY90

IMPORTANT: Do not jump-start engines with arc welding equipment. Currents and voltages are too high and may cause permanent damage.

1. Disconnect the negative (-) battery cable(s).
2. Disconnect the positive (+) battery cable(s).
3. Connect the positive and negative cables together. Do not attach to vehicle frame.
4. Clear or move any wiring harness sections away from welding area.
5. Connect welder ground close to welding point and away from control units.
6. After welding, reverse Steps 1—5.

DX,WW,ECU02-19-14AUG09

Remove Paint Before Welding or Heating

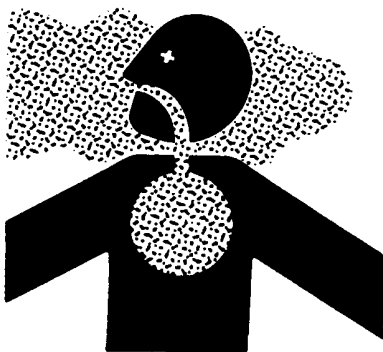

TS220—UN—15APR13

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT-19-24JUL02

Avoid Heating Near Pressurized Fluid Lines



TS953—UN—15MAY90

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to

yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.

DX,TORCH-19-10DEC04

Avoid Contact With Moving Parts



TS256—UN—23AUG88

Keep hands, feet and clothing away from power driven parts. Never clean, lubricate or adjust machine when it is running.

H01,9000SA,E-19-15JUN90

Cleaning Grain Tank and Removal of Blockages Safely



TS256—UN—23AUG88

Avoid serious injury or death from entanglement in the grain tank cross augers. For functional purposes the cross augers cannot be completely covered. Do not enter the grain tank when the engine is running. Before entering the tank to clean out residual grain, always shut off the engine, set parking brake and remove the key.

If grain bridges and fails to flow into the cross augers, shut off the engine, remove the key and from a position on the engine compartment door use a rod, broom or shovel to break the bridge and restore grain flow.

OOU6043,00015E2-19-24MAY04

Stay Clear of Rotating Drivelines



TS1644—UN—22AUG95


Entanglement in rotating driveline can cause serious injury or death.

Keep all shields in place at all times. Make sure rotating shields turn freely.

Wear close-fitting clothing. Stop the engine and be sure that all rotating parts and drivelines are stopped before making adjustments, connections, or performing any type of service on engine or machine driven equipment.

DX,ROTATING-19-18AUG09

Install All Shields and Guards

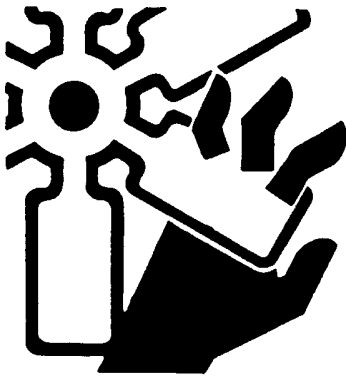

TS677—UN—21SEP89


Rotating fans, belts, pulleys, and drives can cause serious injury.

Keep all shields and guards in place at all times during operation.

Wear close-fitting clothes. Stop the engine and be sure fans, belts, pulleys, and drives are stopped before making adjustments, connections, or cleaning near fans and their drive components.

OUO6075,0000C23-19-03MAY11

Avoid High-Pressure Fluids

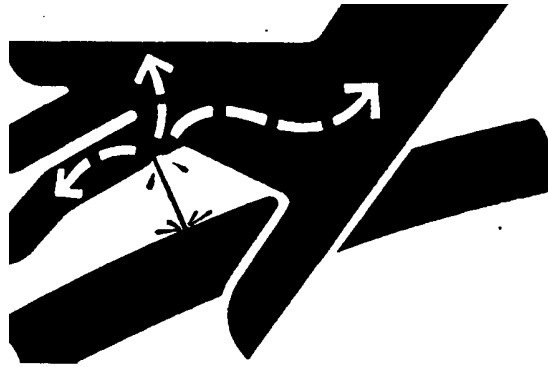

X9811—UN—23AUG88

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.

Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.


Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID-19-12OCT11

Do Not Open High-Pressure Fuel System

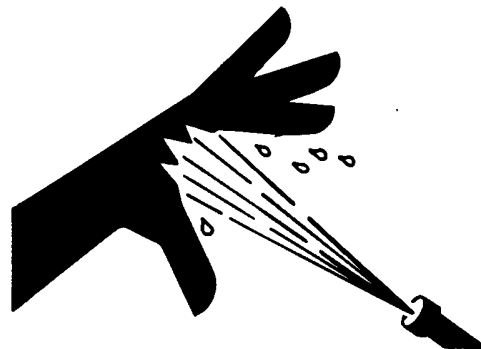

TS1343—UN—18MAR92

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel

lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)

DX,WW,HPCR1-19-07JAN03

Service Accumulator Systems Safely



TS281—UN—15APR13

Escaping fluid or gas from systems with pressurized accumulators that are used in air conditioning, hydraulic, and air brake systems can cause serious injury. Extreme heat can cause the accumulator to burst, and pressurized lines can be accidentally cut. Do not weld or use a torch near a pressurized accumulator or pressurized line.


Relieve pressure from the pressurized system before removing accumulator.

Relieve pressure from the hydraulic system before removing accumulator. Never attempt to relieve hydraulic system or accumulator pressure by loosening a fitting.

Accumulators cannot be repaired.

DX,WW,ACCLA2-19-22AUG03

Protect Against High Pressure Spray

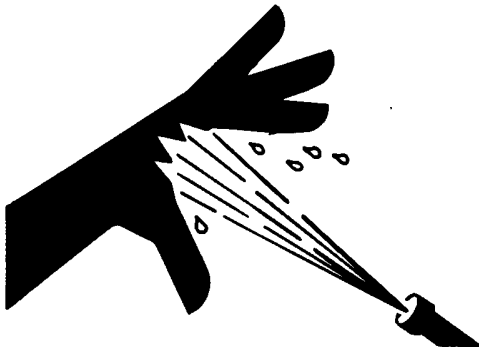

TS1343—UN—18MAR92


Spray from high pressure nozzles can penetrate the

skin and cause serious injury. Keep spray from contacting hands or body.

If an accident occurs, see a doctor immediately. Any high pressure spray injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

DX,SPRAY-19-16APR92

Follow Tire Recommendations

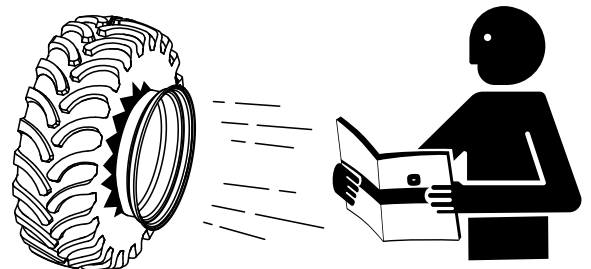

H111235—UN—13MAY14

Keep your machine in proper working order.

Use only prescribed tire sizes with correct ratings and inflate to the pressure specified in this manual.

Use of other than prescribed tires may decrease stability, affect steering, result in premature tire failure, or cause other durability or safety issues.

DX,TIRE,INFO-19-19MAY14

Service Tires Safely



RXA0103438—UN—11JUN09

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate

the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.


When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims, or missing lug bolts and nuts.

Wheels and tires are heavy. When handling wheels and tires use a safe lifting device or get an assistant to help lift, install, or remove.

DX,WW,RIMS-19-28FEB17

Decommissioning — Proper Recycling and Disposal of Fluids and Components

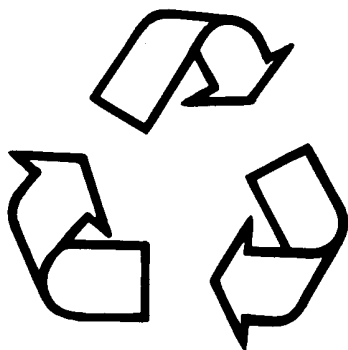

TS1133—UN—15APR13

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:

- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.
- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.

- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid); filters; batteries; and, other substances or parts. Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.
- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
- Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.
- Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.

DX,DRAIN-19-01JUN15

Service Cooling System Safely



TS281—UN—15APR13

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut OFF engine, set park brake, and remove key.

NEVER add coolant when engine is overheated. Wait for it to cool.

NEVER remove surge tank cap when coolant or engine is hot. Wait until engine coolant is cool to remove cap.

SLOWLY loosen cap to relieve pressure before removing completely.

Add coolant only when engine is shut off.

OUO6075,0004E98-19-26JUN20

Remove Accumulated Crop Debris



TS227—UN—15APR13

The build up of chaff and crop debris in the engine compartment, on the engine, and near moving parts is a fire hazard. Check and clean these areas frequently. Before performing any inspection or service, shut off the engine, set the parking brake and remove the key.

HX,9010SA,B-19-23AUG97

Store Attachments Safely




TS219—UN—23AUG88

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

DX,STORE-19-03MAR93

Support Machine Properly

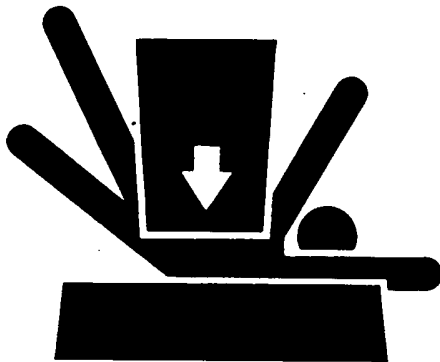

TS229—UN—23AUG88


Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

DX,LOWER-19-24FEB00

Service Drive Belts Safely

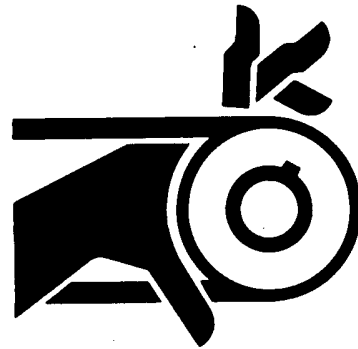

TS285—UN—23AUG88

When servicing drive belts always observe these precautions:

- Avoid serious injury from hand or arm entanglement. Never attempt to clean, check or adjust belts while the machine is running. Always shut off the engine, set the parking brake and remove the key.
- Do not attempt to clean belts with flammable cleaning solvents.

OUC6075,00026A4-19-06FEB03

Handle Electronic Components and Brackets Safely



TS249—UN—23AUG88

Falling while installing or removing electronic components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.

DX,WW,RECEIVER-19-24AUG10

Avoid Backover Accidents




PC10857XW—UN—15APR13

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.

DX,AVOID,BACKOVER,ACCIDENTS-19-30AUG10

Backup Alarm

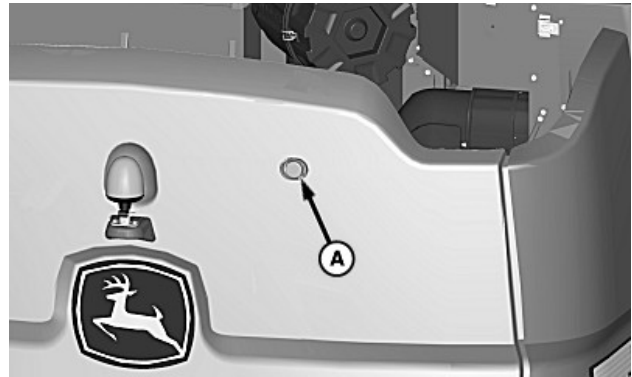


H97997—UN—15SEP10

A—Backup Alarm

If the multi-function lever is moved rearward while the engine is running, backup alarm (A) sends an acoustical signal to warn others around the machine that the operator is backing up.

OOU6075.0004FAE-19-15JAN21

Emergency Exit

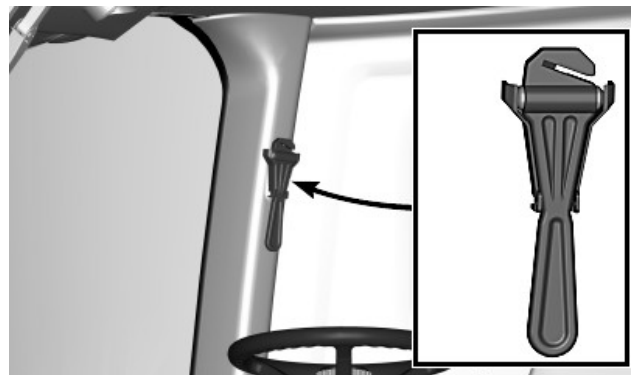

H121321—UN—21APR17


Seat belt may be cut and window glass broken with hammer to exit cab in an emergency.

OOU6075.0004722-19-21APR17

Handling Batteries Safely



TS204—UN—15APR13

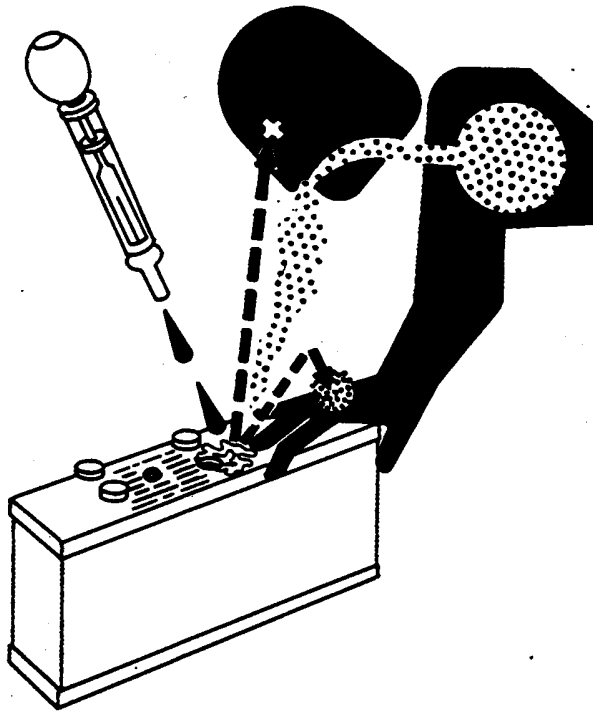

TS203—UN—23AUG88

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves

- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

DX,WW,BATTERIES-19-02DEC10


Clean Exhaust Filter Safely



TS227—UN—15APR13



TS271—UN—23AUG88

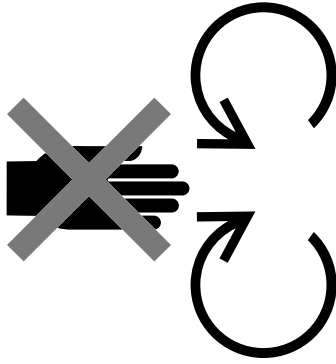

TS1693—UN—09DEC09

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.

If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine


Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

OUC6075,0000E81-19-07FEB12

Avoid Hot Exhaust

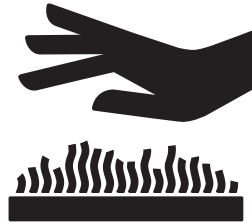

RG17488—UN—21AUG09

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.


Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

DX,EXHAUST-19-20AUG09

Operator Presence System and Rotational Alarm System

The operator presence system indicates the presence of the operator. When the operator is out of the seat, the system prevents the engagement of the following systems:

- Separator
- Header
- Unloading Auger
- AutoTrac™

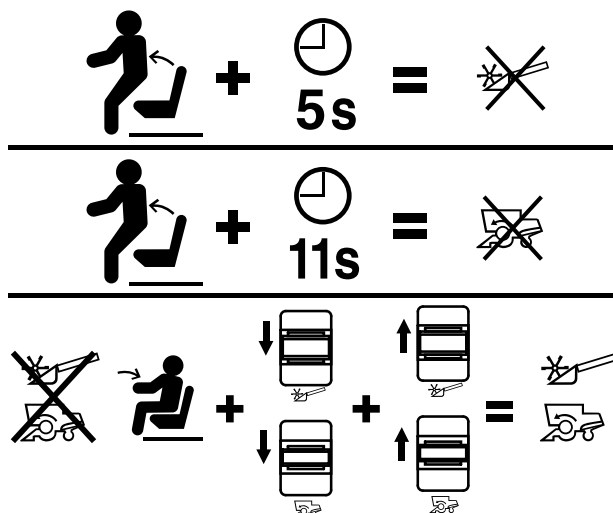

H125008—UN—25SEP18

AutoTrac is a trademark of Deere & Company

If the operator leaves the seat for more than 5 seconds with the header and/or separator engaged, the header and unloading auger are automatically disengaged. After 11 seconds, the separator and propulsion (ProDrive™ and ProDrive™ XL only) are disengaged. If the operator remains out of the seat, the harvesting functions disengage. Lights flash and an alarm sounds until the harvesting functions have stopped. The engine will continue to run.

To restart functions, the operator must return to the seat and re-engage each function.

OUO6075,00050B3-19-14MAY21

Safety Signs

Pictorial Safety Signs




TS231—19—07OCT88

At several important places on this machine safety signs are affixed intended to signify potential hazards. The hazard is identified by a pictorial in a warning triangle. An adjacent pictorial provides information how to avoid personal injury. These safety signs, their placement on the machine and a brief explanatory text are shown below.

OUO6075,0001163-19-19JUN12


Front View Decals

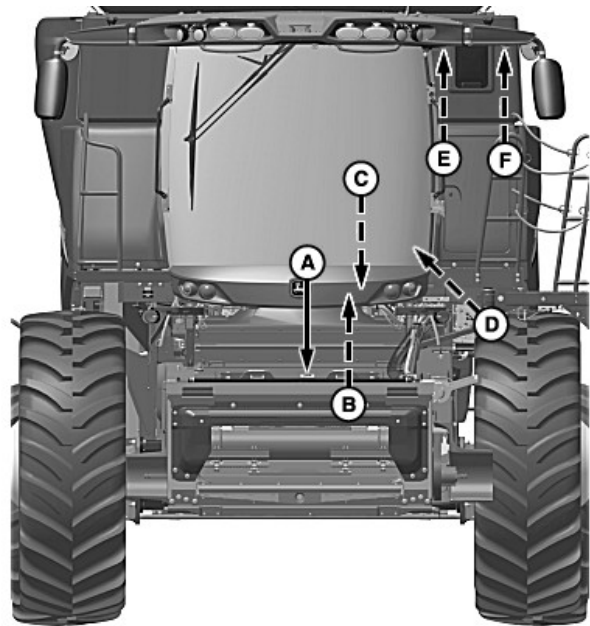

H133907—UN—31MAR21

Decal A (Feeder House Inspection Doors)

Replace Safety Signs

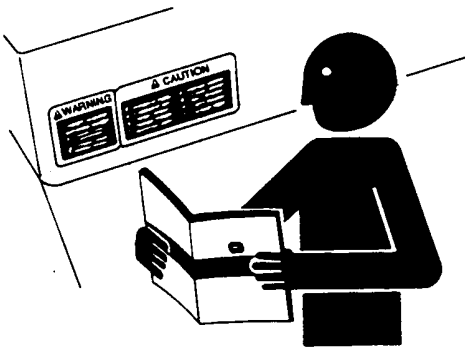

TS201—UN—15APR13

Replace missing or damaged safety signs. Use this operator's manual for correct safety sign placement.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

DX,SIGNS-19-18AUG09




SSHXE137549XE—UN—22JAN20

Decal A

NOTE: Decal is between the inspection doors.

Avoid serious injury from contact with moving components. Do not open inspection door until all feeder house motion has stopped.

Decal B (Accumulator)

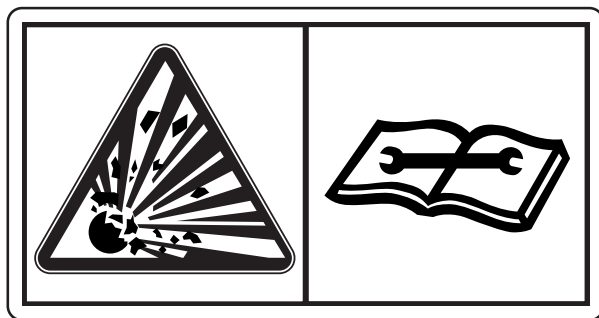


Decal B

SSHXE147362XE—UN—21JAN20

NOTE: Decal is on the accumulator on the cab support and is only on ProDrive™ transmission machines.

Avoid injury from machine movement and exposure to fluid under pressure. See dealer for instruction on relieving pressure before servicing system.

Decal C (Hydraulic Oil and Gas Under Pressure)

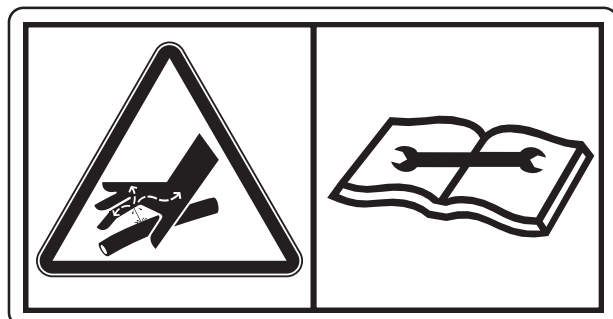

Decal C

SSHXE147014XE—UN—21JAN20

NOTE: Decal is on the cab support and is only on ProDrive™ transmission machines.


Avoid serious injury from contact with hydraulic oil and gas under pressure.

Before removing hydraulic components, disassembling or charging accumulators:

1. Relieve system hydraulic pressure. Refer to operator's manual and repair manual for system information.
2. Stop engine and remove key.

Use only DRY NITROGEN for recharging accumulator. See your local John Deere dealer.

Decal D (Park Brake)

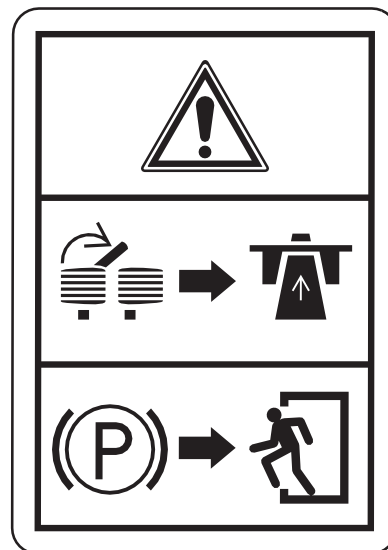


Decal D

SSHXE122761XE—UN—23JAN20

1. Couple brakes together for road transport.
2. Engage park brake prior to leaving cab.
3. Disengage park brake prior to moving machine.

Decal E (Avoid Low-Hanging Power Lines)

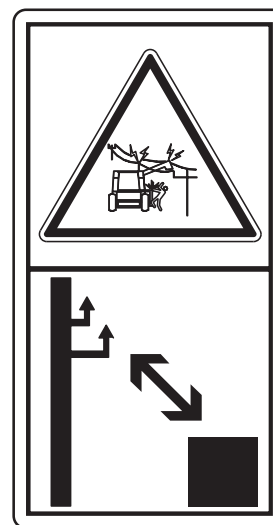

Decal E

SSHXE160769XE—UN—23JAN20

Avoid serious injury or death from electrocution. Do not contact electric lines. Lower grain tank covers when operating near low-hanging power lines.

Decal F (Grain Tank)




SSL64995XE—UN—22JAN20

Decal F

Avoid serious injury from falling. Do not enter grain tank in this area.


OUO6075,00050A3-19-12APR21

Left-Hand View Feeder House Decals

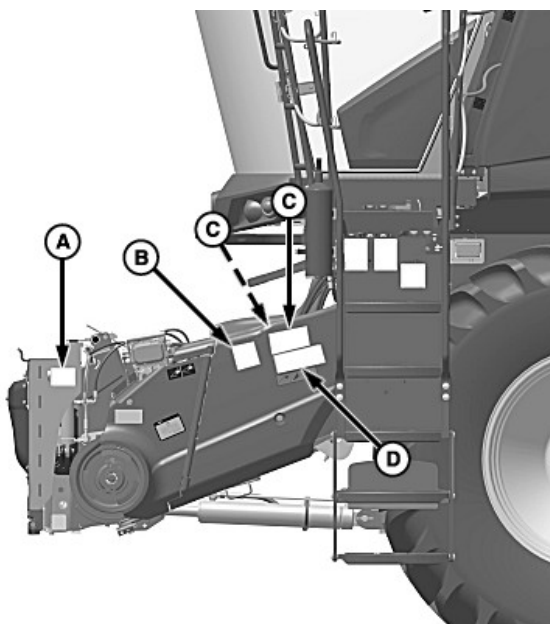

H133908—UN—31MAR21

Decal A (Feeder House Tilt Frame)

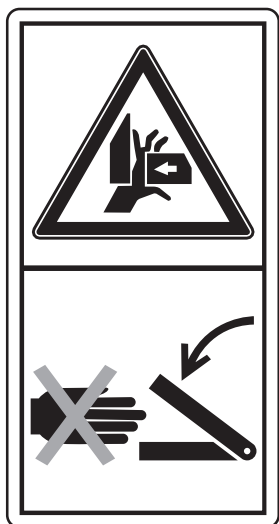

SSH154128XE—UN—22JAN20

Decal A

Header can tilt. Avoid crushing injuries. Stay clear when engine is running.

Decal B (Feeder House Guard)



SSZ60326XE—UN—22JAN20

Decal B

Avoid serious injury or death from entanglement. Never raise shield with the engine running. Stop engine and remove key.

Decal C (Feeder House Safety Stop)




SSHXE123797—UN—06APR21

Decal C

NOTE: Decal is on the outside and inside of the shielding.

Avoid crushing injury. Rest header on ground or set safety stop, located on feeder house lift cylinder, before getting under header.

Decal D (Hydraulic Oil and Gas Under Pressure)

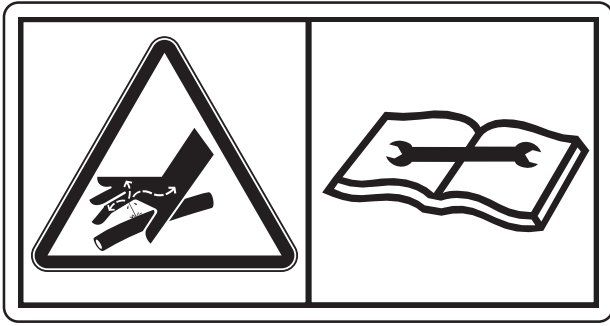

SSHXE147014XE—UN—21JAN20

Decal D

Avoid serious injury from contact with hydraulic oil and gas under pressure.


Before removing hydraulic components, disassembling or charging accumulators:

1. Relieve system hydraulic pressure. Refer to operator's manual and repair manual for system information.
2. Stop engine and remove key.

Use only DRY NITROGEN for recharging accumulator. See your local John Deere dealer.

OUO6075,00050A6-19-12APR21

Left-Hand Cab View Decals and Cab Ladder Decals

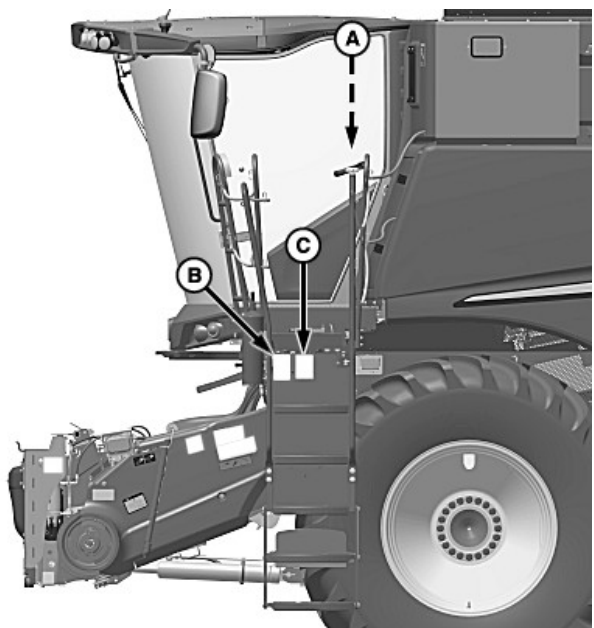

H133923—UN—31MAR21

Decal A (Seat Belt)



SSHXE122760XE—UN—22JAN20

Decal A

The instructional seat is for training operators or diagnosing machine problems. Keep all other riders and children off. Use the seat belt whenever operating the machine or riding as an observer.

Decal B (Cab/Platform Access Ladder)




SSL64995XE—UN—22JAN20

Decal B

Avoid serious injury from falling. Do not ride ladder while combine is moving.

Decal C (Avoid Motor Vehicle Collisions)

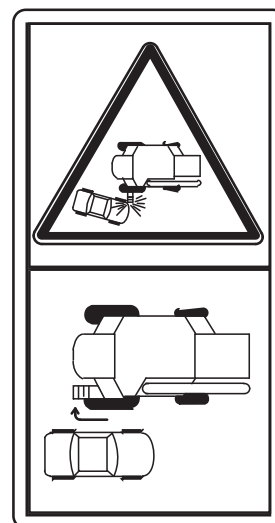


SSH174284XE—UN—22JAN20

Decal C

Avoid motor vehicle collision and serious injury or death. Always swing ladder to forward locked position before driving combine on roadways.

OUC6075,00050A7-19-31MAR21

Left-Hand View Decals

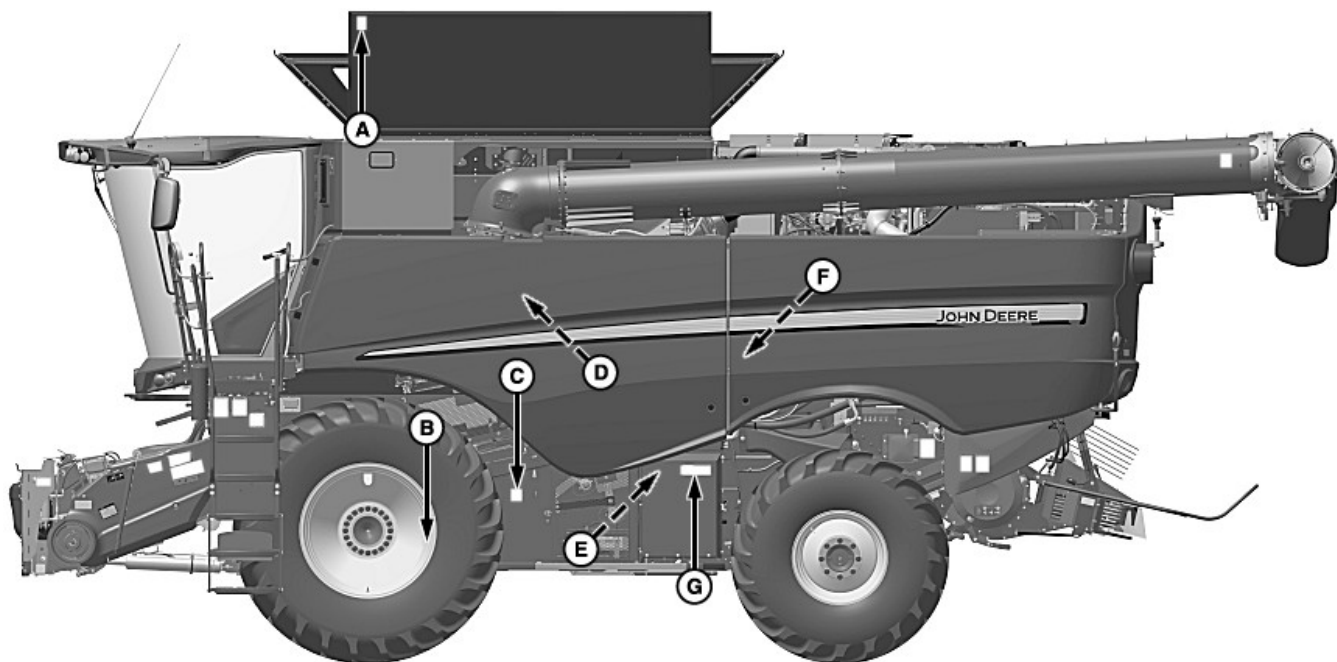

H133910—UN—09APR21

Decal A (Avoid Grain Tank)

NOTE: Decal is on dual wheels.



SSHXE123803XE—UN—21JAN20

Decal A

Avoid serious injury from falling. Do not stand or walk on grain tank covers.

- Dual wheels have an offset center of weight. To avoid injury, two people must install and remove wheels using pilot studs.
- Use jack to lift machine. Support machine on blocks. Install all wheel bolts before lowering machine to ground.
- See Operator's Manual


Decal C (Left-Hand Toolbox or Guard)



SSZ60326XE—UN—22JAN20

Decal C

Decal B (Dual Wheels) (If Equipped)

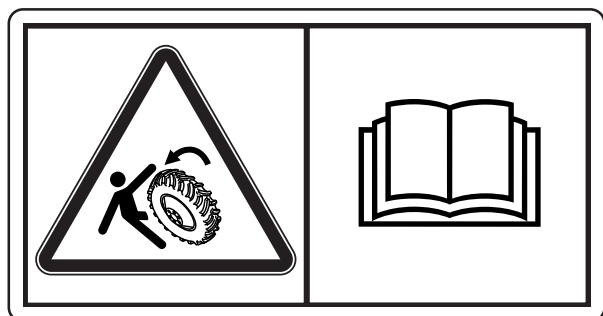

SSHXE150074XE—UN—21JAN20

Decal B

Avoid serious injury from entanglement. Never raise shield with the engine running. Stop engine and remove key.

Decal D (Grain Tank Cleanout Doors)




Decal D

SSHXE137549XE—UN—22JAN20

Avoid serious injury or death from entanglement. Stop engine and remove key before opening cleanout doors.

Decal E and F (Hydraulic Oil and Gas Under Pressure)

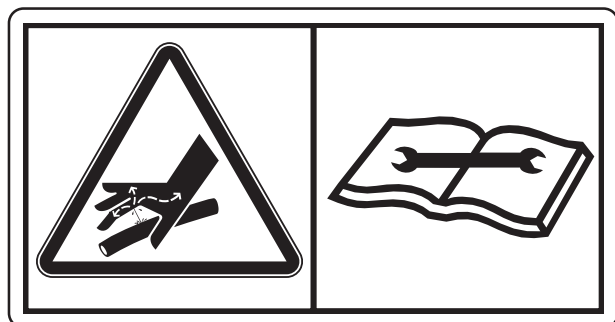

Decal E and F

SSHXE147014XE—UN—21JAN20

NOTE: Decal E is on S760 and S770 machines and decal F is on S780, S785, and S790 machines.


Avoid serious injury from contact with hydraulic oil and gas under pressure.

Before removing hydraulic components, disassembling or charging accumulators:

1. Relieve system hydraulic pressure. Refer to operator's manual and repair manual for system information.
2. Stop engine and remove key.

Use only DRY NITROGEN for recharging accumulator. See your local John Deere dealer.

Decal G (Battery Box)

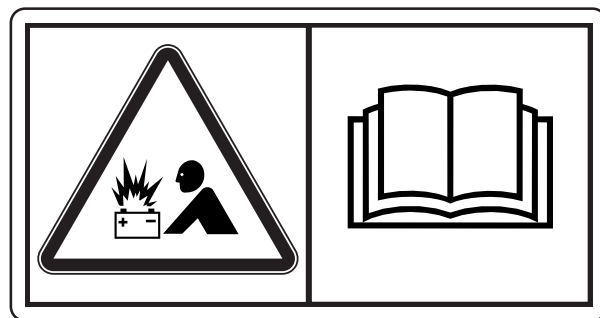

Decal G


SSHXE137560XE—UN—21JAN20

NOTE: Decal is on S780, S785, and S790 machines.


Avoid serious injury or death from explosion. High levels of hydrogen gas can accumulate if battery box is not vented properly. Always reinstall vent tubes after performing service or maintenance on batteries or battery box.

OUC6075,00050B6-19-07APR21

Left-Hand View Decals Continued

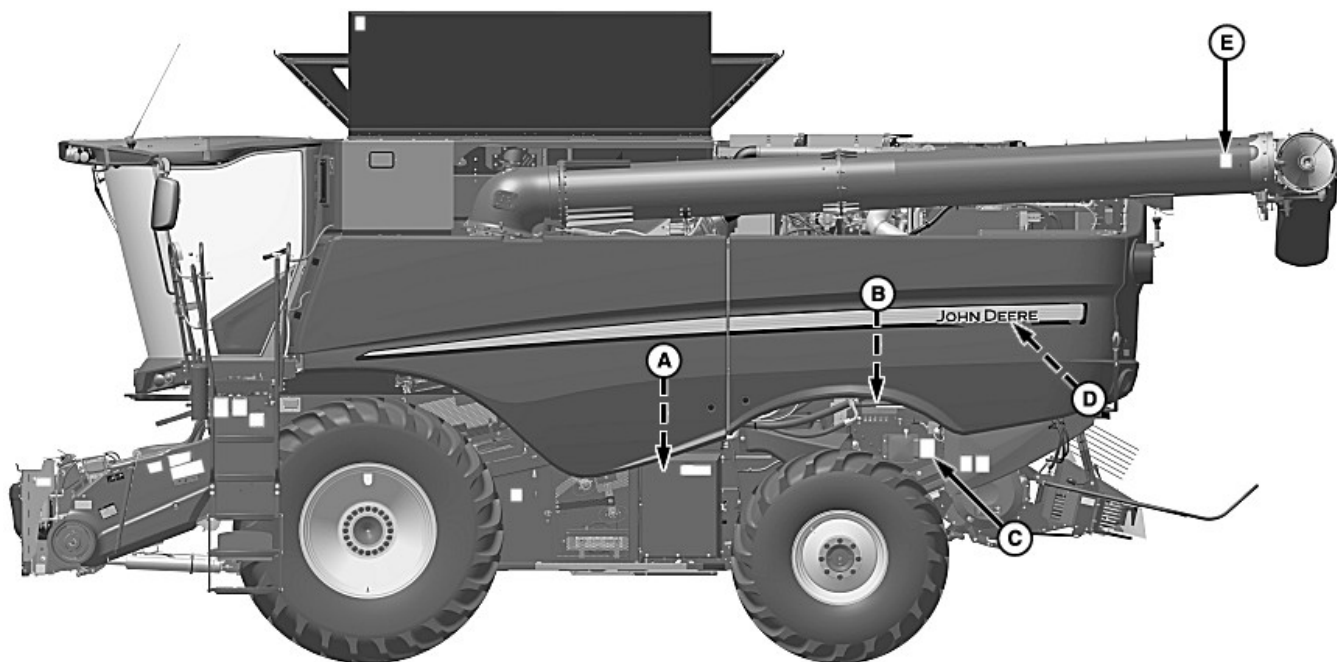

Decal A (Accumulator)

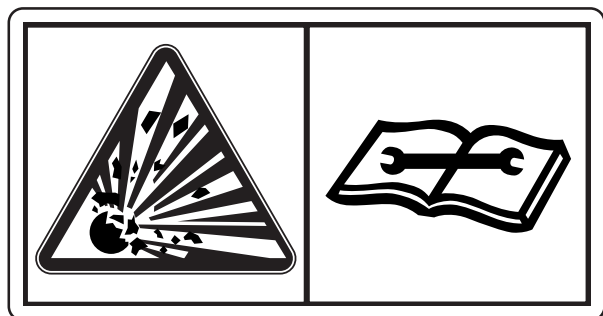

SSHXE147362XE—UN—21JAN20


Decal A

NOTE: Decal is on S760 and S770 machines.

Avoid injury from machine movement and exposure to fluid under pressure. See dealer for instruction on relieving pressure before servicing system.

Decal B (Air Compressor System) (If Equipped)

H133911—UN—09APR21

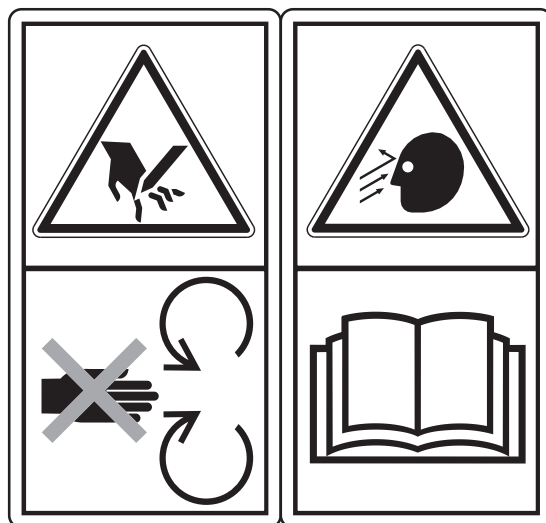

SSHXE94451XE—UN—23JAN20

Decal B

Engine components are rotating during air compressor operation. When using the air compressor system, avoid moving components.

Air system at high-pressure can dislodge debris or components. Wear protective equipment. Before servicing air system, refer to Operators Manual.

Decal C (Separator Inspection Door)



SSHXE137549XE—UN—22JAN20

Decal C

Avoid serious injury from contact with moving components. Do not open inspection door until all separator motion is stopped.

Decal D (Exhaust Temperature) (Final Tier 4/Stage V)



SSHXE69987XE—UN—23JAN20

Decal D

Exhaust system components may be hot. To avoid severe burns, keep away from exhaust system components.

Decal E (Powered Folding Unloading Auger)



SSHXE150359XE—UN—22JAN20

Decal E

If unloading auger actuator should fail, place unloading auger lockout pin in the locked position.


Use a ladder or equivalent with an appropriate load rating to access lockout pin. Do not attempt to access the auger from the engine platform.

Avoid bodily injury from auger hinge components.

Keep hands away from pinch points when actuator is removed as unintended auger movement may occur.

OUO6075,00050A9-19-12APR21

Left-Hand View Residue Decals (Chopper)

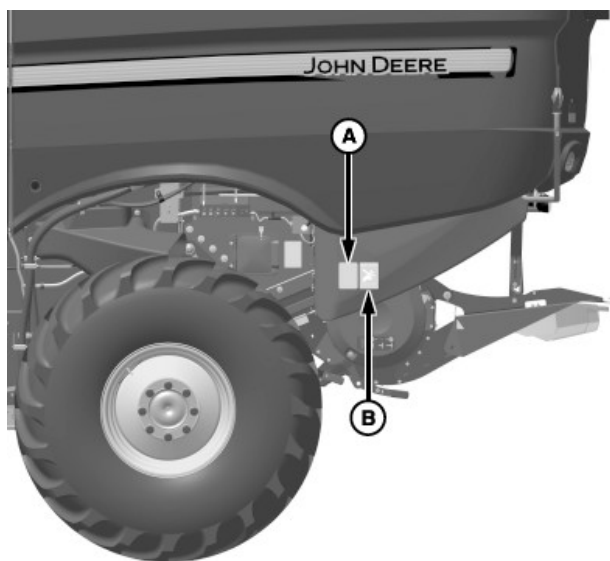

H133984—UN—06APR21

Decal B (Chopper Blades)



SSHXE159567XE—UN—22JAN20

Decal B

Decal A (Chopper Flying Debris)



SSHXE137555XE—UN—22JAN20


Decal A

Avoid serious injury from contact with chopper blades. Chopper rotates in windrow position. Keep clear.

OUO6075,00050AA-19-06APR21

Avoid serious injury from thrown objects. Stay clear while engine is running.

Left-Hand View Residue Decals (Spreader)

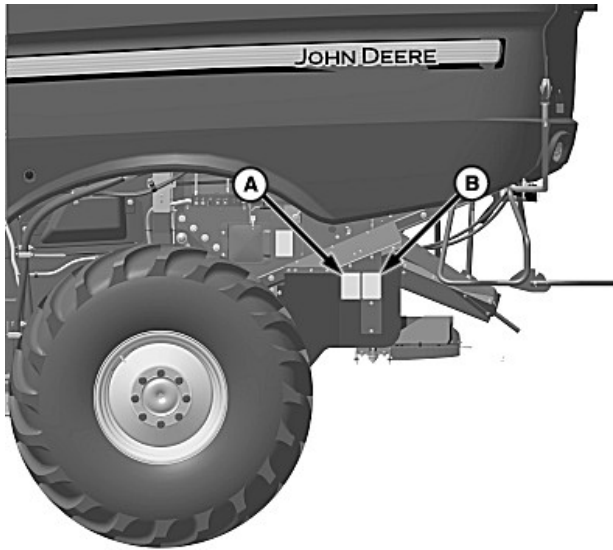

H133986—UN—06APR21

Decal B (Spreader Flying Debris)



SSHXE137555XE—UN—22JAN20

Decal A (Spreader Lockout)



SSHXE150334—UN—06APR21

Decal A


Decal B

Avoid serious injury from thrown objects. Stay clear while engine is running.

OUO6075,00050AB-19-06APR21

Avoid serious injury or death from crushing. Before performing service or maintenance on raised spreader, fully insert lockout pin into place.

Rear View Decals and Engine View Decals

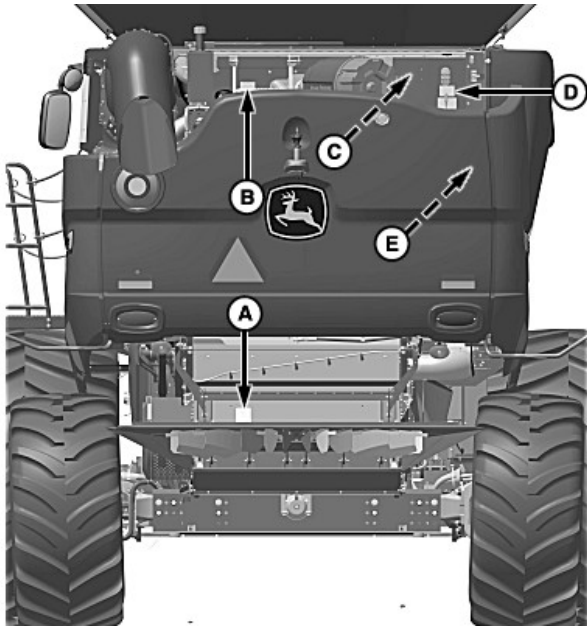

H133924—UN—09APR21

Decal A (Chopper Flying Debris)



SSHXE137555XE—UN—22JAN20

Decal A

Avoid serious injury from thrown objects. Stay clear while engine is running.

Decal B (Grain Tank)




SSHXE123805XE—UN—23JAN20

Decal B

Avoid serious injury or death from entanglement. Do not enter grain tank when engine is running.

Decal C (Air Compressor System) (If Equipped)

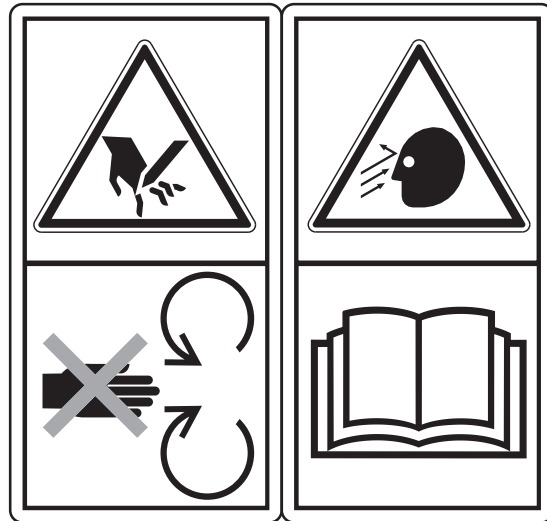

SSHXE94451XE—UN—23JAN20

Decal C

Engine components are rotating during air compressor operation. When using the air compressor system, avoid moving components.

Air system at high-pressure can dislodge debris or components. Wear protective equipment. Before servicing air system, refer to Operators Manual.

Decal D (Avoid Fires)



SSFH309021XE—UN—21JAN20

Decal D

Avoid equipment fires. The accumulation of chaff, leaves and other crop material in the engine compartment, on the engine or near moving parts can cause a fire. Inspect and clean these areas frequently.

Decal E (Rear Access Ladder and Service Platform)




SSL64995XE—UN—22JAN20

Decal E

Avoid serious injury from falling. Do not ride ladder while machine is moving.

OUC6075,00050AC-19-09APR21

Right-Hand View Residue Decals (Chopper)

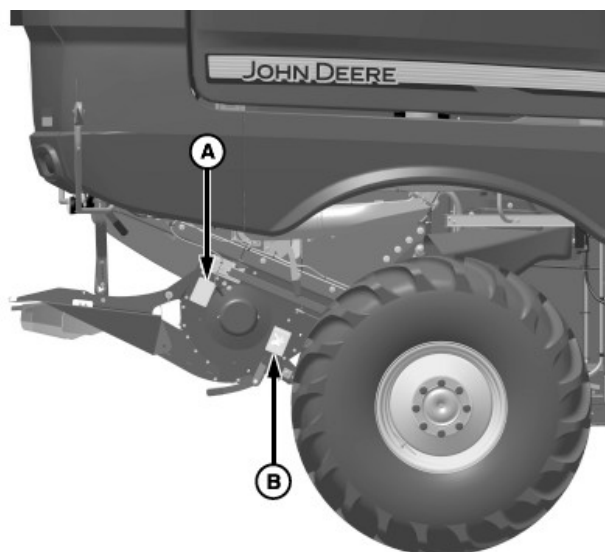

H133985—UN—06APR21

Decal B (Chopper Blades)



SSHXE159567XE—UN—22JAN20

Decal B

Decal A (Chopper Flying Debris)



SSHXE137555XE—UN—22JAN20


Decal A

Avoid serious injury from contact with chopper blades.
Chopper rotates in windrow position. Keep clear.

OOU6075,00050AD-19-06APR21

Avoid serious injury from thrown objects. Stay clear
while engine is running.

Right-Hand View Residue Decals (Spreader)

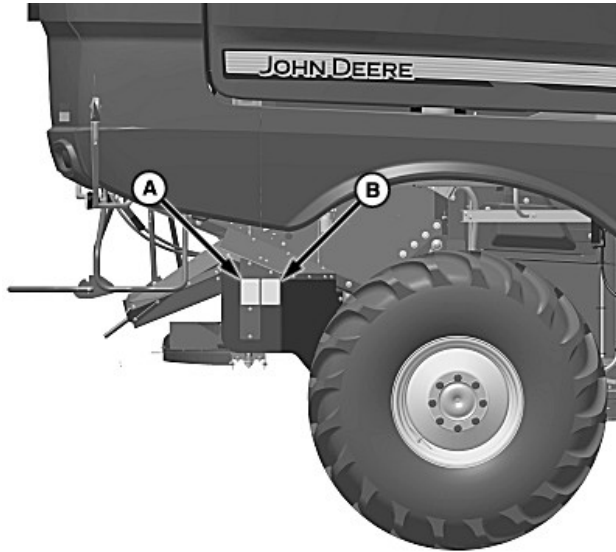

H133987—UN—06APR21

Decal A (Spreader Lockout)



SSHXE150334—UN—06APR21

Decal A

Avoid serious injury or death from crushing. Before performing service or maintenance on raised spreader, fully insert lockout pin into place.

Decal B (Spreader Flying Debris)




SSHXE137555XE—UN—22JAN20

Decal B

Avoid serious injury from thrown objects. Stay clear while engine is running.

OUO6075,00050AE-19-06APR21

Right-Hand View Decals

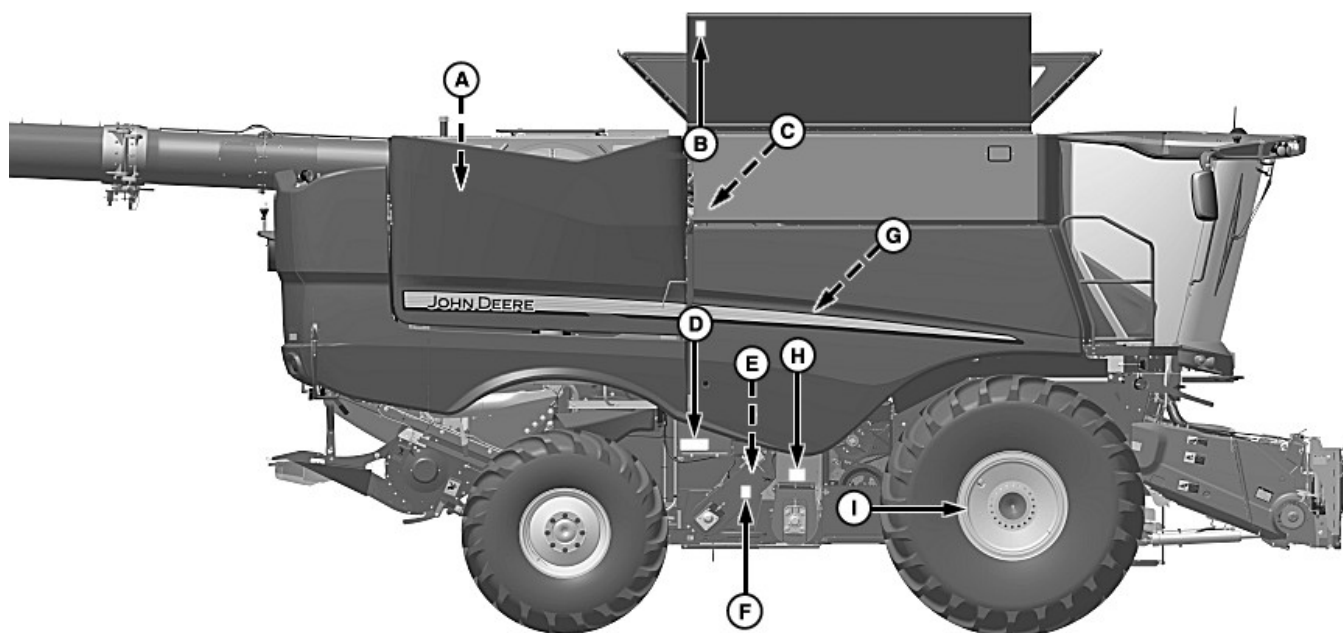

H133917—UN—09APR21

Decal A (Rotary Screen Door and Radiator Fan)



SSHXE137549XE—UN—22JAN20

Decal A

Avoid bodily injury from rotating fan and screen components. Shut engine off and remove key before opening rotary screen door.

Decal B (Avoid Grain Tank)




SSHXE123803XE—UN—21JAN20

Decal B

Avoid serious injury from falling. Do not stand or walk on grain tank covers.

Decal C (Air Compressor Reservoir) (If Equipped)

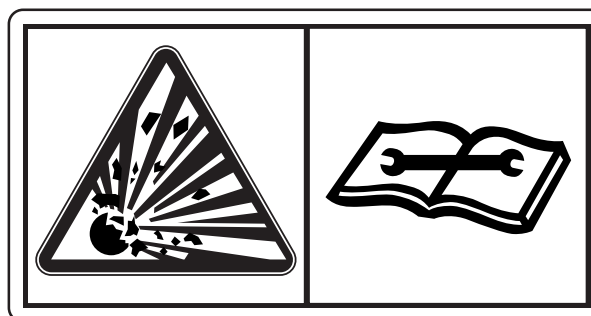


SSHXE147362XE—UN—21JAN20

Decal C

Air reservoir at high-pressure. Wear personal protective

equipment, while servicing. Before servicing, relieve all system air pressure.

Decal D (Battery Box)

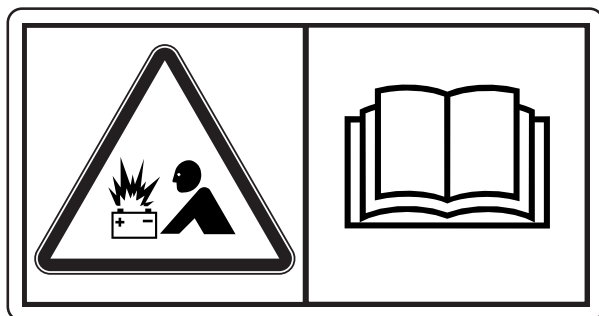


SSHXE137560XE—UN—21JAN20

Decal D

NOTE: Decal is on S760 and S770 machines.

Avoid serious injury or death from explosion. High levels of hydrogen gas can accumulate if battery box is not vented properly. Always reinstall vent tubes after performing service or maintenance on batteries or battery box.

Decal E (Tailings Elevator Sensor Laser)

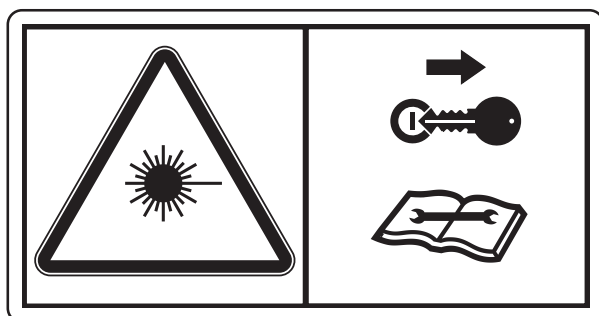

SSHXE151091XE—UN—21JAN20

Decal E (2 places)

NOTE: Decal location varies depending on style of tailings elevator.

Avoid eye exposure. Key off during service.

Decal F (Tailings Elevator Camera) and Decal G (Clean Grain Elevator Camera or Moisture Sensor Bypass)



SSHXE172410XE—UN—22MAR21

Decal F and G

NOTE: Decal F location varies depending on style of tailings elevator.

Avoid serious injury from entanglement with bypass auger. Shut engine off and remove key before cleaning.

Decal H (Clean Grain Elevator)




SSZ60326XE—UN—22JAN20

Decal H

Avoid serious injury from entanglement. Never raise shield with the engine running. Stop engine and remove key.

Decal I (Dual Wheels) (If Equipped)

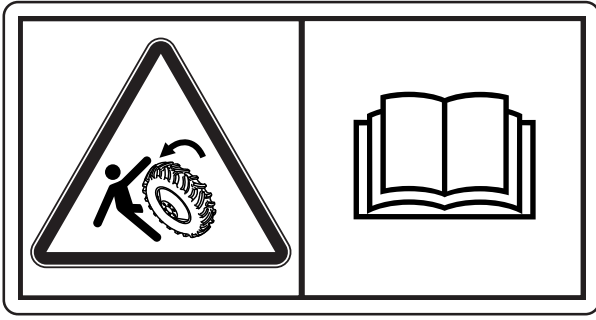

SSHXE150074XE—UN—21JAN20


Decal I

NOTE: Decal is on dual wheels.

- Dual wheels have an offset center of weight. To avoid injury, two people must install and remove wheels using pilot studs.
- Use jack to lift machine. Support machine on blocks. Install all wheel bolts before lowering machine to ground.
- See Operator's Manual.

OUO6075,00050AF-19-24MAY21

Right-Hand Cab View Decals and Right-Hand View Decals Continued

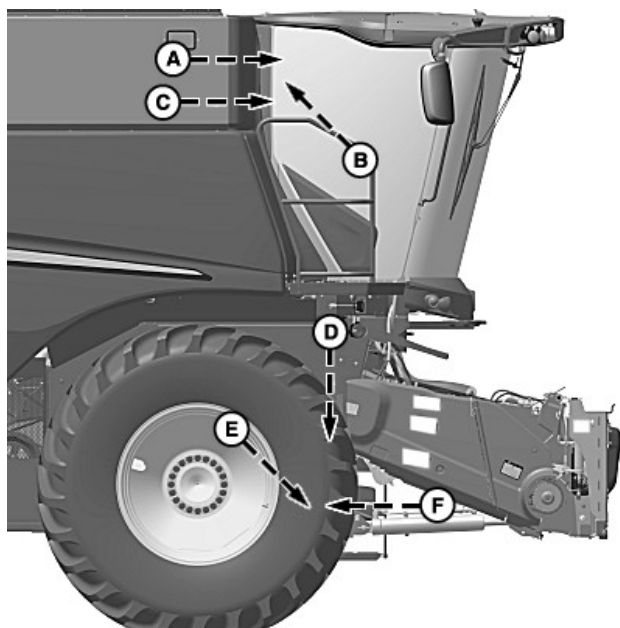

H133922—UN—01APR21

Decal A (Repair and Maintenance)



Decal A

SSZ59872XE—UN—22JAN20

Before carrying out repair and maintenance work, shut off engine, set parking brake and remove key. Refer to operator's manual for all maintenance work.

Decal B (Emergency Exit)



Decal B

SSHXE161095XE—UN—27FEB20

Seat belt may be cut and window glass broken with hammer to exit cab in an emergency. See your John Deere dealer for window replacement.

Decal C (Operator's Manual)




Decal C

SSCC40740XE—UN—22JAN20

This operator's manual contains all important information necessary for safe machine operation. Carefully observe all safety rules to avoid accidents.

Decal D (Hydraulic Oil and Gas Under Pressure)

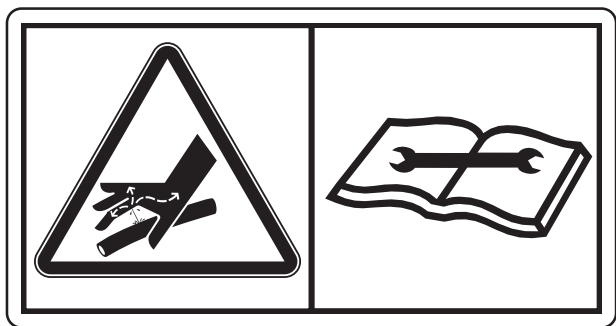

SSHXE147014XE—UN—21JAN20

Decal D

NOTE: Decal is on the stone trap door and is only on ProDrive™ transmission machines.


Avoid serious injury from contact with hydraulic oil and gas under pressure.

Before removing hydraulic components, disassembling or charging accumulators:

1. Relieve system hydraulic pressure. Refer to operator's manual and repair manual for system information.
2. Stop engine and remove key.

Use only DRY NITROGEN for recharging accumulator. See your local John Deere dealer.

Decal E (Accumulator)

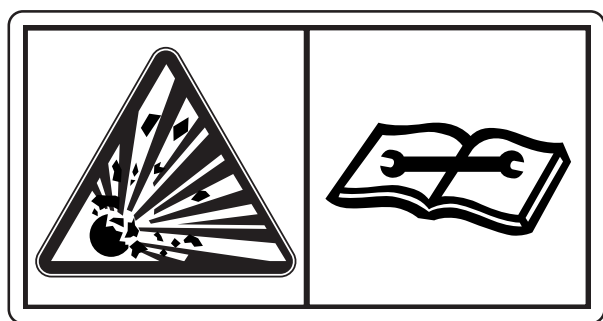

SSHXE147362XE—UN—21JAN20

Decal E

NOTE: Decal is only on ProDrive™ transmission machines.

Avoid injury from machine movement and exposure to fluid under pressure. See dealer for instruction on relieving pressure before servicing system.

Decal F (Stone Trap)




SSHXE137549XE—UN—22JAN20

Decal F

Avoid serious injury from entanglement with feed accelerator. Feed accelerator turns when separator is engaged and will run down after separator is disengaged. Do not clean out stone trap until all separator motion has stopped.


OOU6075,00050B0-19-12APR21

Right-Hand View Feeder House Decals

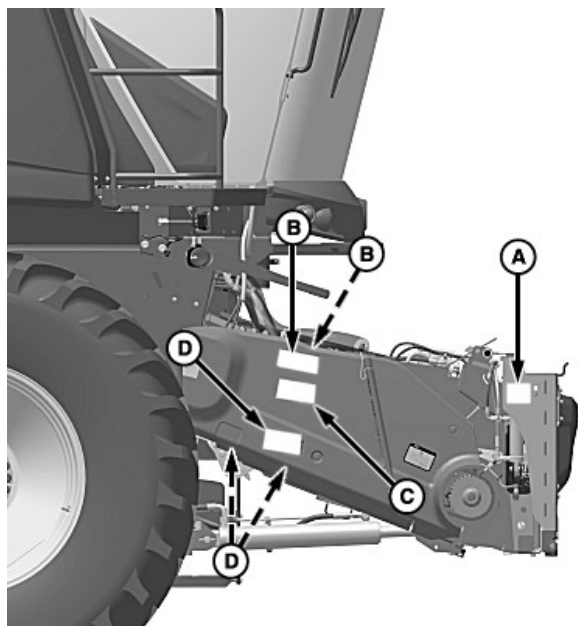

H133919—UN—31MAR21

Decal A (Feeder House Tilt Frame)

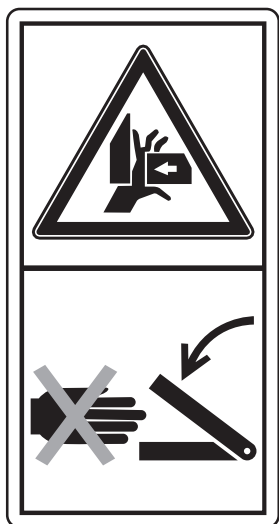

SSH154128XE—UN—22JAN20

Decal A

Header can tilt. Avoid crushing injuries. Stay clear when engine is running.

Decal B (Feeder House Safety Stop)



SSHXE123797—UN—06APR21

Decal B

NOTE: Decal is on the outside and inside of the shielding.

Avoid crushing injury. Rest header on ground or set safety stop, located on feeder house lift cylinder, before getting under header.

Decal C (Feeder House Conveyor Drive Guard)




SSHXE152718XE—UN—20APR21

Decal C

Avoid serious injury from chain entanglement. Never raise shield with the engine running. Stop engine and remove key.

Decal D (Feeder House Feed Plate Latch)

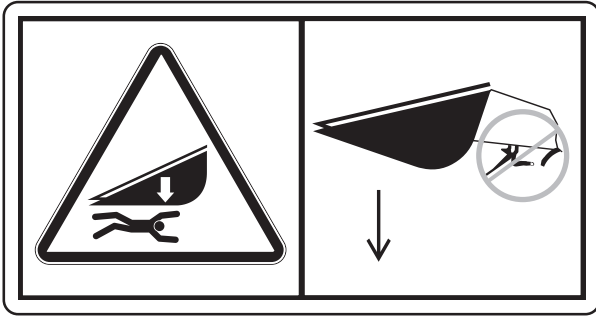

SSHXE159942—UN—06APR21


Decal D

NOTE: Decal is on the inside and outside of the feeder house shield and by the feed plate lever.

Avoid crushing injury. Rest header on ground or set safety stop, located on feeder house lift cylinder, before getting under header.

OUO6075,00050B1-19-20APR21

Top View Decals

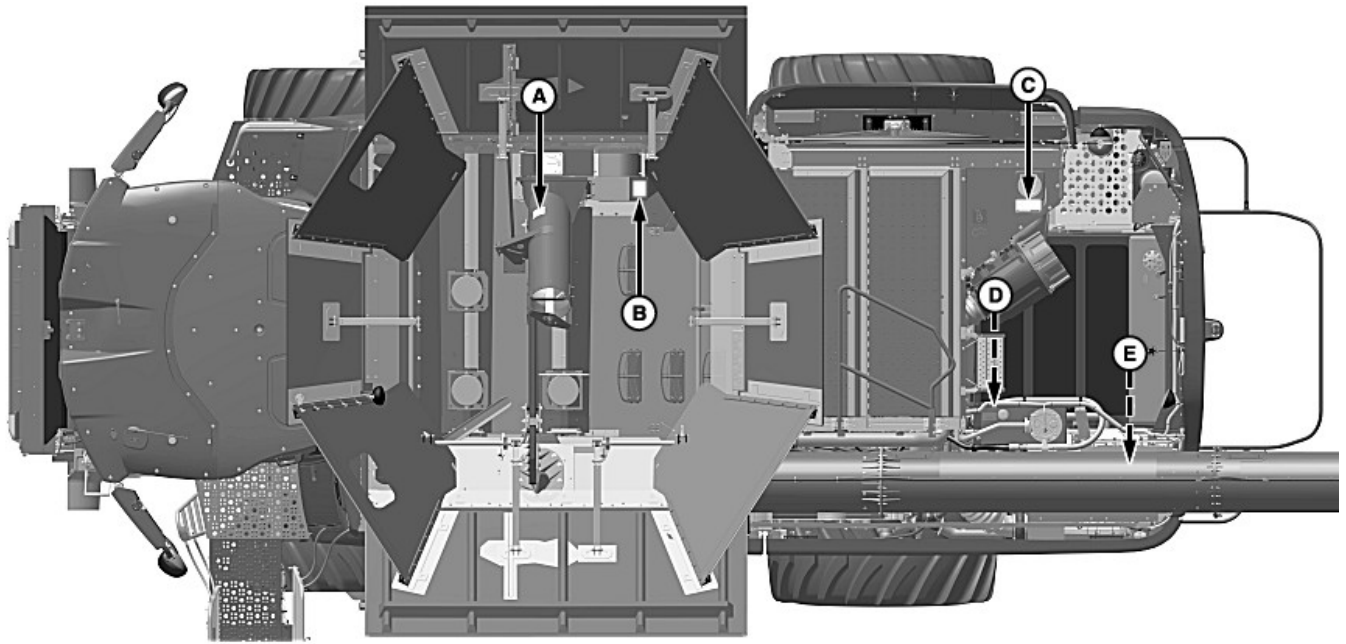

H133920—UN—31MAR21

Decal A (Clean Grain Loading Auger)

Decal B (Avoid Clean Grain Loading Auger)



SSHXE137549XE—UN—22JAN20

Decal A



SSZ60327XE—UN—22JAN20

Decal B


Avoid bodily injury from rotating auger and components:

Shut engine off and remove key before opening or closing auger.

Keep hands from pinch points when closing auger.

Avoid serious injury or death from entanglement. Do not enter grain tank when engine is running.

Decal C (Cooling System)

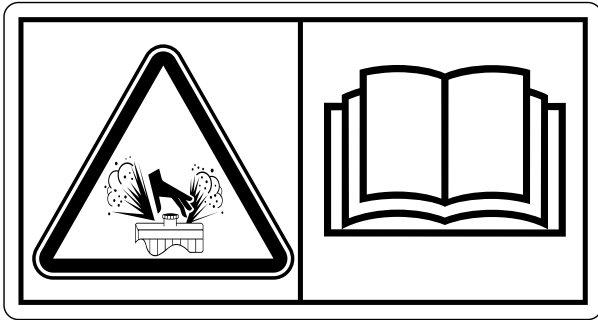


SSHXE123802—UN—06APR21

Decal C

Pressurized cooling system. To prevent burn injury due to uncontrolled release of steam and hot coolant:

- 1.Wait until system is cool.
- 2.Loosen cap slowly.
- 3.Allow pressure to release before removing cap.

Decal D (Hydraulic Oil and Gas under Pressure)

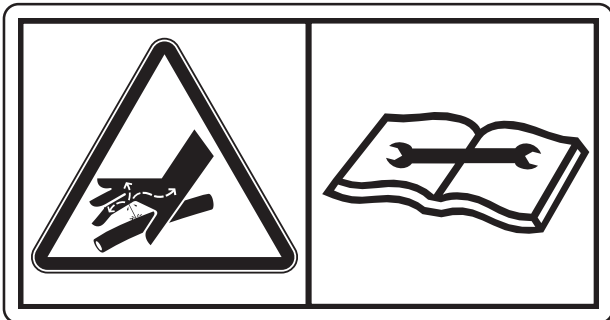

SSHXE147014XE—UN—21JAN20

Decal D

Avoid serious injury from contact with hydraulic oil and gas under pressure.

Before removing hydraulic components, disassembling or charging accumulators:

- 1.Relieve system hydraulic pressure. Refer to operator's manual and repair manual for system information.
- 2.Stop engine and remove key.

Use only DRY NITROGEN for recharging accumulator. See your local John Deere dealer.

Decal E (Exhaust Temperature) (Final Tier 4/Stage V)



SSHXE69987XE—UN—23JAN20


Decal E

Exhaust system components may be hot. To avoid severe burns, keep away from exhaust system components.

OOU6075,00050B2-19-05APR21

Operator's Station

Radio Types (Optional)

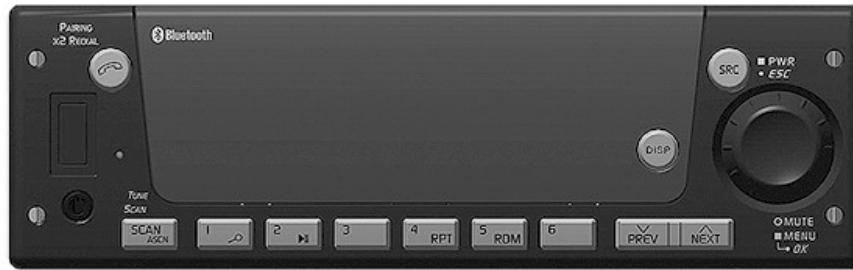

H133675—UN—11MAR21

Main Features	AM/FM Radio	Auxiliary (if equipped)	USB (if equipped)	Bluetooth®	Satellite Radio Ready	DAB+
Deluxe Radio System	X	X				
Premium Radio System	X	X	X	X ^a	X ^b	X ^c

Bluetooth is a registered trademark of Bluetooth SIG

^aBluetooth® may not be available in all locations.

^bNot available in Europe.

^cNot available in North America.

OOU6075,000501B-19-08APR21

After Market Radios

IMPORTANT: If installing or replacing an aftermarket radio, see your John Deere dealer for further information.

Program Radio for Local Area Frequency


NOTE: If a different tuner frequency is needed for the radio, see your John Deere dealer for further information.

OOU6075,0000B6E-19-21MAR11

Wave Bands (United States / Canada)		Wave Bands (All Other Countries)	
FM	87.7—107.9 MHz	UKW (FM)	87.5—108.0 MHz
AM	530—1710 kHz	MW	522—1629 kHz
WX	162.4—162.55 MHz	LW	153—279 kHz

OOU6075,0004584-19-18JAN17

Radio Controls

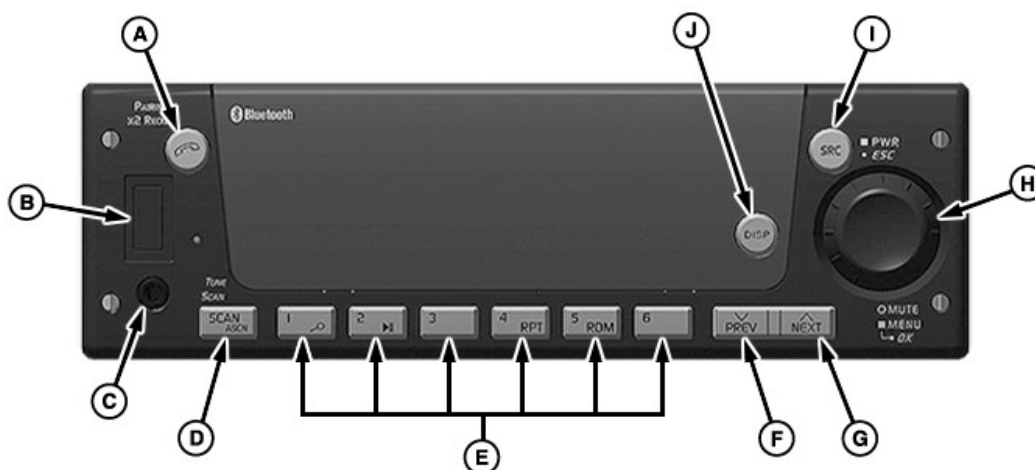

- A—Phone
- B—USB
- C—Front AUX Input
- D—SCAN/ASCN
- E—Key Block (1—6)

- F—PREV
- G—NEXT
- H—Volume/Mute/Menu/OK
- I—Source Select (SRC)/PWR/ESC
- J—DISP

Remove the radio antenna (A) from clip (B) when the radio is used.


NOTE: See radio Operator's Manual for further information.

H127145—UN—05SEP19

OOU6075,00050D9-19-28APR21

OOU6075,000501C-19-10MAR21

Radio Antenna (Style A)

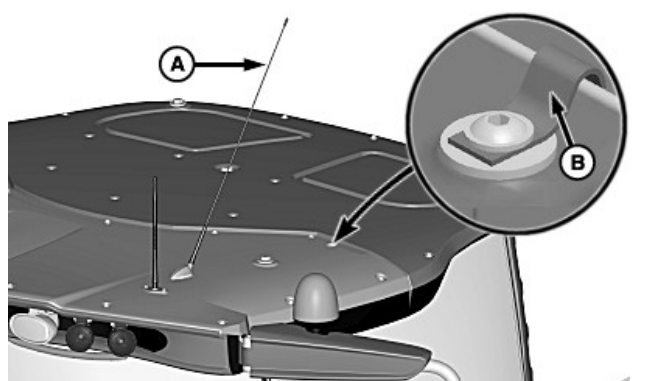


- A—Radio Antenna
- B—Clip

H117993—UN—01APR16

IMPORTANT: If the radio is not going to be used, or the machine is being transported, lower the radio antenna and retain with clip. If the clip is not available, retain the radio antenna to cab roof with tape.

Radio Antenna (Style B)

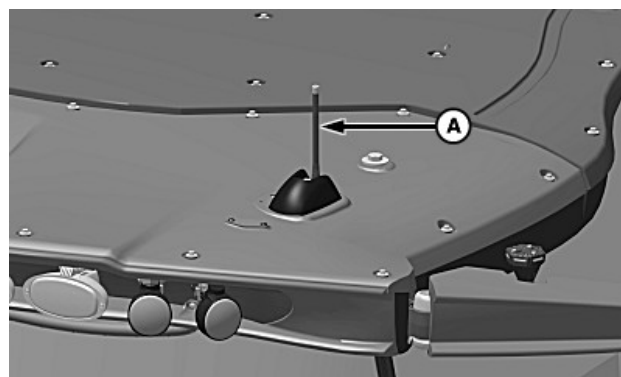

H133893—UN—30MAR21

- A—Radio Antenna

Field Operation

IMPORTANT: To prevent damage, screw the radio antenna into the base so it is hand-tight.

Screw the radio antenna (A) into the base when the radio is used.


Road Transport or Trailer Transport

IMPORTANT: If the radio is not going to be used, or the machine is being transported, remove the radio antenna and place it in the manual storage location compartment located behind the operator's seat.

Unscrew the radio antenna (A) from the base when the machine is transported and store it in the manual storage location compartment located behind the operator's seat.

OUC6075,0005093-19-14MAY21

Communications/CB Radio Wiring

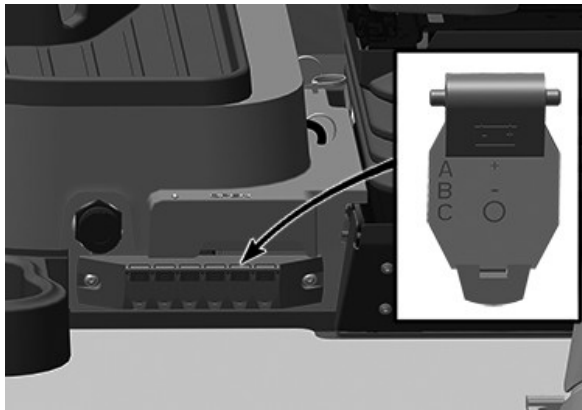

H118079—UN—19JAN17

Auxiliary Power Outlet Strip

NOTE: Maximum combined current draw for switch power is 20 amps and unswitched power is 30 amps.

- Spade terminal (A) is direct positive power at all times.
- Spade terminal (B) is ground.
- Spade terminal (C) is auxiliary power (key switch ON).


It is recommended to use spade terminals (A) and (B) to provide power and ground to the 2-way radio with high current draw. This requires the operator to manually power off the 2-way radio or utilize the battery disconnect switch at the end of the day.

It is recommended to use spade terminals (B) and (C) to provide power and ground to the 2-way radio with normal current draw. When the operator turns the key switch OFF, power to the 2-way radio is also turned OFF.


For additional information, see your John Deere dealer.

OUC6075,0004895-19-07FEB18

Communications/CB Radio Mounting

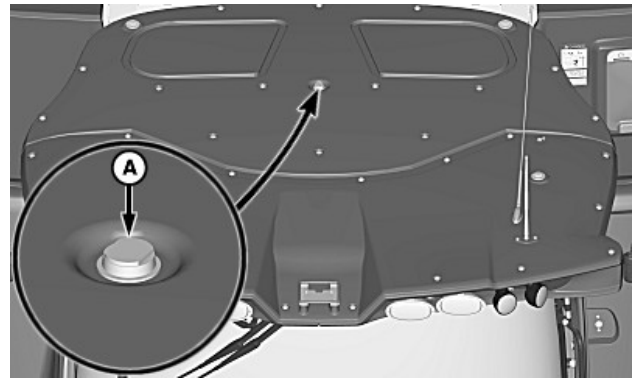


H119749—UN—31OCT16

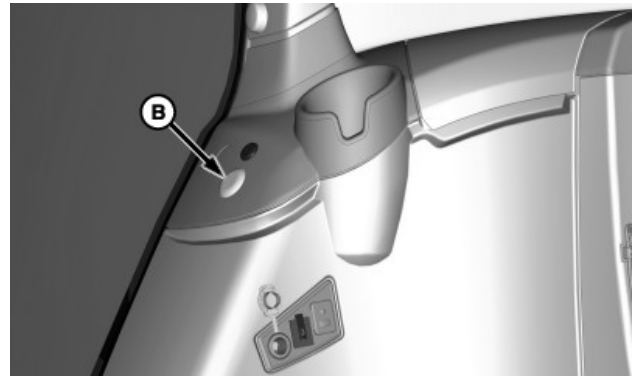

H119854—UN—31OCT16

Antenna Cable Hole (Deluxe Cab Location)

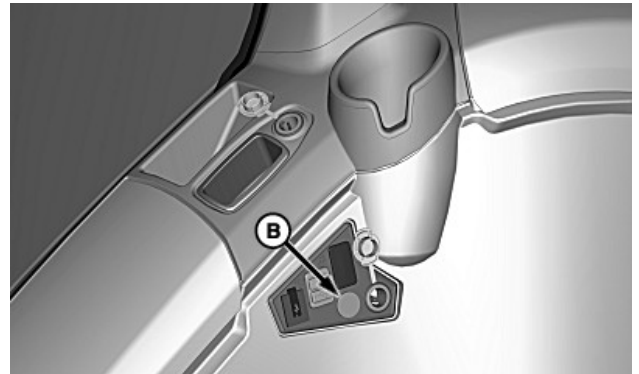

H119851—UN—31OCT16

Antenna Cable Hole (Premium Cab Location)

A—Antenna Mount
B—Plug

IMPORTANT: Do not install a radio requiring more than 3 amps or electrical system may malfunction.

To install additional communications radio, see your John Deere dealer for further information.

Antenna mount (A) is located in the center of the cab roof.

- 1.Remove dust cap from the antenna base.
- 2.Remove brass nut from the antenna base.


3. Discard rubber washer.
4. Reinstall antenna base with O-ring facing downward.
5. Install antenna.

Antenna cable is located inside the right-hand console.

1. Remove plug (B) from various locations shown.
2. Remove cup holder and locate antenna cable.
3. Route antenna cable through hole opening.



H101604—UN—18MAY11
Rear Corner Post Location (Right-Hand Rear)

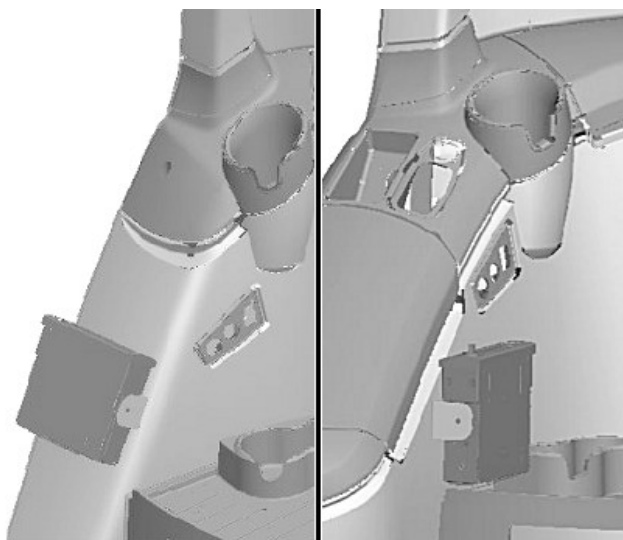

H101603—UN—18MAY11
Deluxe Cab Location / Premium Cab Location

IMPORTANT: Corner post cover must be removed before drilling. Be careful not to damage wiring harnesses and coolant hoses in locations shown when drilling holes or installing hardware.


Use bracket supplied by manufacturer as a template to

locate and drill holes as required in various locations shown. Use self-tapping screws or cap screws with nuts to mount bracket.


NOTE: Certain broadcast bands may cause interference with the position receiver. Select a different broadcast band or see your John Deere dealer if signal losses are noticed with the position receiver.

OUO6075,000439C-19-31OCT16

Cab Ladder Positions

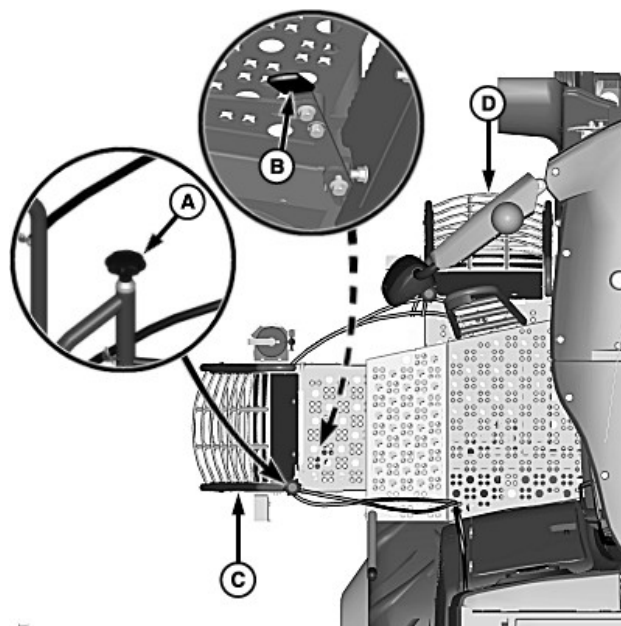

H96381—UN—14MAY10
Ladder Positions (Single Tire Configuration)

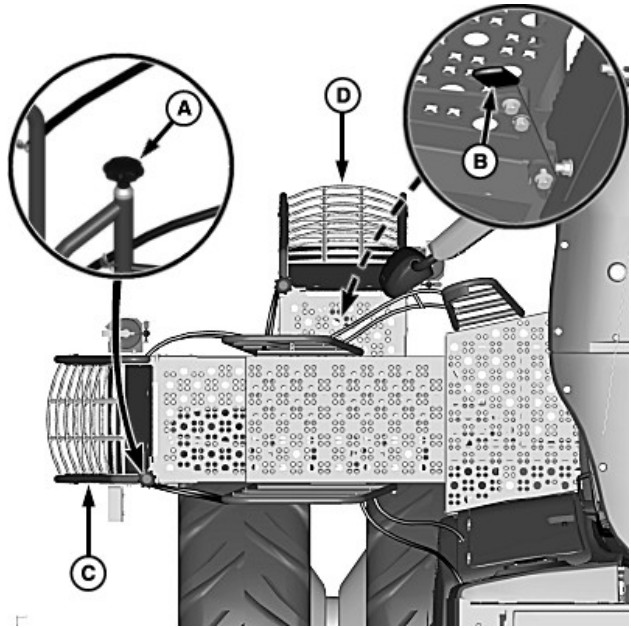

H96380—UN—14MAY10

Ladder Positions (Dual Tire Configuration)

- A—Handle
B—Lever
C—Field Position
D—Roadway Driving Position

CAUTION: Do not ride or attempt to climb front or rear ladders while machine is moving.

Ladder can be positioned from ground or on the ladder landing with handle (A) or lever (B).

If the ladder latch appears loose, clean out latch pin area. Do not use oil or grease in this area.

Swing ladder forward or rearward and lock into these different positions:

- **Position (C):** is for the normal operating field conditions.
- **Position (D):** is for transporting the machine on public roadways.

CAUTION: Always swing ladder to position (D) before transporting on public roadways in order to reduce machine width and position marker/hazard light towards oncoming motorists.

OUO6075,0004563-19-08DEC16

Fire Extinguisher (Europe)



H92841—UN—16SEP08

General-Purpose Powder / Liquid Fire Extinguisher

CAUTION: Fire extinguishers must meet local government laws and regulations:

- A general-purpose powder fire extinguisher that is at least 6 kg (13 lb)
- A pressurized liquid fire extinguisher (if equipped) with minimum volume of 8 L (2.1 gal)

NOTE: Fire extinguishers shown may vary depending on country requirements and fire extinguisher manufacturers.

A general-purpose powder fire extinguisher and a pressurized liquid fire extinguisher with mounting brackets are installed on your machine.

Read label on extinguishers and become familiar with instructions on how to use and maintain them. Once extinguisher is discharged, no matter for how long, it must be recharged or replaced.

IMPORTANT: Pressurized liquid fire extinguisher must not be exposed to freezing temperatures unless protected with antifreeze. See instructions decal on extinguisher for further information.

OUO6075,00042F6-19-20JUN16

Fire Extinguishers (Australia and New Zealand)



H117754—UN—17MAR16

General-Purpose Powder / Liquid Fire Extinguisher

CAUTION: Fire extinguishers must meet local government laws and regulations:

- A general-purpose powder fire extinguisher that is at least 4 kg (10 lb)
- A pressurized liquid fire extinguisher with minimum volume of 8 L (2.1 gal)

NOTE: Fire extinguishers shown may vary depending on country requirements and fire extinguisher manufacturers.

A general-purpose powder fire extinguisher and a pressurized liquid fire extinguisher with mounting brackets are installed on your machine.

Read label on extinguishers and become familiar with instructions on how to use and maintain them. Once extinguisher is discharged, no matter for how long, it must be recharged or replaced.

IMPORTANT: Pressurized liquid fire extinguisher must not be exposed to freezing temperatures unless protected with antifreeze. See instructions decal on extinguisher for further information.

OUC6075.00042F7-19-20JUN16

Fire Extinguishers (Eurasian Economic Union)



H117754—UN—17MAR16

General-Purpose Powder / Liquid-Foam Combination Fire Extinguisher

CAUTION: Fire extinguishers must meet local government laws and regulations:

- A general-purpose powder fire extinguisher that is at least 6 kg (13 lb)
- A pressurized liquid-foam combination fire extinguisher with minimum volume of 8 L (2.1 gal)

NOTE: Fire extinguishers shown may vary depending on country requirements and fire extinguisher manufacturers.

A general-purpose powder fire extinguisher and a pressurized liquid-foam combination fire extinguisher with mounting brackets are installed on your machine.

Read label on extinguishers and become familiar with instructions on how to use and maintain them. Once extinguisher is discharged, no matter for how long, it must be recharged or replaced.

IMPORTANT: Pressurized liquid-foam combination fire extinguisher must not be exposed to freezing temperatures. See instructions decal on extinguisher for further information.

OUC6075.00049FE-19-28JUN18

Fire Extinguisher Locations



H123653—UN—02MAR18

Front Fire Extinguisher Location



H123654—UN—02MAR18

Rear Fire Extinguisher Location


NOTE: Fire extinguishers shown may vary depending on country requirements and fire extinguisher manufacturers.

A general-purpose fire extinguisher is on the front ladder platform.

A pressurized liquid fire extinguisher (if equipped) is on the inside of the right-hand rear engine access door.

OUC6075,0004911-19-02MAR18

Handrails and Right-Hand Landing Access

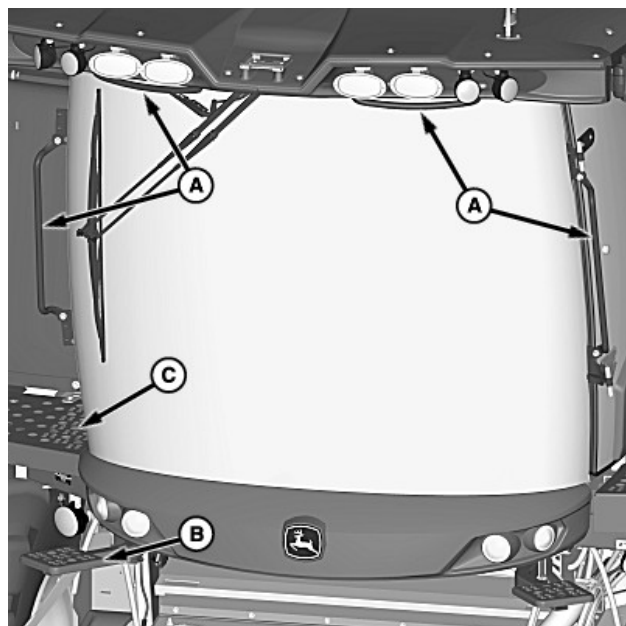

H119679—UN—20OCT16

A—Handrails
B—Step
C—Landing

CAUTION: Raise feeder house completely and lower safety stop on the feeder house lift cylinder.

IMPORTANT: Close cab door before using handrail.

Do not manually move wiper arm. This could cause damage to wiper mechanism.

Use ladder and landing to clean left side of cab.

Access feeder house by using step on the left-hand side.

Use handrails (A) on either side of cab and at top of cab.

Stand on the raised feeder house to clean front cab window and service headlights or wiper.


Use step (B) and landing (C) to clean right side of the cab.

OUC6075,000439D-19-15DEC16

Break-In Service


Breaking-In Engine

Tier 2/Stage II

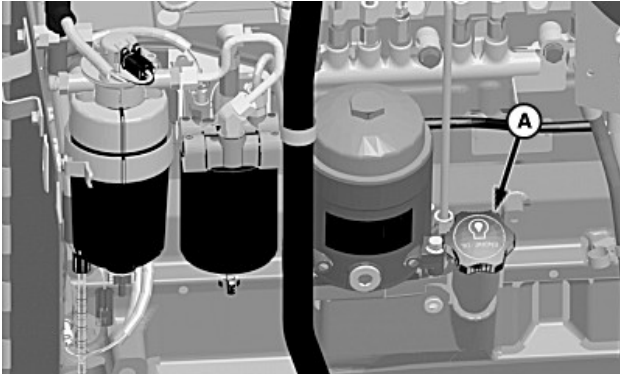


H95375—UN—16FEB10

Style A

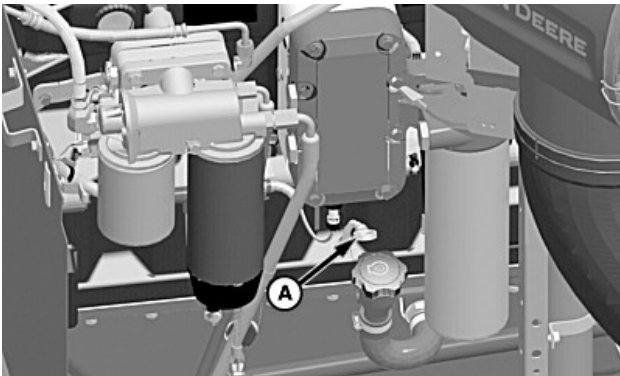

H95419—UN—19FEB10

Style B

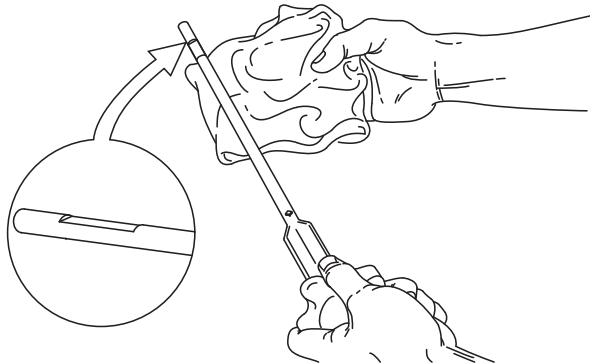

H112961—UN—17FEB15

A—Dipstick

Engine is factory filled with John Deere Break-In Plus™ Engine Oil. During the break-in period, add John Deere Break-In Plus™ Engine Oil as needed to maintain the specified oil level.

Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.

If John Deere Break-In™ Engine Oil is used during the initial operation of a new or rebuilt engine, change the oil and filter at a maximum of 100 hours.

If John Deere Break-In Plus™ Engine Oil is used, change oil and filter at a minimum of 100 hours and a maximum equal to interval specified for John Deere Plus-50™ II or Plus-50™ Oil. See Fuel and Lubricants section for oil recommendations.

IMPORTANT: DO NOT add make-up oil until the oil level is **BELOW** the **ADD** mark on dipstick. John Deere Break-In Plus™ Oil should be used to make up any oil consumed during this period.

DO NOT use Plus-50™ or Plus-50™ II Engine Oil during the break-in period of a new engine or engine that has had a major overhaul. These oils will not allow a new or overhauled engine to properly wear during this break-in period.

Check engine oil level frequently during the break-in period. If oil must be added during this period, John Deere Break-In Plus™ Oil is preferred.

IMPORTANT: DO NOT fill above the **FULL** mark. Oil levels anywhere within the cross-hatch marks are considered in the acceptable operating range.

NOTE: Some increase in oil consumption may be expected when low viscosity oils are used. Check oil levels more frequently.

Avoid prolonged periods of engine idling or sustained maximum load operation. If the engine idles longer than 5 minutes, stop engine.


After the break-in period, change the engine oil and replace the engine oil filter. Fill the crankcase with John Deere Plus-50™ II, John Deere Plus-50™, or seasonal viscosity grade oil. See Fuel and Lubricants section for oil recommendations.

NOTE: Verify that the dipstick is screwed or pushed completely into the housing before removing to check the oil level.

Remove dipstick (A) and check the oil level daily. The oil level should be between the ADD and the top of cross-hatch area on the dipstick. If the oil level is below the ADD mark, add oil as needed. See the Fuel and Lubricants section for oil recommendations.


Watch for leaks. Do not operate the engine when the oil level is below the ADD mark on the dipstick.

Final Tier 4/Stage V

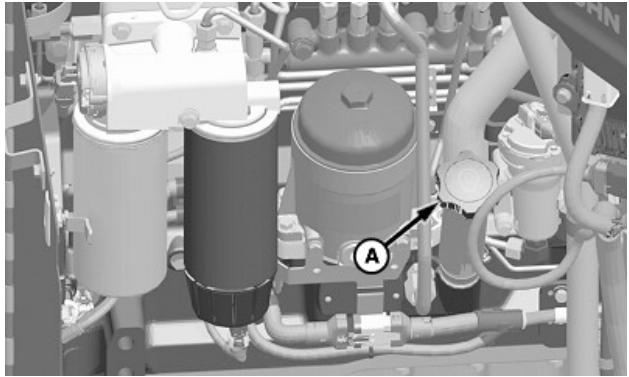


H95306—UN—11FEB10

Style A

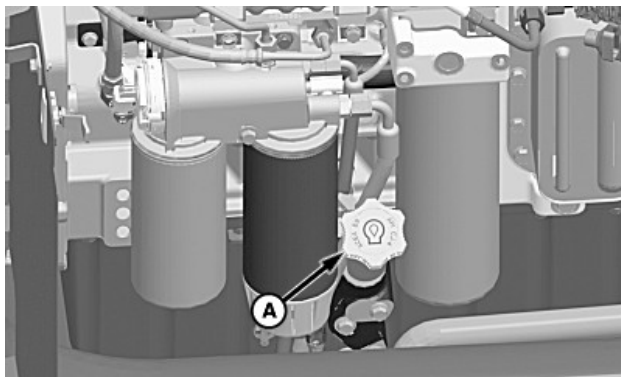

H95396—UN—17FEB10

Style B

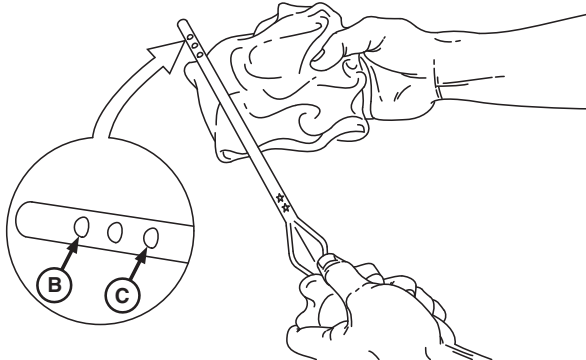

H113142—UN—11MAR15

A—Dipstick
B—ADD Mark
C—FULL Mark

Engine is factory filled with John Deere Break-In Plus™ Engine Oil. During the break-in period, add John Deere Break-In Plus™ Engine Oil as needed to maintain the specified oil level.

Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.

During the initial operation of a new or rebuilt engine, change the oil and filter between a minimum of 100 hours and a maximum equal to the interval specified for

John Deere Plus-50™ II Oil. See Fuel and Lubricants section for oil recommendations.

During the initial operation of a new or rebuilt engine, change the oil and filter between a minimum of 100 hours and a maximum of 400 hours.

IMPORTANT: DO NOT add make-up oil until the oil level is **BELOW** the **ADD** mark (B) on dipstick. John Deere Break-In Plus™ Oil should be used to make up any oil consumed during this period.

DO NOT use Plus-50™ or Plus-50™ II Engine Oil during the break-in period of a new engine or engine that has had a major overhaul. These oils will not allow a new or overhauled engine to properly wear during this break-in period.

Check engine oil level frequently during the break-in period. If oil must be added during this period, John Deere Break-In Plus™ Oil is preferred.

IMPORTANT: DO NOT fill above the **FULL** mark (C). Oil levels anywhere within the cross-hatch marks are considered in the acceptable operating range.

If John Deere Break-In Plus™ Engine Oil is not available, use an SAE 10W-30 viscosity grade diesel engine oil meeting one of the following:

- API Service Category CK-4
- API Service Category CJ-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E6

If one of these oils is used during the initial operation of a new or rebuilt engine, change the oil and filter between a minimum of 100 hours and a maximum of 250 hours.

NOTE: Some increase in oil consumption may be expected when low viscosity oils are used. Check oil levels more frequently.

Avoid prolonged periods of engine idling or sustained maximum load operation. If the engine idles longer than 5 minutes, stop engine.

After the break-in period, change the engine oil and replace the engine oil filter. Fill the crankcase with John Deere Plus-50™ II or other diesel engine oil. See Fuel and Lubricants section for oil recommendations.

NOTE: Verify that the dipstick is screwed completely into housing before removing to check oil level.

Remove dipstick (A) and check the oil level daily. The oil level should be between the ADD and the top of cross-


Break-In Plus is a trademark of Deere & Company

Plus-50 is a trademark of Deere & Company

hatch area on the dipstick. If the oil level is below the ADD mark, add oil as needed. See Fuel and Lubricants section for oil recommendations.

Watch for leaks. Do not operate the engine when the oil level is below the ADD mark on the dipstick.

All Machines

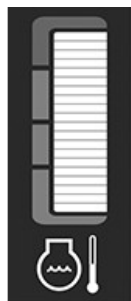

Temperature Indicator


H117823—UN—22DEC16

If air temperature is below -10°C (14°F), use an engine block heater (if equipped).

Temperature indicator should read in the green zone during normal operation.

IMPORTANT: Prevent possible engine damage. Do not shut OFF the engine if the temperature warning light comes ON or the bars enter red zone. Shutting OFF the engine causes coolant temperature to rise even higher, resulting in machine damage. Reduce the load and run the engine at a slower speed to lower the coolant temperature. Unless the temperature drops quickly, stop the engine and determine the cause before resuming operation.

Watch the temperature gauge closely. If the gauge moves into the red zone, reduce the load on the engine and determine the cause before resuming operation.

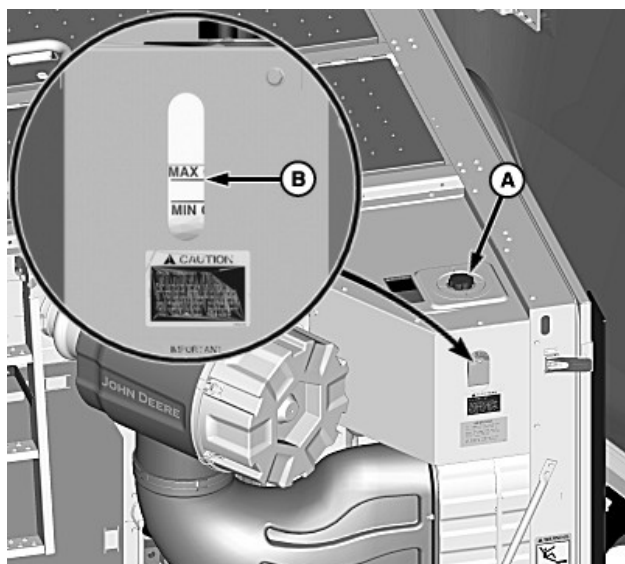

H105922—UN—05OCT12

A—Surge Tank Cap
B—Max Cold Line

CAUTION: Shut OFF engine, set park brake, and remove key. Avoid being scalded when opening the surge tank cap. Never open the cap when the engine is hot. Open the cap slowly to relieve the pressure.

Check the coolant level periodically and watch for signs of leaks. Remove surge tank cap (A), then pour coolant into the surge tank and fill to "Max Cold" line (B).

NOTE: The coolant level must be between the "Max Cold" and "Min Cold" lines. Add coolant as needed if coolant is below "Min Cold" line.

OUC6075,0004D8A-19-18FEB20

Belt Drives Adjustment - First 50 Hours

CAUTION: Never check or adjust belt drives with engine running. Shut OFF engine, set parking brake and remove key.

Check all spring loaded belt idler adjustments after first 50 hours of operation. Most belt stretch occurs during the first hours of service.

After initial adjustments, check belt adjustment as required. Washer on spring tensioner should be positioned between end of gauge and bottom of step.

OUC6075,000056C-19-14JAN10

Break-In Check Before First 100 Hours

Perform the daily or 10-hour service. See Lubrication and Maintenance section.

Watch for engine temperature and engine oil pressure diagnostic trouble codes. See Combine Overview Applications or Operator's Station Help for further information.


Check the engine oil level (if needed, add John Deere Break-In™ Plus Oil) and the coolant level frequently and watch for signs of leaks.

Check engine air intake system hoses and clamps for tightness.


OUC6075,0004DAB-19-18FEB20

Break-In is a trademark of Deere & Company

Break-In Service After 100 Hours (Tier 2/ Stage II)

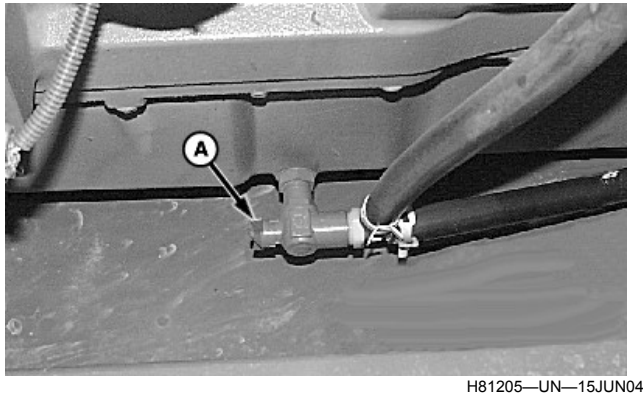


H81205—UN—15JUN04

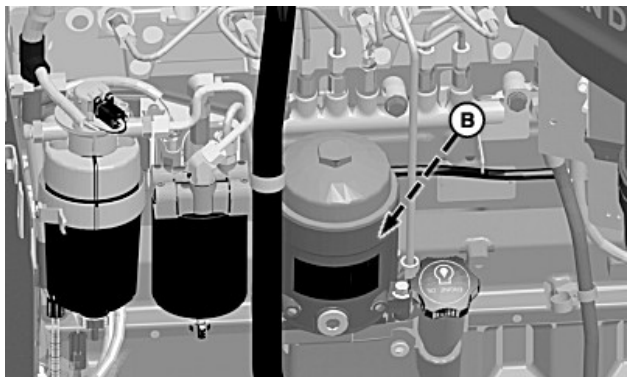

H95377—UN—16FEB10

Style A

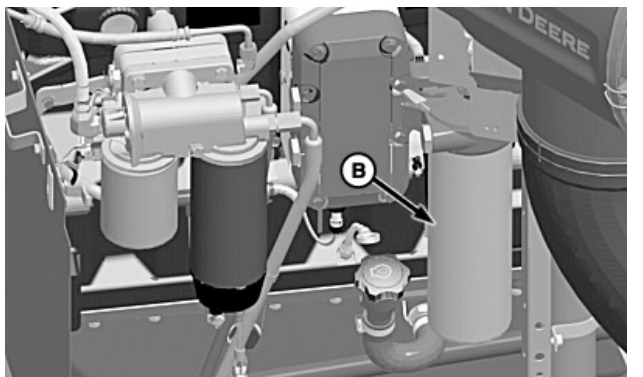

H95420—UN—09MAR10

Style B

A—Drain
B—Oil Filter

Drain crankcase oil by opening drain (A) and close drain once oil is drained.


Remove and retain cap and dispose of the oil filter (B) properly.

Install oil filter and retain with cap.


Fill crankcase with the proper amount of engine oil. See Fuel and Lubricants section for oil recommendations. See Specifications section for oil capacity.

OUO6075,00044D4-19-19DEC16

Break-In Service After 400 Hours (Final Tier 4/Stage V)

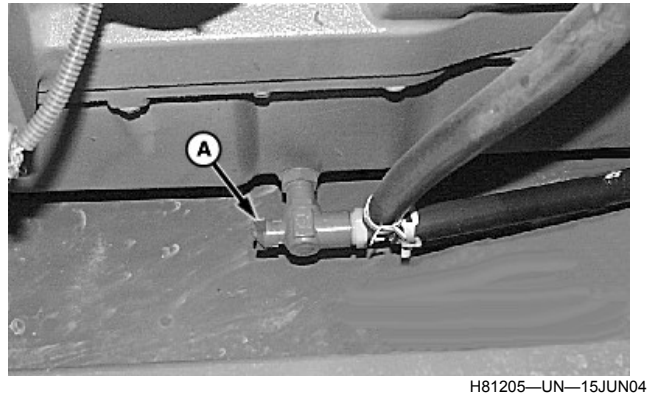


H81205—UN—15JUN04

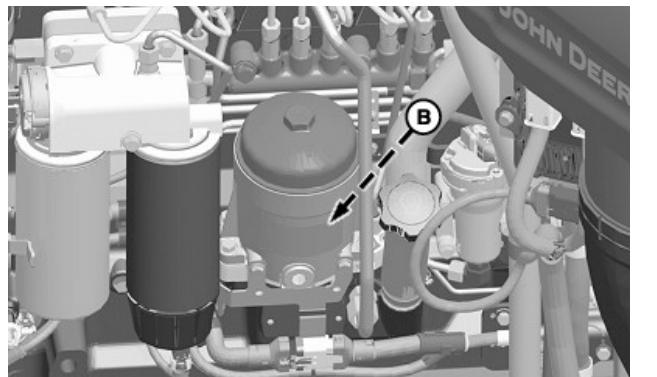

H95310—UN—11FEB10

Style A

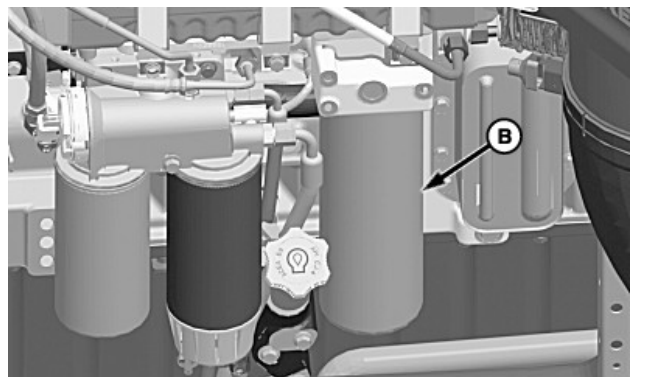

H95397—UN—17FEB10

Style B

A—Drain
B—Oil Filter

Drain crankcase oil by opening drain (A) and close drain once oil is drained.

Remove and retain cap and dispose of the oil filter (B) properly.


Install oil filter and retain with cap.

Fill crankcase with the proper amount of engine oil. See Fuel and Lubricants section for oil recommendations. See Specifications section for oil capacity.

OUO6075,00047D7-19-10NOV17


Prestarting Checks

Engine Oil Level

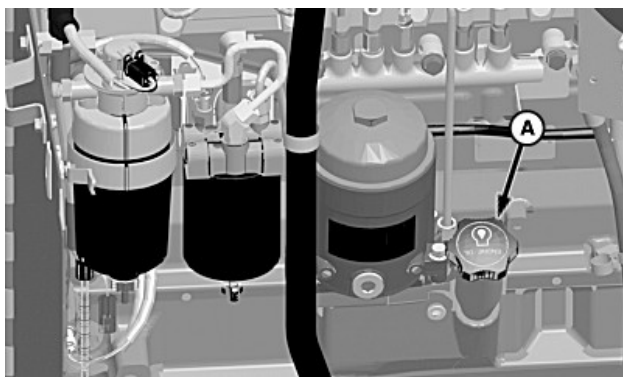


H95375—UN—16FEB10

Tier 2/Stage II (Style A)

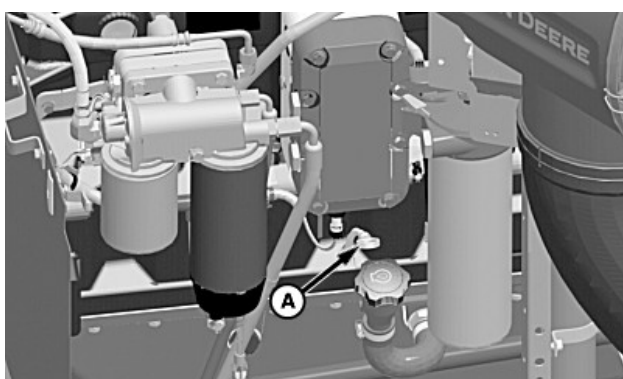


H95419—UN—19FEB10

Tier 2/Stage II (Style B)

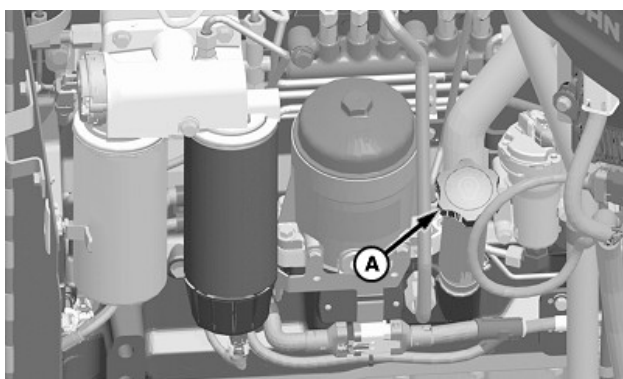


H95306—UN—11FEB10

Final Tier 4/Stage V (Style A)

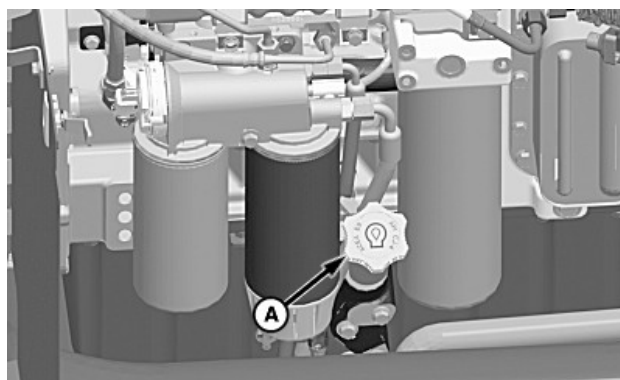


H95396—UN—17FEB10

Final Tier 4/Stage V (Style B)

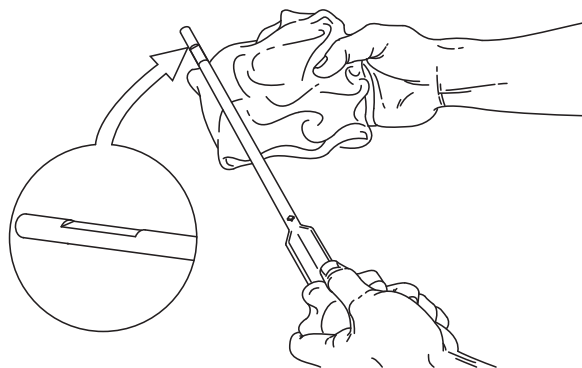

H112961—UN—17FEB15

Tier 2/Stage II

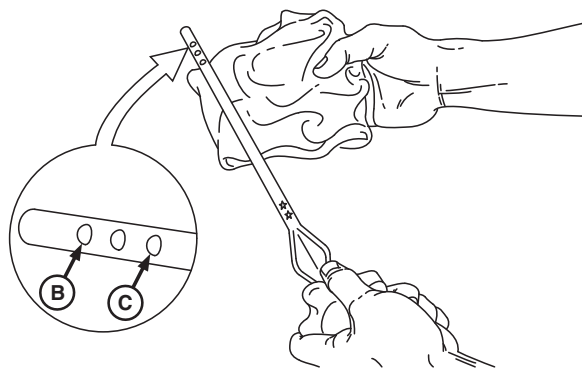

H113142—UN—11MAR15

Final Tier 4/Stage V

A—Dipstick
B—ADD Mark
C—FULL Mark

IMPORTANT: It is vital to maintain engine oil at correct levels to ensure a long service life. Check oil level with the machine parked on level ground.


NOTE: Verify that dipstick is screwed or pushed completely into housing before removing to check oil level.

Check engine oil level with dipstick (A) daily. Do not operate engine when oil level is below "ADD" mark on dipstick.

Remove dipstick and check oil level. Oil level should be between "ADD" and top of cross-hatch area on dipstick. If oil level is below "ADD" mark, add oil as needed. See Fuel and Lubricants section for oil recommendations.


Ouo6075,00047DB-19-13NOV17

Hydrostatic/Hydraulic Oil Level

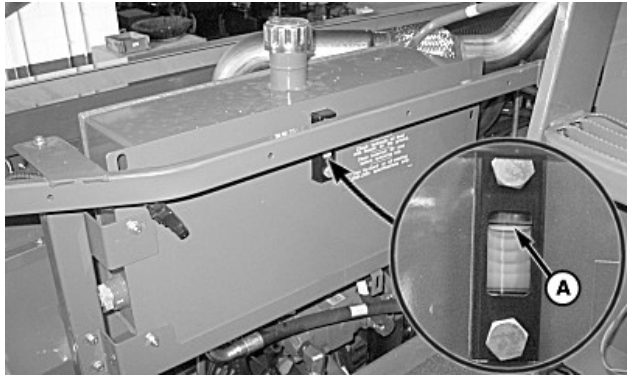

H97523—UN—04AUG10

Style A

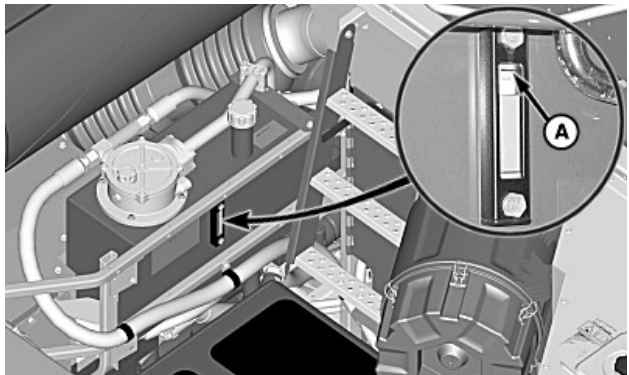


H106938—UN—14FEB13

Style B


A—Sight Glass

Check hydrostatic/hydraulic oil level with header on ground and all cylinders retracted. Oil level must be at top of sight glass (A) with the feeder house fully lowered. Add oil as needed, but do not overfill.

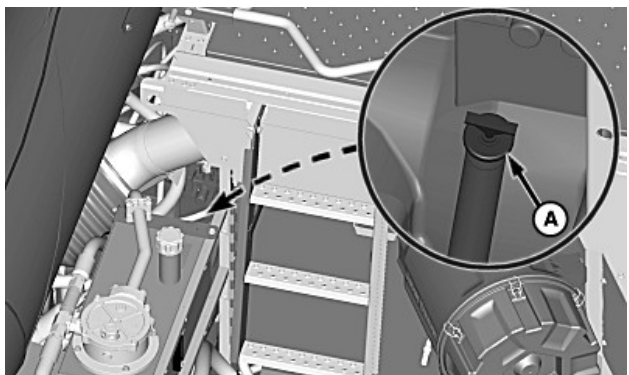

H135702—UN—03JUN22

Hydraulic Oil Level (engine gear case)

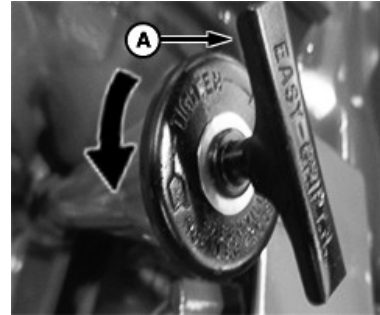

BML020460—UN—28SEP20


A—Dipstick

1. Shut off engine, set park brake, and remove key before checking hydraulic oil at the engine gear case.
2. Turn the dipstick (A) counterclockwise to retract the expansion.
3. Remove the dipstick and check the oil level.
4. The oil level must not be below the "ADD" mark on the dipstick.
5. Insert the dipstick and turn clockwise for proper expansion and sealing.

NOTE: On machines with ProDrive transmission, run the engine at slow speed for few minutes before checking the oil level.

ouo6075,1654290732011-19-09JUN22

Coolant Level

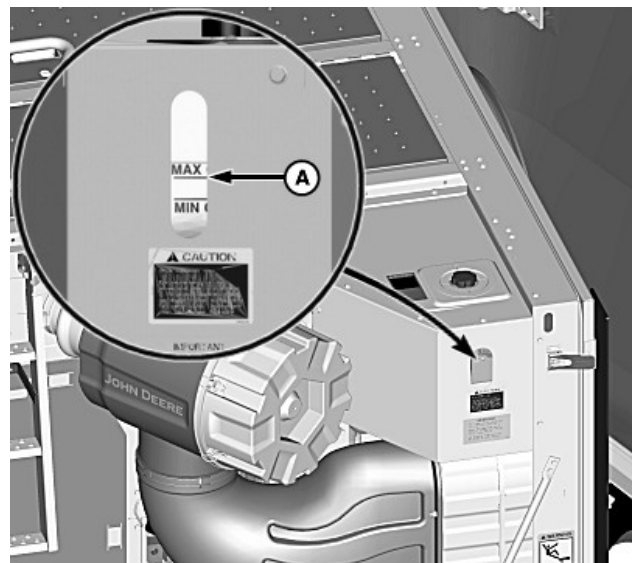

H105923—UN—05OCT12

A—Max Cold Line


CAUTION: Shut OFF engine, set park brake and remove key. Avoid being scalded when opening surge tank cap. Never open cap when engine is hot. Open cap slowly to relieve pressure.

IMPORTANT: A special cap is used on the surge tank. If cap is damaged or missing, it must be replaced by an equivalent cap.

Allow engine to cool. Coolant level in the surge tank should be at "Max Cold" line (A).

NOTE: Coolant level must be between "Max Cold" and "Min Cold" lines. Add coolant as needed if coolant is below "Min Cold" line.


OUO6075,00041CB-19-11APR16

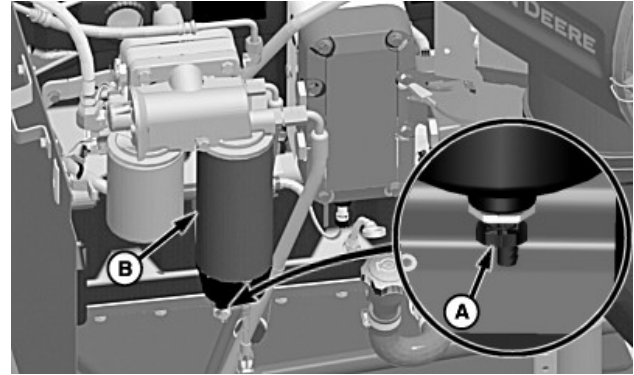

H104938—UN—28FEB12

Style B

Fuel System

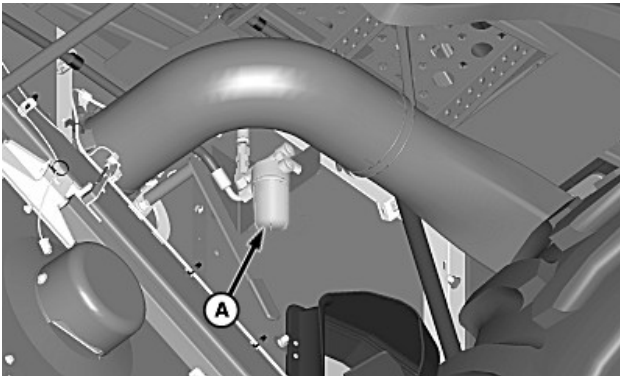

H98377—UN—30SEP10

Fuel Precleaner Bowl

A—Precleaner Bowl


CAUTION: Shut OFF engine, set park brake and remove key before performing maintenance work on fuel filters.

NOTE: Make sure that precleaner bowl is fully seated to prevent air from entering the fuel system.

Close fuel shutoff valve on the fuel tank.

Remove precleaner bowl (A) and clean screen if dirty fuel was used.

Tier 2/Stage II

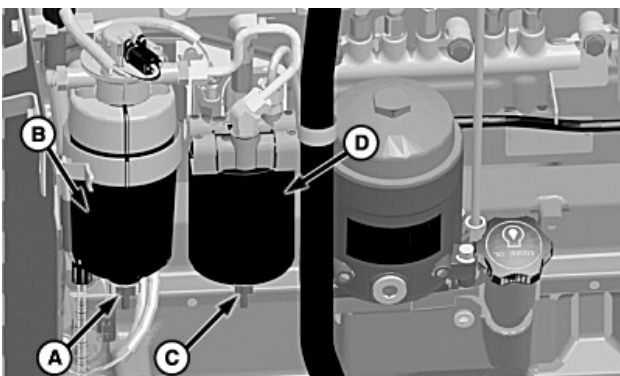

H104937—UN—28FEB12

Style A


A—Drain
B—Primary Fuel Filter
C—Drain
D—Secondary Fuel Filter

Open drain (A) to inspect the fuel system for water in the primary filter (B).

Style A Only: Open drain (C) to inspect fuel system for water in the secondary filter (D).


If the problem persists, change fuel filters. See Maintenance—As Required (Engine Fluids and Filters) section for further information.

Final Tier 4/Stage V

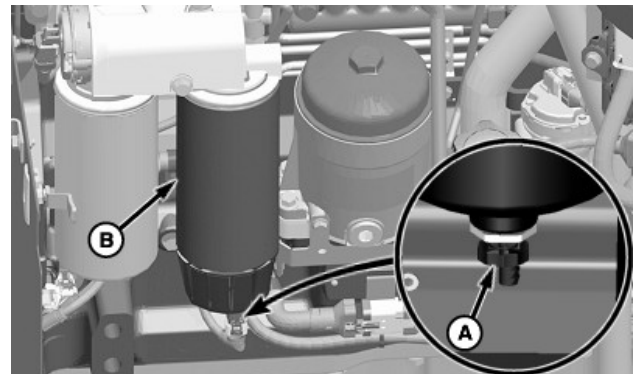

H104939—UN—28FEB12

Style A

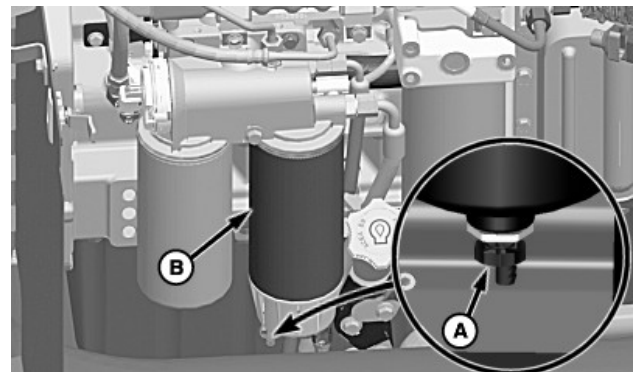

H104940—UN—28FEB12

Style B


A—Drain
B—Primary Fuel Filter

Open drain (A) to inspect the fuel system for water in the primary filter (B).

If the problem persists, change fuel filters. See Maintenance—As Required (Engine Fluids and Filters) section for further information.

OOU6075,00047DC-19-13NOV17

Fuel Tank Breather

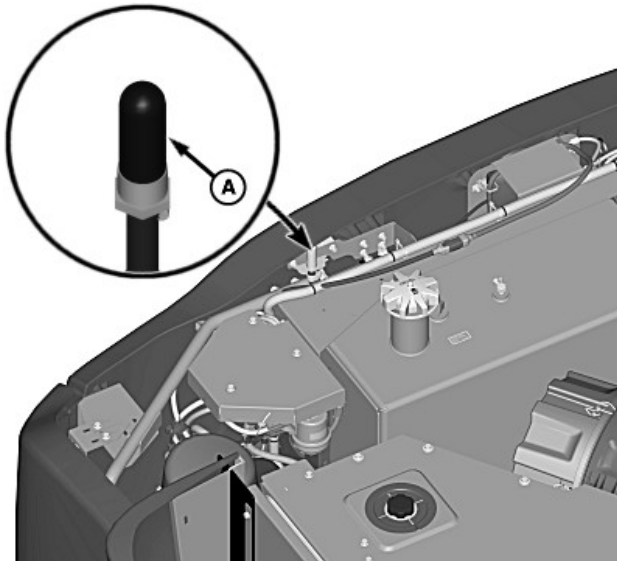


H125427—UN—04DEC18

A—Fuel Tank Breather

Visually inspect fuel tank breather (A) weekly. Do not allow excessive amounts of chaff or debris to collect on breather. If the breather is covered with debris, it does not allow fuel tank to breathe. Remove fuel tank breather from hose and clean.

OOU6075,0004A5B-19-04DEC18

Diesel Exhaust Fluid (DEF) Tank Breather (Final Tier 4/Stage V)

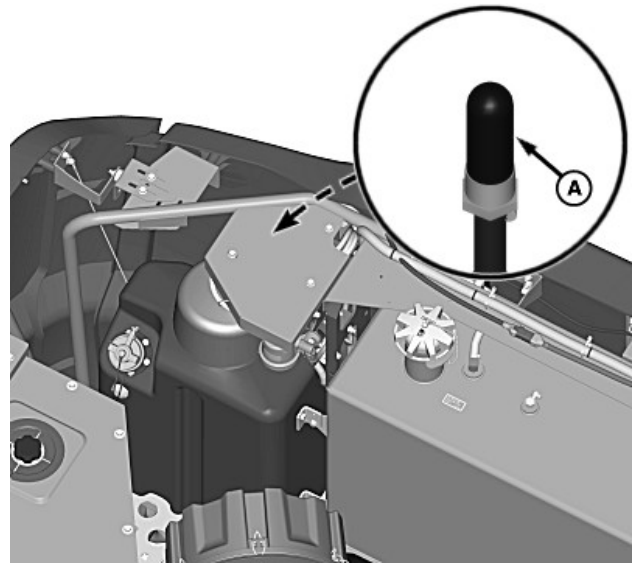


H125428—UN—04DEC18

A—Diesel Exhaust Fluid (DEF) Tank Breather

Visually inspect Diesel Exhaust Fluid (DEF) tank breather (A) weekly. Do not allow excessive amounts of chaff or debris to collect on breather. If the breather is covered with debris, it does not allow tank to breathe. Remove breather from hose and clean.

OOU6075,0004A5C-19-04DEC18

Engine Air Scoop Positions

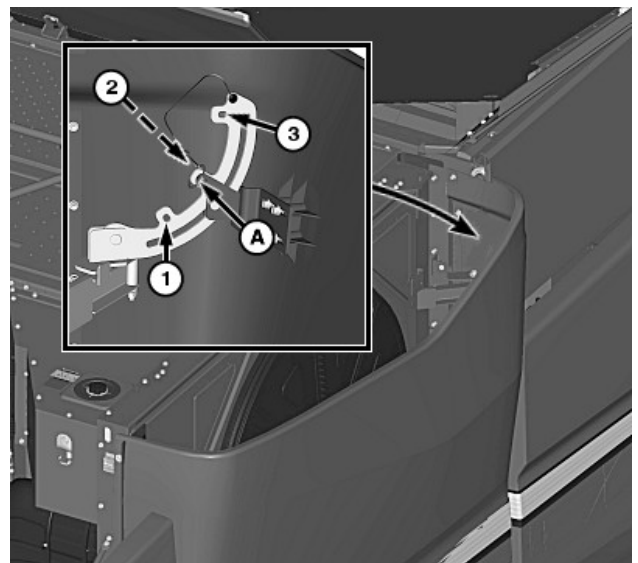

H114497—UN—10JUN15

A—Lock-Out Pin
1—Transport Position
2—Standard Field Position
3—Extended Field Position

NOTE: Before field operations, verify that engine air scoop is moved to selected field position.

Remove lock-out pin (A) and rotate engine air scoop to desired position.

Transport Position:

IMPORTANT: Engine air scoop must be placed into transport position when local roadway restrictions apply. Follow your local country regulations.

Verify that engine air scoop is moved to transport position (1) when machine must be transported.

Refer to Position Engine Air Scoop (Transport Position) in this section for further information.

Standard Field Position:

IMPORTANT: Engine air scoop must be placed into standard field position when harvesting to prevent overheating of engine.

Verify that engine air scoop is in standard field position (2) when operating in normal field conditions.

Refer to Position Engine Air Scoop (Standard Field Position) in this section for further information.

Extended Field Position:

IMPORTANT: Engine air scoop must be placed into extended field position when harvesting in high ambient temperature conditions and/or high altitude areas to prevent overheating of engine.

Verify that engine air scoop is in extended field position (3) for increased cooling capacity when harvesting in high ambient temperature conditions and/or high altitude areas.


Refer to Position Engine Air Scoop (Extended Field Position) in this section for further information.

SS43267,000061F-19-10JUN15

Position Engine Air Scoop (Standard Field Position)



H114498—UN—10JUN15

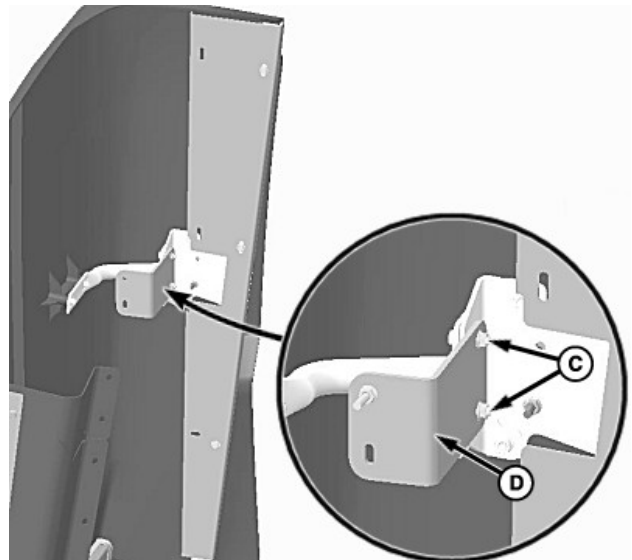

H111378—UN—06JUN14


Transport Position

- A—Lock-Out Pin
- B—Holes
- C—Nuts, M8 (2 used)
- D—Bracket


IMPORTANT: Engine air scoop must be placed into standard field position when harvesting to prevent overheating of engine.

1. Remove lock-out pin (A) and move air scoop outward until holes (B) align.
2. Install previously removed lock-out pin.
3. Remove nuts (C) and bracket (D).

4. Install previously removed nuts back onto cap screws.

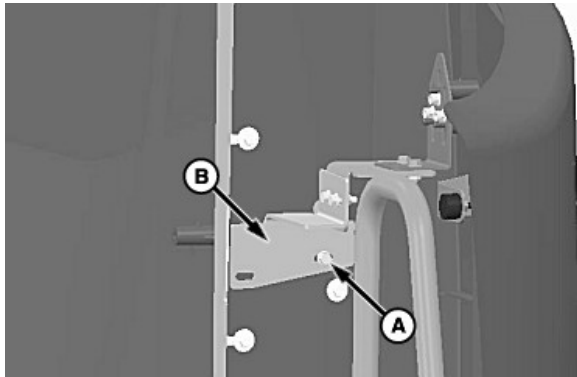

H111392—UN—06JUN14

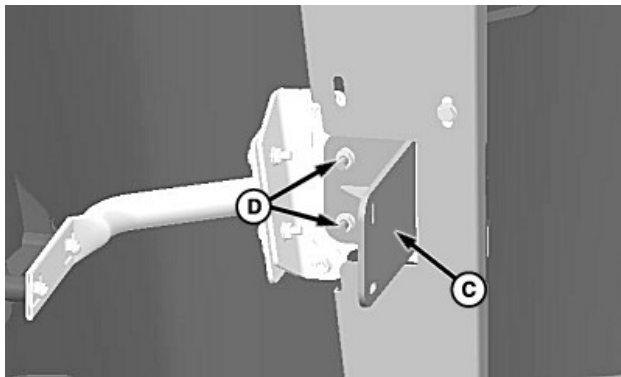

H111393—UN—06JUN14

Standard Field Position

- A—Cap Screw, M8 x 40
- B—Bracket
- C—Bracket
- D—Nuts, M8 (2 used)


5. Move air scoop outward and install cap screw (A) through bracket (B) as shown.
6. Install bracket (C) as shown and retain with nuts (D).

SS43267.0000620-19-10JUN15

Position Engine Air Scoop (Extended Field Position)



H114499—UN—10JUN15

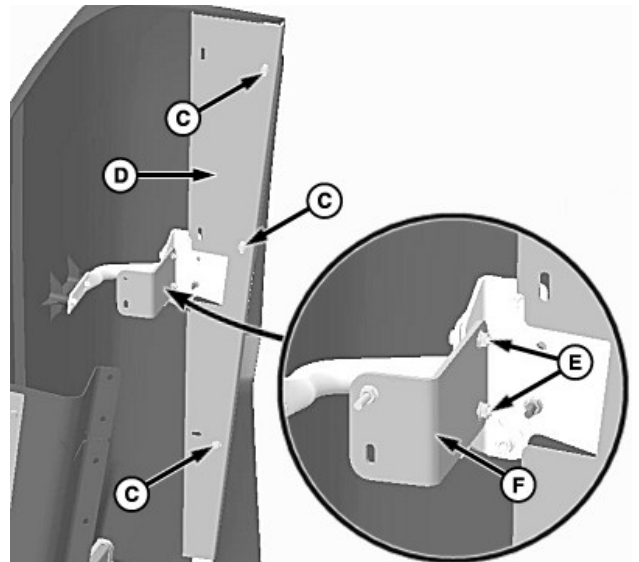

H111386—UN—06JUN14


Transport Position

- A—Lock-Out Pin
- B—Holes
- C—Cap Screws, M8 x 25 (3 used)
- D—Panel
- E—Nut, M8 (2 used)
- F—Bracket

IMPORTANT: Engine air scoop must be placed into extended field position when harvesting in high ambient temperature conditions and/or high altitude areas to prevent overheating of engine.


1. Remove lock-out pin (A) and move air scoop outward until hole (B) align.

2. Install previously removed lock-out pin.
3. Remove and retain cap screws (C) from panel (D).
4. Remove nuts (E) and bracket (F).

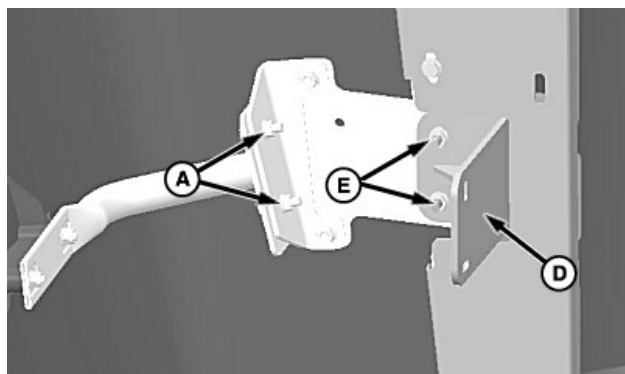

H111394—UN—06JUN14


Extended Field Position

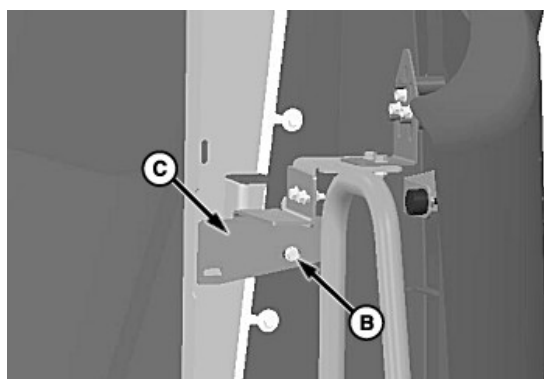

H111395—UN—06JUN14

- A—Nuts, M8 (2 used)
- B—Cap Screws, M8 x 40 (2 used)
- C—Bracket
- D—Bracket
- E—Nuts, M8 (2 used)

5. Install previously removed nuts (A) onto cap screws.
6. Move air scoop outward and install cap screw (B) through bracket (C) as shown.
7. Install bracket (D) as shown and retain with nuts (E).

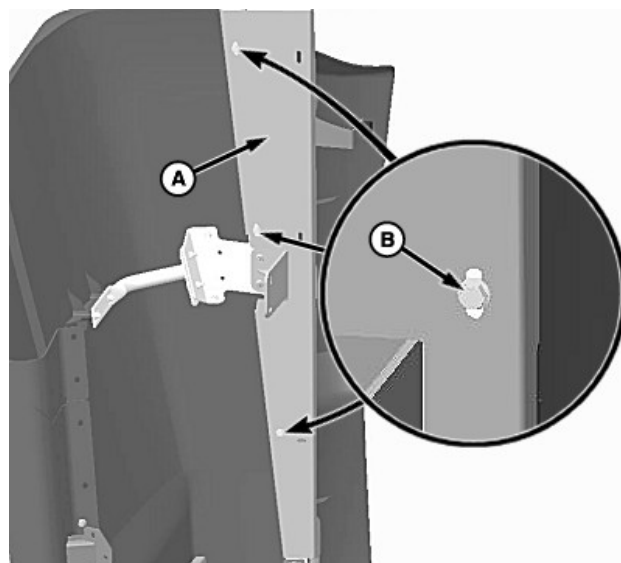

H111396—UN—06JUN14

- A—Panel
- B—Cap Screws, M8 x 25 (3 used)


8. Install previously removed panel (A) and retain with cap screws (B).

SS43267,0000621-19-10JUN15

Position Engine Air Scoop (Transport Position)



H114500—UN—10JUN15

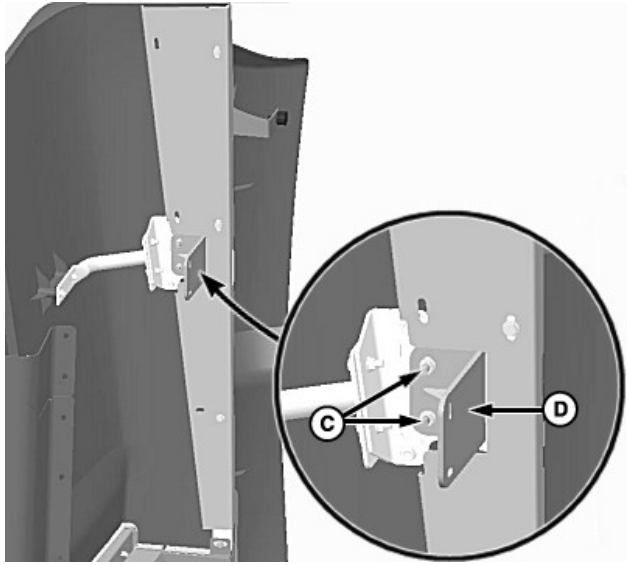

H111374—UN—06JUN14


Standard Field Position

- A—Lock-Out Pin
- B—Holes
- C—Cap Screws, M8 x 40 and Nuts, M8 (2 used)
- D—Bracket


IMPORTANT: Engine air scoop must be placed into transport position when local roadway restrictions apply. Follow your local country regulations.

NOTE: Before field operations, engine air scoop must be moved to selected field position.

1. Remove lock-out pin (A) and move air scoop inward until holes (B) align.
2. Install previously removed lock-out pin.
3. Remove and retain cap screws and nuts (C) and bracket (D).

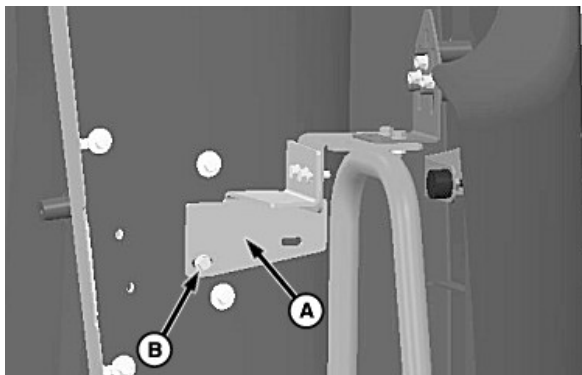

H111390—UN—06JUN14

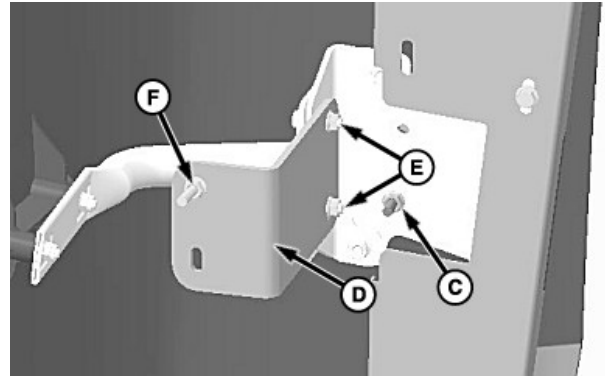

H111391—UN—06JUN14


Transport Position

- A—Bracket
- B—Cap Screw, M8 x 40
- C—Nut, M8
- D—Bracket
- E—Nuts, M8 (2 used)
- F—Cap Screw, M8 x 40 and Nut, M8

4. Move air scoop inward and install cap screw through bracket (A) as shown and retain with nut (C).
5. Install previously removed bracket (D) and retain with nuts (E).
6. Install previously removed cap screw and nut (F) on bracket as shown.

SS43267.0000622-19-10JUN15

Cleaning Engine Compartment

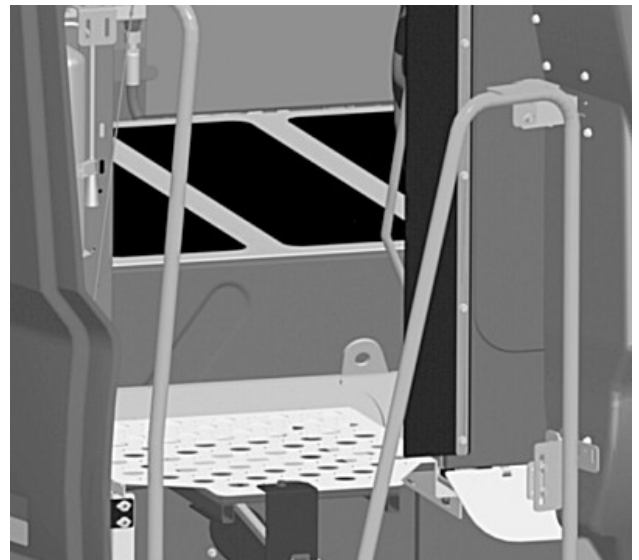

H95319—UN—11FEB10



CAUTION: Do not clean engine or engine compartment with engine running. Dirt, oil, chaff, and crop debris in engine compartment and on engine is a fire hazard. Direction of wind, type of crop and its moisture content can all have an effect on where and how much chaff and debris accumulate. Check and clean this area frequently.


OUO6075,0000575-19-17MAR10

Operating the Engine


Clean Exhaust Filter Safely



TS227—UN—15APR13

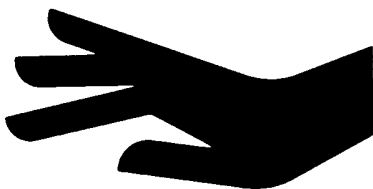

TS271—UN—23AUG88

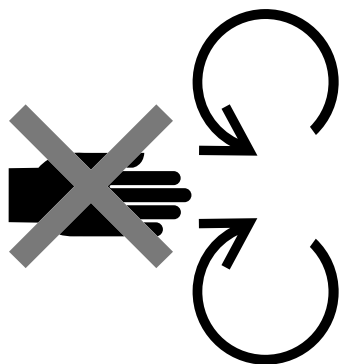

TS1693—UN—09DEC09

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire

or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.

If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine

Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

OUO6075,0000E81-19-07FEB12

Avoid Hot Exhaust



RG17488—UN—21AUG09

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.


Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

DX,EXHAUST-19-20AUG09


Aftertreatment Indicators Overview




RG22487—UN—21AUG13
Diesel Exhaust Fluid Indicator

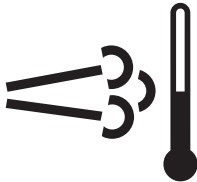


RG22488—UN—21AUG13
Engine Emissions Temperature Indicator

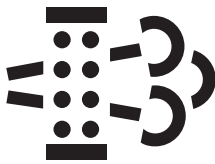

RG22489—UN—21AUG13
Exhaust Filter Indicator

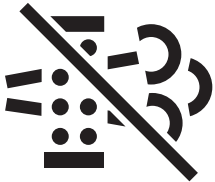

RG22490—UN—21AUG13
Auto Cleaning Disabled Indicator

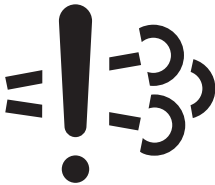

RG22491—UN—21AUG13
Engine Emissions System Malfunction Indicator



RG22492—UN—21AUG13
Warning Indicator



RG22493—UN—21AUG13
Engine Stop Indicator

IMPORTANT: The operator will be informed by the operator warning system when the emission control system does not function correctly and/or an engine malfunction is detected by the engine control unit. Ignoring the operator warning signals will lead to an emission related derate, resulting in an effective disablement of non-road mobile machinery operation.

It is essential to take prompt action to rectify any incorrect operation, use or maintenance of the emissions control system in accordance with the rectification measures indicated by the warnings referenced below.

The Diesel Exhaust Fluid (DEF) indicator illuminates when the DEF is low. Fill DEF tank.

When the DEF indicator is combined with the warning indicator or engine stop indicator engine performance is reduced by the Engine Control Unit (ECU) because the DEF is below a measurable level. Fill DEF tank.

When engine emissions temperature indicator illuminates exhaust gas temperature is high, elevated idle is active, or exhaust filter cleaning is in process. The machine can be operated as normal unless the operator determines the machine is not in a safe location for high exhaust temperatures and disables auto cleaning.

When engine emissions temperature indicator is combined with the warning indicator or engine stop indicator engine performance is reduced by the ECU because the exhaust gas temperature is higher than expected. Follow Diagnostic Trouble Code (DTC) procedure or see your authorized servicing dealer.

When the exhaust filter indicator illuminates the exhaust filter cleaning is in process, aftertreatment system has a fault, or the exhaust filter is in need of cleaning and the operator has disabled auto exhaust filter cleaning. If conditions are safe, the operator should enable the auto exhaust filter clean setting or perform manual service regeneration or follow DTC procedure.

When the exhaust filter indicator is combined with the warning indicator engine performance is reduced by the ECU because there is an aftertreatment system fault or the soot level of the exhaust filter is moderately high. If conditions are safe, the operator should enable the auto exhaust filter clean function. If conditions are not safe, the operator should move the machine to a safe location and engage the auto exhaust filter cleaning mode.

Perform manual service regeneration or follow DTC procedure.

When the exhaust filter indicator is combined with the engine stop indicator engine performance is further reduced by the ECU because there is an aftertreatment system fault or the soot level of the exhaust filter is extremely high. If this combination is present, see your authorized servicing dealer.

The auto cleaning disabled indicator illuminates when the operator has engaged the request to disable the auto exhaust filter cleaning function. This icon remains illuminated until the operator re-engages automatic exhaust filter cleaning from the diagnostic gauge. Disabling auto mode is not recommended for any situation unless it is safety-related or if the fuel tank lacks the required fuel to complete the cleaning process.


The engine emissions system malfunction indicator illuminates when engine emissions are outside of normal operating range or engine emissions system fault. Follow DTC procedure or see your authorized servicing dealer.

When the engine emissions system malfunction indicator is combined with the warning indicator engine performance is reduced by the ECU because the engine emissions are outside of normal operating range or engine emissions system fault. Follow DTC procedure or see your authorized servicing dealer.

DX,AFTRTREAT,INDCATRS-19-12FEB18

Required Machine Stop Warning

Machine Stop Mandate Occurs

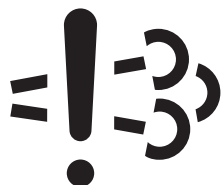

RG22491—UN—21AUG13

IMPORTANT: In some situations, machine engine power may be reduced as described. On notification, immediately place the machine in a safe state and or move it to a safe location. A mandated machine stop can only be removed by a service technician.

Engine Emissions System Malfunction Indicator illuminates when an emission-related fault occurs.



RG22492—UN—21AUG13


Warning Indicator illuminates when a condition exists which requires operator action.



RG22493—UN—21AUG13

Engine Stop Indicator illuminates when a condition exists which requires immediate operator action and service.

Emission System Fault Has Occurred

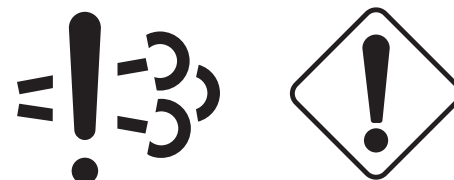

RG26361—UN—04SEP14

30 minutes remaining, Engine Emissions System Malfunction and Warning Indicators are illuminated and alarm sounds to warn operator of emissions-related fault. "Less than 30 minutes to Power Restriction" displayed on machines with display.

- Engine power is normal.
- Machine operation is normal.
- Place machine in a safe state.
- Contact service provider.



RG26972—UN—26MAR15

20 minutes remaining, Engine Emissions System Malfunction and Engine Stop Indicators are illuminated and alarm sounds to warn operator of emissions-related fault. "Less than 20 minutes to Power Restriction" displayed on machines with displays.

- Engine power and torque are reduced.
- Key Off - Key On will temporarily provide full power.
- Place machine in a safe state.
- Contact service provider.



RG26972—UN—26MAR15

2 minutes or less remaining, Engine Emissions System Malfunction and Engine Stop Indicators are illuminated and alarm sounds to warn operator of emissions-related fault which has not been corrected. "Power Restriction" displayed on machines with displays.

- Engine power is idle only.
- Place machine in a safe state.
- Contact service provider.

DX,MACHSTOPWARN,AG-19-02OCT15

Object Detection Sensor (Final Tier 4/Stage V)



H106571—UN—16JAN13

A—Sensor

NOTE: Verify that sensor is not obstructed and is not covered with mud or crop debris.

Sensor (A) located on rear composite panel verifies that objects are more than 2 m (6.5 ft.) away from exhaust plume (elevated exhaust gas temperatures) during the exhaust filter cleaning process. If sensor detects that objects are closer than 2 m (6.5 ft.), system will stop the exhaust filter cleaning process.

OUO6075,00047DD-19-13NOV17

Starting the Engine



H119917—UN—02NOV16

- A—Multi-Function Lever
- B—Header Engage Switch
- C—Separator Engage Switch

CAUTION: Before starting engine, make sure that everyone is clear of machine. Sound horn to warn others.

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove exhaust fumes from area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open doors and get outside air into area.

1. Move multi-function lever (A) to neutral position.
2. Verify that header engage switch (B) and separator engage switch (C) are OFF.



H95321—UN—02NOV10

A—Key Switch

CAUTION: Sound horn before starting engine to warn others to stay clear from machine.

To avoid the possibility of personal injury or death, start engine **ONLY** from the operator seat. Do not start engine by shorting across starter terminals. Machine starts in gear if bypassed.

IMPORTANT: To prevent starter damage, do not operate starter for more than 30 seconds at a time. If engine does not start, wait at least 2 minutes before trying again.

NOTE: If temperature is below -5°C (23°F) it may be necessary to use cold weather starting aid. See Cold Weather Starting Aid in Operating the Engine section in the Operator's Manual.

When the key switch is turned to START, a delay of a couple of seconds will occur. This allows control units to power up, relays to close, and starter solenoid to energize.

Decal under the storage box lid on the armrest shows engine starting information.

3. Sound horn and turn key switch (A) on the steering column to START position.

Key positions are:

First Position	Accessories
Second Position	OFF
Third Position	Run
Fourth Position	Start

NOTE: Diagnostic Trouble Codes (DTC) displays if Stop Engine Code appears on display. Display stops normal functions, indicating a problem that requires the machine to be stopped and the problem corrected immediately. Codes are displayed until the problem is resolved. If the problem cannot be resolved, see your John Deere dealer.

4. Release key after engine starts and let engine run at slow speed for 5 minutes to warm oil.

OUO6075.0004930-19-07JUN18

Stopping the Engine



H119918—UN—02NOV16

A—Multi-Function Lever
B—Slow Speed Engine Switch
C—Header Engage Switch
D—Separator Engage Switch

1. Lower header or reel completely to ground.
2. Move multi-function lever (A) to neutral position.
3. Press slow speed engine switch (B).
4. Shut OFF header engage switch (C) and separator engage switch (D).

IMPORTANT: Cooling of turbocharger and some engine parts is provided by engine oil. Stopping a hot engine might cause damage to these parts.

5. Before stopping an engine that was operating at working load, idle engine 2—3 minutes to allow turbocharger to cool.

CAUTION: Set park brake and remove key before leaving machine.

6. Turn the key switch to the OFF position.

IMPORTANT: Final Tier 4/Stage V: Do not disconnect battery for at least 90 seconds after machine is shut OFF. Selective Catalyst Reduction (SCR) system automatically purges lines of Diesel Exhaust Fluid (DEF) during this time, immediately after machine is shut OFF. If adequate time is not allowed for lines to be purged, any fluid remaining in lines can crystallize and plug lines. In freezing weather, fluid freezes and possibly burst lines.

OUO6075.0004931-19-07JUN18

Engine Speed Management (ProDrive™ Machines)

NOTE: Engine speed management is software-controlled and activated with the road transport disconnect switch.

Engine speed management reduces fuel consumption and increases fuel efficiency.

- Fuel consumption is reduced in low load conditions with a reduction in engine speed.
- Maintain high load capabilities by dynamically increasing engine speed when needed.
- Ground speed is maintained during engine speed changes through varying hydrostatic displacements.
- Engine speed stays at low idle when machine is not moving.
- Engine speed is approximately 1600 rpm when machine is on flat ground or with low ground speeds.
- Engine speed changes between approximately 1600 rpm and maximum high idle depending on the engine load.

- Low Engine Speed - engine speed stays at 1200 rpm.
- Medium Engine Speed - engine speed will not exceed 1690 rpm.
- High Engine Speed - engine speed changes between approximately 1600 rpm and maximum high idle.

OOU6075.00046F3-19-30MAR17

Handle Starting Fluid Safely



TS1356—UN—18MAR92

CAUTION: Starting fluid is highly flammable. **DO NOT** use near fire, sparks, or flames. Read **CAUTION** information on container. Protect container against damage. **DO NOT** carry extra or empty cans inside cab.


If starting fluid is not used for several days, remove can. Check fluid and valve operation by reinstalling and depressing spray nozzle. If no fluid is emitted, use a new can.

To prevent accidental discharge when storing the pressurized can, keep cap on container. Store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

OOU6075.0000585-19-17MAY10

Cold Weather Starting Aid (If Equipped)

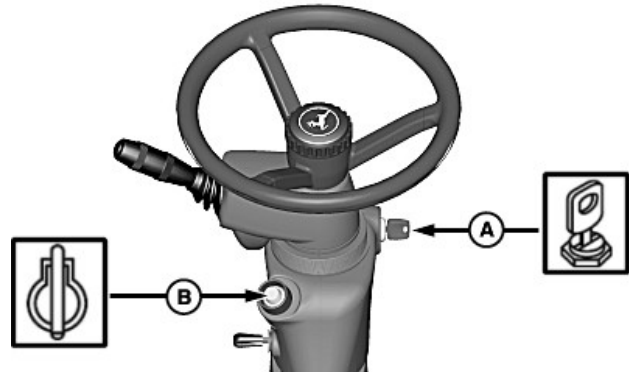

H96387—UN—02NOV10

A—Key Switch
B—Starting Aid Button

CAUTION: Avoid personal injury and damage to the engine. Inject fluid only while engine is turning.

Starting aid only works in "Run" or "Start" positions.

Turn key switch (A) to start engine. When engine starts to turn over, press starting aid button (B).


When engine starts, release key, and starting aid button.

If temperature is below -5°C (23°F), hold starting aid button down for 2—3 seconds after engine starts. Repeat procedure until engine runs without faltering.

IMPORTANT: To assure proper lubrication, operate engine at slow speed, with no load for 1—2 minutes. Extend this period to 2—4 minutes when operating at temperatures below freezing.


OOU6075.0004932-19-07JUN18

Coolant Heater

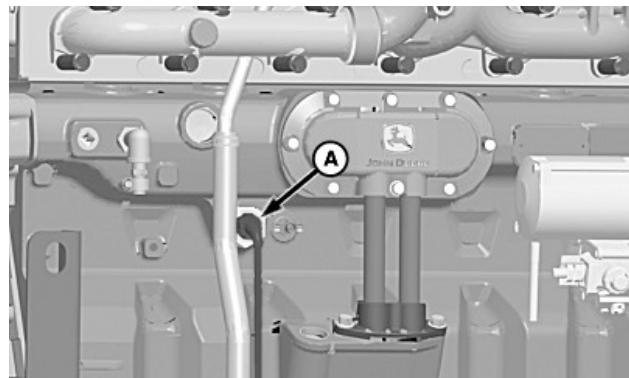


H95379—UN—16FEB10

Tier 2/Stage II (Style A) (Front Side)

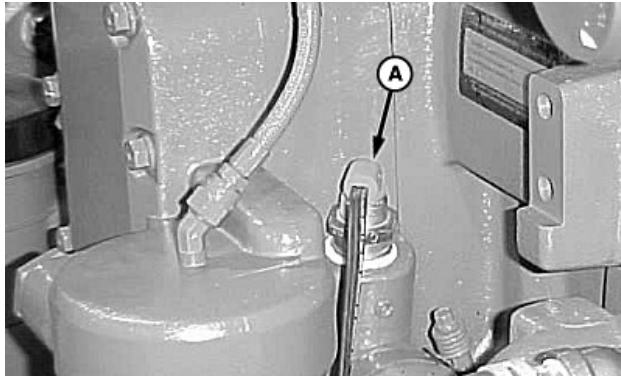


H71689—UN—18APR02

Tier 2/Stage II (Style B) (Rear Side)

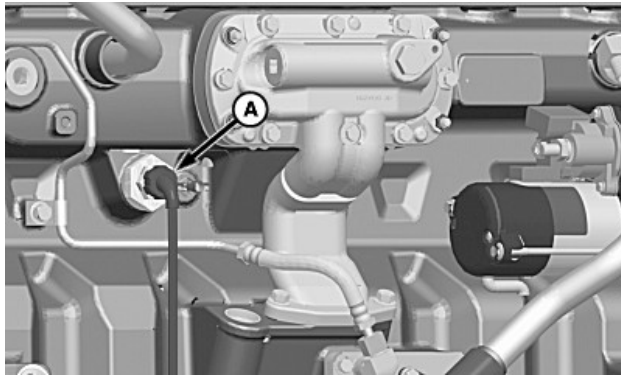

H95324—UN—11FEB10

Final Tier 4/Stage V (Style A) (Front Side)

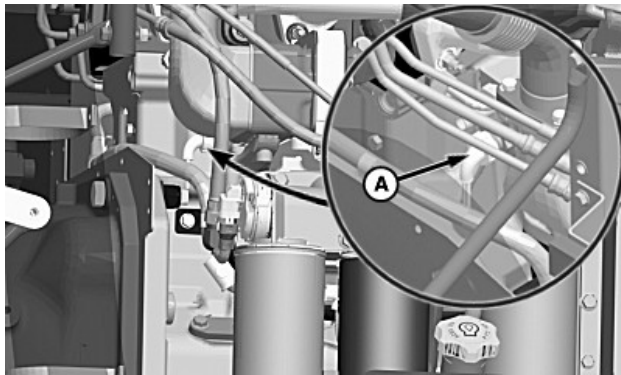

H95424—UN—19FEB10

Final Tier 4/Stage V (Style B) (Rear Side)

CAUTION: To avoid shock or hazardous operation, always use a three wire heavy-duty electrical cord (minimum gauge 10 AWG and no longer than 7.6 m (25 ft)) equipped with three connectors. If a two to three contact adapter is used at the wall receptacle, always connect green wire to a good ground.


Before connecting heater to the power source, be sure that element is immersed in coolant. **NEVER** energize the heater in the air. Doing so can cause the element sheath to burst causing personal injury.

Coolant heater (A) mounts in freeze plug opening (front side or rear side of engine). By warming engine coolant, the heater reduces oil drag, eases starting, and shortens warm up time.

Coolant Heater Types

- 1000 W (110 V)
- 1000 W (220 V) (Export Machines)

OUO6075,00047E0-19-13NOV17

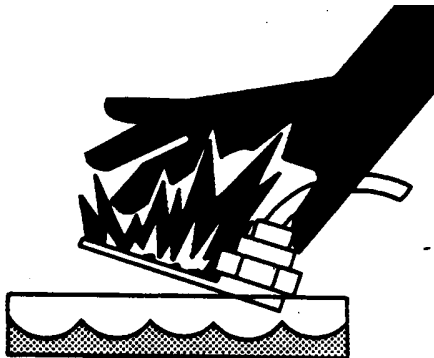

TS210—UN—23AUG88

A—Coolant Heater

CommandCenter™ Display Information

Generation 4 Display

For additional information on Display hardware and software functionality, reference the Display Operator's Manual and the Help Center application on the display. To obtain a copy of the Operator's Manual, contact your dealer, use the Help Center application on the display, or visit techpubs.deere.com.

DX,PC,DISPLAY,REFERENCE-19-15JUN22

CommandCenter™ Display Applications

CommandCenter™ Display Applications

The following information contains the on-screen help for each application specific to this machine. This information is also available on the display.

CommandCenter is a trademark of Deere & Company

VM03385,0000137-19-15NOV16

Controls Setup Application

Access Controls Setup

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Controls Setup

H118152—UN—20JAN17

3. Controls Setup

Access Application Through Navigation Bar:



Controls Setup Application Button


H118151—UN—20JAN17

Press Controls Setup button on navigation bar below display.

PR79369,00003A3-19-01FEB21

Controls Setup Overview

NOTE:

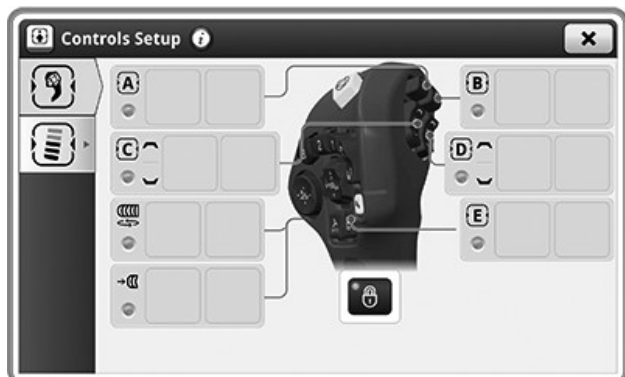

Controls Setup

H119897—UN—20JAN17

Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

Controls Setup allows you to use reconfigurable buttons to personalize your machine and perform tasks quickly with the press of a button. You can make new assignments or access custom presets that you previously configured on the multi-function lever or the CommandARM.

NOTE: *The CommandARM has no default assignments. The multi-function lever and CommandARM reset to a locked state upon key cycle.*

Items Accessible in the Controls Setup Application:



Multi-Function Lever Tab

H118141—UN—20JAN17

Multi-Function Lever— select to access the multi-function lever presets.



CommandARM Tab

H118139—UN—20JAN17

CommandARM— select to access the CommandARM presets.



Highlighted Tab

H118169—UN—20JAN17

NOTE: *The highlighted tab indicates which set of presets is selected.*



Assignments

H132595—UN—21JUN22

Assignments— allow you to assign your preferred application functions to the selected position assignment.



Status Indicators

H132597—UN—21JUN22

Status Indicators— show you the status of each application function assignment.



Lock Indicator

H118140—UN—20JAN17

Lock Indicator— press the button near the multi-function lever to lock/unlock controls setup. Illuminated button and on-screen icon indicates that controls setup is locked. The control group lock button must be unlocked to make assignments.

NOTE: There are two control group lock buttons. One control group lock button applies to the multi-function lever, the other applies to the CommandARM. The CommandCenter display must be booted in order for you to disengage the control group locks for function assignment. Control group refers to the reconfigurable buttons on both the multi-function lever and CommandARM.



Close

H116648—UN—19DEC16

Close— select to close the Controls Setup application.

mm95366,1655240945326-19-27JUN22

Controls Setup | Assignments

Controls Setup | Assignments are used to assign Application Function Assignments to buttons on the multi-function lever and CommandARM.

Controls Setup Assignments:



Multi-Function Lever Assignments

H118141—UN—20JAN17

Multi-Function Lever Assignments— allows you to make assignments to the buttons on the multi-function lever.



H118143—UN—20JAN17



H118147—UN—20JAN17



H118149—UN—20JAN17

Buttons A, B, and E

- **Buttons A, B, and E**— allow you to assign Single Position Assignments.



H118144—UN—20JAN17



H118148—UN—20JAN17

Buttons C and D

- **Buttons C and D**— allow you to assign Dual Position Assignments.



Scroll Wheel

H118145—UN—20JAN17



Scroll Press Button

H118146—UN—20JAN17

- **Scroll Wheel and Scroll Press Button**— allow you to assign Single Position Assignments to the scroll press button or Dual Position Assignments to the scroll wheel.



CommandARM Assignments

H118139—UN—20JAN17

CommandARM Assignments— allows you to make assignments to the buttons on the CommandARM.



H118159—UN—20JAN17



Buttons 1 and 2

H118161—UN—20JAN17

- **Buttons 1 and 2**— allow you to assign Dual Position Assignments.



H118160—UN—20JAN17



Buttons 3 and 4

H118162—UN—20JAN17

- **Buttons 3 and 4**— allow you to assign Single Position Assignments.

mm95366,1655295355910-19-27JUN22

Controls Setup | Status Indicators

Controls Setup | Status Indicators show you the status of each application function assignment.

Available Status Indicators in the Controls Setup Application:



Enabled (green)

H132597—UN—21JUN22

Enabled (green)— indicates that the assignment is enabled. Prerequisites are met, and the implement is attached (if applicable).



Locked (orange)

H132599—UN—21JUN22

Locked (orange)— indicates that the assignment is locked. Prerequisites are met, and the implement is attached (if applicable).



Disabled (gray)

H132596—UN—21JUN22

Disabled (gray)— indicates that there is no assigned function, prerequisites are not met, or the implement is not attached (if applicable).

mm95366,1655330885086-19-27JUN22

Multi-Function Lever — Controls Setup

Multi-Function Lever Controls Setup is used to assign applications and functions to buttons on the multi-function lever.

Items Accessible on the Multi-Function Lever Controls Setup Page:



Multi-Function Lever

H118141—UN—20JAN17

Multi-Function Lever— select to make assignments to the buttons on the multi-function lever.



Lock Indicator

H118140—UN—20JAN17

Lock Indicator— press the button near the multi-function lever to lock/unlock controls setup. Illuminated button and icon indicates that controls setup is locked. The control group lock button must be unlocked to make assignments.

NOTE: The on-screen lock indicator is present whenever the displayed control group is locked using the Control Group Lock button on the CommandARM. Control group locks re-engage on key cycle.



H118143—UN—20JAN17



H118147—UN—20JAN17



H118149—UN—20JAN17

Programmable Buttons

Buttons A, B, and E— are used for applications that require Single Position Assignments, which allow you to select from assignments with a single function or toggle between two states.



H118144—UN—20JAN17



H118148—UN—20JAN17

Programmable Buttons

Buttons C and D— are used for applications that require Dual Position Assignments, which allow you to select from assignments with multiple positions, to

increase or decrease a value, or to make a left-hand or right-hand adjustment.



Scroll Wheel

H118145—UN—20JAN17

Scroll Button— is used to select function assignments, increase or decrease a value, or make a left-hand or right-hand adjustment.



Scroll Press Button

H118146—UN—20JAN17

NOTE: Assigning functions to either the Scroll Button "roll" or "press" action works the same as other assignments.

Procedure to Modify:



Multi-Function Lever

H118141—UN—20JAN17

1. Select the Multi-Function Lever assignments tab.



Programmable Shortcut Lock

H117027—UN—28MAR16

2. Select the Programmable Shortcut Lock button closest to the multi-function lever.



Active State

H114656—UN—05JAN17



Lock Indicator

H118140—UN—20JAN17

NOTE: As you select the Control Group Lock button, all previously assigned custom controls are illuminated "green" to indicate their active state, and the on-screen lock indicator is hidden.

If there are no custom assignments present, the application does not open upon unlocking the Control Group.



Programmable Button

H118144—UN—20JAN17

3. Select the Programmable Button you want to change the application and function assignment for.



Application

H118512—UN—20JAN17

4. Select the Application with the function you want to set to the button or select Remove Assignment to remove the application and function assignment currently set to the programmable button. For a list of application and function assignments, see [Application Function Assignments](#).



Scroll Wheel

 
H118145—UN—20JAN17



Scroll Press Button

H118146—UN—20JAN17

NOTE: The Scroll Button bypasses the "Select Application" list, offering a limited and distinct number of functional options.



Function

H118522—UN—20JAN17

5. Select the Function you want to assign to the programmable button.



Close

H116648—UN—19DEC16

6. To exit the application or function screens without

changing the programmable button's current assignment, select the Close button.

mm95366,1655306781607-19-27JUN22

CommandARM — Controls Setup

CommandARM Controls Setup is used to assign Application and Functions to the CommandARM.

Items Accessible on the CommandARM Controls Setup Page:



CommandARM

H118139—UN—20JAN17

CommandARM— select to make assignments to the buttons on the CommandARM.



Lock Indicator

H118140—UN—20JAN17

Lock Indicator— press the button on the CommandARM to lock/unlock controls setup. Illuminated button and icon indicates that controls setup is locked. The control group lock button must be unlocked to make assignments.

NOTE: The on-screen lock indicator is present whenever the displayed control group is locked using the Control Group Lock button on the CommandARM. Control group locks re-engage on key cycle.



H118159—UN—20JAN17



H118161—UN—20JAN17

Programmable Buttons

Buttons 1 and 2— are used for applications that require Dual Position Assignments, which allow you to select from assignments with multiple positions, to increase or decrease a value, or to make a left-hand or right-hand adjustment.



H118160—UN—20JAN17



H118162—UN—20JAN17

Programmable Buttons

Buttons 3 and 4— are used for applications that

require Single Position Assignments, which allow you to select from assignments with a single function or toggle between two states.

Procedure to Modify:

1. Select the CommandARM assignments tab.



CommandARM

H118139—UN—20JAN17

2. Select the Programmable Shortcut Lock button closest to the CommandARM programmable buttons.



Programmable Shortcut Lock

H117027—UN—28MAR16



Active State

H114656—UN—05JAN17

NOTE: When you select the Programmable Shortcut Lock button, all previously assigned custom controls are illuminated "green" to indicate their active state, and the on-screen lock indicator is hidden.



Lock Indicator

H118140—UN—20JAN17

If there are no custom assignments present, the application does not open upon unlocking the control group.



Programmable Button

H118159—UN—20JAN17

3. Select the Programmable Button you want to change the application and function assignment for.



Application

H118512—UN—20JAN17

- Select the Application with the function you want to set to the button or select Remove Assignment to remove the application and function assignment currently set to the programmable button. For a list of application and function assignments, see [Application Function Assignments](#).



Function

H118522—UN—20JAN17

- Select the Function you want to assign to the programmable button.



Close

H116648—UN—19DEC16

- To exit the application or function screens without changing the programmable button's current assignment, select the Close button.

mm95366,1655301086541-19-29JUN22

Create Single Position Assignments

Create Single Position Assignments allows you to make function assignments for applications that have a single function or toggle between two states.

Buttons A and B or 3 and 4 allow single position assignments. Select the preferred application, then select the desired function assignment.

Procedure to Modify:

Example:

This example will assign the AutoTrac Guidance application to button A.

NOTE: The example shown is typical for making application assignments. To view a list of available assignments, see [Application Function Assignments](#).



Select Application

H118507—UN—20JAN17

- Select to activate the Select Application display.



Remove Assignment

H118506—UN—20JAN17

NOTE: If an assignment is already present on the Control Setup display, the "Remove Assignment" option is placed at the top of the list.



AutoTrac Guidance

H118156—UN—20JAN17



AutoTrac Guidance Selected

H118509—UN—20JAN17

- Select the AutoTrac Guidance application.



Center Track

H118157—UN—20JAN17

- Select the Center Track function.



Center Track Selected

H118510—UN—20JAN17

NOTE: After selecting the function, the control assignment is made.



Close

H116648—UN—19DEC16

- Select to close the Controls Setup application.

mm95366,1655380201039-19-27JUN22

Create Dual Position Assignments

Create Dual Position Assignments allows you to make function assignments that select from multiple positions, increase or decrease a value, or make a left-hand or right-hand adjustment.

Buttons C and D, 1 and 2, and the scroll wheel allow dual position assignments. Select your preferred application, then select the desired function assignment.

Procedure to Modify:

Example:

This example will assign the Folding Unloading Auger

Fold/Unfold function to button C. This will allow you to fold/unfold the auger tip any time you press button C.

NOTE: The example shown is typical for making application assignments. To view a list of available assignments, see Application Function Assignments.

NOTE: Programmable buttons are rocker switches. They receive one dual position assignment. Example: Left = down (close) and right = up (open).



H118508—UN—20JAN17

Select Application

 
1. Select to activate the Select Application display.



H118506—UN—20JAN17

Remove Assignment

NOTE: If an assignment is already present on the Control Setup display, the "Remove Assignment" option is placed at the top of the list. Select if you no longer want a function assigned.



H118166—UN—20JAN17
Folding



H118536—UN—20JAN17
Folding Selected

2. Select the Folding application.



H118165—UN—20JAN17

Folding Unloading Auger Fold/Unfold

3. Select Folding Unloading Auger Fold/Unfold function.



H118537—UN—20JAN17

Folding Unloading Auger Fold/Unfold Selected

NOTE: After selecting the function, the control assignment is made.



Close

H116648—UN—19DEC16

4. Select to close the Controls Setup application.

mm95366,1655333000874-19-27JUN22

Scroll Wheel and Scroll Press Button



H118504—UN—20JAN17

Scroll Wheel and Scroll Press Button

Scroll Wheel and Scroll Press Button are located on the multi-function lever.



H118145—UN—20JAN17

Scroll Wheel



H118146—UN—20JAN17

Scroll Press Button

The scroll wheel can be given Dual Position Assignments, such as increasing or decreasing a value or making a left-hand or right-hand adjustment. The scroll press button can be given Single Position Assignments.

NOTE: Assigning functions to either the scroll button "roll" or "press" action works the same as other assignments.

mm95366,1655381156522-19-27JUN22

Application Function Assignments

Application Function Assignments allow you to assign

your preferred application functions to the selected position assignment.

Application Function Assignments Available:

NOTE: Only application assignments available for your machine will appear on your screen.

AutoTrac Guidance Function Assignments Available:



AutoTrac Guidance

H118511—UN—20JAN17

 
AutoTrac Guidance— allows you to access functions to make guidance system adjustments.



Center Track

H118518—UN—20JAN17

- **Center Track**— select to establish a new track.



Shift Track

H118519—UN—20JAN17

- **Shift Track**— select to make left-hand or right-hand adjustments to your track.



Swap Track

H118520—UN—20JAN17

- **Swap Track**— select to change from the current guidance system track you are using and change to the next track.

Folding Function Assignments Available:



Folding

H118515—UN—20JAN17

Folding— allows you to access functions to fold/unfold

the folding unloading auger and to fold/unfold a folding head.



Folding Head

H127012—UN—26SEP19

- **Folding Head**— select to fold/unfold the folding head.



Header Transport Position

H132957—UN—18JAN21

- **Header Transport Position**— select to prepare an extendable platform header for transport.

Header Function Assignments Available:



Header

H118514—UN—20JAN17

Header— allows you to access functions to adjust front-end equipment.



Reel Speed

H127006—UN—26SEP19

- **Reel Speed**— select to change the speed of the reel or the belt pickup as needed.



AHHC Encoder

H118525—UN—20JAN17

- **Automatic Header Height Control (AHHC) Encoder**— select to adjust the header height.
- **Draper Belt Speed**— select to increase or decrease the draper belt speed.



Draper Belt Speed

H118526—UN—20JAN17



H118527—UN—20JAN17
Draper Belt Speed Slow Down

- **Draper Belt Speed Slow Down**— select to slow down the draper belt speed.



H127010—UN—26SEP19
Feeder House Tilt

- **Feeder House Tilt**— select to increase or decrease the angle of the feeder house tilt frame.



H127011—UN—26SEP19
Draper Platform Tilt

- **Draper Platform Tilt**— select to tilt the draper platform up and down.



H127008—UN—26SEP19
Belt Pickup Speed

- **Belt Pickup Speed**— select to adjust belt pickup speed.



H134131—UN—21JUN22
Wing Leveling

- **Wing Leveling**— select to enable the wings to automatically return to the selected home position.

 
Hinged Draper



H127007—UN—26SEP19
Gauge Wheel Height

- **Gauge Wheel Height**— select to adjust the gauge wheel height.

Extendable Platform Headers



H118529—UN—20JAN17
Cutterbar Extend/Retract

- **Cutterbar Extend/Retract (Extendable Platform Headers Only)**— select to extend or retract the cutterbar.

Machine Sync Function Assignments Available:



H127016—UN—26SEP19
Machine Sync

Machine Sync— allows you to access the machine sync functions.



H127014—UN—26SEP19
Machine Sync Nudge Left/Right

- **Machine Sync Nudge Left/Right**— select to nudge left or right.



H127015—UN—26SEP19
Machine Sync Nudge Fore/Aft

- **Machine Sync Nudge Fore/Aft**— select to nudge fore or aft.

Residue Management Function Assignments Available:



H118517—UN—20JAN17
Residue Management

Residue Management— allows you to access the residue management functions.



H118535—UN—20JAN17
Residue Direction Swap

- **Residue Direction Swap**— select to change the

direction of the residue discharge from one side to the other side.

Engine Function Assignments Available:



Engine

H127004—UN—26SEP19

Engine— allows you to access the engine functions.



Air Compressor

H127005—UN—26SEP19

- **Air Compressor**— select to enable or disable the air compressor.

Display Function Assignments Available:



Display

H118512—UN—20JAN17

Display— allows you to access the display.



Close Overlay

H118521—UN—20JAN17

- **Close Overlay**— select to close the overlay.



Run Page Swap

H118522—UN—20JAN17

- **Run Page Swap**— select to change the displayed run page to the next or previous page in the system.

 
Transmission Function Assignments Available:



Transmission

H118516—UN—20JAN17

Transmission— allows you to access the transmission functions.



ProDrive

H118534—UN—20JAN17

- **ProDrive Speed Setpoint**— select to increase or decrease the transmission setpoint.

Grain Handling Function Assignments Available:



Grain Handling

H127017—UN—26SEP19

Grain Handling— allows you to access the grain handling functions.



Adjustable Spout In/Out

H128678—UN—28JAN20

- **Adjustable Spout In/Out**— select to move the adjustable spout in or out.

Combine Advisor Function Assignments Available:



Combine Advisor

H128144—UN—17JAN20

Combine Advisor— allows you to access the Combine Advisor functions.



Activate HarvestSmart

H128145—UN—17JAN20

Activate HarvestSmart— select to turn on HarvestSmart operation.

mm95366,1655208653290-19-27JUN22

Residue Management Application

Access Residue Management

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Residue Management

H114082—UN—03JAN17

3. Residue Management

Access Application Through Navigation Bar:



Residue Management Application Button

H116635—UN—03JAN17

Press Residue Management button on navigation bar below display.

N0LMWLO,000032B-19-15JUL20

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

Residue Management allows you to adjust residue distribution as desired based on machine configuration.

Items Accessible on Residue Management Main Page:

NOTE: Some items below are only displayed if machine is equipped with the associated option.



Residue Mode

H131657—UN—01DEC20

Residue Mode— select between spreading and premium windrowing functions.



Chopper Position

H116639—UN—03JAN17

Chopper Position— shows current position of chopper.



Knife Bank

H126977—UN—26SEP19

Knife Bank— slides in and out for better chopping quality of residue or to conserve machine power.




Separator Vane

H118116—UN—03JAN17

Separator Vane— select between Standard and Advanced separator vane position.

Residue Management Main Page

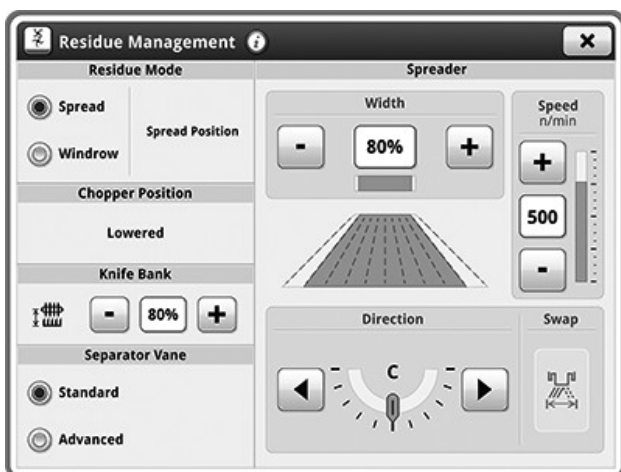

Residue Management

H133139—UN—01FEB21



H116988—UN—03JAN17

Width

Width— controls the spread width of chaff and straw by adjusting spreader speed or shroud position based on machine configuration.



H116987—UN—04JAN17

Speed

Speed— increases or decreases spreader speed.



H117001—UN—03JAN17

Direction

Direction— changes chaff and straw spreading direction.



H118304—UN—03JAN17

Swap

Swap— quickly adjusts the residue dispersal in the opposite direction.

 


H113730—UN—30JAN17

Total Loss Measurement

Total Loss Measurement— mode that allows you to drop all residue in a windrow for accurate loss measurement.

Out-of-Cab Adjustments— mechanical adjustments made outside of the cab.



H132593—UN—21JUN22


Content Blocker

Content Blocker— shows locked status. Prevents accidental adjustment to the system. To make adjustments, exit transport mode.

Run Page Modules

Modules for this application can be added to run pages using Layout Manager.

Example:

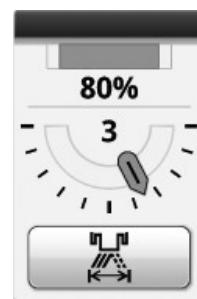

H128561—UN—20JAN20

Spread

Spread— controls the width and direction of chaff and straw distribution.

NOTE: Different modules can be available for your application.

Shortcut Keys

Shortcut keys for this application can be added to the shortcut bar using Layout Manager.

Example:



H116642—UN—03JAN17

Residue

Residue— use for quick access to change residue dispersal direction. Light is illuminated toward direction of residue dispersal. If no illumination then residue dispersal is centered.

NOTE: Different shortcut keys can be available for your application.

mm95366,1655492891075-19-28JUN22

Residue Mode

Select Spread or Windrow Residue Mode option for desired straw and chaff processing.

Select Windrow When:

You want to leave a windrow of residue behind the machine.

Machines Equipped with Premium Residue System Only: In Windrow mode, straw bypasses the chopper while chaff is still being chopped and spread. The straw discharges from the separator into a windrow behind the machine. This leaves a cleaner windrow.

Select Spread When:

You want to send straw through the chopper to minimize residue length.

Windrow Setup:



Content Blocker

H132594—UN—21JUN22

Non-Premium Residue System: When placed into "Windrow" mode, all other spreader settings are unable to be changed.

NOTE: Settings return to previous states when changed back to "Spread" mode.

NOTE: See Operator's Manual for more information on the following out-of-cab adjustments.

CAUTION: Shut down the machine prior to performing the recommended adjustments.

1. If equipped, place cob deflector in small grains position.
2. Shift chopper drive into neutral position.



H116998—UN—03JAN17
Windrow



H116639—UN—03JAN17
Chopper Position

3. Select Windrow or place chopper in raised position.

NOTE: When harvesting low residue volume crops, lower cob deflector into corn position, if equipped.



Status Indicator

H116644—UN—03JAN17

Status indicator shows status of door.



Error Detected

H116645—UN—03JAN17

Premium Residue ONLY: When an error occurs during a close/open process, the system attempts to return to previously selected state prior to your change request. If it is unable to successfully reach that prior state, the "Tailboard Error" message is displayed, and you must make a mode choice again.

Spread Setup:

 
NOTE: Spread automatically closes the chop-to-drop door. The chopper cuts the straw discharged from the separator when the chop-to-drop door is closed.

NOTE: Separator must be OFF to change the position of the chop-to-drop door.



Spread

H131362—UN—01DEC20



Chopper Position

H131363—UN—01DEC20

Select Spread or place chopper in lower position.

mm95366,1655495871460-19-28JUN22

Separator Vane

Change separator vane position to increase grain savings and improve straw quality.

NOTE: Separator must be OFF to change the position of the Separator Vane.

Select Standard When:

- You want to reduce grain loss.
- You want to improve crop separating ability.

Select Advanced When:

- You want to improve straw quality.
- You want to reduce power consumption.

Procedure to Modify:



Standard

H116999—UN—03JAN17

Select Standard.



Advanced

H117000—UN—03JAN17

Select Advanced.

NOTE: Running separator vanes in advanced position may increase grain losses in certain crops and conditions. Crop dwell time in separator is reduced to improve straw quality.

NOLMWLO.000032D-19-16JUL20

Width

Width adjusts the spread range for chaff and straw by controlling spreader speed or shroud position depending on machine configuration.


NOTE: Adjust the spread width setting before adjusting the spreader speed.

Modify When:

- Chopped material and chaff are not reaching the full width of the cut mode by header. Increase width.
- Chopped material and chaff are being thrown onto the uncut crop. Decrease width.

Procedure to Modify:

1. Turn on the machine.
2. Engage separator.

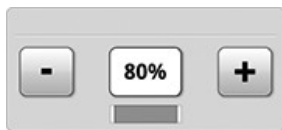

Width

H116988—UN—03JAN17

NOTE: Current setting is displayed by bar gauge.

3. Select plus (+) to increase or minus (-) to decrease desired percentage.



Width Percentage

H118119—UN—03JAN17

NOTE: When changes are made to the width percentage, the spreader diagram changes as well.

Alternative Procedure to Modify:

NOTE: When width is changed, the bar gauge representing it turns yellow to match the yellow bounding box of the input field.



Input Field

H113699—UN—03JAN17

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired percentage.
 - Turn dial clockwise to increase value.
 - Turn dial counterclockwise to decrease value.



Close

H114674—UN—06FEB19

3. Select to close.

NOLMWLO.000032E-19-16JUL20

Speed

Spreader speed adjustments allow for optimal distribution of material across the width of the spread.

NOTE: Adjust the spread width setting before adjusting the spreader speed.

Modify When:

- Changing crop type.
- Size of material exiting chopper is getting larger or smaller.
- Changing header size.
- Compensating for blowing wind.

Procedure to Modify:

1. Turn on the machine.
2. Engage separator.



Speed

H116987—UN—04JAN17

NOTE: Current setting is displayed by bar gauge.

3. Select plus (+) to increase or (-) to decrease desired speed.

NOTE: When changes are made to the spreader speed, the spreader width diagram does not change. It remains filled to previous width setting regardless of spreader speed adjustments.

Allowable Settings for Corn:

Minimum: 350
Maximum: 550
Default: 500
Increment: 10

Allowable Settings for Small Grain:

Minimum: 600
Maximum: 800
Default: 700
Increment: 10

Alternative Procedure to Modify:

NOTE: When speed is changed, the bar gauge representing it turns yellow to match the yellow bounding box of the input field.



Input Field

H118126—UN—03JAN17

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired speed.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.



Close

H114674—UN—06FEB19

3. Select to close.

PR79369,00003AE-19-01FEB21

Direction

Direction changes the direction of material exiting the chopper for wind compensation.

Modify When:

- Wind speed changes.
- Wind direction changes.
- Machine direction changes.
- Field changes.
- Terrain changes.

Procedure to Modify:



Direction

H117001—UN—03JAN17

 
Select to adjust the direction left or right.

NOTE: When changes are made to the spread direction, the spreader diagram changes as well.

NOTE: If direction is not known, the center marker disappears and dashes appear for the position value.



H128562—UN—20JAN20
Direction



H118128—UN—03JAN17
Width

 


Close

H114674—UN—06FEB19




H128563—UN—20JAN20
Direction



H118129—UN—03JAN17
Width



 
H128564—UN—20JAN20
Direction



H118130—UN—03JAN17
Width



 
H128565—UN—20JAN20
Direction



H118131—UN—03JAN17
Width



 H128566—UN—20JAN20
Direction



H118132—UN—03JAN17
Width

Alternative Procedure to Modify:



Input Field

H118138—UN—03JAN17

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired direction.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

3. Select to close.

PR79369,00003AF-19-01FEB21

Swap

Swap allows you to quickly adjust the residue spread in the opposite direction to compensate for wind interference after making a 180 ° turn. Swap is a manual adjustment made by the operator as opposed to Auto Swap which is an automated adjustment.

NOTE: Swap is only available when the Direction adjustment is not in the center position.

Modify When:

Wind is blowing residue and you want to swap residue direction.

Procedure to Modify:



Swap

H118115—UN—03JAN17

Select to activate and deactivate.

NOTE: Messages for spread direction swapping appear whenever the Residue Management application is not open and a swap has been initiated.

NOLMWLO,0000331-19-16JUL20

Out-of-Cab Adjustments

Adjustments must be made outside the cab to improve residue management and prevent damage of the machine. See your Operator's Manual for further crop settings and adjustment procedures.

CAUTION: Shut down the machine prior to performing the recommended adjustments.

Out-of-Cab Adjustments Page:

Crop Diverter/Deflector— select corn or grain position.

IMPORTANT: Place in corn position to prevent cleaning shoe damage while harvesting corn.

Crop Diverter Vanes— adjust vanes to control distribution of material into chopper or spreaders.

Knife Bank— select a knife bank position to achieve desired residue length.

IMPORTANT: Knife bank must be fully disengaged for corn.

NOTE: The more engagement, the more power is consumed by the chopper.

Chopper Drive Speed— select high speed for small grains and soybeans and low speed for corn.

PR79369,00003B0-19-01FEB21

Knife Bank

 
Knife Bank is an optional, in-cab adjustable system which slides knife bank in-and-out for better chopping quality or to save machine power.

Modify When:

- You want to improve chopping quality. Increase the knife bank setting to improve chopping quality.
- You want to conserve power for use elsewhere on the machine. Reduce the knife bank setting to conserve power.

NOTE: This optional system is available only if the machine is equipped with a chopper option.

Procedure to Modify:



H126977—UN—26SEP19

Knife Bank Adjustment— the adjustment is in 10% increment and decrement sizes.



H126979—UN—26SEP19

Increase Knife Bank— select the increment button (plus symbol) to slide the knife bank inward.



H126978—UN—26SEP19

Decrease Knife Bank— select the decrement button (minus symbol) to slide the knife bank outward, pulling the knives away from the chopper.

Active Cleanout Mode Procedure:

Active Cleanout Mode automatically cleans the knife

bank by opening and closing the knife bank. Active Cleanout Mode is performed after the separator has been disengaged 25 times. Active Cleanout Mode cannot be adjusted.

PR79369,00003B1-19-11MAY21

Auto Swap

Auto Swap automatically adjusts the residue spread in the opposite direction from what you have set after making a 180° turn.

Procedure to Modify:



Menu

H113668—UN—22OCT15

1. Select to open Menu.



Machine Settings

N119118—UN—23SEP16

2. Select Machine Settings tab.



Residue Management

H114082—UN—03JAN17

3. Select to open Residue Management.



Auto Swap ON/OFF

H125280—UN—01FEB19

4. Select to enable or disable Auto Swap.

NOTE: If Auto Swap is disabled, you must manually swap the spread direction.



Direction

H128567—UN—20JAN20

5. Select to adjust the direction left or right.

NOLMWLO,0000334-19-16JUL20

Header Application

Access Header

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Header

H113541—UN—19DEC16

3. Header

Access Application Through Navigation Bar:




Header Application Button

H117904—UN—22JAN20

Press Header button on navigation bar display.

PR79369,000045D-19-26FEB21

Header Main Page

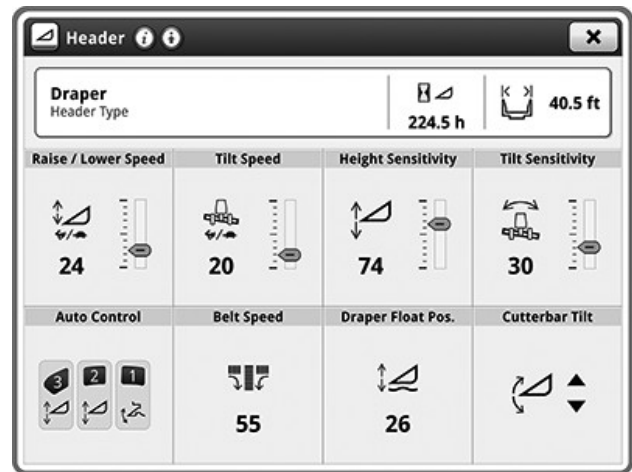

H133489—UN—01MAR21

Header

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

Header Main Page shows available features that can be adjusted for your attached header.

NOTE: Some items below are only displayed if machine is equipped with the associated option.

Items Accessible on Header Main Page:



H116126—UN—19DEC16

Header Details

Header Details— change and view header settings, such as width, minimum reel speed, and row width.

[Header Type]

Header Type

H113542—UN—19DEC16

Header Type

Header Type— automatically determined by the front end equipment attached.

NOTE: If system does not recognize the type of header connected, Unknown Header is displayed.



224.5 h

H113543—UN—19DEC16

Hours

Hours— number of hours per header type recorded by the combine.

NOTE: Hours are stored on certain model year 2021+ headers. Hours are not editable on these headers.

 


Cut Width

H113544—UN—19DEC16

Cut Width— displays the measured width setting when platform type headers are detected.

NOTE: Cut width is not editable on certain model year 2021+ headers.



Row Width

H116127—UN—19DEC16

Width and Row Width— displays the number of rows and row width settings when row-type headers are detected.

NOTE: Width and row width are not editable on certain model year 2021+ headers.



Raise/Lower Speed

H127438—UN—26SEP19

Raise/Lower Speed— controls speed of feeder house raise/lower function when in manual mode.



Height Sensitivity

H127439—UN—26SEP19


Height Sensitivity— controls sensitivity to changes in terrain of header raise/lower when in automatic mode.



Advanced Settings Icon

N118004—UN—22OCT15

Advanced Settings— allows you to access further adjustments and less common settings.

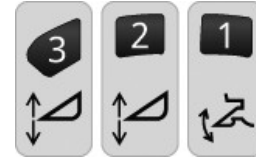

Auto Control

H127440—UN—26SEP19

Auto Control— indicates statuses of header configurations that are enabled.



Tilt Sensitivity

H127441—UN—26SEP19

Tilt Sensitivity— controls sensitivity to changes in terrain of the feeder house lateral tilt movements when in automatic sensing and automatic float modes.



Tilt Speed

H127442—UN—26SEP19

Tilt Speed— controls speed of lateral tilt movements when in manual mode.



Fore/Aft Tilt

H127443—UN—26SEP19

Fore/Aft Tilt— controls the angle of the front face of the feeder house.



HydraFlex™ Pressure

H127472—UN—26SEP19

HydraFlex™ Pressure— controls cutterbar pressure for optimal ground-following ability.



Draper Belt Speed

H127445—UN—26SEP19

Draper Belt Speed— controls the speeds of the side draper belts.



Deck Plate Spacing

H127448—UN—26SEP19

Deck Plate Spacing— displays the deck plate spacing.



Draper Float Position

H127444—UN—26SEP19


Draper Float Position— controls the pressure in the cylinders for the gauge wheel float arms.



Down Force

H132842—UN—06JAN21

Down Force— allows you to select presets for header downforce.

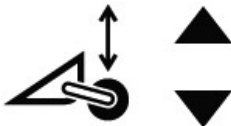

Gauge Wheels

H127473—UN—26SEP19

Gauge Wheels (if equipped)— allows you to raise or lower gauge wheels on the hinged draper.



Cutterbar Tilt

H127446—UN—26SEP19

Cutterbar Tilt— controls the angle of the cutterbar in relation to the rest of the platform.



Backshaft Speed


H127449—UN—26SEP19

Backshaft Speed— displays backshaft speed.

Run Page Modules

Modules for this application can be added to run pages using Layout Manager.

Example:

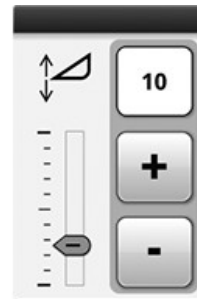

Height Sensitivity

H116668—UN—20DEC16

Height Sensitivity— controls sensitivity to changes in terrain of header raise/lower function when in automatic mode.

NOTE: Different modules can be available for your application.

mm95366,1655931818663-19-22JUN22

Header Details

Header Details page includes settings such as width, minimum reel speed, and row width.

NOTE: Each header type has factory default settings for all header settings. Connecting a header of a given type for the first time automatically loads the factory default settings. You can change header settings while the header is connected. Connecting any header of the same type automatically uses settings for that header type, but will not automatically change the settings or hours.

Items Accessible on the Header Details Page:



Width

H113523—UN—19DEC16

Width— set the cut width for platform-type headers.



Width

H113525—UN—19DEC16

Width— set the number of rows for row-type headers.



Row Width

H113526—UN—19DEC16

Row Width— set the spacing between rows for row-type headers.



Work Recording

H113521—UN—19DEC16

Work Recording— set the recording stop height.



Hours

H113522—UN—19DEC16

Hours— number of hours per header type recorded.

Example: If you have a corn head that normally does not have a reel installed, you would select this to tell the machine that a reel is installed.



Minimum Reel Speed

H113524—UN—19DEC16

Minimum Reel Speed— set the minimum reel speed.



Added Equipment

N118434—UN—22JAN20

Added Equipment— select to indicate to the system that the header has additional equipment not typically installed on the header.



Header Suspension Service Mode

H116669—UN—30JAN17

Header Suspension Service Mode— select to release pressure from the hinged draper suspension systems.

mm95366,1655943361684-19-28JUN22

Width

Width allows the cut width to be changed when not utilizing full width of the header.

NOTE: Width is not editable on certain model year 2021 + headers.

Modify When:

- Not utilizing full width of the header.
- Using for point rows.
- Changing header size.
- Changing cut width for AutoTrac™ and mapping purposes.

Procedure to Modify:



H116649—UN—19DEC16

Header Type

1. Select Header Type screen area to open Header Details page.



Width

H116131—UN—19DEC16

2. Select to open number pad and enter desired cut width.



OK

H116132—UN—19DEC16

4. Select to close.

PR79369,0000461-19-26FEB21

3. Select OK to save value.



Close

H116648—UN—19DEC16

4. Select to close.

PR79369,0000460-19-26FEB21

Width Corn Head

Width allows the number of rows to be changed when not utilizing all rows of the header.

NOTE: Width is not editable on certain model year 2021+ headers.

Modify When:

- Not utilizing all rows of the header.
- Using for point rows.
- Changing the header size.
- Changing row width for AutoTrac™ and mapping purposes.

 
Procedure to Modify:



H116650—UN—19DEC16

Header Type

1. Select Header Type screen area to open Header Details page.



Rows

H116171—UN—19DEC16

2. Select to open number pad and enter desired rows.



OK

H116132—UN—19DEC16

3. Select OK to save value.



Close

H116648—UN—19DEC16

Row Width

Row Width allows the spacing between rows to be changed.

NOTE: Row width is not editable on certain model year 2021+ headers.

Modify To:

NOTE: Modifying row width affects yield mapping.

- Adjust row width spacing to match the header configuration.

 
Procedure to Modify:



H116650—UN—19DEC16

Header Type

1. Select Header Type screen area to open Header Details page.



Row Width

H118576—UN—19DEC16

2. Select to open number pad and enter desired row width.



OK

H116132—UN—19DEC16

3. Select OK to save value.



Close

H116648—UN—19DEC16

4. Select to close.


PR79369,0000462-19-26FEB21

Minimum Reel Speed

Minimum Reel Speed allows you to set the minimum speed at which the reel operates.

Modify When:

- Picking up downed crop. Minimum speed varies based on condition and operator.

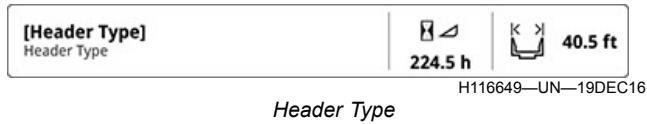Procedure to Modify:


1. Select Header Type screen area to open Header Details page.



2. Select to open number pad and enter desired minimum reel speed.



3. Select OK to save value.

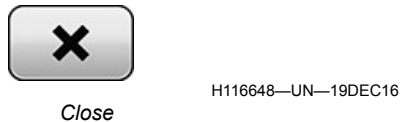

4. Select to close.

PR79369,0000463-19-26FEB21

Work Recording

Work Recording allows you to set the stop height for turning recording ON/OFF.

NOTE: Work Recording automatically turns OFF above preset height and turns ON below preset height, provided all other conditions are met (separator/header engaged, engine at high idle, and farm/field is set up).

NOTE: If Header Height Sensing or Feeder House Float are active, record stop height setting is irrelevant and Work Recording turns ON, provided all other conditions are met (separator/header engaged, engine at high idle, farm/field is set up).


Modify When:

- Changing crop conditions (taller vs. shorter).
- Changing header types.
- Changing fields and terrain.

- Recording stays on while out of crop or doesn't turn on when in crop.

Procedure to Modify:


1. Raise or lower header to desired record stop height.

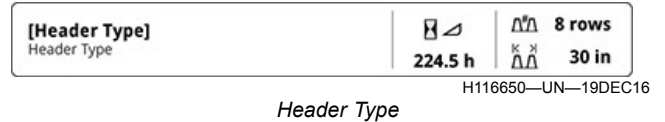

2. Select Header Type screen area to open Header Details page.



3. Select Set to Current Height button.

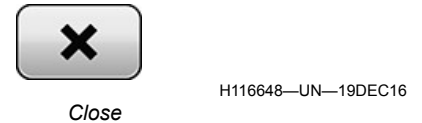

4. Select to close.

NOLMWLO,000033B-19-16JUL20

Hours


Hours allows you to set the total number hours for the header type attached.

NOTE: Hours are stored on certain model year 2021+ headers. Hours are not editable on these headers.


NOTE: Combine stores hours by header type. If multiple headers of the same type are used on the same combine, you have to enter the appropriate hours for the attached header.

Modify When:

- You want to track the amount of run time for a particular field or fields.
- You have multiple heads that may be moved to different combines.
- You want to zero the hours at the beginning of the season.

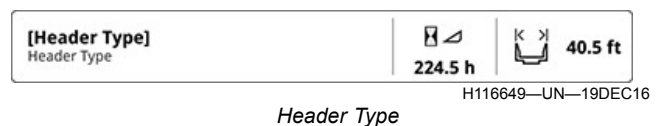Procedure to Modify:

 
1. Select Header Type screen area to open Header Details page.



2. Select to open number pad and enter desired hours.



3. Select OK to save value.

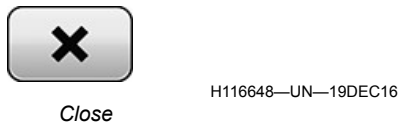

4. Select to close.

PR79369.0000464-19-26FEB21

Raise/Lower Speed


Raise/Lower Speed controls the speed which the feeder house raises or lowers when using the manual raise/lower buttons on the multi-function lever.

Modify When:


NOTE: Calibration is needed when changing header regardless of size and type unless previously calibrated.

- Header size and type affect raise/lower speed.
- Increase Raise/Lower Speed if the header is slow to react to changing ground conditions.
- Decrease Raise/Lower Speed if the header over-compensates in changing ground conditions.
- Loading/unloading the header from trailer requires lower raise/lower speed.

Procedure to Modify:

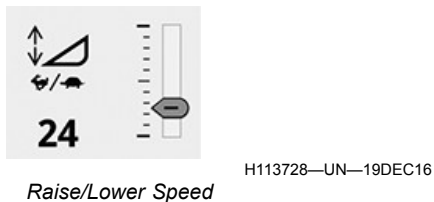

1. Select screen area under Raise/Lower Speed to open Raise/Lower Speed page.

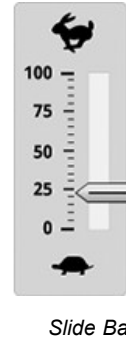


NOTE: Slide bar displays current speed.



2. Select plus (+) to increase or minus (-) to decrease desired speed.

Minimum: 0
Maximum: 100
Default: 50
Increment: 1

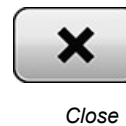

3. Select to close.

Alternative Procedure to Modify:




1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

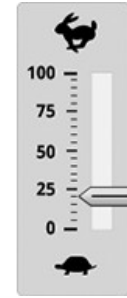

Slide Bar

H113514—UN—20DEC16

2. Use Navigation Bar or Armrest Adjustment Dial to select desired setting.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

Minimum: 0

Maximum: 100

Default: 50

Increment: 1

PR79369.0000465-19-26FEB21

Tilt Speed

Tilt Speed controls rate of the lateral tilt feeder house movements when in manual rate mode.


NOTE: Manual Tilt Speed function only works on closed center hydraulic machines equipped with lateral tilt feeder house.

Modify When:

NOTE: Calibration is needed when changing header regardless of size and type unless the specific header was previously calibrated.

- Header size and type affect tilt speed.
- The header is slow to react to changing ground conditions. Increase Tilt Speed.
- The header overcompensates in changing ground conditions. Decrease Tilt Speed.
- Loading/unloading the header from trailer requires slower tilt speed

Procedure to Modify:

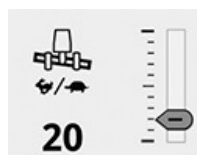

Tilt Speed

H113545—UN—19DEC16

1. Select screen area under Tilt Speed to open Tilt Speed page.

NOTE: Slide bar displays current speed.



Adjustment

H116141—UN—20DEC16

2. Select plus (+) to increase or minus (-) to decrease desired speed.

Minimum: 0

Maximum: 100

Default: 50

Increment: 1



Close

H116648—UN—19DEC16

3. Select to close.

Alternative Procedure to Modify:



Input Field

H116140—UN—19DEC16


1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

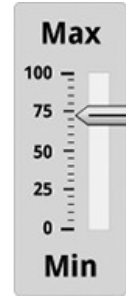

Slide Bar

H113515—UN—20DEC16

2. Use Navigation Bar or Armrest Adjustment Dial to select desired setting.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

Minimum: 0

Maximum: 100

Default: 50

Increment: 1

PR79369.0000466-19-26FEB21

NOTE: Slide bar displays current sensitivity.



Adjustment

H118578—UN—20DEC16

Height Sensitivity


Height Sensitivity controls the speed of which the feeder house will raise/lower in automatic mode to accommodate the terrain.

NOTE: Increasing sensitivity causes feeder house to respond faster to changing terrain features.

Modify When:

- Header is slow to react to changing ground conditions. Increase Height Sensitivity.
- Header is leaving wavy stubble off the ground or pulsing up and down while on the ground. Decrease Height Sensitivity.

Procedure to Modify:

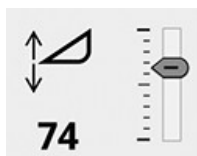

Height Sensitivity

H114074—UN—19DEC16

1. Select screen area under Height Sensitivity to open Height Sensitivity page.



Close

H116648—UN—19DEC16

3. Select to close.

Alternative Procedure to Modify:



Input Field

H116140—UN—19DEC16

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired setting.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

Minimum: 0

Maximum: 100

Default: 50

Increment: 1

NOTE: Start with 50 and adjust in steps of 5. Avoid setting over 75 and under 25. Height sensitivity needs to be set lower when achieving higher ground speeds.

PR79369,0000467-19-26FEB21

Tilt Sensitivity


Tilt Sensitivity controls the speed at which the feeder house tilts to accommodate changes in terrain. Increasing sensitivity causes feeder house to react faster.

NOTE: If operating 600F, 600FD, or 700FD platforms, HydraFlex™ Pressure settings may also affect header height sensitivity.

Modify When:

- Header is slow to react to changing ground conditions. Increase Tilt Sensitivity.
- Header is leaving wavy stubble off the ground or pulsing up and down while on the ground. Decrease Tilt Sensitivity.


Procedure to Modify:

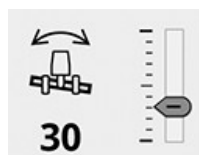

Tilt Sensitivity

H113546—UN—19DEC16

1. Select screen area under Tilt Sensitivity to open Tilt Sensitivity page.

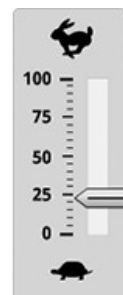

Slide Bar

H113513—UN—20DEC16

NOTE: Slide bar displays current sensitivity.



Adjustment

H116141—UN—20DEC16

2. Select plus (+) to increase or minus (-) to decrease desired sensitivity.

Minimum: 0

Maximum: 100

Default: 50

Increment: 1

NOTE: Start with 50 and adjust in steps of 5. Avoid setting over 75 and under 25. Height sensitivity needs to be set lower for wider heads and when achieving higher ground speeds.



Close

H116648—UN—19DEC16

3. Select to close.

Alternative Procedure to Modify:



Input Field

H116140—UN—19DEC16

NOTE: If operating 600F, 600FD, or 700FD platforms, HydraFlex™ Pressure settings also affect header height sensitivity.

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired setting.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

PR79369,0000468-19-26FEB21

Fore/Aft Tilt

Fore/Aft Tilt allows you to quickly move the feeder house face fore and aft to achieve optimal cutting performance of the header in challenging conditions.

NOTE: Fore/Aft Tilt minimum and maximum settings are different for each header type.

Modify When:

- You want to prevent pushing or dragging wet or dense residual residue.
- You want to better attach or detach the header.
- You want to optimize conveying of crop material into the feeder house.

Tilt Feeder House Fore:

- Picking up downed crop.
- Cutting closer to the ground.

Tilt Feeder House Aft:

- Material is being pushed by the cutter bar. Move aft to reduce lost material.
- For standing crop, tilting aft can optimize feeding/conveying material into the machine.

Procedure to Modify:



Fore/Aft Tilt

H116129—UN—19DEC16

1. Select screen area under Fore/Aft Tilt to open Fore/Aft page.



Adjustment

H116141—UN—20DEC16

2. Select plus (+) to increase or minus (-) to decrease desired position.

NOTE: Minimum and maximum settings will be affected by header type and calibration. See Calibrations application for more information on calibration procedures.



Close

H116648—UN—19DEC16

3. Select to close.

Alternative Procedure to Modify:



Input Field

H116140—UN—19DEC16

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired setting.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

PR79369,0000469-19-26FEB21

Auto Header Control

Auto Header Control shows the status of Control Preview, Header Automation, and Resume Preferences.



Auto Control

H116962—UN—19DEC16

Select screen area under Auto Control to open.

NOTE: Auto Header Control icons change depending on how they are set up and which header is attached to the machine.

Items Accessible on Auto Header Controls Page:

Control Preview— displays status of available features.

Header Automation— displays available automated functions.

Resume Preferences— displays available resume functions.

SS43267,00007EB-19-27JAN17

Control Preview



Control Preview

H116968—UN—20DEC16

Control Preview displays status of available features.

NOTE: Header Automation and Resume features (listed as icons under the activation buttons 1, 2, and 3) activate when corresponding button is pressed.

SS43267,00007EC-19-26NOV19

Header Automation

Enable or disable header automation functions.

NOTE: Some items below are only displayed if machine is equipped with the associated option.



Defaults

H116995—UN—19DEC16

Defaults— select to use defaults of header type connected.



Custom

H116995—UN—19DEC16

Custom— select to choose which automated systems you want to enable based on your personal operating preferences.

NOTE: ON/OFF toggles are unable to be switched until the "Custom" option is selected.

NOTE:



Alert

H116168—UN—19DEC16

When a given automation option has issues preventing it from being enabled, the toggle switch is replaced with a generic issue alert icon button.



Height Resume

H116161—UN—19DEC16

Height Resume— select position of the feeder house relative to machine chassis and return to that position automatically.



Feeder House Float

H116160—UN—19DEC16

Feeder House Float— allows a rigid header to be operated in contact with the ground and maintain a set pressure.



Height Sensing (Off Ground)

H113720—UN—19DEC16

Height Sensing (Off Ground)— select the position of the header relative to the ground and return to that position automatically.



Height Sensing (On Ground)

H113720—UN—19DEC16

Height Sensing (On Ground)— adjust cutterbar ground pressure and return to that setting automatically.



Height Sensing

H113720—UN—19DEC16

Height Sensing— select the position of the header

relative to the ground and return to that position automatically.



Lateral Tilt

H113721—UN—19DEC16

Lateral Tilt— maintain the header position relative to ground.

mm95366,1655942870266-19-22JUN22

Height Resume

Height Resume allows you to select position of the feeder house relative to the machine and return to that position automatically.

Modify When:

- Changing crop height throughout the same field.
- Changing the header type.
- Ground terrain changes.
- Changing from cutting on-ground to cutting off-ground.

System Is Enabled When:

- Properly equipped header is connected to the machine.
- Engine is running.
- Road transport disconnect switch is in field position.
- Height Resume system is ON.
- Header is engaged.

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main screen.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Height Resume ON/OFF.




Alert Icon

H116168—UN—19DEC16

NOTE: If the automation option has issues preventing it from being enabled, the ON/OFF toggle is replaced with an alert icon. Selecting this button brings up information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.

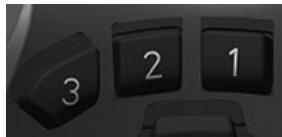

Activation Buttons

H116346—UN—19DEC16

3. Press the desired activation button.

NOTE: Height Resume will return to last known adjustment setting.



Height Resume

H116353—UN—19DEC16


NOTE: Height Resume icon appears on the corner post display.



Activation Number

H116354—UN—19DEC16

Activation number on the corner post display indicates which button was selected.

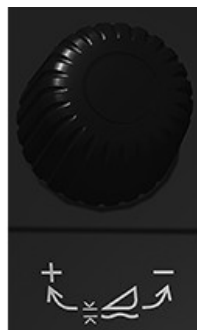


Adjustment Dial

H116347—UN—20DEC16

4. Adjust height using header adjustment dial.

- Turn header adjustment dial clockwise to raise the header and setpoint.
- Turn header adjustment dial counterclockwise to lower the header and setpoint.

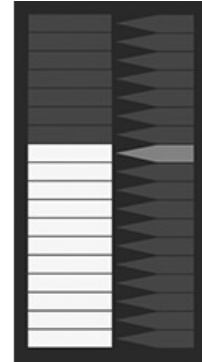

Bar Graph

H116356—UN—20DEC16

Bar graph on the corner post display shows the header's relative position based on header height sensor linked to the header.



Numeric Display

H116305—UN—19DEC16

Numeric display on the corner post display shows the header's relative position based on header height sensor linked to the header.



Raise/Lower

H116348—UN—19DEC16

Using the header raise/lower switch temporarily deactivates system.

NOTE: Pressing and holding the header raise/lower switch for 5 seconds disables the system.

Press activation buttons 1, 2, or 3 to reactivate system. Header automatically moves to last known setting.



Close

H116648—UN—19DEC16

5. Select to close.

PR79369,000046B-19-26FEB21

Height Sensing — Off Ground

Allows you to select the position of the header relative to the ground and return to that position automatically.

Modify When:

NOTE: Calibration is required when platform is initially connected to the combine. If a different platform of the same type is connected, the calibration should be repeated.

- Header is not following contour of ground.
- Cutting off the ground using height sensing arms. HydraFlex™ Pressure can be increased to lock the header in a rigid position.
- Header appears to be cutting too low. Raise height setting.
- Header rides over the top or leaves uncut crop. Lower height setting.
- Changing header type.
- Ground terrain changes.

System Is Enabled When:

- Properly equipped header is connected to the machine.
- Engine is running.
- Road transport disconnect switch is in field position.
- Height Sensing system is ON.
- Header is engaged.

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main page.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Height Sensing ON/OFF.



Alert Icon

H116168—UN—19DEC16

NOTE: When a given automation option has issues preventing it from being enabled, the toggle switch is replaced with a generic issue alert icon button. Selecting this button brings up a message dialogue with information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



Activation Buttons

H116346—UN—19DEC16

3. Press the desired activation button.

NOTE: Height Sensing returns to last known adjustment setting. Each activation button can save a different reel position. Press and hold the desired button for 2 seconds to save the reel position.



Height Sensing

H116358—UN—19DEC16


NOTE: Height Sensing icon appears on the corner post display.



Activation Number

H116354—UN—19DEC16

Activation number on the corner post display indicates which button was selected.

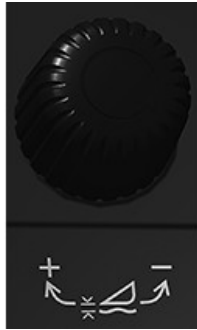


Adjustment Dial

H116347—UN—20DEC16

4. Change the height setpoint by pressing desired activation button and adjust height using header adjustment dial.

- Turn header adjustment dial clockwise to raise the header and setpoint.
- Turn header adjustment dial counterclockwise to lower the header and setpoint.

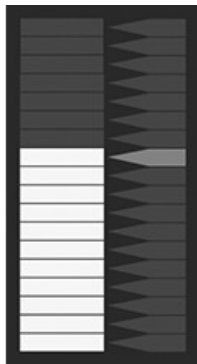

Bar Graph

H116356—UN—20DEC16

Bar graph on the corner post display shows the header's relative position based on header height sensor linked to the feeder house.



Numeric Display

H118305—UN—19DEC16

Numeric display on the corner post display shows the header's relative position based on header height sensor linked to the feeder house.



Raise/Lower

H116348—UN—19DEC16

Using the header raise/lower switch temporarily deactivates system.

NOTE: Pressing and holding the header raise/lower switch for 5 seconds disables the system.

NOTE: Header lower switch can be set to immediately disable system until activation button is pressed. See your John Deere dealer for further information.

NOTE: Header lower switch can be set not to reactivate system when header lower switch is pressed. See your John Deere dealer for further information.

Press activation buttons 1, 2, or 3 to reactivate system. Header automatically moves to last known setting.



Close

H116648—UN—19DEC16

5. Select to close.

PR79369,000046C-19-26FEB21

Height Sensing — On Ground

On ground Height Sensing allows you to adjust cutterbar ground pressure and return to that setting automatically.

Modify When:

NOTE: Calibration is needed when changing the header regardless of size and type unless previously calibrated.

- Cutterbar is not following contour of the ground.
- Cutterbar appears to be pushing. Increase HydraFlex™ pressure.
- Cutterbar rides over the top or leaves uncut crop. Decrease HydraFlex™ pressure.
- Changing header type.

System Is Enabled When:

- Properly equipped header is connected to machine.
- Engine is running.
- Road transport disconnect switch is in field position.
- Height Sensing system is ON.
- Header is engaged.

Procedure to Modify:

HydraFlex is a trademark of Deere & Company



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main page.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Height Sensing ON/OFF.




Alert Icon

H116168—UN—19DEC16

NOTE: When a given automation option has issues preventing it from being enabled, the toggle switch is replaced with a generic issue alert icon button. Selecting this button brings up a message dialogue with information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.

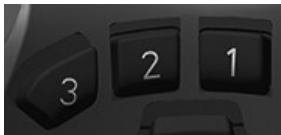

Activation Buttons

H116346—UN—19DEC16

3. Press the desired activation button.

NOTE: Height Sensing returns to last known adjustment setting. Each activation button can save a different reel position. Press and hold the desired button for 2 seconds to save the reel position.



Height Sensing

H116358—UN—19DEC16


NOTE: Height Sensing icon appears on the corner post display.



Activation Number

H116354—UN—19DEC16

Activation number on the corner post display indicates which button was selected.

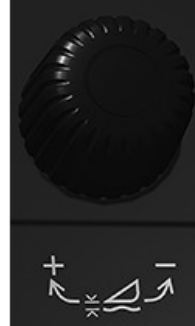


Adjustment Dial

H116347—UN—20DEC16

4. Change the height setpoint by pressing desired activation button and adjust height using header adjustment dial.

- Turn header adjustment dial clockwise to increase HydraFlex™ pressure.
- Turn header adjustment dial counterclockwise to decrease HydraFlex™ pressure.

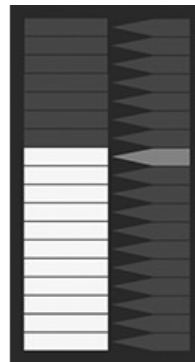

Bar Graph

H116356—UN—20DEC16

Bar graph on the corner post display shows pressure setpoint based on pressure in the cutterbar on the platform.



Numeric Display

H118305—UN—19DEC16

Numeric display on the corner post display shows

HydraFlex is a trademark of Deere & Company

pressure setpoint based on pressure in the cutterbar on the platform.



Raise/Lower

H116348—UN—19DEC16

Using the header raise/lower switch temporarily deactivates system.

NOTE: Pressing and holding the header raise/lower switch for 5 seconds disables the system.

- Manually adjusting the header height with header lower switch temporarily overrides system until released. Once switch is released, system returns back to automatic mode.

NOTE: Header lower switch can be set to immediately disable system until activation button is pressed. See your John Deere dealer for further information.

- Manually adjusting the header height with header raise switch temporarily deactivates system until header lower switch is pressed. Once switch is pressed, system reactivates.

NOTE: Header lower switch can be set not to reactivate system when header lower switch is pressed. See your John Deere dealer for further information.

Press activation buttons 1, 2, or 3 to reactivate system. Header automatically moves to last known setting.



Close

H116648—UN—19DEC16

5. Select to close.

PR79369,000046D-19-26FEB21

Height Sensing (Hinged Draper)

Height Sensing allows you to adjust the cut height by selecting the position of the header relative to the ground and setting the system to automatically return to that position.

NOTE: If the operator desires a change between on-ground and off-ground cutting, this is done through adjustment of the Gauge Wheel Position. No other adjustments need to be made.

Modify When:

If Cutting Off The Ground:

- Header appears to be cutting too low. Extend the gauge wheels.
- Header rides over the top or leaves uncut crop. Retract the gauge wheels.
- Ground terrain changes.

System Is Enabled When:

- No active fault codes.
- Properly equipped header is connected to the machine.
- Engine is running.
- Road transport disconnect switch is in field position.
- Height Sensing system is ON.
- Header is engaged.

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main page.

NOTE: Feeder house float mode is disabled when operating a hinged draper. It is recommended to run height sensing mode with the hinged draper.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Height Sensing ON/OFF.



Alert Icon

H116168—UN—19DEC16

NOTE: When a given automation option has issues preventing it from being enabled, the toggle switch is replaced with a generic issue alert icon button. Selecting this button brings up a message dialogue with information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



H116346—UN—19DEC16

Activation Buttons

3. Press the desired activation button.

NOTE: Height Sensing returns to last known adjustment setting. Each activation button can save a different reel position. Press and hold the desired button for 2 seconds to save the reel position.



H116358—UN—19DEC16

Height Sensing


NOTE: Height Sensing icon appears on the corner post display.



H116354—UN—19DEC16

Activation Number

Activation number on the corner post display indicates which button was selected.

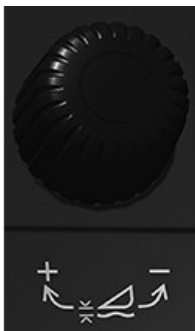


H116347—UN—20DEC16

Adjustment Dial

4. Change the height setpoint by pressing desired

activation button and adjust height using header adjustment dial.

- Turn header adjustment dial clockwise to raise the header and setpoint.
- Turn header adjustment dial counterclockwise to lower the header and setpoint.

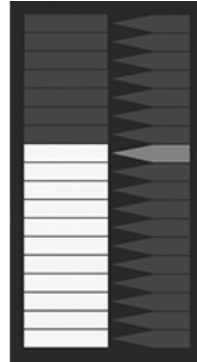

H116356—UN—20DEC16

Bar Graph

Bar graph on the corner post display shows the header's relative gauge wheel position.



H118305—UN—19DEC16

Numeric Display

Numeric display on the corner post display shows the header's relative position based on header height sensor linked to the feeder house.



H116348—UN—19DEC16

Raise/Lower

Using the header raise/lower switch temporarily deactivates system. Pressing and holding the header raise/lower switch for 5 seconds disables the system.

NOTE: Header lower switch can be set to immediately disable system until activation button is pressed. See your John Deere dealer for further information.

NOTE: Header lower switch can be set not to reactivate system when header lower switch is pressed. See your John Deere dealer for further information.

Press activation buttons 1, 2, or 3 to reactivate system. Header automatically moves to last known setting.



Close

H116648—UN—19DEC16

5. Select to close.

mm95366,1655912532760-19-22JUN22

Feeder House Float

Feeder House Float allows you to select how firmly a rigid header contacts the ground and maintains a set pressure.

Modify When:

- Ground conditions are firm and the head is leaving taller stubble or not following the ground as desired. Decrease pressure.
- Ground conditions are soft and the head is pushing material or not following the ground as desired. Increase pressure.

System Is Enabled When:

- Properly equipped header is connected to machine.
- Engine is running.
- Road transport disconnect switch is in field position.
- Feeder House Float system is ON.
- Header is engaged.

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main screen.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Active Header Float ON/OFF.



Alert Icon

H116168—UN—19DEC16

NOTE: When a given automation option has issues preventing it from being enabled, the toggle switch is replaced with a generic issue alert button. Selecting this button brings up a message dialogue with information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



Activation Buttons

H116346—UN—19DEC16

3. Press the desired activation button.

NOTE: Header Height Float returns to last known adjustment setting.



Feeder House Float

H116972—UN—19DEC16


NOTE: Header Height Float icon appears on the corner post display.



Activation Number

H116354—UN—19DEC16

Activation number on the corner post display indicates which button was selected.

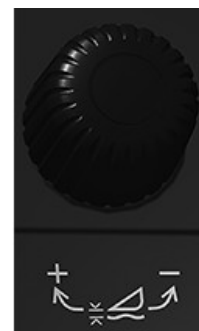


Adjustment Dial

H116347—UN—20DEC16

4. Change pressure by pressing desired activation

button and adjust the height using header adjustment dial.

- Turn header adjustment dial clockwise to raise the header lift cylinder pressure and setpoint.
- Turn header adjustment dial counterclockwise to lower the lift cylinder pressure and setpoint.

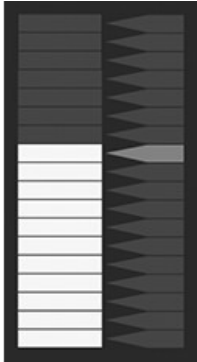

Bar Graph

H116356—UN—20DEC16

Bar graph display shows the actual header float pressure.



Numeric Display

H118305—UN—19DEC16

Numeric display shows the actual header float pressure.



Raise/Lower

H116348—UN—19DEC16

NOTE: Pressing and holding the header raise/lower switch for 5 s disables the system.

Press activation buttons 1, 2, or 3 to reactivate system. Header automatically moves to last known setting.



Close

H116648—UN—19DEC16

5. Select to close.

PR79369,000046E-19-26FEB21

Lateral Tilt

Lateral Tilt allows you to maintain header position relative to the ground using the lateral tilt system to equalize the distance to the ground at each end of the header.

Modify When:

- ON: For headers equipped with the appropriate sensors use lateral tilt to maintain a uniform cut height across the width of the head while cutting on or off the ground.
- OFF: You may disable lateral tilt if it is preferred to tilt the head manually by pressing the lateral tilt button on the multi-function lever. Disable lateral tilt if the header is not equipped with the appropriate sensors.

System Is Enabled When:

- Properly equipped header is connected to machine.
- Engine is running.
- Road transport disconnect switch is in field position.
- Header was calibrated.
- Lateral Tilt system is ON.
- Header is engaged.

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main screen.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Lateral Tilt ON/OFF.



Alert Icon

H116168—UN—19DEC16

NOTE: When a given automation option has issues preventing it from being enabled, the toggle switch is replaced with a generic issue alert button. Selecting this button brings up a message dialogue with information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



Activation Buttons

H116346—UN—19DEC16

3. Press the desired activation button.

NOTE: Lateral Tilt will return to last known adjustment setting.



Lateral Tilt

H116359—UN—19DEC16

NOTE: Lateral Tilt icon appears on the corner post display.



Activation Number

H116354—UN—19DEC16

Activation number on the corner post display indicates which button was selected.



Raise/Lower

H116348—UN—19DEC16

NOTE: Pressing Lateral Tilt switch overrides system. When the switch is released within 5 seconds, system returns to automatic mode.

Press right side of switch to tilt the header to the right or press left side of switch to tilt the header to the left.

Press activation buttons 1, 2, or 3 to reactivate system. Header automatically returns to last known setting.



Close

H116648—UN—19DEC16

4. Select to close.

PR79369,000046F-19-26FEB21

Resume Preferences

Enable or disable automatic resume of header automation functions.

 
NOTE: Some items below are only displayed if machine is equipped with the associated option.



Auto Reel Speed

H113524—UN—19DEC16

Auto Reel Speed— automatic control of reel or belt pickup speed relative to ground speed.



Auto Draper Belt Speed

H131361—UN—02SEP20

 
Auto Draper Belt Speed— automatic control of draper side belt speed relative to ground speed.



Fore/Aft Resume

H113717—UN—19DEC16


Fore/Aft Resume— select fore/aft position and return to that position automatically.



Reel Position Resume

H116163—UN—19DEC16

 Reel Position Resume— select reel position and return to those positions automatically.



Deck Plate Position Resume

H113532—UN—19DEC16

Deck Plate Position Resume— select positions of the deck plates and return to that position automatically.

PR79369,0000470-19-11MAR21

Fore/Aft Resume

Fore/Aft Resume allows you to program a saved fore/aft tilt position of the feeder house frame to any of the Activation buttons 1, 2, or 3 on the multi-function lever.

NOTE: You may have a standard position for harvesting standing crop and then another for downed crop. This allows you to quickly switch back and forth.

Modify When:

- Riding over wet or dense residual residue.
- You want to better attach or detach the header.
- You want to optimize conveying of crop material into the feeder house.

Tilt Feeder House Fore When:

- Picking up downed crop.
- Cutting closer to the ground.

Tilt Feeder House Aft When:

- Material is being pushed by the cutterbar. Move aft to reduce lost material.
- For standing crop, tilting aft can optimize feeding/ conveying material into the machine.

System Is Enabled When:

- Engine is running.
- Road transport disconnect switch is in field position.
- Hydraulic Feeder House Fore/Aft Resume system is ON.
- Multi-function lever switches are functionally assigned.
- Head is engaged.

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main screen.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Fore/Aft Resume ON/OFF.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



Programmable Buttons

H118577—UN—19DEC16

3. To change fore/aft tilt setpoint, press desired programmable button C or D and adjust fore/aft tilt using hydraulic feeder house fore/aft tilt switches.



Activation Buttons

H116346—UN—19DEC16

4. Press and hold the desired activation button for 2 seconds to enter desired setting into memory.



Activation Number

H116354—UN—19DEC16

Activation number on the corner post display indicates which button was selected.

5. Push and hold top of switch to tilt feeder house forward or push and hold bottom of switch to tilt feeder house rearward.

Armrest display shows the feeder house fore/aft tilt position based on a sensor linked to the feeder house.

Manually moving hydraulic feeder house fore/aft tilt switches on multi-function lever deactivates system.

Press activation buttons 1, 2, or 3 to reactivate system. Hydraulic feeder house fore/aft tilt automatically moves to preselected position.

NOTE: When the feeder house is raised and the header is engaged, feeder house fore/aft tilt automatically moves forward. This allows the feeder house safety stop to be engaged. Feeder house fore/aft tilt automatically returns to last known position when lowering.

When the header is disengaged, feeder house fore/aft tilt automatically moves forward upon raising. Feeder house fore/aft tilt will not return to last known position when lowering.



Close

H116648—UN—19DEC16

6. Select to close.

PR79369,0000471-19-26FEB21

Reel Position Resume

Reel Position Resume allows you to select position of the reel relative to belts, auger, cutterbar, floor and so forth and return to that position automatically.

Modify To:

- Harvest standing crop of different heights in the same field.
- Assist in picking up downed crop.
- Clean off the cutter bar at the end of a cut.

Set to optimize crop flow:

- **Standing Crop (with Height Sensing Active)**— position the reel above the cutterbar so that it slightly touches the grain heads. This helps the crop fall into the platform.
In small grain crops, place the reel slightly in front of the auger to allow the crop to fall into the auger. Position the reel tines straight down or slightly forward. If the crop starts to turn with the reel, the reel position setting is too low. If you see crop being hit by the reel and bouncing back and forth before being cut, reduce the reel speed. Too fast of a reel speed will result in header losses.
- **Down Crop (with Float Mode Active)**— place the reel in front of the cutterbar so that the reel can rake up the crop. Position the reel tines backward to help with lifting the crop. Consider the use of crop lifters if they are available for your platform type.
- **Headland Turns (with Height Resume Active)**— position the reel as close as possible to the cutterbar. This prevents crop from falling out of the platform during a headland turn.

System Is Enabled When:



Reel Position Resume

H116361—UN—19DEC16

NOTE: Reel Position Resume icon appears on the corner post display.

- Properly equipped header (with reel position sensors) is connected to machine and is calibrated.
- Engine is running.
- Feeder house is engaged.
- Road transport disconnect switch is in field position.

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main screen.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Reel Position Resume ON/OFF.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



Reel Lift

H116349—UN—19DEC16

3. Use reel lift switch to obtain desired reel height position.



H116346—UN—19DEC16

Activation Buttons

- Press and hold the desired activation button for 2 seconds to enter desired setting into memory.

NOTE: Each activation button can save a different reel position. Press and hold the desired button for 2 seconds to save the reel position.



H116361—UN—19DEC16

Reel Position Resume

NOTE: Reel Position Resume icon flashes indicating setpoint is saved.



H116354—UN—19DEC16

Activation Number

Activation number on the corner post display indicates which button was selected.

Manually moving reel lift switch on the multi-function lever deactivates reel position.

Press activation buttons 1, 2, or 3 to reactivate system. Reel automatically moves to preselected height.



H116648—UN—19DEC16

Close

- Select to close.

PR79369,0000472-19-26FEB21

Deck Plate Position Resume

Deck Plate Position Resume allows you to select spacing of the hydraulic deck plates and return to that position automatically.

Modify When:

Decrease Deck Plate Spacing When:

- Ear shelling at deck plates.

- For an area that has smaller stalks due to flooding or low nutrient level.
- To reduce grain loss and damage at the header if the condition exists.

Increase Deck Plate Spacing When:

- Excessive trash intake from the corn head causes shelled corn to come out of rear of combine.
- Pulling up corn stalks and ears. Gradually open deck plates until stalks feed through rolls more freely.
- For less material other than grain to reduce shoe load.
- For picking up downed corn to improve feeding and reduce the amount of trash the machine takes in.
- To clean out any buildup of material around the deck plates when coming to an end of cut.

System Is Enabled When:

- Properly equipped header (with the deck plate sensors) is connected to machine and is calibrated.
- Engine is running.
- Feeder house is engaged.
- Road transport disconnect switch is in field position.

Procedure to Modify:



H116962—UN—19DEC16

Auto Control

- Select Auto Control on Header application main screen.



H116165—UN—19DEC16

ON/OFF

- Select to turn Deck Plate Position Resume ON/OFF.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



Reel Lift and Fore/Aft

H116349—UN—19DEC16


- Use reel fore/aft switch to obtain desired deck plate spacing.

- Left side of switch increases spacing.
- Right side of switch decreases spacing.

Minimum: 0

Maximum: 9

Increment: 1

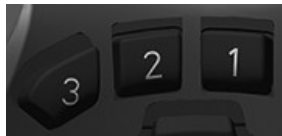

Activation Buttons

H116346—UN—19DEC16

- Press and hold the desired activation button for 2 seconds to enter desired setting into memory.



Deck Plate Position Resume

H116362—UN—19DEC16

NOTE: Deck Plate Position Resume icon appears on the corner post display.



Activation Number

H116354—UN—19DEC16

Activation number on corner post display indicates which button was selected.

Manually moving fore/aft switch on the multi-function lever deactivates deck plate resume.

Press Activation Buttons 1, 2, or 3 to reactivate system. Deck plates automatically move to preselected position.

PR79369,0000473-19-26FEB21

Cutterbar Position Resume

Cutterbar Position Resume allows you to program a saved cutterbar position to any of the activation buttons 1, 2, or 3 on the multi-function lever.

NOTE: You may have a standard position for harvesting standing crop and then another for downed crop. This allows you to quickly switch back and forth. Cutterbar position resume only works on European extendable platform headers.

Modify To:

- Reduce pre-harvest losses in tall standing crops. Extend the cutterbar.
- Improve feeding in short standing crops. Retract the cutterbar.

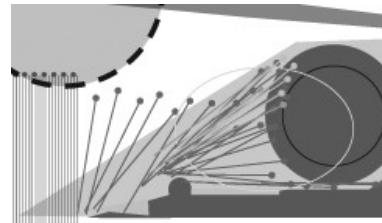


Table Too Short

H127897—UN—31OCT19

- Improve feeding issues when crop falls onto the auger. The table is too short. Extend the table.


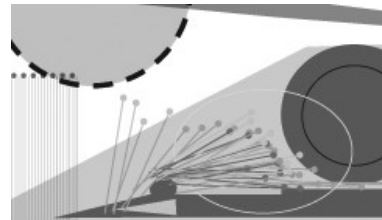


Table Too Long

H127898—UN—31OCT19

- Improve feeding issues when crop falls too far in front of the auger and starts to build up. The table is too long. Retract the table.

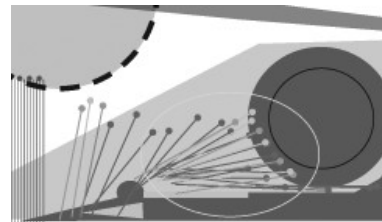

Optimum Table Position

H127896—UN—31OCT19

- Optimize crop feeding. Crop falls between the auger flights. The table is in the optimum position.

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main screen.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Cutterbar Position Resume ON/OFF.



Alert Icon

H116168—UN—19DEC16

NOTE: When a given automation option has issues preventing it from being enabled, the toggle switch is replaced with a generic issue alert button. Selecting this button brings up a message dialogue with information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



Cutterbar Position

H114081—UN—19DEC16

3. Select the screen area under Cutterbar Position to open the Cutterbar Position page.



Adjustment

H116150—UN—20DEC16

4. Select plus (+) to increase or minus (-) to decrease the desired position.



Close

H116648—UN—19DEC16

5. Select to close.



Activation Buttons

H116346—UN—19DEC16

6. Press and hold the desired activation button for 2 seconds to enter the desired setting into memory.



Activation Number

H116354—UN—19DEC16

Activation number on the corner post display indicates which button was selected.

Alternative Procedure to Modify:

NOTE: The combine allows you to enter plant height and desired stubble height in the armrest display. This data, together with the entered amount of crop harvested, allows the combine to make a pre-set of the cutting table for optimized operation.

NOTE: Wizard can be accessed through this overlay or launched from Information and Settings.



Cutterbar Wizard

H116151—UN—19DEC16

1. Select to start Cutterbar Wizard.



Input Box

H116152—UN—19DEC16

2. Select to open the number pad and enter the desired plant height.



Input Box

H116152—UN—19DEC16

3. Select to open the number pad and enter the desired stubble height.



Save

H116154—UN—19DEC16

- Select to close the overlay and update the position setting.



Cancel

H116153—UN—19DEC16

- Select to exit the wizard without updating the position setting.



Activation Buttons

H116346—UN—19DEC16

4. Press and hold the desired activation button for 2 seconds to enter the desired setting into memory.



Activation Number

H116354—UN—19DEC16

Activation number on the corner post display indicates which button was selected.

PR79369,00004B1-19-08MAR21

Auto Reel Speed

Auto Reel Speed allows you to program a saved reel speed or belt pickup speed to any of the header activation buttons on the multi-function lever. You may have a standard reel speed for harvesting standing crop

and then another for downed crop. This allows you to quickly switch back and forth.

NOTE: Auto reel speed setting is automatically saved when Header Automation is active.

Modify When:

- Picking up downed crop. Minimum speed varies based on condition and operator.
- Crop is being “threshed” by the reel. Slow down the reel by decreasing the auto reel speed.
- Crop is being pushed over by the reel. Speed up the reel by increasing the auto reel speed.

System Is Enabled When:

- Properly equipped header is connected to machine.
- Engine is running.
- Road transport disconnect switch is in field position.
- Auto reel speed is ON.
- Header and separator are engaged.
- Ground speed is greater than 0.25 km/h (0.16 mph).

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main screen.



ON/OFF

H116165—UN—19DEC16

2. Select to turn auto reel speed ON/OFF.



Alert Icon

H116168—UN—19DEC16

NOTE: When a given automation option has issues that prevent it from being enabled, the toggle switch is replaced with a generic issue alert button. Selecting this button brings up a message dialogue with information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.



H116346—UN—19DEC16

Activation Buttons

3. Press the desired activation button.


NOTE: Auto reel speed returns to last known adjustment setting.



H116360—UN—19DEC16

Auto Reel Speed

NOTE: Auto reel speed icon appears on the corner post display.

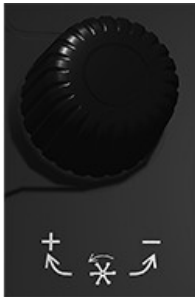

H116352—UN—20DEC16

Reel Speed Dial

4. Change speed using the Reel Speed dial.

- Turn the adjustment dial clockwise to increase speed.
- Turn the adjustment dial counterclockwise to lower/decrease speed.

Minimum: 0

Maximum: 50

Increment: 1

NOTE: Suggested ratio for standing crop is 4.
Suggested ratio for down crop is 11.



H118305—UN—19DEC16

Numeric Display

Numeric display on the corner post display shows current speed ratio setting.



H116352—UN—20DEC16

Reel Speed Dial

NOTE: Changing speed using the Reel Speed dial changes preselected setting. To return back to the preselected setting, press the programmed activation button.

NOTE: The larger the ratio number selected, the faster the reel operates with respect to the machine ground speed.



H116648—UN—19DEC16

Close

5. Select to close.

PR79369,0000474-19-26FEB21

Auto Draper Belt Speed

Auto Draper Belt Speed allows you to program a saved side belt speed to any of the header activation buttons on the multi-function lever. You may have a standard side belt speed for harvesting standing crop and then another for downed crop. This allows you to quickly switch back and forth. Draper belt speed is proportional to the machine ground speed.

NOTE: Auto draper belt speed is used for draper platforms only. For more information on belt speed resume preferences for belt pickup platforms, see Auto Reel Speed.

Auto draper belt speed setting is automatically saved when Header Automation is active.

Modify When:

- Feeding performance is poor.
- It is desired to increase belt speed.

System Is Enabled When:

- Properly equipped header is connected to machine.

- Engine is running.
- Road transport disconnect switch is in field position.
- Auto draper belt speed system is ON.
- Header and separator are engaged.
- Ground speed is greater than 0.25 km/h (0.16 mph).



Header Application

H113541—UN—19DEC16

Procedure to Modify:



Auto Control

H116962—UN—19DEC16

1. Select Auto Control on Header application main screen



ON/OFF

H116165—UN—19DEC16

2. Select to turn auto reel speed ON/OFF.




Alert Icon

H116168—UN—19DEC16

NOTE: When a given automation option has issues that prevent it from being enabled, the toggle switch is replaced with a generic issue alert button. Selecting this button brings up a message dialogue with information to aid in troubleshooting the issues.

NOTE: Depending on machine configurations and the setup of your configurable switches and buttons on the multi-function lever, many combinations exist.

3. Press the desired activation button.

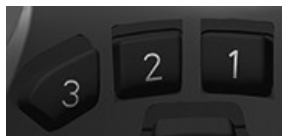


Activation Buttons

H116346—UN—19DEC16

NOTE: Auto draper belt speed returns to last known adjustment setting.

 4. Access the Header Application.



Belt Speed

H131361—UN—02SEP20

5. From the Header main page, select the Belt Speed icon. The Draper Belt Speed window opens.



Adjustment

H116148—UN—20DEC16

6. Change speed using the softkeys on the display.

- Press the plus (+) softkey to increase speed.
- Press the minus (-) softkey to lower/decrease speed.

Minimum: 0

Maximum: 10

Increment: 1



Input Box

H116149—UN—19DEC16

Input box on the display shows current speed ratio setting.

NOTE: Changing speed using the softkeys changes preselected setting. To return back to the preselected setting, press the programmed activation button.

NOTE: The larger the ratio number selected, the faster the belt operates with respect to the machine ground speed.



Close

H116648—UN—19DEC16



Close

H116648—UN—19DEC16

7. Select to close.

PR79369,0000475-19-26FEB21

HydraFlex™ Pressure

HydraFlex™ Pressure helps optimize platform ground-following performance and allows you to vary the cutterbar ground pressure without affecting the cutting height of the crop.

Modify When:

- Cutting off the ground using height sensing arms. HydraFlex™ Pressure can be increased to lock the cutterbar in a rigid position.
- Increase pressure when cutterbar is pushing.
- Decrease pressure when cutterbar rides over the top or leaves uncut crop.

Procedure to Modify:



HydraFlex™ Pressure

H114076—UN—19DEC16

1. Select screen area under HydraFlex™ Pressure to open HydraFlex™ Pressure page.



Adjustment

H116142—UN—20DEC16

2. Select plus (+) to increase or minus (-) to decrease desired pressure.

- Minimum: 0
- Maximum: 20 684 kPa (207 bar) (3000 psi)
- Increment: 345 kPa (4 bar) (50 psi)
- No default

3. Select to close.

Recommended Settings (600FD and 700FD):

- 6894 kPa (69 bar) (1000 psi) for firm ground conditions.
- 8963 kPa (90 bar) (1300 psi) for normal ground conditions.
- 11 031 kPa (110 bar) (1600 psi) for soft ground conditions.

Recommended Settings (600F):

- 7584 kPa (76 bar) (1100 psi) for firm ground conditions.
- 8963 kPa (90 bar) (1300 psi) for normal ground conditions.
- 11 721 kPa (117 bar) (1700 psi) for soft ground conditions.

Alternative Procedure to Modify:



Input Field

H116143—UN—19DEC16

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired setting.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

PR79369,0000476-19-26FEB21

Draper Belt Speed

Draper Belt Speed controls the speeds of the side draper belts. Set belt speed for prevailing crop

conditions and adjust for an even distribution of crop material across the side draper belts.

NOTE: It is generally best to start with the maximum belt speed and reduce speed if you encounter feeding problems.


Increase Belt Speed When:

- Heavy loading of side belts occurs.
- Heavy loading of material along sides of the center belt occurs.
- Excessive plugging of the feed drum and/or feeder house occurs.
- Crops are pulled under the platform by side draper belts.
- Too much material builds up on belts, blocking the knife, and leaving standing uncut crop.

Decrease Belt Speed When:

- Crops are feeding under opposing side draper belt.
- You want to reduce shatter loss for long green straw/ stems.

Procedure to Modify:

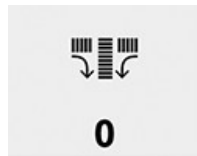

Draper Belt Speed

H114075—UN—19DEC16

1. Select screen area under Draper Belt Speed to open Draper Belt Speed page.



Standard

H116145—UN—19DEC16

2. Use toggle button to select desired belt mode.



Reduced Speed

H116144—UN—19DEC16

NOTE: Use Reduced Speed when not harvesting with the full width of platform.

NOTE: In Reduced Speed mode, belts slow down to a factory default setting and a turtle icon flashes below the draper belt speed icon.

NOTE: Increasing belt speed overrides Reduced Speed.



Adjustment

H116146—UN—20DEC16

3. Select plus (+) to increase or minus (-) to decrease desired speed.

Minimum: 0

Maximum: 240 rpm

Increment: 10 rpm

No default



Close

H116648—UN—19DEC16

4. Select to close.

Recommended Settings:

160—220 n/min

Faster belt speeds are typically required in tougher crop conditions.

Alternative Procedure to Modify:



Input Field

H116147—UN—19DEC16

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired setting.

- Turn dial clockwise to increase value.

- Turn dial counterclockwise to decrease value.

PR79369,0000477-19-26FEB21

Draper Float Position

Draper Float Position controls the pressure in the cylinders for the gauge wheels and center section.

NOTE: Higher numbers make the header lighter, which increases oil pressure to gauge wheels/center section float. Lower numbers make the header heavier with less pressure in the float system.

Modify When:

For off ground cutting only:

- You want to reduce unwanted ground contact. Increase float setting.
- You want to reduce wavy cutting. Decrease float setting.
- The head is slow to react to changing ground conditions. Decrease float setting.

Downed crop:

- The header begins to push material in front of the cutterbar as can sometimes be seen in soft ground conditions. Increase float setting.
- The header begins to leave uncut crop behind the cutterbar as can sometimes be seen in firm ground conditions. Decrease float setting.

Procedure to Modify:



Draper Float Position

H116130—UN—19DEC16

1. Select screen area under Draper Float Position to open Draper Float Position page.



Adjustment

H116148—UN—20DEC16

2. Select plus (+) to increase or minus (-) to decrease desired position.

Minimum: 1

Maximum: 10

Default 5

Increment: 1



Close

H116648—UN—19DEC16

3. Select to close.

Alternative Procedure to Modify:



Input Field

H116149—UN—19DEC16

1. Select to activate Navigation Bar and Armrest Adjustment Dials.



H115035—UN—14MAR16
Navigation Bar
Adjustment Dial



H115034—UN—28MAR16
Armrest Adjustment Dial

2. Use Navigation Bar or Armrest Adjustment Dial to select desired setting.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

PR79369,0000478-19-26FEB21

Cutterbar Tilt

Cutterbar Tilt adjusts angle of the cutterbar in relation to the rest of the platform to optimize harvesting capabilities.

Modify To:


Tilt the cutterbar forward:

- Assist in picking up downed crop.
- Harvest closer to the ground.

Tilt the cutterbar rearward:

- Prevent picking up rocks, dirt, and foreign objects. Level out the head while cutting on the ground.
- Prevent cut crop buildup falling from the cutterbar or loss of grain heads at cutterbar.

Procedure to Modify:

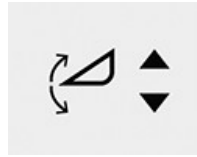

H114077—UN—19DEC16

Cutterbar Tilt

1. Select screen area under Cutterbar Tilt to open Cutterbar Tilt page.



H116155—UN—20DEC16

Adjustment

2. Select to tilt the cutterbar up or down.



H116648—UN—19DEC16

Close

3. Select to close.

PR79369,0000479-19-26FEB21

Deck Plate Spacing

Deck Plate Spacing adjusts deck plate opening in order to match changes in crop conditions.

Modify When:

- Switching fields, or conditions vary in the same field.

Decrease Deck Plate Spacing When:

- Ear shelling at deck plates.
- Header loss has been identified as grain shelling at the base of the ear.
- Grain damage is recognized in the corn head. Reduce deck plate spacing to provide a cushion for the ears.

- You want to optimize feeding for narrow stalks.

Increase Deck Plate Spacing When:

- Excessive trash intake from the corn head is causing shelled corn to come out of the rear of the combine.
- The corn head is pulling up corn stalks and ears. Gradually open deck plates until stalks feed through rolls more freely.
- The corn appears to be pushing stalks over.
- You want to optimize feeding for large diameter stalks.

Procedure to Modify:



H116349—UN—19DEC16

Deck Plate Spacing Switch

- Press left side of switch to increase spacing.
- Press right side of switch to decrease spacing.



H116362—UN—19DEC16

Deck Plate Spacing

NOTE: Pressing left or right side of switch on multi-function lever activates the Deck Plate Spacing icon on corner post display.

Minimum: 0

Maximum: 9

Increment: 1

NOTE: To provide Deck Plate Spacing adjustment for heads with electric deck plate spacing - operators will have to go through Advanced Settings and select the option for 3rd Party Deck Plate Override.

Once enabled, this option allows operators to tap on the Deck Plate Spacing frame of the application to bring up an adjustment overlay with conditionally available readout.

PR79369,000047A-19-26FEB21

Backshaft Speed

Adjusting Backshaft Speed allows you to optimize the

feed rate of the header to the travel speed and volume of material the machine is harvesting.

Modify When:

Increase Backshaft Speed When:

- Flagging occurs on stalks.
- Pulling stalks out of the ground.

NOTE: Higher backshaft speeds are recommended for faster harvesting speeds and taking in large volumes of material to reduce loading on drive components.

Decrease Backshaft Speed When:

- Snapping off stalks and ingesting into separator.
- Butt shelling because ear hits deck plate too fast.

NOTE: Reducing the backshaft speed can reduce ears bouncing and the generation of free grain in the header when harvesting lower volumes of material.

Procedure to Modify:



Backshaft Speed Switch

H116349—UN—19DEC16

- Press top of the switch to increase gear selection or backshaft speed.
- Press bottom of the switch to decrease gear selection or backshaft speed.



Numeric Display

H118498—UN—19DEC16

NOTE: Pressing left or right side of switch on multi-function lever activates Numeric Display on corner post display.

NOTE: Only for CommandTouch™ Multi-Speed Feeder House Drive.

Feeder House Lower Shaft Speeds	
High Torque Variable Speed (if equipped)	490-750 rpm
Multi-Speed (if equipped)	1st Gear: 490 rpm
	2nd Gear: 550 rpm
	3rd Gear: 600 rpm
	4th Gear: 670 rpm
	5th Gear: 750 rpm

PR79369,000047B-19-26FEB21

Cutterbar Position

Cutterbar Position adjusts allows you to control the position of the cutterbar.

NOTE: Only works on European Extendable Platform Headers.

Modify To:

- Reduce pre-harvest losses in tall standing crops. Extend the cutterbar.
- Improve feeding in short standing crops. Retract the cutterbar.

Procedure to Modify:



Cutterbar Position

H114081—UN—19DEC16

1. Select screen area under Cutterbar Position to open Cutterbar Position page.



Adjustment

H116150—UN—20DEC16

2. Select plus (+) to increase or minus (-) to decrease desired position.

Feeder House Lower Shaft Speeds	
Fixed Speed (if equipped)	490 rpm
Heavy-Duty Variable Speed (if equipped)	490-750 rpm



Close

H116648—UN—19DEC16

3. Select to close.

Alternative Procedure to Modify:

NOTE: The combine allows you to enter plant height and desired stubble height in the armrest display. This data, together with the entered amount of crop harvested, allows the combine to make a preset of the cutting table for optimized operation.

NOTE: Wizard can be accessed through this overlay or launched from Information and Settings.



Cutterbar Wizard

H116151—UN—19DEC16

1. Select to Start Wizard.



Input Box

H116152—UN—19DEC16

2. Select to open number pad and enter desired plant height.



Input Box

H116152—UN—19DEC16

3. Select to open number pad and enter desired stubble height.



Save

H116154—UN—19DEC16

- Select to close the overlay and update position setting.



Cancel

H116153—UN—19DEC16

- Select to exit the wizard without updating position setting.

Header Down Force

Header Down Force page allows you to select presets for header down force. Header down force can only be changed when running in Height Sensing mode. Header down force on the ground increases with heavier header down force settings.

NOTE: Header down force presets are optimized for off-ground or on-ground cutting based on the position of the gauge wheels and the auto header height setpoint.

Modify When:

- Increased terrain-following response is desired. Select a heavier header down force setting. Header down force on the ground increases with heavier header down force settings. Accelerated component wear can occur in heavier header down force settings.
- Ground conditions are soft, the header is pushing material, or dampening of the header's response to abrupt terrain features is desired. Select a lighter header down force setting. Header down force on the ground decreases with lighter header down force settings. Reduced terrain-following response can occur in lighter header down force settings.
- Ground conditions are abrasive (hard, dry, sandy, or rocky) and increased component life is desired. Select a lighter header down force setting.

Procedure to Modify:




Down Force

H132842—UN—06JAN21

1. Select the screen area under Down Force to open the Header Down Force page.

NOTE: Header down forces cannot be adjusted if active faults are present or prerequisites have not been met. Once faults are cleared or prerequisites have been met, the screen will advance automatically to the adjustments screen.

PR79369,00004B2-19-08MAR21

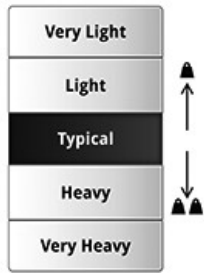

Adjustment

H132843—UN—06JAN21

2. Select a preset to adjust the total header down force based on the current ground conditions. Typical is the standard header down force setting. This setting can be used for the majority of ground conditions. Select Heavy or Very Heavy to increase header down force on the ground for increased terrain-following response. Select Light or Very Light to reduce the header down force on the ground for soft, muddy, or abrasive conditions.



Close

H116648—UN—19DEC16

3. Select to close.

Alternative Procedure to Modify:



Advanced Tuning

H116669—UN—30JAN17

1. Select Advanced Tuning to make specific adjustments to the header down force.

mm95366,1655934163013-19-22JUN22

Gauge Wheels

Gauge Wheels allows you to raise or lower the gauge wheels on the hinged draper.


IMPORTANT: Avoid over-lowering the feeder house. Even with the gauge wheels lowered, the independent attachment frame and feeder house can continue to lower. Further lowering of the feeder house drives the attachment frame and center draper pan into the ground causing draper pan damage.

Modify To:

- Cut the crop closer to the ground; raise the gauge wheels.

- Cut the crop higher off the ground; lower the gauge wheels.

Procedure to Modify:

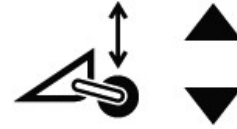

Gauge Wheels

H127473—UN—26SEP19

1. Select screen area under Gauge Wheels to open the gauge wheels page.



Adjustment

H116155—UN—20DEC16

2. Select to raise or lower the gauge wheels to the desired position.



Close

H116648—UN—19DEC16

3. Select to close.

Alternative Procedure to Modify:

NOTE: This method is useful when stubble is higher than desired when cresting terraces or hills. These types of terrain features may require you to manually adjust the cutterbar position by raising and lowering the gauge wheels to maintain a consistent cut height.

1. Ensure that Height Sensing mode is active.



Header Raise/Lower Switch

H116348—UN—19DEC16

- Press the bottom of the header raise/lower switch to raise the gauge wheels and lower the feeder house. This will decrease the cut height. This cut height is only temporary.
- Release the header raise/lower switch. The gauge wheels and feeder house will return to their original positions and the original cut height will be restored.

mm95366,1655933545077-19-22JUN22

Advanced Settings

Advanced Settings allows you to access further adjustments and less common settings.

NOTE: Some items below are only displayed if machine is equipped with the associated option.

Items Accessible on Advanced Settings Page:



Check Box

N118434—UN—22JAN20

Installed Optional Equipment— select each piece of optional header equipment that is currently installed on the header.

NOTE: Selecting the installed options ensures appropriate suspension behavior.



ON/OFF

H116165—UN—19DEC16

Limp Home Mode— use the toggle to enable and disable.



Header Suspension Service Mode

H116669—UN—30JAN17

Header Suspension Service Mode— select to enter service mode when service or maintenance is necessary.



Wing Leveling

H116669—UN—30JAN17

Wing Leveling— select to set a home position and

enable the wings to automatically return to home position.



Checkbox

H114786—UN—10JAN17

Deck Plate Override— allows deck plate spacing adjustment for heads with electric deck plate spacing adjustment. Once enabled, this option allows you to select on the Deck Plate Spacing icon in the Header application to bring up an Deck Plate Spacing adjustment page.

mm95366,1655934569599-19-22JUN22

Limp Home Mode

Allows you to continue to fold, actuate, drive, or transport machine when a system fault is recognized.

Available Limp Home Modes:

- Fore/Aft Tilt
- Reel and Cutterbar
- Folding Corn Head
- Wing Control

Modify When:

Select Limp Home mode check box if machine faults occur and machine components still need to function in order for:

- Harvesting to continue.
- Transporting on roadways. Loading on to a trailer.
- Placing the machine into a building.

Procedure to Modify:

NOTE: Limp Home Mode only appears if a sensor fails or fault code exists.



Advanced

N118004—UN—22OCT15

- Select Advanced Settings to access further adjustments and less common settings.



ON/OFF

H116165—UN—19DEC16

2. Select to turn Limp Home Mode ON/OFF.

CAUTION: You accept the risk of collisions of machine components when turning Limp Home Mode ON.




Close

H116648—UN—19DEC16

3. Select to close.

PR79369,000047D-19-26FEB21

Return to Home Position— select to enable the wings to automatically return to home from above, below, or both directions if height resume is active.

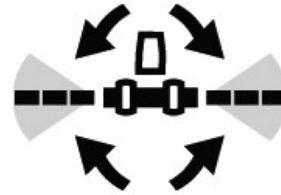

Return to Home Position

H127437—UN—26SEP19

NOTE: The combine graphic will update to show the selected home position and automatic return to home position.

Procedure to Modify:

Manual Wing Leveling:

Wing Leveling

Wing Leveling allows you to select a home position and enable the wings to automatically return to home from above, below, or both directions.

Items Accessible on Wing Leveling Page:

Wing Level— press and hold to return the wings to the home position manually from the enabled directions.



Wing Level

H127434—UN—26SEP19

NOTE: If you stop holding the button, the wings will stop moving.



Flat Home Position

H127435—UN—26SEP19



Slightly Raised Home Position

H127436—UN—26SEP19

Home Position— select one of the radio buttons to select between a flat home position and a slightly raised home position.



Checkbox

N118434—UN—22JAN20



Radio Button

 
H116995—UN—19DEC16



Checkbox

N118434—UN—22JAN20

- 1.Enable wing leveling by selecting the Radio button next to the desired home position and selecting the Checkbox next to the desired return to home position.



Wing Level

H127434—UN—26SEP19

- 2.Press and hold the Wing Level button.

Manual Wing Leveling (Using a Reconfigurable Button)



Radio Button

H116995—UN—19DEC16



Checkbox

N118434—UN—22JAN20

- 1.Enable wing leveling by selecting the Radio button next to the desired home position and selecting the Checkbox next to the desired return to home position.



Wing Level

H134131—UN—21JUN22

2. Assign wing leveling to a reconfigurable button. (For more information, view the [Controls Setup](#) application.)
3. While the header is disengaged, press and hold the previously assigned reconfigurable button.

Automatic Wing Leveling (Flat Home Position)



Radio Button

H116995—UN—19DEC16

1. Enable wing leveling by selecting the Radio button next to the desired home position and selecting the Checkbox next to the desired return to home position.



Checkbox


N118434—UN—22JAN20



Flat Home Position

H127435—UN—26SEP19


2. Select a flat home position.

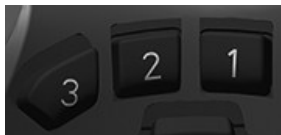

Header Activation Buttons

H116346—UN—19DEC16

3. Press header activation button 2 or 3 on the front of the multi-function lever to lower the header and enter the crop.

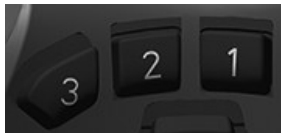

Header Activation Buttons

H116346—UN—19DEC16

4. Press header activation button 1 on the front of the multi-function lever to raise the header. The wings will automatically level.

Automatic Wing Leveling (Slightly Raised Home Position)



Radio Button

H116995—UN—19DEC16



Checkbox

N118434—UN—22JAN20

1. Enable wing leveling by selecting the Radio button next to the desired home position and selecting the Checkbox next to the desired return to home position.



Slightly Raised Home Position

H127436—UN—26SEP19

2. Select a slightly raised home position.



Header Activation Buttons

H116346—UN—19DEC16

3. Press header activation button 2 or 3 on the front of the multi-function lever to lower the header and enter the crop.



Header Activation Buttons

H116346—UN—19DEC16

4. Press header activation button 1 on the front of the multi-function lever to raise the header. The wings will automatically adjust to a slightly raised position.

mm95366,1655754489749-19-28JUN22

Header Down Force Advanced Tuning

Header Down Force Advanced Tuning allows you to make specific adjustments to the header down force within the selected preset range. Adjustments to advanced tuning impact all height sensing setpoints (header activation button 2 or 3).


NOTE: The header is sensitive to weight changes. Aftermarket accessories, such as air reels, side knives, and crop lifters, can change the balance of the header. Adjustments may be required to avoid poor performance. Start by changing the *Installed Optional Equipment* settings on the *Advanced Settings* page of the Header application.

Items Accessible on Header Down Force Advanced Tuning Page:

Distributed Down Force

Modify When:

- The desired down force is between two header down force settings.
- Increased terrain-following response is desired. Increase the distributed down force. Accelerated component wear can occur at higher distributed down force settings.
- Ground conditions are soft, the head is pushing material, or dampening of the header's response to abrupt terrain features is desired. Decrease the distributed down force. Reduced terrain-following response can occur at lower distributed down force settings.
- Ground conditions are abrasive (hard, dry, sandy, or rocky) and increased component life is desired. Decrease the distributed down force.
- Advanced tuning adjustments have led to issues with terrain-following. Press the Reset button and return to the default settings. From the default settings, make further adjustments as needed.

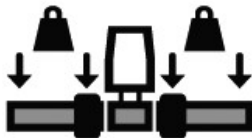

H127389—UN—26SEP19

Distributed Down Force

Distributed Down Force— adjusts down force that spans the entire header.



Reset

H127429—UN—26SEP19

Reset— push to reset the currently active preset to the factory-default value.



H127431—UN—26SEP19

Slider Gauge

Slider Gauge— indicates current down force value. Values are restricted to the range of the selected preset.



H127432—UN—26SEP19

Adjustment

Adjustment— push plus (+) to increase or minus (-) to decrease down force.

Wing Down Force

Modify When:

 
- The header is leaving taller stubble near the end of the wings or the header is pushing material near the center of the head. Increase the wing down force.
- The header is leaving taller stubble near the center of the header or the header is pushing material near the end of the wing. Decrease the wing down force.



H127388—UN—26SEP19

Wing Down Force

Wing Down Force— adjusts down force isolated to either side of the header.



Slider Gauge

H127430—UN—26SEP19

Slider Gauge— indicates current down force value for each side of the header.



Adjustment

H127433—UN—26SEP19

Adjustment— push plus (+) to increase or minus (-) to decrease down force for either side of the header.

mm95366,1655912317297-19-22JUN22

Grain Handling Application

Access Grain Handling

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Grain Handling

H114773—UN—10JAN17

3. Grain Handling

Access Application Through Navigation Bar:




Grain Handling

H114775—UN—10JAN17

Press Grain Handling button on navigation bar below display.

NOLMWLO.0000354-19-16JUL20

Grain Handling Main Page

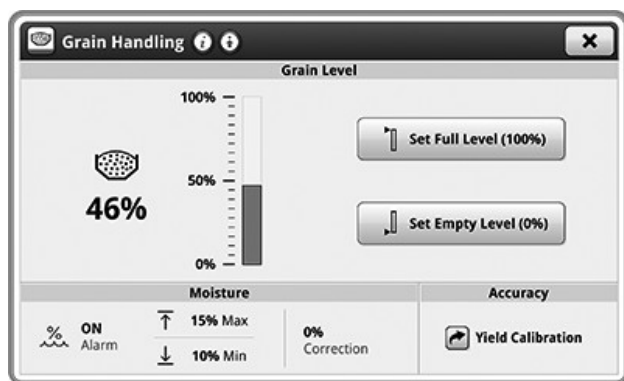

Grain Handling


H119900—UN—10JAN17

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

Grain Handling application is used to access and modify Grain Level settings, Moisture, and Accuracy. Advanced Settings are used to modify Grain Level Auto Beacon, Tank Unloading Offset, and Custom Level Alarm.

NOTE: Some items below are only displayed if machine is equipped with the associated option.

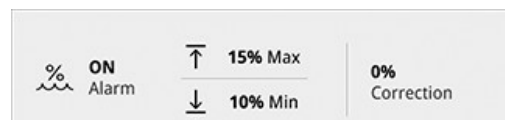

Moisture

H114778—UN—10JAN17

Items Accessible on Grain Handling Main Page:

Moisture— enable or disable moisture alarm, set maximum and minimum moisture alarm settings, and set moisture correction.



Yield Calibration


Yield Calibration

H114779—UN—10JAN17

Accuracy— access Yield Calibration.



46%

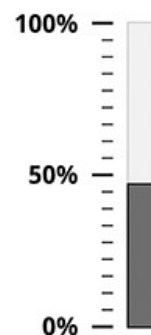

Grain Level

H115000—UN—10JAN17

Grain Level Items

Grain Level— displays current grain tank level.



Set Full Level

H114776—UN—10JAN17

Set Full Level— set grain tank full level.



Set Empty Level

H114777—UN—10JAN17

Set Empty Level— set grain tank empty level.




Advanced Settings

N118004—UN—22OCT15

Advanced Settings Items

Advanced Settings— access further adjustments and less common settings.

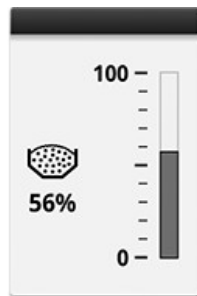

Grain Level

H116266—UN—31JAN17

Run Page Modules

Modules for this application can be added to run pages using Layout Manager.

Example:

Grain Level— gives you direct access to Grain Level application.

NOTE: Different modules can be available for your application.

PR79369,00003B2-19-02FEB21

Advanced Settings

Advanced Settings allows you to access further adjustments and less common settings.

Items Accessible on Advanced Settings page:



Checkbox

H114785—UN—10JAN17

Grain Level Auto Beacon— beacon light illuminates when grain tank is 3/4 full or is full.



Offset

H126193—UN—24APR19

 
Tank Unloading Offset— adjust grain tank empty level if all grain is not emptied from grain tank or unloading auger continues to run after grain tank is empty.



Custom Alarm Level

H113848—UN—04JAN17

Custom Alarm Level— message appears on the screen when selected grain level has been met.



Custom Alarm Level Input Box

H119129—UN—10JAN17

Custom Alarm Level Input Box— select to edit custom alarm level.

PR79369,00003B3-19-12MAY21

Advanced Settings | Grain Level Auto Beacon

Grain Level Auto Beacon illuminates when grain tank is 3/4 full or is full.

Modify To:

- Enable or disable Grain Level Auto Beacon.
- Provide a signal that the grain tank is 3/4 or full.

Procedure to Modify:



Checkbox

H114785—UN—10JAN17

Select to enable or disable Grain Level Auto Beacon.

PR79369,00003B4-19-02FEB21

Advanced Settings | Tank Unloading Offset

Tank Unloading Offset allows you to adjust grain tank empty level if all grain is not emptied from grain tank or grain level does not show 0% after grain tank is empty. Different crops, weights, and moisture can affect grain tank level sensor readings.

Modify When:

- Grain remains in tank after grain tank level reads 0%.
- Grain tank is emptied before grain tank level reads 0%.

Procedure to Modify:

- Decrease offset value if grain remains in tank when grain tank level reads 0%.
- Increase offset value if grain tank is emptied before grain tank level reads 0%.



Decrease

H114780—UN—10JAN17

Select to decrease value.



Increase

H114781—UN—10JAN17

Select to increase value.

Minimum: -15 bu/sec

Maximum: 15 bu/sec

Increment: (+/-) 0.5 bu/sec

PR79369,00003B5-19-02FEB21

Advanced Settings | Custom Alarm Level

Custom Alarm Level allows you to enable a message to appear on the screen when selected grain level has been met.

Modify To:

- Enable or disable Custom Alarm Level.
- Set an additional earlier notification of the grain tank level other than 3/4 full or full.
- Set a lower alarm threshold.

 
Procedure to Modify:



ON/OFF

H114769—UN—22OCT15

1. Select to enable or disable Custom Alarm Level.



Input Box

H119129—UN—10JAN17

2. Select to open number pad and enter desired value.



OK

H114789—UN—10JAN17

3. Select OK to save value.

NOTE: When custom alarm level is met, a message appears on-screen. The message can be viewed in the Status Center on the display.

PR79369,00003B6-19-11MAY21

Grain Level

Grain Level allows you to set correct grain tank Full Level or grain tank Empty Level if grain level is not reading correctly.

Modify When:

- Grain is spilling over the sides when operating in hilly conditions. Set a lower grain tank level.
- The grain tank is full and you want to set the Grain Level as 100%. Select the "Set Full Level" button to calibrate the 100% reading.
- The grain tank is empty but the system is still unloading. Select the "Set Empty Level" button to calibrate the empty reading.

Procedure to Modify:



Set Full Level

H114776—UN—10JAN17

- Select to save grain tank full level.



Set Empty Level

H114777—UN—10JAN17

- Select to save grain tank zero level.

NOTE: Selecting Set Empty Level automatically adjusts Tank Unloading Offset.

NOTE: Grain level 3/4 full and full beacon adjusts based on grain level.

PR79369,00003B7-19-02FEB21

Moisture Settings

Moisture Settings allows you to enable or disable moisture alarm, set maximum and minimum moisture alarm settings, set moisture correction, and enable or disable Use Fixed Moisture.

 


ON/OFF

H113848—UN—04JAN17

Items Accessible on Moisture Settings page:


ON/OFF— enable or disable Moisture Alarm.



Maximum Moisture Value

H119131—UN—10JAN17

 
Maximum Moisture— upper limit to activate the moisture alarm.



Minimum Moisture Value

H119130—UN—10JAN17

 Minimum Moisture— lower limit to activate the moisture alarm.



Correction Value

H119132—UN—10JAN17

 
Correction— amount of correction needed to match a certified moisture measurement.



Unchecked

H114786—UN—10JAN17

Use Fixed Moisture— enable or disable fixed moisture.



Fixed Moisture Value

H119133—UN—10JAN17

Use Fixed Moisture— fixed moisture level.



Advanced Settings

N118004—UN—22OCT15

Advanced Settings— further Moisture Settings adjustments and less common settings.

PR79369,00003B8-19-02FEB21

Moisture Alarm

Moisture Alarm allows you to enable or disable the Moisture Alarm that sounds when moisture value drops below minimum or above maximum setting.

Modify To:

- Enable or disable the Moisture Alarm.
- Adjust the minimum moisture percentage.
- Adjust the maximum moisture percentage.

 


ON/OFF

H114769—UN—22OCT15

Procedure to Modify:

- Select to enable or disable Moisture Alarm.




Maximum

H119131—UN—10JAN17

- Select to set percentage for alarm to sound when moisture percentage is above value.

Minimum: 1%

 Maximum: 60%



Minimum

H119130—UN—10JAN17

- Select to set percentage for alarm to sound when moisture percentage is below value.

Minimum: 1%

Maximum: 50%

NOTE: Maximum moisture percentage must be set higher than minimum moisture percentage.

SS43267,00008BA-19-17JAN17

Moisture Correction

Moisture Correction allows you to toggle between Moisture Correction or Fixed Moisture, adjust the value

when moisture percentage measured by combine moisture sensor differs from the elevator certified moisture, and disable moisture sensor reading and force a preset moisture value.

Modify To:

- Toggle between moisture correction and fixed moisture.
- Change amount of correction needed to match a certified moisture reading.
- Change fixed moisture level used when the fixed moisture feature is enabled.

Moisture Correction Procedure:

 
Set moisture correction to difference between combine moisture sensor and elevator certified moisture sensor. {Example: elevator moisture (13%) minus combine measured moisture (12%) = moisture difference (+1%)}



Checked

H114785—UN—10JAN17

1. If Use Fixed Moisture is checked, deselect checkbox to enable Correction.



Value

H119132—UN—10JAN17

2. Select to open number pad and enter desired value.



OK

H114789—UN—10JAN17

3. Select OK to save value.

NOTE: Moisture correction can be a positive or negative number.

 


Unchecked

H114786—UN—10JAN17

Fixed Moisture Procedure:

1. If Use Fixed Moisture is not checked, select checkbox to enable.



Value

H119133—UN—10JAN17

2. Select to open number pad and enter desired value.



OK

H114789—UN—10JAN17

3. Select OK to save value.

PR79369,00003B9-19-02FEB21

Status Center

Status Center provides status and quick access for Grain Handling functions. See Display Overview for more information.

Items Accessible for Grain Handling in Status Center:



Unloading Auger

H116268—UN—10JAN17

Unloading Auger Swung Out— auger is out.



Unloading Auger Engaged

H125880—UN—14MAR19

Unloading Auger Engaged— auger is currently unloading.



Grain Level

H119800—UN—06JUN19

Grain Level— shown as 4/4.



Grain Level

H116267—UN—10JAN17

Grain Level— shown as 3/4.

NOTE: Selecting Set Empty Level automatically adjusts Tank Unloading Offset.

NOTE: Grain level 3/4 and full beacon adjusts based on grain level.

PR79369,00003BA-19-02FEB21

Folding Application

Access Folding

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Folding

H114607—UN—10JAN17

3. Folding

Access Application Through Navigation Bar:




Folding

H115016—UN—22MAR16

Press Folding button on navigation bar below display.

PR79369,00003C2-19-03FEB21

Folding Main Page

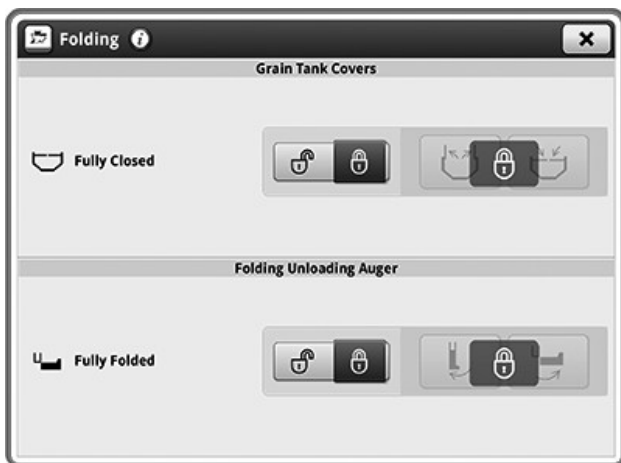

Folding

H129116—UN—16JUL20

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

Folding Application is used to operate folding equipment.

Items Accessible on Folding Main Page:

NOTE: Some items below are only displayed if machine is equipped with the associated option.

Grain Tank Covers Items:



Lock/Unlock

H114615—UN—06JAN17

Grain Tank Covers— lock or unlock the folding function buttons for the grain tank covers.



Content Blocker

H127217—UN—26SEP19

Content Blocker— shows locked status. Prevents accidental engagement of the function. Press and hold to disengage.

Fountain Auger Items:



Lock/Unlock

H114615—UN—06JAN17

Fountain Auger— lock or unlock the folding function buttons for the fountain auger.



Content Blocker

H127220—UN—26SEP19

Content Blocker— shows locked status. Prevents accidental engagement of the function. Press and hold to disengage.

Folding Unloading Auger Items:



Lock/Unlock

H114615—UN—06JAN17

Folding Unloading Auger— lock or unlock the folding function buttons for the folding unloading auger.



Content Blocker

H127221—UN—26SEP19

Content Blocker— shows locked status. Prevents accidental engagement of the function. Press and hold to disengage.

Extendable Platform Items:



Lock/Unlock

H114615—UN—06JAN17

Header Transport Position— lock or unlock the transport readiness function buttons for the extendable platform.



Content Blocker

H131800—UN—03DEC20

Content Blocker— shows locked status. Prevents accidental engagement of the function. Press and hold to disengage.


Folding Corn Head Items (John Deere Models):



Lock/Unlock

H114615—UN—06JAN17

Folding Corn Head— lock or unlock folding function buttons for the corn head.

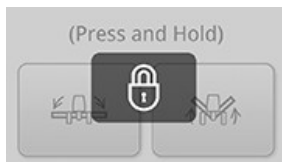

Content Blocker

H116240—UN—06JAN17

Content Blocker— shows locked status. Prevents accidental engagement of the function. Press and hold to disengage.

Folding Corn Head Items (non-John Deere Models):



Lock/Unlock

H114615—UN—06JAN17

Folding Corn Head— lock or unlock folding function buttons for the corn head.



Content Blocker

H127219—UN—26SEP19

Content Blocker— shows locked status. Prevents accidental engagement of the function. Press and hold to disengage.

Manual Control Overlay:



Manual Control

H116669—UN—30JAN17

Manual Control—any abnormal state causes the control frame to display the Manual Control icon link push button.

NOTE: This applies to any subsystem affected by the position sensor issue or any other issue.

PR79369,00003BB-19-05MAR21

Grain Tank Covers

Grain Tank Covers application allows you to open and close grain tank covers from within the cab.

CAUTION: Avoid power line entanglement. Grain tank covers must be closed before transporting machine.

IMPORTANT: Unload grain before closing grain tank covers.

NOTE: Grain tank covers must be fully opened in order to engage separator.

Modify To:

- Configure machine for field operation.
- Service machine components.
- Configure machine for road transportation or storage.
- Clean out machine.

Procedure to Modify:



Position Unknown Error

H114612—UN—06JAN17

NOTE: When a position unknown error is present on Grain Tank Covers, one-touch folding is unavailable. Select and hold buttons to fold or unfold grain tank covers.

NOTE: You can press the quick-stop switch on the multi-function lever at any time to stop all movement controlled by the Folding application. Resume folding by selecting desired button.



Lock/Unlock

H114619—UN—06JAN17

1. Select to unlock folding and unfolding buttons.
2. Select desired button to fold or unfold grain tank covers.



Open

H114623—UN—06JAN17

- Select to fully open grain tank covers.



Close

H114621—UN—06JAN17

- Select to close grain tank covers.



Progress Indicator

H114616—UN—06JAN17

Displays progress of grain tank covers when opening and closing.



Open/Close

H114622—UN—06JAN17

NOTE: You can interrupt grain tank cover movement at any time by selecting either of the action buttons. Resume folding by selecting desired button.



Fully Open

H114627—UN—06JAN17



Fully Closed

H114640—UN—06JAN17

- Folding status is displayed on screen when action is complete.



Lock

H114615—UN—06JAN17

NOTE: System automatically changes to locked status 30 seconds after last button selection.

NOTE: Locked state prevents you from accessing folding controls, however it does not stop equipment that is already in motion. Locked state does not block physical controls that can be assigned to actuate movement in Controls Setup application.

PR79369,00003BC-19-03FEB21

Fountain Auger

Fountain Auger application allows you to raise and lower the fountain auger from within the cab.

Modify To:

- Configure machine for field operation.
- Configure machine for road transportation.

Procedure to Modify:



Position Unknown Error

H114612—UN—06JAN17

NOTE: When a position unknown error is present on Fountain Auger, one-touch raising is unavailable. Select and hold buttons to raise or lower fountain auger.

NOTE: You can press the quick-stop switch on the multi-function lever at any time to stop all movement controlled by the Folding application. Resume folding by selecting desired button.



Lock/Unlock

H114619—UN—06JAN17

1. Select to unlock raise and lower buttons.
2. Verify that all prerequisites listed on-screen have been met.
3. Select desired button to raise or lower fountain auger.



Raise

H127641—UN—08OCT19

- Select to fully raise fountain auger.



Lower

H127642—UN—08OCT19

- Select to fully lower fountain auger.



Progress Indicator

H114616—UN—06JAN17

Displays progress of the fountain auger when raising and lowering.



Raised/Lowered

H127648—UN—08OCT19

NOTE: You can interrupt fountain auger movement at any time by selecting either of the action buttons. Resume raising or lowering by selecting desired button.



Fully Raised

H127653—UN—08OCT19
Fully Raised



Fully Lowered

H127654—UN—08OCT19
Fully Lowered

- Folding status is displayed on-screen when action is complete.



Lock/Unlock

H114615—UN—06JAN17

CAUTION: Locked state prevents you from accessing folding controls. However it does not stop equipment that is already in motion. Locked state does not block physical controls that can be assigned to actuate movement in Controls Setup application.

NOTE: System automatically changes to locked status 30 seconds after last button selection.

mm95366,1655473881963-19-28JUN22

Folding Unloading Auger

Folding Unloading Auger allows you to fold and unfold unloading auger as required.

Modify To:

- Configure machine for field operation.
- Service machine components.
- Configure machine for road transportation or storage.

Procedure to Modify:



Position Unknown Error

H114612—UN—06JAN17

NOTE: When a position unknown error is present on folding unloading auger, one-touch folding is unavailable. Select and hold buttons to fold or unfold auger tip.

NOTE: You can press the quick-stop switch on the multi-function lever at any time to stop all movement controlled by the Folding application. Resume folding by selecting desired button.



Lock/Unlock

H114619—UN—06JAN17



Locked

H114615—UN—06JAN17

1. Select to unlock folding and unfolding buttons.
2. Select desired button to fold or unfold auger tip.



Unfold

H114637—UN—06JAN17

- Select to unfold the auger tip.



Fold

H114628—UN—06JAN17

- Select to fold the auger tip.



Progress Indicator

H114616—UN—06JAN17

Displays progress of auger tip when folding and unfolding.



Unfold/Fold

H114629—UN—06JAN17

NOTE: You can interrupt auger tip folding movement at any time by selecting either of the action buttons. Resume folding by selecting desired button.



Fully Unfolded

H128147—UN—16DEC19
Fully Unfolded



Fully Folded

H128148—UN—16DEC19
Fully Folded

- Folding status is displayed on screen when action is complete.

CAUTION:

Locked state prevents you from accessing folding controls, however it does not stop equipment that is already in motion. Locked state does not block physical controls that can be assigned to actuate movement in Controls Setup application.

NOTE: System automatically changes to locked status 30 seconds after last button selection.

mm95366,1656423709187-19-29JUN22

Header Transport Position

Header Transport Position application allows you to prepare an extendable platform header for transport from within the cab.

Modify To:

- Configure header for trailer transportation.
- Configure header for road transportation.

Items Adjusted when Header Transport Position Is Engaged:

- Cutterbar is retracted.
- Reel is lowered.
- Reel is retracted to the extendable cutterbar.

Procedure to Modify:



Position Unknown Error

H114612—UN—06JAN17

NOTE: When a position unknown error is present on header transport position, one-touch automatic length adjustment is unavailable. Select and hold the button to engage header transport position.

A position unknown error is displayed if any system is unable to obtain a position reading, but the button can still be activated. The position unknown error will remain present after the system moves to transport.

NOTE: You can press the quick-stop switch on the multi-function lever at any time to stop all movement controlled by the Folding application. Resume stow by selecting header transport activation button.



Lock/Unlock

H114619—UN—06JAN17

1. Select to unlock the header transport position activation button.
2. Verify that all prerequisites listed on-screen have been met.



Header Transport Position Activation Button

H131796—UN—03DEC20

3. Select and hold the header transport position activation button to begin placing the header into transport position.



Progress Indicator

H114616—UN—06JAN17

Displays the progress of placing the header in transport position.



Not In Transport Position

H131797—UN—03DEC20
Not In Transport Position



In Transport Position

H131798—UN—03DEC20
In Transport Position

- Folding status is displayed on-screen when action is complete.



Lock/Unlock

H114615—UN—06JAN17

CAUTION: Locked state prevents you from accessing folding controls. However, it does not stop equipment that is already in motion. Locked state also does not block physical controls that can be assigned in the Controls Setup application from actuating movement if a control is pressed.

NOTE: System automatically changes to locked status 30 seconds after last button selection.

mm95366,1655381952485-19-29JUN22

Modify To:

- Configure machine for field operation.
- Service machine components.
- Detach corn head from machine.
- Gain clearance at headlands.
- Configure machine for road transportation.

CAUTION: Follow local government laws and regulations regarding transporting a header on roadways.

Procedure to Modify:

NOTE: You can press the quick-stop switch on the multi-function lever at any time to stop all movement controlled by the Folding application. Resume folding by selecting desired button.



Lock/Unlock

H114619—UN—06JAN17

1. Select to unlock folding and unfolding buttons.
2. Verify that all prerequisites listed on-screen have been met.
3. Select and hold desired button to fold or unfold corn head.

NOTE: You can interrupt folding movement at any time by releasing the action button. Resume folding by selecting and holding desired button.



Unfold

H128152—UN—16DEC19

- Select and hold to unfold corn head.



Fold

H128153—UN—16DEC19

- Select and hold to fold corn head.



Lock/Unlock

H114615—UN—06JAN17

Folding Corn Head (John Deere Models)

Folding Corn Head Control allows you to fold and unfold corn head.

CAUTION: Locked state prevents you from accessing folding controls. However it does not stop equipment that is already in motion. Locked state does not block physical controls that can be assigned to actuate movement in Controls Setup application.

NOTE: System automatically changes to locked status 30 seconds after last button selection.

mm95366,1655388906712-19-29JUN22

Folding Corn Head (non-John Deere models)

Folding Corn Head Control allows you to fold and unfold corn head.

Modify To:

- Configure machine for field operation.
- Service machine components.
- Detach corn head from machine.
- Gain clearance at headlands.
- Configure machine for road transportation.

CAUTION: Follow local government laws and regulations regarding transporting a header on roadways.

Procedure to Modify:

NOTE: You can press the quick-stop switch on the multi-function lever at any time to stop all movement controlled by the Folding application. Resume folding by selecting desired button.



Lock/Unlock

H114619—UN—06JAN17

1. Select to unlock folding and unfolding buttons.
2. Verify that all prerequisites listed on-screen have been met.
3. Select and hold desired button to fold or unfold corn head.



Unfold

H114617—UN—06JAN17

- Select and hold to unfold corn head.



Fold

H114618—UN—06JAN17

- Select and hold to fold corn head.

NOTE: You can interrupt folding movement at any time by releasing the action button. Resume folding by selecting and holding desired button.



Progress Indicator

H114616—UN—06JAN17

Displays progress of the corn head when folding and unfolding.



Partially Unfolded

H116122—UN—06JAN17



Fully Unfolded

H116121—UN—06JAN17



Partially Folded

H116123—UN—06JAN17



Fully Folded

H116124—UN—06JAN17

- A folding corn head equipped with position sensors displays current folding status.



Lock/Unlock

H114615—UN—06JAN17

CAUTION: Locked state prevents you from accessing folding controls. However it does not stop equipment that is already in motion. Locked state does not block physical controls that can be assigned to actuate movement in Controls Setup application.

NOTE: System automatically changes to locked status 30 seconds after last button selection.

mm95366,1655389832511-19-28JUN22

Manual Control

Manual Control displays subsystem features that are

 
malfunctioning or have been placed into manual control mode.

NOTE: This does not include all subsystems, only those experiencing or affected by position sensor issues.


Items Accessible on Manual Control Page:

Displayed below are examples of attention frames that may appear on subsystems experiencing an issue. Subsystems not experiencing an issue will still be displayed, but without the sensor error or calibration required attention frames.


Grain Tank Covers




Fountain Auger

 


Folding Unloading Auger

 


Folding Corn Head

 

Header Transport Position

 

Hinged Draper

 

mm95366,1655947635268-19-29JUN22

Harvest Settings Application

Access Harvest Settings

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Harvest Settings

H113528—UN—27JAN17

3. Harvest Settings

Access Application Through Navigation Bar:




Harvest Settings

H116102—UN—27JAN17

Press the Harvest Settings button on the navigation bar below the display.

NOLMWLO,000035C-19-16JUL20

Harvest Settings Main Page

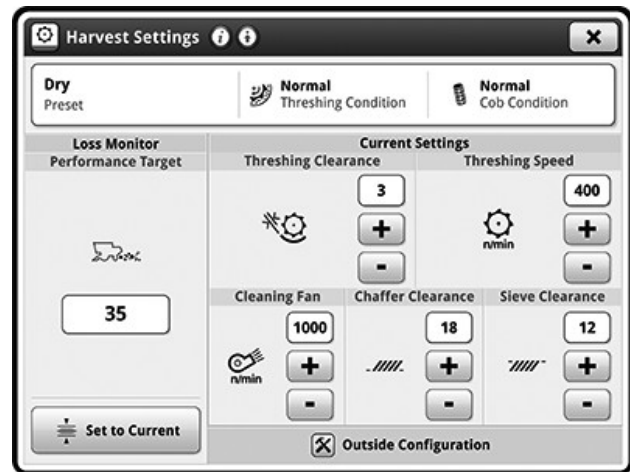

H120310—UN—27JAN17

Harvest Settings

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

Harvest Settings application allows you to adjust the threshing and cleaning performance for minimum harvest loss based on crop harvested and crop conditions.


Items Accessible on Harvest Settings Main Page:



H127985—UN—19NOV19

Load Harvest Settings

Load Harvest Settings— allows you to make default selections on Presets, Threshing Conditions, and Straw/Cob Conditions to help grain cleanliness and grain loss.

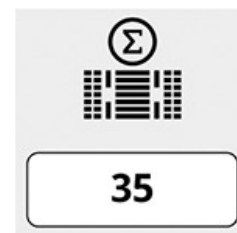

H119104—UN—30JAN17

Performance Target

Performance Target— allows you to select the acceptable grain loss for your machine.



H119125—UN—27JAN17

Set To Current

Set to Current— select to set the height total loss column of the VisionTrak™ display to the current loss level. When pressed, the height total loss column is adjusted to the center of the column.

On older machines, selecting Set to Current also changes the “acceptable loss” level in HarvestSmart™.



Threshing Clearance

H113683—UN—27JAN17

Threshing Clearance— allows you to modify the threshing clearance.



Threshing Speed

H113685—UN—27JAN17

Threshing Speed— allows you to modify the threshing speed.



Cleaning Fan

H113684—UN—27JAN17

Cleaning Fan— allows you to modify the fan speed.



Outside Configuration

H116095—UN—27JAN17

Outside Configuration— shows the external machine adjustments that must be made prior to harvesting a selected crop type.



Advanced Settings

N118004—UN—22OCT15

Advanced Settings— allows you to access further adjustments and less common settings.

HarvestSmart is a trademark of Deere & Company



Chaffer Clearance

H113706—UN—27JAN17

Chaffer Clearance— allows you to modify the opening of the chaffer elements.



Sieve Clearance


H113693—UN—27JAN17

Sieve Clearance— allows you to modify the opening of the sieve elements.

Run Page Modules:

Modules for this application can be added to the run pages using Layout Manager.

Example:

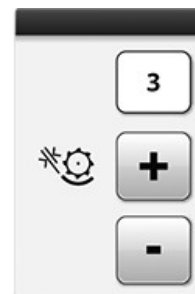

Clearance

H116117—UN—30JAN17

Clearance— allows you to adjust the threshing clearance.

NOTE: Different modules can be available for your application.

PR79369,00003C3-19-08FEB21

Load Harvest Settings

Load Harvest Settings allows you to make default selections on Presets, Threshing Conditions, and Straw/ Cob Conditions to help grain cleanliness and grain loss.

NOTE: Changing Crop Type in Work Setup causes change in harvest settings. See Effects of Crop Change for further information.

Items Accessible on Load Harvest Settings Page:

Presets— allows you to select defaults, previous preset

values, and adjust previous preset values to adjust to crop conditions.

Threshing Conditions— allows you to describe the threshing conditions so the system can help determine correct machine settings.

Straw Conditions— allows you to describe the straw/cob conditions so the system can help determine correct machine settings.

Settings Preview— displays the current settings and displays your setting changes in bold in the "New" column.

NOTE: If any automated adjustment is made by the system, the values update to provide you the most current value.



Threshing Clearance

H113683—UN—27JAN17

Threshing Clearance



Threshing Speed

H113685—UN—27JAN17

Threshing Speed



Cleaning Fan

H113684—UN—27JAN17

Cleaning Fan



Chaffer Clearance

H113706—UN—27JAN17

Chaffer Clearance



Sieve Clearance

H113693—UN—27JAN17

Sieve Clearance



Save Preset

H116984—UN—27JAN17

Save Preset— allows you to save changes made to Presets, Threshing Conditions, and Straw/Cob Conditions.

NOTE: Auto Maintain performance can be reduced if settings differ from the selected preset. Create a new preset with the current settings for best performance.

N0LMWLO,000035E-19-16JUL20

Load Harvest Settings | Preset

Preset allows you to select from a list of saved machine configurations for a given crop.

Modify When:

- You want to create a preset to capture the harvest settings that provide the desired performance and grain quality for the crop and conditions that you are harvesting.
- You want to create a new custom preset when working with Auto Maintain and your settings are very different from the actual preset.

Procedure to Modify:



 
H127985—UN—19NOV19

Load Harvest Settings

- Select to open.

NOTE: Other than corn, all other crop types are listed with default first, then clean out option, and finally, all of your created presets in alphabetical order.

Preset



Preset

H118081—UN—27JAN17

- Select to open Select Preset.



Select Preset

H119178—UN—27JAN17

- Select desired preset.



OK

H116106—UN—27JAN17

4. Select to save preset and return to Load Harvest Settings.

Current		New
 mm	3	3
 n/min	400	430
 n/min	1000	1250
 mm	18	18
 mm	12	12

H116110—UN—27JAN17

Current / New

NOTE: As you select a different preset, the "New" column of Settings Preview updates to display the settings change in bold.

When presets for defaults are changed, the "New" column value in the Settings Preview changes. Defaults remain unchanged when changing presets within the crop type.


NOTE: If the New Threshing Speed is outside the current rotor drive gear range, an overlay may show to prompt you to change the gear.

NOTE: When modifications are made to the selected preset, the word (Modified) is added to the name.

Procedure to Delete:



1. Select to open Preset.

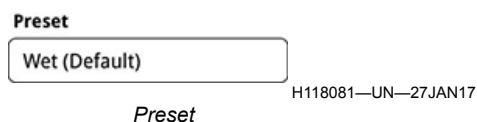

2. Select to open Select Preset.



3. Select the desired preset.



4. Select to delete Preset.

NOTE: Presets that you created can be deleted. If pressed, a message dialogue is shown to confirm the delete action on the preset.



5. Select to cancel if you do not wish to delete the selected preset.



NOTE: Manually record data by hand before deleting. If you delete a preset, it is removed from the display and cannot be undone.

6. Select to delete the preset.

PR79369,00003C5-19-08FEB21

Load Harvest Settings | Threshing Conditions

Threshing Conditions allows you to select from three options to choose the best description of your current threshing conditions.

Modify When:

- There is unthreshed grain or kernels with hull present in the sample. Set to Difficult.
- A satisfactory sample is created using the threshing settings within the recommended range for that crop. Set to Normal.
- Grain separates from the hull or cob before entering the threshing section. Set to Easy.

NOTE: For small grain crops, rubbing a grain head in between your fingers gives a good indication of how easy the grain will thresh. Rub the head in between your fingers until all the kernels are out of the their husks:

Easy— around 4 rubs of the grain head.


Normal— around 8 rubs of the grain head.

Difficult— around 15 rubs of the grain head.

Procedure to Modify:



1. Select to open.

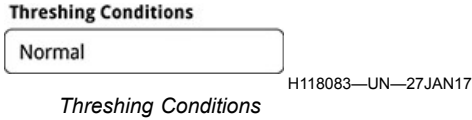

2. Select the Threshing Conditions list box to open list of the threshing conditions.

3. Select the desired threshing condition.

- **Difficult**— increased threshing aggressiveness to reduce unthreshed grain.
- **Normal**— regular settings for ordinary harvest conditions.
- **Easy**— decreased threshing aggressiveness to reduce power consumption and grain damage.




4. Select to cancel if you do not wish to change.



5. Select to save the Threshing Condition.

NOTE: Once selected, the system begins adjusting the settings to match the selected preset you have chosen.

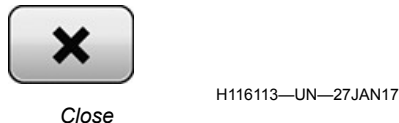

6. Select to close.

PR79369,00003C6-19-08FEB21

NOTE: Pick a handful of standing straw and twist it. Twisting a handful of straw will give a good indication of straw conditions.

- **Difficult**— straw will not break even when twisted more than 10 times.
- **Normal**— straw starts to break after twisting it a few times.
- **Brittle**— straw breaks easily when starting to twist it.

Procedure to Modify:



1. Select to open.



2. Select Straw Conditions list box.

3. Select the desired Straw Condition.

- **Difficult**— improves material flow in tough or wet straw.
- **Normal**— regular settings for ordinary harvest conditions.
- **Brittle**— decreases straw breakage to reduce cleaning shoe load.



4. Select to cancel if you do not wish to change the Preset Modifiers.



5. Select to save Straw Condition.

NOTE: Once selected, the system begins adjusting the settings to match the selected preset you have chosen.



Load Harvest Settings | Straw Conditions

Straw Conditions allows you to select from three options to choose the best description of your current straw condition.

Modify When:

- Harvesting tough, wet straw, green stems, or lots of material other than grain is being processed. Set to Difficult.
- Ordinary material handling for the crop is present. Set to Normal.
- Harvesting very dry straw or stems that break easily, creating an undesirable sample. Set to Brittle.

6. Select to close.

PR79369,00003C7-19-08FEB21

Load Harvest Settings | Save Preset

Save Preset allows you to create a new preset or to update the last preset you used.

Items Accessible on Save Preset:

Default Preset— allows you to change default presets and save them as your own custom preset.

Custom Preset— allows you to either update an existing custom preset or create a preset.

SS43267,0000967-19-26JAN17

Load Harvest Settings | Save Preset | Factory Default

Default Presets are factory loaded settings for each combination of Threshing Condition and Straw/Cob Quality for a given crop. You can modify these defaults and save them as a new name based on your harvesting conditions.

Modify When:

You want to create your own preset to capture the harvest settings that provide the desired performance and grain quality for the crop and conditions that you are harvesting.

Procedure to Modify:



H127985—UN—19NOV19

Load Harvest Settings

1. Select to access the Load Harvest Settings page.



H116984—UN—27JAN17

Save Preset

2. Select to save the preset as a new name.

3. Use the keyboard to enter the name of this customized setting.



H116105—UN—27JAN17

Cancel

4. Select to cancel if you do not want to save the preset.



H116107—UN—27JAN17

OK

5. Select to save the preset.

PR79369,00003C8-19-08FEB21


Load Harvest Settings | Save Preset | Custom Preset

Custom Presets are defined by you based on your harvesting conditions. These can be modified as crop conditions or machine performance changes.

Modify When:

- Harvesting different varieties of a particular crop.
- Harvesting at different times of the day (morning and evening versus afternoon).
- Harvesting in different grain moisture (wet crop versus dry crop).
- Operating with Auto Maintain.

 Procedure to Modify:



H127985—UN—19NOV19

Load Harvest Settings

1. Select to access the Load Harvest Settings page.



H116984—UN—27JAN17

Save Preset

2. Select to save the preset and activate the keyboard.

3. Select an option to save the current Harvest Setting.

Create a New Preset



Selection

H116289—UN—27JAN17

Enter a new Preset name

Update Last Used Preset



Selection

H116289—UN—27JAN17

"Corn"



Cancel

H116105—UN—27JAN17

4. Select to cancel if you do not wish to save the preset.



OK

H116107—UN—27JAN17

5. Select to save the preset.

PR79369,00003C9-19-08FEB21

Load Harvest Settings | Effects of Crop Change

Changing the crop type in Work Setup also makes changes to the Load Harvest Settings.



Cancel

H116105—UN—27JAN17

Selecting Cancel on the Load Harvest Settings page while changing crop type in Work Setup results in the combine not being adjusted.

NOTE: The "Preset" indication shown on the Harvest Settings main page shows "-" until a new preset is loaded.

 


OK

H116106—UN—27JAN17

Selecting OK changes the Load Harvest Settings based on the crop selected.

- If the crop type has never been used, the factory default settings are set.
- If the last used settings were a preset, the preset is selected, the last used threshing and straw conditions are selected, and individual settings are set to last use (matching the preset and conditions set).



Preset

H119175—UN—27JAN17

- If the last used settings were custom, the Preset shows {PresetName}* and the individual settings are set to the last used.

NOTE: If the new value for Threshing Speed is outside of the current rotor drive gear range, an overlay may show to prompt you to change the gear.

NOTE: Several harvesting functions are affected by the selected crop type preset. It is important to change the preset to match the crop being harvested.

NOLMWLO,0000363-19-16JUL20

Current Settings | Threshing Clearance

Threshing Clearance allows you to modify the threshing clearance for varying crops and conditions.

NOTE: For the threshing clearance settings, refer to Crop Settings section in your Operator's Manual.

Modify To:

Increase Threshing Clearance To:

- Improve straw quality; making longer straw and generates less breakage of material.
- Improve grain quality; reduce splits and grain damage.
- Reduce power consumption; for easy threshing grain.
- Improve sample cleanliness; reduce chaff load on the cleaning shoe.

Decrease Threshing Clearance To:

- Reduce unthreshed separator loss, such as unhulled grain or grain on the cob behind the machine.
- Improve grain tank sample; reduce kernels with husks or unopened pods.

Adjustment States— depending on machine options, different adjustment states may appear as current settings are changed.

Procedure to Modify:



Threshing Clearance

H113683—UN—27JAN17

1. Select to set the threshing clearance.



Adjustment

H113698—UN—30JAN17

2. Select plus (+) to increase or minus (-) to decrease threshing clearance, or select the input field and use the Armrest Adjustment Dial to make desired clearance changes.



H116282—UN—27JAN17
Input Field



H115034—UN—28MAR16
Armrest Adjustment Dial

- Turn the dial clockwise to increase the value.
- Turn the dial counterclockwise to decrease the value.

NOTE: Depending on machine configurations, some values may not be reached.

NOTE: Maximum value may not be attainable if dense pack elements are installed.

Minimum: 0

Maximum: 40

Increment: 1



Close

H116113—UN—27JAN17

3. Select to close.

PR79369,00003CA-19-08FEB21

NOTE: For the threshing speed settings, refer to Crop Settings section in your Operator's Manual. If the crop is being under-threshed, first attempt to solve the problem by decreasing the threshing clearance before adjusting the threshing speed. If the crop or straw is being damaged, try reducing the threshing speed first to solve the problem before adjusting the threshing clearance.

Modify To:

Increase Threshing Speed To:

- Allow grain to be removed from the other crop material before it escapes the separator.
- Improve material flow.
- Achieve more capacity in tough material conditions.
- Improve handling in tough straw.
- Reduce the risk of plugging when taking in large amounts of material.

Decrease Threshing Speed To:

- Reduce power consumption; reduce threshing speed in easy threshing grain for improved efficiency.
- Improve grain sample quality; generate less chaff and foreign material in the cleaning shoe by reducing threshing speed.
- Reduce grain damage; broken kernels and splits can occur if the threshing speed is too fast, even if the concave clearance is set correctly.

Adjustment States— depending on machine options, different adjustment states may appear as current settings are changed.

NOTE: The threshing speed may increase about 30 rpm over 4 hours as the oil temperature increases. Adjust the speed as necessary.

Procedure to Modify:

1. Engage the separator and run the engine at high idle.



Threshing Speed

H113685—UN—27JAN17

2. Select to modify the threshing speed.

Current Settings | Threshing Speed

Threshing Speed allows you to modify the threshing speed for varying crop conditions.



Adjustment

H116279—UN—30JAN17

3. Select plus (+) to increase or minus (-) to decrease speed, or select the input field and use the Armrest Adjustment Dial to make desired speed changes.



H118087—UN—27JAN17
Input Field



H115034—UN—28MAR16
Armrest Adjustment Dial

- Turn the dial clockwise to increase the value.
- Turn the dial counterclockwise to decrease the value.

NOTE: Threshing has a two-speed gearbox, with high and low speeds. Minimum and Maximum values may require you to change the gear case setting. See Operator's Manual for further information on which speed should be selected.

NOTE: Depending on machine configurations, some values may not be reached.

Minimum: 200 rpm

Maximum: 1000 rpm

Increment: 10 rpm



Close

H116113—UN—27JAN17

4. Select to close.

PR79369,00003CB-19-08FEB21

Current Settings | Cleaning Fan

Cleaning Fan Speed allows you to modify the fan speed to improve grain cleanliness and reduce grain loss.

NOTE: For the fan speed settings, refer to Crop Settings section in your Operator's Manual.

Modify To:

Increase Fan Speed To:

- Improve sample quality; reduce the amount chaff or light material other than grain in the grain tank by blowing it out.
- Reduce cleaning shoe loss due to insufficient aeration; lighter grains can become trapped in chaff.

Decrease Fan Speed To:

- Reduce cleaning shoe loss; smaller lighter grains can be carried out of the cleaning shoe if the cleaning fan speed is too high.

Adjustment States— depending on machine options, different adjustment states may appear as current settings are changed.

Procedure to Modify:

1. Engage the separator and run the engine at high idle.



Cleaning Fan Speed

H113684—UN—27JAN17

2. Select to set the cleaning fan speed.



Adjustment

H116982—UN—30JAN17

3. Select plus (+) to increase or minus (-) to decrease speed, or select the input field and use the Armrest Adjustment Dial to make desired speed changes.



H118088—UN—27JAN17
Input Field



H115034—UN—28MAR16
Armrest Adjustment Dial

- Turn the dial clockwise to increase the value.
- Turn the dial counterclockwise to decrease the value.

NOTE: Minimum and Maximum values may change if machine is equipped with a cleaning fan slow down Kit.

Minimum: 620 rpm

Maximum: 1350 rpm

Increment: 10 rpm



Close

H116113—UN—27JAN17

4. Select to close.

PR79369,00003CC-19-08FEB21

Current Settings | Chaffer Clearance

Chaffer Clearance allows you to modify the opening of the chaffer elements to improve the grain cleanliness and reduce the cleaning shoe loss for varying crops and conditions.

NOTE: For the chaffer clearance settings, refer to Crop Settings section in your Operator's Manual.

Modify To:

Increase Chaffer Clearance To:

- Reduce cleaning shoe loss; allows the grain to fall through sooner before it can escape the cleaning shoe.
- Allow the grain to fall through sooner before it is forced into the tailings.

NOTE: Opening of the chaffer will also decrease pressure in the cleaning shoe. Large adjustments could require readjustment of the fan speed.

Decrease Chaffer Clearance To:

- Improve sample quality; reduce the amount of larger, foreign material in the grain tank.
- Reduce high tailings volume when it does not contain free grain.

Adjustment States— depending on machine options, different adjustment states may appear as current settings are changed.

Procedure to Modify:



Chaffer Clearance

H113706—UN—27JAN17

1. Select to set the chaffer clearance.



Adjustment

H116993—UN—30JAN17

2. Select plus (+) to increase or minus (-) to decrease the desired chaffer clearance.



Input Field

H118089—UN—27JAN17



Armrest Adjustment Dial

H115034—UN—28MAR16

- Turn the dial clockwise to increase the value.
- Turn the dial counterclockwise to decrease the value.

NOTE: Depending on machine configurations, some values may not be reached.

General Purpose:

Minimum: 0

Maximum: 22

Increment: 1

Deep Tooth:

Minimum: 0

Maximum: 30

Increment: 1



Close

H116113—UN—27JAN17

3. Select to close.

PR79369,00003CD-19-08FEB21

Current Settings | Sieve Clearance

Sieve Clearance allows you to modify the opening of the

sieve to improve grain cleanliness and manage tailings volumes for varying crops and conditions.

NOTE: For the sieve clearance settings, refer to Crop Settings section in your Operator's Manual.

Modify To:

Increase Sieve Clearance To:

- Reduce amount of free grain in the tailings; allows more grain to fall through to clean grain sooner before it is recirculated in tailings.
- Increase cleaning fan air flow; increasing sieve clearance allows more cleaning fan air up through the chaffer.

NOTE: Opening of the sieve will also decrease pressure in cleaning shoe. Large adjustments could require readjustment of the fan speed.

Decrease Sieve Clearance To:

- Improve sample quality; reduce the amount of foreign material in the grain tank.

NOTE: To find the optimal setting for low tailings, high capacity, and grain tank cleanliness, increase sieve clearance until you see a dirty grain tank. Then, decrease sieve clearance until dirt disappears.

Adjustment States— depending on machine options, different adjustment states may appear as current settings are changed.

Procedure to Modify:



Sieve Clearance

H113693—UN—27JAN17

1. Select to set the sieve clearance.



Adjustment

H116994—UN—30JAN17

2. Select plus (+) to increase or minus (-) to decrease the desired sieve clearance.



Input Field

H118090—UN—27JAN17

- Turn the dial clockwise to increase the value.



Armrest Adjustment Dial

H115034—UN—28MAR16

- Turn the dial counterclockwise to decrease the value.

NOTE: Depending on machine configurations, some values may not be reached.

General Purpose:

Minimum: 0

Maximum: 22

Increment: 1

Deep Tooth:

Minimum: 0

Maximum: 30

Increment: 1



Close

H116113—UN—27JAN17

3. Select to close.

PR79369,00003CE-19-08FEB21

Current Settings | Outside Configuration

Outside Configuration shows external machine adjustments that must be made prior to harvesting the selected crop type.

NOTE: For more information, refer to the machine Operator's Manual.

Procedure to Modify:

CAUTION: Shut off engine, set the park brake, and remove the key before making changes.



Outside Configuration

H116095—UN—27JAN17

1. Select to access outside configuration.
2. Select desired outside configuration for further information on machine settings.
 - Chopper Speed
 - Crop Diverter
 - Concave Type
 - Separator Grate Spacers
 - Rethresher Active Tailings (if equipped)
 - Feed Accelerator Speed
 - Feeder House Drum Position (if adjustable)
 - Feeder House Conveyor Chain Sprocket



Close

H116113—UN—27JAN17

3. Select to close.

mm95366,1655475443093-19-28JUN22

Current Settings | Adjustment States

Adjustment States show how the system adjustment settings react when machine changes are made.

NOTE: Some items below are only displayed if machine is equipped with the associated option.

Operator-Initiated Changes:

NOTE: Operator-initiated changes are made using the display or the Armrest Adjustment Dial.



Progress Indicator

H116277—UN—27JAN17

Operator-Initiated Changes Progress Indicator.



Input Field

H118102—UN—27JAN17

Operator-Initiated Setpoint Value Input Field.



n/min

200

Performance Value

H118101—UN—27JAN17

The value displayed below the setting icon represents the actual performance value.

NOTE: The actual value representing the system, which is below the icon, flashes until the actual value matches the new setpoint. Once the value reaches the new setpoint, it continues to display for 1 second before the value and progress indicator are removed from the screen.

Combine Advisor™ and Initiated Active Terrain Adjustment™ Changes:

NOTE: At any time, you can make manual adjustments while an Auto Maintain or Active Terrain Adjustment™ is being applied.

NOTE: The majority of adjustments made by Combine Advisor™ systems are offsets, meaning a setting is adjusted temporarily and reverted back to its original value when the system removes the offset.



Progress Indicator

H116278—UN—27JAN17

Auto Maintain and Active Terrain Adjustment™ Initiated Changes Progress Indicator.



Input Field

H118094—UN—27JAN17

Auto Maintain and Active Terrain Adjustment™ Initiated Setpoint Value Input Field.



Progress Indicator

H116277—UN—27JAN17

Operator-Initiated changes Progress Indicator.



Input Field

H118107—UN—27JAN17

Operator-Initiated Setpoint Value Input Field.



Performance Value

H118101—UN—27JAN17

The value displayed below the setting icon represents the actual performance value.

NOTE: The actual value representing the system, which is below the icon, flashes until the actual value matches the new setpoint. Once the value reaches the new setpoint, it continues to display for 1 second before the value and progress indicator are removed from the screen.

NOTE: The input field remains blue with "AUTO" printed on it to indicate that the system is maintaining the offset. When the system removes the offset, performance value returns to its value prior to the system making the offset.

PR79369,00003D0-19-08FEB21

Advanced Settings

Advanced Settings allows you to access further adjustments and less common settings.

Items Accessible on Advanced Settings Page:



Separator Resolution

H116272—UN—27JAN17

Separator Resolution— allows you to modify the number of bars shown on the Corner Post Display VisionTrak™ for the separator loss indicator (independent of the number of center bars).



Shoe Resolution

H116272—UN—27JAN17

Shoe Resolution— allows you to modify the number of

bars shown on the Corner Post Display VisionTrak™ for the shoe loss indicator (independent of the number of center bars).



Loss Sensor Tap Test

H116669—UN—30JAN17

Loss Sensor Tap Test— allows you to verify that various grain loss monitor sensors are functioning normally and detecting loss strikes. Select to open the grain loss monitor sensor tap test.

NOTE: The grain loss monitor sensor tap test can also be accessed from the Calibrations and Procedures application.

PR79369,00003D1-19-08FEB21

Advanced Settings | Separator Resolution

Separator Resolution allows you to modify the number of bars on the Corner Post Display VisionTrak™ for the separator loss indicator.

Prior to Modification:



Set to Current

H119125—UN—27JAN17

1. Harvest with the machine and press the Set to Current button.
2. Perform a Power Shutdown (see Operator's Manual for procedure).
3. Inspect for any grain loss from the separator.

NOTE: If loss is present, determine if the loss is acceptable to the amount of bars indicated by the VisionTrak™ display.

Modify When:

- The VisionTrak™ display does not indicate the amount of grain loss from the separator that is preferred.
- Increase Separator Resolution to show more emphasis on grain loss from the threshing and separating section.
- Decrease Separator Resolution to show less emphasis on grain loss from the threshing and separating section.

Procedure to Modify:

VisionTrak is a trademark of Deere & Company



Advanced Settings

N118004—UN—22OCT15

1. Select the Advanced Settings button.



Slide Bar

H118553—UN—27JAN17

NOTE: Slide bar displays the current resolution.



Separator Resolution

H116272—UN—27JAN17

2. Select plus (+) to increase or minus (-) to decrease the separator resolution.

Minimum: -5

Maximum: 5

Default: 0

Increment: 1



Close

H116113—UN—27JAN17

3. Select to close.

PR79369,00003D2-19-08FEB21

Advanced Settings | Shoe Resolution

Shoe Resolution allows you to modify the number of bars on the Corner Post Display VisionTrak™ for the shoe loss indicator.

Prior to Modification:



Set to Current

H119125—UN—27JAN17

1. Harvest with the machine and press the Set to Current button.
2. Perform a Power Shutdown (see Operator's Manual for procedure).
3. Inspect for any grain loss from the cleaning shoe.

NOTE: If loss is present, determine if the loss is acceptable to the amount of bars indicated by the VisionTrak™ display.

Modify When:

- The VisionTrak™ display does not indicate the amount of grain loss from the cleaning shoe that is preferred.
- Increase Shoe Resolution to show more emphasis on grain loss from the cleaning shoe section.
- Decrease Shoe Resolution to show less emphasis on grain loss from the cleaning shoe section.

Procedure to Modify:



Advanced Settings

N118004—UN—22OCT15

1. Select the Advanced Settings button.



Slide Bar

H118553—UN—27JAN17

NOTE: Slide bar displays the current resolution.



Shoe Resolution

H116272—UN—27JAN17

2. Select plus (+) to increase or minus (-) to decrease the shoe resolution.

Minimum: -5

Maximum: 5

Default: 0

Increment: 1



Close

H116113—UN—27JAN17

3. Select to close.

PR79369,00003D3-19-08FEB21

Performance Target

Performance Target allows you to adjust the number of bars on the Corner Post Display VisionTrak™ for the shoe loss indicator, separator loss indicator, and total loss indicator to a level representative of the grain loss exiting the machine.

Modify When:

- Changing crop type.
- Harvesting conditions vary (wet crop versus dry crop, high moisture versus low moisture, variety A versus variety B, or large swings in seed size or yield).

NOTE: It is not necessary to set a new target if you are using a recent performance target for this crop type and harvesting conditions.

Procedure to Modify:

NOTE: Larger seed sizes, such as corn or soybeans, generally have a lower numerical calibration value than smaller seed sizes like wheat or canola.

NOTE: Selecting a lower calibration value registers more bars on the display for the same acceptable grain loss.

Automatic:

NOTE: Operate the machine at the desired performance and select Set to Current; this stores operating characteristics to memory and centers the total loss indicator.

NOTE: Clicking Set Performance Target in Combine Advisor™ also performs an Automatic Target for Grain Loss.

 


Set To Current

H119125—UN—27JAN17

Select Set to Current to adjust the height total loss column of the VisionTrak™ display to the center of the column.

Manual:



Input Box

H119105—UN—27JAN17


Select to open number pad and manually enter desired value.

Minimum: 1

Maximum: 99

Increment: 1

NOTE: The Automatic setting is recommended. The Manual setting should only be used if the Automatic setting does not give the desired results.

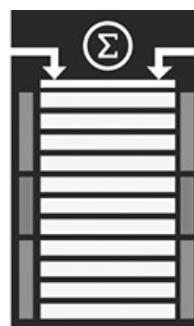

Total Loss Indicator

H117836—UN—22DEC16

NOTE: Total Loss Indicator bar graph is now a visual guide. You can refer to the corner post display periodically to know when an increase or decrease in the total loss amount occurs.

If the total loss indicator bar graph is above or below the green area and losses are acceptable, the grain loss monitor is either incorrectly adjusted or there is a higher flow of material through the machine since the grain loss monitor was last calibrated. Higher flow of material can be caused by increased ground speed or higher crop yields.

When the machine encounters a “slug”, the middle bar graph will fluctuate upward (15 to 20 seconds) and then return to the previous reading. Ignore these fluctuations when this occurs.

PR79369,00003D4-19-08FEB21

Engine Application

Access Engine

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Engine

H113552—UN—09MAR16

3. Engine

Access Application Through Navigation Bar:




Engine Application Button

H113709—UN—04JAN17

Press Engine button on navigation bar below display.

PR79369,00003D6-19-09FEB21

Engine Main Page

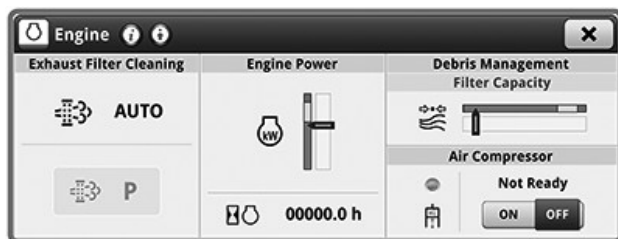

Engine

H113251—UN—02MAR21


NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

The Engine application is used to access and adjust engine settings.

Items Accessible on the Engine Main Page:

NOTE: Some items below are only displayed if machine is equipped with the associated option.

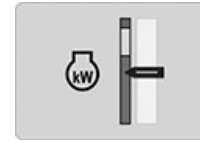

Engine Power

H113549—UN—04JAN17

Engine Power— amount of power the engine is using.



Engine Hours

H115017—UN—04JAN17

Engine Hours— accumulated engine hours.



Auto Exhaust Filter Cleaning

H113829—UN—04JAN17

AUTO Exhaust Filter Cleaning— automated process that performs exhaust filter cleaning during normal operation as required.



Parked Filter Cleaning

H113830—UN—04JAN17

Parked Filter Cleaning— process which allows the system to perform additional exhaust filter cleaning when required.



Debris Management

H126195—UN—24APR19

Debris Management Filter Capacity— indicator of used and remaining filter capacity.



Air Compressor

H118112—UN—04JAN17

Air Compressor— toggle button to enable or disable air compressor system.

Run Page Modules

Modules for this application can be added to run pages using Layout Manager.

Example:



Engine Power

H115023—UN—04JAN17

Engine Power— shows engine hours and power output of the engine.

NOTE: Different modules can be available for your application.

Shortcut Keys

Shortcut keys for this application can be added to the shortcut bar using Layout Manager.



Air Compressor

H118309—UN—04JAN17

Air Compressor Shortcut Key— allows you quick access to turn air compressor ON/OFF.


PR79369,00003D5-19-10FEB21

Engine Power

Engine Power allows you to view amount of engine power being used and accumulated engine hours. A power meter is available on both the display and the corner post display for visual indication of current power consumption.

IMPORTANT: If alerts or excessive exhaust smoke are visible, see your John Deere dealer or other qualified service provider for further diagnosis.


Items Displayed on the Engine Power Page:

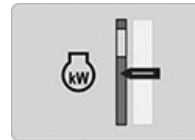

Engine Power

H113549—UN—04JAN17

Engine Power— amount of power the engine is using.

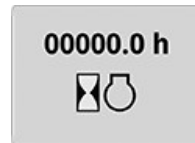

Engine Hours

H115017—UN—04JAN17

Engine Hours— accumulated engine hours.

Isochronous Engine Governor

Keeps the engine and driven component speeds constant to enhance capacity and efficiency until rated engine power is exceeded.

Power Meter



Green Zone

H113549—UN—04JAN17

- **Green Zone**— operate engine at upper portion of the green zone to maximize machine productivity and maintain constant engine speed.



Yellow Zone

H113551—UN—04JAN17

- **Yellow Zone**— preferred upper limit in tough conditions. Less power bulge available in this zone. Target lower range of the yellow zone before unloading auger is engaged.



Red Zone

H113550—UN—04JAN17

- **Red Zone**— peak power level and is not recommended for extended periods because no power reserve is available.

IMPORTANT: If indicator moves into the red zone, engine power is maximized and the machine could potentially stall. Reduce load on the machine until indicator moves back into green or yellow zones.

Operating in the following conditions increases power consumption:

- Hilly terrain
- Heavy or wet crop
- Wet ground conditions
- Excessive ground speed

NOLMWLO,0000371-19-16JUL20

Exhaust Filter System Overview

Your machine is equipped with an emission-compliant engine, which cleans and filters the exhaust. Under normal machine operation and with the system in AUTO mode, the system requires minimal operator interaction.



H113829—UN—04JAN17
Auto Exhaust Filter Cleaning

To avoid the unnecessary buildup of diesel particulates or soot in the exhaust filter system:

- Utilize AUTO Exhaust Filter Cleaning mode.
- Avoid unnecessary idling.
- Use proper engine oil.
- Use only ultra low sulfur fuel.

NOTE: For more information, refer to *Fuels and Lubricants* section in the *machine Operator's Manual*.

CAUTION: When AUTO or PARKED cleaning is enabled, the exhaust temperature can be high under no load or light load conditions at certain times during the exhaust filter cleaning cycle.

Servicing machine or attachments during the exhaust filter cleaning can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

During auto or manual/stationary exhaust filter cleaning operations, the engine runs at elevated temperatures for up to 45 minutes. To avoid injury or fire, verify exhaust filter, components, and outlet are free of debris. During entire cleaning process, keep exhaust outlet away from people, buildings, and anything that can melt, burn, or explode.

AUTO Mode— automated process that performs exhaust filter cleaning during normal operation.

Disable AUTO Exhaust Filter— in conditions where it can be unsafe for elevated exhaust temperatures.



Parked Filter Cleaning

 
H113830—UN—04JAN17

Parked Filter Cleaning— process which allows the system to perform additional exhaust filter cleaning when required.

Engine Cool Down— period of cool down after exhaust filter cleaning.


PR79369,00003D7-19-09FEB21

AUTO Exhaust Filter Cleaning



H113829—UN—04JAN17
Auto Exhaust Filter Cleaning

 AUTO Mode allows the Exhaust Filter System to perform exhaust filter cleaning as required. Corner post display indicator and armrest display provide you with information related to exhaust filter system activity.



H113811—UN—04JAN17
High Exhaust System Temperature (HEST) Indicator

High Exhaust System Temperature (HEST) Indicator illuminates on the corner post display when the exhaust system temperatures are elevated.

CAUTION: When AUTO or PARKED cleaning is enabled, the exhaust temperature can be high under no load or light load conditions at certain times during the exhaust filter cleaning cycle. Disable exhaust filter cleaning system in conditions where it can be unsafe for elevated exhaust temperatures.

NOTE: System defaults to AUTO mode when parked exhaust filter cleaning is complete.

Disable AUTO Exhaust Filter Cleaning system in conditions where it can be unsafe for elevated exhaust temperatures.

IMPORTANT: Damage to engine components can occur if engine is turned OFF while performing exhaust filter cleaning or shortly after cleaning is complete. Alarm sounds and a warning message appears on display. Start machine and follow messages on display to allow components to cool. See Engine Cool Down In Progress.

PR79369,00003D8-19-09FEB21

Parked Filter Cleaning

Parked Filter Cleaning is a process which you initiate to clean the exhaust filter when required.

During the process, engine speed is controlled by the system, and the machine must remain parked to complete the procedure. Time required for the Parked Filter Cleaning process is dependent upon the level of exhaust filter restriction, ambient temperatures, and current exhaust gas temperature.

Procedure to Modify:

CAUTION: When AUTO or PARKED cleaning is enabled, the exhaust temperature can be high under no load or light load conditions at certain times during the exhaust filter cleaning cycle.

Servicing machine or attachments during the exhaust filter cleaning can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

During auto or manual/stationary exhaust filter cleaning operations, the engine runs at elevated idle and hot temperatures for an extended period. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite, or melt common materials.

IMPORTANT: Damage to exhaust cleaning components can occur if engine is turned OFF while performing exhaust filter cleaning or shortly after cleaning is complete. Start machine and follow messages on display to allow components to cool. See Engine Cool Down In Progress.

NOTE: Parked Filter Cleaning can exceed 40 minutes.



Abort

H113804—UN—09MAR16

Select Abort at any time during Parked Filter Cleaning procedure to cancel process.



Parked Filter Cleaning

H113830—UN—04JAN17

1. Select Parked Exhaust Filter Cleaning button.
2. Verify that the machine is configured for Parked Filter Cleaning.

- Position the machine outdoors
- Stop machine motion
- Set engine speed to low idle
- Engage park brake
- Disengage separator
- Clear proximity sensor
- Engine debris management system functional



Check Mark

N118440—UN—09MAR16

Once a condition has been met, a green check mark in box appears preceding the condition.



Next

H113803—UN—09MAR16

3. Once all conditions have been met, select next button.

NOTE: Exhaust Filter System controls the engine speed to increase exhaust temperature.



Progress Indicator

H113801—UN—04JAN17

Exhaust filter cleaning is shown by Progress Indicator.



Close

H114770—UN—22JAN20

4. Select and a message appears on the screen that can be viewed in the Status Center on the display.

NOTE: Cleaning process continues when close button is selected.



Status Center

H113816—UN—04JAN17

To check status of the procedure, select Status Center to open Status Center page.



Check Status

H118543—UN—04JAN17

Select Check Status to view the cleaning process.



Cleaning Complete

H113825—UN—04JAN17

System informs you when exhaust filter cleaning is complete.



Close

H114770—UN—22JAN20

5. Select to return to the display.

If you are not returning the machine to service immediately after procedure, allow engine time to return to normal operating temperature before stopping engine. See [Engine Cool Down In Progress](#).

NOTE: System defaults to AUTO mode when parked exhaust filter cleaning is complete.

Disable AUTO Exhaust Filter Cleaning

 
Auto Exhaust Filter Cleaning can be disabled in certain conditions.

IMPORTANT: Disable the automatic exhaust filter cleaning system only when necessary.

Modify When:

- Indoors or under a roof unless a high temperature externally vented exhaust system is connected.
- There is not enough time available for the machine to complete a cleaning cycle before it is shut down.
- In high crop dust or chaff conditions.
- Next to a fueling area.

Procedure to Modify:



Automatic

H113829—UN—04JAN17

1. Select to open Exhaust Filter Cleaning.



ON/OFF

H113848—UN—04JAN17

2. Select to enable or disable Automatic Filter Cleaning.



Close

H114770—UN—22JAN20

3. Select to close Exhaust Filter Cleaning.

PR79369,00003DA-19-09FEB21

Engine Cool Down In Progress

Engine Cool Down is a specific time period necessary to allow the engine and components to cool down.

IMPORTANT: Damage to exhaust cleaning components can occur if engine is turned OFF while performing exhaust filter cleaning or shortly after cleaning is complete. Alarm sounds and a warning message appears on display. Start machine and follow messages on display to allow components to cool.

Access Engine Cool Down In Progress:



Engine Cool Down Icon

H127479—UN—26SEP19

1. Engine Cool Down In Progress alert opens on-screen showing the minutes left before the machine can be shut down.



OK

H113812—UN—04JAN17

 
2. Select OK on Engine Cool Down In Progress alert.



Status Center

H127477—UN—26SEP19

3. Engine Cool Down Icon illuminates in Status Center during Engine Cool Down In Progress.



Status Center Display

H127983—UN—19NOV19

4. Select Engine Cool Down icon to view progress in the Status Center Display.



Engine Cool Down Complete

H127510—UN—26SEP19

5. When engine cool down time elapses, the Engine OK Icon appears on-screen.

IMPORTANT: If engine is shut off during Engine Cool Down, an alert displays on-screen requiring the engine to be started.



OK

H113812—UN—04JAN17

6. Cool Down Complete message appears and tells you that the machine can be shut down. Select to close message.

PR79369,00003DB-19-09FEB21

Debris Management Filter Capacity

An indicator that allows you to view the debris management filter capacity.



Green Zone

H126195—UN—24APR19

- **Green Zone**— filter capacity is good.



Yellow Zone

H126196—UN—24APR19

- **Yellow Zone**— little filter capacity is remaining. Remove and clean filter soon.

NOTE: A message appears on the screen that retriggers once per key cycle until filter is cleaned.



Red Zone

H126197—UN—24APR19

- **Red Zone**— there is no filter capacity remaining. Remove and clean filter now.

NOTE: When indicator moves into the red zone, a Stop Alert DTC is triggered. Remove and clean the engine debris management filter.

NOLMWLO,0000377-19-16JUL20

Air Compressor

Air Compressor provides a supplemental compressed air source to clean the machine.

The air compressor only functions if the following requirements are met:

- Engine must be running.
- Machine must be in park.
- Separator must be disengaged.
- Header must be disengaged.
- Machine external components must not be in motion.

Procedure to Modify:

IMPORTANT: Drain moisture from the air tank daily.
Refer to Operator's Manual for details.

IMPORTANT: Never clean engine air filters or debris management air filters while engine is running.

NOTE: Onboard Air Compressor is NOT recommended to inflate tires on the machine or run air tools.



Status Indicator

H113822—UN—04JAN17

Status Indicator— displays status of Air Compressor requirements.



ON/OFF

H116670—UN—04JAN17

Select to enable or disable Air Compressor.

NOTE: When the air compressor is active, the green status indicator pulses to remind you that certain machine functions such as separator, header, unloading auger and propulsion systems are reduced in functionality.

NOTE: When preconditions are not met, selecting the ON/OFF toggle button displays Air Compressor Status to help troubleshoot what is preventing the system from activating.

PR79369,00003DC-19-09FEB21

Air Compressor Status

Air Compressor Status shows the requirements needed to enable the air compressor system.



ON/OFF

H116670—UN—04JAN17

Select ON/OFF toggle button under Air Compressor to open Air Compressor Status page if all requirements are not met.

Items Displayed on Air Compressor Status Page:



Gray

H113824—UN—04JAN17

Not Ready— requirements not met.



Gray

H113824—UN—04JAN17

Ready— requirements met but not enabled.



Green

H113822—UN—04JAN17

Active— requirements met and system enabled.

Air Compressor Requirements:

- Engine must be running.
- Machine must be in park.
- Separator must be disengaged.
- Header must be disengaged.
- Machine external components must not be in motion.



Alert Message

H113826—UN—04JAN17

A message appears when a requirement is not met.



Check Mark

H113825—UN—04JAN17

Once a condition is met, a green check mark appears.



Close

H114770—UN—22JAN20

Select to close Air Compressor Status.

SS43267,00008A2-19-19NOV19

HVAC Application

Access HVAC

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



HVAC

H114795—UN—04JAN17

3. HVAC

Access Application Through Navigation Bar:




HVAC

H114794—UN—17MAR16

Press HVAC button on navigation bar below display.

PR79369,00003DD-19-09FEB21

Heating, Ventilation, and Air Conditioning (HVAC) Main Page

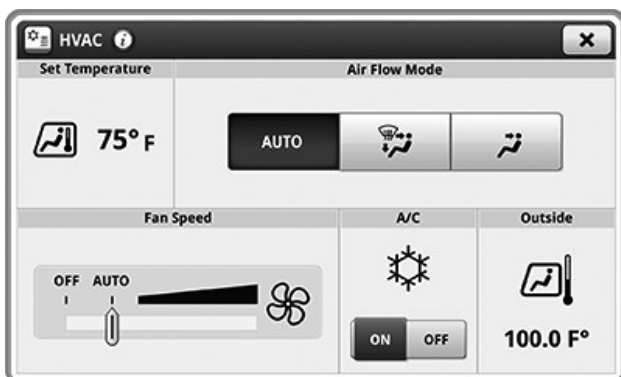


HVAC

H120313—UN—04JAN17

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

HVAC application is used to adjust temperature, fan speed, and air flow mode inside of the cab and view the outside temperature (if equipped).

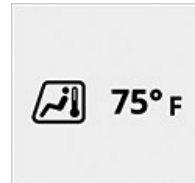

Set Temperature

H119378—UN—15SEP16

Items Accessible on HVAC Main Page:

Set Temperature— set a desired temperature inside the cab.



Air Flow Mode

H114797—UN—17MAR16

Air Flow Mode— adjust distribution of air flow inside the cab.



Fan Speed

H114801—UN—17MAR16

Fan Speed— control fan speed inside the cab.



Air Conditioning

N145869—UN—26SEP19

Air Conditioning (A/C)— enable or disable air conditioning.



Outside

H119377—UN—16SEP16

Outside— view the current outside temperature.



A/C

H115024—UN—04JAN17

Run Page Modules

Modules for this application can be added to run pages using the Layout Manager.

Example:

A/C— toggle gives you direct access to enable/disable the A/C.

NOTE: Different modules can be available for your application.

Shortcut Keys

Shortcut keys for this application can be added to the shortcut bar using the Layout Manager.

Example:



A/C ON/OFF

H116265—UN—04JAN17

A/C ON and OFF— quick access to turn air conditioning on and off.

NOTE: Different shortcut keys may be available for your application.

PR79369,00003DE-19-09FEB21

Set Temperature

Set Temperature allows you to set a desired temperature inside the cab.

Procedure to Modify:



Set Temperature

N145866—UN—26SEP19

1. Select Set Temperature value to modify the cab temperature setting.



Decrease

H114792—UN—22JAN20

2. Select to decrease the value.



Increase

H114791—UN—22JAN20

3. Select to increase the value.



Close

H114770—UN—22JAN20

4. Select to close the cab temperature setting.

Alternate Procedure to Modify:

CommandARM™ Temperature Control— press the temperature increase or decrease buttons on armrest to modify temperature.

PR79369,00003DF-19-09FEB21

Fan Speed

Fan Speed allows you to control the fan speed inside the cab.



Fan Speed

H114801—UN—17MAR16

Procedure to Modify:

1. Select the screen area under Fan Speed to modify it.



Indicator

H114802—UN—17MAR16

2. The indicator moves to the selected fan speed,

automatic mode, or off by selecting the minus (-) or plus (+) buttons.



Decrease

H114998—UN—04JAN17

- a. Select to decrease the fan speed or until AUTO mode or the Off position is selected.



Increase

H114997—UN—04JAN17

- b. Select to increase the fan speed. The fan speed increases until the highest setting is reached.

The fan is turned off when the indicator moves to OFF. The fan speed is automatically regulated when the indicator moves to AUTO.

NOTE: When AUTO mode is selected, the fan speed decreases as the temperature approaches the temperature Setpoint.



Close

H114770—UN—22JAN20

3. Select to close the fan speed setting.

NOTE: In AUTO mode, as temperature approaches setpoint, fan speed decreases.

Alternate Procedure to Modify:

ClimaTrak™ Automatic Temperature Control— press the fan speed increase or decrease buttons on armrest to modify fan speed.

PR79369,00003E0-19-09FEB21

Air Flow Mode

Air Flow Mode allows you to adjust distribution of air flow inside the cab or enable the windshield defrost.

Procedure to Modify:



Air Flow Modes

H114797—UN—17MAR16

Select the desired air flow mode on toggle bar.



Automatic

H114798—UN—17MAR16

Automatic— automatically distributes and redirects air flow based on actual temperature and desired temperature in the cab.



Defrost, Operator, and Floor

H114799—UN—17MAR16

Defrost, Operator, and Floor— distribute air flow evenly throughout the cab and defrost the windshield.

NOTE: Air conditioning turns ON when Defrost air flow mode is selected.



Operator

H114800—UN—17MAR16

Operator— direct air flow toward you.

Alternate Procedure to Modify:

ClimaTrak™ Automatic Temperature Control— press the air flow mode button on armrest to toggle between modes.

PR79369,00003E1-19-09FEB21

Air Conditioning (A/C)

Air Conditioning allows you to enable or disable air conditioning.

NOTE: Air conditioning turns ON when defrost air flow mode is selected.



ON/OFF

H114790—UN—04JAN17

Procedure to Modify:

Select to enable or disable air conditioning.

PR79369,00003E2-19-09FEB21

Outside Temperature

Outside allows you to view the current outside temperature.



H119377—UN—16SEP16

Outside Temperature

Procedure to Modify:

Select the screen area under Outside to open a larger display of the current outside temperature.



H114770—UN—22JAN20

Close

Select to close outside temperature.

PR79369,00003E3-19-09FEB21

Transmission Application

Access Transmission

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Transmission


H113843—UN—30OCT15

3. Transmission

PR79369,000041B-19-10FEB21

Transmission Main Page

NOTE:

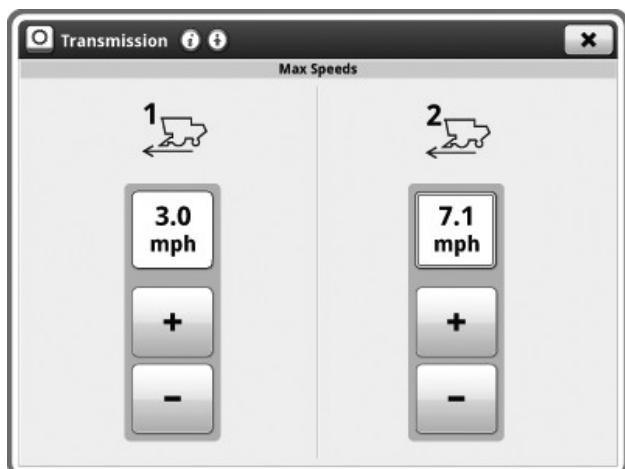

Transmission

H128141—UN—06JAN20

Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

Transmission application is used to display transmission information and adjust settings.

Items Accessible on ProDrive Transmission Main Page:

NOTE: Transmission application is not available when road mode is active. Press the Road Transport Disconnect button to turn road mode on or off.



Max Speed 1

H126972—UN—26SEP19


Max Speed 1— maximum speed when max speed 1 is active. Select input box to adjust setting.



Max Speed 2

H126973—UN—26SEP19

Max Speed 2— maximum speed when max speed 2 is active. Select input box to adjust setting.

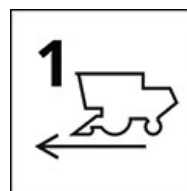

Max Speed Range

H135683—UN—21JUN22

NOTE: A box displays around the selected max speed icon when making adjustments to one of the speed ranges.



Advanced Settings

N118004—UN—22OCT15

Advanced Settings— allows you to access further adjustments and less common settings.

Items Accessible on Push-Button Shift Transmission Main Page:



Current Gear

H126976—UN—26SEP19

Current Gear— shows you the current gear that is selected.

Press Push-Button Shift Transmission buttons to change the current gear.



Advanced Settings

N118004—UN—22OCT15

Advanced Settings— allows you to access further adjustments and less common settings.

mm95366,1655498528580-19-28JUN22

Max Speed 1 and 2

Max Speeds allows you to set a comfortable harvest or transport speed. When desired ground speed is set and multi-function lever is moved fully forward with the engine at high idle, machine operates no faster than the setpoint for the selected mode. Two modes are available.

NOTE: Max Speed 1 cannot be set higher than current maximum speed set in Max Speed 2.

NOTE: Greater maximum setpoints mean more aggressive machine movements. It is always best to use low range with a low maximum setpoint when doing precision movements (hooking up header).

- Example 1: Attaching header to machine and harvesting desired crop. Max Speed 1 set to 1.6 km/h (1 mph). Max Speed 2 set to 11.3 km/h (7 mph).
- Example 2: Waterway approaches and harvesting desired crop. Max Speed 1 set to 4.8 km/h (3 mph). Max Speed 2 set to 11.3 km/h (7 mph).



Value

H126975—UN—26SEP19

Select plus (+) button to increase value.

Select minus (-) button to decrease value.

NOTE: As you switch between speed settings using the ProDrive™ Mode buttons on the armrest, a message appears on-screen reminding you of the speed settings currently active. The message can be viewed in the Status Center on the display.

PR79369,000041D-19-10FEB21

Advanced Settings ProDrive™

Items Accessible on Advanced Settings Page:

Limp Home Mode— enable to move a machine with a power train sensor fault to a safe location or to be serviced.

Tow Mode— must be enabled to tow the machine.

N0LMWLO,0000382-19-16JUL20

Advanced Settings ProDrive™ Tow Mode

You can enable Tow Mode to protect transmission if machine is disabled and requires towing.

CAUTION: Do not tow machine with wire rope. If rope breaks, the whipping action could cause bodily injury.

Do not remove couplers. When couplers are removed, brakes are disabled.

Avoid electrical line entanglement. Grain tank covers must be closed and the radio antenna must be removed before transporting. For further information, see the Folding application on the CommandCenter™ display and Radio Antenna in the Operator's Station section of the Operator's Manual.

Check local governmental regulations regarding driving or towing equipment on public roads. Use auxiliary lights and devices available from your John Deere dealer to warn other roadway users.

Avoid crushing injuries from runaway machine. If machine is on a slope, do not disengage park brake until wheels are blocked.

Machine can be towed for emergency situations up to 10 min at maximum speed of 10 km/h (6.2 mph).

Tow Mode Procedure Requirements:

Engine State	Running
Wheel Speed	0 km/h (0 mph)
Operator	In Seat
Machine State	Park Brake Engaged

Procedure to Modify:

To tow machine, proceed as follows:

1. Start engine.
2. Empty grain tank and remove header.
3. Swing unloading auger back.
4. Close the grain tank covers.
5. Swing ladder forward and remove the radio antenna.

NOTE: Always tow machine in a forward direction by attaching a chain around main axle. Be certain chain does not damage any hydraulic lines. Have driver in operator's seat to steer machine.

6. Turn warning lights ON, unless prohibited by law.

NOTE: Engine must be running to turn off park brake and tow machine. If engine is inoperable, see your John Deere dealer or other qualified service provider for further information.



ON/OFF

H114769—UN—22OCT15

7. Select ON/OFF toggle button to enable Tow Mode.



Message

H114772—UN—22OCT15

8. If requirements for tow mode were not met, a message appears displaying which requirements are not met.



Close

H114770—UN—22JAN20

9. If you need to exit tow mode for any reason, you can do so by selecting close button.



Green Checkmark

H114771—UN—22OCT15

10. Once a requirement is met, a green checkmark appears preceding the requirement.



ON/OFF

H114769—UN—22OCT15

11. Once all requirements are met, you can select the ON/OFF toggle button to activate Tow Mode.

CAUTION: Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that are damaged or lost.

12. Press park button on armrest to release brakes before towing machine.

NOTE: Operator must remain in seat for park to be disengaged.

Tow mode is disabled and a message appears on-screen that can be viewed in the Status Center if you:

- Shift transmission into gear.

PR79369,000041E-19-10FEB21

Advanced Settings ProDrive™ Limp Home Mode

You can enable Limp Home Mode to move a machine to a safe location that is brought to a stop due to a power train sensor fault at a derated speed.

NOTE: The Header application must be active to access Limp Home Mode.

Allows machine to operate up to 4 hours. Limp Home Mode should not be used for normal operation.



H114769—UN—22OCT15

ON/OFF

Select ON/OFF toggle button to enable Limp Home Mode.

If there is a power train sensor fault Limp Home Mode enables and a message appears.

NOTE: Limp Home Mode will automatically disable on machine key cycle.

If no power train sensor fault was detected, Limp Home Mode is not enabled and a message appears.

PR79369,000041F-19-10FEB21

Lights Application

Access Lights

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Lights

H115006—UN—09JAN17

3. Lights

Access Application Through Navigation Bar:




Lights

H115005—UN—11MAR16

Press Lights button on navigation bar below display.

PR79369,0000421-19-24JUN22

Lights Main Page

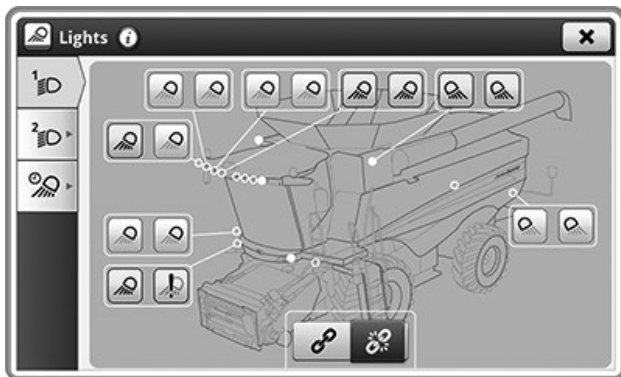

Lights

H120316—UN—09JAN17

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

Lights application is used to access light presets that can be configured by the operator. Selecting one of the tab presets allows you to make adjustments.

NOTE: Worklights are configurable. Road lights are not configurable.

Tabs Available in Lights Application:



Worklight Preset 1—Low-Beam

H114593—UN—11MAR16

Worklights Preset 1—Low-Beam— lights that illuminate in Preset 1—Low-Beam mode.



Worklights Preset 2—Low-Beam

H114596—UN—11MAR16

Worklights Preset 2—Low-Beam— lights that illuminate in Preset 2—Low-Beam mode.



Worklights Preset 1—High-Beam

H114594—UN—11MAR16

Worklights Preset 1—High-Beam— lights that illuminate in Preset 1—High-Beam mode.



Worklights Preset 2—High-Beam

H114595—UN—11MAR16

Worklights Preset 2—High-Beam— lights that illuminate in Preset 2—High-Beam mode.



Highlighted Tab

H114597—UN—11MAR16

Highlighted Tabs— indicate which light preset is selected.

Worklights Controls— provide you with controls to select worklights on-off, high/low-beams, and preset mode 1 or 2.



H113862—UN—11MAR16

Light With Fault

Light with Fault— exclamation point indicates that light has an error. For example, light bulb is burnt out.



H114587—UN—11MAR16

Exit Lights

Exit Lights— select duration and lights that will remain illuminated after key switch is turned to OFF position.



N118004—UN—22OCT15

Advanced Settings

Advanced Settings— allows you to access further adjustments and less common settings.

PR79369,0000422-19-11FEB21

Worklights Preset 1—Low-Beam

Customize Preset 1—Low-Beam mode lights for specific customer needs. Modify when needing customized lighting in low visibility such as during unloading or harvesting operations.

Procedure to Modify:



H114593—UN—11MAR16

Worklights Preset 1—Low-Beam

1. Select to allow customization of each individual light in this mode.



H113857—UN—11MAR16

Linked

- Select Link on toggle button to link paired left-hand and right-hand lights for simultaneous ON and OFF operation on all tabs.



H113858—UN—11MAR16

Unlinked

- Select Unlink on toggle button to allow paired left-hand and right-hand lights individual ON and OFF operation on all tabs.



H114591—UN—11MAR16

Light Button



H113853—UN—11MAR16

Light Pair Button

2. Select light or light pair button for lights you want illuminated.



H114592—UN—11MAR16

Highlighted Button

NOTE: Button becomes highlighted when selected.

PR79369,0000423-19-11FEB21

Worklights Preset 2—Low-Beam

Customize Preset 2—Low-Beam mode lights for specific customer needs. Modify when needing customized lighting in low visibility such as during unloading or harvesting operations.

Procedure to Modify:



H114596—UN—11MAR16

Worklights Preset 2—Low-Beam

1. Select to allow customization of each individual light in this mode.



H113857—UN—11MAR16

Linked

- Select Link on toggle button to link paired left-hand and right-hand lights for simultaneous ON and OFF operation on all tabs.



Unlinked

H113858—UN—11MAR16

- Select Unlink on toggle button to allow paired left-hand and right-hand lights individual ON and OFF operation on all tabs.



H114591—UN—11MAR16
Light Button



H113853—UN—11MAR16
Light Pair Button

2. Select light or light pair button for lights you want illuminated.



Highlighted Button

H114592—UN—11MAR16

NOTE: Button becomes highlighted when selected.

PR79369,0000424-19-11FEB21

Worklights Preset 1—High-Beam

Customize Preset 1—High-Beam mode lights for specific customer needs. Modify when needing customized lighting in low visibility such as during unloading or harvesting operations.

Procedure to Modify:



Worklights Preset 1—High-Beam

H114594—UN—11MAR16

1. Select to allow customization of each individual light in this mode.



Linked

H113857—UN—11MAR16

- Select Link on toggle button to link paired left-hand and right-hand lights for simultaneous ON and OFF operation on all tabs.



Unlinked

H113858—UN—11MAR16

- Select Unlink on toggle button to allow paired left-hand and right-hand lights individual ON and OFF operation on all tabs.



H114591—UN—11MAR16
Light Button



H113853—UN—11MAR16
Light Pair Button

2. Select light or light pair button for lights you want illuminated.



Highlighted Button

H114592—UN—11MAR16

NOTE: Button becomes highlighted when selected.

PR79369,0000425-19-11FEB21

Worklights Preset 2—High-Beam

Customize Preset 2—High-Beam mode lights for specific customer needs. Modify when needing customized lighting in low visibility such as during unloading or harvesting operations.

Procedure to Modify:



Worklights Preset 2—High-Beam

H114595—UN—11MAR16

1. Select to allow customization of each individual light in this mode.



Linked

H113857—UN—11MAR16

- Select Link on toggle button to link paired left-hand and right-hand lights for simultaneous ON and OFF operation on all tabs.



Unlinked

H113858—UN—11MAR16

- Select Unlink on toggle button to allow paired left-hand and right-hand lights individual ON and OFF operation on all tabs.



H114591—UN—11MAR16
Light Button



H113853—UN—11MAR16
Light Pair Button



H114591—UN—11MAR16
Light Button



H113853—UN—11MAR16
Light Pair Button

2. Select light or light pair button for lights you want illuminated.



Highlighted Button

H114592—UN—11MAR16

NOTE: Button becomes highlighted when selected.

PR79369,0000426-19-11FEB21

Exit Lights

Exit Lights allows you to select duration and lights which will remain illuminated after key switch is turned to OFF position.

NOTE: Exit lights turn on if road or worklights were used in the last 5 min.

Procedure to Modify:



Exit Lights

H114587—UN—11MAR16

1. Select a Light tab.



Linked

H113857—UN—11MAR16

- Select Link on toggle button to link paired left-hand and right-hand lights for simultaneous ON and OFF operation on all tabs.



Unlinked

H113858—UN—11MAR16

- Select Unlink on toggle button to allow paired left-hand and right-hand lights individual ON and OFF operation on all tabs.

2. Select light or light pair button for lights you want illuminated.



Highlighted Button

H114592—UN—11MAR16

NOTE: Button becomes highlighted when selected.



Exit Timeout

H114588—UN—11MAR16

3. Select to open Exit Timeout screen.
4. Select desired Exit Timeout Setting.

Exit Timeout Values		
Instant-off (0 s)	60 s	3 min
10 s	90 s	4 min
30 s	2 min	5 min



H114606—UN—09JAN17
OK



H114605—UN—09JAN17
Cancel

5. Select OK to save or Cancel to revert to previous setting.

PR79369,0000427-19-11FEB21

Worklights Controls

Worklights Controls allows you to select the desired worklight preset and mode.

Procedure to Modify:



Worklight Position

H115019—UN—09JAN17

1. Turn steering column selector knob to worklight position.
2. Select desired high-beam or low-beam mode.

- Push lever to select high-beam mode.
- Pull lever to select low-beam mode.



H115018—UN—11MAR16

Armrest Light Toggle

3. Press armrest light toggle to select worklights preset 1 or worklights preset 2.

NOTE: LED illuminates for selected preset mode 1 or 2.

- **Momentary High Beam:** Pull and hold lever to upper position to momentarily activate high-beam mode.
- **Low Beam Position:** Pull lever to middle position to operate low-beams.
- **High Beam Position:** Push lever to lower position to operate high-beams.

PR79369,0000428-19-11FEB21

Calibrations Application

Access Calibrations and Procedures

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Machine Settings

N119118—UN—23SEP16

2. Machine Settings tab



Calibrations and Procedures

N119098—UN—25MAY16

3. Calibrations & Procedures

SS43267,000084C-19-17JAN17



Harvest Tab

H119225—UN—23SEP16

Harvest Tab

Mass Flow Vibration

Yield

Amber Flasher

Grain Loss Monitor Tap Test

Moisture Sensor

Chassis Tilt

Concave Air Removal

Concave Leveling

ActiveYield™

Threshing Clearance (STS Electric)

Threshing Clearance (Hydraulic)

Unloading Auger Engage




Header Tab

H119226—UN—23SEP16

Calibrations and Procedures Overview

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Main page shown is for example only. Your main page may differ depending on options or connected equipment.

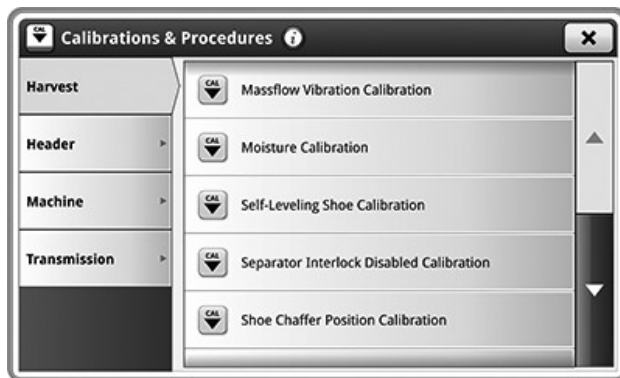

Calibrations and Procedures

H119896—UN—18JAN17

Calibrations and Procedures application provides centralized access to maintenance procedures and calibrations for the machine.

Header Tab

Header Suspension Service Mode

Hinged Draper Wing Position

Gauge Wheel Range

Gauge Wheel Speed

Windscreen Position

Feeder House Raise Speed

Header

Deck Plate Spacing

Extendable Platform Header Self-Test

Feeder House Lateral Tilt Speed

Wings (Folding Corn Head)

Reel and Cutterbar Position

Reel Position

Feeder House Tilt Fore/Aft Range

Feeder House Lateral Tilt Range

mm95366,1656418459899-19-28JUN22

Mass Flow Vibration

This procedure calibrates the mass flow sensor to accommodate for normal vibration of machinery while in operation. Performing this calibration prevents the mass flow sensor from falsely reading vibration as material being harvested.

NOTE: Mass Flow Vibration calibration must be performed when changing headers and in every crop that is harvested. Perform Mass Flow Vibration calibration before ActiveYield™ calibration.

Perform Calibration When:

- Control unit AYM or associated components are replaced/adjusted.
- Equipment configuration such as a Header has changed.
- Crop type being harvested has changed.
- Mass Flow Sensor has been replaced.

Items Accessible on Mass Flow Vibration Calibration Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration— begin calibration procedure.

Requirements— machine state required for calibration.

Details Displayed on Page:

Recommended Interval	See "Perform Calibration When" section for more information.
Estimated Time Required	Approximately 1 min

PR79369,000042B-19-24FEB21

Mass Flow Vibration Calibration Procedure

Procedure Requirements:

Engine State	Running
Operating State	Parked on a level surface



Begin Calibration

N120226—UN—23FEB16

Procedure Overview:

ActiveYield is a trademark of Deere & Company

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm Calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

SS43267,0000867-19-19JAN17

Moisture Sensor

Perform Calibration When:

- The moisture sensor has been installed, replaced, or adjusted.
- The moisture sensor accuracy needs to be improved.

Items Accessible on Moisture Sensor Calibration Page:



Calibrate

N119105—UN—02MAY16

Moisture Sensor Procedure— begin calibration procedure.

Requirements— machine state required for calibration.

PR79369,000042C-19-24FEB21

Moisture Sensor Procedure

This procedure performs the calibration for the Moisture Sensor.

Procedure Requirements:

Engine State	Running
Operating State	Parked on a level surface

Procedure to Perform:



Start

A102855—UN—01FEB19

1. Select Start to begin calibration procedure.



Calibrating

H113801—UN—04JAN17

2. Calibrating symbol will appear on screen. Calibration will proceed to next step automatically.



Calibration Complete

A92084—UN—09MAY19

If no issues are present, Calibration Complete will appear on screen.



Save

A92068—UN—16MAR18

3. Confirm Calibration by pressing ENTER and selecting Save.



Cancel

A92067—UN—16MAR18

4. Select Cancel to return to previous page.

PR79369,000004D-19-26NOV19

Threshing Clearance (STS Electric)

This procedure calibrates Threshing Clearance by identifying the fully opened and closed positions of the concaves. A properly calibrated Threshing Clearance provides the best results for the harvest setting recommendation. See your Operator's Manual for more details.

IMPORTANT: Calibration should not be completed with round bar concave covers installed. An incorrect zero position results.

Perform Calibration When:

- Preparing for each harvest season.
- Physical concave opening does not match what is being displayed in the cab.
- Concaves are replaced with a new or different set of concaves.

- Threshing clearance sensor, or associated components are replaced/adjusted.

Items Accessible on Threshing Clearance Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 1-2 min

PR79369,000042D-19-24FEB21

Threshing Clearance Calibration (STS Electric) Procedure

Procedure Requirements:

Engine State	Running
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm Calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify all requirements listed on-screen have been met.

- If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,000042E-19-24FEB21

Yield Calibration

 
This procedure calibrates the estimated yield. Calibration is done by matching recorded samples with corresponding scale weight measurements.

NOTE: Yield Calibration must be performed every year and in every crop that is harvested to achieve accurate grain weight measurements. Also, verify that Mass Flow Vibration Calibration has been performed for each crop.

Perform Calibration When:

- Control unit AYM or associated components are replaced/adjusted.
- Yield totals do not match scale tickets.
- Highest accuracy of yield totals desired.

Items Accessible on Yield Calibration Page:



Calibration Quality

H119234—UN—02MAR21

Calibration Quality— indicates the quality of the calibration samples.



Status

H119417—UN—18JAN17

Status Indicator— indicates the status of sample recording.



Record

H119235—UN—18JAN17

Record— collect sample data.



Unmatched Samples

H119363—UN—18JAN17

Unmatched Samples— number of samples not matched to an actual weight.



Match Scale Weight

H119364—UN—18JAN17

Match Scale Weight— match recorded sample weight to actual weight of sample.



Advanced Settings

N118004—UN—22OCT15


Advanced Settings— access further adjustments and less common settings.

NOTE: If Mass Flow Vibration Calibration is not current, then it is recommended to perform that calibration before performing Yield Calibration.

PR79369,000042F-19-24FEB21

Yield | Calibration Quality

 Calibration Quality indicates the quality of the calibration samples and the margin of error between the recorded samples and actual weights.




Calibration Quality

H119365—UN—18JAN17

Items Accessible on Calibration Quality Page:

Calibration Quality Indicator— indicates the quality of the calibration samples.

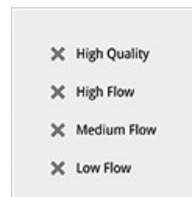

Collected Samples

H119374—UN—18JAN17

Collected Sample Status— indicates the criteria met by the current set of samples.



Yield Margin of Error

H119372—UN—18JAN17

Yield Margin of Error— difference between recorded sample weight and actual weight expressed as a percentage. Colored backgrounds indicate the quality of the margin.

Auto Sample Selection
Mode

Calibration Mode

H119375—UN—18JAN17

Calibration Mode— current sample selection mode.

0 (factory calibration active)
Samples in Calibration

Samples in Calibration

H119373—UN—18JAN17

Samples in Calibration— number of samples stored. If no samples are stored, the factory calibration is used.



Advanced Settings

N118004—UN—22OCT15


Advanced Settings— access further adjustments and less common settings.

PR79369,0000430-19-24FEB21

Yield | Status Indicator

Status Indicator displays the status of Record Samples and a message about that status.

Status options are as follows:

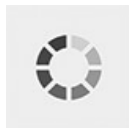

Progress Indicator

H119424—UN—18JAN17

Progress Indicator— displays when a sample is being recorded.



Green

N118420—UN—02NOV16

Active— sample recording is active.



Gray


N118019—UN—22OCT15

Inactive— sample recording is not active.

PR79369,0000431-19-24FEB21

Yield | Record Sample

Record Sample page allows you to collect a yield sample, monitor flow rate, and view the recorded weight of the sample.

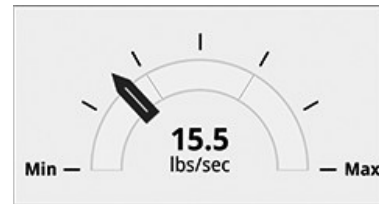

Mass Flow Rate

H119379—UN—18JAN17

Items Accessible on Record Sample Page:

Mass Flow Rate— indicates the flow of crop being harvested.


Medium Flow

Medium Flow

H119418—UN—18JAN17

Flow Rate Range— indicates the current range that the sample is being harvested in.


NOTE: Low flow rate is displayed using dashes.

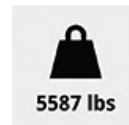

Weight

H119380—UN—18JAN17

Weight— calculated weight of the sample.

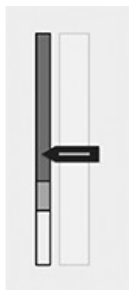

Weight Status

H119399—UN—18JAN17


Weight Status— indicates when enough crop has been harvested to perform the calibration.

Crop Type: Corn

Crop Type: Corn

H119419—UN—18JAN17

Crop Type— crop being harvested.

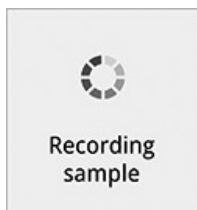

Recording Sample

H119400—UN—18JAN17

Recording Status— displays status of sample recording.



Delete

H119401—UN—18JAN17

Delete— deletes the current sample data.



Start

H119421—UN—18JAN17

Start— begins recording sample data.



Done

H119420—UN—18JAN17

Done— stops sample recording and stores the information.



Record

H119235—UN—18JAN17

Procedure to Modify:

1. Select Record.
2. Begin harvesting crop.



Start

H119421—UN—18JAN17

3. Select Start button.
4. Adjust ground speed until desired flow rate range is obtained.
5. Continue harvesting until the necessary amount of crop is harvested.



Done

H119420—UN—18JAN17

6. Select Done button to store the sample information.

PR79369,0000432-19-24FEB21

Yield | Match Scale Weight

Match Scale Weight allows you to match recorded sample weight to the actual weight of sample.

Procedure to Modify:



Sample

H128111—UN—21NOV19

1. Select sample to match.
2. Enter the actual sample weight using the keypad.



Save

N118093—UN—16FEB16

3. Select Save button to confirm.



Cancel

 
N118094—UN—18JAN17

NOTE: Select Cancel button to return to the previous page without making any changes.

Procedure to Delete a Sample:



1. Select sample to delete.



Delete Sample

H119408—UN—18JAN17

2. Select Delete Sample.



OK

H114654—UN—05JAN17

3. Select OK button.



Cancel

N118094—UN—18JAN17

NOTE: Select Cancel button to return to the previous page without making any changes.

PR79369,0000433-19-24FEB21

Yield | Advanced Settings

Advanced Settings allow you to access further adjustments and less common settings.

NOTE: Advanced Settings are not available when ActiveYield™ is selected.

Modify When:

- Resetting to the factory defaults.
- Manually selecting samples.
- Manually adjusting the calibration value.
- Transferring the calibration to another machine.

Items Accessible on Advanced Settings Page:



Reset

H119409—UN—18JAN17

Reset—reset the system to the factory default.

 
ActiveYield is a trademark of Deere & Company



Auto Sample Selection

H119410—UN—18JAN17

Auto Sample Selection— system selects samples based on flow rate, quality, and margin of error to achieve the best calibration value.



Manual Calibration

H119411—UN—18JAN17

Manual Calibration— select desired samples to use for calibration value.



Edit/Select Samples

H119412—UN—18JAN17

Edit/Select Samples— choose samples to use for manual calibration. Edit sample scale weights or delete samples.



Advanced Edit

H135691—UN—21JUN22

Advanced Edit— manually adjust the calibration value or transfer calibration from another machine.



Delete Unused Samples


H119414—UN—18JAN17

Delete Unused Samples— delete any samples not being used for the calibration.

mm95366,1655726637540-19-23JUN22

Yield | Calibration Quality Indicator

 Calibration Quality Indicator indicates the quality of the calibration samples.



Factory Calibration

H119365—UN—18JAN17

Factory Calibration— indicates that factory calibration is in use. No adjustments have been made.



Single Sample

H119366—UN—18JAN17

Single Sample— indicates that only one sample has been taken or selected for use.

NOTE: Single sample calibration performs well for the flow rate that the sample was collected for. The performance may be degraded at different flow rates.



Low Quality

H119367—UN—18JAN17

Low Quality Sample— four or more samples are selected, but samples are not high quality and only two represent two of the flow ranges.



High Quality


H121087—UN—19MAY17

High Quality Sample— four or more samples are selected from high-quality loads and represent all flow ranges.

PR79369,0000435-19-24FEB21

Yield | Collected Sample Status

 
Collected Sample Status indicates the criteria met by the current sample set. When a criterion is met, a checkmark is displayed next to it.



High Quality

H128112—UN—21NOV19

 High Quality— all samples are taken from a uniform area of the field that provides a constant flow of grain.



High Flow

H128113—UN—21NOV19

High Flow— determined using the gauge on the record sample page. Grain flow must be above 66% of the maximum flow for combine model and crop. Increase ground speed to increase flow.



Medium Flow

H128114—UN—21NOV19

Medium Flow— determined using the gauge on the record sample page. Grain flow must be between 33%-

66% of the maximum flow for combine model and crop. Adjust ground speed to regulate flow.



Low Flow

H128115—UN—21NOV19

Low Flow— determined using the gauge on the record sample page. Grain flow must be below 33% of the maximum flow for combine model and crop. Decrease ground speed to decrease flow.

For the best calibration collect at least 4 loads in all flow ranges:

- High
- Medium
- Low

In tough harvesting conditions, when higher flow rates are not achievable, use following process:

Collect the first load using the highest harvesting speed as 100%, then collect 3 more loads lowering harvesting speed to 80%, 66%, and 50%.

Repeat the process if more loads are to be collected.

PR79369,0000436-19-24FEB21

Yield | Mass Flow Rate


Mass Flow Rate indicates the flow of crop being harvested.



Current Flow Rate

H119403—UN—18JAN17

Current Flow Rate— current flow rate of harvested crop.

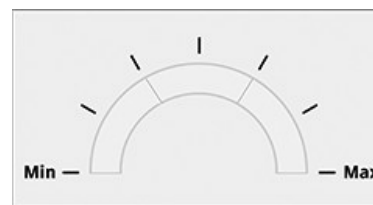


Gauge

H119422—UN—18JAN17

Gauge— graphically displays flow rate.

Min = 0%

Max = 100%

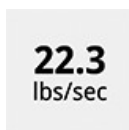


Numeric Display

H119402—UN—18JAN17

Numeric Display— displays flow rate numerically.

PR79369,0000437-19-24FEB21

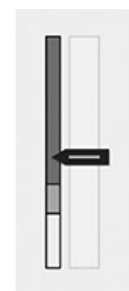

Green Zone

H119399—UN—18JAN17

Green Zone— sample size is sufficient to perform an accurate calibration.

PR79369,0000438-19-24FEB21

Yield | Weight Indicator

Weight Indicator displays when enough crop has been harvested to perform the calibration.



Current Weight

H119403—UN—18JAN17


Current Weight— current calculated weight of the sample.



Gray Zone

H119404—UN—18JAN17

Gray Zone— sample is too small for calibration to occur.

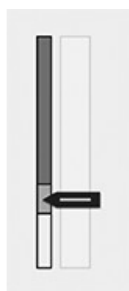

Light Green Zone

H119405—UN—18JAN17

Light Green Zone— sample size is sufficient for calibration but is not at the ideal level. Calibration may be inaccurate.

Yield | Recording Status


Recording Status displays status of the sample recording.

Standing By

Standing By

H119406—UN—18JAN17

Standing By— system is ready to record sample once Start button is selected.

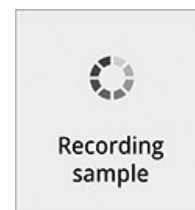

Recording Sample

H119400—UN—18JAN17

Recording Sample— sample is being recorded.


NOTE: Once sample has been recorded and saved, the system returns to stand by. The number of unmatched samples increases by one on the main page after a sample is collected.

PR79369,0000439-19-24FEB21

Yield | Reset

Reset allows you to delete all stored samples and return the system to the factory calibration value. You can also reset the calibration value to the factory default while retaining all samples.

 Reset Types:



Delete Samples (full reset)

H119429—UN—18JAN17

Delete Samples (full reset)— deletes all stored samples and the current calibration value. Calibration value is set to the factory default.



Keep Samples and Use Manual Calibration Mode

H119430—UN—18JAN17

Keep Samples and Use Manual Calibration Mode— calibration value is reset to the factory value. All stored samples are retained.



Reset

H119409—UN—18JAN17

Procedure to Modify:

1. Select Reset button.
2. Select desired reset type.



OK

H114654—UN—05JAN17

3. Select OK button to confirm.



Cancel

N118094—UN—18JAN17

NOTE: Select Cancel button to return to the previous screen without making any changes.

PR79369,000043A-19-24FEB21


Yield | Edit/Select Calibration

Edit/Select Calibration allows you to choose samples to use for manual calibration. Edit sample scale weights or delete samples.

Modify When:

- Specific samples must be selected to obtain accurate yield.
- Automatic selection does not perform as desired.
- A new sample is not necessary.
- Incorrect scale weight was entered for a sample.

 Procedure to Modify Selected Samples:



Manual Calibration

H119411—UN—18JAN17

1. Select Manual Calibration.



Edit/Select Samples

H119412—UN—18JAN17

2. Select Edit/Select Samples button.

 


Checkmark

N118434—UN—22JAN20

3. Select checkmarks next to desired samples to use for calibration.

NOTE: For the most accurate calibration, select samples that are high quality, have a 0-3 percent margin, and represent the three flow ranges.



Manual Calibration

H119411—UN—18JAN17

Procedure to Modify Scale Weight:

1. Select Manual Calibration.



Edit/Select Samples

H119412—UN—18JAN17


2. Select Edit/Select Samples button.

0037	2.8%	3.4%	Medium

Sample

H128116—UN—21NOV19

 3. Select sample to modify.



Edit Scale Weight

H119416—UN—18JAN17

4. Select Edit Scale Weight.
5. Enter desired scale weight using the keypad.



Save

N118093—UN—16FEB16

 
6. Select Save button to confirm.



Close

N118396—UN—17FEB16

7. Select Close button to return to the previous page.



Manual Calibration

H119411—UN—18JAN17

Procedure to Delete a Sample:

 
1. Select Manual Calibration.



Edit/Select Samples

H119412—UN—18JAN17

2. Select Edit/Select Samples button.



Sample

H128116—UN—21NOV19

3. Select sample to delete.



Delete Sample

H119408—UN—18JAN17

4. Select Delete Sample.



OK

H114654—UN—05JAN17

5. Select OK button to confirm.



Cancel

N118094—UN—18JAN17

NOTE: Select Cancel button to return to the previous screen without making any changes.



Save

N118093—UN—16FEB16


6. Select Save button to finalize.

PR79369,000043B-19-24FEB21

Yield | Advanced Edit

Advanced Edit allows you to manually adjust the calibration value or transfer calibration from another machine.

 Procedure to Modify:



Manual Calibration

H119411—UN—18JAN17

1. Select Manual Calibration.



Advanced Edit

H135691—UN—21JUN22

2. Select Advanced Edit button.



Calibration Value

H135692—UN—21JUN22

3. Select plus (+) to increase or minus (-) to decrease the desired calibration value.



Save

N118093—UN—16FEB16



Cancel

N118094—UN—18JAN17

4. Select Save button to update calibration value or Cancel to discard changes and return to the previous screen.

mm95366,1655726011451-19-29JUN22

Yield | Delete Unused Samples

Delete Unused Samples allows you to delete any samples not being used for the calibration.

Procedure to Modify:



Delete Unused Samples

H119414—UN—18JAN17

1. Select Delete Unused Sample button.



OK

H114654—UN—05JAN17

2. Select OK button to confirm.



Cancel

N118094—UN—18JAN17

NOTE: Select Cancel button to return to the previous screen without making any changes.

SS43267,000087C-19-25NOV19

ActiveYield™

This procedure automatically calibrates the estimated yield to more closely match actual scale weight of yields.

NOTE: Manual Yield Calibration is unavailable while ActiveYield™ automation is ON.

Items Accessible on ActiveYield™ Page:



ON/OFF

H114647—UN—05JAN17

Master ON/OFF— use toggle button to turn ActiveYield™ ON/OFF.



Quality

H119366—UN—18JAN17

Quality— indicates the quality of the calibration samples.



Status

N118420—UN—02NOV16

Status Indicator— indicates the status of sample.



Advanced Settings

N118004—UN—22OCT15

Advanced Settings— access further adjustments and less common settings.

Details Displayed on Page:

Example:

Crop Type	Corn
Accepted Samples	10
Last Accepted	32 min ago

PR79369,000043C-19-24FEB21

ActiveYield™ | Status Indicator

NOTE: A sample is not a complete grain tank. Recording of a sample starts when the ActiveYield™ sensors are fully covered with grain and stops at about 3000 kg (6614 lbs). A sample can be rejected in the following conditions:

Inconsistent Flow— the mass flow variation was too large to generate acceptable calibration load.

Uneven Loading/Grain Pile Shift Detected— grain tank loading was not within the parameters to generate an accepted calibration load. This could be due to excessive grain shifts in the grain tank caused by quick acceleration/deceleration of the machine or travelling over rough terrain.

Pitch or Roll Too Large— if the pitch or roll angle of the machine was larger than 4° during sample collection, the load will be rejected.

Collection Interrupted— if harvesting stopped or the unloading auger was engaged while sample collection was in progress, the load will be rejected.


400 Seconds Exceeded— a load will be rejected if it has not reached its minimum load size after 400 seconds (6 minutes and 40 seconds).

Mass Flow Vibration Calibration Not Conducted— not performing the mass flow vibration calibration can trigger inconsistent flow conditions or cause the mass flow to not be detected at all. A load can be rejected or will not start to be recorded.

Status Indicators

Status Indicator displays the status of record samples and a message about that status.

Status options are as follows:

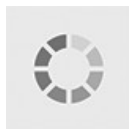

Progress Indicator

H119426—UN—02MAR21

Progress Indicator— displays when a sample is being collected.



Green

N118420—UN—02NOV16

Waiting for Sample— ActiveYield™ is not currently performing any activity.



Gray

H114655—UN—05JAN17

Master OFF— ActiveYield™ is OFF.



Blue

N118021—UN—13JAN17

Collecting Sample— sample recording is being collected.



Green

N118420—UN—02NOV16

Calibration Updated— sample recording is being updated.



Green

N118420—UN—02NOV16

Sample Rejected— sample recording has been rejected. Explanation for rejection displayed.



Amber

N118020—UN—22OCT15

Crop Type Unsupported— crop type is not currently supported.

PR79369,000043D-19-25FEB21

ActiveYield™ | Advanced Settings

Advanced Settings allows you to access further adjustments and less common settings.

NOTE: The ActiveYield™ Factory Reset will not have an impact on the samples collected in Yield Calibration.

Modify When:

- Resetting to the factory defaults.
- There is a discrepancy between the calculated yield values and the measured yield values.

 
Items Accessible on Advanced Settings Page:



Reset

H119409—UN—18JAN17

Reset— reset the system to the factory default.



Correction Value

H119130—UN—10JAN17

Calibration Correction— use to correct discrepancies between calculated and measured yield values.

PR79369,000043E-19-25FEB21

ActiveYield™ | Reset

Reset allows you to delete all stored samples and returns the system to the factory calibration value.

Procedure to Modify:



Reset

H119409—UN—18JAN17

1. Select Reset button.

2. Select desired reset type.



OK

H114654—UN—05JAN17

3. Select OK button to confirm.



Cancel

N118094—UN—18JAN17

NOTE: Select Cancel button to return to the previous screen without making any changes.

PR79369,000043F-19-25FEB21

ActiveYield™ | Calibration Correction

Calibration Correction allows you to fix discrepancies in the ActiveYield™ calculated yield values between two or more machines operating in the same field.

Adjust the offset correction when one machine is calculating yield values more accurately than the other machines when checked by a scale. Do not adjust the offset correction unless there is more than 4% error in the yield values between the most accurate machine and the other machine or machines.


NOTE: The offset correction is only valid until the next accepted load is collected. ActiveYield™ adjusts the yield calibration as more loads are accepted.

Procedure to Determine Offset Correction:

IMPORTANT: Do not adjust the correction value with less than 15 accepted samples completed.

1. Harvest at least 15 accepted samples at a consistent moisture and ground speed.
2. Harvest and scale-check 5 full grain tank loads. Compare the wet weight of each load to the measured scale weight for the same load.

To find the wet weight of each load on the CommandCenter™ display.

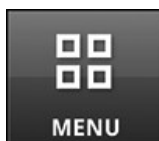

Menu

H113668—UN—22OCT15

- a. Select Menu.



Applications

H133902—UN—30MAR21

- b. Select the Applications tab.



Work Totals

H133903—UN—30MAR21

- c. Select the Work Totals application.



Load Totals

H133904—UN—30MAR21

- d. Select the Load Totals tab.
- e. Note the wet weight for each of the 5 loads.

 
3. Calculate the difference between the wet weight of each load determined by the machine and the measured scale weight of each load as a percentage.

To calculate the difference as a percentage:

- a. Wet Weight - Scale Weight = Difference
- b. Difference ÷ Scale Weight x 100 = Offset Correction Value (as a percentage)
- c. Repeat this calculation for the remaining 4 loads.

4. Calculate the average offset correction value of the 5 loads:

- a. Offset Correction Value 1 + Offset Correction Value 2 + Offset Correction Value 3 + Offset Correction Value 4 + Offset Correction Value 5 = Total
- b. Total ÷ 5 = Average Offset Correction Value (as a percentage)




Correction Value

H133921—UN—31MAR21

5. Enter the average offset correction value into the Correction Value input box.

 Procedure to Modify Offset Correction:



Correction Value

H133921—UN—31MAR21

1. Select to open the number pad and enter the desired correction value.

Minimum: -99%

Maximum: 99%

NOTE: A value of 0% applies no correction.



H116106—UN—27JAN17
OK



N118094—UN—18JAN17
Cancel

2. Select the OK button to confirm. Select the Cancel button to return to the previous screen without making any changes.

PR79369,0000680-19-11MAY21

Chassis Tilt

This procedure calibrates the Chassis Tilt to ensure best machine pitch sensor accuracy. A properly calibrated Chassis Tilt provides the best results for the harvest setting recommendations provided in the Operator's Manual.

Perform Calibration When:

- Each header type is connected to the combine for the first time.
- Fore/Aft Pitch sensor has been replaced.

Items Accessible on Chassis Tilt Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Estimated Time Required	Approximately 1-2 min
-------------------------	-----------------------

PR79369,0000441-19-25FEB21

Chassis Tilt Calibration Procedure

Procedure Requirements:

Engine State	Running
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,0000442-19-25FEB21

Threshing Clearance (Hydraulic)

This procedure calibrates Threshing Clearance by identifying the fully opened and closed positions of the concaves. A properly calibrated Threshing Clearance provides the best results for the harvest setting recommendation. See your Operator's Manual for more details.

IMPORTANT: Calibration should not be completed with round bar concave covers installed. An incorrect zero position results.

Perform Calibration When:

- Preparing for each harvest season.
- Physical concave opening does not match what is being displayed in the cab.
- Concaves are replaced with a new or different set of concaves.
- Threshing clearance sensor, or associated components are replaced/adjusted.

Items Accessible on Threshing Clearance Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 1-2 min

PR79369.0000443-19-25FEB21

Threshing Clearance Calibration (Hydraulic) Procedure

Procedure Requirements:

Engine State	Running
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369.0000444-19-25FEB21

Unloading Auger Engage

This procedure calibrates Unloading Auger Engage by measuring the time it takes to engage the auger when commanded, and then adjusts to make a softer auger engagement.

Perform Calibration When:

- Unloading auger belt, hydraulic, drive, electrical or associated components are replaced/adjusted.
- Unloading auger engagement is more difficult than expected.

Items Accessible on Unloading Auger Engage Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 1-2 min

PR79369.0000445-19-25FEB21

Unloading Auger Engage Calibration Procedure

Procedure Requirements:

Engine State	Running at high idle
Operating State	Unloading auger disengaged Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.

3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,0000446-19-25FEB21

Deck Plate Spacing

This procedure calibrates the deck plate opening by identifying the fully opened and closed positions of the deck plates. Properly calibrated deck plates provide the best results for the harvest setting recommendations provided in the Corn Head Operator's Manual.

Perform Calibration When:

- Beginning each harvest season.
- For each different corn head that was previously attached.
- Deck plate position sensor, or associated components are replaced/adjusted.
- Deck plate opening does not appear to match what is being displayed in the cab.

Items Accessible on Deck Plate Spacing Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 1-2 min

PR79369,0000447-19-25FEB21

Deck Plate Spacing Calibration Procedure

Procedure Requirements:

Engine State	Running at high idle
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,0000448-19-25FEB21

Feeder House Raise Speed

This procedure calibrates Feeder House Raise Speed by providing the rate of response at which the feeder house raise or lower reacts. A properly calibrated Feeder House Raise Speed provides smooth feeder house raise and lowering characteristics and prevents movement that is too fast or slow.

Perform Calibration When:

- Each header type is connected to the combine for the first time.
- Attachments of significant weight are added to or removed from header.

Items Accessible on Feeder House Raise Speed Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 3-4 min

PR79369,0000449-19-25FEB21

Feeder House Raise Speed Calibration Procedure

Procedure Requirements:

Engine State	Running at high idle
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,000044A-19-25FEB21

Header Calibration

This procedure calibrates the coarse and fine movement of the header. Calibration is done by raising and lowering the header to set sensor ranges.

NOTE: Factory calibrations are stored on the header for HD draper series headers. User calibration of these headers is only needed following replacement of a position sensor, controller, or sensor linkage.

Perform Calibration When:

- Header height control sensor or associated components are replaced/adjusted.
- The first time each header type (except for hinged drapers) is connected to an S700 Series Combine.



Begin Calibration

N120226—UN—23FEB16

Items Accessible on Header Calibration Page:

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 1 min

PR79369,000044B-19-25FEB21

Header Calibration Procedure

Procedure Requirements

Engine State	Running at high idle
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,000044C-19-25FEB21

Extendable Platform Header Self-Test

NOTE: *Extendable Platform Header Self-Test is applicable to model years 2018—2020 S700 Series machines only. For model year 2021+ S700 Series and all X-Series machines, perform the **Header** calibration.*

This procedure validates the calibration of the extendable platform header reel and cutterbar position limits. This self-test is required for normal operation. It verifies that the previous calibration points are valid for the header that is connected.

Perform Calibration When:

- Connecting to the Combine for the first time or reconnecting after using a different header.
- Reel position sensor or cutterbar position sensor is replaced.

Items Accessible on Extendable Platform Header Self-Test Page:



Begin Self-Test

H119233—UN—19JAN17

Begin Self-Test— begin calibration procedure.

Requirements— machine state required for calibration.

Details Displayed on Page:

Recommended Interval	Upon Connection
Estimated Time Required	Less than 1 minute

PR79369,00004AE-19-05MAR21

Extendable Platform Header Self-Test Calibration Procedure

Procedure Requirements:

Engine State	Running
Operating State	Parked on a level surface

CAUTION: During the self-test process, the header moves automatically.

To avoid the risk of death or serious injury to a bystander, ensure:

- The machine and header are clear of any obstruction.
- Bystanders are clear of the machine and header.

Procedure Overview:



Begin Self-Test

H119233—UN—19JAN17

1. Select Begin Self-Test to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.

If Calibration Fails:



Retry

N118122—UN—02MAY16

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,00004AF-19-08MAR21

Feeder House Tilt Fore/Aft Range

This procedure calibrates Feeder House Tilt Fore/Aft Range by measuring current commanded and associated range of the feeder house tilt. Performing this calibration improves feeder house tilt range when operating with header height lateral tilt control active.

Perform Calibration When:

- Header is disconnected.
- Feeder house fore/aft tilt sensor or associated components are replaced/adjusted.

Items Accessible on Feeder House Tilt Fore/Aft Range Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 5 min

PR79369,000044D-19-25FEB21

Feeder House Tilt Fore/Aft Range Calibration Procedure

Procedure Requirements:

Engine State	Running at high idle
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,000044E-19-25FEB21

Feeder House Lateral Tilt Range

This procedure calibrates Feeder House Lateral Tilt Range by measuring current commanded and associated range of the feeder house tilt. Performing this calibration improves feeder house tilt range when operating with header height lateral tilt control active.

Perform Calibration When:

- Header is disconnected.
- Feeder house lateral tilt sensor or associated components are replaced/adjusted.

Items Accessible on Feeder House Lateral Tilt Range Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 5 min

PR79369,000044F-19-25FEB21

Feeder House Lateral Tilt Range Calibration Procedure

Procedure Requirements:

Engine State	Running at high idle
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,0000450-19-25FEB21

Feeder House Lateral Tilt Speed

This procedure calibrates Feeder House Lateral Tilt Speed by measuring current commanded and associated speed of the feeder house tilting. Performing this calibration improves feeder house tilt response when operating with header height lateral tilt control active.

Perform Calibration When:

- There is no header connected to the machine.
- Feeder house lateral tilt sensor or associated components are replaced/adjusted.

Items Accessible on Feeder House Lateral Tilt Speed Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 3-4 min

PR79369,0000451-19-25FEB21

Feeder House Lateral Tilt Speed Calibration Procedure

Procedure Requirements:

Engine State	Running at high idle
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.

« Retry

Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,0000452-19-25FEB21

Wings (Folding Corn Head)

This procedure calibrates Folding Corn Head by folding and unfolding the wings of the corn head and measuring associated sensor voltage at each position. This allows the system to detect the position of each wing. This prevents mechanical damage to the combine or equipment by not allowing the header to contact the machine if the wings are folded or engage in any other non-desired condition.

Perform Calibration When:

- First time each header is connected to combine.
- Mechanical adjustments have been made to the head.
- Folding corn head wing position sensor, or associated components are replaced/adjusted.

Items Accessible on Folding Corn Head Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 3-4 min

PR79369,0000453-19-25FEB21

Wings (Folding Corn Head) Calibration Procedure

Procedure Requirements

Engine State	Running at high idle
Operating State	Separator disengaged Parked on a level surface

Procedure Overview:

Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,0000454-19-25FEB21

Reel and Cutterbar Position

This procedure calibrates Reel and Cutterbar by extending/retracting the cutterbar and moving the reel to the minimum and maximum positions to associate the mechanical limits with sensor voltages. Performing this calibration allows the control unit to calculate positions and prevent potential damaging collisions between the Reel and Cutterbar.

Perform Calibration When:

- Reel/Cutterbar position sensors or associated components are replaced/adjusted.

Items Accessible on Reel and Cutterbar Position Page:

Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 3-4 min

PR79369,0000455-19-05MAR21

Reel and Cutterbar Position Calibration Procedure**Procedure Requirements**

Engine State	Combine in field mode Running at high idle
Operating State	Parked on a level surface

Procedure Overview:

Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.

Recommended Measurements

Verify the distance between the reel and the cutterbar.

622X, 625X, 722X, and 725X Extendable Platforms	5 cm (2 in)
630X, 640X, 730X, and 740X Extendable Platforms	6 cm (2-3/8 in)
635X and 735X Extendable Platforms	7 cm (2-13/16 in)



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,0000456-19-05MAR21

Amber Flasher

This calibration measures current demands of the amber lights. A normal current is used to compare the current demands when lights are used to detect if the trailer is attached or for bad bulb detection.

Perform Calibration When:

- Amber Flasher bulbs or associated components are replaced/adjusted.



Begin Calibration

N120226—UN—23FEB16

Items Accessible on Amber Flasher Page:

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 1-2 min

PR79369,0000457-19-25FEB21

Amber Flasher Calibration Procedure

Procedure Requirements:

Engine State	Running
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

- Select Begin Calibration to begin procedure.
- Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

- Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

- Select Retry button.

- Verify that all requirements listed on-screen have been met.
- If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,0000458-19-25FEB21

Concave Air Removal

This procedure calibrates Active Concave Isolation Air Removal by removing air from the hydraulic system of ACI. Perform this calibration if the hydraulic system has been opened to atmosphere for service or repair. Failure to complete this calibration results in less than optimal performance.

NOTE: Before entering concave air removal calibration, verify that leveling cap screws are in storage position, air removal hoses are installed, and the engine is running. See your Operator's Manual for further information.

Perform Calibration When:

- Hydraulic components for the concave system have been serviced or replaced.
- Air has entered the hydraulic system.

Items Accessible on ACI Air Removal Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 3-4 min

PR79369,0000459-19-25FEB21

Concave Air Removal Calibration Procedure

Procedure Requirements:

Engine State	Running
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,000045A-19-25FEB21

Concave Leveling

This procedure calibrates Active Concave Isolation Leveling by identifying the fully opened and closed positions of the concaves. A properly calibrated Active Concave Isolation Leveling provides the best results for the harvest setting recommendation. See your Operator's Manual for more details.

Perform Calibration When:

- Physical concave opening does not match what is being displayed in the cab.
- Threshing clearance sensor or associated components are replaced/adjusted.
- Concaves or associated components are replaced/adjusted.

Items Accessible on ACI Leveling Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration—begin calibration procedure.

Requirements—machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 3-4 min

PR79369,000045B-19-25FEB21

Concave Leveling Calibration Procedure Procedure Requirements

Engine State	Running
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.



Retry

N118122—UN—02MAY16

If Calibration Fails:

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

PR79369,000045C-19-25FEB21

Header Suspension Service Mode

This procedure can be used to release hydraulic pressure from the hinged draper suspension systems. Releasing hydraulic load makes service and maintenance possible and can be controlled for either wing of the header.

CAUTION: There is stored hydraulic energy on the header even when the header is not running and not attached to a combine. Service of the suspension system requires discharging of the system via the header suspension service mode. Follow the instructions to ensure that the system is completely discharged prior to service.

IMPORTANT: Hydraulic suspension service mode drains hydraulic oil from the header into the machine's hydraulic reservoir. The hydraulic reservoir on S-Series machines does not have enough capacity to hold the oil stored in both sides of the header along with the oil already present in the hydraulic reservoir. Service one side of the header at a time.

Perform Calibration When:

- Service or maintenance is required on front end equipment suspension systems.

Items Accessible on Header Suspension Service Mode Page:



Begin Procedure

H127521—UN—08OCT19

Begin Procedure— begin procedure.

Requirements— machine state required for calibration.

Details Displayed on Page:

Recommendations	Ensure that the machine is in park.
	Ensure that the key is in the ON position.
	Ensure that ample volume is available in the hydraulic reservoir for discharge.

mm95366,1655924269487-19-29JUN22

Header Suspension Service Mode | Procedure

Procedure Requirements:

Engine State	Running
Machine State	Parked on a level surface
Header State	Not engaged

Procedure Overview:

- Follow messages on-screen.

CAUTION: Header equipment may be in motion momentarily upon pressure release. To avoid injury, ensure area surrounding the machine is clear.



Accept

H127523—UN—08OCT19

- Press Accept to enable Pressure Control.



Cancel

N118094—UN—18JAN17

Press Cancel to exit header suspension service mode and return to the Begin Procedure screen.

mm95366,1655924311357-19-22JUN22

Header Suspension Service Mode | Pressure Control

Header Suspension Service Mode allows you to use the controls to manipulate hydraulic pressures on front end equipment suspension systems.

IMPORTANT: This procedure is for performing service to the hinged draper suspension system. Adjustments made in suspension service mode do not affect machine performance. Make adjustments to suspension on the Ground Conditions and Gauge Wheels pages.

Dropping pressure in the suspension system drains fluid from the hinged draper.

 
Items Accessible on the Header Suspension Service Mode Page:



Status

N118420—UN—02NOV16

Status— indicates the readiness to begin increasing/decreasing pressure.



Readings

H131370—UN—01DEC20

Readings— displays current pressure readings for each section.



Plus (+) Button

H114791—UN—22JAN20

Plus (+) Button— press and hold the button to increase hydraulic pressure for the desired header section. Releasing the button will stop the increasing of pressure.



Minus (-) Button

H114792—UN—22JAN20

Minus (-) Button— press and hold the button to release hydraulic pressure from the desired header section. Releasing the button will stop the decreasing of pressure.

NOTE: When the header is attached to an S700 Series machine, only one section of the header can be drained at a time.



Done

H127524—UN—08OCT19

Done— press to end header suspension service mode.

mm95366,1655924355391-19-22JUN22

Hinged Draper Wing Position

This procedure calibrates the Hinged Draper Wing Position. This procedure also calibrates the position of the frame wings.

Perform Calibration When:

- A wing position sensor or related component is changed.

Items Accessible on Hinged Draper Wing Position Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration— begin calibration procedure.

Requirements— machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 2 min

mm95366,1655924592446-19-22JUN22

Hinged Draper Wing Position Calibration Procedure

Procedure Requirements:

Engine State	Machine in field mode
Operating State	Header must be disengaged

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.

If Calibration Fails:



Retry

N118122—UN—02MAY16

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

mm95366,1655924907883-19-22JUN22

Gauge Wheel Range

This procedure calibrates the Gauge Wheel Range. This calibration is done by raising and lowering the gauge wheels to set sensor ranges.

Perform Calibration When:

- A gauge wheel position sensor or related component is changed.

Items Accessible on Gauge Wheel Range Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration— begin calibration procedure.

Requirements— machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 2min

mm95366,1655946489961-19-22JUN22

Gauge Wheel Range Calibration Procedure Procedure Requirements:

Engine State	Machine in field mode Running at high idle
Operating State	Parked on a level surface

Procedure Overview:

1. Select Begin Calibration to begin procedure.



Begin Calibration

N120226—UN—23FEB16

2. Follow messages on-screen to complete procedure.
3. Confirm calibration by selecting Save.



Save

N118093—UN—16FEB16

If Calibration Fails:

1. Select Retry button.



Retry

N118122—UN—02MAY16

2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

mm95366,1655946781789-19-23JUN22

Gauge Wheel Speed

This procedure calibrates the extension and retraction rates of the gauge wheels to ensure optimal performance of cut height adjustments.

Perform Calibration When:

- A hydraulic gauge wheel proportional valve or related component has been replaced.
- Mechanical adjustments have been made to the head.

Items Accessible on Gauge Wheel Speed Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration— begin calibration procedure.

Requirements— machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 5 min

mm95366,1655925286352-19-22JUN22

Gauge Wheel Speed Calibration Procedure Procedure Requirements:

Engine State	Machine in field mode Running at high idle
Operating State	Parked on a level surface

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.

If Calibration Fails:



Retry

N118122—UN—02MAY16

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.
3. If calibration fails twice, see your John Deere dealer or qualified service provider.

mm95366,1655925388395-19-22JUN22

Windscreen Position

This procedure calibrates the Windscreen Position.

Perform Calibration When:

- The windscreen position sensor or related components are replaced/adjusted.

3. If calibration fails twice, see your John Deere dealer or qualified service provider.

mm95366,1655925724147-19-22JUN22

Items Accessible on Windscreen Position Page:



Begin Calibration

N120226—UN—23FEB16

Begin Calibration— begin calibration procedure.

Requirements— machine state required for calibration.

Details Displayed on Page:

Recommended Interval	As Needed
Estimated Time Required	Approximately 2 min

mm95366,1655925636929-19-22JUN22

Windscreen Position Calibration Procedure

Procedure Requirements:

Engine State	Machine in field mode Running at high idle
--------------	---

Procedure Overview:



Begin Calibration

N120226—UN—23FEB16

1. Select Begin Calibration to begin procedure.
2. Follow messages on-screen to complete procedure.



Save

N118093—UN—16FEB16

3. Confirm calibration by selecting Save.

If Calibration Fails:



Retry

N118122—UN—02MAY16

1. Select Retry button.
2. Verify that all requirements listed on-screen have been met.

Combine Advisor™ Application

Access Combine Advisor™

Access Application Through Display:



Menu

H113668—UN—22OCT15

1. Menu



Combine Advisor™

H129758—UN—01APR20

2. Combine Advisor™

PR79369,000047E-19-01MAR21

Combine Advisor™ Main Page

Combine Advisor™, formerly Interactive Combine Adjustment 2, is where you can access Optimize Performance, HarvestSmart™, Active Terrain Adjustment™, and Auto Maintain.

Items Accessible on Combine Advisor™ Main Page:

 
NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.



Current Settings

H126941—UN—26SEP19

Current Settings— select Current Settings screen area to access Harvest Settings Application.




Harvest Optimization

H126942—UN—26SEP19

Harvest Optimization— takes you to the Optimize Performance application, formerly Interactive Combine Adjustment.

HarvestSmart is a trademark of Deere & Company
Active Terrain Adjustment is a trademark of Deere & Company

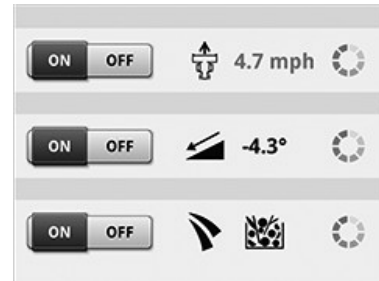

Automation Status

H129164—UN—27FEB20

Automation Status— displays the status of any individual system such as HarvestSmart™, Active Terrain Adjustment™, or Auto Maintain.



Advanced Settings

N118004—UN—22OCT15

Advanced Settings— advanced settings allows you to access further adjustments and less common settings.



HarvestSmart™

H126949—UN—26SEP19

HarvestSmart™—varies ground speed to maintain a constant engine power. These changes are based on the several harvesting factors which maximize productivity and reduce operator fatigue. To access HarvestSmart™ settings, select the screen area to the right of the ON/OFF button.

If used in the following conditions, the system may not perform optimally:

- Extreme Hill Conditions
- Tangled or Lodged Crop Conditions
- Excessively Muddy Conditions

NOTE: Blue text indicates that HarvestSmart™ is controlling the ground speed. Black text indicates that the user is controlling the ground speed.



ON/OFF

H116937—UN—05FEB19

Automation— allows you to enable or disable HarvestSmart™.



HarvestSmart™ Ground Speed

H126950—UN—26SEP19

NOTE: The ground speed indicator shown here indicates that the Ground Speed Limit has been reached.

Active Terrain Adjustment™



Active Terrain Adjustment

H129163—UN—27FEB20

Active Terrain Adjustment™— automatically adjusts the cleaning fan, chaffer, and sieve to compensate for uphill and downhill terrain. These adjustments are dependent upon the machine pitch while harvesting. To access Active Terrain Adjustment™ settings, select the screen area to the right of the ON/OFF button.

NOTE: Blue dial indicates that offset adjustments are being made because of a change in terrain.



ON/OFF

H116937—UN—05FEB19

Automation— allows you to enable or disable Active Terrain Adjustment™.

NOTE: Active Terrain Adjustment™ does NOT require a performance target to be set.



Auto Maintain

H126954—UN—26SEP19

Auto Maintain— automatically adjusts the threshing speed, threshing clearance, cleaning fan, chaffer, and sieve to compensate for changes in grain quality and grain loss throughout the day. To access Auto Maintain settings, select the screen area to the right of the ON/OFF button.

NOTE: Blue dial indicates that offset adjustments are being applied to maintain the performance target.

Active Terrain Adjustment is a trademark of Deere & Company



ON/OFF

H116937—UN—05FEB19

Automation— allows you to enable or disable Auto Maintain.



Live Camera

H113740—UN—05FEB19

Live Camera— allows you to view the clean grain and tailings elevator camera feeds.



History

H125041—UN—05FEB19

History— allows you to view current and past adjustments made by Auto Maintain and Active Terrain Adjustment™ and view a graph of the machine performance for the previous 30 minutes.



Set Performance Target

H126944—UN—26SEP19


Set Performance Target—allows you to set a new performance target at existing loss, grain quality, and engine power levels.

NOTE: Selecting Set Performance Target sets targets for both HarvestSmart™ and Auto Maintain.

Run Page Module

Modules for this application can be added to run pages using Layout Manager.

Example:

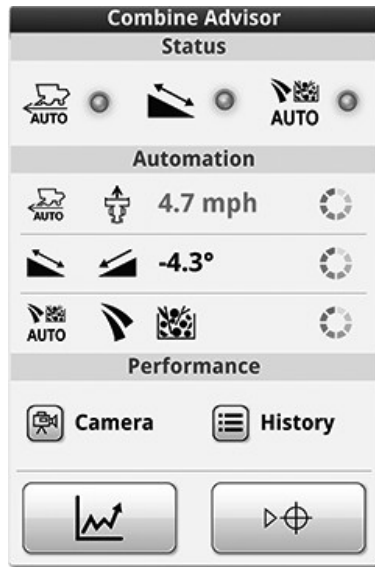

H129165—UN—27FEB20

Combine Advisor™

The run page module takes on a distinct state to reflect current automation status. The page also offers links to HarvestSmart™, Active Terrain Adjustment™, Auto Maintain settings, and links to performance history and graphs.

NOTE: Different run page modules can be available for your application.

Shortcut Keys

Shortcut keys for this application can be added to the shortcut bar using [Layout Manager](#).

Example:



Advisor

H125230—UN—01FEB19

Advisor— use for quick access to Combine Advisor™.

PR79369,000047F-19-01MAR21

Advanced Settings

Advanced Settings allows you to set Tuning Parameters. See your John Deere dealer for information on what to set the parameters to.

PR79369,0000483-19-01MAR21

Grain System Video


Allows you to view the ActiveVision™ Clean Grain

ActiveVision is a trademark of Deere & Company

elevator and the Tailings elevator camera feeds through the Live Camera screen.

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.

Items Accessible on the Grain System Video Page:

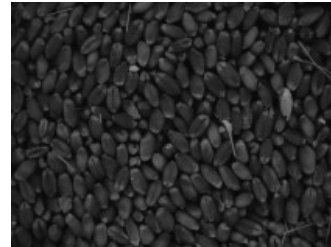

H128686—UN—06FEB20

Live Camera

Live Camera— displays a live view from the selected source.



H113773—UN—30JAN17

Source

Source— allows you to choose Grain Camera, Tailings Camera, or Both.




ON/OFF

H113730—UN—30JAN17

View Grain Analysis— ON/OFF toggle enables the color overlays for grain analysis (only available for Grain Camera).


NOTE: When operating with an Auto Maintain unsupported crop type, the View Grain Analysis is locked in the OFF position.

NOTE: Turning on the Grain Analysis overlays slows down the live video feed.

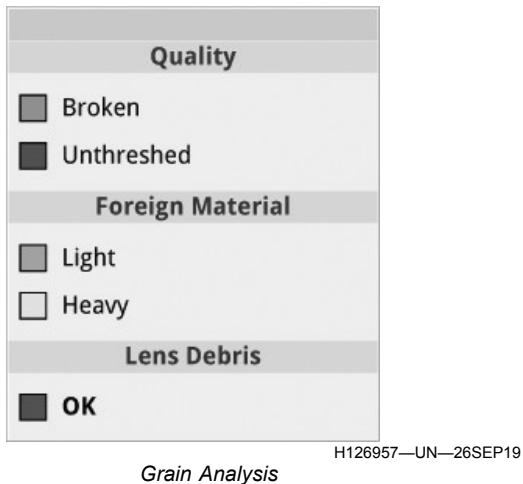

Grain Analysis Legend— displays a color legend for grain quality and foreign material when the Grain Analysis toggle is ON.

NOTE: The Quality and Foreign Material items listed can fluctuate depending on what is available for the selected crop type.

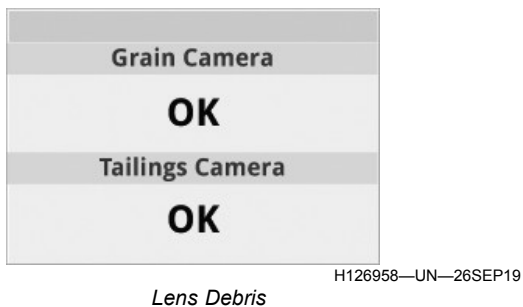

Lens Debris—indicates if the lens needs to be cleaned.

NOTE: Clean the lens every 10 hours or as required. For further information, see the Maintenance section of the Combine Operator's Manual.

PR79369,0000480-19-01MAR21

History

History allows you to view the adjustments Auto Maintain and Active Terrain Adjustment™ have made in the last 12 hours. It also includes viewing graphs of the machine performance for the previous 30 minutes.

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.

Items Accessible on History Page:

Active Terrain Adjustment is a trademark of Deere & Company



- Select to access **Performance** history monitor.



- Select to access **Active** adjustments page.



- Select to access **Completed** adjustments page.

PR79369,0000482-19-01MAR21

Performance


Performance monitor is used to show the performance target and current performance displayed on a timeline. To view the performance monitor, select History and choose Performance tab at top.

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.

Items Accessible on Performance Monitor Page:




Performance/Active/Complete— use the Performance/Active/Completed toggle to switch between Performance Monitor, Active Adjustments, and Completed Adjustments.

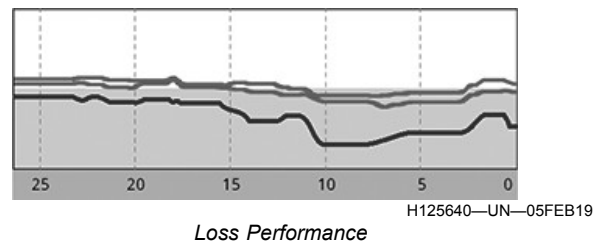

Loss Performance— chart view of the Separator, Shoe, and Tailings.

NOTE: The Loss Performance graphs may not match the VisionTrak display. The information shown on the graph is long-term trends while the VisionTrak displays the current loss.

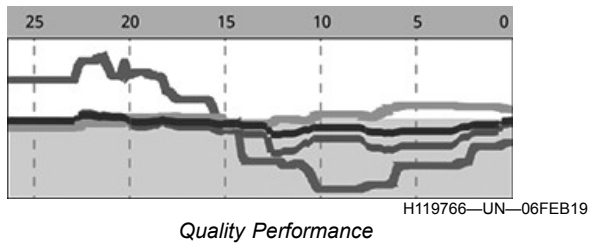


Quality Performance— chart view of the Broken Grain, Foreign Material Light, Foreign Material Heavy, and Unthreshed.


NOTE: The items shown can depend on what is available for the selected crop type.

NOTE: If a parameter is operating in the green area of the chart it indicates that it is operating within the performance target.

 
NOTE: If a parameter is operating in the white area of the chart it indicates that it is not within the performance target. Auto Maintain then adjusts to correct the issue to bring it into the green area.



 Field/Machine Performance Graph— displays Throughput, Productivity, or Yield over a 30 minute time.



Performance Options— select to change the information being displayed.

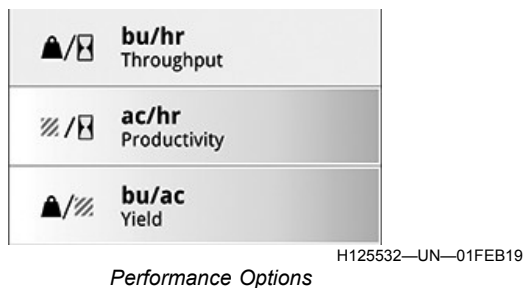

Select between Throughput, Productivity, and Yield graphs.

PR79369,0000481-19-01MAR21

Active

The Active tab shows adjustments currently applied by Auto Maintain and Active Terrain Adjustment™. The list includes the setting that was adjusted, the reason the adjustment was made, and how long the adjustment has been applied.

Items Accessible on History | Active Page:

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.



Performance/Active/Complete— use the Performance/Active/Completed toggle to switch between Performance Monitor, Active Adjustments, and Completed Adjustments.



System Icon— an icon indicates if the row is for Active Terrain Adjustment™ or Auto Maintain.



Offset— indicates the current adjustments applied to the settings.



Reason— indicates why the adjustment is being applied.

In Progress 3:22 

Timestamp

H127034—UN—26SEP19

Timestamp— indicates how long since the first adjustment was made for the corresponding reason.

To view [Offset Details](#) on a particular adjustment, select an adjustment in the History List.



Close

H116936—UN—30JAN17

Select to close.

PR79369,0000484-19-01MAR21

Completed

The Completed tab shows adjustments Auto Maintain and Active Terrain Adjustment™ have made in the last 12 hours. The list includes the system that made the adjustment, the reason the adjustment was made, and how long ago it was completed.

Items Accessible on History | Completed Page:

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.



H125228—UN—05FEB19

Performance/Active/Completed

Performance/Active/Complete— use the Performance/Active/Completed toggle to switch between Performance Monitor, Active Adjustments, and Completed Adjustments.



System Icon

 
H132327—UN—11NOV20

Feature— indicates which system made the adjustment.



H129180—UN—27FEB20


Active Terrain Adjustment™ Offset— Active Terrain Adjustment™ made a temporary adjustment.



Auto Maintain Offset

H125509—UN—01FEB19

 Auto Maintain Offset— Auto Maintain made a temporary adjustment.



Auto Maintain Permanent Adjustment

H125507—UN—01FEB19

Auto Maintain— Auto Maintain made a permanent adjustment.



Reason

H125565—UN—01FEB19

Reason— indicates why the adjustment was applied.

11 mins ago

Timestamp

H125593—UN—01FEB19

Completed— indicates how long ago the adjustment was completed.

To view [Offset Details](#) or [Adjustment Details](#) on a particular adjustment, select an adjustment in the History List.



Close

H116936—UN—30JAN17

Select to close.

Procedure to Modify:



Scroll Arrows

H116672—UN—30JAN17

1. Use Scroll Arrows to move up and down list.

NOTE: The most recent adjustment is listed at the top.



Close

H116936—UN—30JAN17

2. Select to close.

PR79369,0000485-19-01MAR21

Offset Details

Offset Details allows you to view current and past adjustments, the reasons they were made, and when they were made. If the adjustment is "Active", the adjustments are currently applied to the settings. If the adjustment is "Complete", the adjustments have been removed and the settings were reverted to their previous value.

NOTE: Only some items show on this page depending on available options.

Items Accessible on the Offset Details Page for Active Adjustments:



Active Offset

H125594—UN—01FEB19

Active Offset— shows the currently applied offsets.



Auto Maintain Reason


H129176—UN—27FEB20



Active Terrain Adjustment™ Reason

H129175—UN—27FEB20

Reason— indicates why the adjustment is applied (the current pitch for Active Terrain Adjustment™ and the current detected issues for Auto Maintain).

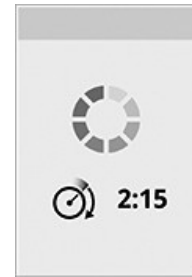

Timestamp

H125579—UN—01FEB19

Timestamp— shows how long since the first offset was applied for the corresponding reason.



Live Camera

H113740—UN—05FEB19

Live Camera— view the Clean Grain Elevator and Tailings elevator camera feeds.

Items Accessible on the Offset Details Page for Completed Adjustments:



Active Offset

H125594—UN—01FEB19

Active Offset— shows the maximum offset made to each setting for the corresponding reason.



Timestamp

H127981—UN—05NOV19

Timestamp— shows how long ago the last offset was removed for the corresponding reason.



Duration

H119866—UN—30JAN17

Duration— shows how much time passed from when the first offset was made to when the last offset was removed for the corresponding reason.



Auto Maintain Reason

H129176—UN—27FEB20

Active Terrain Adjustment is a trademark of Deere & Company



H129175—UN—27FEB20

Active Terrain Adjustment™ Reason

Reason— indicates the reasons the listed offsets were made.



H113740—UN—05FEB19

Live Camera

Live Camera— view the Clean Grain Elevator and Tailings elevator camera feeds.

PR79369,0000486-19-01MAR21

Adjustment Details

Adjustment Details allows you to view which adjustments have been made and the reasons the adjustments were made. It shows when the adjustment was completed.

NOTE: This Adjustment Details screen is only applicable to permanent Auto Maintain adjustments.

Items Accessible on the Adjustment Details Page:



H125251—UN—06FEB19

Adjustment

Adjustment— indicates the adjustment that was made.



H125252—UN—01FEB19

Before

Before— indicates the setting value before the adjustment.



H125253—UN—01FEB19

After


After— indicates the setting value after the adjustment.



H129176—UN—27FEB20

Auto Maintain Reason

Reason— indicates the issues Auto Maintain adjusted for.

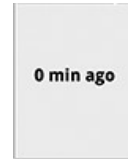

H129117—UN—16JUL20

Timestamp

Timestamp— displays when the adjustment was made.



H113740—UN—05FEB19

Live Camera

Live Camera— view the clean grain elevator and tailings elevator camera feeds.


PR79369,0000487-19-01MAR21

Lens Debris

Lens Debris shows the amount of dirt or smudges on the grain and tailings camera lens.

Lens Debris States:


The ActiveVision™ cameras have three levels of lens debris indicators that allow you to monitor the status of cameras.

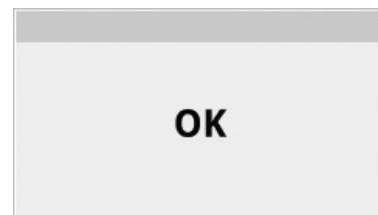

H126959—UN—26SEP19

OK

OK— indicates that there is little to no debris on the lens.

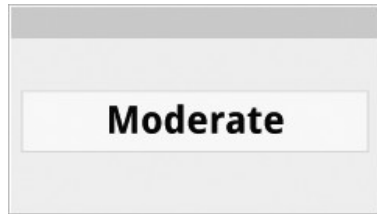

Moderate

H126960—UN—26SEP19

Moderate— indicates that there is some debris on the lens. Auto Maintain continues functioning, but it is recommended to clean your cameras as soon as possible.



Severe

H126961—UN—26SEP19

Severe— indicates that there is a significant amount of debris on the lens. Auto Maintain turns OFF and is not functional until the cameras are cleaned.

NOTE: Clean the lens every 10 hours or as required. Cleaning frequency varies depending on a number of factors, including operating conditions, weather, and crop conditions. For further information, see the Maintenance section of the Combine Operator's Manual.

PR79369,0000488-19-01MAR21

Automation Status

Automation Status shows the status of HarvestSmart™, Active Terrain Adjustment™, and Auto Maintain.

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.



HarvestSmart™ Status

H126945—UN—26SEP19

HarvestSmart™ Status— select to open.



Active Terrain Adjustment™

H129170—UN—27FEB20

HarvestSmart is a trademark of Deere & Company
Active Terrain Adjustment is a trademark of Deere & Company

Active Terrain Adjustment™ Status— select to open.



Auto Maintain Status


H126947—UN—26SEP19

Auto Maintain Status— select to open.

PR79369,0000489-19-01MAR21

HarvestSmart™ Settings

HarvestSmart™ settings can be used to adjust the HarvestSmart™ system. To access HarvestSmart™ settings, select the screen area to the right of the ON/OFF button.

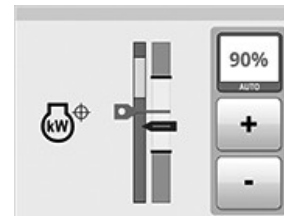


Engine Power Target

H127982—UN—05NOV19

Engine Power Target— sets target engine power for HarvestSmart™ to maintain.


NOTE: When managing engine power target while grain loss is enabled and changing the engine power target, the engine power target turns blue.

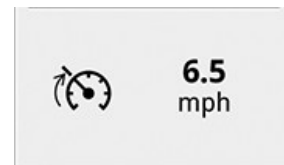

Speed Limit

H118568—UN—20JAN17

Speed Limit— sets the maximum allowable ground speed for HarvestSmart™ to operate.

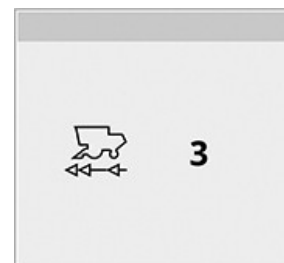

Response Aggressiveness

H133501—UN—02MAR21

Response Aggressiveness— controls how quickly the

HarvestSmart™ system responds to changes in harvesting conditions.



H125233—UN—01FEB19

Manage Target With Grain Loss

Manage Target With Grain Loss— select to have HarvestSmart™ adjust the speed to maintain grain loss levels.

NOTE: The target will be displayed in blue while being managed.

Refer to the Performance Monitor within the Combine Advisor™ application to view the performance target and performance history for all Combine Advisor™ systems. VisionTrak™ on the corner post display is now only a visual guide. You can refer to the VisionTrak™ display periodically to know when an increase or decrease in the total loss amount occurs.

PR79369,000048A-19-02MAR21

Speed Limit

Speed Limit sets the maximum allowable ground speed for HarvestSmart™ to operate.

Modify When:


- You want to set the maximum operating speed.
- You do not want the machine running over a specific speed because the terrain is rough or feeding conditions exist that could plug the header.

Example: The header becomes limited at 8 km/h (5 mph). Set ground speed to 7.5 km/h (4.7 mph).

- You want to prevent the machine from going too fast through places in the field where there is little to no crop. This results in the machine going too fast when crop yields return to normal. Set the speed limit slightly higher than the expected harvesting speed.

Example: You expect to harvest at an average speed of 5.5 km/h (3.4 mph). Set the ground speed to 7 km/h (4.3 mph).

Procedure to Modify:

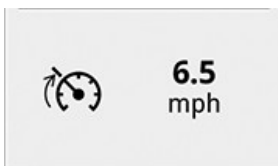

H118568—UN—20JAN17

Speed Limit

1. Select to adjust Speed Limit.

HarvestSmart is a trademark of Deere & Company



Speed Limit

H118570—UN—31JAN17

2. Select plus (+) to increase or minus (-) to decrease the desired ground speed.

Minimum— 2.0 km/h (1.2 mph)

Maximum— 14.0 km/h (8.7 mph)

Increments— 0.1 km/h (0.1 mph)

Set speed limit slightly higher than your expected average harvesting speed.

Example: If you would like to harvest at 5.5 km/h (3.4 mph) set speed limit to 7 km/h (4.4 mph). If you would like to harvest at 8 km/h (5.0 mph) set speed limit to 10 km/h (6.2 mph).



Close

H118559—UN—20JAN17

3. Select to close.

Alternative Procedure to Modify:



Speed Limit

H118573—UN—20JAN17

1. Select to activate Armrest Adjustment Dial.



Armrest Adjustment Dial

H115034—UN—28MAR16

2. Use Armrest Adjustment Dial to select desired ground speed.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

Minimum— 2.0 km/h (1.2 mph)
 Maximum— 14.0 km/h (8.7 mph)
 Increments— 0.1 km/h (0.1 mph)

PR79369,000048B-19-01MAR21

Response Aggressiveness

Response Aggressiveness controls how quickly the HarvestSmart™ system responds to changes in harvesting conditions. Response Aggressiveness is determined together with the HarvestSmart™ performance target.

Setting 1— Minimum

Setting 2— Lowered Setting

Setting 3— Default

Setting 4— Increased

Setting 5— Maximum

Modify When:

Increase When:

You want the machine to react faster to changes in harvesting conditions.

Decrease When:

You want the machine to react slower to changes in harvesting conditions.

Procedure to Modify:



H133501—UN—02MAR21

Response Aggressiveness

1. Select to access Response Aggressiveness.



H125211—UN—05FEB19

Aggressiveness

2. Select plus (+) to increase or minus (-) to decrease desired aggressiveness.

Minimum— 1

Maximum— 5

Increments— 1

HarvestSmart is a trademark of Deere & Company

NOTE: Response Aggressiveness will default back to 3 when a new performance target is set.



Close

H118559—UN—20JAN17

3. Select to close.

PR79369,000048C-19-02MAR21

HarvestSmart™ | Automation

Automation allows you to enable or disable the HarvestSmart™ system.

Modify When:

- Performing a turn at a headland. Press header activation button 1 to raise the header and maintain a static ground speed. Move the multi-function lever to take control of the ground speed.
- You want to maintain a constant ground speed while unloading. Press reconfigurable button.
- Preparing to cross waterways or rough terrain. Press reconfigurable button to maintain a static ground speed or press header activation button 1 to raise the header and maintain a static ground speed. Move the multi-function lever to take control of the ground speed.

Procedure to Modify:



Toggle Button

H113848—UN—04JAN17

1. On the Combine Advisor Main Page, select the toggle button under HarvestSmart™ to turn HarvestSmart™ automation on or off.

NOTE: The remaining steps of this procedure can only be performed if HarvestSmart™ is turned on.



Header Activation Buttons

H128157—UN—16JAN20

2. Press header activation button 2 or 3 on the front of the multi-function lever to lower the header.



AutoTrac™ Resume Button

H117005—UN—15APR16

3. Engage AutoTrac™ and enter crop.

NOTE: To achieve the best performance, engage HarvestSmart™ after the machine has begun harvesting and material has reached the rotor.




Reconfigurable Buttons

H128156—UN—14JAN20

4. Press reconfigurable button on the side of the multi-function lever to activate HarvestSmart™. The machine will slowly move to the previously determined average harvesting speed.

Press reconfigurable button at any time to pause HarvestSmart™. The machine will continue harvesting and maintain a static ground speed.

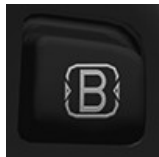

Reconfigurable Button B

T8T8737—UN—18DEC19

NOTE: Activate HarvestSmart™ is assigned to reconfigurable button B by default. This function can be assigned to any reconfigurable single position button in Controls Setup. If you want to assign HarvestSmart™ to header activation buttons 2 or 3, see your John Deere dealer.



Header Activation Button 1

T8T8738—UN—18DEC19

5. Press header activation button 1 on the front of the multi-function lever to raise the header.

AutoTrac is a trademark of Deere & Company

HarvestSmart™ Will Pause If:

- The reconfigurable button on the side of the multi-function lever is pressed while HarvestSmart™ is active.
- The header activation button 1 is pressed while HarvestSmart™ is active.
- The unloading auger is engaged. When the unloading auger is shut off, HarvestSmart™ will resume automatic control of the ground speed.

NOTE: If the engine becomes overloaded while the unloading auger is engaged, HarvestSmart™ will slow the ground speed. HarvestSmart™ will not increase the ground speed until the unloading auger is turned off.

HarvestSmart™ Will Disengage If:

 
- The multi-function lever is moved.
- The ground speed is lowered below 2 km/h (1.2 mph).
- The brake pedals are pressed.

PR79369,000048D-19-01MAR21

Engine Power Target

Engine Power Target sets the target engine power that HarvestSmart™ should maintain.

Items Accessible on Engine Power Target:



Engine Power Meter

H128154—UN—16DEC19

Engine Power Meter— shows engine power usage and maximum engine power setting. The system does not allow the target to be set in the yellow or red.



Target Indicator

H118584—UN—20JAN17

Target Indicator— shows the Engine Power Target.

NOTE: The target will be displayed in blue while being automatically managed.

HarvestSmart is a trademark of Deere & Company



H118585—UN—20JAN17

Usage Indicator


Usage Indicator— shows current engine power usage.

Modify When:

- Operating with a draper platform:
Near 85-95% in consistent conditions.
Near 80-90% in changing conditions.
Near 75-85% in down crop or tough feeding conditions.
- Operating with an auger platform:
Near 80-90% in consistent conditions.
Near 75-85% in changing conditions.
Near 70-80% in down crop or tough feeding conditions.
- Less experienced operator. Set a lower engine power target.
- Bad crop flow in the header causes inconsistent feeding of the rotor. Set a lower engine power target.
- Consistent, smooth feeding allows you to set a higher engine power target.
- Harvesting in dry conditions, level terrain, even feeding, and standing crop. Operating at a higher engine power target can promote more capacity and efficiency.
- Harvesting in muddy conditions, steep terrain, slug feeding, and lodged crop. Operating at a lower engine power target allows for more consistent performance.

NOTE: If harvesting in mud, steep hills, or adverse conditions, targeting near 85-95% is recommended to allow for additional power consumption and more consistent system performances.

Procedure to Modify:

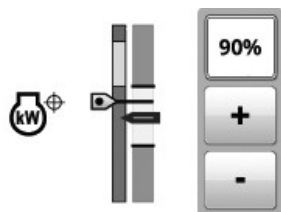

H128155—UN—16DEC19

Engine Power Target

1. Select to adjust the Engine Power Target.



H127986—UN—20NOV19

Engine Power Target


2. Select plus (+) to increase or minus (-) to decrease the Engine Power Target.

Minimum— 60%

Maximum— 100%

Increments— 1%

Alternative Procedure to Modify:

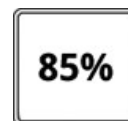

H118572—UN—20JAN17

Engine Power Target

1. Select to activate Armrest Adjustment Dial.



H115034—UN—28MAR16

Armrest Adjustment Dial

2. Use Armrest Adjustment Dial to select desired engine power.

- Turn dial clockwise to increase value.
- Turn dial counterclockwise to decrease value.

Minimum— 60%

Maximum— 100%

Increments— 1%


PR79369,000048E-19-01MAR21

Active Terrain Adjustment™ Settings


Active Terrain Adjustment™ allows cleaning fan, chaffer, and sieve to adjust automatically depending on the machine pitch when harvesting in uphill or downhill terrain. To access Active Terrain Adjustment™ settings, select the screen area to the right of the ON/OFF button.

Items Accessible on Active Terrain Adjustment™ Settings Page:

Active Terrain Adjustment is a trademark of Deere & Company

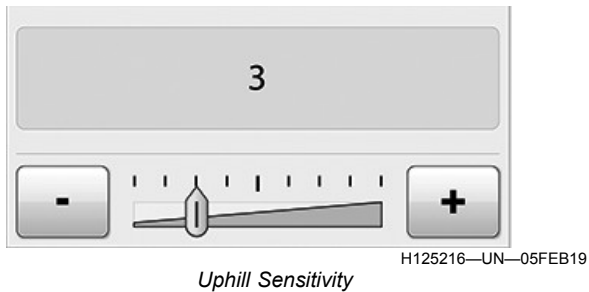

Uphill Sensitivity— accelerates or decelerates the system reaction to vehicle pitch while harvesting uphill to help reduce grain loss and tailings.

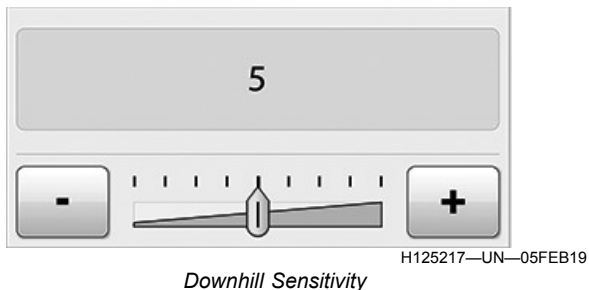

Downhill Sensitivity— accelerates or decelerates the system reaction to vehicle pitch while harvesting downhill to help maintain harvested grain cleanliness.



Offset Tuning | Chaffer— this feature allows changes to the size of adjustments made by Active Terrain Adjustment™ to the chaffer.



Offset Tuning | Sieve— this feature allows changes to the size of adjustments made by Active Terrain Adjustment™ to the sieve.



Offset Tuning | Cleaning Fan— this feature allows changes to the size of adjustments made by Active Terrain Adjustment™ to the speed of the cleaning fan.

PR79369,000048F-19-01MAR21

Uphill Sensitivity

Uphill Sensitivity allows you to accelerate or decelerate system reaction to vehicle pitch, helping to reduce grain loss and tailings while traveling uphill.

NOTE: Higher sensitivity values react more quickly to changes in pitch and lower sensitivity react slower to changes in pitch while harvesting uphill.

Modify When:


- Active Terrain Adjustment™ system is adjusting too soon or too late, causing grain loss or tailings to be higher while harvesting uphill than on level land.
- Grain tank is not clean while harvesting uphill. Adjust the sensitivity lower.
- Cleaning shoe loss or tailings levels are elevated while harvesting uphill. Adjust the sensitivity higher.

Setting 1— no adjustments (-100)

Setting 5— adjusts at default pitch levels (0)

Setting 9— adjusts twice as soon as default pitch levels (100)

Procedure to Modify:

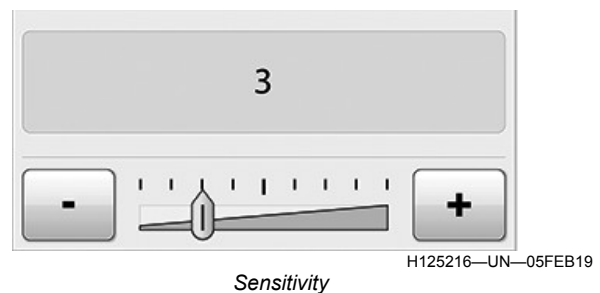

Select plus (+) to increase or minus (-) to decrease desired sensitivity.

PR79369,0000490-19-01MAR21

Downhill Sensitivity

Downhill Sensitivity allows you to accelerate or decelerate system reaction to vehicle pitch, helping to maintain grain cleanliness while harvesting downhill.

NOTE: Higher sensitivity values react more quickly to changes in pitch and lower sensitivity values react slower to changes in pitch, while harvesting downhill.

Modify When:


- Active Terrain Adjustment™ system is adjusting too soon or too late, causing grain loss or tailings to be higher while harvesting downhill than on level land.
- Cleaning shoe loss or tailings levels are elevated while harvesting downhill. Adjust the sensitivity lower.
- Grain tank is not clean while harvesting downhill. Adjust the sensitivity higher.

Setting 1— no adjustments (-100)

Setting 5— adjusts at default pitch levels (0)

Setting 9— adjusts twice as soon as default pitch levels (100)


Procedure to Modify:

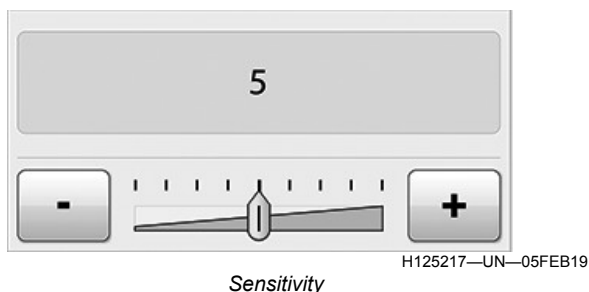

Select plus (+) to increase or minus (-) to decrease desired sensitivity.

PR79369,0000491-19-01MAR21

 HarvestSmart™ Status



HarvestSmart™ Status is used to communicate the current state of the HarvestSmart™ system. HarvestSmart™ Status also allows you to view requirements that must be met for the system to operate properly and errors that are affecting the system. To see more details, select HarvestSmart™ Status.

Items Displayed on HarvestSmart™ Status Page:

Active Terrain Adjustment is a trademark of Deere & Company
HarvestSmart is a trademark of Deere & Company

NOTE: Not all possibilities are listed here. To open a list of current statuses, select the HarvestSmart™ Status.



ON/OFF

H113730—UN—30JAN17

 
Automation ON/OFF— indicates whether the system is on or off.



Idle

H126948—UN—26SEP19

Idle— displayed when system is in standby state or preparing targets status.



Active

H126949—UN—26SEP19

Active— displayed when the system is in the active state or maintaining state.



Issue

H114663—UN—05JAN17

Issue— displayed when the system has one or more severe faults present.



Ground Speed Limit

H126950—UN—26SEP19

Ground Speed Limit— displayed when the ground speed limit is reached.

HarvestSmart™ Requirements:

- HarvestSmart™ automation must be ON.
- Performance Target must be set.
- Machine must be ready to harvest:
 - Separator must be engaged.
 - Header must be engaged.
 - Engine must be set to high idle.
- Multi-function lever must be set to at least 2 km/h (1.25 mph)



Not Met Icon

H114663—UN—05JAN17

An icon appears when a requirement is not met.



Met Icon

H114662—UN—05JAN17

Once a condition has been met, a green checkmark appears.



Close

H114674—UN—06FEB19

Select to close.

PR79369,0000492-19-01MAR21

Active Terrain Adjustment™ Status

Active Terrain Adjustment™ Status is used to communicate the current state of the Active Terrain Adjustment™ system. Active Terrain Adjustment™ Status also allows you to view requirements that must be met for the system to operate properly and errors affecting the system.

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.



H129170—UN—27FEB20

Active Terrain Adjustment™ Status

To see more details select Active Terrain Adjustment™ Status.

Items Displayed on Active Terrain Adjustment™ Status Page:

NOTE: Not all possibilities are listed here. To open a list of current statuses, select the Active Terrain Adjustment™ Status.



ON/OFF

H113730—UN—30JAN17

Automation ON/OFF— indicates whether the system is on or off.



Idle

H126951—UN—26SEP19

Idle— displayed while not applying offsets (due to lack of incline/decline).



Active

H129163—UN—27FEB20

Active— displays an uphill or downhill indication of what the system is accommodating for.



Issue

H114663—UN—05JAN17

Issue— displayed when the system has one or more severe faults.

Active Terrain Adjustment™ Requirements:

- Active Terrain Adjustment™ automation must be ON.
- Machine must be ready to harvest:
 - Separator must be engaged.
 - Header must be engaged.
 - Engine must be set to high idle.
- Header must be below record stop height.



Message

H114663—UN—05JAN17

A message appears when a requirement is not met.



Green Checkmark

H114662—UN—05JAN17

Once a condition has been met, a green checkmark appears.



Header Details

H118541—UN—30JAN17

Requirement not met for "Header must be below record stop height", select to access Header Details page.



Close

H114674—UN—06FEB19

Select to close.

PR79369,0000493-19-01MAR21

Auto Maintain Status

Auto Maintain Status is used to communicate the current state of the Auto Maintain system. Auto Maintain Status also allows you to view requirements that must be met for the system to operate properly.

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.



Auto Maintain Status

H126947—UN—26SEP19

Select the Auto Maintain status to see more details.

Items Displayed on Auto Maintain Status Page:

NOTE: Not all faults are listed here. To open a list of current statuses, select the Auto Maintain Status.



ON/OFF

H113730—UN—30JAN17

Automation ON/OFF— indicates whether the system is on or off.



Idle

H126953—UN—26SEP19

Idle— displayed when system is on and no issues are detected.



Active

H126954—UN—26SEP19

Active— displayed when the system is accommodating for loss or quality.



Issue

H114663—UN—05JAN17

Issue— displayed when the system has one or more severe faults present.



Target Acquisition Process

H126955—UN—26SEP19

Target Acquisition Process— displayed when the system is acquiring performance targets.

Auto Maintain Requirements:

- Auto Maintain automation must be ON.
- Performance Target must be set.
- Machine must be ready to harvest:
 - Separator must be engaged.
 - Header must be engaged.
 - Engine must be set to high idle.
- Header must be below record stop height.
- Must be in the consistent crop conditions:
 - Machine must have steady ground speed.
 - Crop flow must be present.



Not Met Icon

H114663—UN—05JAN17

An icon appears when a requirement is not met.



Met Icon

H114662—UN—05JAN17

Once a condition has been met, a green checkmark appears.



Close

H116936—UN—30JAN17

Select to close.

PR79369,0000494-19-01MAR21




Stop

H126962—UN—26SEP19

Optimize Performance

Optimize Performance, formerly Interactive Combine Adjustment, recommends adjustments to the user based on one or more reported issues.

Items Accessible on Optimize Performance Main Page:

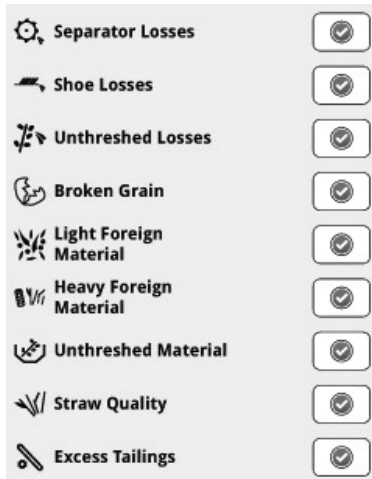

Performance Issues

H127037—UN—26SEP19

Performance Issues— select to report one or more performance issues that apply to the machine.



Current Settings

H127038—UN—26SEP19

Current Settings— select to open Harvest Settings application.



Solution

H125517—UN—01FEB19

Solutions— displays after one or more performance issues are reported. Allows you to toggle through the system recommended solutions and apply them to the machine.

Stop— select to clear all issues.

NOTE: Stop is only selectable when one or more performance issues are selected.



Apply

H126963—UN—26SEP19

Apply— select to apply the currently selected solution.

NOTE: Apply is only selectable when one or more performance issues are selected.



Close

H116936—UN—30JAN17

Select to close.

NOTE: If you close Optimize Performance with issue severities selected, the system remembers your current selections. Reopening triggers the system to find recommendations based on those selections.

PR79369,0000495-19-01MAR21

Offset Tuning Chaffer

Offset Tuning | Chaffer adjusts the Step Size amount to the chaffer when commanded by the Active Terrain Adjustment™ system.

Include in Automation

Modify When:

Include in Automation— check if you want Active Terrain Adjustment™ to adjust the chaffer. If you do not want Active Terrain Adjustment™ adjusting the chaffer, uncheck Include in Automation.

Procedure to Modify:

Uncheck to prevent Active Terrain Adjustment™ from adjusting the chaffer.



Include in automation

Include in automation

H126183—UN—24APR19

Active Terrain Adjustment is a trademark of Deere & Company

NOTE: "Include in automation" defaults to different states depending on the crop type.

NOTE: If "Include in automation" is checked, the word "Managed" appears on the main screen. If not checked, then the word "Ignored" appears on-screen

Step Size

Modify When:

NOTE: Adjust the step sizes if sensitivity adjustments are ineffective.

NOTE: Step sizes are the size of individual adjustments made by Active Terrain Adjustment™, not the total range of the adjustments or number of adjustments.

 
Increasing Step Size:

Use when maximum sensitivity setting is not achieving desired results, or when all but one component (fan speed, chaffer, or sieve) needs more adjustment than the others.

Decreasing Step Size:

Use when minimum sensitivity setting is not achieving desired results, or when all but one component (fan speed, chaffer, or sieve) needs less adjustment than the others.

Procedure to Modify:



Step Size

H125580—UN—01FEB19

1. To open number pad, select Step Size and enter desired value.



Chaffer

H114645—UN—05JAN17

Minimum: 1

Default: Based on crop being harvested.

Maximum: 3

Increment: 1



Close

H114674—UN—06FEB19

2. Select to close.

PR79369,0000496-19-01MAR21

Offset Tuning Sieve

Offset Tuning | Sieve adjusts the Step Size amount to the sieve when commanded by the Active Terrain Adjustment™ system.

Include in Automation

Modify When:

Include in Automation— check if you want Active Terrain Adjustment™ to adjust the sieve. If you do not want Active Terrain Adjustment™ adjusting the sieve, uncheck Include in Automation.

Procedure to Modify:



Include in automation

H126183—UN—24APR19

Include in automation

Uncheck to prevent Active Terrain Adjustment™ from adjusting the sieve.

NOTE: "Include in automation" defaults to different states depending on the crop type.

NOTE: If "Include in automation" is checked, the word "Managed" appears on the main screen. If not checked, then the word "Ignored" appears on-screen

Step Size

Modify When:

NOTE: Adjust the step sizes if sensitivity adjustments are ineffective.

NOTE: Step sizes are individual increments, not the total range of the adjustments or number of adjustments.

Increasing Step Size:

Use when maximum sensitivity setting is not achieving desired results, or when all but one component (cleaning fan, chaffer, or sieve) needs more adjustment than the others.

Decreasing Step Size:

Use when minimum sensitivity setting is not achieving desired results, or when all but one component (cleaning fan, chaffer, or sieve) needs less adjustment than the others.

Procedure to Modify:

Active Terrain Adjustment is a trademark of Deere & Company

2

Step Size

H125580—UN—01FEB19

1. Select Step Size to open number pad and enter desired value.



Sieve

H114646—UN—05JAN17

Minimum: 1

Default: Based on crop being harvested.

Maximum: 3

Increment: 1



Close

H114674—UN—06FEB19

2. Select to close.

PR79369,0000497-19-01MAR21

Cannot Maintain Target

Combine Advisor™ Cannot Maintain Target states that Combine Advisor™ may not be able to maintain the Performance Target in the current conditions.

Items Accessible on Cannot Maintain Target Page:



Set New Auto Maintain Target

H126964—UN—26SEP19

Set New Auto Maintain Target

Set New Auto Maintain Target— starts the Set Targets process. It has the same function as pressing the "Set Performance Target" button.



Check Manual Adjustments

H126965—UN—26SEP19

Check Manual Adjustments

Check Manual Adjustments— opens the Harvest Settings Outside Configuration Overlay and turns OFF Auto Maintain.



Auto Maintain OFF

H126969—UN—26SEP19

Auto Maintain OFF

Auto Maintain OFF— closes this overlay and turns off Auto Maintain.

Next »

Next

H113840—UN—06FEB19

Select to proceed.

Procedure to Modify:

Set New Auto Maintain Target



Set New Auto Maintain Target

H126964—UN—26SEP19

Set New Auto Maintain Target

1. Select to set a new Auto Maintain target.

Next »

Next

H113840—UN—06FEB19

2. Select to proceed.

Check Manual Adjustments



Check Manual Adjustments

H126965—UN—26SEP19

Check Manual Adjustments

1. Select to check manual adjustments.

Next »

Next

H113840—UN—06FEB19

2. Select to open Harvest Settings Outside Configuration

Turn Off Auto Maintain



Auto Maintain OFF

H126969—UN—26SEP19

Auto Maintain OFF

1. Select to turn off Auto Maintain.

Next »

Next

H113840—UN—06FEB19

2. Select to proceed.

PR79369,0000498-19-01MAR21

Offset Tuning Cleaning Fan

Offset Tuning | Cleaning Fan adjusts the Step Size amount to the fan speed when commanded by the Active Terrain Adjustment™ system.

Active Terrain Adjustment is a trademark of Deere & Company

NOTE: The Cleaning Fan is always "Included in Automation", so the word "Managed" always appears on the Active Terrain Adjustment™ settings page

Modify When:

NOTE: Adjust the step sizes if sensitivity adjustments are ineffective

NOTE: Step sizes are individual increments, not the total range of the adjustments or number of adjustments.

 
Increasing Step Size:

Use when maximum sensitivity setting is not achieving desired results, or when all but one component (fan speed, chaffer, or sieve) needs more adjustment than the others.

Decreasing Step Size:

Use when minimum sensitivity setting is not achieving desired results, or when all but one component (fan speed, chaffer, or sieve) needs less adjustment than the others.

Procedure to Modify:



Step Size

H119128—UN—05JAN17

1. Select to open Step Size page.



Step Size

H118542—UN—05JAN17

2. Select desired value.



Fan Speed

H114644—UN—05JAN17

Minimum: 20 n/min

Default: Based on crop being harvested.

Maximum: 50 n/min

Increment: 10 n/min



Close

H114674—UN—06FEB19

3. Select to close.

PR79369,0000499-19-01MAR21

Set Performance Target

Set Performance Target allows you to inform the system that existing grain loss, grain quality, and engine power levels are acceptable. The system then monitors feedback from the sensors to understand what are acceptable performance levels.

NOTE: Acquiring a performance target may take about 30 minutes in a field with varying crop conditions. If you are satisfied with an existing performance target, you do not need to set a new performance target when changing fields.

NOTE: Some of the following items displayed are only listed if machine is equipped with the associated option.

Modify When:

- You optimize the machine; set a new performance target after optimization is complete.
- Auto Maintain has detected several issues while harvesting and you are still satisfied with the current performance.
- Moving to a new field with a significant change in yield, moisture, or variety.
- You want to automatically set the Engine Power Target for HarvestSmart™.
- Ground speed is oscillating while HarvestSmart™ is engaged.

Procedure to Modify:

NOTE: If there is not a valid target available, you are prompted to set a new target when you turn on HarvestSmart™ or Auto Maintain.

1. Operate machine at the preferred harvest speed/ engine power level, grain quality, and grain loss levels.



Set Performance Target

H119889—UN—31JAN17

2. Select Set Performance Target.

NOTE: Pressing Set Performance Target also calibrates the grain loss monitor by setting the VisionTrak™ monitor target.

NOTE: Targets are saved by crop type and during key and battery cycles.

NOTE: If automation systems are not able to maintain the current performance target, Cannot Maintain Target is shown.

PR79369,000049A-19-01MAR21

Performance Issues

Performance Issues let you change the severity of the issues you are experiencing to generate recommendations in Optimize Performance. Select all issues you are currently experiencing.

Items Accessible:

Select Severity— select to change the severity of the issue you are experiencing.

NOTE: Any time the severity changes from what was previously reported, the system goes through the "Finding Recommendations" state.



OK

H125174—UN—01FEB19

 
OK— machine is optimally running to your specifications.



Minor

H125175—UN—01FEB19

Minor



Moderate

H125176—UN—01FEB19

Moderate

 


Major

H125177—UN—01FEB19

Major


Types of Performance Issues:



Separator Losses

H125191—UN—05FEB19

 Separator Losses— select if grain is exiting the machine through the separator.



Shoe Losses

H125192—UN—05FEB19

 
Shoe Losses— select if grain is exiting the machine through the cleaning shoe.



Unthreshed Losses

H125193—UN—05FEB19


Unthreshed Losses— select if grain on the ground is remaining attached to the plant material.



Broken Grain

H125194—UN—05FEB19

 
Broken Grain— select if damaged or broken grain is in the grain tank.



Light Foreign Material

H125195—UN—05FEB19

 Light Foreign Material— select if there are pieces of light and fluffy material in the grain tank.



Heavy Foreign Material

H125196—UN—05FEB19

 
Heavy Foreign Material— select if pieces of cob or short sections of stem/stalk are in the grain tank.



Unthreshed Material

H125197—UN—05FEB19

Unthreshed Material— select if grain in the grain tank is remaining attached to cob, grain head, or pod.



Straw Quality

H125198—UN—05FEB19

Straw Quality— select if you would like to improve straw quality.



Excess Tailings

H125199—UN—05FEB19

Excess Tailings

Excess Tailings— select if you have high tailings volume.

PR79369,000049B-19-01MAR21

Separator Losses

Separator Losses are loose kernels that leave the machine through the discharge/overshot beater. A large amount of free grain at the rear of the grain return pan is an indicator.

How to Determine:

- View Separator Losses on the VisionTrak™ display.
- Perform Power Shutdown, refer to Operator's Manual for more information.

PR79369,000049C-19-01MAR21

Shoe Losses

Shoe Losses is grain that has exited the machine through the cleaning shoe, either by air current or by contact with the chaffer.

How to Determine:

- View cleaning Shoe Losses on the VisionTrak™ display.
- Perform Power Shutdown, refer to Operator's Manual for more information.

NOTE: Always measure the losses in normal working conditions. Measure losses over the complete working width several times. If swathing straw, also measure where the chaff is spread.

PR79369,000049D-19-01MAR21

Unthreshed Losses

Unthreshed Losses is grain on the ground that remains attached to cob, grain head, or pod.

How to Determine:

- Perform a power shutdown, refer to Operator's Manual for more information.
- Inspect the processed material on the ground behind the machine.

PR79369,000049E-19-01MAR21

VisionTrak is a trademark of Deere & Company

Broken Grain

Broken Grain is damaged or broken grain in the grain tank.

How to Determine:

- View the grain tank and inspect the grain sample.

PR79369,000049F-19-01MAR21

Light Foreign Material

Light Foreign Material is pieces of light and fluffy material in the grain tank with the clean grain. These pieces are something that you would expect air to blow away.

How to Determine:

- View the grain tank and inspect the grain sample.

PR79369,00004A0-19-01MAR21

Heavy Foreign Material

Heavy Foreign Material is pieces of cob or short sections of stem/stalk in the grain tank with the clean grain. These pieces are something that you would not expect air to blow away.

How to Determine:

- View the grain tank and inspect the grain sample.

PR79369,00004A1-19-01MAR21

Unthreshed Material

Unthreshed Material is grain in the grain tank remaining attached to cob, grain head, or pod.

How to Determine:

- View the grain tank and inspect the grain sample.

PR79369,00004A2-19-01MAR21

Straw Quality Issues

Windrow mode only. Straw is excessively broken, too short, or tangled.

How to Determine:

- Inspect straw windrow.

PR79369,00004A3-19-01MAR21

Excess Tailings

Tailings volume is high enough to cause tailings full alarm or higher than expected by operator.

How to Determine:

- View tailings on the VisionTrak™ display.
- Check composition of tailings:
 - A high amount of free grain in tailings can indicate sieve clearance is too low.
 - Unthreshed kernels can indicate a threshing issue.
 - High tailings volume with only chaff can indicate high chaff load on the cleaning shoe.

NOTE: Properly set machines have some tailings volume.

PR79369,00004A4-19-01MAR21

Solutions

Recommended Solutions allows you to see a complete list of suggested solutions and specifics about the intended adjustment.

Items Accessible on "Solution Display":



Progress Indicator

H116307—UN—25JAN17

Finding Recommendations— displays the progress indicator while the system is searching for recommended solutions.



Recommended Solutions

H125496—UN—01FEB19

Recommended Solutions— allows access to list of suggested solutions.



Left




Right

Left and Right controls— allows you to scroll through the complete list of suggested solutions, showing adjustment specifics.



Recommended Solution

H125497—UN—01FEB19

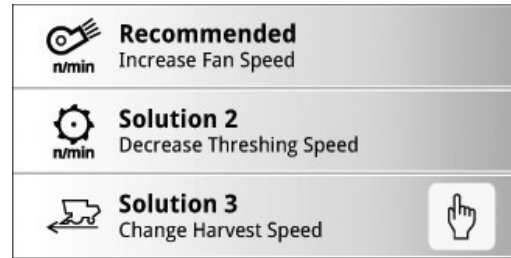

H127029—UN—26SEP19

Select Solution

Select to view the entire list of recommended solutions.

NOTE: Solutions that require you to adjust settings manually, or climb out of the cab, have a slightly different appearance within the Solutions multi-pane toggle view. The "hand icon", "Manual", or "Out of Cab" wording on the screen indicate these solutions. These types of adjustments replace the "Apply" button with a "Next" button, indicating there can be more actions required.

NOTE: For out-of-cab adjustments, refer to the machine Operator's Manual

Ground Speed Adjustments

Separator Vane Adjustments

Out-of-Cab Adjustments



Stop

H126962—UN—26SEP19

Stop— select to clear all issues.

NOTE: If you stop the optimization process at any time, a message appears on the display.



Apply

H126963—UN—26SEP19

Apply— select to apply the currently selected recommended solution.

NOTE: When the adjustment is complete, a message appears on the display and you are returned to a blank issue selection page.

PR79369,00004A5-19-01MAR21

Ground Speed Adjustment

A Ground Speed Adjustment requires you to make manual machine adjustments. These adjustments are

necessary for the Combine Advisor™ application to auto-advance to the next step of the process.

Ground Speed Adjustments:



H125240—UN—01FEB19

Change Ground Speed to 3 mph


Optimize Performance recommends a ground speed adjustment.



H127027—UN—26SEP19

Next

Select to accept the Ground Speed adjustment.

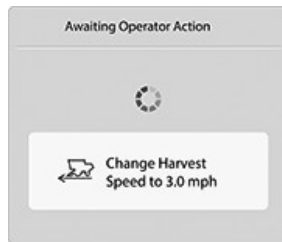

H128110—UN—21NOV19

Awaiting Operator Action

You make the speed adjustment. Once the speed adjustment is made, Optimize Performance shows a message and returns to a blank issue selection screen.



H127028—UN—26SEP19

Back

To choose a different recommendation, select to return to the Solution list.



H126962—UN—26SEP19

Stop

Select to clear all issues.



Close

H116310—UN—30JAN17

Select to close the Optimize Performance application.

NOTE: Optimize Performance will resume in the same place when you open the application again after closing.

PR79369,00004A6-19-01MAR21

Separator Vane Adjustments

Separator Vane Adjustments may require you to make manual machine adjustments. These adjustments are necessary in order for the Optimize Performance application to auto-advance to the next step of the process.

Separator Vane Adjustments:



H131006—UN—29JUL20

Separator Vane Adjustment

Optimize Performance recommends a Separator Vane adjustment.



H127027—UN—26SEP19

Next

Select to accept the Separator Vane adjustment.



H131004—UN—29JUL20

Separator Must Be Disengaged

Optimize Performance prompts you to disengage the separator.

NOTE: If the separator is already disengaged, Optimize Performance skips this step and automatically adjust the Separator Vanes.



Applying Solution

H125181—UN—01FEB19

Optimize Performance makes the separator vane adjustment. Once the adjustment is completed, Optimize Performance shows a message and returns to a blank issue selection page.



Back

H127028—UN—26SEP19

To choose a different recommendation, select to return to the Solution list.



Stop

H126962—UN—26SEP19

Select to clear all issues.



Close

H116310—UN—30JAN17

Select to close the Optimize Performance Application.


NOTE: Optimize Performance will resume in the same place when you reenter after closing.

PR79369,00004A7-19-01MAR21

Out-of-Cab Adjustments

Out-of-Cab Adjustments are machine optimization adjustments that you make outside of the cab.

Out-of-Cab Adjustments:

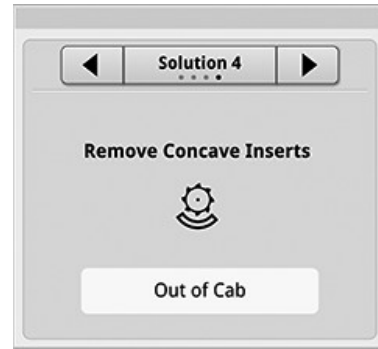

Remove Concave Inserts

H125598—UN—01FEB19

To perform Out-of-Cab adjustments, refer to Operator's Manual.


IMPORTANT: Shut down the machine before performing the recommended adjustments.



Next

H127027—UN—26SEP19

Select to accept Out-of-Cab adjustment.

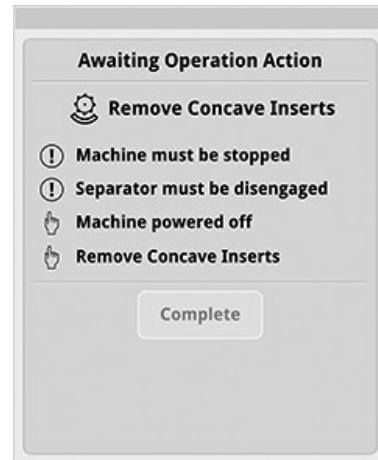

Awaiting Operator Action

H125599—UN—01FEB19



Message

H116316—UN—25JAN17

NOTE: An icon appears when a requirement is not met.



Hand Icon

H125188—UN—01FEB19

NOTE: Out-of-Cab adjustments needed are shown as hand icons.



H125600—UN—01FEB19

Awaiting Operator Action



Green Checkmark

H116336—UN—30JAN17

NOTE: As you meet the prerequisites, a checkmark replaces the original icon.



H125601—UN—01FEB19

Adjustment Completed



H125586—UN—01FEB19

Complete

Select "Complete" to confirm that the adjustment has been performed.



Back

H127028—UN—26SEP19

To choose a different recommendation, select to return to the Solutions list.



Stop

H126962—UN—26SEP19

Select to clear all issues.

NOTE: Turning off the machine prompts an "Optimization Complete" display to be present when machine is turned back on. The machine considers the adjustment to be complete. Select "OK" to close the window. Select "Optimize Performance" to return to the Optimize Performance application.



Close

H116310—UN—30JAN17

Select to close the Optimize Performance application.

NOTE: Optimize Performance will resume in the same place when you open the application after closing.

PR79369,00004A8-19-01MAR21

Auto Maintain Settings

Auto Maintain | Settings allows you to set the response aggressiveness and sensitivity levels for grain loss, broken grain, and foreign material. To access Auto Maintain settings, select the screen area to the right of the ON/OFF button.

Items Accessible on Auto Maintain | Settings Page:

Instructions—describes how aggressiveness and sensitivity affect the system.



Target Acquisition

H126152—UN—21NOV19

Target Acquisition Process—this state displays when the system is ON and in the Target Acquisition Process.

NOTE: Acquiring performance targets is always enabled, allowing the system to set HarvestSmart™ or Auto Maintain targets at any time.



Message

H114663—UN—05JAN17

System Fault— this state displays when the system has one or more severe faults present.



H125211—UN—05FEB19

Response Aggressiveness

Response Aggressiveness— controls how frequently Auto Maintain adjusts when issues are present.



H125212—UN—05FEB19

Grain Loss Sensitivity

Grain Loss Sensitivity— the amount of change in grain loss needed for Auto Maintain to detect an issue.



H125213—UN—05FEB19

Broken Grain Sensitivity

Broken Grain Sensitivity— the amount of change in broken grain needed for Auto Maintain to detect an issue.



H125214—UN—05FEB19

Foreign Material Sensitivity

Foreign Material Sensitivity— the amount of change in foreign material needed for Auto Maintain to detect an issue.

PR79369,00004A9-19-01MAR21

Response Aggressiveness

Response Aggressiveness controls how frequently Auto Maintain adjusts the machine when an issue is present.

Setting 1— Minimum

Setting 2— Lowered

Setting 3— Default

Setting 4— Increased

Setting 5— Maximum

Modify When:

Increase When:

Auto Maintain is not adjusting frequently enough to resolve the issues that are found.

Decrease When:

Auto Maintain is adjusting too frequently to resolve the issues that are found.

Procedure to Modify:



H119857—UN—30JAN17

Aggressiveness

Select Plus (+) button to increase and Minus (-) button to decrease.

PR79369,00004AA-19-01MAR21

Grain Loss Sensitivity

Grain Loss | Sensitivity controls how fast the system recognizes grain loss before making an automatic change.

Setting 1— Minimum

Setting 2— Lowered

Setting 3— Default

Setting 4— Increased

Setting 5— Maximum

Modify When:

Increase When:

You see shoe loss or separator loss and Auto Maintain is not detecting the issue.

Decrease When:

Auto Maintain is detecting a shoe loss or separator loss issue and the performance of that area is still acceptable to you.

Procedure to Modify:



H119857—UN—30JAN17

Sensitivity

Select Plus (+) button to increase and Minus (-) button to decrease.

PR79369,00004AB-19-01MAR21

Broken Grain Sensitivity

Broken Grain | Sensitivity controls how fast the system recognizes broken grain.

Setting 1— Minimum

Setting 2— Lowered

Setting 3— Default

Setting 4— Increased

Setting 5— Maximum

Modify When:

Increase When:

You see an unacceptable amount of broken grain in the grain tank and Auto Maintain is not detecting an issue.

Decrease When:

Auto Maintain is detecting a broken grain issue and the performance of that area is still acceptable to you.

Procedure to Modify:



Sensitivity

H119857—UN—30JAN17

Select Plus (+) button to increase and Minus (-) button to decrease.

PR79369,00004AC-19-01MAR21

- Light Foreign Material (chaff, small bits of leaves and hulls).
- Heavy Foreign Material (cobs, larger leaves, and sticks or stems).
- Unthreshed Material in the grain tank.

Procedure to Modify:



Sensitivity

H119857—UN—30JAN17

Select Plus (+) button to increase and Minus (-) button to decrease.

PR79369,00004AD-19-01MAR21

Foreign Material Sensitivity

Foreign Material | Sensitivity controls how fast the system recognizes foreign material.

Setting 1— Minimum

Setting 2— Lowered

Setting 3— Default

Setting 4— Increased

Setting 5— Maximum

Modify When:

Increase When:

You see an unacceptable amount of one or more of the following and Auto Maintain is not detecting an issue.

- Light Foreign Material (chaff, small bits of leaves and hulls).
- Heavy Foreign Material (cobs, larger leaves, and sticks or stems).
- Unthreshed Material in the grain tank.

Decrease When:

Auto Maintain is detecting one or more of the following and the performance of that area is still acceptable to you.

Combine Overview

Combine Overview

NOTE: Underscored text identifies that additional information is available within this section or another section of this publication.

Combine Overview outlines the controls and features found inside the cab. Knowledge of these items helps you to correctly operate the machine as well as enhancing your comfort and operating experience.

NOTE: Some items below are only displayed if machine is equipped with the associated option.

Items Accessible on the Combine Overview Page:



Front Console

H118294—UN—22DEC16

Front Console— items located in the front of you near the steering wheel.



H118296—UN—22DEC16

Navigation Bar— items on navigation bar located below the monitor.

Corner Post Display— on the front right-hand corner post.



H118301—UN—22DEC16

CommandARM™

CommandARM™ Console and Display— switches for machine operation attached to the right-hand side of the seat.



H118300—UN—22DEC16

Multi-Function Lever

Multi-Function Lever— items on the multi-function lever located on the CommandARM™.



H118299—UN—22DEC16

Navigation Bar

CommandARM is a trademark of Deere & Company



Right-Hand Cab Items

H118302—UN—22DEC16



Left-Hand Cab Items

H118303—UN—22DEC16

Right-Hand Cab Items— connectors and ports for information input and powering auxiliary devices, on the right-hand fender well near the window.

Left-Hand Cab Items— items located on the left-hand side of the front console.



Overhead Controls

H118297—UN—22DEC16

Overhead Controls— items located in the headliner above you.

Seat Controls— allow adjustment to the seat to increase your operating comfort.

PR79369,00003E4-19-08MAR21



Seat Controls

H118295—UN—22DEC16

Front Console

NOTE: Some items below are only displayed if machine is equipped with the associated option.

Key Switch

Adjusting Steering Wheel

Operate Lights

Operate Turn Signals, Horn, and High/Low Beam

Operate Windshield Wiper/Washer

Operate Ether Injection (If Equipped)



Footrest

H121072—UN—18MAY17

Footrest— place feet on footrests as needed to decrease fatigue and improve comfort.

PR79369,00003E5-19-08MAR21

Corner Post Display

NOTE: Some items below are only displayed if machine is equipped with the associated option.



Left-Hand Turn Indicator

H117815—UN—28MAR16

Left-Hand Turn Indicator— left-hand turn signal is active. Simultaneous operation of right-hand/left-hand turn indicators shows your warning lights are activated.



Stop Operation

H117819—UN—28MAR16

Stop Operation (red)— illuminates and requires the machine be stopped at once and the problem corrected. Diagnostic trouble code is shown on the armrest display until the problem is resolved.



Operator Alert

H117817—UN—28MAR16

Operator Alert (yellow)— illuminates and flashes when a problem exists with the machine. Requires the machine be stopped at earliest convenience. Diagnostic trouble code is shown on the armrest display.



Information Alert

H117818—UN—28MAR16

Information Alert (blue)— illuminates and flashes when diagnostic trouble code is active. Alerts you to be aware of a condition. When the alert is acknowledged, the screen message disappears.



Right-Hand Turn Indicator

H117816—UN—28MAR16

Right-Hand Turn Indicator— right-hand turn signal is active. Simultaneous operation of right-hand/left-hand turn indicators shows your warning lights are activated.



Trailer Lights Indicator

H117820—UN—28MAR16

Trailer Lights Indicator— when the trailer harness is connected, lights illuminate when turn signals and brakes are applied.



High-Beam Indicator

H117807—UN—28MAR16

High-Beam Indicator— illuminates when the high beam lights are activated.



Exhaust Filter Cleaning Indicator

H113811—UN—04JAN17

Exhaust Filter Cleaning Indicator— illuminates when exhaust filter system is actively performing exhaust filter cleaning.



Engine Power Meter Indicator

H117822—UN—22DEC16

Engine Power Meter Indicator— indicates the

percentage of power the engine is using at any given time.



H117823—UN—22DEC16

Engine Temperature Indicator

Engine Temperature Indicator— indicates the engine temperature. Green area indicates normal operating temperature, red indicates overheating condition.



H117824—UN—22DEC16

Fuel Gauge Indicator

Fuel Level Indicator— indicates the amount of fuel remaining in the fuel tank.



H118085—UN—22DEC16

Diesel Exhaust Fluid (DEF) Level Indicator

Diesel Exhaust Fluid (DEF) Level Indicator— indicates how much fluid remains in the tank.



H117826—UN—22DEC16

Transmission Gear or Range Indicator

Transmission Gear or Range Indicator, 3-Speed

Push-Button Shift Transmission (PBST) Machines— 1, 2, or 3 illuminates indicating the current gear selected.



H118558—UN—22DEC16

Transmission Gear or Range Indicator

Transmission Gear or Range Indicator, 2-Speed ProDrive™ Machines— 1 or 2 illuminates indicating the current gear selected.



H117827—UN—28MAR16

Park Brake Indicator

Park Brake Indicator— illuminates when the park brake is engaged.



H117828—UN—28MAR16

Neutral Indicator

Neutral Indicator— illuminates when the neutral position is selected.



H126457—UN—10JUN19

Engine Speed Indicator

Engine Speed Indicator— indicates the engine rpm speed.



H126458—UN—10JUN19

Vehicle Speed Indicator

Vehicle Speed Indicator— indicates the machine speed (km/h or mph).




H116357—UN—22DEC16

Header Height Numeric Display

Header Height Numeric Display— when running on ground height sensing psi or bar will be illuminated depending on units selected. In off ground height

sensing the numbers will fluctuate according to sensor feedback and neither psi or bar will be illuminated.

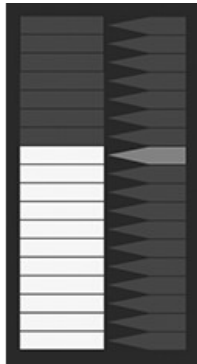

Header Height Display

H116356—UN—20DEC16

Header Height Display— the green arrow is the set point and the white bars represent the current position.



Header Activation Number

H116354—UN—19DEC16

Header Activation Number— indicates the currently selected activation button.



Deck Plate Position Resume

H116362—UN—19DEC16

Deck Plate Position Resume— illuminates when deck plate position resume is enabled.



Auto Reel Speed

H116360—UN—19DEC16

Auto Reel Speed— illuminates when auto reel speed is enabled.



Reel Resume

H116361—UN—19DEC16

Reel Resume— illuminates when reel the resume is enabled.



Header Height Resume

H116353—UN—19DEC16

Header Height Resume— illuminates when the header height resume is enabled.



Header Height Sensing

H116358—UN—19DEC16

Header Height Sensing— illuminates when header height sensing is active.



Active Header Float

H117843—UN—22JUN17

Active Header Float— illuminates when the active header float is active.



Lateral Tilt Display

H116359—UN—19DEC16

Lateral Tilt Display— indicates position of the feeder house frame.




Shoe Loss Indicator

H117835—UN—22DEC16

Shoe Loss Indicator— indicates grain loss from the shoe.

NOTE: Shoe loss indicator is part of the VisionTrak™ system.

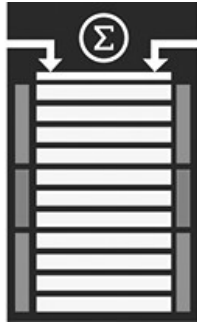

Total Loss Indicator

H117836—UN—22DEC16

Total Loss Indicator— indicates the combined grain loss from the shoe and the separator area.

NOTE: Total loss indicator is part of the VisionTrak™ system.



Separator Loss Indicator

H117837—UN—22DEC16

Separator Loss Indicator— indicates the grain loss from the separator area.

NOTE: Separator loss indicator is part of the VisionTrak™ system.



Tailings Volume Indicator

H117838—UN—22DEC16

Tailings Volume Indicator— indicates the volume of tailings return.

NOTE: Tailings Volume indicator is part of the VisionTrak™ system.

PR79369,00003E6-19-08MAR21

CommandARM™ Console and Display

NOTE: Some items below are only displayed if machine is equipped with the associated option.

Harvesting Controls— controls for the cleaning fan, threshing clearance, separator speed, and other harvesting functions.

HVAC— select to adjust temperature, fan speed, and air flow mode inside of cab and view outside temperature.

Engine and Ground Drive— controls for engine speed, park brake, and ground drive.

Lights— select to access light presets that you can configure.

Console and Display— select for adjustments to the console and display.

Radio— select to access radio presets that you can configure.

CommandARM is a trademark of Deere & Company

PR79369,00003E7-19-08MAR21

Multi-Function Lever

NOTE: Some items below are only displayed if machine is equipped with the associated option.



Movement

H126543—UN—20JUN19

Movements—multi-function lever can be pushed forward to move the machine forward, pulled backward to move the machine in reverse, and placed in the middle position to put the machine in a neutral state.



Quick Stop Switch

H117033—UN—15APR16

Quick Stop Switch— allows you to simultaneously shut OFF multiple systems in the case of an emergency. When the separator is engaged this button also brings the machine to a quick, controlled stop.



Unloading Auger Switch

H117003—UN—22DEC16


Unloading Auger Swing Switch— allows you to swing unloading auger in or out manually or automatically.



Unloading Auger Drive Switch

H123658—UN—02MAR18

Unloading Auger Drive Switch— allows you to engage or disengage the unloading auger and indicator light.

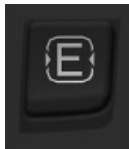

Programmable Button

H117006—UN—28MAR16

Programmable Buttons— depending on the machine options and header types, the buttons are programmable to different functions. (See [Controls Setup Application](#) in Onscreen Help for more information.)



AutoTrac™ Resume Button

H117005—UN—15APR16

AutoTrac™ Resume Button— allows you to activate the AutoTrac™ system.

AutoTrac™



Header Raise/Lower Switch

H116348—UN—19DEC16

Header Raise/Lower and Tilt Switch— allows you to raise or lower header and tilt the feeder house.



Reel Raise/Lower, Reel Fore/Aft

H116349—UN—19DEC16

Reel Raise/Lower, Reel Fore/Aft (If Equipped) Switch— allows you to control the position of the reel.



Feeder House Backshaft Speed, Adjustable Corn Head Deck Plates

H116349—UN—19DEC16

Feeder House Backshaft Speed, Adjustable Corn Head Deck Plates Switch (If Equipped)— allows you to control feeder house backshaft speed or adjustable corn head deck plates.



Header Activation Buttons

H116346—UN—19DEC16

Header Activation Buttons— allows you to activate multiple automatic header control systems by pressing one of the three buttons.

PR79369,00003E8-19-08MAR21

Navigation Bar



Dial

H117902—UN—29MAR16

Adjustment Dial— turn the Adjustment Dial to increase or decrease selected input field. The button located in the center of the adjustment wheel is called the Close Button. Pressing this button closes pages on the CommandCenter™.

CommandCenter is a trademark of Deere & Company



Home Page Scroll

H117903—UN—29MAR16

Home Page Scroll— press to scroll through custom Run Pages.



Header

H117904—UN—22JAN20

Header— press to open the Header Application.



Harvest Settings

H117905—UN—29MAR16

Harvest Settings— press to open the Harvest Settings Application.



H117906—UN—29MAR16

Engine— press to open the Engine Application.



Grain Handling

H117907—UN—29MAR16

Grain Handling— press to open the Grain Handling Application.



Residue Management

H117908—UN—29MAR16

Residue Management— press to open the Residue Management Application.



Folding

H117909—UN—29MAR16

Folding— press to open the Folding Application.



Work Monitor

H117910—UN—29MAR16

Work Monitor— press to open the Work Monitor Application.



Control Setup

H117911—UN—29MAR16

Control Setup— press to open the Control Setup Application.



HVAC

H117912—UN—29MAR16

HVAC— press to open the HVAC Application.



Lights

H117913—UN—29MAR16

Lights— press to open the Lights Application.



Audio

H117914—UN—29MAR16

Audio— press to open the Audio Application.



Phone

H117915—UN—29MAR16

Phone— press to open the Phone Application.



Video

H117916—UN—29MAR16

Video— press to open the Video Application.

PR79369,00003E9-19-08MAR21



USB Input

N122945—UN—05MAY16

USB Input— used for playing music from an USB source on the radio when that mode is selected on the radio.

Right-Hand Cab Items



Auxiliary Outlet

N128645—UN—15FEB17

Auxiliary Outlet— used when connecting accessories (12 V).



USB Outlet

N122943—UN—02MAY16

USB Outlet— used for exporting information to a flash drive, loading information to the display, and display programming.



2630 Ethernet Input

H121337—UN—18MAY17

2630 Ethernet— used to connect a 2630 display as a secondary monitor.



4600 Extended Monitor Port

H121338—UN—18MAY17

4600 Extended Monitor Port— used to connect a 4600 extended monitor for a secondary display.



Auxiliary (AUX) Input

N122944—UN—05MAY16


Auxiliary (AUX) Input— used for playing music from an auxiliary source on the radio when that mode is selected on the radio.



Auxiliary Display Connector

H121339—UN—18MAY17

Auxiliary Display Connector— used for connecting auxiliary equipment.

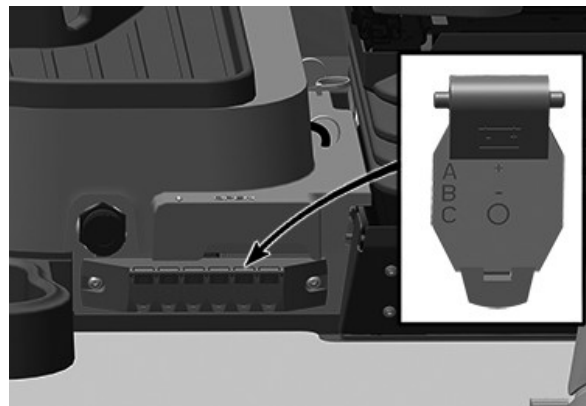

Auxiliary Power Outlet Strip

H118079—UN—19JAN17

Auxiliary Power Outlet Strip— is equipped with six additional electrical outlets which are at the lower rear of the right-hand window. These outlets provide key-switched or unswitched power.

NOTE: Maximum combined current draw for switch power is 20 amps and unswitched power is 30 amps.

- Spade terminal (A) is direct positive power at all times.
- Spade terminal (B) is ground.
- Spade terminal (C) is auxiliary power (key switch ON).



Emergency Exit

H121414—UN—18MAY17

Emergency Exit— allows you to exit the combine in case of emergency.


- Pull down to remove the emergency exit device.
- Use the hammer to break the window and exit cab if doors do not open.
- Use the knife in the handle to cut seat belts if they do not unbuckle.



Manual Storage Location

H118069—UN—15APR16

Manual Storage Location— compartment located along rear cab wall that stores the Operator's Manual.

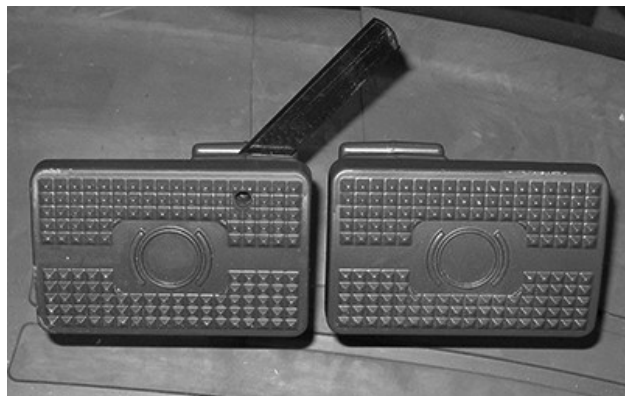


Brake Pedals

H118068—UN—15APR16

Brake Pedals— allows you to stop the machine.

Leave the brake pedals unlocked for field use and locked together when transporting.

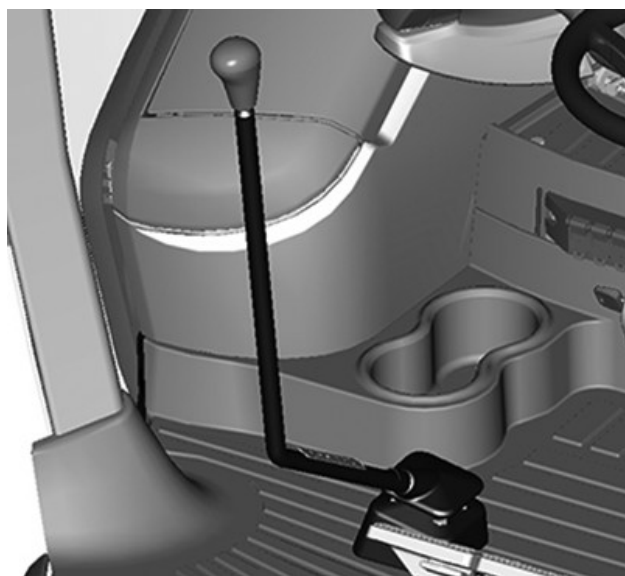

Gearshift Lever

H118076—UN—15APR16


Gearshift Lever (If Equipped)— allows you to manually shift gears.

IMPORTANT: Stop the machine and move the multi-function lever to neutral before shifting gears.

When shifting the gearshift lever, the shift pattern is a straight line with detents for 1, 2, and 3. Less resistance is felt for neutral between 1st and 2nd gears.

PR79369,00003EA-19-08MAR21

Left-Hand Cab Items

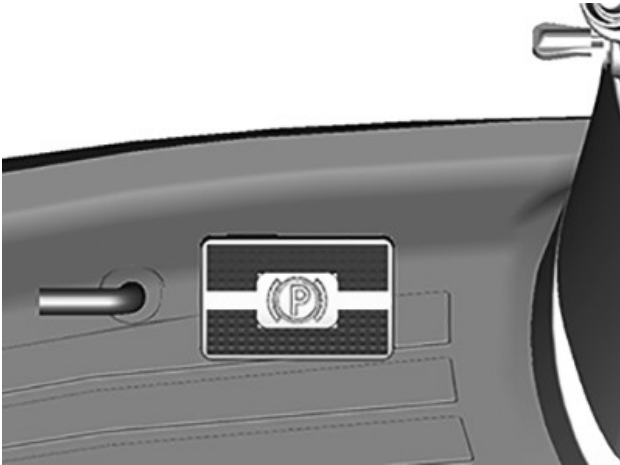

H118077—UN—15APR16

Manual Park Brake

Manual Park Brake (If Equipped)— allows you to manually set the parking brake.

IMPORTANT: Machine is equipped with manual engage and disengage the park brake pedals. Be certain to engage the park brake when the engine is running and the machine is parked or before leaving the machine with the engine turned OFF.

Press the right pedal to engage the park brake and the left pedal to disengage the park brake.



H118074—UN—15APR16

Refrigerator

Refrigerator (If Equipped)— provides a space to keep food or beverages cool throughout the day.

NOTE: Refrigerator operates only when the key switch is in the Run position and **MUST** remain plugged into the auxiliary outlet to keep food or beverages cold.

Raise the seat bottom to open the refrigerator top cover. Refrigerator front cover can also be opened without raising the seat bottom.

Turn the temperature control dial clockwise to decrease temperature or counterclockwise to increase temperature.

PR79369,00003EB-19-08MAR21

Overhead Controls



H118064—UN—22DEC16

Microphone

Microphone (Optional)— allows you to communicate hands-free using a Bluetooth® cell phone. (Bluetooth™ must be enabled.)

NOTE: Key switch must be in the Run position.



H118065—UN—22DEC16


Mirror Heater Button

Mirror Heater Button— activates mirror heaters to remove ice and fog.

- Press top of the switch to activate mirror heat.
- Press bottom of the switch to deactivate mirror heat.

NOTE: Key switch must be in the Run position.

Bluetooth is a trademark of Bluetooth SIG

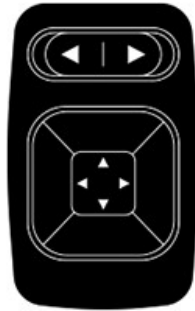

Mirror Control Buttons

H118066—UN—15APR16

Mirror Control Buttons— allow you to select and adjust either the right-hand or left-hand cab mirrors.

- Select mirror to adjust using the top button.
- Selected mirror can be moved up or down or left or right using the bottom button. Move the button in the direction you desire the mirror to move.

NOTE: Key switch must be in the Run position.

PR79369,00003EC-19-08MAR21

Seat Controls

ComfortCommand™ Operator's Seat (Basic Seat)

ComfortCommand™ Operator's Seat (Premium Cloth Seat)

ComfortCommand™ Operator's Seat (Ultimate Leather Seat)

Seat Belts

Instructional Seat

ComfortCommand is a trademark of Deere & Company

PR79369,00003ED-19-08MAR21

Key Switch

CAUTION: Sound horn before starting the engine to clear people away from the machine.

To avoid the possibility of personal injury or death, start **ONLY** from the operator seat. Do **NOT** start the engine by shorting across starter terminals. Machine starts in gear if normal circuit is bypassed.



Key Switch

H118582—UN—22DEC16

Key switch is on the right-hand side of the steering column and has four positions:



Accessories

H117799—UN—15APR16

Accessories— allows accessories such as the radio and windshield wiper to operate without engine running.



Stop

H117800—UN—28MAR16

Stop— shut OFF the engine and all accessory functions.



Run

H117801—UN—28MAR16

Run— allows all accessories to operate and the engine to run once it has been started.



Start

H117802—UN—28MAR16

Start— momentary switch position that cranks the engine. Once the engine starts and the switch is released, it returns to the run position.

PR79369,00003EE-19-08MAR21

Adjusting Steering Wheel



Telescope

H117796—UN—28MAR16

Telescope— rotate the knob counterclockwise to release lock. Extend or retract the steering wheel to the desired position. Rotate knob clockwise to lock.



Tilt

H117797—UN—28MAR16

Tilt— pull up on lever and move the steering column to the desired position. Release lever to lock.



Memory

H117798—UN—28MAR16

Memory— push down on the foot pedal on the floor of the cab to permit steering column to move up and out of your way for easy entry or exit. Push down on the foot pedal and pull down on steering wheel to return steering column to previous setting.

PR79369,00003EF-19-08MAR21

Operate Lights

CAUTION: Accidental collision with another vehicle can cause serious injury or death to you or others. Always comply with traffic regulations when driving machine on a road. Dim headlights to low-beam for oncoming vehicles. To avoid motorist confusion, do not operate work lights when transporting on public roadways.



Switch

H117803—UN—28MAR16

Switch— select light operation mode.



OFF

H117809—UN—28MAR16

OFF— select to turn all exterior lighting OFF.

NOTE: If warning light switch is ON then warning lights remain ON.



Park Lights

H119796—UN—07JUN18

Park Lights— select to turn ON clearance lights.



Road Lights

H117808—UN—28MAR16

Road Lights— select to turn ON headlights and clearance lights.



Work Lights

N123280—UN—16MAY16

Worklights— select to turn ON worklights to selected preset.

PR79369,00003F0-19-08MAR21

Operate Turn Signals, Horn and High and Low Beam



Turn Signals

H117803—UN—28MAR16

Turn Signals— push up lever for a right turn or pull down for a left turn. Return lever to the center position after completing turn.



Right-Hand Turn

H117804—UN—28MAR16

Right-Hand Turn— push lever up for a right-hand turn.



Left-Hand Turn

H117805—UN—28MAR16

Left-Hand Turn— pull down for a left-hand turn.



Horn

H117806—UN—28MAR16

Horn— push inward on end of lever to activate the horn.



High-Beam

H117048—UN—22DEC16

High-Beam— push lever forward to activate the high beam headlights. Pull lever toward you and release to flash the high beam.



Low-Beam

H117808—UN—28MAR16

Low-Beam— pull lever into center position to operate the low beam.



Worklight Preset 1

H117886—UN—29MAR16

Worklight Preset 1— press to select Worklight Preset 1.



Worklight Preset 2

H117887—UN—29MAR16

Worklight Preset 2— press to select Worklight Preset 2.

PR79369,00003F1-19-08MAR21

Operate Windshield Wiper and Washer

NOTE: Fill washer reservoir with non-freezing solution to prevent damage to washer system in cold temperatures.



Switch

H117803—UN—28MAR16

Switch— rotate to operate the wiper at desired speed.



OFF

H117809—UN—28MAR16

OFF— select to turn the wiper OFF.



Intermittent

H117810—UN—28MAR16

Intermittent— select so the wiper operates intermittently.



Windshield Washer

H117811—UN—28MAR16

Windshield Washer— press to operate the windshield washer.



Wiper ON

H117812—UN—28MAR16

Wiper ON— select to operate the windshield wiper.

PR79369,00003F2-19-08MAR21

Operate Ether Injection (If Equipped)



Ether Injection

H121070—UN—18MAY17

Ether Injection— press while cranking the engine to aid in cold weather starting. Release button after the engine starts.

CAUTION: Avoid personal injury and damage to engine. Inject fluid only while engine is turning.

IMPORTANT: To assure proper lubrication, operate engine at low speed, with no load for 1-2 minutes. Extend this period to 2-4 minutes when operating at temperatures below freezing.

PR79369,00003F3-19-08MAR21

ComfortCommand™ Operators Seat (Basic Seat)



Fore/Aft Adjustment Handle

H117034—UN—28MAR16

Fore/Aft Adjustment Handle— pull up on the handle to slide seat forward or rearward for the best working position.



Vertical Shock Dampener Control

H117035—UN—28MAR16

Vertical Shock Dampener Control— limits amount of upward motion the seat suspension provides. Push control forward for a soft ride or pull handle rearward for a firm ride. Between these two positions is medium firmness.



Weight/Height Adjustment Handle

H117861—UN—28MAR16

Weight/Height Adjustment Handle— pull up on the handle to raise seat, or push down on the handle to lower seat. Adjust seat until green mark is visible in the weight/height indicator.



Weight/Height Indicator

H117037—UN—28MAR16

Weight/Height Indicator— use the weight/height adjustment handle to adjust seat until green marking is visible in indicator.



Fore/Aft Isolation Adjustment Handle

H117036—UN—28MAR16

Fore/Aft Isolation Adjustment Handle— pull up on the handle to lock forward or rearward movements. Push down on the handle to release.



Armrest Height Adjustment

H117042—UN—28MAR16

Armrest Height Adjustment— remove the round cap and loosen the nut to adjust the left-hand armrest to desired position.



Backrest Angle Adjustment Handle

H117041—UN—28MAR16

Backrest Angle Adjustment Handle— adjusts the

seat back angle. Pull up on handle and adjust backrest to desired position and release handle.



Seat Swivel Handle

H121071—UN—18MAY17

Seat Swivel Handle— lift on the handle to allow the seat to swivel. Push down on handle to lock seat in position.

PR79369,00003F4-19-08MAR21

ComfortCommand™ Operators Seat (Premium Cloth Seat)



Fore/Aft Adjustment Handle

H117034—UN—28MAR16

Fore/Aft Adjustment Handle— pull up on the handle to slide seat forward or rearward for the best working position.



Vertical Shock Dampener Control

H117035—UN—28MAR16

Vertical Shock Dampener Control— limits amount of upward motion the seat suspension provides. Push control forward for a soft ride or pull handle rearward for a firm ride. Between these two positions is medium firmness.



Weight/Height Adjustment Handle

H117861—UN—28MAR16

Weight/Height Adjustment Handle— pull up on the handle to raise seat, or push down on the handle to lower seat. Adjust seat until green mark is visible in the weight/height indicator.



Weight/Height Indicator

H117037—UN—28MAR16

Weight/Height Indicator— use the weight/height adjustment handle to adjust seat until green marking is visible in indicator.



Seat Bottom Depth Adjustment Handle

H117039—UN—28MAR16

Seat Bottom Depth Adjustment Handle— press the handle to move the seat bottom forward or rearward for the best working condition.



Seat Bottom Angle Adjustment Handle

H117038—UN—28MAR16

Seat Bottom Angle Adjustment Handle— push the handle to raise or lower seat cushion for the best working condition.



Fore/Aft Isolation Adjustment Handle

H117036—UN—28MAR16

Fore/Aft Isolation Adjustment Handle— pull up on the handle to lock forward or rearward movements. Push down on the handle to release.



Lateral Isolation Adjustment Handle

H117040—UN—28MAR16

Lateral Isolation Adjustment Handle— push the handle forward to release side-to-side movement. Pull the handle rearward to lock.



Armrest Angle Adjustment Knob

H117043—UN—28MAR16

Armrest Angle Adjustment Knob— adjusts the armrest up or down. Rotate knob clockwise to lower and counterclockwise to raise.



H117042—UN—28MAR16

Armrest Height Adjustment

Armrest Height Adjustment— remove the round cap and loosen the nut to adjust the left-hand armrest to desired position.



H117041—UN—28MAR16

Backrest Angle Adjustment Handle

Backrest Angle Adjustment Handle— adjusts the seat back angle. Pull up on handle and adjust backrest to desired position and release handle.



H121071—UN—18MAY17

Seat Swivel Handle

Seat Swivel Handle— lift on the handle to allow the seat to swivel. Push down on handle to lock seat in position.



H117044—UN—28MAR16

Heated/Ventilated Seat

Heated/Ventilated Seat— press the top of the switch to turn ON seat heater. Press the bottom of the switch to turn ON seat ventilation. Switch in the middle position turns seat heater and seat ventilation OFF.

CAUTION: An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.



H117045—UN—28MAR16

Upper Lumbar Support


Upper Lumbar Support— press the top switch towards the plus (+) symbol to increase upper lumbar support curvature. Push the top switch towards the minus (-) symbol to decrease upper lumbar support curvature.



H117046—UN—28MAR16

Lower Lumbar Support

Lower Lumbar Support— press the bottom switch towards the plus (+) symbol to increase lower lumbar support curvature. Push the bottom switch towards the minus (-) symbol to decrease lower lumbar support curvature.

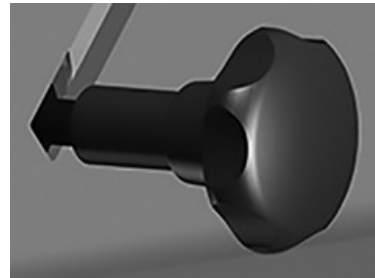

H117047—UN—22JUL21

Armrest Control Console

Armrest Control Console— loosen knob and slide the armrest control console up/forward or down/back in slots on outer plate. Tighten knob.

PR79369,00003F5-19-08MAR21

ComfortCommand™ Operators Seat (Ultimate Leather Seat)



H117034—UN—28MAR16

Fore/Aft Adjustment Handle

Fore/Aft Adjustment Handle— pull up on the handle to slide seat forward or rearward for the best working position.



H117035—UN—28MAR16

Vertical Shock Dampener Control

Vertical Shock Dampener Control— limits amount of upward motion the seat suspension provides. Push control forward for a soft ride or pull handle rearward for a firm ride. Between these two positions is medium firmness.



H117036—UN—28MAR16

Fore/Aft Isolation Adjustment Handle

Fore/Aft Isolation Adjustment Handle— pull up on the handle to lock forward or rearward movements. Push down on the handle to release.



H119780—UN—07JUN18

Weight/Height Adjustment Switch

Weight/Height Adjustment Switch— press the top of the switch to raise seat or press the bottom of the switch to lower seat. Adjust seat until green mark is visible in the weight/height indicator.



H117037—UN—28MAR16

Weight/Height Indicator

Weight/Height Indicator— use the weight/height adjustment handle to adjust seat until green marking is visible in indicator.



H117039—UN—28MAR16

Seat Bottom Depth Adjustment Handle

Seat Bottom Depth Adjustment Handle— press the handle to move the seat bottom forward or rearward for the best working condition.



H117038—UN—28MAR16

Seat Bottom Angle Adjustment Handle

Seat Bottom Angle Adjustment Handle— push the handle to raise or lower seat cushion for the best working condition.



H119781—UN—07JUN18

Lateral Isolation Adjustment Handle

Lateral Isolation Adjustment Handle— push the handle forward to release side-to-side movement. Pull the handle rearward to lock.



H117043—UN—28MAR16

Armrest Angle Adjustment Knob

Armrest Angle Adjustment Knob— adjusts the armrest up or down. Rotate knob clockwise to lower and counterclockwise to raise.



H117042—UN—28MAR16

Armrest Height Adjustment

Armrest Height Adjustment— remove the round cap and loosen the nut to adjust the left-hand armrest to desired position.



H117041—UN—28MAR16

Backrest Angle Adjustment Handle

Backrest Angle Adjustment Handle— adjusts the seat back angle. Pull up on handle and adjust backrest to desired position and release handle.



Seat Swivel Handle

H121071—UN—18MAY17

Seat Swivel Handle— lift on the handle to allow the seat to swivel. Push down on handle to lock seat in position.



Heated/Ventilated Seat

H119782—UN—07JUN18

Heated/Ventilated Seat— press the top of the switch to turn ON seat heater. Press the bottom of the switch to turn ON seat ventilation. Switch in the middle position turns seat heater and seat ventilation OFF.

CAUTION: An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.



Upper Lumbar Support

H117045—UN—28MAR16


Upper Lumbar Support— press the top switch towards the plus (+) symbol to increase upper lumbar support curvature. Push the top switch towards the minus (-) symbol to decrease upper lumbar support curvature.



Lower Lumbar Support

H117046—UN—28MAR16

Lower Lumbar Support— press the bottom switch towards the plus (+) symbol to increase lower lumbar support curvature. Push the bottom switch towards the minus (-) symbol to decrease lower lumbar support curvature.

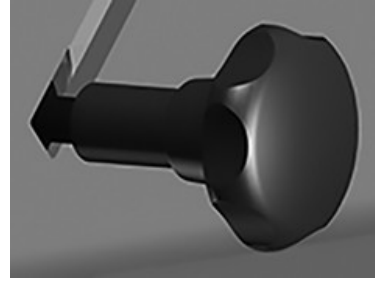

Armrest Control Console

H117047—UN—22JUL21

Armrest Control Console— loosen knob and slide the armrest control console up/forward or down/back in slots on outer plate. Tighten knob.

PR79369,00003F6-19-08MAR21

Seat Belts



Seat Belt

H118075—UN—15APR16

Seat belts are standard equipment on both operator and instructional seats. Lap type seat belts have a push-button quick release and automatic belt retraction to allow unrestricted exiting and entering.

CAUTION: Inspect seat belts and mounting hardware on your machine at least once a year. If the seat belt system, including mounting hardware, buckle, belt, or retractor, shows any sign of damage such as cuts, fraying, extreme or unusual wear, discoloration or abrasion, the entire seat belt system should be replaced immediately. For your safety, replace the belt system only with replacement parts approved for your machine. See your John Deere dealer for replacement parts.

PR79369,00003F7-19-08MAR21

Instructional Seat



Instructional Seat

H118073—UN—15APR16

Seat back and seat bottom can be raised or lowered to desired operating position.

CAUTION: The instructional seat has been provided only for training operators or diagnosing machine problems. Keep all other riders off the machine and equipment. Always wear seat belts.

PR79369,00003F8-19-09MAR21

Harvesting Controls



Lock

H117027—UN—28MAR16


Programmable Shortcut Lock— sets shortcut switch to avoid accidental change. Indicator illuminates when selected.



Reel/Belt Speed Dial

H116352—UN—20DEC16

Reel/Belt Speed Dial— turn the dial clockwise to increase reel or belt pickup speed and setpoint or counterclockwise to decrease reel or belt pickup speed and setpoint.

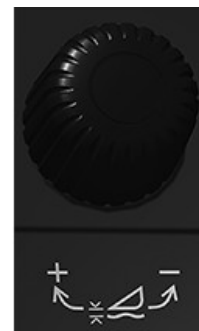

Header Height/HydraFlex™ Pressure Control Dial

H116347—UN—20DEC16

Header Height/HydraFlex™ Pressure Control Dial— select position of the header relative to the ground and return to that position automatically. Turn dial clockwise to raise header and setpoint (if equipped with HydraFlex™ increase pressure).

Turn dial counterclockwise to lower header and setpoint (if equipped with HydraFlex™ decrease pressure).



Feeder House Reverser

H117923—UN—22DEC16

Feeder House Reverser— shifts the feeder hours gear case into reverser mode.

HydraFlex is a trademark of Deere & Company



H117924—UN—22DEC16

Belt Pickup Cleanout

Belt Pickup Cleanout— delays re-engagement of the header belt drive system.



H117924—UN—22DEC16

Header Engage


Header Engage— turns on or off header functions.



H117925—UN—22DEC16

Separator Engage

Separator Engage— turns on or off separator functions.

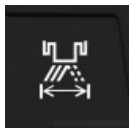

H117017—UN—28MAR16

Discharge Swap Button

Discharge Swap— allows you to quickly adjust the residue spread in the opposite direction to compensate for wind interference when turning on headlands.

NOTE: Swap is only available when the Direction adjustment is not in the center position.




H115034—UN—28MAR16

Armrest Adjustment Dial

Armrest Adjustment Dial— is used to increase or decrease adjustments.


- Rotate dial clockwise to increase setting.
- Rotate dial counterclockwise to decrease setting.

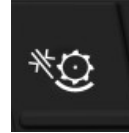

H117012—UN—28MAR16

Threshing Clearance Adjust


Threshing Clearance Adjust— press to activate Armrest Adjustment Dial to select desired clearance.

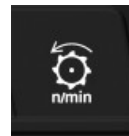

H117013—UN—28MAR16

Threshing Speed Adjust


Threshing Speed Adjust— press to activate Armrest Adjustment Dial to select desired speed.

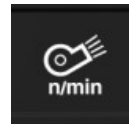

H117011—UN—29MAR16

Cleaning Fan Speed Adjust


Cleaning Fan Speed Adjust— press to activate Armrest Adjustment Dial to select desired speed.

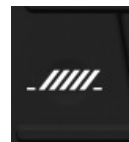

H117014—UN—28MAR16

Chaffer Adjust

Chaffer Adjust— press to activate Armrest Adjustment Dial to select desired clearance.

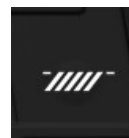

H117015—UN—28MAR16

Sieve Adjust

Sieve Adjust— press to activate Armrest Adjustment Dial to select desired clearance.



Programmable Buttons

H118063—UN—15APR16

Programmable Buttons— depending on the machine options and header type, the buttons are programmable to different functions. (See Controls Setup Application in Onscreen Help for more information.)

PR79369,00003F9-19-08MAR21

HVAC



Fan Speed

N120890—UN—05MAY16

Fan Speed— press to change the in cab fan speed.



Air Flow Direction

H117877—UN—29MAR16

Air Flow Control— press to select desired air flow direction.



Temperature Control

N121549—UN—12MAY16

Temperature Control— press to change the temperature of cab.

PR79369,00003FA-19-09MAR21

Radio



Seek

N123514—UN—22SEP16

Seek— press to seek radio channel.



Volume Control

N124430—UN—22SEP16

Volume Control— press to change the audio volume.



H117918—UN—29MAR16

Mute— press to mute the microphone.

- Press to mute audio.
- Press to resume play of audio.

PR79369,00003FB-19-09MAR21

Engine and Ground Drive



Push-Button Shift Gear

H117023—UN—22DEC16

Push-Button Shift Gear (If Equipped)— press the desired button (1, 2, or 3) to increase or decrease the

machine ground speed. Selected speed indicator illuminates.



ProDrive™

H117917—UN—22DEC16

ProDrive™ (If Equipped)— press the desired button (1 or 2) to increase or decrease the machine ground speed. Selected speed indicator illuminates.

ProDrive is a trademark of Deere & Company



Engine Speed (Slow Speed)

H117019—UN—28MAR16

Engine Speed (Slow Speed)— press for slow engine speed. Indicator illuminates when selected.



Engine Speed (Medium Speed)

H117020—UN—28MAR16

Engine Speed (Medium Speed)— press for medium engine speed. Indicator illuminates when selected.



Engine Speed (Fast Speed)

H117021—UN—28MAR16

Engine Speed (Fast Speed)— press for fast engine speed. Indicator illuminates when selected.

NOTE: If equipped with ProDrive™, the engine speed is commanded dynamically when in road transport mode.



Road Transport Disconnect

H117022—UN—28MAR16

Road Transport Disconnect— press prior to transporting the machine on roadway. Indicator illuminates when selected.



Four-Wheel Drive High Speed

H117024—UN—28MAR16

Four-Wheel Drive High Speed (If Equipped)— press to control the speed of the four-wheel drive system.



Four-Wheel Drive Slow Speed

H117025—UN—28MAR16


Four-Wheel Drive Slow Speed (If Equipped)— press to control the speed of the four-wheel drive system.



Differential Lock

H117026—UN—28MAR16

Differential Lock (If Equipped)— press to manually engage/disengage the differential lock to resolve traction problems in the field.

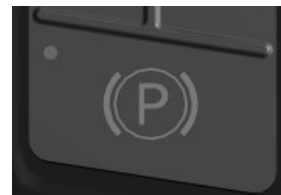

Park Brake

H117028—UN—28MAR16

Park Brake— press to select park brake state. In manual mode (icon illuminated), the park brake will remain engaged and the machine will not move. In automatic mode (icon not illuminated), the park brake will automatically release/engage when you move the multi-function lever in/out of neutral.

PR79369,00003FC-19-09MAR21

Lights



H117886—UN—29MAR16

Worklight Preset 1

Worklight Preset 1— press to select Worklight Preset 1.



H117887—UN—29MAR16

Worklight Preset 2

Worklight Preset 2— press to select Worklight Preset 2.



H117884—UN—29MAR16

Beacon Lights— press to turn on beacon lights, press again to turn off. Indicator light is on when active.




H117885—UN—29MAR16

Hazard Light

Hazard Light— press to turn on hazard lights, press again to turn off. Indicator light is on when active.

PR79369,00003FD-19-09MAR21

Console and Display

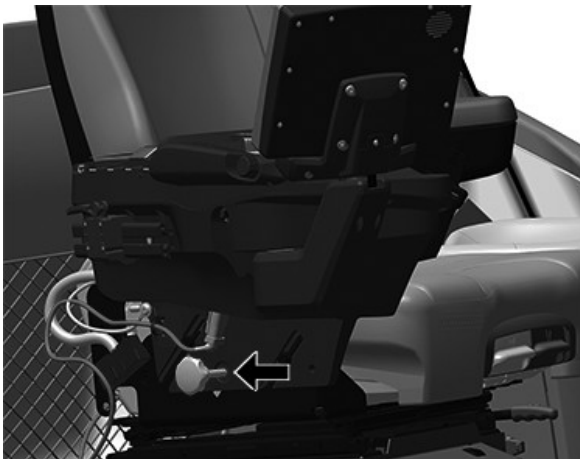

H118078—UN—19JAN17

Armrest Control Console

Armrest Control Console— loosen knob and slide the armrest control console up/forward or down/back in slots on outer plate. Tighten knob to lock the armrest into position.



N128644—UN—15FEB17

USB Charging

USB Charging— allows you to charge mobile devices. These ports are located inside the console storage compartment. They are not connected to the radio or the display.



N128645—UN—15FEB17

Auxiliary Outlet

Auxiliary Outlet— used for powering devices (12 V). Located inside the console storage compartment.



H117794—UN—19JAN17

Arm

Arm— rotate arm left/right to the desired operating position.

NOTE: This function is only available on machines not equipped with seat swivel configurations.



Display

H117795—UN—15APR16

Display— rotate display left/right to the desired operating position.

PR79369,00003FE-19-09MAR21

Feeder House Reverser



Feeder House Reverser

H127356—UN—26SEP19

Use to hydraulically shift the feeder house gearcase into reverse mode to clear a plugged feeder house or header.

NOTE: If operating at a high engine speed, turn feeder house reverser switch OFF and throttle engine to low idle.

Procedure to Modify:



Switch Depressed

H127348—UN—26SEP19

1. Push down and hold the switch.



Switch Engaged

H127352—UN—26SEP19

2. Pull back to lock the switch.



Switch Off

H127346—UN—26SEP19

3. Push the switch forward once the feeder house is cleared.

PR79369,00003FF-19-09MAR21

Belt Pickup Cleanout



Belt Pickup Cleanout

H127356—UN—26SEP19

Delays re-engagement of the header belt drive system, which allows an ejected slug to be reingested into the feeder house in smaller segments.

NOTE: In order for cleanout operation to begin, the process of engaging, reversing, and engaging again must occur within 30 seconds.

Procedure to Modify:



H127351—UN—26SEP19

Header Engaged

1. Push down and forward to engage the header.



H127352—UN—26SEP19

Reverser Engaged

2. Pull back to engage the modulated feeder house reverser.



H127351—UN—26SEP19

Header Engaged

3. Push the switch forward again to engage the header.

PR79369,0000400-19-09MAR21

Header Engage



H127356—UN—26SEP19

Header Engage

Engages header functions.

NOTE: If you leave seat after engagement, header continues to operate for five seconds before disengaging.

System Requirements:

- Separator Engage must be ON.
- Road Transport Disconnect must be in field position.
- You must be seated for the header to operate.

Procedure to Modify:



H127348—UN—26SEP19

Switch Depressed

1. Push down and hold the switch.



H127351—UN—26SEP19

Switch Engaged

2. Push forward to lock the switch.



H127346—UN—26SEP19

Switch Off

3. Pull back on the switch to turn off header functions.

PR79369,0000401-19-09MAR21

Separator Engage



Separator Engage

H127357—UN—26SEP19

Engages separator functions.

NOTE: Separator disengages when discharge beater speed drops below 300 rpm.

If you leave operator seat after engagement, separator rotational alarm sounds and outside lights will flash to alert operator of leaving seat while separator is still rotating. Lights and alarm sounds continue until the separator has come to a complete stop.

System Requirements:

- Engine must be running at the low idle.
- Road Transport Disconnect must be in field position.
- You must be seated for the separator to operate.

Procedure to Modify:



Switch Depressed

H127347—UN—26SEP19

1. Push down and hold the switch.



Switch Engaged

H127350—UN—26SEP19

2. Push forward to lock the switch.



Switch Off

H127346—UN—26SEP19

3. Pull back on the switch to turn off separator functions.

PR79369,0000402-19-09MAR21

Threshing Clearance Adjust

Threshing Clearance Adjust allows you to increase or decrease the distance between threshing elements and concave for varying crops and conditions.

NOTE: For the threshing clearance settings, refer to Crop Settings section in your Operator's Manual.

Modify When:


Increase Threshing Clearance To:

- Improve straw quality; make longer straw and generate less breakage of material.
- Improve grain quality; reduce splits and grain damage.
- Reduce power consumption; for easy threshing grain.
- Improve sample cleanliness; reduce chaff load on the cleaning shoe.

Decrease Threshing Clearance To:

- Reduce unthreshed separator loss; unhulled grain or grain on the cob behind the machine.
- Improve grain tank sample; reduce kernels with husks or unopened pods.

Procedure to Modify:

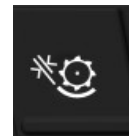

Threshing Clearance Adjust

H117012—UN—28MAR16

1. Press button on the Armrest to activate the Armrest Adjustment Dial.



H115034—UN—28MAR16

Armrest Adjustment Dial

2. Use the Armrest Adjustment Dial to select the desired threshing clearance.
 - Turn dial clockwise to increase value.
 - Turn dial counterclockwise to decrease value.

NOTE: Depending on machine configurations, some values may not be reached.

NOTE: Maximum value may not be attainable if dense pack elements are installed.

Minimum: 0

Maximum: 40

Increment: 1

PR79369,0000403-19-09MAR21

Threshing Speed Adjust

Threshing Speed Adjust allows you to modify the threshing speed for varying crop conditions.

NOTE: For the threshing speed settings, refer to Crop Settings section in your Operator's Manual.

Modify When:

Increase Threshing Speed To:

- Improve separation.
- Improve material handling.
- Reduce amount of unthreshed grains.
- Reduce risk of blockage.
- Reduce separator losses due to insufficient centrifugal force.

Decrease Threshing Speed To:

- Improve straw quality.
- Reduce chaff load on cleaning shoe.
- Reduce broken kernels.
- Reduce separator losses due to high chaff load.

Procedure to Modify:

1. Engage the separator and run engine at high idle.



H117013—UN—28MAR16

Threshing Speed

2. Press the button on the Armrest to activate the Armrest Adjustment Dial.



H115034—UN—28MAR16

Armrest Adjustment Dial

3. Use the Armrest Adjustment Dial to select the desired speed.
 - Turn the dial clockwise to increase the value.
 - Turn the dial counterclockwise to decrease the value.

The rotor has two speed ranges which can be set on the rotor transmission.

- 1st range: 210—550 rpm
- 2nd range: 380—1000 rpm

NOTE: It is recommended not to run the rotor in very low speeds in second range. For example, if target rpm is 400, use first range instead of second range.

NOTE: Depending on machine configurations, some values may not be reached.

Minimum: 200 rpm

Maximum: 1000 rpm

Increment: 10 rpm

PR79369,0000404-19-09MAR21

Cleaning Fan Speed Adjust

Cleaning Fan Speed Adjust allows you to modify the fan speed to improve grain cleanliness and reduce grain loss.

Fan speed motor has a thermal (heat) shut off that stops the motor from working if any of the following happen:

- Switch is used continuously for more than 2 or 3 minutes.
- Adjustment system is against stop while the motor is still trying to change speed.
- There is excessive binding or dragging in linkage.

If any of the above causes are suspected, clean and adjust as necessary.

NOTE: Allow motor to cool 10 to 15 minutes before trying the switch again.

Modify When:

Increase Fan Speed To:

- Improve sample quality. Reduce the amount of chaff or light material in the grain tank.
- Reduce losses if the crop mat is not being aerated enough.


Decrease Fan Speed To:

- Reduce cleaning shoe loss. Smaller, lighter grains can be carried out of the cleaning shoe.
- Reduce a high amount of free grain in the tailings system.

NOTE: For the fan speed settings, refer to Crop Settings section in your Operator's Manual.

Procedure to Modify:

1. Engage the separator and run engine at high idle.

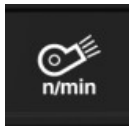

Cleaning Fan Speed Adjust

H117011—UN—29MAR16

2. Press button on the armrest to activate the Armrest Adjustment Dial.



Armrest Adjustment Dial

H115034—UN—28MAR16

3. Use the Armrest Adjustment Dial to select the desired speed.

- Turn the dial clockwise to increase the value.
- Turn the dial counterclockwise to decrease the value.

NOTE: Minimum and Maximum values may change if machine is equipped with a cleaning fan slow down kit.

Minimum: 620 rpm

Maximum: 1350 rpm

Increment: 10 rpm

PR79369,0000405-19-09MAR21

Chaffer Adjust

Chaffer Adjust allows you to modify the opening of the chaffer elements to improve the grain cleanliness and reduce the cleaning shoe loss for varying crops and conditions.

NOTE: For the chaffer clearance settings, refer to Crop Settings section in your Operator's Manual.

Modify When:


Increase Chaffer Clearance To:

- Reduce cleaning shoe loss by allowing the grain to fall through sooner before it can escape the cleaning shoe.
- Allow the grain to fall through sooner before it is forced into the tailings.

Decrease Chaffer Clearance To:

- Improve sample quality by reducing the amount of larger, foreign material in the grain tank.
- Reduce high tailings volume when it does not contain free grain.

Procedure to Modify:

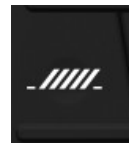

Chaffer Adjust

H117014—UN—28MAR16

1. Press button on the armrest to activate Armrest Adjustment Dial.



Armrest Adjustment Dial

H115034—UN—28MAR16

2. Use the Armrest Adjustment Dial to select the desired clearance.

- Turn the dial clockwise to increase the value.
- Turn the dial counterclockwise to decrease the value.

NOTE: Depending on machine configurations, some values may not be reached.

General Purpose:

Minimum: 0

Maximum: 22

Increment: 1

Deep Tooth:

Minimum: 0

Maximum: 30

Increment: 1

PR79369,0000406-19-09MAR21

Sieve Adjust

Sieve Adjust allows you to modify the opening of the sieve to improve grain cleanliness and manage tailings volumes for varying crops and conditions.


NOTE: For the sieve clearance settings, refer to Crop Settings section in your Operator's Manual.

Modify When:**Increase Sieve Clearance To:**

- Reduce tailings; allows more grain to fall through to clean grain sooner before it is recirculated in tailings.
- Increase cleaning fan air flow; increasing sieve clearance allows more cleaning fan air up through the chaffer.

Decrease Sieve Clearance To:

- Increase tailings; for any hard threshing grain, force any unthreshed material back through the separator.
- Improve sample quality; reduce the amount of foreign material in the grain tank.

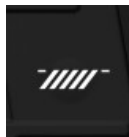Procedure to Modify:

Sieve Adjust

H117015—UN—28MAR16

1. Press button on the armrest to activate Armrest Adjustment Dial.



Armrest Adjustment Dial

H115034—UN—28MAR16

2. Use the Armrest Adjustment Dial to select the desired sieve clearance.

- Turn the dial clockwise to increase the value.
- Turn the dial counterclockwise to decrease the value.

NOTE: Depending on machine configurations, some values may not be reached.

General Purpose:

Minimum: 0

Maximum: 20

Increment: 1

Deep Tooth:

Minimum: 0

Maximum: 25

Increment: 1

PR79369,0000407-19-09MAR21

Seek

Seek

N123514—UN—22SEP16

Press to seek radio channel.

- AM/FM/WX/MW/LW: Press the switch (short press) to change preset.
- AM/FM/WX/MW/LW: Press the switch (long press) to SEEK.
- SiriusXM™ Satellite Radio: Press and hold the switch to change channel.
- CD/MP3: Press the switch to go to the beginning of the current track, to the previous track or to the next track.

PR79369,0000408-19-09MAR21

Push Button Shift Gear (If Equipped)



Push-Button Shift Gear

H117023—UN—22DEC16

Press desired button (1, 2, or 3) to increase or decrease the machine ground speed. Selected speed indicator illuminates.

NOTE: Tire sizes and country code regulations limit maximum ground speed.

Machine must be stopped and multi-function lever moved to neutral position before selecting the desired gear.

CAUTION: Push-Button Shift Transmission: When pressing the quick stop switch with separator engaged, you are responsible for pulling back on the multi-function lever to stop the machine.

PR79369,0000409-19-09MAR21

ProDrive™ (If Equipped)



ProDrive™

H117917—UN—22DEC16

Press desired button (1 or 2) to increase or decrease the machine ground speed. Selected speed indicator illuminates.

NOTE: Tire sizes and country code regulations limit maximum ground speed. Speed can be programmed from zero to the maximum allowable ground speed.

Maximum reverse ground speed is 10 km/h (6.2 mph) and does not change when in either mode.

ProDrive™ mode 1 or 2 switches can be selected while the machine is moving.

CAUTION: ProDrive™ Machines: Pressing quick stop switch with separator engaged causes machine to slowly roll to a stop. It is always recommended to wear your seat belt to avoid serious injury.

PR79369,000040A-19-10MAR21

Road Transport Disconnect



Road Transport Disconnect

H127518—UN—30SEP19

Press the road transport disconnect button when transporting the machine on roadway. Indicator illuminates when selected.

Road transport disconnect switch prevents the following functions:

- Separator Engage
- Header Engage
- Header Raise/Lower
- Header Height Resume
- Header Height Sensing
- Lateral Tilt
- Reel Raise/Lower and Reel Fore/Aft
- Unloading Auger
- Auger Swing
- Folding Unloading Auger (If Equipped)
- Grain Tank Covers (If Equipped)
- Four-Wheel Drive (If Equipped)

After transporting the machine on roadway and field operation is desired, press the road transport disconnect switch for two seconds allowing indicator light to turn OFF and allowing the desired switch functions to operate again.

If your machine is equipped with the ProDrive™ transmission and engine speed management, the engine speed is dynamically controlled when the road

ProDrive is a trademark of Deere & Company

transport disconnect switch is engaged. This increases fuel efficiency when transporting the machine.

PR79369,000040B-19-09MAR21

Four-Wheel Drive (If Equipped)

Controls the engagement/disengagement and speed of the four-wheel drive system.

IMPORTANT: Do NOT switch four-wheel drive ON or OFF while driving machine at maximum travel speed. Decrease speed or bring machine to a stop.

Turn four-wheel drive OFF before going down steep grades.

It is OK to switch between slow (turtle) and high (rabbit) settings while machine is in motion.

Procedure to Modify:



Slow Speed

H117025—UN—28MAR16

1. Press to turn ON when maximum rear-wheel assist is desired.
2. Press to turn OFF.



High Speed

H117024—UN—28MAR16

1. Press to turn ON when rear-wheel assist and higher ground speeds are desired.
2. Press to turn OFF.

CAUTION: Ground speed increases when turned OFF and decreases when turned ON. You must adjust the ground speed on machines not equipped with ProDrive™ to compensate. Machines equipped with ProDrive™ adjust the ground speed automatically.

Non-ProDrive™ Machines: In conditions that cause high pressure in the hydrostatic system and the machine slows or stops, move multi-function lever to neutral and shift transmission to a lower gear.

PR79369,000040C-19-09MAR21

Differential Lock (If Equipped)



Differential Lock

H117026—UN—28MAR16

Press to manually engage/disengage the differential lock to resolve traction problems in the field.

NOTE: Differential lock does not engage when the road transport disconnect switch is ON. Differential disengages when the brake pedals are pressed.

Engagement is only possible if ground speed is below 10 km/h (6.2 mph) and automatically disengages when ground speed is above 12 km/h (7.5 mph).

PR79369,000040D-19-09MAR21

Park Brake



Park Brake

H127519—UN—30SEP19

Press to select park brake state. In manual mode (icon illuminated), the park brake will remain engaged and the machine will not move. In automatic mode (icon not illuminated), the park brake will automatically release/engage when you move the multi-function lever in/out of neutral.

Automatic Mode: If the multi-function lever is in neutral position and speed is less than 1.5 km/h (1 mph), the park brake is applied. If the multi-function lever is moved out of neutral position, the park brake is released.

Manual Mode: If the multi-function lever is in neutral position and speed is less than 3.0 km/h (1.9 mph), the park brake is applied. If the multi-function lever is moved out of neutral position or speed is greater than 1.5 km/h (1 mph), an alarm sounds.

- Press the park brake button to activate the park brake. Park brake indicator on corner post illuminates indicating the park brake is engaged.
- Press the park brake button to disengage the park brake when multi-function lever is in neutral position. Park brake indicator on corner post turns OFF. Park brake is still engaged until multi-function lever is moved out of neutral position returning to automatic mode.

High Exhaust System Temperature (HEST) Indicator



H120319—UN—22JUN17

High Exhaust System Temperature (HEST) Indicator

High Exhaust System Temperature (HEST) Indicator illuminates when the engine exhaust temperature is elevated..

IMPORTANT: Final Tier 4/Stage V: Damage to exhaust cleaning components may occur if the engine is turned OFF while performing exhaust filter cleaning or shortly after cleaning is complete. Alarm sounds and a warning message appears on the display. Start the machine and follow messages on the display to allow the components to cool.

PR79369,000040F-19-09MAR21

Fuel Level Indicator



H117824—UN—22DEC16

Fuel Gauge Indicator

Fuel Level Indicator indicates the amount of fuel remaining in the fuel tank.

- When the level reaches 10% of remaining fuel, fuel indicator flashes, alarm sounds, and low fluid message appears.

PR79369,0000410-19-09MAR21

Diesel Exhaust Fluid (DEF) Level Indicator



H118085—UN—22DEC16

Diesel Exhaust Fluid (DEF) Level Indicator

Diesel Exhaust Fluid (DEF) Level Indicator—indicates how much fluid is left in the tank.

- When the level reaches 10%, level indicator flashes, alarm sounds, and low fluid message appears.
- When the level reaches 0%, level indicator illuminates and stops flashing, alarm sounds, and empty fluid message and engine power limited message appears.
- When loss of prime is reached, level indicator illuminates and stops flashing. Alarm sounds and empty fluid message, engine power limited message, and speed limited message appears. Stop engine warning indicator (Red) illuminates, engine is derated and machine functions are restricted.

PR79369,0000411-19-09MAR21

Quick Stop Switch



H117033—UN—15APR16

Quick Stop Switch

Quick Stop Switch allows you to simultaneously shut OFF multiple systems in the case of an emergency.

CAUTION: ProDrive™ Machines: Pressing the quick stop switch with the separator engaged causes the machine to slowly roll to a stop. Multi-function lever must be returned to neutral position to reset the propulsion system.

Push-Button Shift Transmission or Mechanical Shift Machines: When pressing the quick stop switch with separator engaged, you are responsible for pulling back on the multi-function lever to stop the machine.

It is always recommended to wear your seat belt to avoid serious injury.

IMPORTANT: Header drive can be disengaged by this switch in case of plugging.

NOTE: Pushing unloading auger drive switch on the multi-function lever restarts the unloading auger drive. To engage header drive, turn the header engage switch OFF and back ON.

The following systems stop when Quick Stop Switch is pressed:

- Header Engage
- Unloading Auger Drive
- Unloading Auger Swing
- Grain Tank Covers (If Equipped)
- Folding Unloading Auger (If Equipped)
- ProDrive™ (propulsion movement slowly stops) (If Equipped)

PR79369,0000412-19-09MAR21

Unloading Auger Swing Switch



H117003—UN—22DEC16

Unloading Auger Switch

Unloading Auger Swing Switch allows you to swing unloading auger in or out manually or automatically.

System Requirements:

- Road transport disconnect switch must be in field position.
- You must be seated.

Press the top of the switch to swing out auger. Press the bottom of the switch to swing auger in.

Manual Control: Press and hold the switch part way in until auger reaches desired position. Auger stops when the switch is released.

Automatic Control: Press the switch all the way in and release it. Auger swings fully outward or inward without holding the switch.

NOTE: Automatic auger swing function does not operate when unloading auger drive is engaged. Move auger back to transport position when not in use.

PR79369,0000413-19-10MAR21

Unloading Auger Drive Switch



H123658—UN—02MAR18

Unloading Auger Drive Switch

Unloading Auger Drive Switch allows you to engage or disengage the unloading auger.

System Requirements:

- Road transport disconnect switch must be in field position.
- You must be seated.

Turn the Unloading Auger ON:

- Press the unloading auger drive switch once to turn ON. Indicator light comes ON when system is engaged.
- Unloading auger drive engages only when the button is held while the auger is in auto swing mode or when the auger is manually swung out greater than 50%.

Turn the Unloading Auger OFF:

- Press the unloading auger drive switch once to turn OFF. The grain tank cross augers stop immediately, while the unloading auger continues to run for 3 seconds to empty the auger.
- Press the unloading auger drive switch twice to immediately turn OFF the unloading auger and grain tank cross augers. The unloading auger does not continue to run for 3 seconds, which means the unloading auger does not get cleaned out.
- If you leave the seat after engagement, the unloading auger drive will continue to operate for 5 seconds before disengaging. To re-engage the system, sit on the operator's seat and press the unloading auger drive switch again.
- In case of an emergency, the unloading auger drive can also be turned OFF using the quick-stop switch. To re-engage the unloading auger if the header and unloading auger are stopped using the quick-stop switch, press the unloading auger drive switch again.

PR79369,0000414-19-10MAR21

AutoTrac™ Resume Button (If Equipped)



AutoTrac™ Resume Button

H117005—UN—15APR16

AutoTrac™ Resume Button allows you to activate the AutoTrac™ system.

AutoTrac™ resume button also activates RowSense™ system. Refer to the AutoTrac™ Operator's Manual for further information.

System Requirements:

- Engine is running.
- Road transport disconnect switch must be in field position.
- Header switch is engaged.
- Operator in seat.

Press to engage system.

PR79369,0000415-19-10MAR21

Header Raise/Lower and Tilt Switch



Header Raise/Lower Switch

H116348—UN—19DEC16

Header Raise/Lower and Tilt Switch allows you to raise or lower header and tilt the feeder house.

System Requirements:

- Road transport disconnect switch must be in field position.
- You must be seated.

Press and hold the top of the switch to raise header.

Press and hold the bottom of the switch to lower header.

NOTE: Header raise/lower switch has two detent positions. Pushing part way in on the switch causes the header to raise or lower slowly. Header raises or lowers at a faster rate when the switch is pressed in all the way.

Press and hold left-hand side or right-hand side of switch to tilt feeder house.

PR79369,0000416-19-10MAR21

Reel Raise/Lower, Reel Fore/Aft (If Equipped) Switch



Reel Raise/Lower, Reel Fore/Aft

H116349—UN—19DEC16

Reel Raise/Lower, Reel Fore/Aft Switch allows you to control the position of the reel.

NOTE: These switch functions are available when a draper platform with the features mentioned is attached to the machine.

Using the switch to raise/lower the reel and to move the reel fore/aft (if equipped):

- Press and hold the top of the switch to raise reel.
- Press and hold the bottom of the switch to lower reel.
- Press and hold the left side of the switch to extend reel forward.
- Press and hold the right side of the switch to retract reel reward.

Recommended Settings

Standing Crop

- Position the reel above the cutterbar. This helps the crop to fall into the platform.
- Position the reel tines straight or slightly forward.
- The reel should barely touch the heads of the crop. Positioning the reel too low leads to header losses.
- If the reel hits the heads of the crop, reduce the reel speed. The reel should only push the heads of the crop.

Down Crop

- Position the reel in front of the cutterbar to help lift up the crop.
- Position the reel tines backward for more aggressive lifting of the crop.

PR79369,0000417-19-10MAR21

Feeder House Backshaft Speed, Adjustable Corn Head Deck Plates (If Equipped)



H116349—UN—19DEC16

Feeder House Backshaft Speed, Adjustable Corn Head Deck Plates

Feeder House Backshaft Speed, Adjustable Corn Head Deck Plates Switch allows you to control the feeder house backshaft speed or the adjustable corn head deck plates.


NOTE: These switch functions are available when a corn head with the features mentioned is attached to the machine.

Using the switch to adjust backshaft speed and adjustable corn head deck plates (if equipped):

- Press the top of the switch to increase backshaft speed.
- Press the bottom of the switch to decrease backshaft speed.
- Press the left or right side of the switch once to activate display.
- Press the left side of the switch to increase deck plate spacing.
- Press the right side of the switch to decrease deck plate spacing.

PR79369,0000418-19-10MAR21

Header Activation Buttons

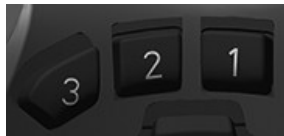

H116346—UN—19DEC16

Header Activation Buttons

Header Activation Buttons allow you to activate the following by pressing one of the three buttons.

NOTE: Header positions obtained by pressing the activation buttons may be overcome by pressing reel raise/lower or reel fore/aft switch or header raise/lower and lateral tilt switch. Once the activation buttons are manually overcome, press the desired activation button to reactivate.

System Requirements:

- Properly equipped header is connected.
- Engine is running.
- Road transport disconnect switch must be in field position.
- Header Height Resume, Header Height Sensing, or Active Header Float mode are enabled.
- Header is engaged.

Pressing the header activation buttons activates the system. Header control system takes control and moves the header to your selected position.

- Header Height Resume
- Header Height Sensing

NOTE: Reel speed is saved automatically when header height sensing/float mode is active and reel speed is changed using the Dial-A-Speed™ or the Reel/Belt Speed dial.

- Lateral Tilt Control
- Reel Position Resume

NOTE: Press and hold a header activation button for 2 seconds to save the current reel position to that button.

- Deck Plate Position Resume
- Active Header Float
- Hydraulic Feeder House Fore/Aft Tilt (if equipped)

PR79369,0000419-19-10MAR21

VisionTrak™

VisionTrak™ monitor checks grain loss by measuring a representative sample of losses over the cleaning shoe and through the separator. VisionTrak™ continuously monitors machine performance to enable you to use maximum machine capacity. A change in loss rate is indicated by the indicators.

If there appears to be an issue with the indicator readings, such as the indicators consistently read as full (all bars lit) when not harvesting or empty (no bars lit) when harvesting, inspect the sensors related to the system showing the error. See your Operator's Manual for VisionTrak™ operational checks and sensor inspection procedures.

System Requirements:

Engine State	Running
Road Transport Disconnect Switch	Field Position
Header and Separator Switch	Engaged

Items Accessible on VisionTrak™ Page:



H117835—UN—22DEC16

Shoe Loss Indicator

Shoe Loss Indicator— shows grain loss from the shoe.



H126288—UN—06JUN19

Loss Range Indicators


Loss Range Indicators— indicates whether loss levels are at an acceptable rate. The green range in the center of the bar graph indicates acceptable loss levels. The orange ranges above and below the green range indicate that losses are not within an acceptable level.



H126289—UN—06JUN19

Summation Symbol


Summation Symbol— displays above the Total Loss Indicator.

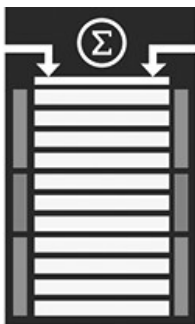

H117836—UN—22DEC16

Total Loss Indicator

Total Loss Indicator— shows an average of grain loss from the shoe and separator areas.

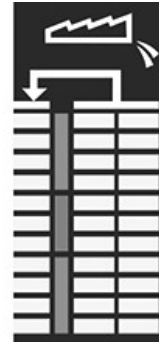

H117837—UN—22DEC16

Separator Loss Indicator

Separator Loss Indicator— shows grain loss from separator area. The separator symbol above the bar graph appears when system is functioning properly.



H117838—UN—22DEC16


Tailings Volume Indicator

Tailings Volume Indicator— shows volume of tailings return. The Tailings Volume Indicator can be referred to periodically to see if an increase or decrease in tailings volume occurs.

PR79369,000041A-19-10MAR21

Lights and Signals

Lighting Locations (Front and Rear View Lights)

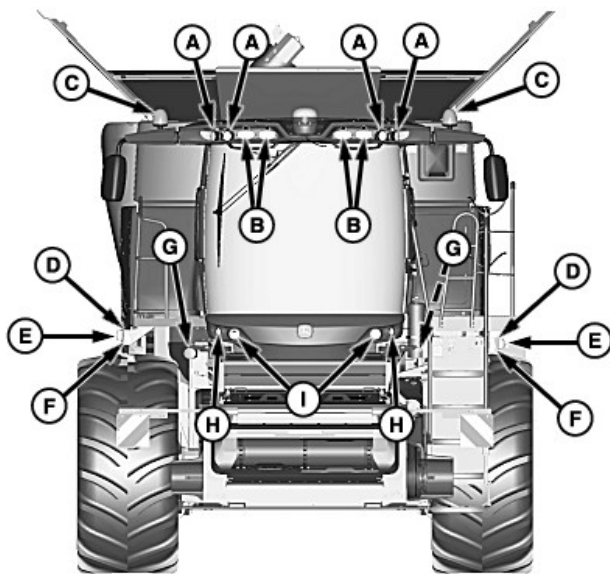

- A—Halogen Cab Headlights or Light Emitting Diode (LED) (Optional) Cab Headlights
- B—Cab Headlights (High/Low Beam)
- C—Beacon Lights
- D—Hazard Lights (Amber)
- E—Hazard Lights (Amber)
- F—Marker Lights (White)

Beacon Lights

CAUTION: Lights must be turned ON when transporting. Swing cab ladder forward to orient marker/hazard light towards oncoming motorists.


- Controls beacon lights (C, L).
- Two beacon lights are at the front (left and right) and one at the rear of the machine. These lights warn other drivers when transporting on roadways.

Hazard Lights

CAUTION: Lights must be turned ON when transporting. Swing cab ladder forward to orient marker/hazard light towards oncoming motorists.

- Controls beacon lights (C, L), hazard lights (D, E), and rear hazard lights (K).
- Hazard lights are on both sides of the machine at front and rear. These lights are used to indicate an inoperable machine.

Road Lights

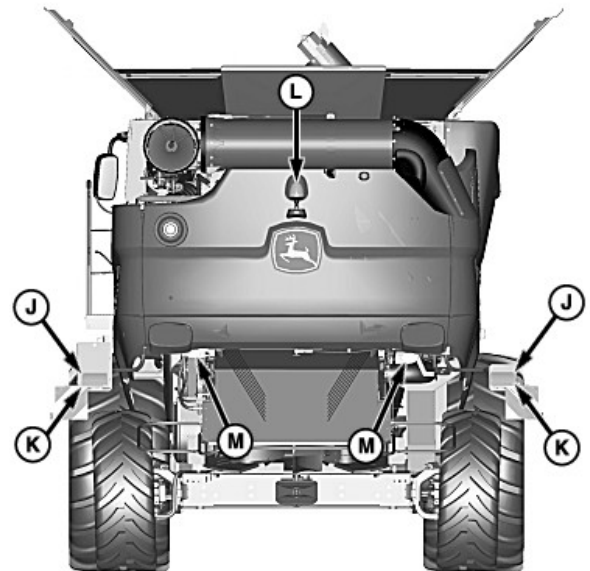

- G—Stubble Lights
- H—Fascia Lights (if equipped)
- I—Lower Driving Lights (if equipped)
- J—Marker/Brake Lights (Red)
- K—Rear Hazard Lights (Amber)
- L—Beacon Light
- M—Rear Discharge Lights

CAUTION: Lights must be turned ON when transporting. Swing cab ladder forward to orient marker/hazard light towards oncoming motorists.

NOTE: When road lights are ON and no header is connected, lower driving lights turn ON and cab headlights turn OFF. When a header is connected, lower driving lights turn OFF and cab headlights turn ON.


Hazard lights turn ON if turn signals are OFF. If turn signals are ON, hazard lights function as turn signal lights.

- Controls beacon lights (C, L), cab headlights (B), marker lights (F), lower driving lights (I), and marker/brake lights (J).
- Beacon lights warn other drivers when transporting on roadways.

H107108—UN—28FEB13

OU06075,00049AC-19-31MAY18

Lighting Locations (Front and Rear View Lights Continued)

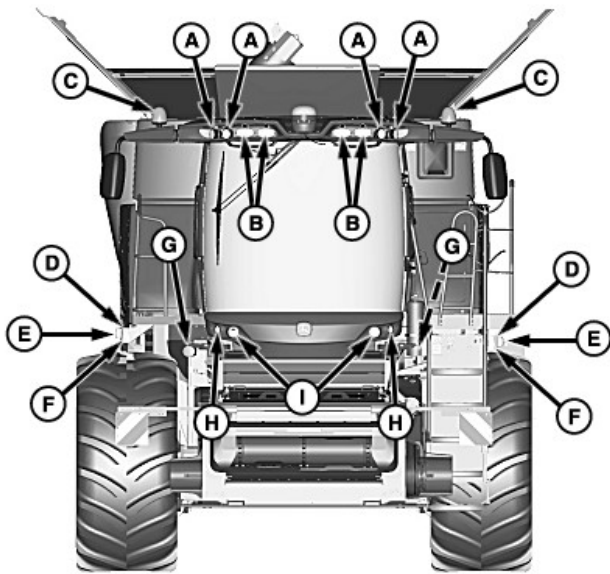

- A—Halogen Cab Headlights or Light Emitting Diode (LED)
(Optional) Cab Headlights
- B—Cab Headlights (High/Low Beam)
- C—Beacon Lights
- D—Hazard Lights (Amber)
- E—Hazard Lights (Amber)
- F—Marker Lights (White)

Auto Beacon Lights

NOTE: When auto beacon lights are activated and grain reaches the 3/4 full sensor, the beacon lights start to flash (3 seconds ON and 6 seconds OFF). When grain reaches the grain tank full sensor, the beacon lights turn ON steady and do not flash.

- Beacon lights (C, L) illuminate when grain tank is 3/4 full. Beacons provide a signal to the grain cart operator that grain tank is full and is ready to be unloaded.


Field Lights

- Controls marker lights (F), marker/brake lights (J), and cab headlights (A, B).
- Field lights provide operator with area lighting for operation at night and during low light conditions.

Front Stubble Lights

CAUTION: To avoid motorist confusion, do not operate work lights when transporting on public roadways.

NOTE: If operator leaves seat after separator is engaged, front stubble lights flash and will continue to flash until separator speed reaches zero.

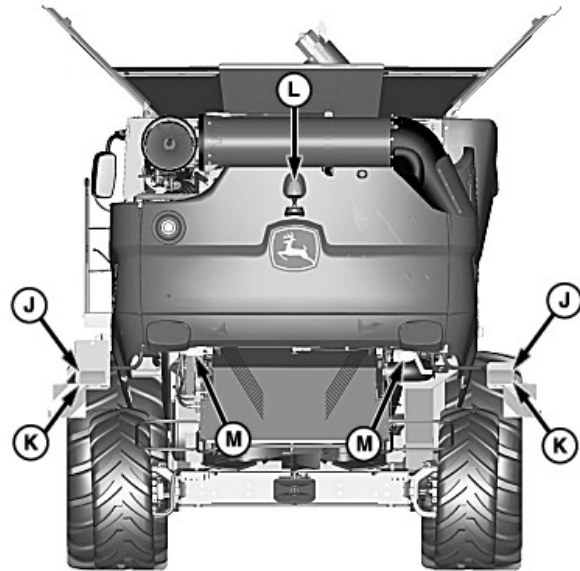

H107108—UN—28FEB13


- G—Stubble Lights
- H—Fascia Lights (if equipped)
- I—Lower Driving Lights (if equipped)
- J—Marker/Brake Lights (Red)
- K—Rear Hazard Lights (Amber)
- L—Beacon Light
- M—Rear Discharge Lights

- Controls stubble lights (G) and fascia lights (H).
- Stubble lights provide operator with more lighting behind header for night operation and low light conditions.¹
- Fascia lights provide operator with more lighting at the front of the machine during harvest.

OUO6075,00049AD-19-31MAY18

¹ If road lights are ON and machine is in Road Mode, stubble lights, fascia lights, and rear discharge lights cannot be turned ON.

Lighting Locations (Front and Rear View Lights Continued)

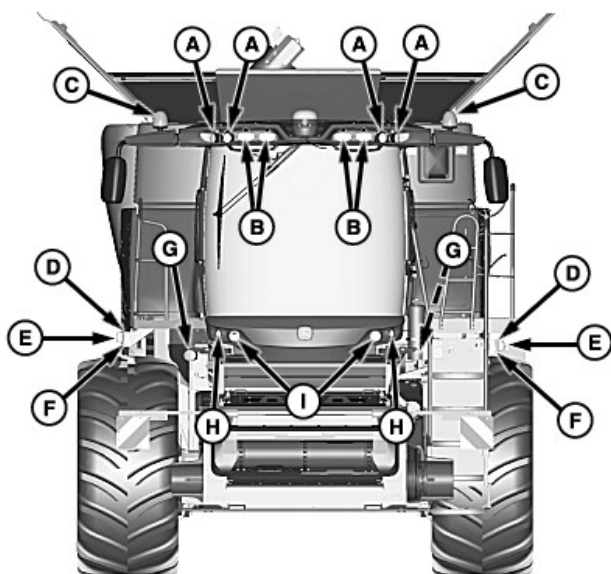

- A—Halogen Cab Headlights or Light Emitting Diode (LED) (Optional) Cab Headlights
- B—Cab Headlights (High/Low Beam)
- C—Beacon Lights
- D—Hazard Lights (Amber)
- E—Hazard Lights (Amber)
- F—Marker Lights (White)

Rear Discharge Lights

CAUTION: To avoid motorist confusion, do not operate work lights when transporting on public roadways.

NOTE: If operator leaves seat after separator is engaged, rear discharge lights flash and will continue to flash until separator speed reaches zero.

- Controls rear discharge lights (M).
- Rear discharge lights provide operator with rear area lighting for night operation and low light conditions.²³


Marker/Brake Lights

- Marker/Brake lights (J) come ON when machine senses a deceleration. Lights stay on for a minimum of 2 seconds.⁴
- Once speed is less than 1.6 km/h (1 mph), brake lights stay on for 2 minutes or until forward acceleration is sensed and speed is greater than 1.6 km/h (1 mph).

² If road lights are ON and machine is in Road Mode, stubble lights, fascia lights, and rear discharge lights cannot be turned ON.

³ France Only: If machine is in Road Mode, rear discharge lights do not turn ON.

⁴ France Only: Brake lights come ON when the brake pedal is pressed.

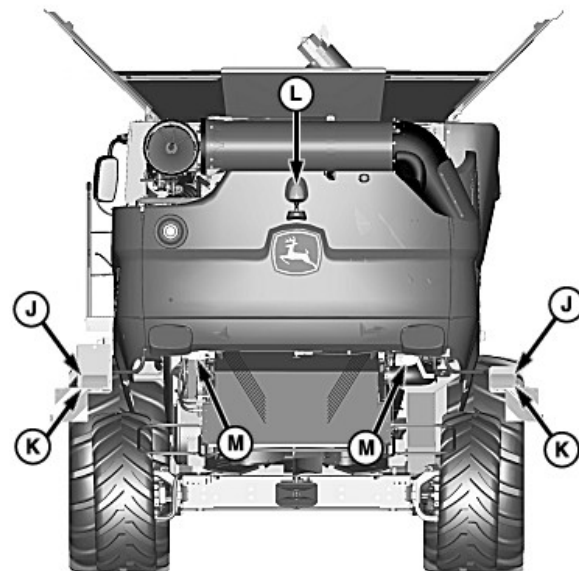

H107108—UN—28FEB13

- G—Stubble Lights
- H—Fascia Lights (if equipped)
- I—Lower Driving Lights (if equipped)
- J—Marker/Brake Lights (Red)
- K—Rear Hazard Lights (Amber)
- L—Beacon Light
- M—Rear Discharge Lights


- Marker lights also act as turn indicators, and illuminate when a turn is signaled. Light in direction of turn flashes.

Exit Lighting

- Two outermost cab headlights (B) remain on for a maximum of 180 seconds after key switch and light switch are turned OFF (if road or field lights were in use within the previous 5 minutes).

OUC6075,00049AE-19-01JUN18

Lighting Locations (Left and Right Side View Lights)

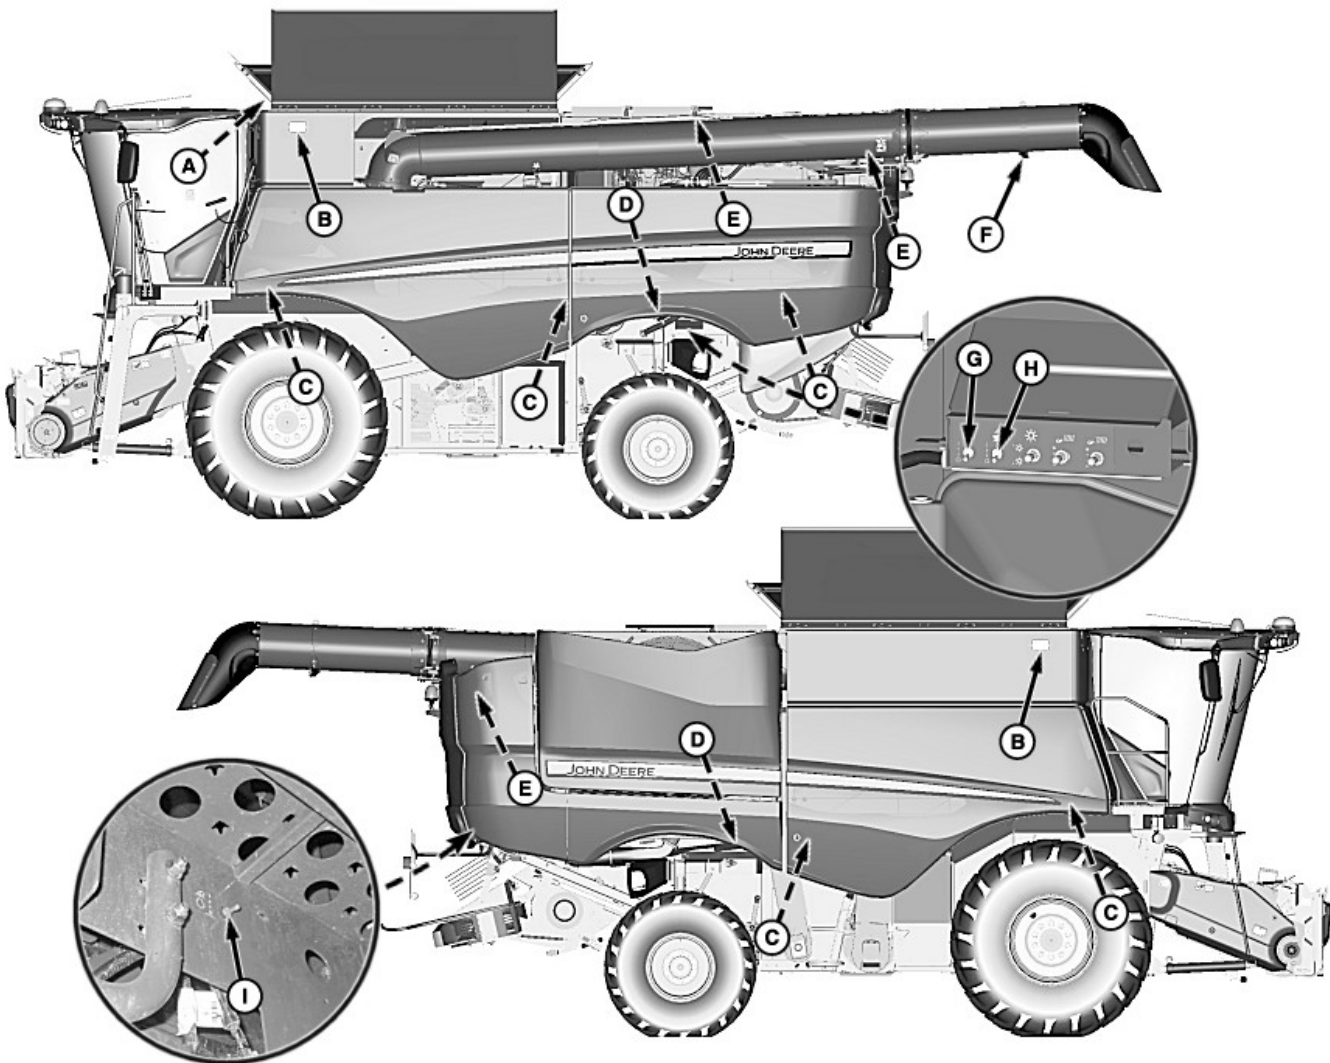

H107109—UN—28FEB13

- A—Grain Tank Light
- B—Row Finder Lights
- C—Gull Wing Service Lights
- D—Shoe Service Lights
- E—Engine Compartment Service Lights

- F—Unloading Auger Light
- G—Shoe Service Light Switch
- H—Gull Wing Service Lights Switch
- I—Engine Compartment Service Lights Switch

Field Lights

- Controls grain tank light (A), row finder lights (B) (with the turn signal lever), unloading auger light (F), and marker/hazard lights.
- Row finder lights provide operator with area lighting on each side of the machine for night operation and low light conditions.


- Grain tank light turns OFF when grain reaches the 3/4 full sensor.
- Unloading auger light comes ON when the auger is extended more than 50% with field light switch ON.
- Unloading auger light provides lighting for unloading grain tank at night or low light conditions.

OUO6075,00049AF-19-31MAY18

NOTE: With Field Light ON, use turn signal lever to actuate either right or left side row finder light.

- Grain tank light provides operator with lighting in the grain tank for night operation and low light conditions.

Lighting Locations (Left and Right Side View Lights Continued)

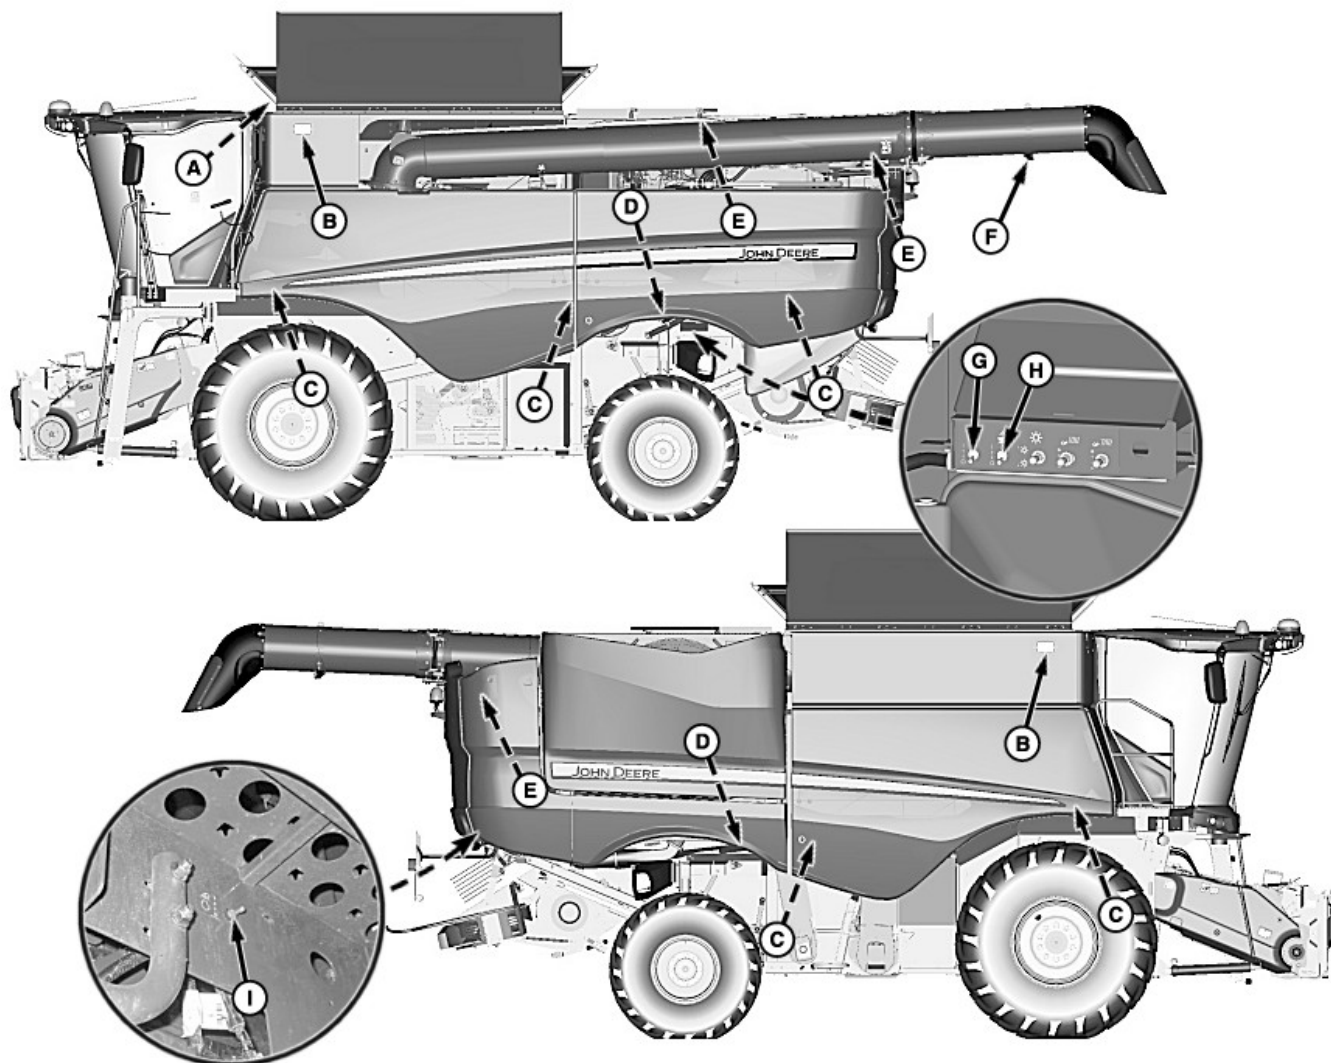

H107109—UN—28FEB13

- A—Grain Tank Light
- B—Row Finder Lights
- C—Gull Wing Service Lights
- D—Shoe Service Lights
- E—Engine Compartment Service Lights

Shoe Service Lights

NOTE: If operator leaves seat after separator is engaged, shoe service lights flash and will continue to flash until separator speed reaches zero.

- Shoe service lights (D) provide operator with lighting for cleaning shoe adjustment at night or low light conditions.
- Shoe service lights ON/OFF switch (G) is located above the left-hand separator shield.
- Illuminates during maintenance and service operations (not during harvest).

- F—Unloading Auger Light
- G—Shoe Service Light Switch
- H—Gull Wing Service Lights Switch
- I—Engine Compartment Service Lights Switch

Gull Wing Service Lights (Optional)

CAUTION: Avoid motorist confusion. Do not operate gull wing service lights when transporting.


NOTE: If operator leaves seat after separator is engaged, gull wing service lights flash and will continue to flash until separator speed reaches zero.

- Gull wing service lights (C) are provided on both sides of the machine under the gull wing doors and provide better visibility of separator area.

- Gull wing service lights ON/OFF switch (H) is located above the left-hand separator shield.

OUO6075,00049B0-19-31MAY18

Lighting Locations (Left and Right Side View Lights Continued)

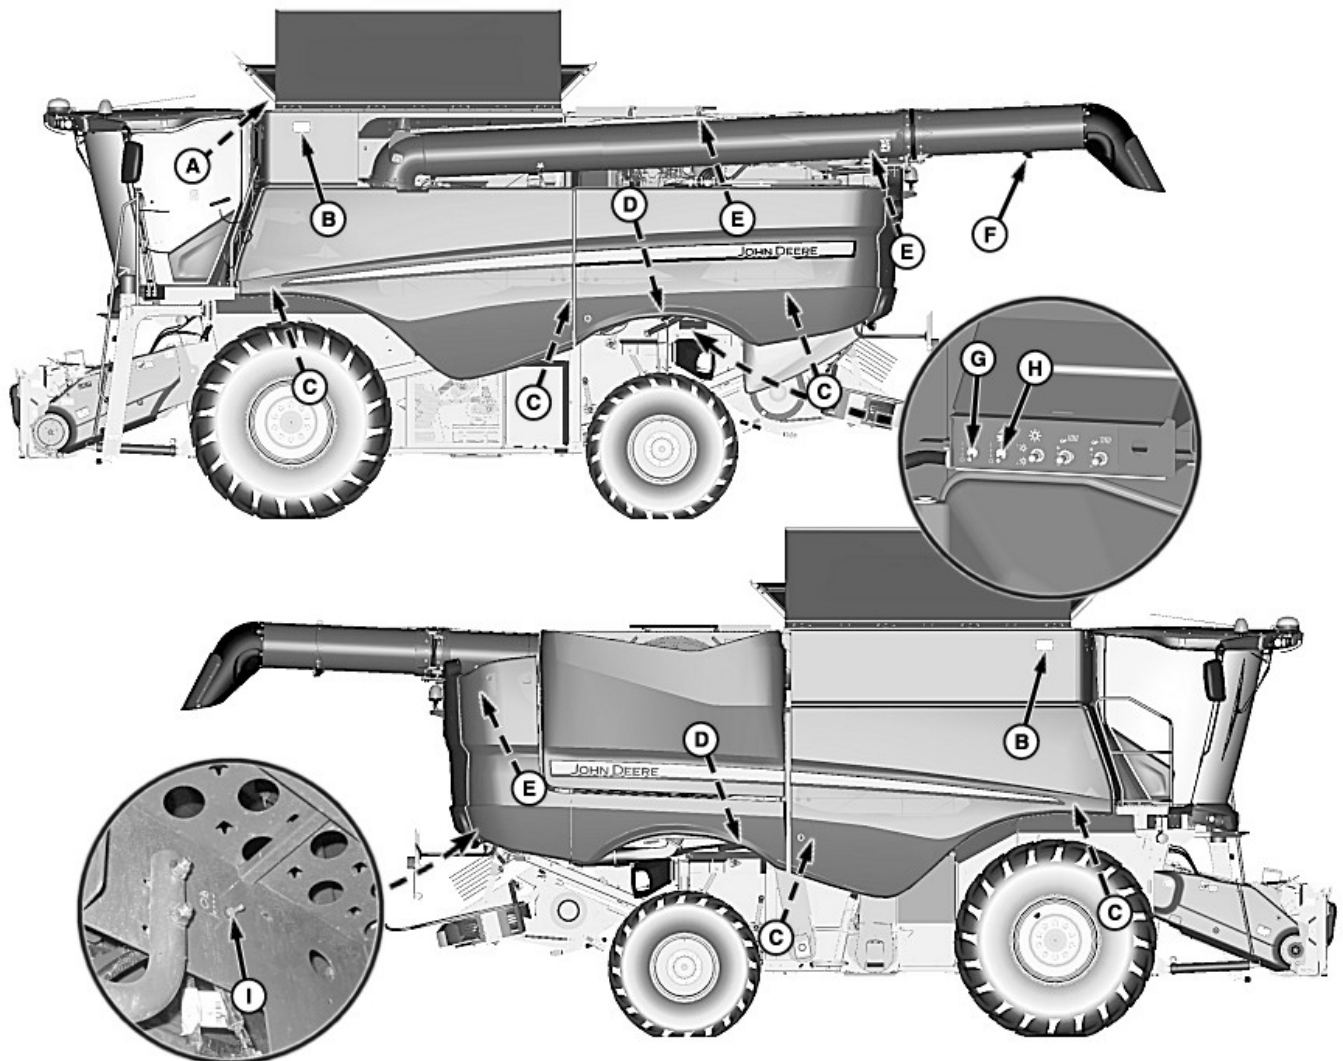

H107109—UN—28FEB13

- A—Grain Tank Light
- B—Row Finder Lights
- C—Gull Wing Service Lights
- D—Shoe Service Lights
- E—Engine Compartment Service Lights

- F—Unloading Auger Light
- G—Shoe Service Light Switch
- H—Gull Wing Service Lights Switch
- I—Engine Compartment Service Lights Switch

Engine Compartment Service Lights (Optional)

CAUTION: Avoid motorist confusion. Do not operate engine compartment service lights when transporting.

- Engine compartment service lights (E) provide lighting for engine deck area at night or low light conditions.
- Engine compartment service lights ON/OFF switch (I) is on the right-hand rear side of machine.
- Switch controls engine compartment door light, rear

engine deck light, and engine compartment front light.

- Illuminates during maintenance and service operations (not during harvest).

Exit Lighting

- Row finder lights (B) remain on for a maximum of 180 seconds after key switch and light switch are turned OFF (if road or field lights were in use within the previous 5 minutes). Operator chooses to light left or right side of machine using turn signal lever.

OUC6075,00049B1-19-31MAY18

Lighting Delay/Timeout


When all lights are first turned to the ON position with key switch OFF, there is a slight delay. Machine is determining whether current battery voltage exists to operate lights without the machine running. This feature is built into the machine to help prevent too much voltage being drawn from the battery, which may prevent machine from starting.

NOTE: After Cleaning Shoe Lights, Service Lights or Engine Compartment Service Lights are ON for over 10 minutes lights flash, then turn OFF momentarily, then back ON for 20 seconds. This cycle continues for 3 minutes, then lights turn OFF until switch is cycled. If lights do not come back on after switch is cycled, machine has determined that battery voltage is too low to allow light operation. Lights come on again once the engine is running and the batteries are recharging.


OUO6075,0004937-19-12APR18

Feeder House


Hydraulic Cylinder Safety Stop

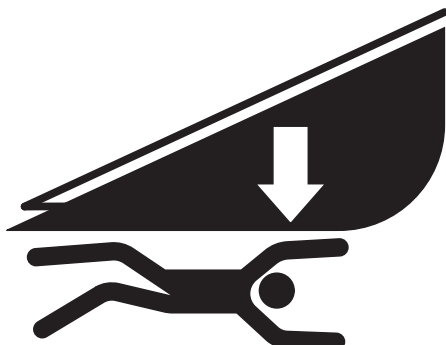

H121063—UN—14MAR17

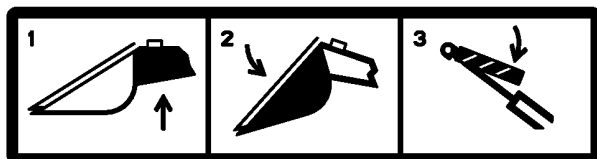

H112829—UN—18FEB15

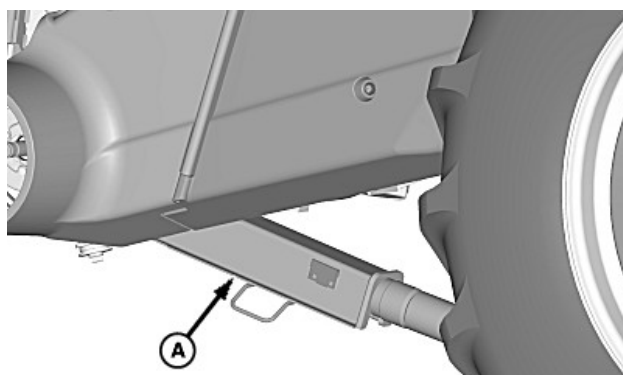

H90891—UN—26FEB08

A—Safety Stop

CAUTION: Shut OFF engine, set park brake and remove key.

Cracking of hydraulic line fittings to lower the feeder house results in an instantaneous dropping of the feeder house and header.

Manual Feeder House Fore/Aft Tilt

Raise feeder house completely and lower safety stop (A) onto hydraulic cylinder rod.

Shut OFF engine, set park brake and remove key.

Hydraulic Feeder House Fore/Aft Tilt

Raise feeder house completely and tilt hydraulic feeder

house fore/aft tilt frame fully forward and lower safety stop (A) onto hydraulic cylinder rod.


Shut OFF engine, set park brake and remove key.

NOTE: When feeder house is raised and header is engaged, feeder house fore/aft tilt automatically moves forward allowing feeder house safety stop to be lowered onto hydraulic cylinder rod. Feeder house fore/aft tilt automatically returns to last known position when lowering.


When the header is disengaged, feeder house fore/aft tilt automatically moves forward upon raising. Feeder house fore/aft tilt will not return to last known position when lowering.

OUO6075,00046F1-19-29MAR17

Feeder House Side Shields

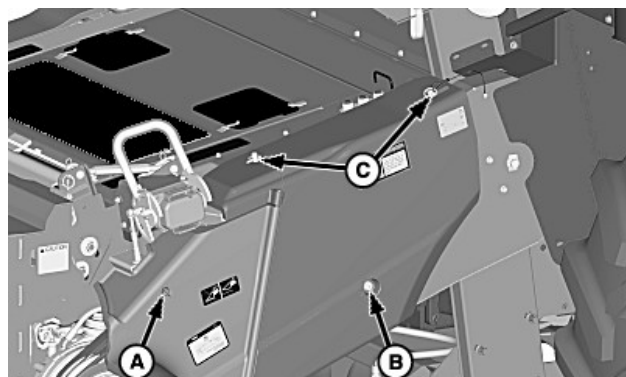

H91044—UN—27MAR08

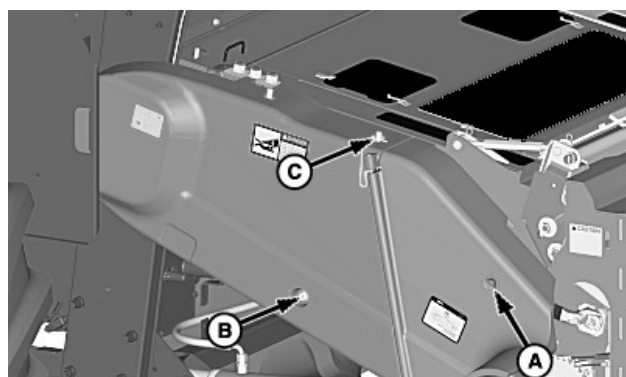

H91045—UN—27MAR08

A—Latch
B—Latch
C—Quick-Lock Pin

CAUTION: Raise the feeder house and lower the safety stop. Shut OFF engine, set park brake, and remove key.


The feeder house shields have a front and rear shield.

1. Turn latch (A) and swing the front shield open for service.


2. Turn latch (B) and remove quick-lock pins (C) to remove the rear shield.
3. Install and close the shields before operating the machine.

OUO6075,0004E85-19-16JUN20

Feeder House Doors

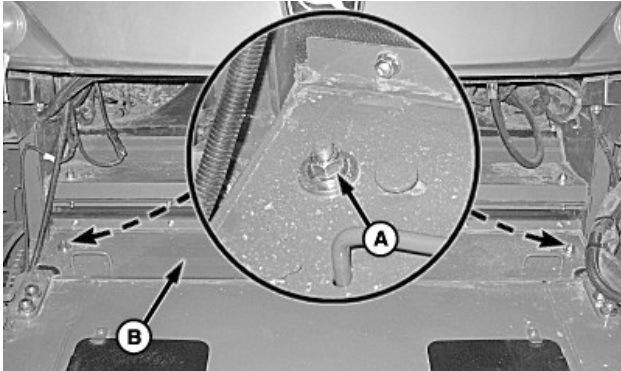

H100486—UN—28FEB11

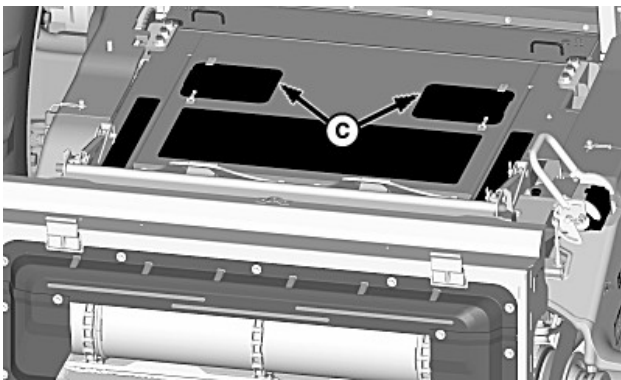

H90905—UN—27FEB08


A—Nut (2 used)
B—Door
C—Door (2 used)

CAUTION: Shut OFF engine, set park brake, and remove key.


1. Loosen nuts (A) on each side of the door and push nuts towards the center of the feeder house.
2. Pull the door (B) forward to remove.
3. Lift doors (C) to access the inside of the feeder house.
4. Close the doors before operating the machine.

OUO6075,0004E86-19-16JUN20

Feed Accelerator Top Access Door

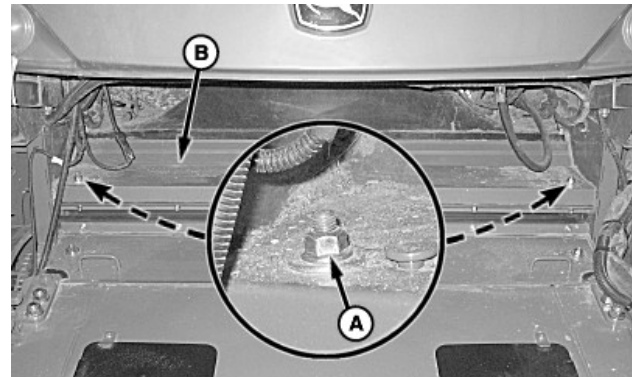

H100487—UN—28FEB11

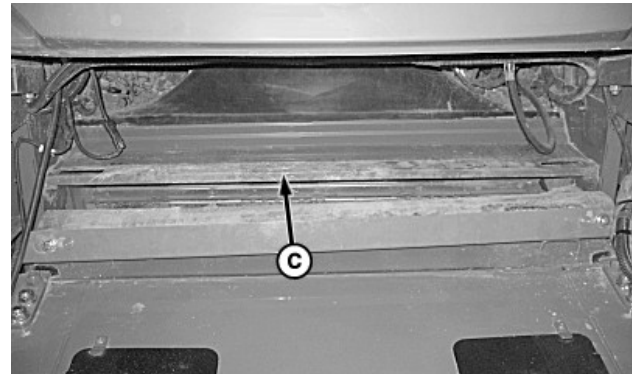

H100488—UN—28FEB11


A—Nut (2 used)
B—Door
C—Door

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Loosen nuts (A) on each side of the door and push nuts towards the center of the machine.
2. Pull door (B) forward to remove.
3. Slide door (C) forward to remove.
4. Close the doors before operating the machine.

OUO6075,0004E87-19-16JUN20

Feeder House Bottom Door and Feed Plate Seal Support (Style A)

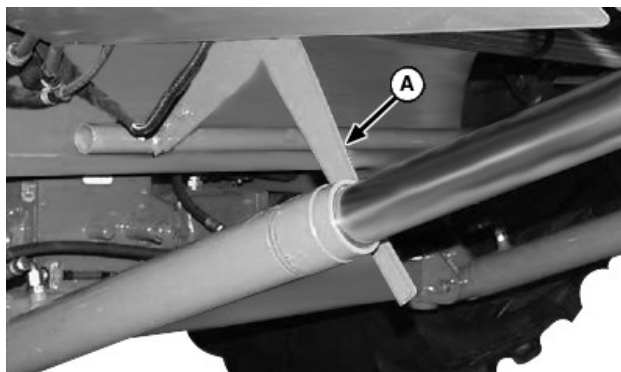

A—Lever


H52761—UN—17MAY99

CAUTION: Raise feeder house, lower safety stop, shut OFF engine, set park brake and remove key.

Remove quick-lock pin and move lever (A) down and rearward.

IMPORTANT: Lever will be bent if left down when feeder house is lowered.

Push lever forward and up to close door. Retain with the previously removed quick-lock pin.

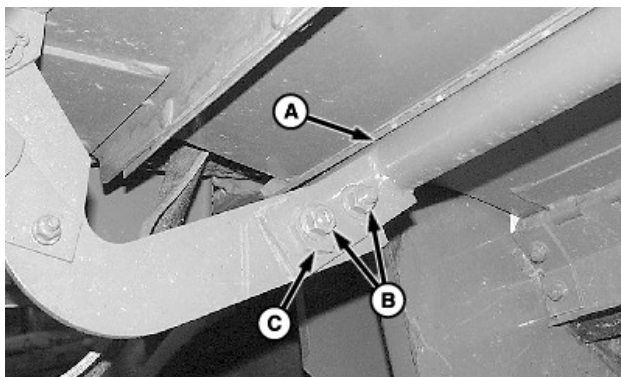

A—Crossbar Support
B—Cap Screws
C—Eccentric

H74778—UN—14JAN03

If crossbar support (A) does not seal tightly against the feed plate, grain leakage could occur.

Loosen cap screws (B) on both sides.


Turn eccentric (C).

Tighten cap screw securing eccentric.

Tighten remaining cap screws.

OUO6075,0004554-19-01DEC16

Feeder House Bottom Door and Feed Plate Seal Support (Style B)

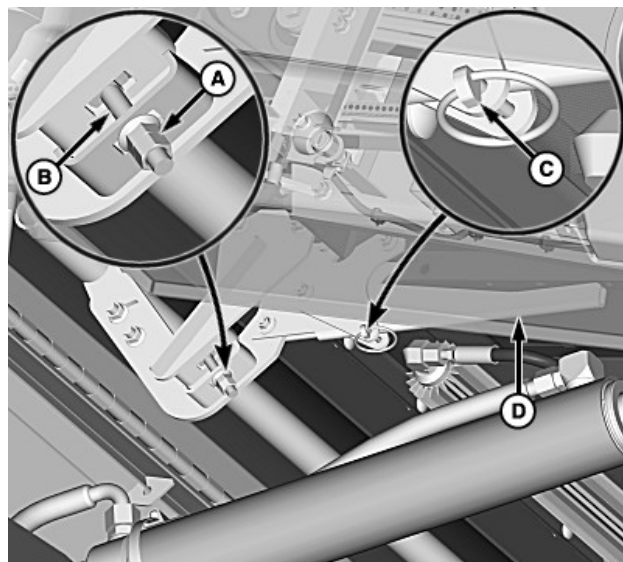

H120113—UN—29NOV16

A—Nuts
B—Round Head Bolt
C—Quick-Lock Pin
D—Lever

CAUTION: Raise feeder house, lower safety stop, shut OFF engine, set park brake and remove key.


1. Remove nuts (A) and round head bolt (B) on both sides of the machine.
2. Remove quick-lock pin (C) and move lever (D) down and rearward.

CAUTION: The left-hand feeder house lift cylinder hose fitting can become damaged by contact from the feeder house bottom door if the door is left open while moving the feeder house down. If the fitting becomes damaged, hydraulic oil can release from the fitting and the feeder house can suddenly and unexpectedly drop to the ground.

IMPORTANT: Lever will be bent if left down when feeder house is lowered.

3. Push lever forward and up to close door. Retain with previously removed quick-lock pin.
4. Install previously removed round head bolt (B) and nuts (A) on both sides of the machine.


Feed Plate Adjustment

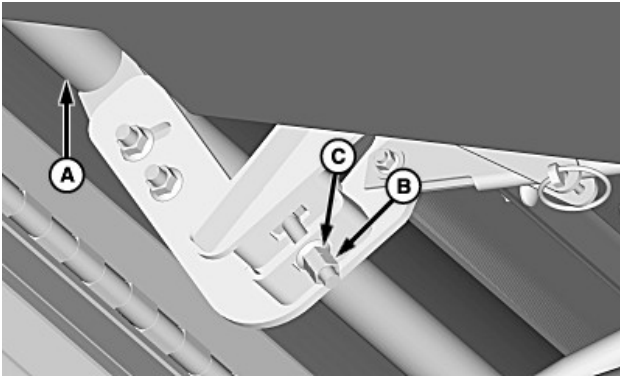


H120114—UN—29NOV16

A—Crossbar Support
B—Nut
C—Nut

1. If crossbar support (A) does not seal tightly against the feed plate, grain leakage could occur.
2. On the side that has the gap, loosen nut (B) and tighten nut (C) as needed.
3. Tighten previously loosened nut (B) against nut (C).

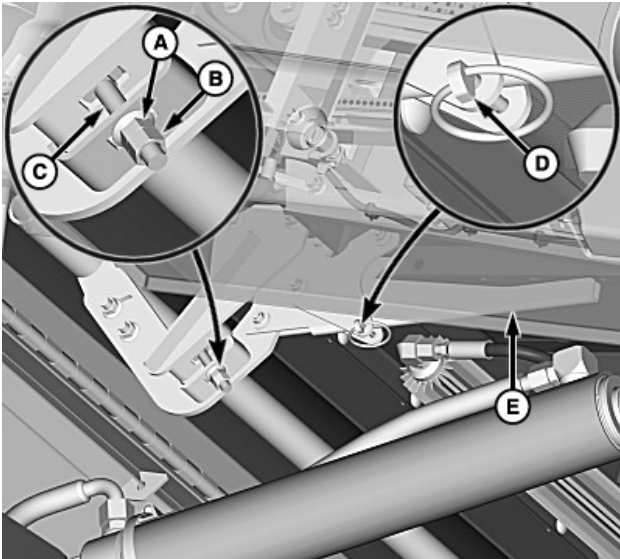

H120116—UN—29NOV16

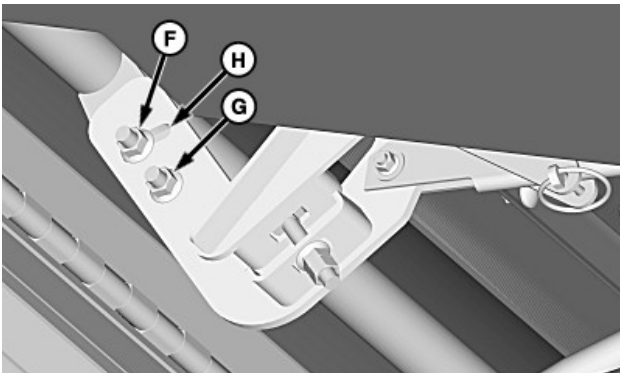

H120115—UN—29NOV16

A—Nut
B—Nut
C—Round Head Bolt

D—Quick-Lock Pin
E—Lever
F—Nut
G—Nut
H—Slot


4. If further adjustment is needed, remove nuts (A and B) from the round head bolt (C) on both sides of the machine.
5. Remove quick-lock pin (D) and move lever (E) down and rearward.
6. Loosen nuts (F and G) and adjust crossbar support as needed in slot (H).
7. Tighten previously loosened nuts (F and G).

NOTE: Lever should close easily without a high amount of force.

8. Push lever (E) forward and up to close door. Retain with the previously removed quick-lock pin (D).
9. Install previously removed round head bolt (C) and tighten nut (A) on both sides of the machine.
10. Tighten previously removed nut (B) against nut (A) on both sides of the machine.

OUC6075,0004CB9-19-24OCT19

Stone Trap

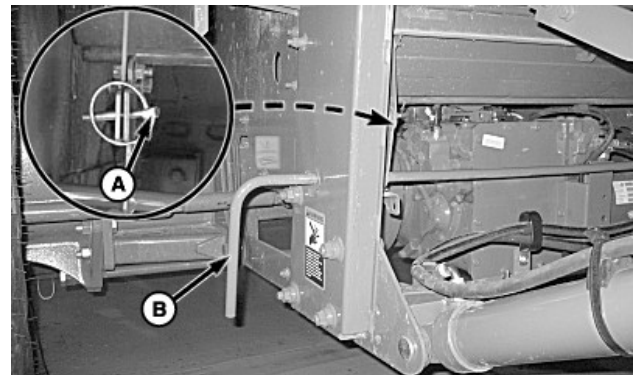

H99239—UN—01DEC10

A—Quick-Lock Pin
B—Lever

CAUTION: Raise feeder house, lower safety stop, shut OFF engine, set parking brake and remove key.


Stone trap protects the cylinder and concave from rock or stone damage.

Remove quick-lock pin (A) and move lever (B) up to open stone trap.


Move lever down to close stone trap. Retain with quick-lock pin.

OUC6075,000065C-19-01DEC10

Adjust and Set Feeder House Fore/Aft Tilt Frame (Manual Tilt)

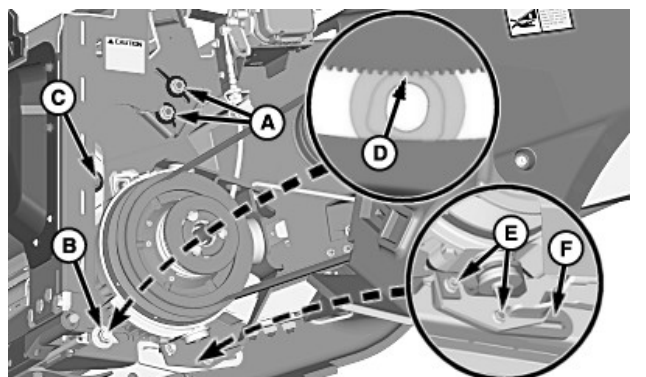

H95791—UN—22MAR10

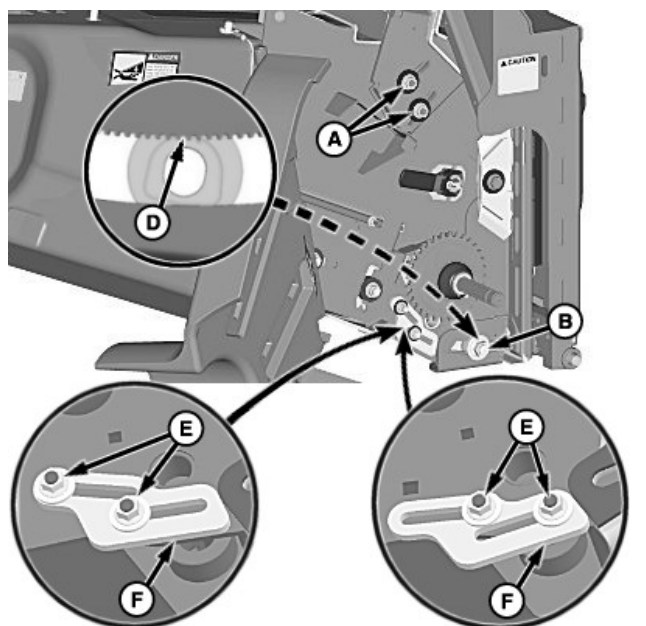

H105003—UN—08MAR12

Rearward Holes (Left) / Forward Holes (Right)

- A—Tilt Frame Nuts, M16
- B—Tilt Frame Nut, M20
- C—Cap Screw
- D—Washer Splines
- E—Nuts
- F—Stop Plate

CAUTION: Lower header to ground to relieve tension from fore/aft tilt frame turnbuckles. Shut OFF engine, set parking brake and remove key.

Fore/Aft tilt frame is used to set the correct relationship between platform skid plates and the ground. It compensates for different tire sizes, rear axle settings, and other variables.


Loosen tilt frame nuts (A) and nut (B) on both sides.

IMPORTANT: Do not loosen cap screw (C).

Disengage washer splines (D) from support plate on both sides.

NOTE: Move right-hand stop plate to rearward mounting holes if needed.

Loosen nuts (E) and move stop plate (F) rearward on both sides.

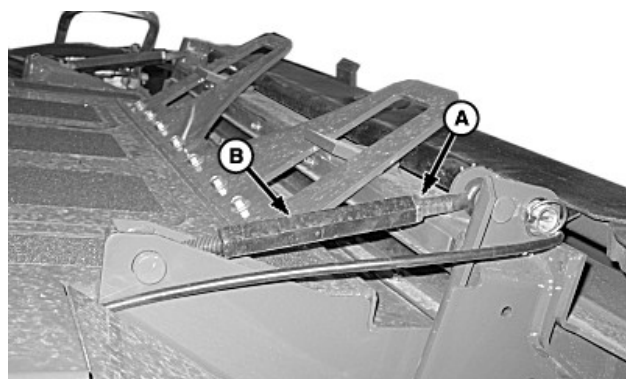


H105751—UN—05SEP12

- A—Nut
- B—Turnbuckle


IMPORTANT: Hose clamp on multi-coupler may need to be repositioned when adjusting fore/aft tilt frame.

Loosen nut (A) and adjust turnbuckle (B) on both sides as needed for correct header angle.

Tighten turnbuckle nut on both sides.

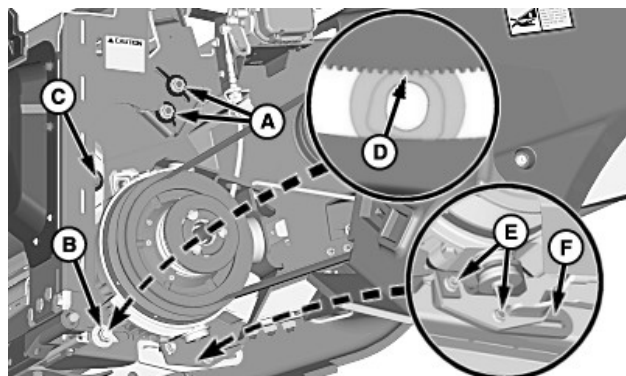

H95791—UN—22MAR10

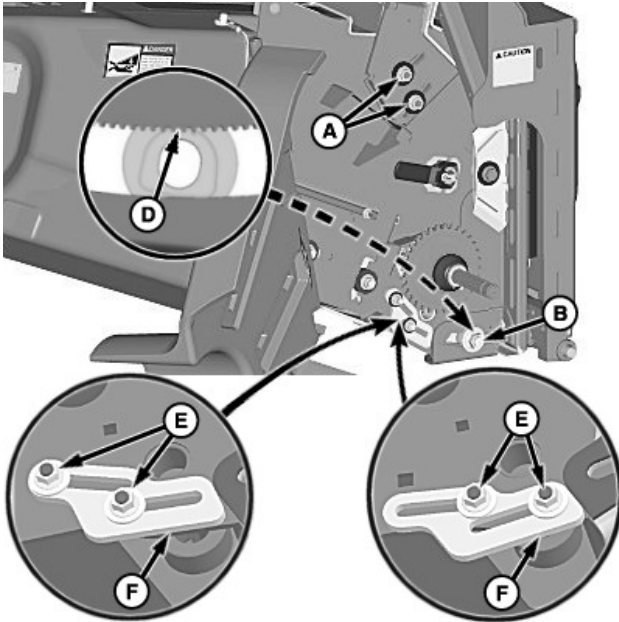

H105003—UN—08MAR12

Rearward Holes (Left) / Forward Holes (Right)

- A—Tilt Frame Nuts, M16
 B—Tilt Frame Nut, M20
 C—Cap Screw
 D—Washer Splines
 E—Nuts
 F—Stop Plate

Engage washer splines (D) into support plate and tighten tilt frame nuts (A and B) on both sides to specification.

Specification

M16 Tilt Frame Nuts	
(A)—Torque.	300 N·m (221 lb.-ft.)
M20 Tilt Frame Nut (B)—Torque.	620 N·m (460 lb.-ft.)


IMPORTANT: No gap should exist between stop plates and fore/aft tilt frame after tightening nuts.

NOTE: Attach right-hand stop plate to forward or rearward holes as needed.

Move stop plate (F) fully forward on both sides and tighten nuts (E) to specification.

Specification

Stop Plate Nuts—Torque.	130 N·m (96 lb.-ft.)
---------------------------------	-------------------------

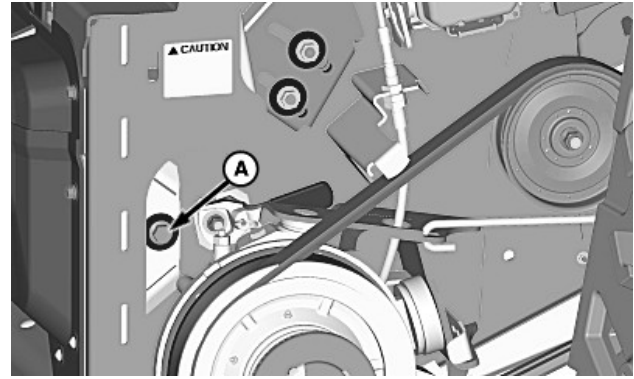

H94359—UN—24JUN09

A—Pivot Bolt

Tilt frame is set to an approximate position at factory, but if tires or axle positions are changed or ground conditions change (soft ground), it may be necessary to readjust.

An approximate setting can be obtained without a header attached by the following:

- With machine on a smooth level surface, lower or raise feeder house until pivot bolt (A) to ground distance is set to specification.


Specification

Pivot Bolt To Ground—Distance.	903 mm (35-1/2 in.)
--	------------------------

- Using a level as a reference, adjust fore/aft tilt frame until front face is vertical.

OUO6075,0001757-19-12MAR14

Set Feeder House Fore/Aft Tilt Frame Zero Point (Hydraulic Tilt) (If Equipped)

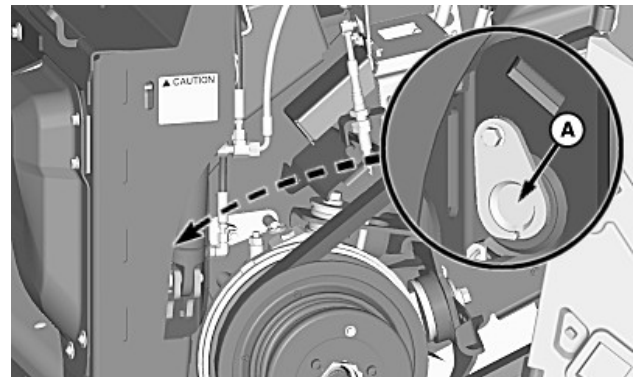

H109755—UN—03FEB14

A—Pivot Pin

CAUTION: Alert others around the machine to stay clear while calibration is being performed.

Fore/Aft tilt frame is used to set the correct relationship between platform skid plates and the ground. It compensates for the different tire sizes, rear axle settings, and other variables.

The tilt frame is set to an approximate position at factory, but if tires or axle positions are changed or ground conditions change (soft ground), it may be necessary to readjust the zero point.

NOTE: If field conditions are normal, calibration can be done on level concrete.

If field conditions are soft (leaving ruts), calibration **MUST** be done in a level location in the field.

An approximate setting can be obtained without a header attached. See Calibrations Application Help or Operator's Station Help to calibrate Feeder House Tilt Fore/Aft Range. During the calibration, set the zero point by measuring the following:

1. Tilt the fore/aft frame fully forward.
2. Lower or raise the feeder house until the pivot pin (A) to ground distance is set to specification.

Specification

Pivot Pin to Ground (Starting Point)—Distance. 1016 mm (40 in)

NOTE: A level can also be used to adjust the fore/aft tilt frame until the front face is vertical.

3. Adjust the fore/aft tilt frame until the front face is perpendicular to the ground.
4. When the fore/aft tilt frame is perpendicular to the ground or the front face of the fore/aft tilt frame is vertical, the pivot pin to ground distance is set approximately to specification.


Specification

Pivot Pin to Ground (Final Point)—Distance. 903 mm (35-1/2 in)


NOTE: During the calibration, the fore/aft tilt frame adjustment changes the pivot pin to ground distance initially from 1016 mm (40 in) to approximately 903 mm (35-1/2 in) for the final point.

OUO6075,0004F61-19-14MAY21

Feeder House Conveyor Chain—Adjusting

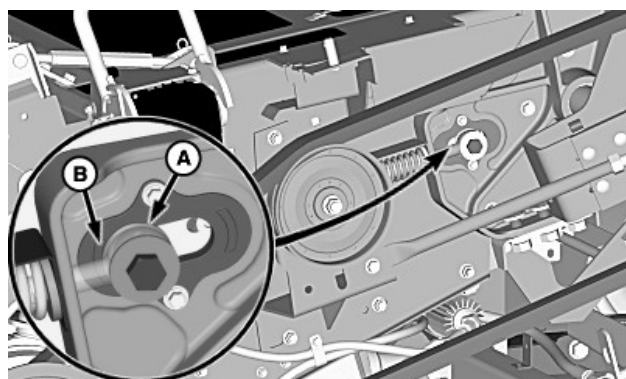

H94329—UN—19JUN09

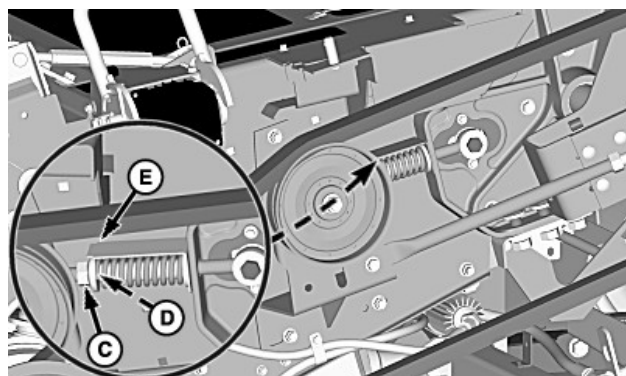

H94336—UN—22JUN09

A—Washer
B—Embossment
C—Nut
D—Washer
E—Gauge

Remove feeder house shields on both sides.

One offset link on each chain strand must be removed when washer (A) aligns with inner edge of front embossment (B) as shown.

Tighten nut (C) on both sides of feeder house until washer (D) is between end of gauge (E) and bottom of step.


NOTE: Check tension on both sides every 25 hours for the first 100 hours.

- Check tension on both sides every 100 hours. Adjust when any part of washer is beyond end of gauge.
- Out-of-round sprockets or drum and bent shafts can cause chain tension to be uneven, too tight, or too loose.
- Excessive chain tension causes shaft and bearing failures.

Install feeder house side shields.


OUO6075,000067C-19-22NOV10

Feeder House Conveyor Chain Links—Removing

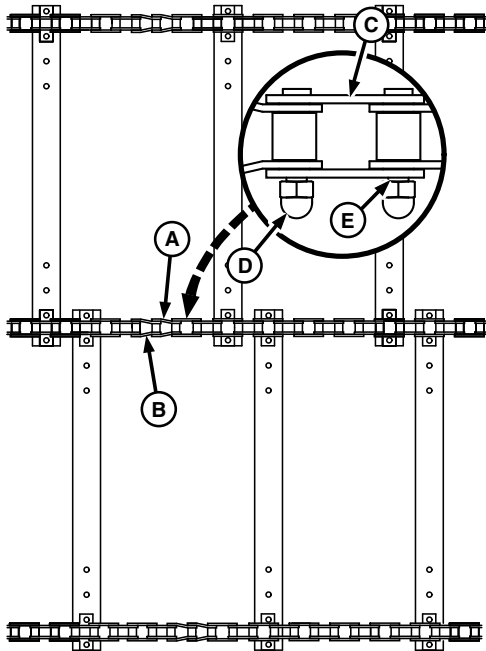

H87543—UN—17APR07

Three Strand Feeder House Conveyor Chain

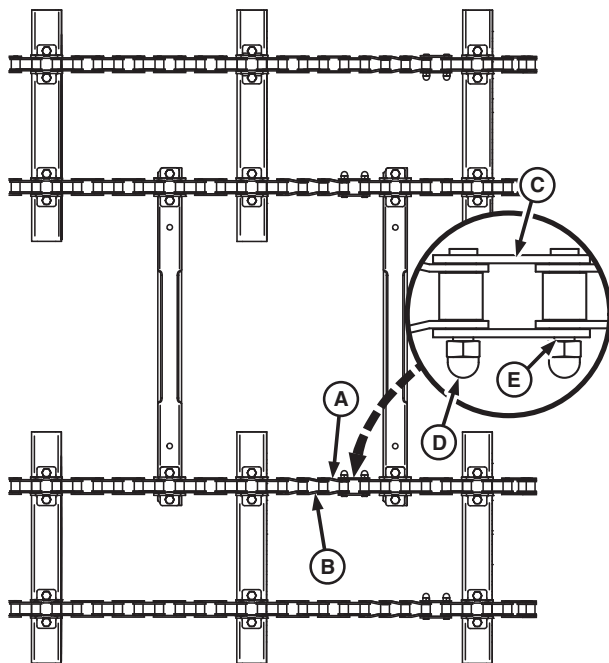

H109687—UN—30JAN14

Four Strand Feeder House Conveyor Chain

- A—Offset Link
 B—Offset Link
 C—Sidebar
 D—Cap Nut
 E—Gap, 1—2 mm (3/64 in.—5/64 in.)

NOTE: Three strand feeder house conveyor chain is only available on HillMaster™ machines.

When replacing chain links always check sprockets for wear.

Remove offset links (A) for initial chain adjustment.

Remove offset links (B) for second adjustment. When adjustment is used up from second adjustment, chain is worn out and must be replaced.

Specification

"U" Slat M10 Hardware—Torque 73 N·m
(54 lb.-ft.)

Chain Link M8 Cap


Nuts—Torque 25 N·m
(18 lb.-ft.)

IMPORTANT: When installing connector links, cap nuts must be oriented away from drum rings.

When chain link cap nuts (D) are torqued to specification, gap (E) should exist between connector link sidebar (C) and cap nut.


OUO6075.0001755-19-03FEB14

Feeder House Drum (Manual Tilt)—Height Adjustment

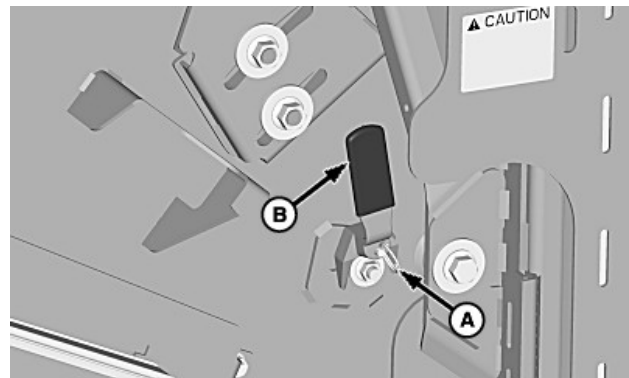

H90908—UN—27FEB08

Corn Only Position

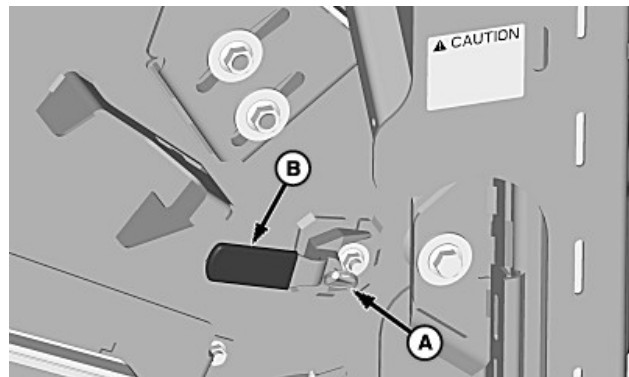

H90909—UN—27FEB08

Small Grain Position

HillMaster is a trademark of Deere & Company

A—Pin
B—Drum Height Handle

CAUTION: Raise feeder house, lower safety stop, shut OFF engine, set park brake and remove key.


Open feeder house shields.

Pull and hold pin (A) while rotating handle (B) to desired crop position on both sides.

Close feeder house shields.


SS43267,0000377-19-18FEB14

Feeder House Drum (Hydraulic Tilt) (If Equipped)—Height Adjustment

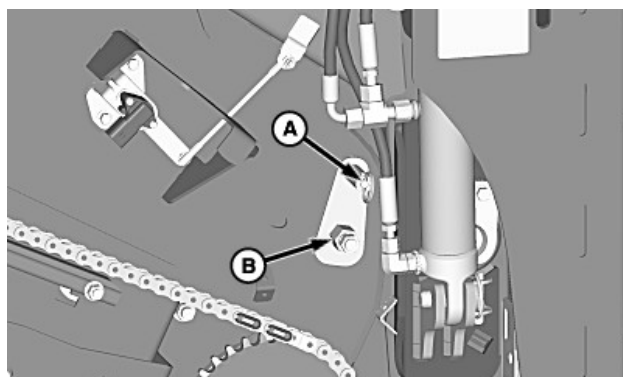

Corn Only Position

H109756—UN—04FEB14

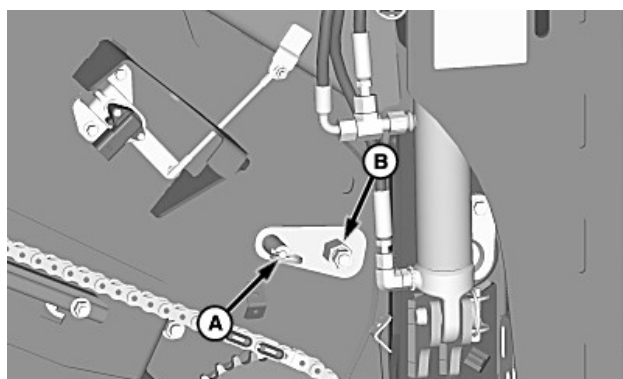

Small Grain Position

H109757—UN—04FEB14

A—Pin
B—Drum Height Handle

CAUTION: Raise feeder house, lower safety stop, shut OFF engine, set park brake and remove key.

Open feeder house shields.


Pull and hold pin (A) while rotating drum height handle (B) to desired crop position on both sides.

NOTE: Use a socket or wrench to rotate drum height handle.

Close feeder house shields.

SS43267,00004EA-19-05MAR15

Feeder House Conveyor Speed—Changing

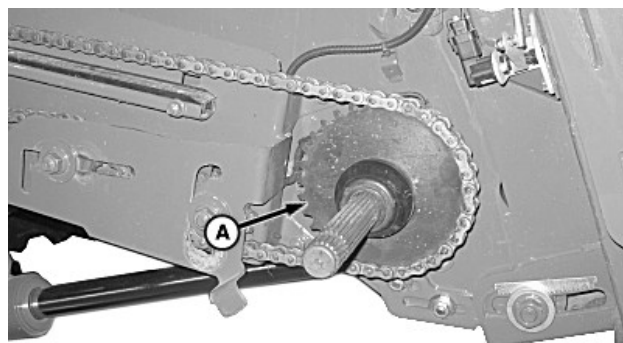

H102187—UN—13JUN11

A—Sprocket

CAUTION: Raise feeder house, lower safety stop, shut OFF engine, set parking brake and remove key.

NOTE: Refer to Crop Settings section for recommended feeder house conveyor sprocket settings.


Important Notes About 32-Tooth Sprocket:

- Sprocket is not recommended for corn use.
- Recommended for conditions when feeding is poor due to following crops and conditions:**
 - **Crops:** Barley, Canola, Oats, Rice, Rye, and Wheat
 - **Conditions:** High Volume, Green, Wet, Windrowed, and Poor Feeding

As crop conditions change or feeding improves (drier, more even windrows, lighter straw), it is recommended to use the 26 tooth sprocket. Chain speed slows and reduces potential for straw damage or pre-threshing and extends chain life.

Feeder conveyor chain can be set to two different speeds by selecting drive sprocket (A) on right-hand side of the lower shaft.


Use small sprocket for slow speed and large sprocket for high speed.

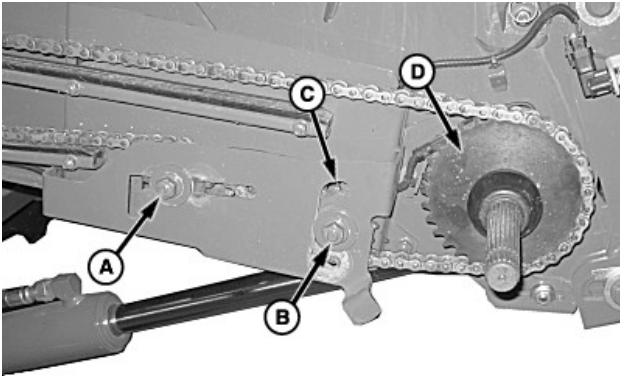

H102188—UN—13JUN11

A—Nut
B—Nut
C—Upper Position
D—Sprocket


1. **To move drive chain to smaller sprocket:** Open right-hand front shield.
2. Loosen nut (A) and push sprocket rearward.
3. Loosen nut (B) and move sprocket to upper position (C).
4. Push in on coupler and move sprocket (D) outward until it engages detent.

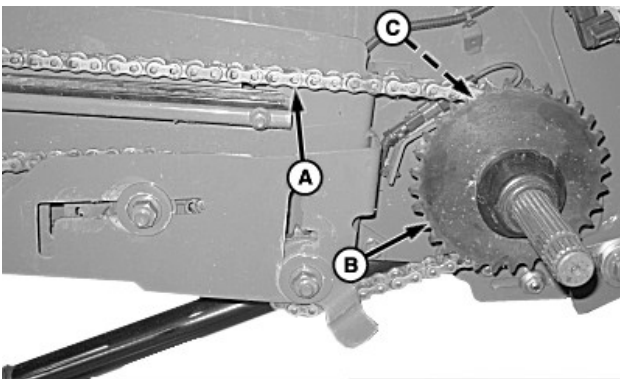


H102189—UN—13JUN11

A—Chain
B—Large Sprocket
C—Small Sprocket

5. Move chain (A) from large sprocket (B) to small sprocket (C).

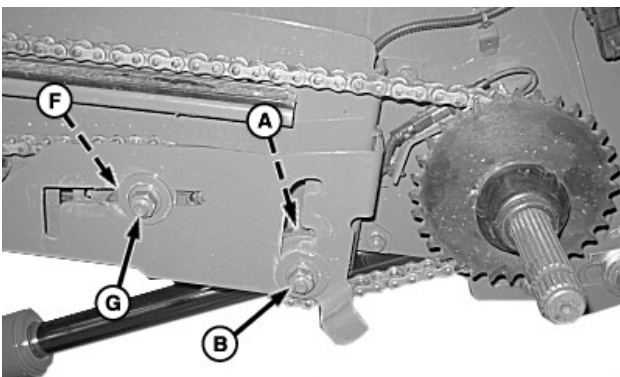

H102190—UN—13JUN11

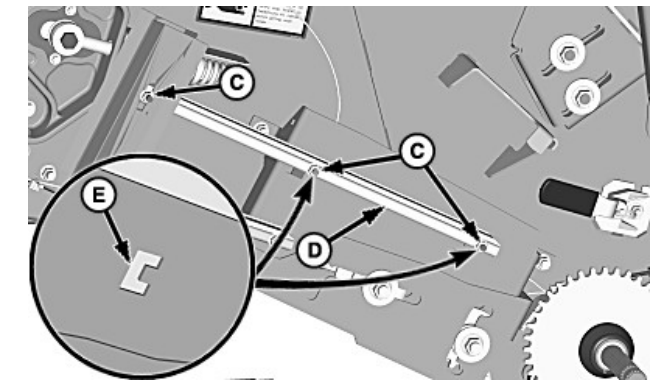

H91064—UN—02APR08

A—Sprocket
B—Nut
C—Nuts
D—Chain Guide
E—Notches
F—Sprocket
G—Nut


6. Move sprocket (A) to lower position and tighten nut (B).
7. Loosen nuts (C) and slide chain guide (D) into desired notches (E) and tighten nuts.

NOTE: Do not over tighten feeder conveyor drive chain. It is acceptable for chain to ride on plastic guide.

8. Use pry bar in holes of inside plate to move sprocket (F) forward and tighten nut (G).
9. Close right-hand front shield.

OUO6075.0000661-19-13JUN11

Feeder House Conveyor Drive Chain Links—Removing

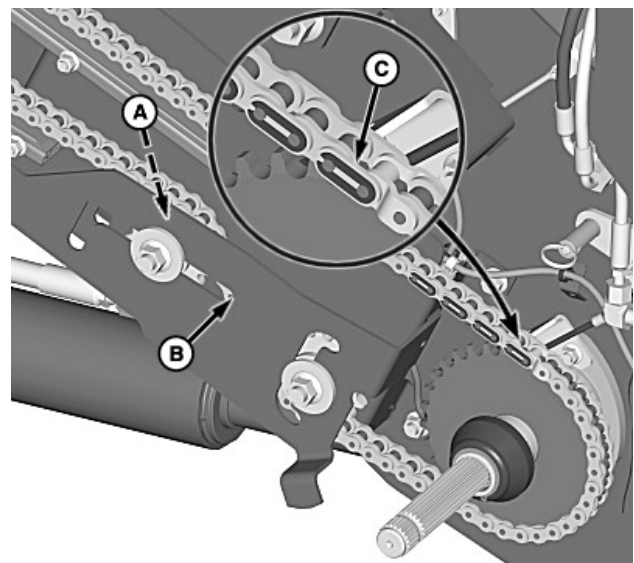

H123467—UN—14FEB18

A—Sprocket
B—End of Slot
C—Connector Link

It is normal for the drive chain to stretch over time. Additional connector links allow the drive chain to be used longer.

NOTE: When removing connector links, always check sprockets for wear.


When the sprocket (A) reaches the end of slot (B) remove connector link (C).

See Feeder House Conveyor Drive Chain—Adjusting for further information.

When the final adjustment is used up, the chain is worn out and must be replaced.

OUC6075,00048B0-19-04JUN19

Feeder House Conveyor Drive Chain—Adjusting

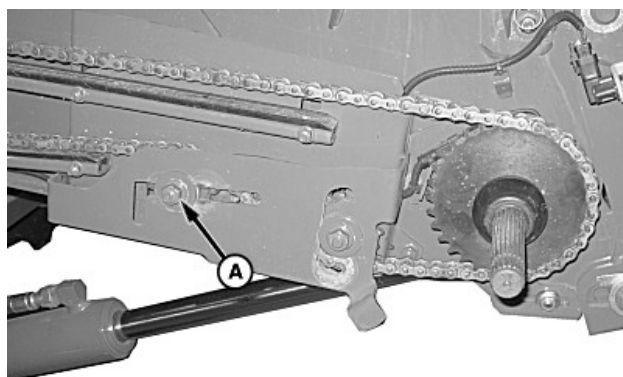

A—Nut

H102191—UN—13JUN11

CAUTION: Raise feeder house, lower safety stop, shut OFF engine, set parking brake and remove key.

Open right-hand front shield.

Loosen nut (A) and push sprocket rearward.


NOTE: Do not over tighten feeder conveyor drive chain. It is acceptable for chain to ride on plastic guide.

Use pry bar in holes on inside plate to move sprocket forward and tighten nut (A).

Close right-hand front shield.

OUC6075,0000662-19-13JUN11

Feeder House Top Shaft Sprockets

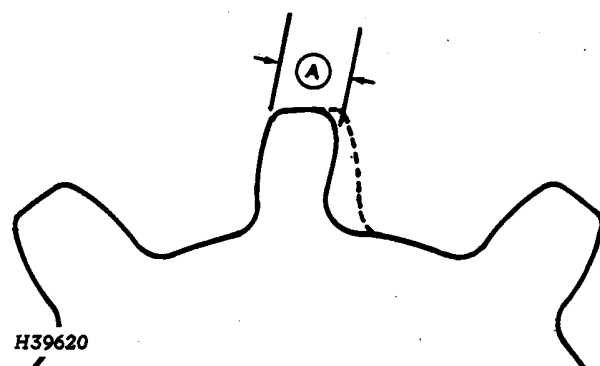

H39620—UN—11OCT88


A—Dimension 12 mm (1/2 in.)

After 1000 hours, depending on the crops being harvested, check the upper shaft sprockets for wear.

If these sprockets are worn past 12 mm (1/2 in.) (A), sprockets can be reversed for additional wear.

OUC6075,0000665-19-02FEB10

Feeder House Variable Speed Drive Belt—Replacing

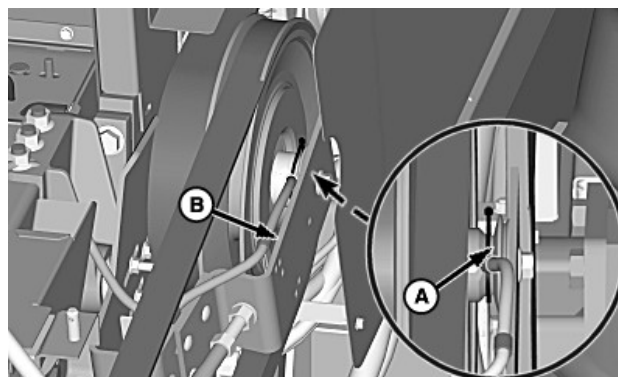

H90912—UN—28FEB08

A—Rubber Boot
B—Bracket

CAUTION: Lower variable sheave is under spring tension; if belt is removed, it will snap back to a closed position.

Start engine, engage separator and move engine speed switch to fast idle. **Adjust feeder house drive belt to slow front shaft speed.**


CAUTION: Shut OFF engine, set parking brake and remove key.

Disengage separator, stop engine, and remove key.

Lower safety stop and remove left-hand feeder house shields.

Look under rubber boot (A) to verify if upper sheaves

are fully open. At low speed position, outer sheave half bulb is against bracket (B).

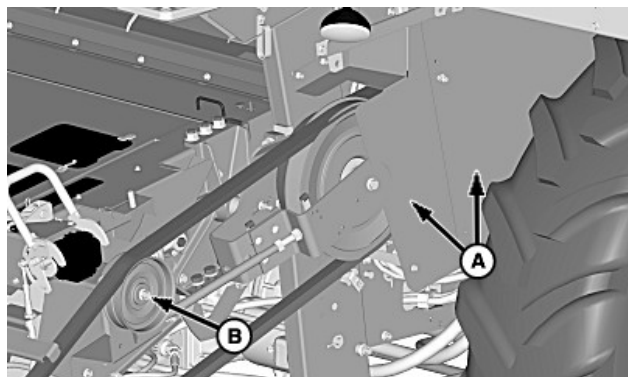


H90910—UN—27FEB08

A—Shields
B—Nut

Remove shields (A).


Loosen idler nut (B) to relieve drive belt tension.

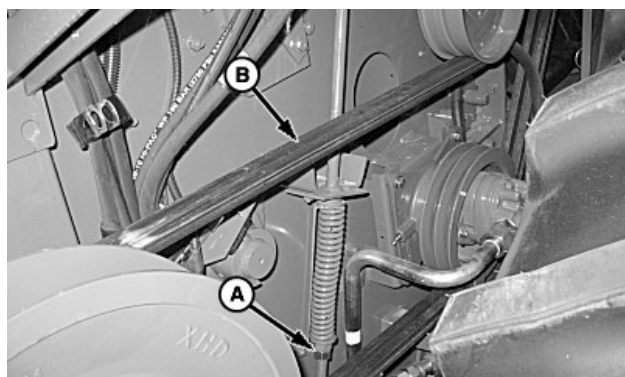

H90976—UN—06MAR08

A—Nut
B—Drive Belt

Loosen nuts (A) to relieve tension on reel drive belt (B).

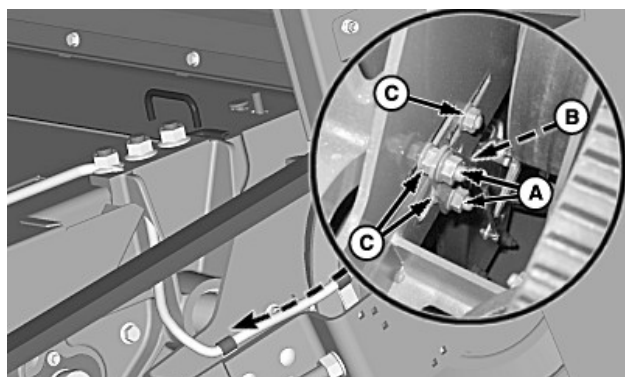


H90967—UN—05MAR08

A—Nuts (2 Used)
B—Bracket
C—Nuts (3 Used)

Remove and retain nuts (A) and bracket (B).

Loosen nuts (C) to allow upper sheave assembly to move.

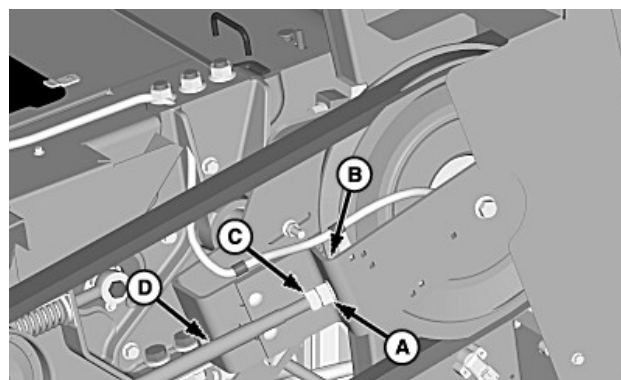

H90913—UN—28FEB08

A—Nut
B—Bracket
C—Nut
D—Tensioner


NOTE: Nut (C) must be moved and jammed against nut (A). Together these nuts can be used to turn tensioner bolt.

Loosen nut (A) away from bracket (B) until a 3 mm (1/8 in.) gap exists between either side of bracket.

Tighten nut (C) against nut (A).

NOTE: Threading bolt into tensioner allows sheave to move forward to remove drive belt.

Use nut (A) to screw threaded bolt into tensioner (D).

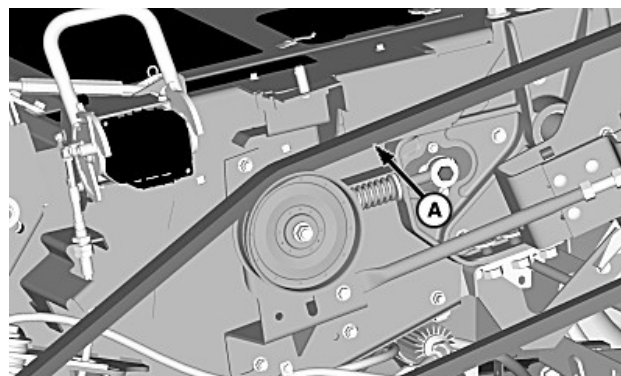

H90911—UN—28FEB08

A—Drive Belt


Remove drive belt (A) from sheaves.

Install replacement drive belt and adjust tension. (See Feeder House Variable Speed Belt—Adjusting).

Install bracket and feeder house shields previously removed.

OUC06075.0000666-19-02FEB10

Feeder House Variable Speed Drive Belt—Adjusting

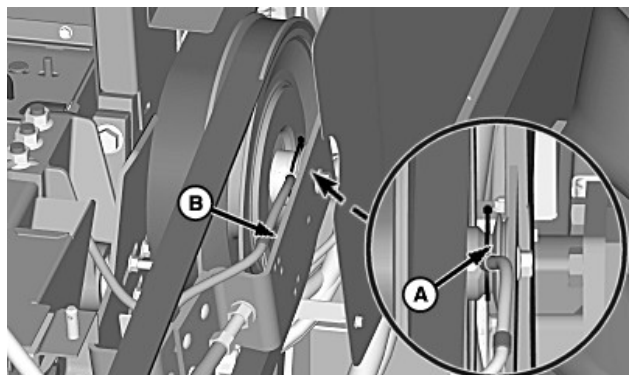

H90912—UN—28FEB08

A—Rubber Boot
B—Bracket


NOTE: Minor adjustments can be made to variable speed belt by raising idler. If a 3 mm (1/8 in.) gap cannot be reached by raising idler, proceed to next step.

Start engine, engage separator and move engine speed switch to fast idle. **Adjust feeder house drive belt to slow front shaft speed.**

Disengage separator, stop engine, and remove key.

Lower safety stop and remove left-hand feeder house shields.


Look under rubber boot (A) to verify if upper sheaves are fully open. At low speed position, outer sheave half bulb is against bracket (B).

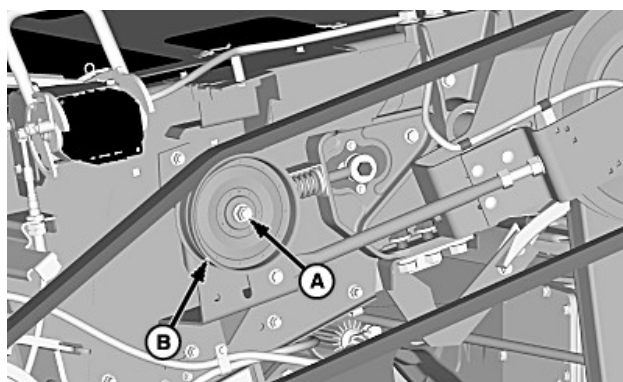

H90914—UN—28FEB08

A—Nut
B—Idler

Loosen nut (A) to adjust idler (B) to lower position.

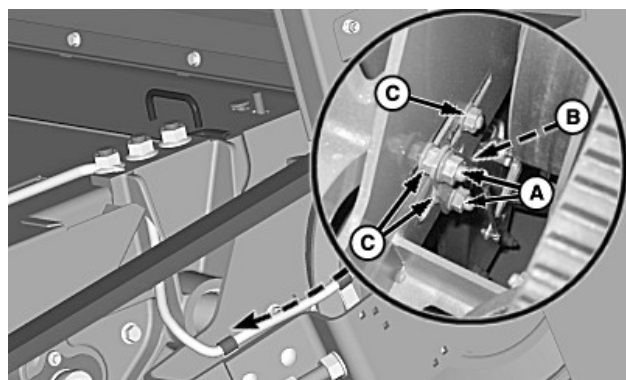


H90967—UN—05MAR08

A—Nuts (2 Used)
B—Bracket
C—Nuts (3 Used)

Remove and retain nuts (A) and bracket (B).

Loosen nuts (C) to allow upper sheave assembly to move.

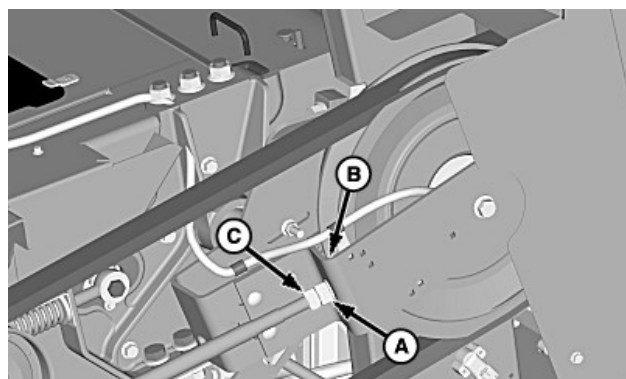


H90915—UN—28FEB08

A—Nut
B—Bracket
C—Nut


NOTE: Nut (C) must be moved and jammed against nut (A). Together these nuts can be used to turn tensioner bolt.

Loosen nut (A) away from bracket (B) until a 3 mm (1/8 in.) gap exists between either side of bracket.

Tighten nut (C) against nut (A).

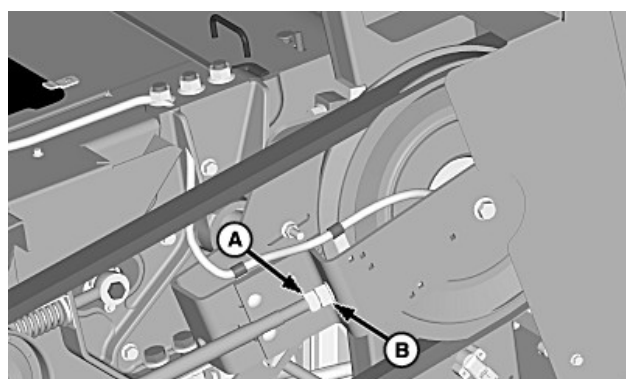

H90916—UN—28FEB08

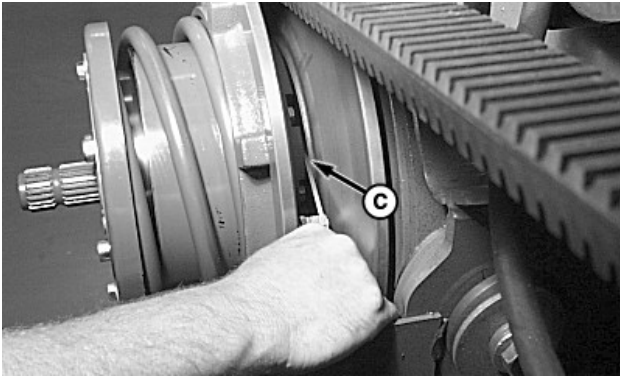

H84140—UN—26JUL05


- A—Nut
- B—Bolt
- C—Gap, 3 mm (1/8 in.)

IMPORTANT: Rotate belt while adjusting sheave gap. Failure to rotate belt while adjusting sheave gap results in belt damage.

A gap between sheave halves is important so sheave halves can grip belt when in slow speed position. Cutting platform drive shaft speed must be at slow speed.

Turn nut (A) to adjust bolt (B).


Move upper variable sheaves with bolt until a 3 mm (1/8 in.) gap exists between lower sheave halves or upper sheave assembly reaches end of slots.

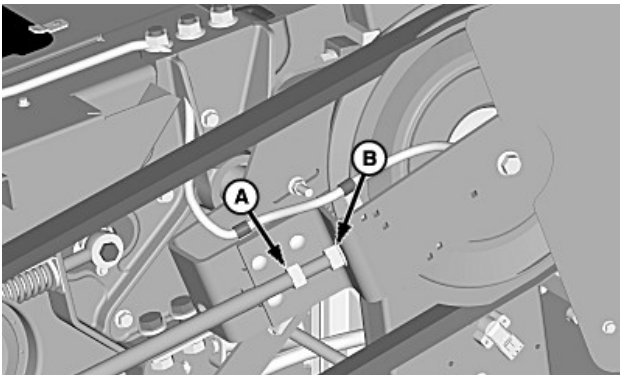

H90917—UN—28FEB08

- A—Nut
- B—Nut


Tighten nut (A) first and then nut (B).

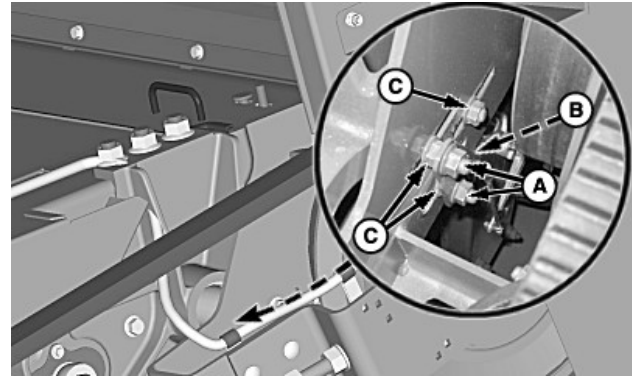

H90967—UN—05MAR08

- A—Nuts (2 Used)
- B—Bracket
- C—Nuts (3 Used)

Tighten nuts (C) and install bracket (B) and retain with nuts (A).

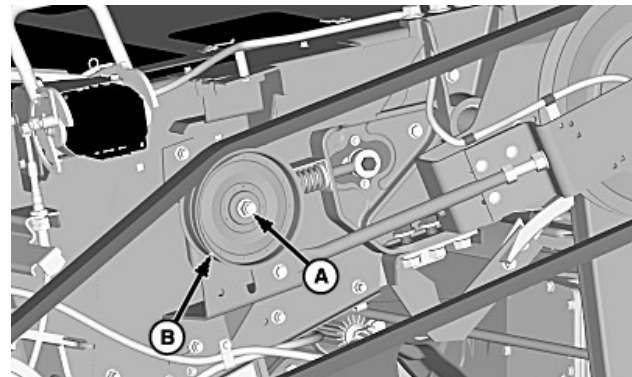


H90914—UN—28FEB08

- A—Idler
- B—Nut

IMPORTANT: DO NOT stand on belt while pushing up on idler to set gap.

Raise idler (A) until idler touches drive belt.

Raise sheave an additional 25 mm (1 in.) and tighten nut (B).

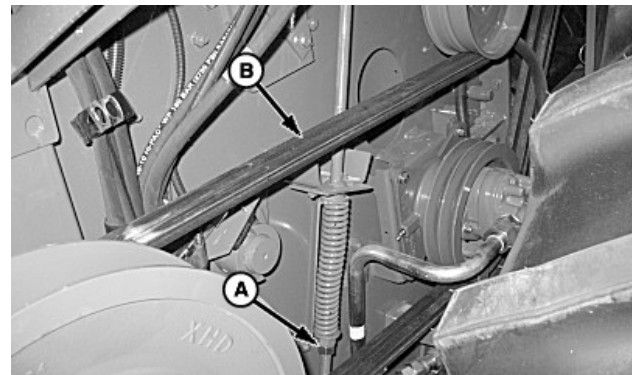

H90976—UN—06MAR08

- A—Nut
- B—Drive Belt


Tighten adjusting nut (A) to position washer between

end of gauge and bottom of step to adjust reel drive belt (B).

Install feeder house shields.

OUC6075.0000667-19-02FEB10

Header Reel/Belt Pickup Pump Belt (Variable Speed Feeder House)—Replacing

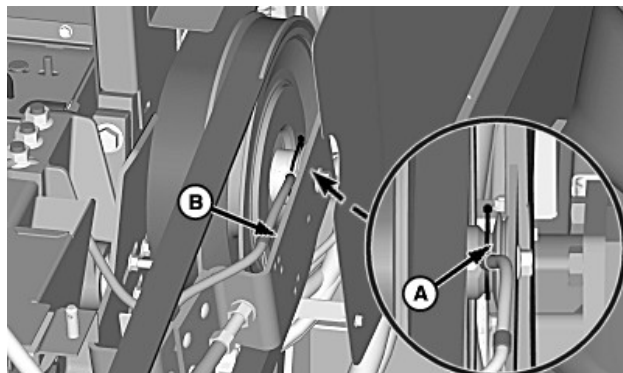

A—Rubber Boot
B—Bracket


H90912—UN—28FEB08

CAUTION: Lower variable sheave is under spring tension; if belt is removed, it snaps back to a closed position.

1. Start the engine and engage the separator.
2. Press the fast engine speed switch on the armrest.
3. **Adjust the feeder house drive belt to slow the front shaft speed.**

CAUTION: Shut OFF engine, set park brake, and remove key.


4. Disengage the separator, stop the engine, and remove the key.
5. Lower the safety stop and remove the left-hand feeder house shields.
6. Look under the rubber boot (A) to verify if the upper sheaves are fully open. At the low speed position, the outer sheave half bulb is against bracket (B).

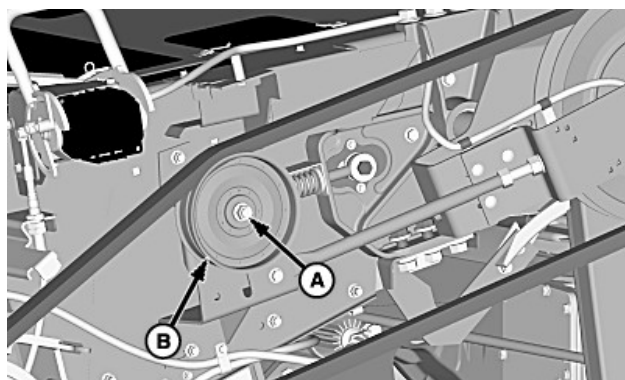

H90914—UN—28FEB08

A—Idler Nut
B—Sheave


7. Loosen idler nut (A) and slide the sheave (B) down to release the tension on the drive belt.

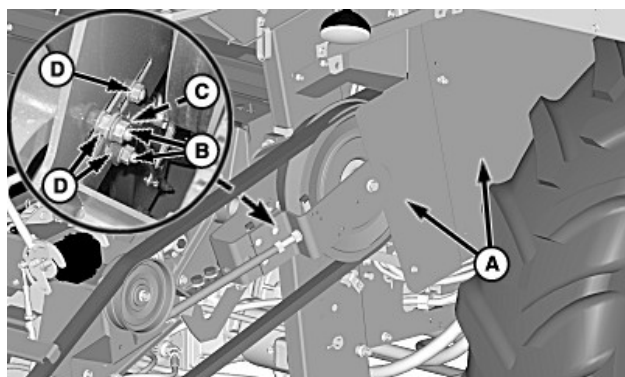

H90918—UN—05MAR08

A—Shield (2 used)
B—Nut (2 used)
C—Sensor Bracket
D—Nut (3 used)

8. Remove shields (A), nuts (B), and sensor bracket (C).
9. Loosen nuts (D) to allow the upper sheave assembly to move.

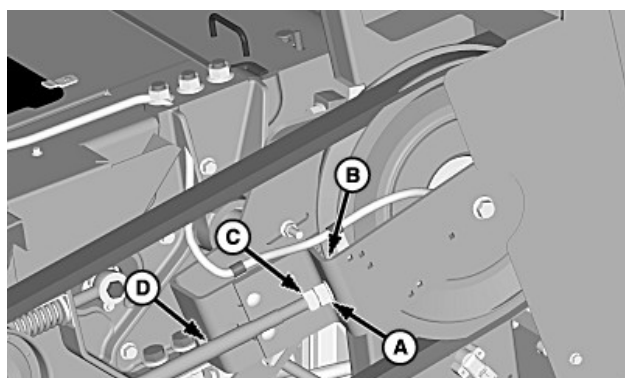

H90913—UN—28FEB08

A—Nut
B—Bracket
C—Nut
D—Tensioner Rod


NOTE: Nut (C) must be moved and jammed against nut (A). Together these nuts can be used to turn the tensioner bolt.

10. Loosen nut (A) away from the bracket (B) until a 3 mm (1/8 in) gap exists between either side of the bracket.

11. Tighten nut (C) against nut (A).

NOTE: Threading the bolt into the tensioner allows the sheave to move forward to remove the drive belt.

12. Use nut (A) to screw the threaded bolt into the tensioner rod (D).

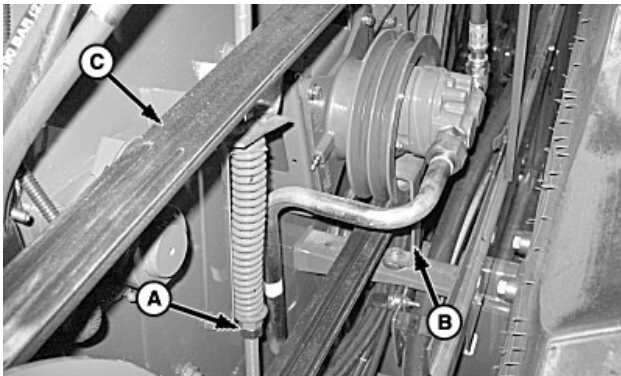


H90977—UN—06MAR08

A—Nut (2 used)
B—Bracket
C—Drive Belt

13. Loosen nuts (A) to relieve the tension from the drive belt.

14. Remove cap screw and nut to move the reel pump brace (B) out of the way so that the drive belt (C) can be removed.

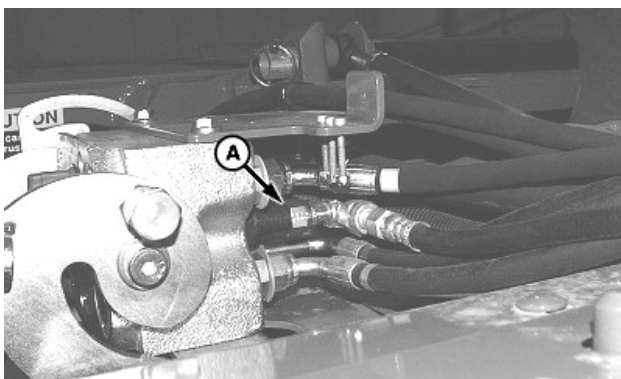


H84326—UN—26AUG05

A—Hydraulic Hose

NOTE: Cap the hydraulic hose to prevent system contamination and fluid loss.

15. Disconnect the hydraulic hose (A) from the multicoupler.

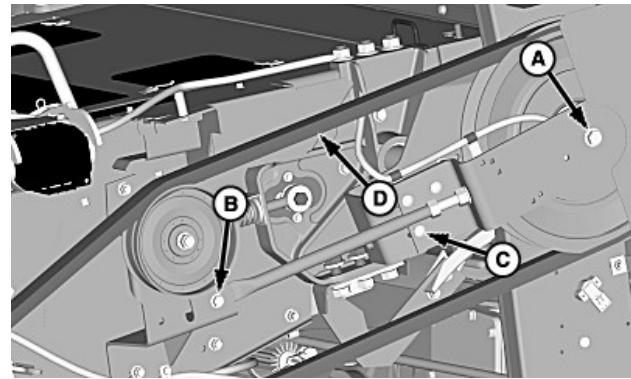


H90919—UN—28FEB08

A—Cap Screw
B—Cap Screw and Nut
C—Round Head Bolt (3 used)
D—Drive Belt

16. Remove cap screw (A), cap screw and nut (B) and round head bolts (C).

17. Remove drive belt (D) from the rear sheave.

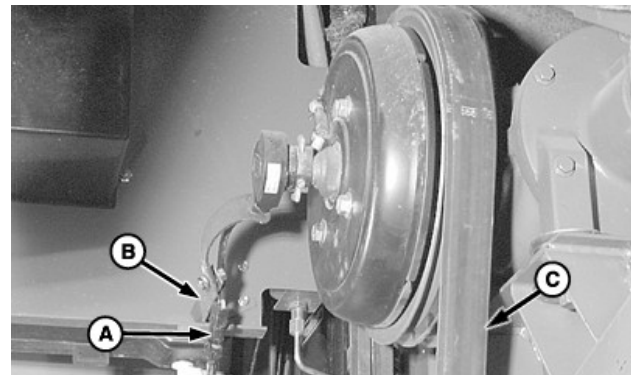

H87527—UN—27FEB07


A—Connector
B—Bracket
C—Drive Belt

18. Unplug the connector (A) and remove the strap from the bracket (B).

19. Remove and discard the drive belt (C).

20. Install the replacement drive belt.

21. Connect the strap to the bracket and reconnect the electrical connector.

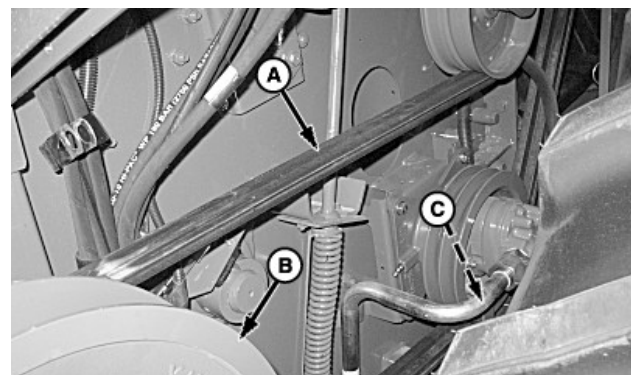


H90978—UN—06MAR08

A—Drive Belt

B—Sheave
C—Brace

22. Install the drive belt (A) around the reel pump and the rear sheave (B).
23. Install the previously removed reel pump brace (C) with the cap screw and nut.

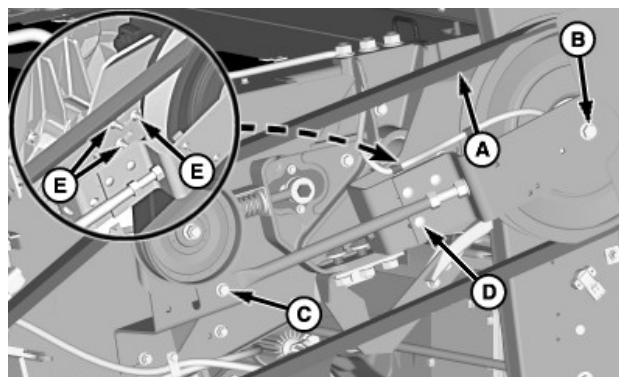

H130511—UN—17JUN20


A—Drive Belt
B—Cap Screw
C—Cap Screw and Nut
D—Round Head Bolt (3 used)
E—Nut (3 used)

24. Install the drive belt (A) around the rear sheave.
25. Install cap screw (B) and tighten to specification.

Specification

Cap Screw—Torque. 185 N·m
(136 lb·ft)


26. Tighten cap screw and nut (C).
27. Leave the round head bolts (D) loose at this time.
28. Tighten nuts (E) to prevent the upper sheave assembly from moving.

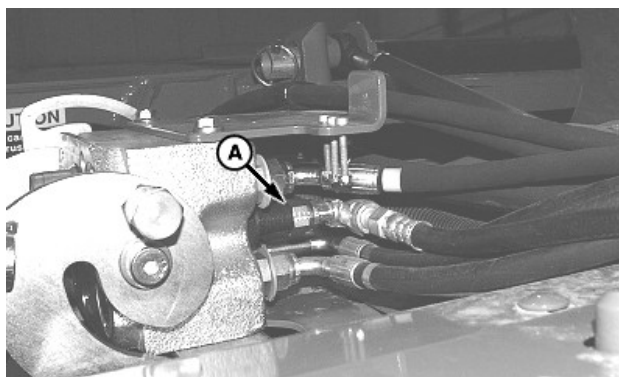

H84326—UN—26AUG05


A—Hydraulic Hose

29. Connect the hydraulic hose (A) to the multicoupler.

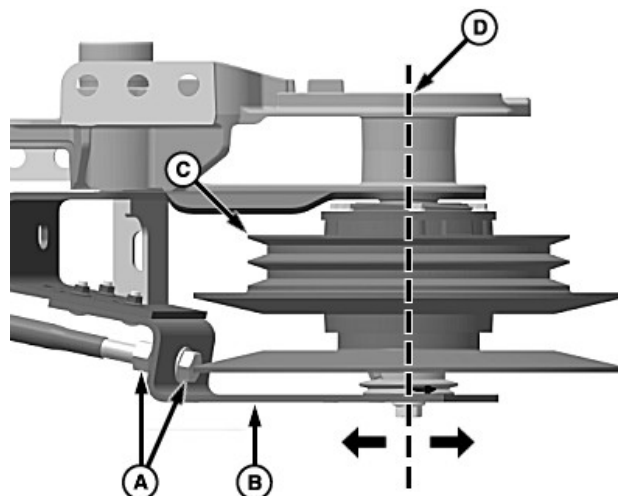

H122740—UN—15JAN18

Top View

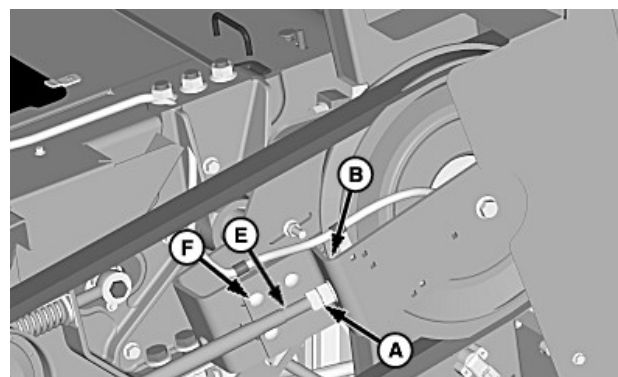

H90921—UN—28FEB08


A—Nut (2 used)
B—Outer Strap
C—Sheave (2 used)
D—Side Sheet
E—Tensioner Rod
F—Round Head Bolt (3 used)

NOTE: Check the alignment of the upper countershaft sheaves (C). Make sure that the sheaves are running parallel to the feeder house side sheet. Parallel alignment of the countershaft sheaves must be adjusted by loosening the round head bolts (F) and using the nuts (A) on the tensioner rod (E).

30. Use nuts (A) to turn the tensioner rod (E) to move the outer strap (B) forward or rearward to align sheaves (C). Outer sheaves must be parallel to the feeder house side sheet (D).
31. Tighten round head bolts (F) to specification.

Specification

Round Head Bolts—Torque. 54 N·m
(40 lb·ft)

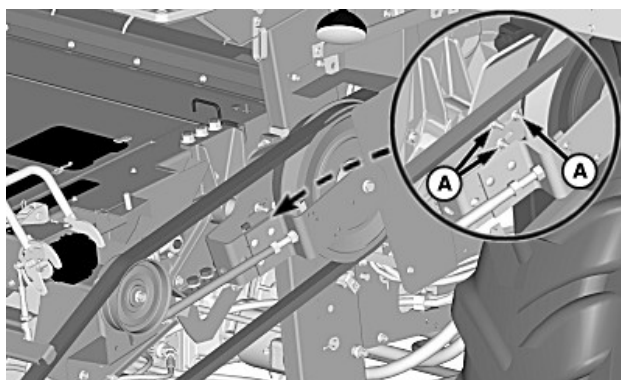

H90922—UN—28FEB08


A—Nut (3 used)

32. Loosen the previously tightened nuts (A). See Feeder House Variable Speed Belt—Adjusting to set the sheave gap.

33. Install the previously removed shields.

OUC6075,0004E88-19-16JUN20

Header Reel/Belt Pickup Pump Belt (Variable Speed Feeder House)—Adjusting

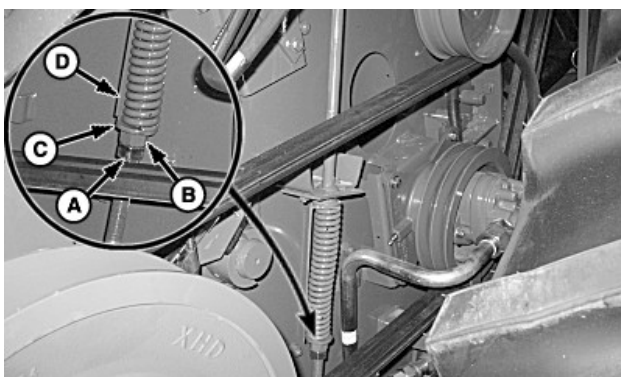

H90975—UN—06MAR08

A—Lock Nut
B—Nut
C—Washer
D—Gauge

CAUTION: Shut OFF engine, set parking brake and remove key.

Loosen lock nut (A).

Tighten nut (B) until washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUC6075,0000669-19-02FEB10

Feeder House Fixed Speed Drive Belt—Replacing




H90923—UN—28FEB08

A—Shields

CAUTION: Shut OFF engine, set parking brake and remove key.

Lower safety stop and remove left-hand feeder house shields.

Remove shields (A).

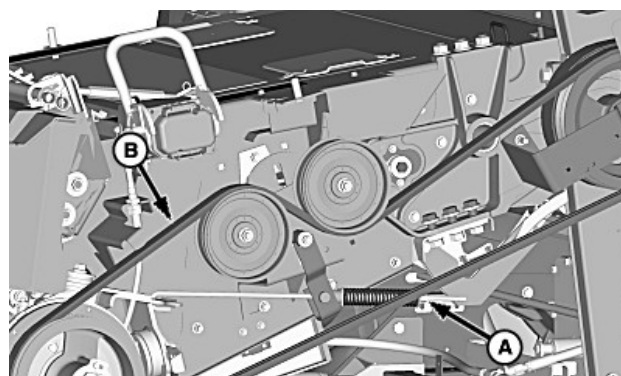

H90924—UN—28FEB08

A—Nuts
B—Drive Belt

Loosen nuts (A) to relieve tension on drive belt (B).

Remove drive belt from sheaves.


Install replacement drive belt and tighten nuts to position washer between end of gauge and bottom of step.

Swing bracket into position and retain with cap screw and nut.

Install feeder house shields previously removed.

OUC6075,000066A-19-02FEB10

Feeder House Fixed Speed Drive Belt—Adjusting

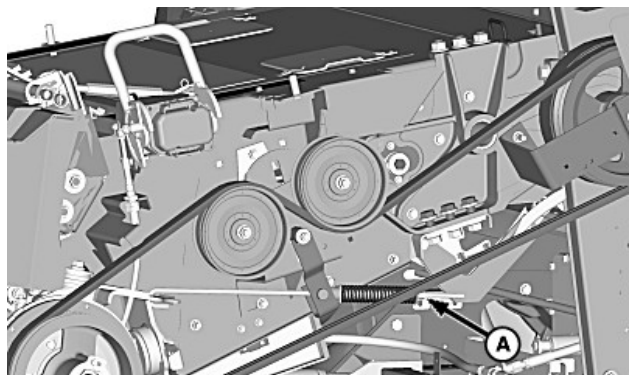

H90925—UN—28FEB08

A—Nuts


CAUTION: Shut OFF engine, set parking brake and remove key.

Lower safety stop and remove left-hand feeder house shields.

Tighten nuts (A) to position washer between end of gauge and bottom of step.

Install feeder house shields previously removed.

OUO6075.000066B-19-02FEB10

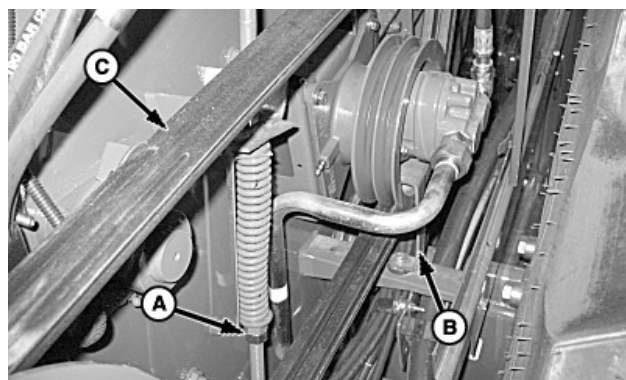


H90977—UN—06MAR08

A—Nuts
B—Brace
C—Drive Belt

Loosen nuts (A) to relieve tension from drive belt.

Remove cap screw and nut to move reel pump brace (B) out of way so drive belt (C) can be removed.

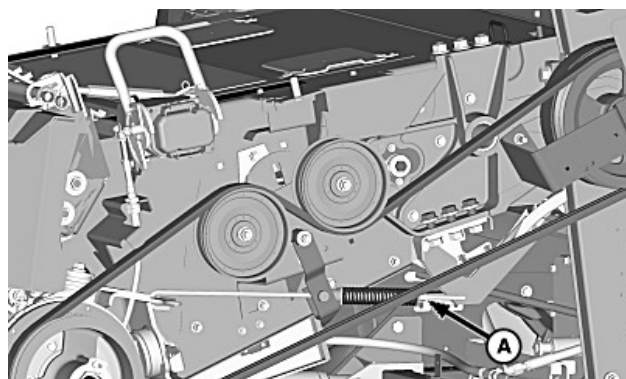

H90925—UN—28FEB08

A—Nuts

Loosen nuts (A) to relieve tension on drive belt.

Header Reel/Belt Pickup Pump Belt (Fixed Speed Feeder House)—Replacing




H90923—UN—28FEB08

A—Shields

CAUTION: Shut OFF engine, set parking brake and remove key.

Lower safety stop and remove left-hand feeder house shields.


Remove shields (A).

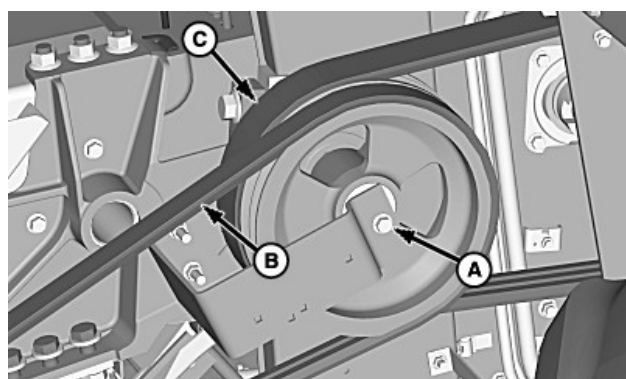

H90926—UN—28FEB08

A—Cap Screw
B—Fixed Speed Drive Belt
C—Header Reel/Belt Pickup Pump Belt

Remove cap screw (A), fixed speed drive belt (B) and header reel/belt pickup pump belt (C).

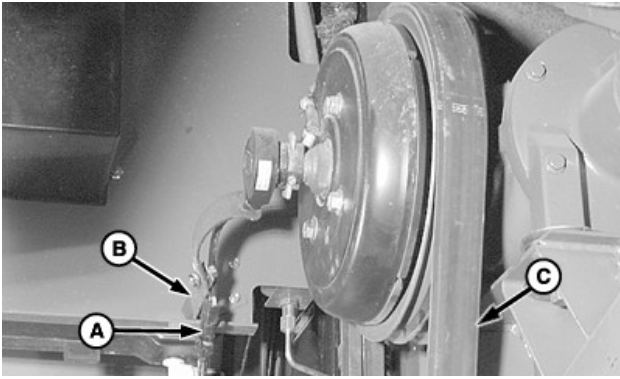


- A—Connector**
B—Bracket
C—Header Reel/Belt Pickup Pump Belt

Disconnect connector (A) and remove strap from bracket (B).

Remove and discard header reel/belt pickup pump belt (C).

Install replacement header reel/belt pickup pump belt, connect strap to bracket, and connect electrical connector.

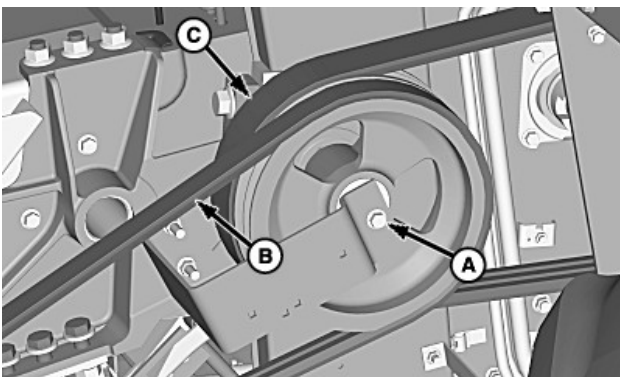


- A—Cap Screw**
B—Fixed Speed Drive Belt
C—Header Reel/Belt Pickup Pump Belt

Install replacement header reel/belt pickup pump belt (C) and fixed speed drive belt (B).

Install and tighten cap screw (A) to specification.

Specification

Cap Screw—Torque. 185 N·m
 (136 lb-ft)

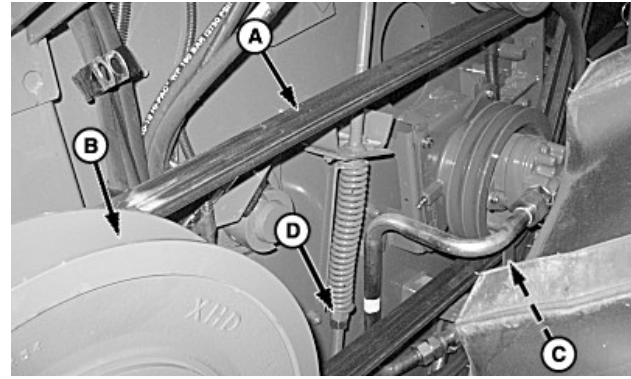


- A—Drive Belt**
B—Sheave
C—Brace
D—Nuts (2 Used)

Install drive belt (A) around reel pump and rear sheaves (B).

Install previously removed reel pump brace (C) with cap screw and nut.

Tighten nuts (D) to position washer between end of gauge and bottom of step to adjust drive belt.

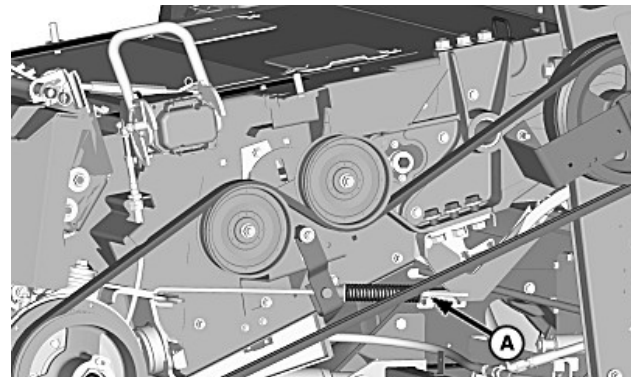


- A—Nuts**

Tighten nuts (A) to position washer between end of gauge and bottom of step to properly tension drive belt.

Install left-hand feeder house shields.

OUO6075.000066C-19-02FEB10

Header Reel/Belt Pickup Pump Belt (Fixed Speed Feeder House)—Adjusting

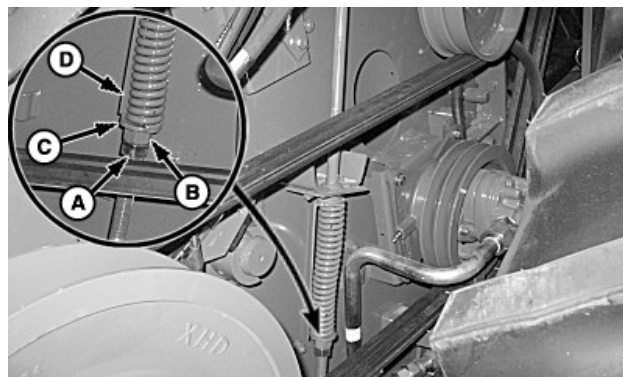

H90975—UN—06MAR08


- A—Lock Nut
- B—Nut
- C—Washer
- D—Gauge

CAUTION: Shut OFF engine, set parking brake and remove key.

Loosen lock nut (A).

Tighten nut (B) until washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUC6075,000066D-19-02FEB10

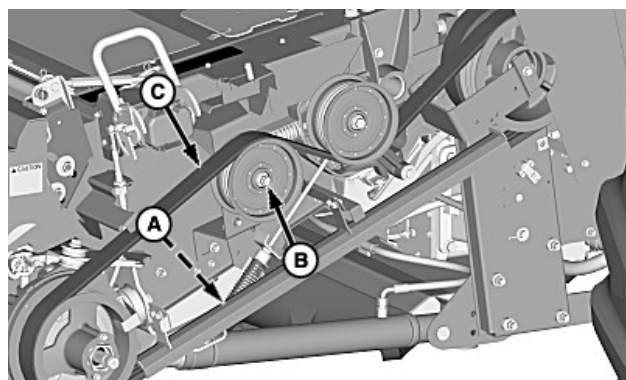

H90969—UN—05MAR08

- A—Nuts
- B—Idler Nut
- C—Drive Belt

Loosen nuts (A) to relieve tension on drive belt and loosen idler nut (B).

Remove drive belt (C) from sheaves.


Install replacement drive belt and move idler to 3/4 of way up slot and tighten idler nut.

Tighten nuts to position washer between end of gauge and bottom of step.

Install feeder house shields previously removed.

OUC6075,0000653-19-02FEB10

CommandTouch Multi-Speed Feeder House Drive Belt—Replacing

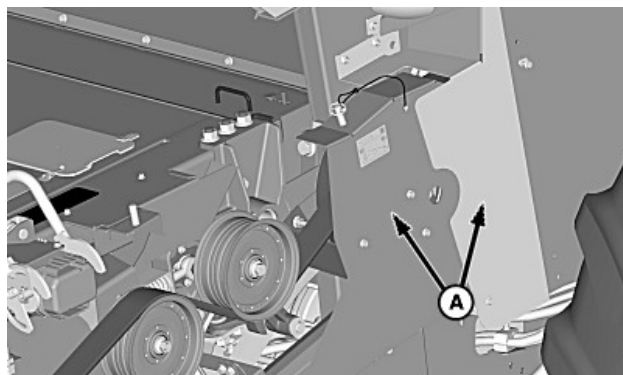

H90968—UN—05MAR08


- A—Shields

CAUTION: Shut OFF engine, set parking brake and remove key.

Lower safety stop and remove left-hand feeder house shields.

Remove shields (A).

CommandTouch Multi-Speed Feeder House Drive Belt—Adjusting

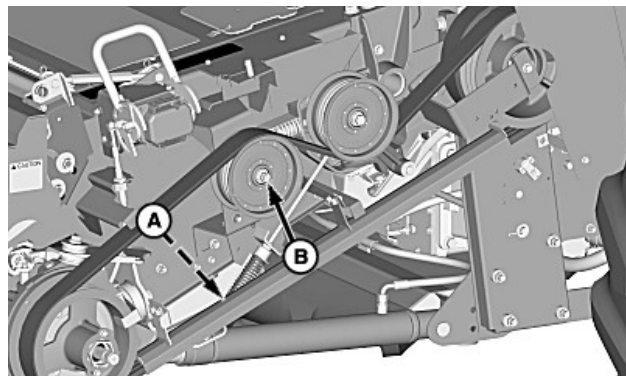

H90970—UN—05MAR08

- A—Nuts
- B—Idler Nut

CAUTION: Shut OFF engine, set parking brake and remove key.

Lower safety stop and remove left-hand feeder house shields.


Tighten nuts (A) to position washer between end of gauge and bottom of step.

NOTE: If gauge reaches end of tensioning, loosen idler nut (B) and move idler higher in slot. Tighten nuts to position washer between end of gauge and bottom of step.

Install feeder house shields previously removed.

OUO6075,0000654-19-02FEB10

Header Reel/Belt Pickup Pump Belt (CommandTouch Multi-Speed Feeder House)—Replacing

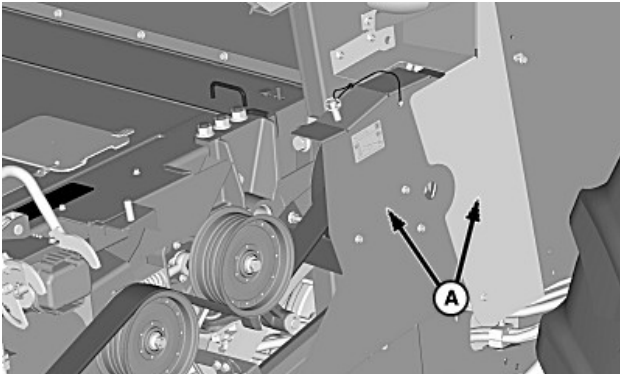


H90968—UN—05MAR08

A—Shields

CAUTION: Shut OFF engine, set parking brake and remove key.

Lower safety stop and remove left-hand feeder house shields.

Remove shields (A).

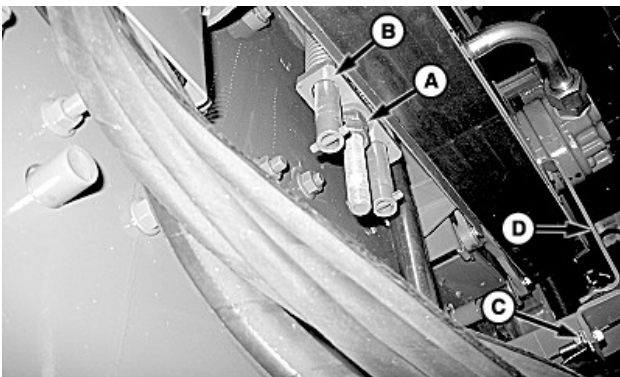


H87350—UN—05FEB07

A—Nuts
B—Spring Tensioner
C—Cap Screw and Nut
D—Brace

Loosen nuts (A) on spring tensioner (B) to relieve tension on drive belt.


Remove cap screw and nut (C) to move reel pump brace (D) out of way.

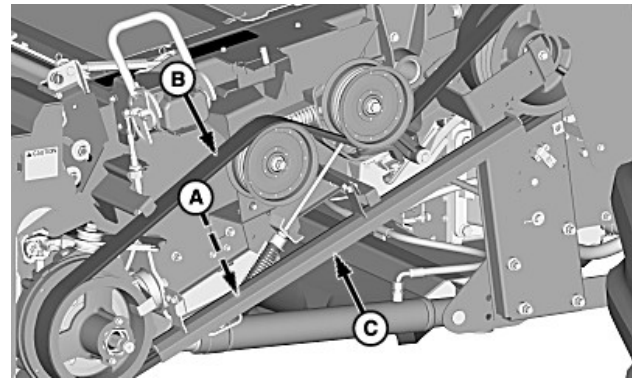

H90971—UN—05MAR08

A—Nuts
B—Drive Belt
C—Shield

Loosen nuts (A) to relieve tension on drive belt (B) and remove shield (C).

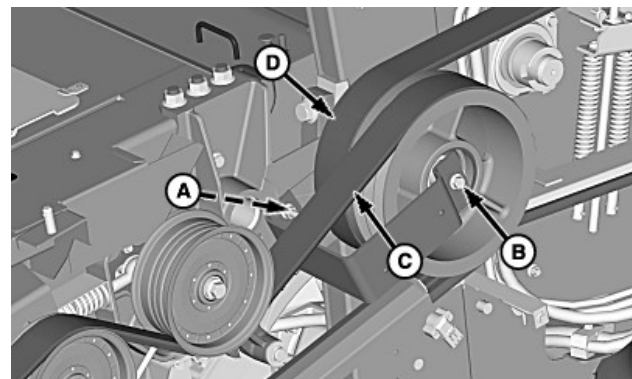

H90972—UN—05MAR08

A—Sensor Bracket
B—Cap Screw
C—Feeder House Drive Belt
D—Header Reel/Belt Pickup Pump Belt

Remove sensor bracket (A) and cap screw (B).


Remove feeder house drive belt (C) from sheaves and header reel/belt pickup pump belt (D).

Install replacement header reel/belt pickup pump belt and feeder house drive belt.

Install sensor bracket and tighten cap screw to specification.

Specification

Cap Screw—Torque. 185 N•m
(136 lb-ft)

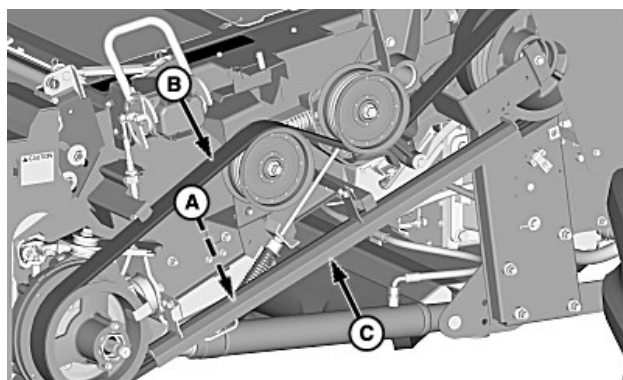


H90971—UN—05MAR08

- A—Nuts
B—Drive Belt
C—Shield

NOTE: An equal gap is required on each side of drive belt and belt shield to prevent belt rubbing.

Install previously removed shield (C) and tighten nuts (A) to position washer between end of gauge and bottom of step to properly tension drive belt (B).

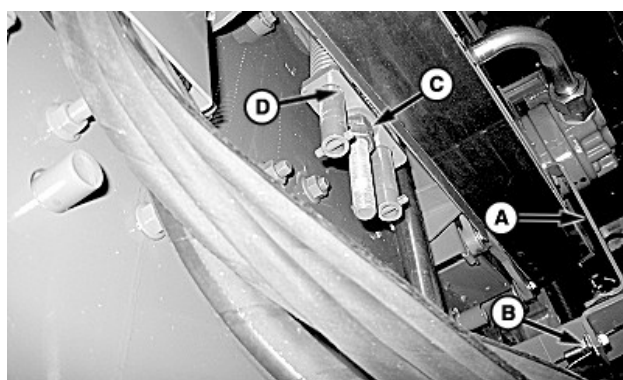

H87517—UN—27FEB07

- A—Brace
B—Cap Screw and Nut
C—Nuts
D—Holes

Install previously removed reel pump brace (A) and retain with cap screw and nut (B).

Tighten nuts (C) until holes (D) appear through gauge.

OUO6075.0000655-19-02FEB10

Header Reel/Belt Pickup Pump Belt (CommandTouch Multi-Speed Feeder House)—Adjusting



H87518—UN—27FEB07


- A—Nuts
B—Holes

CAUTION: Shut OFF engine, set parking brake and remove key.

Tighten nuts (A) until holes (B) appear through gauge.

OUO6075.0000656-19-02FEB10

Manual Tilt Indicator (Lateral Tilt System)

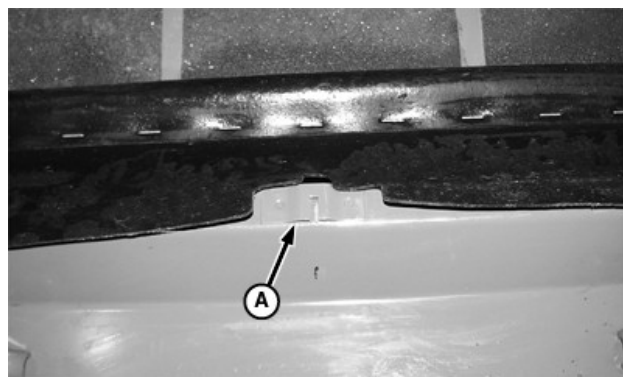

H62284A—UN—24JAN00


- A—Notch

For a quick visual indication of whether header is level with machine chassis, the lateral tilt system is equipped with a manual tilt indicator.


When notch (A) is in center of rubber seal, the header is approximately level with the machine body. Indicator may also be useful as a reference during operation.

OUO6075.000066E-19-02FEB10

Attach Multicoupler and Single-Point Latching

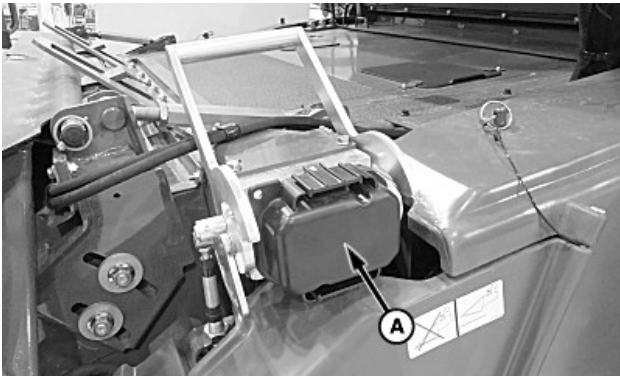

H109779—UN—05FEB14

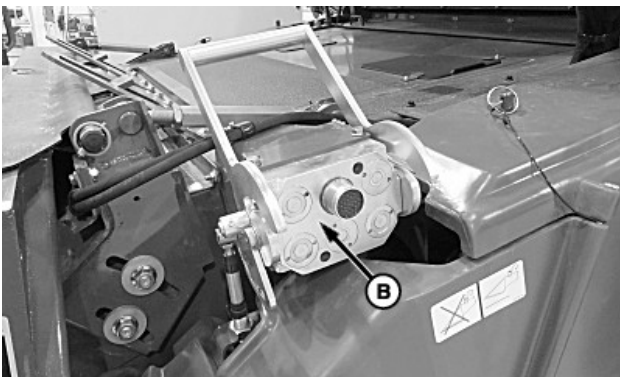


H109780—UN—05FEB14

A—Cover
B—Multicoupler Face

IMPORTANT: Do not actuate the latch pins with the header on the ground. If the multicoupler must be actuated with the header on the ground, unhook the cable from the handle.

To prevent hydraulic system contamination, clean the multicoupler surface with an electrical contact cleaner before connecting.


1. Remove the cover (A) and clean the multicoupler face (B).

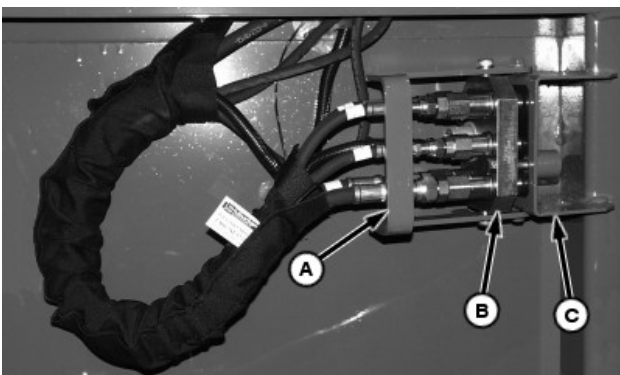

H70035—UN—19SEP01

A—Handle
B—Multicoupler
C—Storage Bracket

2. Open handle (A) and remove the multicoupler (B) from the storage bracket (C).

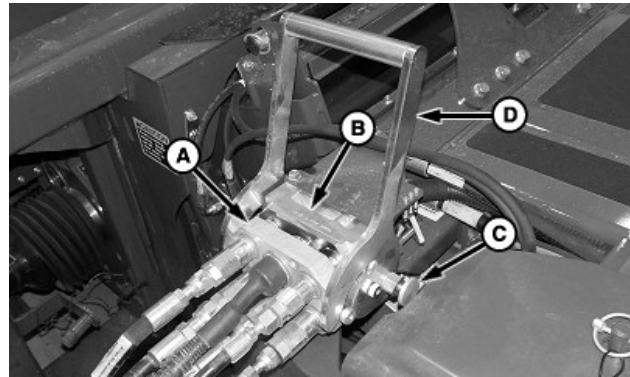


H123083—UN—29JAN18

A—Multicoupler
B—Receptacle
C—Knob
D—Handle

IMPORTANT: To prevent hydraulic system contamination, clean the multicoupler surfaces with an electrical contact cleaner before connecting.

NOTE: To prevent damage to the latching cable, a shear screw is attached to the handle. Attempts to actuate the latching pins with the header on the ground results in screw shearing. See Shear Screw Location later in this section.

3. Install the multicoupler (A) onto the receptacle (B).
4. Pull and hold the knob (C) to close the handle (D).

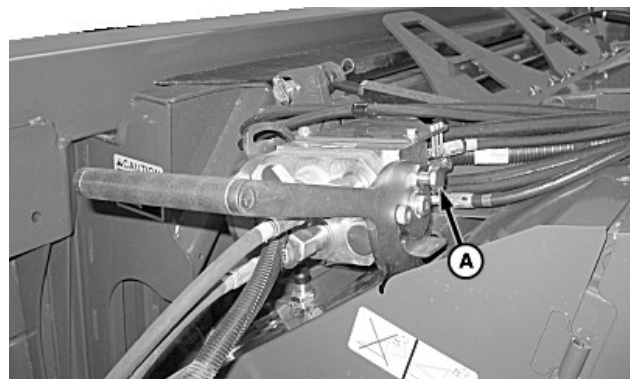


H87894—UN—19APR07

A—Knob


IMPORTANT: Failure to close the multicoupler fully so the knob can engage could result in the header falling off while harvesting or transporting.

5. When the multicoupler handle is fully closed, the knob (A) automatically locks the couplers together.

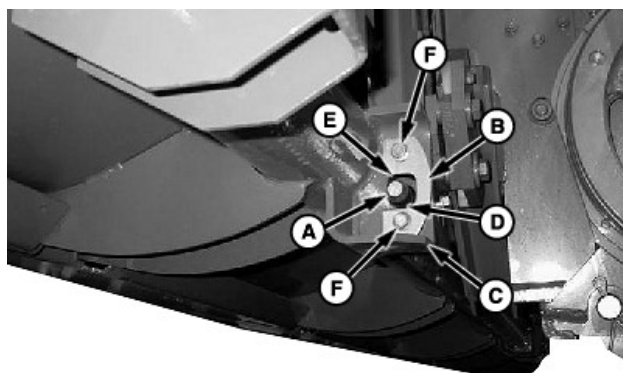

H81307—UN—28JUN04

Inside Latch Plate (M10 Cap Screws)

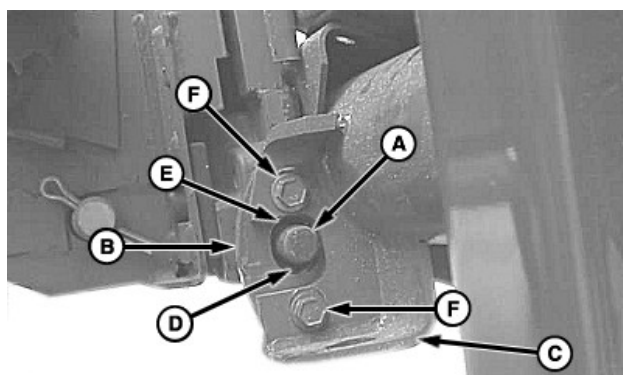

H81308—UN—28JUN04

Outside Latch Plate (M12 Cap Screws)

A—Latch Pin
B—Latch Plate
C—Frame
D—Lower Gap
E—Upper Gap
F—Cap Screw (2 used)

NOTE: With the header attached, the latch pins must move freely through the latch plate holes. If the latch pins do not extend through the latch plates, make sure that the latching plates on the header are properly adjusted.


6. Latch pins (A) must move freely through the latch plate holes in the header when the multicoupler is latched. Latch plate (B) must contact frame (C). Less clearance must be maintained between the lower gap (D) of the plate and the latch pin rather than the upper gap (E) of the plate and latch pin. This may require the latch plate to be flipped.
7. **If adjustment is needed:** Remove cap screws (F), flip the plate end for end, and reinstall.
8. Tighten cap screws to specification.

Specification

Inside Latch Plate (M10 Cap Screws)—Torque. 80 N·m
(60 lb·ft)

Specification

Outside Latch Plate (M12 Cap Screws)—Torque. 130 N·m
(96 lb·ft)

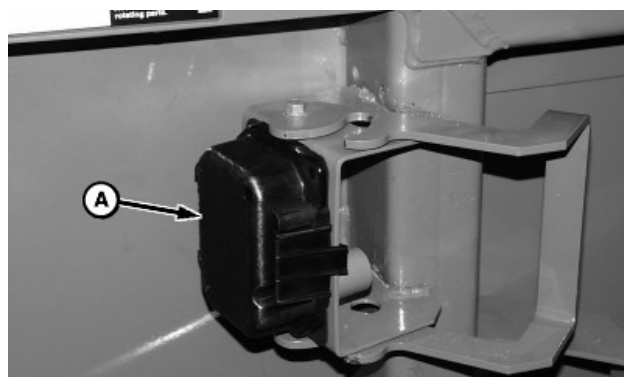


H74305—UN—18NOV02

A—Cover


9. Install the cover (A) onto the platform storage position.
10. Remove the telescopic shaft from the storage position and install onto the feeder house backshaft, making sure the locking collar lock fully.

OUC6075.0004EB9-19-06JUL20


Attaching and Detaching Header from Feeder House

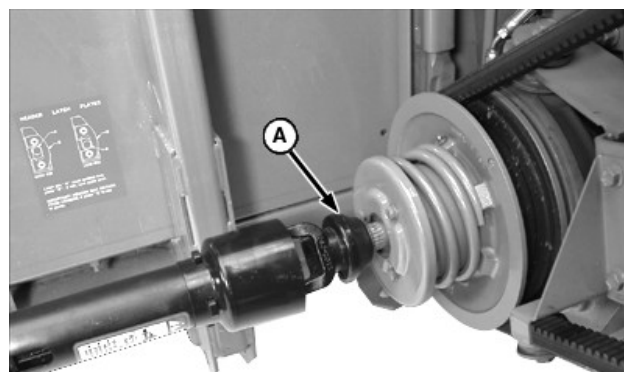

H52778—UN—23MAR99

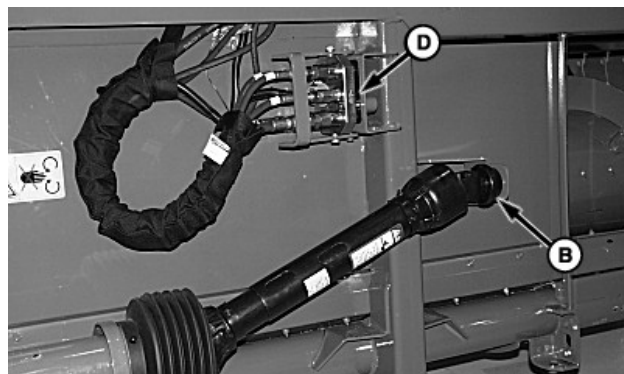

H82374—UN—07FEB05

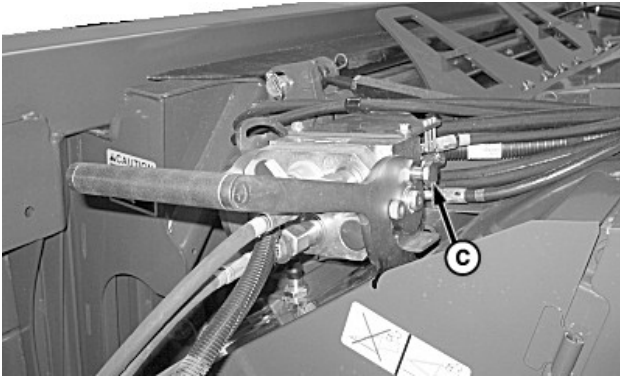

H87895—UN—19APR07

- A—Locking Collar
- B—Storage Position
- C—Knob
- D—Multcoupler Storage Position

CAUTION: Do not leave driveshafts on the machine. Personal injury or machine damage may occur if feeder house is accidentally engaged.

IMPORTANT: Driveshafts with U-joints are used on left-hand and right-hand sides of all approved headers.

NOTE: For complete attaching and detaching procedures, refer to the header Operator's Manual.

1. Disconnect telescoping drive shaft from the feeder house at locking collar (A) on both side of the machine.
2. Place the telescoping driveshaft in storage position (B).


IMPORTANT: Latch pins are not to be actuated with the header on the ground. If multcoupler must be actuated with the header on the ground, unhook the cable from the handle.

NOTE: Latch pins should be fully retracted when the handle is up all the way against the stop. Adjust cable mounting if the latch pins are not fully retracted. See Single-Point Latching—Adjusting.


3. Pull and hold knob (C) to release the lock while raising handle to disconnect the multcoupler.
4. Remove the multcoupler cover from the storage position on the header and place the cover on the machine multcoupler.
5. Place and lock multcoupler in storage position (D).

OUO6075,0004EBA-19-06JUL20

Single-Point Latching—Adjusting

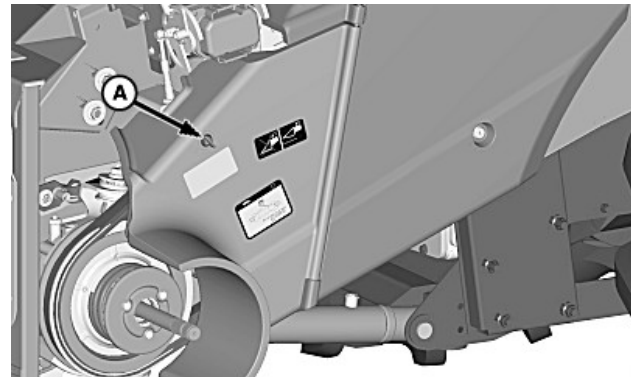

H90929—UN—28FEB08

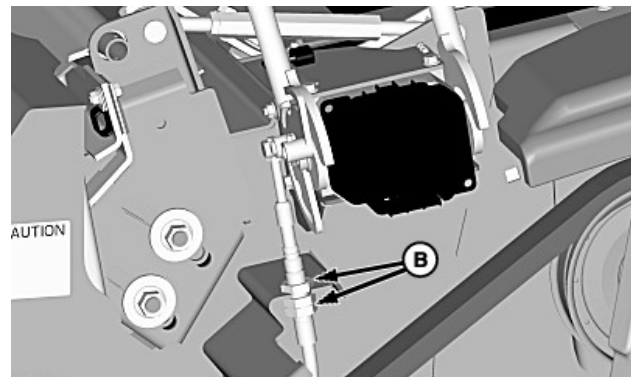

H90930—UN—28FEB08

- A—Shield
- B—Lock Nut (2 used)


CAUTION: Shut OFF engine, set park brake, and remove key.

NOTE: Lateral tilt feeder house adjustments must only be made to the cable at multcoupler handle.

1. Open the left-hand feeder house shield (A).
2. Loosen the cable lock nuts (B).

IMPORTANT: Verify that the handle is against the stop on the multcoupler. Failure to verify that the handle is against the stop results in inaccurate pin dimensions and could result in the header falling off while harvesting or transporting.

3. Rest the multcoupler handle against the stop.

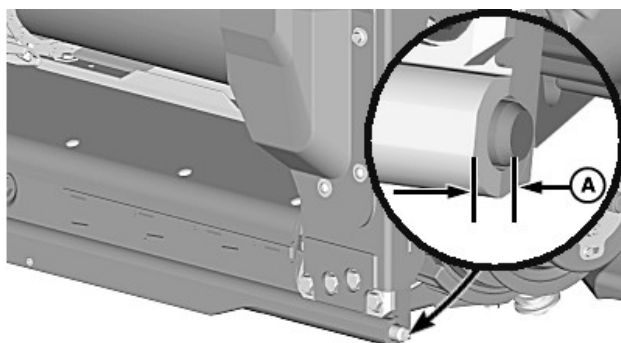

H90931—UN—05MAR08

Left-Hand Latching Pin


A—Dimension

NOTE: Moving the cable "up" in the bracket pulls the pin farther in.

Moving the cable "down" in the bracket pushes the pin farther out.

4. Adjust the cable in the bracket as needed for proper pin adjustment:


- Left-hand latching pin must be flush to +/- 2 mm (0.08 in) (A).

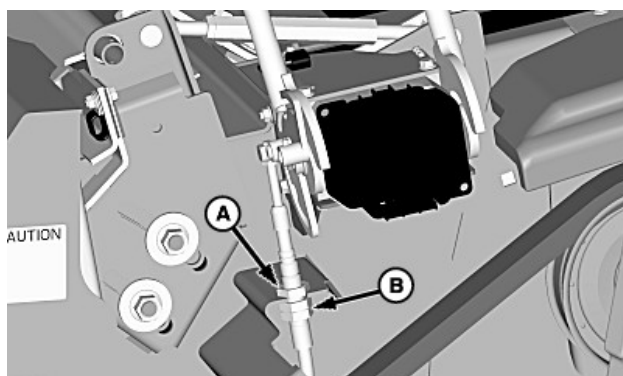


H90932—UN—28FEB08

A—Top Lock Nut
B—Bottom Lock Nut

5. Hold the bottom lock nut (B) and tighten the top lock nut (A).

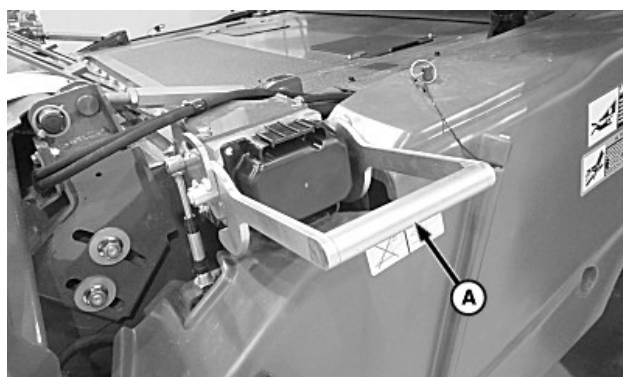

H109781—UN—05FEB14

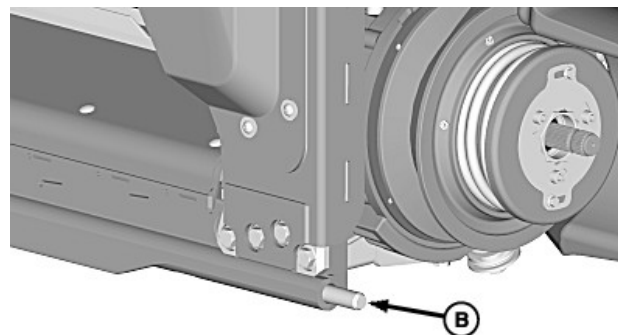

H90933—UN—28FEB08

A—Multicoupler Handle
B—Pin (2 used)

IMPORTANT: Failure to verify that the pins are set to the specified dimensions could result in the header falling off while harvesting or transporting.

6. Fully lower the multicoupler handle (A) and verify that the pins (B) (both sides) are set to specification. Readjust if not set to specification.


Specification

Feeder House Pins—Distance. 45—52 mm
(1-3/4—2 in)


7. Close the left-hand feeder house shield.

OUC6075.0004E89-19-06JUL20

Level Land Feeder House Lower Cable End—Adjusting

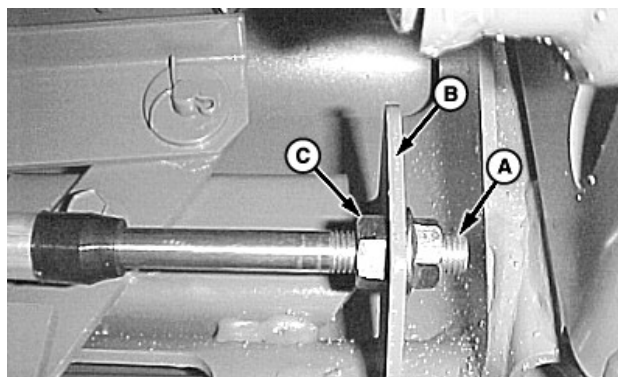

H79380—UN—10DEC03

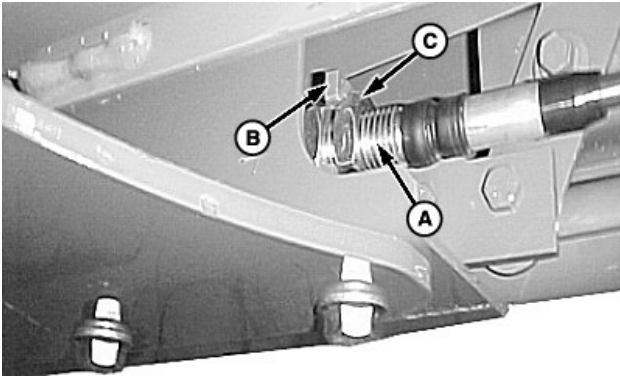

H79389—UN—10DEC03

- A—Threads
- B—Bracket
- C—Lock Nuts


Adjustments should be made to lower end of latching cable if threads (A) are not centered in bracket (B).

Loosen lock nuts (C) and adjust cable so that threads are centered in bracket.

Tighten lock nuts.

OOU6075.0000672-19-02FEB10

Level Land Feeder House—Shim Adjusting

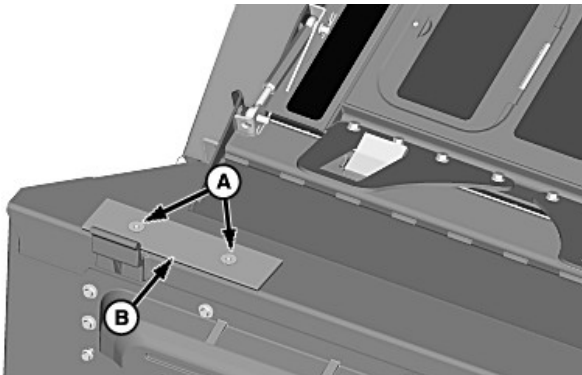

H85585—UN—22MAR06

- A—Screws
- B—Shim

NOTE: Tires must be inflated to equal air pressure for accurate leveling adjustment.

Header must be level when attached to feeder house.

Raise header to medium height.


Take a position approximately 5 m (15 ft.) in front of header.

Compare bottom of header with machine front axle.

If header is not level, remove screws (A) and move shims (B) from side to side on top beam of feeder house to level header.

OOU6075.0000673-19-02FEB10

Feeder House Latching Pins (Cleanout)

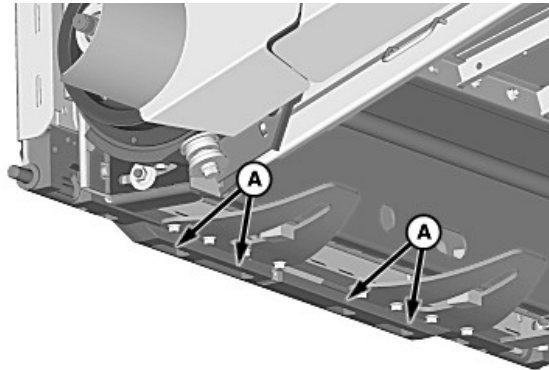


H84880—UN—04NOV05

A—Clean Out Locations

If latch pins move hard on lateral tilt feeder houses, clean crop debris from locations (A).

OOU6075.0000674-19-02FEB10

Feeder House Manual Unlatching

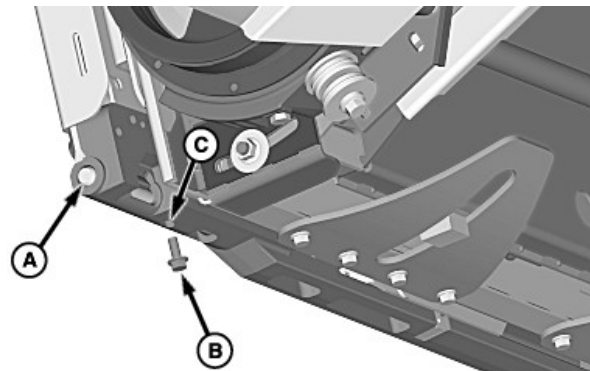


H84881—UN—04NOV05

- A—Latching Pins
- B—Cap Screw
- C—Hole

To remove header if shear screw should fail, push latching pins (A) through latch plates and install M12 cap screw (B) in hole (C). Repeat on opposite side.

OOU6075.0000675-19-02FEB10

Shear Screw Location

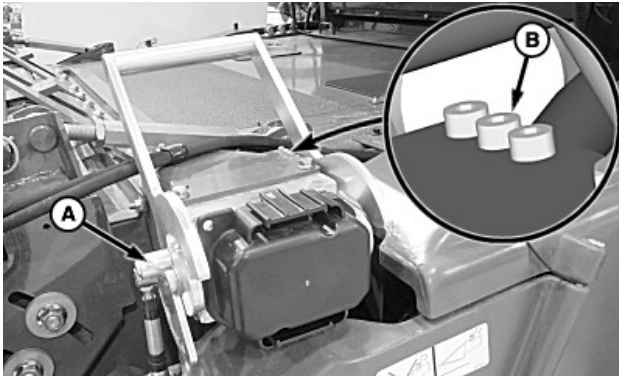

H109782—UN—05FEB14

- A—Shear Screw**
B—Extra Shear Screws


NOTE: Three extra shear screws are provided.

If shear screw (A) breaks, remove and replace with extra shear screw (B).


SS43267,000037A-19-05FEB14

Shields

Gull Wing Doors

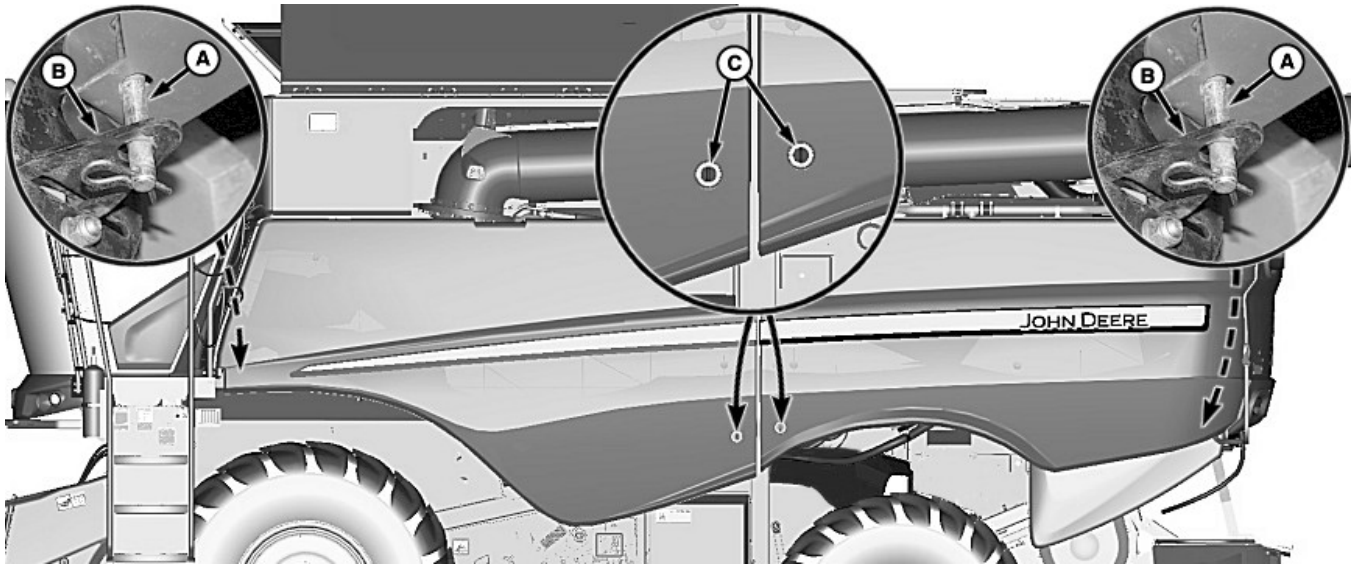

H114481—UN—08JUN15

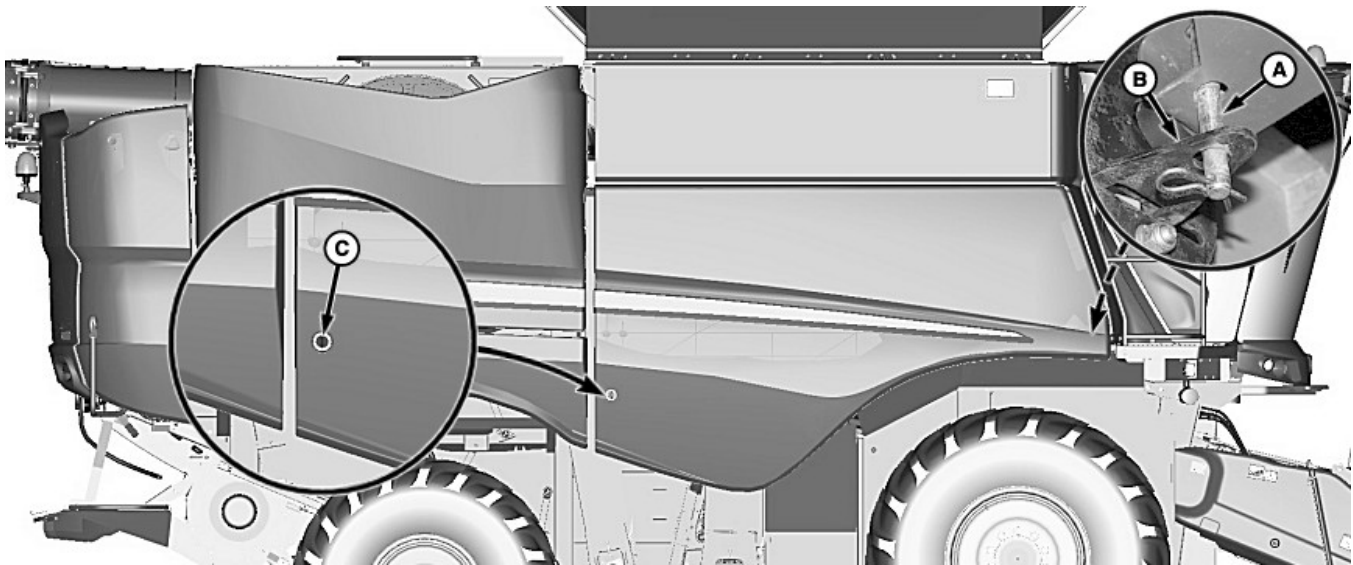

H106222—UN—19FEB13

A—Pin
B—Locking Plates

C—Latch

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Pinning and latch lever operation is the same on both sides of machine.

1. Remove spring clip, and pin (A) from locking plate (B). Reinstall spring clip onto pin.
2. Turn latch (C) and pull out on the gull wing doors to raise.


OUC6075.0004942-19-26APR18

Gull Wing Doors and Shields

Before operating the machine, verify that all the gull wing doors and shields are attached and closed.

OUC6075.0004E8A-19-26JUN20

Gull Wing Door Cylinder Adjustment

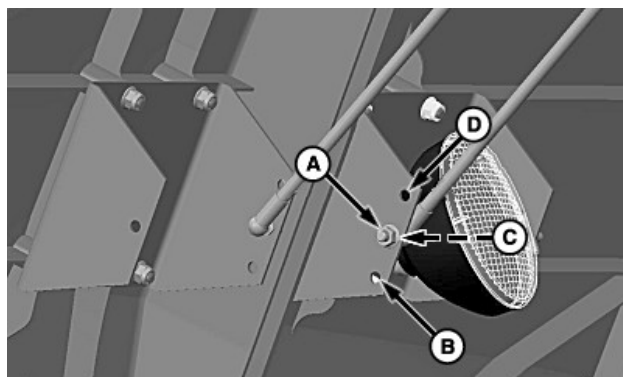

H124054—UN—26APR18


- A—Nut
- B—Bottom Hole
- C—Middle Hole
- D—Upper Hole

NOTE: Bottom hole is used to lower the overall height of the gull wing door when in the open position. Upper hole is used to raise the overall height of the gull wing door when in the open position.

Remove nut (A) from the cylinder and move to the desired hole (B—D).

OOU6075.0004943-19-07JUN18

Toolbox (If Equipped)

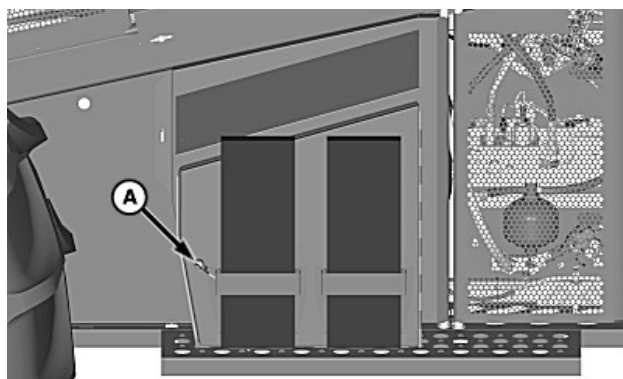

H116915—UN—14JAN16


- A—Latch

Turn latch (A) to open the toolbox door.

OOU6075.00041E3-19-11APR16


Left-Hand Side Shields

Side Shields (Style A)

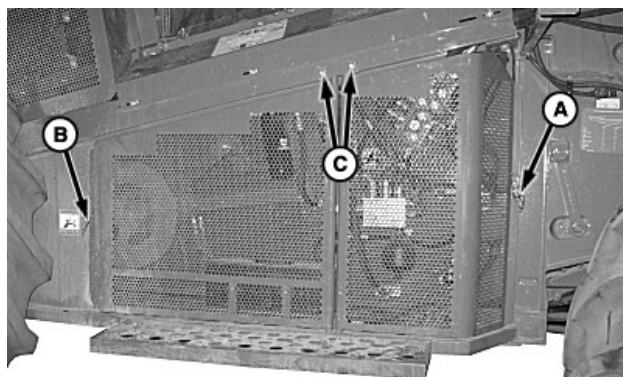

H105327—UN—01MAY12

Shields (Without Toolbox)

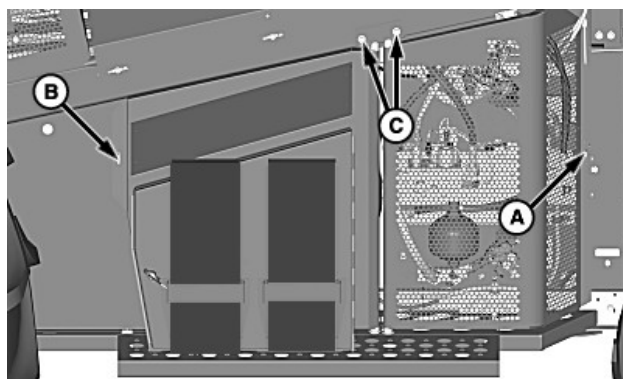

H116913—UN—14JAN16

Shields (With Toolbox)


- A—Quick-Lock Pin
- B—Quick-Lock Pin
- C—Cap Screws

CAUTION: Shut OFF engine, set park brake and remove key.

Remove quick-lock pin (A and B) to open shields.


Remove cap screws (C) and lift shields to remove.

Side Shields (Style B)

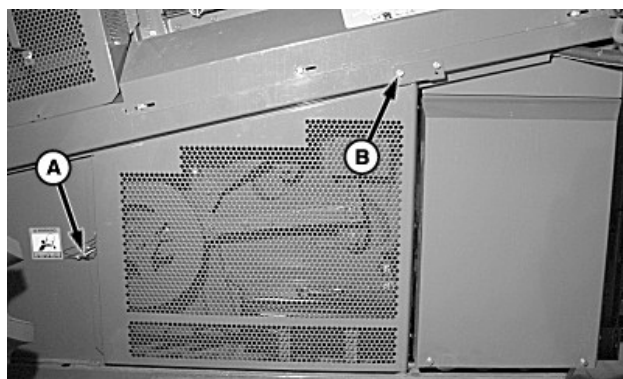

H96802—UN—09JUN10

Shields (Without Toolbox)

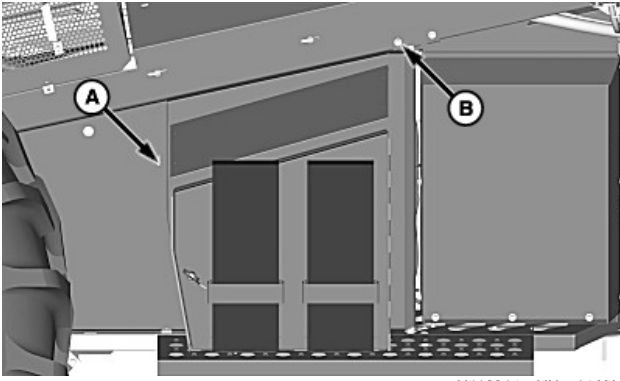

H116914—UN—14JAN16

Shields (With Toolbox)


- A—Quick-Lock Pin
- B—Cap Screws

CAUTION: Shut OFF engine, set park brake and remove key.

Remove quick-lock pin (A) to open shield.

Remove cap screws (B) and lift shield to remove.

Fan Shield

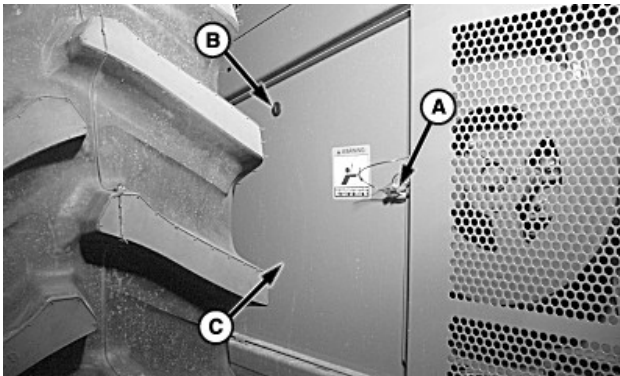


H96803—UN—09JUN10

- A—Quick-Lock Pin
- B—Latch
- C—Shield

Remove quick-lock pin (A) and turn latch (B) to remove shield (C).

Upper Separator Shield

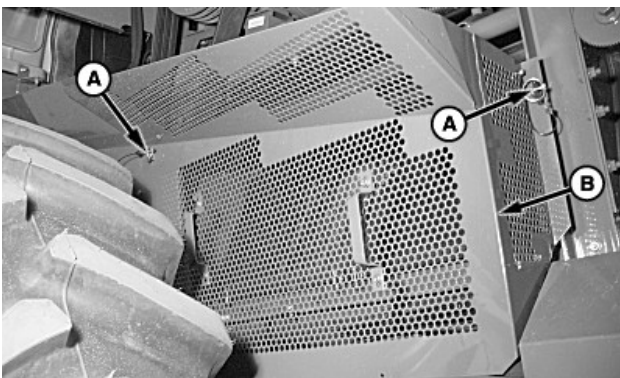


H96804—UN—09JUN10


- A—Quick-Lock Pins
- B—Shield

Remove quick-lock pins (A) and remove shield (B).

Front Separator Shield

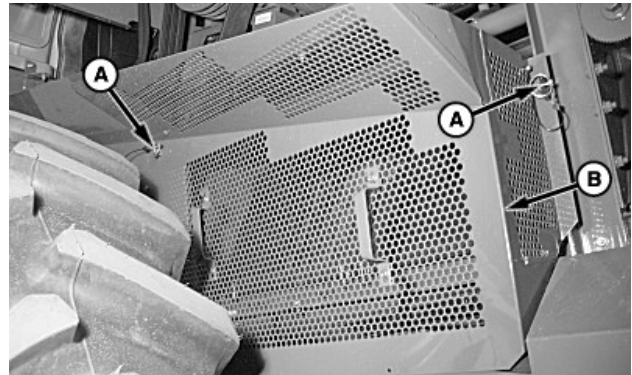

H96804—UN—09JUN10

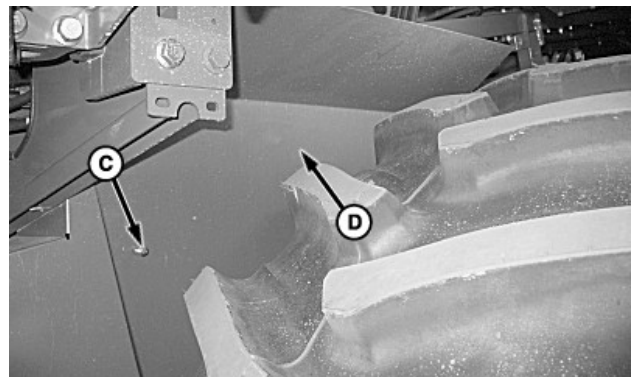

H96805—UN—09JUN10


- A—Quick-Lock Pins
- B—Shield
- C—Cap Screw
- D—Shield

Remove quick-lock pins (A) and remove shield (B).

Remove cap screw (C) and push front separator shield (D) rearward to remove.

OOU6075,00044A1-19-20DEC16

Right-Hand Side Shields

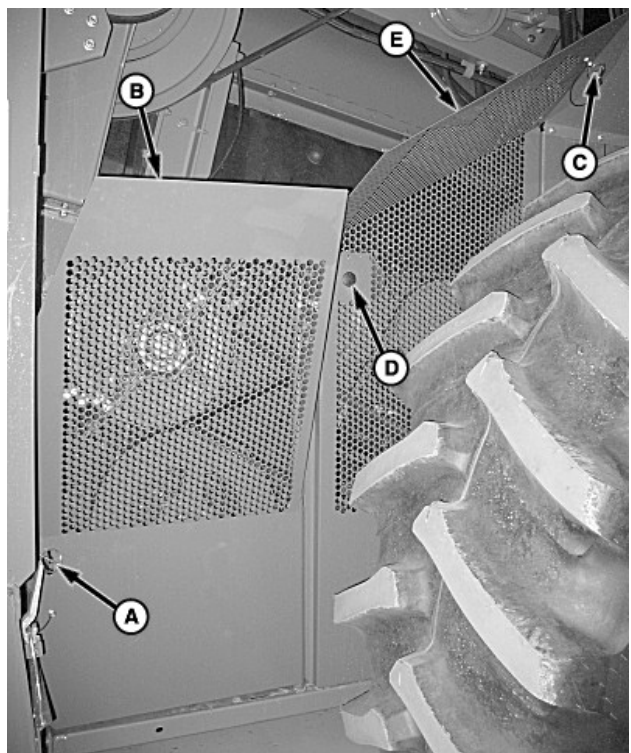

H96806—UN—09JUN10


- A—Quick-Lock Pin
- B—Shield
- C—Quick-Lock Pin
- D—Latch
- E—Shield

CAUTION: Shut OFF engine, set parking brake and remove key.

Rear Shield and Middle Fan Shield— Remove quick-lock pin (A) and open shield (B) to service belts.

Remove quick-lock pin (C) and turn latch (D) to unlock.

Lift and remove rear shield (B) and middle fan shield (E).

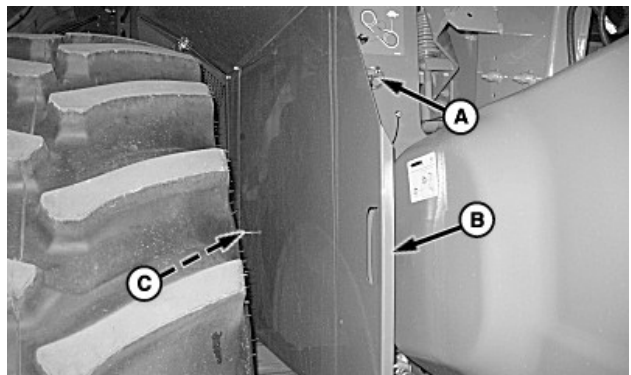

H96807—UN—09JUN10


- A—Quick-Lock Pin
- B—Shield
- C—Cap Screw

Front Separator Shield— Remove quick-lock pin (A) and pull shield (B) forward.

Remove cap screw (C) and remove shield.


OUC6075.00007C7-19-28SEP10

Separator Covers

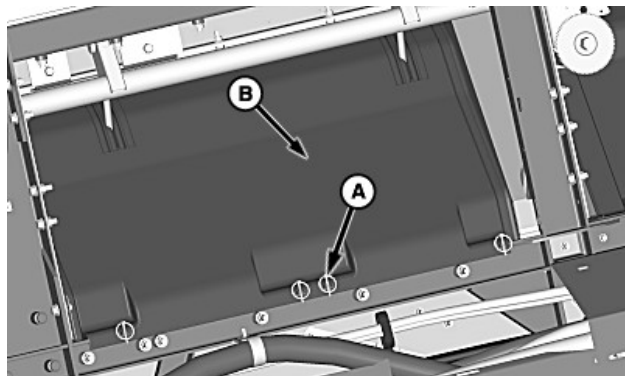


H122574—UN—09OCT17

Threshing Cover (Standard Concave Adjust)

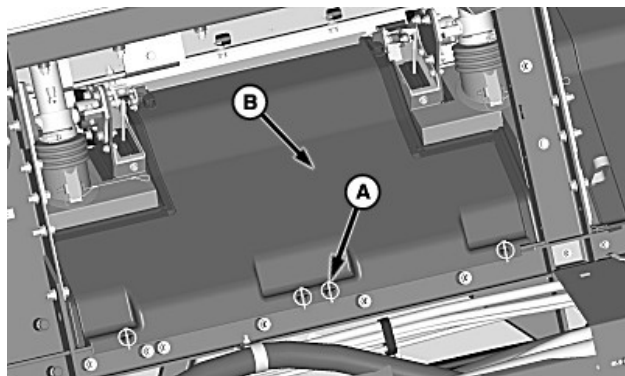

H122575—UN—09OCT17

Threshing Cover (Active Concave Isolation)

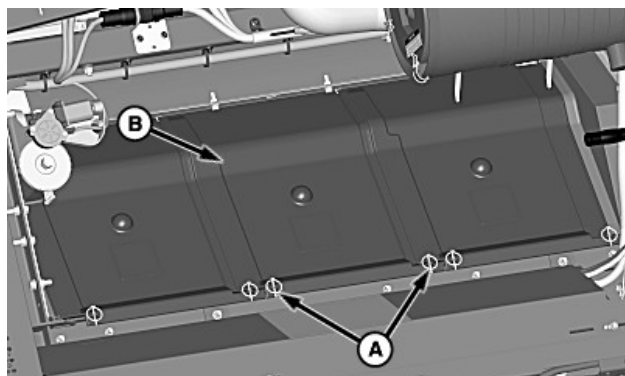

H122576—UN—09OCT17

Separator Covers

- A—Quick-Lock Pins
- B—Covers

CAUTION: Shut OFF engine, set park brake and remove key.

IMPORTANT: To prevent grain loss, verify that separator covers are flush against separator and underneath the edge of the separator. Covers are installed starting from the left-hand side, as facing the machine and working to the right.

Do not lay covers in the hot sun or they become distorted.

NOTE: One cover on the left-hand side of the machine and two covers on the right-hand side of the machine are used to seal the threshing section. Three covers on both sides of the machine are used to seal the separating section.


Quick-lock pins (A) are used to retain covers (B).

Remove quick-lock pins and remove covers.


OUO6075,00047C3-19-09OCT17

Separator

Standard Feed Accelerator Wear Strips—Replacing

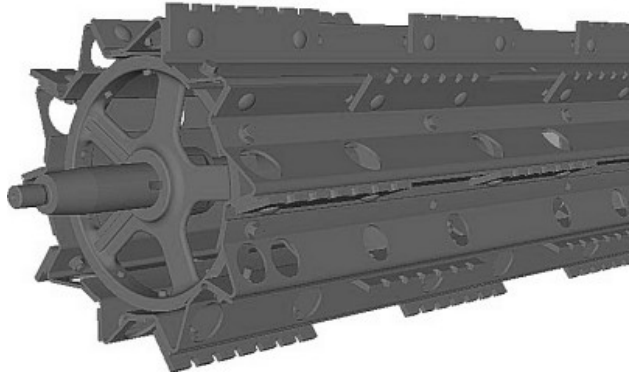

H85626—UN—27MAR06

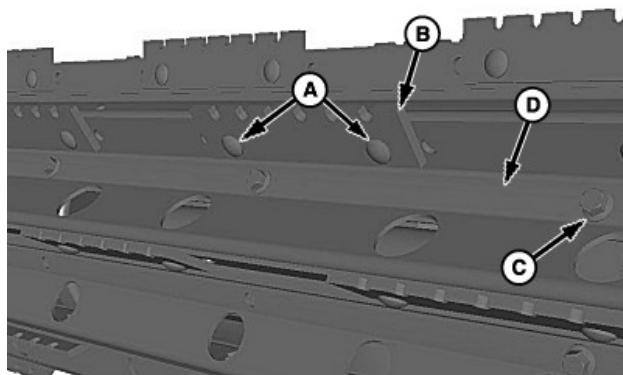

H85627—UN—27MAR06

Feed Accelerator Wings and Wear Strips (Standard)

- A—Round Head Cap Screws
- B—Feed Accelerator Wear Strip
- C—Cap Screws
- D—Feed Accelerator Wings

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Wear strips can be reversed for additional wear.

Feed accelerator wings and wear strips can be replaced without removing the feed accelerator. Replace feed accelerator wings and wear strips in sets of two and opposite of each other to maintain proper balance.

NOTE: If feed accelerator is removed from machine, or has been serviced, tighten clamp bolts before securing wings.

Remove round head cap screws (A) and replace feed accelerator wear strips (B) as required. Tighten round head cap screws to specification.

Specification

Feed Accelerator Wear Strip
Round Head Cap
Screws—Torque. 70 N·m
(52 lb-ft)
Remove cap screws (C) and replace feed accelerator


wings (D) as required. Tighten cap screws to specification.

Specification


Feed Accelerator Wing Cap
Screws—Torque. 70 N·m
(52 lb-ft)

OUO6075,0001726-19-14JAN14

Tough Crop Feed Accelerator Wear Strips—Replacing

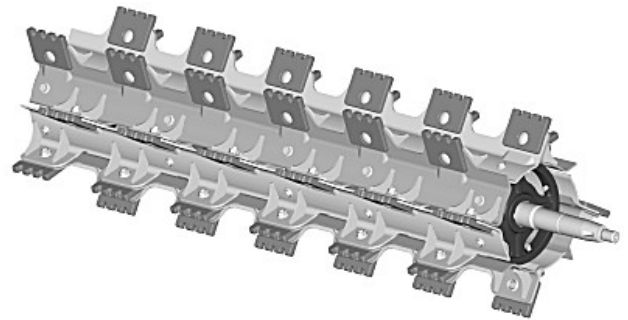

H107173—UN—06MAR13

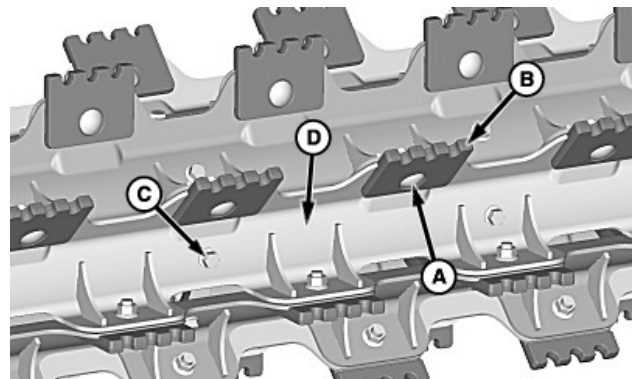

H107174—UN—06MAR13

Feed Accelerator Wings and Wear Strips (Tough Crop)

- A—Round Head Cap Screws
- B—Feed Accelerator Wear Strip
- C—Cap Screws
- D—Feed Accelerator Wings

CAUTION: Shut OFF engine, set park brake and remove key.

Feed accelerator wings and wear strips can be replaced without removing the feed accelerator. Replace feed accelerator wings and wear strips in sets of two and opposite of each other to maintain proper balance.

NOTE: If the feed accelerator is removed from the machine, or has been serviced, tighten clamp bolts before securing wings.

Always replace hardware when replacing feed accelerator wear strips.

Remove round head cap screws (A) and replace feed accelerator wear strips (B) as required. Tighten round head cap screws to specification.

Specification

Feed Accelerator Wear Strip
Round Head Cap
Screws—Torque. 107 N·m
(79 lb·ft)


Remove cap screws (C) and replace feed accelerator wings (D) as required. Tighten cap screws to specification.

Specification


Feed Accelerator Wing Cap
Screws—Torque. 70 N·m
(52 lb·ft)

OUO6075,0004A13-19-09AUG18

Tine Feed Accelerator Wear Strips—Replacing

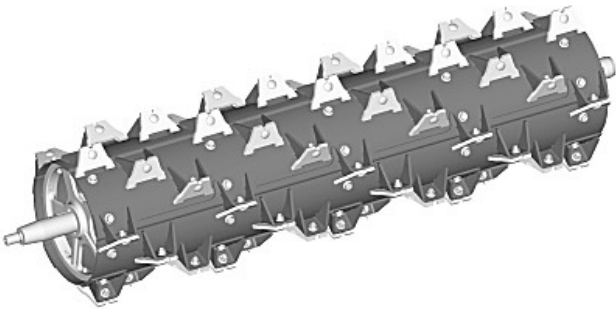

H102209—UN—15JUN11

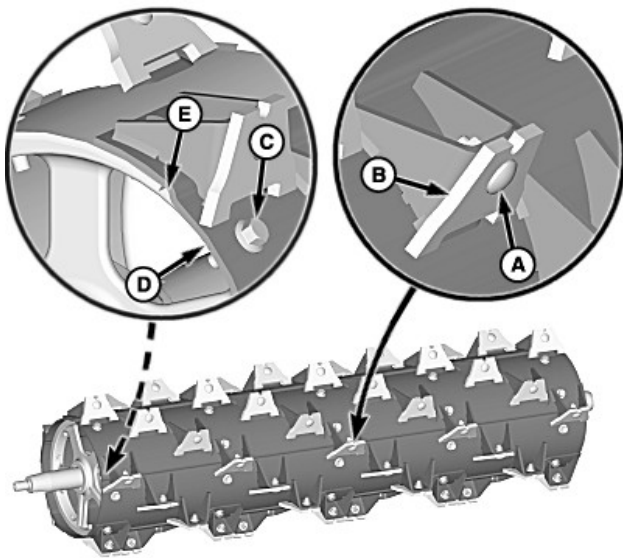

H102210—UN—15JUN11

Feed Accelerator Wings and Wear Strips

A—Round Head Cap Screws

B—Feed Accelerator Wear Strip
C—Cap Screws
D—Wing Assembly
E—Overlap Location

CAUTION: Shut OFF engine, set park brake and remove key.

Feed accelerator wings and wear strips can be replaced without removing the feed accelerator.

Remove round head cap screws (A) and replace feed accelerator wear strips (B) as required. Tighten round head cap screws to specification.

Specification

Feed Accelerator Wear Strip
Round Head Cap
Screws—Torque. 73 N·m
(54 lb·ft.)

Remove cap screws (C) and replace wing assembly (D) as required.

IMPORTANT: Feed accelerator must be statically balanced. Add washers as needed until feed accelerator is balanced.


Install wing assembly so it overlaps at location (E) as shown. Tighten cap screws to specification.

Specification


Feed Accelerator Wing
Assembly Cap Screws—Torque. 73 N·m
(54 lb·ft.)

OUO6075,0001729-19-14JAN14

Tine Feed Accelerator Comb Floor (Rice Machines)

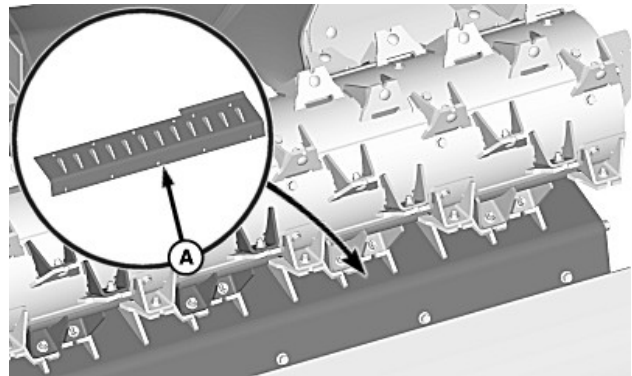

H105544—UN—20JUN12

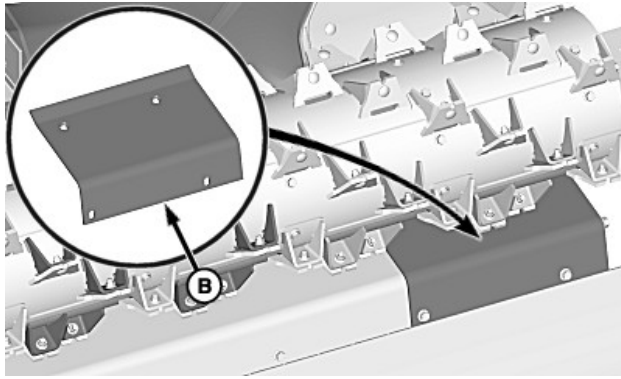

H105543—UN—20JUN12

A—Comb Floor
B—Smooth Liner Plate

NOTE: Machine is shipped from the factory with the comb floor installed. Comb floor can only be run with the tine feed accelerator.


When the comb floor (A) is removed for harvest, the smooth liner plate (B) which was shipped with the machine must be installed (left side of the machine).

Non-Rice Harvest Information

- Corn - Remove comb floor and install smooth liner plate.
- Soybeans - If splits become a concern, remove comb floor and install smooth liner plate.
- Small Grains - Remove the comb floor and install smooth liner plate.

OOU6075,0004557-19-02DEC16

Tine Feed Accelerator Comb Floor (Rice Machines)—Removing

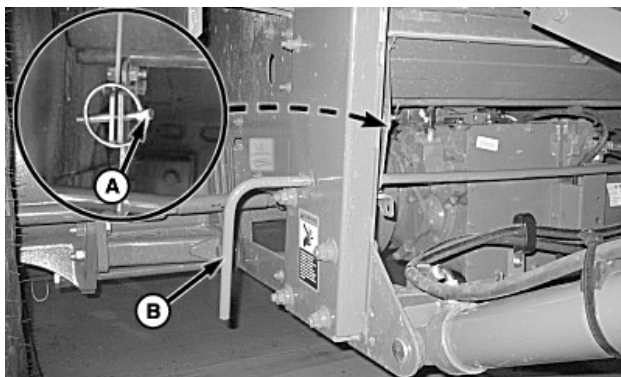


H99239—UN—01DEC10

A—Quick-Lock Pin
B—Lever

CAUTION: Raise feeder house, lower safety stop, shut OFF engine, set park brake and remove key.

Remove quick-lock pin (A) and move lever (B) up to open stone trap.

Feed Plate (Style A)

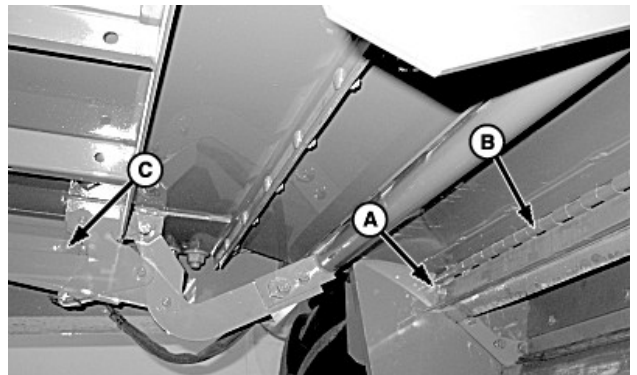

H86271—UN—10JUL06


A—Cap Screws and Nuts
B—Feed Plate Assembly
C—Lever

Remove and retain cap screws and nuts (A) on both sides of the machine.

Remove quick-lock pin and move lever (C) down and rearward while removing feed plate assembly (B) at the same time.

Raise lever (C) and retain with previously removed quick-lock pin.

Feed Plate (Style B)

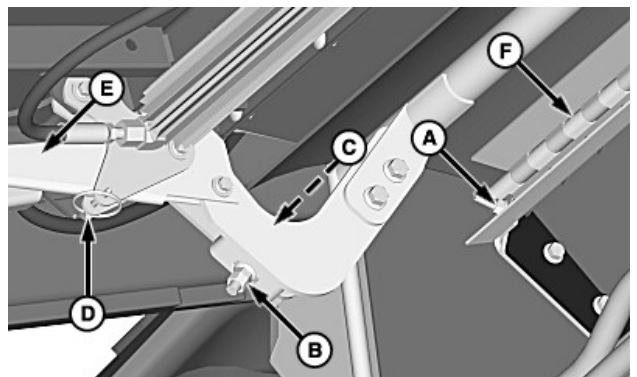

H120117—UN—29NOV16

A—Cap Screws and Nuts
B—Nuts
C—Round Head Bolt
D—Quick-Lock Pin
E—Lever
F—Feed Plate Assembly

Remove and retain cap screws and nuts (A) on both sides of the machine.


Remove nuts (B) and round head bolt (C) on both sides of the machine.

Remove quick-lock pin (D) and move lever (E) down and rearward while removing feed plate assembly (F) at the same time.

Raise lever (E) and retain with previously removed

round head bolt (C) and retain with previously removed nuts (B) on both sides of the machine.

Install previously removed quick-lock pin (D).

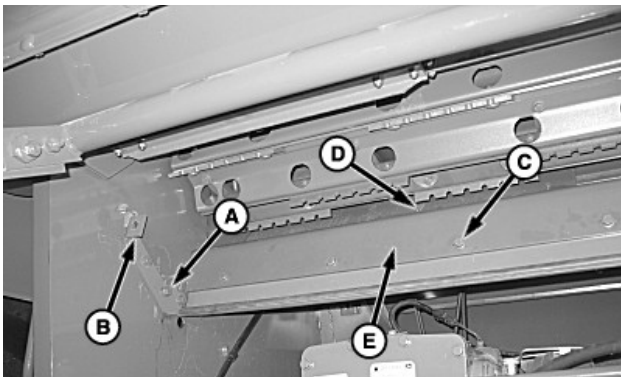


H121116—UN—21MAR17

- A—Hardware (2 used)
- B—Brackets (2 used)
- C—Cap Screws and Nuts (5 used)
- D—Plow Bolts
- E—Comb Floor

Remove and retain hardware (A) and bracket (B) from both sides of the machine.

Remove and retain cap screws and nuts (C).

Remove and retain plow bolts (D) and remove the comb floor (E).

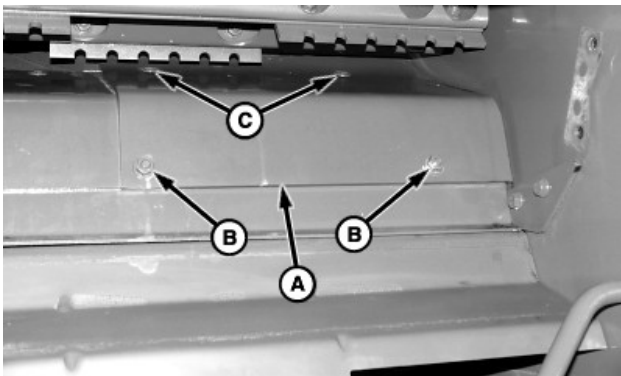


H105545—UN—21JUN12

- A—Smooth Liner Plate
- B—Cap Screws and Nuts (2 used)
- C—Plow Bolts (2 used)

Install smooth liner plate (A) shipped with the machine on the left-hand side.

Install previously removed cap screws and nuts (B).

Install previously removed plow bolts (C).

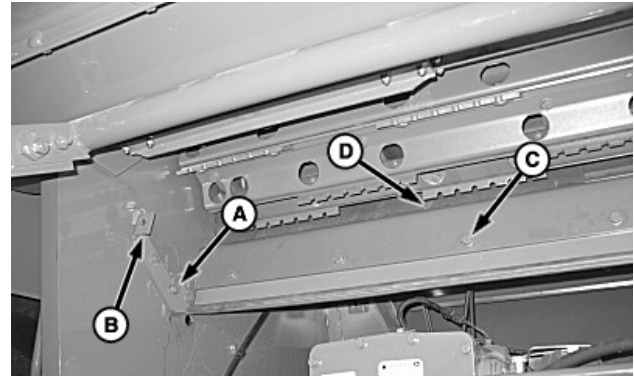

H121117—UN—21MAR17

- A—Hardware (2 used)
- B—Brackets (2 used)
- C—Cap Screws and Nuts (3 used)
- D—Plow Bolts (3 used)


NOTE: Plow bolt must be installed in holes that previously held comb floor to prevent grain loss.

Install previously removed plow bolts (D).

Install previously removed cap screws and nuts (C).

Install previously removed bracket (B) on both sides of the machine and retain with previously removed hardware (A).

Feed Plate (Style A)

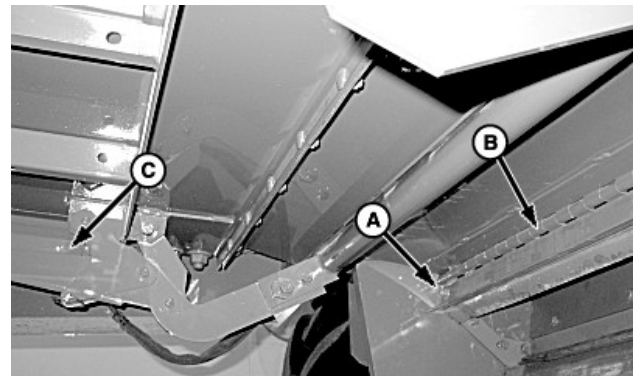

H86271—UN—10JUL06


- A—Cap Screws and Nuts
- B—Feed Plate Assembly
- C—Lever

Remove quick-lock pin and move lever (C) down and rearward.

Install previously removed feed plate assembly (B) and retain with previously removed cap screws and nuts (A) on both sides of the machine.

Push lever forward and up to close feed plate door and retain with previously removed quick-lock pin.

Feed Plate (Style B)

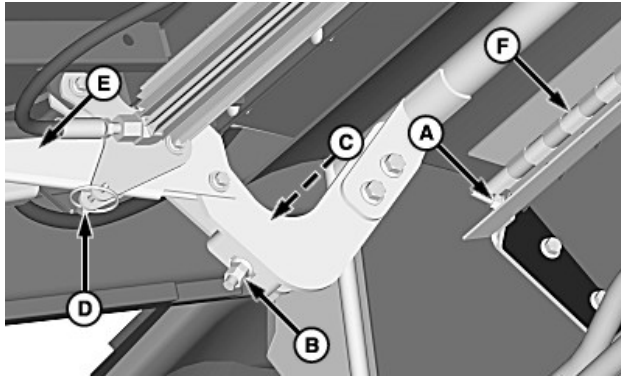

H120117—UN—29NOV16

- A—Cap Screws and Nuts
- B—Nuts
- C—Round Head Bolt
- D—Quick-Lock Pin
- E—Lever
- F—Feed Plate Assembly


Remove nuts (B) and round head bolt (C) on both sides of the machine.

Remove quick-lock pin (D) and move lever (E) down and rearward.

Install previously removed feed plate assembly (F) and retain with previously removed cap screws and nuts (A) on both sides of the machine.

Raise lever (E) and retain with previously removed round head bolt (C) and retain with previously removed nuts (B) on both sides of the machine.

Install previously removed quick-lock pin (D).

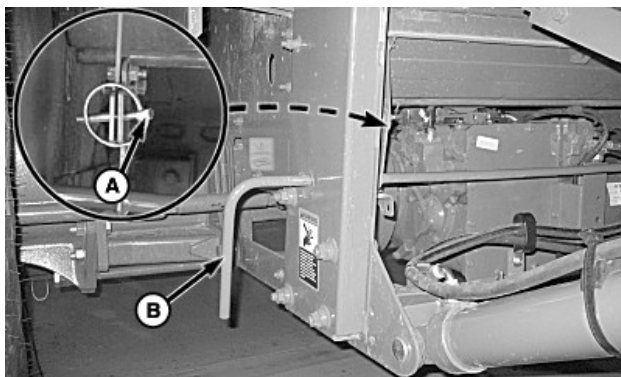


H99239—UN—01DEC10

- A—Quick-Lock Pin
- B—Lever


Move lever (B) down to close stone trap and retain with quick-lock pin (A).

OJ06075,00046A7-19-21MAR17

Feed Accelerator Belt—Replacing

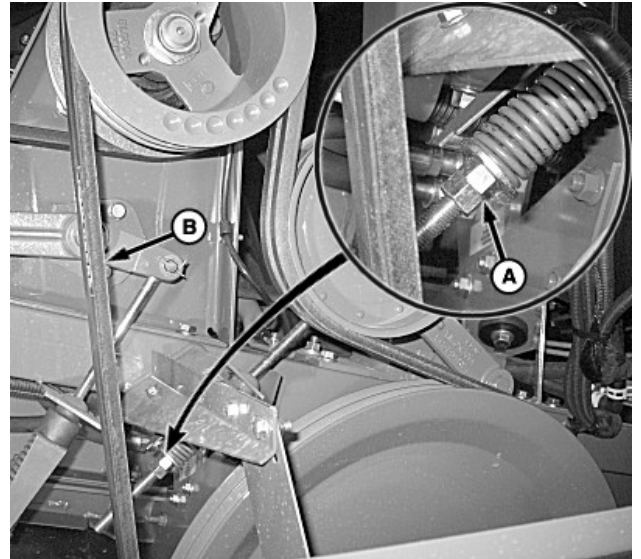

H96924—UN—16JUN10

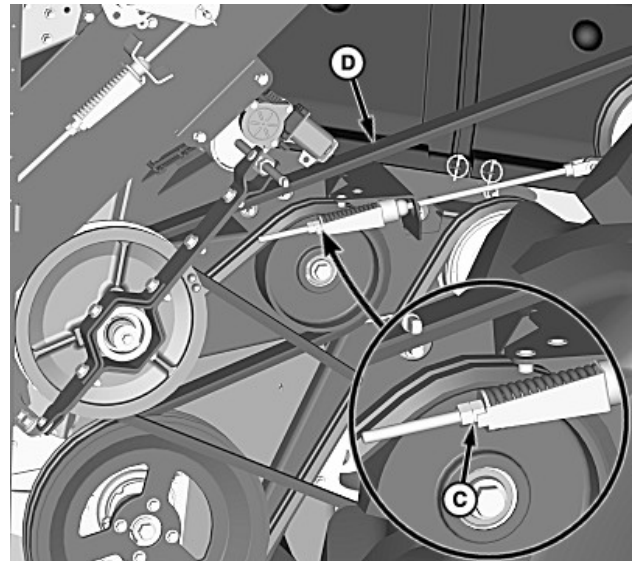

H116822—UN—07JAN16


- A—Nuts
- B—Front Jackshaft Belt
- C—Nuts
- D—Belt

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nuts (A) to remove tension from the front jackshaft belt (B).

Loosen nuts (C) to remove tension on shoe, fan, and conveyor auger belt (D).


Remove both belts to allow removal of the feed accelerator belt.

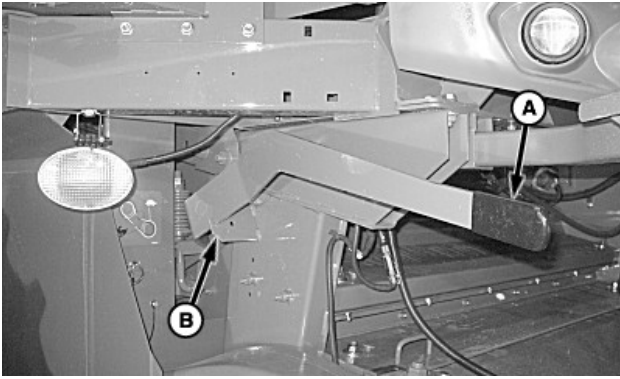

A—Lever
B—Bracket


H96926—UN—16JUN10

Push lever (A) up and out of notch in bracket (B) to relieve belt tension from the accelerator belt.

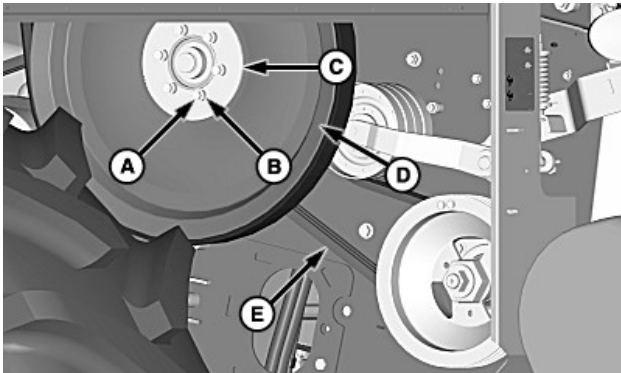

H121334—UN—25APR17

Feed Accelerator Belt (Standard Speed High Capacity)

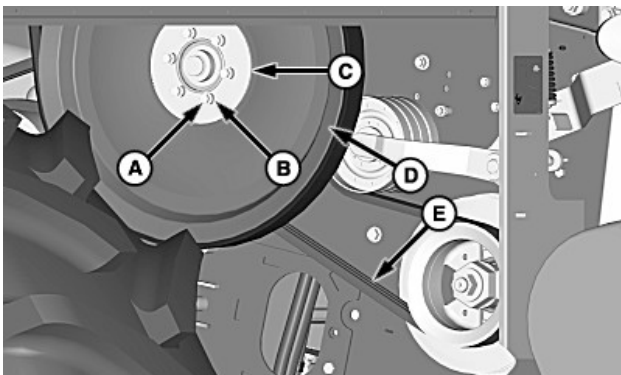

H121335—UN—25APR17

Feed Accelerator Belt (High-Speed High Capacity)

A—Cap Screw (6 used)
B—Spacer (6 used)
C—Shim (2 used)
D—Sheave
E—Feed Accelerator Belt

Remove cap screws (A), spacers (B), shims (C), and sheave (D).

Remove feed accelerator belt (E) and install replacement belt.

Install sheave, shims, spacers, and retain with cap screws.

Tighten cap screws to specification.

Specification

Cap Screws—Torque. 70 N·m
(52 lb·ft)

Push up lever and into the notch in bracket.


Adjust feed accelerator belt tension so washer is positioned between end of gauge and bottom of step.

Install shoe, fan, and conveyor auger belt and front jackshaft belt.

Adjust tension for belts so washer is positioned between end of gauge and bottom of step.

OUC6075.0004727-19-25APR17

Feed Accelerator Belt—Adjusting

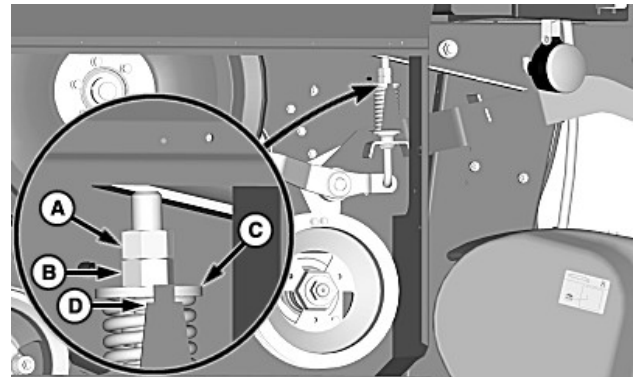

H121336—UN—25APR17

A—Nut
B—Nut
C—Washer
D—Gauge


CAUTION: Shut OFF engine, set park brake and remove key.

Feed accelerator belt idler is on the right-hand side of the machine behind the feeder house pivot.


Loosen nut (A) and tighten the nut (B) until the washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUC6075.0004728-19-25APR17

Standard Speed High Capacity Feed Accelerator—Changing Speed

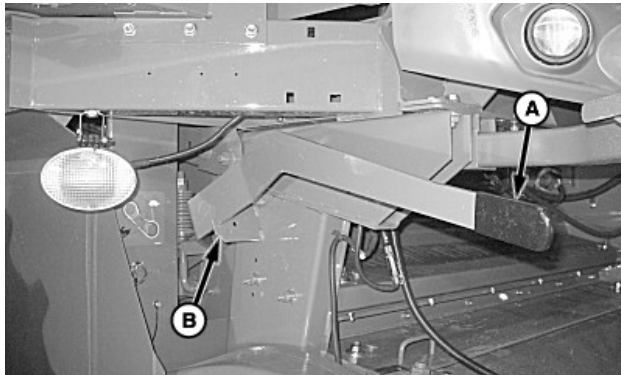

H96926—UN—16JUN10

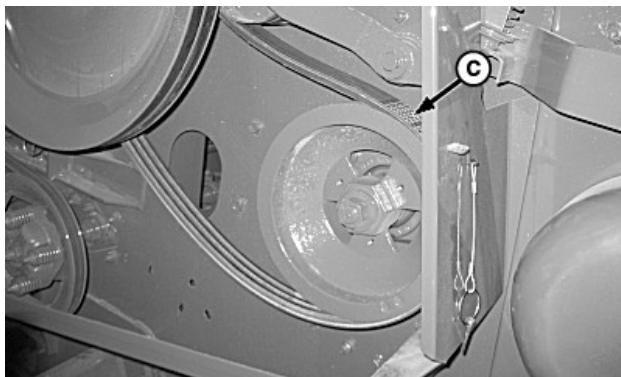

H86423—UN—28JUL06

A—Lever
B—Bracket
C—Belt

NOTE: Refer to Crop Settings section for recommended feed accelerator speed settings.


When changing separator speeds make sure to cycle power ON and OFF to recognize new speed range.

To change feed accelerator speed to high speed position:

- Push lever (A) up and out of notch in bracket (B) to relieve belt tension.
- Move belt (C) to inside sheave grooves on both sheaves for high speed.
- Push lever up and into notch in bracket to reset belt tension.

OUO6075,00007F2-19-27OCT10


High Speed High Capacity Feed Accelerator—Changing To Slow Speed

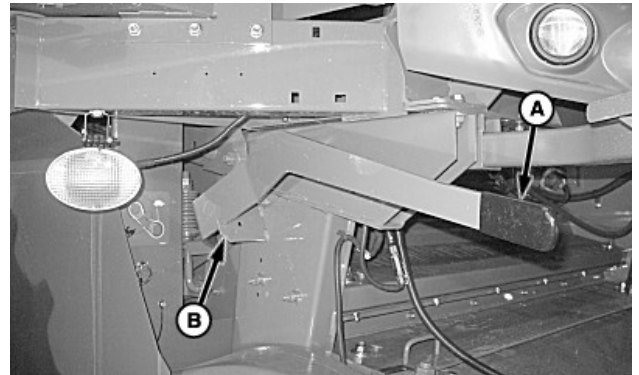

H96926—UN—16JUN10



H75088—UN—07FEB03

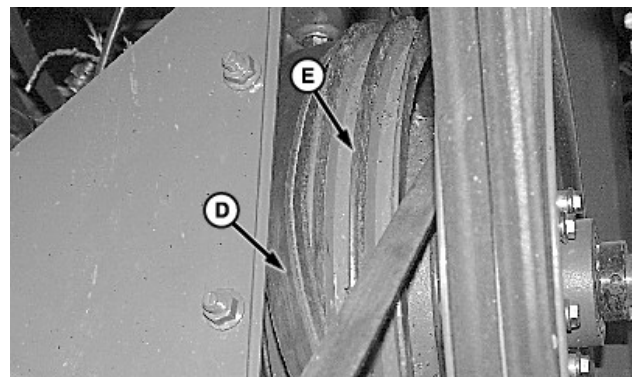

H75076—UN—06FEB03

A—Lever
B—Bracket
C—Belt
D—Belt
E—Upper Sheave

NOTE: Refer to Crop Settings section for recommended feed accelerator speed settings.

When changing separator speeds make sure to cycle power ON and OFF to recognize new speed range.

To change feed accelerator speed to low speed position:

- Push lever (A) up and out of notch in bracket (B) to relieve belt tension.

- Remove belt (C) from lower sheave and let belt hang freely from upper sheave.

NOTE: Belt must be twisted to fit between upper sheave and sidesheet.

- Push lever up and into notch in bracket to reset belt tension.

OUO6075.00007F3-19-14JUN11

- Remove belt (D) from upper sheave (E) and move to inside sheave for low speed.
- Install belt (C) on inner sheave groove on lower sheave.

Concave Recommendations

NOTE: For recommended machine settings for various crops, refer to the Crop Settings section for further information.

Concave Type	Corn	Soybeans	Wheat Barely Small Grains	Rice	Popcorn Food Corn	Sorghum (Milo) Sunflowers (Confection)	Sunflowers (Oil)	Canola
Small Wire	NR	NR	Best	NR	NR	NR	Average	Best
Large Wire	Good	Good	Good	Best	NR	Best	Best	Good
Round Bar	Best	Best	Average	Good	Best	Average	Best	Average

Best = Provides best level of performance.
 Good = Provides a good level of performance.
 Average = Provides an average level of performance.
 NR = Not recommended.

Recommended Configurations

NOTE: For recommended machine settings for various crops, refer to the Crop Settings section for further information.

Numerous concave combinations are possible based on conditions and operator preferences.


Concave Type	Corn Soybeans	Wheat	Barley	Lentils	Chickpeas	Canola
John Deere	RB, RB, RB	SW, SW, SW Plus Covers	SW, SW, LW	SW, SW, SW	SW, RB, RB	SW, SW, SW
Kondex® Revolution™	MR, RB, RB	MT, SW, SW	MT, SW, LW	MT, SW, SW	MR, RB, RB	MT, SW, SW

SW = John Deere Small Wire Concave
 LW = John Deere Large Wire Concave
 RB = John Deere Round Bar Concave
 MT = Kondex® Revolution™ two half-width MaxThresh™ Concaves
 MR = Kondex® Revolution™ one half-width MaxThresh™ Concave and one half-width MaxRound™ Concave


MaxThresh is a trademark of Kondex Corporation
 MaxThresh is a trademark of Kondex Corporation
 MaxRound is a trademark of Kondex Corporation

OUO6075.0005039-19-11MAY21


Concave Types

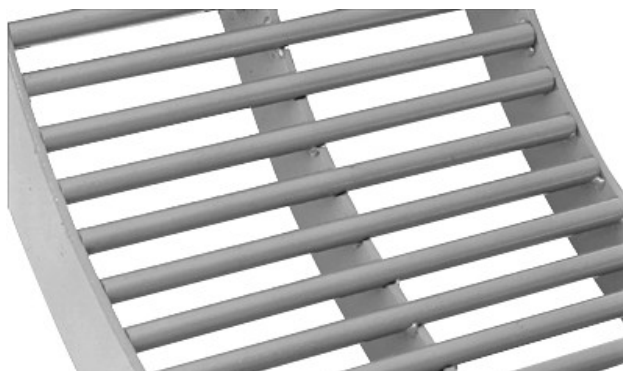

H54506—UN—23MAR99
Round Bar Multi Crop Concave

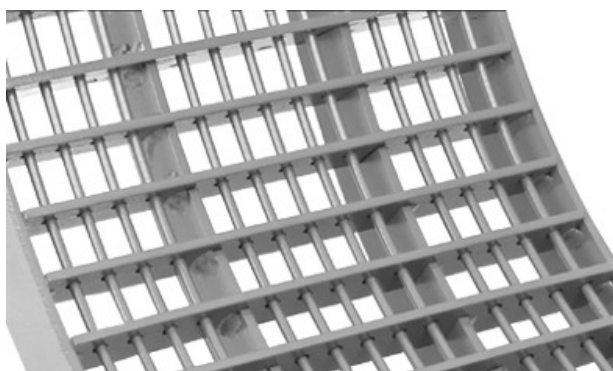

H54507—UN—25JUN99
Large Wire Concave

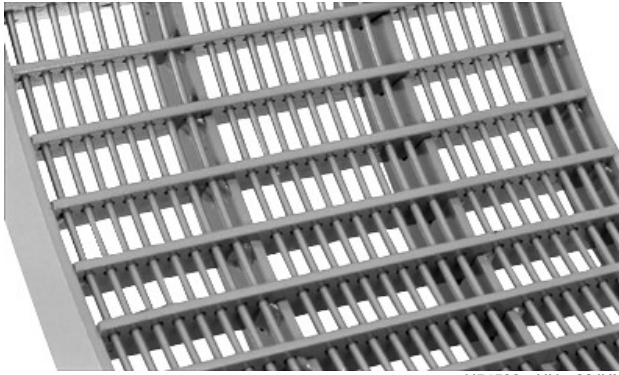

H54508—UN—22JUN99

Small Wire Concave

Three different concaves are available for different crop and crop conditions.

- Round bar multi crop concave is used for corn and soybeans.
- Large wire concave is used for rice, soybeans, and grain sorghum.
- Small wire concave is used for small grains.

OOU6075.00007A8-19-02JUN10

Concave Types (MaxThresh™ and MaxRound™)



H134407—UN—14MAY21

MaxThresh™ Concave



H134408—UN—14MAY21


MaxThresh™ and MaxRound™ Concaves

Two different concaves are available for the different crop and crop conditions.

- MaxThresh™ concave is used in small grains.
- MaxThresh™ and MaxRound™ concaves are used in coarse grains.

OOU6075.0005036-19-14MAY21

Separator Grate Spacers

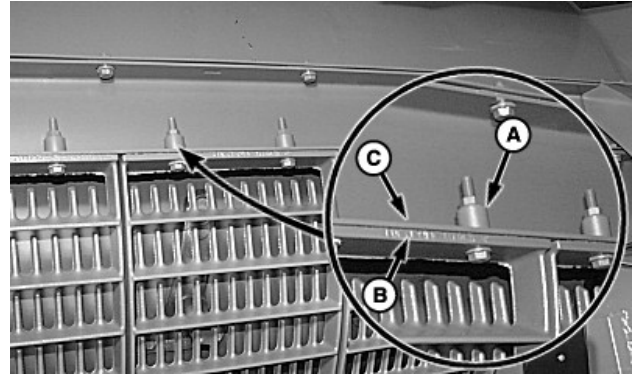

H86634—UN—20SEP06

- A—Spacers
- B—Separator Grates
- C—Separator Channel

Spacers are installed in storage position (as shown) from factory.

Spacers can be used in corn to reduce bits of cob in the grain tank sample.


IMPORTANT: Spacers should be used in corn and soybeans only. Remove spacers for all other crops (place spacers in storage position as shown).

Remove all separator grate spacers (A) from storage position (as shown) and install between separator grates (B) and separator channel (C).

OOU6075.0000B06-19-03JAN11

MaxThresh is a trademark of Kondex Corporation
MaxRound is a trademark of Kondex Corporation

Separator Grate Types

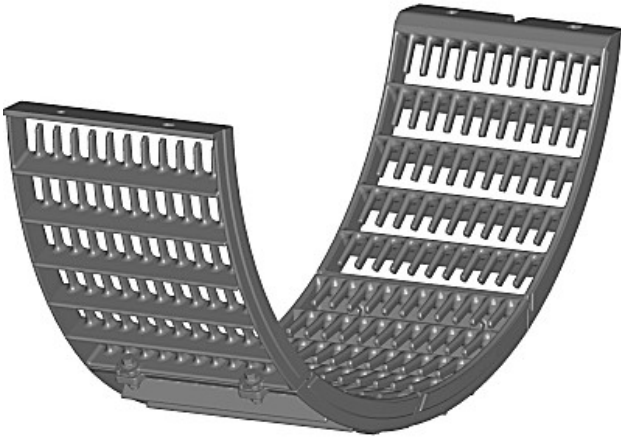

H107177—UN—06MAR13
Standard Cast Separator Grate



H133680—UN—15MAR21
Heavy-Duty Cast Separator Grate




H107178—UN—06MAR13
Heavy-Duty Welded Separator Grate

Two different separator grate options are available for the machine.

- Standard cast separator grates come standard on all machines, except for rice and small tough grain packages.
- Heavy-duty welded and heavy-duty cast separator grates are used in tough crop situations and can help reduce rotor loss. These grates are optional on the TriStream™ rotor and Variable Stream rotor machines, but standard on small tough grains, rice, and tough rice packages.


OUO6075,0005037-19-14MAY21

Separator Grate Covers (If Equipped)

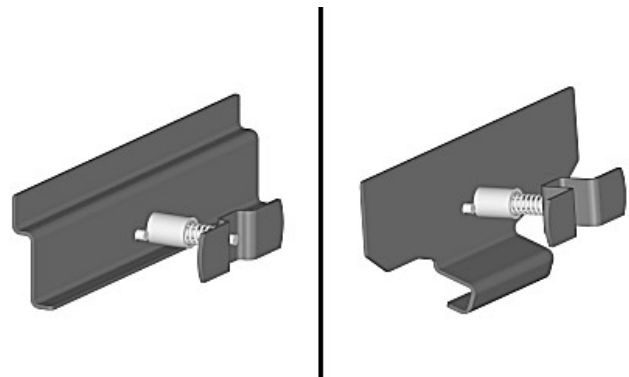


H107180—UN—07MAR13
Standard Cast Grate Covers / Heavy-Duty Welded Grate Covers

TriStream is a trademark of Deere & Company

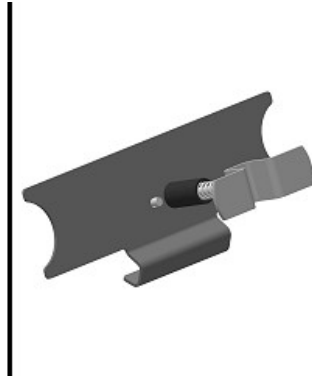

H133682—UN—15MAR21

Heavy-Duty Cast Grate Covers

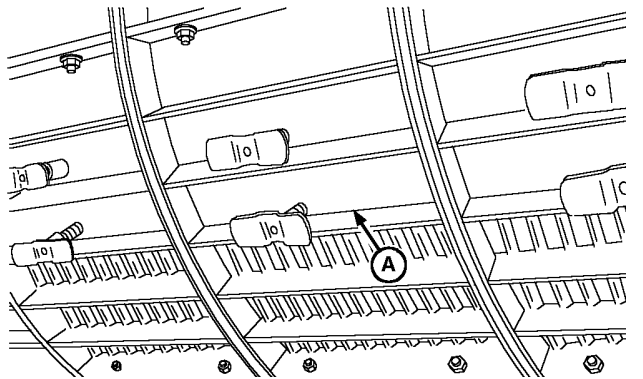

H54512—UN—01APR99

A—Separator Grate Covers

Separator grate covers (A) are used in small grains and are also recommended for use in very dry crops. Covers are installed on separator grates to help balance the chaff load to the cleaning shoe.

Standard Cast Grate Covers

- Install two rows (eight covers) on the right-hand side and three rows (12 covers) on the left-hand side. Adjust as necessary depending on conditions.

Heavy-Duty Welded and Heavy-Duty Case Grate Covers

- Install one row (four covers) on the right-hand side and two rows (eight covers) on the left-hand side. Adjust as necessary depending on conditions.

OUC6075,0005038-19-14MAY21

Heavy-Duty Welded Separator Grate Interrupters (If Equipped)



H99873—UN—27JAN11

Separator grate interrupters are used with the heavy-duty welded separator grates and are located on the right-hand side of the machine, in rows one and three.

These interrupters create a disruption in crop mat flow that allows additional grain to be shaken loose, increasing separator capacity.

mh69740,1655914579724-19-22JUN22

Heavy-Duty Cast Separator Grate Interrupters (If Equipped)




H135710—UN—22JUN22

Separator grate interrupters are used with the heavy-duty cast separator grates and are located on the right-hand side of the machine, in rows one and three.

These interrupters create a disruption in crop mat flow that allows additional grain to be shaken loose, increasing separator capacity.

mh69740,1654621023343-19-22JUN22

Separator Grate Interrupter Locations (If Equipped)

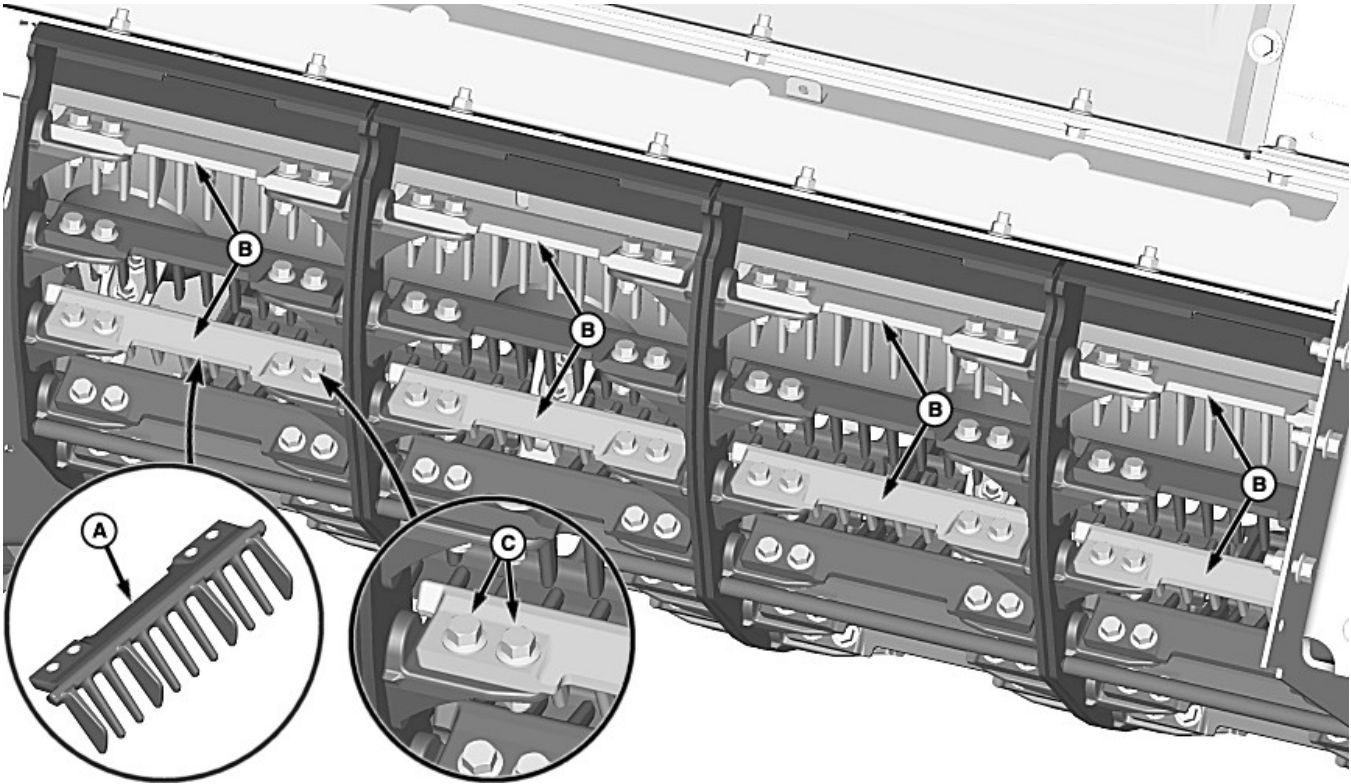

H99901—UN—21JAN11

A—Separator Grate Interrupters
B—Locations (8 used)

IMPORTANT: Separator grate interrupters are intended for use on rows one and rows three on right-hand side of separator grates as shown. Installation in other locations may cause interference or a reduction in machine performance.

Verify that rotor is free spinning after installation of separator grate interrupters before starting machine or engaging separator.

C—Cap Screws and Nuts (32 used)


1. Separator grate interrupters (A) MUST be installed in locations (B) as shown.
2. Retain separator grate interrupters with cap screws and nuts (C).
3. Tighten cap screws to specification.

Specification

Cap Screws—Torque. 73 N·m
(54 lb.-ft.)

OOU6075,00016F8-19-19DEC13

Separator Rail Liners (If Equipped)

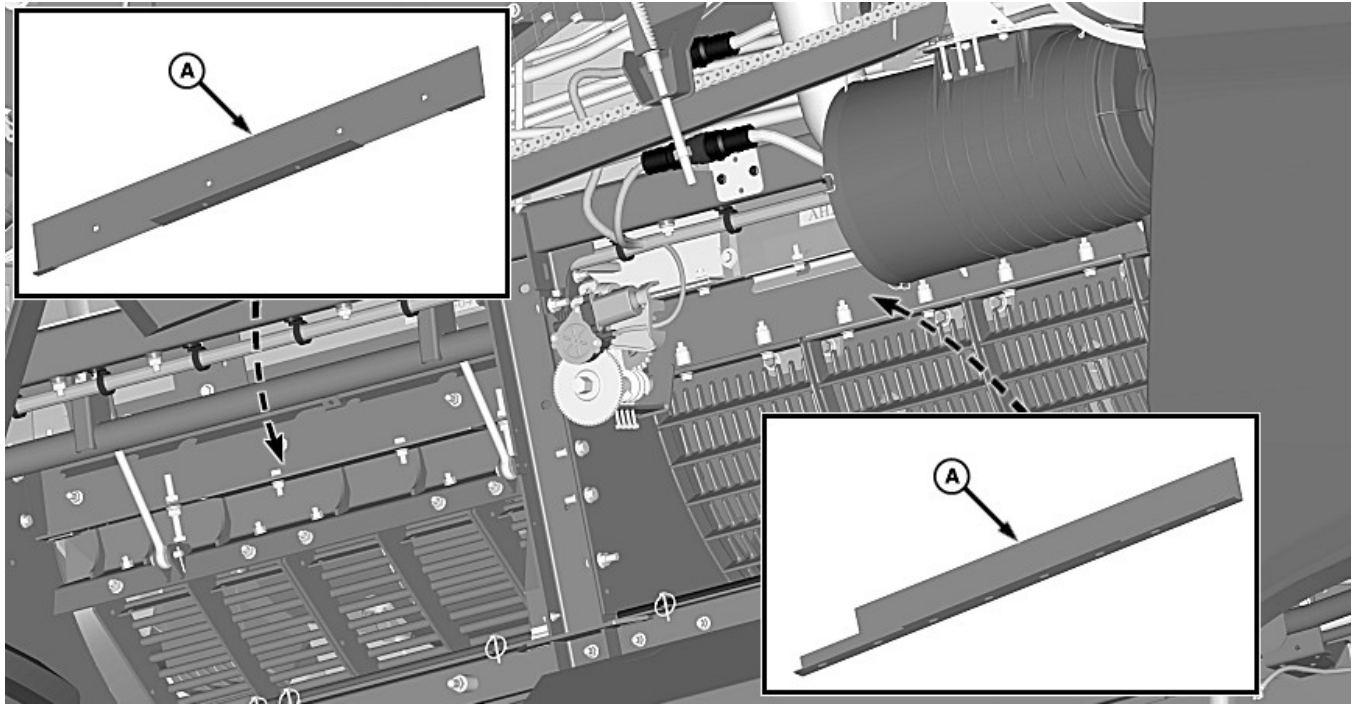

H126544—UN—20JUN19

A—Separator Rail Liners

NOTE: Left-hand separator rail liners are shown. Right-hand separator rail liners are similar.


The separator rail liners (A) provide protection to the separator rail when harvesting abrasive crops.

Periodically inspect the left-hand and right-hand separator rail liners for wear.

Remove and replace separator rail liners as needed. See your John Deere dealer for further information.

OUO6075,0004BCF-19-20JUN19

Concave Sector Gear Shear Bolts (Standard Concave Adjust)

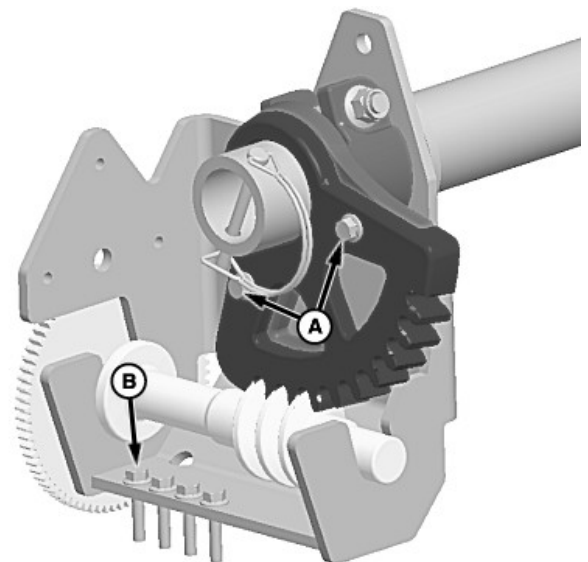

H88917—UN—14JUN07

A—Shear Bolts
B—Extra Shear Bolts (4 Used)

CAUTION: Shut OFF engine, set park brake and remove key.

Use only John Deere supplied shear bolts (A), see your John Deere dealer for replacement shear bolts.

If shear bolts should break, replace with extra shear bolts (B), which are provided on sector gear bracket.


Tighten shear bolts to specification.

Specification

Shear Bolts—Torque. 15 N·m
(133 lb-in.)

OUO6075,0001800-19-13MAY14

Concave Sections (Standard Concave Adjust)—Remove and Install

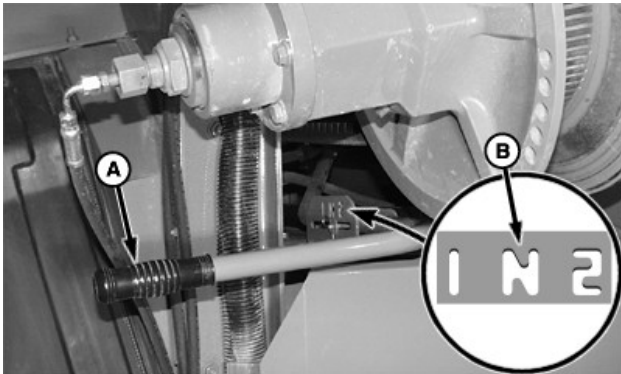


H96927—UN—17JUN10

A—Handle
B—Neutral Position

CAUTION: Concave sections are heavy and awkward to handle. Another person may be needed to remove and install concave sections.

NOTE: For ease of removal, close concave completely.

1. Move handle (A) to shift the rotor gear case in neutral position (B).

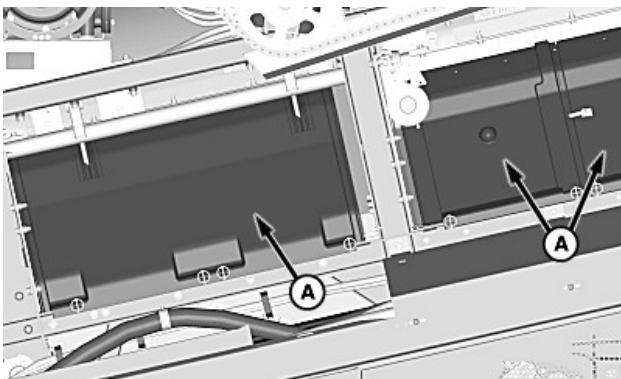


H111238—UN—13MAY14

A—Separator Covers

NOTE: Remove shielding as needed to access separator inspection covers.

2. Remove separator inspection covers (A).

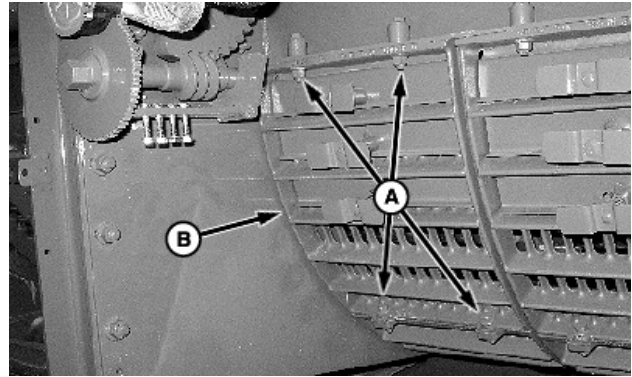


H100377—UN—22FEB11


A—Cap Screws
B—Separator Grate

NOTE: Removing separator grate provides access for rotating rotor.

3. Remove cap screws (A) and separator grate (B).

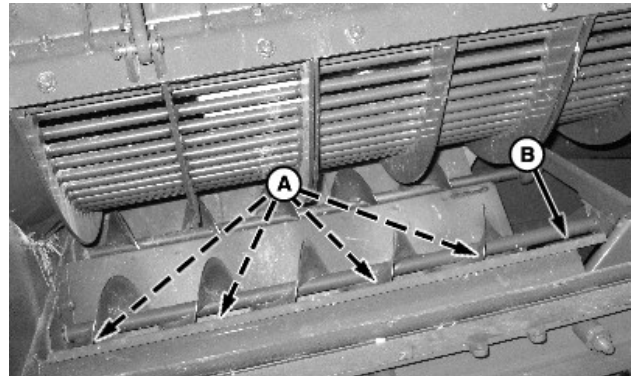


H100378—UN—22FEB11

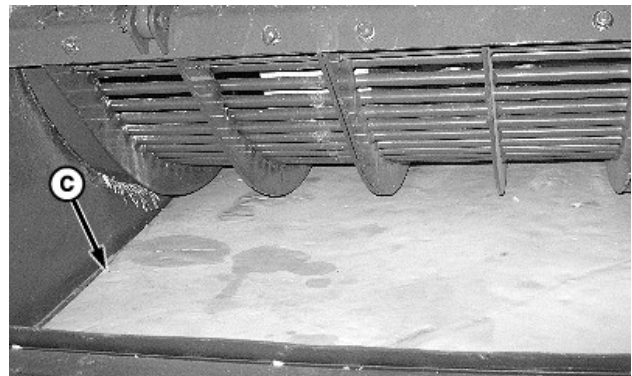

H100380—UN—22FEB11

A—Cap Screws (4 used)
B—Diverter
C—Cardboard


4. Loosen cap screws (A) and remove left-hand sheet metal diverter (B).
5. Place a piece of cardboard (C) or poly over conveyor augers. This provides protection for the augers and allows a smooth surface to remove the concaves.

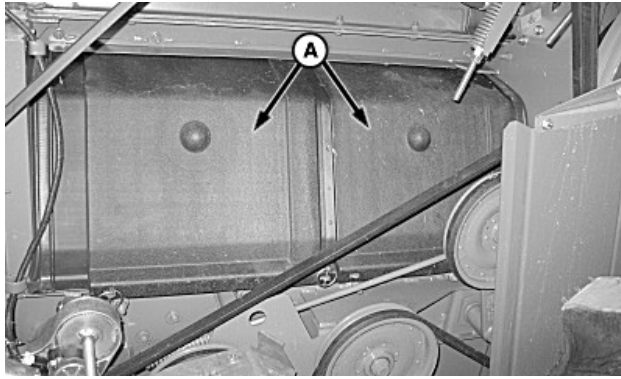

H96929—UN—17JUN10

A—Separator Cover (2 used)


6. Remove shielding as needed to access separator inspection covers.
7. Remove quick-lock pins and front two separator covers (A) on the right-hand side of the machine.

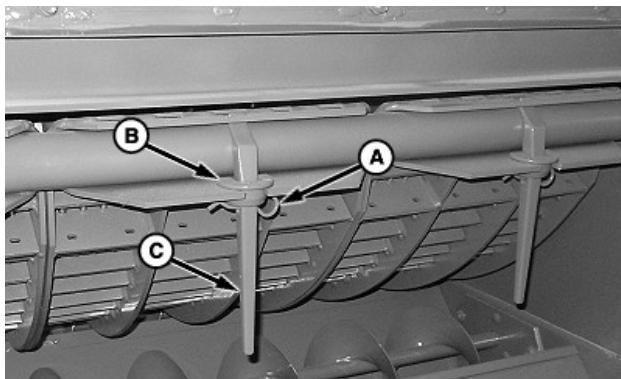

H111561—UN—14JUL14

A—Spring Pin
B—Concave Retainer
C—Handle


8. Remove spring pin (A) from the concave retainer (B).
9. Lift concave retainer (B) and remove the handle (C) from each concave section.

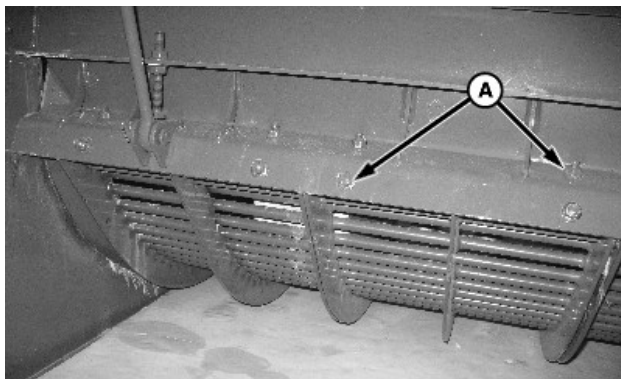

H100381—UN—23FEB11

A—Cap Screws (12 used)

10. Loosen cap screws (A).

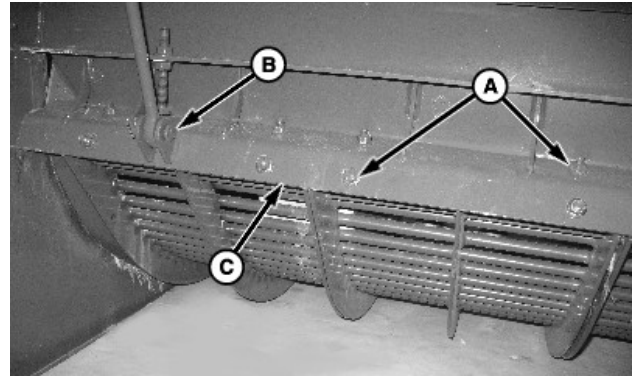


H100382—UN—23FEB11

A—Cap Screws (12 used)
B—Pins (2 used)
C—"Z" Bar

CAUTION: To prevent damage, carefully lower concave onto the auger bed.


11. Remove cap screws (A).
12. Remove cotter pins, pins (B) and "Z" bar (C).
13. Rotate rotor such that a gap in the threshing element pattern occurs at mid concave.
14. Remove center concave section.
15. Slide rear concave to the center position and remove.
16. Slide front concave to the center position and remove.
17. Inspect wear on concave sections, threshing elements and threshing tines using KXE10110 Clearance Gauge.
18. Install concaves in reverse order.

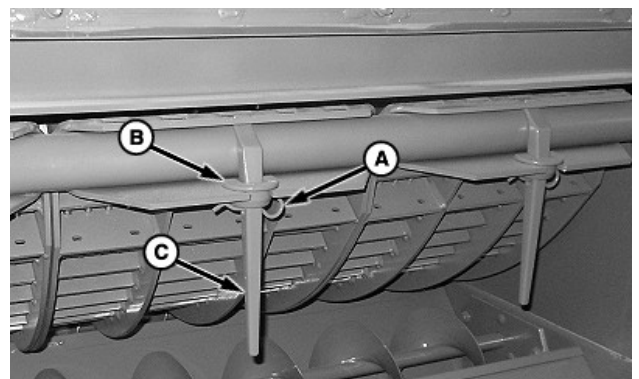

H111561—UN—14JUL14

A—Spring Pin
B—Concave Retainer
C—Handle

19. Install handle (C), concave retainer (B), and spring pin (A) on concave sections.

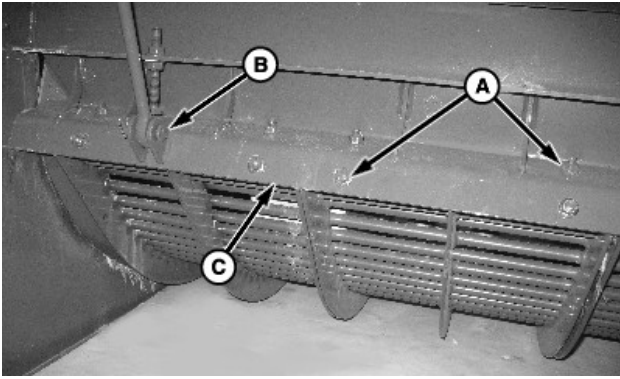


H100382—UN—23FEB11

A—Cap Screws (12 used)
B—Pins (2 used)
C—"Z" Bar

20. Position "Z" bar (C) over end of concaves and install cap screws, but do not tighten.

21. Install pins (B).

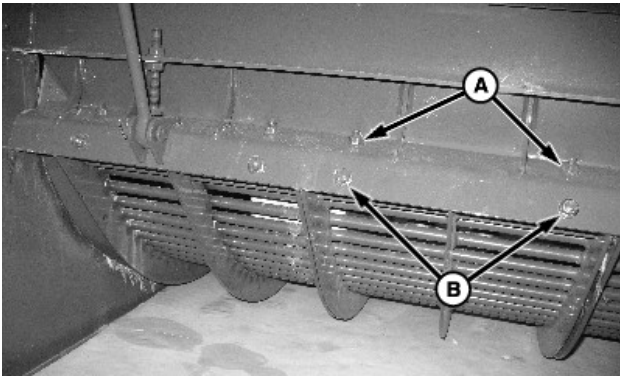


H121120—UN—22MAR17

A—Cap Screws (6 used)
B—Cap Screws (6 used)

22. Be sure the ends of concaves fit snug into "Z" bar; then tighten top row of the cap screws (A) first.

23. Tighten bottom row of the cap screws (B) last.

24. Adjust concave level. See Concave Leveling (Standard Concave Adjust) later in this section.

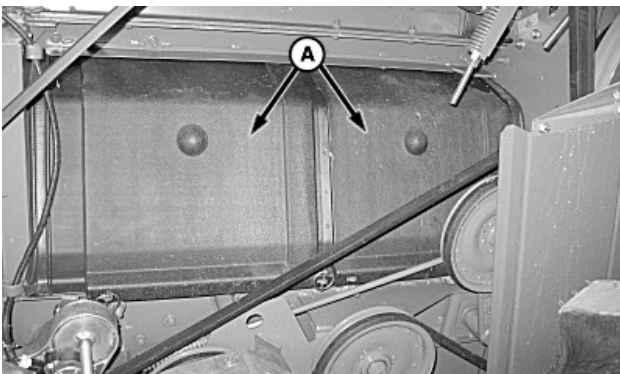


H96929—UN—17JUN10

A—Separator Covers

NOTE: Verify that top edge of separator cover is under clips.

25. Install separator covers (A).


26. Install shielding previously removed to access separator inspection covers.

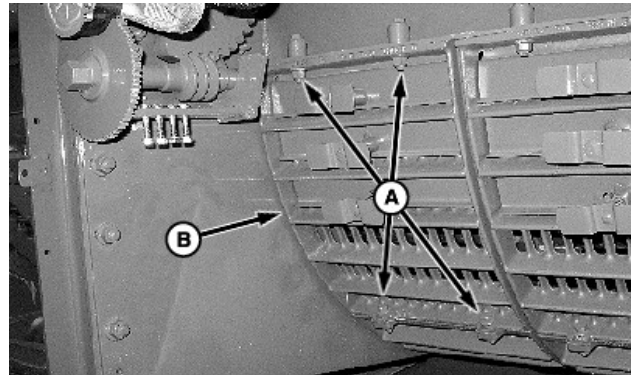


H100377—UN—22FEB11

A—Cap Screws (4 used)
B—Separator Grate

27. Install separator grate (B) and retain with cap screws (A).

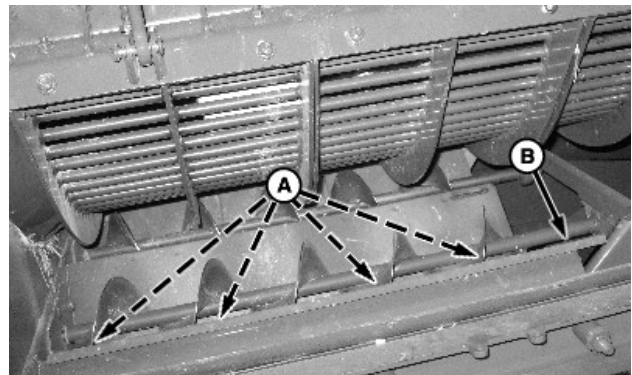

H100378—UN—22FEB11

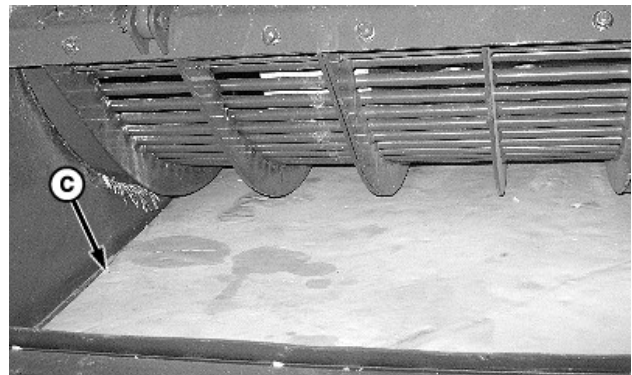


H100380—UN—22FEB11

A—Cap Screws (4 used)
B—Diverter
C—Cardboard

28. Remove cardboard (C) or poly from conveyor augers.

29. Install diverter (B) to original position and tighten cap screws (A).

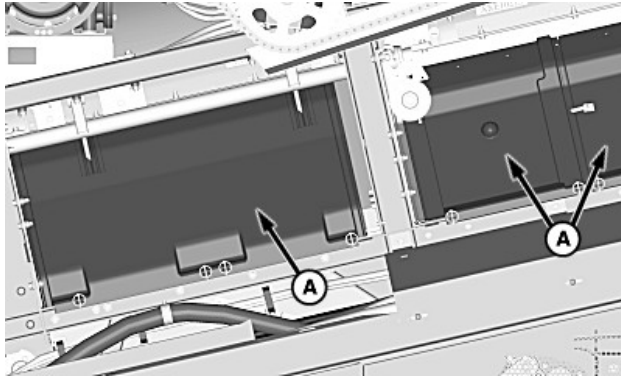


H111238—UN—13MAY14

A—Separator Cover

30. Install separator inspection covers (A).
31. Install shielding previously removed to access separator inspection covers.
32. Place rotor drive gear case in desired speed range.

OUC6075,0004605-19-04APR17

Concave Sections (Active Concave Isolation)—Remove and Install

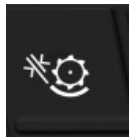

H117012—UN—28MAR16


Threshing Clearance Adjust

CAUTION: Concave sections are heavy and awkward to handle. Another person may be needed to remove and install concave sections.

1. Start engine and press threshing clearance adjust switch.
2. To allow easier access to “Z” bar hardware, open threshing clearance to 5.

NOTE: Threshing clearance may need to be increased depending on machine configuration.


3. Shut OFF engine, set park brake and remove key.

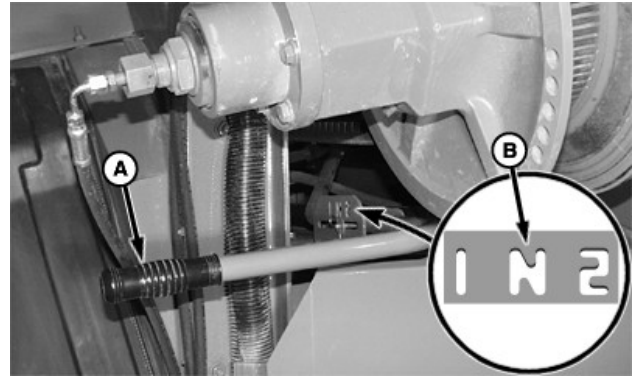

H96927—UN—17JUN10

**A—Handle
B—Neutral Position**

4. Move handle (A) to shift the rotor gear case in neutral position (B).

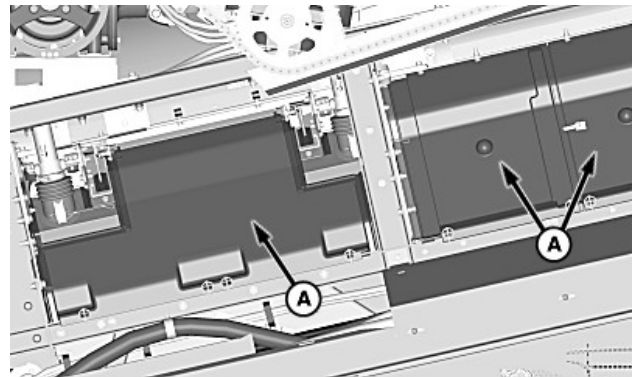


H111239—UN—13MAY14

A—Separator Covers

NOTE: Remove shielding as needed to access separator inspection covers.

5. Remove separator inspection covers (A).

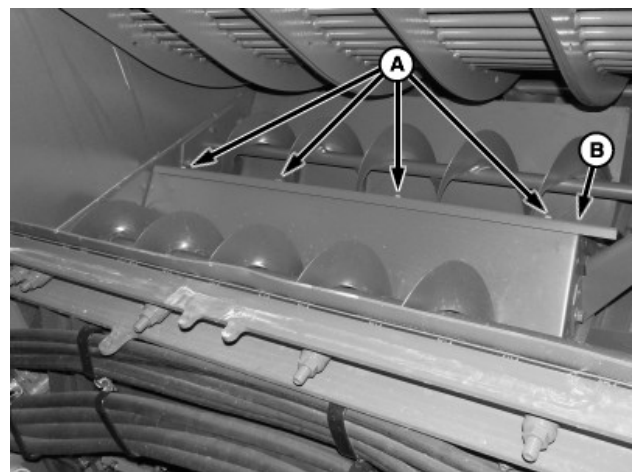


H109597—UN—18DEC13

**A—Cap Screws
B—Diverter**

6. Loosen cap screws (A) and remove left-hand sheet metal diverter (B).


NOTE: Place a piece of cardboard or poly over conveyor augers. This provides protection for the augers and allows a smooth surface to remove the concaves.

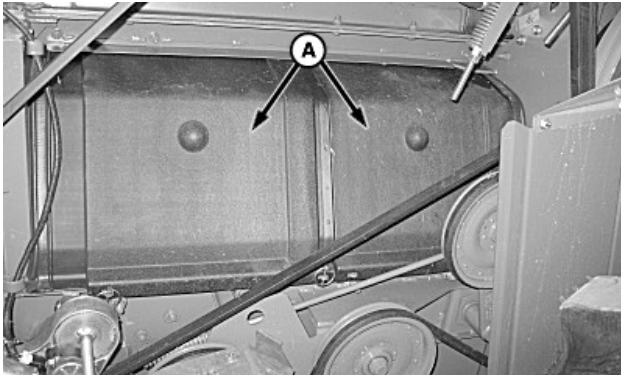


H96929—UN—17JUN10

A—Separator Cover

7. Remove shielding as needed to access separator inspection covers.
8. Remove quick-lock pins and front two separator covers (A) on the right-hand side of the machine.

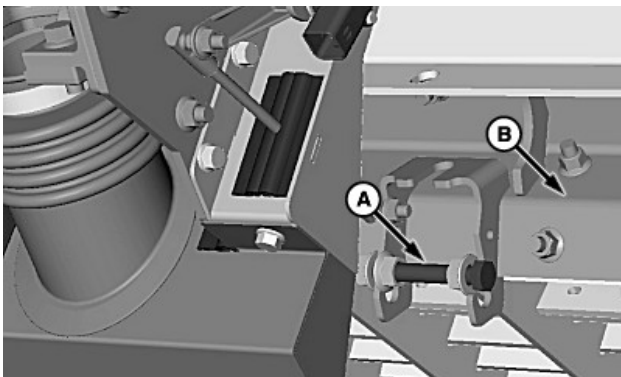

H109919—UN—27FEB14

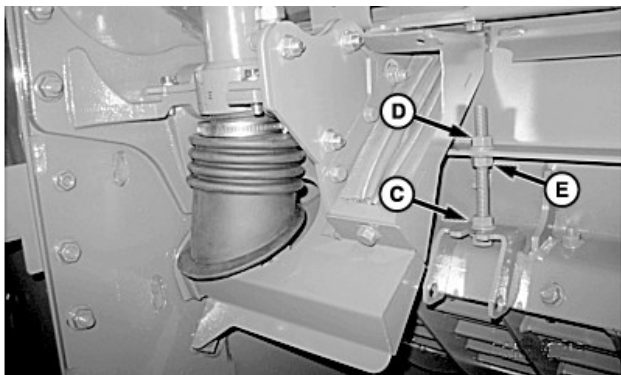


H109920—UN—27FEB14

- A—Leveling Cap Screw (2 used)**
- B—“Z” Bar**
- C—Nut (2 used)**
- D—Nut (2 used)**
- E—Nut (2 used)**

9. Remove concave leveling cap screws (A) from the bracket on “Z” bar (B) and install through the rail to hold concave and “Z” bar assembly.

10. Hand tighten nut (C) against “Z” bar bracket and slightly tighten nut (D) against the rail on both sides.


NOTE: Verify that there is adequate space between nut (E) and rail for zeroing adjustments. Do NOT tighten the nut against the rail.

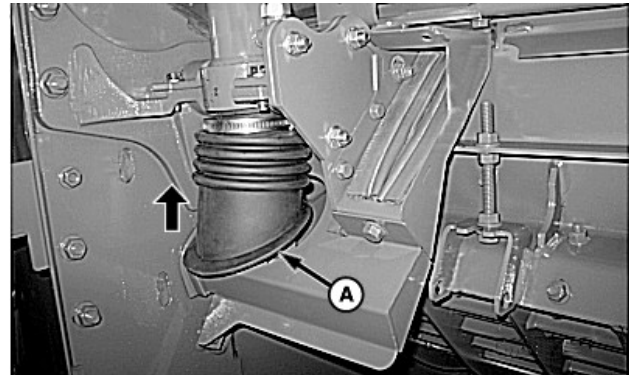

H109276—UN—16OCT13

A—Rubber Seal (2 used)


11. Remove base of the rubber seal (A) and lift upward on both cylinders.

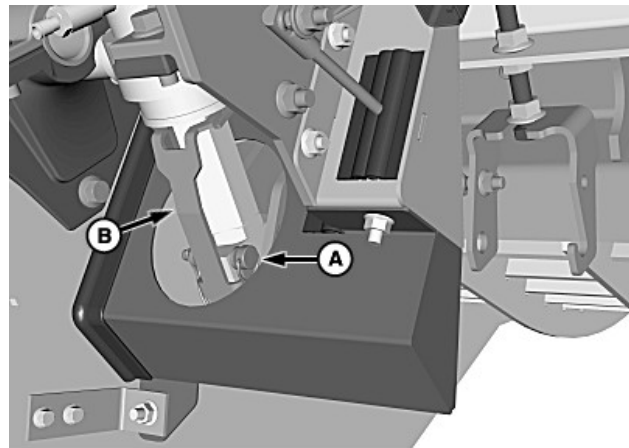

H111261—UN—22MAY14

- A—Pin (2 used)**
- B—Cylinder Safety Stop (2 used)**

12. Remove pin (A) and cylinder safety stop (B) on both cylinders.

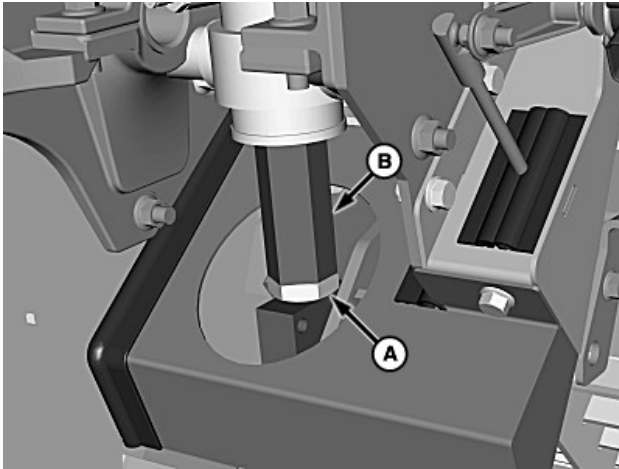


H109683—UN—22JAN14

A—Jam Nut (2 used)
B—Cylinder Stop (2 used)

13. Loosen jam nut (A) from the cylinder stop (B) and lower stop on both cylinder rods.


NOTE: Jam nut and stop must be lowered at least 15 mm (19/32 in) from current location.

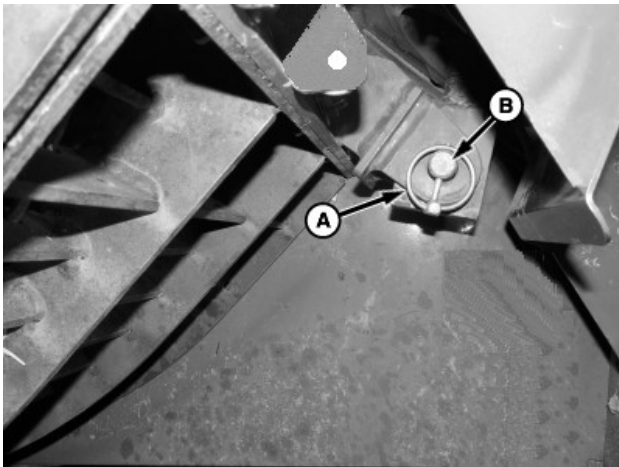

H109593—UN—16DEC13

A—Quick-Lock Pin (2 used)
B—Pin (2 used)

14. Remove quick-lock pin (A) and pin (B) from the cylinder rod on both sides.

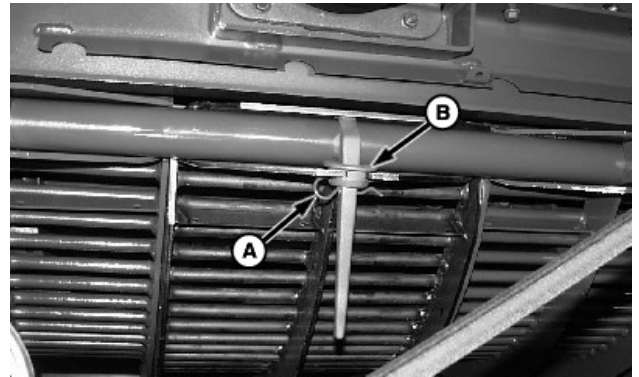


H75040—UN—04FEB03

Concave Retainer

A—Spring Pin
B—Concave Retainer


15. Remove spring pin (A) from the concave retainer (B).
16. Lift concave retainer and remove the handle from each concave section.

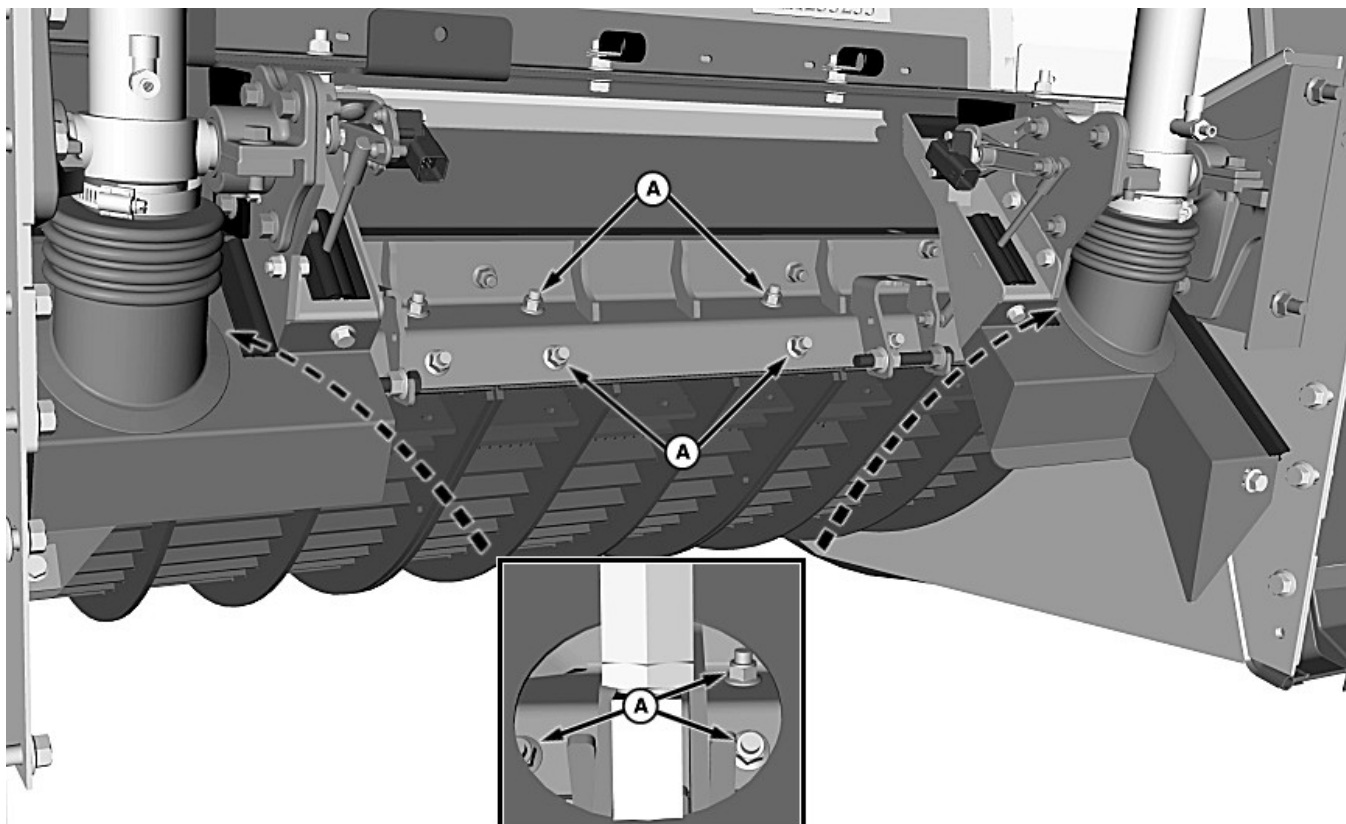

H109599—UN—19DEC13

A—Cap Screw (14 used)

17. Loosen cap screws (A).

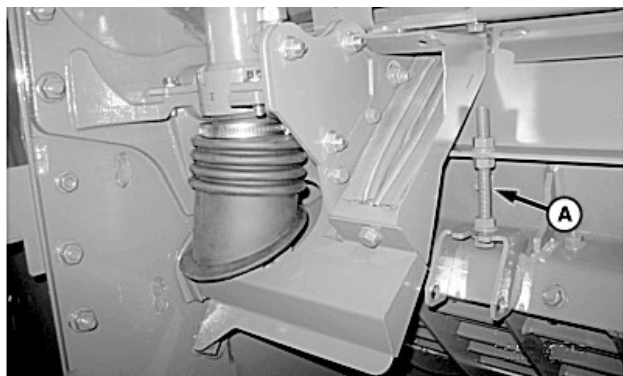

H109677—UN—21JAN14

A—Leveling Cap Screw (2 used)


B—Nut (2 used)

C—Linkage Arm (2 used)


18. Use leveling cap screw (A) to adjust “Z” bar and concaves up approximately 10 mm (13/32 in) or until middle concave can be easily removed.

NOTE: Depending on machine configuration, “Z” bar may need to be removed.

19. If removing “Z” bar, remove nuts (B) and linkage arms (C).

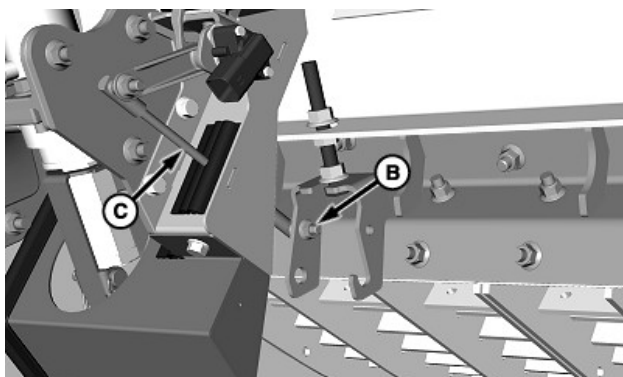

H111243—UN—16MAY14

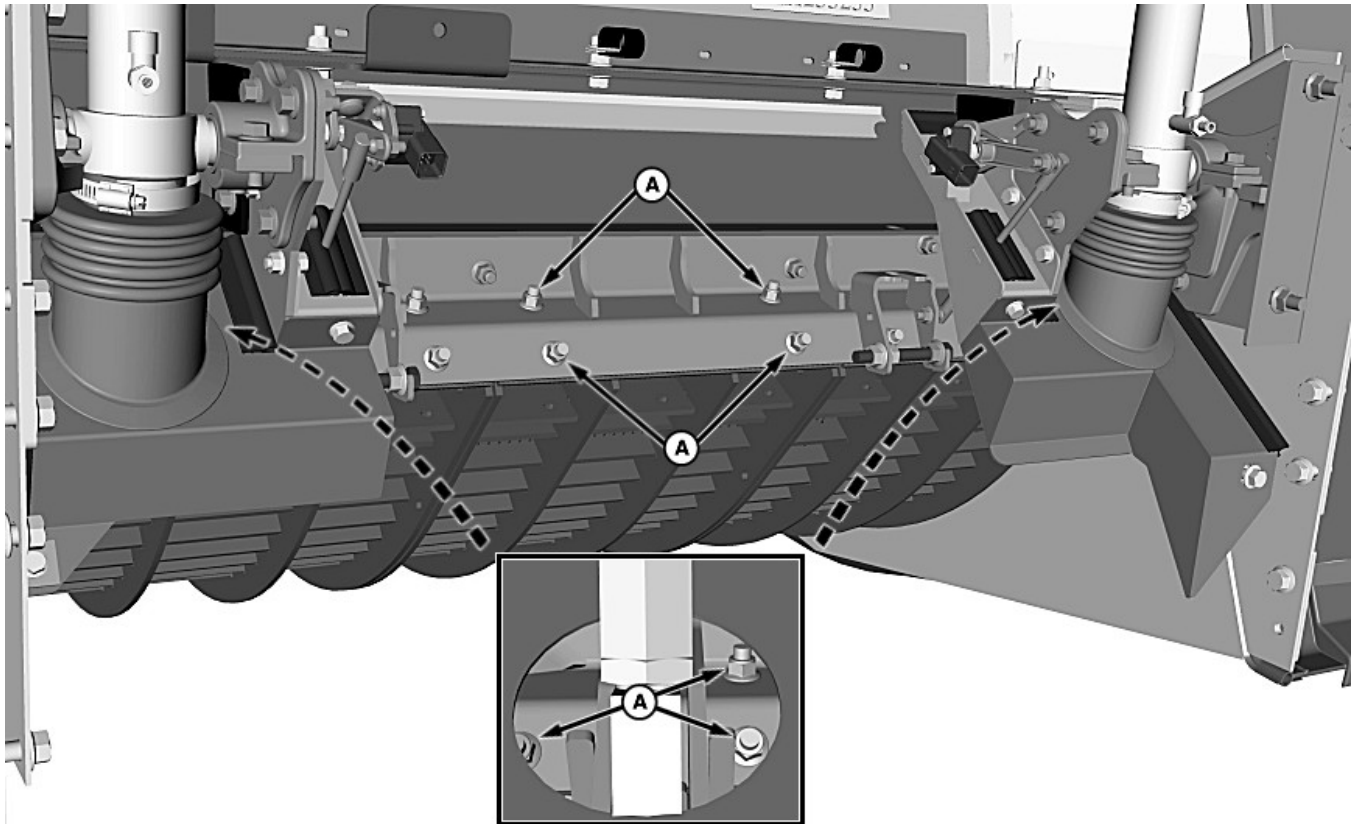


H109599—UN—19DEC13

A—Cap Screw and Nut (14 used)

20. Remove cap screws and nuts (A).

NOTE: Rotate rotor such that a gap in the threshing element pattern occurs at mid concave.


21. Remove center concave section.
22. Slide rear concave to the center position and remove.
23. Slide front concave to the center position and remove.
24. Inspect wear on concave sections, threshing elements and threshing tines using KXE10110 Clearance Gauge.
25. Install concaves in reverse order.

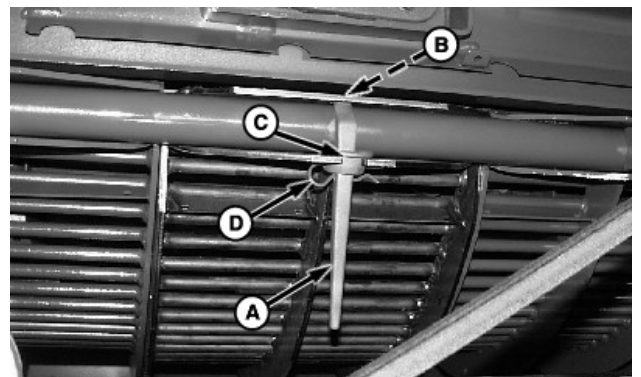


H75041—UN—04FEB03

**A—Handle
B—Groove
C—Concave Retainer
D—Spring Pin**

26. Install concave handle (A) into groove (B) on concave sections.
27. Install concave retainer (C) and retain with spring pin (D).

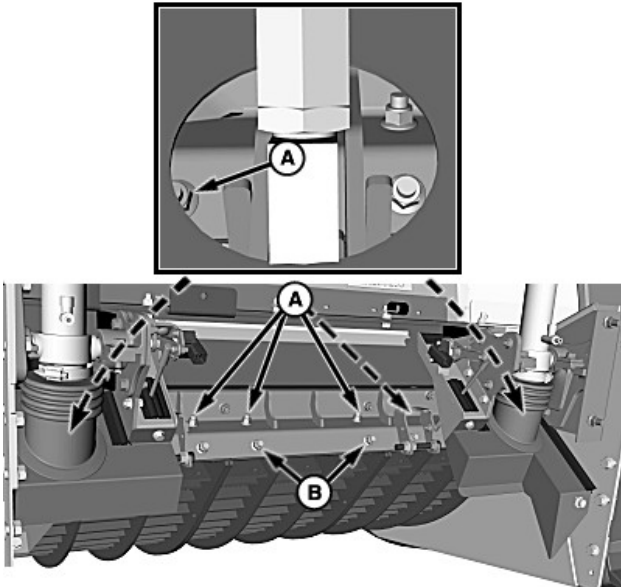

H109684—UN—22JAN14

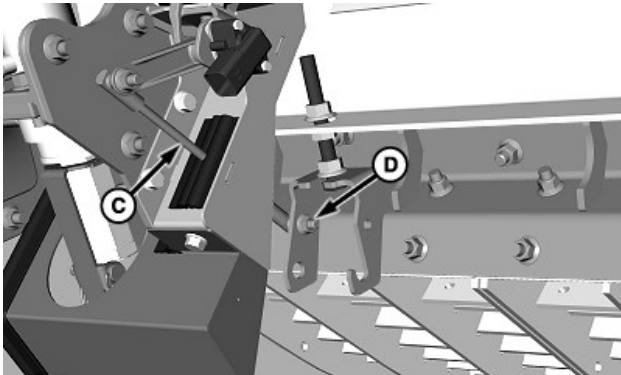

H111244—UN—16MAY14


- A—Cap Screw and Nut (6 used)
- B—Cap Screw and Nut (8 used)
- C—Linkage Arm (2 used)
- D—Nut (2 used)

NOTE: If "Z" bar was previously removed, install at this time.

28. Using leveling cap screws, lower "Z" bar and concaves approximately 10 mm (13/32 in) or equal distance of amount raised previously.

NOTE: Verify that concave sections are tight against each other with no gaps prior to tightening hardware.

29. Verify ends of concaves fit snug into "Z" bar; then tighten top row of the cap screws and nuts (A) first.
30. Tighten bottom row of the cap screws and nuts (B) last.
31. If "Z" bar was removed, install linkage arms (C) using nuts (D).
32. Adjust concave level. See Concave Leveling (Active Concave Isolation) later in this section.

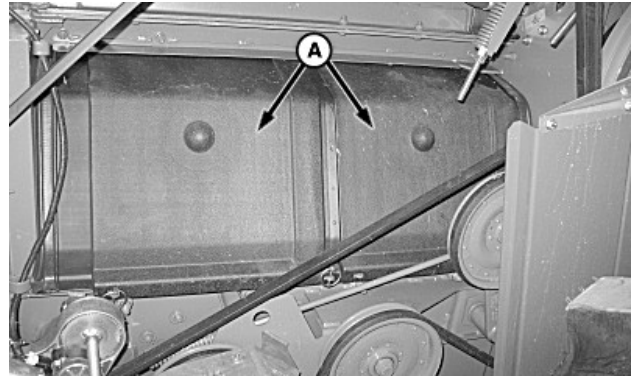


H96929—UN—17JUN10

A—Separator Covers

NOTE: Verify that top edge of separator cover is under clips.

33. Install separator covers (A).
34. Install shielding previously removed to access separator inspection covers.


NOTE: Remove cardboard or poly from conveyor augers.

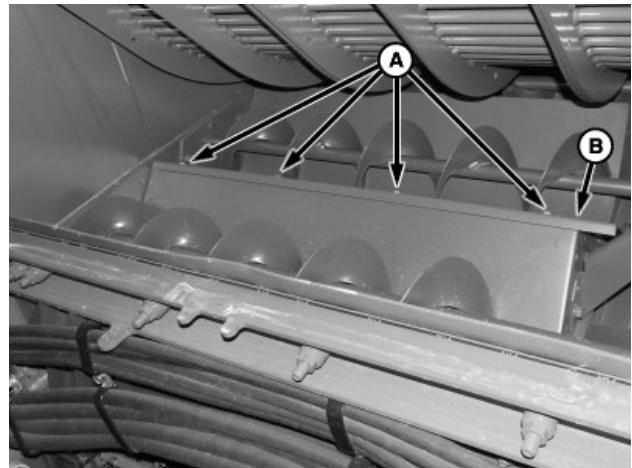

H109597—UN—18DEC13

A—Cap Screw (4 used)
B—Diverter

35. Install diverter (B) to original position and tighten cap screws (A).

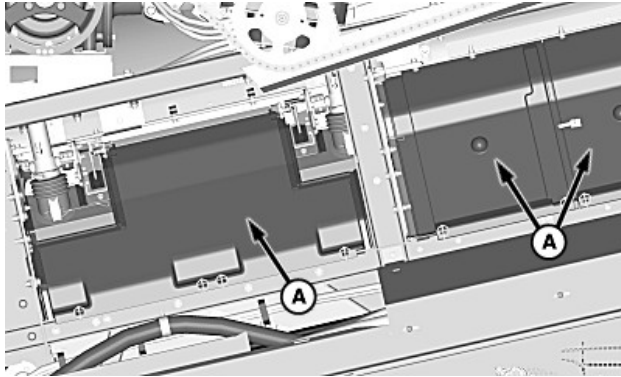


H111239—UN—13MAY14

A—Separator Cover

36. Install separator inspection covers (A).
37. Install shielding previously removed to access separator inspection covers.
38. Shift rotor drive gear case to previous position.

OUO6075,0004606-19-11APR17

Concave Leveling (Standard Concave Adjust)

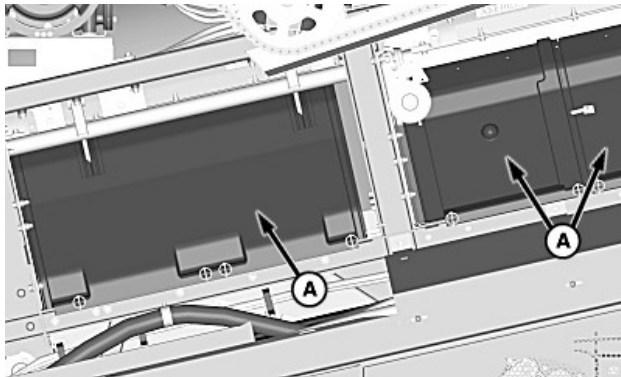


H111238—UN—13MAY14

A—Separator Cover

NOTE: Round bar concave covers (if installed) should be removed prior to beginning concave leveling.

1. Remove shielding as needed to access separator inspection covers.
2. Remove separator inspection covers (A).

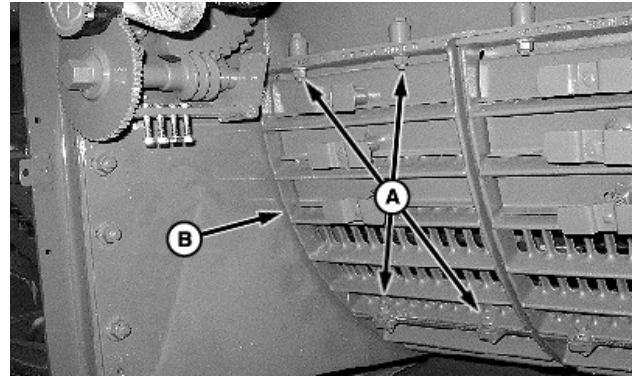


H100377—UN—22FEB11

A—Cap Screw (4 used)
B—Separator Grate

NOTE: Removing separator grate provides access for rotating rotor.


3. Remove cap screws (A) and separator grate (B).

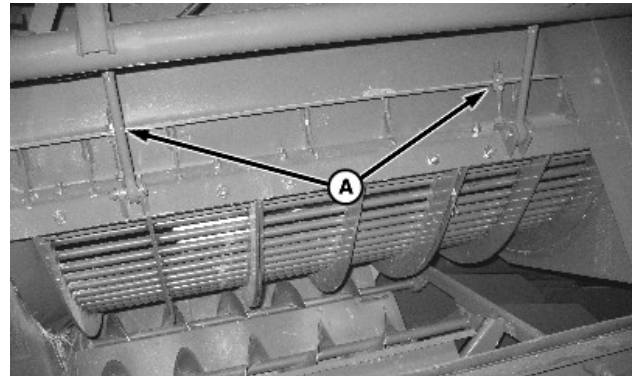

H100391—UN—23FEB11

A—Stop Bolts (2 used)


4. Back off stop bolts (A).

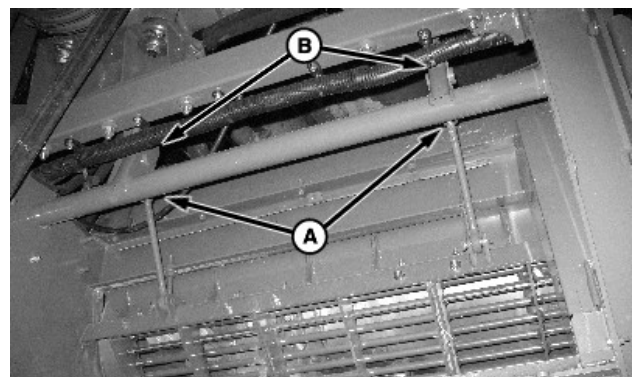

H100392—UN—23FEB11

A—Bottom Nut (2 used)
B—Top Nut (2 used)


5. Loosen lock nuts (A) and back off nuts (B) five turns each.

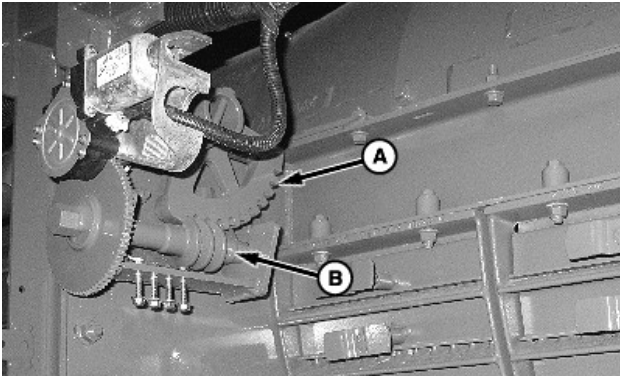

H100393—UN—23FEB11

A—Sector Gear
B—Worm Gear


6. Adjust concave to closed position using switch in cab until the worm gear (B) and sector gear (A) are bottomed out in up position.

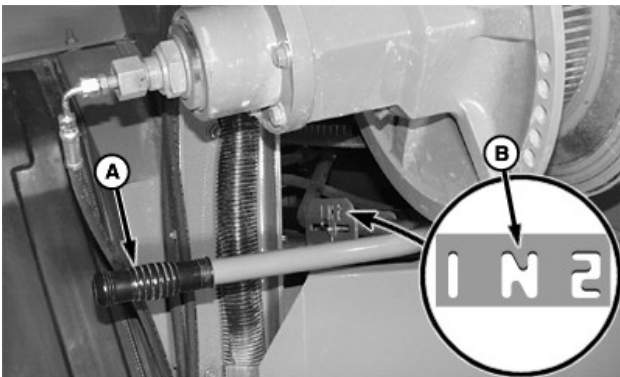

H96927—UN—17JUN10

A—Handle
B—Neutral Position

7. Move handle (A) to shift the rotor gear case in neutral position (B).

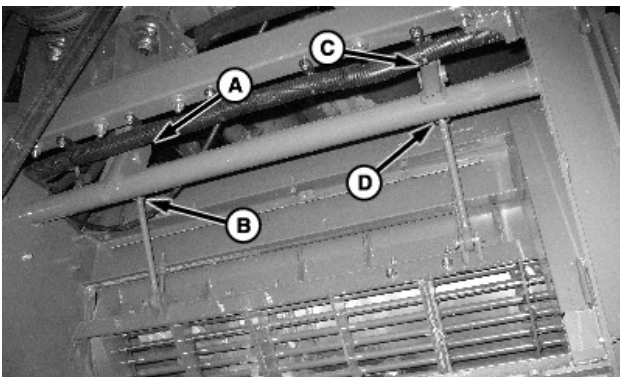


H100394—UN—23FEB11

A—Front Eyebolt Top Nut
B—Front Eyebolt Bottom Lock Nut
C—Rear Eyebolt Top Nut
D—Rear Eyebolt Bottom Lock Nut

8. Adjust front eyebolt top nut (A) slowly until elements "tick" concave while rotor is rotating counterclockwise. Back off three complete turns.
9. Adjust rear eyebolt top nut (C) slowly, until elements

"tick" concave while rotor is rotating counterclockwise. Back off three complete turns.

10. Adjust front eyebolt top nut (A) down slowly until elements "tick" concave. Back off slowly until "tick" stops. As soon as "tick" has stopped back off one complete turn and tighten top lock nut.
11. Adjust rear eyebolt top nut (C) down slowly, until elements "tick" concave. Back off slowly until "tick" stops. As soon as "tick" has stopped back off one complete turn and tighten top lock nut.
12. Tighten bottom front concave adjustment nut. Hold front eyebolt top nut (A) with wrench and tighten front eyebolt bottom lock nut (B).
13. Tighten bottom rear concave adjustment nut. Hold rear eyebolt top nut (C) with wrench and tighten rear eyebolt bottom lock nut (D).

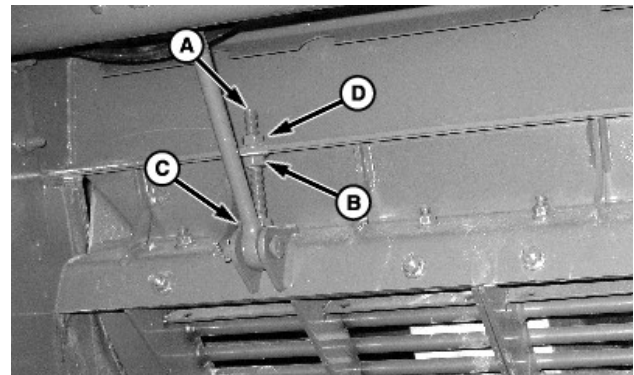


H100395—UN—23FEB11

Stop Bolts

A—Stop Bolt (2 used)
B—Lock Nut
C—Head of Bolt
D—Lock Nut

14. Adjust front and rear concave stop bolt (A) by tightening bottom nut (B) until head of bolt (C) is snug against concave. Tighten top nut (D) while holding bottom nut (B) with wrench.

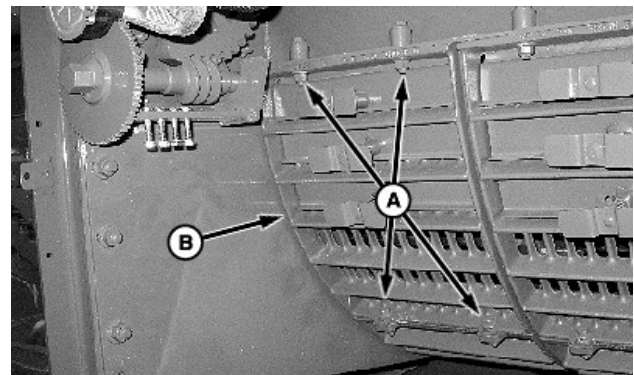

H100377—UN—22FEB11


A—Cap Screw (4 used)
B—Separator Grate

15. Install separator grate (B) and retain with cap screws (A).

16. Shift rotor drive gear case to previous position.
17. Install previously removed separator inspection covers and shields.
18. Select **Threshing Clearance Calibration (STS Electric)** from inside the cab and follow information shown on the display. See Calibrations Application Help or Operator's Station Help for further information.

OUC6075,0004601-19-28MAR17

Concave Leveling (Active Concave Isolation)

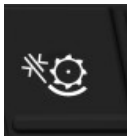

H117012—UN—28MAR16


Threshing Clearance Adjust

NOTE: If installed, remove round bar concave covers before beginning concave leveling.

1. Start engine and press threshing clearance adjust switch.
2. Set threshing clearance to 0.

NOTE: If taller dense pack threshing tines or rice threshing elements have replaced grain elements, set threshing clearance to 15.


3. Shut OFF engine, set park brake and turn key switch ON.

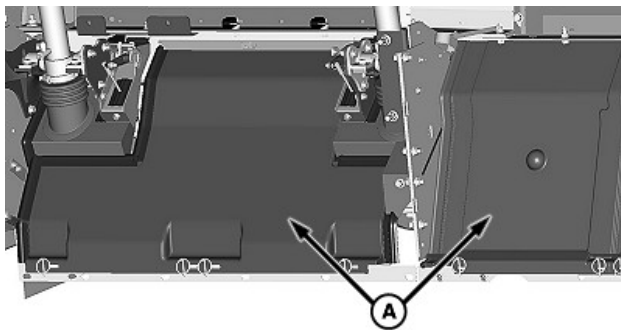

H113295—UN—23MAR15


A—Separator Inspection Covers

4. Remove separator inspection covers (A).

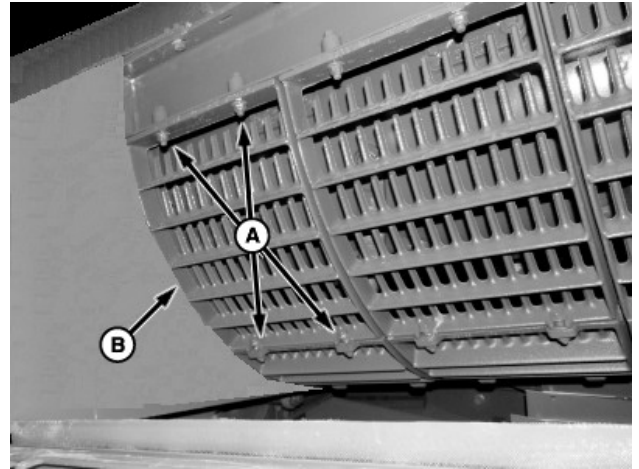

H109596—UN—17DEC13

Standard Cast Separator Grates

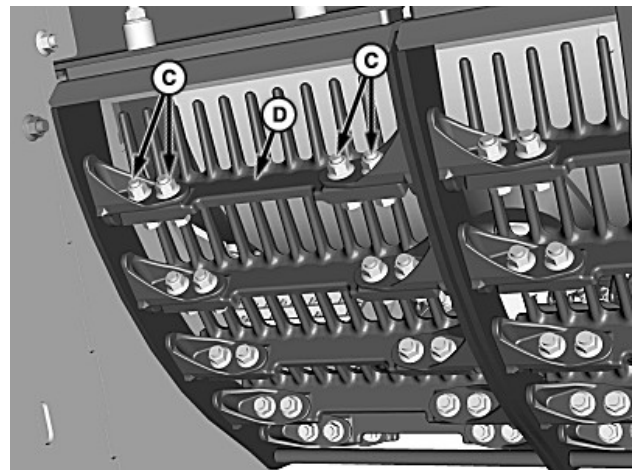

H109682—UN—22JAN14


Heavy-Duty Separator Grates

- A—Cap Screws (4 used)**
- B—Separator Grate**
- C—Cap Screws and Nuts**
- D—Separator Grate Fingers**

NOTE: Removing separator grate provides access for rotating rotor.

5. On machines equipped with the standard separator grates, remove cap screws (A) and separator grate (B).
6. On machines equipped with heavy-duty separator grate fingers, remove cap screws and nuts (C) and finger (D).


NOTE: It may be necessary to remove two or more separator grate fingers to allow access for rotating rotor.

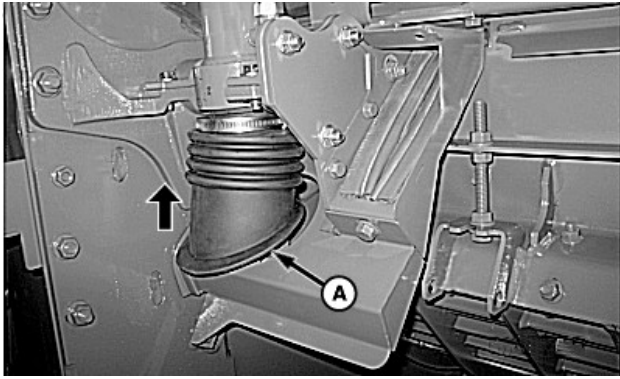

H109276—UN—16OCT13

A—Rubber Seal (2 used)

7. Remove base of the rubber seal (A) and lift upward on both cylinders.

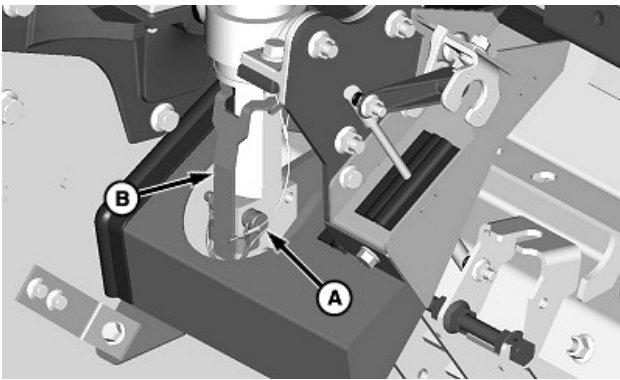


H113060—UN—24FEB15


A—Pin (2 used)
B—Cylinder Lock (2 used)

NOTE: Concave may need to be repositioned to remove cylinder lock.

8. Remove pin (A) and cylinder lock (B) on each cylinder.

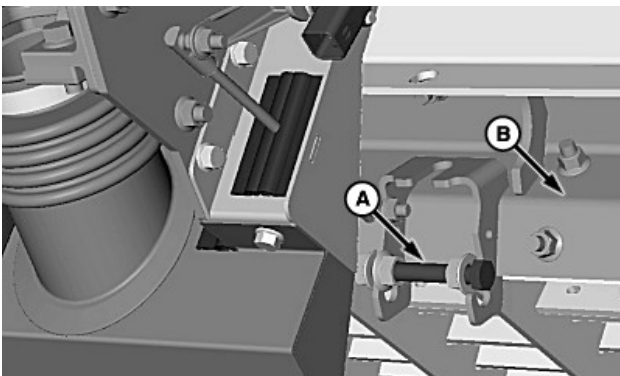

H109919—UN—27FEB14

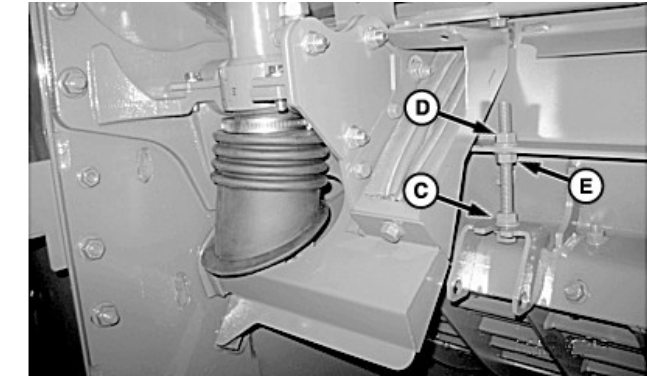


H109920—UN—27FEB14

A—Leveling Cap Screws (2 used)
B—"Z" Bar
C—Nut (2 used)
D—Nut (2 used)
E—Nut (2 used)

9. Remove concave leveling cap screws (A) from the bracket on "Z" bar (B) and install through the rail to hold concave and "Z" bar assembly.
10. Hand tighten nut (C) against "Z" bar bracket and slightly tighten nut (D) against the rail on both sides.

NOTE: Verify that there is adequate space between nut (E) and rail for zeroing adjustments. Do NOT fully tighten the nut against the rail.

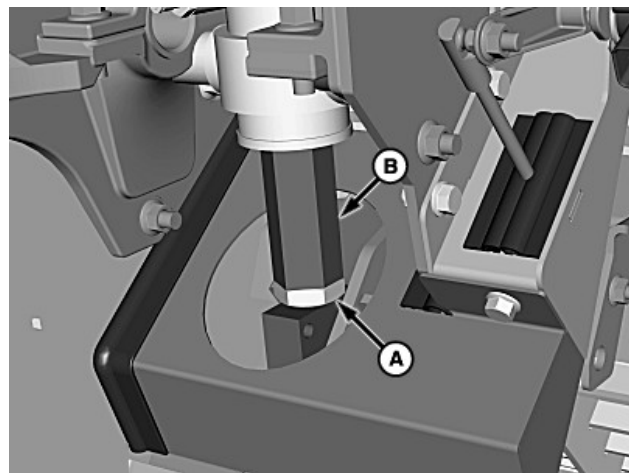


H109683—UN—22JAN14

A—Jam Nut (2 used)
B—Cylinder Stop (2 used)

11. Loosen jam nut (A) from the cylinder stop (B) and lower stop on both cylinder rods.
12. Select **Concave Leveling Calibration** from inside the cab and follow information shown on the display. See Calibrations Application Help or Operator's Station Help for further information.


NOTE: Key switch MUST be left ON while performing following steps outside of cab.

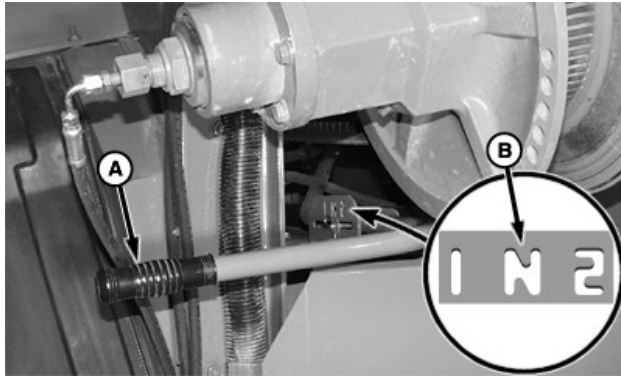

H96927—UN—17JUN10

A—Handle
B—Neutral Position


13. Move handle (A) to shift the rotor gear case in neutral position (B).
14. Spin rotor counterclockwise and tighten rear leveling cap screw, pulling concave upward until elements "tick". Once "ticking" occurs, back off leveling cap screw three complete turns.
15. Spin rotor counterclockwise and tighten front leveling cap screw, pulling concave upward until elements "tick". Once "ticking" occurs, back off leveling cap screw three complete turns.
16. Continue spinning rotor counterclockwise and tighten rear leveling cap screw, pulling concave upward until elements "tick". Once "ticking" occurs, back off leveling cap screw one and a half turns.
17. Continue spinning rotor counterclockwise and tighten front leveling cap screw, pulling concave upward until elements "tick". Once "ticking" occurs, back off leveling cap screw one and a half turns.

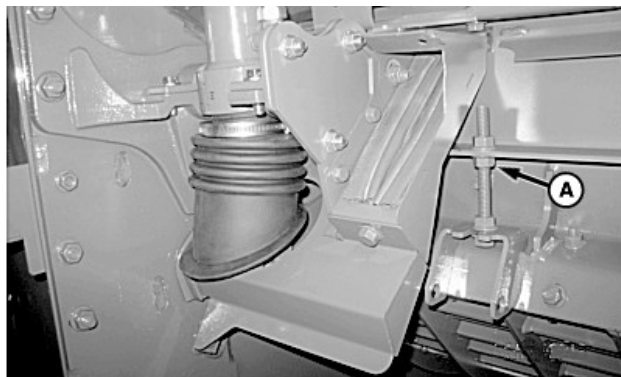

H109594—UN—16DEC13

A—Nut 2 (used)

18. Tighten nut (A) against the rail to help lock concaves in position.

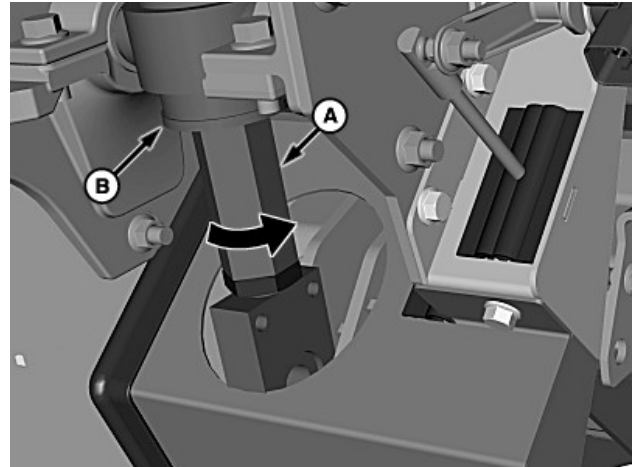


H109602—UN—19DEC13

A—Cylinder Stops (2 used)
B—Cylinder Barrels (2 used)

19. During the calibration, it is critical to adjust the cylinder stops correctly.

NOTE: Do not over tighten cylinder stops.

20. Turn cylinder stops (A) in direction of arrow until hand tight against cylinder barrels (B).

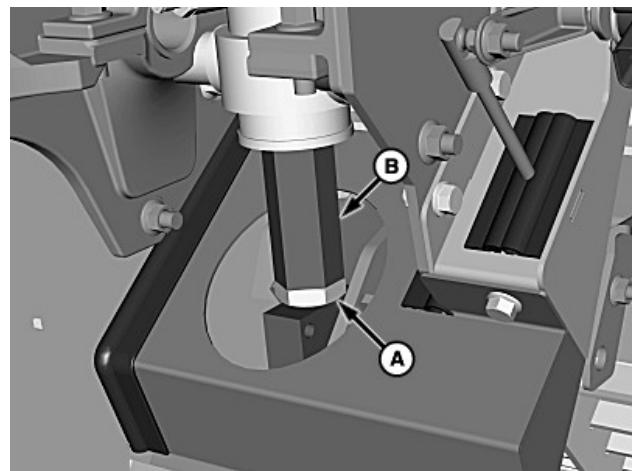

H109683—UN—22JAN14


A—Jam Nut (2 used)
B—Cylinder Stop (2 used)

NOTE: Prior to tightening jam nuts (A), index cylinder stops (B) to install cylinder locks in correct position on hex flats of cylinder stops.

21. Tighten jam nut (A) against the cylinder stop (B) on each cylinder.

NOTE: Leveling cap screws MUST remain fastened to "Z" bar bracket and rail.

22. Continue with **Concave Leveling Calibration** until complete.

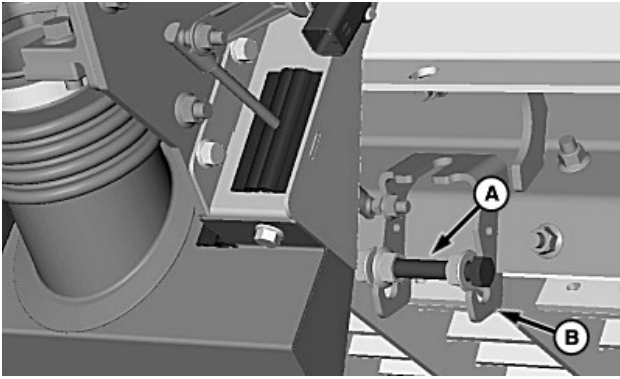


H109603—UN—19DEC13

A—Leveling Cap Screw (2 used)
B—Storage Bracket (2 used)

23. If calibration was accepted, exit **Concave Leveling Calibration**, turn key switch OFF, and remove leveling cap screws (A).
24. Store leveling cap screws in storage brackets (B).
25. Start engine. Calibrate **Threshing Clearance Calibration (Hydraulic)** from inside the cab and follow information shown on the display. See Calibrations Application Help or Operator's Station Help for further information.


IMPORTANT: A warning message may appear on display stating to abort the calibration because the system has detected a concave zero position that does not match concave leveling position. If this occurs, abort Concave Leveling Calibration, repeat the Concave Leveling procedure, and calibrate Threshing Clearance Calibration (Hydraulic) again.

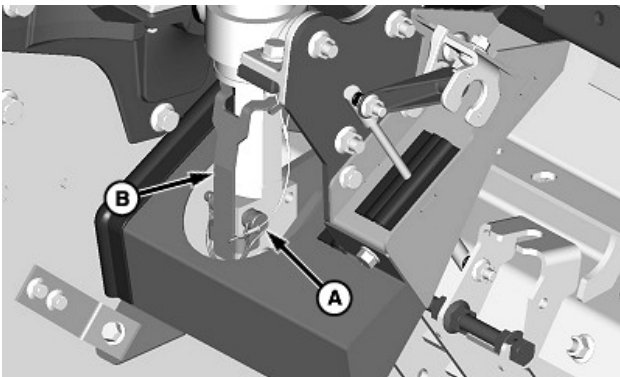

H113060—UN—24FEB15

A—Pin (2 used)
B—Cylinder Lock (2 used)


26. Open concave to 35 and install previously removed cylinder locks (B) and pins (A) on each cylinder.

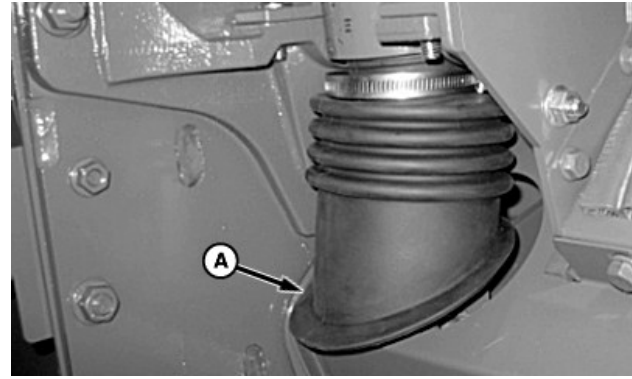

H109821—UN—10FEB14


A—Rubber Seal (2 used)

27. Install bottom of the rubber seal (A) on both cylinders.

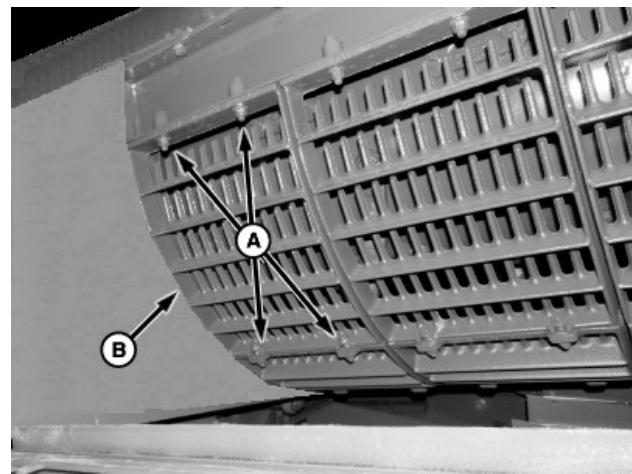

H109596—UN—17DEC13

Standard Cast Separator Grate

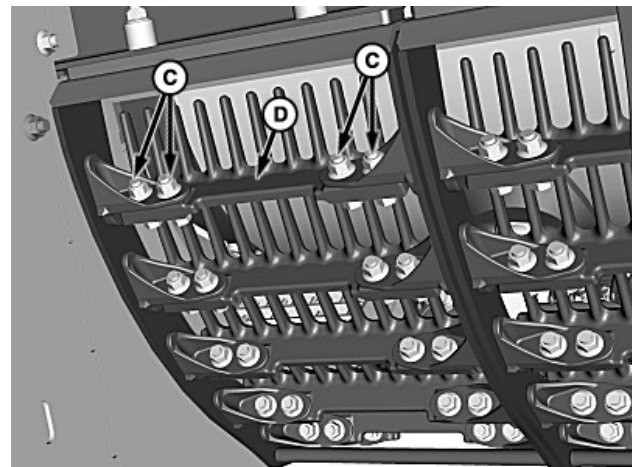

H109682—UN—22JAN14

Heavy-Duty Separator Grate

A—Cap Screws (4 used)
B—Separator Grate
C—Cap Screws and Nuts
D—Separator Grate Fingers

28. On machines equipped with the standard separator

grates, install separator grate (B) using cap screws (A).

29. On machines equipped with heavy-duty separator grates, install separator grate fingers (D) using cap screws and nuts (C). Tighten to specification.

Specification

Heavy-Duty Separator Grate	
Cap Screws and Lock	
Nuts—Torque.	73 N·m (54 lb·ft)

30. Shift rotor drive gear case to previous position.


31. Install previously removed separator inspection covers and shields.

OUC6075,0004600-19-28MAR17


See Residue Management Application Help or Operator's Station Help for further information.

OUC6075,0004392-19-31JAN17

Threshing Elements and Tines (TriStream Rotor)—Remove and Install

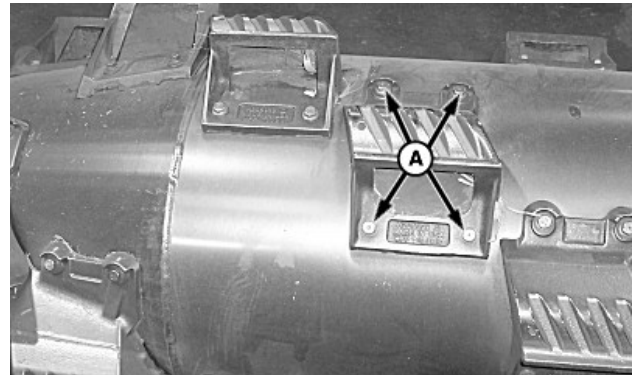


H82539—UN—07MAR05

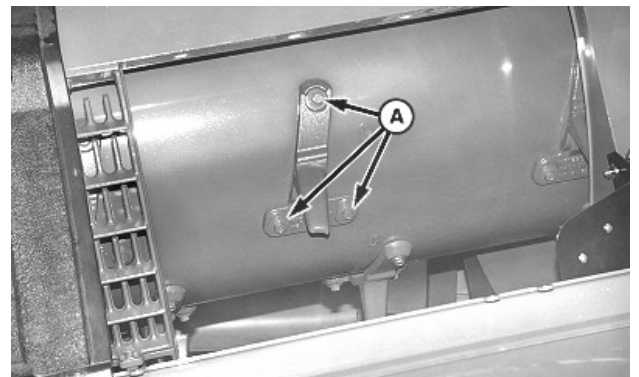

H73898—UN—30OCT02

A—Cap Screw

Separator Top Cover Vanes (If Equipped)

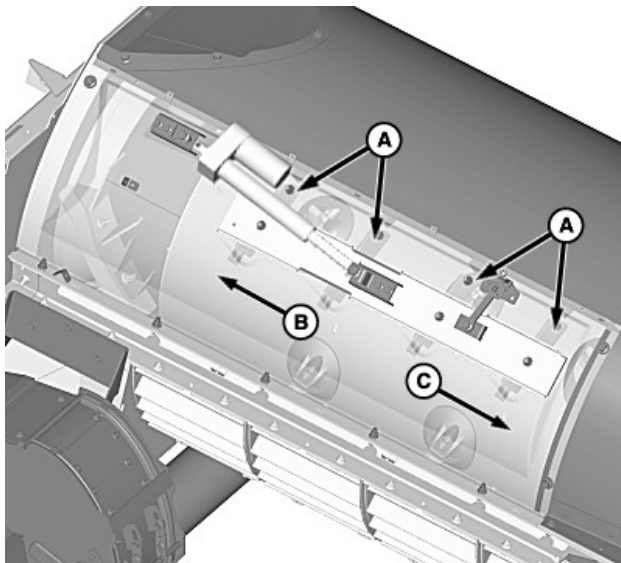

H97060—UN—22JUN10

- A—Separator Top Cover Vanes
B—Advanced Position
C—Standard Position

Separator top cover vanes (A) are located on the right-hand side of the machine behind the clean grain loading auger.

Separator top cover vanes can be adjusted to two different positions through software.

NOTE: Running separator vanes in the advanced position may increase grain losses in certain crop and conditions. Crop dwell time in separator is reduced to improve straw quality.

- (B)—Advanced Position
- (C)—Standard Position

IMPORTANT: Rotor is a balanced assembly.

Elements and tines must be replaced in sets of three to maintain balance. Replacement kits are available through service parts and include new cap screws with pre-applied Threadlock and Sealer. Tines or elements that become loose may result in machine damage.


If tines or elements need to be removed for other than replacement, mark location on tine (s)/element(s) and rotor, prior to removal. Install in same location as removed to maintain balance. Always use new cap screws.

Make sure to clean out tailings and front cross auger if tine replacement is due to broken or damaged tines. Failure to do so before initial start-up may allow broken tines to recirculate and cause tine damage to reoccur.

1. Shut OFF engine, set park brake and remove key.
2. Remove separator grates or concave sections as needed to access rotor.

NOTE: Depending on machine option, refer to the following in this section:

- *Concave Sections (Standard Concave Adjust)—Remove and Install*
 - *Concave Sections (Active Concave Isolation)—Remove and Install*
3. Inspect wear on threshing elements and separator tines using KXE10110 Clearance Gauge.
 4. Remove cap screws (A) and threshing element or tine.

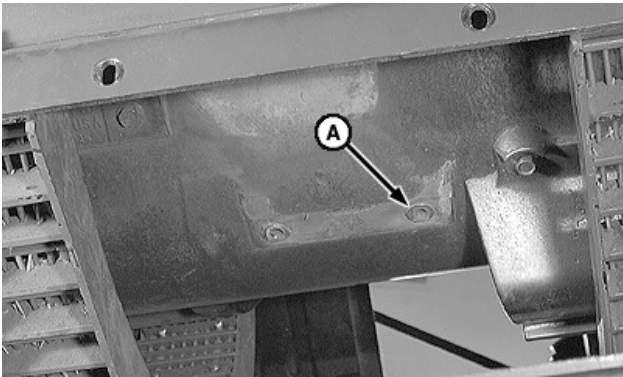

H54006—UN—18FEB99

A—Threaded Insert


5. Inspect RIVNUT® threaded inserts (A). Replace if damaged.
6. If one element or tine needs replaced, replace all in the group. Example: If element 2 needs to be replaced, replace elements 1 and 3 also.
7. Use Threshing Elements and Separator Tine Location diagram for identifying elements and tines.
8. Tighten cap screws to specification.

Specification

Threshing Element and	
Separator Tine Cap	
Screws—Torque.	90 N·m (66 lb.-ft.)

OUO6075,0001804-19-13MAY14

Threshing Element and Separator Tine Location (TriStream™ Rotor Standard Configuration) (S760 and S770) (Australia and New Zealand Only)

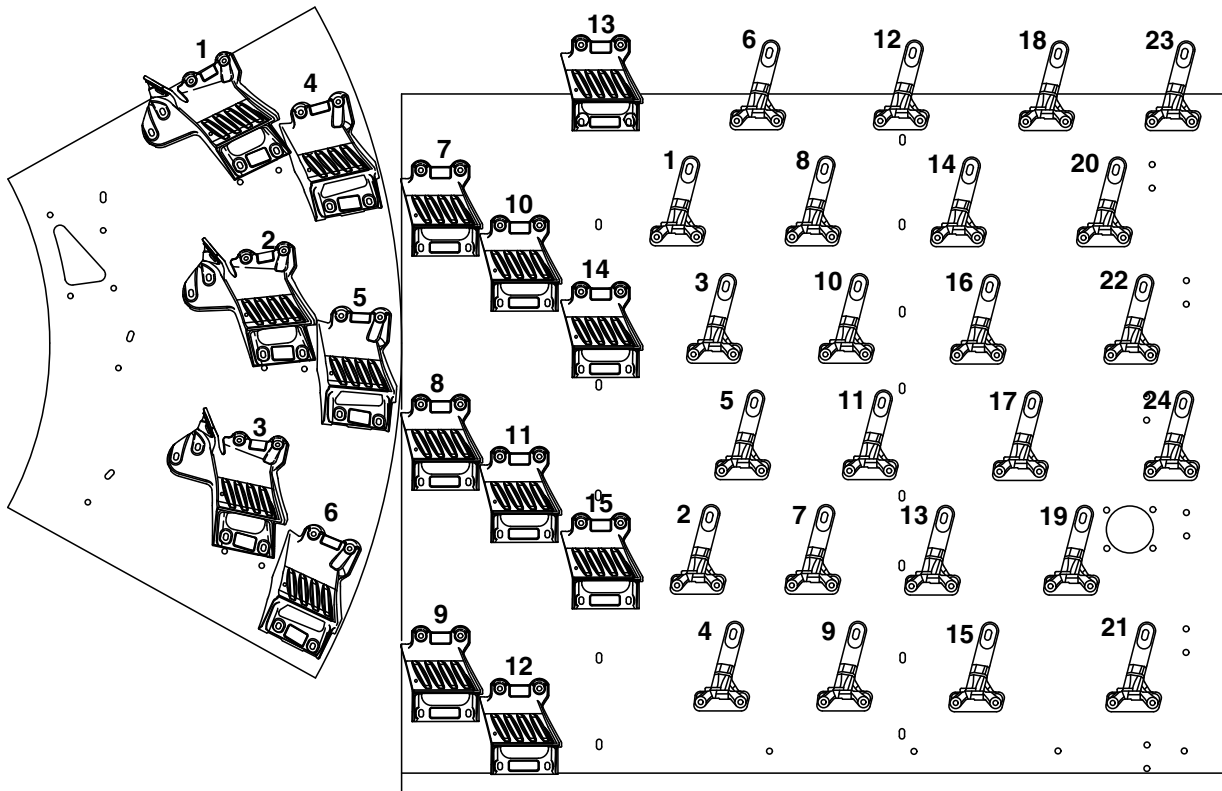


H82365—UN—03FEB05

Threshing Element Groups (Standard Rotor Configuration)	Separator Tine Groups (Standard Rotor Configuration)
Group 1 Elements = 1, 2, 3	Group 1 Tines = 1, 4, 5
Group 2 Elements = 4, 5, 6	Group 2 Tines = 2, 3, 6
Group 3 Elements = 7, 8, 9	Group 3 Tines = 8, 9, 11
Group 4 Elements = 10, 11, 12	Group 4 Tines = 7, 10, 12
Group 5 Elements = 13, 14, 15	Group 5 Tines = 13, 16, 18
	Group 6 Tines = 14, 15, 17
	Group 7 Tines = 19, 22, 23
	Group 8 Tines = 20, 21, 24

OJ06075,00044A2-19-11NOV16

Threshing Element and Separator Tine Location (TriStream Rotor Tough Grain Configuration)

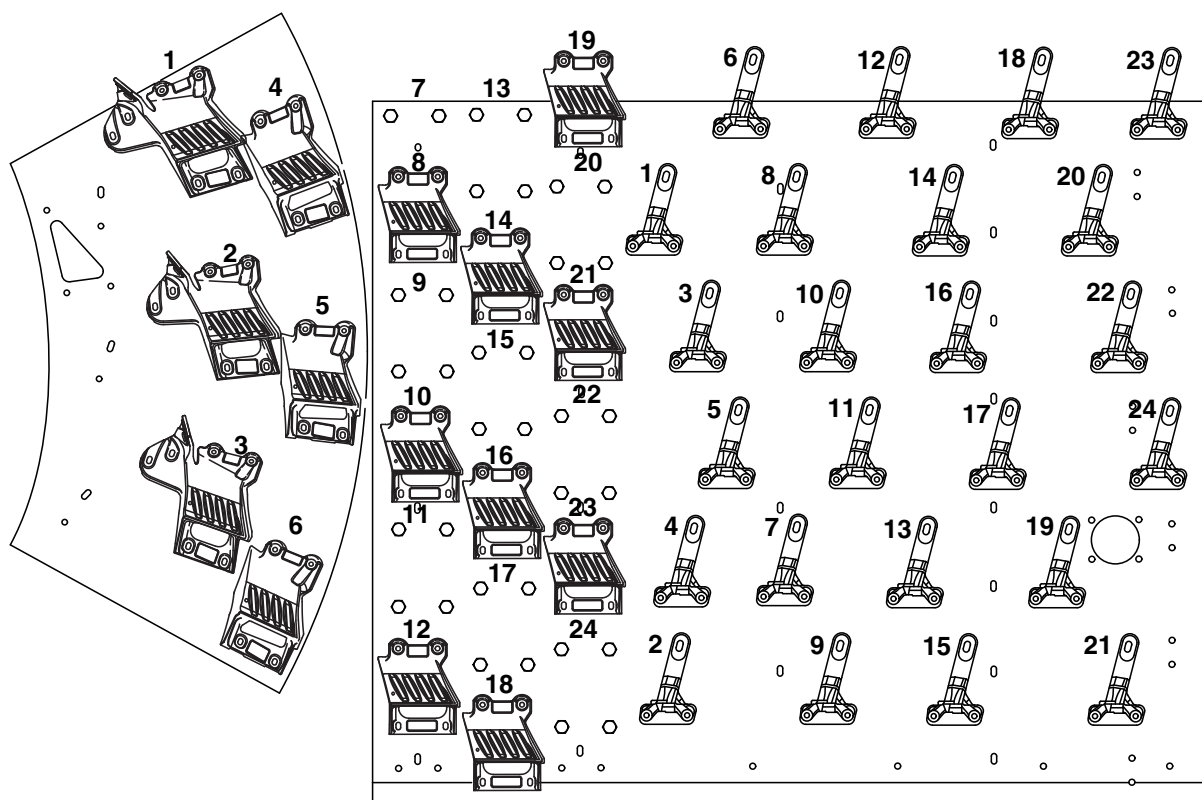


H82830—UN—23MAR05

NOTE: Additional elements can be added to the tough grain configuration in locations with an "O" stamped into the rotor if the dense pack configuration is desired.

Threshing Element Groups (Tough Grain Rotor Configuration)	Separator Tine Groups (Tough Grain Rotor Configuration)
Group 1 Elements = 1, 2, 3	Group 1 Tines = 1, 4, 5
Group 2 Elements = 4, 5, 6	Group 2 Tines = 2, 3, 6
Group 3 Elements = 8, 10, 12	Group 3 Tines = 8, 9, 11
Group 4 Elements = 14, 16, 18	Group 4 Tines = 7, 10, 12
Group 5 Elements = 19, 21, 23	Group 5 Tines = 13, 16, 18
	Group 6 Tines = 14, 15, 17
	Group 7 Tines = 19, 22, 23
	Group 8 Tines = 20, 21, 24

OUC6075,0000B81-19-22MAR11

Threshing Element and Separator Tine Location (TriStream Rotor Dense Pack Configuration)

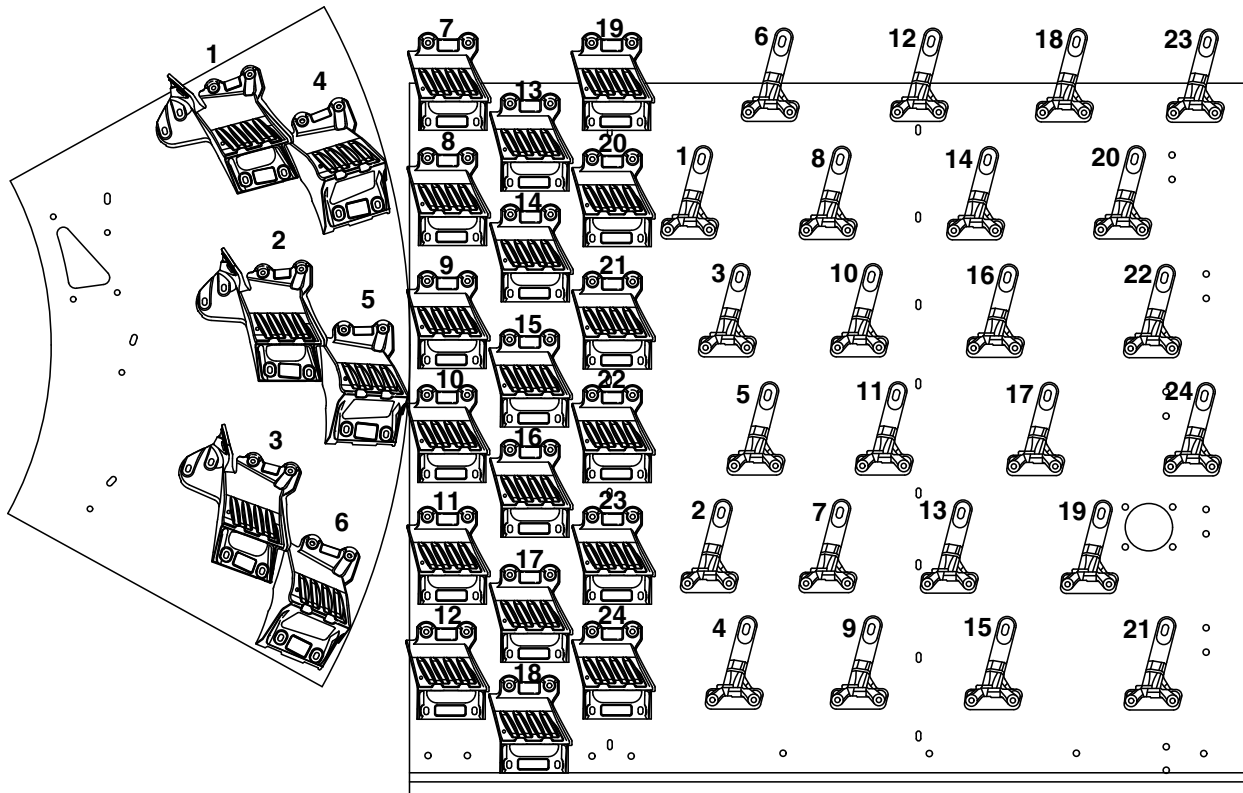

H82364—UN—03FEB05


NOTE: Dense pack configuration is field conversion only.

Threshing Element Groups (Dense Pack Rotor Configuration)	Separator Tine Groups (Dense Pack Rotor Configuration)
Group 1 Elements = 1, 2, 3	Group 1 Tines = 1, 4, 5
Group 2 Elements = 4, 5, 6	Group 2 Tines = 2, 3, 6
Group 3 Elements = 7, 9, 11	Group 3 Tines = 8, 9, 11
Group 4 Elements = 8, 10, 12	Group 4 Tines = 7, 10, 12
Group 5 Elements = 13, 15, 17	Group 5 Tines = 13, 16, 18
Group 6 Elements = 14, 16, 18	Group 6 Tines = 14, 15, 17
Group 7 Elements = 19, 21, 23	Group 7 Tines = 19, 22, 23
Group 8 Elements = 20, 22, 24	Group 8 Tines = 20, 21, 24

OUC6075,0000B80-19-22MAR11

Threshing Elements and Tines (Variable Stream Rotor)—Remove and Install

Threshing Elements

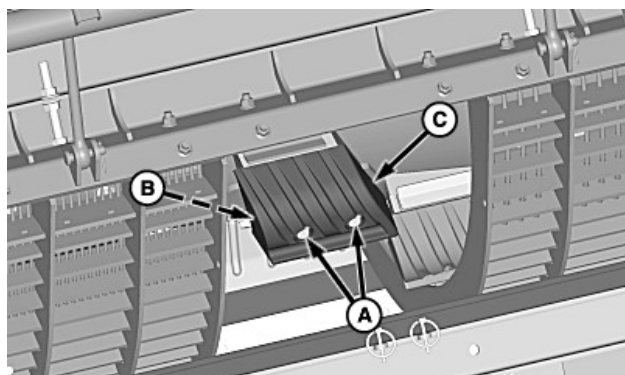

H94732—UN—22SEP09

A—Cap Screws
B—Threaded Strap
C—Threshing Element


IMPORTANT: Rotor is a balanced assembly. Elements must be replaced in groups of three to maintain balance. When installing more than one kit, do not mix and match elements. Replacement kits are available through service parts and include cap screws with pre-applied Thread Lock and Sealer. Always use supplied cap screws. Elements that become loose may result in machine damage.

1. Shut OFF engine, set park brake and remove key.
2. Remove concave sections as needed to access threshing elements.


NOTE: Depending on machine option, refer to the following in this section:

- Concave Sections (Standard Concave Adjust)—Remove and Install
- Concave Sections (Active Concave Isolation)—Remove and Install

3. Inspect wear on threshing elements using KXE10110 Clearance Gauge.
4. Remove and discard cap screws (A) and retain threaded strap (B) from threshing element (C) as needed.

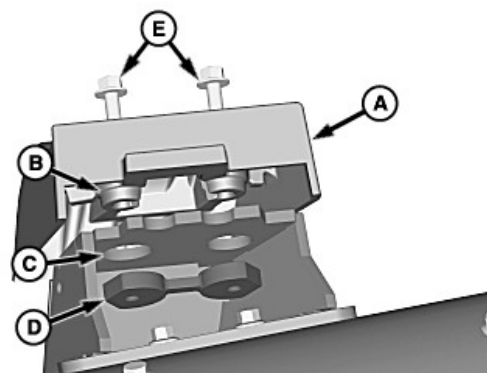


H94747—UN—24SEP09

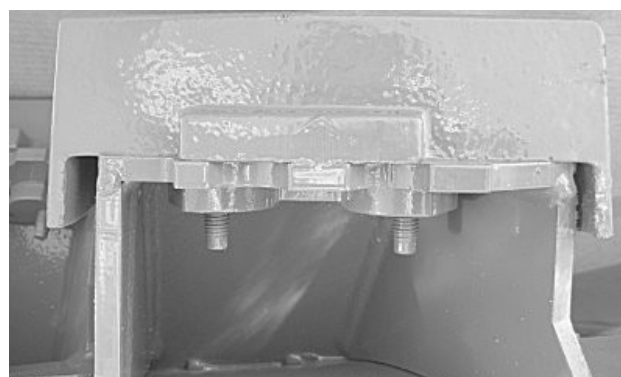

H97768—UN—25AUG10

Fully Seated

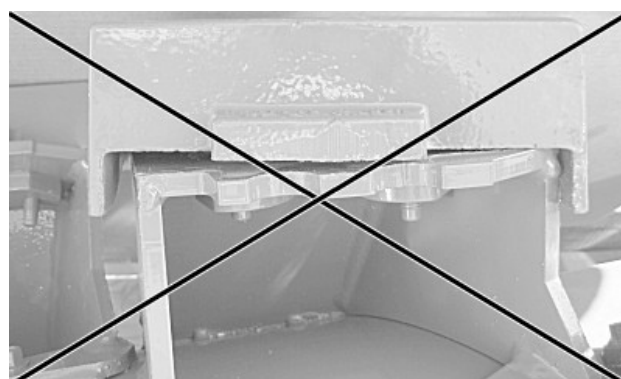

H97769—UN—26AUG10

Not Fully Seated

A—Threshing Element
B—Element Boss
C—Rotor Base Hole
D—Threaded Strap
E—Cap Screws

5. Install replacement threshing element (A) onto rotor base. (Use Threshing Element location diagram to identify threshing elements).

Threshing Element Groups
Group 1 Elements = 1, 2, 3
Group 2 Elements = 4, 5, 6
Group 3 Elements = 7, 8, 9
Group 4 Elements = 10, 11, 12
Group 5 Elements = 13, 14, 15

6. Verify element boss (B) is fully seated through rotor base holes (C).
7. Install previously removed threaded strap (D) and supplied cap screws (E).
8. Tighten cap screws to specification.

Specification

Threshing Elements Cap
Screws—Torque. $87 \pm 9 \text{ N}\cdot\text{m}$
($64 \pm 7 \text{ lb}\cdot\text{ft.}$)

IMPORTANT: Verify that elements are seated properly after tightening.


Rice threshing elements are taller than corn/ grain threshing elements. Concave level must be adjusted.

9. Adjust concave levelness. (See Concave Leveling in this section).
10. Adjust concave levelness.

NOTE: Depending on machine option, refer to the following in this section:

- Concave Leveling (Standard Concave Adjust)
- Concave Leveling (Active Concave Isolation)

Separator Tines

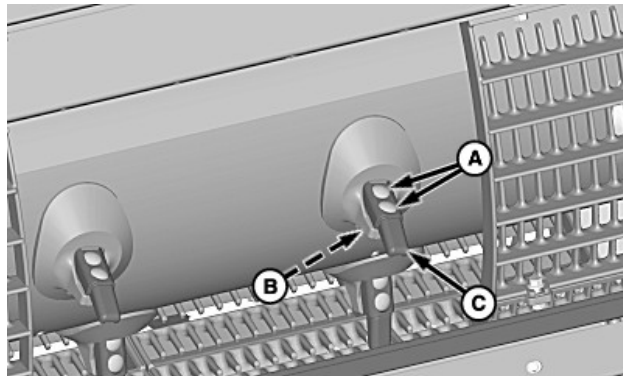

H94733—UN—22SEP09

A—Round Head Cap Screws
B—Lock Nuts (2 used)
C—Separator Tines

IMPORTANT: Rotor is a balanced assembly. Tines must be replaced in pairs to maintain balance. When installing more than one kit, do not mix and match tines. Always use supplied cap screws. Tines that become loose may result in machine damage.

1. Remove separator grates as needed to access separator tines.


NOTE: Depending on machine option, refer to the following in this section:

- Concave Sections (Standard Concave Adjust)—Remove and Install
- Concave Sections (Active Concave Isolation)—Remove and Install

2. Inspect wear on separator tines using KXE10110 Clearance Gauge.

NOTE: For ease of removal, shift rotor gear case to neutral position.

3. Remove and discard round head cap screws (A), nuts (B) and separator tines (C) as needed.

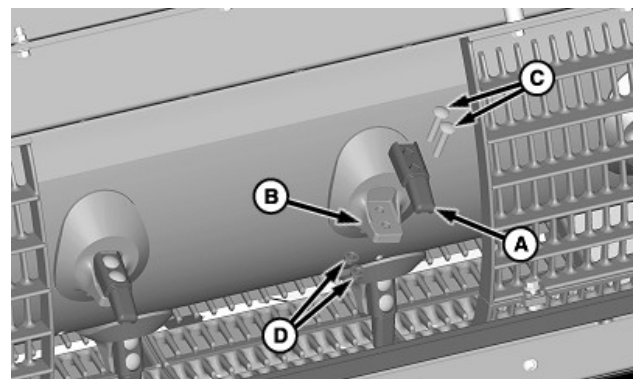

H94751—UN—25SEP09

A—Separator Time
B—Rotor Base
C—Round Head Cap Screws
D—Nuts

IMPORTANT: Separator tines MUST be replaced in pairs to maintain proper balance.

Separator Time Pairs	
1-2	11-12
3-4	13-14
5-6	15-16
7-8	17-18
9-10	19-20


4. Install supplied separator tine (A) onto rotor base (B). (Use Separator Tine location diagram to identify separator tines).
5. Install supplied round head cap screws (C) and retain with nuts (D).
6. Tighten nuts to specification.

Specification

Tine Cap Screws—Torque. $75 \pm 11 \text{ N}\cdot\text{m}$
($55 \pm 8 \text{ lb}\cdot\text{ft.}$)


OUC6075,0001805-19-13MAY14

Threshing Element and Separator Tine Location (Variable Stream Rotor Standard Configuration)

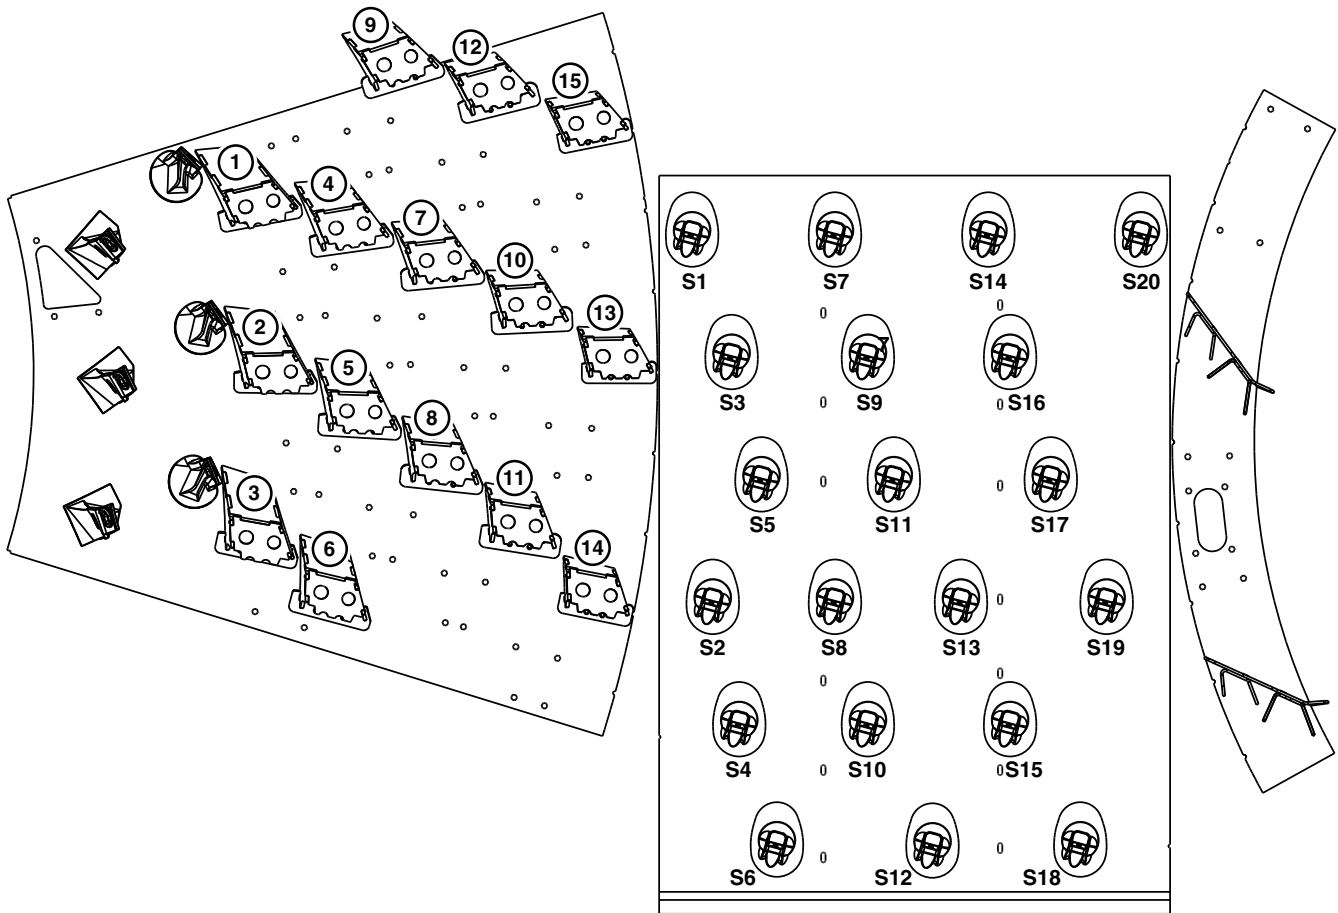


H94731—UN—09MAR10
OUO6075,0000B83-19-07APR11

Threshing Element and Separator Tine Location (Variable Stream Rotor Dense Pack Configuration)

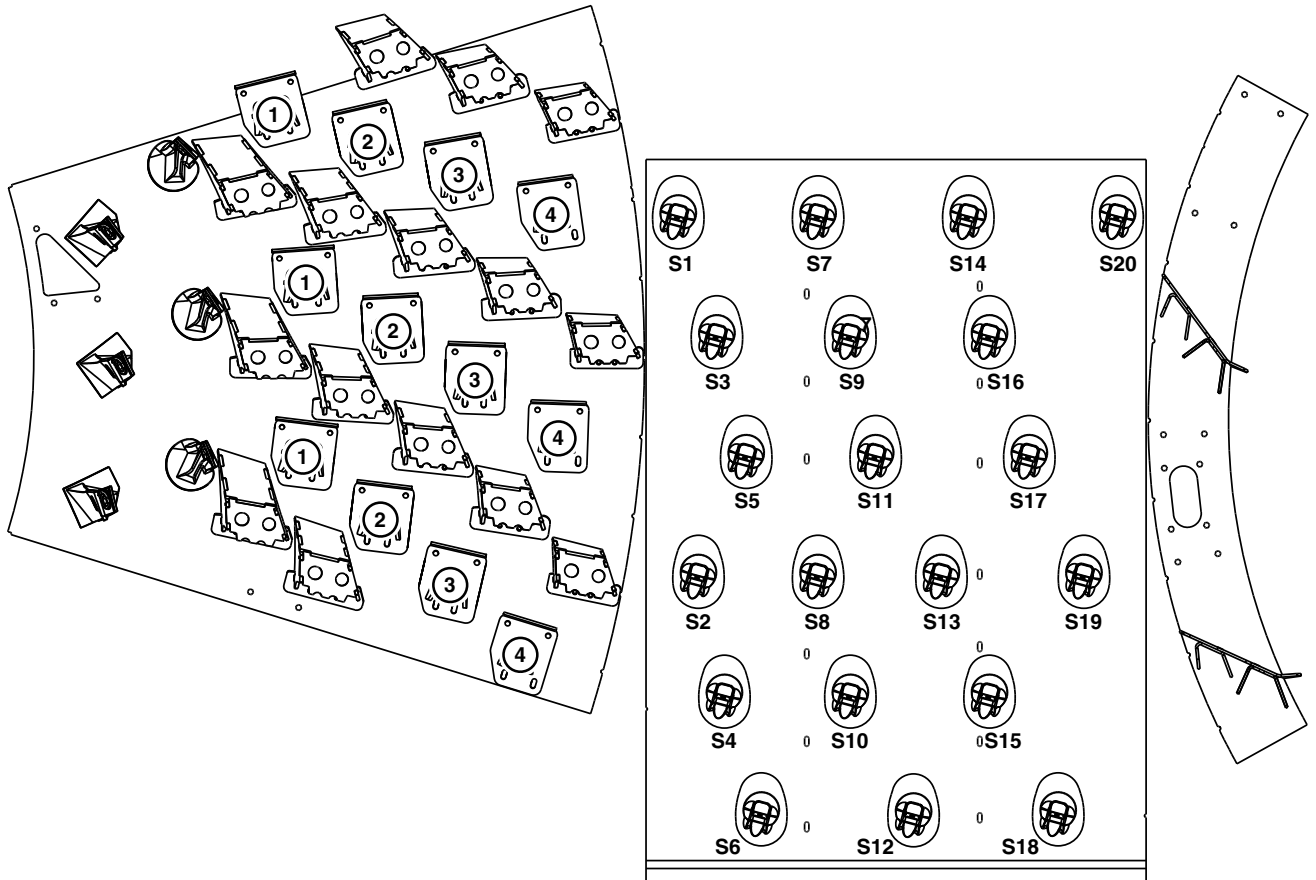


H94748—UN—08MAR10
OUO6075,0000B84-19-07APR11

Posi-Torq™ Separator—Dual-Range

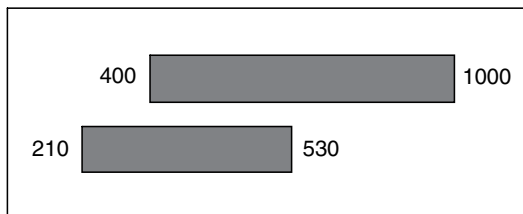

H96715—UN—02JUN10

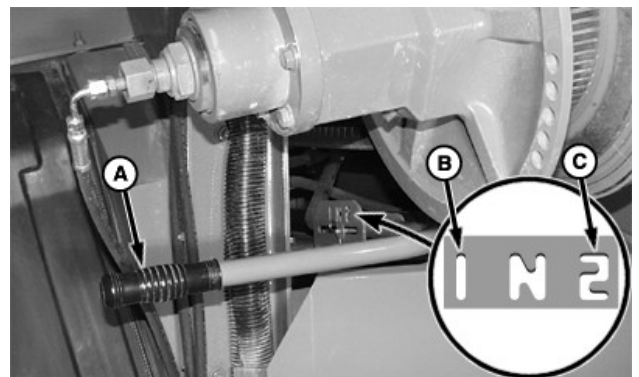

H96936—UN—17JUN10

- A—Handle
- B—Low-Speed Position (1)
- C—High-Speed Position (2)

CAUTION: Shut OFF engine, set park brake and remove key before shifting Posi-Torq™ separator.

Posi-Torq is a trademark of Deere & Company

NOTE: Use slowest possible speed with large seed crops to prevent damage.

To shift from low to high speed or high to low speed, move handle (A) to detented neutral position.

For low-speed position (B), push handle towards the separator side sheet.

For high-speed position (C), pull handle away from the separator side sheet.

To fully engage drive, it may be necessary to rotate variable sheaves a small amount while moving shift handle.


NOTE: Verify that gears are fully engaged.

When changing separator speeds, make sure to cycle power ON and OFF to recognize new speed range.


Shift to low speed if operating below 530 rpm for extended periods.

OOU6075,00045D0-19-20MAR17

Separator Drive Sheave Gap—Adjusting

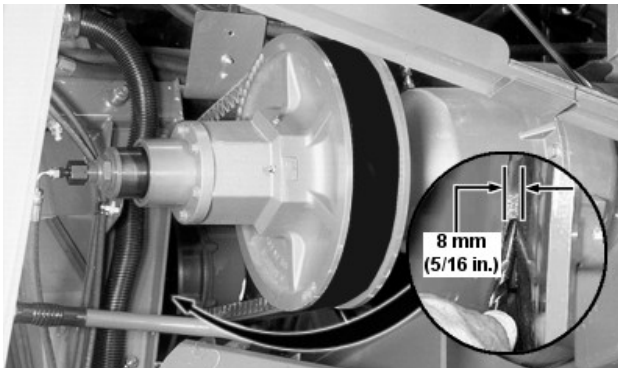

H75081—UN—07FEB03

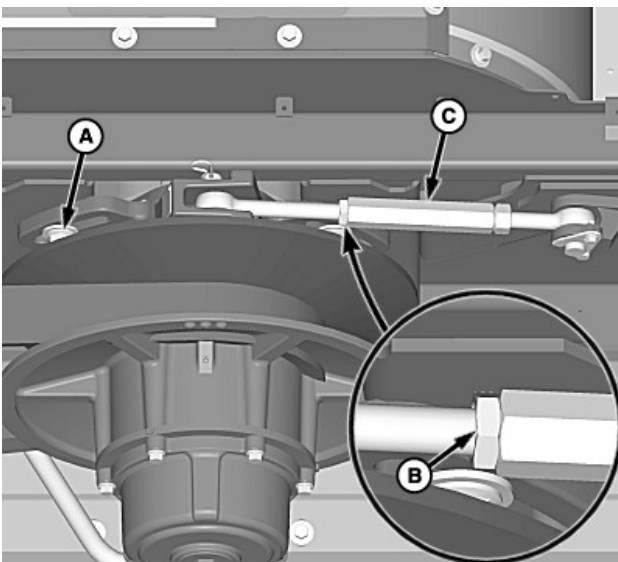

H101227—UN—26APR11

A—Cap Screw (4 used)
B—Nut
C—Turnbuckle

IMPORTANT: If gap is more than 10 mm (3/8 in), it limits sheave travel. Any of these failures can occur when drive is operated at the high end of the variable drive range:

- Belt stretch or failure
- Bearing or shaft failure

If gap is less than 6 mm (1/4 in), it limits torque sensing. Any of these failures can occur when drive is operated at the low end of the variable range:

- Belt failure
- Belt slippage

If unable to obtain high speed while operating at high end of variable drive range or belt slippage occurs while operating at the low end of the variable drive, check for incorrect gap. For best performance, set gap to specification.

Specification

Sheaves—Gap. 8 mm ± 2 mm
(5/16 in ± 1/16 in)

With separator engaged, set separator drive to slowest speed allowing driven sheaves to close.

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen cap screws (A) around gear case.

NOTE: Shift gear case to neutral to properly seat belt between sheaves. Manually rotate sheaves, while adjusting turnbuckle.

Loosen nut (B) and adjust the turnbuckle (C) to obtain the specified gap between the driven sheaves.

Specification


Sheaves—Gap. 8 mm
(5/16 in)

Tighten nut (B) and cap screws (A).


Shift gear case to desired speed range.

OOU6075,00046EA-19-11APR17

Separator Variable Drive Belt—Replacing

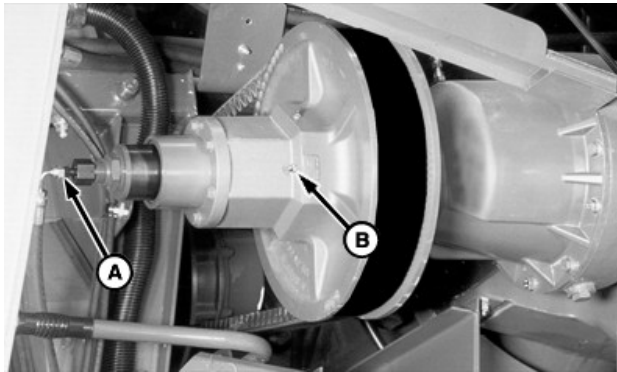

H101228—UN—26APR11

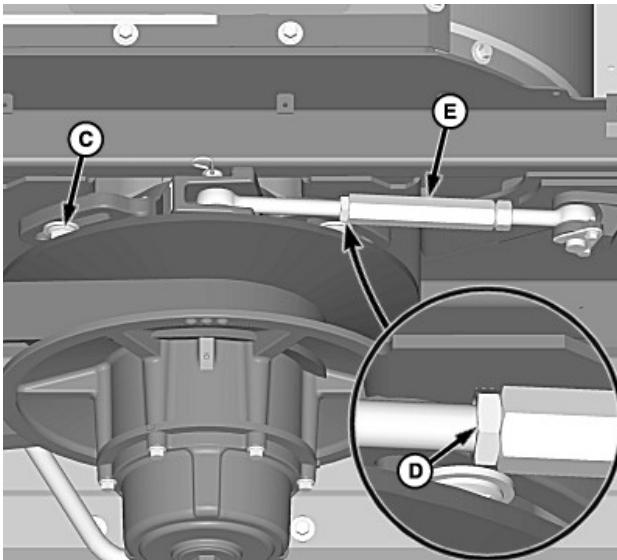

H101229—UN—26APR11

- A—Hose
- B—Plug
- C—Cap Screw (4 used)
- D—Nut
- E—Turnbuckle

With separator engaged, set separator drive to slowest speed allowing driven sheaves to close.

CAUTION: Shut OFF engine, set park brake and remove key.

Shift gear case to neutral position.

Disconnect hose (A) at the rotary hydraulic coupling using two wrenches.

Clean and remove the plug (B) to relieve vacuum in grease cavity.

Pry driver sheaves open.

NOTE: Remove shielding as needed to gain access to the separator variable drive belt.

Loosen cap screws (C) around gear case.

Loosen nut (D) and adjust the turnbuckle (E) to move the gear case and sheave assembly to the left.

Remove and replace belt. Rotate pulleys by hand to seat the belt.

Rotate pulleys and adjust the turnbuckle to obtain the specified gap between the driven sheaves.

Specification

Sheaves—Gap. 8 mm
(5/16 in)

Tighten nut (D) and cap screws (C).

NOTE: Install shielding previously removed to gain access to the separator variable drive belt.

Install plug (B) and hydraulic hose (A) on the driver sheave.


Shift gear case to desired speed range.

Start engine and engage separator. Cycle variable drive through speed range several times. Disengage separator drive.

NOTE: Check sheave gap again after several hours and adjust as required.

OUC6075,00046EB-19-11APR17

Auger Bed Dividers

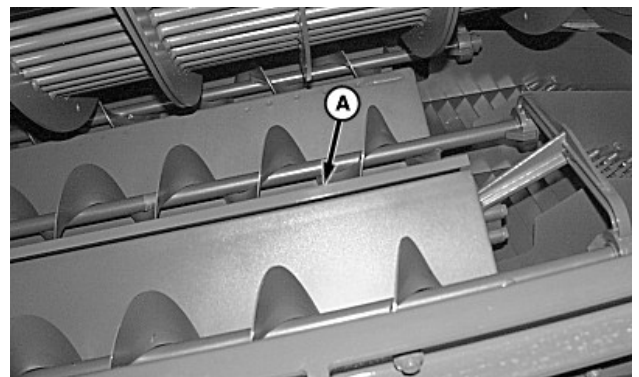


H83545—UN—20MAY05

A—Auger Bed Dividers

To prevent high seed losses or to prevent material building up on one side while harvesting on hillsides, move auger bed dividers (A) in an upwards direction.


OUC6075,0000755-19-20MAR07

Discharge Beater Belt—Adjusting

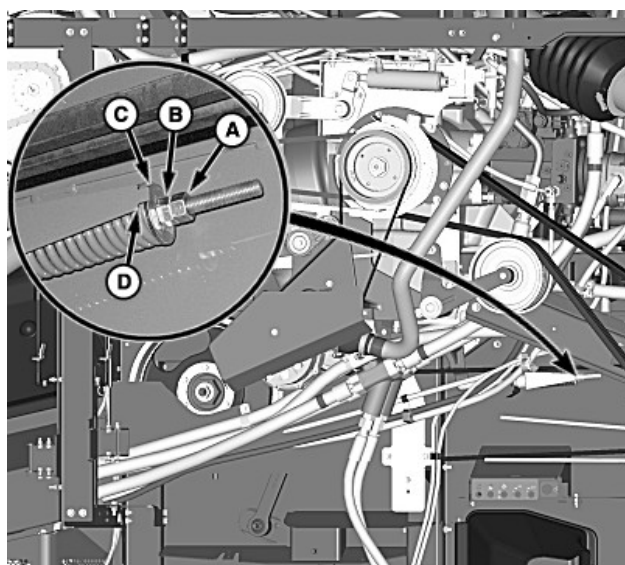

H108263—UN—18JUN13

Style A

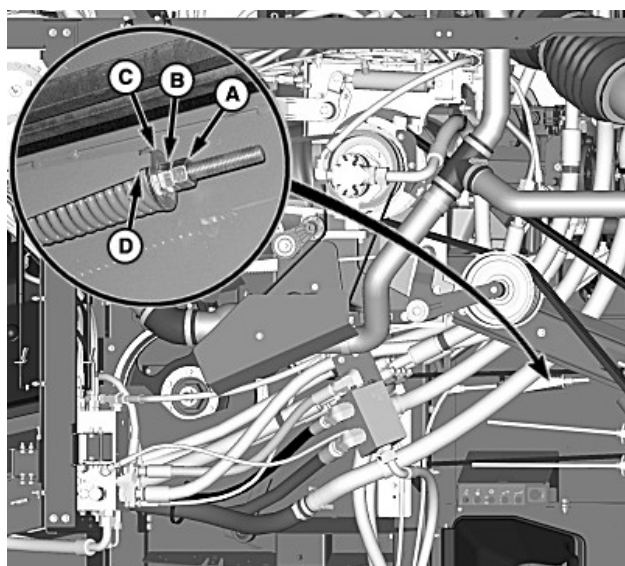

H108264—UN—18JUN13

Style B


A—Nut
B—Nut
C—Washer
D—Gauge

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nut (A) and tighten the nut (B) until the washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.


OUO6075,000438F-19-10OCT16

Discharge Beater Belt—Replacing

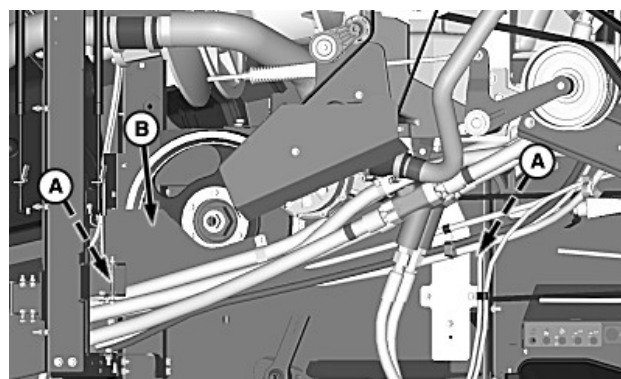

H108265—UN—18JUN13

Style A

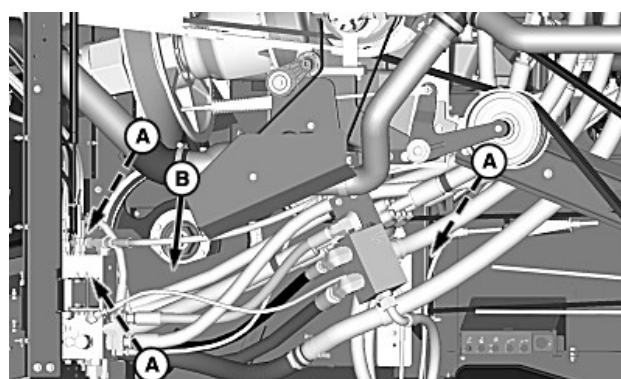


H108266—UN—18JUN13

Style B

A—Cap Screws
B—Shield


CAUTION: Shut OFF engine, set park brake and remove key.

Remove cap screws (A) and shield (B) from left-hand rear of machine.

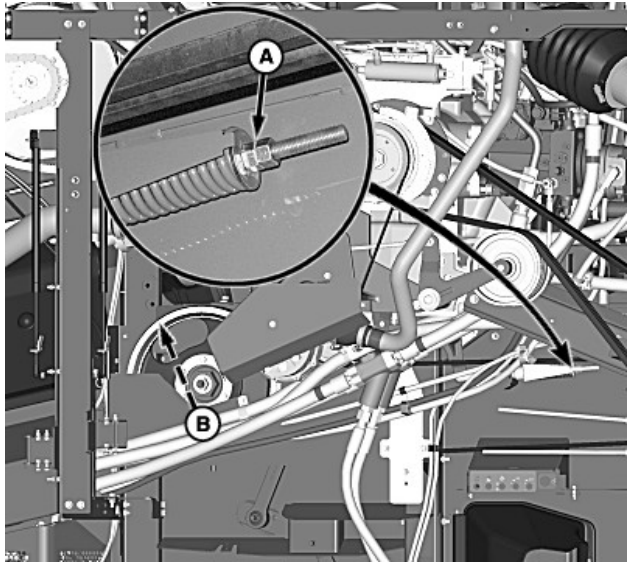

H108267—UN—18JUN13

Style A

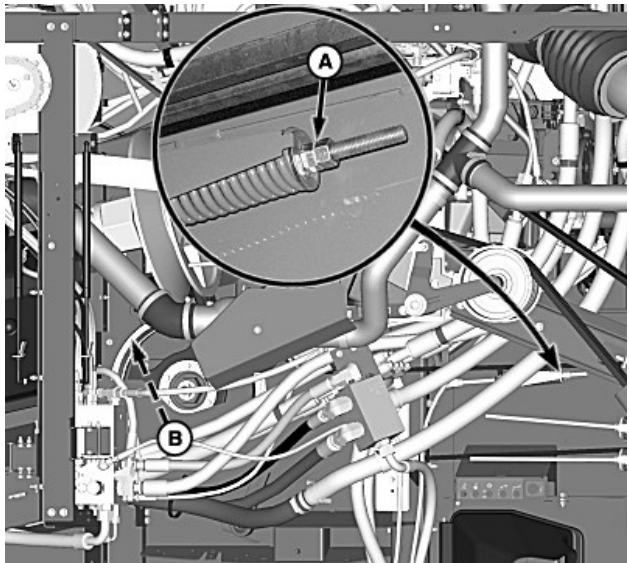


H108268—UN—18JUN13

Style B

A—Nuts
B—Discharge Beater Belt

Loosen nuts (A) and remove belt (B) from sheave.


Spreader Equipped Machines

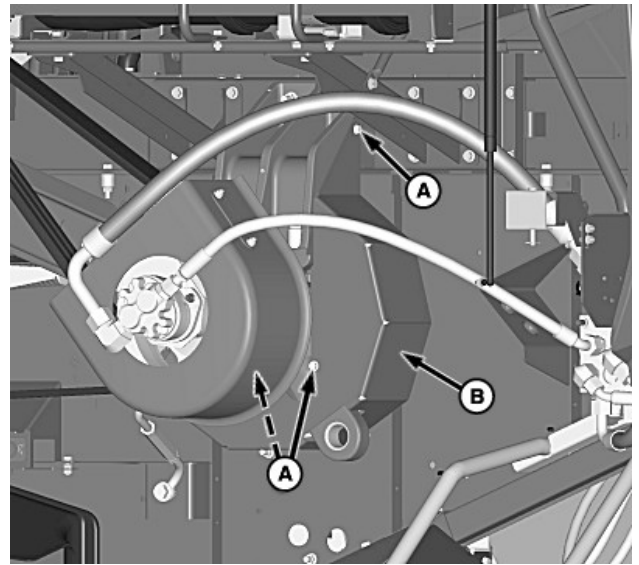

H99547—UN—05JAN11

A—Cap Screws
B—Shield

Remove cap screws (A) and shield (B).

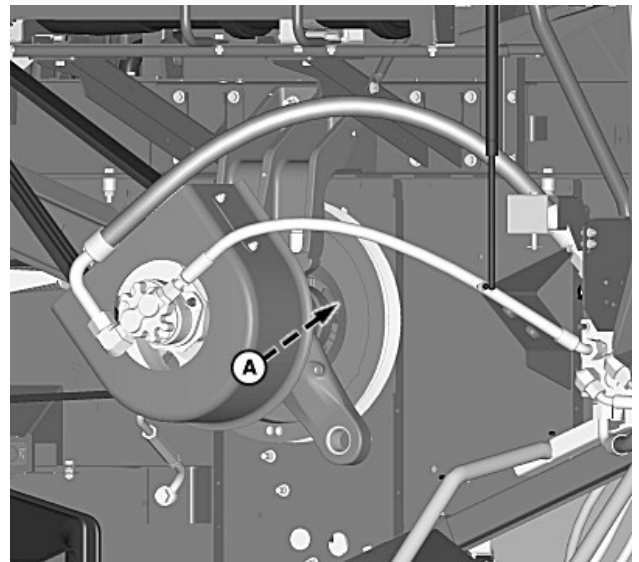

H100562—UN—03MAR11


A—Discharge Beater Belt

Remove and discard belt (A) from jackshaft.

Install replacement discharge beater belt onto jackshaft.


Install previously removed shield and cap screws.

Chopper Equipped Machines

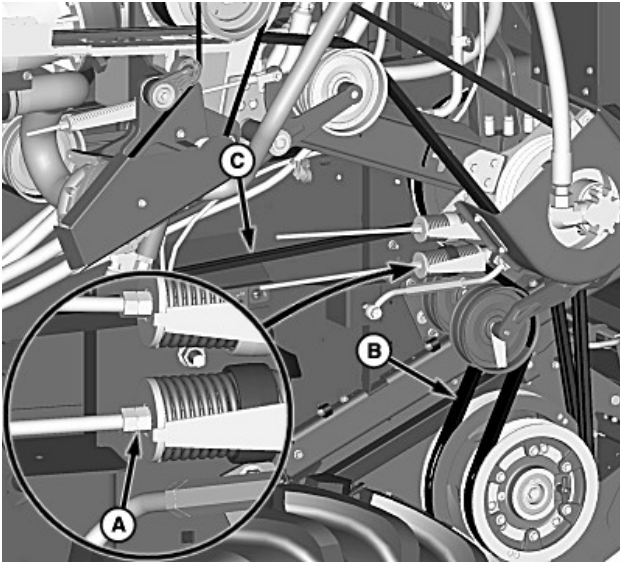

H108269—UN—18JUN13

Style A

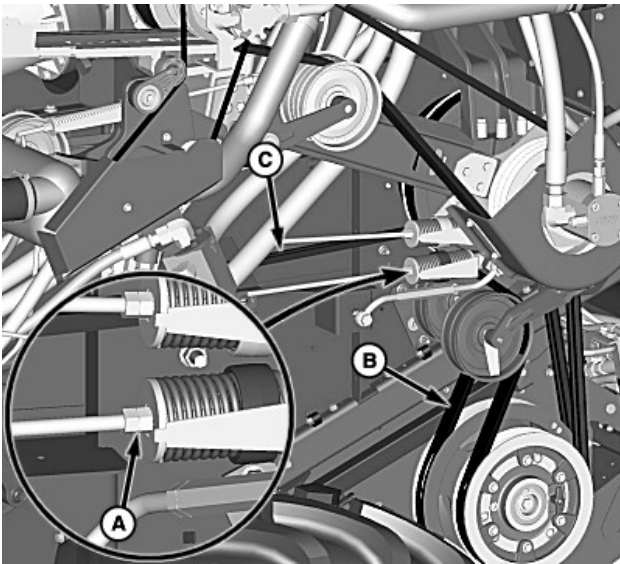

H108270—UN—18JUN13


Style B

- A—Nuts
- B—Inner Chopper Drive Belt
- C—Discharge Beater Belt

Raise chopper assembly fully with switch on the left-hand side sheet and remove chopper shields.


NOTE: Mark location of tensioner nuts before loosening to aid in reassembly.

Loosen nuts (A) and remove inner belt (B) from sheave. Remove and discard belt (C) from chopper jackshaft.

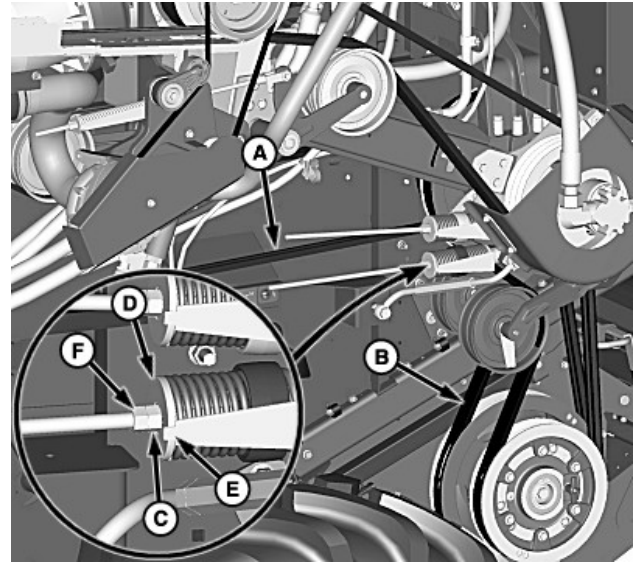

H108271—UN—18JUN13

Style A

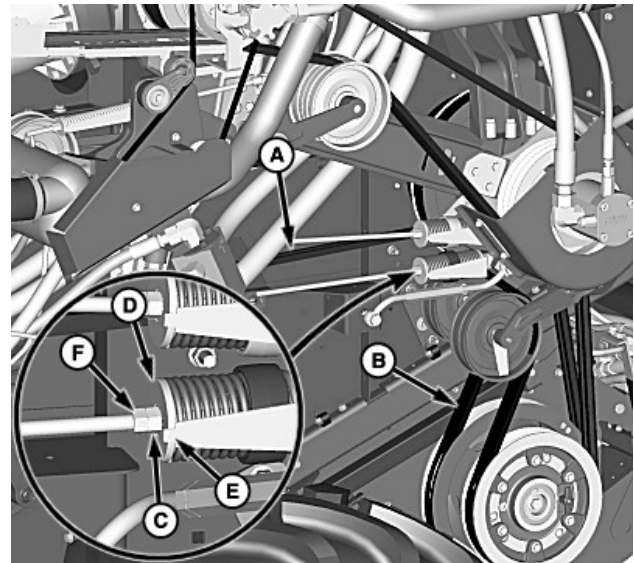

H108272—UN—18JUN13

Style B

- A—Discharge Beater Belt
- B—Inner Chopper Drive Belt
- C—Nut
- D—Washer
- E—Gauge
- F—Lock Nut


Install replacement discharge beater belt (A) onto chopper jackshaft.

Install inner belt (B) and verify that belt aligns with sheaves.

Lower chopper assembly fully with switch on the left-hand side sheet.


Tighten nut (C) until washer (D) is positioned between end of gauge (E) and bottom of step. Tighten lock nut (F).

Install previously removed chopper shields.

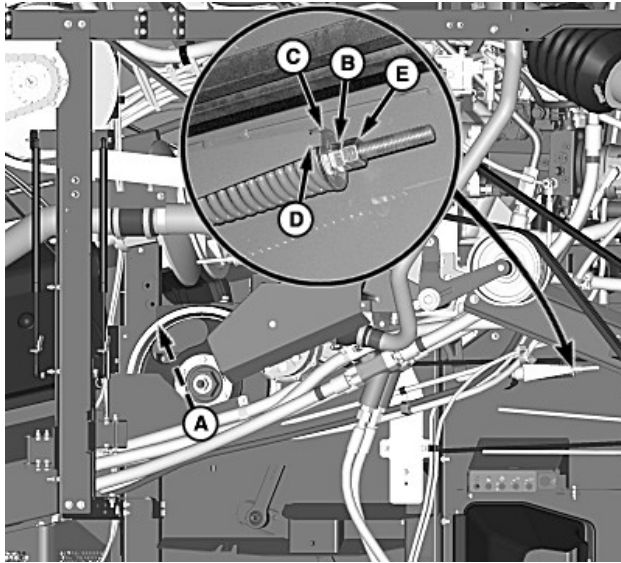

H108273—UN—18JUN13

Style A

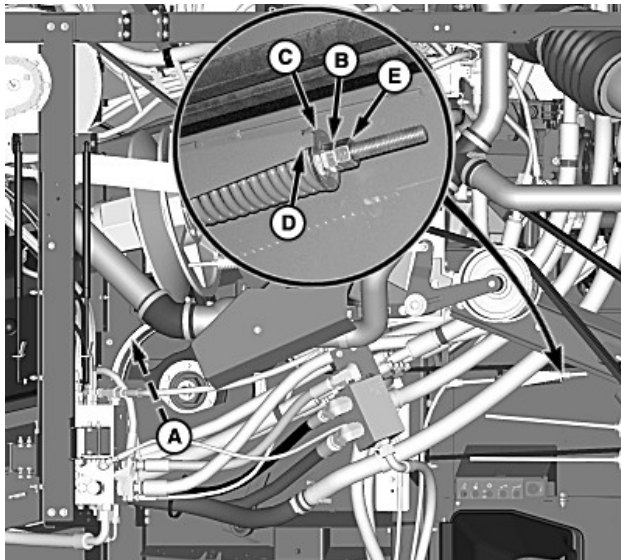


H108274—UN—18JUN13

Style B

- A—Discharge Beater Belt
- B—Nut
- C—Washer
- D—Gauge
- E—Lock Nut


Install discharge beater belt (A) onto sheave.

Tighten nut (B) until the washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut (E).

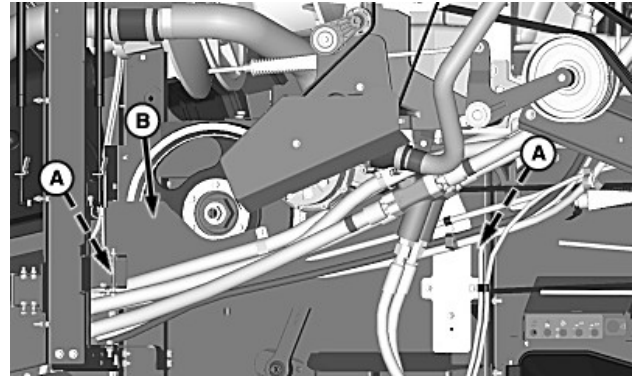

H108265—UN—18JUN13

Style A

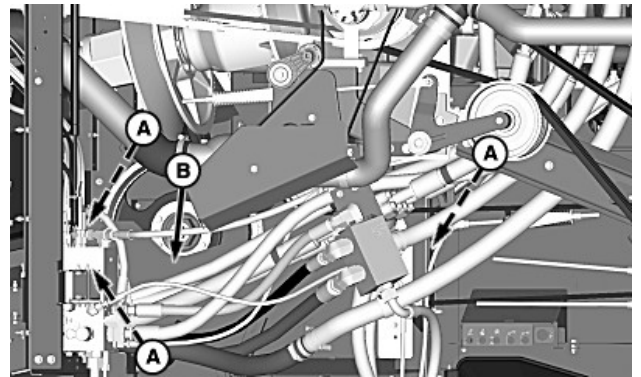

H108266—UN—18JUN13


Style B

- A—Cap Screws
- B—Shield


Install shield (B) and retain with cap screws (A).

OOU6075,000438E-19-10OCT16

Discharge Beater Wear Strips—Replacing (5 and 10 Wing Style)

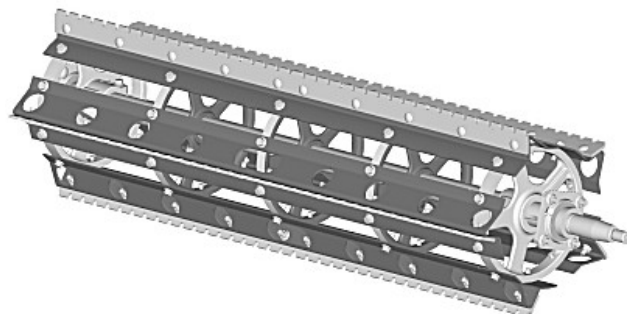

H109628—UN—14JAN14

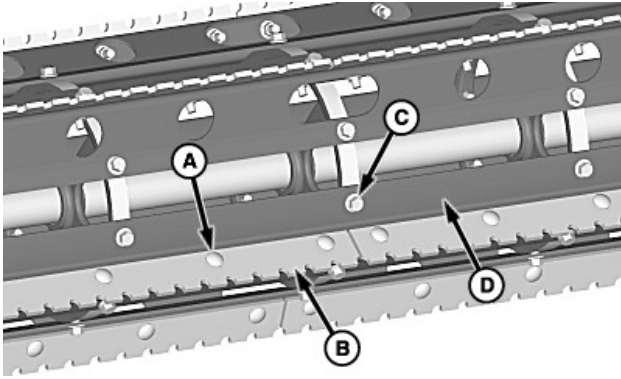

- A—Round Head Cap Screws
B—Discharge Beater Wear Strip
C—Cap Screws
D—Discharge Beater Wings

H109629—UN—14JAN14

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Wear strips can be reversed for additional wear.

Discharge beater wings and wear strips can be replaced without removing the discharge beater.

NOTE: If discharge beater is removed from machine, or has been serviced, tighten clamp bolts before securing wings.

Remove round head cap screws (A) and replace discharge beater wear strips (B) as required. Tighten round head cap screws to specification.

Specification

Discharge Beater Wear Strip
Round Head Cap
Screws—Torque. 70 N·m
(52 lb·ft)


Remove cap screws (C) and replace discharge beater wings (D) as required. Tighten cap screws to specification.

Specification


Discharge Beater Wing Cap
Screws—Torque. 70 N·m
(52 lb·ft)

OJ06075,000464E-19-13MAR17

Standard Discharge Beater Wear Strips—Replacing (8 Wing Style)

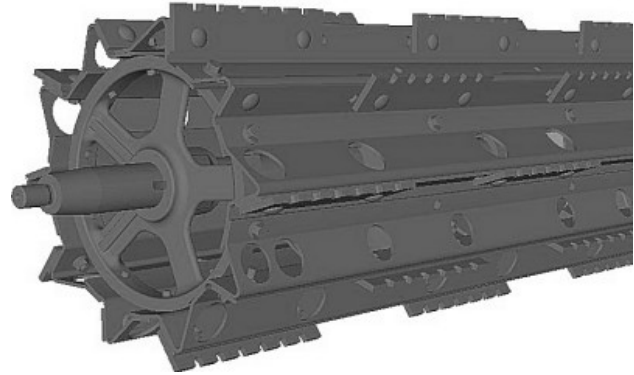

H85626—UN—27MAR06

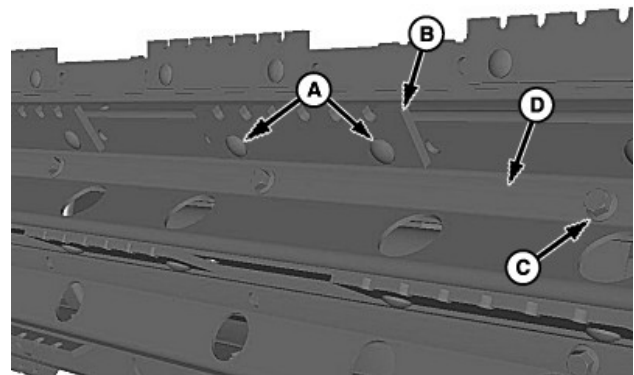

H85627—UN—27MAR06

Discharge Beater Wings and Wear Strips (Standard)

- A—Round Head Bolts
B—Discharge Beater Wear Strip
C—Cap Screws
D—Discharge Beater Wings

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Wear strips can be reversed for additional wear.

Discharge beater wings and wear strips can be replaced without removing the discharge beater. Replace discharge beater wings in sets of two and opposite of each other to maintain proper balance.

NOTE: If discharge beater is removed from machine, or has been serviced, tighten clamp bolts before securing wings.

Remove round head bolts (A) and replace discharge beater wear strips (B) as required. Tighten round head bolts to specification.

Specification

Discharge Beater Wear Strip
Round Head Bolts—Torque. 70 N·m
(52 lb·ft)


Remove cap screws (C) and replace discharge beater wings (D) as required. Tighten cap screws to specification.

Specification


Discharge Beater Wing Cap	
Screws—Torque.	70 N·m (52 lb·ft)

OUC6075,000464F-19-20MAR17

Tough Crop Discharge Beater Wear Strip—Replacing

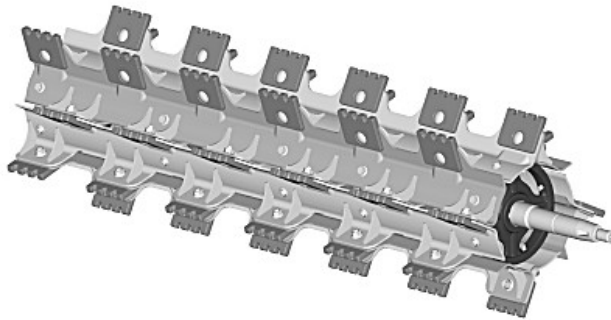

H107173—UN—06MAR13

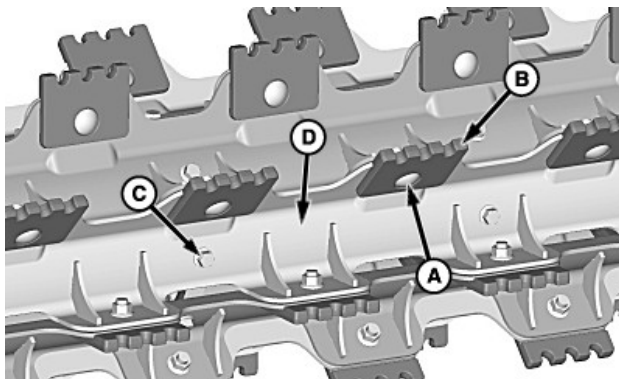

H107174—UN—06MAR13

Discharge Beater Wings and Wear Strips (Tough Crop)

- A—Round Head Cap Screws
- B—Discharge Beater Wear Strip
- C—Cap Screws
- D—Discharge Beater Wings

CAUTION: Shut OFF engine, set park brake and remove key.

Discharge beater wings and wear strips can be replaced without removing the discharge beater. Replace discharge beater wings in sets of two and opposite of each other to maintain proper balance.

NOTE: If the discharge beater is removed from the machine, or has been serviced, tighten clamp bolts before securing wings.

Always replace hardware when replacing discharge beater wear strips.

Remove round head cap screws (A) and replace

discharge beater wear strips (B) as required. Tighten round head cap screws to specification.

Specification

Discharge Beater Wear Strip	
Round Head Cap	
Screws—Torque.	107 N·m (79 lb·ft)


Remove cap screws (C) and replace discharge beater wings (D) as required. Tighten cap screws to specification.

Specification

Discharge Beater Wing Cap	
Screws—Torque.	70 N·m (52 lb·ft)

OUC6075,0004A14-19-09AUG18

Overshot Beater Belt (If Equipped)—Adjusting

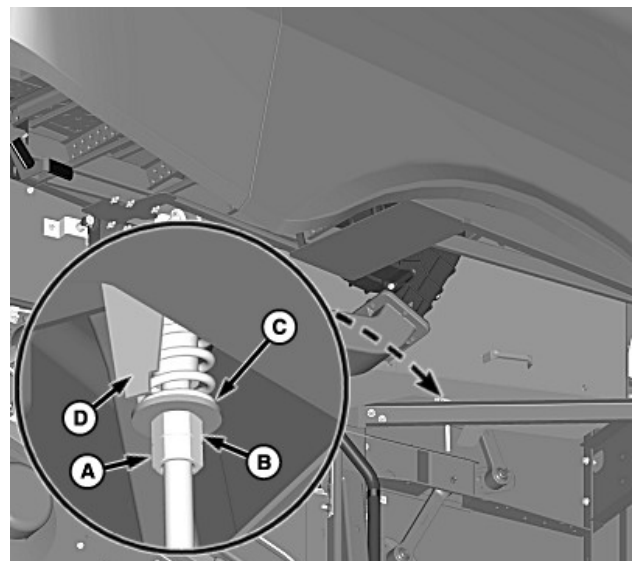

H114991—UN—08JUL15


- A—Nut
- B—Nut
- C—Washer
- D—Gauge

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nut (A) and tighten the nut (B) until the washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUC6075,000438D-19-12OCT16

Overshot Beater Belt (If Equipped)—Replacing

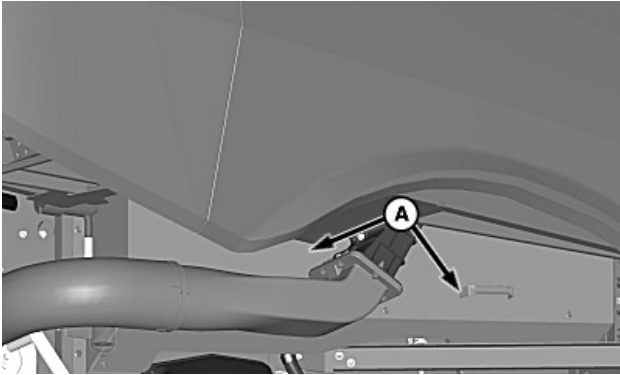


A—Shields

H114992—UN—08JUL15

CAUTION: Shut OFF engine, set park brake and remove key.

Remove cap screws and shields (A) from right-hand rear of machine.

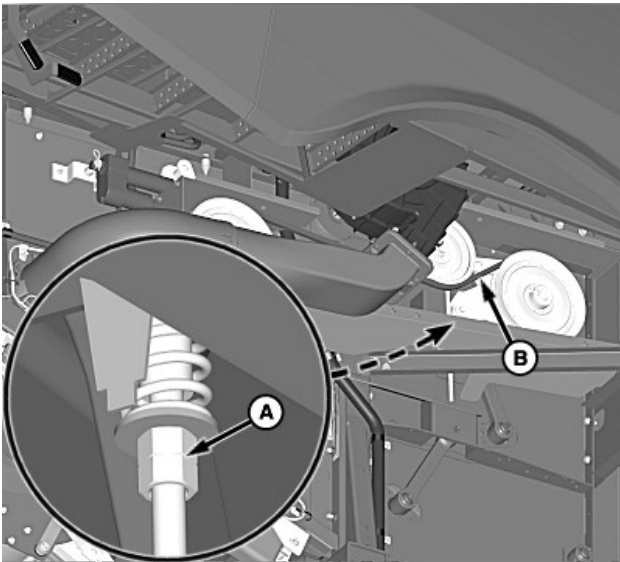

A—Nuts
B—Overshot Beater Belt

H98551—UN—12OCT10


Loosen nuts (A) and remove belt (B) from sheave.

Install replacement belt and adjust the tensioner until washer is positioned between end of gauge and bottom of step. Tighten lock nut.


Install shields and retain with cap screws.

OUC6075,0004389-19-12OCT16

Overshot Beater (If Equipped)—Wing Replacing

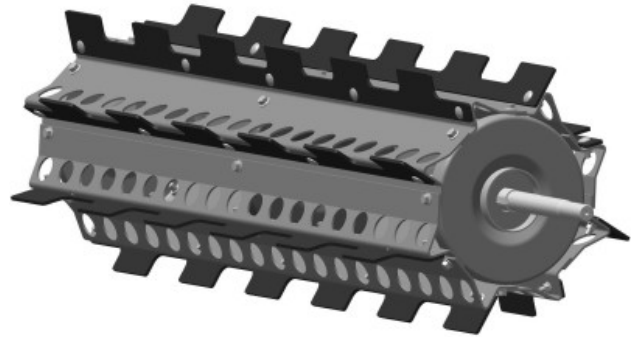

H120581—UN—23JAN17

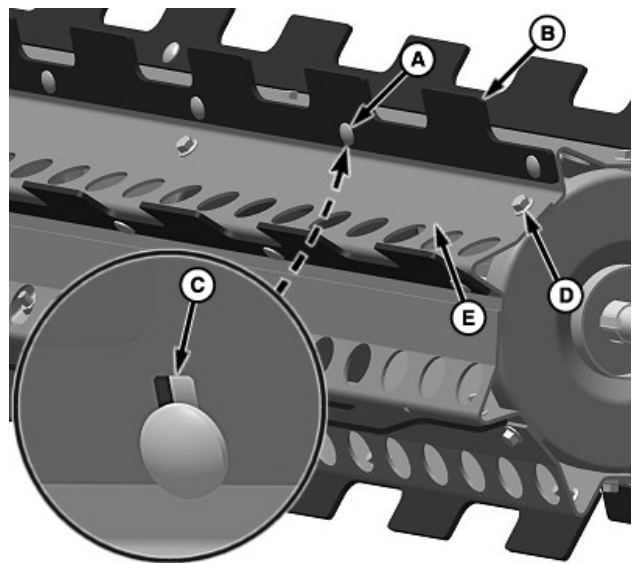

H120582—UN—23JAN17

Overshot Beater Wings and Wear Strips

A—Round-Head Bolt
B—Overshot Beater Wear Strip
C—Notch
D—Cap Screw
E—Overshot Beater Wing

CAUTION: Shut OFF engine, set park brake, and remove key.

NOTE: Wings cannot be reversed for additional wear.

Overshot beater wings and wear strips can be replaced without removing the overshot beater. Replace overshot beater wings in sets of two and opposite of each other to maintain proper balance.

NOTE: If the overshot beater is removed from machine, or has been serviced, tighten clamp bolts before securing wings. Tighten cap screws to specification.

1. Remove round-head bolts (A) and replace overshot beater wear strips (B) as required.

2. Adjust the overshoot beater wear strips outward until at the end of notch (C) as shown.
3. Tighten round-head bolts to specification.

Specification

Overshot Beater Wear Strip
Round-Head Bolts—Torque. 79 N·m
(58 lb·ft)


4. Remove cap screws (D) and replace overshoot beater wings (E) as required. Tighten cap screws to specification.

Specification

Overshot Beater Wing Cap
Screws—Torque. 79 N·m
(58 lb·ft)

OUO6075,00050C7-19-14MAY21

Countershaft Right-Hand Front Belt—Adjusting

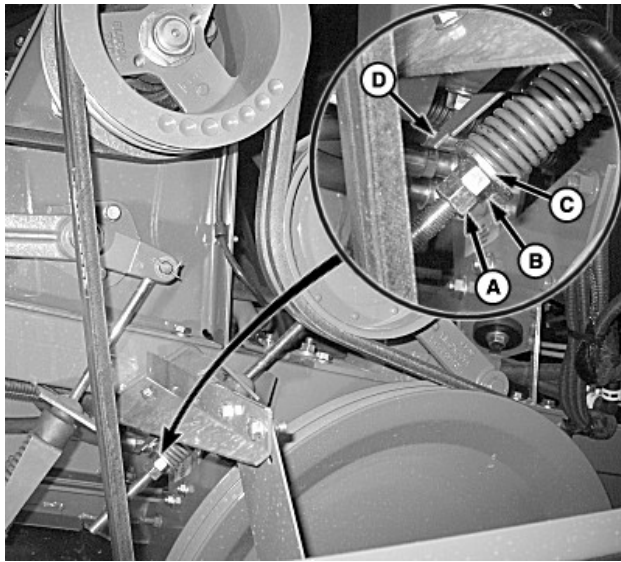

H96938—UN—17JUN10


A—Nut
B—Nut
C—Washer
D—Gauge

CAUTION: Shut OFF engine, set parking brake and remove key.

Loosen nut (A) and tighten nut (B) until washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUO6075,00007F8-19-17JUN10

Countershaft Right-Hand Front Belt—Replacing

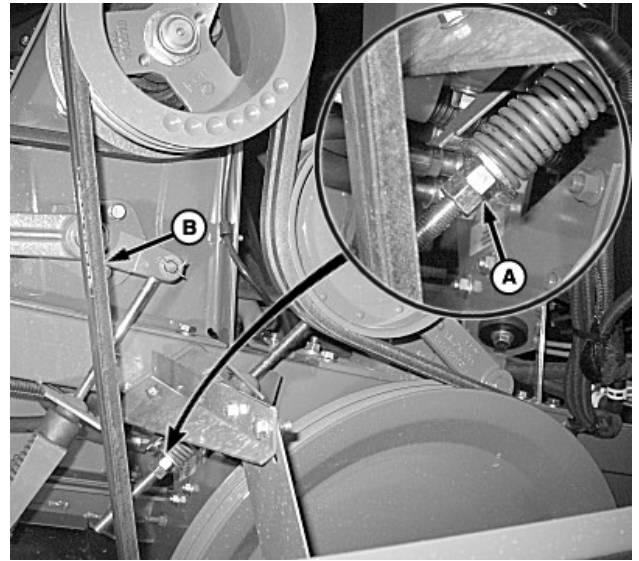

H96924—UN—16JUN10

A—Nuts
B—Right-Hand Front Belt


CAUTION: Shut OFF engine, set parking brake and remove key.

Loosen nuts (A) and remove belt (B).

Install replacement belt and adjust tensioner until washer is positioned between end of gauge and bottom of step. Tighten lock nut.

OUO6075,00007F9-19-17JUN10

Countershaft Right-Hand Rear Belt—Adjusting

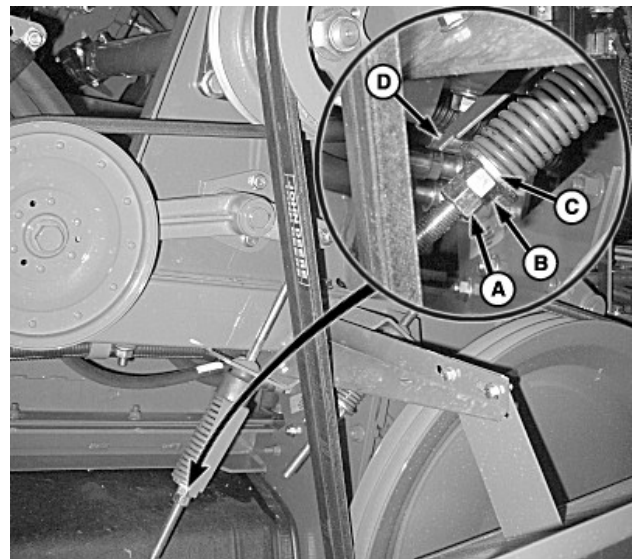

H96939—UN—17JUN10

A—Nut
B—Nut


C—Washer
D—Gauge

CAUTION: Shut OFF engine, set parking brake and remove key.

Loosen nut (A) and tighten nut (B) until washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUC6075,00007FA-19-17JUN10

Countershaft Right-Hand Rear Belt—Replacing

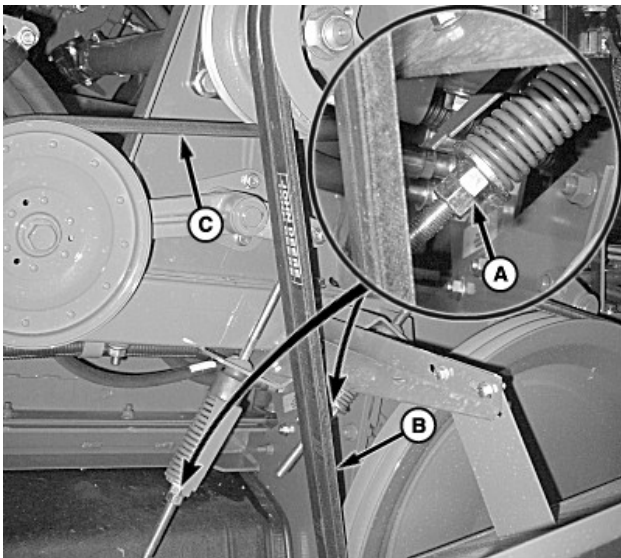

H96940—UN—17JUN10

A—Nuts
B—Front Countershaft Belt
C—Rear Countershaft Belt

CAUTION: Shut OFF engine, set parking brake and remove key.

Loosen nuts (A) and remove right-hand front countershaft belt (B).


Loosen nuts (A) and remove rear countershaft belt (C).

Install replacement belt and adjust tensioner until washer is positioned between end of gauge and bottom of step.

Install front countershaft belt and adjust tensioner until washer is positioned between end of gauge and bottom of step.

OUC6075,00007FB-19-22JUN10

Cleaning Shoe Air Chutes and Access Door

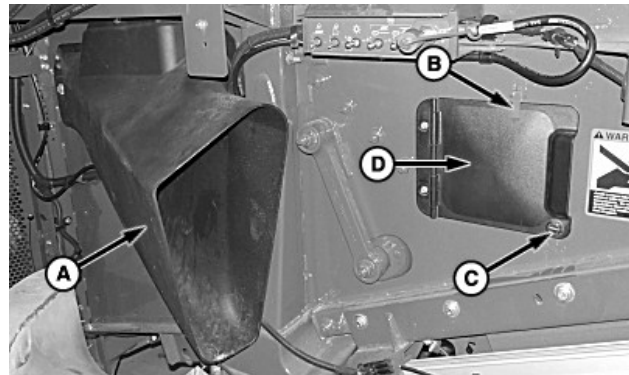

H115537—UN—20AUG15

A—Air Chute (2 used)
B—Clip
C—Lock
D—Cleaning Shoe Access Door

CAUTION: Shut OFF engine, set park brake, and remove key.

Remove any material found in the air chutes (A).

NOTE: Cleaning shoe access door is on the left-hand side of machine only.


Open clip (B) and turn lock (C) to open the cleaning shoe access door (D).

Opening the access door allows the operator to look at the cleaning shoe area when adjusting the chaffer, sieve or when inspecting the cleaning shoe area.

Close the access door and retain with the lock and clip.

OUC6075,0004E8B-19-16JUN20

Cleaning Shoe Auger Gears—Manual Cleanout Door (If Equipped)

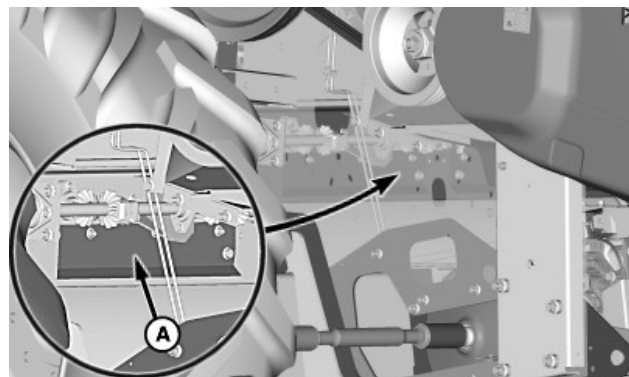

H102538—UN—29JUN11

A—Cleanout Door


CAUTION: Shut OFF engine, set park brake, and remove key.

Allows operator to clean and inspect the area around the cleaning shoe auger gears.

1. Remove cap screws from cleanout door (A) to clean area.
2. Close the cleanout door before operating the machine.

OUO6075,0004E8C-19-08JUL20

Cleaning Shoe Auger Gears—Cleanout Door (If Equipped)

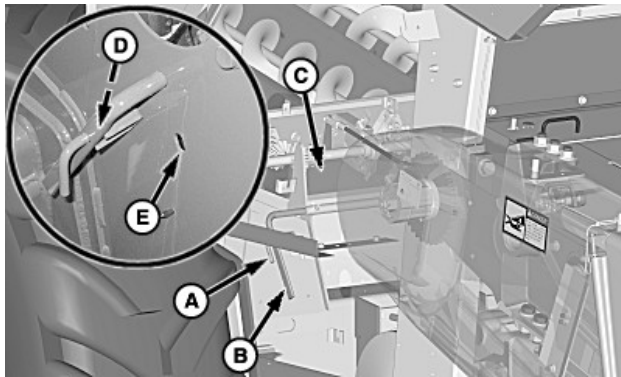

H95822—UN—24MAR10

- A—Lock-Out Pin
- B—Handle
- C—Cleanout Door
- D—Closed Position
- E—Open Position

CAUTION: Shut OFF engine, set parking brake and remove key.

Allows operator to clean and inspect the cleaning shoe augers gear area.


Pull lock-out pin (A) and move handle (B) to open or close cleanout door (C).

Move handle to desired position:

- Closed Position (D)
- Open Position (E)

OUO6075,0000F8B-19-09FEB12

Shoe, Fan, and Conveyor Auger Belt—Adjusting

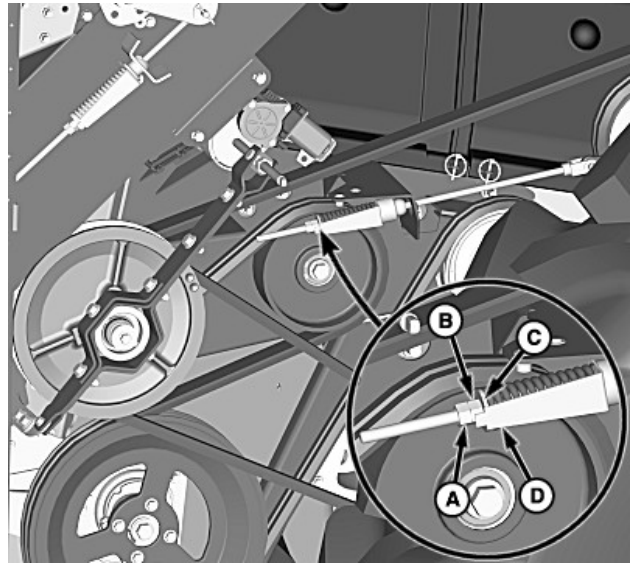

H116821—UN—07JAN16

Shield Removed for Clarity


- A—Nut
- B—Nut
- C—Washer
- D—Gauge

CAUTION: Shut OFF engine, set park brake and remove key.


Loosen nut (A) and tighten the nut (B) until the washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUO6075,00041C4-19-11APR16

Shoe, Fan, and Conveyor Auger Belt—Replacing

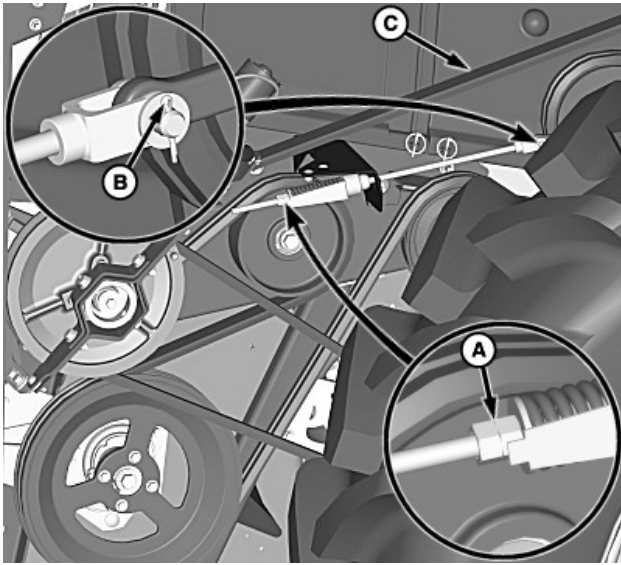

H116823—UN—07JAN16

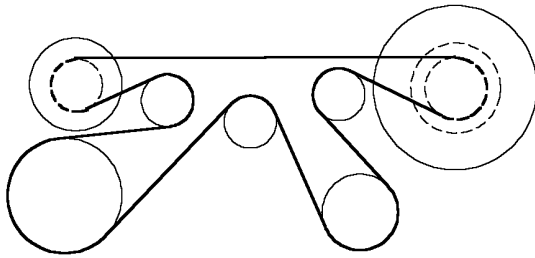

Belt Routing

H54683—UN—17MAY99

A—Nuts
B—Cotter Pin
C—Belt

CAUTION: Shut OFF engine, set park brake and remove key.

Remove right-hand front countershaft belt and cleaning fan variable drive belts.

Loosen nuts (A) and remove the cotter pin (B) from the tensioning rod.

Remove shoe, fan, and conveyor auger drive belt (C).


Install replacement belt and adjust the tensioner until washer is positioned between end of gauge and bottom of step.

Assemble tensioning rod and install the cotter pin.

Install front countershaft belt, cleaning fan variable drive belt and adjust tensioners until washer is positioned between end of gauge and bottom of step.

OUC6075,00041C5-19-11APR16

Cleaning Fan Actuator (Without Active Terrain Adjustment™)—Adjusting

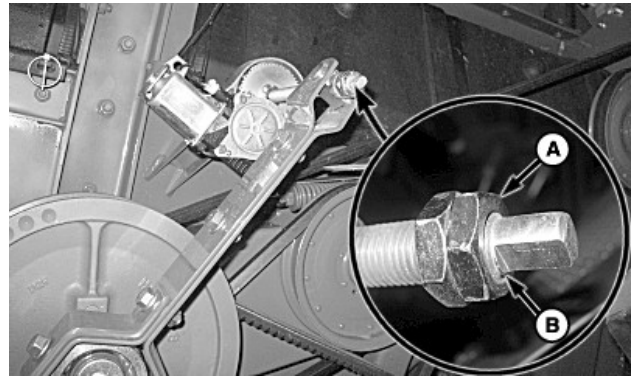

H96946—UN—17JUN10

A—Nuts
B—End of Threads


CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Cleaning fan minimum/maximum speed is controlled electronically. Stop nuts ensure drive protection, if there is an improper electronic speed setting. Nuts must be installed as shown.

Verify nuts (A) are jammed together at the end of the threads (B) as shown.

OUC6075,0004580-19-11JAN17

Cleaning Fan Actuator (Active Terrain Adjustment™)—Adjusting

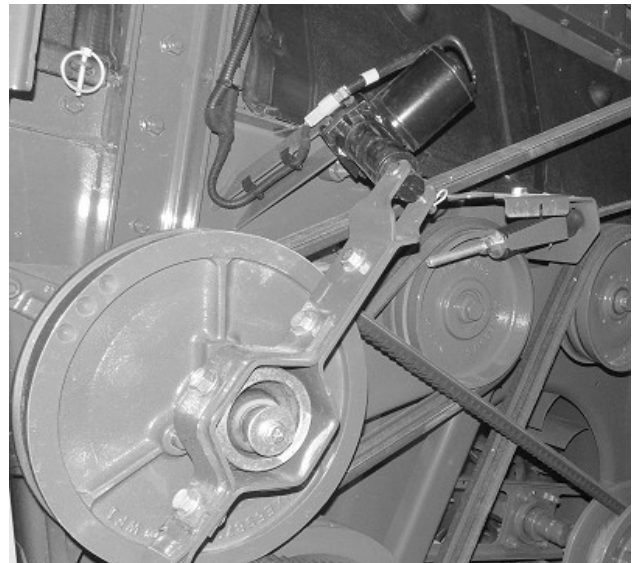


H120470—UN—11JAN17

Cleaning fan minimum/maximum speed is controlled electronically, there is no adjusting needed.

OUC6075,000457F-19-11JAN17

Cleaning Fan Belt (Without Active Terrain Adjustment™)—Replacing

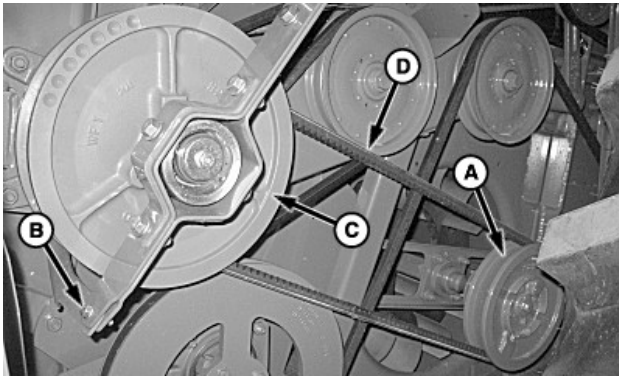

H96945—UN—17JUN10

- A—Bottom Sheave
- B—Support Arms
- C—Upper Sheave
- D—Belt

Start machine, engage separator and operate fan at minimum speed.

Disengage separator, shut OFF engine and remove key.

CAUTION: Shut OFF engine, set park brake and remove key.

Wedge bottom sheave (A) to full open position.

Disconnect support arms (B) and swing arms away.


Remove upper sheave (C) and pull belt (D) over lower sheave.

Install replacement belt, remove the wedge, and connect the support arms.

Check adjustment of cleaning fan speed.

OUO6075,000457D-19-11JAN17

Cleaning Fan Belt (Active Terrain Adjustment™)—Replacing

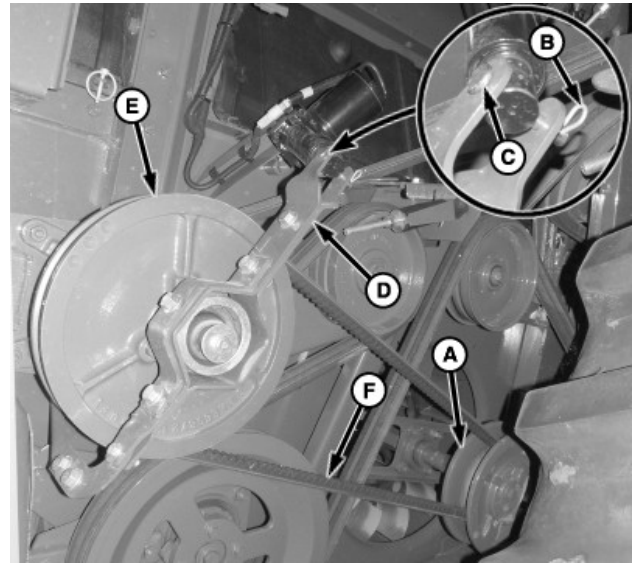

H120469—UN—11JAN17

- A—Bottom Sheave
- B—Spring Pin
- C—Pin
- D—Support Arms
- E—Upper Sheave
- F—Belt

Start machine, engage separator and operate fan at minimum speed.

Disengage separator, shut OFF engine and remove key.

CAUTION: Shut OFF engine, set park brake and remove key.

Wedge bottom sheave (A) to full open position.

Remove spring pin (B) and pin (C) from the actuator motor.

Allow support arms (D) to swing out of the way.

Remove upper sheave (E) and pull belt (F) over lower sheave.


Install replacement belt, remove the wedge, and connect the support arms.

Align support arms with the actuator motor and retain with the previously removed pins.

Check adjustment of cleaning fan speed.

OUO6075,000457E-19-11JAN17

Adjustable Front Chaffer (If Equipped)

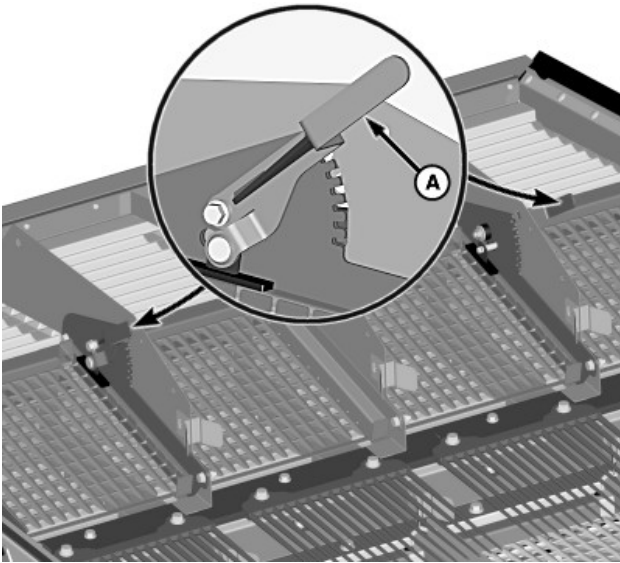

A—Lever

H120645—UN—31JAN17

CAUTION: Shut OFF engine, set park brake and remove key to help prevent accidental starting and personal injury.


Remove separator covers to access the front chaffer.

Adjust front chaffer to desired position with lever (A).

NOTE: When the lever is fully raised, the front chaffer is fully closed. When the lever is fully lowered, the front chaffer is fully open. One notch is equal to approximately 4 mm (5/32 in).

OJ06075,00045AC-19-02FEB17

Fixed Front Chaffer

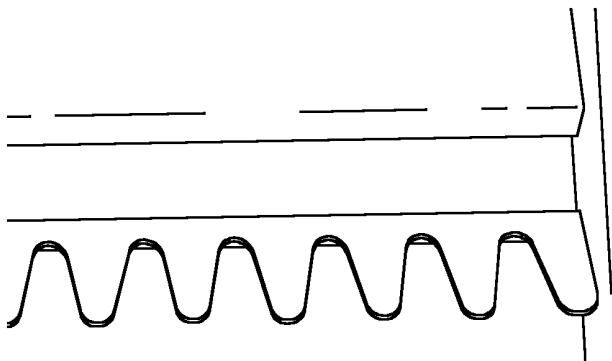

H54528—UN—01APR99


Fixed front chaffer is set at 24 mm (15/16 in).

Crop material that passes through the front chaffer is delivered to the chaffer for further cleaning.

OJ06075,00045AF-19-02FEB17

Chaffer and Sieve—Measuring

Louver Length

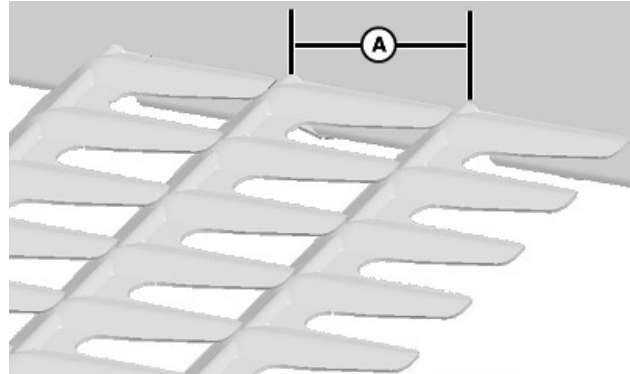

H89699—UN—21AUG07


A—Wire-to-Wire

Machines can be equipped with three different types of chaffer and two different types of sieves.

- Deep-tooth chaffer and sieve
 - Chaffer 41 mm (1-5/8 in)
 - Sieve 30 mm (1-3/16 in)
- General-purpose chaffer and sieve
 - Chaffer 30 mm (1-3/16 in)
 - Sieve 30 mm (1-3/16 in)
- Flat-tooth comb chaffer and sieve
 - Chaffer 30 mm (1-3/16 in)
 - Sieve 30 mm (1-3/16 in)

Proper way to measure the chaffer and sieve louver length is from wire-to-wire (A) as shown. This can be used to determine if a deep-tooth, general-purpose, or flat-tooth comb chaffer or sieve is installed.

Sieve Louver Depth

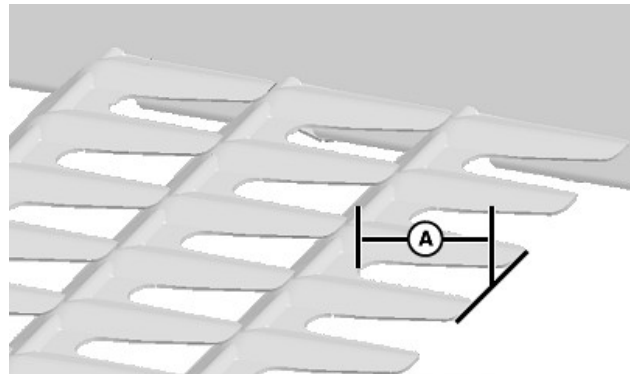

H120674—UN—02FEB17

A—Louver Depth


Machines can be equipped with two different types of sieves.

- Deep-tooth sieve
 - Sieve 22 mm (7/8 in)
- General-purpose sieve

- Sieve 10 mm (3/8 in)

Proper way to measure sieve louver depth (A) is from the bottom of the louver to tip of louver as shown. This can be used to determine if a deep-tooth or general-purpose sieve is installed.

Louver Clearance

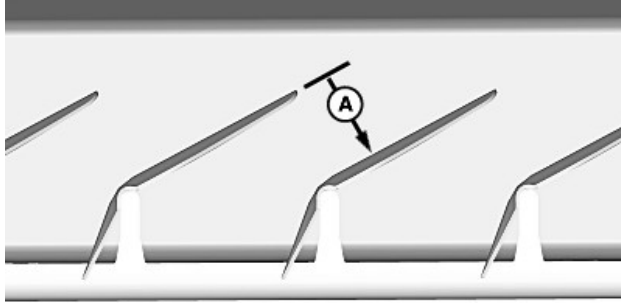

A—Louver-to-Louver


H92974—UN—03OCT08

NOTE: Always close the chaffer/sieve louvers past the desired set point and then open the louvers to the desired set point to remove play.

Proper way to measure the chaffer and sieve clearance is from louver-to-louver (A) as shown. This can be used to determine if clearance on chaffer and sieve matches with setting shown on the armrest display.

OUO6075,000503A-19-14MAY21

General-Purpose Chaffer 30 mm (1-3/16 in)

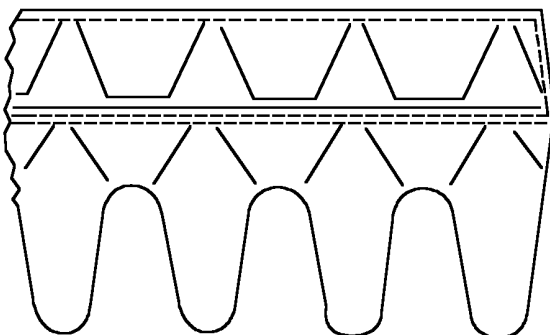


H54526—UN—01APR99

NOTE: Dimension shown is wire-to-wire spacing.

General-purpose chaffer is suitable for corn, soybeans, sorghum, small grains, oil seed crops, grass seed, and many specialty crops. It is recommended for dry conditions and is resistant to “stabbing” of corn tassels and soybean, sunflower, and sorghum stems.

OUO6075,00045B1-19-02FEB17

Deep-Tooth Chaffer 41 mm (1-5/8 in)

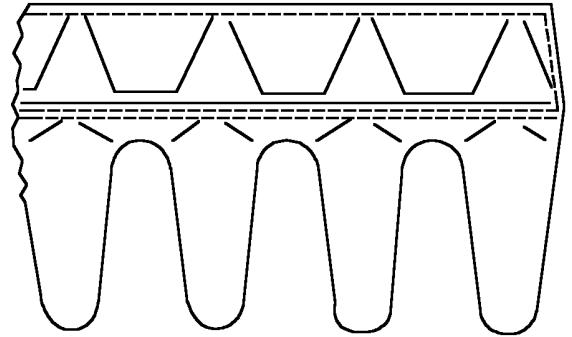

H58751—UN—13JUL99


NOTE: Dimension shown is wire-to-wire spacing.

Not recommended for use in small grains, food corn, or popcorn.

Deep-tooth chaffer and deep-tooth sieve provide additional grain separation capacity in high moisture and high yield corn and high-capacity and clean grain sample in corn and soybeans.

OUO6075,000467C-19-20MAR17

Premium Corn Chaffer 41 mm (1-5/8 in)

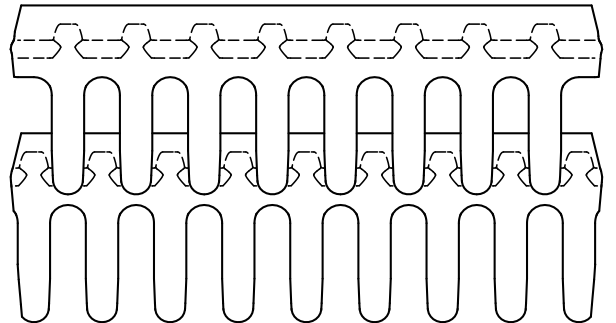

H124256—UN—17MAY18

NOTE: Dimension shown is wire-to-wire spacing.

Recommended in high-yielding wet corn (+25%) conditions.

The Premium Corn chaffer has been designed for best performance when harvesting corn. The longer louver design featured on the chaffer provides a larger opening and increased grain-capturing capacity, especially in high-yielding corn or when harvesting on slopes where the larger louver opening of these elements can help to increase cleaning shoe capacity.


Other performance advantages of the Premium Corn chaffer are:

- Reduction of cleaning shoe losses from rear of machine.

- Reduction of tailings return volume for a higher-quality grain sample reduced cob particles in the grain tank for a cleaner grain sample.
- The Premium Corn design tends to have less material accumulation in wet corn conditions.
- Due to the curved tip of the louver, the Premium Corn chaffer is easier to clean and less likely to be damaged during cleaning. The offset of the louvers causes small plant stems to less likely fall through the element or get stuck in the element.

OOU6075,0004944-19-25MAY18

General Purpose Sieve 30 mm (1-3/16 in)

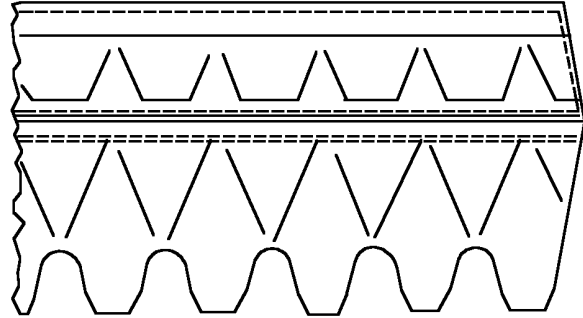


H54527—UN—01APR99

NOTE: Dimension shown is wire-to-wire spacing.

This sieve is suitable for all major crops and many specialty crops.

OOU6075,00045B3-19-03FEB17

Flat-Tooth Comb Chaffer 30 mm (1-3/16 in)

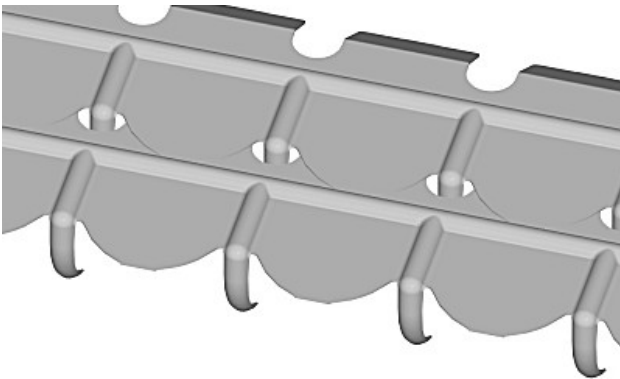

H125454—UN—06DEC18


NOTE: Dimension shown is wire-to-wire spacing.

The flat-tooth comb chaffer requires a 2—3 mm wider chaffer clearance opening and 50 rpm higher fan speed compared to the general-purpose chaffer.

The flat-tooth comb chaffer improves tailings volume and grain tank sample, especially in challenging conditions (weedy conditions and heavily bearded crops), such as canola, oil seed (rape), and lentils. The curled chaffer finger reduces the number of longer sticks passing through the chaffer.

OOU6075,000503B-19-14MAY21

Deep-Tooth Sieve 30 mm (1-3/16 in)

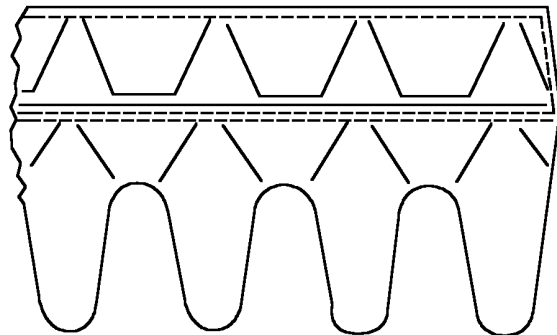

H54526—UN—01APR99

NOTE: Dimension shown is wire-to-wire spacing.


Not recommended for use in small grains, food corn, or popcorn.

Deep-tooth sieve provides additional grain separation in high-moisture and high-yield corn.

This sieve together with the deep-tooth chaffer provides high-capacity and clean grain samples in corn and soybeans.

OOU6075,000467D-19-20MAR17

Chaffer/Sieve Adjusting Switch

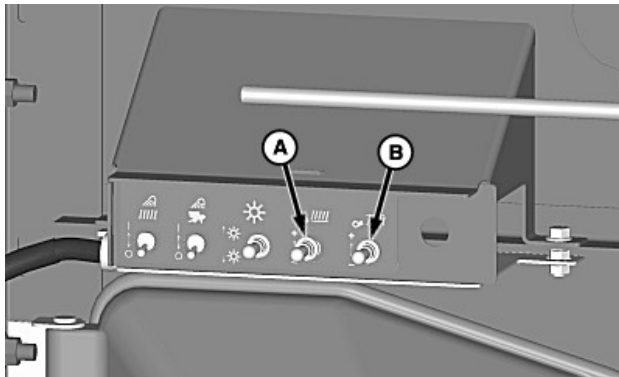

H97564—UN—14SEP10

A—Chaffer Adjust Switch
B—Sieve Adjust Switch

Turn adjustment linkage (A) clockwise to close the chaffer and counterclockwise to open the chaffer.

Close chaffer louvers past the desired set point and then open louvers to the desired set point to remove play.

NOTE: See Crop Settings section for recommended Dual Zone Adjust Rear Chaffer settings.

Measure distance between louvers and verify setting.

OOU6075.0004726-19-24APR17


IMPORTANT: Close chaffer/sieve louvers completely to prevent louver damage while removing chaffer/sieve.

Chaffer adjust switch (A) and sieve adjust switch (B) are located on left-hand side of machine.

Chaffer adjust switch and sieve adjust switch allows operator to open or close chaffer and sieve to various positions.

OOU6075.00007DC-19-21MAR11

Dual Zone Adjust Rear Chaffer—Adjusting

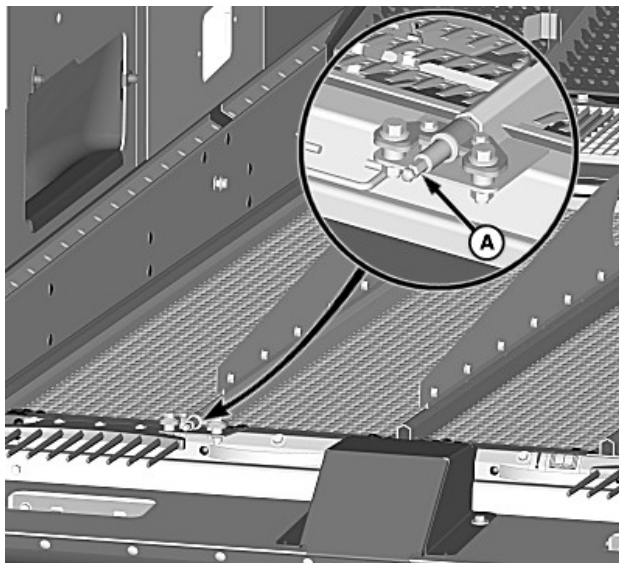


H121327—UN—24APR17

A—Adjustment Linkage

CAUTION: Shut OFF engine, set park brake and remove key to help prevent accidental starting and personal injury.

Raise chopper/spreader assembly.

Chaffer/Sieve Elements—Remove and Install

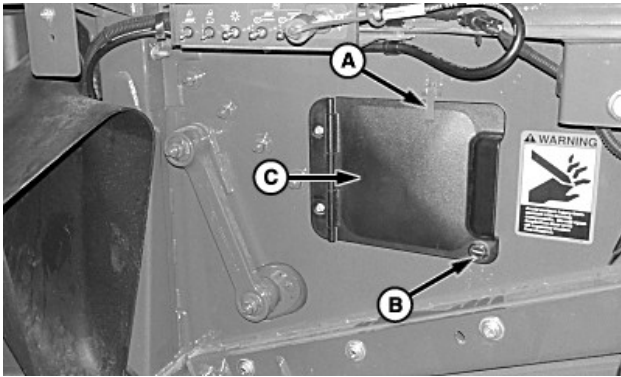

H115544—UN—20AUG15

A—Clip
B—Lock
C—Access Door

CAUTION: Shut OFF engine, set park brake, and remove key to help prevent accidental starting and personal injury.


IMPORTANT: To avoid damage chaffer/sieve elements, completely close the louvers before removing the elements from the machine.

NOTE: Electric Knife Bank Actuator machines: To allow removal of the chaffer/sieve elements, adjust knife bank to the 100% engaged position. See Residue Management Help or Operator's Station Help for further information.

It is not necessary to remove the chopper or spreader (if equipped) to remove the chaffer/sieve elements. The chopper or spreader must be fully raised.

The sieve removal is similar to the chaffer removal.

1. Open clip (A) and turn lock (B) to open access door (C).

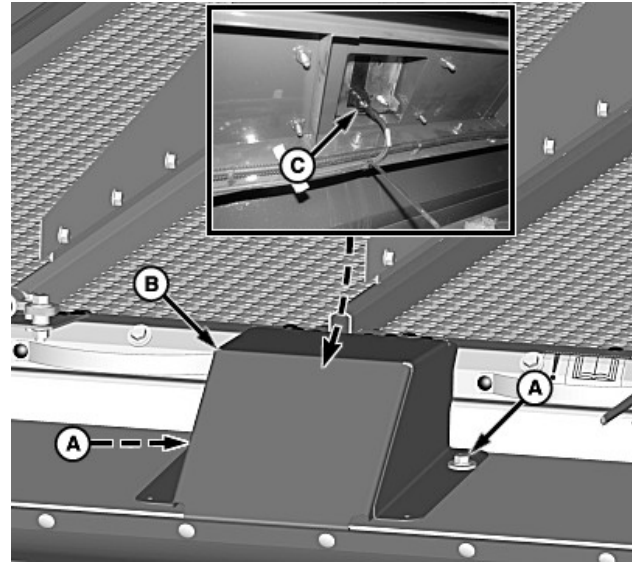


H121328—UN—24APR17


A—Cap Screw (2 used)
B—Cover
C—Electrical Harness

NOTE: It is not required to remove the chaffer motor.

2. Remove cap screws (A) and cover (B).
3. Disconnect electrical harness (C) from the chaffer motor.

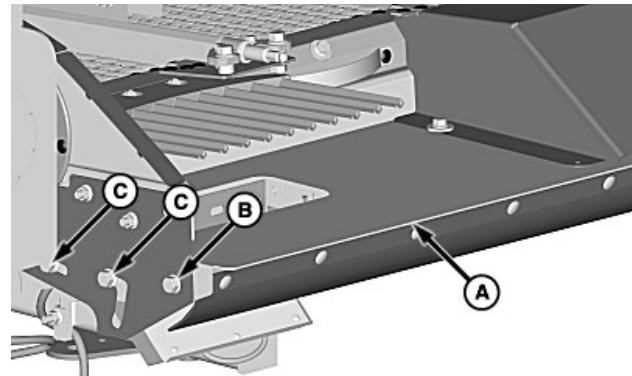

H121329—UN—24APR17

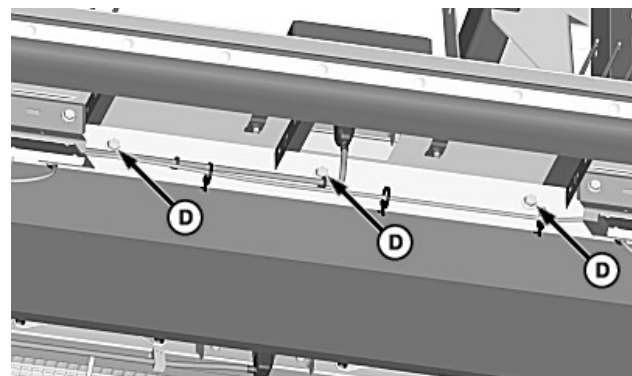


H119692—UN—24OCT16

A—Tailboard
B—Cap Screw and Nut (2 used)
C—Cap Screw (4 used)
D—Cap Screw and Nut (3 used)


NOTE: It is not required to remove the tailboard.

4. Lower Tailboard (A):

- Remove cap screw and nut (B) from both sides of the machine.
- Loosen cap screws (C) from both sides of the machine.
- Remove cap screws and nuts (D) from underneath center of tailboard.
- Pull tailboard rearward and lower.

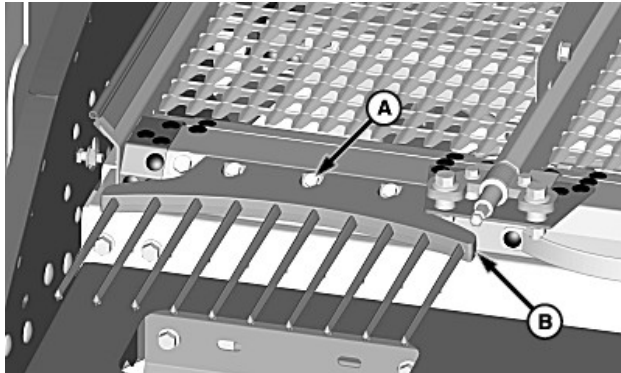

H119693—UN—24OCT16

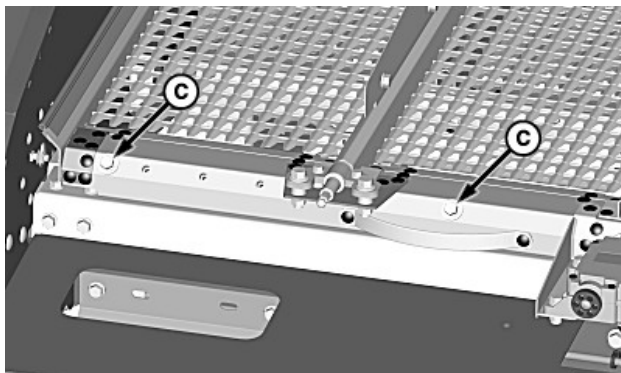


H119913—UN—02NOV16


A—Cap Screw (6 used)
B—Plastic Finger (2 used)
C—Cap Screw (4 used)

5. Chaffer Removal:


- Remove cap screws (A) and plastic fingers (B) from both sides of the machine.
- Remove cap screws (C) from both sides of the machine.
- Slide chaffer element through rear of the machine.
- Inspect grain seals on chaffer element and repair or replace as needed.

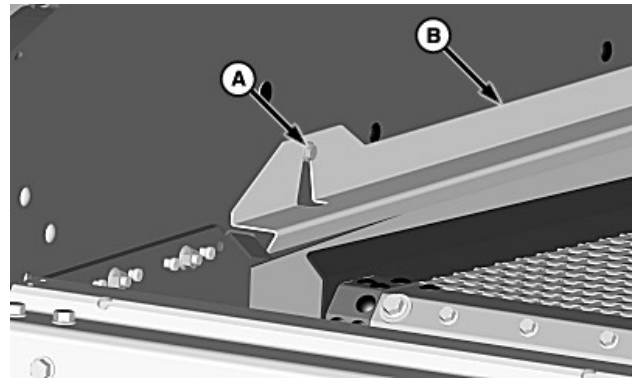

H119696—UN—24OCT16

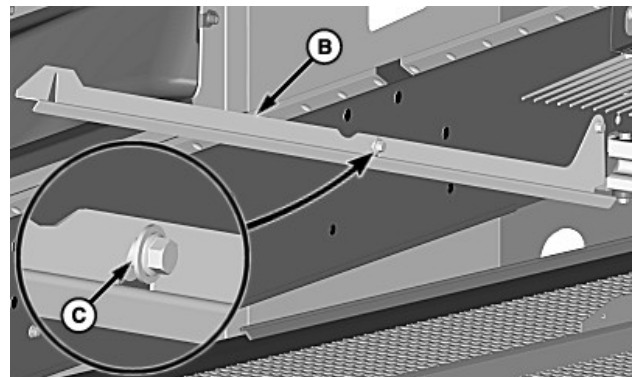

H119695—UN—24OCT16

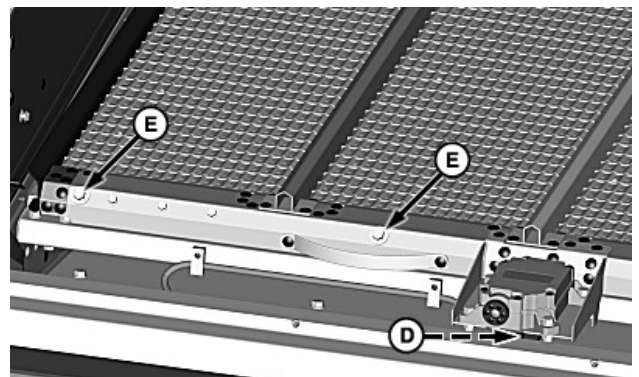

H121020—UN—07MAR17

A—Cap Screw
B—Rail
C—Bushing
D—Electrical Harness
E—Cap Screw (4 used)

6. Sieve Removal:


- Loosen cap screw (A) on both sides of the machine.
- Lift rail (B) and place over bushing (C).
- Disconnect electrical harness (D) from the sieve motor.
- Remove cap screws (E) from both sides of the machine.
- Slide sieve element through the rear of the machine.
- Inspect grain seals on sieve element and repair or replace as needed.

7. Sieve Installation:


- Install sieve element through the rear of the machine.
- Lower rails and install electrical harness.
- Tighten cap screws to specification.

Specification

Sieve Cap Screws—Torque. 37 N·m
(27 lb·ft)

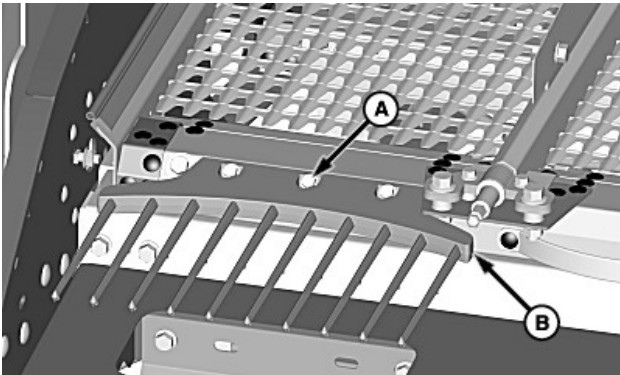

H119693—UN—24OCT16

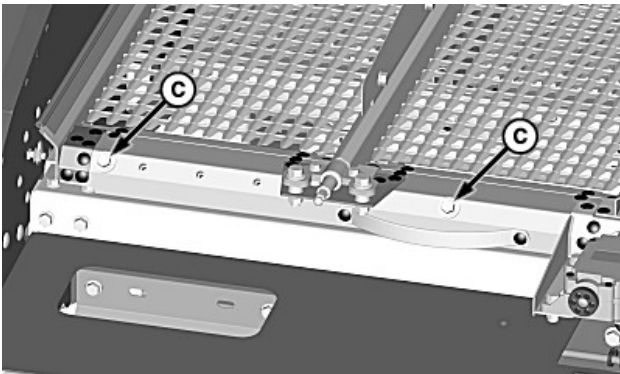

H119913—UN—02NOV16

A—Cap Screw (6 used)
B—Plastic Finger (2 used)
C—Cap Screw (4 used)

8. Chaffer Installation:

- Install chaffer and install electrical harness.
- Tighten cap screws (C) to specification.

Specification

Chaffer Cap Screws—Torque. 37 N·m
(27 lb·ft)

- Install plastic fingers (B) on both sides of the chaffer.
- Tighten cap screws (A) to specification.

Specification

Plastic Finger Cap
Screws—Torque. 8 N·m
(71 lb·in)

- Raise tailboard and install previously removed hardware.

- Install previously removed cover and retain with cap screws.

- Close access door and retain with lock and clip.

OUC6075,0004A49-19-09NOV18

Chaffer/Sieve/Return Pan Assemblies


The following assemblies contain non-serviceable structural fasteners and are not repairable:

- Left and Right Chaffer Frame Sides
- Left and Right Sieve Frame Sides
- Return Pan Frame
- Chaffer Element
- Sieve Element

NOTE: The listed assemblies can be replaced through service parts. See your John Deere dealer for more information.

SS43267,0000623-19-11JUN15

Chaffer/Sieve Motor—Manual Adjust

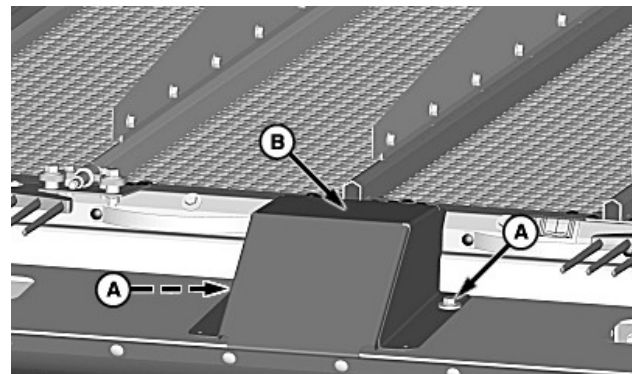


H121330—UN—24APR17

A—Cap Screws
B—Cover

CAUTION: Shut OFF engine, set park brake and remove key to help prevent accidental starting and personal injury.

NOTE: Same manual adjust procedure can be used on the chaffer/sieve motor.

- Remove cap screws (A) and cover (B).

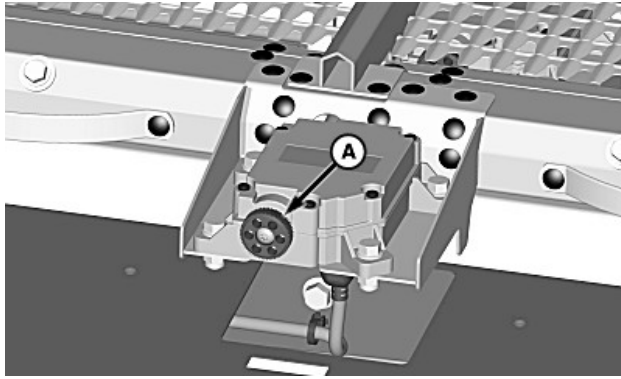

H119699—UN—24OCT16


A—Knob

IMPORTANT: To prevent adjusting motor damage, do not use a wrench on knob.

2. Use knob (A) to adjust motor. Turn knob clockwise to close and counterclockwise to open chaffer/sieve.


OOU6075,000467E-19-24APR17

Clean Grain Elevator Belt—Adjusting

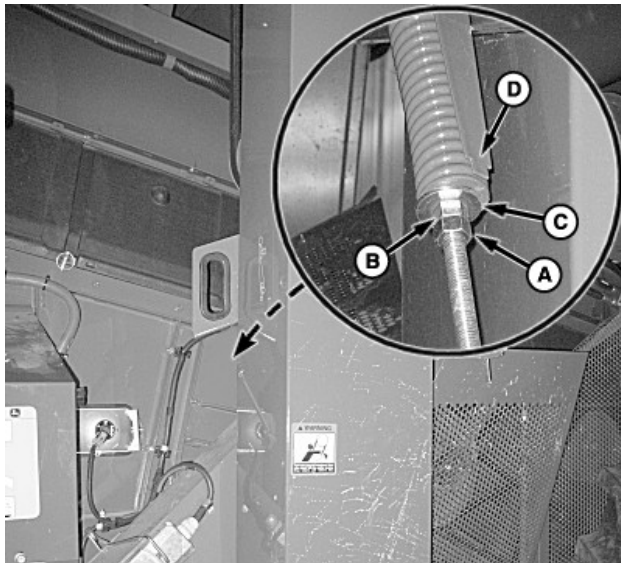

H97127—UN—27OCT10

Style A

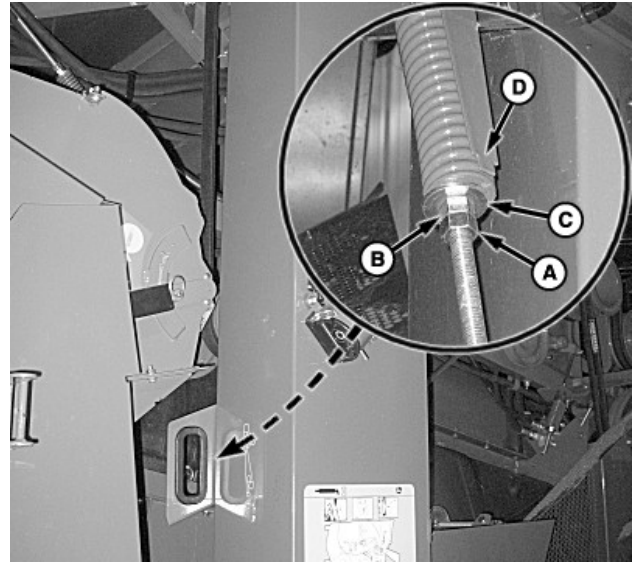

H97030—UN—22JUN10

Style B


A—Nut
B—Nut
C—Washer
D—Gauge

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nut (A) and tighten the nut (B) until the washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.


OOU6075,0004385-19-10OCT16

Clean Grain Elevator Belt—Replacing

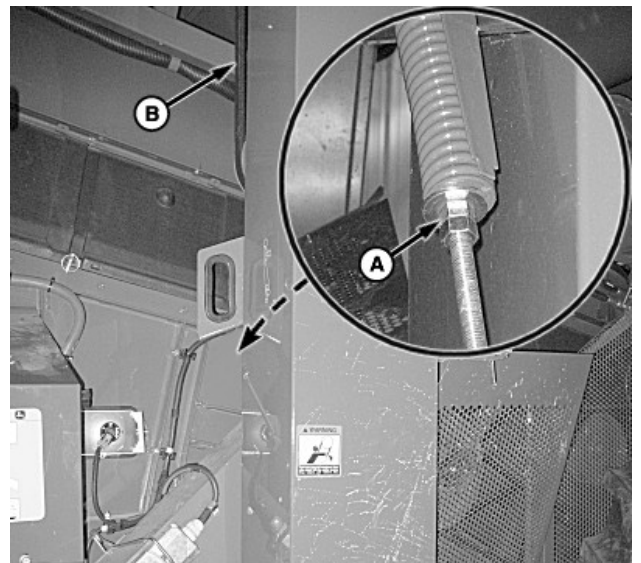

H97128—UN—27OCT10

Style A

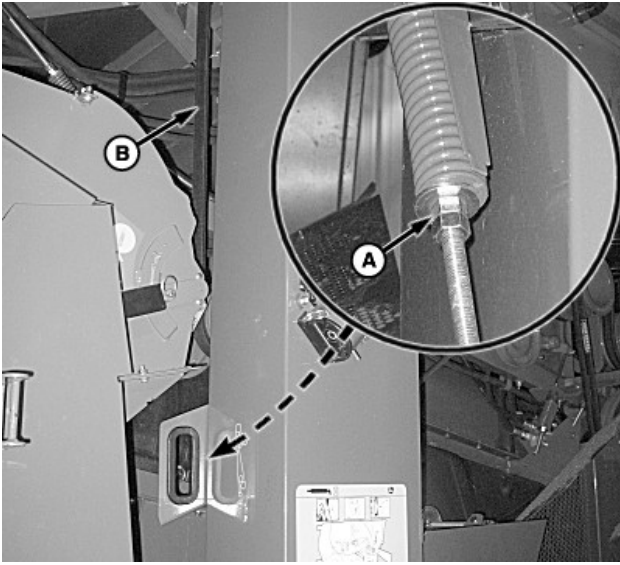


H97033—UN—22JUN10

Style B

A—Nuts
B—Clean Grain Elevator Belt

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nuts (A) to relieve tension on the clean grain elevator belt (B).

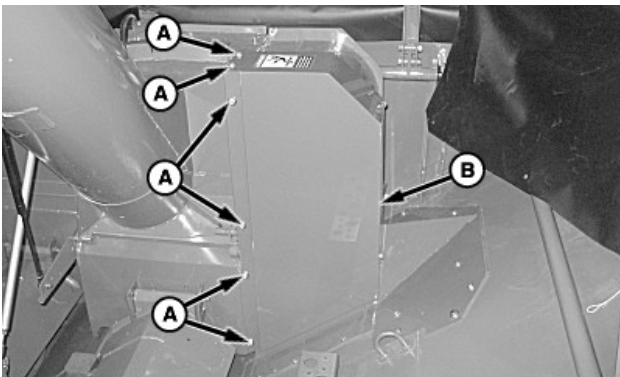

H97032—UN—22JUN10



H97034—UN—22JUN10

A—Cap Screws
B—Cover
C—Clean Grain Elevator Belt

Remove cap screws (A) and cover (B).


Remove clean grain elevator belt (C) from pulleys.

Install replacement belt and adjust the tensioner until washer is positioned between end of gauge and bottom of step. Tighten lock nut.


Install previously removed cover and retain with cap screws.

OUC6075,0004384-19-10OCT16

Clean Grain Elevator Conveyor Chain—Adjusting

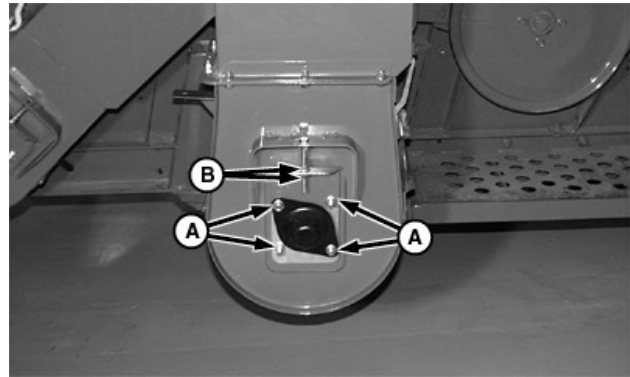

H62184—UN—13JAN00

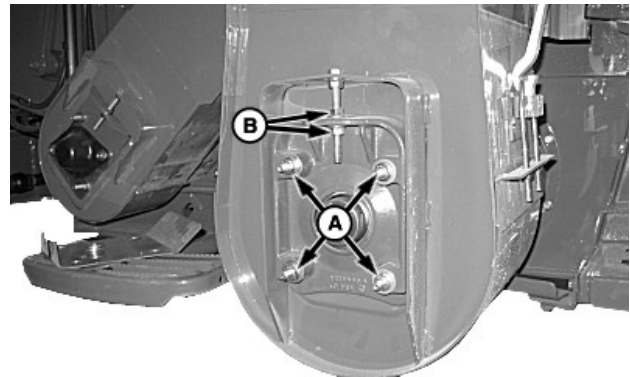

H87582—UN—07MAR07

A—Nut (4 used)
B—Nut (2 used)

CAUTION: Shut OFF engine, set park brake, and remove key.


1. Release the latch and open the lower door.
2. Remove the nuts from the bearing cover (if equipped).
3. Loosen nuts (A) and use nuts (B) to adjust the chain. Move the bearing carrier downward to tighten the chain.
4. The elevator chain is adjusted properly when the lower end of the chain can be moved side-to-side on the sprocket but cannot be pulled away from the sprocket. When the chain loosens up to 6 mm (1/4 in) from the sprocket, readjust the chain. After a period

of use, it may be necessary to remove a half link to adjust the chain correctly.

5. Install the bearing cover (if equipped) and retain with nuts.
6. Close and latch the lower door.

OUC6075,0004E8D-19-17JUN20

Clean Grain Elevator Wear Plates and Door (If Equipped)

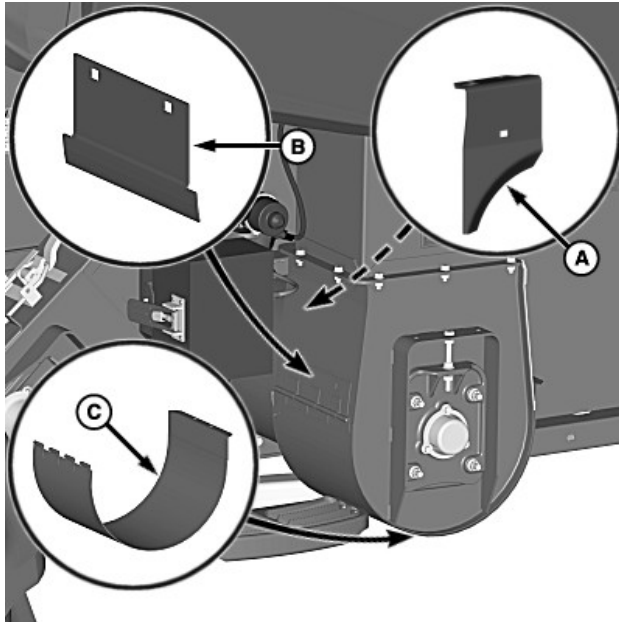

H126546—UN—20JUN19

The following parts provide protection to the clean grain elevator when harvesting abrasive crops:


- Rear Wear Plate (A)
- Wear Plate (B)
- Door (C)

Periodically inspect these clean grain elevator parts for wear.

Remove and replace these clean grain elevator parts as needed. See your John Deere dealer for further information.


OUC6075,0004BD0-19-20JUN19

VisionTrak™ Operational Checks

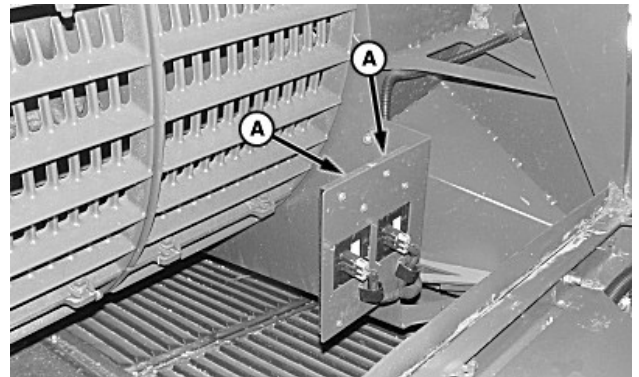

H120521—UN—19JAN17

Separator Sensors

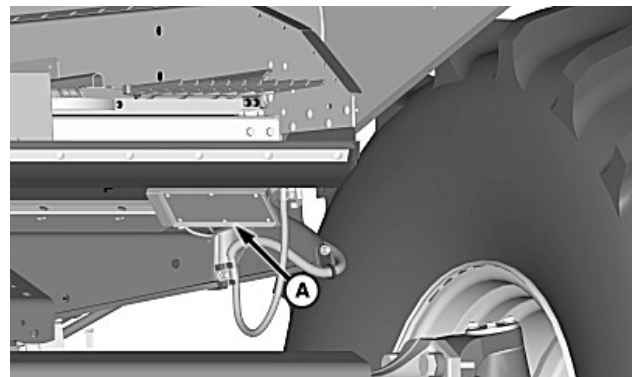

H120618—UN—26JAN17

Right-Hand Shoe Sensor

A—Sensors

NOTE: Two people are required to perform this operational check. One person must remain seated in the operator's seat, while another person taps on the sensors.

Separator sensors are on the left-hand side of the machine underneath the separator covers.

Shoe sensors are at the rear of the machine on the tailboard.

1. Turn key switch to RUN position, but do not start machine.
2. Engage header switch.

NOTE: MUST be in a crop that was previously calibrated. Grain loss calibration value MUST be less than 50.

3. Tap on sensors (A) several times. Person watching VisionTrak™ display should see movement on the shoe loss and separator loss indicators.


NOTE: Return grain loss calibration value to original value or perform another crop calibration.

VisionTrak is a trademark of Deere & Company

4. Disengage header switch and turn key switch OFF.
5. If VisionTrak™ does not work after these checks, see your John Deere dealer for further information.

OUC6075,000447B-19-26JAN17

ActiveVision™ Clean Grain Elevator Camera (If Equipped)

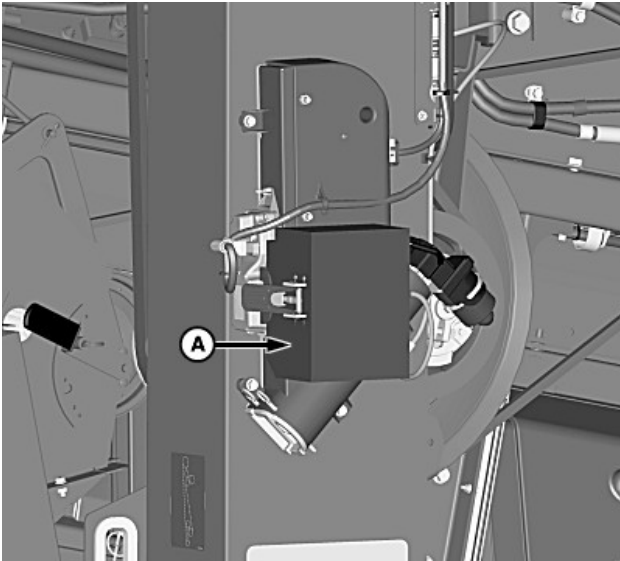

H125312—UN—06NOV18

A—ActiveVision™ Clean Grain Elevator Camera


CAUTION: Shut OFF engine, set park brake, and remove key before servicing or removing camera.

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ clean grain elevator camera (A).


OUC6075,000507B-19-27APR21

ActiveVision™ Tailings System Camera (If Equipped)

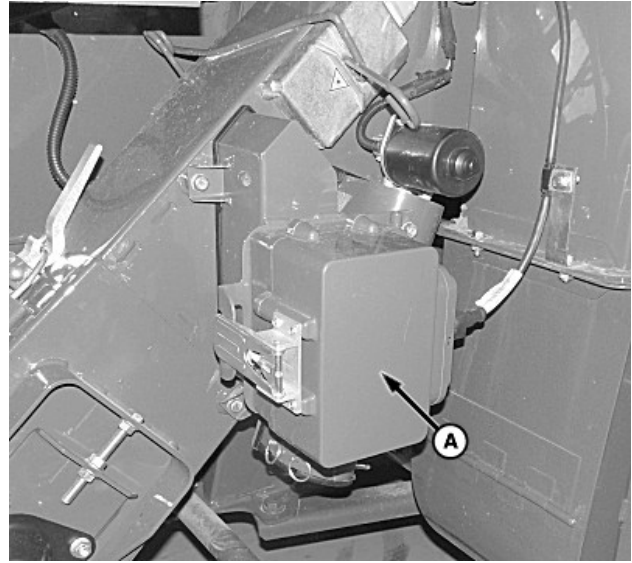

H120250—UN—09DEC16

ActiveVision™ Tailings Elevator Camera (style A)

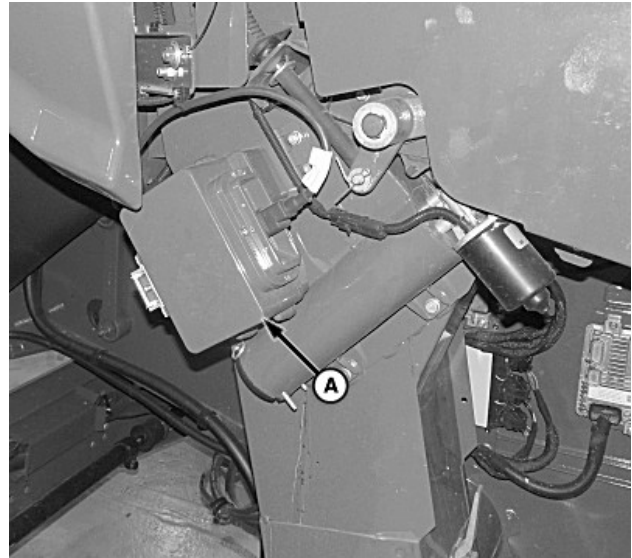

H120251—UN—09DEC16

ActiveVision™ Tailings Elevator Camera (style B)

A—ActiveVision™ Tailings System Camera


CAUTION: Shut OFF engine, set park brake, and remove key before servicing or removing camera.

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ tailings system camera (A).


OUC6075,000507C-19-14MAY21

Tailings System Elevator Sensors

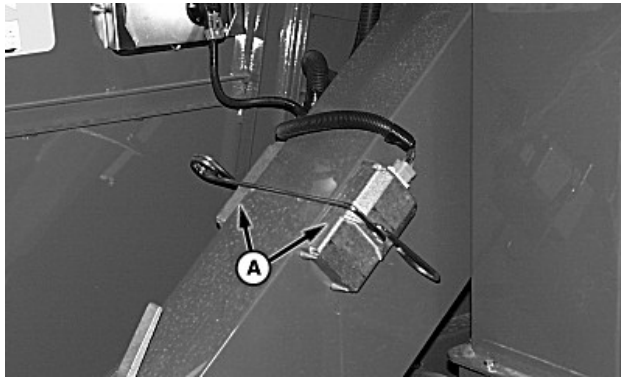

H70551—UN—02JAN02

Style A

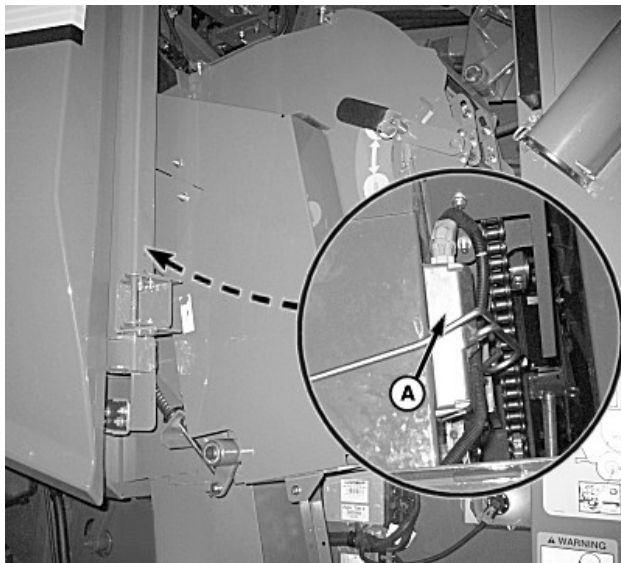

H105437—UN—17MAY12

Style B

A—Tailings Sensors

If tailings sensor display consistently reads full (all bars lit) when not harvesting or empty (no bars lit) when harvesting, it may indicate that the sensor lens is coated with material or seal under lens has allowed dust to enter.

CAUTION: Tailings sensor is a Class 1 laser product and emits laser radiation when powered. When servicing or removing tailings sensors, use caution and do not view beam directly.

Key switch must be turned OFF and tailings sensor must be unplugged before servicing or removing sensors.

DO NOT operate sensor with lens removed. Accessible laser emission when the lens is in place:

- 850 nm
- 500 nsec pulse width

- ≤ 500 Hz rep rate
- < 90 nJ per pulse
- 43 μ W average power
- Class 1 levels (Eye Safe)

Accessible laser emission levels if sensor was operated with lens removed are:

- 850 nm
- 500 nsec pulse width
- ≤ 500 Hz rep rate
- < 380 nJ per pulse
- 188 μ W average power
- Class 3R Levels (small potential for eye injury)


1. Remove tailings sensors (A) to inspect and clean lenses if needed.
2. If lenses are clean, remove and check for dust. If dust is found, clean area and reassemble the lens onto the unit making sure that gasket is sealing.
3. Verify that lens is retained with all previously removed screws prior to installation.

CAUTION: Failure to install plastic cover prior to replacement of sensors on elevator may cause malfunction, incorrect harvest readings, or sensor damage, and could allow for potentially hazardous eye exposure when sensor is removed.

4. Install sensor and test system.
5. If display continues to read full or empty, contact your John Deere dealer.


OUO6075,0004568-19-12DEC16

Tailings System Elevator Paddles

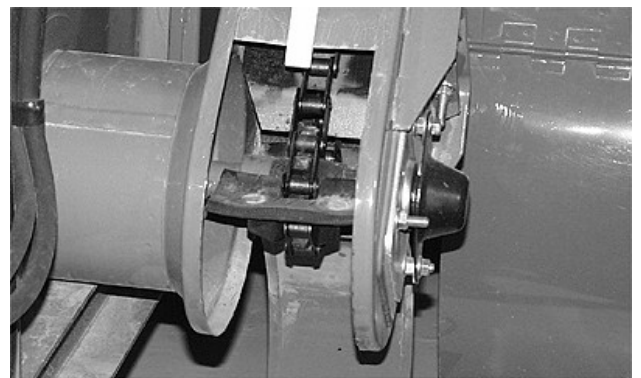

H62187—UN—13JAN00


Style A

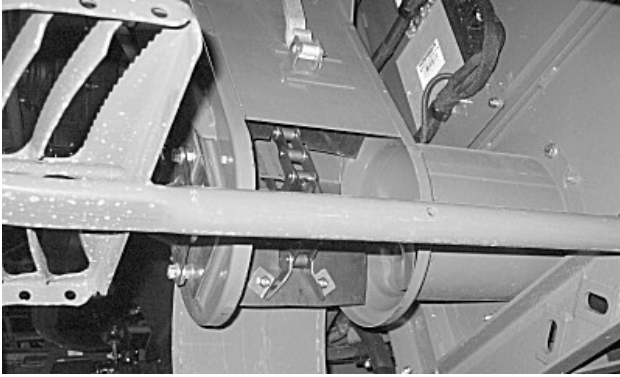

Style B

H97055—UN—22JUN10

Tailings System Elevator Paddle Chain—Adjusting

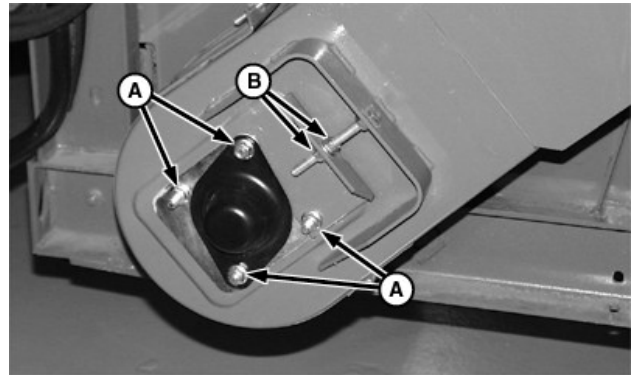

Style A

H62185—UN—13JAN00


CAUTION: Shut OFF engine, set park brake and remove key.

Check elevator chain occasionally for worn or missing paddles.

In muddy conditions, one steel paddle may be installed in the elevator chain to act as a wiper.

OUO6075,0004382-19-10OCT16

Tailings Elevator Drive Belt—Adjusting (Style A)

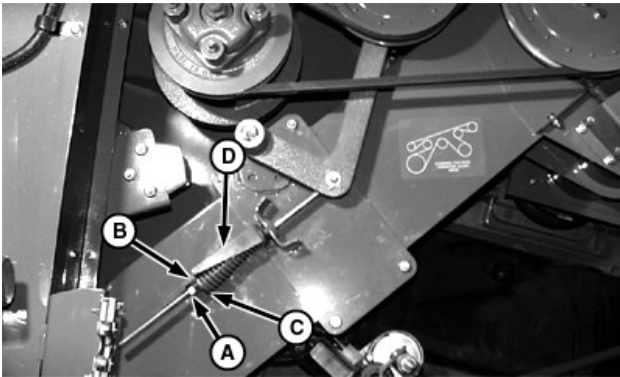

H62186—UN—13JAN00


A—Lock Nut
B—Nut
C—Washer
D—Gauge

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen lock nut (A).

Tighten nut (B) until the washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUO6075,0004381-19-26JAN17

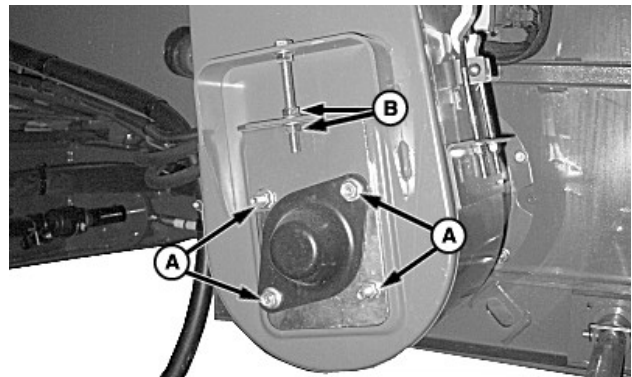

Style B

H97059—UN—22JUN10


A—Nut (4 used)
B—Nut (2 used)

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Release the latch and open the lower door.
2. Remove the nuts from the bearing cover.
3. Loosen nuts (A) and use nuts (B) to adjust the chain. Move the bearing carrier downward to tighten the chain.
4. The elevator chain is adjusted properly when the lower end of the chain can be moved side-to-side on the sprocket but cannot be pulled away from the sprocket. When the chain loosens up to 6 mm (1/4 in) from the sprocket, readjust the chain. After a period of use, it may be necessary to remove a half link to adjust the chain correctly.
5. Install the bearing cover and retain with nuts.
6. Close and latch the lower door.

OUO6075,0004E8E-19-17JUN20

Upper Tailings Auger Drive Chain— Adjusting (Style A)

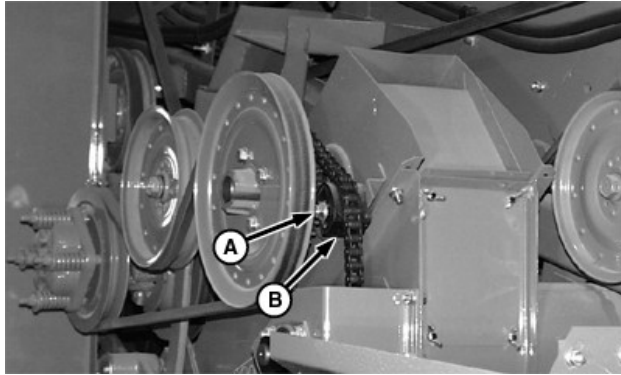

H62189—UN—13JAN00

A—Cap Screw
B—Block

CAUTION: Shut OFF engine, set park brake and remove key.


Loosen cap screw (A) and adjust block (B) to tighten chain. Tighten cap screw when chain is tight.

OUC6075,000437F-19-26JAN17

(C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.


OUC6075,0004377-19-26JAN17

Tailings System Drive Belt—Replacing (Style B)

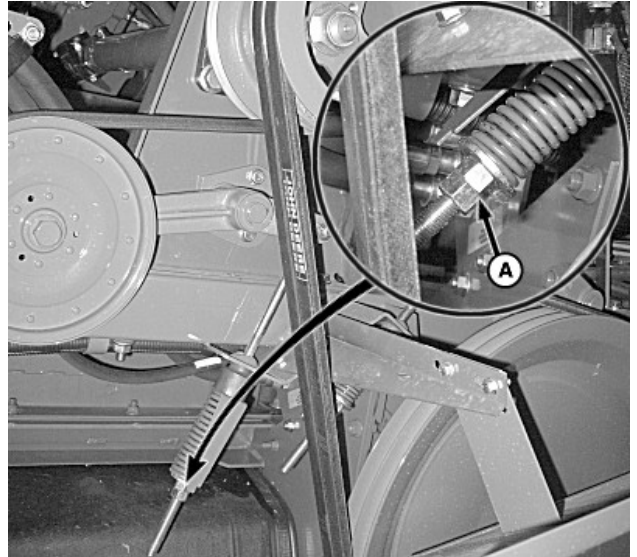

H97015—UN—22JUN10

Tailings System Drive Belt—Adjusting (Style B)

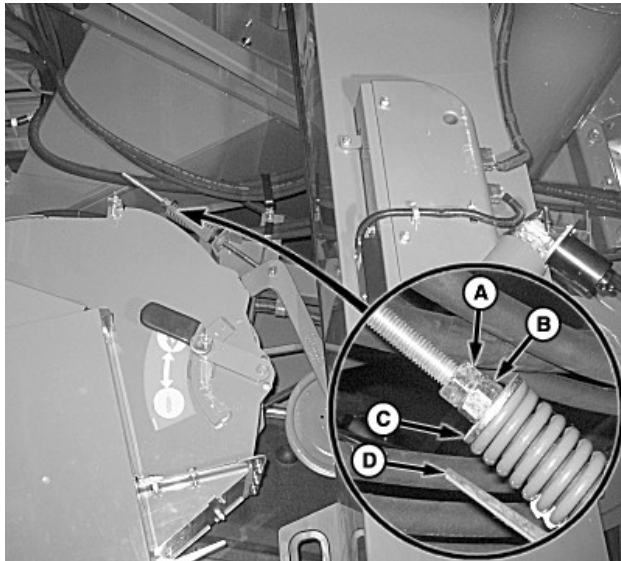


H97014—UN—13SEP10


A—Nut
B—Nut
C—Washer
D—Gauge

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nut (A) and tighten the nut (B) until the washer

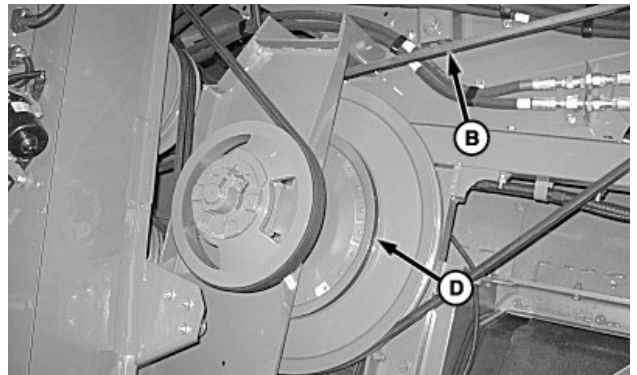

H97016—UN—22JUN10

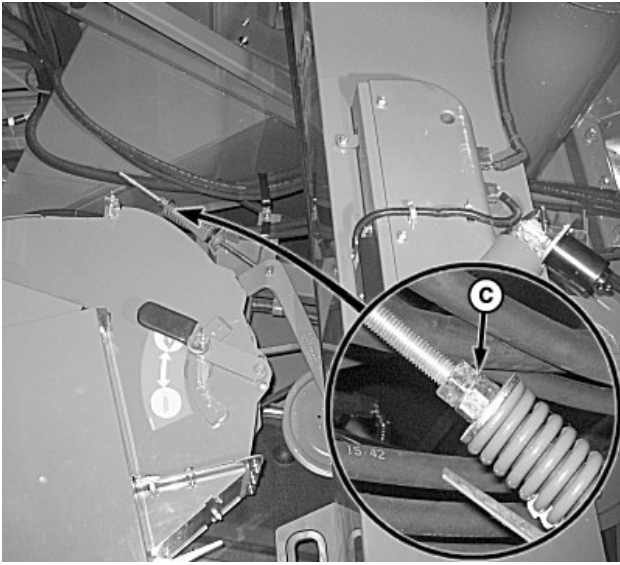

H97017—UN—13SEP10

- A—Nuts
- B—Rear Countershaft Belt
- C—Nuts
- D—Tailings System Drive Belt

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nuts (A) and remove rear countershaft belt (B) from pulley.


Loosen nuts (C) and remove tailings system drive belt (D).

Install replacement belt and adjust the tensioner until washer is positioned between end of gauge and bottom of step.

Install rear countershaft belt onto pulley and adjust the tensioner until washer is positioned between end of gauge and bottom of step.

OUO6075.0004378-19-26JAN17

Tailings System Drive Chain—Adjusting (Style B)

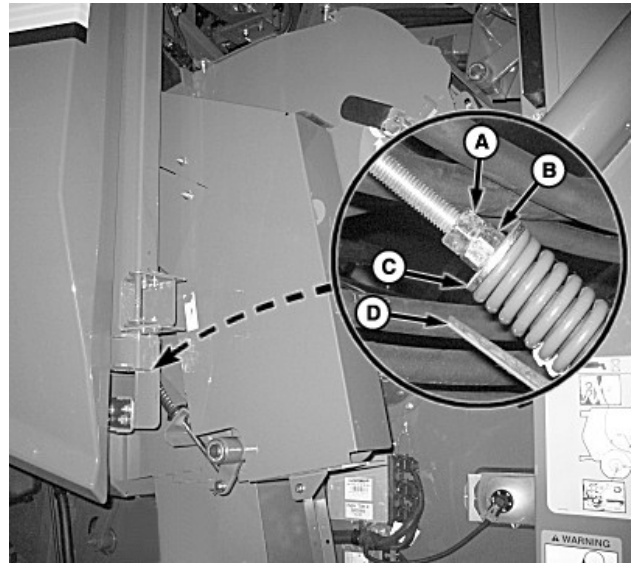

H105438—UN—17MAY12


- A—Nut
- B—Nut
- C—Washer
- D—Gauge

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nut (A) and tighten the nut (B) until the washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OUO6075.0004379-19-26JAN17

Tailings System Drive Chain—Replacing (Style B)

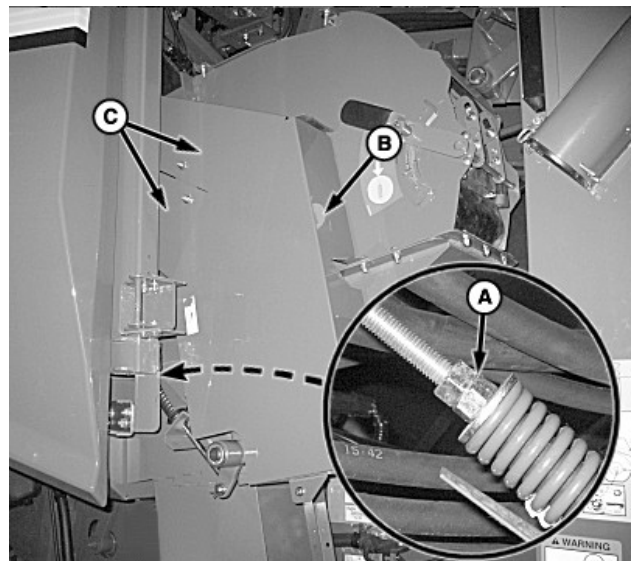


H105439—UN—17MAY12

- A—Nuts

B—Shield
C—Shields

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nuts (A) and remove shields (B and C).

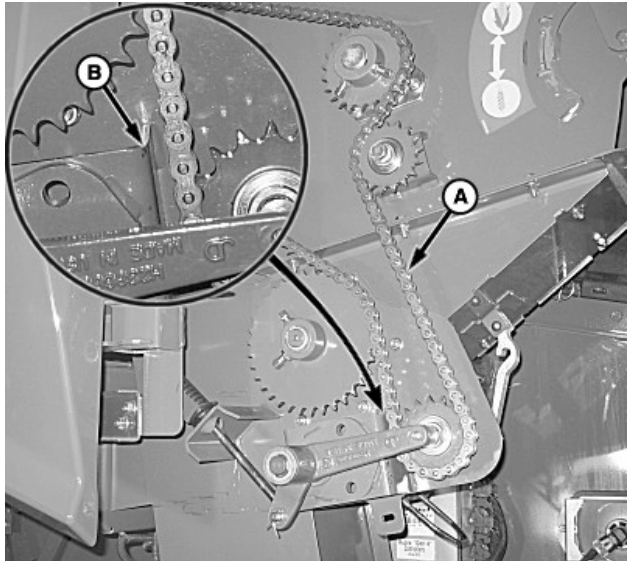

A—Chain
B—Bracket


Replace if fully tensioned chain (A) contacts or is less than 3 mm (1/8 in) away from bracket (B).

Install replacement chain and adjust the tensioner until washer is positioned between end of gauge and bottom of step.

Install previously removed shields.

OJ06075.000437A-19-26JAN17


Tailings System Wear Strips and Rasp Bars —Remove and Install (Style B)

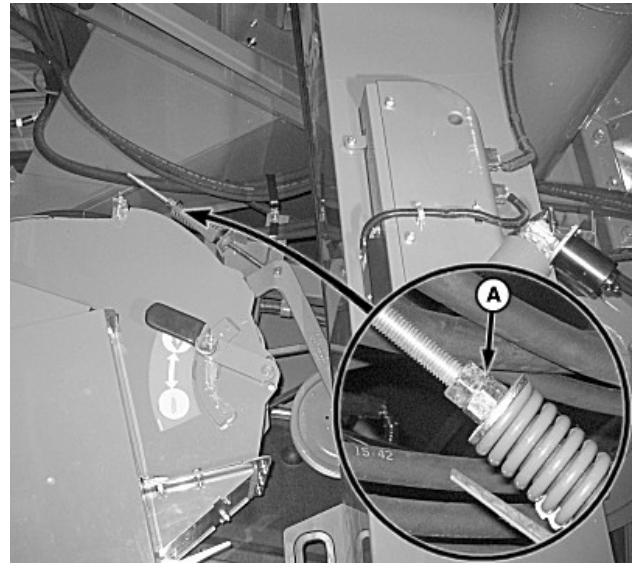


A—Nuts

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nuts (A) to relieve belt tension from the tailings system drive belt.

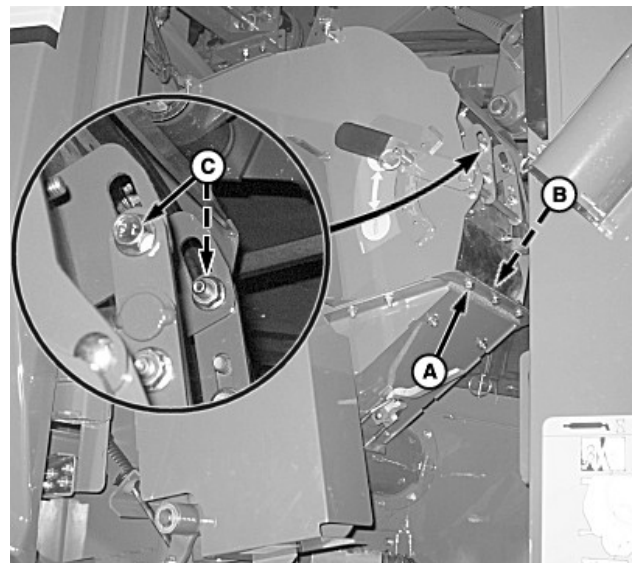

H97069—UN—13SEP10

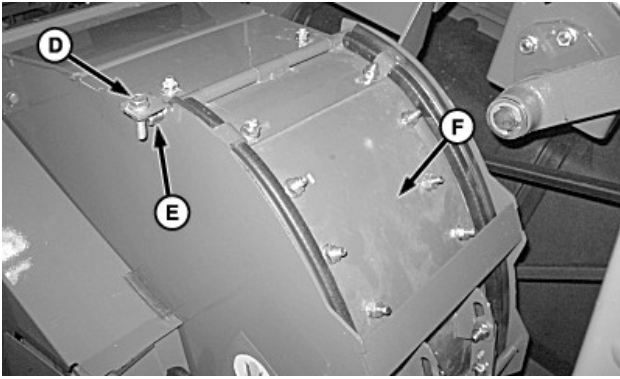


H97070—UN—13SEP10

- A—Cap Screws (3 Used)
- B—Strap
- C—Shoulder Bolts (2 Used)
- D—Cap Screw
- E—Rod
- F—Access Cover

Remove cap screws (A) and strap (B).

Remove shoulder bolts (C), cap screw (D), and rod (E) from access cover (F).

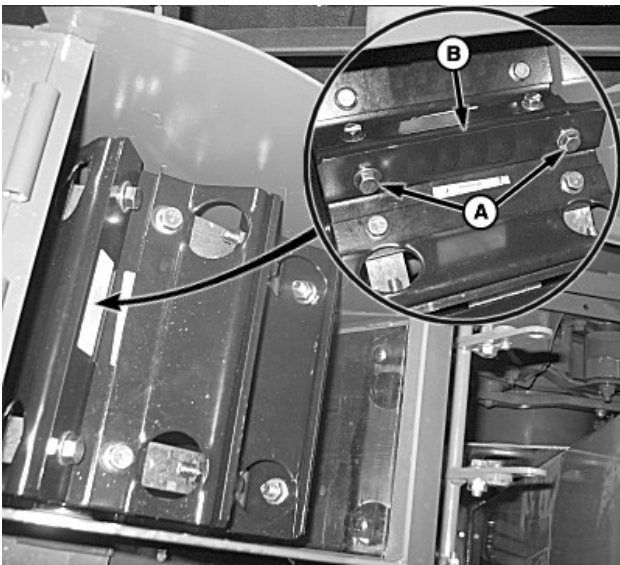

H97072—UN—13SEP10

- A—Cap Screws and Nuts
- B—Wear Strips


Remove cap screws and nuts (A) from wear strips.

Remove and replace wear strips as needed.

Tighten wear strip cap screws to specification.

Specification

Wear Strip Cap
Screws—Torque. 70 N·m
(52 lb·ft)

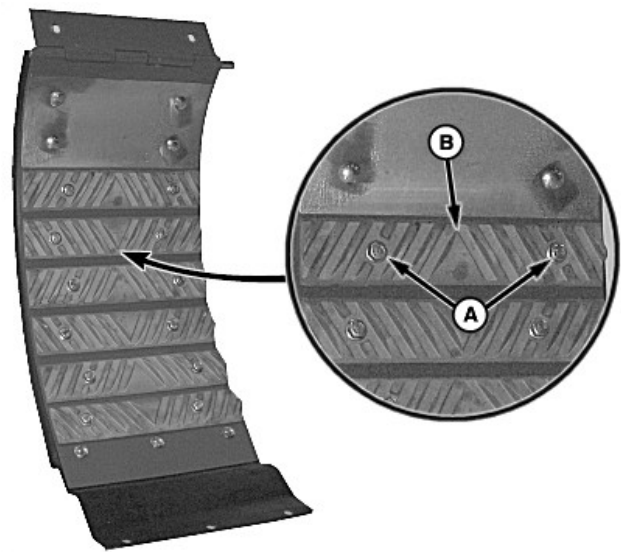

H97084—UN—23JUN10

- A—Cap Screws and Nuts
- B—Rasp Bar

Remove cap screws and nuts (A) from rasp bar (B).

Remove and replace rasp bars as needed.

Tighten rasp bar cap screws to specification.

Specification

Rasp Bar Cap Screws—Torque. 37 N·m ± 7 N·m
(27 lb·ft ± 5 lb·ft)

NOTE: Verify that seals on access cover remain in place when installing onto the tailings system.


Install access cover and retain with rod and cap screw.

Install shoulder bolts and align rubber piece with holes and install strap and cap screws.

Adjust tailings system drive belt tensioner until washer is positioned between end of gauge and bottom of step.

OUC6075,000437B-19-26JAN17

Tailings System Wear Strips and Rasp Bars —Adjusting (Style B)

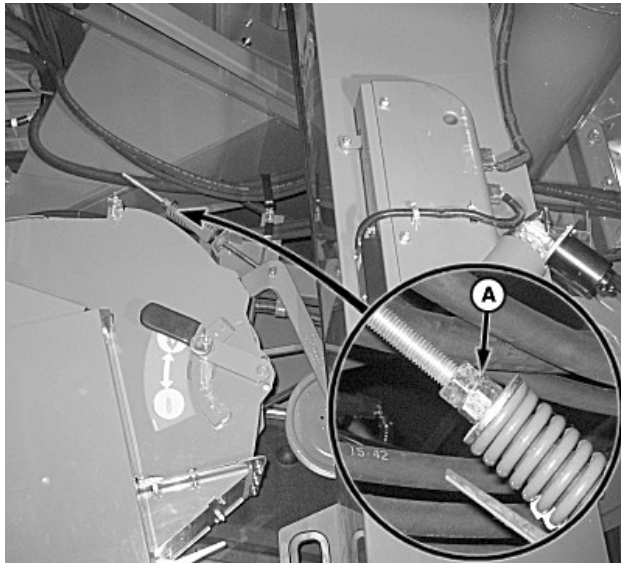


H97073—UN—13SEP10

A—Nuts

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nuts (A) to relieve belt tension from the tailings system drive belt.

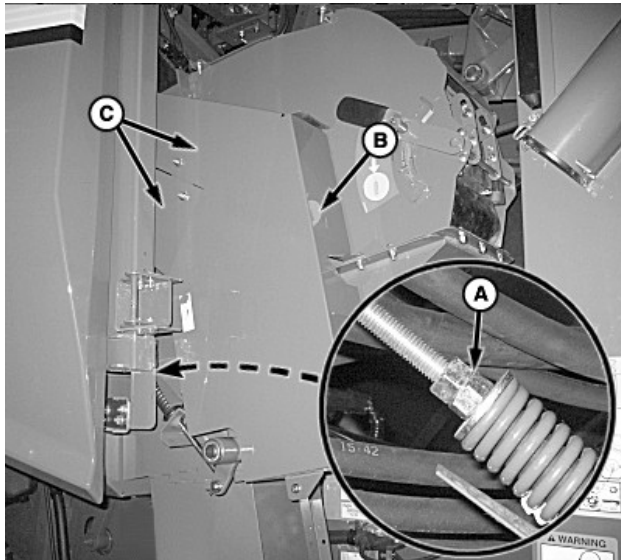


H105439—UN—17MAY12

A—Nuts
B—Shield
C—Shields

Loosen nuts (A) and remove shields (B and C).

Remove drive chain to allow tailings system to turn freely.

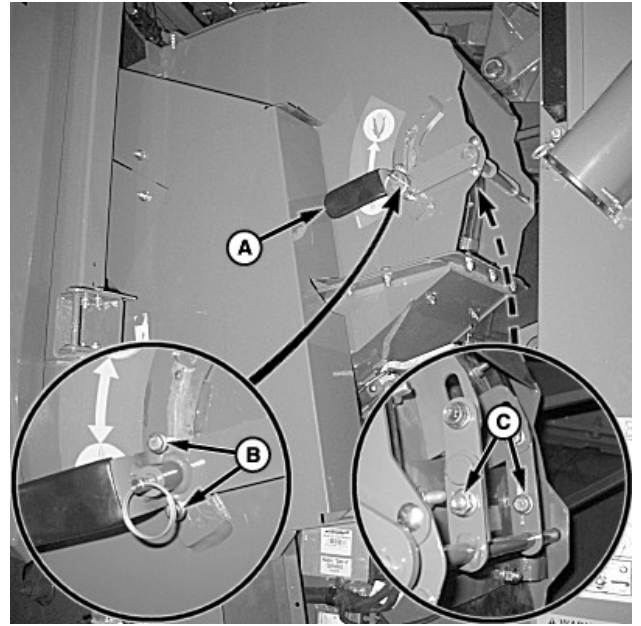

H97094—UN—13SEP10

A—Adjustment Handle
B—Cap Screws, M6
C—Cap Screws and Nuts

NOTE: Moving adjustment handle downward zeros the position between wear strips and rasp bars.

Move adjustment handle (A) downward as shown and install cap screws (B) in existing holes.

Loosen cap screws and nuts (C).

Slowly adjust access door while rotating beater until "ticking" is heard.

Slowly back off until "ticking" stops and tighten cap screws and nuts.


Adjust tailings system drive belt tensioner until washer is positioned between end of gauge and bottom of step.

Install chain and adjust the tensioner until washer is positioned between end of gauge and bottom of step.

Install previously removed shields.

OUO6075.000437C-19-26JAN17

Tailings System Return Concave— Adjusting (Style B)

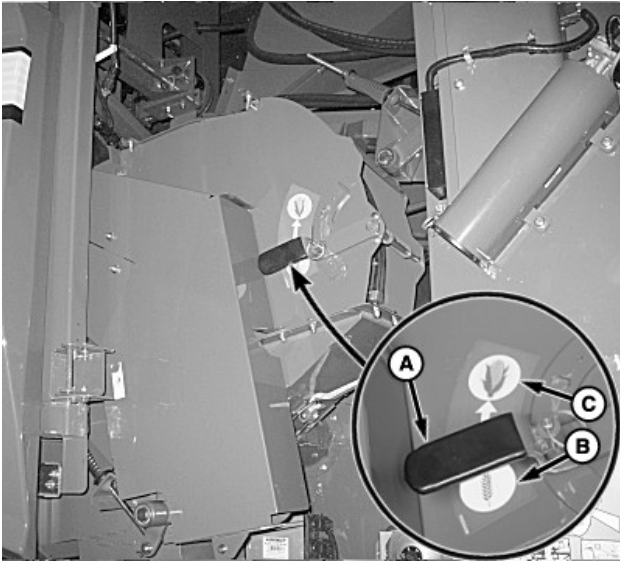

H97103—UN—13SEP10

- A—Crop Selection Handle
- B—Small Grain Position
- C—Large Grain Position

CAUTION: Shut OFF engine, set park brake and remove key.

IMPORTANT: To prevent personal injury or machine damage do not move crop selection handle when machine is running.

NOTE: See Crop Settings section for recommended tailings system concave position settings.

Small Grain Position (B):


Crop selection handle (A) should be in "LOWER" position, when harvesting small grain crops.

Large Grain Position (C):

Crop selection handle (A) should be in "UPPER" position, when harvesting large crops or damage-sensitive crops.

OUO6075,000467F-19-20MAR17

Tailings System Auger Cleanout Door (Style B)

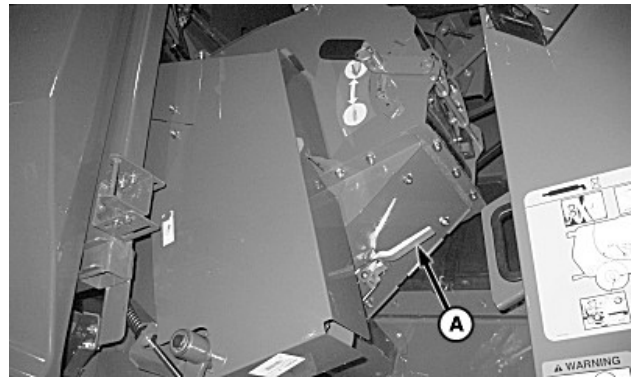

H97095—UN—13SEP10


- A—Handle

CAUTION: Shut OFF engine, set park brake and remove key.

Use handle (A) to open tailings system auger cleanout door and remove material as needed.

OUO6075,000437E-19-26JAN17

Drive Belts—Left-Hand

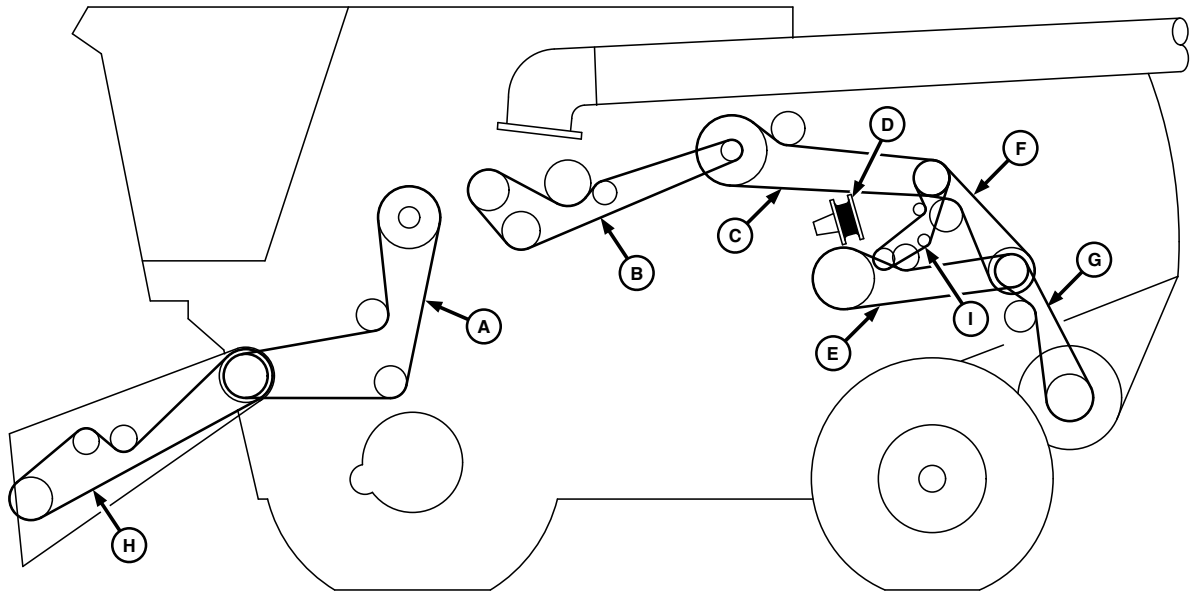


H107018—UN—25FEB13

Style A			
A	Header and Reel Pump Standard/High Capacity Belt	F	Countershaft, Discharge Beater and Chopper Belt
B	Unloading Auger System, #60 Roller Chain	G	Straw Chopper Belts
C	Unloading Auger System Belt	H	Fixed Speed Feeder House Drive Belt Feeder House Variable Drive Standard/High Capacity Belt
D	Separator Variable Drive Belt	I	Engine Debris Management Belt (Final Tier 4/Stage V)
E	Discharge Beater Belt (Non-Rice Machine) Discharge Beater Belts (Rice Machine)		
Style B			
A	Header and Reel Pump Standard/High Capacity Belt or CommandTouch™ Multi-Speed Feeder House Drive Belt (Option)		
B	Unloading Auger System, #60 Roller Chain (10 572 L (300 bu) Grain Tank) Unloading Auger System, #80 Roller Chain (14 096 L (400 bu) Grain Tank)		
C	Unloading Auger System Belt		
D	Separator Variable Drive Belt		
E	Discharge Beater Belts		
F	Countershaft, Discharge Beater and Chopper Belt		
G	Straw Chopper Belts		
H	Fixed Speed Feeder House Drive Belt Feeder House Variable Drive Standard/High Capacity Belt or CommandTouch™ Multi-Speed Feeder House Drive Belt (Option)		
I	Engine Debris Management Belt (Final Tier 4/Stage V)		

CommandTouch is a trademark of Deere & Company

OUO6075.00047E1-19-13NOV17

Drive Belts—Right-Hand (Style A)

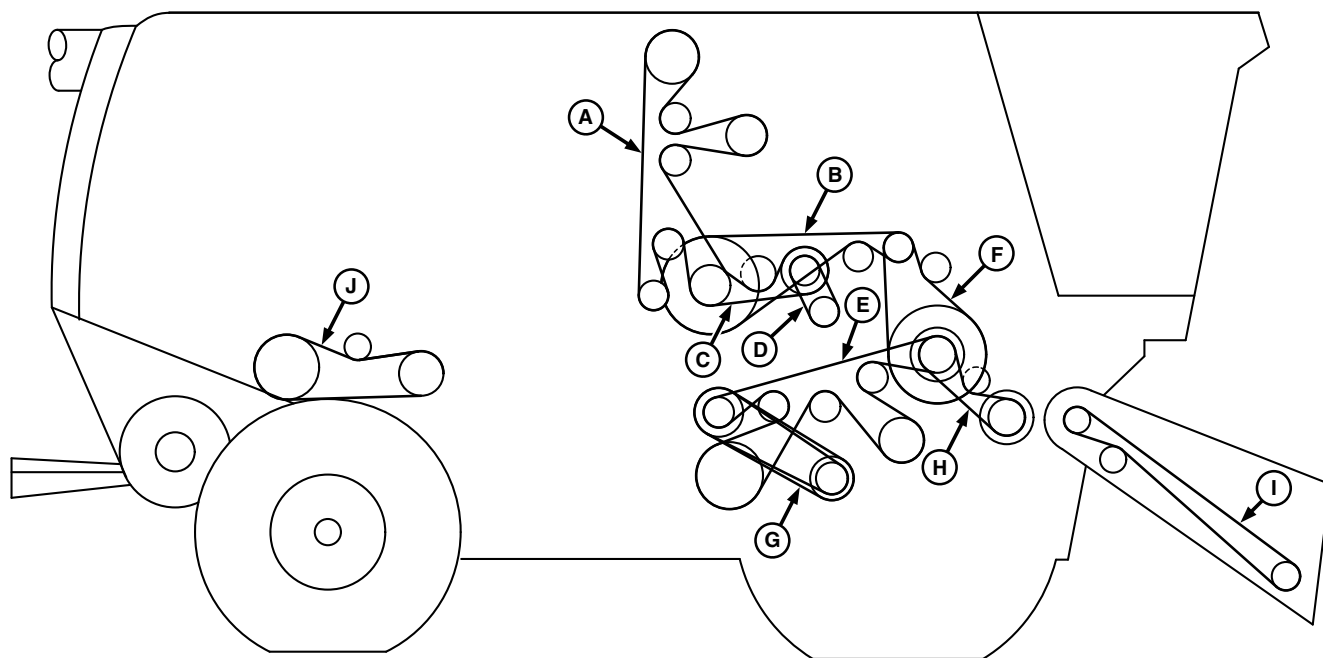


H99322—UN—10DEC10

A—Clean Grain Elevator Belt
B—Rear Right-Hand Jackshaft Belt
C—Tailings Auger and Elevator Belt
D—Tailings Return Auger, #50 Chain
E—Shoe Fan and Conveyor Augers Belt

F—Front Right-Hand Jackshaft Belt
G—Cleaning Fan Variable Belt
H—Feed Accelerator Belt
I—Feeder Conveyor (Chain), #60 Chain
J—Overshot Beater Drive Belt (If Equipped)

OJ06075,0004375-19-26JAN17

Drive Belts—Right-Hand (Style B)

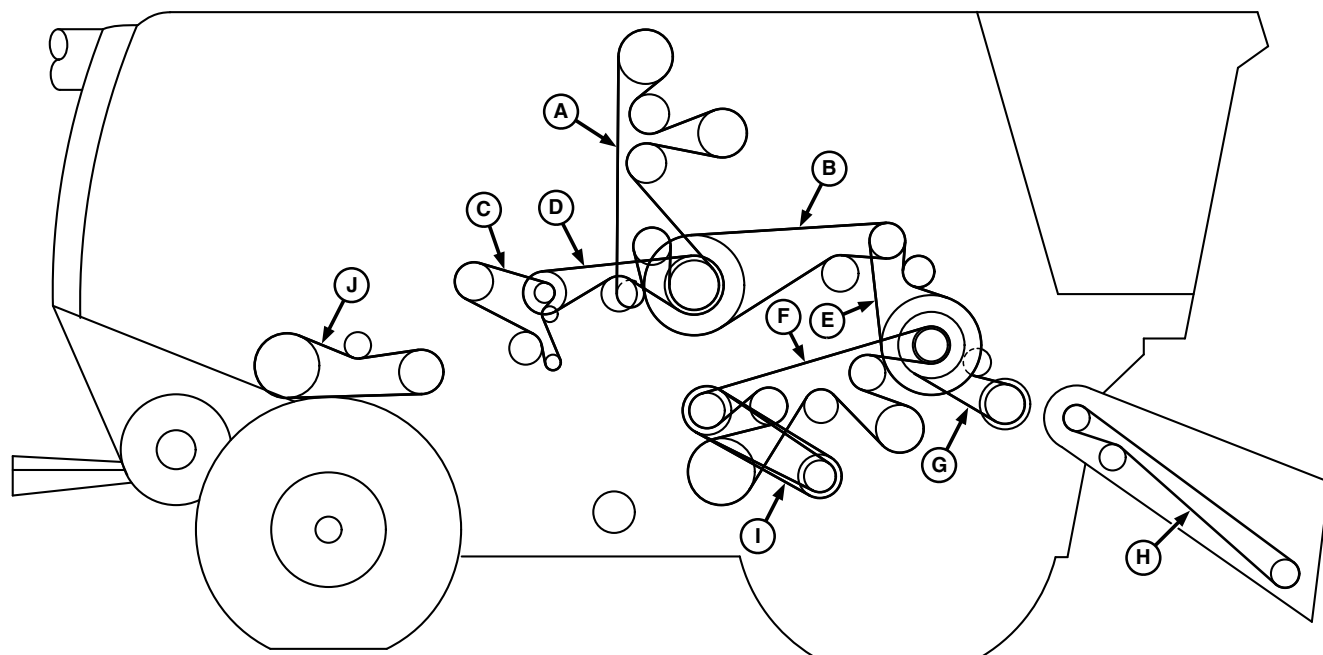

H96904—UN—16JUN10

A—Clean Grain Elevator Belt

B—Rear Right-Hand Jackshaft Belt

C—Tailings Elevator/Upper Auger #60 Roller Chain
D—Tailings System Drive Belt
E—Front Right-Hand Jackshaft Belt
F—Shoe Fan and Conveyor Augers Belt

G—Feed Accelerator Belt
H—Feeder Conveyor (Chain), #60 Chain
I—Cleaning Fan Variable Belt
J—Overshot Beater Drive Belt (Optional)

OUO6075,0004374-19-26JAN17

Feed Accelerator—Unplugging

NOTE: Use Feed Accelerator unplugging tool if available. See your John Deere dealer for further information.

1. Disengage separator.
2. Shut OFF engine, set park brake and remove key.
3. Shift separator drive gear case to low speed.
4. Remove belt tension from feed accelerator drive by pushing lever up and out from the notch in the bracket.
5. Open stone trap door and clean. Leave stone trap door open.
6. Sound horn, start engine, and set engine speed at mid idle.
7. Engage separator to clean out material, discharge beater, and chopper.
8. Disengage separator.
9. Shut OFF engine, set park brake and remove key.
10. Remove feed accelerator access covers and remove crop material from accelerator area. After clearing plug, rotate accelerator one revolution to be sure that it is free.
11. Engage feed accelerator drive by pushing lever up and into the notch in the bracket.
12. Sound horn, start engine, and set engine speed at mid idle.
13. Engage separator. If the plug does not clear, disengage separator and repeat steps 9—13.
14. Shut OFF engine, set park brake and remove key.
15. Close stone trap door and set concave spacing back to original setting. Replace feed accelerator access covers.
16. If initially operating in high speed, shift separator drive gear case and adjust separator speed back to initial setting and resume operation.

OUO6075,00046EC-19-29MAR17

Separator—Unplugging

Disengage separator.

NOTE: Note concave setting and adjust concave to wide open position.

Shut OFF engine, set park brake and remove key.

Shift separator drive gear case to neutral position.

Remove belt tension from feed accelerator drive by pushing lever up and out from the notch in the bracket.

Open stone trap door and clean. Close stone trap door.

Sound horn, start engine, and set engine speed at mid idle.

Engage separator to clean out material from the discharge beater.

Adjust separator variable belt to mid range.

Disengage separator.

Shut OFF engine, set park brake and remove key.

Shift separator drive gear case to low speed.

Sound horn, start engine, and set engine speed at mid idle.

IMPORTANT: To prevent damage to main engine gear case and wet clutch, do not engage separator clutch with a plugged separator more than three times in a period of 3 minutes.

Wait for 1 minute between plugged separator engagements while idling machine.

Engage separator to clear the separator. If the plug does not clear, disengage the separator.

If the separator cannot be power unplugged, it is necessary to remove concaves and grates and remove some straw by hand. After clearing plug, replace concaves and grates.

After separator is unplugged, set concave spacing back to original setting.

Engage feed accelerator drive by pushing lever up and into the notch in the bracket.

If originally operating in high speed, shift separator gear case to high-speed position. Adjust separator speed back to original setting and resume operation.

OUO6075,0004939-19-12APR18

Discharge Beater—Unplugging

NOTE: Use Discharge Beater unplugging tool if available. See your John Deere dealer for further information.

1. Disengage header and separator.


NOTE: Note concave setting and adjust concave to wide open position.

2. Shut OFF engine, set park brake and remove key.
3. Raise straw chopper.
4. Remove covers to access discharge beater area and remove crop material from beater area.
5. Remove shields over the discharge beater drive pulley, so the pulley can be rotated by hand.
6. After clearing plug, rotate beater one revolution to be sure that it is free.
7. Shift separator drive gear case to neutral position.
8. Remove belt tension from feed accelerator drive by pushing lever up and out from the notch in the bracket.
9. Sound horn, start engine, and set engine speed at mid idle.
10. Engage separator to clean out material from discharge beater and chopper.
11. Disengage separator.
12. Shut OFF engine, set park brake and remove key.
13. Shift separator drive gear case to original speed.
14. Engage feed accelerator drive by pushing lever up and into the notch in the bracket.
15. Install all shields previously removed.
16. Lower straw chopper to operating position.
17. Sound horn, start engine, and set engine speed at mid idle.
18. Engage separator.
19. Set concave spacing back to initial setting and resume operation.

OUO6075,00046EE-19-29MAR17


Residue Management

Residue Material Handling Option (Intermediate/Deluxe Residue)

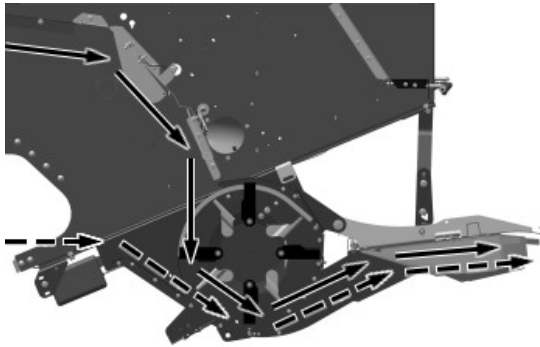

Chopping Deluxe

H125189—UN—15OCT18

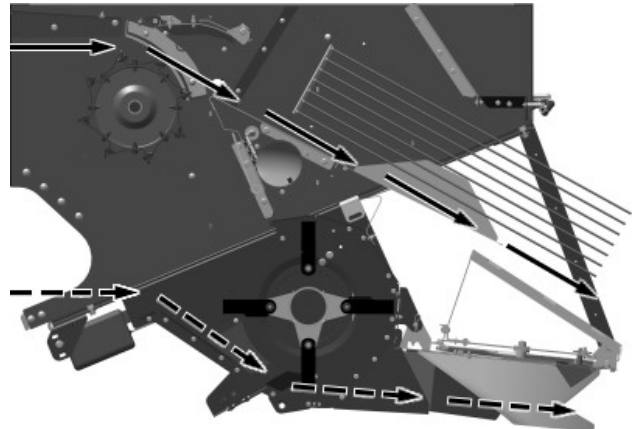


Windrowing Premium

H118033—UN—05APR16

NOTE: Solid arrows represent flow of straw. Dashed arrows represent flow of chaff.

Drop straw and spread chaff capability.

OUO6075,00049BD-19-31MAY18

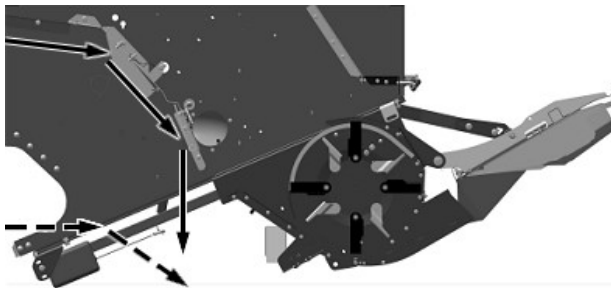

Windrowing Deluxe


H125190—UN—22OCT18

NOTE: Solid arrows represent flow of straw. Dashed arrows represent flow of chaff.

Straw and chaff get laid down together in a windrow.

OUO6075,0004A2E-19-15OCT18


Residue Material Handling Option (Premium Residue)

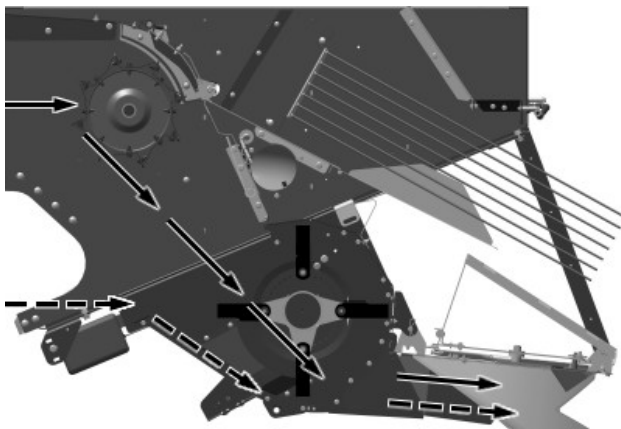

Chopping Premium


H117674—UN—11MAR16

Residue Material Handling Option (Straw Spreader)

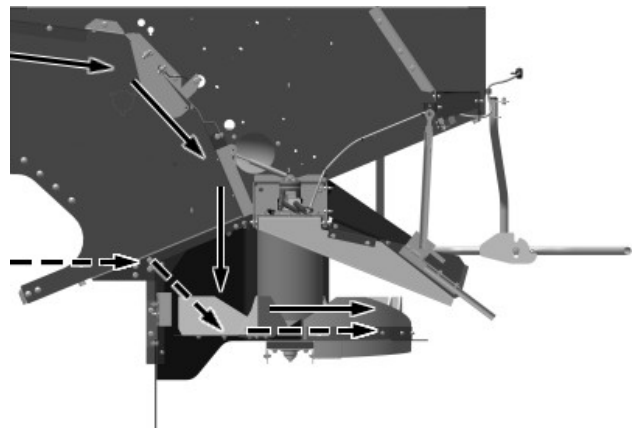

Spreader Position

H117675—UN—11MAR16

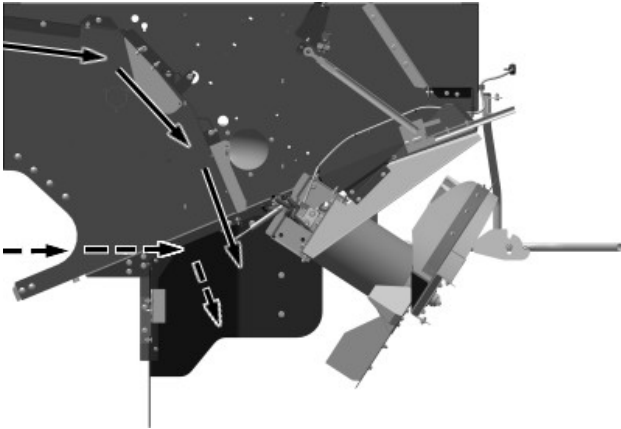

Windrow Position


H118034—UN—05APR16

NOTE: Solid arrows represent flow of straw. Dashed arrows represent flow of chaff.

Material is spread and not chopped

OOU6075,00049BE-19-31MAY18

General Windrowing Information (Intermediate/Deluxe Residue)

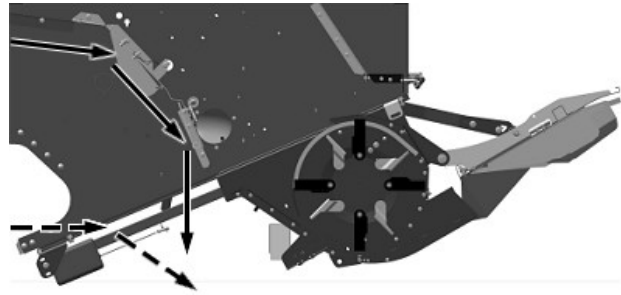

Windrowing Intermediate/Deluxe

H124423—UN—30MAY18


NOTE: Solid arrows represent flow of straw. Dashed arrows represent flow of chaff.

- Raise chopper fully. See Chopper Adjusting switch later in this section.
- Shift chopper drive into neutral position. See Chopper Drive Speeds—Changing later in this section.

OOU6075,00049B9-19-18JUN18

Straw Bumper—Adjusting

Windrow Deflector Adjust

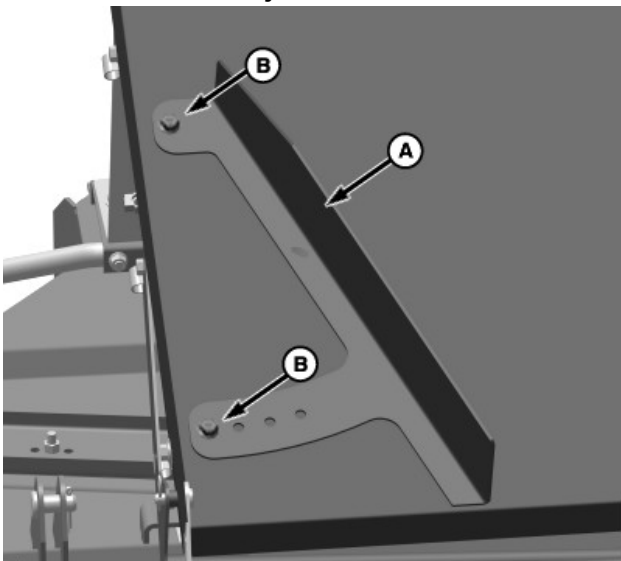


H124006—UN—30APR18

A—Windrow Deflector
B—Cap Screw, M8 x 25 and Nut, M8 (2 used)

Adjust the angle of the windrow deflector (A) by removing and installing cap screws and nuts (B) as needed.

Straw Bumper Angle Adjust

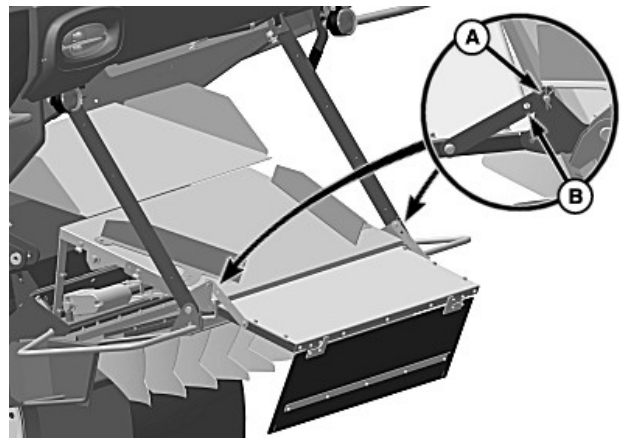


H135706—UN—10JUN22

A—Adjustment Hole
B—Adjustment Hole

Adjustment hole (A) sets the straw bumper to the same angle as the cover.

Adjustment hole (B) sets the straw bumper angle flat to the ground.

Curtain Storage Position

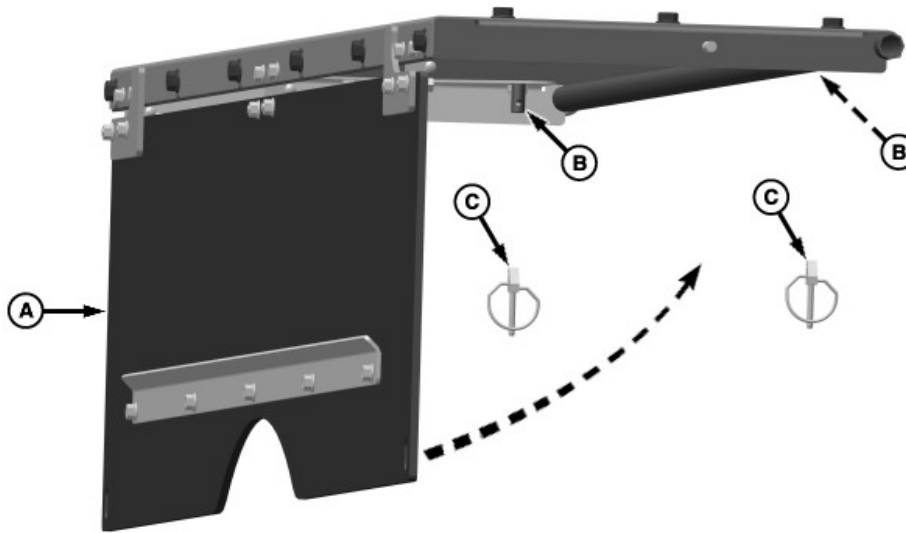

A—Curtain
B—Pin (2 used)

C—Quick-Lock Pin (2 used)


H124075—UN—27APR18

1. Remove quick-lock pins (C) from pins (B).


2. Raise curtain (A) to pins and retain using quick-lock pins.

mh69740,1653407868378-19-17JUN22


Crop Diverter Vanes—Adjusting

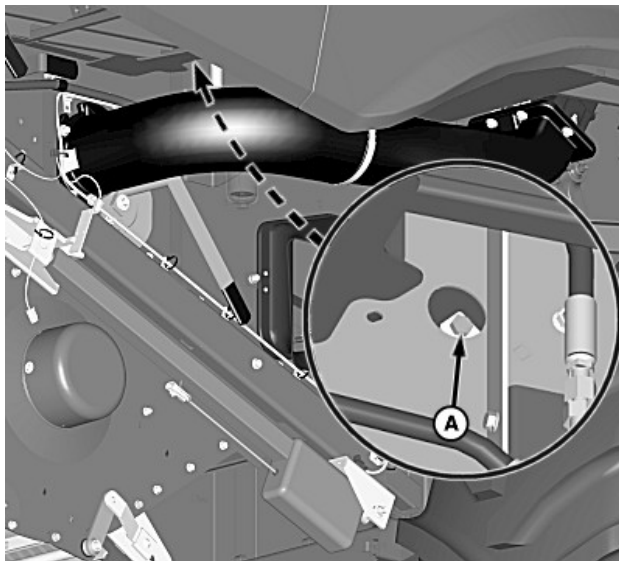

H98165—UN—21SEP10

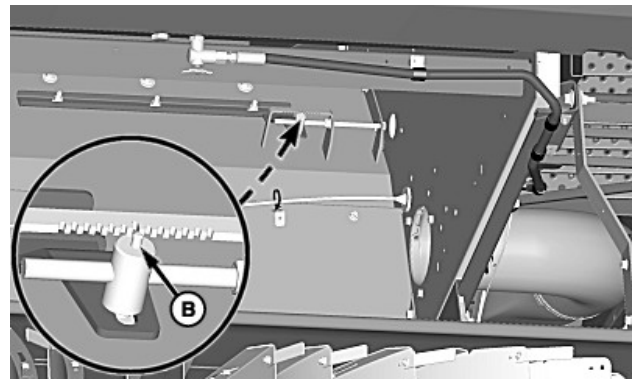

H98166—UN—21SEP10

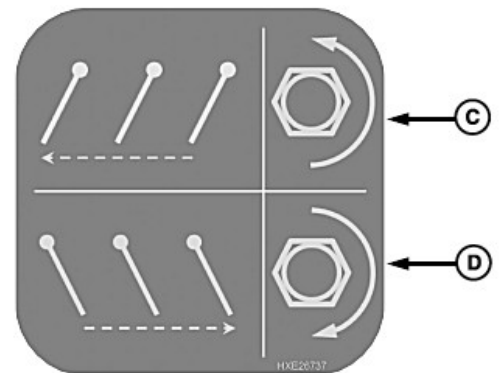

H98708—UN—19OCT10

A—Cap Screw
B—Indicator
C—Counterclockwise
D—Clockwise

CAUTION: Shut OFF engine, set parking brake and remove key.


Turning cap screw (A) adjusts indicator (B) and moves crop diverter vanes.

- Counterclockwise (C) - moves vanes towards left-hand side of machine.
- Clockwise (D) - moves vanes towards right-hand side of machine.

NOTE: Adjust vanes until crop material distribution is even across body width.

OUC6075,00009CD-19-17NOV10

General Windrowing Information (Premium Residue)

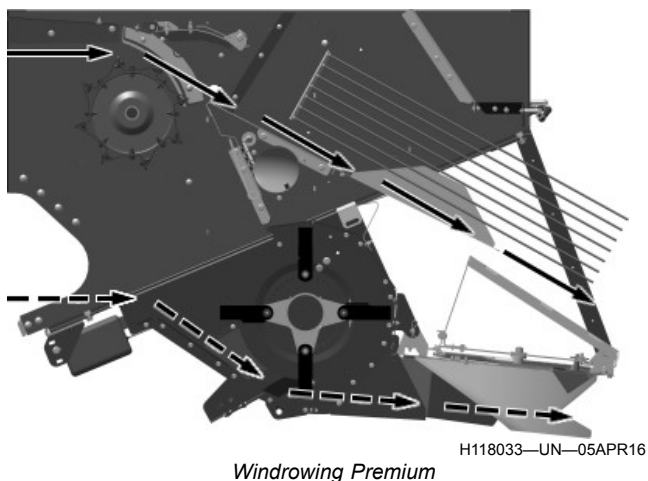


NOTE: Solid arrows represent flow of straw. Dashed arrows represent flow of chaff.

- To windrow straw and spread chaff, open chop-to-drop door (Premium Model). See Residue Management Application Help or Operator's Station Help for further information.
- If harvesting low straw volume crops, lower cob deflector into corn position. See Crop Diverter in this section for further information.

OUC6075,00046FF-19-05APR17

Windrow Convergence Rakes

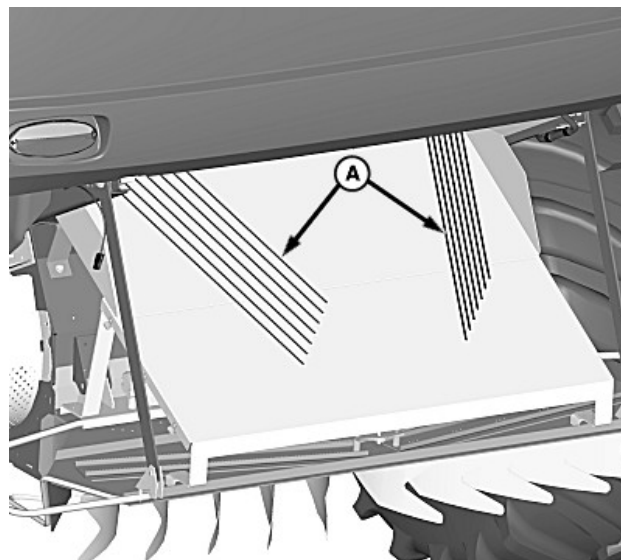


A—Convergence Rakes

Convergence rakes (A) are used to divert cut straw material into a narrower windrow.

OUC6075,0004700-19-05APR17

Tailboard—Adjusting (Deluxe Residue)

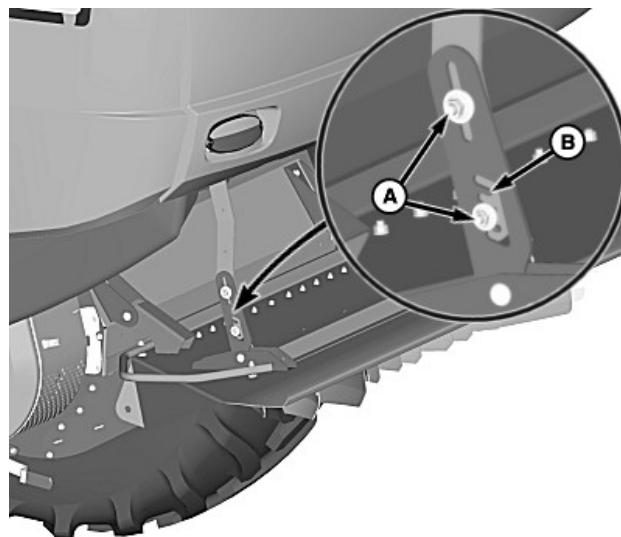

A—Cap Screws (4 Used)
B—Notches

CAUTION: Shut OFF engine, set park brake and remove key.


Loosen cap screws (A) on both sides of tailboard.

Adjust tailboard up or down in notches (B) to control straw spread width.

Tighten cap screws on both sides of tailboard to lock into position.

SS43267,000060A-19-04JUN15

Tailboard Vanes (Manual Adjust)— Adjusting (Deluxe Residue)

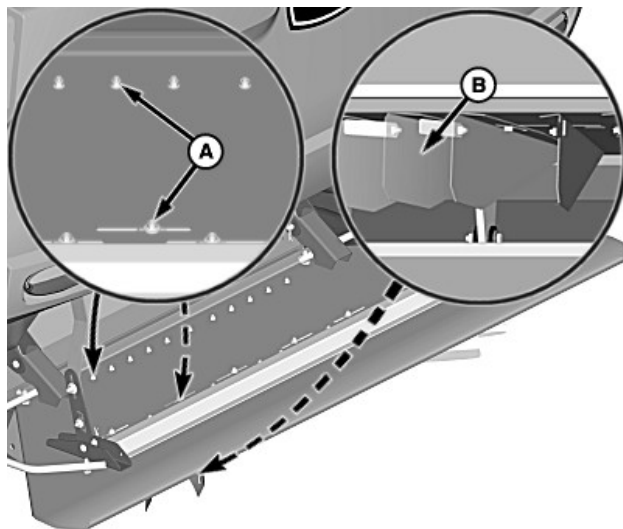

A—Nuts
B—Tailboard Vane

H98133—UN—20SEP10

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Adjustments can be made to tailboard vanes if factory settings do not produce adequate spread width or even distribution.


Tailboard vanes are factory set for 9.1 m (30 ft.) platforms.

Loosen nuts (A) and adjust tailboard vane (B) as needed to control distribution of straw spread width. See Tailboard Vanes (Manual Adjust)—Factory Settings later in this section.

Tighten nuts and repeat as needed on remaining tailboard vanes.

SS43267,000060B-19-04JUN15

Tailboard Vanes (Electric Motor)— Adjusting (Deluxe Residue)

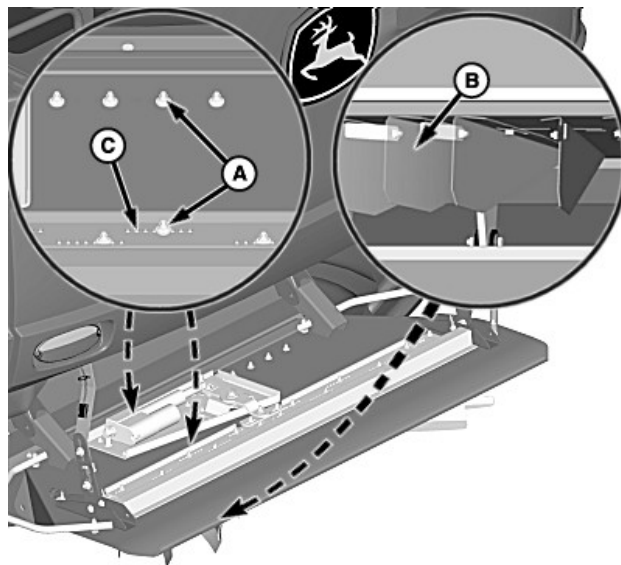

H98134—UN—21SEP10

A—Nuts
B—Tailboard Vane
C—Holes

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Adjustments can be made to the tailboard vanes if the factory settings do not produce adequate spread width or even distribution.


Tailboard vanes are factory set for 9.1 m (30 ft) platforms.

Loosen nuts (A) and adjust the tailboard vane (B) to different holes (C) if needed to control distribution of straw spread width. See Tailboard Vanes (Electrical Adjust)—Factory Settings later in this section.

1. Tighten nuts on tailboard vanes.
2. Loosen nut one complete turn at the front of the tailboard vane.
3. Loosen nut 1-1/2 turns at the rear of the tailboard vane.
4. Verify that the tailboard vane is easily moveable.
5. Repeat as needed on remaining tailboard vanes

OUO6075,0004702-19-05APR17

Tailboard Vanes (Manual Adjust)—Factory Settings (Deluxe Residue)

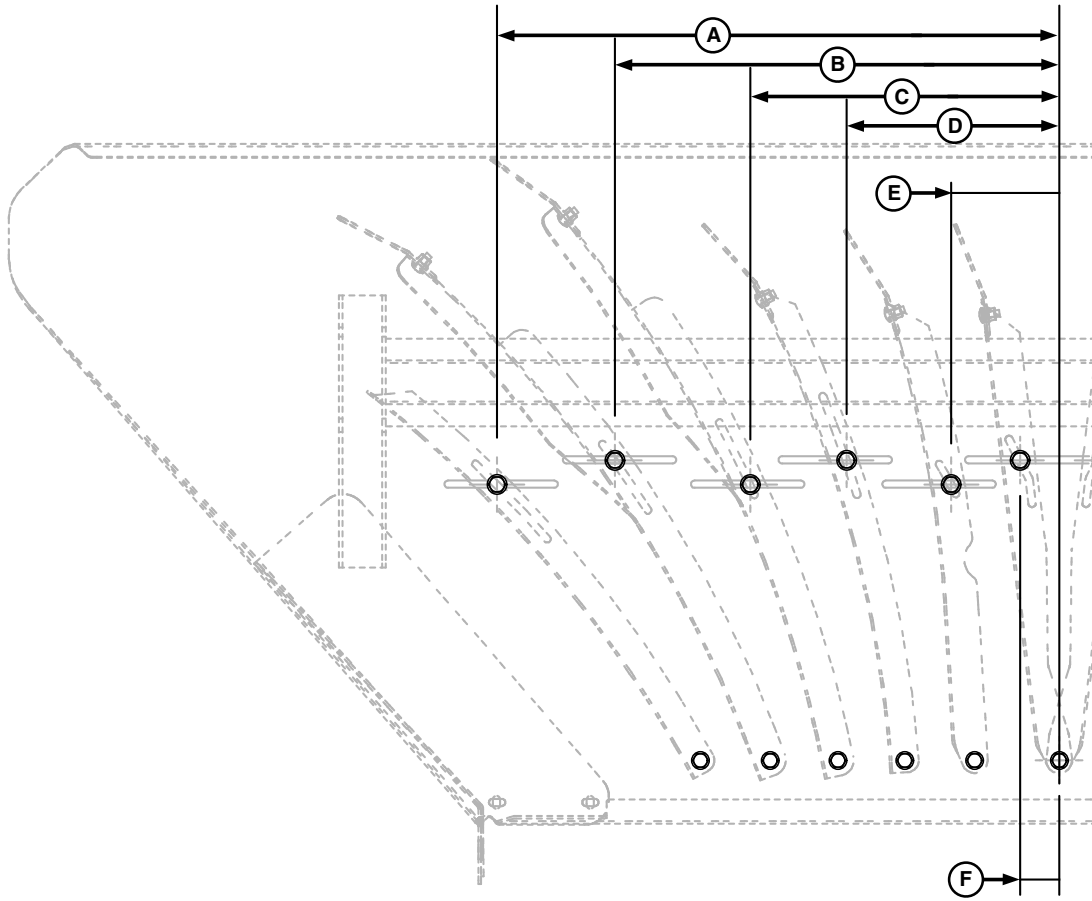

H100407—UN—23FEB11


Tailboard Vane Settings For 9.1 m (30 ft.) Platforms (View From Above Tailboard)

A—693 mm (27.3 in.)
B—548 mm (21.6 in.)
C—382 mm (15 in.)

D—262 mm (10.3 in.)
E—133 mm (5.2 in.)
F—48 mm (1.9 in.)

SS43267,000060D-19-04JUN15

Tailboard Vanes (Electrical Adjust)—Factory Settings (Deluxe Residue)

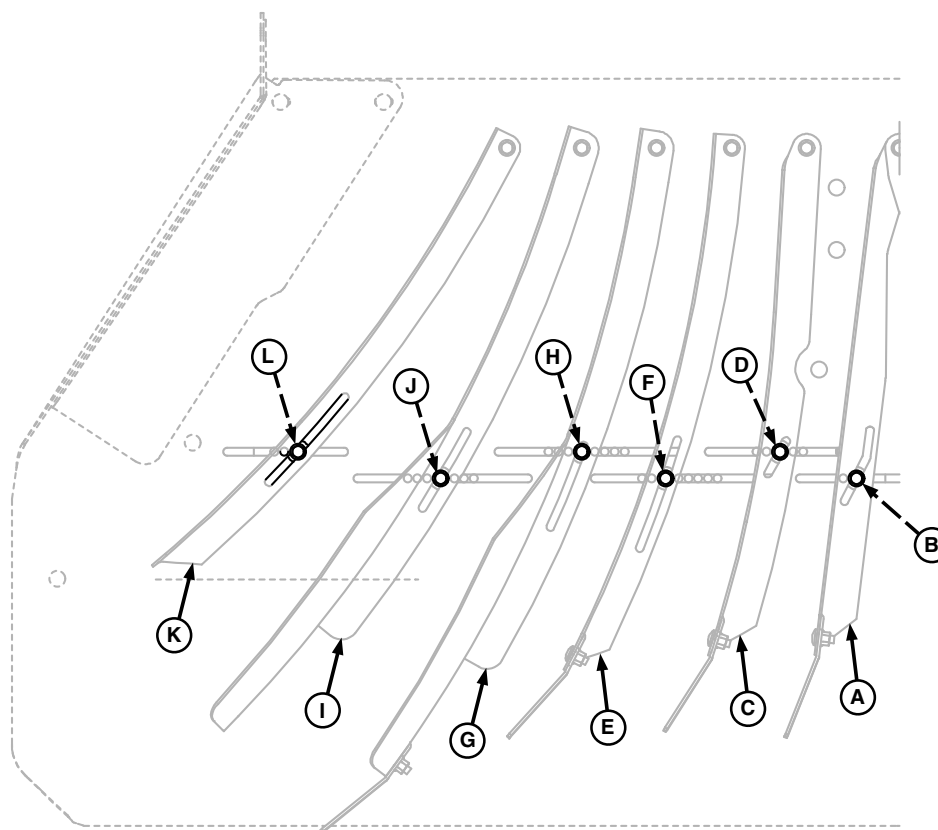

Tailboard Vane Settings For 9.1 m (30 ft.) Platforms (View From Below Tailboard)

H100408—UN—23FEB11

A—Vane 1
B—Second Hole
C—Vane 2
D—Third Hole
E—Vane 3
F—Sixth Hole


G—Vane 4
H—Fifth Hole
I—Vane 5
J—Fourth Hole
K—Vane 6
L—First Hole

NOTE: Hole locations are from center of tailboard outward when adjusting tailboard vanes.

If 7.6 m (25 ft.) spread width pattern is desired, see your John Deere dealer for further information on an optional kit.

SS43267,000060E-19-04JUN15

PowerCast™ Tailboard—Adjusting (Optional)

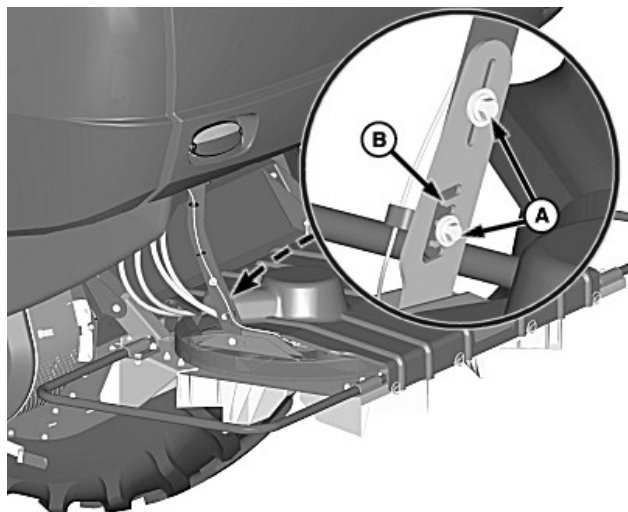

A—Cap Screws (4 used)
B—Notches

H98132—UN—20SEP10

CAUTION: Do not let anyone stand behind spreading tailboard while it is running. Shut OFF engine, set park brake and remove key before adjusting.

For best performance, PowerCast™ tailboard should always run level or parallel to ground. Depending on tire combinations, it may be necessary to raise or lower tailboard.

Park machine on level ground.


Loosen cap screws (A) on both sides of the PowerCast™ tailboard.

Adjust PowerCast™ tailboard up or down in notches (B) to level the PowerCast™ tailboard.

Tighten cap screws on both sides of the PowerCast™ tailboard to lock into position.

OUC6075,0004701-19-05APR17

PowerCast™ Tailboard Blade—Replacing (Optional)

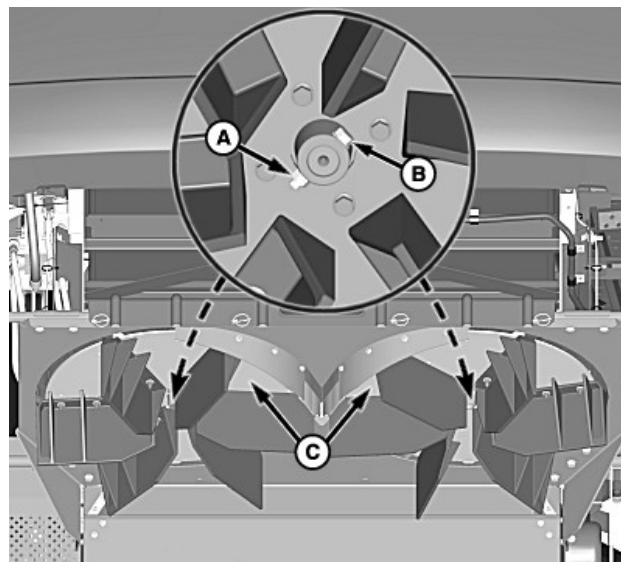


H98170—UN—22SEP10

A—Lock Nut
B—Cap Screw
C—Spreader Disk Assemblies

CAUTION: Disk assemblies weigh approximately 13 kg (29 lb).

IMPORTANT: Disk assemblies are left-handed and right-handed. Mark disk assembly locations before removing.

Remove lock nut (A) and cap screw (B) from spreader disk assemblies (C).

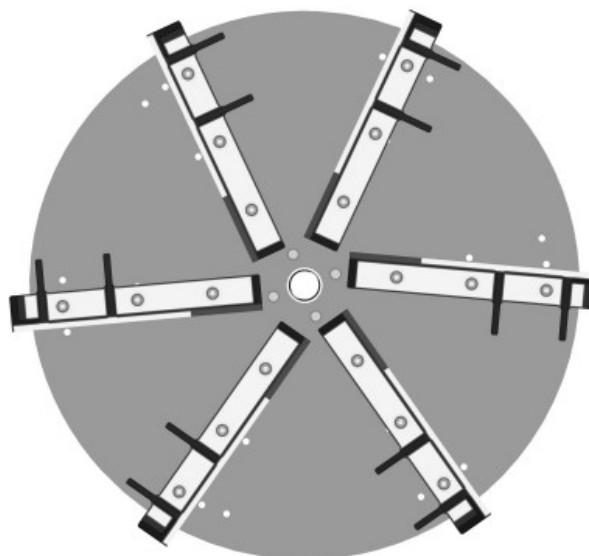

H98171—UN—22SEP10

IMPORTANT: When replacing worn or damaged blades, make sure to replace blades on the opposite sides of the disk at the same time to maintain disk rotational balance.

Blades are oriented in alternating hole patterns to obtain an optimum material spread. Ensure that replacement blades are put back in the same holes as previously removed.


Install replacement blades as needed and tighten hardware to specification.

Specification

Blade Hardware—Torque. 22 N·m
(16 lb·ft)

OUC6075.0004706-19-05APR17

PowerCast™ Tailboard (Optional) Rear Shrouds

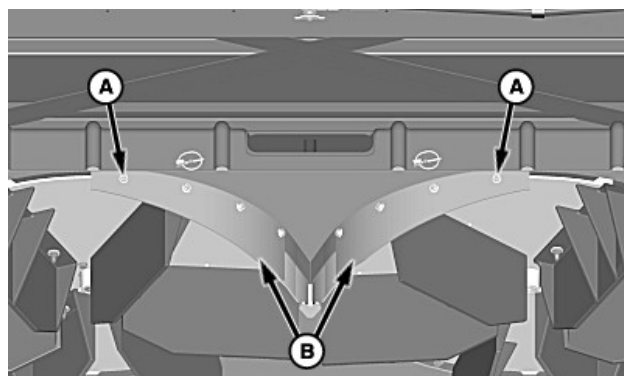

H98180—UN—22SEP10

A—Hardware (8 used)
B—Rear Shrouds


NOTE: Shrouds can be removed to spread more material towards the center of the machine when harvesting in tough or heavy straw conditions.

Front and rear shrouds should always be installed to provide optimal material distribution when harvesting corn.

Field Position

Shrouds are used to manage residue spread width distribution for wider platforms.

Install rear shrouds (B) behind the welded strap as shown and retain with hardware (A).

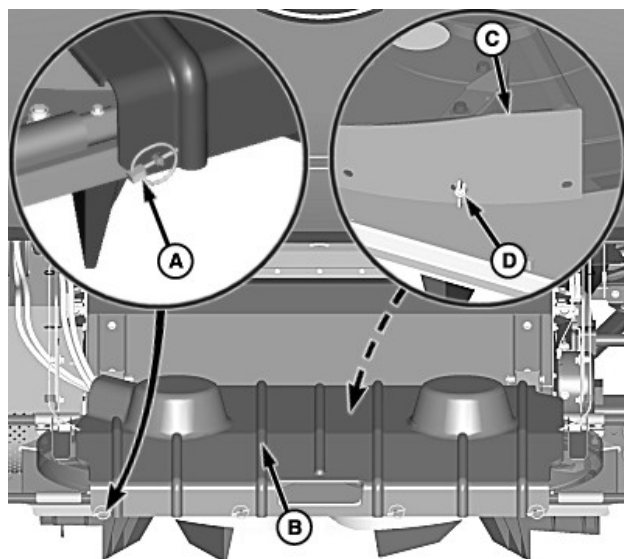

H98181—UN—22SEP10

A—Quick-Lock Pins
B—Shield
C—Rear Shrouds
D—Wing Nut

Storage Position


Remove and retain quick-lock pins (A) and shield (B).

Install rear shrouds (C) to weld stud as shown and retain with the wing nut (D).


Install previously removed shield and quick-lock pins.

OUC6075.0004707-19-05APR17

Crop Diverter

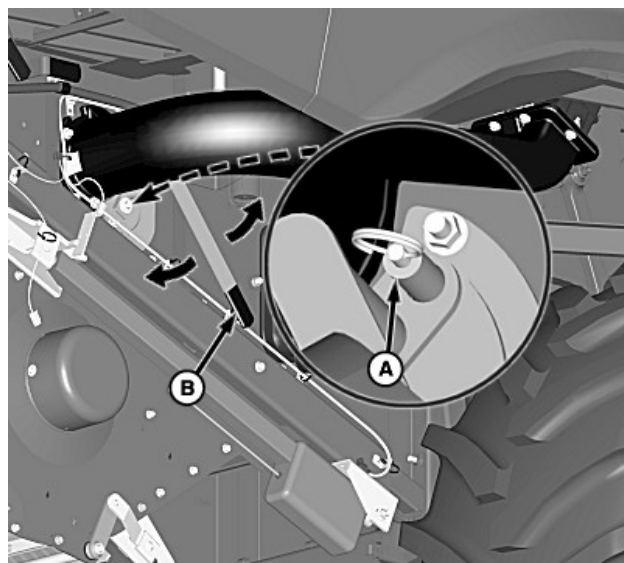

H114990—UN—08JUL15

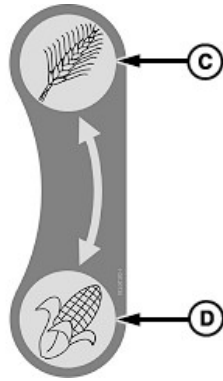

H99171—UN—23NOV10

- A—Lock-Out Pin
B—Crop Diverter Handle
C—Small Grain Position
D—Large Grain Position

IMPORTANT: To prevent personal injury or machine damage do not move crop diverter handle when machine is running.

Small Grain Position (C):

Pull lockout pin (A) and move crop diverter handle (B) to "UPPER" position. Crop diverter handle should be placed in "UPPER" position when servicing cleaning shoe.


Large Grain Position (D):

NOTE: When harvesting corn or sunflowers, crop diverter handle should be in "LOWER" position.

Pull lockout pin (A) and move crop diverter handle (B) to "LOWER" position. Crop diverter protects cleaning shoe from damage by preventing material from being thrown forward.

SS43267,000067D-19-08JUL15

Air Chutes

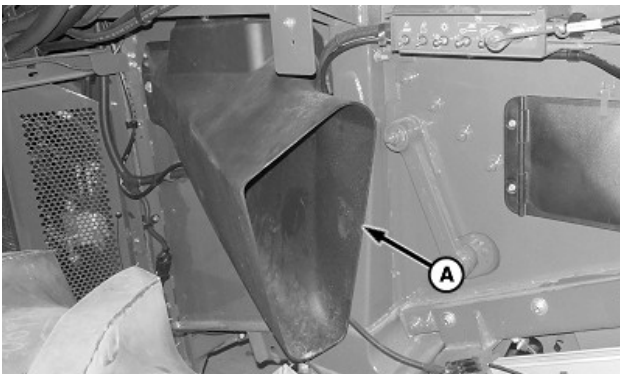

H115835—UN—08SEP15


A—Air Chute

Air chute (A) on both sides of separator side sheet allows cleaning shoe to breathe more freely especially when running on low speed. Depending on harvesting

conditions, grain tank quality may be enhanced and feeder house dust reduced.

OUC6075,000417A-19-11APR16

Overshot Beater Floor (If Equipped)—Removing (Premium Residue)

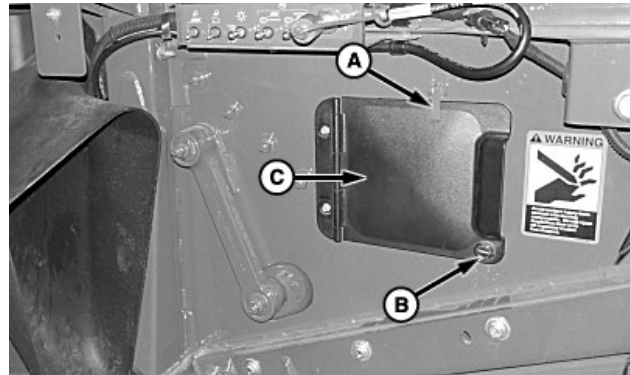

H115544—UN—20AUG15


- A—Clip
B—Lock
C—Cleaning Shoe Access Door

CAUTION: Shut OFF engine, set park brake, and remove key.

NOTE: See your John Deere dealer for further information on the overshoot beater floor.

The overshoot beater floor must be installed for corn/large grain and removed for small grain.

1. Open clip (A) and turn lock (B) to open the cleaning shoe access door (C).

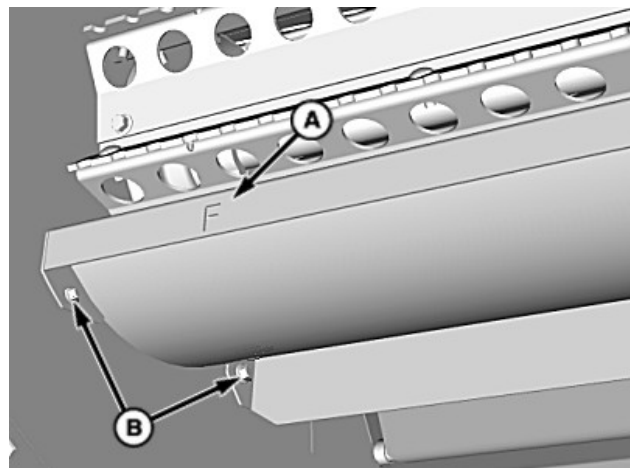

H113090—UN—03MAR15


- A—Overshot Beater Floor
B—Cap Screw and Nut (2 used)

NOTE: Two people are required to remove the overshoot beater floor. One person supports the overshoot beater floor, while the other person removes the cap screws and nuts.

2. Support the overshot beater floor (A) and remove cap screws and nuts (B) on both sides of the machine.
3. Close the access door and retain with the lock and clip.

OUC6075,0004E91-19-23JUN20

Chopper Controller Bar (Optional)

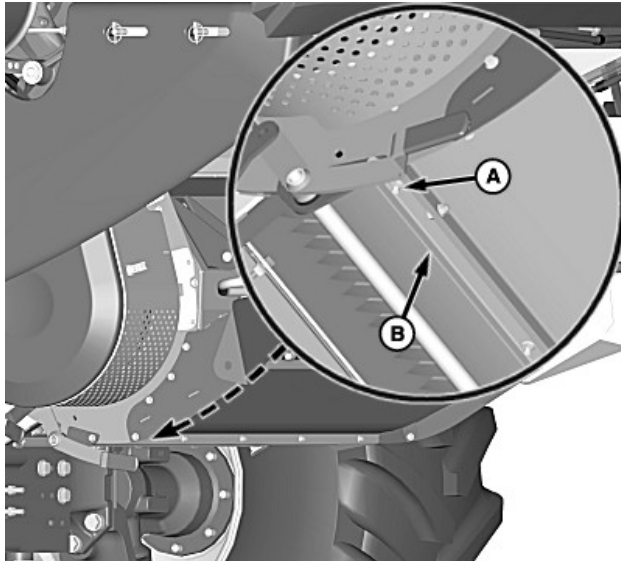


H98138—UN—21SEP10

A—Hardware
B—Controller Bar

IMPORTANT: Controller bar must be removed and placed in storage position when harvesting corn. Failure to remove controller bar can result in chaffer element damage.

Controller bar improves cut quality, distribution, and spread width in tough straw conditions. See your John Deere dealer for further information.

Remove hardware (A) and controller bar (B) from bottom side of chopper.

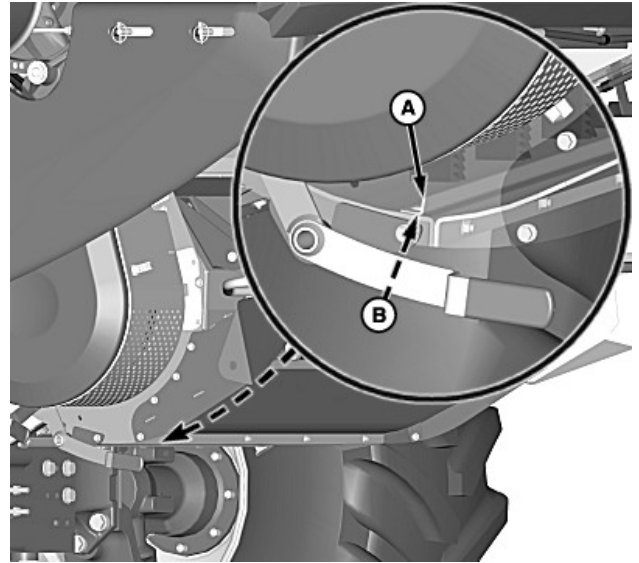


H98139—UN—21SEP10

A—Controller Bar
B—Hardware

Raise chopper fully to install controller bar (A) on inside of chopper as shown and retain with hardware (B).

OUC6075,00009BF-19-21SEP10

Chopper Stationary Knife Bank (Without Electric Actuator)—Adjusting

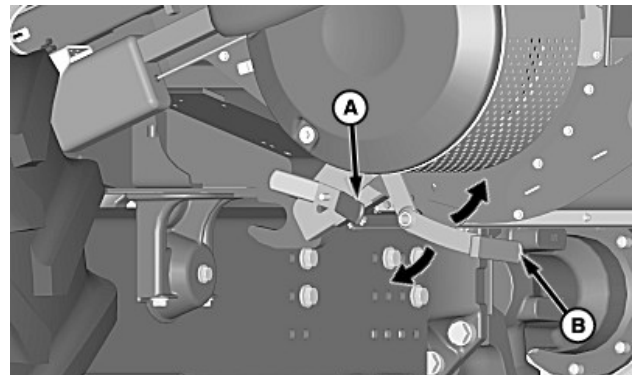

H98137—UN—20SEP10

Knife Bank Engaged Position

A—Wing Nut
B—Handle

CAUTION: Shut OFF engine, set park brake, and remove key.

IMPORTANT: Knife bank must be fully disengaged for corn.

NOTE: Chopper can be run with knives disengaged. However, cut quality decreases.

Use the position in between the engaged and disengaged positions to optimize power consumption and achieve satisfactory cut length.

Knives can be adjusted to any position. Position of knives determines cut length of material.


Knife Bank Engaged Position:

1. Loosen wing nut (A) on chopper.
2. Move adjustment handle (B) downward until the knife bank is at top of the adjustment slot.
3. Tighten wing nut to lock the knife bank into position.

Knife Bank Disengaged Position:

1. Loosen wing nut (A) on chopper.
2. Move adjustment handle (B) upward until the knife bank is at bottom of the adjustment slot.
3. Tighten wing nut to lock the knife bank into position.

OU06075,0004BAF-19-30MAY19

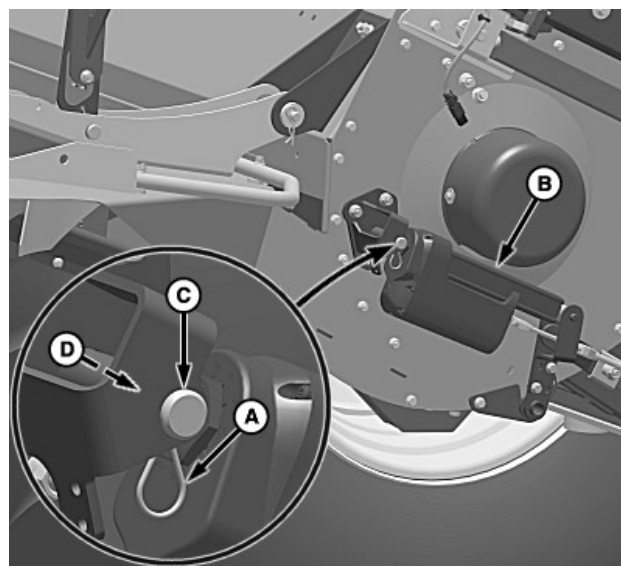


H125257—UN—24OCT18

A—Spring Pin
B—Actuator
C—Pin
D—Washer

3. Remove spring pin (A).
4. While supporting actuator (B), remove the pin (C) and washer (D).
5. Remove actuator from chopper.

Chopper Stationary Knife Bank (Electric Actuator)—Removing (If Equipped)

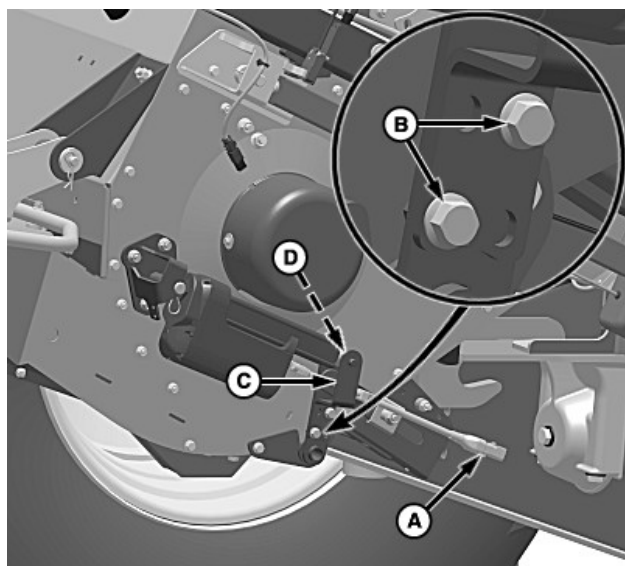


H125256—UN—24OCT18

A—Electrical Connector
B—Cap Screw (2 used)
C—Bracket
D—Washer (2 used)

CAUTION: Shut OFF engine, set park brake, and remove key.


1. Disconnect electrical connector (A).
2. Remove cap screws (B), bracket (C), and washers (D).

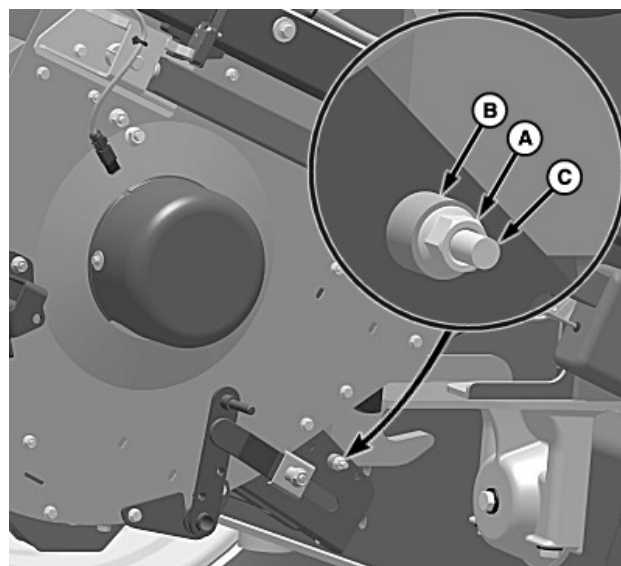

H125258—UN—24OCT18

A—Nut (2 used)
B—Spacer (2 used)
C—Cap Screw (2 used)

6. Remove nut (A), spacer (B), and cap screw (C) from both sides of the machine.

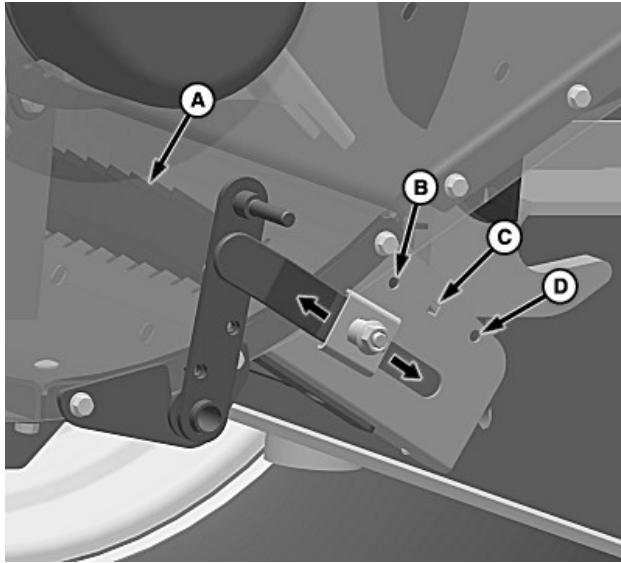


H125261—UN—24OCT18

- A—Knife Bank
B—Hole (100% engaged)
C—Hole (50% engaged)
D—Hole (0% engaged)

7. Align knife bank (A) with desired holes (B—D) in the side sheet on both sides of the machine.

- Hole (B) - Knife bank 100% engaged.
- Hole (C) - Knife bank 50% engaged.
- Hole (D) - Knife bank 0% engaged.

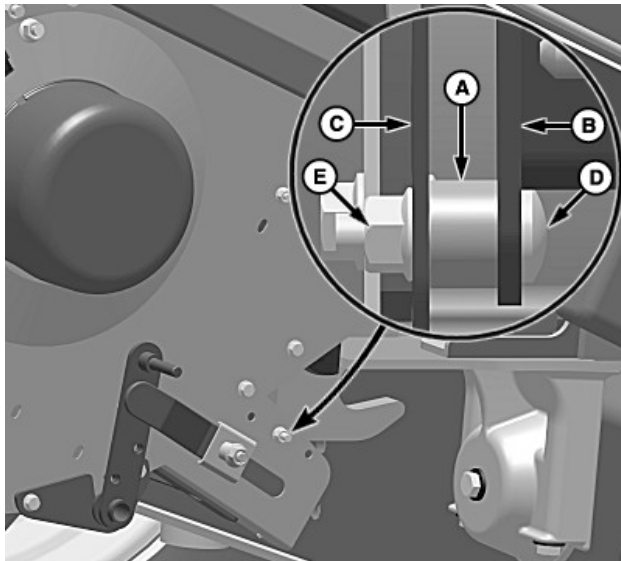

H125260—UN—24OCT18


- A—Spacer (2 used)
B—Knife Bank
C—Side Sheet
D—Cap Screw (2 used)
E—Nut (2 used)

8. Install previously removed spacer (A) between the knife bank (B) and the side sheet (C) on both sides of the machine.

9. Install previously removed cap screw (D) and nut (E) on both sides of the machine.

OOU6075,0004BAE-19-30MAY19

Chopper Stationary Knife Bank (Electric Actuator)—Installing (If Equipped)

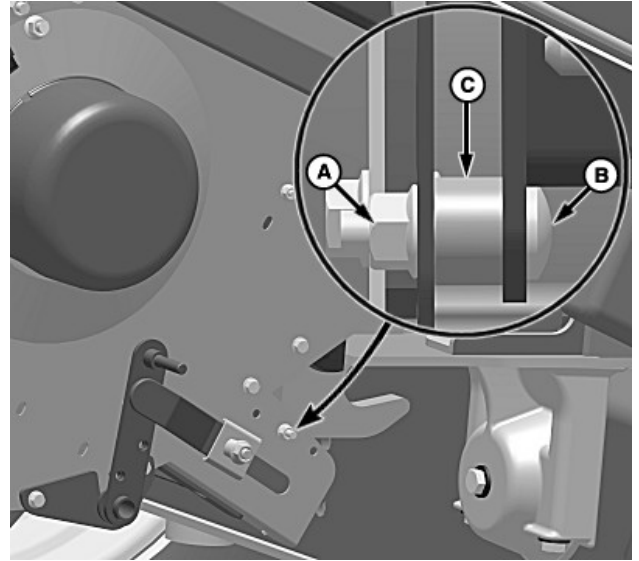


H125262—UN—24OCT18

- A—Nut
B—Cap Screw
C—Spacer

CAUTION: Shut OFF engine, set park brake, and remove key.


1. Remove nut (A), cap screw (B), and spacer (C) on both sides of the machine.

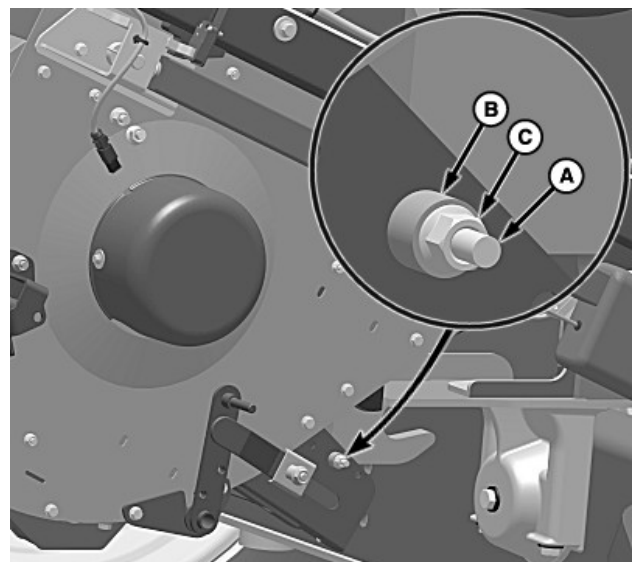

H125263—UN—24OCT18

- A—Cap Screw (2 used)
B—Spacer (2 used)
C—Nut (2 used)

2. Install cap screw (A), spacer (B), and nut (C) in the storage position hole on both sides of the machine.

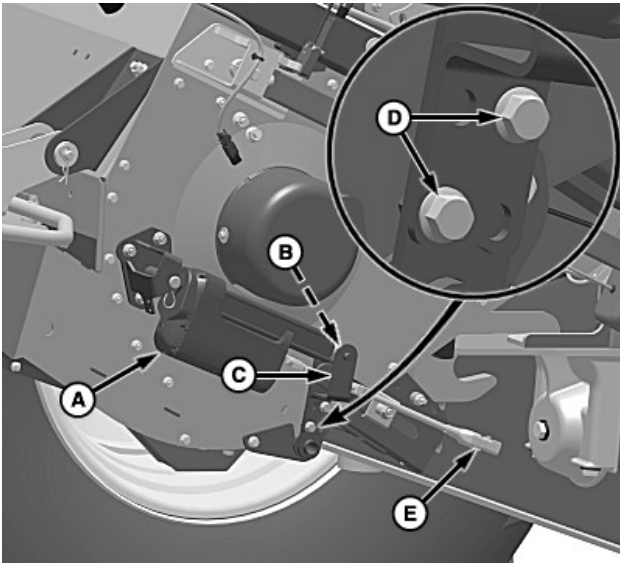

H125264—UN—24OCT18


- A—Actuator
B—Washer (2 used)
C—Bracket
D—Cap Screw (2 used)
E—Electrical Connector

3. Install actuator (A) as shown.
4. Install washers (B) between actuator and bracket (C) and retain with cap screws (D).
5. Tighten cap screws to specification.

Specification

Cap Screws—Torque. 40 N·m
(30 lb·ft)

6. Connect electrical connector (E) into machine wiring harness.

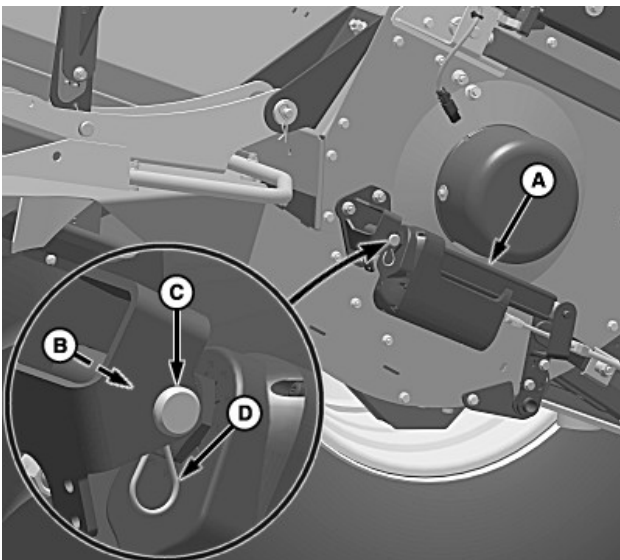

H125265—UN—24OCT18


- A—Actuator
B—Washer

- C—Pin
D—Spring Pin

7. Raise knife bank until actuator (A) aligns with the hole in the bracket.
8. Install washer (B) between actuator and bracket and retain with pin (C) and spring pin (D) as shown.

OJ06075,0004BB0-19-30MAY19

Chopper Stationary Knives (Without Electric Actuator)—Replacing

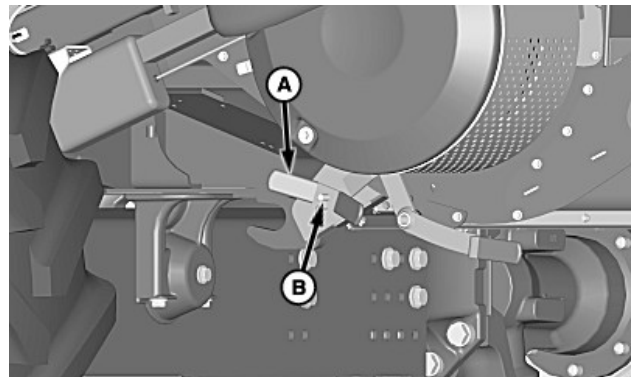

H98140—UN—21SEP10


- A—Wing Nut
B—Tension Rod

CAUTION: Shut OFF engine, set park brake, and remove key. Knife blades are sharp.

1. Loosen wing nut (A) on chopper.
2. Move adjustment handle upward until the knife bank is at bottom of the adjustment slot.

NOTE: Retain bushings at outer ends of the knife bank for later assembly.

3. Support knife bank and remove tension rod (B) from the right-hand side of the machine.

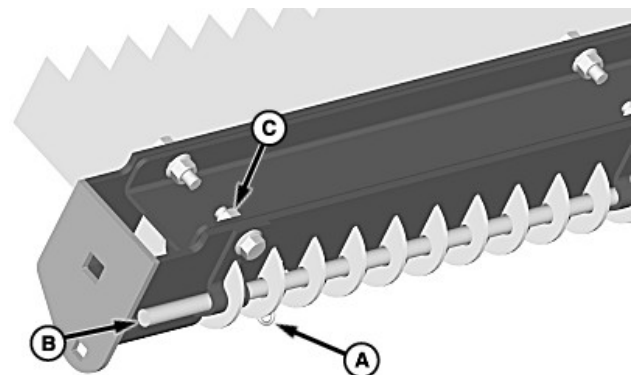

H126355—UN—21MAY19

- A—Pin
B—Retaining Rod
C—Lock Nut

4. Remove pin (A) from retaining rod (B).

5. Loosen lock nuts (C) on clips holding retaining rod.
6. Slide retaining rod until it clears knives that need replaced.
7. Reverse knives for more usage or replace knives if they are worn on both sides.
8. Align retaining rod with knives.
9. Tighten lock nuts on clips and install pin.


NOTE: Reposition bushings at outer ends of the knife bank.

10. Install knife bank and slide tension rod from the right-hand side of the machine.
11. Install wing nut and adjust knife bank to desired position.

IMPORTANT: Knife bank must be fully disengaged for corn.

12. Tighten wing nut to lock knife bank into position.

OUO6075,0004BAD-19-21MAY19

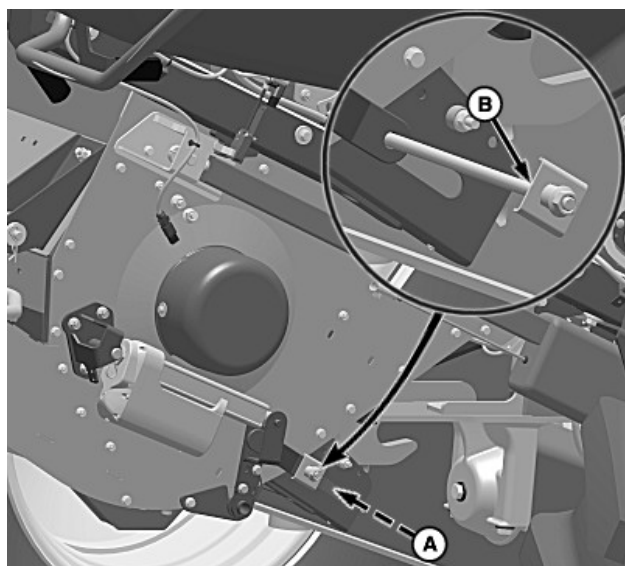


H125267—UN—24OCT18

A—Knife Bank
B—Tension Rod

NOTE: Retain bushings at outer ends of the knife bank for later assembly.

2. While supporting the knife bank (A), remove tension rod (B) from the right-hand side of the machine.

Chopper Stationary Knives (Electric Actuator)—Replacing

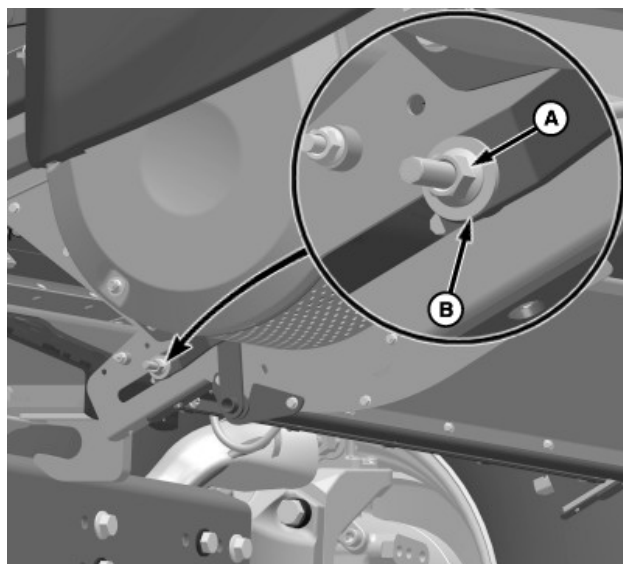


H125266—UN—24OCT18

A—Nut
B—Washer

CAUTION: Shut OFF engine, set park brake, and remove key. Knife blades are sharp.


1. Remove nut (A) and washer (B) from the left-hand side of the knife bank.

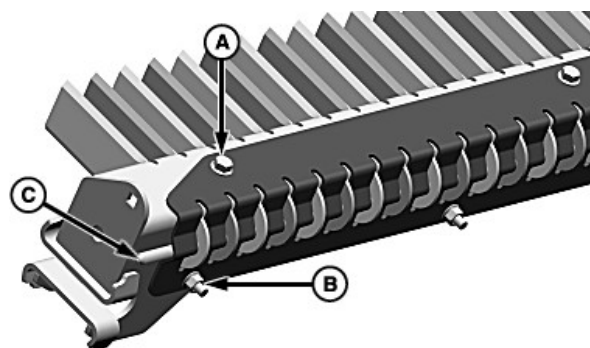

H130611—UN—24JUN20

A—Cap Screw
B—Cap Screw and Lock Nut
C—Retaining Rod

3. Loosen cap screws (A) as needed.
4. Loosen cap screws and lock nuts (B) as needed.
5. Slide the retaining rod (C) until it clears the knives that need replaced.
6. Reverse the knives for more usage or replace the knives if they are worn on both sides.
7. Align the retaining rod with the knives.
8. Tighten the previously loosened cap screws and lock nuts (B) as needed.
9. Tighten the previously loosened cap screws (A) as needed.

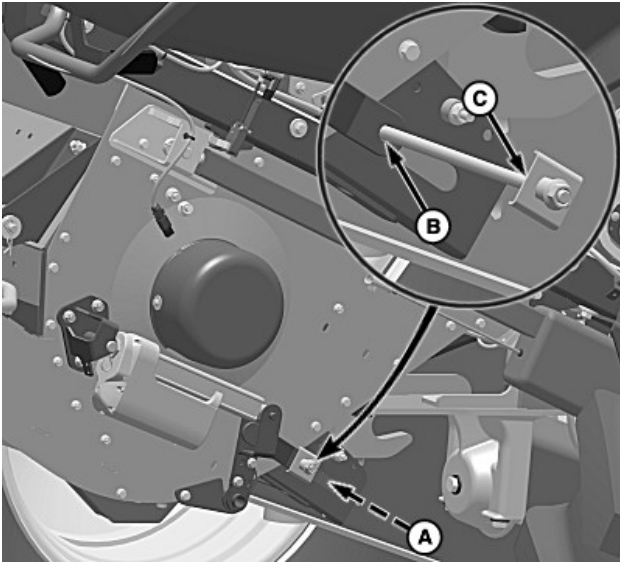

H125269—UN—24OCT18

A—Knife Bank
B—Adjustment Arm
C—Tension Rod

10. Install the knife bank (A) and align the hole in the adjustment arm (B) with the knife bank.

NOTE: Reposition the bushings at the outer ends of the knife bank.


11. Slide the tension rod (C) from the right-hand side of the machine.

IMPORTANT: Knife bank must be fully disengaged for corn.


12. On the left-hand side of the machine, install the previously removed washer and retain with the previously removed nut.

OUC6075,0004E9D-19-08JUL20

Chopper Access Door

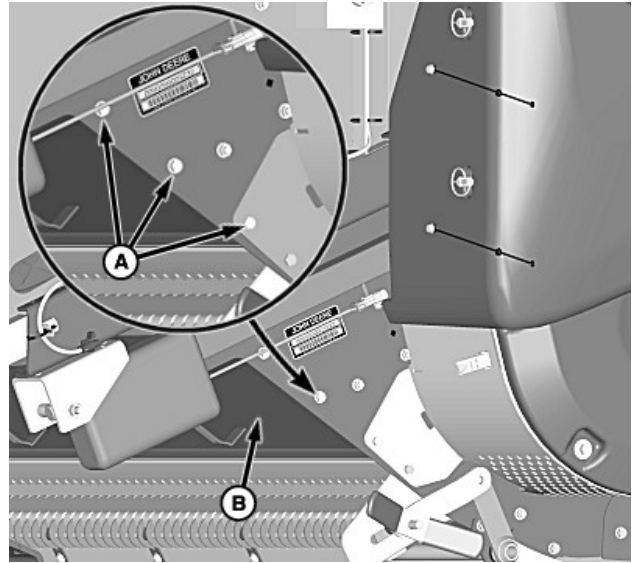

H113088—UN—03MAR15

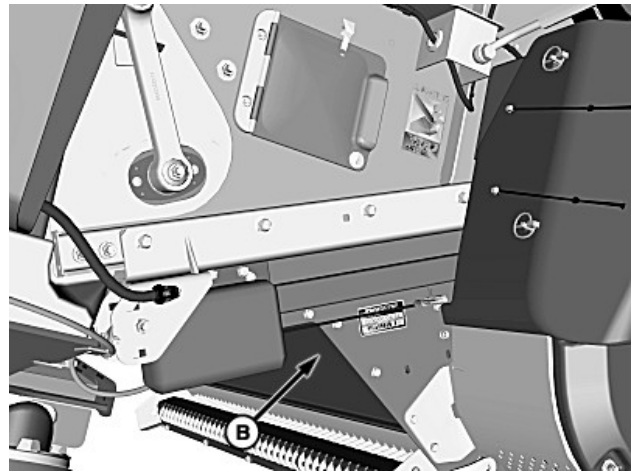

H113088—UN—02MAR15


A—Cap Screw (3 used)
B—Access Door

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Remove cap screws (A) from both sides of chopper to remove access door (B).
2. Install the access door before operating the machine.

OUC6075,0004E9D-19-17JUN20

Fine Cut Chopper Blades—Replacing and Configuration

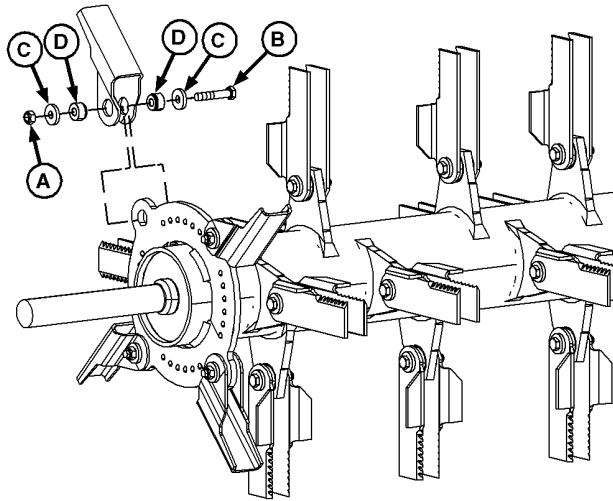

H87281—UN—01AUG07

- A—Lock Nut
B—Cap Screw
C—Washers
D—Bushings

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Rotor shown illustrates blade replacement examples for both scoop and paddle blades. Always maintain original factory provided blade pattern.

Outer Blades

NOTE: If removing blades or bushings for inspection purposes, be certain to reinstall blades on SAME support from which they were removed. This must be done to maintain balance. It is a good practice to mark each blade before removal.

Install new cap screws and lock nuts in the same direction as it was removed when installing or replacing blades.


Remove lock nut (A), cap screw (B), washers (C), and bushings (D).

NOTE: Inspect and replace bushings if worn. Replace lock nuts and cap screws with new hardware.

Replace blades and bushings. Install cap screw, washers, and lock nut. Tighten nut to specification.

Specification

Chopper Blade Lock	
Nut—Torque.	65 N·m (48 lb·ft)

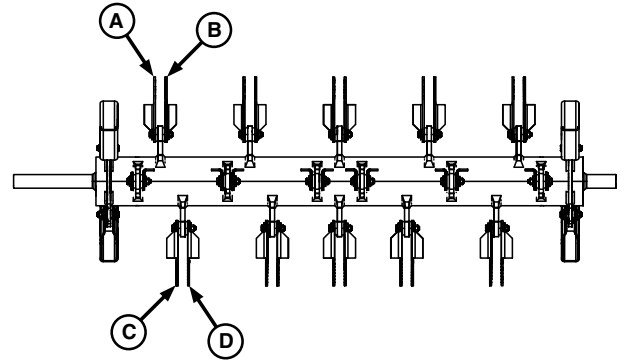


H107307—UN—22MAR13

A—D—Paddle Blades

Blade Configuration

IMPORTANT: Chopper balance **MUST** be maintained. Replace **BOTH** blades on single support and **BOTH** blades on opposite support (180 degrees). Four blades **MUST** be installed to replace one broken blade, or all blades can be replaced at one time. This **MUST** be done to maintain balance.

If the blade (A) is broken, replace blades (A—D).

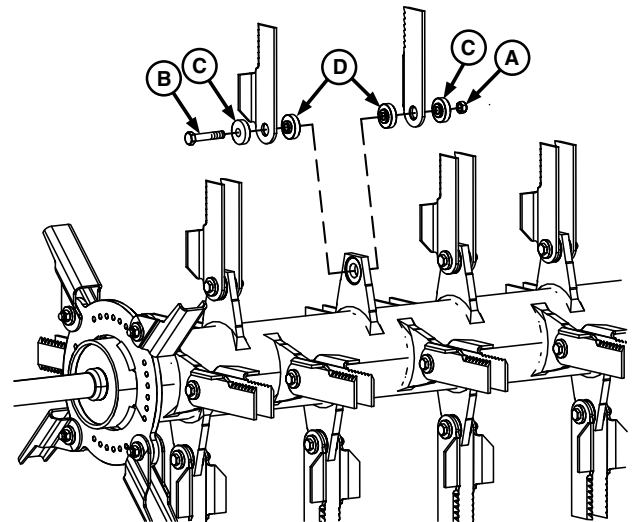

H98142—UN—21SEP10

- A—Lock Nut
B—Cap Screw
C—Washers
D—Bushings

Inner Blades

NOTE: If removing blades or bushings for inspection purposes, be certain to reinstall blades on SAME support from which they were removed. This must be done to maintain balance. It is a good practice to mark each blade before removal.

Install new cap screws and lock nuts in the same direction as it was removed when installing or replacing blades.

Remove lock nut (A) and cap screw (B).

Remove and inspect bushings (C and D).

NOTE: Inspect and replace bushings if worn. Replace lock nuts and cap screws with new hardware.

Replace blades and bushings. Install cap screw and lock nut. Tighten nut to specification.

Specification

Chopper Blade Lock

Nut—Torque. 65 N·m
(48 lb·ft)

OUO6075,0004928-19-29MAR18

NOTE: If removing blades or bushings for inspection purposes, be certain to reinstall blades on SAME support from which they were removed. This must be done to maintain balance. It is a good practice to mark each blade before removal.


Install new cap screws and lock nuts in the same direction as it was removed when installing or replacing blades.

Remove lock nut (A), cap screw (B), and bushings (C, D, E, F).

NOTE: Inspect and replace bushings if worn. Replace lock nuts and cap screws with new hardware.

Replace blades and bushings. Install cap screw, washer, bushings, and lock nut. Tighten nut to specification.

Extra Fine Cut Chopper Blades—Replacing and Configuration

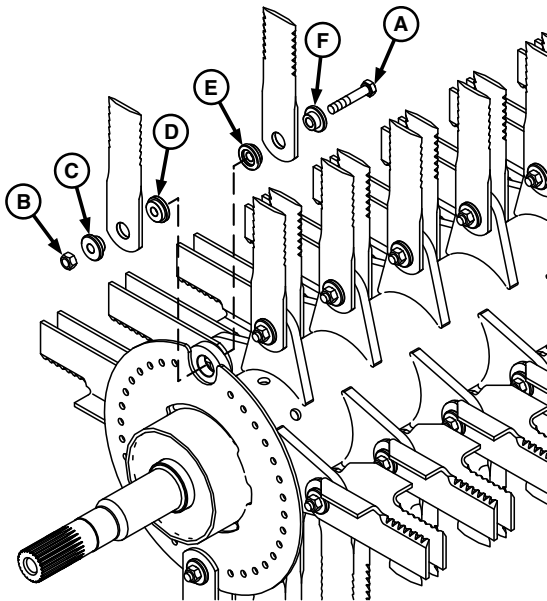

H99000—UN—12NOV10

- A—Lock Nut
B—Cap Screw
C—Bushing
D—Bushing
E—Bushing
F—Bushing

CAUTION: Shut OFF engine, set park brake and remove key.


NOTE: Rotor shown illustrates blade replacement examples for both paddle and straight blades. Always maintain original factory provided blade pattern.

Outer Blades

Specification

Chopper Blade Lock

Nut—Torque. 65 N·m
(48 lb·ft)

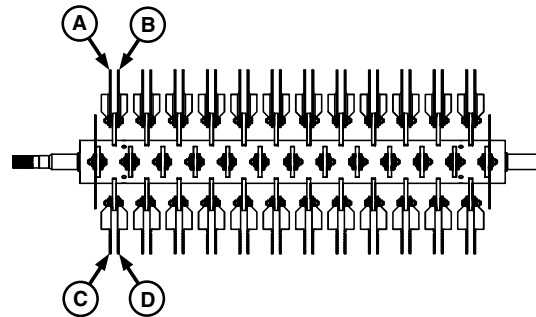

H107308—UN—22MAR13

 
A—D—Paddle Blades

Blade Configuration

IMPORTANT: Chopper balance MUST be maintained. Replace BOTH blades on single support and BOTH blades on opposite support (180 degrees). Four blades MUST be installed to replace one broken blade, or all blades can be replaced at one time. This MUST be done to maintain balance.

If the blade (A) is broken, replace blades (A—D).

IMPORTANT: Verify clearance between rotor blades and stationary knives, by rotating rotor by hand, before running chopper.



Inner Blades

Install new cap screws and lock nuts in the same direction as it was removed when installing or replacing blades.

Remove and inspect bushings (C and D).


Replace blades and bushings. Install cap screw and lock nut. Tighten nut to specification.

Chopper Blade Lock
Nut—Torque. 65 N·m
(48 lb·ft)

0006075,00046FE-19-05APR17

OUO6075,00046FE-19-05APR17

Chopper Blades—Centering

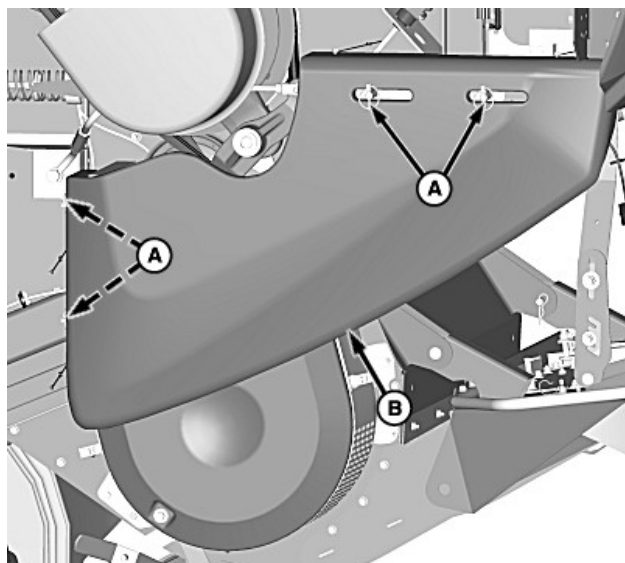


H98146—UN—21SEP10

A—Quick-Lock Pins
B—Shield

CAUTION: Shut OFF engine, set parking brake and remove key.

Raise chopper fully and remove quick-lock pins (A) and shield (B).

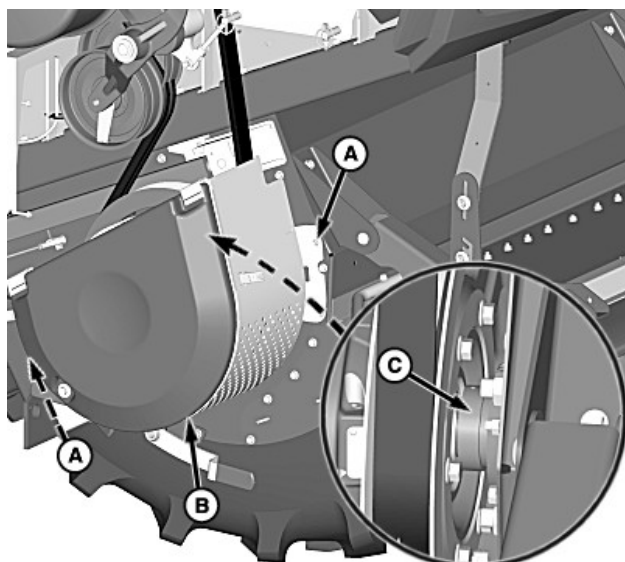


H98147—UN—21SEP10

A—Cap Screws (4 Used)
B—Shield
C—Locking Collar

Remove cap screws (A) and shield (B).

Loosen set screw and locking collar (C) on left-hand side.

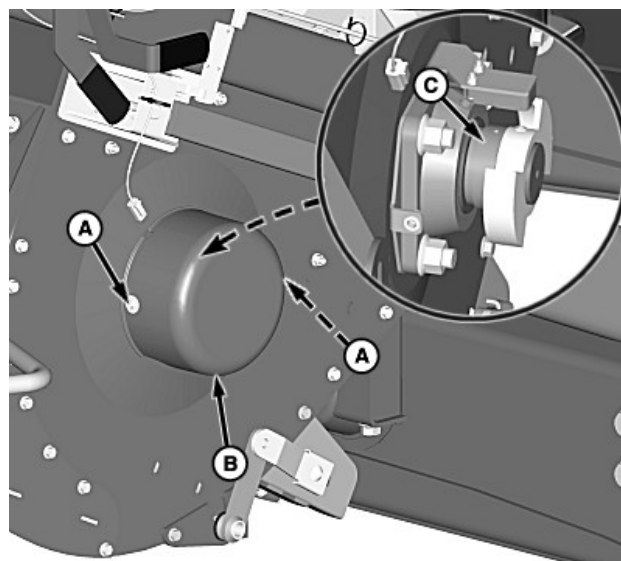


H98148—UN—21SEP10

A—Cap Screws (2 Used)
B—Bearing Cover
C—Locking Collar

Remove cap screws (A) and bearing cover (B).

Loosen set screw and locking collar (C) on right-hand side.

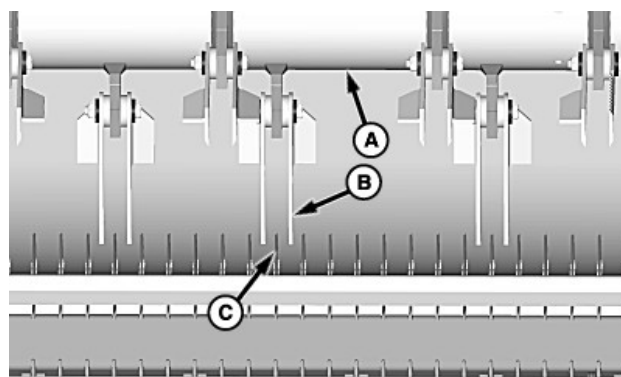

H87317—UN—30JAN07

A—Chopper Rotor
B—Rotor Blades
C—Stationary Knives


Position chopper rotor (A) right or left to ensure all rotor blades (B) clear stationary knives (C).

Tighten locking collars on both sides in direction of rotation and retain with set screws.

Install bearing cover on right-hand side and chopper shields on left-hand side.

OUC6075,00009C4-19-21SEP10

Chopper Adjusting Switch

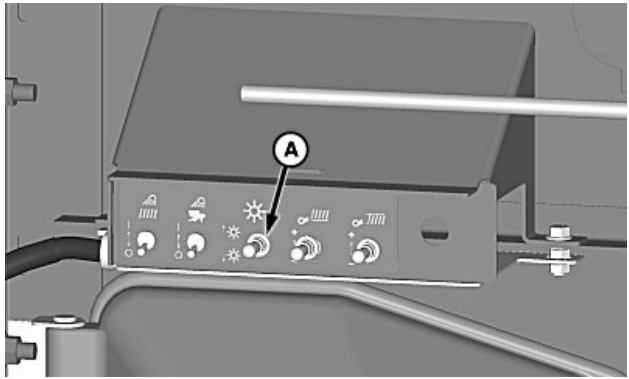


H97565—UN—14SEP10

A—Chopper Switch

Chopper adjust switch (A) is located on left-hand side of machine.

Chopper adjust switch allows operator to raise or lower chopper to various positions.

OUO6075,00009C6-19-21SEP10

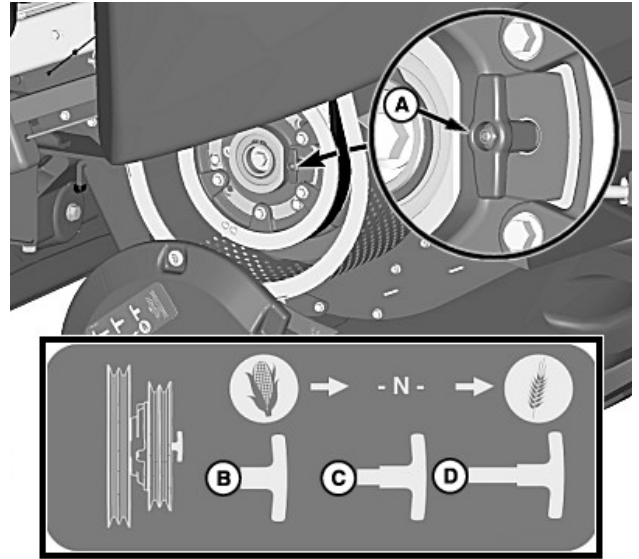

H105441—UN—18MAY12

- A—Shifter Handle
B—Slow Speed Position
C—Neutral Position
D—High Speed Position

Move shifter handle (A) to position (B).

- Corn

Neutral Position:

NOTE: It may be necessary to rotate sheave a small amount while moving shifter handle.

Move shifter handle (A) to position (C).

High Speed Position:

NOTE: It may be necessary to rotate sheave a small amount while moving shifter handle.


Move shifter handle (A) to position (D).

- Grain

Close shield and retain with latch.

OUO6075,000113F-19-18MAY12

Chopper Drive Speeds—Changing

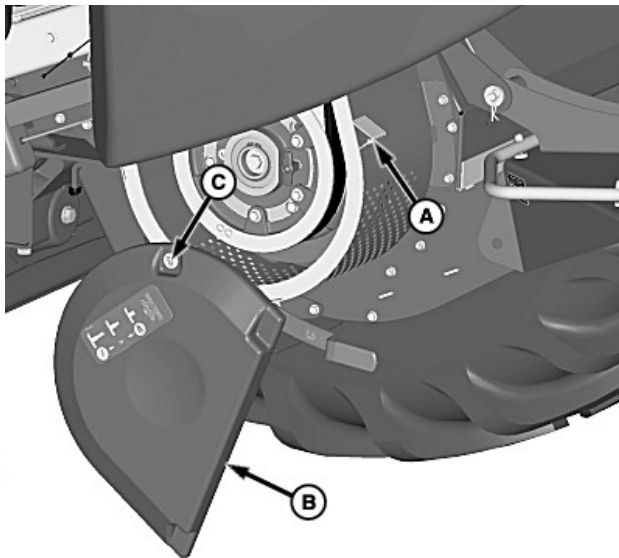

H105440—UN—18MAY12

- A—Latch
B—Shield
C—Pivot


CAUTION: Shut OFF engine, set parking brake and remove key.

Release latch (A) and rotate shield (B) on pivot (C).


Slow Speed Position:

NOTE: It may be necessary to rotate sheave a small amount while moving shifter handle.

Tailboard Vanes—Adjusting (Intermediate/Premium Residue)

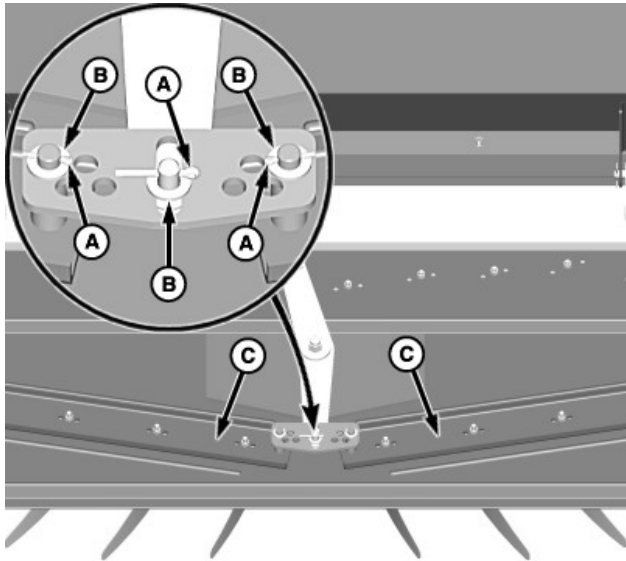

H98656—UN—19OCT10

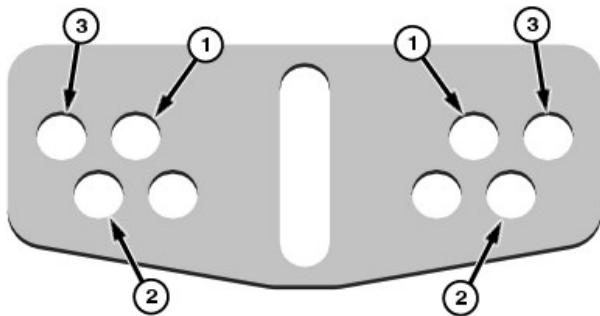

H98657—UN—19OCT10

A—Cotter Pins
B—Washers
C—Slide Guides

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Adjustments can be made to tailboard vanes if factory settings do not produce adequate spread width or even distribution.

Tailboard vanes are factory set for 9.1 m (30 ft) platforms.

Remove and retain cotter pins (A) and washers (B).


Adjust slide guides (C) to desired holes in the adjustment plate.

- Hole 1: 6.7 m (22 ft) Header Position
- Hole 2: 7.6 m (25 ft) Header Position
- Hole 3: 9.1 m (30 ft) Header Position

Install previously removed washers and cotter pins.

OUO6075,00041D9-19-11APR16

Tailboard Vanes (Electric Motor)—Adjusting (Intermediate/Premium Residue)

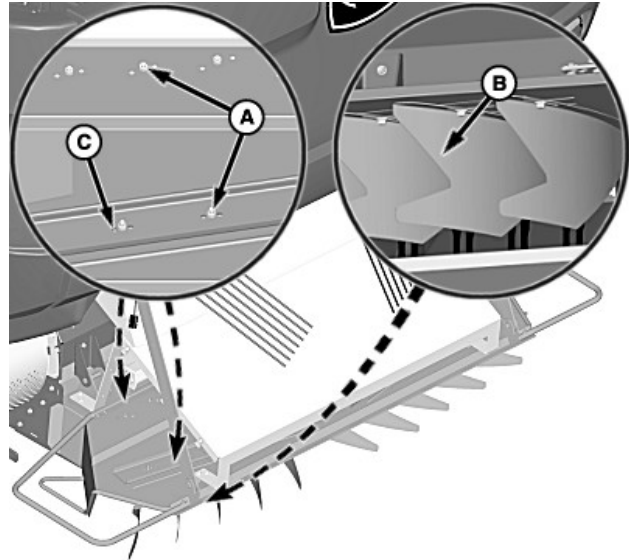

H98365—UN—30SEP10

A—Nuts
B—Tailboard Vane
C—Holes

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Adjustments can be made to the tailboard vanes if the factory settings do not produce adequate spread width or even distribution.


Tailboard vanes are factory set for 9.1 m (30 ft) platforms.

Loosen nuts (A) and adjust the tailboard vane (B) to different holes (C) if needed to control distribution of straw spread width. See Tailboard Vanes (Electrical Adjust)—Factory Settings later in this section.

1. Tighten nuts on tailboard vanes.
2. Loosen nut one complete turn at the front of the tailboard vane.
3. Loosen nut 1-1/2 turns at the rear of the tailboard vane.
4. Verify that the tailboard vane is easily moveable.
5. Repeat as needed on remaining tailboard vanes

OUO6075,0004703-19-05APR17

Tailboard Vanes (Electrical Adjust)—Factory Settings (Intermediate/Premium Residue)

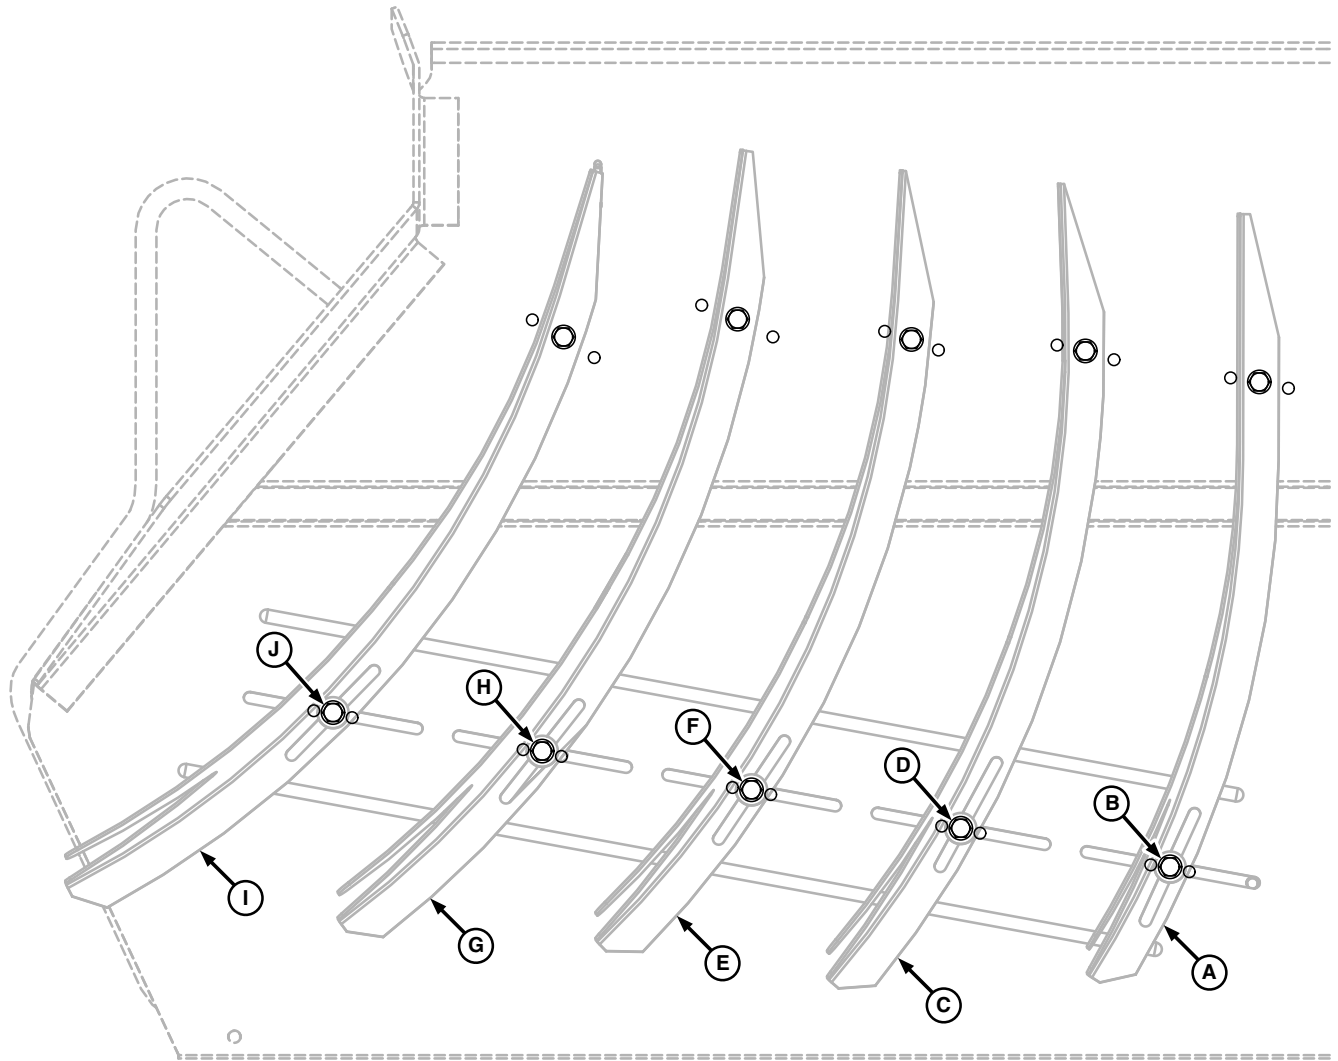

H98343—UN—01OCT10

Tailboard Vane Settings For 9.1 m (30 ft) Platforms (View From Below Tailboard)


A—Vane 1
B—Middle Hole
C—Vane 2
D—Middle Hole
E—Vane 3

F—Middle Hole
G—Vane 4
H—Middle Hole
I—Vane 5
J—Middle Hole


NOTE: Hole locations are from center of tailboard outward when adjusting tailboard vanes.

OOU6075,00041DB-19-21MAR16

Advanced PowerCast Spreader Disks— Replacing

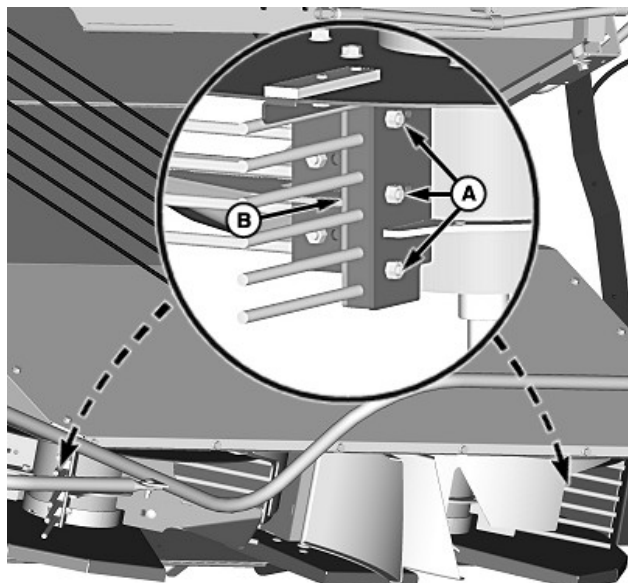

H113274—UN—26MAR15

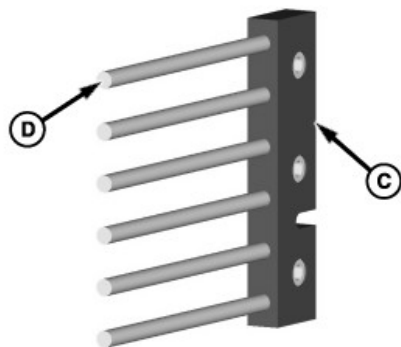

H98694—UN—19OCT10

A—Hardware
B—Bracket
C—Rubber Support
D—Fingers

CAUTION: Shut OFF engine, set parking brake and remove key.

Remove hardware (A) and bracket (B).


Inspect and replace rubber support (C) and fingers (D) as needed. See your John Deere dealer for replacement parts.

IMPORTANT: Replace all rubber supports to maintain disk rotational balance.


Install replacement rubber support and fingers as needed.

Ensure that rubber support and bracket are put back in the same holes as previously removed.

Tighten hardware and repeat as needed on remaining disk blades.

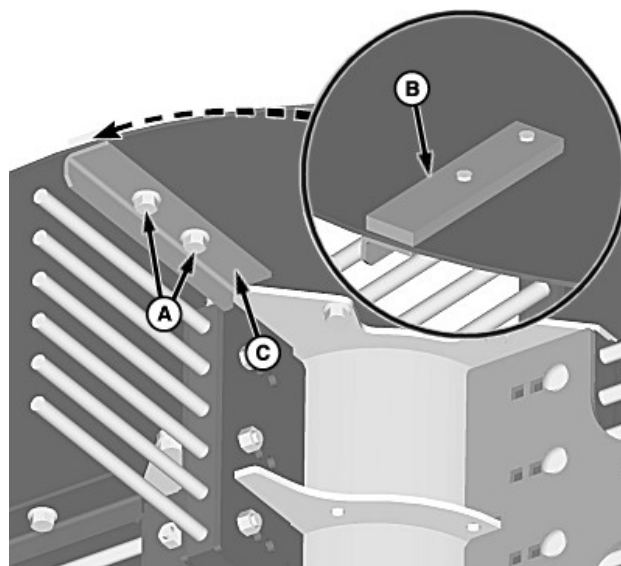

H98695—UN—19OCT10

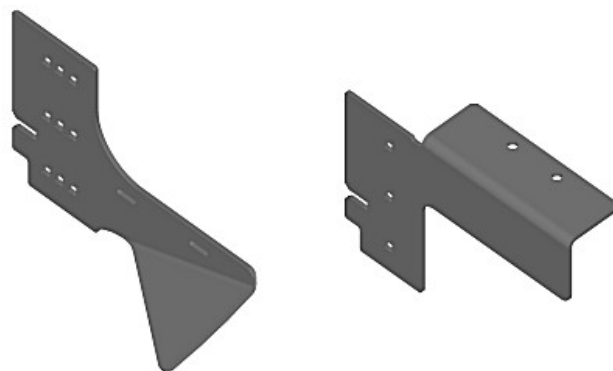

H102241—UN—23JUN11

Small Grain Paddle / Corn Paddle

A—Cap Screws
B—Plate
C—Paddle Brackets

Remove cap screws (A) from plate (B).

Inspect and replace paddle bracket (C) as needed. See your John Deere dealer for replacement parts.

IMPORTANT: Replace all paddle brackets to maintain disk rotational balance.


Install replacement paddle bracket as needed.

Tighten hardware and repeat as needed on remaining disk blades.

NOTE: Remove small grain paddles and install corn paddles as needed for crop being harvested.


SS43267,0000592-19-26MAR15

Spreader (General Information)

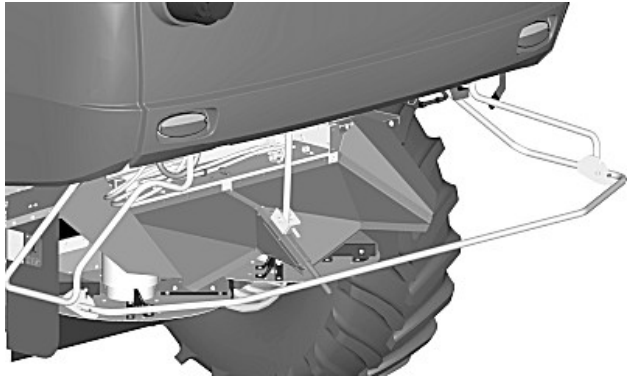

H98186—UN—23SEP10

Single Speed Spreader

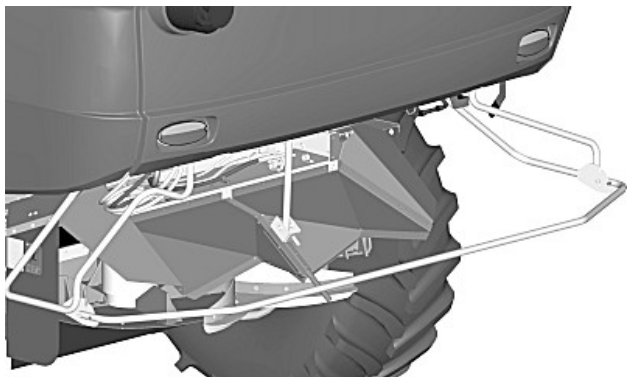

H98187—UN—23SEP10

Dual Speed Spreader


CAUTION: Do not let anyone stand behind the spreader while it is running. Shut OFF engine, set park brake and remove key before adjusting spreader.

Before performing service or maintenance on the raised spreader, fully insert lockout pin into place.

NOTE: See *Residue Management Application Help* or *Operator's Station Help* for further information.

OOU6075,000436E-19-19DEC16

Spreader—Windrow Position

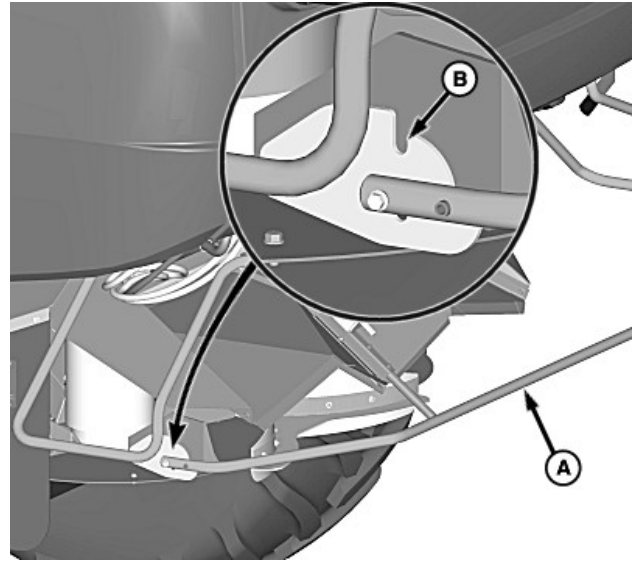

H98188—UN—23SEP10


A—Spreader Hoop
B—Notch

CAUTION: Shut OFF engine, set park brake and remove key. Before performing service or maintenance on the raised spreader, fully insert lockout pin into place.

IMPORTANT: Spreader hoop **MUST** always be in the "down" position as shown when operating.

NOTE: Spreader can be rotated upward to allow material to discharge into a windrow pattern.

Raise spreader hoop (A) until it aligns with notch (B) when accessing or raising spreader to windrow position.

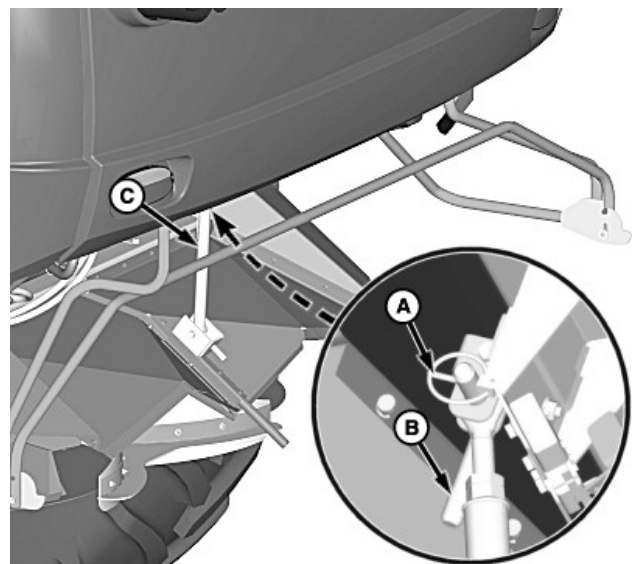


H98189—UN—23SEP10


A—Quick-Lock Pin
B—Pin
C—Support Tube

Remove quick-lock pin (A) from pin (B) and lower support tube (C).

NOTE: Place pin back into storage position and retain with quick-lock pin.

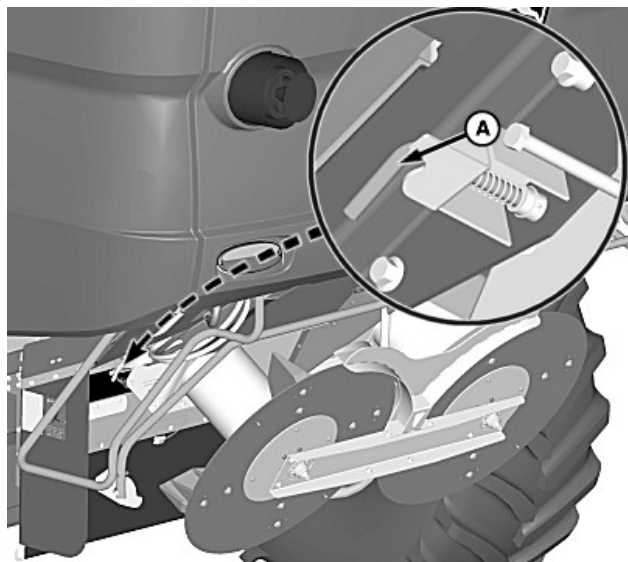

H98190—UN—23SEP10

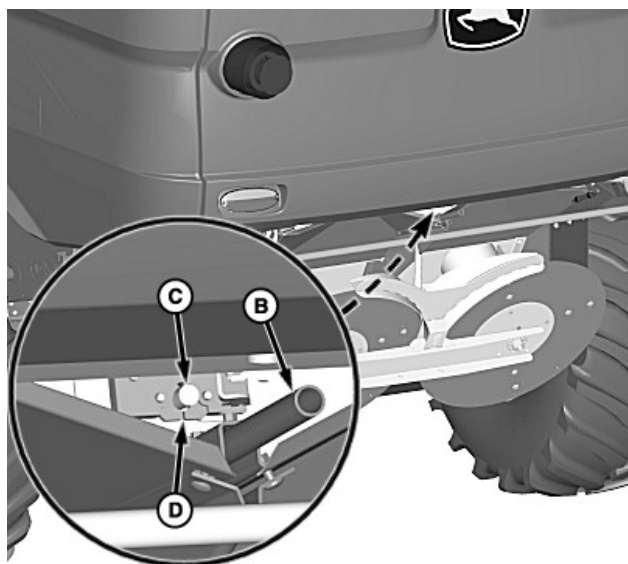

H98191—UN—23SEP10

- A—Pin
- B—Handle
- C—Pin
- D—Latch Assembly


Pull pin (A) to fully raise the spreader.

Raise spreader with handle (B) until the pin (C) fully engages with latch assembly (D).


NOTE: Set Spreader speed to zero. See *Residue Management Application Help* or *Operator's Station Help* for further information.

OUO6075,000436F-19-19DEC16

Spreader—Lowering

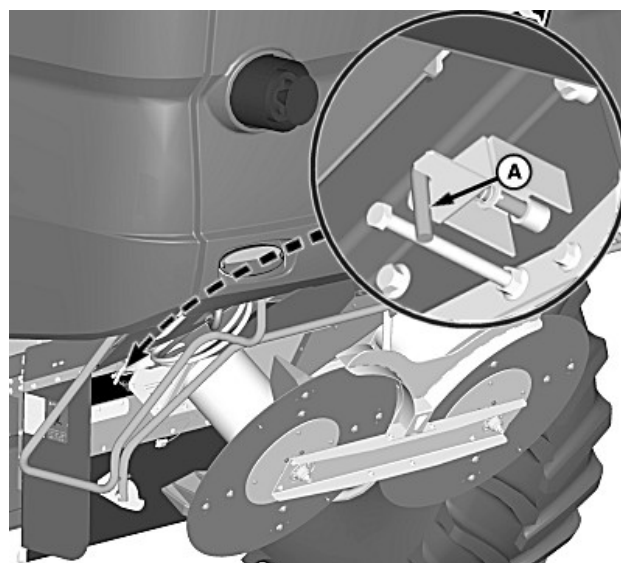

H98192—UN—23SEP10

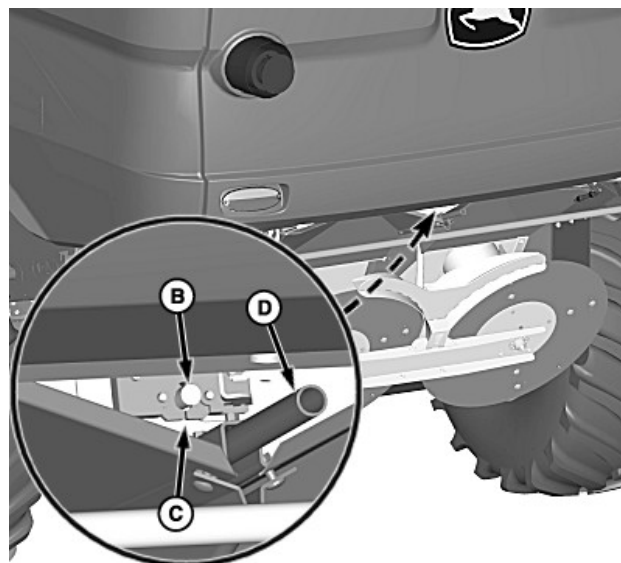


H98193—UN—23SEP10

- A—Pin
- B—Pin
- C—Latch Assembly
- D—Handle

CAUTION: Shut OFF engine, set park brake and remove key.

Rotate and place pin (A) onto the bracket to unlock the spreader.

Release pin (B) from latch assembly (C) and lower spreader with handle (D).

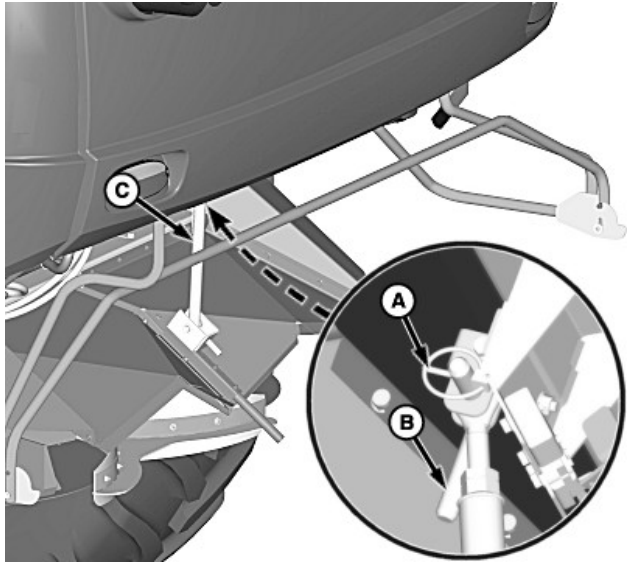

H98189—UN—23SEP10


A—Quick-Lock Pin
B—Pin
C—Support Tube

Raise support tube (C) until it aligns with hole and retain with pin (B) and quick-lock pin (A).

NOTE: Increase spreader speed until desired spread width is reached. See *Residue Management Application Help* or *Operator's Station Help* for further information.

OOU6075,0004370-19-19DEC16

Spreader Disks (Single Speed)—Replacing

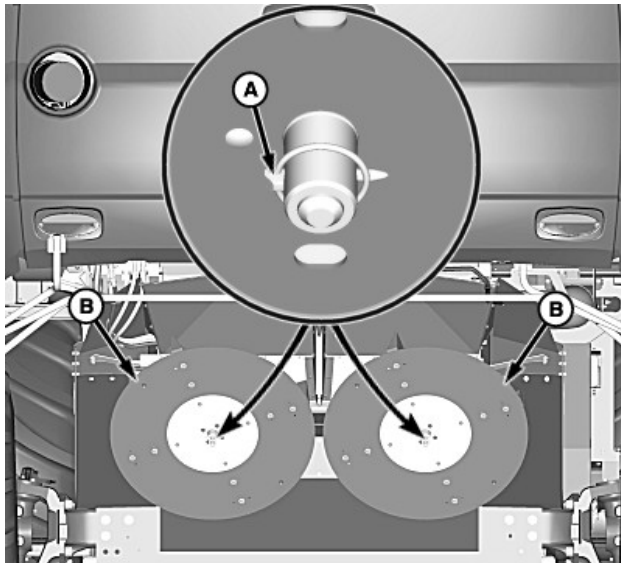

H98194—UN—23SEP10


A—Quick-Lock Pin
B—Disk Assemblies

CAUTION: Disk assemblies weigh approximately 25 kg (55 lb).

IMPORTANT: Disk assemblies are left-handed and right-handed. Mark disk assembly locations before removing.

NOTE: Disk assemblies can be removed for service or to provide additional clearance under spreader.

Remove quick-lock pins (A) and disk assemblies (B).

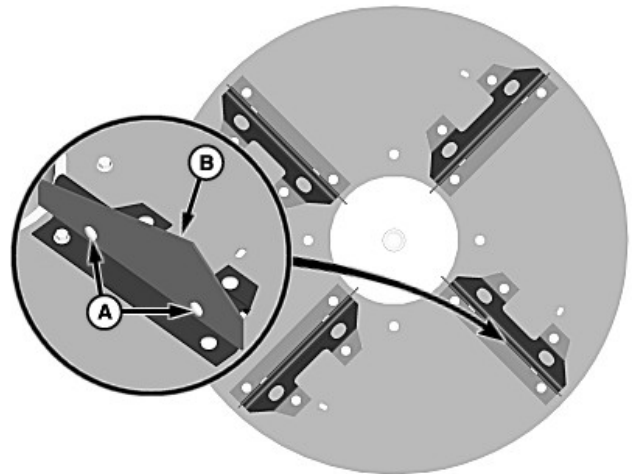

H98197—UN—23SEP10

A—Hardware
B—Blade

IMPORTANT: When replacing worn or damaged blades, make sure to replace blades on opposite sides of disk at the same time to maintain disk rotational balance.


Blades are oriented in alternating hole patterns to obtain an optimum material spread. Ensure that replacement blades are put back in the same holes as previously removed.

Remove hardware (A) and blade (B).

Install replacement blades as needed and tighten hardware.

OOU6075,00009D5-19-23SEP10

Spreader Disks (Dual Speed)—Replacing

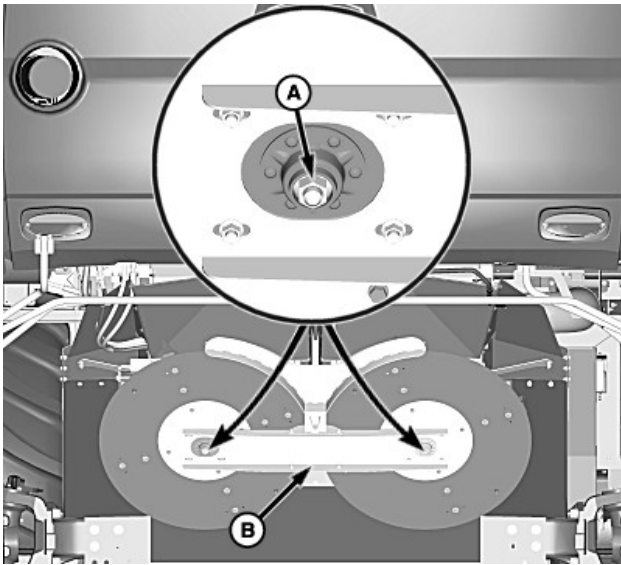

H98195—UN—08OCT10


A—Nut
B—Support Shroud

CAUTION: Disk assemblies weigh approximately 25 kg (55 lb).

IMPORTANT: Disk assemblies are left-handed and right-handed. Mark disk assembly locations before removing.

NOTE: Disk assemblies can be removed for service or to provide additional clearance under spreader.


Remove nuts (A) and support shroud (B).

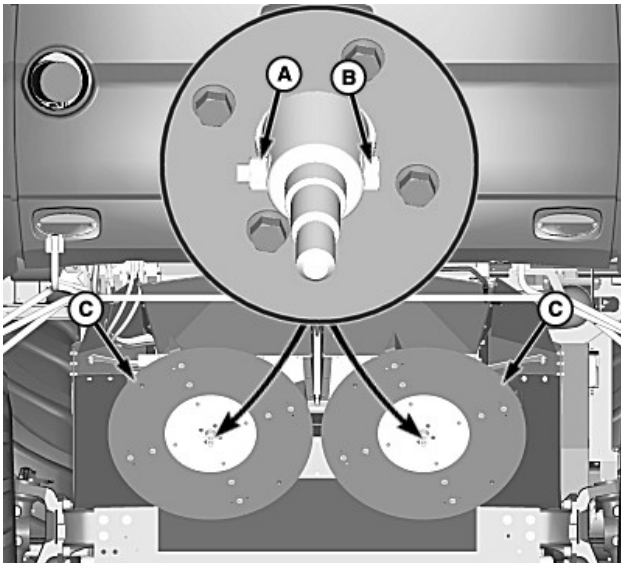

H98196—UN—23SEP10

A—Nut
B—Cap Screw
C—Disk Assemblies

Remove nuts (A) and cap screws (B) from disk assemblies (C).

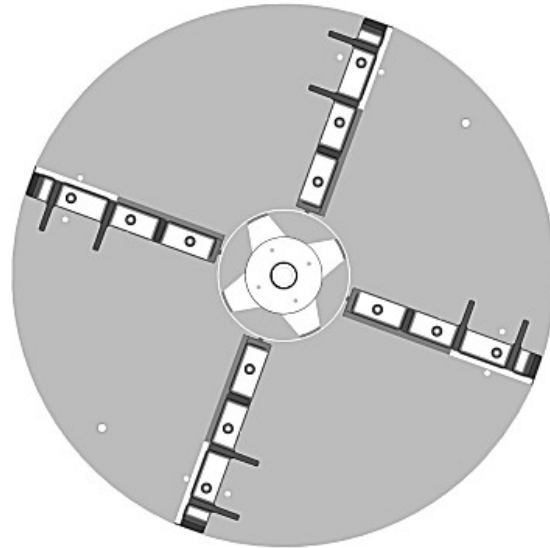

H98198—UN—23SEP10

IMPORTANT: When replacing worn or damaged blades, make sure to replace blades on opposite sides of disk at the same time to maintain disk rotational balance.

Blades are oriented in alternating hole patterns to obtain an optimum material spread. Ensure that replacement blades are put back in the same holes as previously removed.


Install replacement blades as needed and tighten hardware to specification.

Specification

Blade Hardware—Torque 22 N·m
(16 lb.-ft.)

OUC6075.00009D6-19-23SEP10

Wide Spread Straw Spreader (Optional)

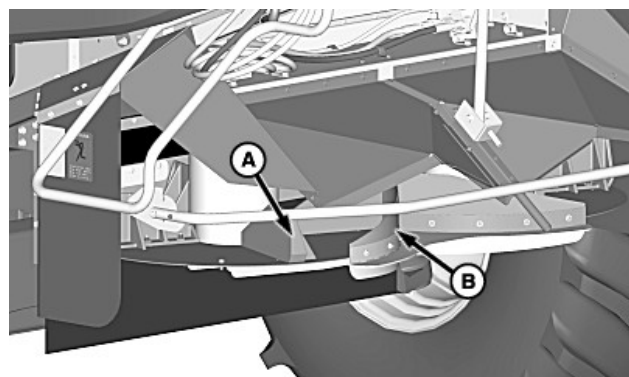

H98199—UN—23SEP10

A—Blades
B—Shrouds


CAUTION: Do not let anyone stand behind spreader while it is running. Shut OFF engine, set parking brake and remove key before adjusting spreader.

NOTE: Shrouds should be removed when harvesting with headers smaller than 9.1 m (30 ft.) or corn heads smaller than 12 rows to provide optimal material distribution.

When straw spreader blades (A) and shrouds (B) are installed, it increases spread width and provides better material distribution for larger headers. See your John Deere dealer for further information.

OOU6075,00009D9-19-28MAR11

Chopper Drive Belt Tension—Adjusting

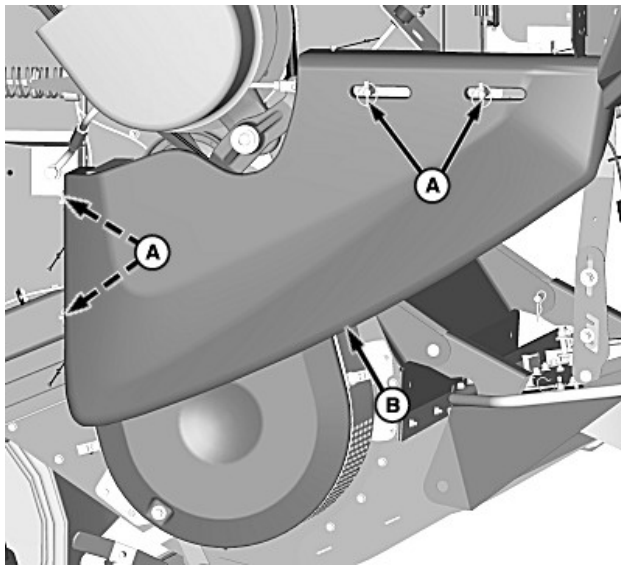


H98146—UN—21SEP10

A—Quick-Lock Pins
B—Shield

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Lower chopper fully to properly tension belts.

Remove quick-lock pins (A) and shield (B).

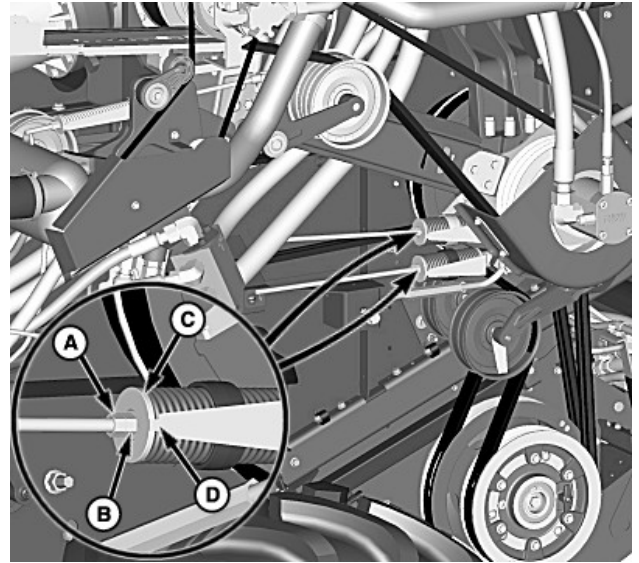

H108275—UN—18JUN13


A—Lock Nut
B—Nut
C—Washer
D—Gauge

Loosen lock nut (A) and tighten nut (B) until washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

Install shield and retain with quick-lock pins.

OOU6075,00013DF-19-18JUN13

Chopper Belt—Replacing

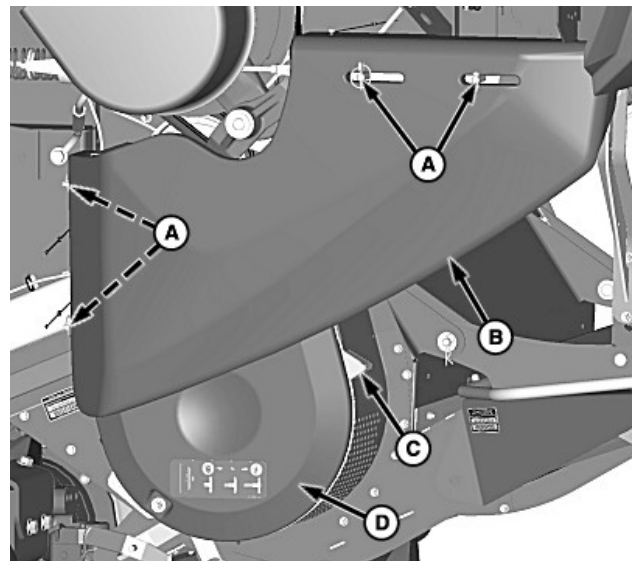

H105442—UN—18MAY12


A—Quick-Lock Pins
B—Shield
C—Latch
D—Shield

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Chopper should be moved to middle position for easier belt installation.

Remove quick-lock pins (A) and shield (B).

Release latch (C) and rotate shield (D) to open.

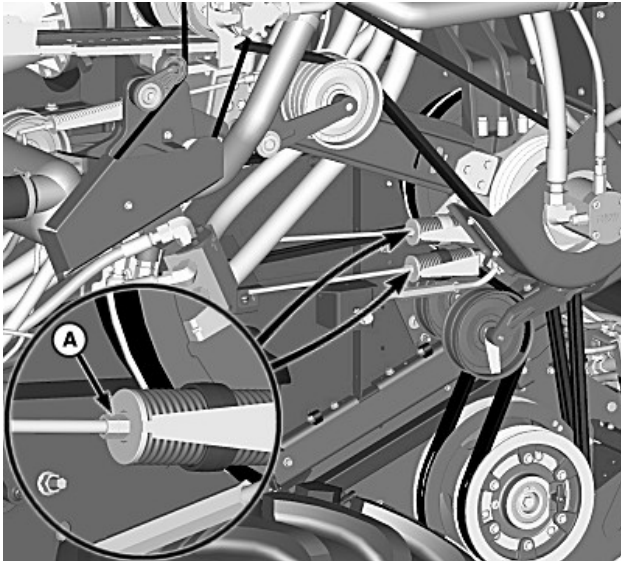


A—Nuts

H108276—UN—18JUN13

NOTE: Mark location of tensioner nuts before loosening to aid in reassembly.


Loosen nuts (A) to relieve belt tension.

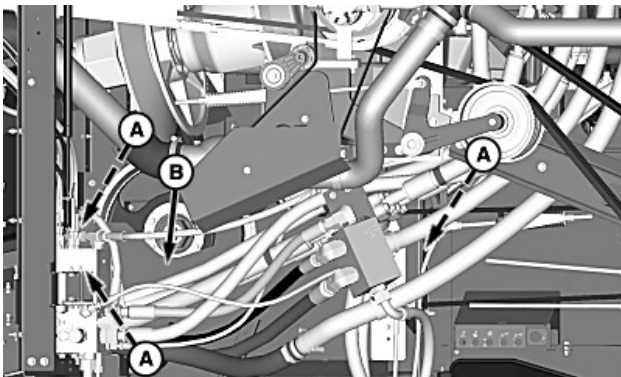

A—Cap Screws
B—Shield

H108266—UN—18JUN13

Remove cap screws (A) and shield (B).

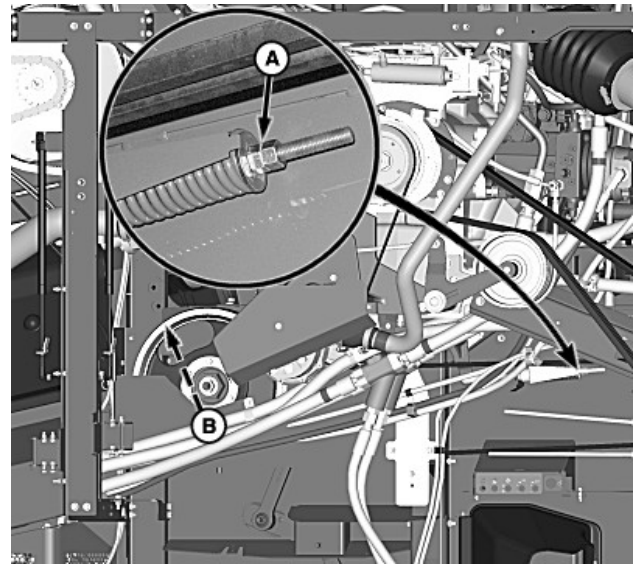


H108267—UN—18JUN13


A—Nuts
B—Discharge Beater Belt

Loosen nuts (A) to relieve belt tension from discharge beater belt (B).

Inner Chopper Belt:

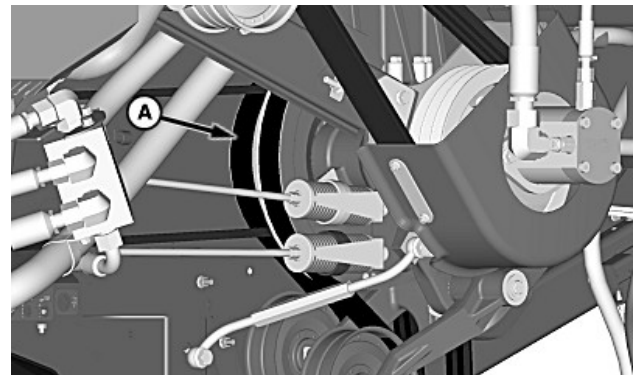

H107035—UN—26FEB13

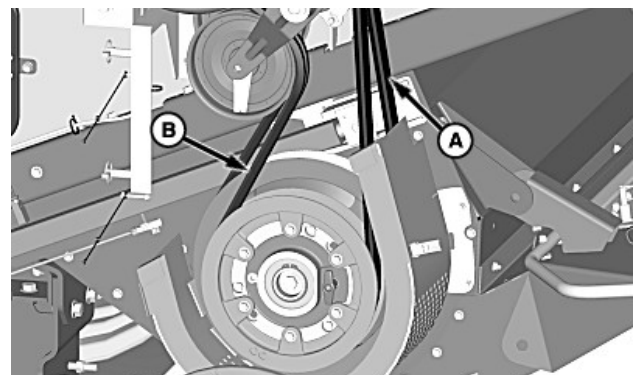

H98161—UN—21SEP10

A—Inner Chopper Drive Belt
B—Outer Chopper Drive Belt

NOTE: Turn belt so it fits between sheave and sidesheet.


Remove inner chopper drive belt (A) from upper sheaves.

Remove outer chopper drive belt (B) from lower sheaves.


Remove inner chopper drive belt from lower sheaves.

Install replacement belt in reverse order.

Outer Chopper Belt:

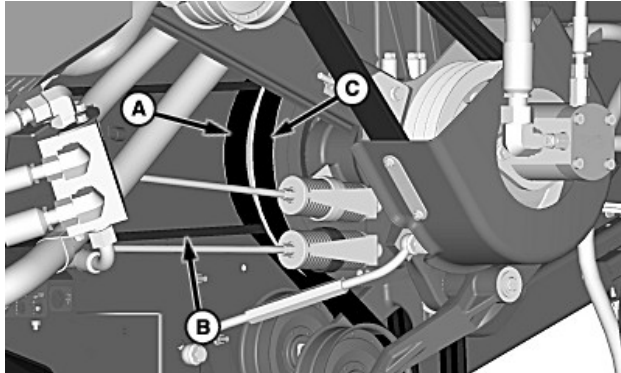

H107027—UN—26FEB13

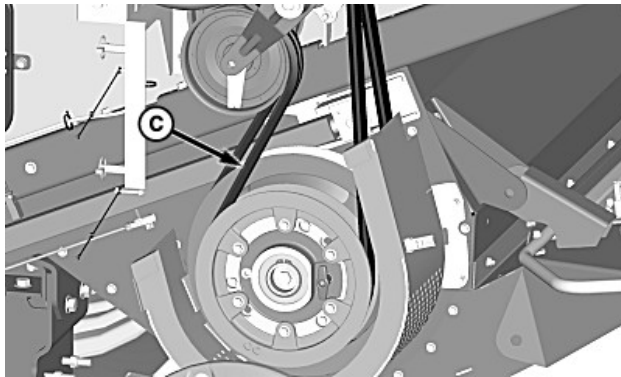

H107028—UN—26FEB13


A—Inner Chopper Drive Belt
B—Discharge Beater Belt
C—Outer Chopper Drive Belt

NOTE: Turn belts so they fit between sheave and sidesheet.

Remove inner chopper drive belt (A) and discharge beater belt (B) from upper sheaves.

Remove outer chopper drive belt (C) from upper and lower sheaves.

Install replacement belt in reverse order.

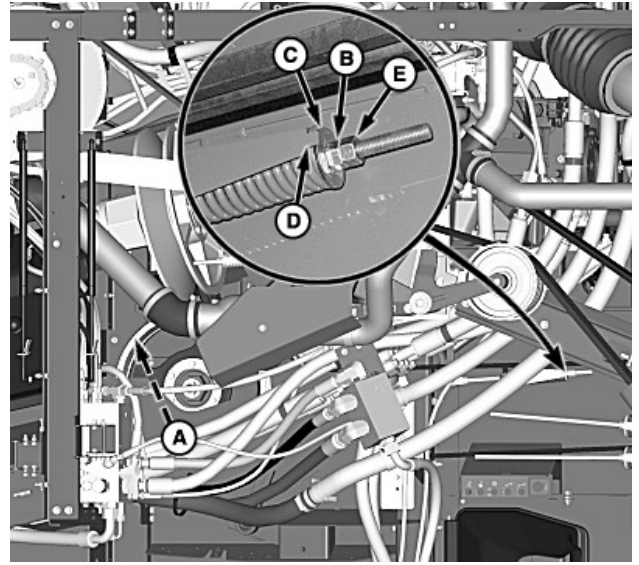


H108277—UN—18JUN13

A—Discharge Beater Belt
B—Nut
C—Washer
D—Gauge
E—Lock Nut

Install discharge beater belt (A) onto sheave.


Tighten nut (B) until washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut (E).

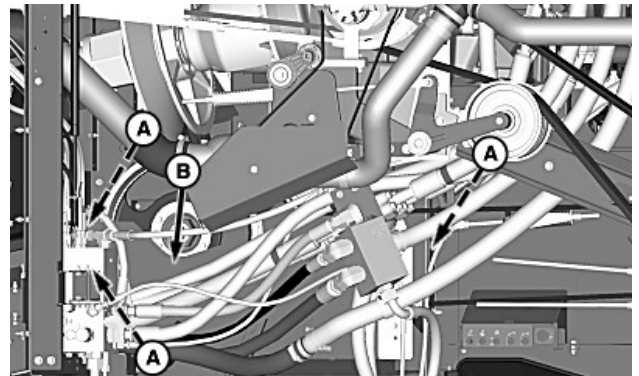

H108266—UN—18JUN13

A—Cap Screws
B—Shield

Install shield (B) and retain with cap screws (A).

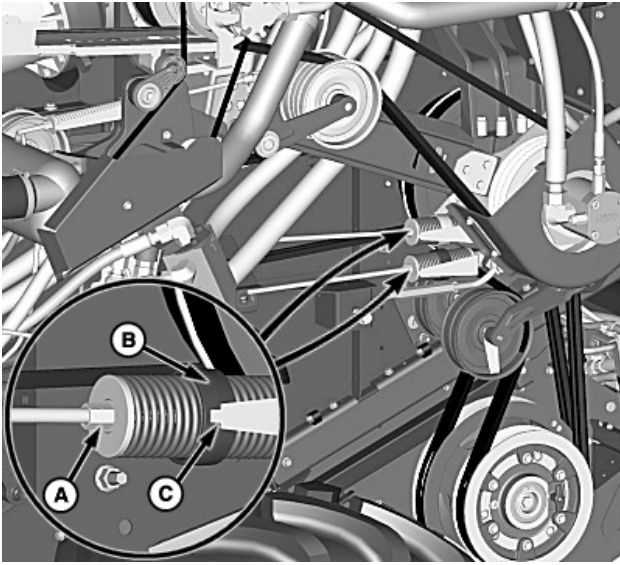


H108278—UN—18JUN13

- A—Nuts
- B—Spring Guide
- C—Gauge

Lower chopper to middle position.

Tighten nuts (A) until spring guide (B) is at end of gauge (C) as shown.

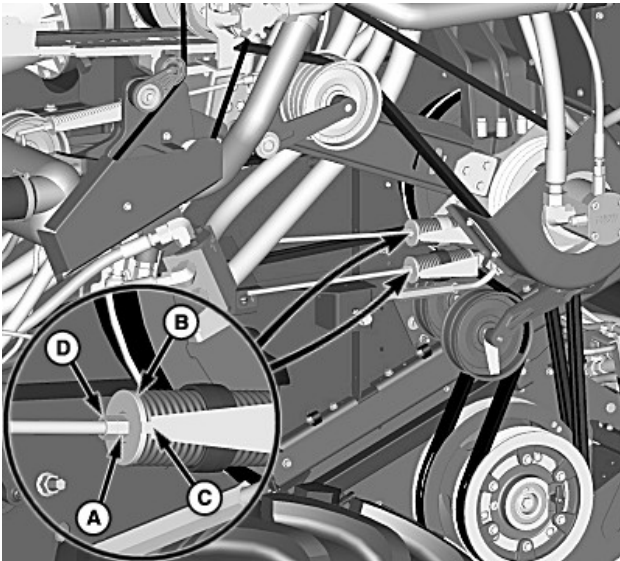

H108279—UN—18JUN13

- A—Nut
- B—Washer
- C—Gauge
- D—Lock Nut


Lower chopper completely to properly tension belt.

Tighten nut (A) until washer (B) is positioned between end of gauge (C) and bottom of step. Tighten lock nut (D).

Install shield and retain with quick-lock pins.


OOU6075,00013E0-19-18JUN13

Chopper Jackshaft Belt—Adjusting

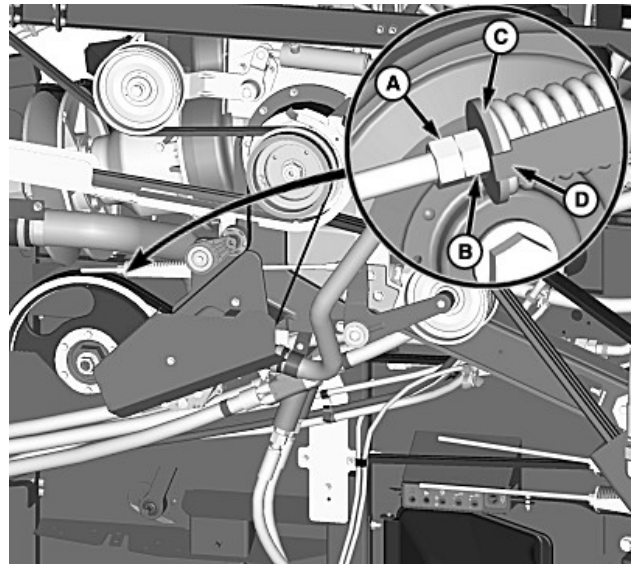

H108280—UN—18JUN13

Style A

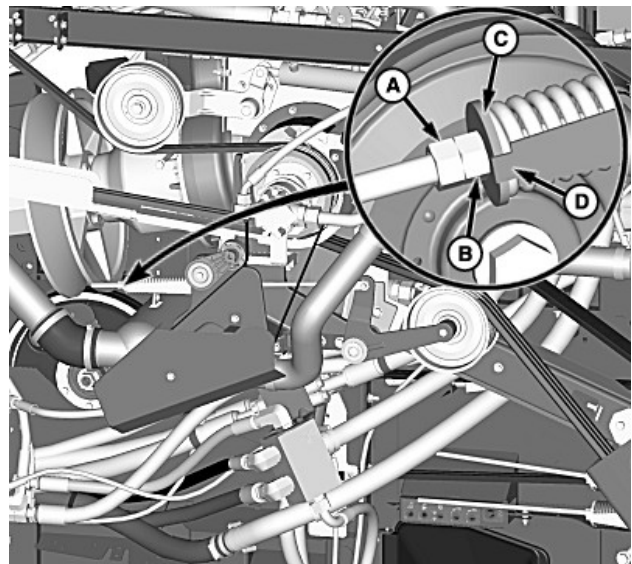

H108281—UN—18JUN13

Style B

- A—Lock Nut
- B—Nut
- C—Washer
- D—Gauge


CAUTION: Shut OFF engine, set park brake and remove key.

Chopper jackshaft belt is located on the left-hand side above the chopper.

Loosen lock nut (A) and tighten nut (B) until washer (C) is positioned between end of gauge (D) and bottom of step. Tighten lock nut.

OOU6075,000436A-19-10OCT16

Chopper Jackshaft Belt—Replacing (Style A)

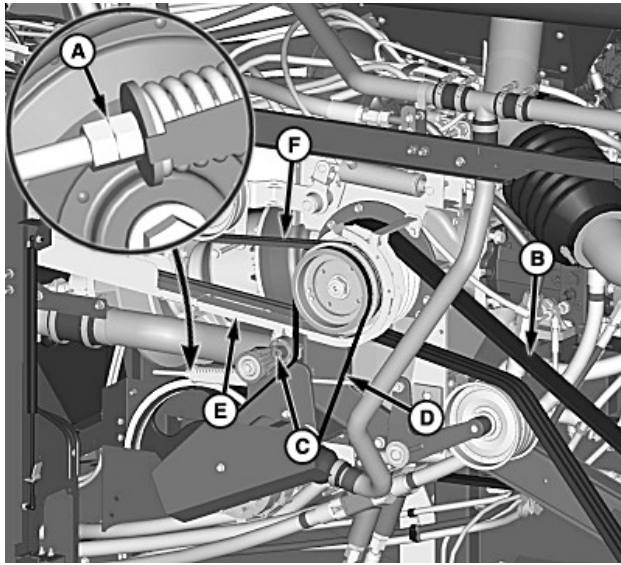


H108282—UN—18JUN13

- A—Nuts
 B—Chopper Jackshaft Belt
 C—Tensioner Arm
 D—Engine Debris Management Belt (If Equipped)
 E—Belt Trap (2 used)
 F—Unloading Auger Drive Belt (2 used)

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Loosen the nuts (A) to relieve belt tension from the chopper jackshaft belt (B).
2. Use a breaker bar to relieve tension from the tensioner arm (C) to remove the engine debris management belt (D).
3. Remove the cap screws from the belt traps (E).
4. Remove and retain the unloading auger drive belts (F).

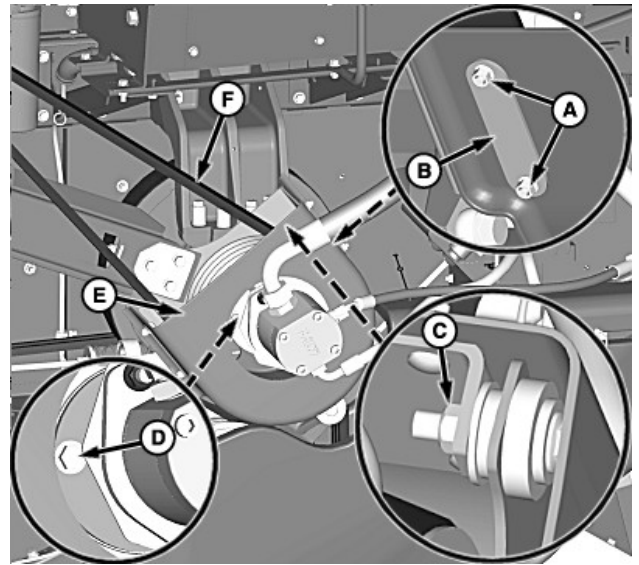

H98502—UN—20OCT10

- A—Hardware
 B—Strap
 C—Nut
 D—Cap Screw (2 used)
 E—Shield
 F—Chopper Jackshaft Belt

5. With Hydraulic Pump

- a. Remove the hardware (A) and strap (B) on both sides of the shield.
- b. Remove the nut (C) from the pump assembly bracket.

NOTE: Verify that the washers and isolator remain in place when removing. Install the previously removed nut to retain the washers and isolators in place when the assembly is removed.

- c. Remove the cap screws (D) from the pump assembly.
- d. Remove the shield (E) and the pump assembly bracket.
- e. Support the shield and the pump assembly bracket out of the way.
- f. Remove the jackshaft belt (F) from the upper and lower sheaves.
- g. Install the replacement belt in reverse order.


NOTE: Align the shaft key on the pump assembly with the keyway in the sheave. Verify that the washers and isolators remain in place on the pump assembly bracket.

- h. Align the pump assembly with the sheave and tighten the cap screws to specification.

Specification

Cap Screws—Torque. 80 N·m
 (59 lb·ft)


- i. Install the shield and the pump assembly bracket and retain with the nut.
- j. Install the strap on both sides of the shield and retain with the hardware.

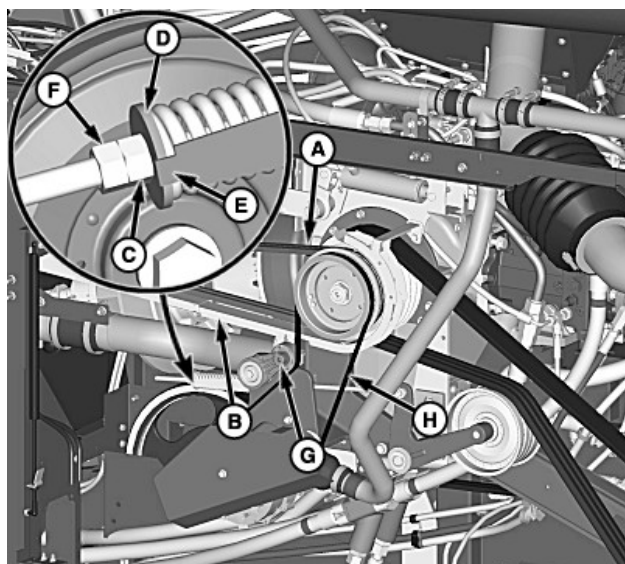

H108284—UN—18JUN13

- A—Unloading Auger Drive Belt (2 used)
 B—Belt Trap (2 used)
 C—Nut
 D—Washer
 E—Gauge
 F—Lock Nut
 G—Tensioner Arm
 H—Engine Debris Management Belt (If Equipped)

- k. Install the unloading auger drive belts (A).
- l. Install the belt traps (B) and retain with the cap screws.
- m. Tighten the nut (C) until the washer (D) is positioned between the end of the gauge (E) and the bottom of the step. Tighten the lock nut (F).
- n. Use a breaker bar to relieve tension from the tensioner arm (G) to install the engine debris management belt (H).

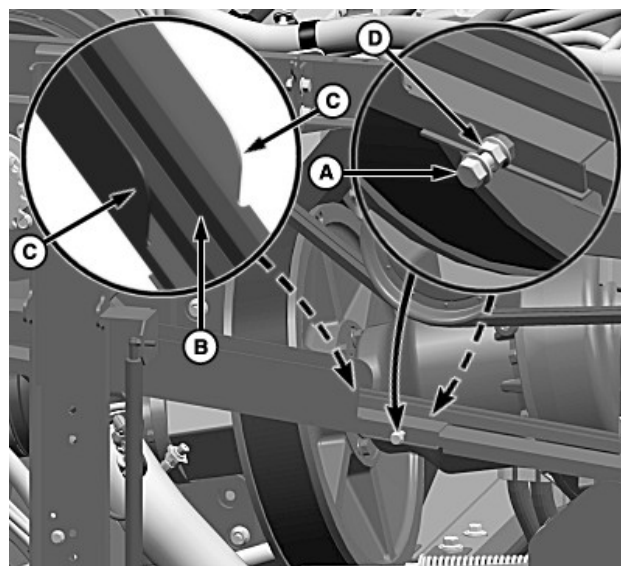


H130219—UN—07MAY20

- A—Cap Screw (2 used)
 B—Unloading Auger Drive Belt (2 used)
 C—Belt Trap
 D—Nut (2 used)

NOTE: Apply thread lock and sealer (medium strength) to the welded nuts on the belt trap.

- o. Adjust the cap screws (A) to center the unloading auger drive belts (B) between the belt trap (C).
- p. Once the unloading auger drive belts are centered between the belt trap, tighten nut (D).

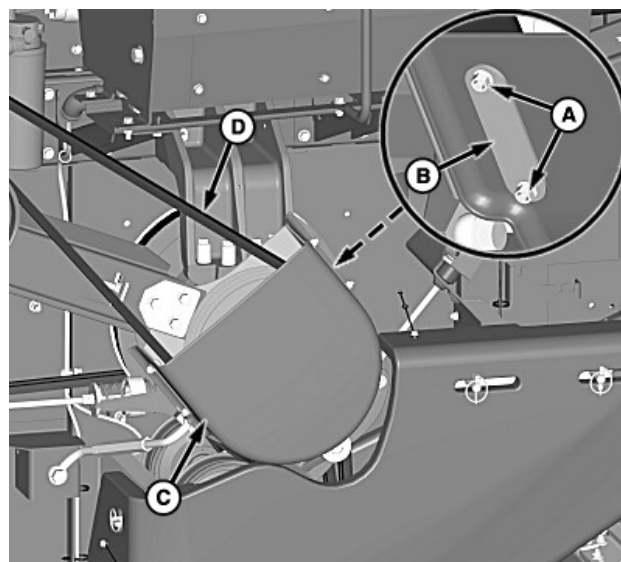


H98500—UN—08OCT10

- A—Hardware
 B—Strap
 C—Shield
 D—Chopper Jackshaft Belt

Without Hydraulic Pump

- a. Remove the hardware (A) and the strap (B) on both sides of the shield (C).


- b. Remove the jackshaft belt (D) from the upper and lower sheaves.
- c. Install the replacement belt in reverse order.
- d. Align the shield with the bracket holes.
- e. Install the strap on both sides of the shield and retain with the hardware.

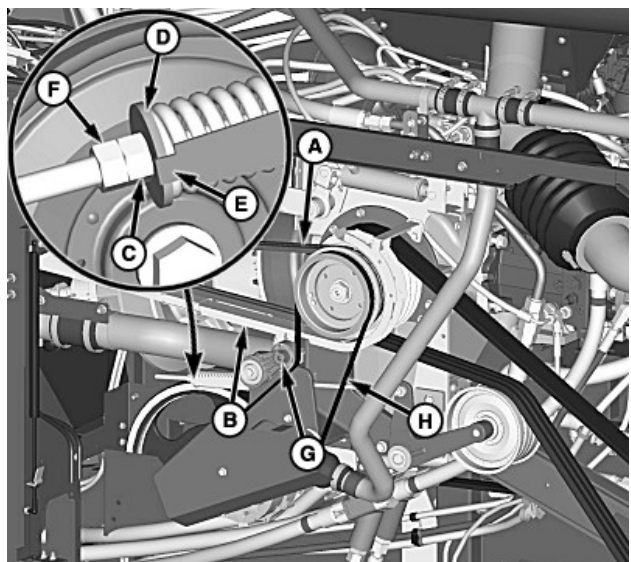

H108285—UN—18JUN13

- A—Unloading Auger Drive Belt (2 used)
 B—Belt Trap (2 used)
 C—Nut
 D—Washer
 E—Gauge
 F—Lock Nut
 G—Tensioner Arm
 H—Engine Debris Management Belt (If Equipped)

- f. Install the unloading auger drive belts (A).
- g. Install the belt traps (B) and retain with the cap screws.
- h. Tighten the nut (C) until the washer (D) is positioned between the end of the gauge (E) and the bottom of the step. Tighten the lock nut (F).
- i. Use a breaker bar to relieve tension from the tensioner arm (G) to install the engine debris management belt (H).

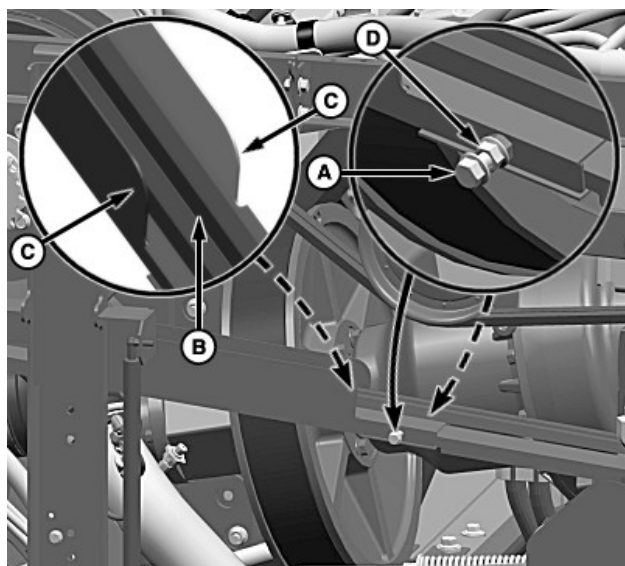

H130219—UN—07MAY20


- A—Cap Screw (2 used)
 B—Unloading Auger Drive Belt (2 used)
 C—Belt Trap
 D—Nut (2 used)

NOTE: Apply thread lock and sealer (medium strength) to the welded nuts on the belt trap.

- j. Adjust the cap screws (A) to center the unloading auger drive belts (B) between the belt trap (C).
- k. Once the unloading auger drive belts are centered between the belt trap, tighten nut (D).

OUO6075,0004E35-19-08JUL20

Chopper Jackshaft Belt—Replacing (Style B)

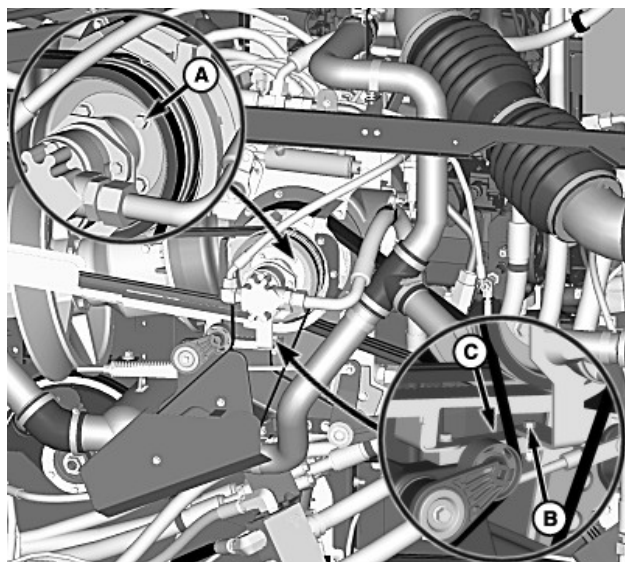


H108283—UN—18JUN13

- A—Cap Screw (4 used)
 B—Hardware

C—Isolator Strap

CAUTION: Shut OFF engine, set park brake, and remove key.


1. Remove the cap screws (A) and the hardware (B) from the isolator strap (C).
2. Remove the pump assembly and support the pump assembly out of the way.

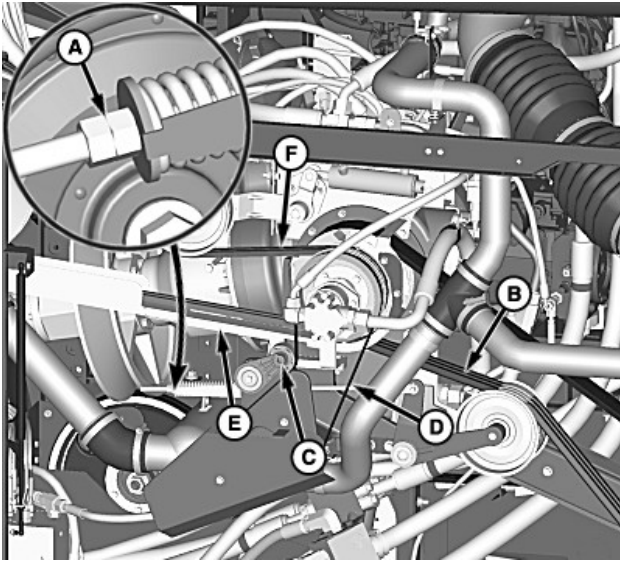

- A—Nuts
B—Chopper Jackshaft Belt
C—Tensioner Arm
D—Engine Debris Management Belt (If Equipped)
E—Belt Trap (2 used)
F—Unloading Auger Drive Belt (2 used)

3. Loosen the nuts (A) to relieve belt tension from the chopper jackshaft belt (B).
4. Use a breaker bar to relieve tension from the tensioner arm (C) to remove the engine debris management belt (D).
5. Remove the cap screws from the belt traps (E).
6. Remove and retain the unloading auger drive belts (F).

H108286—UN—18JUN13

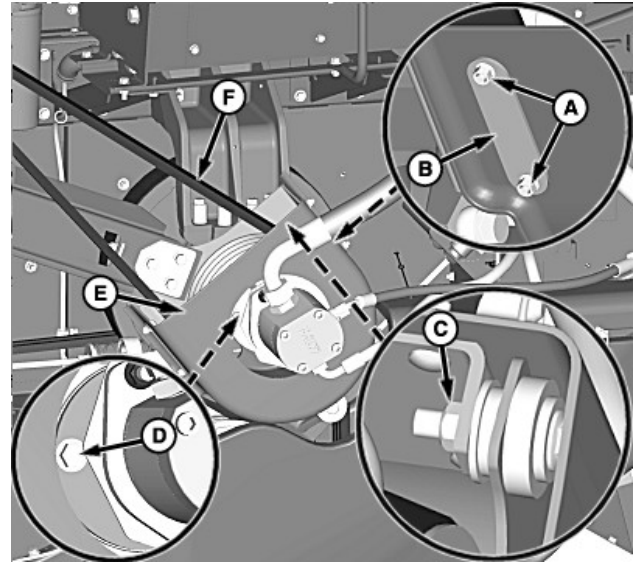

H98502—UN—20OCT10

- A—Hardware
B—Strap
C—Nut
D—Cap Screw (2 used)
E—Shield
F—Chopper Jackshaft Belt

7. With Hydraulic Pump

- a. Remove the hardware (A) and the strap (B) on both sides of the shield.
- b. Remove the nut (C) from the pump assembly bracket.

NOTE: Verify that the washers and isolator remain in place when removing. Install the previously removed nut to retain the washers and isolators in place when the assembly is removed.

- c. Remove the cap screws (D) from the pump assembly.
- d. Remove the shield (E) and the pump assembly bracket.
- e. Support the shield and the pump assembly bracket out of the way.
- f. Remove the jackshaft belt (F) from the upper and lower sheaves.
- g. Install the replacement belt in reverse order.


NOTE: Align the shaft key on the pump assembly with the keyway in the sheave. Verify that the washers and isolators remain in place on the pump assembly bracket.

- h. Align the pump assembly with the sheave and tighten the cap screws to specification.

Specification

Cap Screws—Torque. 80 N·m
(59 lb·ft)


- i. Install the shield and the pump assembly bracket and retain with the nut.
- j. Install the strap on both sides of the shield and retain with the hardware.

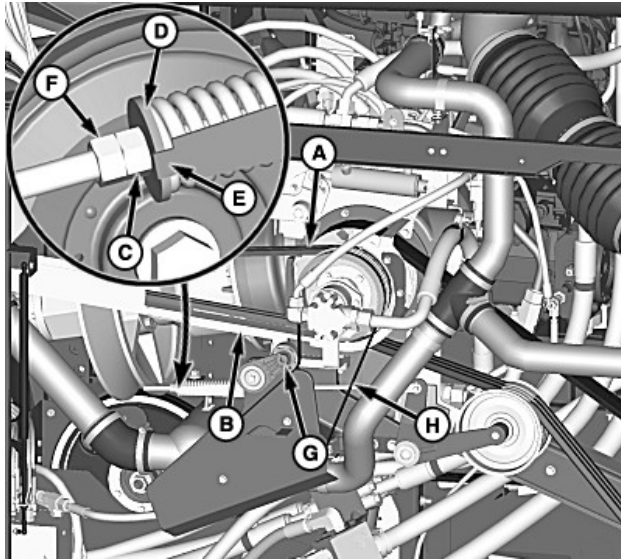

H108287—UN—18JUN13

- A—Unloading Auger Drive Belt (2 used)
 B—Belt Trap (2 used)
 C—Nut
 D—Washer
 E—Gauge
 F—Lock Nut
 G—Tensioner Arm
 H—Engine Debris Management Belt (If Equipped)

- k. Install the unloading auger drive belts (A).
- l. Install the belt traps (B) and retain with the cap screws.
- m. Tighten the nut (C) until the washer (D) is positioned between the end of the gauge (E) and the bottom of the step. Tighten the lock nut (F).
- n. Use a breaker bar to relieve tension from the tensioner arm (G) to install the engine debris management belt (H).

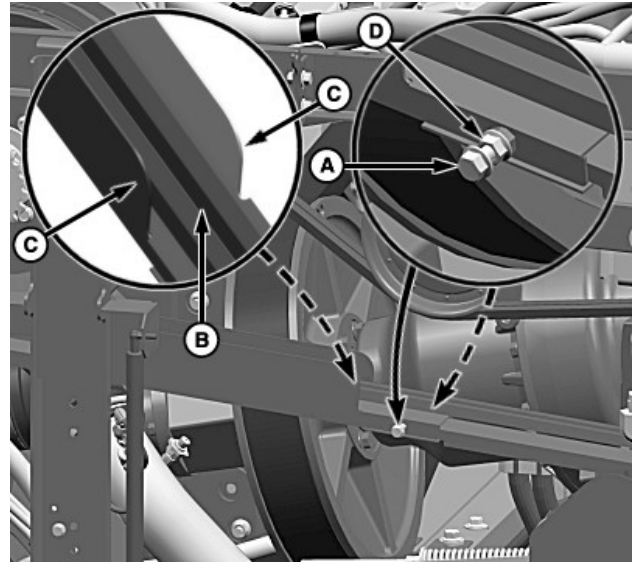


H130219—UN—07MAY20

- A—Cap Screw (2 used)
 B—Unloading Auger Drive Belt (2 used)
 C—Belt Trap
 D—Nut (2 used)

NOTE: Apply thread lock and sealer (medium strength) to the welded nuts on the belt trap.

- o. Adjust the cap screws (A) to center the unloading auger drive belts (B) between the belt trap (C).
- p. Once the unloading auger drive belts are centered between the belt trap, tighten nut (D).

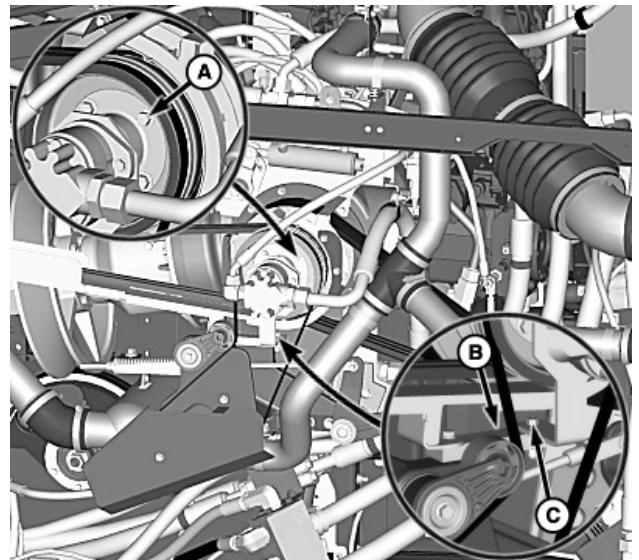

H108288—UN—18JUN13


- A—Cap Screw (4 used)
 B—Isolator Strap
 C—Hardware

- q. Align the pump assembly with the sheave and tighten the cap screws (A) to specification.

Specification

Cap Screws—Torque. 80 N·m
(59 lb·ft)

- r. Install the isolator strap (B) and retain with the hardware (C).

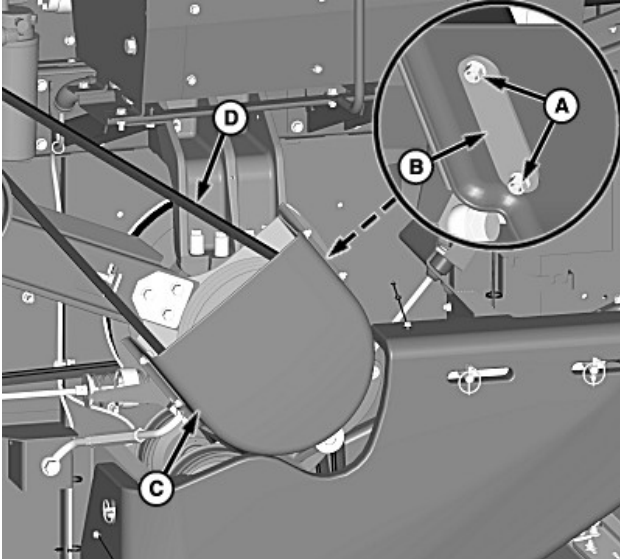


H98500—UN—08OCT10

- A—Hardware
B—Strap
C—Shield
D—Chopper Jackshaft Belt

Without Hydraulic Pump


- a. Remove the hardware (A) and the strap (B) on both sides of the shield (C).
- b. Remove the jackshaft belt (D) from the upper and lower sheaves.
- c. Install the replacement belt in reverse order.
- d. Align the shield with the bracket holes.
- e. Install the strap on both sides of the shield and retain with the hardware.

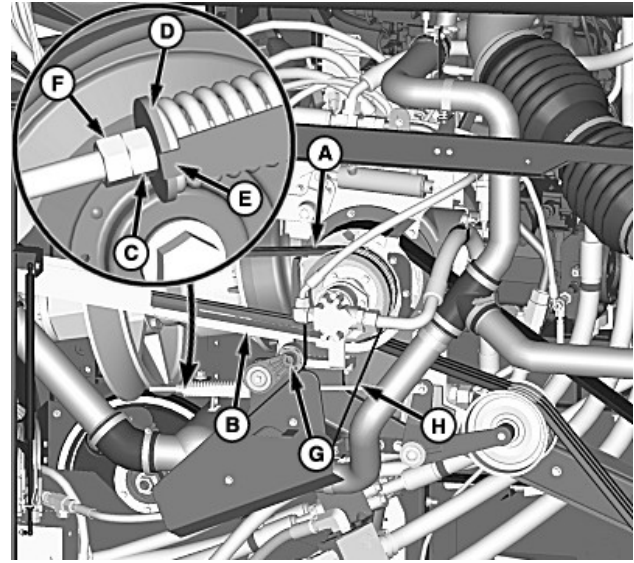

H108287—UN—18JUN13

- A—Unloading Auger Drive Belt (2 used)
B—Belt Trap (2 used)
C—Nut
D—Washer
E—Gauge
F—Lock Nut
G—Tensioner Arm
H—Engine Debris Management Belt (If Equipped)

- f. Install the unloading auger drive belts (A).
- g. Install the belt traps (B) and retain with the cap screws.
- h. Tighten the nut (C) until the washer (D) is positioned between the end of the gauge (E) and the bottom of the step. Tighten the lock nut (F).
- i. Use a breaker bar to relieve tension from the tensioner arm (G) to install the engine debris management belt (H).

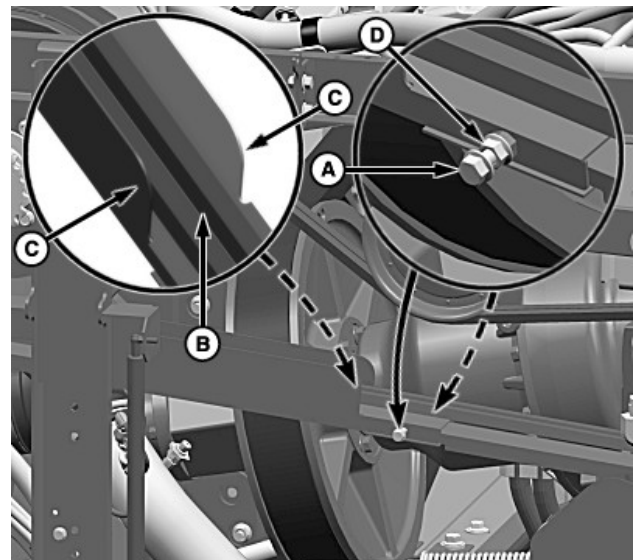


H130219—UN—07MAY20

- A—Cap Screw (2 used)
B—Unloading Auger Drive Belt (2 used)

C—Belt Trap
D—Nut (2 used)

NOTE: Apply thread lock and sealer (medium strength) to the welded nuts on the belt trap.

- j. Adjust the cap screws (A) to center the unloading auger drive belts (B) between the belt trap (C).
- k. Once the unloading auger drive belts are centered between the belt trap, tighten nut (D).

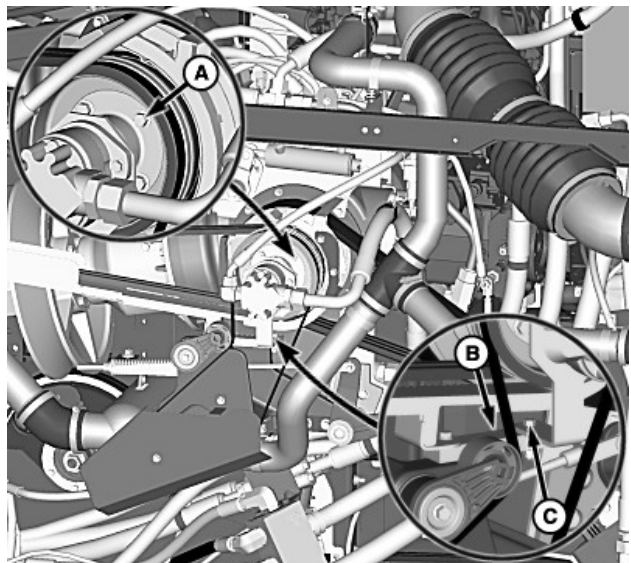

A—Cap Screw (4 used)
B—Isolator Strap
C—Hardware

- l. Align the pump assembly with the sheave and tighten the cap screws (A) to specification.

Specification


Cap Screws—Torque. 80 N·m
(59 lb·ft)

- m. Install the isolator strap (B) and retain with the hardware (C).


OUO6075,0004E36-19-08JUL20

Grain Tank and Unloading System

Grain Tank/Engine Ladder

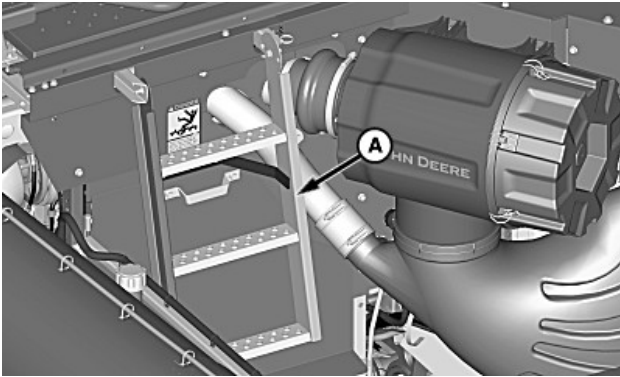

H116816—UN—06JAN16

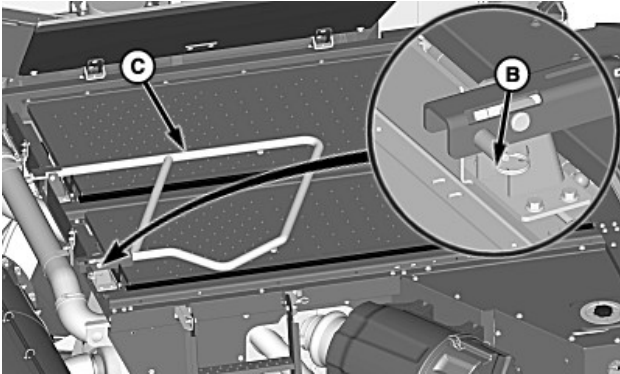

A—Ladder
B—Lockout Pin
C—Handrail


CAUTION: Shut OFF engine, set park brake and remove key.

Use ladder (A) to access grain tank.

Pull lockout pin (B) and rotate handrail (C) up until handrail locks into place.

OUC6075,00041C2-19-04MAY16

Grain Tank Sample Trough

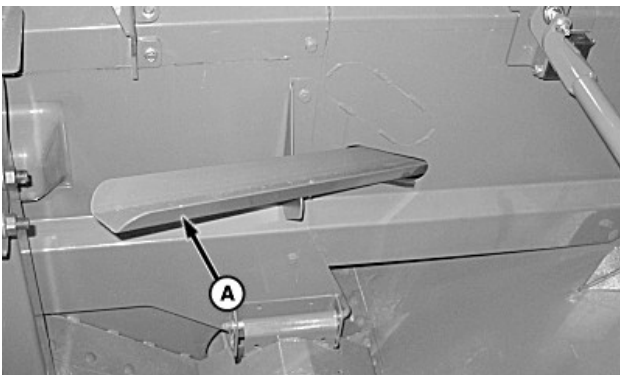

H96883—UN—14JUN10



H96884—UN—14JUN10

A—Sample Trough
B—Door


1. Grain tank sample trough (A) allows the operator to take a sample of the harvested crop from the loading auger without entering the grain tank.
2. With machine full of the harvested crop, move multi-function lever to the neutral position and set the park brake.
3. Disengage the header and separator.

CAUTION: Do not have a second person check for a grain tank sample.

4. Open door (B). The lower end of the grain tank trough spills off a sample of the harvested crop.

OUC6075,0004FAD-19-14MAY21

Grain Tank Cleanout Doors

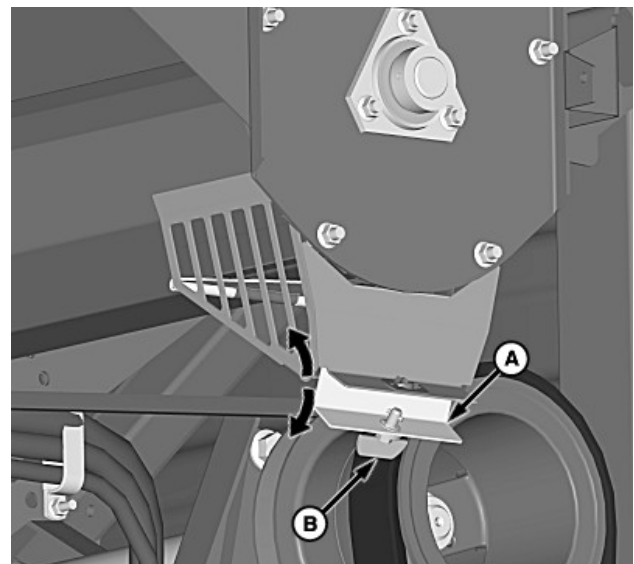

H125361—UN—16NOV18

A—Cleanout Door (2 used)
B—Latch (2 used)

CAUTION: Shut OFF engine, set park brake, and remove key.


The cleanout doors (A) are on the right-hand end of both grain tank cross augers.

These cleanout doors must be opened during storage or for cleaning the grain tank.

Release latch (B) and lower the cleanout door away from both the cross auger troughs.

OOU6075,0004A4A-19-16NOV18

Grain Tank Fill Sensors—Adjusting

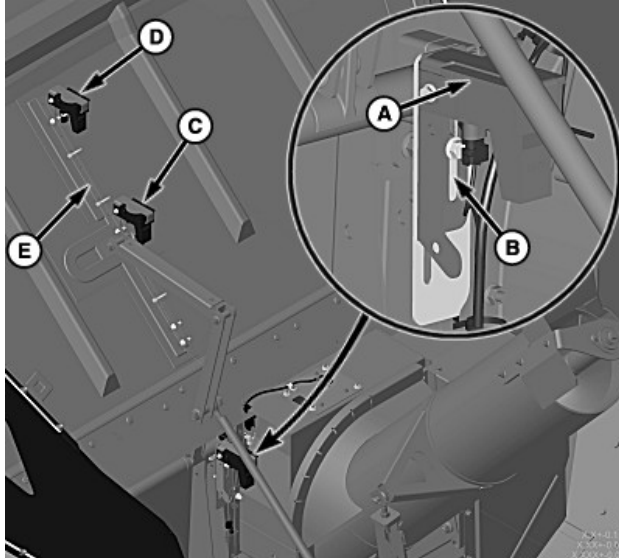

H123556—UN—21FEB18

- A—3/4 Full Sensor
- B—Slot
- C—3/4 Full Sensor (Optional Location)
- D—4/4 Full Sensor
- E—Holes

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Header drive must be engaged for the buzzer to sound.

Grain Tank 3/4 Full Sensor:

3/4 full sensor (A) is on the front side of the clean grain loading auger or on the right-hand grain tank cover. If operating in low flow crop conditions, grain tank sensor (C) can be moved to bottom hole on right-hand grain tank cover.

Adjust sensor by moving it higher or lower in slot (B) or holes (E) to adjust switch "trip" point. The higher the sensor is positioned, the fuller the grain tank is when the buzzer sounds.

Grain tank 3/4 full icon appears on display when grain reaches the sensor.

When grain tank is 3/4 full, beacon lights illuminate to provide a signal to the grain cart operator that grain tank is nearly full.

Grain Tank 4/4 Full Sensor:

Grain tank 4/4 full sensor (D) is on the right-hand grain tank extension or grain tank cover.

Grain tank 4/4 full icon appears on display when grain reaches the sensor.

Adjust sensor by moving it higher or lower in holes (E) to adjust switch "trip" point. The higher the sensor is positioned, the fuller the grain tank is when the buzzer sounds.

OOU6075,00048B8-19-21FEB18

Grain Tank Covers (If Equipped)—Operating



H96897—UN—15JUN10



Folding Button

H115016—UN—22MAR16

CAUTION: Grain tank covers must be closed and antenna retained with hook on cab roof before transporting machine on roadway. Avoid contact with low hanging power lines and tree limbs.

IMPORTANT: Grain tank must be empty before folding grain tank covers.


NOTE: Grain tank covers must be opened all the way in order to engage separator.

Clean grain loading auger rises when grain tank covers are opened. Auger swings down when covers are closed.

Press folding button on navigation bar. See Folding Application Help or Operator's Station Help for further information on raising or lowering grain tank covers.

OOU6075,0004373-19-25JAN17

Grain Tank Covers (If Equipped)— Adjusting

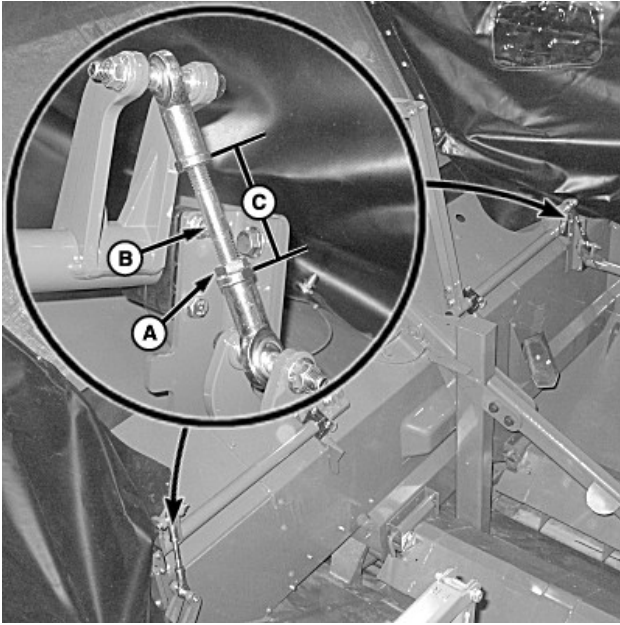

A—Nut
B—Bolt
C—Nominal Distance, 64 mm (2-1/2 in.)

H96901—UN—15JUN10

NOTE: Only adjust turnbuckles on left-hand side of machine. Turnbuckles on right-hand side of machine are not adjustable.

Raise grain tank covers fully.

Loosen nut (A) and adjust bolt (B) until a nominal distance (C) is achieved between turnbuckle ends as shown.


NOTE: Increasing turnbuckle distance increases clearance between left cover and front/rear covers.
Decreasing turnbuckle distance decreases clearance between left cover and front/rear covers.

Tighten nut when distance is achieved.

Repeat as needed on remaining turnbuckle.

OUO6075,00007F0-19-21OCT10

Grain Tank Cross Auger Covers

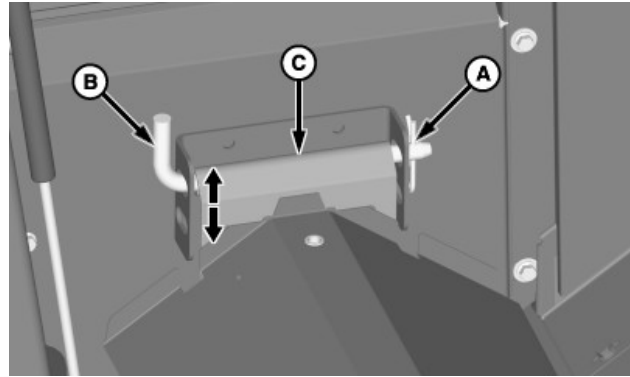

H125345—UN—14NOV18

A—Spring Pin (4 used)
B—Pin (4 used)
C—Auger Cover (2 used)

CAUTION: Shut OFF engine, set park brake, and remove key.

IMPORTANT: If the auger covers are adjusted too far, auger drive shear bolt can break repeatedly, or damage can occur to the augers or the grain tank.

Auger covers are used to adjust the unloading rate. To adjust auger covers:


1. Remove spring pin (A) and pin (B) retaining the ends of the auger cover (C) to the grain tank.
2. Hold cover in the desired position and install the previously removed pin and spring pin.

For optimal operation, auger covers must be retained in a level position (if equipped with ActiveYield™) over the entire length of the cross auger.

NOTE: If needed, adjust the cross auger covers up or down to increase or decrease flow rate depending on the crop type and moisture conditions. Adjusting the cross auger covers also affects the unload system power consumption.

OUO6075,0004A4B-19-30MAY19

ActiveYield™ (If Equipped) Cross Auger Covers—Removing

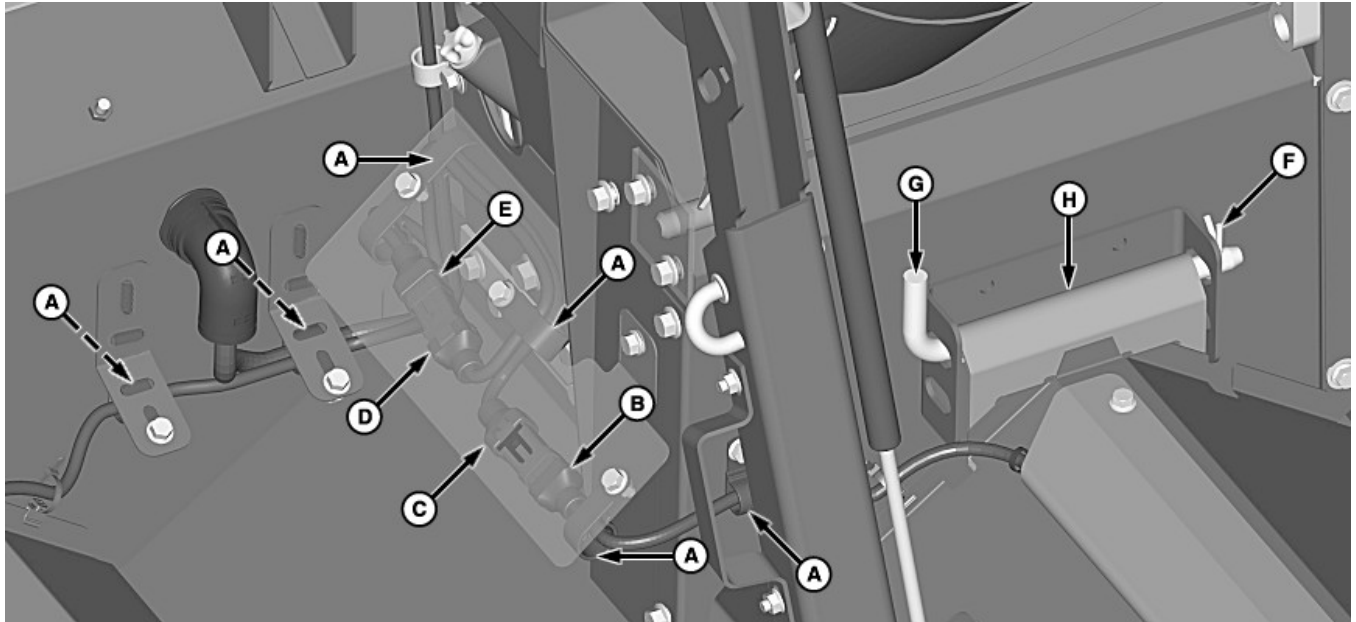

H125352—UN—14NOV18

- A—Clamps
B—Rear Cross Auger Connector (female connector)
C—Grain Tank Connector (male connector)
D—Front Cross Auger Connector (male connector)

CAUTION: Shut OFF engine, set park brake, and remove key.

IMPORTANT: Use extra care when removing and installing auger covers. Do not stand on, drop, or allow objects to fall onto sensors.

NOTE: In certain crop conditions and specialty crops, cross auger covers must be removed.

ActiveYield™ system **MUST** be disabled when cross auger covers are removed. See *Calibrations Application Help* or *Operator's Station Help* for further information.

1. Remove wiring harnesses from clamps (A) as needed.
2. Disconnect rear cross auger connector (B) from the grain tank connector (C).
3. Disconnect front cross auger connector (D) from the grain tank connector (E).
4. Connect grain tank connectors (C and E) together and retain with clamps as needed.


IMPORTANT: Connect harnesses together to enable yield monitoring even if ActiveYield™ is disabled. To prevent contact with cross augers, retain wiring harness with clamps.

- E—Grain Tank Connector (female connector)
F—Spring Pin (4 used)
G—Pin (4 used)
H—Auger Cover (2 used)

5. Remove spring pin (F) and pin (G) from both ends of auger cover (H).
6. Remove auger cover from the machine and repeat on remaining auger cover.

OUC6075,0004BC2-19-31MAY19

ActiveYield™ (If Equipped) Sensor Locations

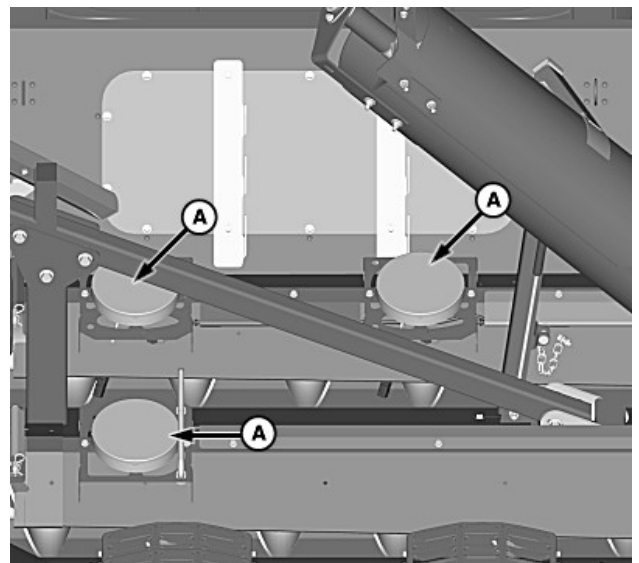

H125412—UN—30NOV18

A—Sensors

ActiveYield is a trademark of Deere & Company


IMPORTANT: Do not stand on, drop or allow objects to fall onto sensors as damage could occur.

NOTE: Two sensors are on the front cross auger cover and one sensor is on the rear cross auger cover.

ActiveYield™ uses sensors (A) located in the grain tank on the cross auger covers to measure mass of harvested grain.

OUO6075,0004A55-19-30NOV18

Shear Bolt Location

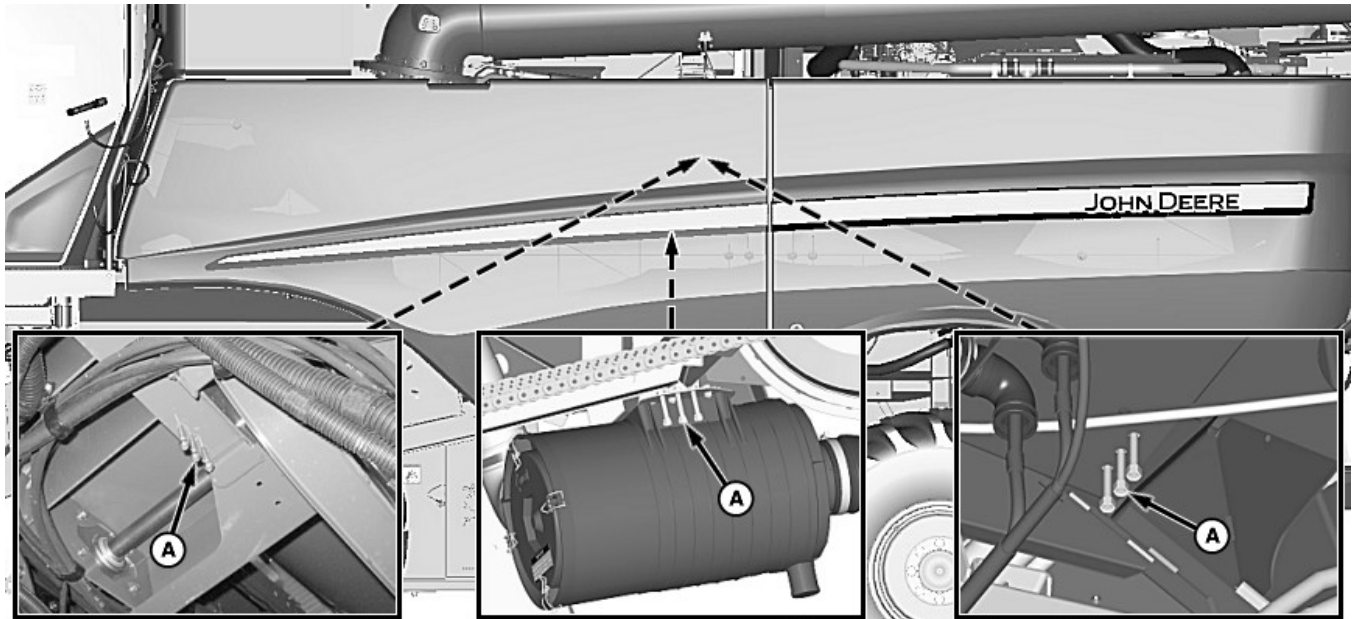

H111120—UN—17APR14

A—Shear Bolt (3 Used)

NOTE: Three extra shear bolts are provided. Locations vary depending on engine size, engine emission levels, and grain tank unload rate.

If unloading auger drive shear bolt breaks, remove and replace with extra shear bolt (A) from location shown.


OUO6075,00017C7-19-17APR14

Extra shear bolts are provided on machine. Refer to Shear Bolt Location in this section for further information.

IMPORTANT: Do not install a tire inner tube or a sack to end of unloading auger. Any restriction at end of auger can cause damage to unloading auger system and could cause shear bolt failure.

OUO6075,00017C6-19-16APR14

Unloading Auger Drive Shear Bolt

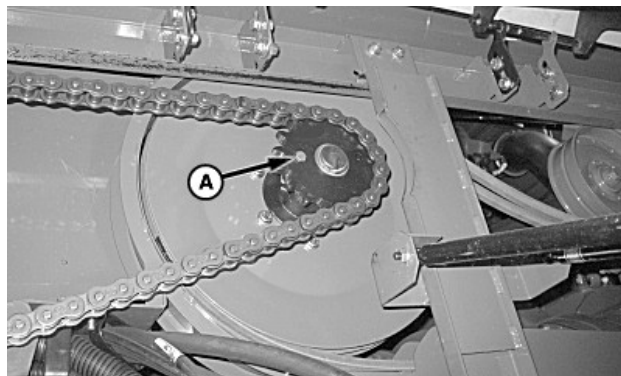


H96888—UN—14JUN10

A—Shear Bolt

CAUTION: Shut OFF engine, set park brake and remove key.

Use only John Deere supplied shear bolt (A) (cap screw through hub), see your John Deere dealer for replacement shear bolts.

Grain Tank Loading Auger Deflector

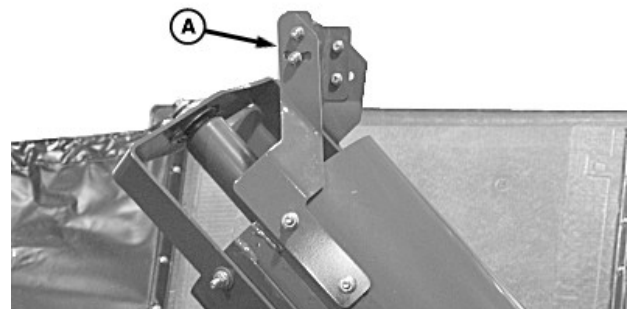

H96890—UN—14JUN10

A—Deflector

CAUTION: Shut OFF engine, set park brake and remove key.

Position deflector (A) as needed.

Counterclockwise rotation:


- Windy conditions when harvesting crops like grass seed or rape.
- Corn—Grain tank fills to the left and to the rear.

Clockwise rotation:

- Grain—Grain tank fills to the right and to the front.

OUO6075,0004362-19-07OCT16

Grain Tank Loading Auger (Grain Tank Extensions)—Folding

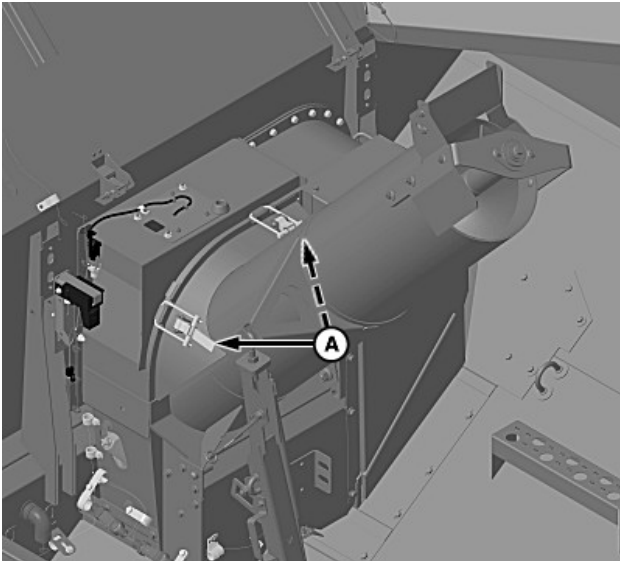

A—Clamps


CAUTION: Grain tank loading auger is heavy. Use extra care when raising or lowering auger.

Overall height of the machine is reduced by 0.5 m (1-1/2 ft) when grain tank extensions are lowered.

Hold the top of the auger and release clamps (A). Lower auger onto cross auger cover.

OUO6075,00048B9-19-21FEB18

Grain Tank Loading Auger (Grain Tank Covers)—Adjusting

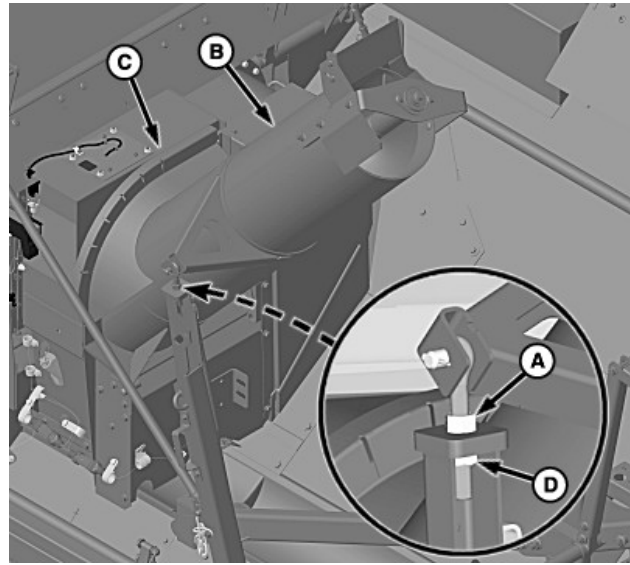

A—Nut
B—Grain Tank Loading Auger
C—Transition Housing
D—Nut


CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: Verify that the grain tank covers are fully raised.

Adjust nut (A) until grain tank loading auger (B) contacts transition housing (C).

Adjust nut (A) an extra 1/2 turn and tighten the nut (D) to lock the eyebolt in place.

NOTE: This keeps the loading auger housing tight against the transition housing making sure the loading auger is fully engaged to the driver on the gearbox.

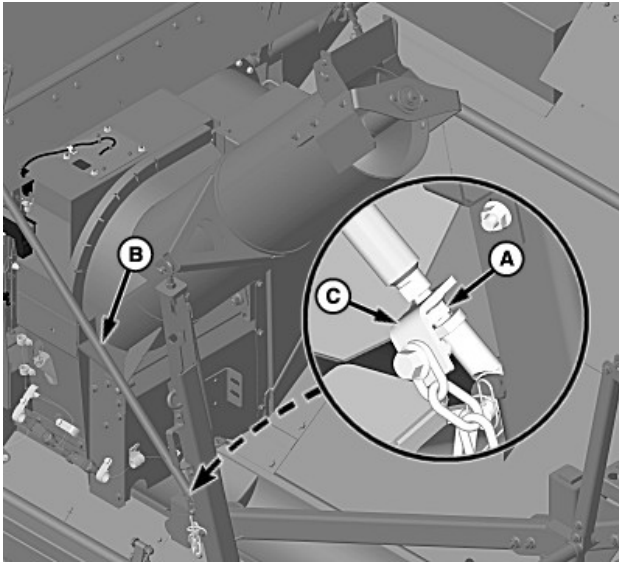

H123559—UN—21FEB18

A—Nut
B—Turnbuckle
C—Bracket

Loosen nut (A) and adjust the turnbuckle (B) until a slight amount of resistance is felt on the turnbuckle.


NOTE: Lengthen or shorten the turnbuckle to increase or decrease the gap between the loading auger housing and the transition housing.

The pin at the end of the turnbuckle should rotate freely when properly adjusted.

Verify that bracket (C) faces towards the front of the machine and tighten nut (A) to lock the turnbuckle (B) in place.

OOU6075,00048BA-19-22FEB18

Mass Flow Sensor Plate (Grain Tank Extensions)—Cleaning

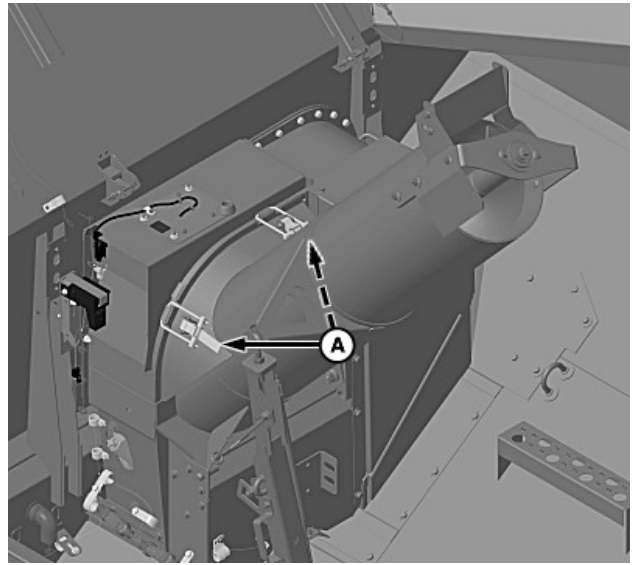

H123557—UN—21FEB18

A—Clamps


CAUTION: Shut OFF engine, set park brake and remove key.

Grain tank loading auger is heavy. Use extra care when raising or lowering auger.

Remove the grain tank sample trough (if equipped).

Hold the top of the grain tank loading auger and release clamps (A).

Lower grain tank loading auger.

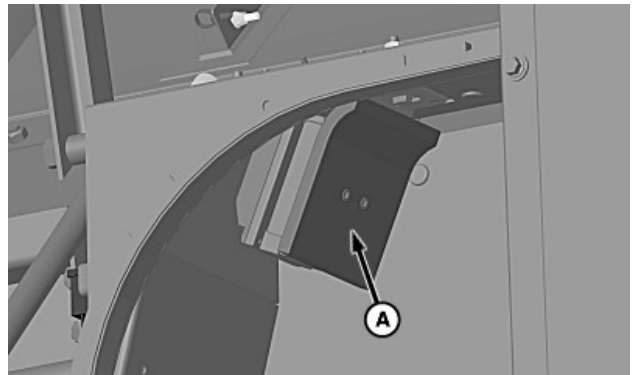

H123560—UN—21FEB18


A—Mass Flow Sensor Plate

Clean the mass flow sensor plate (A).

Raise the grain tank loading auger fully against the transition housing and retain with clamps.

OOU6075,00048BB-19-22FEB18

Mass Flow Sensor Plate (Grain Tank Covers)—Cleaning

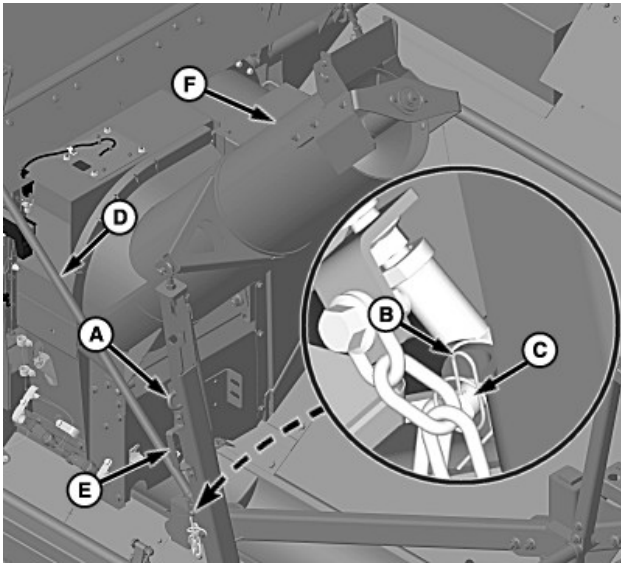

H123561—UN—21FEB18

- A—Pin
- B—Quick-Lock Pin
- C—Pin
- D—Turnbuckle
- E—Handle
- F—Grain Tank Loading Auger


CAUTION: Shut OFF engine, set park brake and remove key.

DO NOT pull or remove pin (A) to lower grain tank loading auger. Removing pin could result in personal injury or machine damage.

Grain tank loading auger is heavy. Use extra care when raising or lowering auger.

Remove quick-lock pin (B) and pin (C) from turnbuckle (D).

Use the handle (E) to help in lowering the grain tank loading auger (F).

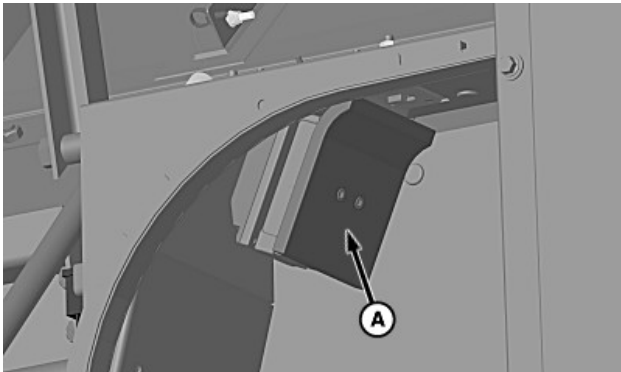

H123560—UN—21FEB18

- A—Mass Flow Sensor Plate


Clean the mass flow sensor plate (A).

Raise the grain tank loading auger fully against the transition housing.

Align the turnbuckle with the hole and retain with pin and quick-lock pin.

OUC6075,00048BC-19-23FEB18

Unloading Auger Drive Chain—Adjusting

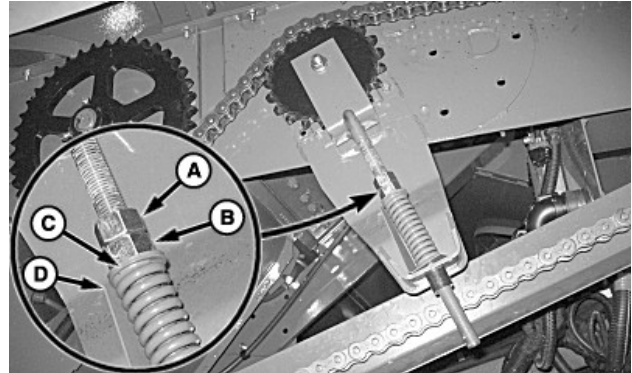

H96891—UN—14JUN10


- A—Nut
- B—Nut
- C—Washer
- D—End of Gauge

CAUTION: Shut OFF engine, set park brake and remove key.

Loosen nut (A). Tighten nut (B) until the washer (C) aligns with end of gauge (D). Tighten lock nut.

OUC6075,0004364-19-07OCT16

Unloading Auger Drive Chain Links—Removing

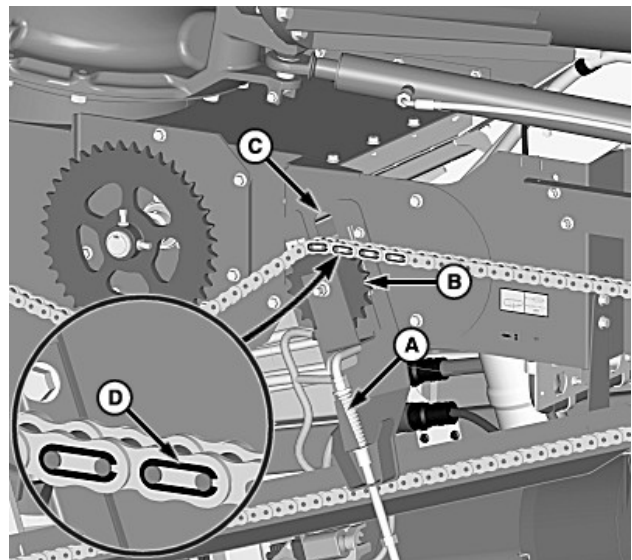

H126295—UN—08MAY19

- A—Spring Tensioner

B—Sprocket
C—End of Slot
D—Connector Link

It is normal for the drive chain to stretch over time. Extra connector links allow the drive chain to be used longer.

NOTE: When removing connector links, always check sprockets for wear.


When the spring tensioner (A) can no longer be adjusted, or the sprocket (B) reaches the end of slot (C), remove connector link (D).

See Unloading Auger Drive Chain—Adjusting for further information.

When the final adjustment is used up, the chain is worn out and must be replaced.

OUO6075,0004B92-19-04JUN19

Unloading Auger Cradle Support—Adjusting

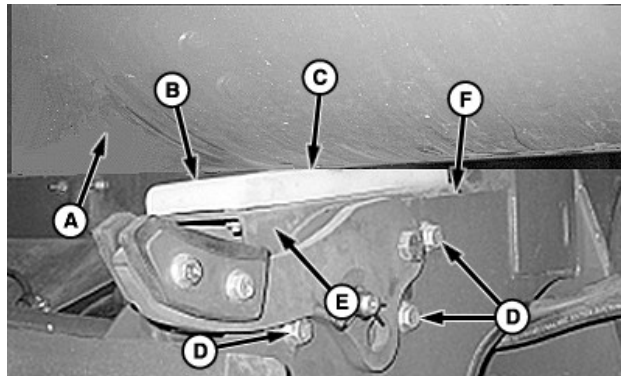

H106291—UN—19DEC12

A—Unloading Auger
B—Wear Plate
C—Location
D—Cap Screws
E—Cradle Support
F—Grain Tank Plate

CAUTION: Shut OFF engine, set park brake and remove key.

1. Swing unloading auger to storage or transport position.

NOTE: No gap should exist between the unloading auger (A) and the wear plate (B) at location (C) when adjusted properly.


2. If a gap exists between the unloading auger and the wear plate, loosen cap screws (D) and adjust cradle support (E) vertically until wear plate contacts lower surface of unloading auger.

NOTE: Top surface of cradle support (E) **MUST** be parallel with top of the grain tank plate (F).


3. Tighten cap screws when cradle is adjusted.

OUO6075,0004367-19-07OCT16

Unloading Auger Position—Adjusting (Style A)

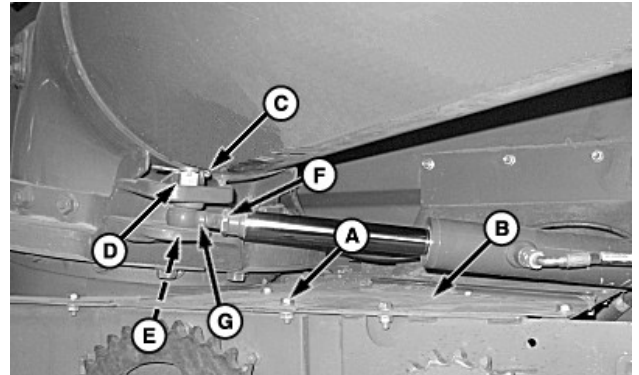

H106293—UN—07DEC12

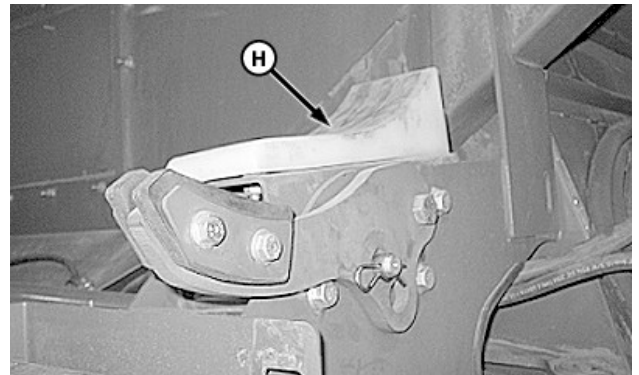

H106322—UN—11DEC12

A—Cap Screw (8 used)
B—Cover
C—Cotter Pin
D—Nut and Washer
E—Pin
F—Nut
G—Eyebolt
H—Wear Plate

CAUTION: Shut OFF engine, set park brake and remove key.


1. Remove cap screws (A) and cover (B).

NOTE: Unloading auger **MUST** contact wear plate when adjusted properly.

2. Remove cotter pin (C), nut and washer (D), and pin (E).
3. Loosen nut (F) and adjust eyebolt (G) until unloading auger lightly contacts wear plate (H).
4. Install previously removed hardware and cover after unloading auger is adjusted.

OUO6075,0004D3A-19-09JAN20

Unloading Auger Position—Adjusting (Style B)

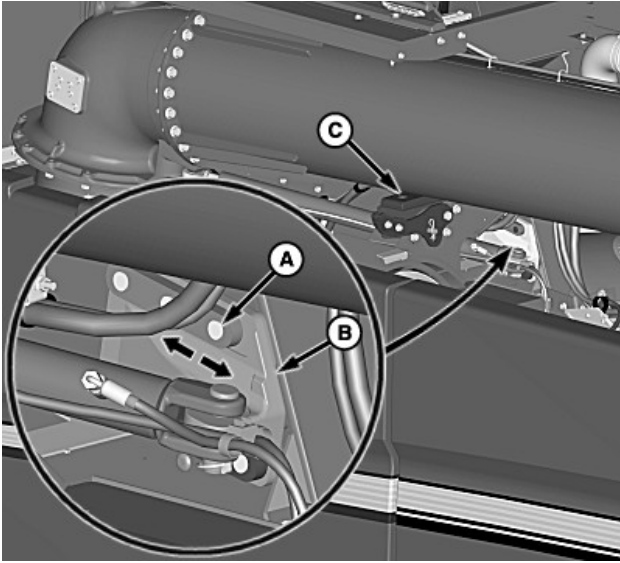

H125348—UN—14NOV18

A—Cap Screw (6 used)
B—Cylinder Bracket
C—Cradle Support

CAUTION: Shut OFF engine, set park brake, and remove key.

NOTE: Cylinder must be fully retracted to set the correct position.


1. Loosen cap screws (A).
2. Adjust unloading auger inward or outward to move the cylinder bracket (B) forward or rearward until the unloading auger sets properly on the cradle support (C).
3. Tighten cap screws to specification.

Specification

Cap Screws—Torque. 422 N·m
(311 lb·ft)


OUO6075,0004D3B-19-09JAN20

Unloading Auger Lock Arm Positions

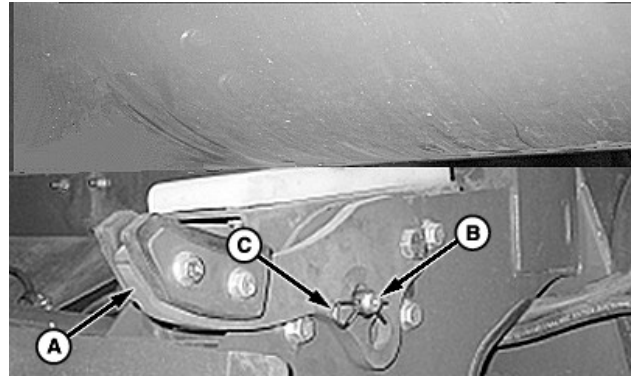

H106300—UN—10DEC12

Field Position

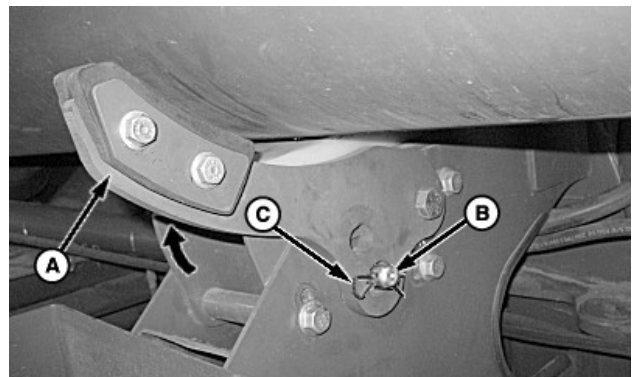

H106292—UN—10DEC12

Storage Position/Transport Position

A—Lock Arm
B—Pin
C—Spring Pin

CAUTION: Shut OFF engine, set park brake and remove key.

Field Position


Lower lock arm (A) as shown and install pin (B) and retain with spring pin (C).

Storage/Transport Position

Raise lock arm (A) as shown and install pin (B) and retain with spring pin (C).

OUO6075,0004369-19-20DEC16

Unloading Auger Drive Belt—Replacing (Style A)

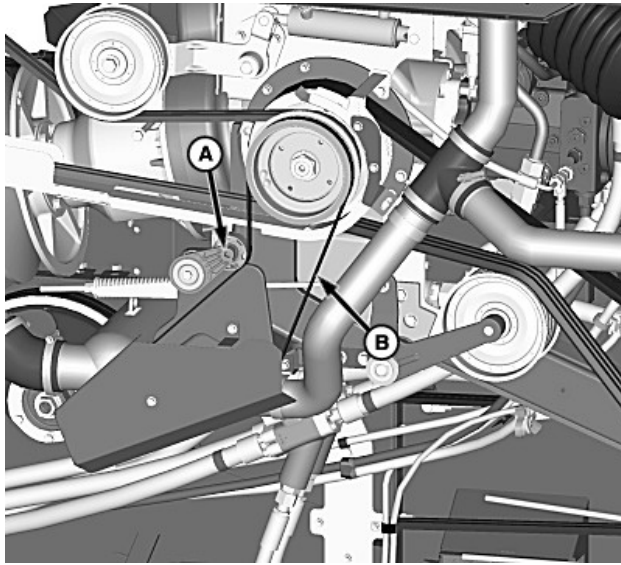


H108390—UN—25JUN13

- A—Tensioner Arm
B—Engine Debris Management Belt (if equipped)

CAUTION: Shut OFF engine, set park brake, and remove key.

NOTE: Verify that the unloading auger hydraulic cylinder is disengaged and retracted.


1. Use a breaker bar to relieve tension from the tensioner arm (A), then remove the engine debris management belt (B).

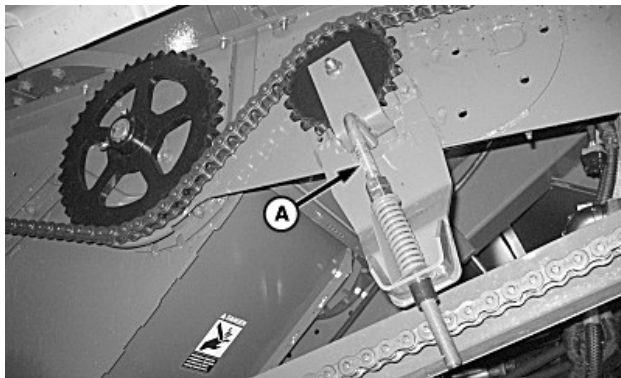

H105391—UN—09MAY12

- A—Tensioner


2. Loosen the tensioner (A) on the unloading auger drive chain.

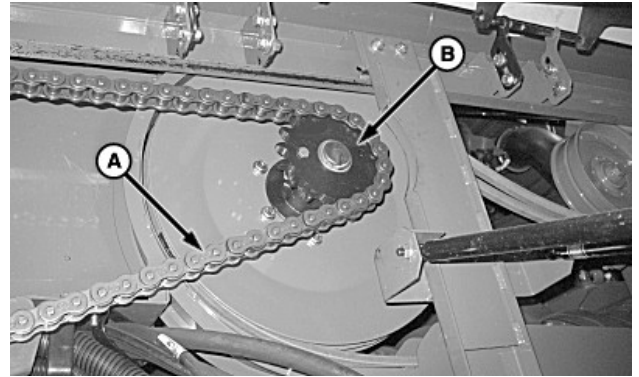

H130209—UN—07MAY20

- A—Unloading Auger Drive Chain
B—Sprocket


3. Remove the unloading auger drive chain (A) from the sprocket (B).

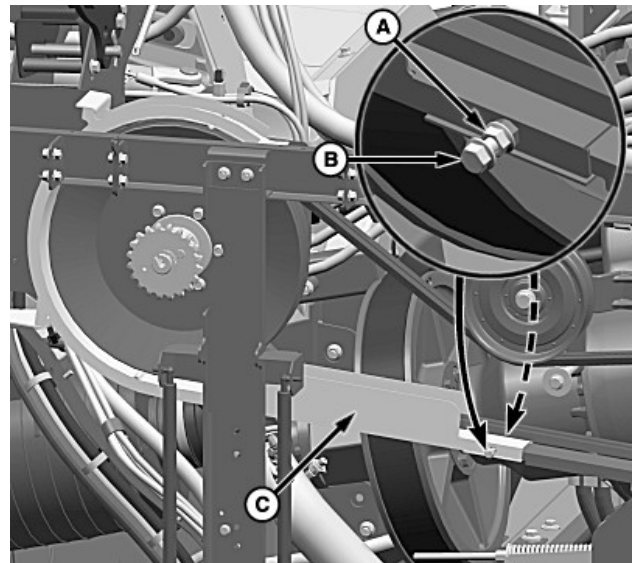

H130210—UN—07MAY20

- A—Nut (2 used)
B—Cap Screw (2 used)
C—Belt Trap


4. Loosen nut (A) and cap screw (B).
5. Remove the cap screws from the belt trap (C).
6. Remove the belt trap from the machine.

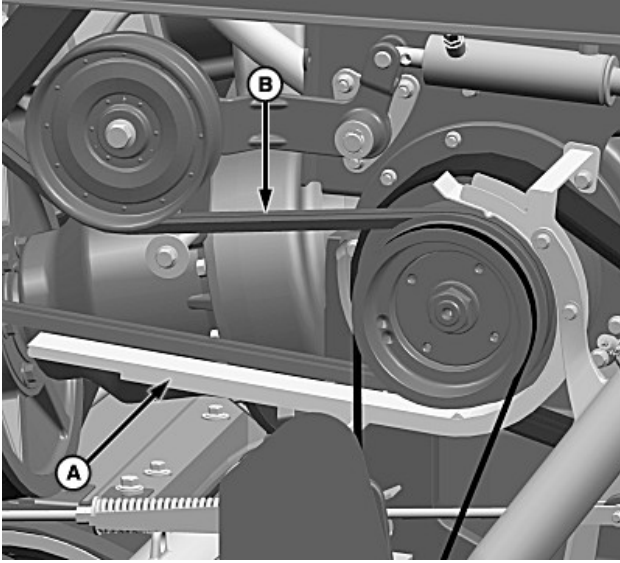

H130220—UN—07MAY20

A—Belt Trap
B—Unloading Auger Drive Belt (2 used)

7. Remove the cap screws from the belt trap (A).
8. Remove the belt trap from the machine.
9. Remove the unloading auger drive belts (B).
10. Install the replacement unloading auger drive belts and the previously removed belt traps.

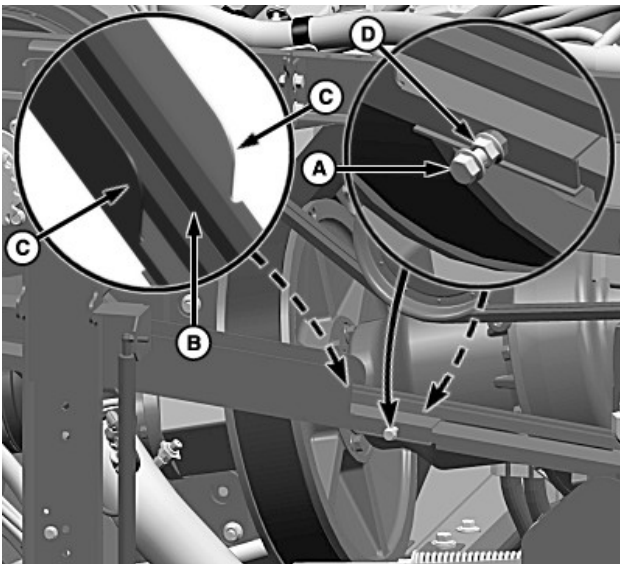

H130219—UN—07MAY20

A—Cap Screw (2 used)
B—Unloading Auger Drive Belt (2 used)
C—Belt Trap
D—Nut (2 used)


NOTE: Apply thread lock and sealer (medium strength) to the welded nuts on the belt trap.

11. Adjust the cap screws (A) to center the unloading auger drive belts (B) between the belt trap (C).

12. Once the unloading auger drive belts are centered between the belt trap, tighten nut (D).
13. Use a breaker bar to relieve tension from the tensioner arm, then install the engine debris management belt.
14. Install the shield and retain with the cap screws.
15. Install the drive chain and adjust the tensioner until the washer aligns with the end of the gauge.

OUC6075.0004E31-19-08JUL20

Unloading Auger Drive Belt—Replacing (Style B)

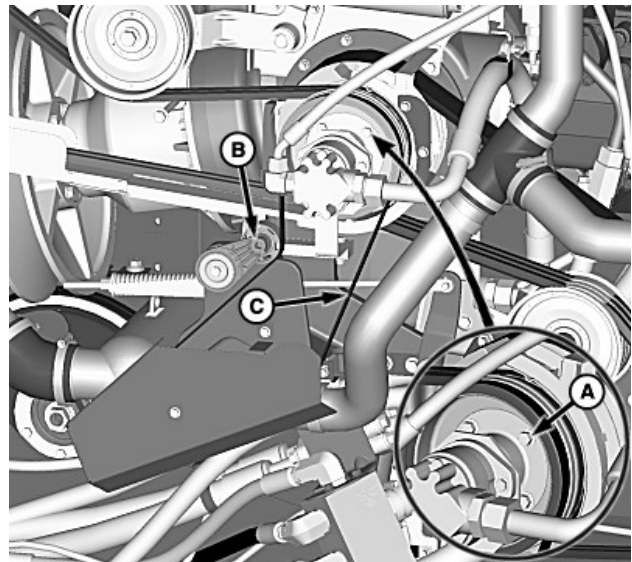


H108393—UN—25JUN13

A—Cap Screw
B—Tensioner Arm
C—Engine Debris Management Belt (if equipped)

CAUTION: Shut OFF engine, set park brake, and remove key.

NOTE: Verify that the unloading auger hydraulic cylinder is disengaged and retracted.


1. Remove the cap screws (A) and support the pump assembly out of the way.
2. Use a breaker bar to relieve tension from the tensioner arm (B), then remove the engine debris management belt (C).

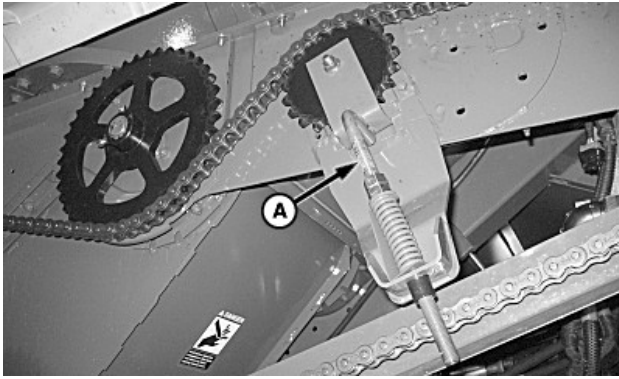

H105391—UN—09MAY12

A—Tensioner


3. Loosen the tensioner (A) on the unloading auger drive chain.

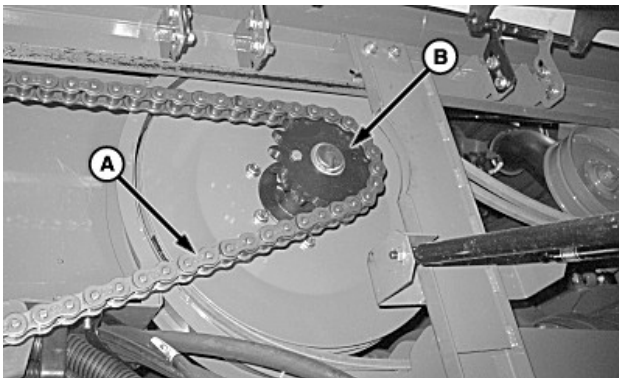

H130209—UN—07MAY20

A—Unloading Auger Drive Chain
B—Sprocket

4. Remove the unloading auger drive chain (A) from the sprocket (B).

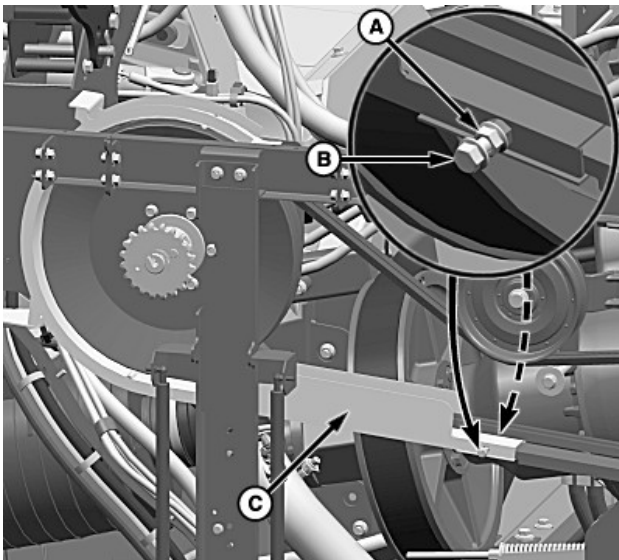


H130210—UN—07MAY20

A—Nut (2 used)
B—Cap Screw (2 used)
C—Belt Trap

5. Loosen nut (A) and cap screw (B).


6. Remove the cap screws from the belt trap (C).
7. Remove the belt trap from the machine.

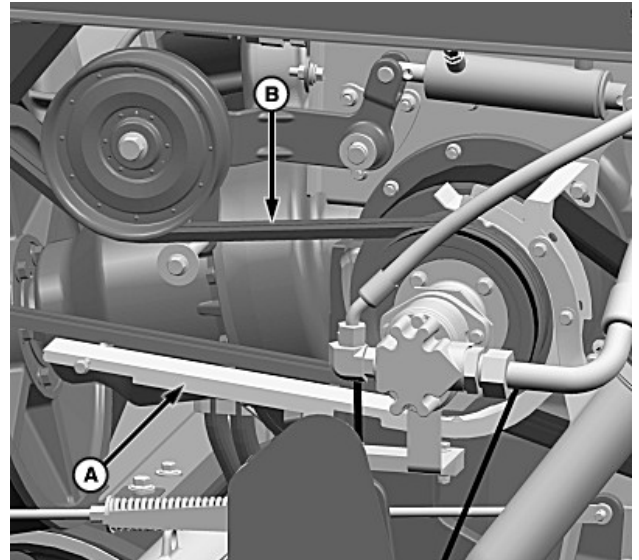

H130211—UN—07MAY20

A—Belt Trap
B—Unloading Auger Drive Belt (2 used)

8. Remove the cap screws from the belt trap (A).
9. Remove the belt trap from the machine.
10. Remove the unloading auger drive belts (B).
11. Install the replacement unloading auger drive belts and the previously removed belt traps.

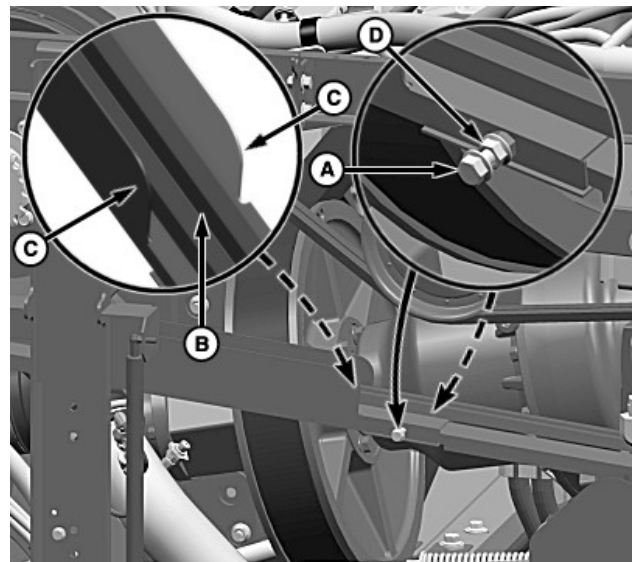

H130219—UN—07MAY20

A—Cap Screw (2 used)
B—Unloading Auger Drive Belt (2 used)
C—Belt Trap
D—Nut (2 used)

NOTE: Apply thread lock and sealer (medium strength) to the welded nuts on the belt trap.

12. Adjust the cap screws (A) to center the unloading auger drive belts (B) between the belt trap (C).
13. Once the unloading auger drive belts are centered between the belt trap, tighten nut (D).
14. Install the pump assembly and tighten the cap screws to specification.

Specification

Cap Screws—Torque. 80 N·m
(59 lb·ft)

15. Use a breaker bar to relieve tension from the tensioner arm, then install the engine debris management belt.
16. Install the shield and retain with the cap screws.
17. Install the drive chain and adjust the tensioner until the washer aligns with the end of the gauge.

OUO6075,0004E32-19-08JUL20

Service - Electrical System

Welding Near Electronic Control Units



TS953—UN—15MAY90

IMPORTANT: Do not jump-start engines with arc welding equipment. Currents and voltages are too high and may cause permanent damage.

1. Disconnect the negative (-) battery cable(s).
2. Disconnect the positive (+) battery cable(s).
3. Connect the positive and negative cables together. Do not attach to vehicle frame.
4. Clear or move any wiring harness sections away from welding area.
5. Connect welder ground close to welding point and away from control units.
6. After welding, reverse Steps 1—5.

DX,WW,ECU02-19-14AUG09


Keep Electronic Control Unit Connectors Clean

IMPORTANT: Do not open control unit and do not clean with a high-pressure spray. Moisture, dirt, and other contaminants may cause permanent damage.

1. Keep terminals clean and free of foreign debris. Moisture, dirt, and other contaminants may cause the terminals to erode over time and not make a good electrical connection.
2. If a connector is not in use, put on the proper dust cap or an appropriate seal to protect it from foreign debris and moisture.
3. Control units are not repairable.
4. Since control units are the components LEAST likely to fail, isolate failure before replacing by completing a diagnostic procedure. (See your John Deere dealer.)
5. The wiring harness terminals and connectors for electronic control units are repairable.

DX,WW,ECU04-19-11JUN09

Observe Electrical Precautions

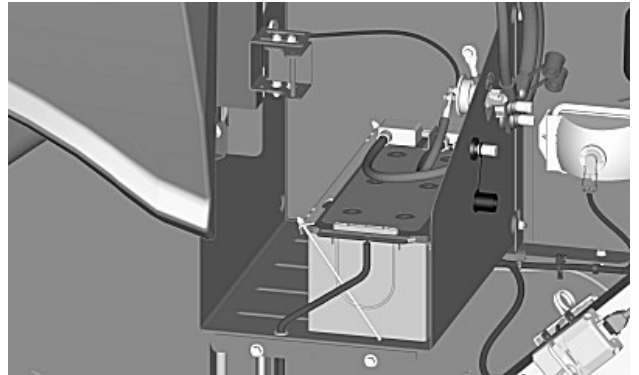

H125566—UN—21JAN19

Style A



H96581—UN—30JUN10

Style B

CAUTION: Machine must be on a flat surface to check fluid levels. Battery fluid level should be visible at the top of each fill port covering the plates in each cell.

Keep all sparks and flames away from batteries as gas given off by electrolyte is explosive. To avoid sparks, connect ground cable last and disconnect it first. To avoid shocks and burns, turn battery disconnect switch OFF before servicing any part of the electrical system or when removing batteries.

OUO6075,0004A94-19-11JAN19

Basic Electrical Component Handling / Precautions for Vehicles Equipped with Computer Controlled Systems

- Never disconnect the batteries while the key switch is on and the engine is running.

Why: This can cause electrical voltage spikes that can damage electronic components.

- Do not connect jumper cables while the key switch is on.

Why: This can cause electrical voltage spikes that can damage electronic components.

Handling Batteries Safely

- Disconnect batteries prior to recharging (if possible)

Why: Electrical loads in the machine can slow the recharging process. Battery chargers can cause electrical voltage spikes that can damage electronic components.

- Never jump start the machine with a voltage higher than the machine is designed to operate on

Why: This can damage electronic components

- Do not connect or disconnect electrical connectors while the key switch is on or the machine is running.

Why: This can cause computer system errors from interrupting a computer program while it is running and electrical voltage spikes that are produced can damage electronic components.

- Do not apply power or ground to any component as a test unless specifically instructed to do so.

Why: Connecting the wrong voltage to the wrong point of an electronic system can cause electronic component failures.


- When welding on the machine, make sure to connect ground lead to the parts being welded. For maximum protection disconnect all electronic controllers before welding.

Why: The high currents associated with welding can damage wiring harnesses that are involved in the ground path. Welding can also cause electrical voltage spikes that can damage electronic components.

KC01776,00003CF-19-19MAR01



TS204—UN—15APR13

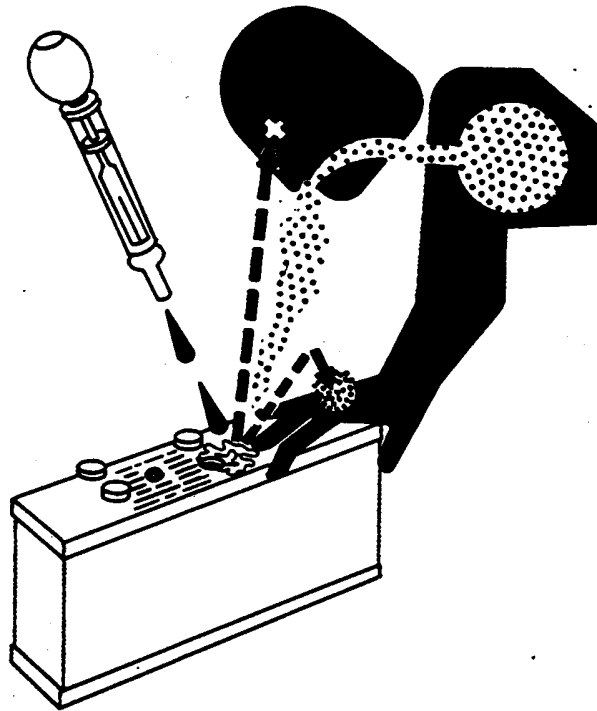

TS203—UN—23AUG88

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves

- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.


If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

DX,WW,BATTERIES-19-02DEC10

Batteries—Safe Installation

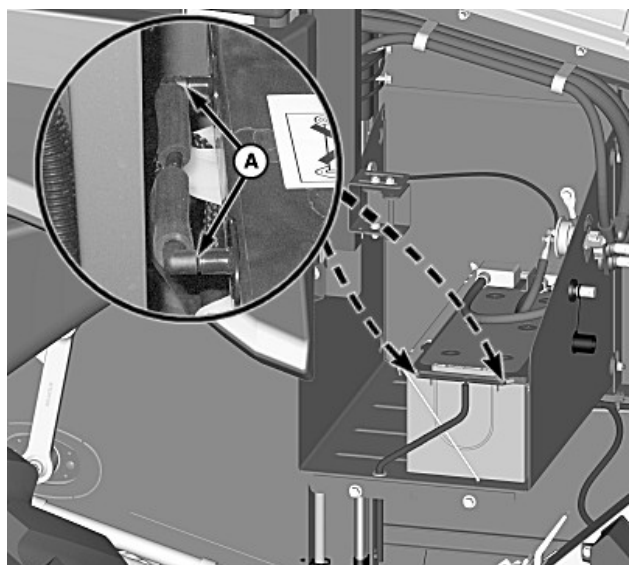

Style A

H125567—UN—21JAN19



H96586—UN—30JUN10

Style B

A—Vent Tubes

CAUTION: Machine must be on a flat surface to check fluid levels. Battery fluid level should be visible at the top of each fill port covering the plates in each cell.

Avoid serious injury or death from explosions. High levels of hydrogen gas can accumulate if the battery box is not vented properly. Always reinstall the vent tubes (A) after performing service or maintenance on the batteries or the battery box. Verify that the ventilation hoses are not bent or kinked.

Replacement batteries must have a ventilation fitting suited for ventilation hose attachment. See your John Deere dealer for replacement batteries equipped with ventilation fittings.

If ventilation tubes are not attached to the battery, then the battery lid must remain off whenever the machine engine is running or whenever the batteries are being charged with an external charger.

OUC6075.0004A95-19-11JAN19

Battery Cables—Connecting

CAUTION: BATTERIES ARE NEGATIVE GROUNDED ONLY. Always connect battery ground strap to negative (-) posts of battery. Connect starter cable to positive (+) post of battery. Reversed polarity in battery or alternator connections results in permanent damage to electrical system. Connect ground strap to negative (-) terminal last.

IMPORTANT: Batteries must have same terminal locations.

When connecting batteries:

Turn off all switches and accessories. Clean battery posts and terminals.

QUICKLY TAP ground strap to negative post. Arcing must not occur. If arcing occurs, DO NOT MAKE CONNECTION. Check to see if battery position is reversed.

If arcing still occurs, check again that all switches and accessories are off. Then check for shorts, broken wires and loose or corroded connections.

Connect negative (-) battery ground straps.

OUO6075,00007D7-19-19MAR07

Batteries—Charging

Keep battery fully charged, especially during cold weather. Failure to keep battery fully charged, above 12.50 volts, may result in reduced battery life.

CAUTION: Never charge a frozen battery. Thaw at room temperature before connecting to battery charger. Only charge batteries in a well ventilated area. Disconnect both cables from battery terminals when charging batteries in combine.

IMPORTANT: If batteries are not fully charged electrolyte may freeze.

Determine which battery needs to be charged.

Disconnect both battery cables and connect charger positive cable to "+" terminal and charger negative cable to "-" terminal.

Follow instructions provided with charger. Always charge batteries with a 12-volt charger.


OUO6075,00007D8-19-19MAR07

Batteries—Checking Specific Gravity

CAUTION: Batteries must be on a flat surface to accurately check fluid levels. Battery fluid level should be visible at the top of each fill port covering the plates in each cell.

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

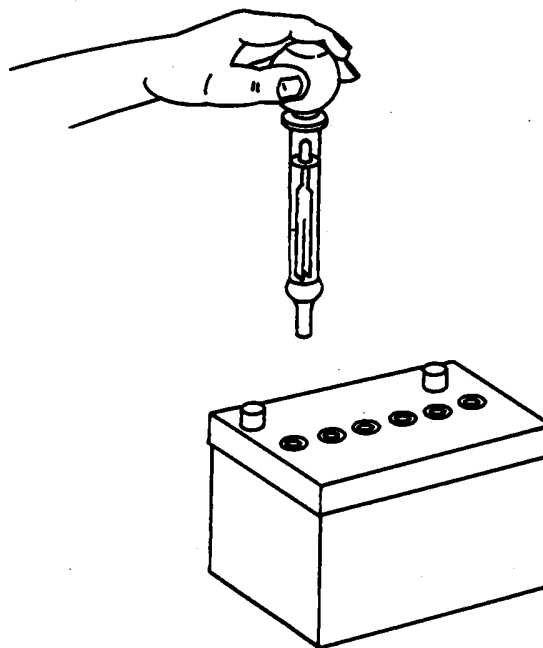


TS182—UN—23AUG88

Check specific gravity of electrolyte in each cell with a battery hydrometer to determine battery condition. Charge battery if reading is below 1.225. Replace battery if difference between cells is more than 0.050.

Always correct specific gravity reading for electrolyte temperature variation. Add 0.004 for every 10°F above 80°F. (Add 0.007 for every 10°C above 27°C.) Subtract at same rate if electrolyte temperature is below 80°F (27°C). Corrected specific gravity of a fully charged battery is 1.265 — 1.280.


OUO6075,00007D9-19-19MAR07

Batteries—Connecting Booster

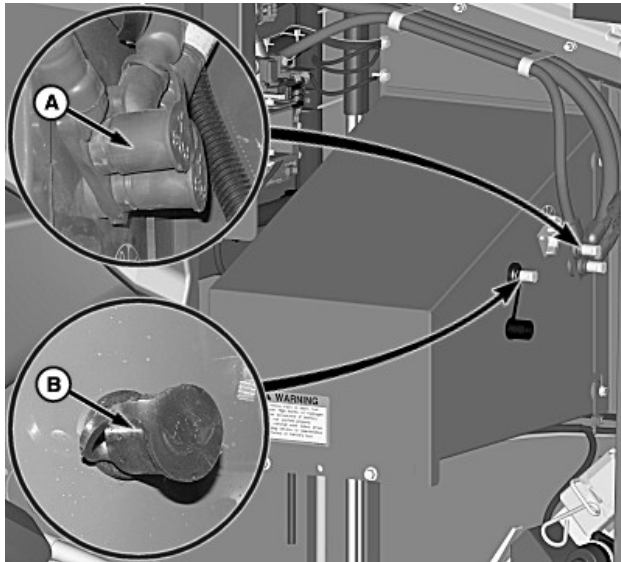

H125568—UN—21JAN19

Style A

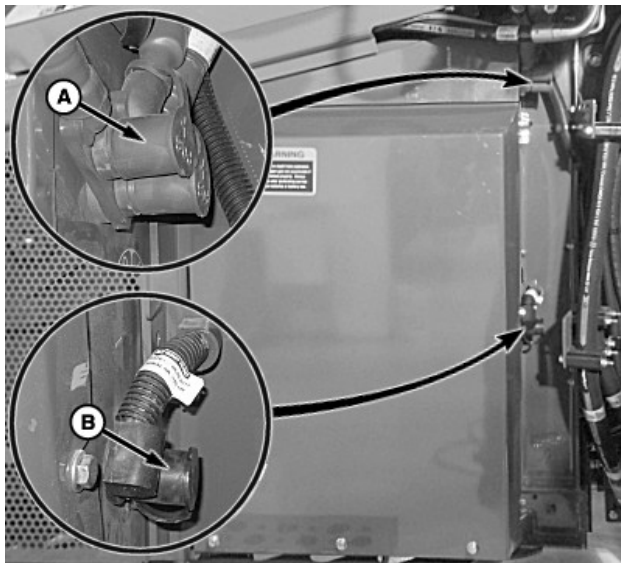

H123369—UN—08FEB18

Style B

A—Positive (+) Post
B—Negative (-) Post

Cold weather starting can be easier by connecting an extra 12 V battery in parallel.

CAUTION: Gas given off by batteries is explosive. Avoid sparks near batteries.

IMPORTANT: Never connect jumper cables with the key switch or battery disconnect switch ON. Never jump-start with more than 12 V.

Remove protective caps from posts.


First jumper cable must be connected to positive (+)

post on the booster battery. Connect other end to positive (+) post (A) on the machine battery.

Second jumper cable must be connected to negative (-) post on the booster battery. Connect other end to negative (-) post (B) on the machine battery.

OUC6075.0004A96-19-11JAN19


Batteries—Removing and Installing (Style A)

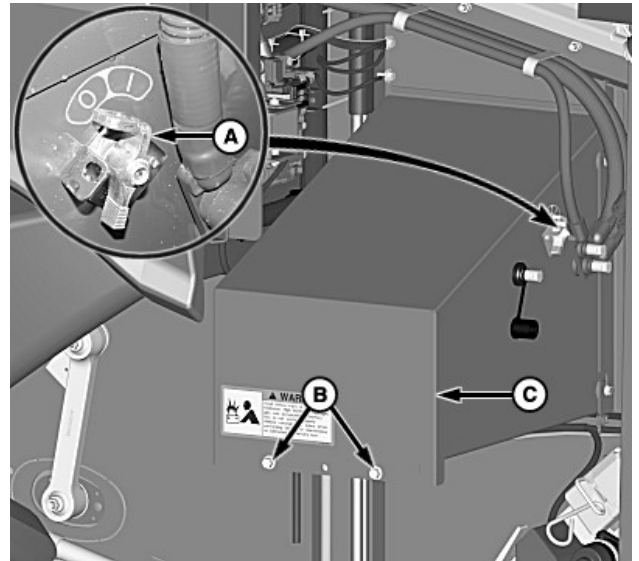

H125569—UN—21JAN19

A—Battery Disconnect Switch
B—Cap Screw (2 used)
C—Cover

1. Turn battery disconnect switch (A) counterclockwise to OFF position.
2. Remove cap screws (B) and cover (C) to access battery.

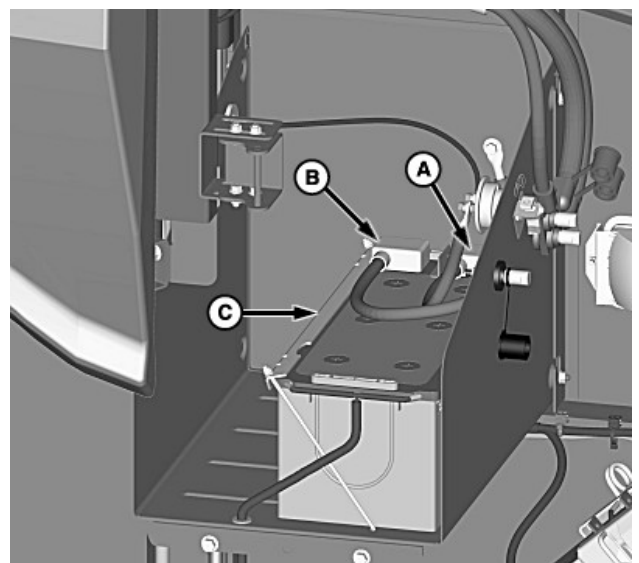

H125570—UN—21JAN19


A—Positive Cable

B—Negative Cable
C—Clamp

3. Disconnect positive (+) cable (A) and negative (-) cable (B).
4. Remove clamp (C) and battery vent tubes.
5. Clean battery and battery mounting area.
6. Install battery in the battery box.
7. Clean battery cables and posts, and reconnect battery vent tubes.
8. Attach positive (+) cable and negative (-) cable.
9. Install and tighten the battery clamp.
10. Install cover and retain with previously removed cap screws.
11. Turn battery disconnect switch clockwise to ON position.

OUO6075.0004A97-19-11JAN19


Batteries—Removing and Installing (Style B)

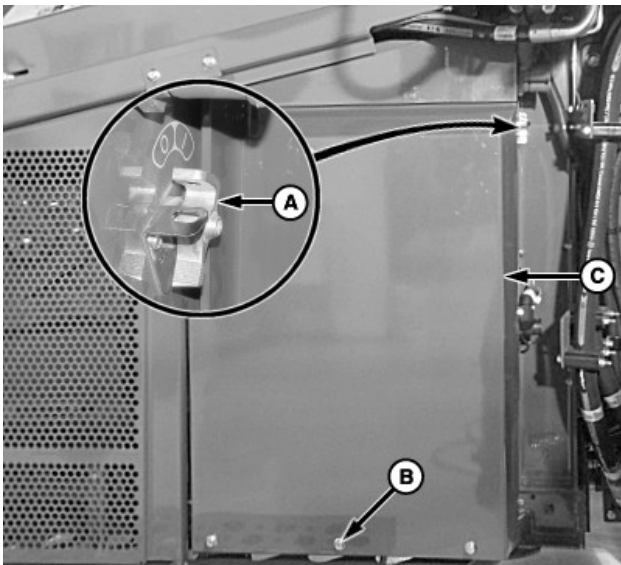

H123348—UN—08FEB18

A—Battery Disconnect Switch
B—Cap Screws (9 used)
C—Cover

1. Turn battery disconnect switch (A) counterclockwise to OFF position.
2. Remove cap screws (B) and cover (C) to access batteries.

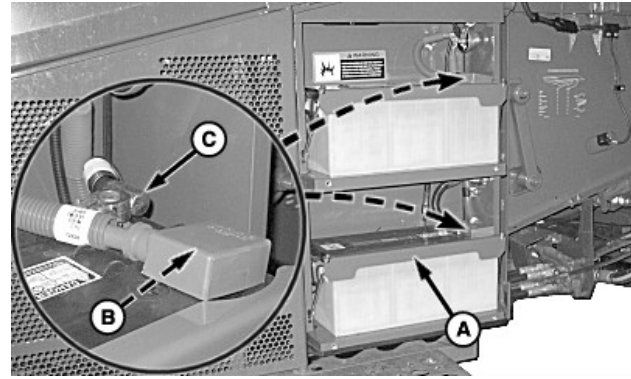


H96583—UN—30JUN10

A—Clamp
B—Positive Cable
C—Negative Cable

3. Remove clamp (A) and battery vent tubes.
4. Disconnect positive (+) cable (B) and negative (-) cable (C).
5. Clean batteries and battery mounting area.
6. Install batteries in the battery box.
7. Clean battery cables, posts, and reconnect battery vent tubes.
8. Attach positive (+) cable and negative (-) cable.
9. Install and tighten the battery clamp.
10. Install cover and retain with previously removed cap screws.
11. Turn battery disconnect switch clockwise to ON position.


OUO6075.0004898-19-07FEB18

Battery Disconnect Switch

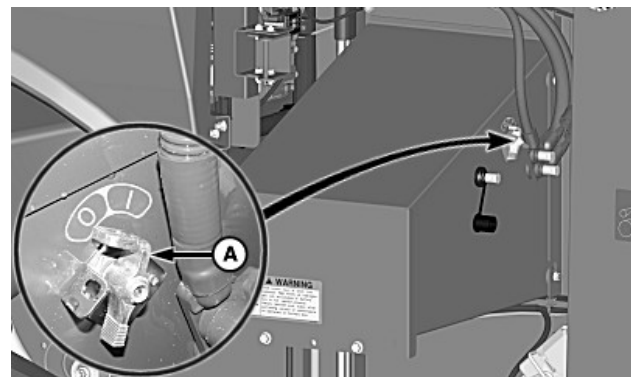

H125571—UN—21JAN19

Style A

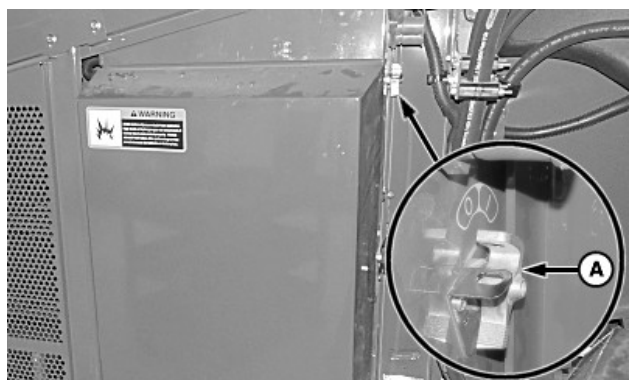

H123349—UN—07FEB18

Style B

A—Battery Disconnect Switch


IMPORTANT: Final Tier 4/Stage V: Do not disconnect battery for at least 90 seconds after machine is shut OFF. Selective Catalyst Reduction (SCR) system automatically purges lines of Diesel Exhaust Fluid (DEF) during this time, immediately after machine is shut OFF. If adequate time is not allowed for lines to be purged, any fluid remaining in lines can crystallize and plug lines. Fluid freezes and possibly burst lines in freezing weather conditions.

NOTE: Turn battery disconnect switch OFF if machine is stored longer than 25 days. If storage period is longer than 90 days, remove negative lead to the battery or batteries to minimize load to batteries.

Turn battery disconnect switch (A) clockwise to turn ON machine electrical system or turn switch counterclockwise to turn OFF machine electrical system.


OUC6075.0004A98-19-11JAN19

Machine Fuse Center

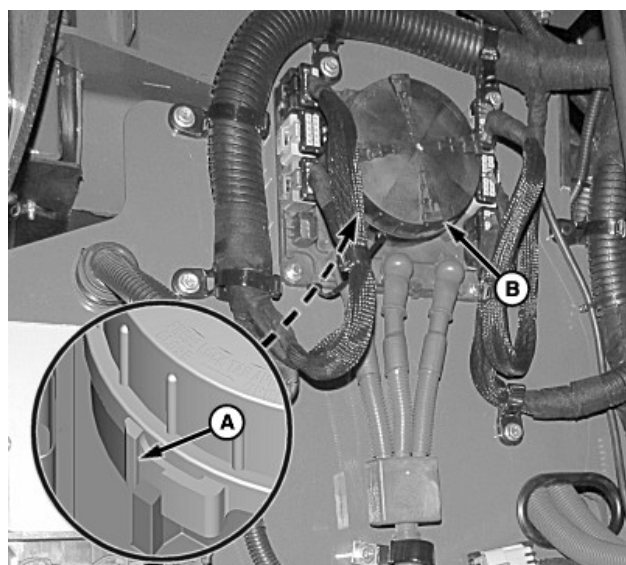

H121173—UN—04APR17

Style A

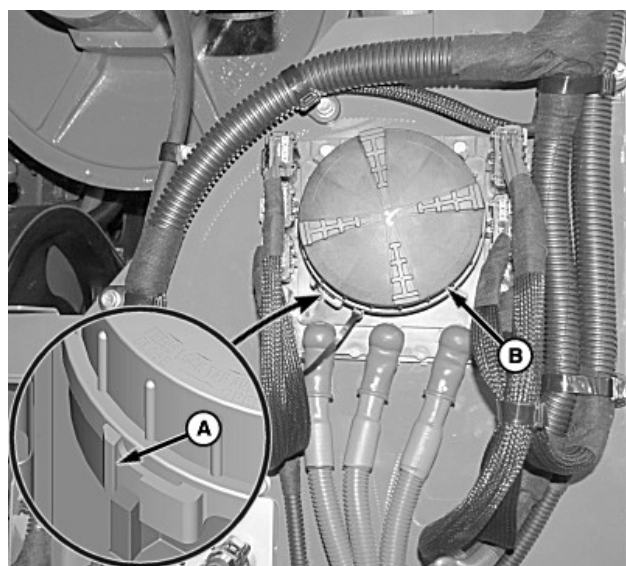

H121174—UN—04APR17

Style B

A—Lock Tab
B—Cover

NOTE: Fuse center is on the right-hand side or the left-hand side depending on the machine model.

Spare fuses and fuse puller are located underneath cover.

Press lock tab (A) and turn cover (B) counterclockwise to open fuse center.


- F1—F2 Not Used
- F3—(15A) (cc# 0642), Control Unit RC2 Power 1
- F6—(15A) (cc# 0652), Control Unit RC2 Power 2
- F7—(30A) (cc# 0342), Control Unit RC1 Power 1

- F8—Not Used
- F9—(30A) (cc# 0362), Right Power Module 1 (RPM1) Power 5
- F11—(20A) (cc# 0332), Right Power Module 1 (RPM1) Power 3
- F12—(20A) (cc# 0322), Right Power Module 1 (RPM1) Power 2
- F13—F14 Not Used
- F15—(20A) (cc# 0352), Right Power Module 1 (RPM1) Power 4
- F16—Not Used
- F17—(30A) (cc# 0912), Grain Sensing System Power
- F18—(25A) (cc# 0372), Control Unit RC1 Power 2
- F19—F26 Not Used
- F27—(30A) (cc# 0152), Control Unit LC1 Power 2
- F28—F30 Not Used
- F31—(10A) (cc# 0012), Unswitched Battery Power
- F32—(30A) (cc# 0142), Left Power Module 1A (LPM1A) Power 4
- F33—Not Used
- F34—(30A) (cc# 0112), Left Power Module 1A (LPM1A) Power 1
- F35—(30A) (cc# 9232), Knife Bank Actuator Power
- F36—(30A) (cc# 0312), Right Power Module 1 (RPM1) Power 1
- F37—F38 Not Used
- F39—(10A) (cc# 4972), Control Unit SSU/XSC Unswitched Power
- F40—F42 Not Used
- F43—(25A) (cc# 5222), Control Unit ECU Power 3
- F44—(30A) (cc# 0712), Left Power Module 2B (LPM2B) Power 1
- F45—(20A) (cc# 0122), Left Power Module 1A (LPM1A) Power 2
- F46—(30A) (cc# 0132), Left Power Module 1A (LPM1A) Power 3
- F47—Not Used
- F48—(25A) (cc# 5012), Control Unit ECU Power 1
- F49—F50 Not Used
- F51—(30A) (cc# 0162), Control Unit LC1 Power 1
- F52—Not Used
- F54—(10A) (cc# 0422), Control Unit PTP Power
- F55—(25A) (cc# 5022), Control Unit ECU Power 2
- F56—(15A) (cc# 5042), Fuel Transfer Pump
- F57—(30A) (cc# 0222), Left Power Module 2B (LPM2B) Power 2
- F58—F62 Not Used
- F63—(15A) (cc# 5062), Dosing Pump Power
- F64—(20A) (cc# 0212), Left Power Module 2A (LPM2A) Power 1

- F67—Not Used
- F68—(25A) (cc# 0172), Left Power Module 1A (LPM1A) Power 5
- F69—(30A) (cc# 0972), Flex Residue Chopper Power 2
- F70—F71 Not Used
- F73—(30A) (cc# 0252), Control Unit LC2 Power 1
- F74—(30A) (cc# 0972), Flex Residue Chopper Power 1
- F75—F77 Not Used
- F78—(30A) (cc# 0242), Control Unit LC2 Power 1
- F79—Not Used
- F80—(30A) (cc# 0722), Left Power Module 2B (LPM2B) Power 2


OUC6075,0004A31-19-08NOV18

Inline Fuses

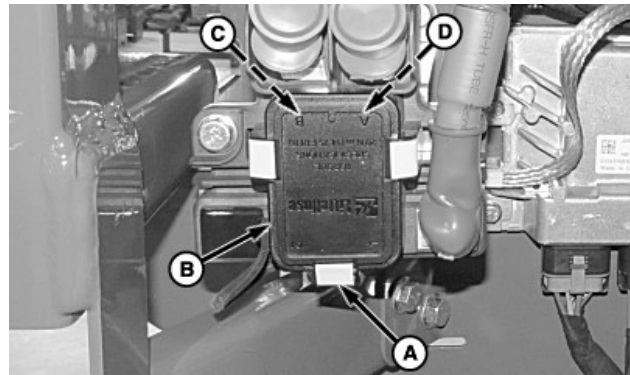

H121175—UN—04APR17

Style A

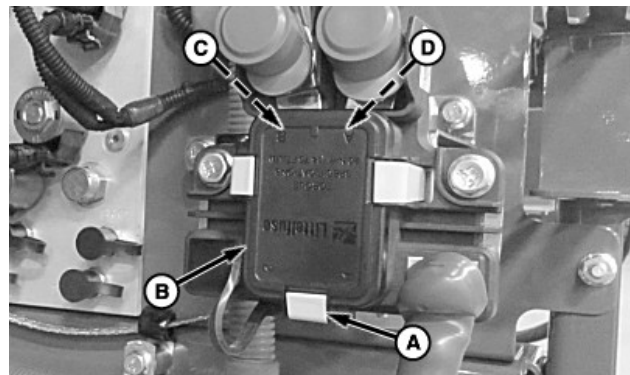

H121176—UN—04APR17

Style B

- A—Latch (3 used)
- B—Cover
- C—F82—Inline Fuse
- D—F92—Inline Fuse

NOTE: Inline fuses are on the right-hand side or the left-hand side depending on the machine model.

Open latches (A) and remove cover (B) to access inline fuses.


- F82—Inline Fuse, (125A) (cc# 8002), Control Unit CAB
- F92—Inline Fuse, (125A) (cc# 8912), Cab Fuse Center

- F816—(10A) (cc# 8312), Radio Power
- F817—(7.5A) (cc# 8322), Armrest APO Power
- F818—(5A) (cc# 0006), Wakeup Power
- F819—(5A) (cc# 8112), USB Charger Power

OUC6075,00046FD-19-04APR17

OUC6075,00046FD-19-04APR17

Cab Fuse Center

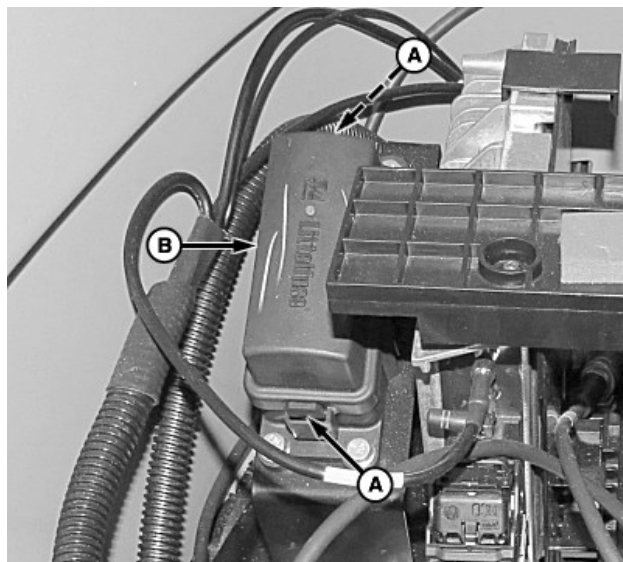

H119639—UN—13OCT16

A—Lock Tabs
B—Cover

NOTE: Fuse center is located inside the cab within the control unit enclosure which is underneath the armrest console on the cab floor.

Press lock tabs (A) and remove cover (B) to open fuse center.

- F801—(15A) (cc# 8262), ARMC Power
- F802—(10A) (cc# 8802), Server-Monitor Power
- F803—(15A) (cc# 8302), SCL Power
- F804—(15A) (cc# 8072), PDU Power
- F805—(15A) (cc# 8152), Receiver Power
- F806—(15A) (cc# 8162), Miscellaneous Cab Power
- F807—(10A) (cc# 8192), ATC Power
- F808—(20A) (cc# 8082), Recirculation Fan Power 1
- F809—(20A) (cc# 8182), Recirculation Fan Power 2
- F810—(20A) (cc# 8172), Seat Power
- F811—(20A) (cc# 8092), Accessory Power
- F812—(15A) (cc# 8242), Auxiliary Power Outlets
- F813—(20A) (cc# 8252), Auxiliary Power Strip
- F814—(20A) Not Used
- F815—(20A) (cc# 8622), Front Wiper Power

Video Safety


CAUTION: Do not rely on a camera for collision avoidance or bystander detection. To avoid possible injury or death to operator or others, always remain alert and aware of surroundings when operating machine. Read and understand Avoid Backover Accidents in Safety section.

IMPORTANT:

- Correctly understand whether camera or video application is "mirrored".
- Mount camera in a sturdy and secure location.
- Understand camera's field of view.
- Keep camera properly serviced.
- Keep camera lens clean.

OUC6075,00013B2-19-31JAN13

Video Interface Capability

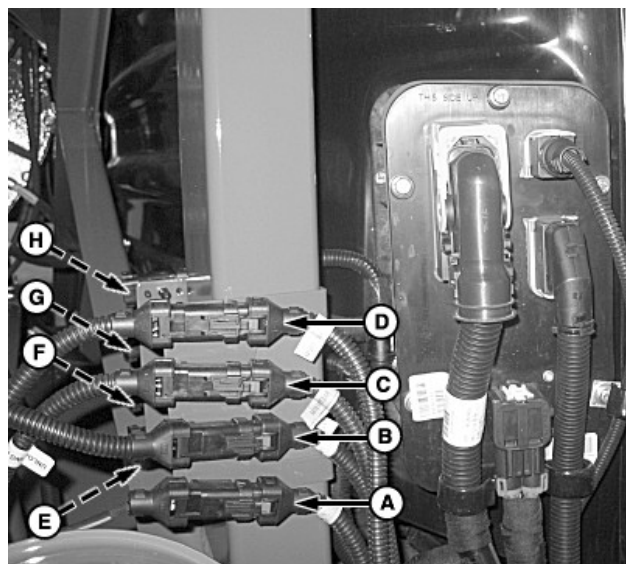

H119626—UN—12OCT16

A—Video Input 1 (Armrest)
B—Video Input 2 (Armrest)
C—Video Input 3 (Armrest)
D—Video Input 4 (Armrest)
E—Video Input 1 (Optional Display)
F—Video Input 2 (Optional Display)
G—Video Input 3 (Optional Display)
H—Video Input 4 (Optional Display)

Machine is equipped with eight camera video inputs

which are located at the right-hand side of operator's station.


Video input (A—D) feeds video signals to the server which then go to the armrest display.

Video input (E—H) feeds video signals to the optional GreenStar™ 3 2630 Display.

See your John Deere dealer for further information on video-compatible camera solutions.

OUO6075,0004684-19-20MAR17

Adjust Cameras (If Equipped)

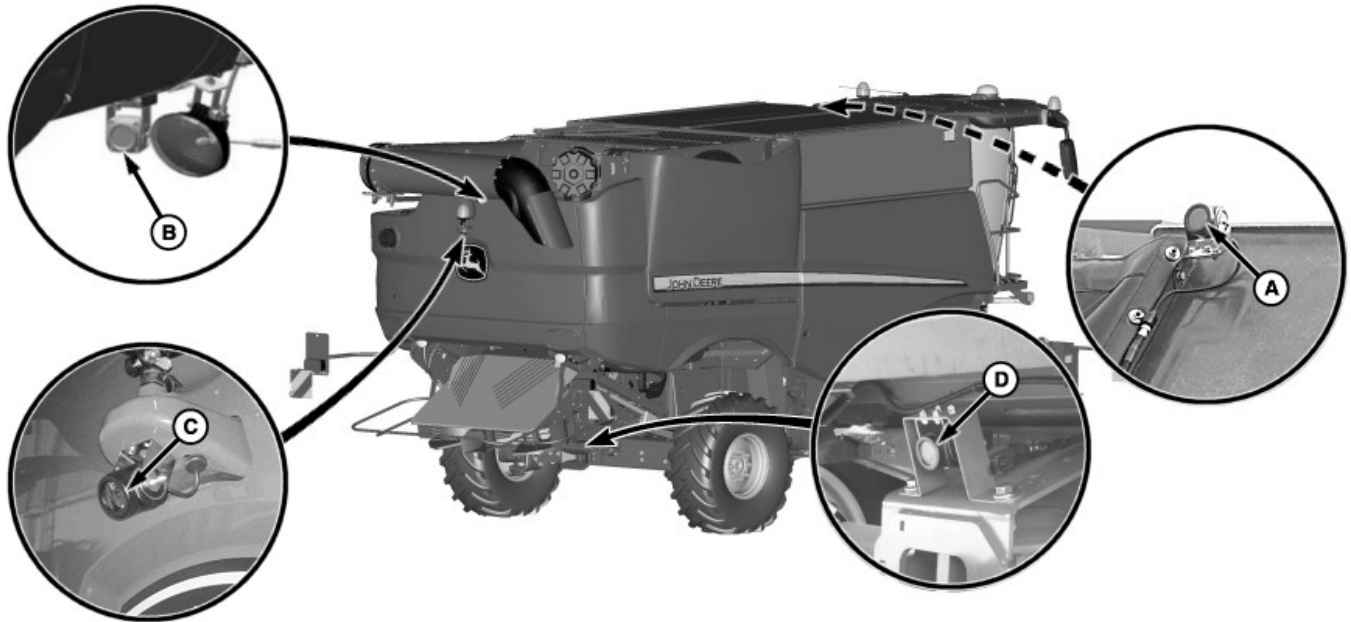

A—Grain Tank Camera
B—Unloading Auger Camera

C—Rear View Camera
D—Hitch Camera

H116367—UN—25NOV15

NOTE: Camera styles may vary from what is shown. See your John Deere dealer or qualified service provider for further information.

If machine is equipped with cameras (A—D), adjust cameras as needed.


OUC6075,00041A7-19-28JAN16



A—Halogen Bulb

H59774—UN—30AUG99

Safety Rules When Replacing Halogen Bulbs

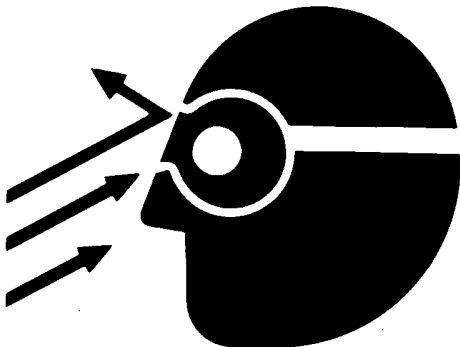

TS266—UN—23AUG88

CAUTION: Halogen bulbs (A) contain gas under pressure. Handling a bulb improperly could cause it to shatter into flying fragments. To avoid possible injury:

- Turn light switch OFF and allow bulb to cool before changing bulbs. Leave switch OFF until bulb change is complete.
- Wear eye protection when changing bulb.
- Handle bulb by its base. Wear protective gloves or avoid touching light bulb surface.
- Use a clean cloth and alcohol to remove any fingerprints from glass bulb before installing. Skin oil deposited on bulb will cause overheating and premature failure.
- Do not drop or scratch bulb.
- Keep moisture away from bulb.
- Do not operate bulb outside of its enclosure.

Bulb has a high internal pressure and if cracked or broken it could explode and cause injury.


- Place used bulb in new bulb carton and dispose of properly. Keep out of reach of children.

OUC6075,0001356-19-12DEC12


5. Push in bulb assembly and turn clockwise to install into housing.
6. Rotate light housing to the previous operating position and connect the wiring harness.
7. Repeat on remaining lights as needed.

OUC6075,00050F5-19-05MAY21

Halogen Bulb Cab Headlights—Replacing

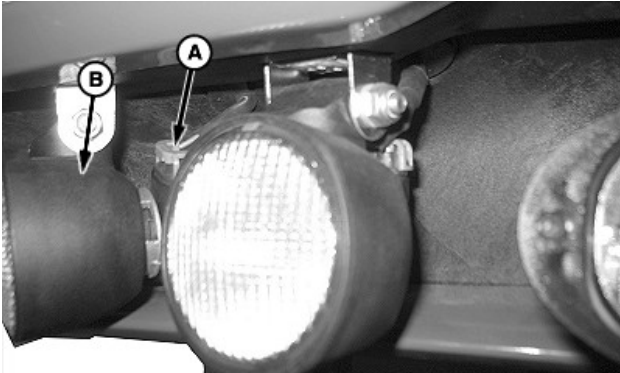

H96621—UN—25MAY10

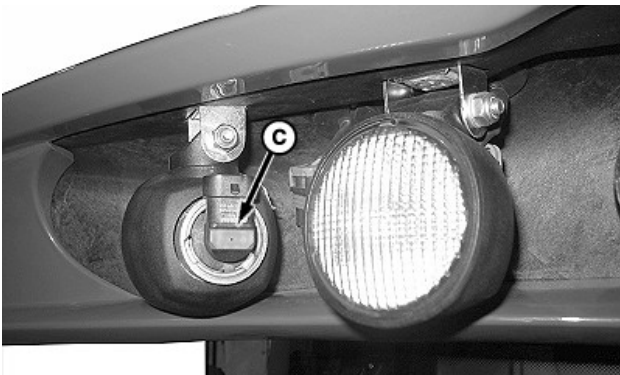

H96622—UN—25MAY10

A—Connector
B—Headlight Assembly
C—Bulb Assembly


CAUTION: Raise the feeder house, engage the feeder house safety stop, shut OFF engine, set park brake, and remove key before replacing or adjusting the headlights.

1. Disconnect the wiring harness connector (A) from the headlight assembly (B).
2. Rotate light housing toward outside of cab.
3. Turn bulb assembly (C) counterclockwise and remove.

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

4. Replace the bulb.

Halogen Bulb Cab Headlights—Adjusting Vertical Adjustment

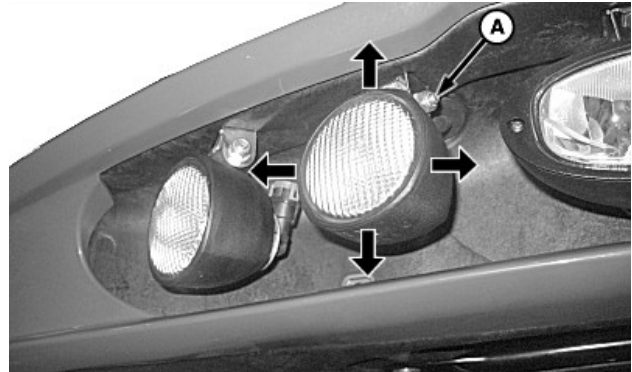

H96624—UN—25MAY10

A—Cap Screw

CAUTION: Raise the feeder house, engage the feeder house safety stop, shut OFF engine, set park brake, and remove key before replacing or adjusting the headlights.

NOTE: Light assemblies can be adjusted as needed to achieve correct lighting angles.

1. Loosen cap screw (A).
2. Rotate light assembly up or down to the desired position and tighten cap screw.
3. Repeat on remaining lights as needed.

Horizontal Adjustment


1. Rotate light assembly left or right to the desired position.
2. Repeat on remaining lights as needed.

OUC6075,00050F6-19-05MAY21

Halogen Bulb Cab Headlights (High and Low Beam)—Replacing



H96625—UN—25MAY10

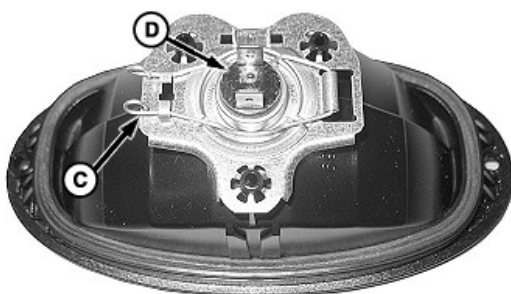

H96626—UN—25MAY10

- A—Screw (2 used)
- B—Face Plate Lens
- C—Clip
- D—Bulb Assembly

CAUTION: Raise the feeder house, engage the feeder house safety stop, shut OFF engine, set park brake, and remove key before replacing or adjusting the headlights.

1. Remove screws (A) and face plate lens (B) from housing.
2. Squeeze clips (C) to remove bulb assembly (D).

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

3. Remove and replace the bulb.
4. Attach bulb assembly using clips on the light bulb base.
5. Align the face plate lens with connector inside housing and retain with screws.
6. Repeat on remaining lights as needed.

OUO6075.00050F7-19-14MAY21

Halogen Bulb Cab Headlights (High and Low Beam)—Adjusting



H96628—UN—25MAY10

A—Cap Screw


CAUTION: Raise the feeder house, engage the feeder house safety stop, shut OFF engine, set park brake, and remove key before replacing or adjusting the headlights.

NOTE: Light assemblies can be adjusted as needed to achieve correct lighting angles.

1. Loosen cap screw (A).
2. Rotate light assembly up or down to the desired position and tighten cap screw.
3. Repeat on remaining lights as needed.

OUO6075.00050F8-19-05MAY21

Light Emitting Diode (LED) Cab Headlights (High and Low Beam) (If Equipped)—Replacing

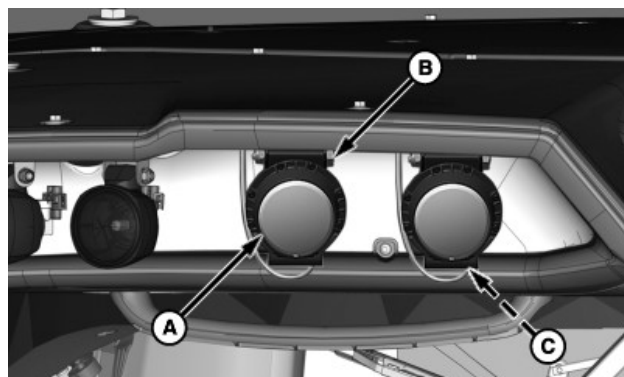

H134286—UN—04MAY21

Low-Beam Headlight Shown


- A—Low-Beam Cab Headlight Assembly
- B—Connector
- C—Cap Screw

⚠ CAUTION: Raise the feeder house, engage the feeder house safety stop, shut OFF engine, set park brake, and remove key before replacing or adjusting the headlights.

1. Disconnect the wiring harness connector (B) from the headlight assembly (A).
2. Remove cap screw (C) and nut.
3. Remove and replace the headlight assembly.

OUO6075,00050FF-19-14MAY21

Light Emitting Diode (LED) Cab Headlights (High and Low Beam) (If Equipped)—Adjusting

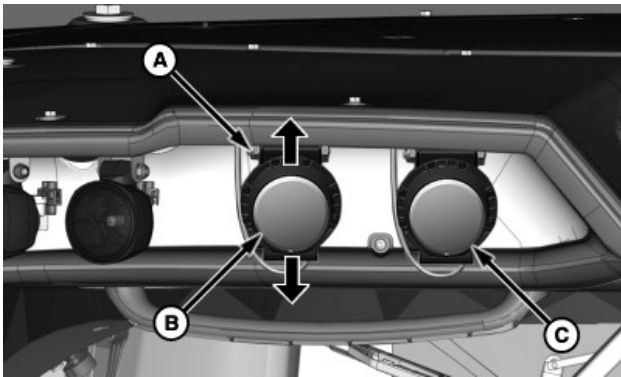

H134287—UN—04MAY21

Low-Beam Headlight Shown


A—Cap Screw
B—Low-Beam Cab Headlight Assembly
C—High-Beam Cab Headlight Assembly

⚠ CAUTION: Raise the feeder house, engage the feeder house safety stop, shut OFF engine, set park brake, and remove key before replacing or adjusting the headlights.

1. Loosen cap screw (A).
2. Rotate the headlight assembly (B) or (C) up or down to the desired position and tighten the cap screw.
 - **Low-Beam Cab Headlights:** Adjust the position of light (B) so that the distance between the headlight assembly and the light/dark border on the ground in front of the machine is less than 30 m (98 ft).
 - **High-Beam Cab Headlights:** Adjust the position of light (C) so that the light beam on the ground is visible up to a maximum of 100 m (328 ft) in front of the machine.
3. Repeat on the remaining lights as needed.

OUO6075,0005100-19-14MAY21

Halogen Bulb Fascia Lights (If Equipped)—Replacing

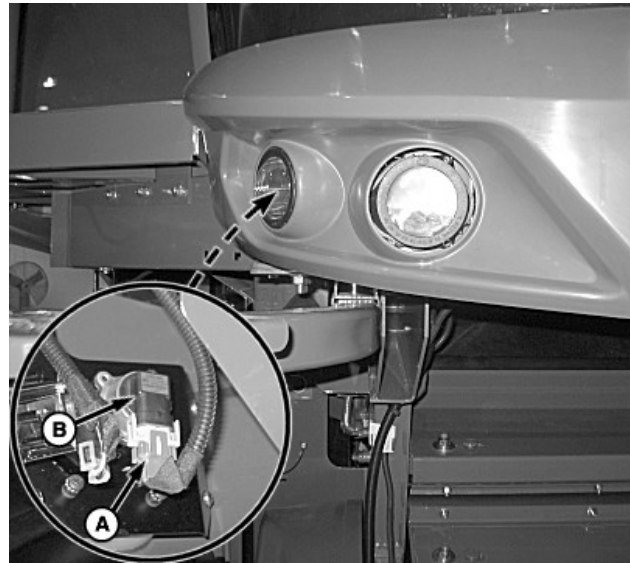

H98976—UN—02NOV10

A—Connector
B—Bulb Assembly

⚠ CAUTION: Lower feeder house fully before replacing or adjusting headlights.


1. Disconnect the wiring harness connector (A) from bulb assembly (B).
2. Turn bulb assembly counterclockwise and remove.

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

3. Remove and replace the bulb.
4. Push in bulb assembly and turn clockwise to install into housing.
5. Plug the wiring harness connector into the bulb assembly.
6. Repeat on remaining lights as needed.

OUO6075,00050F9-19-05MAY21

Light Emitting Diode (LED) Fascia Lights (If Equipped)—Replacing

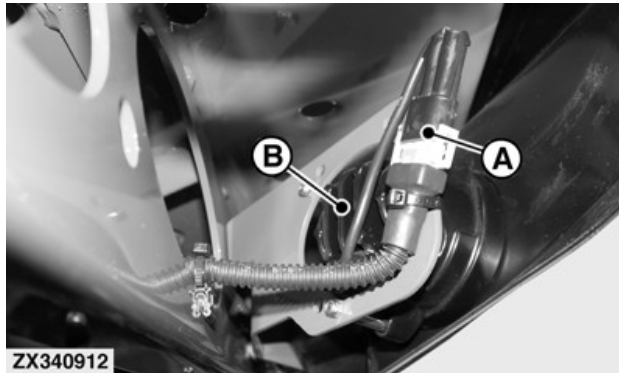

A—Connector
B—Light Assembly


ZX340912—UN—29MAY18

CAUTION: Lower feeder house fully before replacing or adjusting headlights.

1. Disconnect the wiring harness connector (A) from light assembly (B).
2. Remove and replace light assembly.
3. Plug the wiring harness connector into the light assembly.
4. Repeat on remaining lights as needed.

OUO6075,00050FA-19-05MAY21

Lower Driving Lights Bulb (If Equipped)—Replacing

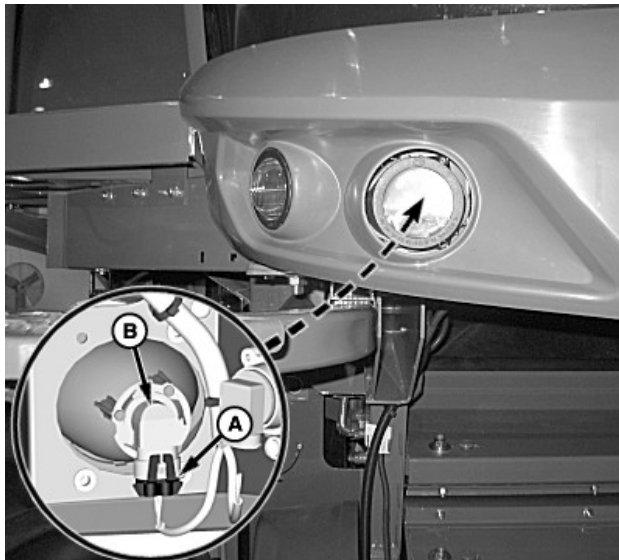

A—Connector
B—Bulb Assembly

H96629—UN—02NOV10

CAUTION: Lower feeder house fully before replacing or adjusting headlights.


1. Disconnect the wiring harness connector (A) from bulb assembly (B).
2. Turn bulb assembly counterclockwise and remove.

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

3. Remove and replace the bulb.
4. Push in bulb assembly and turn clockwise to install into housing and connect the wiring harness.
5. Repeat on remaining lights as needed.

OUO6075,00050FB-19-05MAY21

Lower Driving Lights (If Equipped)—Adjusting

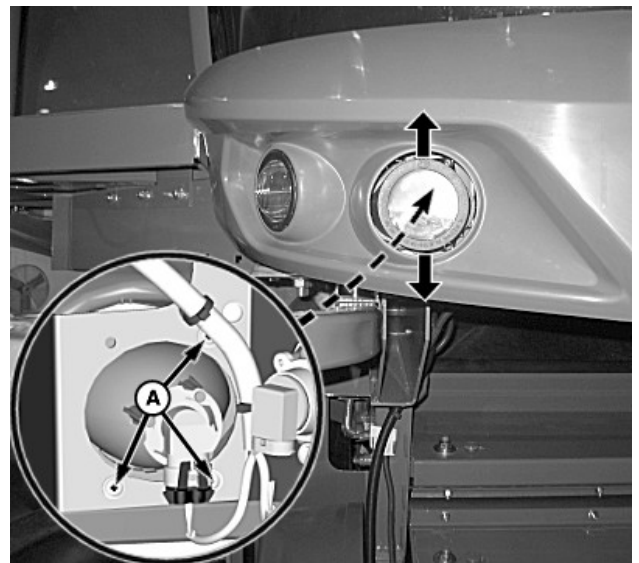

A—Screw (3 used)

H98977—UN—02NOV10

CAUTION: Lower feeder house fully before replacing or adjusting headlights.

NOTE: Light assemblies can be adjusted as needed to achieve correct lighting angles.

1. Adjust screws (A) to rotate light assembly up or down to the desired position and tighten screws.
2. Repeat on remaining lights as needed.

OUO6075,00050FC-19-14MAY21

Light Emitting Diode (LED) Lights (Optional)—Replacing




H119680—UN—20OCT16

A—Light Emitting Diode (LED) Lights

CAUTION: Raise the feeder house, engage the feeder house safety stop, shut OFF engine, set park brake, and remove key before replacing or adjusting the headlights.

1. Light emitting diode (LED) lights (A) are on both sides of cab as shown.

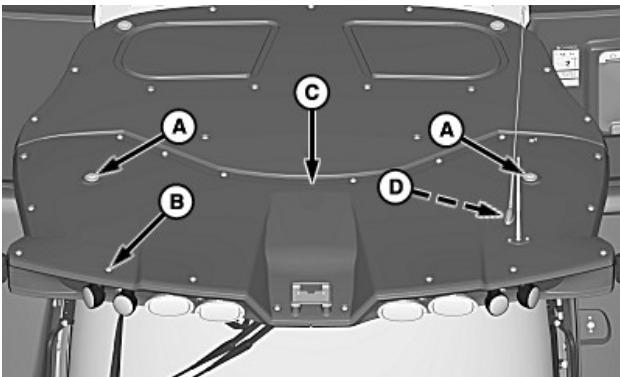


H119681—UN—20OCT16


A—Cap Screw and Washer (2 used)
B—Cap Screw and Washer (19 used)
C—Cab Roof
D—Antenna

NOTE: Remove GreenStar™ position receiver if equipped.

2. Remove cap screws and washers (A and B).
3. Lift the front left-hand side of the cab roof (C) and disconnect the antenna (D).
4. Remove front portion of the cab roof.

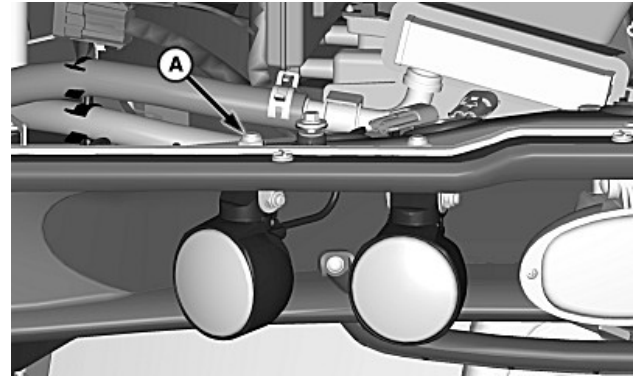

H119701—UN—25OCT16

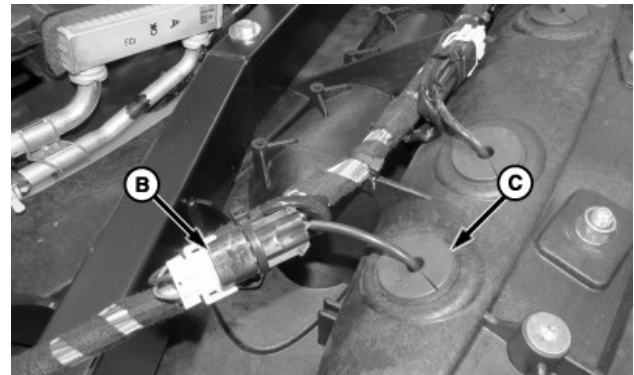

H119683—UN—20OCT16


A—Cap Screw and Nut
B—Connector
C—Grommet

5. Remove cap screw and nut (A).
6. Unplug the wiring harness connector (B) and remove the grommet (C).
7. Remove and discard light assembly.
8. Install light assembly in the reverse order.
9. Tighten cap screw and nut to specification.

Specification

Nut—Torque. 30 N·m
(22 lb·ft)

10. Rotate light housing to the previous operating position.
11. Repeat on remaining lights as needed.

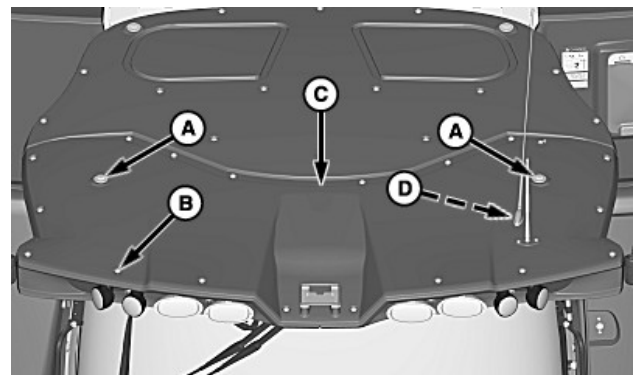

H119681—UN—20OCT16

- A—Cap Screw and Washer (2 used)
- B—Cap Screw and Washer (19 used)
- C—Cab Roof
- D—Antenna

12. Connect the antenna (D) and install the cab roof (C).
13. Install cap screws and washers (B) and tighten to specification.

Specification

Cap Screws—Torque. 6 N·m
(53 lb·in)

14. Install cap screws and washers (A) and tighten to specification.


Specification

Cap Screws—Torque. 10 N·m
(89 lb·in)

OUO6075,00050FD-19-14MAY21

Light Emitting Diode (LED) Lights (Optional)—Adjusting

Vertical Adjustment

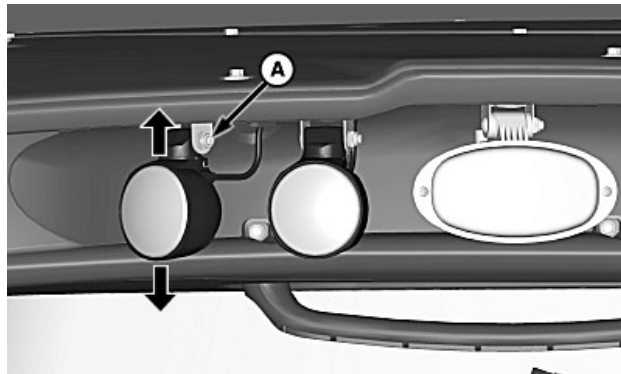

H119703—UN—26OCT16


A—Cap Screw

CAUTION: Raise the feeder house, engage the feeder house safety stop, shut OFF engine, set park brake, and remove key before replacing or adjusting the headlights.

NOTE: Light assemblies can be adjusted as needed to achieve correct lighting angles.

1. Loosen cap screw (A).
2. Rotate light assembly up or down to the desired position and tighten cap screw.
3. Repeat on remaining lights as needed.

Horizontal Adjustment

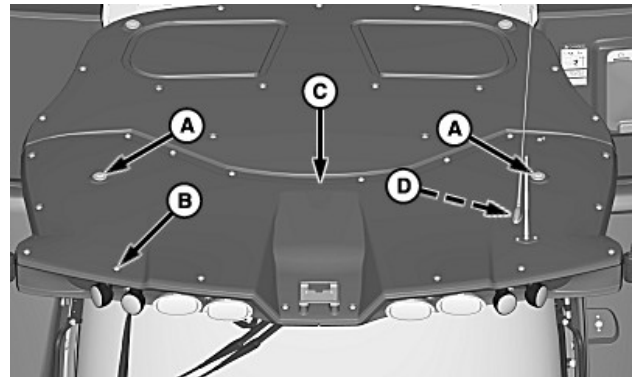


H119681—UN—20OCT16

- A—Cap Screw and Washer (2 used)
- B—Cap Screw and Washer (19 used)
- C—Cab Roof
- D—Antenna

NOTE: Remove GreenStar™ position receiver if equipped.

1. Remove cap screws and washers (A and B).
2. Lift the front left-hand side of the cab roof (C) and disconnect the antenna (D).
3. Remove front portion of the cab roof.

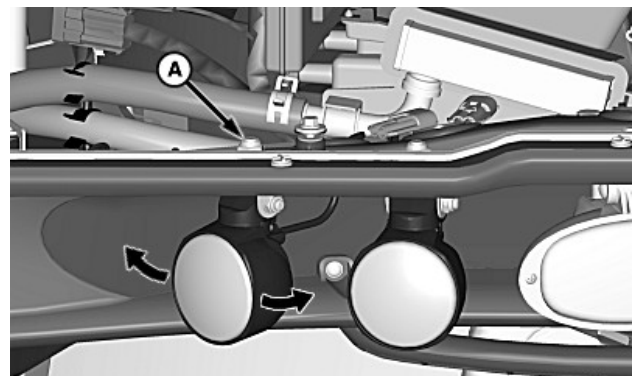

H119704—UN—26OCT16


A—Cap Screw and Nut

4. Loosen cap screw and nut (A).
5. Rotate light assembly left or right to the desired position.
6. Tighten cap screw and nut to specification.

Specification

Nut—Torque. 30 N·m
(22 lb·ft)

7. Repeat on remaining lights as needed.

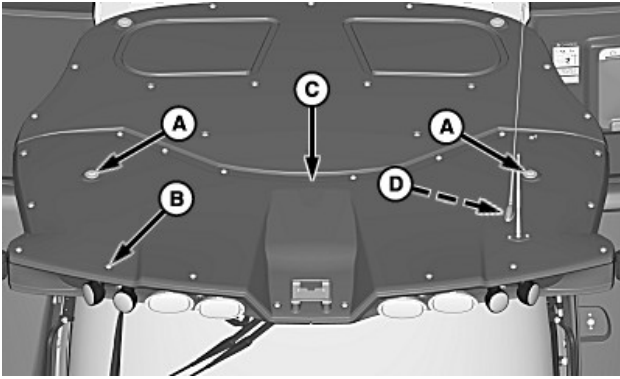

H119681—UN—20OCT16

- A—Cap Screw and Washer (2 used)
B—Cap Screw and Washer (19 used)
C—Cab Roof
D—Antenna

8. Connect the antenna (D) and install the cab roof (C).
9. Install cap screws and washers (B) and tighten to specification.

Specification

Cap Screws—Torque. 6 N·m
(53 lb·in)


10. Install cap screws and washers (A) and tighten to specification.

Specification


Cap Screws—Torque. 10 N·m
(89 lb·in)

OUC6075,00050FE-19-14MAY21


Replace Beacon Lights (Style A)

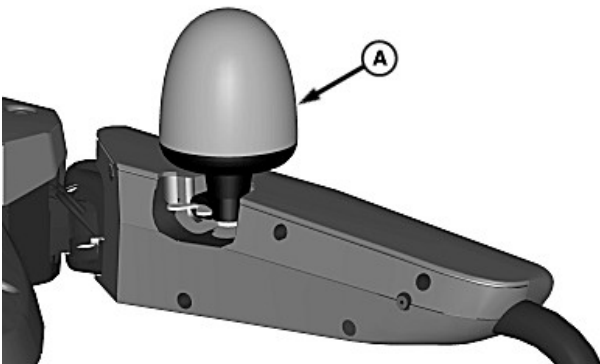

H111426—UN—12JUN14

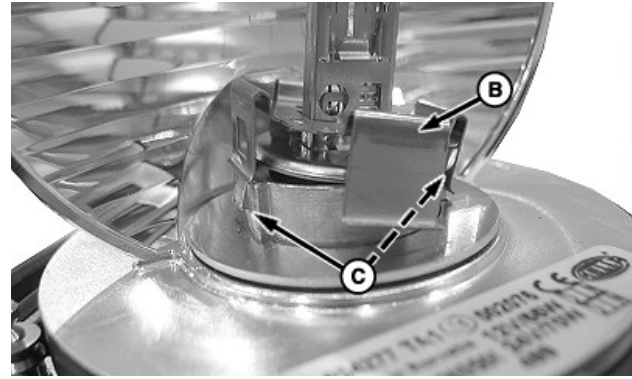

H96614—UN—25MAY10

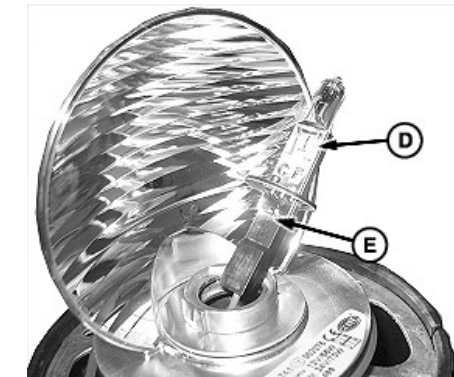

H96615—UN—25MAY10

- A—Lens
B—Clip
C—Locking Tab
D—Bulb Assembly
E—Connector

CAUTION: Raise feeder house and lower safety stop before replacing beacon lights.

Push down on lens (A) and turn counterclockwise to remove.

Pry clip (B) from locking tab (C).

Remove bulb assembly (D) from connector (E).

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

Replace bulb and install in reverse order.


Repeat on remaining lights as needed.

OUC6075,0004582-19-18JAN17

Replace Beacon Lights (Style B)

CAUTION: Raise feeder house and lower safety stop before replacing beacon lights.

NOTE: Light emitting diodes are required to meet local and government regulations for road transport height requirements depending on certain tire sizes.

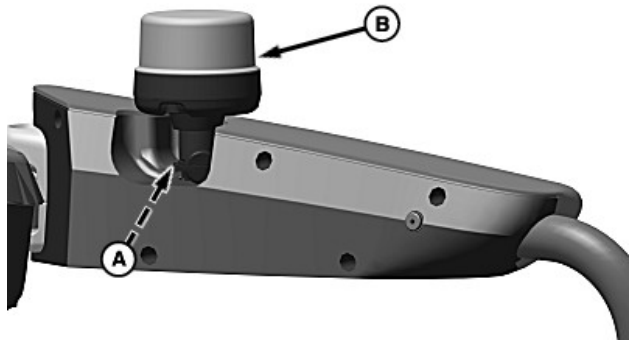


H135689—UN—01JUN22

A—Wing Nut
B—Beacon Light

1. Loosen wing nut (A) and remove beacon light (B) from the electrical outlet.
2. Remove and replace beacon light assembly.
3. Push down on beacon light assembly to ensure that there is good connection with the electrical outlet, then tighten the wing nut.
4. Repeat on remaining lights as needed.

mh69740,1654108214832-19-17JUN22

Halogen Bulb Work Lights (If Equipped)—Replacing

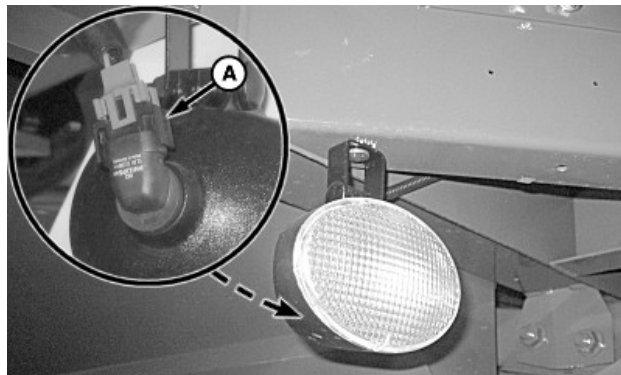

H96617—UN—25MAY10

Right-Hand Stubble Light

A—Connector

NOTE: The procedure shown is for replacing the stubble lights. This procedure is similar for the following lights:

- Discharge Lights
- Auxiliary Field Lights
- Access Door Work Lights
- Stubble Lights
- Grain Tank Light
- Unloading Auger Light


1. Disconnect wiring harness connector (A) from bulb assembly.
2. Turn bulb assembly counterclockwise and remove.

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

3. Remove and replace the bulb.
4. Push in bulb assembly and turn clockwise to install into housing.
5. Plug the wiring harness connector into the bulb assembly.
6. Repeat on remaining lights as needed.

OOU6075,0004BCA-19-19JUN19

Light Emitting Diode (LED) Work Lights (If Equipped)—Replacing

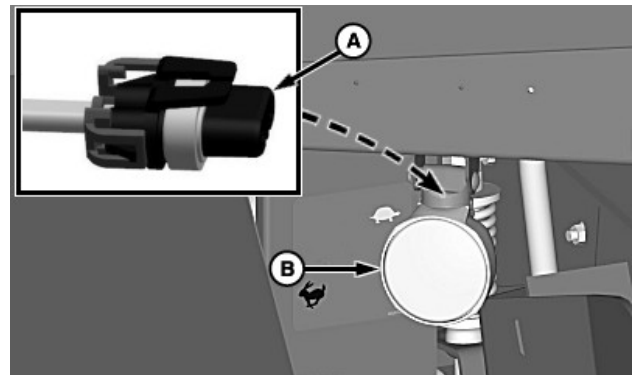

H126512—UN—17JUN19

Right-Hand Stubble Light

A—Connector
B—Light Assembly

NOTE: The procedure shown is for replacing the stubble lights. This procedure is similar for the following lights:


- Discharge Lights
- Auxiliary Field Lights
- Access Door Work Lights
- Stubble Lights
- Grain Tank Light
- Unloading Auger Light

1. Disconnect wiring harness connector (A) from light assembly (B).
2. Remove and replace light assembly.
3. Plug the wiring harness connector into the light assembly.

4. Repeat on remaining lights as needed.

OUC6075,0004BC8-19-18JUN19

Halogen Bulb Side Finder Lights and Cleaning Shoe Lights (If Equipped)—Replacing

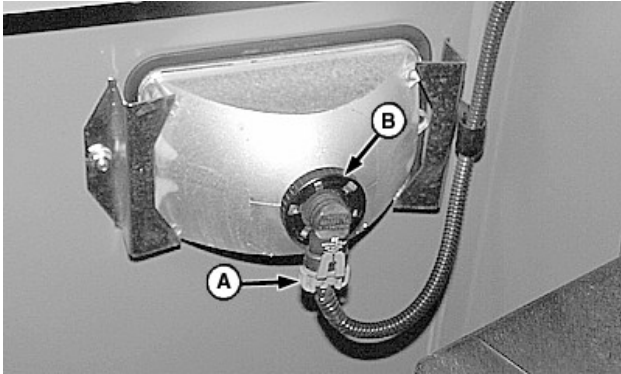

A—Connector
B—Retainer Ring

H57680—UN—28MAY99

NOTE: The procedure shown is for replacing the side finder lights. This procedure is similar for the following:

- Cleaning Shoe Lights


1. Disconnect wiring harness connector (A) from bulb assembly.
2. Push in and twist retainer ring (B) counterclockwise and remove.

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

3. Remove and replace the bulb.
4. Install bulb assembly in reverse order.
5. Plug the wiring harness connector into the bulb assembly.
6. Repeat on remaining lights as needed.

OUC6075,0004BCB-19-19JUN19

Light Emitting Diode (LED) Side Finder Lights and Cleaning Shoe Lights (If Equipped)—Replacing

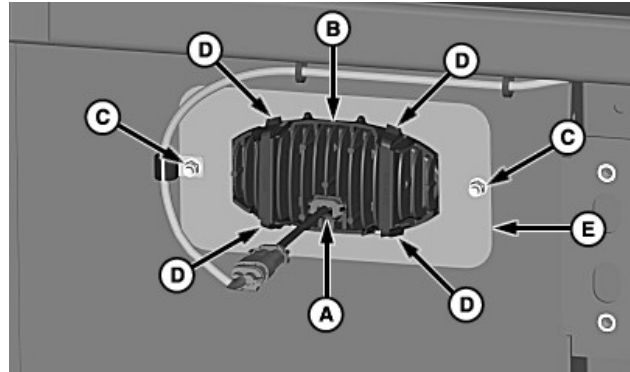

H126513—UN—17JUN19

A—Connector
B—Light Assembly
C—Cap Screw and Nut (2 used)
D—Tab (4 used)
E—Plate

NOTE: The procedure shown is for replacing the side finder lights. This procedure is similar for the following:

- Cleaning Shoe Lights


1. Disconnect wiring harness connector (A) from light assembly (B).
2. Remove cap screws and nuts (C).
3. Press tabs (D) and separate the light assembly from plate (E).
4. Remove light assembly from outside of the machine.
5. Install replacement light assembly from outside of the machine.

NOTE: Tabs on light assembly lock the plate into place.

6. Retain light assembly with previously removed plate.
7. Install previously removed cap screws and nuts.
8. Plug the wiring harness connector into the light assembly.
9. Repeat on remaining lights as needed.


OUC6075,0004BC9-19-18JUN19

Hazard/Marker Lights, Marker/Brake Lights, and Rear Hazard Lights—Replacing

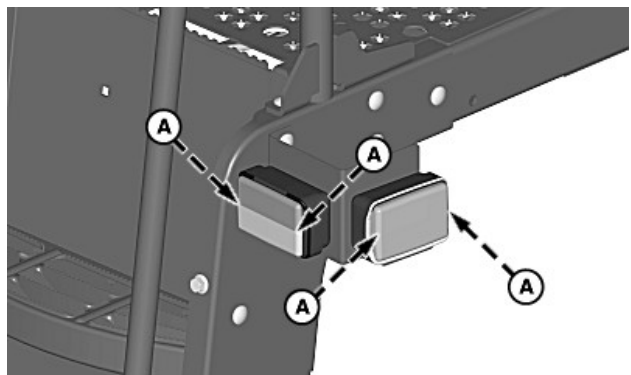

Hazard/Marker Lights

H121705—UN—07JUN17

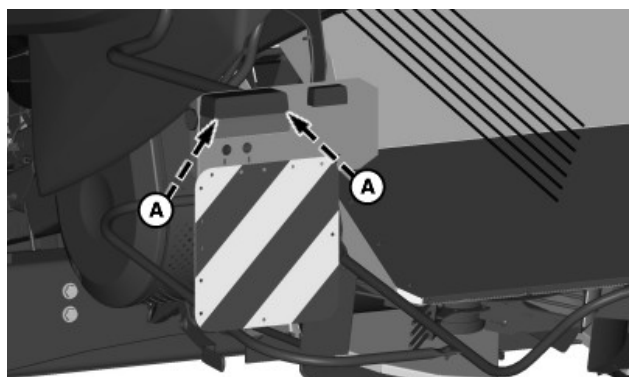

Marker/Brake Lights and Rear Hazard Lights

H100491—UN—28FEB11

A—Screws

Remove screws (A) from the desired lens cover.


Remove light bulb by pushing in and turning counterclockwise.

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

Install bulb and the desired lens cover in reverse order.

OUO6075.0004759-19-07JUN17

Cab Interior Light—Replacing

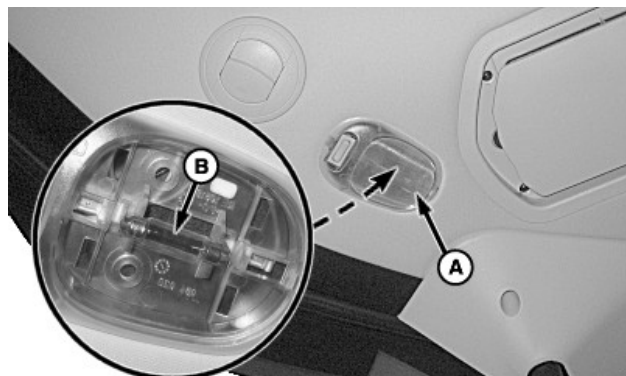

H96618—UN—02JUN10

A—Lens Cover B—Bulb


Remove lens cover (A) and replace bulb (B).

NOTE: Replacement light bulbs are sensitive to skin contact. Wear protective gloves or avoid touching light bulb surface.

Install bulb and lens cover in reverse order.

OUO6075.0000783-19-04NOV10

Map Light—Replacing

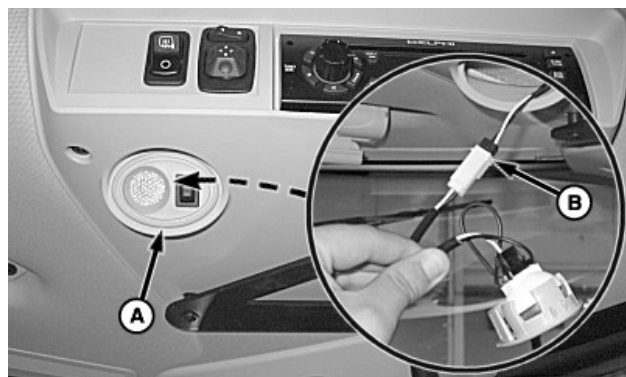

H97965—UN—13SEP10

A—Map Light Assembly B—Connector

Remove map light assembly (A) and disconnect wiring harness connector (B).

Remove and replace map light assembly.

Install and orient map light assembly in reverse order as shown.


OUO6075.00009AF-19-13SEP10

Ground Drive and Rear Axle

Service Tires Safely

Apply for allowance at your dealership or at manufacturing factory.

OUO6075,0004673-19-16MAR17

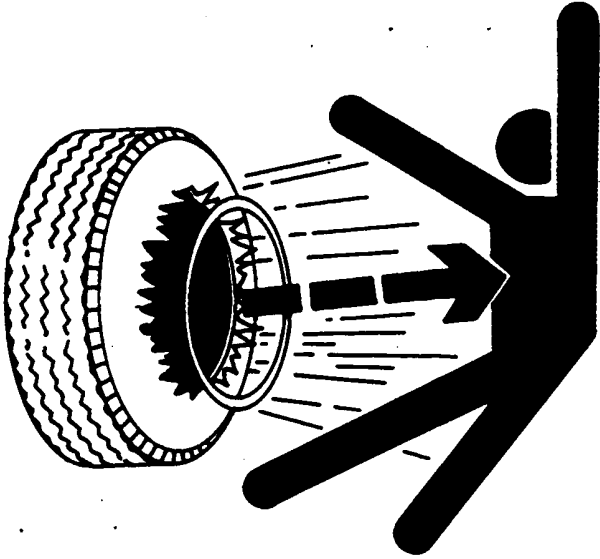

TS211—UN—15APR13

CAUTION: Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure.

Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

DX,RIM1-19-27OCT08

Roadway Transport with Header Attached

Observe national and local laws regarding operation of the combine on public roadways.

Roadway transport in Germany must be approved by your local TUEV to achieve a road permission.

Care and Service of Tires

IMPORTANT: Installing tires that do not meet original equipment tire specifications may cause machine malfunction. Consult your dealer or tire supplier for guidance.

Use of substandard tires or larger than recommended tires will void warranty and may decrease stability, affect steering, result in premature tire failure, or cause other durability or safety issues.

Check tires daily for damage or noticeably low pressure.

At least every 100 hours of operation, check tire pressure. If tires contain liquid ballast, use a special air-water gauge and measure with valve stem at bottom.

A small puncture in a tubeless tire can be temporarily repaired without dismounting the tire, thus avoiding down time during a busy season.

Protect tires from exposure to sunlight, petroleum products, and chemicals.

Drive carefully. Try to avoid rocks and sharp objects.

IMPORTANT: A permanent repair should be made as soon as possible to prevent further tire damage.

NOTE: Tire information and specifications are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. See the online Combine Ag Sales Manual or your John Deere dealer for further information on Tire Pressure Charts.

Tire pressures listed in charts may differ from the tire pressures shown on the side of the tires.

Header compatibility and specified inflation pressures are based on front axle load of a coarse grain configuration.

Load varies based on configuration. This may not reflect the worst case scenario. Consult your local tire dealer if in doubt.

Not all tires are available on all machines or at all manufacturing facilities.

Onboard Air Compressor (if equipped) - not recommended to inflate tires on the machine or run air tools.

OUO6075,0004635-19-20MAR17

Basic Tire Information

Diagonal Tire (Bias)

16.9 - 28 10PR R1
 (A) (B) (C) (D) (E)

H125004—UN—25SEP18

The diagonal tire (bias) is identified by conventional nomenclature.

- A**—Width of the tread of the tire in inches.
- B**—Indicates that the tire is diagonal.
- C**—Indicates the diameter of the rim in inches.
- D**—Ply Rating, indicates the strength of the carcass and not the number of plies.
- E**—Type and size of lug tire.

Radial Tire

16.9 R 28 R1W
 (A) (B) (C) (D)

H125005—UN—25SEP18

The radial tire can be identified by conventional nomenclature or international system.

Conventional nomenclature

- A**—Width of the tread of the tire in inches.
- B**—Indicates that the tire is radial.
- C**—Indicates the diameter of the rim in inches.
- D**—Type and size of lug tire.

600 /65 R 28 R1 155 A8
 (A) (B) (C) (D) (E) (F) (G)

H125006—UN—25SEP18

International system

- A**—Indicates the width of the tire in millimeters.
- B**—Indicates the height of the tire (side) as a percentage of the width.
- C**—Indicates that the tire is radial.
- D**—Indicates the diameter of the rim in inches.
- E**—Type and size of lug tire.
- F**—Indicates the index of the tire load capacity.
- G**—Indicates the maximum speed that the tire is indicated.

High Flotation Tire

850 /60 - 38 R1
 (A) (B) (C) (D) (E)

H125007—UN—25SEP18

The high flotation tires are identified by a mixed nomenclature.

- A**—Indicates the width of the tire in millimeters.

- B**—Indicates the height of the tire (side) as a percentage of the width.
- C**—Indicates that the tire is diagonal.
- D**—Indicates the diameter of the rim in inches.
- E**—Type and size of lug tire.

OUO6075,0004A27-19-08JAN19

Tire Tread Types



H125003—UN—24SEP18

NOTE: Tire tread shape varies depending on tire manufacture.

There are three types of tread and these are the most used on agricultural application.

- A**—R1 tire. Are most common in agricultural application and suitable for most soil conditions.
- B**—R1W tire. The lugs are 20% higher than the R1 tire, providing greater durability when used to run on roads.
- C**—R2 tire. Used in land with muddy, wet and with little support. For example, in irrigated rice field.

OUO6075,0004A28-19-24SEP18

Front Tire Pressure (S760 and S770)

NOTE: See Care and Service of Tires in this section for further information.

IMPORTANT: All road transportation MUST be done at pressure shown in No Head/Transport column. Improper pressure during transport may decrease vehicle stability. Proper pressure results in better fuel economy and longer tire life.

Speed	Transport Speed 40 km/h (25 mph)		Harvest Speed 10 km/h (6 mph)				
Approximate Mass	No Head/ Transport ^a	4500— 5500 kg	1500— 2500 kg	2500— 3500 kg	3500— 4500 kg	4500— 5600 kg	5600— 6000 kg
		9900— 12 100 lb	3300— 5500 lb	5500— 7700 lb	7700— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads	Not Applicable	Not Applicable	BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F RD35F 730D 735D 740D 735X 730PF 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Front Tire Size	S760 and S770—Tire Pressure—bar/kPa (psi)						
680/85R32 178A8	1.4/140 (20)	NR	2.4/240 (35)	2.8/280 (41)	3.2/320 (47)	NR	NR
680/85R32 CHO 178A8	1.4/140 (20)	NR	2.0/200 (29)	2.4/240 (35)	3.2/320 (47)	4.0/400 (58)	NR
IF 680/85R32 CFO 179A8	1.4/140 (20)	NR	1.6/160 (23)	2.0/200 (29)	2.2/220 (32)	NR	NR
VF 710/70R42 CFO 190B	1.6/160 (23)	NR	1.6/160 (23)	2.0/200 (29)	2.4/240 (35)	NR	NR
800/65R32 172A8	1.8/180 (26)	NR	2.8/280 (41)	2.8/280 (41)	NR	NR	NR
800/65R32 178A8	1.8/180 (26)	NR	2.8/280 (41)	2.8/280 (41)	3.2/320 (47)	NR	NR
IF 800/65R32 CFO 178A8-179A8	1.6/160 (23)	NR	2.0/200 (29)	2.4/240 (35)	NR	NR	NR
800/70R32 CHO 175A8	1.4/140 (20)	NR	1.8/180 (26)	2.0/200 (29)	2.0/200 (29)	NR	NR
IF 800/70R32 CFO 182A8	1.6/160 (23)	NR	1.8/180 (26)	2.0/200 (29)	2.2/220 (32)	NR	NR
800/70R38 173A8-181A8	1.4/140 (20)	NR	2.0/200 (29)	2.0/200 (29)	2.4/240 (35)	NR	NR
IF 800/70R38 CFO 184A8-187A8	1.2/120 (17)	NR	1.4/140 (20)	1.6/160 (23)	1.6/160 (23)	2.6/260 (38)	NR
VF 800/70R38 CFO 193A8	1.2/120 (17)	2.6/260 (38)	1.4/140 (20)	1.6/160 (23)	2.0/200 (29)	3.2/320 (47)	NR
LSW 800/55R46 CFO 190D	1.2/120 (17)	3.2/320 (47)	1.8/180 (26)	2.4/240 (35)	2.4/240 (35)	NR	NR
900/60R32 176A8	1.2/120 (17)	NR	2.4/240 (35)	2.4/240 (35)	2.8/280 (41)	NR	NR
900/60R38 181A8	1.2/120 (17)	NR	2.0/200 (29)	2.2/220 (32)	2.4/240 (35)	2.8/280 (41)	NR
IF 900/65R32 CFO 191A8	1.2/120 (17)	3.2/320 (47)	1.4/140 (20)	1.6/160 (23)	2.6/260 (38)	2.8/280 (41)	NR
VF 900/60R32 CFO 193A8	1.2/120 (17)	2.8/280 (41)	1.6/160 (23)	1.8/180 (26)	2.4/240 (35)	1.8/180 (26)	NR
VF 900/60R38 CFO+ 193A8	1.2/120 (17)	2.8/280 (41)	1.4/140 (20)	1.4/140 (20)	1.6/160 (23)	2.4/240 (35)	NR

Ground Drive and Rear Axle

Speed	Transport Speed 40 km/h (25 mph)		Harvest Speed 10 km/h (6 mph)				
Approximate Mass	No Head/ Transport ^a	4500— 5500 kg	1500— 2500 kg	2500— 3500 kg	3500— 4500 kg	4500— 5600 kg	5600— 6000 kg
		9900— 12 100 lb	3300— 5500 lb	5500— 7700 lb	7700— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads	Not Applicable	Not Applicable	BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F RD35F 730D 735D 740D 735X 730PF 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Front Tire Size	S760 and S770—Tire Pressure—bar/kPa (psi)						
LSW 1100/45R46 CFO 201D	1.2/120 (17)	2.4/240 (35)	1.2/120 (17)	1.4/140 (20)	2.4/240 (35)	1.6/160 (23)	NR
IF 1250/50R32 CFO 201B	1.2/120 (17)	2.4/240 (35)	1.2/120 (17)	1.2/120 (17)	1.4/140 (20)	1.6/160 (23)	NR
LSW 1250/35R46 CFO 202B	1.2/120 (17)	2.4/240 (35)	1.2/120 (17)	1.2/120 (17)	1.4/140 (20)	3.0/300 (44)	NR
520/85R42 157A8-165B DUALS	1.2/120 (17)	2.0/200 (29)	1.8/180 (26)	2.0/200 (29)	2.2/220 (32)	2.6/260 (38)	NR
IF 520/85R42 CFO 169D DUALS	1.2/120 (17)	1.8/180 (26)	1.4/140 (20)	1.4/140 (20)	2.2/220 (32)	2.6/260 (38)	NR
VF 520/85R42 CFO 174A8 DUALS	1.2/120 (17)	1.8/180 (26)	1.4/140 (20)	1.4/140 (20)	2.2/220 (32)	2.2/220 (32)	NR
580/85R42 166D DUALS	1.2/120 (17)	2.0/200 (29)	1.6/160 (23)	1.6/160 (23)	1.8/180 (26)	2.0/200 (29)	NR
650/85R38 173A8 DUALS	1.2/120 (17)	1.8/180 (26)	1.6/160 (23)	1.6/160 (23)	1.6/160 (23)	2.0/200 (29)	NR
NR = Not Recommended							

^aIndicates road transport configuration (no header, no grain in tank).

OUO6075.0005288-19-09JUN22

Front Tire Pressure (S780, S785, and S790)

NOTE: See Care and Service of Tires in this section for further information.

IMPORTANT: All road transportation MUST be done at pressure shown in No Head/Transport column. Improper pressure during transport may decrease vehicle stability. Proper pressure results in better fuel economy and longer tire life.

Speed	Transport Speed 40 km/h (25 mph)		Harvest Speed 10 km/h (6 mph)				
Approximate Mass	No Head/ Transport ^a	4500— 5500 kg	1500— 2500 kg	2500— 3500 kg	3500— 4500 kg	4500— 5600 kg	5600— 6000 kg
		9900— 12 100 lb	3300— 5500 lb	5500— 7700 lb	7700— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads	Not Applicable	Not Applicable	BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F RD35F 730D 735D 740D 735X 730PF 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Front Tire Size	S780, S785, and S790—Tire Pressure—bar/kPa (psi)						
680/85R32 178A8	1.4/140 (20)	NR	2.8/280 (41)	3.2/320 (47)	4.0/400 (58)	NR	NR
680/85R32 CHO 178A8	1.4/140 (20)	NR	2.4/240 (35)	2.8/280 (41)	3.2/320 (47)	4.0/400 (58)	NR
IF 680/85R32 CFO 179A8	1.4/140 (20)	NR	2.2/220 (32)	2.4/240 (35)	NR	NR	NR
VF 710/70R42 CFO 193B	1.6/160 (23)	3.6/360 (52)	2.4/240 (35)	2.4/240 (35)	3.0/300 (44)	NR	NR
IF 800/65R32 CFO 178A8-179A8	1.6/160 (23)	NR	2.4/240 (35)	NR	NR	NR	NR
800/70R32 CHO 175A8	1.6/160 (23)	NR	2.0/200 (29)	2.4/240 (35)	2.4/240 (35)	NR	NR
IF 800/70R32 CFO 182A8	1.6/160 (23)	NR	2.0/200 (29)	2.2/220 (32)	2.6/260 (38)	NR	NR
800/70R38 173A8-181A8	1.6/160 (23)	NR	2.4/240 (35)	2.4/240 (35)	2.8/280 (41)	NR	NR
IF 800/70R38 CFO 184A8-187A8	1.2/120 (17)	NR	1.4/140 (20)	1.6/160 (23)	1.6/160 (23)	NR	NR
VF 800/70R38 CFO 193A8	1.2/120 (17)	2.6/260 (38)	1.6/160 (23)	2.0/200 (29)	2.2/220 (32)	2.6/260 (38)	NR
LSW 800/55R46 CFO 190D	1.2/120 (17)	3.2/320 (47)	2.0/200 (29)	2.6/260 (38)	2.8/280 (41)	3.2/320 (47)	NR
900/60R32 176A8	1.2/120 (17)	NR	2.4/240 (35)	2.8/280 (41)	2.8/280 (41)	NR	NR
900/60R38 181A8	1.2/120 (17)	NR	2.4/240 (35)	2.8/280 (41)	2.8/280 (41)	NR	NR
IF 900/65R32 CFO 191A8	1.2/120 (17)	3.2/320 (47)	1.6/160 (23)	2.0/200 (29)	2.8/280 (41)	2.8/280 (41)	NR
VF 900/60R32 CFO 193A8	1.2/120 (17)	2.8/280 (41)	1.8/180 (26)	2.2/220 (32)	2.6/260 (38)	2.8/280 (41)	NR
VF 900/60R38 CFO+ 193A8	1.2/120 (17)	2.8/280 (41)	1.6/160 (23)	1.6/160 (23)	1.6/160 (23)	1.8/180 (26)	NR
LSW 1100/45R46 CFO 201D	1.2/120 (17)	2.4/240 (35)	1.4/140 (20)	1.6/160 (23)	2.4/240 (35)	2.4/240 (35)	2.6/260 (38)
IF 1250/50R32 CFO 201B	1.2/120 (17)	2.4/240 (35)	1.2/120 (17)	1.2/120 (17)	1.4/140 (20)	1.6/160 (23)	2.0/200 (29)

Ground Drive and Rear Axle

Speed	Transport Speed 40 km/h (25 mph)		Harvest Speed 10 km/h (6 mph)				
	No Head/ Transport ^a	4500— 5500 kg	1500— 2500 kg	2500— 3500 kg	3500— 4500 kg	4500— 5600 kg	5600— 6000 kg
Approximate Mass		9900— 12 100 lb	3300— 5500 lb	5500— 7700 lb	7700— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads	Not Applicable	Not Applicable	BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F RD35F 730D 735D 740D 735X 730PF 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Front Tire Size	S780, S785, and S790—Tire Pressure—bar/kPa (psi)						
LSW 1250/35R46 CFO 202B	1.2/120 (17)	2.4/240 (35)	1.2/120 (17)	1.6/160 (23)	1.6/160 (23)	1.6/160 (23)	2.0/200 (29)
520/85R42 157A8-165B DUALS	1.2/120 (17)	2.0/200 (29)	2.0/200 (29)	2.4/240 (35)	3.0/300 (44)	3.0/300 (44)	3.2/320 (47)
IF 520/85R42 CFO 169D DUALS	1.2/120 (17)	1.8/180 (26)	1.4/140 (20)	1.6/160 (23)	2.6/260 (38)	2.6/260 (38)	2.8/280 (41)
VF 520/85R42 CFO 174A8 DUALS	1.2/120 (17)	1.8/180 (26)	1.4/140 (20)	1.6/160 (23)	2.6/260 (38)	2.6/260 (38)	2.8/280 (41)
580/85R42 166D DUALS	1.2/120 (17)	2.0/200 (29)	1.6/160 (23)	1.8/180 (26)	2.0/200 (29)	2.2/220 (32)	2.4/240 (35)
650/85R38 173A8 DUALS	1.2/120 (17)	1.8/180 (26)	1.6/160 (23)	1.6/160 (23)	1.6/160 (23)	2.0/200 (29)	2.0/200 (29)
NR = Not Recommended							

^aIndicates road transport configuration (no header, no grain in tank).

OUC6075.0005289-19-09JUN22

Front Tire Pressure (HillMaster)

NOTE: See Care and Service of Tires in this section for further information.

IMPORTANT: All road transportation MUST be done at pressure shown in No Head/Transport column. Improper pressure during transport may decrease vehicle stability. Proper pressure results in better fuel economy and longer tire life.

Speed	Transport Speed 40 km/h (25 mph)	Harvest Speed 10 km/h (6 mph)					
Approximate Mass	No Head/ Transport ^a	1500— 2500 kg	2500— 3500 kg	3500— 4000 kg	4000— 4500 kg	4500— 5600 kg	5600— 6000 kg
		3300— 5500 lb	5500— 7700 lb	7700— 8800 lb	8800— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads	Not Applicable	BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F 730D 730X 730PF	RD35F 735D 740D 735X 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Front Tire Size	S770 HillMaster—Tire Pressure—bar/kPa (psi)						
680/85R32 178A8	1.6/160 (23)	2.4/240 (35)	2.8/280 (41)	3.8/380 (55)	NR	NR	NR
680/85R32 CHO 178A8	1.6/160 (23)	2.4/240 (35)	2.8/280 (41)	3.0/300 (44)	NR	NR	NR
IF 680/85R32 CFO 179A8	1.4/140 (20)	1.6/160 (23)	2.0/200 (29)	2.2/220 (32)	NR	NR	NR
800/70R32 CHO 175A8	1.4/140 (20)	1.8/180 (26)	2.0/200 (29)	2.2/220 (32)	NR	NR	NR
IF 800/70R32 CFO 182A8	1.4/140 (20)	1.6/160 (23)	1.8/180 (26)	2.4/240 (35)	NR	NR	NR
Front Tire Size	S780, S785, and S790 HillMaster—Tire Pressure—bar/kPa (psi)						
680/85R32 178A8	2.0/200 (29)	2.8/280 (41)	2.8/280 (41)	4.0/400 (58)	NR	NR	NR
680/85R32 CHO 178A8	2.0/200 (29)	2.8/280 (41)	2.8/280 (41)	3.2/320 (47)	NR	NR	NR
IF 680/85R32 CFO 179A8	1.4/140 (20)	1.8/180 (26)	2.0/200 (29)	2.2/220 (32)	NR	NR	NR
800/70R32 CHO 175A8	1.4/140 (20)	1.8/180 (26)	2.0/200 (29)	2.2/220 (32)	NR	NR	NR
IF 800/70R32 CFO 182A8	1.4/140 (20)	1.6/160 (23)	1.8/180 (26)	2.4/240 (35)	NR	NR	NR
NR = Not Recommended							

^aIndicates road transport configuration (no header, no grain in tank).

OUC6075,000528A-19-09JUN22

Rear Tire Pressure (S760 and S770)

NOTE: See Care and Service of Tires in this section for further information.

IMPORTANT: All road transportation MUST be done at pressure shown in No Head/Transport column. Improper pressure during transport may decrease vehicle stability. Proper pressure results in better fuel economy and longer tire life.

Speed	Transport Speed 40 km/h (25 mph)		Harvest Speed 10 km/h (6 mph)				
Approximate Mass	No Head/ Transport ^a	4500— 5500 kg	1500— 2500 kg	2500— 3500 kg	3500— 4500 kg	4500— 5600 kg	5600— 6000 kg
		9900— 12 100 lb	3300— 5500 lb	5500— 7700 lb	7700— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads	Not Applicable	Not Applicable	BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F RD35F 730D 735D 740D 735X 730PF 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Rear Tire Size	S760 and S770—Tire Pressure—bar/kPa (psi)						
500/85R24 IMP 181A8	3.6/360 (52)	2.0/200 (29)	2.8/280 (41)	2.4/240 (35)	2.4/240 (35)	NR	NR
500/80R28 IMP 182A8	3.6/360 (52)	2.0/200 (29)	2.4/240 (35)	2.4/240 (35)	2.0/200 (29)	NR	NR
VF520/80R26 CFO+ 168A8	2.8/280 (41)	1.2/120 (17)	1.4/140 (20)	1.4/140 (20)	1.4/140 (20)	NR	NR
600/70R28 161A8-164A8	3.6/360 (52) ^b	1.4/140 (20)	2.4/240 (35)	2.2/220 (32)	2.0/200 (29)	NR	NR
620/70R30 IMP 178A8	2.4/240 (35)	1.2/120 (17)	2.0/200 (29)	1.6/160 (23)	1.6/160 (23)	NR	NR
620/75R26 166A8	3.2/320 (47) ^b	1.2/120 (17)	2.2/220 (32)	2.0/200 (29)	1.6/160 (23)	NR	NR
VF620/70R26 CFO(+) 173A8	2.2/220 (32)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	NR	NR
VF620/75R26 CFO 172A8/B	1.8/180 (26)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	NR	NR
LSW750/60R30 CFO 180D	1.8/180 (26)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	NR	NR
VF710/65R26 177D R-2	1.8/180 (26)	1.2/120 (17)	1.8/180 (26)	1.6/160 (23)	1.2/120 (17)	NR	NR
750/65R26 166A8-169A8	2.8/280 (41)	1.2/120 (17)	1.8/180 (26)	1.6/160 (23)	1.4/140 (20)	NR	NR
VF750/65R26 CFO(+) 177A8/B-180A8	1.6/160 (23)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	NR	NR

NR = Not Recommended

^aIndicates road transport configuration (no header, no grain in tank).

^bMaximum speed is 30 km/h (20 mph).

OUC6075,000528B-19-09JUN22

Rear Tire Pressure (S780, S785, and S790)

NOTE: See Care and Service of Tires in this section for further information.

IMPORTANT: All road transportation MUST be done at pressure shown in No Head/Transport column. Improper pressure during transport may decrease vehicle stability. Proper pressure results in better fuel economy and longer tire life.

Speed	Transport Speed 40 km/h (25 mph)		Harvest Speed 10 km/h (6 mph)				
Approximate Mass	No Head/ Transport ^a	4500— 5500 kg	1500— 2500 kg	2500— 3500 kg	3500— 4500 kg	4500— 5600 kg	5600— 6000 kg
		9900— 12 100 lb	3300— 5500 lb	5500— 7700 lb	7700— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads	Not Applicable	Not Applicable	BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F RD35F 730D 735D 740D 735X 730PF 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Rear Tire Size	S780, S785, and S790—Tire Pressure—bar/kPa (psi)						
500/85R24 IMP 181A8	4.0/400 (58)	2.0/200 (29)	3.6/360 (52)	3.2/320 (47)	2.8/280 (41)	2.4/240 (35)	2.4/240 (35)
500/80R28 IMP 182A8	3.6/360 (52)	2.0/200 (29)	3.2/320 (47)	2.8/280 (41)	2.4/240 (35)	2.4/240 (35)	2.0/200 (29)
620/70R30 IMP 178A8	2.4/240 (35)	1.2/120 (17)	2.4/240 (35)	2.0/200 (29)	2.0/200 (29)	1.6/160 (23)	1.6/160 (23)
620/75R26 166A8	3.2/320 (47) ^b	1.4/140 (20)	2.4/240 (35)	2.4/240 (35)	2.2/220 (32)	2.0/200 (29)	1.8/180 (26)
VF620/70R26 CFO(+) 173A8	2.4/240 (35)	1.2/120 (17)	1.4/140 (20)	1.4/140 (20)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)
VF620/75R26 CFO 172A8/B	2.0/200 (29)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)
LSW750/60R30 CFO 180D	2.0/200 (29)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)
VF710/65R26 177D R-2	1.8/180 (26)	1.2/120 (17)	2.4/240 (35)	2.0/200 (29)	1.8/180 (26)	1.6/160 (23)	1.2/120 (17)
750/65R26 166A8-169A8	3.0/300 (44)	1.2/120 (17)	2.0/200 (29)	1.8/180 (26)	1.8/180 (26)	1.6/160 (23)	1.4/140 (20)
VF750/65R26 CFO(+) 177A8/B-180A8	1.6/160 (23)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)	1.2/120 (17)
NR = Not Recommended							

^aIndicates road transport configuration (no header, no grain in tank).

^bMaximum speed is 30 km/h (20 mph).

Rear Tire Pressure (HillMaster)

NOTE: See Care and Service of Tires in this section for further information.

IMPORTANT: All road transportation MUST be done at pressure shown in No Head/Transport column. Improper pressure during transport may decrease vehicle stability. Proper pressure results in better fuel economy and longer tire life.

Speed	Transport Speed 40 km/h (25 mph)	Harvest Speed 10 km/h (6 mph)					
Approximate Mass	No Head/ Transport ^a	1500— 2500 kg	2500— 3500 kg	3500— 4000 kg	4000— 4500 kg	4500— 5600 kg	5600— 6000 kg
		3300— 5500 lb	5500— 7700 lb	7700— 8800 lb	8800— 9900 lb	9900— 12 1300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads	Not Applicable	BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F 730D 730X 730PF	RD35F 735D 740D 735X 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Rear Tire Size		S770 HillMaster—Tire Pressure—bar/kPa (psi)					
500/85R24 181A8	3.2/320 (47)	2.4/240 (35)	2.0/200 (29)	1.6/160 (23)	NR	NR	NR
VF520/80R26 165A8	2.4/240 (35)	1.8/180 (26)	1.6/160 (23)	1.4/140 (20)	NR	NR	NR
620/70R30 178A8	2.4/240 (35)	2.6/260 (38)	1.6/160 (23)	1.4/140 (20)	NR	NR	NR
Rear Tire Size		S780, S785, and S790 HillMaster—Tire Pressure—bar/kPa (psi)					
500/85R24 181A8	4.0/400 (58)	2.8/280 (41)	2.4/240 (35)	2.0/200 (29)	NR	NR	NR
620/70R30 178A8	2.6/260 (38)	2.8/280 (41)	2.4/240 (35)	2.0/200 (29)	NR	NR	NR

NR = Not Recommended

^aIndicates road transport configuration (no header, no grain in tank).

OUC6075.000528D-19-09JUN22

Front and Rear Tire Information

It will be necessary to recalibrate system if tires or final drives are changed from what was originally shipped from the factory. Verify that correct tire code is entered into memory.

IMPORTANT: When changing drive wheels, tire radius may also change. CAB control unit MUST be set to new tire radius. See your John Deere dealer for further information.

Failure to calibrate system will result in inaccurate Harvest Monitor Yields.

For additional information shown below on front and rear tires, see your John Deere dealer for further information.

Front Tires:

- Tire Sizes
- Header Compatibility
- Row Spacings
- Wheel Spacers
- Axle Spacers
- Wheel Offsets

Rear Tires:

- Tire Sizes
- Axle Types
- Spindle Types
- Axle Positions

- Front to Rear Height Differences

OUO6075,0001113-19-11APR12

Drive Wheel Starter Stud




H97547—UN—06AUG10

If a wheel is removed, thread wheel starter stud (HXE16110) into axle, then install wheel. This stud can also be used for duals.


OUO6075,00007CC-19-06AUG10

Drive Wheel Bolt Torque

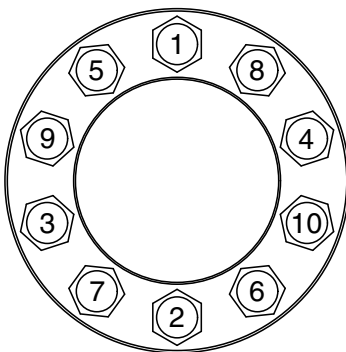

Style A

H96863—UN—10JUN10

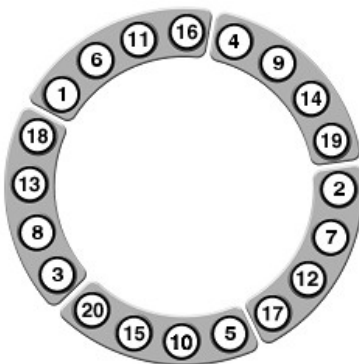

Style B

H124190—UN—15MAY18

Each time drive wheels are repositioned or replaced,

torque wheel bolts to specification and in a crisscross pattern.

Specification


Wheel Bolts—Torque (dry). 710 N·m
(524 lb·ft)

After the first hour of operation and again after every 10 hours of operation, torque wheel bolts to specification until 50 hours of operation is complete. Torque wheel bolts every 100 hours thereafter.

IMPORTANT: For HillMaster™ machines, verify the clearance of wheels and tires to the body of the machine. Do this when the HillMaster™ lift cylinders are extended fully to the right-hand side and fully to the left-hand side. Check clearance at end position.

OUO6075,0004DFD-19-09APR20

Front Drive Wheel Offset

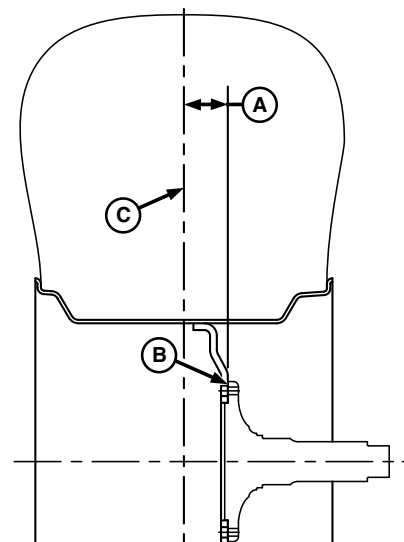

H65047—UN—30OCT00

A—Dimension
B—Spindle Surface
C—Tire Centerline

CAUTION: Avoid serious injury or death resulting from final drive failure and loss of drive wheel during transport or field operation. Do not exceed maximum wheel offset.

IMPORTANT: Use only John Deere supplied wheels, tires, and spacers. Use of non-John Deere components not meeting specification voids the warranty.

Do not use clamp-on style duals. They do not meet John Deere specification.

HillMaster is a trademark of Deere & Company

Wheel offset distance severely affects life of final drive parts. When installing drive wheels, ensure that offset dimension (A) measured from spindle surface (B) to centerline (C) is within specification.

Maximum Wheel Offset — Specification

Single Wheel—Distance. 114.3 mm (4-1/2 in.)

OUO6075,0004919-19-07MAR18

Preparing Dual Wheels for Transport or Service

⚠ CAUTION: Do not attempt to operate machine in the field with outer dual wheels removed. Machine damage can occur.

Only move machine short distances with outer duals removed. Before moving machine reduce machine weight by removing header and emptying grain tank.

IMPORTANT: If machine must be transported without outer wheels in place, **5** socket head cap screws and **15** wheel bolts **MUST** be installed and tightened to specification before lowering front axle to ground. Segmented spacers are omitted for road transport, loading, and unloading.


When preparing dual wheels for transport, outer wheels can be removed to reduce transport width.

Refer to the following directions whenever the front wheels (outer and inner) need removed or installed on a dual wheel machine. Inner wheel cannot be removed without first removing outer wheel.

Pay close attention to "CAUTION" statements as they address your safety, the safety of others and safe operations of the machine.

OUO6075,000491A-19-23MAY18

Jack Pocket Locations Decal

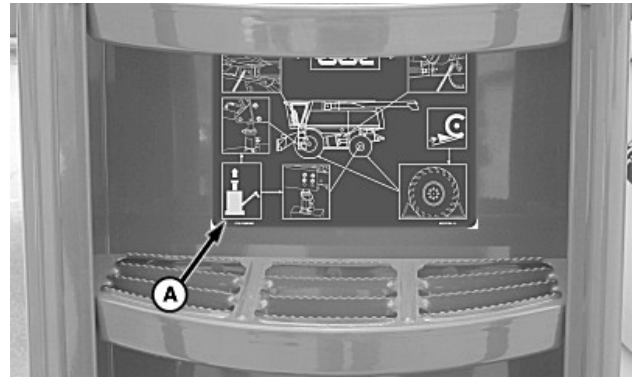

H106687—UN—24JAN13

A—Jack Pocket Locations Decal


⚠ CAUTION: Always empty grain tank before raising machine.

Block both sides of tires to prevent machine movement.

Jack pocket locations decal (A) is located on cab ladder. Decal shows correct locations for raising machine using proper jacks.

OUO6075,0001392-19-24JAN13

Jack Pocket Locations

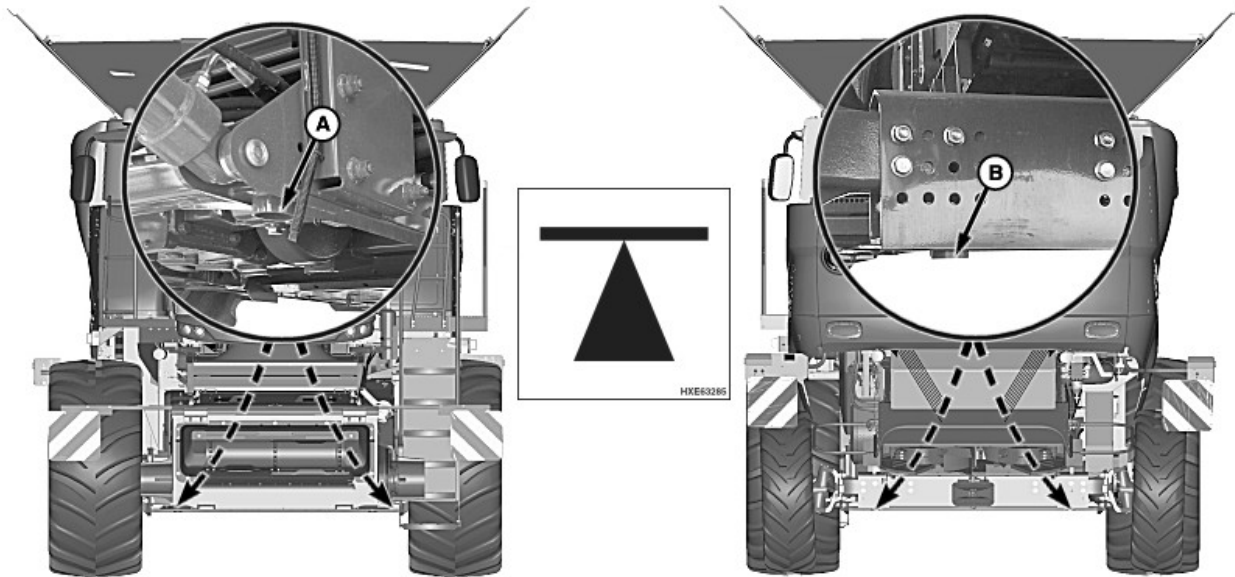

A—Jack Pocket Locations (front)

B—Jack Pocket Locations (rear)

H105883—UN—24JAN13

⚠ CAUTION: Always empty the grain tank before raising the machine.


To prevent machine movement, block both sides of the tires.

NOTE: Jack pocket locations are at the front and rear of the machine and on both sides.


Raise the machine at approved jack pocket locations (A and B).

OUO6075,0004B7B-19-30MAY19

Remove Front Wheels

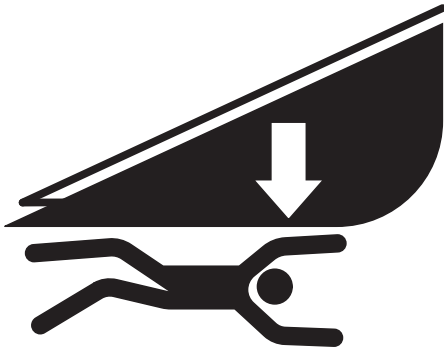

H121063—UN—14MAR17

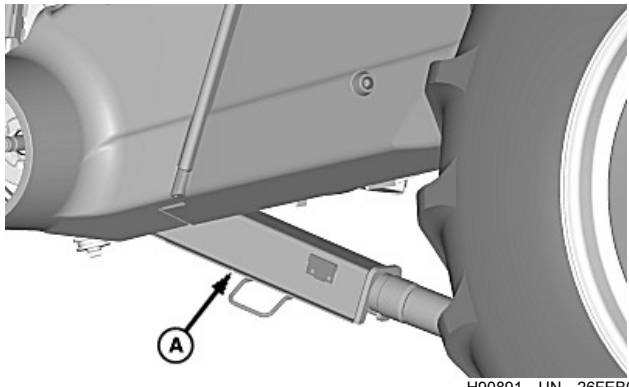

H90891—UN—26FEB08

A—Safety Stop

CAUTION: Grain tank **MUST** be empty and header attachment removed.

1. Park machine on flat, solid, and level surface.

CAUTION: To avoid injury or death, raise feeder house and lower safety stop. Some assembly requires you to work underneath the feeder house.

Without safety stop engaged, feeder house can suddenly lower, causing serious crushing injury or death.


2. Manual Feeder House Fore/Aft Tilt

Raise feeder house completely and lower safety stop (A) onto hydraulic cylinder rod.

Hydraulic Feeder House Fore/Aft Tilt

Raise feeder house completely and tilt hydraulic feeder house fore/aft tilt frame fully forward and lower safety stop (A) onto hydraulic cylinder rod.

3. Shut OFF engine, set park brake and remove key.

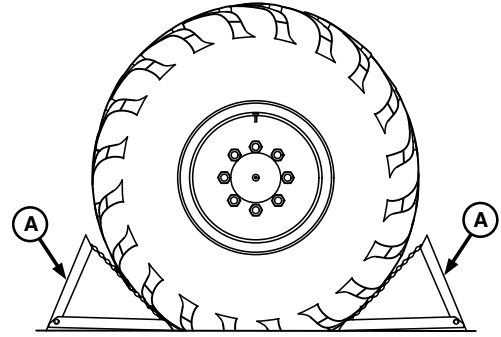


H118221—UN—18APR16


A—Blocks

CAUTION: Block both sides of tires to prevent movement while raising machine.

4. Block front and rear of tires as shown using blocks (A).
5. With front tires on ground, loosen wheel bolts one full turn, but do not remove at this time.

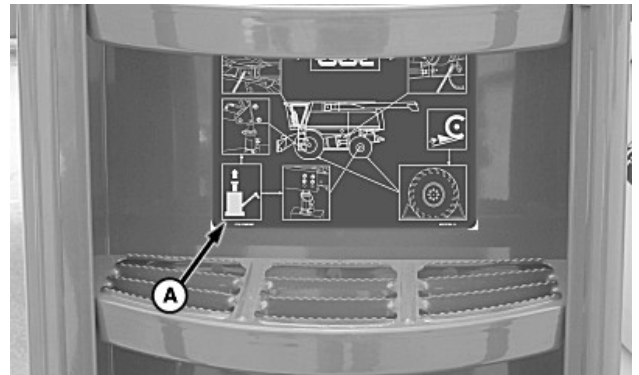

H106687—UN—24JAN13

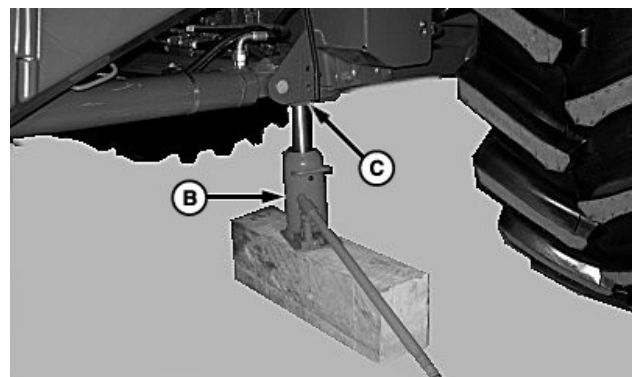

H118222—UN—15APR16

A—Decal
B—Jack
C—Jack Pocket

CAUTION: Jack **MUST** have a minimum lifting capacity of 10 886 kg (24 000 lb).


Do not raise machine at any location other than at the jack pockets.

Do not place objects between the jack and the jack pocket. They may cause machine instability. If the jack does not have enough travel length, place block on ground.

Wood blocks must be in good condition to support machine weight.

NOTE: Approved jack pocket locations can be found on decal (A) on the cab ladder.

6. Align jack (B) with the jack pocket (C) on the front axle and raise machine.

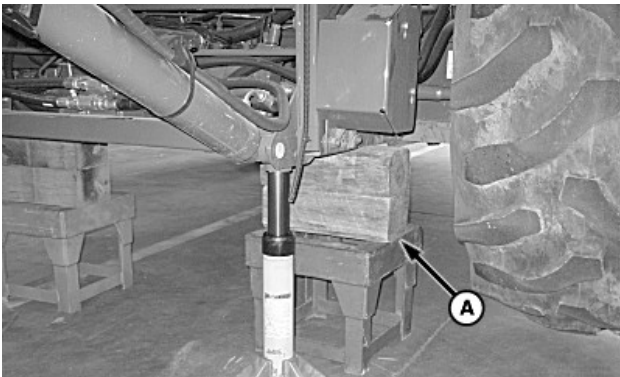

A—Blocks

H118223—UN—15APR16

CAUTION: To help prevent personal injury caused by unexpected movement of the machine, be sure that machine is stable after blocking.

Do not support machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work on a machine that is supported solely by a jack.

Wood blocks must be in good condition to support machine weight.

Be sure that the front axle rests on blocking before attempting to remove wheels.

7. Position solid blocking (A) underneath the front axle. Lower machine onto blocking, making sure that no load shift is seen or felt.



H124389—UN—29MAY18

- A—Wheel Bolt (10 used)
- B—Spacer (10 used)
- C—Wheel
- D—Wheel Spacer (if required)

8. Single Wheel Configuration (10 Wheel Bolts):

CAUTION: Wheels are heavy and are difficult to handle. To avoid personal injury, two people are needed to remove the wheel.

- a. Remove wheel bolts (A) and spacers (B).
- b. Repeat steps as needed for remaining spacers and wheels bolts.
- c. Remove wheel (C) away from machine.
- d. Remove wheel spacer (D) (if required) from the drive hub.
- e. Repeat steps as needed on the opposite side of the machine.



H124273—UN—15MAY18

- A—Wheel Bolt (20 used)
- B—Segmented Spacer (5 used)
- C—Wheel
- D—Wheel Spacer (if required)

9. Single Wheel Configuration (20 Wheel Bolts):

CAUTION: Wheels are heavy and are difficult to handle. To avoid personal injury, two people are needed to remove the wheel.

- a. Remove **four** wheel bolts (A) and segmented spacer (B).
- b. Repeat steps as needed for remaining segment spacers and wheels bolts.
- c. Remove wheel (C) away from machine.
- d. Remove wheel spacer (D) (if required) from the drive hub.
- e. Repeat steps as needed on the opposite side of the machine.



H124224—UN—14MAY18

- A—Wheel Bolt (20 used)
- B—Segmented Spacer (5 used)
- C—Socket Head Cap Screw (5 used)
- D—Oversized Hole (5 used)
- E—Outer Wheel Assembly

10. Dual Wheel Configuration (Outer Wheel):

CAUTION: Wheels are heavy and are difficult to handle. When handling wheels, off-centered weight can suddenly shift making wheel handling awkward and the wheel difficult to control. To avoid personal injury, two people are needed to remove the wheel.

- a. Remove **four** wheel bolts (A) and segmented spacer (B).
- b. Install **one** socket head cap screw (C) through the oversized hole (D) to retain inner wheel in place.

CAUTION: To avoid personal injury, socket head cap screws **MUST** be installed to prevent inner wheel from coming off when removing outer wheel.

- c. Repeat steps as needed for remaining segment spacers and wheels bolts.
- d. Remove outer wheel assembly (E) away from machine.
- e. Repeat steps as needed on the opposite side of the machine.

IMPORTANT: If machine must be transported without outer wheels in place, 5 socket head cap screws and 15 wheel bolts **MUST** be installed and tightened to specification before lowering front axle to ground. Segmented spacers are omitted for road transport, loading, and unloading.



H124225—UN—14MAY18

A—Socket Head Cap Screw (5 used)


B—Inner Wheel Assembly

11. Dual Wheel Configuration (Inner Wheel):

- a. Remove socket head cap screws (A).
- b. Remove inner wheel assembly (B) away from machine.
- c. Repeat steps as needed on the opposite side of the machine.

OUO6075,0004DFE-19-09APR20

Install Front Wheels

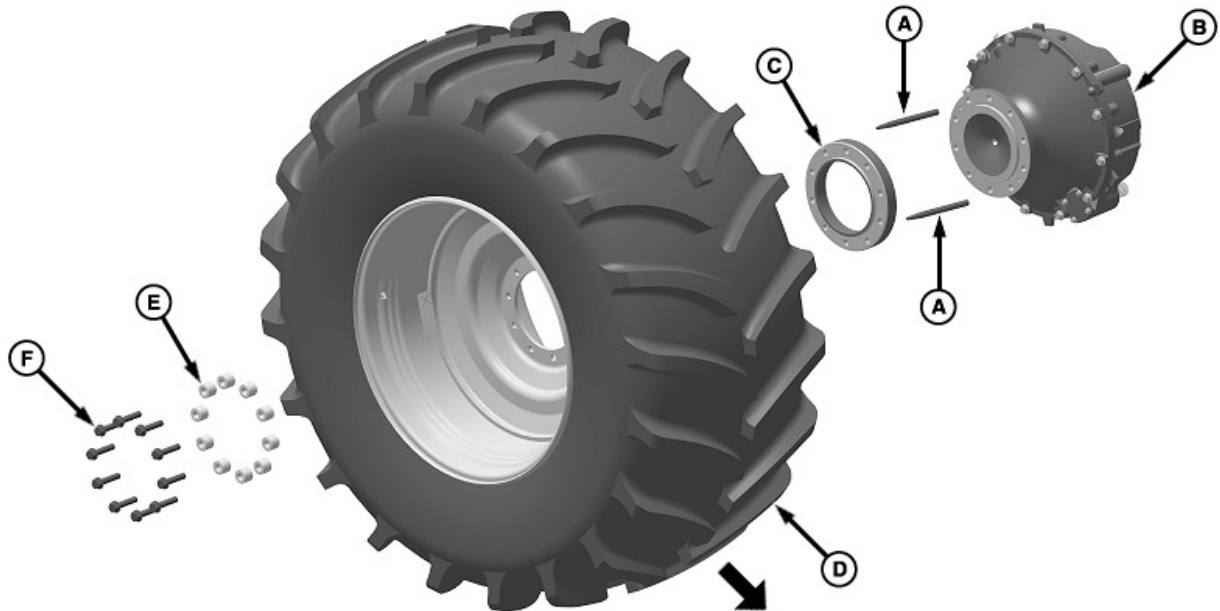

H124390—UN—29MAY18

A—Pilot Stud (2 used)
B—Drive Hub
C—Wheel Spacer (if required)

D—Wheel
E—Spacer (10 used)
F—Wheel Bolt (10 used)

1. Single Wheel Configuration (10 Wheel Bolts):

CAUTION: Wheels are heavy and are difficult to handle. To avoid personal injury, two people are needed to install the wheel.

NOTE: The 10 wheel bolt rims will fit on a 20 wheel bolt drive hub.

Pilot stud HXE16110 is recommended to help guide wheels into position.

- Install pilot studs (A) in top and bottom holes of the drive hub (B). Stud threads must bottom out in holes.
- Install wheel spacer (C) (if required) onto the drive hub.


IMPORTANT: Install tire as directed or machine will NOT be drivable.

- Position the wheel (D) so the tire cleats point towards the front and downward.
- Align holes in the rim with pilot studs.
- Install wheel onto the drive hub.

IMPORTANT: Start wheel bolts by hand to help prevent damage to bolts.

- Install spacers (E) and retain with wheel bolts (F).

IMPORTANT: Install all wheel bolts and spacers **BEFORE** lowering front axle to ground.

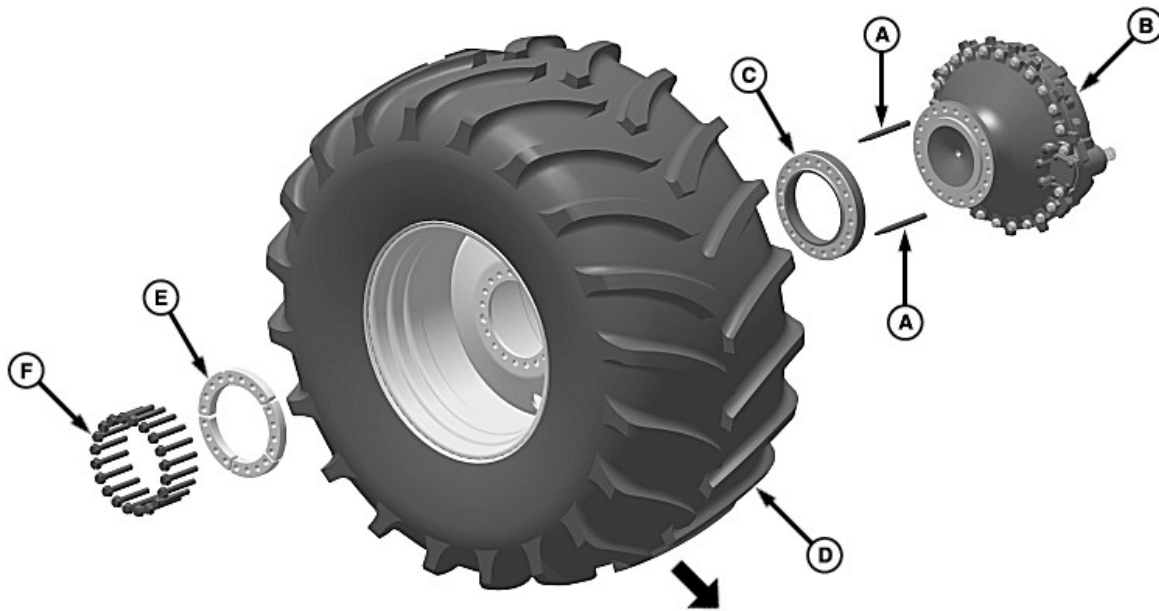

H124196—UN—14MAY18

A—Pilot Stud (2 used)
B—Drive Hub
C—Wheel Spacer (if required)

D—Wheel
E—Segmented Spacer (5 used)
F—Wheel Bolt (20 used)

2. Single Wheel Configuration (20 Wheel Bolts):

CAUTION: Wheels are heavy and are difficult to handle. To avoid personal injury, two people are needed to install the wheel.

NOTE: The 10 wheel bolt rims will fit on a 20 wheel bolt drive hub.

Pilot stud HXE16110 is recommended to help guide wheels into position.

- Install pilot studs (A) in top and bottom holes of the drive hub (B). Stud threads must bottom out in holes.
- Install wheel spacer (C) (if required) onto the drive hub.

IMPORTANT: Install tire as directed or machine will NOT be drivable.

- Position the wheel (D) so the tire cleats point towards the front and downward.


- Align holes in the rim with pilot studs.
- Install wheel onto the drive hub.

IMPORTANT: When attaching a 10 wheel bolt rim to a 20 wheel bolt drive hub, always use the same set of threaded holes. The buildup of dirt, debris, and rust in these unused holes prevents adequate clamp force of the wheel bolts. A plug is installed in one of the threaded holes in the drive hub to prevent the additional set of threaded holes from being used.

Start wheel bolts by hand to help prevent damage to bolts.

- Install segmented spacers (E) and retain with wheel bolts (F).

IMPORTANT: Install all wheel bolts and segmented spacers **BEFORE** lowering front axle to ground.

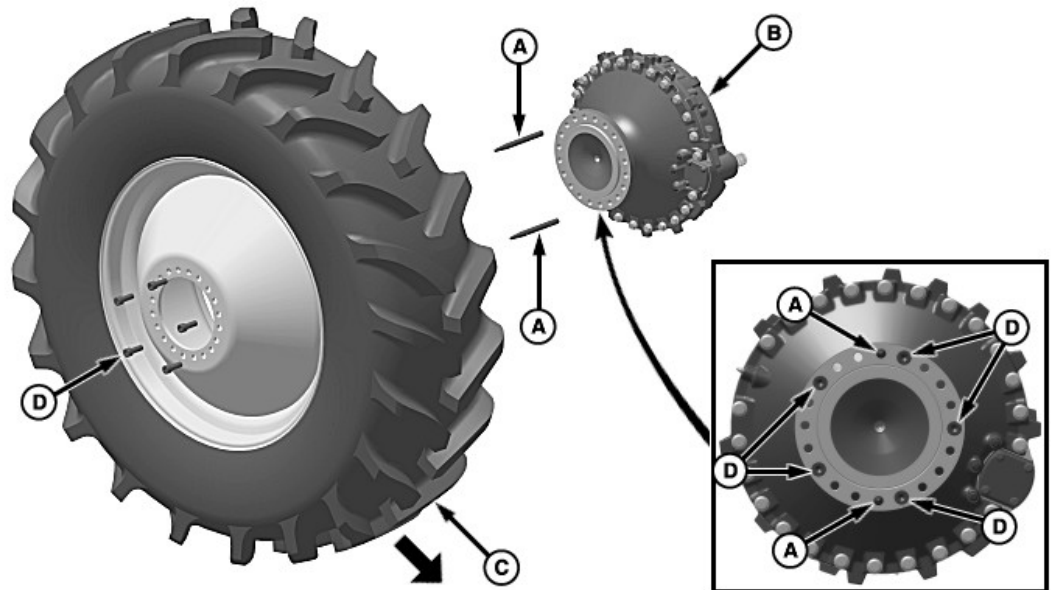

H124461—UN—08JUN18

A—Pilot Stud (2 used)
B—Drive Hub

C—Wheel
D—Socket Head Cap Screw (5 used)

3. Dual Wheel Configuration (Inner Wheel):

CAUTION: Wheels are heavy and are difficult to handle. When handling wheels, off-centered weight can suddenly shift making wheel handling awkward and the wheel difficult to control. To avoid personal injury, two people are needed to install the wheel.

NOTE: Pilot stud HXE16110 is recommended to help guide wheels into position.

- Install pilot studs (A) in top and bottom holes of the drive hub (B). Stud threads must bottom out in holes.

IMPORTANT: Install tire as directed or machine will NOT be drivable.


- Position the wheel (C) so the tire cleats point towards the front and downward.

- Align holes in the rim with pilot studs.
- Install wheel onto the drive hub.
- Install socket head cap screws (D) so that they are equally spaced from each other.
- Tighten socket head cap screws to specification using an M17 hex bit socket.

Specification

Socket Head Cap	
Screws—Torque (dry).	450 N·m (332 lb·ft)

IMPORTANT: If machine must be transported without outer wheels in place, 5 socket head cap screws and 15 wheel bolts **MUST** be installed and tightened to specification before lowering front axle to ground. Segmented spacers are omitted for road transport, loading, and unloading.

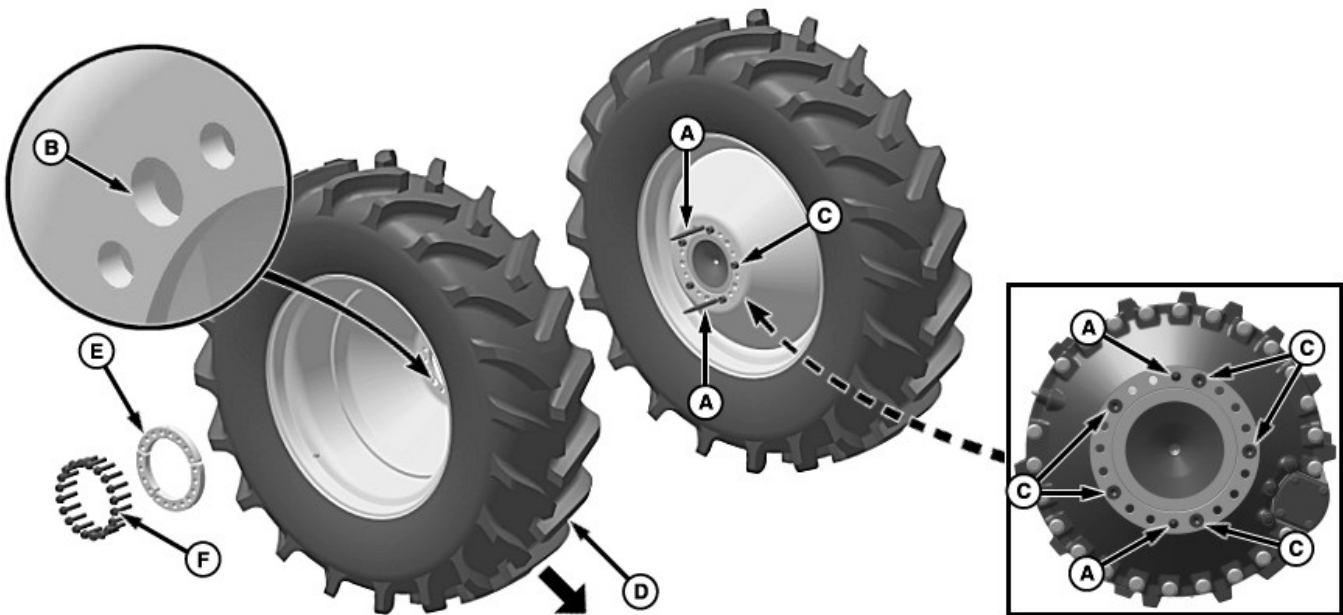

H124201—UN—14MAY18

A—Pilot Stud (2 used)
B—Oversized Hole (5 used)
C—Socket Head Cap Screw (5 used)

D—Wheel
E—Segmented Spacer (5 used)
F—Wheel Bolt (20 used)

4. Dual Wheel Configuration (Outer Wheel):

CAUTION: Wheels are heavy and are difficult to handle. When handling wheels, off-centered weight can suddenly shift making wheel handling awkward and the wheel difficult to control. To avoid personal injury, two people are needed to install the wheel.

IMPORTANT: Install tire as directed or machine will NOT be drivable.

- Position the wheel so the tire cleats point towards the front and downward.
- Align holes in the rim with pilot studs (A).

IMPORTANT: Verify that the oversized holes are aligned with the socket head cap screws. Inner and outer rims are flush with each other.


- Align oversized holes (B) with previously installed socket head cap screws (C).
- Install wheel (D) onto the drive hub.
- Remove **one** socket head cap screw through the oversized hole.
- Align **one** segmented spacer (E) with **four** rim holes.

IMPORTANT: Start wheel bolts by hand to help prevent damage to bolts.

- Install **four** wheel bolts (F) through segmented spacer and into the rim holes.
- Repeat steps as needed for remaining segment spacers and wheels bolts.

IMPORTANT: Install all wheel bolts and segmented spacers **BEFORE** lowering front axle to ground.

NOTE: Retain socket head cap screws for future use when removing and installing wheels. Store the socket head cap screws in the toolbox.

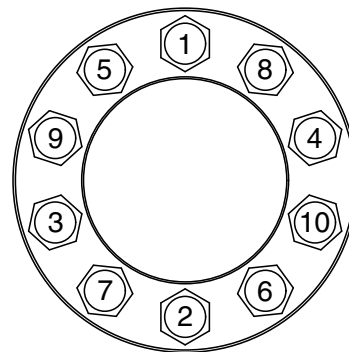

Style A

H96863—UN—10JUN10



H124190—UN—15MAY18

Style B

5. Tighten wheel bolts to specification using a crisscross pattern.

Specification

Wheel Bolts—Torque (dry). 710 N·m
(524 lb·ft)

6. Remove pilot studs and replace with wheel bolts.
7. Tighten remaining wheel bolts to specification.

Specification

Wheel Bolts—Torque (dry). 710 N·m
(524 lb·ft)

8. Repeat steps on the opposite side of machine and lower to ground.

After the first hour of operation and again after every 10 hours of operation, torque wheel bolts to specification until 50 hours of operation is complete. Torque wheel bolts every 100 hours thereafter.

9. Check tire pressure and inflate as needed. See Care and Service of Tires in this section for tire inflation pressure.

OUO6075,0004DFF-19-23JUN20

Rear Wheel Bolt Torque

H96809—UN—09JUN10

Each time a rear wheel is removed, torque wheel bolts to specification.

Specification

M16 Wheel Bolts (Regular Duty
Two-Wheel Drive)—Torque. 315 N·m
(230 lb·ft)

M22 Wheel Bolts (Extra Heavy-
Duty Two-Wheel Drive)—Torque. 710 N·m
(524 lb·ft)

M22 Wheel Bolts (Four-Wheel
Drive)—Torque. 710 N·m
(524 lb·ft)

After the first hour of operation and again after every 10 hours of operation, torque wheel bolts to specification until 50 hours of operation is completed. Torque wheel bolts every 100 hours thereafter.

NOTE: Refer to decal on the tire for proper torque sequence.

OUO6075,00042E4-19-02JUN16

Using Liquid Weight

H96809—UN—09JUN10

CAUTION: Installing liquid weight (ballast) requires special equipment and training.

IMPORTANT: Cover rim completely with solution to avoid corrosion, but NEVER fill any tire more than 90 percent full. More solution would leave too little air space to absorb shocks. Damage to tire could occur.

A solution of water and calcium chloride provides a safe and economical ballast. Used properly, it will not damage tires, tubes or rims.

Use calcium chloride to prevent water from freezing. A mixture of 1.6 kg (3-1/2 lb) of calcium chloride per 3.8 L (1 gal) will not freeze solid above -45°C (-50°F).

NOTE: Use of alcohol as liquid ballast is not recommended. Calcium chloride solution is heavier and more economical.

Fill tubeless tires at least to valve level (minimum 75 percent full). Less solution would expose part of rim,

possibly causing corrosion. Tube-type tires may be filled to any level below 90 percent.

OUO6075,00007D0-19-10JUN10

Ballast Requirements

NOTE: Ballast requirements vary based on configuration.

Ballast requirements are based off standard Corn Pricing configuration, 133 L (35 gal) fuel in tank, and full grain tank. This may not reflect all scenarios.

Tires requiring fluid must be filled to 75%.

Approximate Mass		1500— 2500 kg	2500— 3500 kg	3500— 4500 kg	4500— 5600 kg	5600— 6000 kg
		3300— 5500 lb	5500— 7700 lb	7700— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads		BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F RD35F 730D 735D 740D 735X 730PF 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Model	Normal Slopes (Flat to 15%)					
S760 and S770	Two-Wheel Drive	No	No	Yes	Yes	NR
	Four-Wheel Drive					
S780, S785, and S790	Two-Wheel Drive	No	No	Yes	Yes	Yes
	Four-Wheel Drive					
Model	Hilly Slopes (15% to 20%)					
S760 and S770	Two-Wheel Drive	No	Yes	NR	NR	NR
	Four-Wheel Drive					
S780, S785, and S790	Two-Wheel Drive	No	Yes	NR	NR	NR
	Four-Wheel Drive					
No = Ballast not required for any size tires. Yes = Ballast required for all tire sizes. NR = Not recommended. Configuration cannot be ballasted properly.						

OUO6075.0005295-19-09JUN22

Ballast Requirements (HillMaster)

NOTE: Ballast requirements vary based on configuration.

Ballast requirements are based off standard Corn Pricing configuration, 133 L (35 gal) fuel in tank, and full grain tank. This may not reflect all scenarios.

Tires requiring fluid must be filled to 75%.

Approximate Mass		1500— 2500 kg	2500— 3500 kg	3500— 4500 kg	4500— 5600 kg	5600— 6000 kg
		3300— 5500 lb	5500— 7700 lb	7700— 9900 lb	9900— 12 300 lb	12 300— 13 200 lb
Belt Pickup/Draper Heads		BP15 620F 622F 625F	630F 635F 725D 722PF 725PF 722X 725X	RD30F RD35F 730D 735D 740D 735X 730PF 735PF	HD35R HD35F HD35X HD40R HD40X HD45X RD40F RD45F 740X 740PF	HD40F HD45R HD45F
Model	Normal Slopes (Flat to 15%)					
S770 HillMaster	Two-Wheel Drive	No	No	NR	NR	NR
	Four-Wheel Drive					
S780, S785, and S790 HillMaster	Two-Wheel Drive	No	No	NR	NR	NR
	Four-Wheel Drive					
Model	Hilly Slopes (15% to 20%)					
S770 HillMaster	Two-Wheel Drive	No	Yes	NR	NR	NR
	Four-Wheel Drive					
S780, S785, and S790 HillMaster	Two-Wheel Drive	No	Yes	NR	NR	NR
	Four-Wheel Drive					
No = Ballast not required for any size tires. Yes = Ballast required for all tire sizes. NR = Not recommended. Configuration cannot be ballasted properly.						

Transporting

Roadway Transport with Header Attached

Observe national and local laws regarding operation of the combine on public roadways.

This combine can be approved for roadway transport in Germany with a Geringhoff 8-row folding header and a Kemper 8-row folding header. Roadway transport in Germany must be approved by your local TUEV to achieve a road permission.

Apply for allowance at your dealership or at manufacturing factory.

OOU6075,000431D-19-29JUN16

Driving Machine on Roads



Folding Button

H115016—UN—22MAR16

CAUTION: Avoid power line entanglement. Grain tank covers must be closed before transporting machine.


IMPORTANT: Verify that grain tank is unloaded before transporting machine on road.

Verify that folding unloading auger and folding grain tank covers are fully folded before driving machine.

1. Press folding button on navigation bar. See Folding Application Help or Operator's Station Help for further information.

The following items must be folded to the transport position:


- Unloading Auger
- Grain Tank Covers (If Equipped)

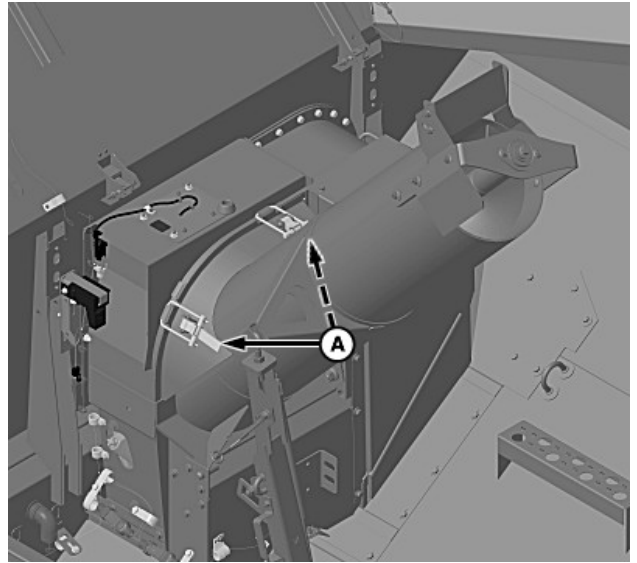

H123557—UN—21FEB18


A—Clamps

2. **Manual Fold Clean Grain Auger (If Equipped):** Release clamps (A) and lower auger.

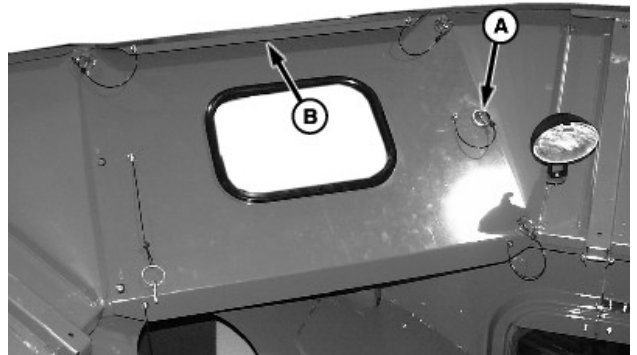

H75331—UN—26FEB03

Front Grain Tank Extension Shown

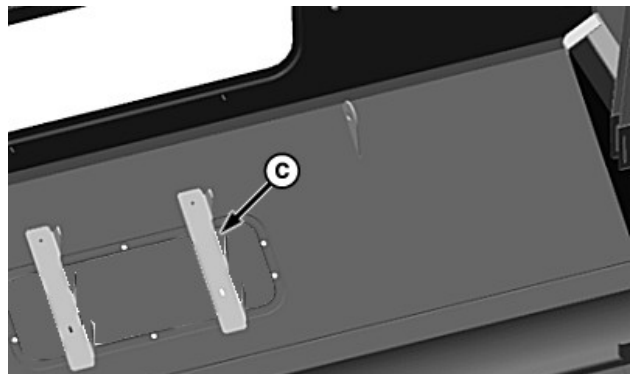


H113135—UN—05MAR15

- A—Quick-Lock Pins
B—Grain Tank Corner Extensions
C—Storage Rack


3. **116 L/s (3.3 bu/s) Unload Rate Grain Tank Extensions (If Equipped):** Remove quick-lock pins (A) from the grain tank corner extensions (B). Store corner grain tank extensions in the storage rack (C). Fold grain tank extensions in the following order:

- a. Fold front grain tank extension and rear grain tank extension.
- b. Fold left-hand grain tank extension and right-hand grain tank extension.

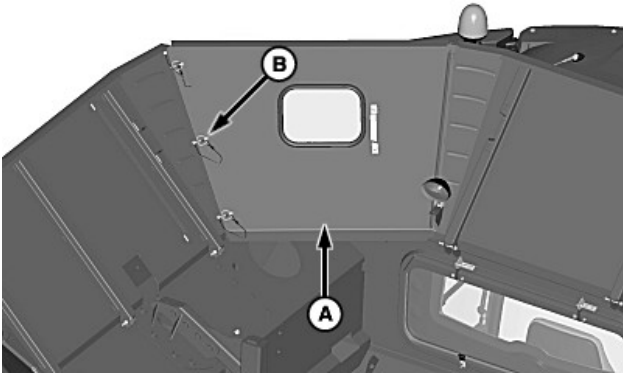

H114383—UN—02JUN15


Front Grain Tank Extension

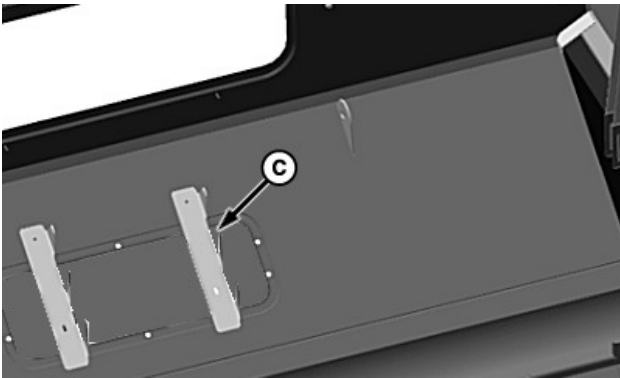

H114384—UN—02JUN15

- A—Grain Tank Corner Extensions
B—Quick-Lock Pins
C—Storage Rack

4. **134 L/s (3.8 bu/s) Unload Rate Grain Tank Extensions (If Equipped):** Remove quick-lock pins (B) from the grain tank corner extensions (A). Store corner grain tank extensions storage rack (C). Fold grain tank extensions in the following order:
 - a. Fold front grain tank extension and rear grain tank extension.
 - b. Fold left-hand grain tank extension and right-hand grain tank extension.

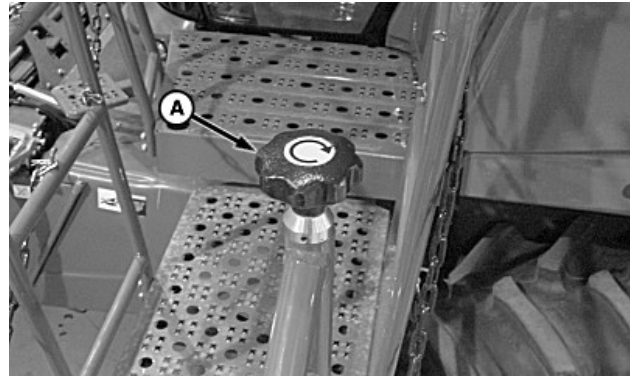

H96869—UN—11JUN10


A—Handle

CAUTION: Swing ladder to the full forward position to reduce machine width and to orient marker/hazard light toward oncoming motorists.

IMPORTANT: Travel at a reasonable speed for road or field conditions. Never transport on the road with grain in the tank.

Follow local regulations for equipment size, lighting, and marking before driving on public roadways.

5. Use handle (A) to unlock ladder and swing fully forward.
6. Fold radio antenna down and retain with hook (if equipped). If the hook is not available, retain the antenna to cab roof with tape.

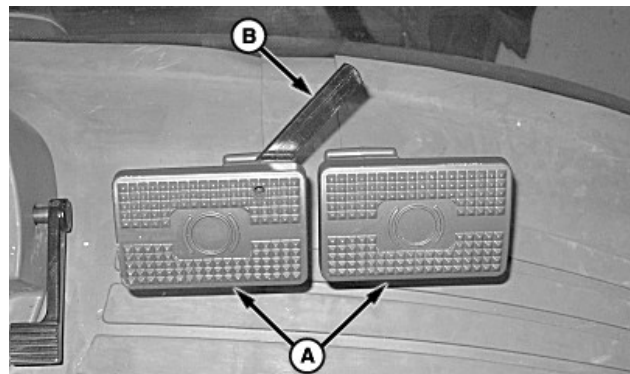

H96681—UN—01JUN10

A—Pedals
B—Lock

7. Lock brake pedals together with lock (B) when driving on roads. Leave pedals (A) unlocked for field operation.

CAUTION: Use seat belt whenever operating machine or riding as an observer.

8. Fasten seat belt.

CAUTION: Sound horn before starting engine to clear people away from machine.


9. Sound horn and start engine. Use cold weather starting aid if needed.



Header Raise/Lower Switch

H116348—UN—19DEC16


10. Raise header with the header switch.

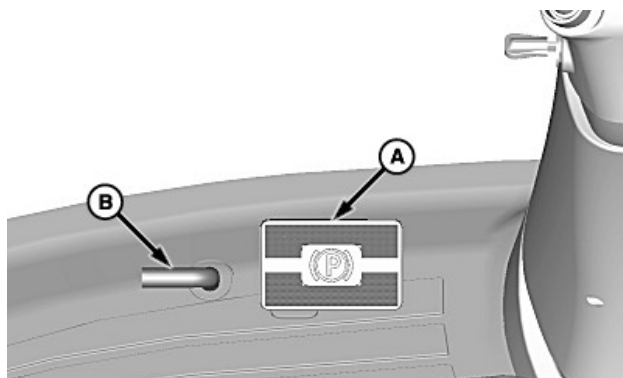

A—Park Brake
B—Pedal

H119677—UN—20OCT16

11. **Mechanical Shift Transmission:** Disengage park brake (A) with pedal (B).

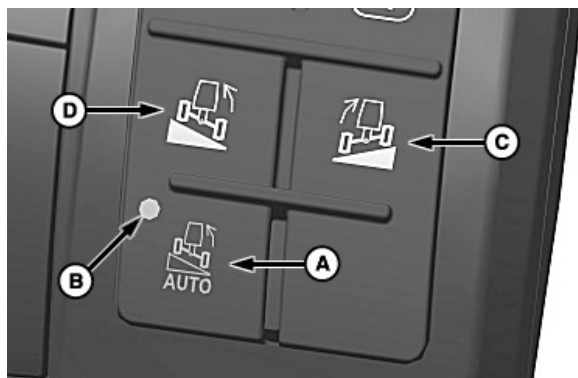

HillMaster™ Switches

H120033—UN—14NOV16

A—Automatic Leveling Control Switch
B—Indicator Light
C—Manual Tilt Right Switch
D—Manual Tilt Left Switch

12. **HillMaster™ Machines:**

CAUTION: Avoid loss of control during road transport and serious injury or death. Never transport machine on a roadway with HillMaster™ leveling system in automatic mode. Never attempt to manually tilt machine while transporting on a roadway.

- a. Move machine to level ground.

NOTE: Road transport disconnect switch in field position.

- b. Press automatic leveling control switch (A) for **5 seconds** or until indicator light (B) flashes.
- c. Push and hold manual tilt right switch (C) to tilt the machine chassis to the right.
- d. Push and hold manual tilt left switch (D) to tilt the machine chassis to the left.



Road Transport Disconnect

H117022—UN—28MAR16

NOTE: After transporting machine, press road transport disconnect switch for 2 seconds allowing indicator light to turn OFF and allowing desired switch functions to operate.

13. Engage road transport disconnect switch.




Hazard Light

H117885—UN—29MAR16

CAUTION: When transporting on a road or highway, marker/hazard lights and tail lights on both sides provide a warning to operators of vehicles approaching from the front and rear. These lights must be turned ON when driving machine on public roadways. Swing cab ladder fully forward to orient marker/hazard lights towards oncoming motorists. Do not operate marker/hazard lights if prohibited by law.

14. Turn beacon/hazard light switch ON for both daytime and nighttime road travel. Warning lights automatically operate when hazard lights are ON.

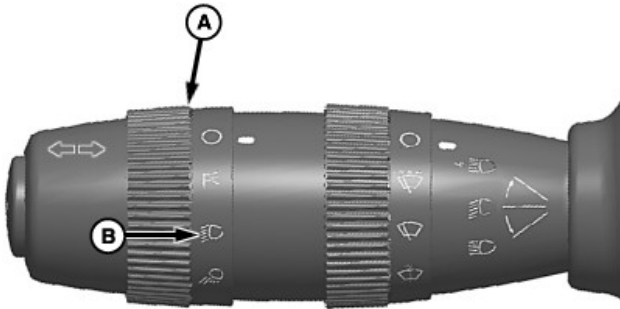

A—Selection Switch
B—Road Lights Switch

H96014—UN—22JUN11

15. Use selection switch (A) to turn ON road lights (B) for nighttime travel.

NOTE: Turn signal indicators on corner post display illuminate to indicate a turn.

16. Use turn signals as needed. They are not self-canceling.



Engine Speed (Fast Speed)

H117021—UN—28MAR16

17. Press engine speed switch for maximum engine speed.

NOTE: For field operation, select a gear according to working conditions.


18. **Mechanical Shift Transmission:** Engage third gear for road travel.

CAUTION: If transporting machine with header attached, travel at a reasonable speed to ensure adequate braking performance and control of machine.


19. Slowly move the multi-function lever forward or rearward. When coming to the top of a hill, pull back on the multi-function lever before starting down the other side.

OUC6075,00048BD-19-12APR18

Transporting Machine on a Trailer

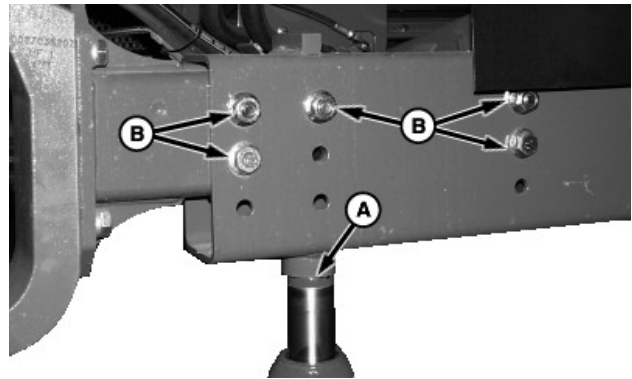

H70555—UN—02JAN02

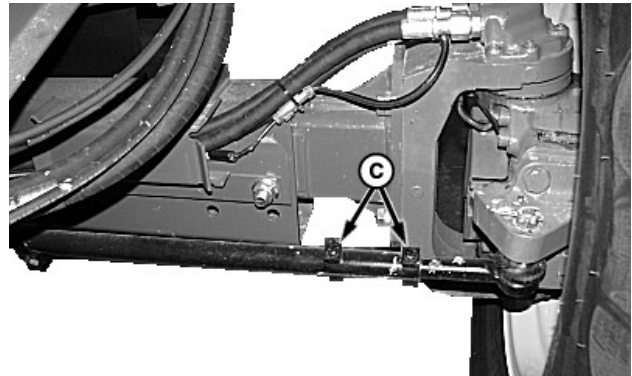

H70554—UN—02JAN02

A—Jack Pocket
B—Cap Screw (5 used)
C—Cap Screws

NOTE: See Driving Machine on Roads earlier in this section for additional information that MUST be done before transporting machine on a trailer.

See Ground Drive and Rear Axle section for additional information that MUST be done when removing dual wheels (if equipped).

1. Remove header and outside dual wheels (if equipped).

NOTE: After transporting machine, adjust rear axle spacing to previous width.

2. Locate jack pocket (A) on the rear axle and raise machine.

3. Remove cap screws (B) from rear axle.

4. Remove cap screws (C) from tie rod.

5. Adjust rear axle to narrowest position. Repeat steps as needed on the opposite side.


6. Install previously removed hardware and tighten to specification.

Specification

Axle Cap Screws—Torque. 620 N·m
(460 lb·ft)

Tie Rod Cap Screws (Equipped with Two Bolt Outer Tie Rod End)—Torque. 70 N·m (50 lb·ft)

Tie Rod Cap Screws (Equipped with Three Bolt Outer Tie Rod End)—Torque. 127 N·m (94 lb·ft)

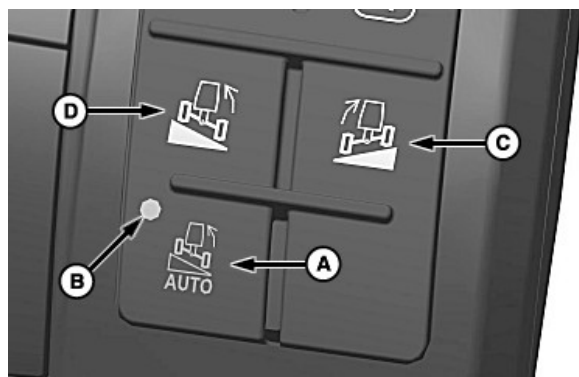

H120033—UN—14NOV16

HillMaster™ Switches

- A—Automatic Leveling Control Switch
- B—Indicator Light
- C—Manual Tilt Right Switch
- D—Manual Tilt Left Switch


7. HillMaster™ Machines:

CAUTION: Never drive machine on a trailer with HillMaster™ leveling system in automatic mode. Never attempt to manually tilt machine while on trailer.

- a. Move machine to level ground.

NOTE: Road transport disconnect switch in field position.


- b. Press automatic leveling control switch (A) for **5 seconds** or until indicator light (B) flashes.
- c. Push and hold manual tilt right switch (C) to tilt the machine chassis to the right.
- d. Push and hold manual tilt left switch (D) to tilt the machine chassis to the left.
8. Drive machine on trailer and move the multi-function lever to neutral position.
9. **Dual Ladder Landing Configuration:** Lower feeder house onto trailer to allow ladder landing to be swung to transport position.
10. Shut OFF engine, set park brake and remove key.
11. Fold radio antenna down and retain with hook (if equipped). If the hook is not available, retain the antenna to cab roof with tape.

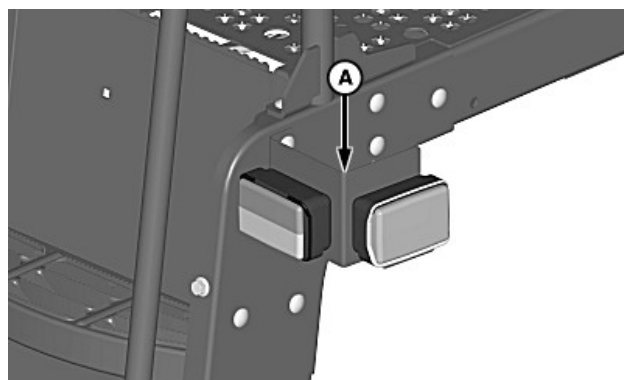

H121713—UN—07JUN17

A—Light Bracket

12. **Single Tire Configuration:** Disconnect wiring harness and remove light bracket (A).

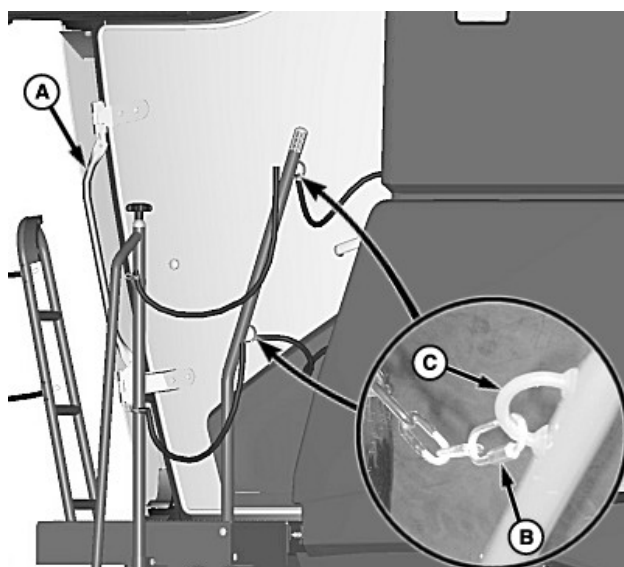

H102527—UN—28JUN11


- A—Handrail
- B—Chain Link
- C—Handrail Loops

13. **Single Tire Configuration:** Remove and retain the cab handrail (A).

IMPORTANT: Possible injury to you or others can occur from falling. Be careful when disconnecting safety chains and dismounting ladder landing.

NOTE: Assemble chain back onto existing loops on ladder handrail and loops on the grain tank. This shortens the chain and prevents it from damaging the composite panels.

14. **Single Tire Configuration:** Disconnect and retain closure chain link (B) from handrail loops (C).

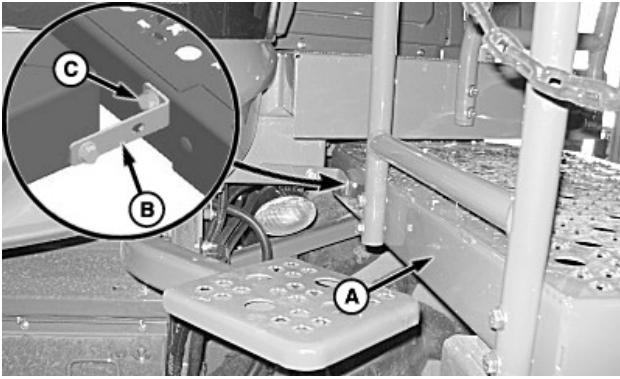


H102532—UN—28JUN11

A—Ladder Landing
B—Shipping Bracket
C—Cap Screw

NOTE: Cab ladder must be swung past innermost detent position to allow ladder landing to contact shipping bracket.


15. **Single Tire Configuration:** Swing ladder landing (A) to transport position until it contacts shipping bracket (B) and install cap screw (C).

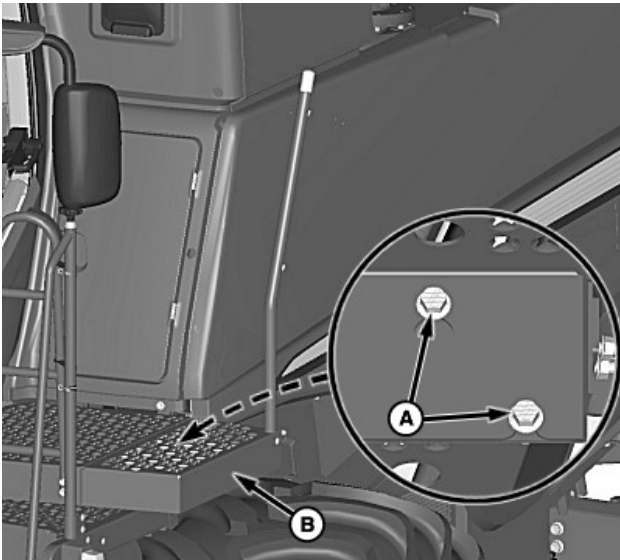

H102531—UN—28JUN11

A—Cap Screw (5 used)
B—Ladder Landing

16. **Single Tire Configuration:** Loosen cap screws (A) and remove ladder landing (B).

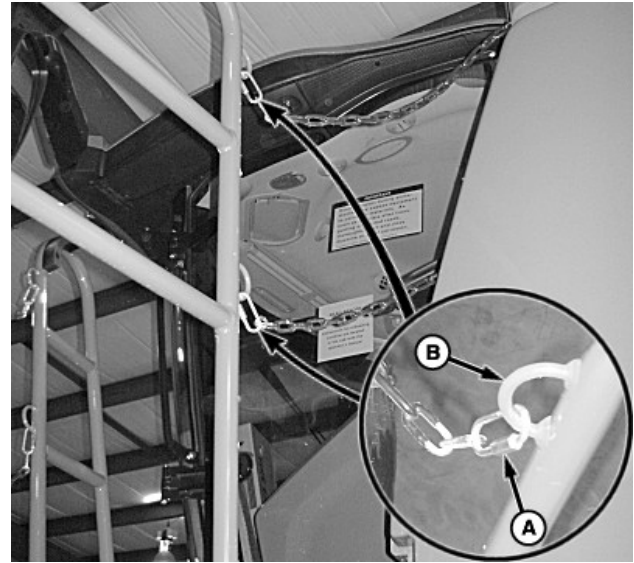


H102501—UN—27JUN11

A—Chain Link
B—Handrail Loop

IMPORTANT: Possible injury to you or others can occur from falling. Be careful when disconnecting safety chains and dismantling ladder landing.

NOTE: Assemble chain back onto existing loops on the grain tank. This shortens the chain and prevents it from damaging the composite panels.

17. **Dual Tire Configuration:** Disconnect and retain closure chain link (A) from the handrail loop (B) on both sides of handrail.

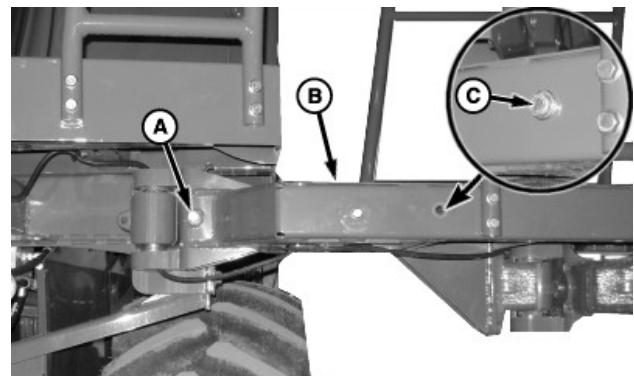


H102502—UN—27JUN11

A—Cap Screw
B—Ladder Landing
C—Cap Screw

18. **Dual Tire Configuration:** Remove cap screw (A) and swing ladder landing (B) to transport position.

19. **Dual Tire Configuration:** Install previously removed cap screw (C) in storage position as shown.

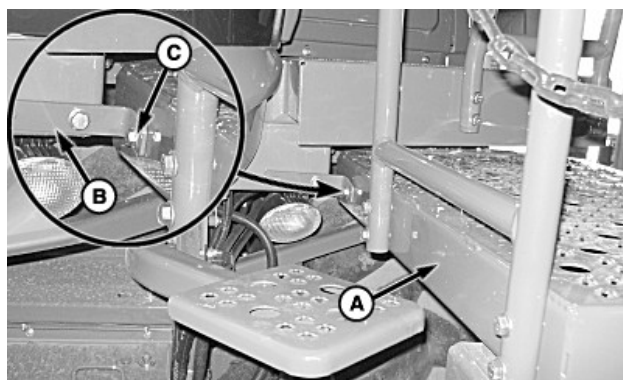


H102503—UN—28JUN11

A—Ladder Landing
B—Shipping Bracket
C—Cap Screw

IMPORTANT: Feeder house **MUST** be lowered onto trailer to avoid contact between the ladder landing and the feeder house driveshaft when ladder is swung forward.

NOTE: Cab ladder must be swung past innermost detent position to allow ladder landing to contact shipping bracket.


20. **Dual Tire Configuration:** Swing ladder landing (A) to transport position until it contacts shipping bracket (B) and install cap screw (C).

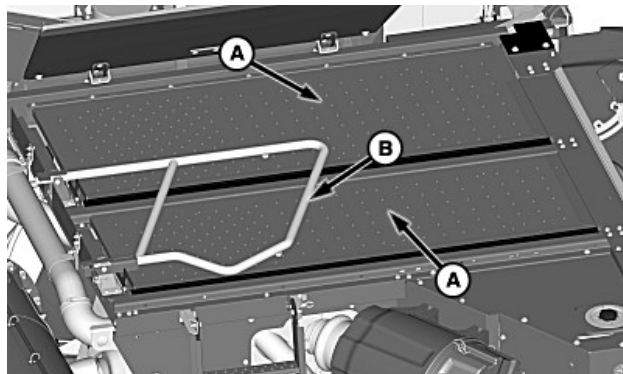

H118330—UN—04MAY16

A—Engine Access Covers
B—Handrail

21. Lower engine access covers (A) and handrail (B) to lock covers into place.

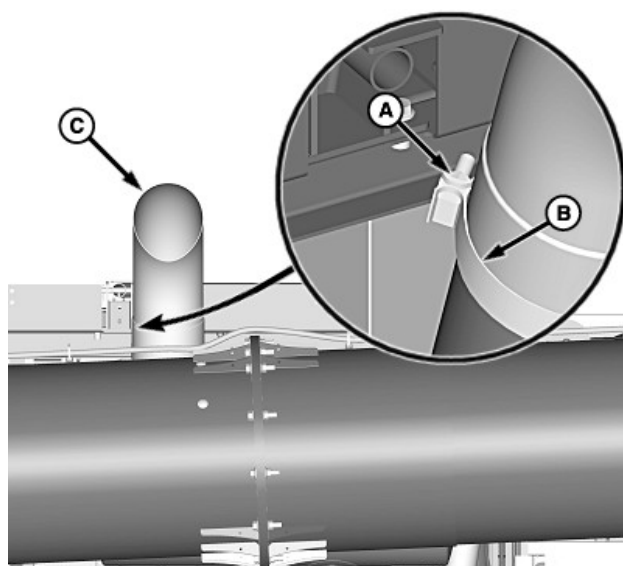

H121534—UN—16MAY17

A—Nut
B—Clamp
C—Muffler Extension

CAUTION: To reduce the risk of electrical shock by overhead power lines, no portion of the machine should exceed a height of 4 m (13 ft 1 in).

Allow exhaust system and components to cool before removing muffler extension and installing exhaust cap.

22. **Tier 2/Stage II Engines:** Loosen nut (A) on clamp (B).


NOTE: Muffler extension **MUST** be removed when transporting machine on a trailer to reduce overall machine height. Retain muffler extension for future field use.

After transporting, install muffler extension and tighten clamp hardware to specification.

Specification

Clamp Hardware—Torque. 80 N·m
(59 lb·ft)

23. **Tier 2/Stage II Engines:** Remove and retain muffler extension (C).

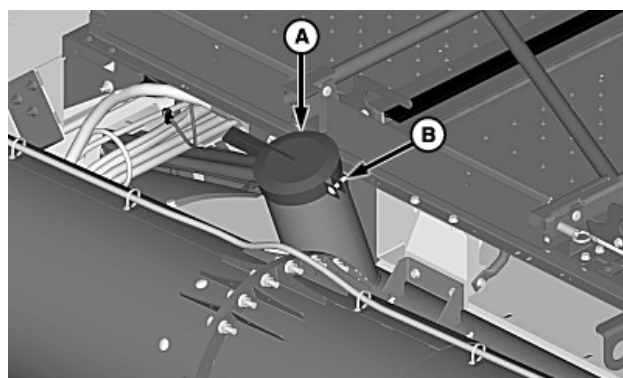

H121535—UN—16MAY17

A—Exhaust Cap
B—Nut

24. **Tier 2/Stage II Engines:** Install exhaust cap (A) as shown.

25. **Tier 2/Stage II Engines:** Tighten nut (B) to specification.


Specification

Nut—Torque. 20 N·m
(177 lb·in)

26. **Tier 2/Stage II Engines:** Tape exhaust cap closed to prevent damage to turbocharger.



TS249—UN—23AUG88

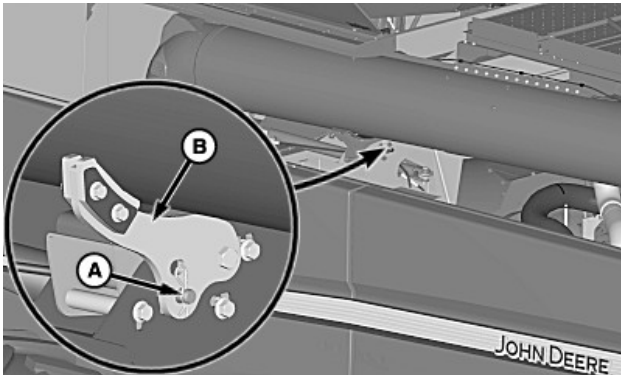


H106366—UN—28JAN13

A—Spring Pin and Pin
B—Unloading Auger Lock Arm

CAUTION: Possible injury or death to you or others can occur from falling. Use a ladder or equivalent with an appropriate load rating to access location when installing unloading auger retaining hardware. Do not attempt to access location from the engine platform.

27. Unloading Auger Lock Arm:


- Remove and retain the spring pin and pin (A).
- Raise unloading auger lock arm (B) until holes align.
- Install previously removed pin and spring pin.

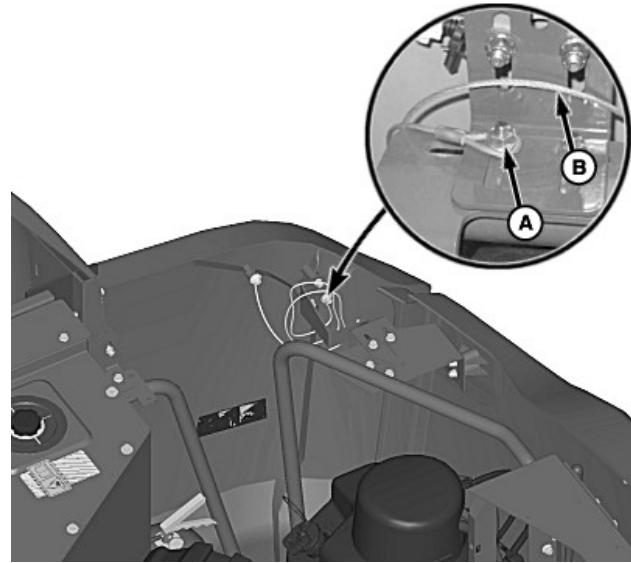

H107241—UN—18MAR13

A—Hardware
B—Cable

28. Loosen hardware (A) and remove cable (B) from storage position.

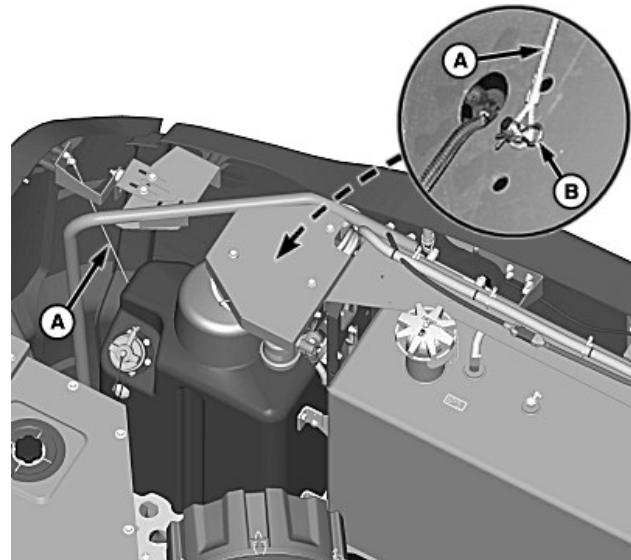


H125429—UN—04DEC18

A—Cable
B—Spring Pin

NOTE: Verify that cable is installed on inside portion of handrail.

Adjust pin to different positions if cable does not reach.


29. Install cable (A) over pin and retain with spring pin (B).

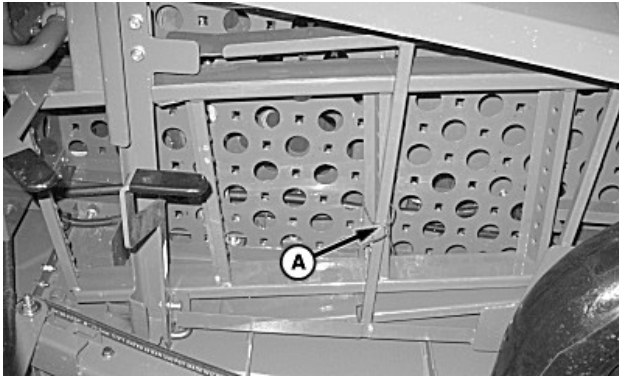

H97171—UN—29JUN10

A—Platform

30. Tie the ladder extension to platform (A) using wire.

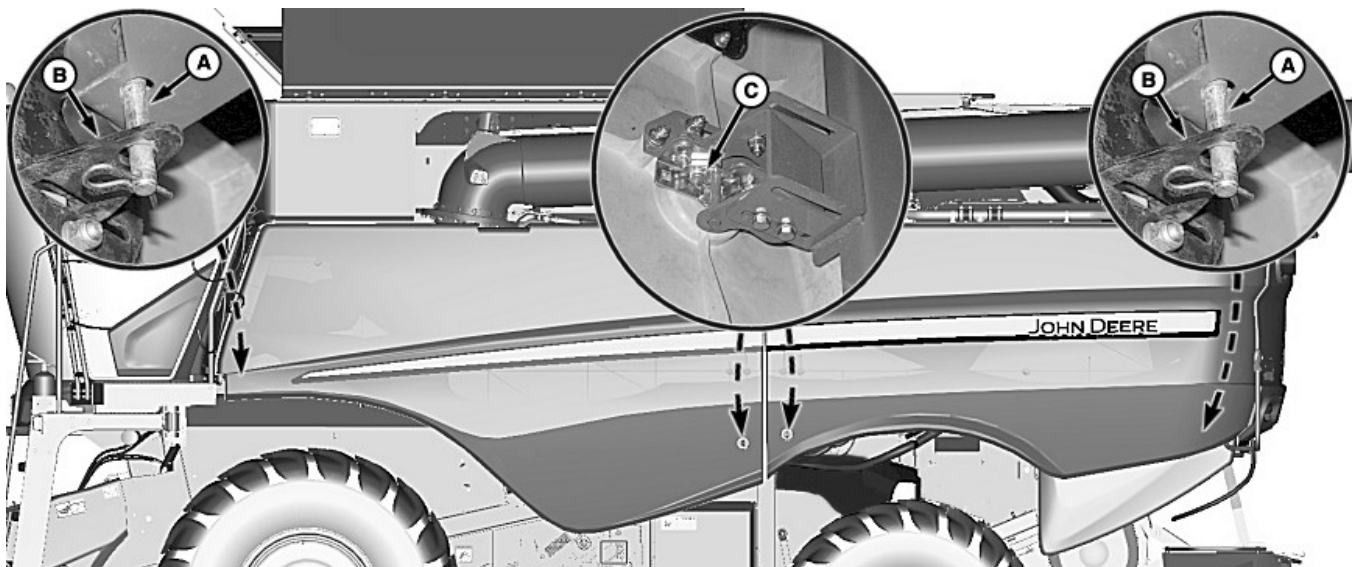


H114482—UN—08JUN15

A—Pins
B—Locking Plates

31. Install pins (A) through locking plates (B) and retain with spring pins at front and rear corners of the left-hand gull wing doors. Repeat on the opposite side of machine.

32. Use wire to tie the gull wing doors at latches (C). Repeat on the opposite side of machine.

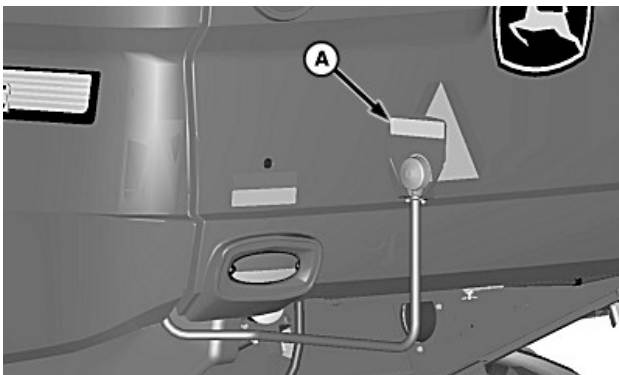


H106224—UN—16JAN13

A—Hazard Lights

C—Latches

33. Swing left-hand and right-hand hazard lights (A) (if equipped) rearward as shown.

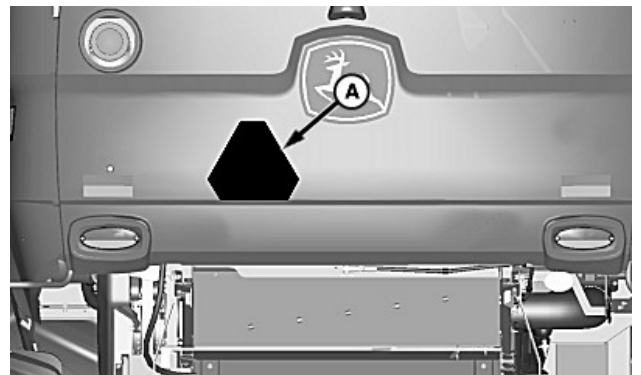

H106169—UN—16JAN13

A—Slow Moving Vehicle Emblem

34. Cover up slow moving vehicle emblem (A) if equipped.

IMPORTANT: Fasten machine to trailer with chains.


35. Fasten machine to trailer with chains (see Machine

Tie Down Locations Decal on cab ladder for tie-down information).

OOU6075,0004BC3-19-04JUN19

Machine Tie Down Locations Decal

CAUTION:

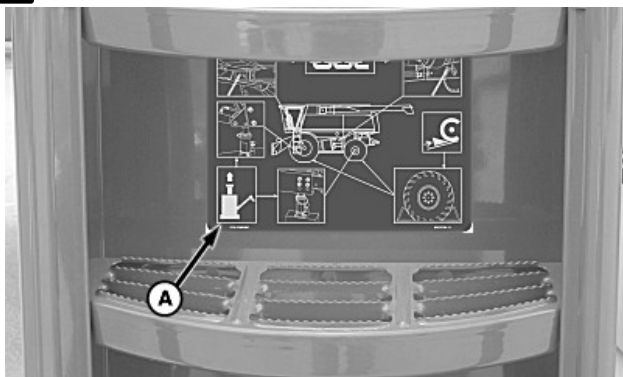

H106687—UN—24JAN13

A—Machine Tie Down Locations Decal


Always empty grain tank before raising machine.

NOTE: Machine tie down locations are on both sides of machine at front and rear.

Machine tie down locations decal (A) is located on cab ladder. Decal shows correct locations for fastening machine with chains.

OOU6075,0001393-19-31MAY22

Machine Tie Down Locations

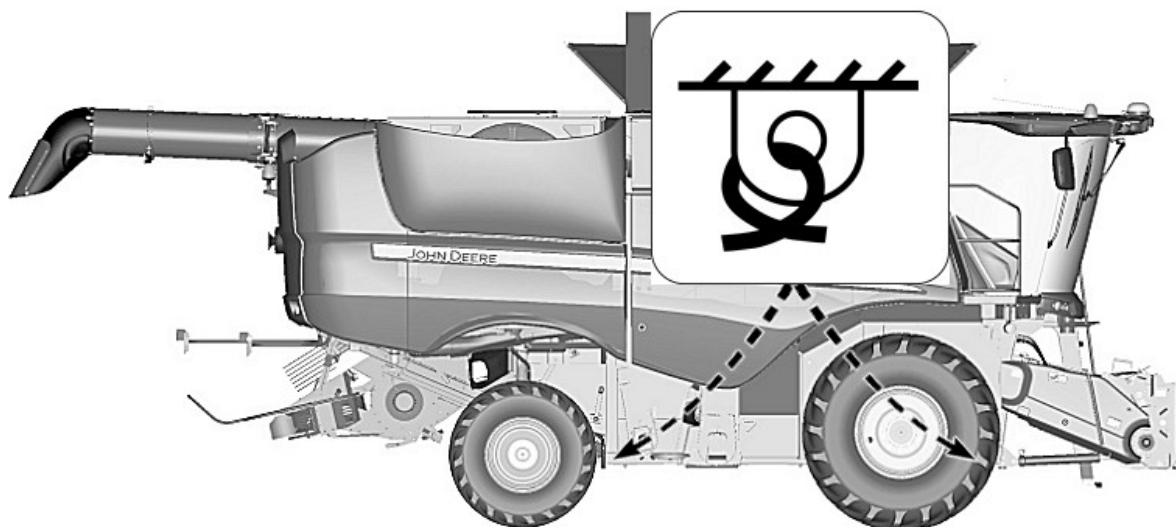

H105885—UN—24OCT12


CAUTION: Always empty grain tank before transporting machine.

NOTE: Machine tie down locations are located on both sides of machine at front and rear.

Use provided locations shown on machine to properly tie down machine.

OOU6075,00011DC-19-10FEB16

Jack Pocket Locations

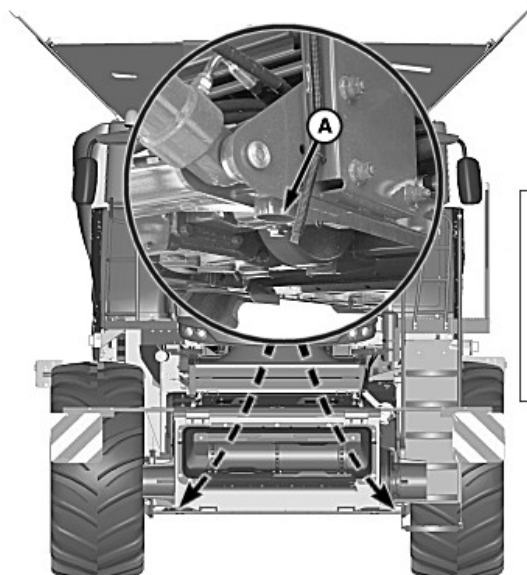

A—Jack Pocket Locations (front)

CAUTION: Always empty the grain tank before raising the machine.

To prevent machine movement, block both sides of the tires.

NOTE: Jack pocket locations are at the front and rear of the machine and on both sides.

Raise the machine at approved jack pocket locations (A and B).

OUC6075,0004B7B-19-30MAY19



B—Jack Pocket Locations (rear)

Machine can be transported on a flat bed truck or by towing.

When towing, refer to Towing Machine in this section.

H105883—UN—24JAN13

OUC6075,0004318-19-24JUN16

Transport Information

CAUTION: To reduce the risk of electrical shock by overhead cables, no portion of machine should exceed a height of 4 m (13 ft 1 in). Grain tank cover must be closed and radio antenna turned to horizontal position before transporting machine.

Avoid electrical line entanglement. Grain tank cover must be closed and radio antenna turned to horizontal position before transporting machine.

Check local governmental regulations regarding driving or towing equipment on public roads. Use auxiliary lights and devices available from your John Deere dealer to warn other road users.

Towing Machine (Mechanical Shift Transmission Machines)

NOTE: For push-button shift transmission machines and ProDrive™ transmission machines, see Transmission Application Help or Operator's Station Help for further information.

CAUTION: Do not tow machine with wire rope. If rope breaks, the whipping action could cause bodily injury.

Avoid electrical line entanglement. Grain extensions must be lowered and radio antenna lowered before transporting.

Check local governmental regulations regarding driving or towing equipment on public roads. Use auxiliary lights and devices available from your John Deere dealer to warn other roadway users.

Do not tow machine except in an emergency for a short distance at 8 km/h (5 mph). To tow machine, proceed as follows:

- Empty grain tank and remove header.

ProDrive is a trademark of Deere & Company

- Swing unloading auger back. Fold grain tank extensions.
- Swing ladder forward and fold down radio antenna.
- Disengage park brake.

CAUTION: Do not remove couplers. When couplers are removed, brakes are disabled.


- Place gearshift lever and multi-function lever in neutral position.
- Tow machine in a forward direction by attaching a chain around the main axle. Be certain chain does not damage any hydraulic lines. Have driver in the operator's seat to steer and brake the machine.
- Turn warning lights ON, unless prohibited by law.
- Travel at a safe and reasonable speed, not to exceed 8 km/h (5 mph).

CAUTION: Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that are damaged or lost.

OUO6075,000447D-19-31JAN17

Manual Trailer Hitch—Attaching (Standard)

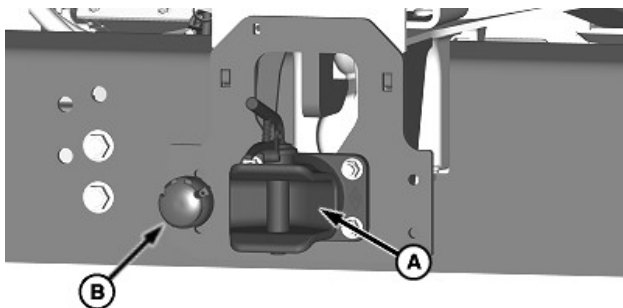

H118213—UN—14APR16

A—Hitch
B—Electrical Connector

CAUTION: Shut OFF engine, set park brake and remove key before hooking up trailer.


Fully raise the chopper.

Attach trailer to hitch (A) and secure with the trailer hitch pin.

Connect trailer electrical harness to electrical connector (B).

OUO6075,00042C1-19-29JUN16

Semi-Automatic Trailer Hitch—Attaching (Optional)

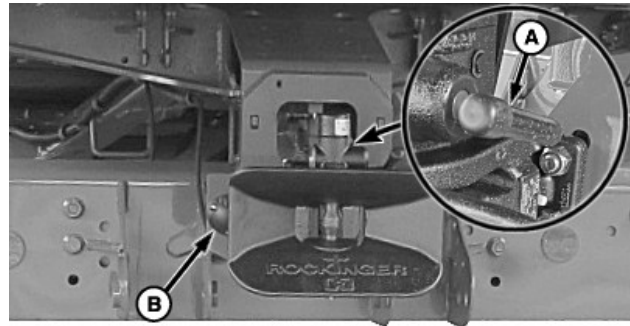

H111228—UN—12MAY14

A—Handle
B—Electrical Connector

CAUTION: Shut OFF engine, set park brake and remove key before hooking up trailer.


Fully raise the chopper.

Raise handle (A) to open lock pin and attach trailer to the machine. When the trailer hitch aligns with the lock pin, handle lowers automatically locking trailer hitch in place.

Connect trailer electrical harness to electrical connector (B).


OUO6075,000431B-19-29JUN16

Front Tow Hook

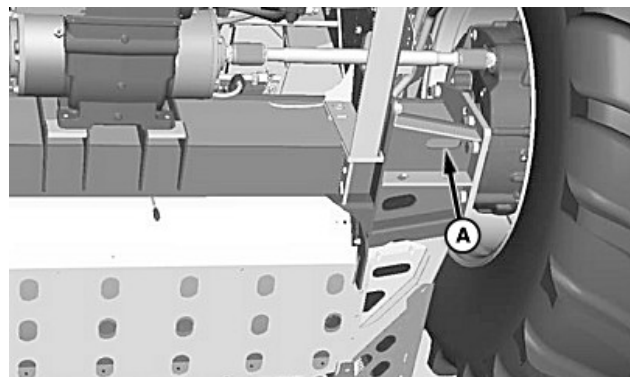

H102206—UN—14JUN11

Front Tow Hook (Non-HillMaster™ machine)

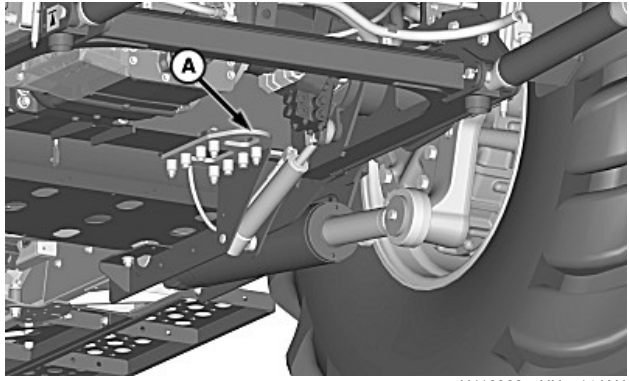

H116908—UN—14JAN16

Front Tow Hook (HillMaster™ machine)


A—Hook

Tow or pull the machine out of mud in a forward direction if necessary by attaching a chain to hook (A) on the front axle. Verify that the chain will not damage any hydraulic lines.


OUC06075,0004ECB-19-09JUL20

Rear Tow Hook

Manual Trailer Hitch

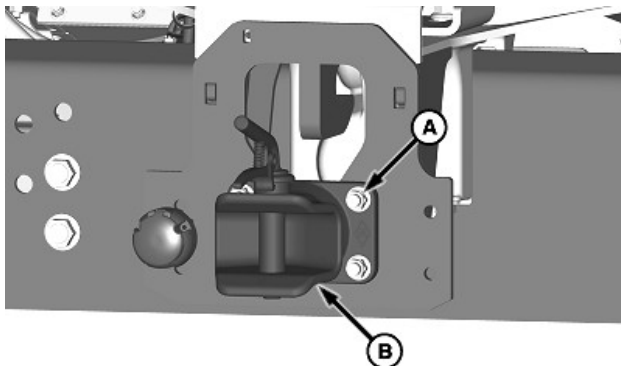

H118216—UN—14APR16

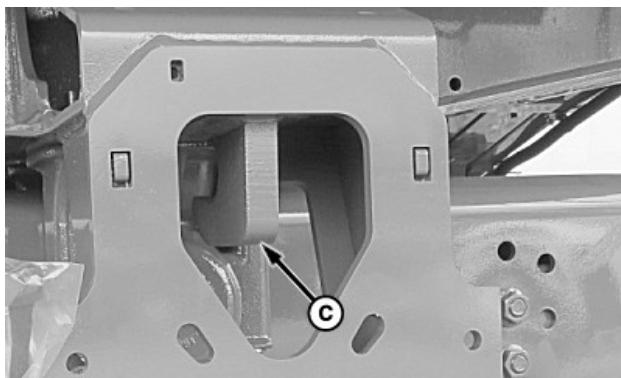

H111232—UN—12MAY14

A—Cap Screw and Nut (4 used)
B—Trailer Hitch
C—Hook

CAUTION: Do not pull out machine by trailer hitch. Only use supplied tow hook. Always use a suitable chain. Do not exceed the breaking strength. Do not mix chain with tow straps or ropes. Energy stored in towing device could cause serious bodily injury if it breaks.


Remove cap screws and nuts (A) from trailer hitch (B).
Secure chain to hook (C) and pull out machine. Do not use this hook for pulling a trailer.

Install trailer hitch and retain with cap screws and nuts. Tighten hardware to specification.


Specification

Trailer Hitch Hardware—Torque. 205 N·m
(151 lb·ft)

Semi-Automatic Trailer Hitch

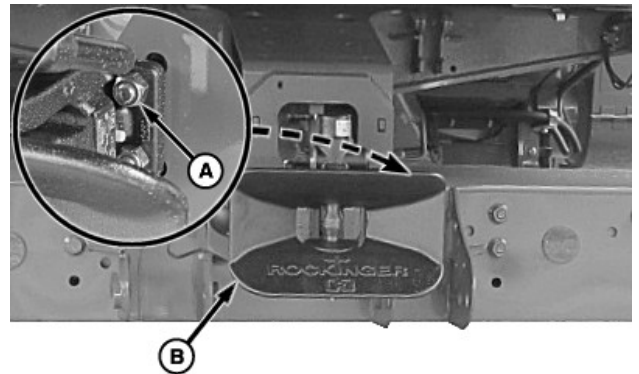

H111231—UN—12MAY14

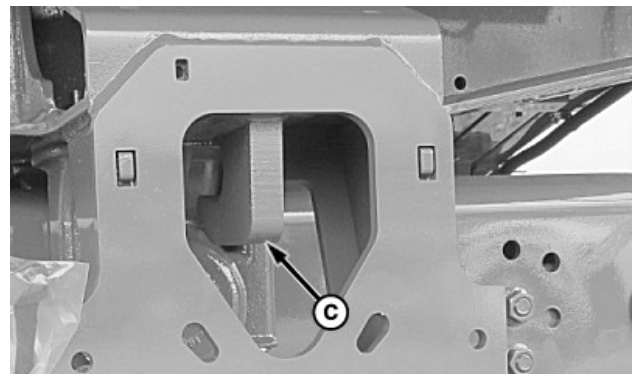

H111232—UN—12MAY14

A—Cap Screw and Nut (4 used)
B—Trailer Hitch
C—Hook

CAUTION: Do not pull out machine by trailer hitch. Only use supplied tow hook. Always use a suitable chain. Do not exceed the breaking strength. Do not mix chain with tow straps or ropes. Energy stored in towing device could cause serious bodily injury if it breaks.

Remove cap screws and nuts (A) from trailer hitch (B).
Secure chain to hook (C) and pull out machine. Do not use this hook for pulling a trailer.

Install trailer hitch and retain with cap screws and nuts.
Tighten hardware to specification.

Specification

Trailer Hitch Hardware—Torque. 205 N·m
(151 lb·ft)

OUO6075,00042C2-19-29JUN16

Harvesting Hints

Operation at Low Temperatures

IMPORTANT: When operating in cold temperatures, verify that proper grade diesel fuel is being used. Warmer grade diesel fuel will gel in fuel lines, fuel filters, and fuel tank. Fuel system requires servicing if diesel fuel gels. See Fuels and Lubricants section for further information.

Combine functions can degrade in low temperatures where snow and ice are present. Special care **MUST** be taken to ensure that minimal snow is ingested in combine. If snow is ingested, areas such as chaffer, cleaning fan, separator concaves, and separator grates can become obstructed. Operation with these areas obstructed could cause machine damage and significant repairs or result in functional performance degradation. Consult your John Deere dealer prior to operating in cold temperatures.

OUO6075,0004574-19-31JAN17

Harvesting Tips

Adjust machine to crop being harvested and to field conditions.

Select a ground speed that does not overload machine. Engine must be at full rpm to keep separator at full speed. Select a ground speed for slower travel, but do not slow engine speed.

If concave is set too close for harvested crop, straw will be excessively ground up requiring more horsepower to thresh the crop.

If concave is set too wide for harvested crop, it will not be completely threshed.

After concave is adjusted properly, adjust separator speed to achieve maximum threshing with the least amount of crop damage. If crop damage does occur, do not widen concave clearance. Instead reduce feed accelerator speed. Concave spacing in these crops has very little effect on seed damage.

Crops such as edible beans and peas are easily cracked and can require the use of a slower feed accelerator drive. When harvesting edible beans and peas keep machine full to provide enough material to cushion the crop against cracking.

For potential improvements in straw quality consider that the following can help improve straw quality depending on conditions:

- Slowing feeder house chain speed
- Slowing feed accelerator speed
- Slowing rotor speed
- Opening concave
- Reducing threshing elements
- Installing round bar concaves

For improved performance in sidehill conditions consider, raising auger bed dividers, installing tall chaffer dividers available from your John Deere dealer, and/or improve chaff and grain distribution by installing separator grate covers (if equipped). Each of these can improve chaff and grain distribution to the cleaning shoe that will help improve the machines performance in sidehill conditions.

When using a cutting platform, cut crop as high as possible without loss of low heads. Adjust reel position and speed for even feeding. Keep cutterbar in register and guards in alignment for clean cutting.

When harvesting corn, keep corn head only as low as necessary for ears. Keep it centered in the rows to prevent ear loss.

When using a belt pickup, keep windrow centered so material is fed evenly into feeder house. Grain heads must be lying in one direction. Operate machine so heads are picked up first.

When harvesting soybeans with a row-crop head, keep header as low as possible. When harvesting crops such as milo or sunflowers, operate header just low enough to cut the heads from the stalks.

Adjust chaffer openings to pass grain or seed to the lower sieve in the first two-thirds of the chaffer without admitting too much coarse material.

Use as much air as possible without blowing over clean grain and seed. Heavy crops require more air than light seed crops.

SS43267,00004E6-19-03FEB15

Auto Header Control Combinations

A few common modes are shown below, but many combinations exist.

NOTE: Press and hold activation buttons 1, 2, or 3 on the multi-function lever for 2 seconds to enter desired modes into memory.

Auto Header Controls (Enabled Modes)	Activation Button 1	Activation Button 2	Activation Button 3
Height Resume	 Height Resume H126436—UN—06JUN19		
Height Resume Height Sensing	 H126436—UN—06JUN19 Height Resume	 Height Sensing H126437—UN—06JUN19	
Height Resume HydraFlex™ Height Sensing	 H126436—UN—06JUN19 Height Resume	 HydraFlex™ Height Sensing H126437—UN—06JUN19	
Height Resume Height Sensing HydraFlex™ Height Sensing ^a	 H126436—UN—06JUN19 Height Resume	 H126437—UN—06JUN19 Height Sensing	 H126437—UN—06JUN19 HydraFlex™ Height Sensing
Height Resume Height Sensing HydraFlex™ Height Sensing ^b	 H126436—UN—06JUN19 Height Resume	 H126437—UN—06JUN19 Height Sensing	 H126437—UN—06JUN19 HydraFlex™ Height Sensing
Height Resume Height Sensing Active Header Float	 H126436—UN—06JUN19 Height Resume	 H126437—UN—06JUN19 Height Sensing	 H126447—UN—06JUN19 Active Header Float
Height Resume HydraFlex™ Height Sensing Active Header Float	 H126436—UN—06JUN19 Height Resume	 H126437—UN—06JUN19 HydraFlex™ Height Sensing	 H126447—UN—06JUN19 Active Header Float
Height Resume Active Header Float	 Height Resume H126436—UN—06JUN19		 Active Header Float H126447—UN—06JUN19
Height Sensing	 Height Sensing H126437—UN—06JUN19		
HydraFlex™ Height Sensing	 HydraFlex™ Height Sensing H126437—UN—06JUN19		

Harvesting Hints

Auto Header Controls (Enabled Modes)	Activation Button 1	Activation Button 2	Activation Button 3
Height Sensing HydraFlex™ Height Sensing ^a	 Height Sensing H126437—UN—06JUN19	 HydraFlex™ Height Sensing H126437—UN—06JUN19	
Height Sensing HydraFlex™ Height Sensing ^b	 Height Sensing H126437—UN—06JUN19	 HydraFlex™ Height Sensing H126437—UN—06JUN19	
Height Sensing HydraFlex™ Height Sensing Active Header Float ^a	 HydraFlex™ Height Sensing H126437—UN—06JUN19	 Active Header Float H126447—UN—06JUN19	
Height Sensing Active Header Float	 Height Sensing H126437—UN—06JUN19	 Active Header Float H126447—UN—06JUN19	
HydraFlex™ Height Sensing Active Header Float	 HydraFlex™ Height Sensing H126437—UN—06JUN19	 Active Header Float H126447—UN—06JUN19	
Active Header Float	 Active Header Float H126447—UN—06JUN19		
Reel Position Resume	 Reel Position Resume H126448—UN—06JUN19		
Deck Plate Position Resume	 Deck Plate Position Resume H126449—UN—06JUN19		
Hydraulic Feeder House Fore/Aft Tilt (If Equipped)	 Hydraulic Feeder House Fore/Aft Tilt H126450—UN—06JUN19		
Cutterbar Fore/Aft Position ^c	 Cutterbar Fore/Aft Position H126451—UN—06JUN19		

HydraFlex is a trademark of Deere & Company

^aSee your John Deere dealer to enable Height Sensing and HydraFlex Height Sensing. Requires 600F, 600FD, or 700FD with auxiliary height sensors or 600D, or 700D with gauge wheels.

^bDefault mode with 600D and 700D platform, if gauge wheels are unpinned during calibration. Requires 600D or 700D with gauge wheels.

^cEuropean 600X and 700X Header Platforms.

OUO6075,0004BC5-19-07JUN19

Change Tire Radius Code


It will be necessary to recalibrate system if tires or final drives are changed from what was originally shipped from the factory. Verify that correct tire code is entered into memory.

IMPORTANT: When changing drive wheels, tire radius may also change. CAB control unit **MUST** be set to new tire radius. See your John Deere dealer for further information.


Failure to calibrate system will result in inaccurate Harvest Monitor Yields.

OUO6075,0001111-19-11APR12

Single Point Yield Calibration Or Multi-Point Yield Calibration

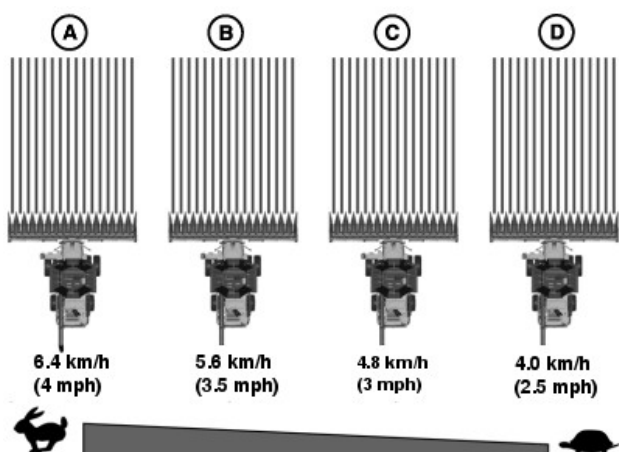

H105056—UN—19MAR12

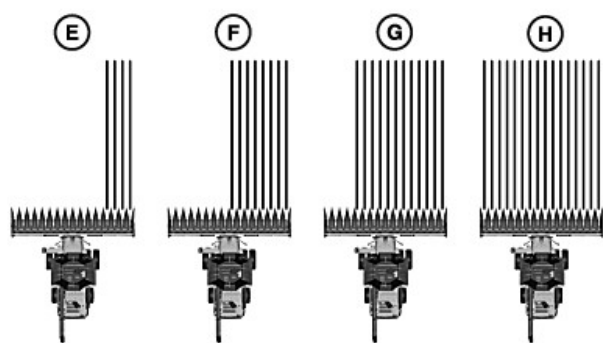

H105057—UN—19MAR12

- A—Load 1
- B—Load 2
- C—Load 3
- D—Load 4
- E—Minimum Flow
- F—Medium Flow
- G—Medium Flow
- H—Maximum Flow

NOTE: Varying machine ground speed is the best way to vary the flow rate.

The best way to keep the flow rate constant is to monitor the VisionTrak™ display and adjust machine ground speed accordingly.

Single Point Yield Calibration

Single point yield calibration is performed when one or up to three calibration loads are collected.

This type of calibration is suggested when the harvested field has a fairly consistent yield and machine is operated at a constant ground speed with little flow variation.

To collect a calibration load, harvest approximately 2722 kg (6000 lb) at the maximum harvest speed.

Running one or two additional loads is not required, but it may allow the system to average the overall error.

Multi-Point Yield Calibration

Multi-point yield calibration is used when the harvested field is expected to have varying yields or machine is operated at varying speeds with varying grain flows.

This type of calibration collects each calibration load at each expected flow condition.

For each calibration load, harvest approximately 2722 kg (6000 lb).

Run at least **four** calibration loads over various ground speeds (A—D) or at different cut widths to simulate four different flow rates (E—H).

OUO6075,000430B-19-16JUN16

Crop Settings

Alfalfa and Barley

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.
* Refer to Footnotes Description Page later in this section for more detailed information.

	Alfalfa	Barley
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	32-Tooth
Feed Accelerator Speed (B)* (J)*	High	High
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	600—800	700—950
Threshing Clearance (mm) (Q)*	0—5	5—22
Concave Type (North America) (F)*	Small Wire	Small Wire
Concave Type (Europe) (F)*	Small/Small/Large	Small/Small/Large
Separator Grate Covers (D)*	Use As Required	Use As Required
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	550—700	850—1100
Adjustable Front Chaffer (If Equipped) (mm)	5—10	24
Chaffer Clearance (mm) (R)*	10—20	13—18
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	1—4	6—9
Tailings System Concave Position (If Equipped)	Grain	Grain
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

OUC6075,0005041-19-17MAR21

Canola and Chickpeas

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.

* Refer to Footnotes Description Page later in this section for more detailed information.

	Canola	Chickpeas
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	32-Tooth	26-Tooth
Feed Accelerator Speed (B)* (J)*	High	Low
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	350—550 (L)*	400—600
Threshing Clearance (mm) (Q)*	15—40	18—24
Concave Type (North America) (F)*	Small Wire	Round Bar/Large Wire
Concave Type (Europe) (F)*	Small/Small/Large	Round Bar/Large Wire
Separator Grate Covers (D)*	Use As Required	Use As Required
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	600—900	800—1100
Adjustable Front Chaffer (If Equipped) (mm)	5—10	24
Chaffer Clearance (mm) (R)*	10—14	15—20
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	2—5	6—10
Tailings System Concave Position (If Equipped)	Corn	Corn
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

OUC6075,0005042-19-17MAR21

Corn (Dry) and Corn (Wet)

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.
 * Refer to Footnotes Description Page later in this section for more detailed information.

	Corn Dry	Corn Wet
Feeder House Drum Position	Up	Up
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	26-Tooth
Feed Accelerator Speed (B)* (J)*	Low (C)*	Low
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	250—450	350—500
Threshing Clearance (mm) (Q)*	20—35	20—35
Concave Type (North America) (F)*	Round Bar	Round Bar
Concave Type (Europe) (F)*	Round Bar	Round Bar
Separator Grate Covers (D)*	None	None
Separator Grate Spacers	Installed	Installed
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	900—1300	1000—1300
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	15—20 (Premium Corn) 15—20 (Deep-Tooth) 17—22 (General-Purpose)	16—21 (Premium Corn) 16—21 (Deep-Tooth) 18—22 (General-Purpose)
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	10—14 (Deep-Tooth) 11—15 (General-Purpose)	10—14 (Deep-Tooth) 11—15 (General-Purpose)
Tailings System Concave Position (If Equipped)	Corn	Corn
Crop Diverter	Corn	Corn
Knife Bank Engagement	Disengaged Only	Disengaged Only
Chopper Speed	Low	Low

OUC6075,0005051-19-17MAR21

Corn Cob Mix and Edible Beans

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.
* Refer to Footnotes Description Page later in this section for more detailed information.

	Corn Cob Mix (H)* (M)*	Edible Beans
Feeder House Drum Position	Up	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	22-Tooth (P)*
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	22-Tooth (P)*
Feed Accelerator Speed (B)* (J)*	Low	Low (C)*
Feed Accelerator Wear Strips (North America)	Serrated	Backswept Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Backswept Serrated
Threshing Speed (rpm) (B)* (E)*	450—650	300—500 (L)*
Threshing Clearance (mm) (Q)*	15—30	15—30
Concave Type (North America) (F)*	Large Wire (K)*	Round Bar/Large Wire
Concave Type (Europe) (F)*	Large Wire (K)*	Round Bar/Large Wire
Separator Grate Covers (D)*	None	None
Separator Grate Spacers	Either	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Advanced
Fan Speed (rpm)	1000—1300	800—1100
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	22	14—18
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	Removed	6—10
Tailings System Concave Position (If Equipped)	Corn	Corn
Crop Diverter	Corn	Grain
Knife Bank Engagement	Disengaged Only	Allowed
Chopper Speed	Low	High

OUO6075,0005044-19-17MAR21

Flax and Grass Seed

*NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.
* Refer to Footnotes Description Page later in this section for more detailed information.*

	Flax	Grass Seed
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	32-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	32-Tooth
Feed Accelerator Speed (B)* (J)*	High	High
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	800—1000	500—850 (N)*
Threshing Clearance (mm) (Q)*	0—10	12—25
Concave Type (North America) (F)*	Small Wire	Small Wire
Concave Type (Europe) (F)*	Small Wire	Small/Small/Large
Separator Grate Covers (D)*	Use As Required	Use As Required
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	700—1050	350—600 (I)*
Adjustable Front Chaffer (If Equipped) (mm)	24	5—10
Chaffer Clearance (mm) (R)*	8—15	12—18
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	5—10	5—12
Tailings System Concave Position (If Equipped)	Grain	Grain
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

Guar (Cluster Beans) and Lentils

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.

* Refer to Footnotes Description Page later in this section for more detailed information.

	Guar (Cluster Beans)	Lentils
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	26-Tooth
Feed Accelerator Speed (B)* (J)*	Low	Low
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	500—700	350—500
Threshing Clearance (mm) (Q)*	10—15	7—12
Concave Type (North America) (F)*	Round Bar	Round Bar/Large Wire
Concave Type (Europe) (F)*	Round Bar	Small/Small/Large
Separator Grate Covers (D)*	None	Use As Required
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	650—750	800—1000
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	10—15	12—18
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	6—10	3—10
Tailings System Concave Position (If Equipped)	Corn	Corn
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

OUC6075,0005046-19-17MAR21

Lupins and Millet

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.
 * Refer to Footnotes Description Page later in this section for more detailed information.

	Lupins	Millet
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	26-Tooth
Feed Accelerator Speed (B)* (J)*	Low	High
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	400—600	400—500
Threshing Clearance (mm) (Q)*	12—18	10—15
Concave Type (North America) (F)*	Round Bar/Large Wire	Small Wire
Concave Type (Europe) (F)*	Round Bar/Large Wire	Small/Small/Large
Separator Grate Covers (D)*	Use As Required	None
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	900—1100	600—750
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	15—20	10—12
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	4—8	4—6
Tailings System Concave Position (If Equipped)	Corn	Grain
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

Mustard and Navy Beans

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.

* Refer to Footnotes Description Page later in this section for more detailed information.

	Mustard	Navy Beans
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	22-Tooth (P)*
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	22-Tooth (P)*
Feed Accelerator Speed (B)* (J)*	High	Low (C)*
Feed Accelerator Wear Strips (North America)	Serrated	Backswept Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Backswept Serrated
Threshing Speed (rpm) (B)* (E)*	600—900	300—350 (L)*
Threshing Clearance (mm) (Q)*	10—20	15—30
Concave Type (North America) (F)*	Small Wire	Round Bar
Concave Type (Europe) (F)*	Small/Small/Large	Round Bar
Separator Grate Covers (D)*	Use As Required	None
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Advanced
Fan Speed (rpm)	500—800	800—1100
Adjustable Front Chaffer (If Equipped) (mm)	5—10	24
Chaffer Clearance (mm) (R)*	10—14	14—18
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	2—5	6—10
Tailings System Concave Position (If Equipped)	Grain	Corn
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

Oats and Peas

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.
 * Refer to Footnotes Description Page later in this section for more detailed information.

	Oats	Peas
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	32-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	32-Tooth	26-Tooth
Feed Accelerator Speed (B)* (J)*	High	Low
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	600—900	300—400
Threshing Clearance (mm) (Q)*	15—25	15—30
Concave Type (North America) (F)*	Small Wire	Round Bar/Large Wire
Concave Type (Europe) (F)*	Small/Small/Large	Round Bar/Large Wire
Separator Grate Covers (D)*	Use As Required	None
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Advanced
Fan Speed (rpm)	750—900	850—1050
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	18—22	16—20
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	6—10	6—11
Tailings System Concave Position (If Equipped)	Grain	Corn
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

Popcorn and Rape Seed (Dry)

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.

* Refer to Footnotes Description Page later in this section for more detailed information.

	Popcorn	Rape Seed (Dry)
Feeder House Drum Position	Up	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	32-Tooth
Feed Accelerator Speed (B)* (J)*	Low	Low
Feed Accelerator Wear Strips (North America)	Smooth	Serrated Tough Crop
Feed Accelerator Wear Strips (Europe) (G)*	Smooth	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	210—310	400—700 (L)*
Threshing Clearance (mm) (Q)*	15—25	20—40
Concave Type (North America) (F)*	Round Bar	Small Wire
Concave Type (Europe) (F)*	Round Bar	Small/Small/Large
Separator Grate Covers (D)*	None	Use As Required
Separator Grate Spacers	Installed	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	900—1100	620—800
Adjustable Front Chaffer (If Equipped) (mm)	24	5—10
Chaffer Clearance (mm) (R)*	14—18	11—14
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	6—8	3—6
Tailings System Concave Position (If Equipped)	Corn	Corn
Crop Diverter	Corn	Grain
Knife Bank Engagement	Disengaged Only	Allowed
Chopper Speed	Low	High

OUC6075,000504A-19-17MAR21

Rape Seed (Green) and Rice

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.
 * Refer to Footnotes Description Page later in this section for more detailed information.

	Rape Seed (Green)	Rice
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	32-Tooth	32-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	32-Tooth	32-Tooth
Feed Accelerator Speed (North America) (B)* (J)*	Low	High
Feed Accelerator Speed (Europe) (B)* (J)*	High	High
Feed Accelerator Wear Strips (North America)	Serrated Tough Crop	Tine
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Tine
Threshing Speed (rpm) (B)* (E)*	500—800 (L)*	700—1000 (N)*
Threshing Clearance (mm) (Q)*	20—40	15—25
Concave Type (North America) (F)*	Small Wire	Large Wire
Concave Type (Europe) (F)*	Small/Small/Large	Large Wire
Separator Grate Covers (D)*	Use As Required	None
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	700—850	700—900
Adjustable Front Chaffer (If Equipped) (mm)	5—10	24
Chaffer Clearance (mm) (R)*	11—14	16—20
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	4—8	5—10
Tailings System Concave Position (If Equipped)	Corn	Corn
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

Rye and Safflower

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.

* Refer to Footnotes Description Page later in this section for more detailed information.

	Rye	Safflower
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	26-Tooth
Feed Accelerator Speed (B)* (J)*	High	Low
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	700—900	300—400
Threshing Clearance (mm) (Q)*	13—26	15—25
Concave Type (North America) (F)*	Small Wire	Small Wire
Concave Type (Europe) (F)*	Small/Small/Large	Small/Small/Large
Separator Grate Covers (D)*	Use As Required	Use As Required
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	750—950	550—750
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	16—18	14—16
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	6—10	4—7
Tailings System Concave Position (If Equipped)	Grain	Corn
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

OUC6075,000504C-19-17MAR21

Sorghum and Soybeans

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.
 * Refer to Footnotes Description Page later in this section for more detailed information.

	Sorghum	Soybeans
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	26-Tooth
Feed Accelerator Speed (B)* (J)*	Low	Low
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	550—700	450—650
Threshing Clearance (mm) (Q)*	10—25	15—30
Concave Type (North America) (F)*	Round Bar/Large Wire	Round Bar/Large Wire
Concave Type (Europe) (F)*	Round Bar/Large Wire	Round Bar/Large Wire
Separator Grate Covers (D)*	Use As Required	None
Separator Grate Spacers	In Storage Position	Either
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	900—1100	800—1050
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	14—17	14—18 (General-Purpose) 13—17 (Deep-Tooth)
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	5—8	6—10 (General-Purpose) 5—9 (Deep-Tooth)
Tailings System Concave Position (If Equipped)	Corn	Corn
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

OUO6075,000504D-19-17MAR21

Sunflower and Triticale

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.

* Refer to Footnotes Description Page later in this section for more detailed information.

	Sunflower	Triticale
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	26-Tooth	32-Tooth
Feed Accelerator Speed (B)* (J)*	Low	High
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	200—400	850—1000
Threshing Clearance (mm) (Q)*	25—40	18—24
Concave Type (North America) (F)*	Round Bar/Large Wire	Small Wire
Concave Type (Europe) (F)*	Round Bar/Large Wire	Small/Small/Large
Separator Grate Covers (D)*	Use As Required	Use As Required
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Advanced	Standard
Fan Speed (rpm)	650—850	750—1000
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	10—15	16—18
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	3—10	6—10
Tailings System Concave Position (If Equipped)	Corn	Grain
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

OUC6075,000504E-19-17MAR21

Wheat Difficult and Wheat Normal

NOTE: Various crop settings shown are for average conditions. Varying crop and field conditions may require slightly different settings.

* Refer to Footnotes Description Page later in this section for more detailed information.

	Wheat Difficult	Wheat Normal
Feeder House Drum Position	Down	Down
Feeder House Conveyor Chain (North America) (A)* (B)*	26-Tooth	26-Tooth
Feeder House Conveyor Chain (Europe) (A)* (B)*	32-Tooth	32-Tooth
Feed Accelerator Speed (B)* (J)*	High	High
Feed Accelerator Wear Strips (North America)	Serrated	Serrated
Feed Accelerator Wear Strips (Europe) (G)*	Serrated Tough Crop	Serrated Tough Crop
Threshing Speed (rpm) (B)* (E)*	800—1000	750—950
Threshing Clearance (mm) (Q)*	3—15	8—16
Concave Type (North America) (F)*	Small Wire	Small Wire
Concave Type (Europe) (F)*	Small/Small/Large	Small/Small/Large
Separator Grate Covers (D)*	Use As Required	Use As Required
Separator Grate Spacers	In Storage Position	In Storage Position
Top Cover Transport Vanes (O)* (If Equipped)	Standard	Standard
Fan Speed (rpm)	900—1250	900—1250
Adjustable Front Chaffer (If Equipped) (mm)	24	24
Chaffer Clearance (mm) (R)*	13—18	13—18
Dual Zone Adjust Rear Chaffer Clearance (mm)	5 Level 10 Sidehill	5 Level 10 Sidehill
Sieve Clearance (mm)	3—8	3—8
Tailings System Concave Position (If Equipped)	Grain	Grain
Crop Diverter	Grain	Grain
Knife Bank Engagement	Allowed	Allowed
Chopper Speed	High	High

OUC6075,000504F-19-17MAR21

Footnotes Description Page

(A)* For poor-feeding straw crops due to high volume, green, or windrowed conditions, the 32-tooth drive sprocket is recommended.

(B)* For improved straw quality in dry crops and grain quality, use lower speed. For dry, brittle sunflowers, a 15-tooth drive sprocket can be used.

(C)* For improved grain quality, use slow down kit to reach 320 rpm.

(D)* In shoe overloading conditions in dry crops, with small wire concaves, initially install two rows on the right side and three rows on the left side of the separator grates. With large wire concaves, initially install three rows on the right side and two rows on the left side of separator grates. Adjust number and pattern as required by condition.

(E)* 15 elements is the standard configuration. In most conditions, 15 elements will require less power, leading to higher capacity, less shoe load, and less straw damage. An additional nine element locations (dense pack) are available on the tough crop rotors, which can be used in tough material handling conditions.

(F)* For improvement in threshing, grain tank sample, and chaff load distribution in small grain, first install concave covers in the front concave. Extra covers can be added to other concaves as needed.

(G)* Recommendations other than serrated tough crop will require conversion of feed beater.

(H)* Tailings sump cover recommended.

(I)* Cleaning fan slow down kit may be required.

(J)* For increased material handling, use high speed.

(K)* Wires may be removed for increased cob capture.

(L)* Discharge paddles can be installed for improved material handling in rotor if using TriStream™ rotor.

(M)* Utilize corn cob mix separator grates.

(N)* In extremely tough material handling conditions, threshing tines may be installed in place of threshing elements (threshing performance may be reduced).

(O)* Advanced setting may be used for improved straw quality and/or material handling. Note: Separator loss may increase when advanced.

(P)* Available through service parts.

(Q)* *Kondex® Revolution™ (MaxThresh™, MaxRound™) concave recommended setting is 2—5 mm more open than the John Deere small wire, large wire, and round bar concaves.*

(R)* *Flat-tooth comb chaffer recommended setting is 2—3 mm more open than the general-purpose chaffer.*

OUO6075,0005050-19-14MAY21

Concave Recommendations

NOTE: For recommended machine settings for various crops, refer to the Crop Settings section for further information.

Concave Type	Corn	Soybeans	Wheat Barley Small Grains	Rice	Popcorn Food Corn	Sorghum (Milo) Sunflowers (Confection)	Sunflowers (Oil)	Canola
Small Wire	NR	NR	Best	NR	NR	NR	Average	Best
Large Wire	Good	Good	Good	Best	NR	Best	Best	Good
Round Bar	Best	Best	Average	Good	Best	Average	Best	Average

Best = Provides best level of performance.

Good = Provides a good level of performance.

Average = Provides an average level of performance.

NR = Not recommended.

Recommended Configurations

NOTE: For recommended machine settings for various crops, refer to the Crop Settings section for further information.

Numerous concave combinations are possible based on conditions and operator preferences.

Concave Type	Corn Soybeans	Wheat	Barley	Lentils	Chickpeas	Canola
John Deere	RB, RB, RB	SW, SW, SW Plus Covers	SW, SW, LW	SW, SW, SW	SW, RB, RB	SW, SW, SW
Kondex® Revolution™	MR, RB, RB	MT, SW, SW	MT, SW, LW	MT, SW, SW	MR, RB, RB	MT, SW, SW

SW = John Deere Small Wire Concave

LW = John Deere Large Wire Concave

RB = John Deere Round Bar Concave

MT = Kondex® Revolution™ two half-width MaxThresh™ Concaves

MR = Kondex® Revolution™ one half-width MaxThresh™ Concave and one half width MaxRound™ Concave

MaxThresh is a trademark of Kondex Corporation

MaxThresh is a trademark of Kondex Corporation


MaxRound is a trademark of Kondex Corporation

OUO6075,0005079-19-11MAY21

Power Shutdown Procedure



H95321—UN—02NOV10

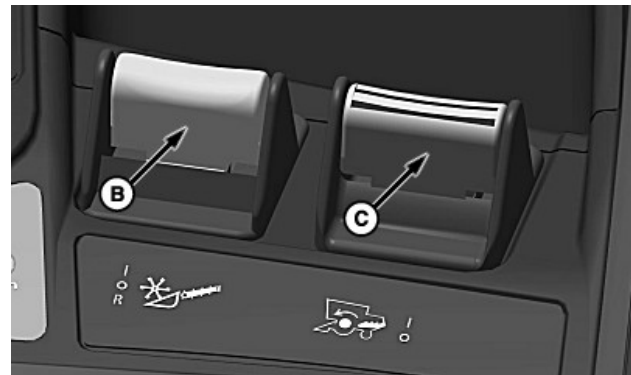

H120321—UN—20DEC16

A—Key Switch
B—Header Engage Switch
C—Separator Engage Switch

NOTE: A power shutdown is used to determine the machine's performance in the threshing and separating areas by taking a "snap-shot" of the material in the separator. This is valuable in determining where the losses behind the machine are generated and what adjustments can be made to correct the condition.

Verify that crop condition and material intake is similar for each shutdown.

1. Locate engine speed indicator on corner post display and threshing speed readout on armrest display.
2. Lock brake pedals together.
3. Operate machine at optimized throughput levels in desired crop.
4. Move steering wheel forward for free motion (both hands needed).
5. Press low idle engine speed switch on armrest.
6. Depress brake pedals.
 - a. **Non-ProDrive™ machines:** Fully depress brake pedals (quickly pulls engine speed down by loading propulsion system).
 - b. **ProDrive™ machines:** Lightly depress brake pedals (ProDrive™ attempts to repower and will downshift changing machine dynamics if brakes are fully depressed).
7. As engine speed drops to near low idle speed (1200 rpm), **quickly disengage header (B) and separator engage (C) switches on armrest.**
8. Quickly move the multi-function lever to neutral position.
9. Allow engine to cool for a minute.
10. Turn key switch (A) to shut OFF engine, set park brake and remove key.
11. Inspect for excessive grain damage, kernels left on the cobs, and free grain loss before making any adjustments.
12. Decide what adjustments are needed. Open threshing clearance and engage separator (avoids undue stress to cylinder drive area during cleanout).
13. Adjust machine to desired settings and continue harvesting.
14. Repeat this procedure and verify grain quality and losses behind machine.
15. Once acceptable loss levels are attained, calibrate VisionTrak™ Monitor and continue to harvest.

OUO6075,0004571-19-10JAN17

Payable Moisture and Density Chart

Crop	Standard Moisture (%)	Crop Density (lbs/bushel)	Crop Density (kg/bushel)
Alfalfa	12.0	60	27
Barley	14.0	48	22
Barley (Winter) ^a	14.5	48	22
Barley (Spring) ^a	14.5	48	22
Canola	10.0	52	24
Chickpeas ^a	12.0	61	27
Corn (Dry or Wet)	15.0	56	25
Edible Beans	14.5	60	27
Flax	7.0	56	25
Grass Seeds	12.0	22	10
Lentils	10.5	60	27
Lupins ^a	12.0	53	24
Millet	11.0	50	23
Mustard	8.0	60	27
Navy Beans	14.5	62	28
Oats	14.0	32	15
Oats ^a	15.0	32	15
Peas	10.5	60	27
Peas ^a	12.0	60	27
Popcorn	14.0	60	27
Popcorn ^a	15.5	60	27
Rape Seed (Dry or Wet) ^a	10.0	52	24
Rice	14.0	45	20
Rye	14.0	56	25
Safflower	6.0	45	20
Sorghum	13.0	56	25
Soybeans	13.0	60	27
Sunflower	14.0	29	11
Sunflower ^a	9.0	20	11
Triticale ^a	14.5	58	26
Wheat (Spring)	13.0	60	27
Wheat (Winter)	13.0	60	27

^aEuropean crop listing only.

OUO6075,0000E89-19-22MAR12


Standard Weights Chart

Unit	Weight (lb)	Weight (kg)
Barrels	162.0	73.5
Sacks	100.0	45.4
Hundred Weight	100.0	45.4
Pounds (lb)	1.0	0.454
Kilograms (kg)	2.204	1.0
Metric Tons	2204.0	1000.0
Tons	2000.0	907.0

OUO6075,0000435-19-15APR10

HillMaster™ Leveling System (If Equipped)

HillMaster™ System (General Information)

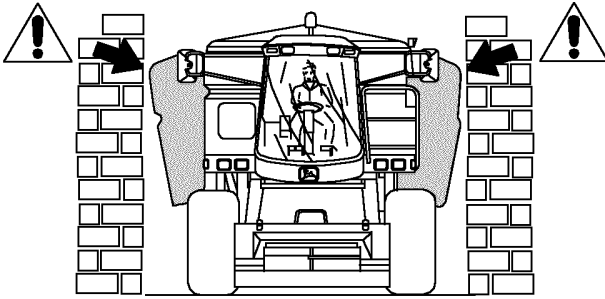

ZX 002438

ZX002438—UN—16JUN95

CAUTION: HillMaster™ must only be used in the field. Before driving on public roads, machine must be lowered to transport position, so maximum height is less than 4.0 m.

Care must be taken when turning machine on slopes. Follow these precautions when turning machine on slopes in order to avoid loss of stability and potential rollover of machine:

- Never turn machine faster than leveling system can keep machine level.
- Always turn uphill and never downhill.
- Do not move onto steeper grades once maximum tilt limit indicator appears on display.


Avoid crushing injuries. Always lower the leveling system before getting underneath the machine for service or adjustments. Shut OFF engine, set park brake and remove key.

IMPORTANT: Before actuating manual leveling control switch, verify that parking brake is released.

Do not park machine too close to other machines or building walls. This is important as machine may tilt due to internal loss of oil pressure when parked for long periods of time. This may cause damage to the machine and adjacent machines or walls.

Standard final drives are mounted to the pivoting carrier plates on the front axle. Hydraulic cylinders are used to pivot the carrier plates up and down to tilt the machine. Separator remains level as machine moves over uneven ground.

System is operated manually using HillMaster™ tilt left and right buttons or in automatic mode.

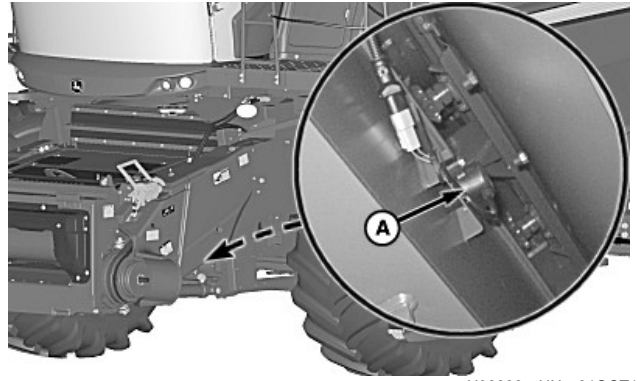

H98380—UN—01OCT10

Tilt Sensor Located on Front Axle

A—Tilt Sensor


In automatic mode, tilt sensor (A) levels the body of the machine and remains level as the machine moves across the field.

As field slope changes, a pitch sensor measures the angle of tilt and provides a signal to the control unit. At the appropriate time and angle of tilt, the control circuit sends an electronic signal to the right or left tilt solenoid on the tilt leveling control valve.

NOTE: Sensor keeps the separator level within one degree during field operation. When operating on rough or irregular ground, separator level position may exceed this one degree for a short time.

Tilt system keeps separator level on slopes up to 15%. If operated on slopes greater than 15%, maximum tilt limit indicator appears on display.

Lateral Tilt Operation

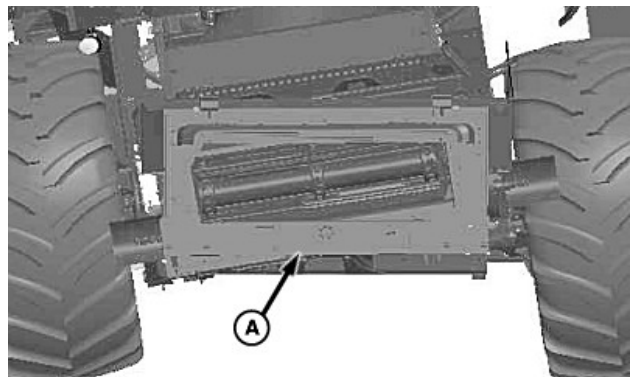

H84660—UN—07OCT05


A—Feeder House

Lateral tilt assists in keeping the header parallel with the ground as the machine separator tilts to stay level. The system uses a specially equipped feeder house (A) that enables the header to tilt left and right.

HillMaster™ along with the lateral tilt function allows header to tilt left and right ± 9 degrees. Both systems allow the header to cut properly on slopes up to 15%.


The tilt system uses a double-acting primary/secondary

cylinder arrangement to tilt header with respect to the chassis.

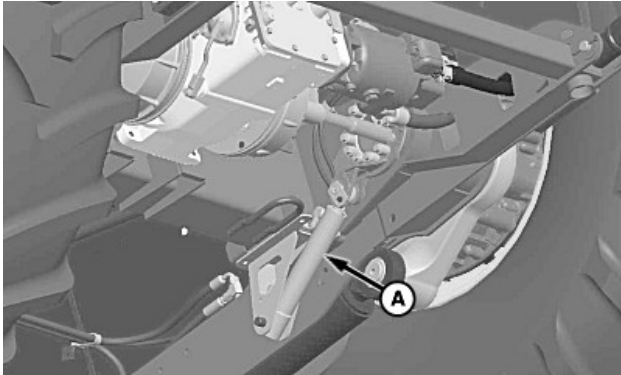

H84613—UN—04OCT05

Primary Cylinder Located on Left-Hand Side

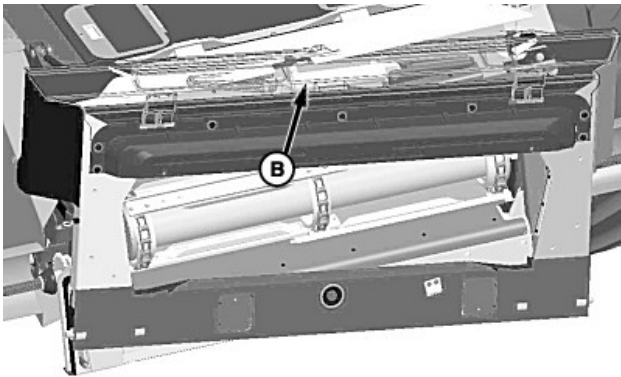

H84661—UN—07OCT05

Header Tilt Secondary Cylinder

A—Header Tilt Primary Cylinder
B—Header Tilt Secondary Cylinder

The header tilt primary cylinder (A) is connected between the front axle and the left final drive carrier plate. The header tilt secondary cylinder (B) is on top of the feeder house and connects the tilt frame to the feeder house. During normal operation, the header automatically stays parallel to ground as separator tilts left or right staying level.

NOTE: Areas around the feeder house tilt frame need cleaned regularly to prevent buildup of material, which could limit full tilt travel.


Operator can override automatic header leveling feature by using the lateral tilt switches on the multi-function lever. When the lateral tilt switches are pressed, oil from the main hydraulic valve block is added or removed from the header tilt circuit, allowing it to move independently of the feeder house and chassis.

For automatic operation, the header must be equipped with sensors and calibrated prior to the first use.

Enable the lateral tilt system through the software. System is activated by pressing activation buttons 1, 2 or 3 on the multi-function lever.


Signals from sensors at both left and right ends are processed and the appropriate hydraulic control valve is energized to level header with respect to ground.

Header Tilt Cylinders

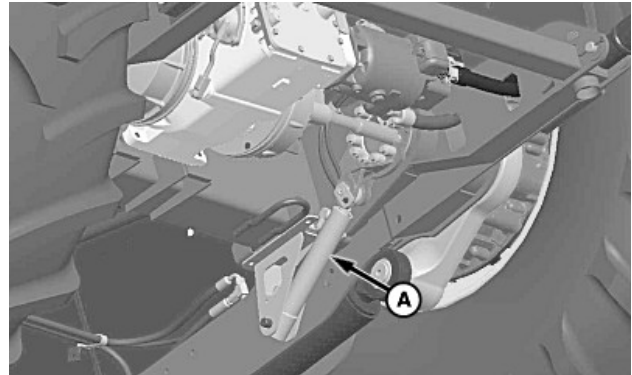

H84613—UN—04OCT05

Primary Cylinder Located on Left-Hand Side

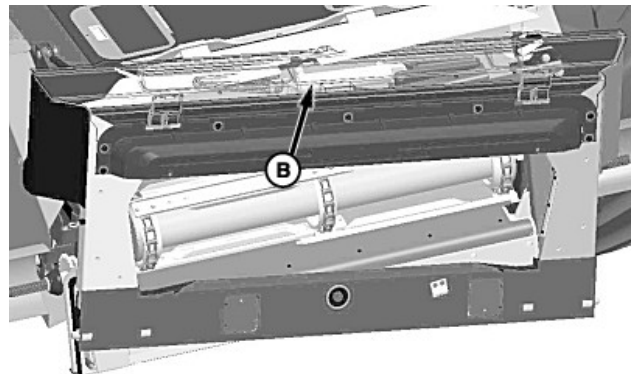

H84661—UN—07OCT05

Header Tilt Secondary Cylinder

A—Header Tilt Primary Cylinder
B—Header Tilt Secondary Cylinder

The header angle is determined by a primary/secondary cylinder arrangement. The primary cylinder (A) is connected between the chassis and the left final drive carrier plate. The secondary cylinder (B) is connected between the feeder house and the tilt frame.


Rod ends of the primary and secondary cylinders are connected to each other and the piston ends of the primary and secondary cylinders are connected to each other. As the left leveling cylinder extends and retracts, the left final drive carrier plate pivots up and down and extends or retracts the header tilt primary cylinder. Movement of the primary cylinder extends and retracts the secondary cylinder.

As the primary cylinder extends through the movement of the final drive carrier plate, oil flows from the rod end of the primary cylinder to the rod end of the secondary cylinder. This causes the secondary cylinder to retract. Oil from the base end of the secondary cylinder flows to the base end of the primary cylinder to fill the additional volume created as the primary cylinder was extended.

When the primary cylinder is retracted by movement of the final drive carrier plate, the opposite occurs.

OUC6075,00044CC-19-10JAN17

HillMaster™ Daily Operation Preparations

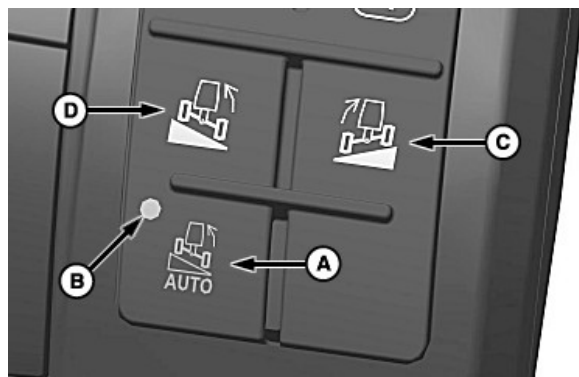

H120033—UN—14NOV16

HillMaster™ Switches

- A—Automatic Leveling Control Switch
- B—Indicator Light
- C—Manual Tilt Right Switch
- D—Manual Tilt Left Switch

CAUTION: Do not attempt to operate HillMaster™ machine unless all of the following operational checks are completed successfully. If one or more of the following checks fail (separator does not tilt or time to reach full tilt is excessive), contact your John Deere dealer for assistance.

Before operating HillMaster™ machine the following three operational checks must be performed (daily).

System Requirements:

- Engine is running.
- Road transport disconnect switch in field position.
- Press automatic leveling control switch (A) to activate automatic leveling system.
- Indicator light (B) turns ON indicating setting is in automatic mode.

Check One: Push and hold manual tilt right switch (C) for approximately 20 seconds to tilt the machine chassis to the right.

Check Two: Push and hold manual tilt left switch (D) for approximately 20 seconds to tilt the machine chassis to the left.


NOTE: Time required to bring machine from maximum left tilt position to maximum right tilt position is approximately 5—7 seconds.

HillMaster is a trademark of Deere & Company

Check Three: Press and hold manual tilt left switch until machine is tilted fully to the left. Push and hold manual tilt right switch until the machine chassis is tilted fully to the right.

OUC6075,00044CD-19-25JAN17

HillMaster™ Leveling Control Switches

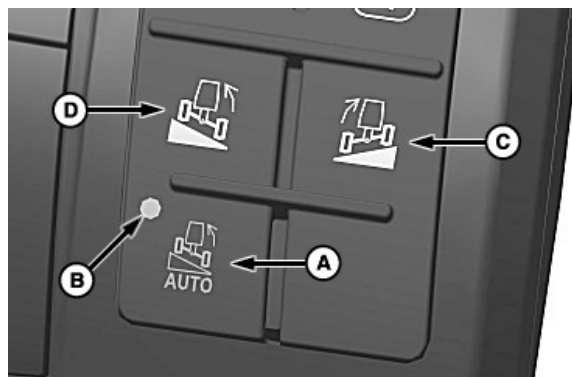

H120033—UN—14NOV16

HillMaster™ Switches

- A—Automatic Leveling Control Switch
- B—Indicator Light
- C—Manual Tilt Right Switch
- D—Manual Tilt Left Switch

Automatic Leveling

Automatic leveling control switch (A) allows the machine separator to automatically level itself as machine moves over rolling ground.

System Requirements:

- Engine is running.
- Road transport disconnect switch in field position.
- 1. Press automatic leveling control switch to activate automatic leveling system.
- 2. Indicator light (B) turns ON indicating setting is in automatic mode.
- 3. Display shows position of machine chassis body graphically.

A pitch sensor is used to sense the slope of the machine as it moves across the field.

NOTE: With the automatic leveling control system activated, manual tilt switches can be used to overcome automatic functions (machine may be tilted manually left or right).

Manual Leveling

Manual tilt switches allow the machine chassis to be tilted left or right manually as machine moves over rolling ground.

System Requirements:

- Engine is running.
- Road transport disconnect switch in field position.

NOTE: Push-Button Shift Transmission Machines: Push manual tilt right switch (C) or manual tilt left switch (D) to enable HillMaster™ mode. Push park brake switch to disengage park brake.

Push and hold manual tilt right switch (C) to tilt the machine chassis to the right.

Push and hold manual tilt left switch (D) to tilt the machine chassis to the left.

NOTE: When manual desired tilt switch is released, automatic mode takes over and levels machine chassis automatically.

Display shows position of machine chassis body graphically.

A pitch sensor is used to sense the slope of the machine as it moves across the field.

NOTE: With the automatic leveling control system activated, manual tilt switches can be used to overcome automatic functions (machine may be tilted manually left or right).

Road Transport Position

 **CAUTION: Avoid loss of control during road transport and serious injury or death. Never transport machine on the roadway with HillMaster™ in automatic mode. Never attempt to manually tilt machine while transporting on a roadway.**

The following lockouts the HillMaster™ leveling system and ensures that leveling system does not shift during road transport.

System Requirements:


- Engine is running.
 - Road transport disconnect switch in field position.
1. Move machine to level ground.
 2. Press automatic leveling control switch for **5 seconds** or until indicator light (B) flashes.
 3. Push and hold manual tilt right switch (C) to tilt the machine chassis to the right.
 4. Push and hold manual tilt left switch (D) to tilt the machine chassis to the left.

Machine is now in neutral position and can be driven on roadway.

OUC6075,0004941-19-12APR18


John Deere Tracks (If Equipped)

Machine Photo

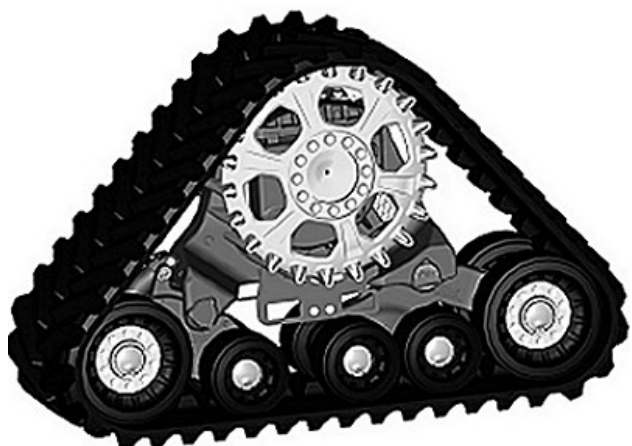

H122227—UN—10AUG17
OUO6041,0000C1B-19-25AUG17

Operator's Manual

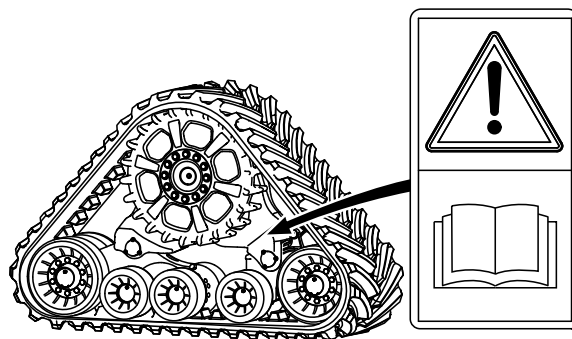


H122407—UN—03OCT17

This operator's manual contains all important information necessary for safe machine operation. Carefully observe all safety rules to avoid accidents.

OUO6041,0000CE6-19-13NOV17

Safe Track Operating Practices

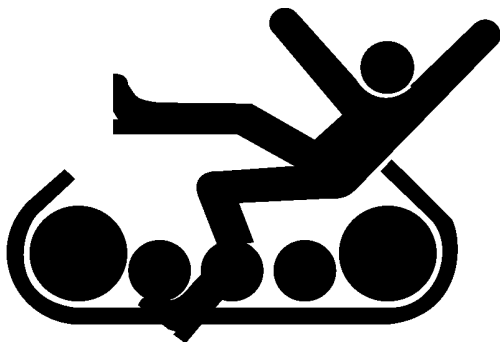

H48148—UN—12DEC96


DO NOT stand near tracks when machine is running.

Safe operating practices of track drive machines are no different from wheel drive machines.

ALWAYS refer to your Combine Operator's Manual, and review Safety section before operating machine. The Combine Operator's Manual details safe operating practices that must be followed to protect you and others from accidental death and/or injury.

OUO6075,00014B9-19-03DEC13

Accumulator

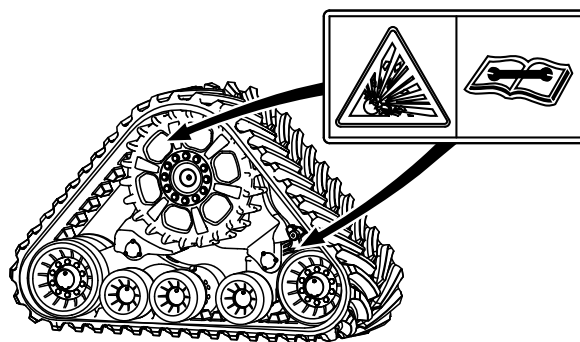


H122408—UN—03OCT17

To avoid injury from machine movement and exposure to fluid under pressure, see dealer for instruction on relieving pressure before servicing hydraulic system.

OUO6041,0000CE5-19-13NOV17

Cab/Platform Access Ladder

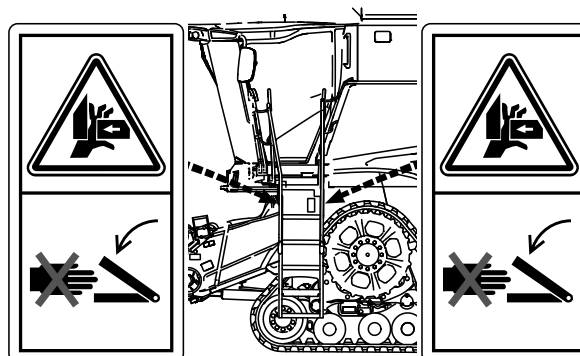


H125749—UN—19MAR19

To avoid injury from crushing, keep hands and fingers away from this area.

OJ06075,0004ABE-19-01MAR19

Cab Ladder Positions (60.9 cm (24 in) Wide Tracks)

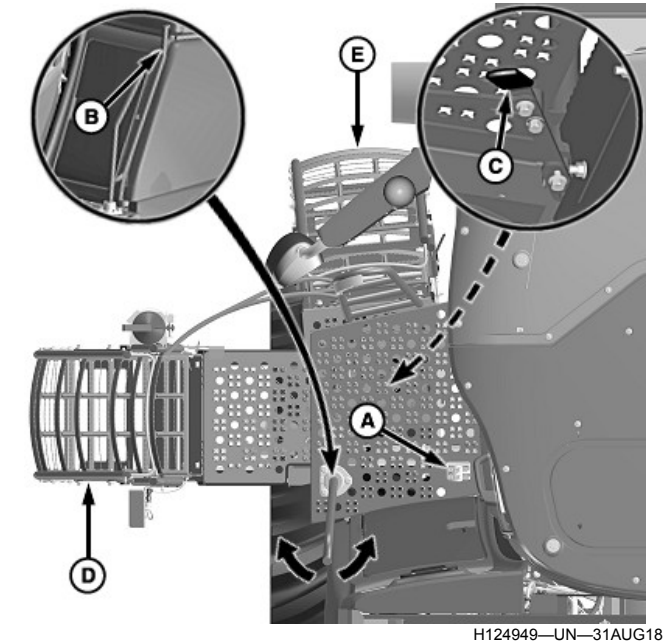

- A—Pedal
- B—Handle
- C—Handle
- D—Position (Field)
- E—Position (Roadway Driving)

CAUTION: Avoid injury or death. Do not ride or attempt to climb front or rear ladders while machine is moving.

Ladder can be positioned from the ladder landing by stepping on pedal (A) and turning handle (B) simultaneously. Turn the handle in either direction to swing the ladder assembly.

Ladder can be positioned from the ground using handle (C).

If the ladder latch appears loose, clean out latch pin area. Do not use oil or grease in this area.

Swing ladder forward or rearward and lock into these different positions:


- **Position (D):** For the normal operating field conditions.
- **Position (E):** For transporting the machine on public roadways.

CAUTION: Avoid damage to cab ladder. Always place ladder in the folded position (up position) and swing ladder to position (D) for normal operating field conditions.

Avoid accidents. Always place ladder in the folded position (up position) and swing ladder to position (E) before transporting on public roadways to reduce machine width and to position marker/hazard light towards oncoming motorists.

OJ06075,0004ABF-19-01MAR19

Cab Ladder Positions (76.2 cm (30 in) and 91.4 cm (36 in) Wide Tracks)

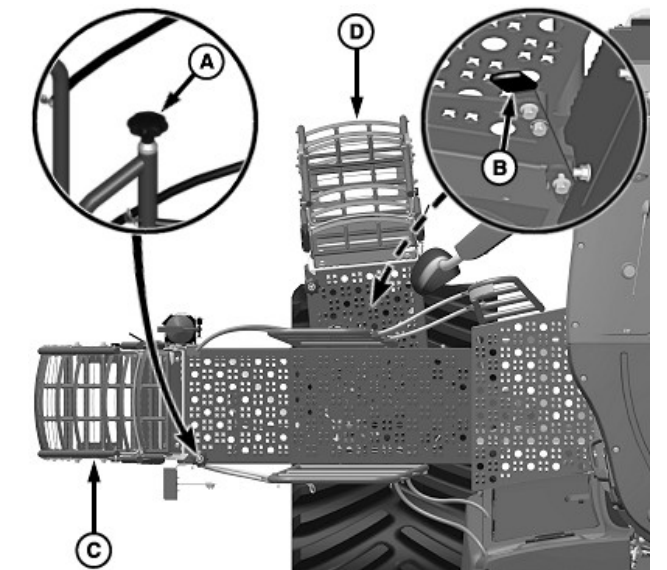

- A—Handle
- B—Lever
- C—Position (Field)
- D—Position (Roadway Driving)

CAUTION: Avoid injury or death. Do not ride or attempt to climb front or rear ladders while machine is moving.

Ladder can be positioned from ground or from the ladder landing using handle (A) or lever (B).

If the ladder latch appears loose, clean out latch pin area. Do not use oil or grease in this area.

Swing ladder forward or rearward and lock into these different positions:

- **Position (C):** For the normal operating field conditions.
- **Position (D):** For transporting the machine on public roadways.


CAUTION: Avoid damage to cab ladder. Always place ladder in the folded position (up position) and swing ladder to position (C) for normal operating field conditions.

Avoid accidents. Always place ladder in the folded position (up position) and swing ladder to position (D) before transporting on public roadways to reduce machine width and to position marker/hazard light towards oncoming motorists.

OUO6075,0004AC0-19-07MAR19

Cab Ladder Positions (Fold/Unfold from Ground)

Fold Ladder

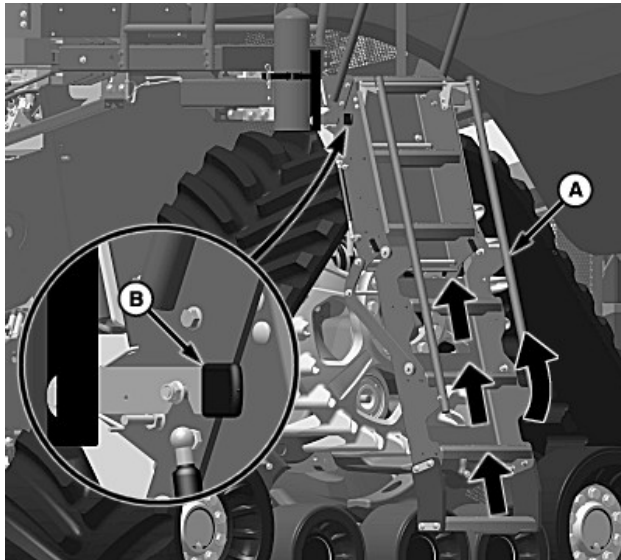


H124945—UN—30AUG18

A—Handrail (2 used)
B—Locking Lever

CAUTION: Avoid injury to you or others. Keep hands away from moving components while folding or unfolding the ladder. Always use the handrails to fold or unfold the ladder.

Push up on handrails (A) to raise ladder in the up position until locking lever (B) latches.

Unfold Ladder

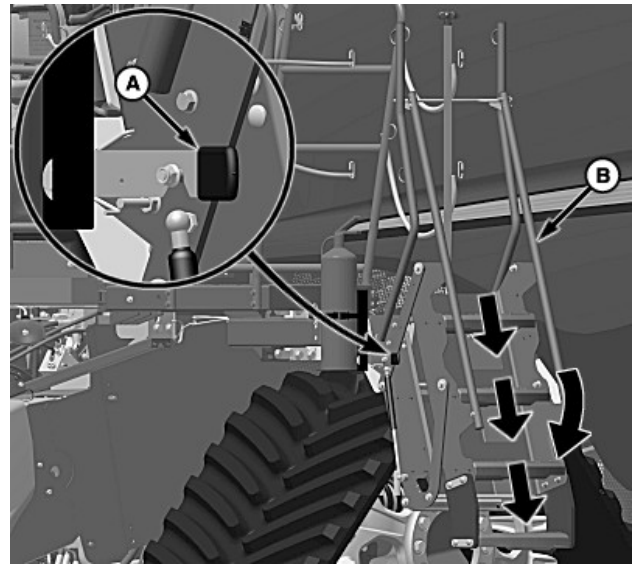

H124946—UN—30AUG18

A—Locking Lever
B—Handrail (2 used)


CAUTION: Avoid injury to you or others. Keep hands away from moving components while folding or unfolding the ladder. Always use the handrails to fold or unfold the ladder.

Push up on locking lever (A) and pull down on handrails (B) to lower ladder in the down position.

OUO6075,0004A23-19-06SEP18

Cab Ladder Positions (Fold/Unfold from Cab Landing)

Fold Ladder

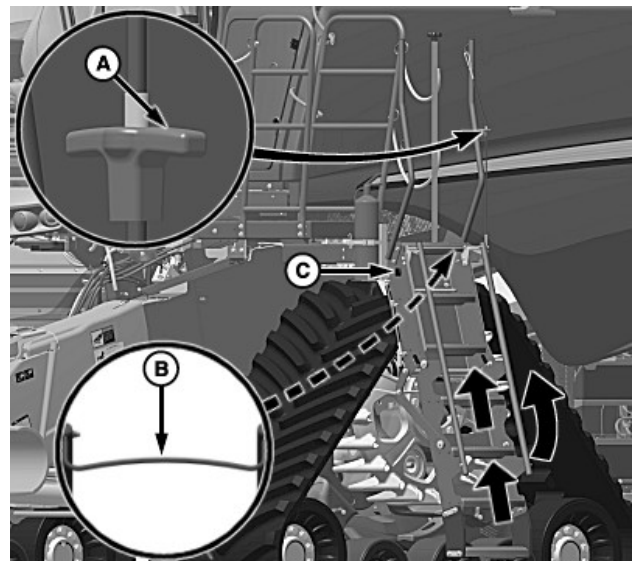

H124948—UN—30AUG18


A—Handle
B—Crossbar

C—Locking Lever

CAUTION: Avoid injury to you or others. Keep hands away from moving components while folding or unfolding the ladder. Always use the handrails to fold or unfold the ladder.

1. Pull up on handle (A) until crossbar (B) can be reached.
2. Continue to pull up on crossbar to raise the ladder until locking lever (C) latches and secures the ladder in the up position.

Unfold Ladder

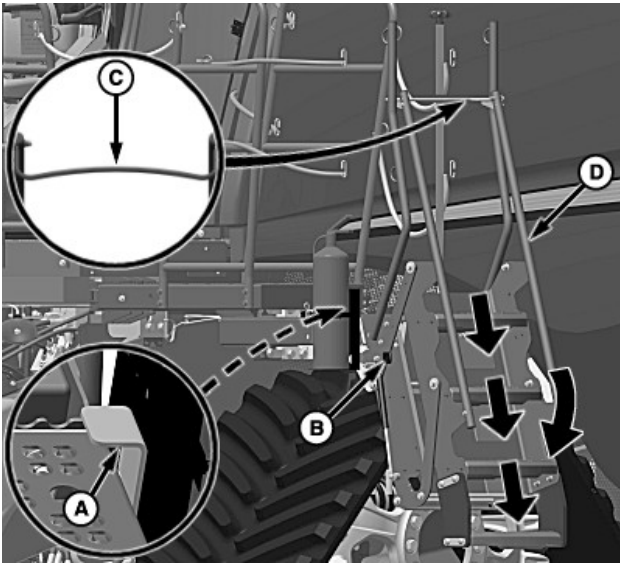

H124947—UN—30AUG18


A—Pedal
B—Locking Lever
C—Crossbar
D—Ladder

CAUTION: Avoid injury to you or others. Keep hands away from moving components while folding or unfolding the ladder. Always use the handrails to fold or unfold the ladder.

1. Push down on pedal (A) to unlatch the locking lever (B).
2. Push down on crossbar (C) until it can be reached with your foot.
3. Continue to press down on the crossbar to lower the ladder (D) all the way down.

OUO6075,0004A24-19-06SEP18

Track Components

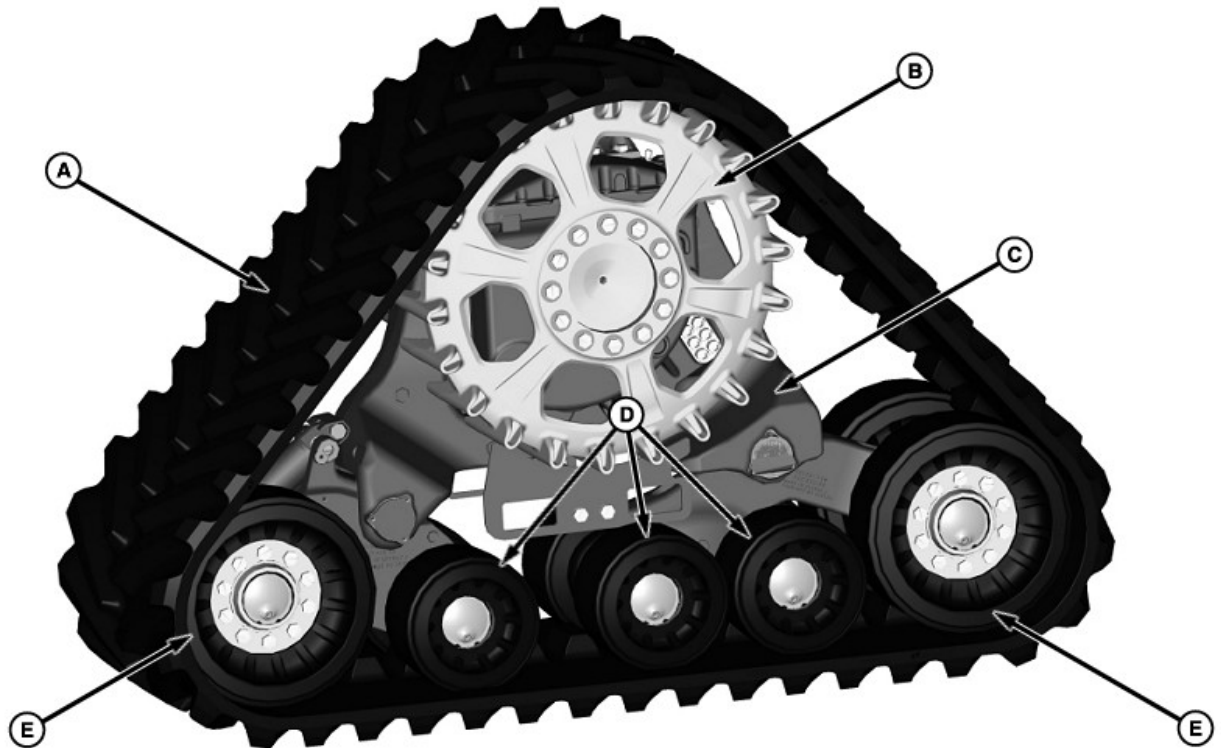


H122226—UN—10AUG17

A—Rubber Track Belt
B—Drive Wheel
C—Main Frame

OOU6041.0000C2E-19-10AUG17

D—Bogie Wheels
E—Idler Wheels

Track Features and Benefits

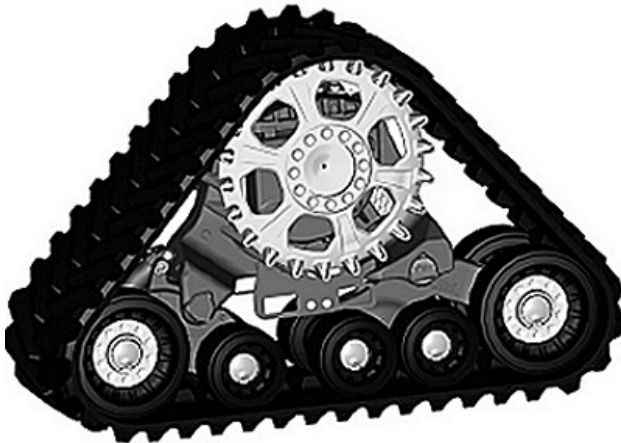

H122227—UN—10AUG17

Features and benefits of tracks:

- Compaction – reduces compaction
- Flotation – increased flotation in adverse conditions

- Ride Quality— rubberized idlers and bogies cushion ride
- Low Maintenance – zero grease points
- Auto Tension - efficient absorption of impacts or ingestion of debris
- Integrated Track – continuous rubber track minimizes surface damage
- Positive Drive – gently spreads torque on the rubber belt with low rolling resistance
- Speed –equal speed as tires

Tracks are installed on the left-hand and right-hand side of the front axle instead of the normal drive wheels.

Weight force is transmitted from the main frame to the idler wheels and bogie wheels.

Idler wheels and bogie wheels along with the suspension system compensate for uneven ground terrain. This results in even ground pressure over the entire track area.

OOU6041.0000C2F-19-11JAN18

Operate Track Machines

IMPORTANT: Transport regulations vary. Contact your local transportation officials for your local transportation requirements.

High-speed road travel increases tread wear rates and builds excessive heat, which can reduce drive lug life. See Road Transport Speeds later in this section for further information. High-speed transport should be avoided prior to completing the break-in period, particularly on roads. If road travel is necessary with new tracks, reduce transport speed and apply dry lubricant to drive lugs to aid in the proper belt conditioning.

NOTE: Driving a machine with tracks is the same as driving a machine with tires. Therefore, instructions on how to drive a combine is given in the Combine Operator's Manual.

There are no differences between operating machines with tracks versus machines with wheels. All controls and shift functions remain the same as a machine with wheels.

Machine behavior on paved roads is similar to behavior of the machine with wheels. On non-paved, poor roads and in field, the machine compensates for uneven ground and is not prone to bounce compared to a machine with wheels.

Refer to Combine Operator's Manual for operational information not related to tracks.

Maximizing Track Life

IMPORTANT: To avoid track and track system component damage, pre-condition tracks.

- Pre-condition the tracks before driving machine on the road for the first time. See Belt Care and Conditioning Break-In for further information.
- Avoid traveling at high speeds with a new set of tracks and wheels, especially during the first 100 hours.

Debris buildup can cause fire from increased friction. Remove debris from the buildup points between track and machine frame.

Avoid operating track in grease, oil, or other petroleum chemicals. Avoid spilling these materials on track and wheels during service.

Track carcasses are designed to exceed tread wear-out, so long as integrity of carcass is maintained. It is critical to keep moisture out of the steel carcass and to avoid situations where localized cable overloading could occur. Track owners are advised to follow these guidelines to achieve maximum track life and avoid

operational problems, all of which results in lower cost per operating hour:

- **Minimize roading. Excessive road travel can increase track wear up to 15 times field wear rates**
 - Minimize transport weight during road transport.
 - Reduce maximum travel speed especially during high ambient conditions.
- **Use correct operational techniques**
 - Avoid skidding and tread bar scrubbing on hard surfaces to reduce track wear.
 - Use care when crossing ditches or transitions while making turns. Diagonal crossing of ditches causes the track to become unsupported, leading to momentary loss of tension, and higher risk of detracking while performing a turn.
 - Do not exceed side operating slope of 10° or fore/aft operating slope of 22°.
- **Maintain correct track tension**
 - Under-tension causes rapid wear on tracks and inside surface of belt due to slippage and potentially causes material buildup.
 - Over-tension adds extra load and stress to undercarriage bearings, internal track cables, and track frame.
- **Keep irregular material out of tracks**

Sharp or hard material inside the track is the primary reason for track tears and subsequent entry points for moisture into the track carcass.

OUO6075,0004F5F-19-04NOV20

Road Transport Speeds


NOTE: Maximum allowed road time to maximize rubber belt/wheels life.

Without Header Attached (All Belt Widths)						
Ambient Temperature		Speed				
		25	30	35	40	km/h
°C	°F	15	18	21	25	mph
0	32	>5.0				Hours
5	41					
10	50					
15	59					
20	68	>5.0			4.5	
25	77	>5.0	4.5		4.0	
30	86	4.0		3.5		
35	95	3.5		3.0		
40	104	3.0	2.5		2.0	

With Header Attached (60.9 cm (24 in) Track)						
Ambient Temperature		Speed				
		25	30	35	40	km/h
°C	°F	15	18	21	25	mph
0	32	>5.0			1.5	Hours
5	41					
10	50					
15	59	>5.0	4.5		1.0	
20	68	4.5	4.0			
25	77	4.0	3.5			
30	86	3.5	3.0			
35	95	3.0	2.5			
40	104	2.5	2.0	1.5		

With Header Attached (76.2 cm (30 in) Track and 91.4 cm (36 in) Track)						
Ambient Temperature		Speed				
		25	30	35	40	km/h
°C	°F	15	18	21	25	mph
0	32	>5.0			1.0	Hours
5	41	>5.0		4.5		
10	50			1.0		
15	59	>5.0	4.5			
20	68	4.5	4.0			
25	77	4.0	3.5			
30	86	3.5	3.0			
35	95	3.0	2.5			
40	104	2.5	1.5			

Track Tensioning System

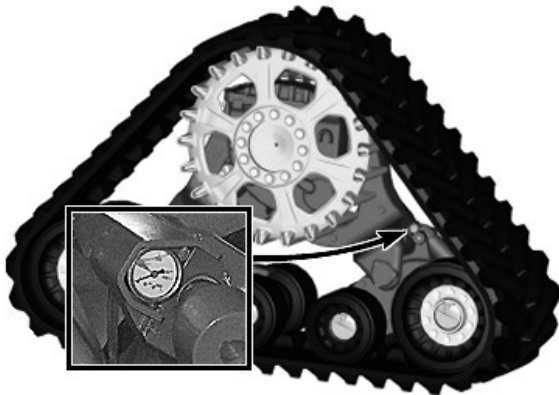

H122229—UN—15AUG17

IMPORTANT: Check tension cylinder pressure prior to using the machine.

Nitrogen Pressure

Hydraulic cylinder has an internal nitrogen accumulator which comes pre-charged from the factory. Pressure does not need to be checked unless there is a sudden drop in hydraulic pressure with no sign of fluid loss. See your John Deere dealer for further information.


Hydraulic Pressure

Hydraulic pressure gauge is located above the front idler wheels at location shown. Gauge is used to provide a quick visual check to verify that pressure is within recommended operating range.

If pressure is outside of these ranges it must be adjusted. If pressure is too low, this indicates that there is a leak somewhere in the hydraulic system and a closer inspection must be performed. See your John Deere dealer for further information.

OUC6041,0000C31-19-10MAY18

Cleaning Tracks

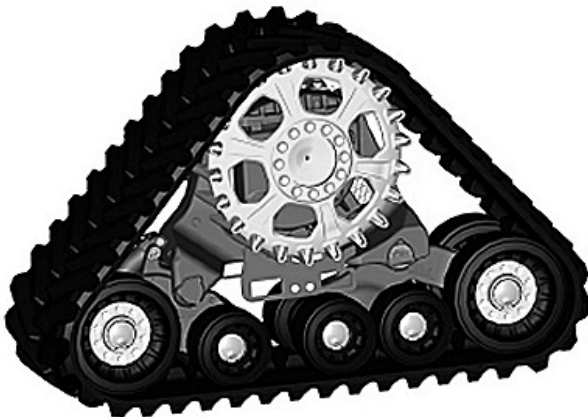

H122230—UN—15AUG17


IMPORTANT: Tracks must be cleaned immediately after operation in wet and muddy conditions.

Always keep drive wheel and mainframe clear of dirt and debris.

Mainframe and wheel areas must be cleaned periodically to prevent buildup of dirt and debris. Buildup can cause premature wear on rubber track belt, bogie wheels, and idler wheels.


OUC6041,0000C32-19-15AUG17

Track Cleanout Areas

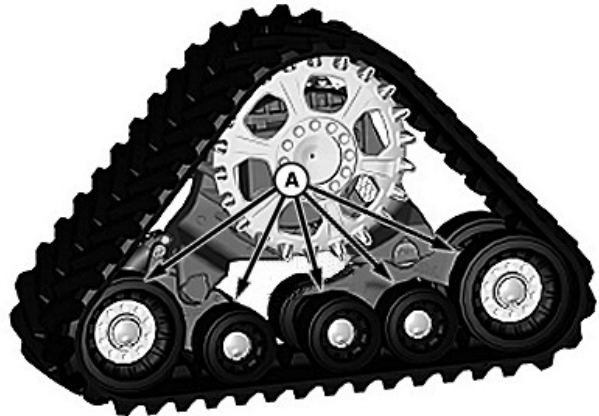

Outside View

H122231—UN—15AUG17

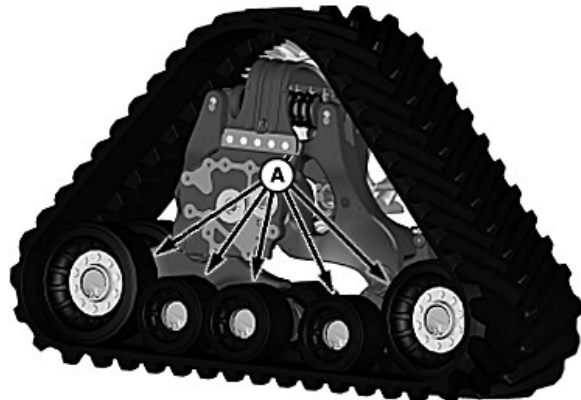

Inside View

H122232—UN—15AUG17

A—Mainframe and Wheel Areas

Mainframe and wheel areas (A) must be cleaned periodically to prevent buildup of dirt and debris. Buildup can cause premature wear on rubber track belt, bogie wheels, and idler wheels.

OUC6041,0000C33-19-16AUG17

Service Interval Chart


IMPORTANT: Service times are for average conditions. Service more often if machine is used in extreme conditions.

Service	First 10 Hours	Every 10 Hours	First 100 Hours	Every 400 Hours	Every 1000 Hours
Clean Dirt and Debris From Drive Wheels		•			
Clean Dirt and Debris From Mainframe		•			
Check Bogie Hubs Oil Level				•	
Check Idler Hubs Oil Level				•	
Check Pressure Settings			•	•	
Check Belt Tracking			•	•	
Check Bolt Torque	•		•	•	
Check Idler Wheel and Sprocket Bolt Torque	•		•	•	
Change Bogie Hubs Oil					•
Change Idler Hubs Oil					•
Swap Belts Left/Right ^a					•

^aBelt swap only required based on traction lug wear.

OUC6075,0004A25-19-06SEP18

Belt Care and Conditioning Break-In

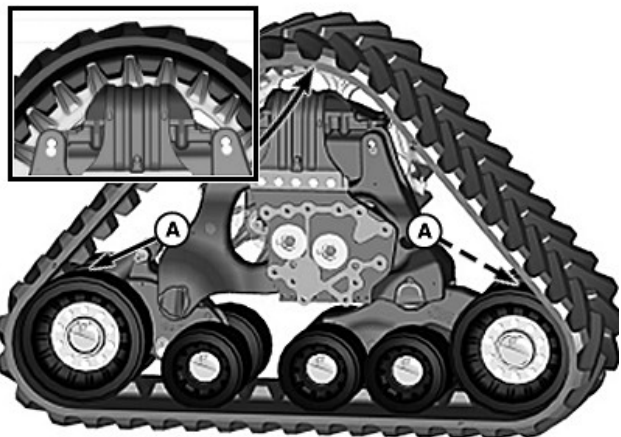

H122233—UN—16AUG17

A—Front and Rear Drive Wheel Areas

Pour one cup of dry lubricant to front and rear drive wheel areas (A) as shown.

Move machine forward or in reverse to spread dry lubricant over drive lug teeth.

Verify that guide/drive lugs have the dry lubricant on all surfaces.

Always expose new or clean track to dry and dusty soil conditions as soon as possible.

Run machine for approximately 10 hours after installation.

Check hydraulic pressure on the track tensioning system and adjust as needed.


Check track module hardware torque and retighten as needed.

OUC6041,0000C34-19-11OCT17

CAUTION: Shut OFF engine, set park brake and remove key.

NOTE: The following break-in procedure is for a modular track system after installation of a new track system, or installation of a new track belt. Prior to operating machine, dry lubricant must be applied to drive lugs of the rubber track belt to aid in the proper belt conditioning.

Track Replacement Criteria

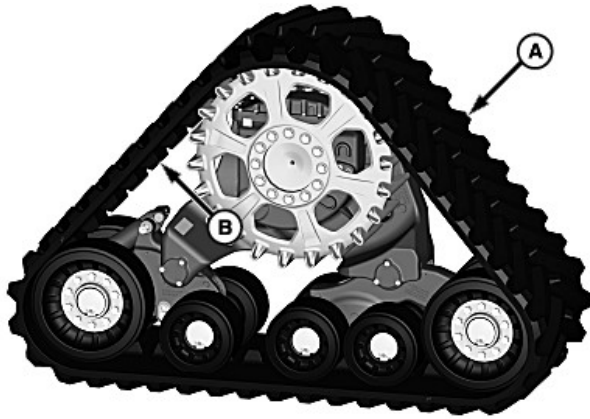

H124521—UN—15JUN18


A—Tread Bar
B—Drive Lugs

To prevent damages and/or loss of performance, tracks must be replaced when one of the following criteria is reached:

- Tread bar height (A) is less than 12 mm (0.5 in) for traction tracks
- More than three tread bars are missing in a row
- More than three consecutive drive lugs (B) are missing
- Wear on drive lugs is more than 50%
- De-tracking occurs due to worn-out or missing drive lugs
- Main cables are broken on more than a third (1/3) of the width of the track
- Main cables are visible on the inside surface of the track
- Sprocket is skipping teeth due to missing/worn drive lugs

OUC06041,0000D63-19-15JUN18

Hydraulic Oil

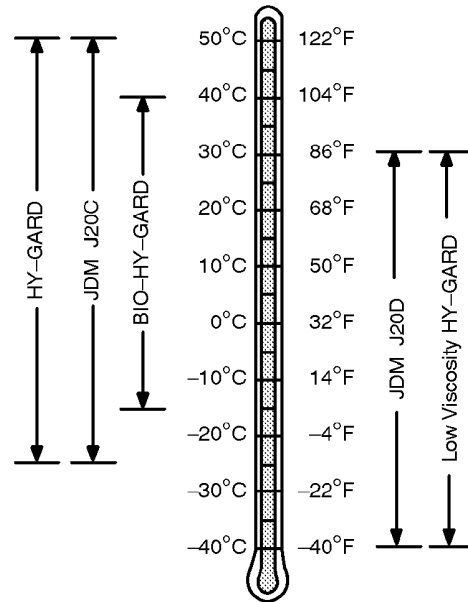

TS1660—UN—10OCT97

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following oils are preferred:


- John Deere Hy-Gard™
- John Deere Low Viscosity Hy-Gard™

Other oils may be used if they meet one of the following:

- John Deere Standard JDM J20C
- John Deere Standard JDM J20D

OUC0002,0005875-19-13JUN18

Check Oil

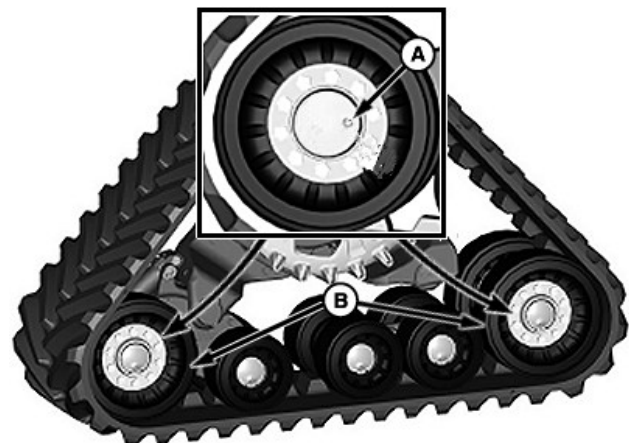

H133714—UN—16MAR21

A—Drain Plug
B—Idler Hub (2 used)


CAUTION: Avoid burn injury. Wear protective gloves or allow components time to cool. Bogie wheels, idler wheels, and rubber track belt normally operate at high temperatures and can be hot to touch.

NOTE: Check oil *ONLY* on the outer idler hub since the oil sump is common between the outer and inner idler hubs.

Clean area around drain plugs before removing.

Catch any oil in a clean container.

1. Drive the machine forward or backward so the drain plug (A) on one of the outer idler hubs (B) is in the three or nine o'clock position.
2. Remove drain plug and verify that the oil level is at the bottom of the hole opening. Add oil as required.
3. Install drain plug.
4. Repeat steps for the other idler hub.

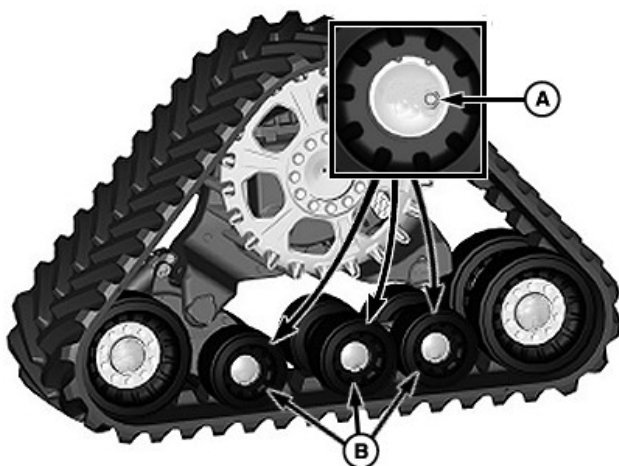

A—Drain Plug
B—Bogie Hub (3 used)


H133715—UN—16MAR21

NOTE: Check oil *ONLY* on the outer bogie hub since the oil sump is common between the outer and inner bogie hubs.

5. Drive the machine forward or backward so the drain plug (A) on one of the outer bogie hubs (B) is in the three or nine o'clock position.
6. Remove drain plug and verify that the oil level is at the bottom of the hole opening. Add oil as required.
7. Install drain plug.
8. Repeat steps for the other bogie hubs.

OOU6075,000503E-19-14MAY21

Change Oil

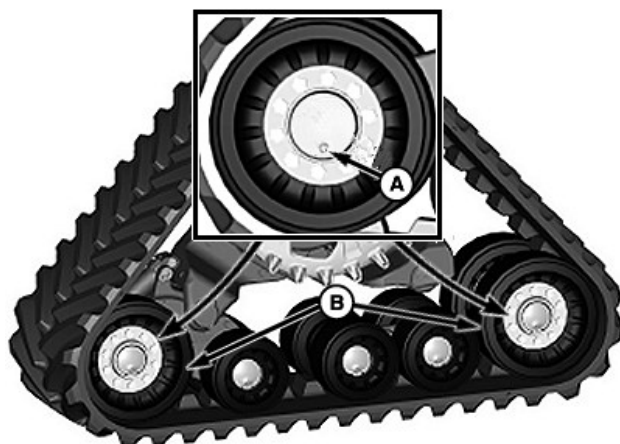

H122234—UN—24OCT17

A—Drain Plug
B—Idler Hub (2 used)

CAUTION: Avoid burn injury. Wear protective gloves or allow components time to cool. Bogie wheels, idler wheels, and rubber track belt normally operate at high temperatures and can be hot to touch.

NOTE: Change oil *ONLY* on the outer idler hubs since the oil sump is common between the outer and inner idler hubs.

Clean area around the drain plugs before removing.

Catch any oil in a clean container.


1. Drive the machine forward or backward so the drain plug (A) on one of the outer idler hubs (B) is at the bottom.
2. Remove drain plug and drain oil.
3. Drive the machine forward or backward so the same drain plug is in the three or nine o'clock position.
4. Fill to specification using Hy-Gard™ oil.

Specification

Idler Hub—Capacity. 0.8 L
(0.85 qt)

5. Install drain plug.
6. Repeat steps for the other idler hub.

Hy-Gard is a trademark of Deere & Company

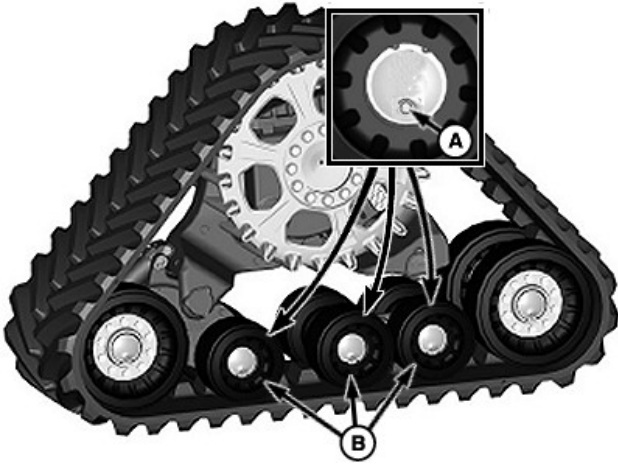

A—Drain Plug
B—Bogie Hub (3 used)

H122253—UN—24OCT17

NOTE: Change oil *ONLY* on the outer bogie hubs since the oil sump is common between the outer and inner bogie hubs.

7. Drive the machine forward or backward so the drain plug (A) on one of the outer bogie hubs (B) is at the bottom.
8. Remove drain plug and drain oil.
9. Drive the machine forward or backward so the same drain plug is in the three or nine o'clock position.
10. Fill to specification using Hy-Gard™ oil.

Specification

Bogie Hubs—Capacity. 0.8 L
(0.85 qt)

11. Install drain plug.
12. Repeat steps for the other bogie hubs.

OUO6075,000503F-19-14MAY21

Specifications


Track Specifications		
Load Capacity	22 650 kg (49 935 lb)	
Weight	60.9 cm (24 in)	2710 kg (5975 lb)
	76.2 cm (30 in)	2840 kg (6262 lb)
	91.4 cm (36 in)	3000 kg (6615 lb)
Rolling Circumference	6032 mm (238 in)	

Capacities		
Idler Hubs	0.8 L (0.85 qt)	
Bogie Hubs	0.8 L (0.85 qt)	
Oil Type	Hy-Gard™ Oils Meeting John Deere Standard JDM J20C	

Hy-Gard is a trademark of Deere & Company

OUO6075,0005040-19-14MAY21

Track Module Dimensions

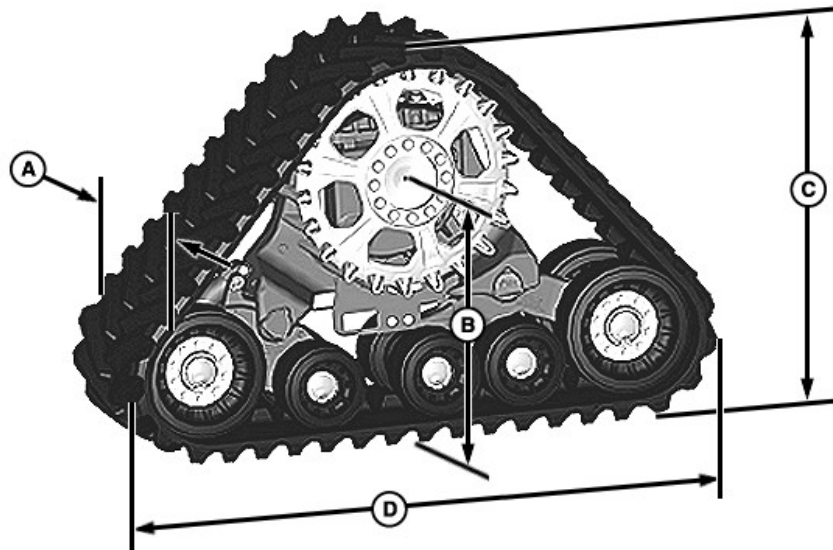

H122256—UN—19OCT17

Legend	Dimension
A	60.9 cm (24 in)
	76.2 cm (30 in)
	91.4 cm (36 in)
B	1165 mm (46 in)
C	18 111 mm (71 in)
D	2767 mm (109 in)

OUO6041,0000CF8-19-05DEC17

Combine Dimensions

NOTE: Dimensions are approximate and subject to change without notice.


Legend	Dimension
A	11.02 m (36 ft 2 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 11.72 m (38 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 11.98 m (39 ft 4 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 12.46 m (40 ft 11 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
B	9.14 m (30 ft 0 in) with 6.9 m (22 ft 6 in) Power Fold Auger 9.93 m (32 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Auger
C	8.52 m (27 ft 11 in)
D	4.91—4.99 m (16 ft 1 in—16 ft 5 in) with 10 572 L (300 bu) Covers 3.92—3.99 m (12 ft 10 in—13 ft 1 in) with 14 096 L (400 bu) Covers
E	4.61—4.84 m (15 ft 2 in—15 ft 11 in) Clean Grain Loading Auger with 10 572 L (300 bu) Extensions 4.77—4.85 m (15 ft 8 in—15 ft 11 in) Clean Grain Loading Auger with 14 096 L (400 bu) Extensions
F	4.30—4.39 m (14 ft 1 in—14 ft 5 in) with 10 572 L (300 bu) Extensions 4.57—4.65 m (15 ft 0 in—15 ft 3 in) with 14 096 L (400 bu) Extensions
G	4.04—4.13 m (13 ft 3 in—13 ft 7 in)
H	3.96—4.04 m (13 ft 0 in—13 ft 3 in)
I	0.63—0.76 m (2 ft 1 in—2 ft 6 in)
J	3.53 m (11 ft 7 in)
K	7.66 m (25 ft 2 in) with 6.9 m (22 ft 6 in) Rigid Unloading Auger 7.67 m (25 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 8.97 m (29 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 8.72 m (28 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 9.42 m (30 ft 11 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
L	5.23—5.33 m (17 ft 2 in—17 ft 6 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 5.48—5.58 m (18 ft 0 in—18 ft 4 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 5.42—5.52 m (17 ft 9 in—18 ft 1 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 5.59—5.69 m (18 ft 4 in—18 ft 8 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
M	4.51—4.62 m (14 ft 10 in—15 ft 2 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 4.61—4.71 m (15 ft 2 in—15 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 4.32—4.65 m (14 ft 2 in—15 ft 3 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 4.72—4.82 m (15 ft 6 in—15 ft 10 in) with 8.7 m (28 ft 6 in) Unloading Auger
N ^a	4.58—4.69 m (15 ft 0 in—15 ft 5 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 4.91—5.01 m (16 ft 1 in—16 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 4.84—4.95 m (15 ft 11 in—16 ft 3 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 5.02—5.12 m (16 ft 6 in—16 ft 10 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
O ^b	3.70—4.14 m (12 ft 1 in—13 ft 6 in) Rear Tires
P ^b	3.46 m (11 ft 4 in) without Axle Extensions 60.9 cm (24 in) Tracks 3.59 m (11 ft 7 in) with 65 mm (2-1/2 in) Axle Extensions 60.9 cm (24 in) Tracks 3.75 m (12 ft 3 in) with 65 mm (2-1/2 in) Axle Extensions 76.2 cm (30 in) Tracks 4.40 m (14 ft 4 in) with 394 mm (15-1/2 in) Axle Extensions 76.2 cm (30 in) Tracks 4.54 m (14 ft 9 in) with 394 mm (15-1/2 in) Axle Extensions 91.4 cm (36 in) Tracks

^aDimension is measured 1.22 m (4 ft) from the grain spill point. This represents the unloading auger when centered over the grain cart.


^bDue to the different tire configurations, row spacings, axle configurations, wheel offsets, axle positions, and spindles types, machine widths will vary. Measurements given in chart are for minimum and maximum widths. For more detailed width information, see your John Deere dealer.

OUO6075,0004EBC-19-07JUL20

Dimension Reference Points

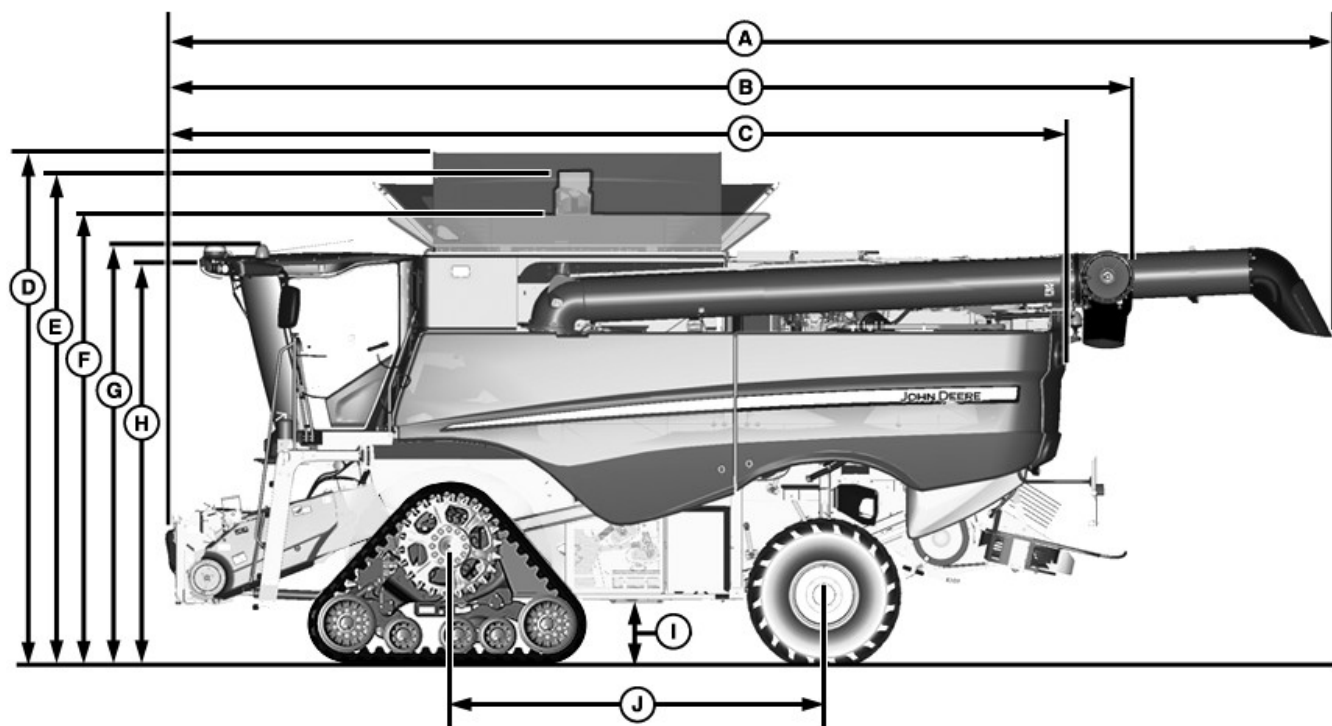

H122741—UN—14NOV17

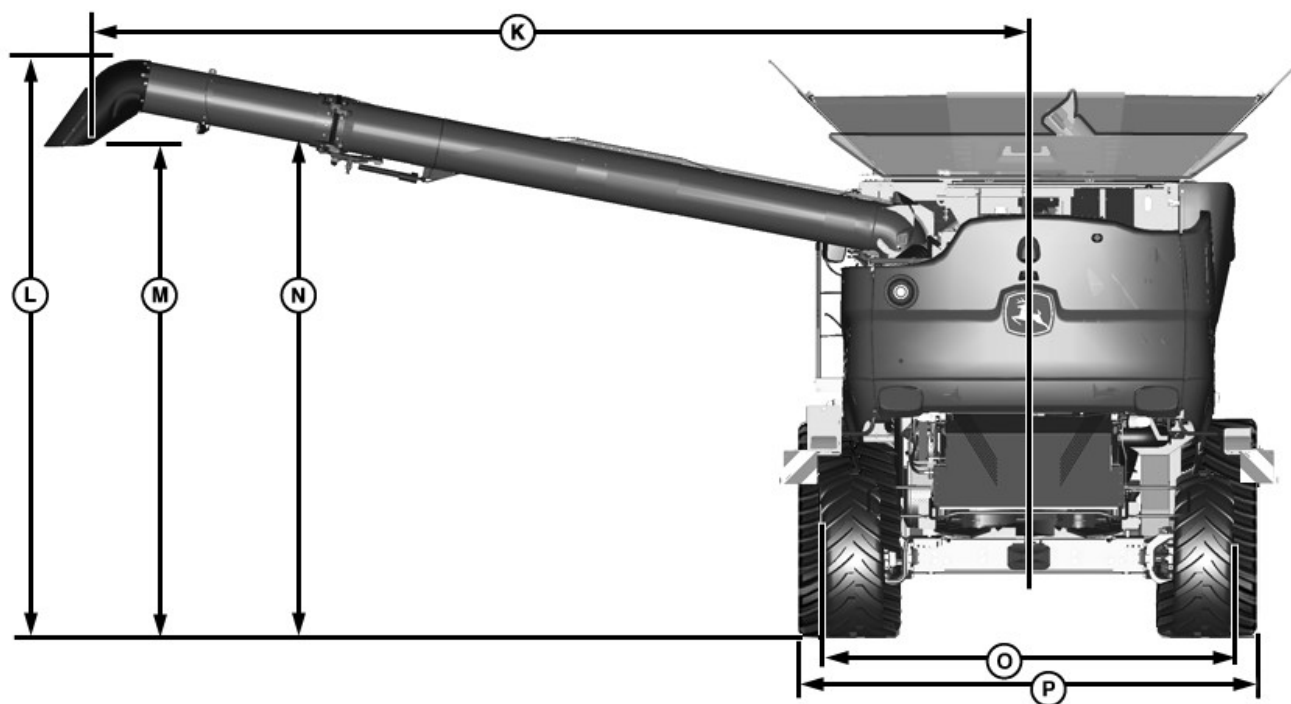

OUC6041,0000CF5-19-13JUN18

H122742—UN—14NOV17

EC Declaration Of Incorporation Of Partly Completed Machinery

EC DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

DIRECTIVE 2006/42/EC, Appendix 2, Part B

Manufacturer:

Soucy International Inc.
5450 rue St-Roch

Drummondville (Quebec) J2B 6W3
CANADA

Technical Contact:

Ryan Black
46 Heralds Close
Wildnes
WA88AS
ENGLAND

Declaration:

Soucy International Inc. hereby certifies that its agricultural track system GTS fulfill all the relevant provisions of the Machinery Directive 2006/42/EC as a partly completed machinery. The system may not be put into service before machinery in which it will be incorporated is declared to comply to the machinery directive 2006/42/EC, Appendix 2, part A.

Signed at Drummondville, July 1, 2020



Julie Tremblay

H122667—UN—26OCT17
Engineering Manager, Agricultural

OUO6075,0004EB3-19-06JUL20

UK Declaration Of Incorporation Of Partly Completed Machinery

UK DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

MACHINERY DIRECTIVE S.I. 2008/1597

Manufacturer:

Soucy International Inc.
5450 rue St-Roch
Drummondville (Quebec) J2B 6W3
CANADA


Technical Contact:

Ryan Black
46 Heralds Close
Widnes, WA88AS
ENGLAND

Declaration:

Soucy International Inc. hereby certifies that its agricultural track system GTS fulfill all the relevant provisions of the Machinery Directive S.I. 2008/1597 as a partly completed machinery. The system may not be put into service before machinery in which it will be incorporated is declared to comply to the machinery directive S.I. 2008/1597.


Signed at Drummondville, May 27th, 2021

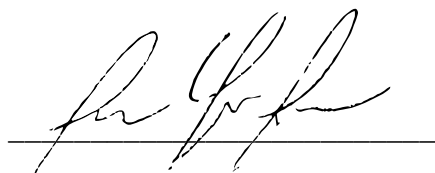


Pierre-Yves Pépin
Engineering manager, Agricultural

H134553—UN—27MAY21
OUO6075,0005151-19-27MAY21

Track Identification Plates

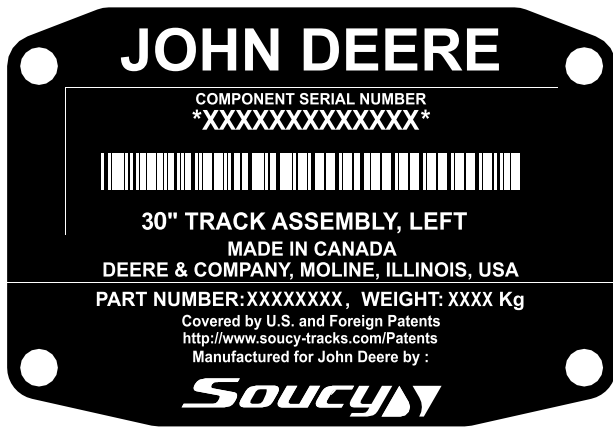

H122614—UN—14NOV17
Sample Identification Plate (Left-Hand Track)


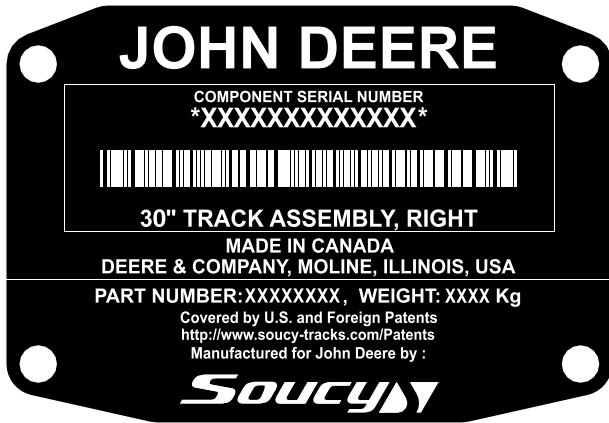


H122615—UN—14NOV17
Sample Identification Plate (Right-Hand Track)

NOTE: 76.2 cm (30 in) track serial number plate shown.
60.9 cm (24 in) and 91.4 cm (36 in) track serial
number plates are similar.

OOU6041,0000CFA-19-05DEC17

Identification Plate Location

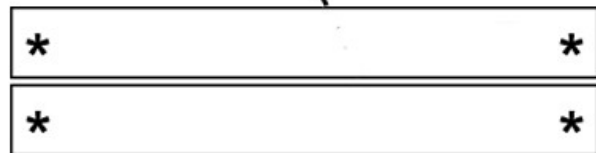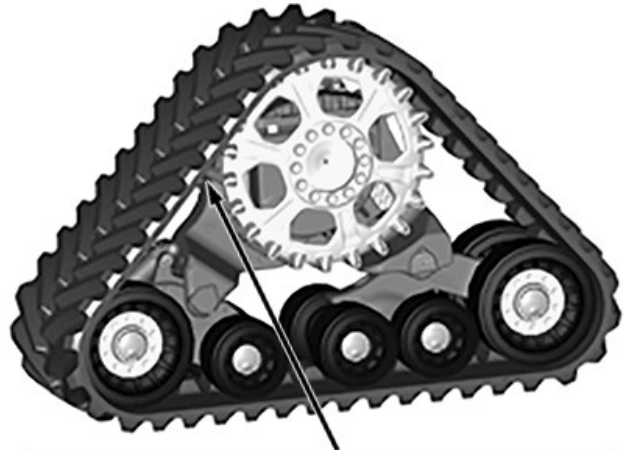

H122290—UN—06SEP17
Located on inside of each track module.

OOU6041,0000C3C-19-25AUG17

Fire Prevention

Recommended Fire Preventions

The machine must be inspected periodically throughout the harvest day. Buildup of crop material and other debris must be removed to ensure proper machine function and to reduce the risk of fire.

Regular and thorough cleaning of machine combined with other routine maintenance procedures listed in the Operator's Manual greatly reduces the risk of fire, chance of costly downtime, and improve machine performance.

Always follow all safety procedures posted on the machine and in the Operator's Manual. Before carrying out any inspection or cleaning, always shut OFF engine, set park brake, and remove key.

Your machine is equipped with a general-purpose powder fire extinguisher and a pressurized liquid fire extinguisher. Extinguishers must be checked daily when entering or exiting the cab and when working around machine to ensure that they are in working condition. Fire extinguishers must be replaced or professionally serviced after any usage.

For further information, refer to Machine Cleanout section.

OUO6075,00042AA-19-15JUN16

Fire Extinguisher Operation

Your machine is equipped with a general-purpose powder fire extinguisher and a pressurized liquid fire extinguisher. Extinguishers must be checked daily when entering or exiting the cab and when working around the machine to ensure that they are in working condition. Fire extinguishers must be replaced or professionally serviced after any usage.

Fire Extinguisher Recommendations


IMPORTANT: Read label on extinguishers and become familiar with instructions and restrictions to use them.

General-Purpose Powder Fire Extinguisher:

- Use the extinguisher for grease, oil, electrical, and chemical fires.

Pressurized Liquid Fire Extinguisher:

- Use the extinguisher on crop material buildup or crop debris fires.

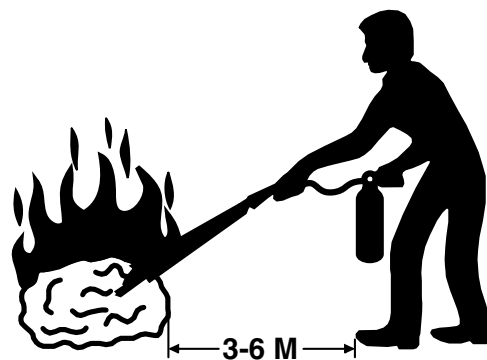

H132365—UN—12NOV20

Use of a Fire Extinguisher

The diagram shows the recommended method to extinguish a fire. Always aim the nozzle towards the base of fire.

The following are basic steps for the use of a fire extinguisher:

1. Remove fire extinguisher from the bracket and carry to area of fire.
2. Approach area of fire with wind to your back.
3. Pull safety pin from top of extinguisher.
4. Hold extinguisher upright by handles and aim hose at the **base** of flames.
5. Squeeze handles to discharge fire extinguisher.
6. Move nozzle back and forth, covering flames with a cloud of powder.

Inspection Checklist

At least once per month, inspect fire extinguishers and ensure the following:

1. Are fire extinguishers positioned in designated location on the cab ladder landing and at the rear of machine?
2. Are there any obstructions to proper access or visibility?
3. Are operating instructions on nameplate legible and facing outward?
4. Are safety seals broken or missing?
5. Is extinguisher full? (Determines by weighing or "hefting")
6. Is there any physical damage, corrosion, leakage, or a clogged nozzle?
7. Are fire extinguisher bracket straps in good condition?
8. Are fire extinguisher bracket straps tight on the fire extinguisher?

When inspection of the fire extinguisher reveals a deficiency, extinguisher must be serviced or replaced.

OUO6075,0004F79-19-12NOV20

Charge Liquid Fire Extinguisher (Europe, Australia, and New Zealand) (If Required)



H117901—UN—28MAR16

NOTE: Liquid fire extinguisher may be shipped uncharged. Prior to delivery of machine the liquid fire extinguisher must be charged.

When an antifreeze charge is used to freeze protect extinguisher, a complete discharge and maintenance is required.

Fire extinguisher shown may vary depending on country requirements and fire extinguisher manufacturers.

CAUTION: Before attempting to recharge, ensure that extinguisher is completely depressurized.

1. Refer to information provided with the fire extinguisher to properly fill and charge.
2. Install fire extinguisher on the machine.

OUO6075.0004A04-19-28JUN18

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.


Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.

Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1-19-12OCT11

Prepare for Emergencies

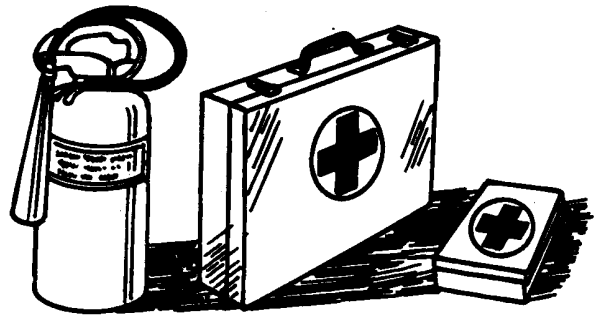

TS291—UN—15APR13

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

Handle Fuel Safely—Avoid Fires



TS202—UN—23AUG88

Handle Starting Fluid Safely



TS1356—UN—18MAR92

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.

DX,FIRE3-19-14MAR14

Remove Accumulated Crop Debris



TS227—UN—15APR13

The build up of chaff and crop debris in the engine compartment, on the engine, and near moving parts is a fire hazard. Check and clean these areas frequently. Before performing any inspection or service, shut off the engine, set the parking brake and remove the key.

HX,9010SA,B-19-23AUG97

Fire Extinguisher (Europe)



H92841—UN—16SEP08

General-Purpose Powder / Liquid Fire Extinguisher

CAUTION: Fire extinguishers must meet local government laws and regulations:

- A general-purpose powder fire extinguisher that is at least 6 kg (13 lb)
- A pressurized liquid fire extinguisher (if equipped) with minimum volume of 8 L (2.1 gal)

NOTE: Fire extinguishers shown may vary depending on country requirements and fire extinguisher manufacturers.

A general-purpose powder fire extinguisher and a pressurized liquid fire extinguisher with mounting brackets are installed on your machine.

Read label on extinguishers and become familiar with instructions on how to use and maintain them. Once extinguisher is discharged, no matter for how long, it must be recharged or replaced.

IMPORTANT: Pressurized liquid fire extinguisher must not be exposed to freezing temperatures unless protected with antifreeze. See instructions decal on extinguisher for further information.

OUC6075,00042F6-19-20JUN16

Fire Extinguishers (Australia and New Zealand)



H117754—UN—17MAR16

General-Purpose Powder / Liquid Fire Extinguisher

CAUTION: Fire extinguishers must meet local government laws and regulations:

- A general-purpose powder fire extinguisher that is at least 4 kg (10 lb)
- A pressurized liquid fire extinguisher with minimum volume of 8 L (2.1 gal)

NOTE: Fire extinguishers shown may vary depending on country requirements and fire extinguisher manufacturers.

A general-purpose powder fire extinguisher and a pressurized liquid fire extinguisher with mounting brackets are installed on your machine.

Read label on extinguishers and become familiar with instructions on how to use and maintain them. Once extinguisher is discharged, no matter for how long, it must be recharged or replaced.

IMPORTANT: Pressurized liquid fire extinguisher must not be exposed to freezing temperatures unless protected with antifreeze. See instructions decal on extinguisher for further information.

OUC6075.00042F7-19-20JUN16

Fire Extinguishers (Eurasian Economic Union)



H117754—UN—17MAR16

General-Purpose Powder / Liquid-Foam Combination Fire Extinguisher

CAUTION: Fire extinguishers must meet local government laws and regulations:

- A general-purpose powder fire extinguisher that is at least 6 kg (13 lb)
- A pressurized liquid-foam combination fire extinguisher with minimum volume of 8 L (2.1 gal)

NOTE: Fire extinguishers shown may vary depending on country requirements and fire extinguisher manufacturers.

A general-purpose powder fire extinguisher and a pressurized liquid-foam combination fire extinguisher with mounting brackets are installed on your machine.

Read label on extinguishers and become familiar with instructions on how to use and maintain them. Once extinguisher is discharged, no matter for how long, it must be recharged or replaced.

IMPORTANT: Pressurized liquid-foam combination fire extinguisher must not be exposed to freezing temperatures. See instructions decal on extinguisher for further information.

OUC6075.00049FE-19-28JUN18

Fire Extinguisher Locations



H123653—UN—02MAR18

Front Fire Extinguisher Location



H123654—UN—02MAR18

Rear Fire Extinguisher Location

NOTE: Fire extinguishers shown may vary depending on country requirements and fire extinguisher manufacturers.

A general-purpose fire extinguisher is on the front ladder platform.

A pressurized liquid fire extinguisher (if equipped) is on the inside of the right-hand rear engine access door.

OOU6075,0004911-19-02MAR18

In Case of Fire



TS227—UN—15APR13

⚠ CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations.

Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.


Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:

1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

DX,FIRE4-19-22AUG13

Cleaning Engine Compartment

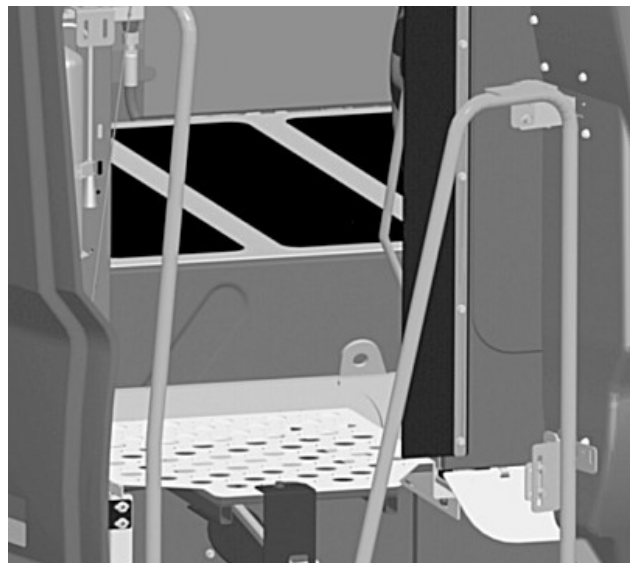

H95319—UN—11FEB10

 **CAUTION:** Do not clean engine or engine compartment with engine running. Dirt, oil, chaff, and crop debris in engine compartment and on engine is a fire hazard. Direction of wind, type of crop and its moisture content can all have an effect on where and how much chaff and debris accumulate. Check and clean this area frequently.

OUO6075,0000575-19-17MAR10

Machine Cleanout

General Cleaning Guidelines

Machine must be inspected periodically throughout the harvest day. Buildup of crop material and other debris must be removed to ensure proper machine function and to reduce the risk of fire. Frequency of inspections and cleanings will vary depending on a number of factors, including operating conditions, machine settings, crop conditions, operating speeds, and weather conditions. Inspections and cleanings may be required multiple times throughout the harvest day, particularly in dry, hot, and windy conditions.

IMPORTANT: Regular and thorough cleaning of machine combined with other routine maintenance procedures listed in the Operator's Manual greatly reduce the risk of fire, chance of costly downtime, and improve machine performance.

Crop material and other debris can accumulate in various areas. Direction of wind, type of crop, and crop moisture content can all impact where and how much crop material and debris can accumulate. Be aware of harvest conditions and adjust your cleaning schedule to ensure proper machine function and to reduce the risk of fire. Inspect and clean these areas as needed throughout the harvest day.

Harvesting certain crops can cause special issues. Some crops are very “sticky” and it is often more difficult to clean the machine when harvesting these crops. Examples of these crops include sunflower, canola, and safflower. Take special care in cleaning the machine when harvesting these crops.

Always follow all safety procedures posted on the machine and in the Operator's Manual. Before carrying out any inspection or cleaning, always shut OFF engine, set parking brake and remove key.

OUO6075,0001167-19-21JUN12

Quick Response (QR) Code



H129714—UN—01APR20
English QR Code



H129715—UN—01APR20
French QR Code



H129716—UN—01APR20
German QR Code



H129717—UN—01APR20
Spanish QR Code

At the top of the Cleaning Guide is a Quick Response (QR) code that links to a short instructional Cleaning Guide video. Access content from the QR code by downloading a QR scanner application to your smart phone. Open the App and aim your phone's camera at the code to connect to the media.

OUO6075,0004DE7-19-01APR20

Cleaning Out Machine (Periodic Cleanout)

The photographs in this section show areas of the machine that require regular inspection and cleaning. While there are other areas that require regular cleaning, frequent attention to these areas provides the greatest impact on fire prevention.

Some of these photographs show accumulations of crop material and other debris prior to cleaning. This type of accumulation is not normal; it was allowed for illustrative purposes only.

IMPORTANT: These areas may require more frequent cleaning, even multiple times per day, depending on harvest conditions. Be aware of harvest conditions and adjust your cleaning schedule to ensure proper machine function and to reduce the risk of fire.

Other areas not covered in this section may also collect crop debris and MUST be cleaned periodically for machine function and appearance. Thoroughly inspect the entire machine on a regular basis throughout the harvest season.


Always follow all safety procedures posted on the machine and in the Operator's Manual. Before carrying out any inspection or cleaning, always shut OFF engine, set park brake, and remove key.

Thoroughly clean machine from top to bottom with compressed air. First, clean all areas accessible from the engine deck. Start with engine compartment and work outwards and counterclockwise to other areas around engine compartment, floor underneath engine, top rear of rotor, and rear deck, including areas around exhaust aftertreatment enclosure (if equipped). Once top areas of machine are clean, proceed to cleaning areas accessible from the ground level.


From the ground level, clean rear underside of fuel tank area and top of the rear tailboard of the residue disposal system. Exhaust aftertreatment enclosure area (if equipped) will also need to be cleaned from the ground level. Once the cleaning from the ground level is finished, recheck engine compartment for any crop debris that could have blown in from the ground level cleaning.

NOTE: Some shields were removed for photo clarity.

Engine Compartment (Top Areas)

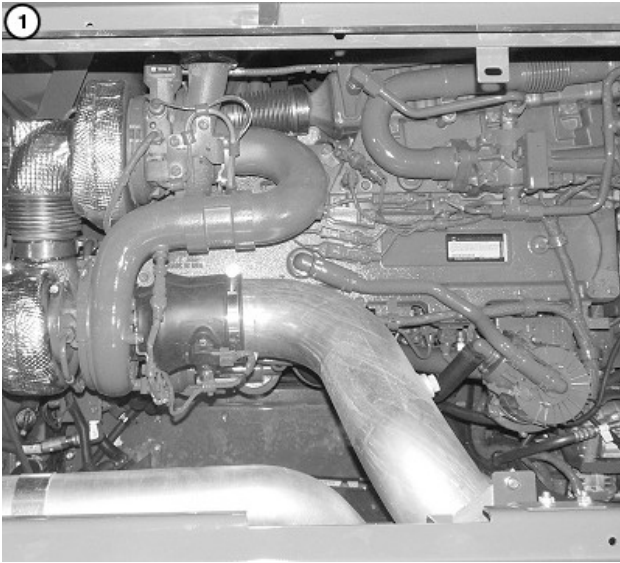


H116932—UN—09MAY16

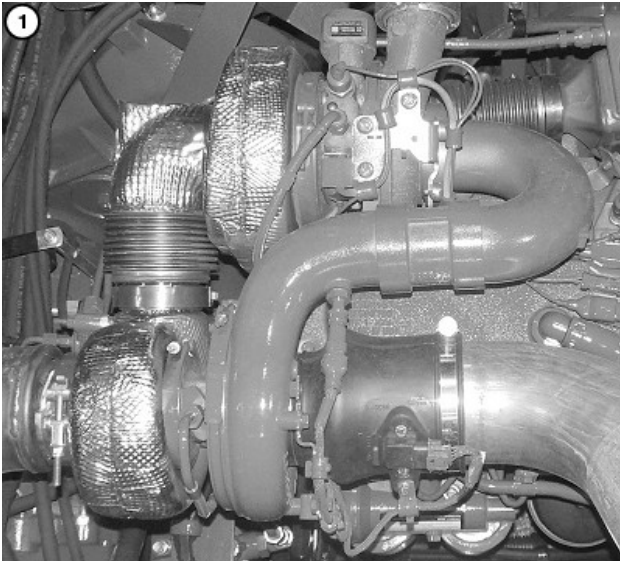


H116933—UN—09MAY16

(1) — Top Area of Engine and Turbochargers

Engine Compartment (Top Areas)

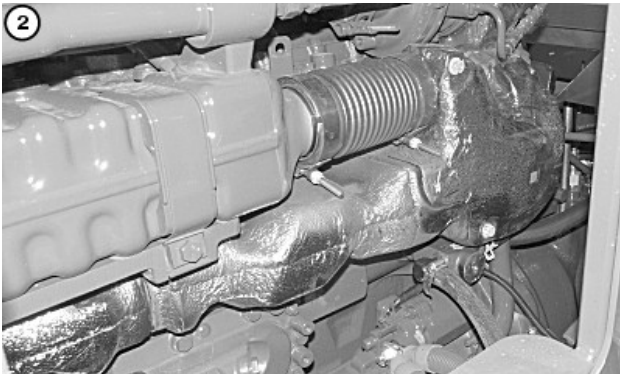

H116934—UN—09MAY16

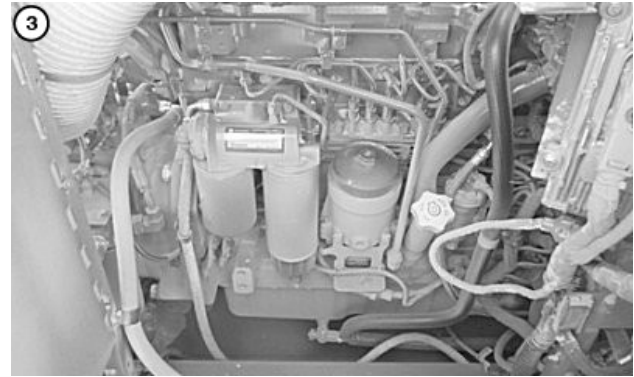

H105226—UN—02MAY12


(2) — Exhaust Manifold and Manifold Shield, Turbo Interstage Tube, Exhaust Gas Recirculation (EGR) Cooler Tube

(3) — Around Engine

Engine Compartment (Top Areas)



H108963—UN—29AUG13

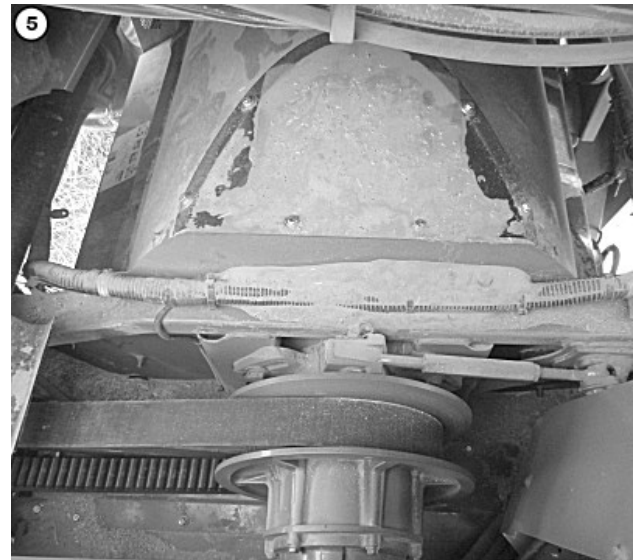


H108986—UN—29AUG13


(4) — Underneath Engine

(5) — Top Rear of Rotor and Areas around Rotor Drive

Engine Compartment (Top Areas)

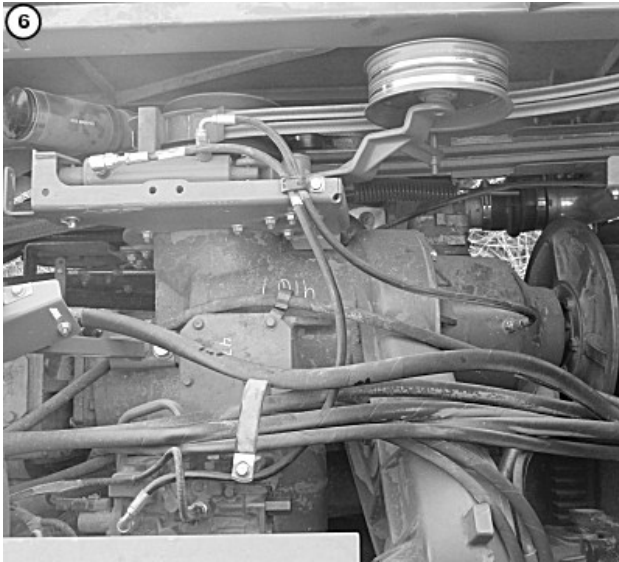

H108987—UN—29AUG13

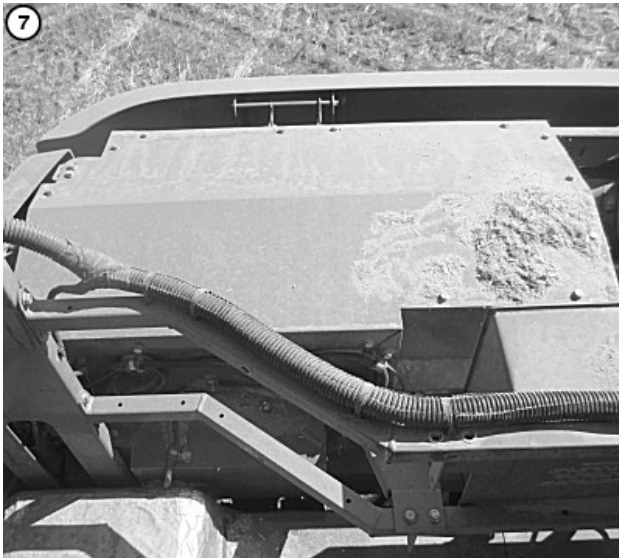

H108988—UN—29AUG13



H134391—UN—12MAY21


(6) — Main Engine Gear Case

(7) — Areas around and under Exhaust Muffler or Aftertreatment

Engine Compartment (Top Areas)



H108990—UN—29AUG13

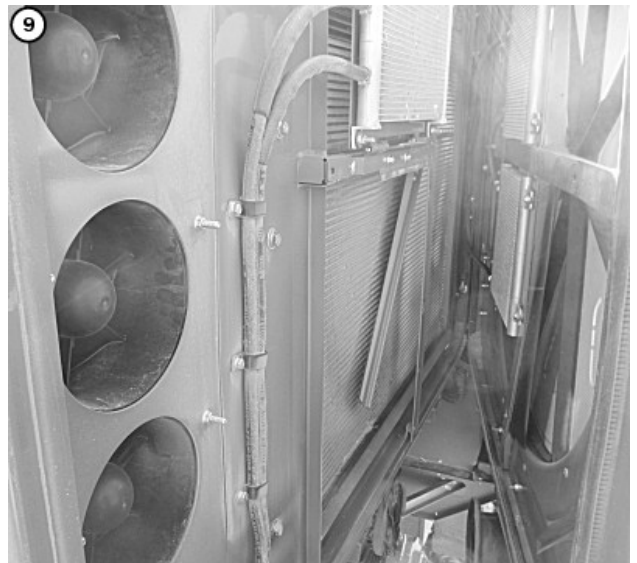

H108989—UN—29AUG13

(8) — On Top of Fuel Tank

(9) — Engine Cooling Package

Ground Accessible (Bottom Areas)



H100574—UN—20JUN11




H105229—UN—19APR12

(1) — Underneath Fuel Tank

(2) — Areas around Bearings and Bearing Guards (various locations)

Ground Accessible (Bottom Areas)

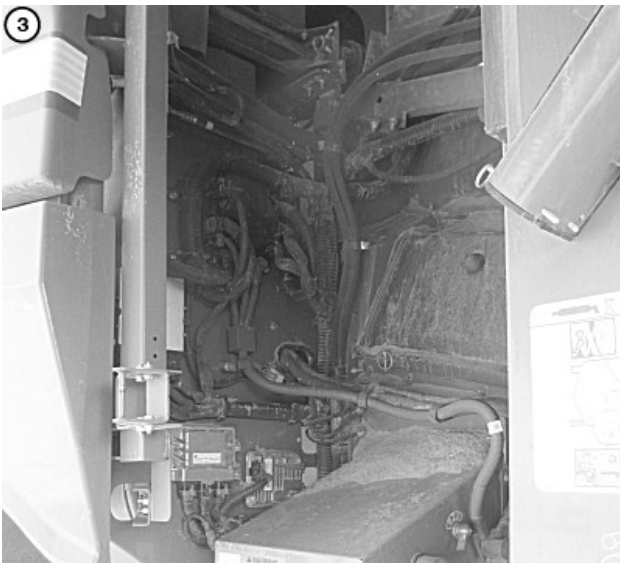

H108991—UN—29AUG13

Fuse Center (Style A)



H105230—UN—02MAY12

IMPORTANT: Lubrication decals show the different locations of grease points around the machine. Follow lubrication times provided on decals and refer to hour intervals listed in Lubrication and Maintenance section for further information.

Bearing failures or overheating can result in a fire. To reduce bearing failures or overheating, always refer to lubrication decals on machine.


(3) — Fuse Center and Battery Box Areas

(4) — Clean Grain Elevator Drives

Ground Accessible (Bottom Areas)



H105336—UN—02MAY12

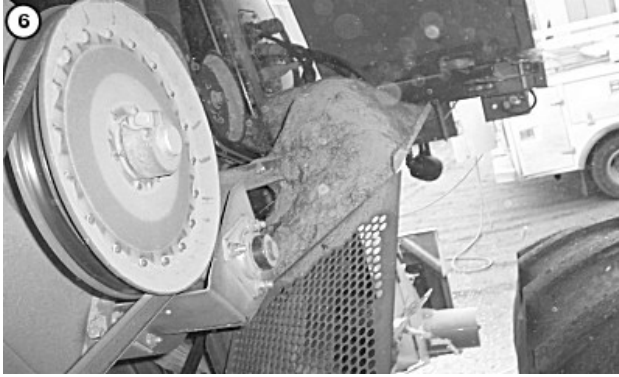

H105231—UN—02MAY12

(5) — Right Side Service Step Area

(6) — Right Side Mud Shields

Ground Accessible (Bottom Areas)



H105337—UN—02MAY12



H105338—UN—02MAY12

(7) — Right Side Feeder House Shields

(8) — Left Side Feeder House Shields

Ground Accessible (Bottom Areas)



H105232—UN—02MAY12



H134392—UN—12MAY21

(9) — Transmission


(10) — Service Step, Electrical Harnesses, Side Sheets, and Separator Areas

Ground Accessible (Bottom Areas)



H114749—UN—18JUN15

Fuse Center (Style B)

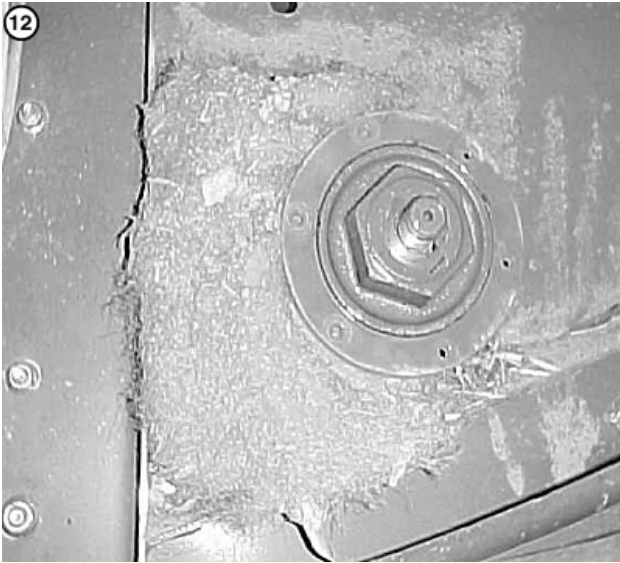

H105341—UN—02MAY12

(11) — Fuse Center and Battery Box Areas

(12) — Discharge Beater Drives


Ground Accessible (Bottom Areas)




H105233—UN—02MAY12

(13) — Left Side Rotor Area

Ground Accessible (Bottom Areas)

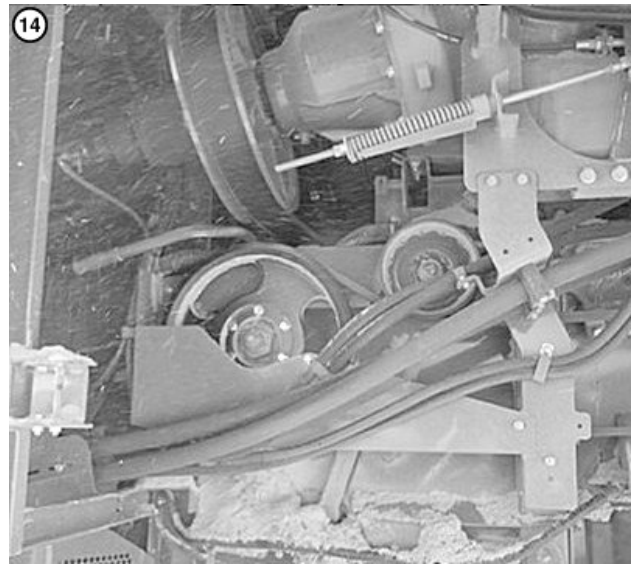

H105234—UN—02MAY12

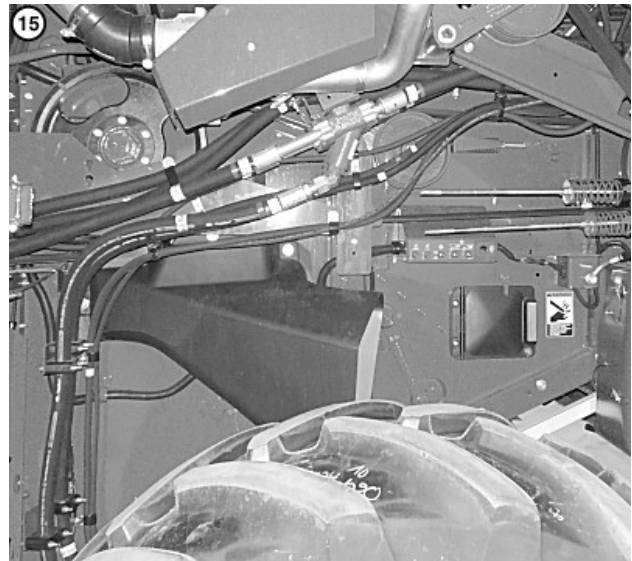

H118356—UN—09MAY16

(14) — Rotor Drives

(15) — Left Side Sheet Areas

Ground Accessible (Bottom Areas)



(16) — Residue Disposal Drives

H108951—UN—28AUG13

Ground Accessible (Bottom Areas)




(17) — Areas around and under Exhaust Aftertreatment Enclosure (if equipped)

H108993—UN—29AUG13

OUC6075,0005121-19-19MAY21

Cleaning Out Machine (Annual Cleanout and Specialty Crops)

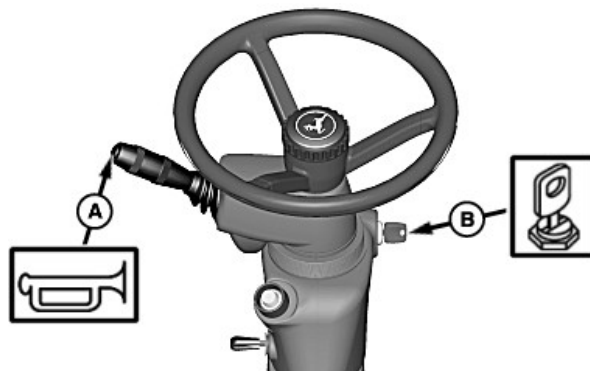

H97186—UN—02NOV10

A—Horn
B—Key Switch

CAUTION: To prevent injury, never clean machine with engine running and separator engaged. Shut OFF engine, set park brake, and remove key.

The following instructions are recommended when cleaning out machine for certified seed crops or when transporting machine inter-state.

CAUTION: Block header safely so it does not move. Lower reel safety stops.


1. Remove header from the machine.
2. Drive machine over end rows or bumps to jar and shake dirt loose.
3. Shut OFF engine, set park brake, and remove key.
4. Open or remove all doors and drain holes.

CAUTION: Sound horn (A) to clear everyone from area. Stay clear of machine when discharging chaff.

5. Turn key switch (B) to start engine.
6. Engage separator until the chaff stops coming out rear of machine.
7. Lower engine rpm to slow speed and engage separator several times. Running the separator at slow speed removes dirt from inside the rotor.

CAUTION: Keep bystanders clear of machine when discharging chaff.

8. Move throttle to high rpm and run for a few minutes. Repeat cycle until chaff no longer comes out of the rear of machine.

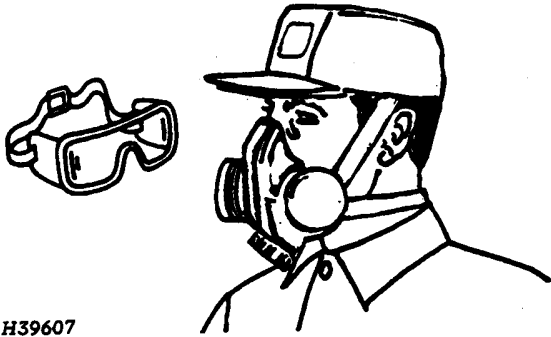


H39607

H39607—UN—11OCT88

CAUTION: Shut OFF engine, set park brake, remove key, block wheels, and lower the feeder house safety stop.


When working with compressed air in dusty conditions, you must wear goggles and dust mask for personal protection.

9. Start at the top of the machine and work down.

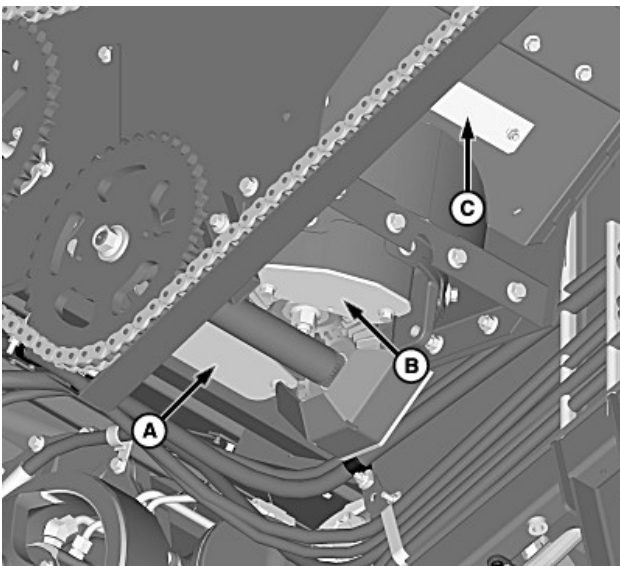

Style A

H125413—UN—30NOV18

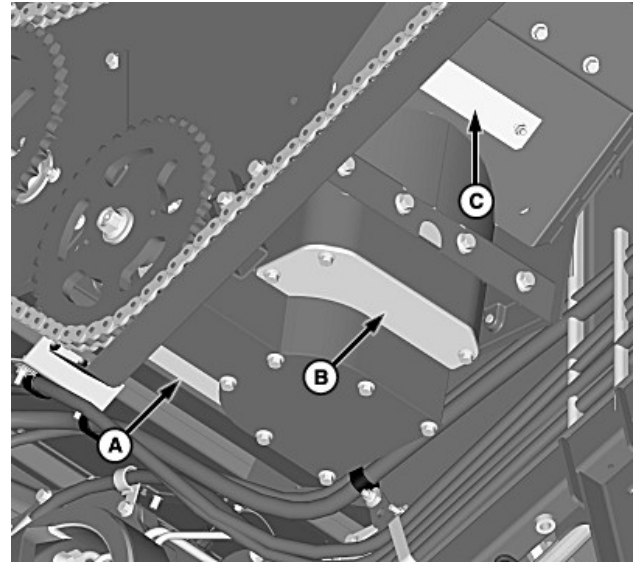


Style B

H125414—UN—30NOV18

A—Cleanout Door
B—Cleanout Door
C—Cleanout Door

10. Open cleanout doors (A—C) on the left-hand side of the machine.

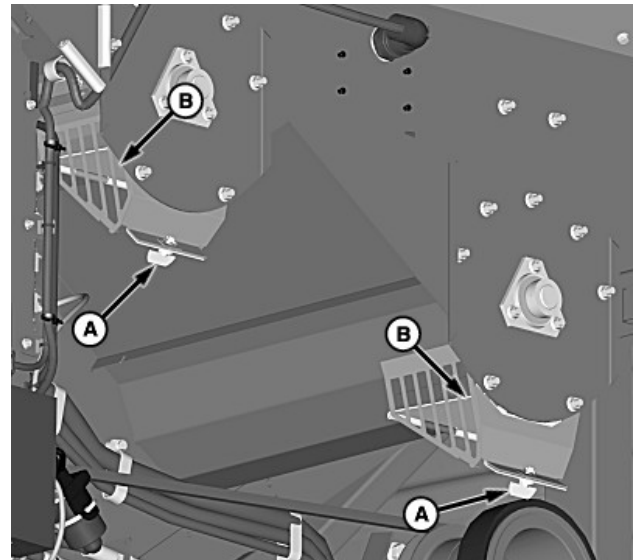


H125415—UN—30NOV18

A—Latch (2 used)
B—Cleanout Door (2 used)

11. Release latches (A) and open cleanout doors (B) on the right-hand end of both grain tank cross augers.
12. Clean grain from under the grain tank cross augers.
13. Clean grain from the edges of the unloading auger sump to the bottom. Grain must be cleaned out from the doors while standing on ground.
14. Depending on the machine option, clean the grain tank loading auger.

Grain Tank Loading Auger (Grain Tank Extensions)

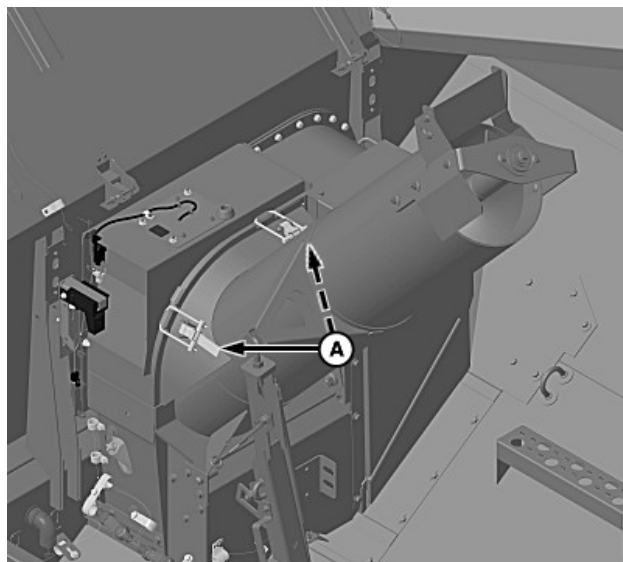


H123557—UN—21FEB18

A—Clamp

1. Release clamps (A) and lower auger.
2. Clean top area and down into the clean grain elevator to the clean elevator chain. Clean all sides.

Grain Tank Loading Auger (Grain Tank Covers)

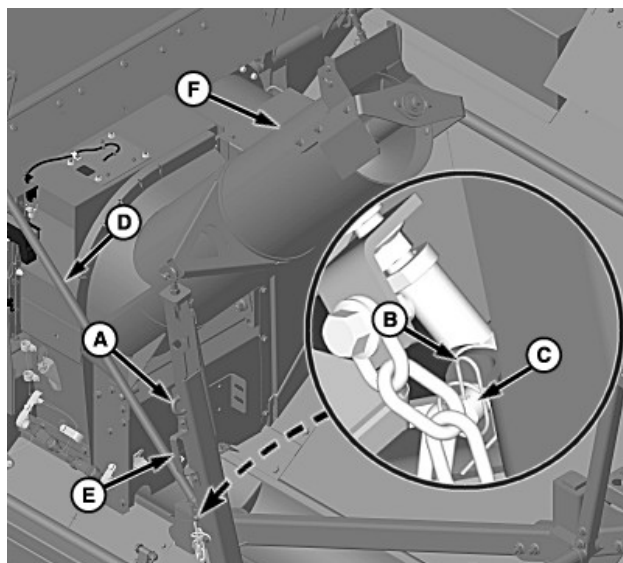


H123561—UN—21FEB18

- A—Pin
B—Quick-Lock Pin
C—Pin
D—Turnbuckle
E—Handle
F—Auger

CAUTION: DO NOT pull or remove pin (A) to lower grain tank loading auger. Removing pin could result in personal injury or machine damage.

The grain tank loading auger is heavy. Use extra care when raising or lowering auger.


1. Remove quick-lock pin (B) and pin (C) from turnbuckle (D).
2. Use the handle (E) to help in lowering the grain tank loading auger (F).
3. Clean top area and down into the clean grain elevator to the clean elevator chain. Clean all sides.

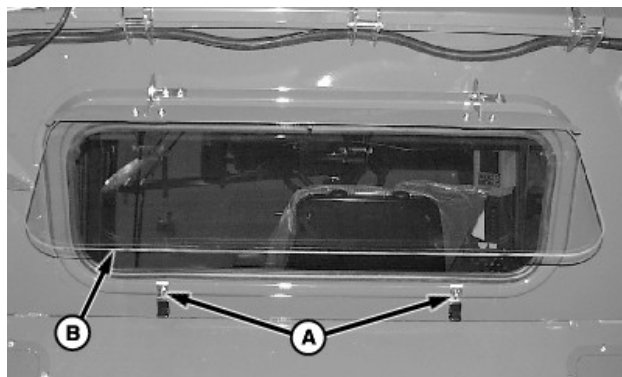

H76204—UN—28APR03

- A—Clamp (2 used)
B—Grain Tank Window


15. Loosen clamps (A) and swing grain tank window (B) up.
16. Clean out area behind cab, around the primary countershaft, and over separator.

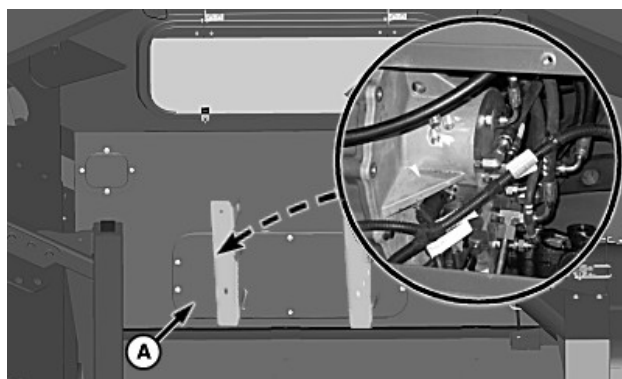

H113138—UN—06MAR15

A—Access Door


17. Remove access door (A) (if equipped) on the front of the grain tank.
18. Clean out material around the multi-speed feeder house drive gear case (if equipped).

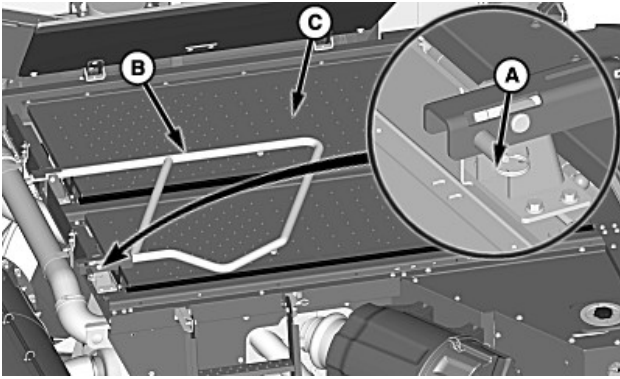

H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Engine Access Cover

19. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place.
20. Open engine access covers (C) and clean the top side of the engine compartment area and around the separator (front side of the engine).
21. Clean entire engine compartment area, especially under engine.
22. Wipe up any oil or grease found on engine area.

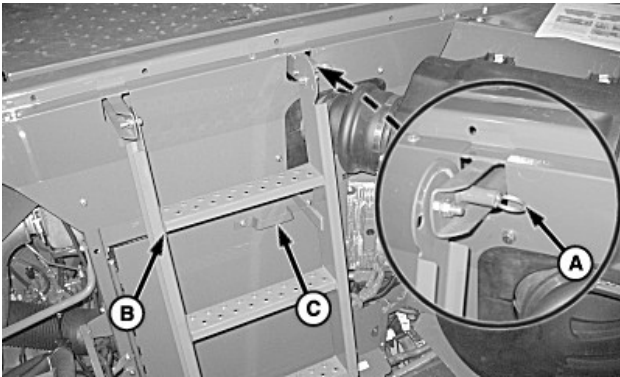


H95353—UN—25AUG10

A—Lockout Pin
B—Ladder
C—Cover

23. Pull lockout pin (A) and rotate ladder (B) up until ladder locks into place.
24. Pull filter access cover (C) open to release from magnet.
25. Clean rear side of engine compartment area.
26. Clean entire engine compartment area, especially under engine.
27. Wipe up any oil or grease found on engine area.
28. Depending on the machine option, clean the radiator and other various areas.

Tier 2/Stage II (Style A)

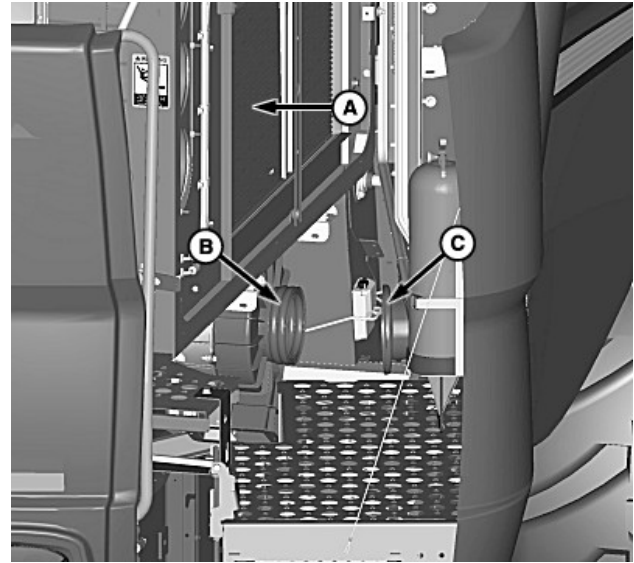


H106852—UN—08FEB13

A—Radiator
B—Vacuum Duct
C—Transfer Duct


NOTE: Clean areas out with compressed air, blowing from inside out.

1. Open rotary screen door.
2. Clean the following areas from inside out:
 - Radiator (A)
 - Condenser
 - Oil cooler
 - Charge air cooler
3. Clean out dirt from the lower vacuum duct (B) and transfer duct (C).

Tier 2/Stage II (Style B) and Final Tier 4/Stage V

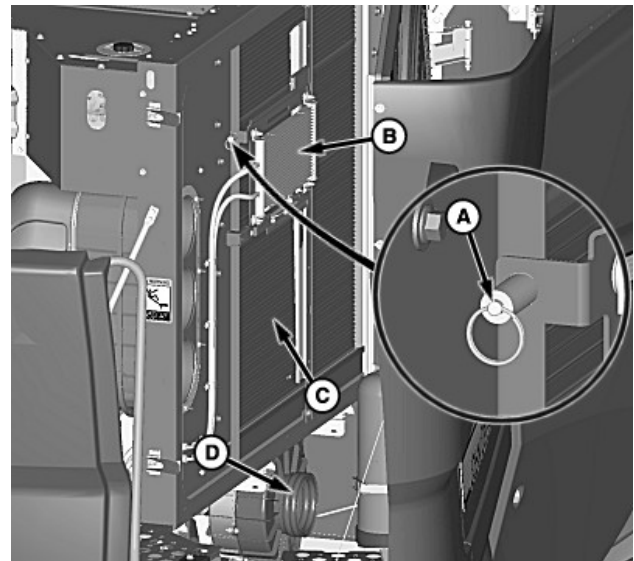

H106853—UN—08FEB13

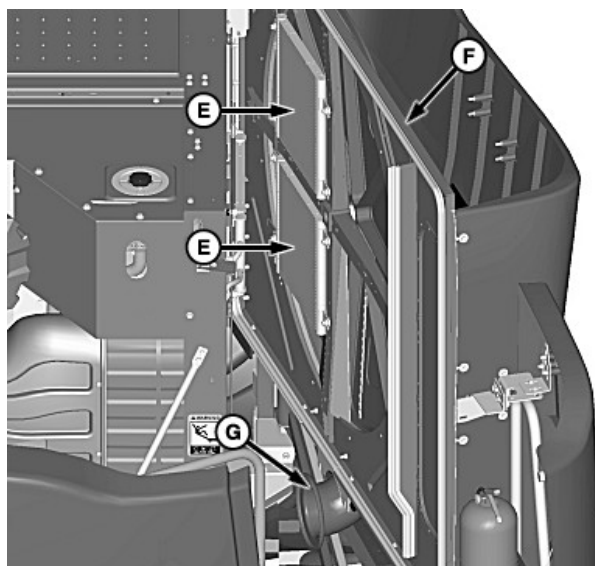


H106854—UN—08FEB13

- A—Lockout Pin
- B—Fuel Cooler
- C—Radiator
- D—Vacuum Duct
- E—Condenser
- F—Rotary Screen Door
- G—Transfer Duct


NOTE: Clean areas out with compressed air, blowing from inside out.

1. Open rotary screen door.
 2. Pull lockout pin (A) and rotate fuel cooler (B) to clean.
 3. Clean the following areas from inside out:
 - Radiator (C)
 - Oil cooler
 - Charge air cooler
 4. Clean out dirt from the lower vacuum duct (D).
 5. Clean condensers (E) on rotary screen door (F).
 6. Clean out dirt from the transfer duct (G).
29. Depending on the machine option, clean the clean grain elevator and tailings elevator areas.

Clean Grain Elevator and Tailings Elevator (Style A)

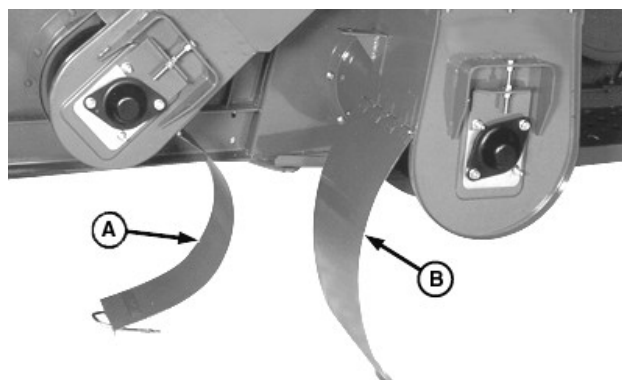

H62232—UN—19JAN00

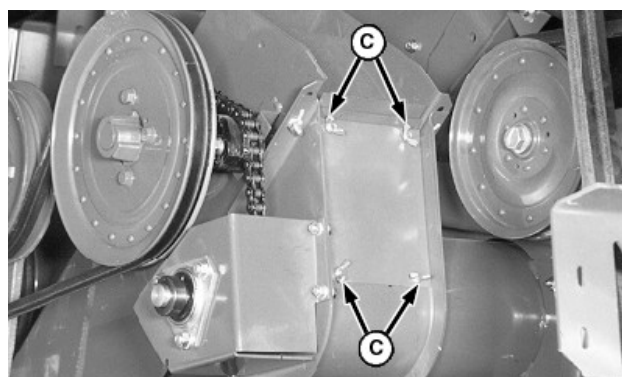


H62233—UN—19JAN00

- A—Tailings Elevator Door
- B—Clean Grain Elevator Door
- C—Wing Nut

1. Open lower tailings elevator door (A) and clean grain elevator door (B).
2. Remove wing nuts (C) and remove door at upper end of the tailings elevator.
3. Remove material as needed and clean sides of elevator.

Clean Grain Elevator and Tailings Elevator (Style B)

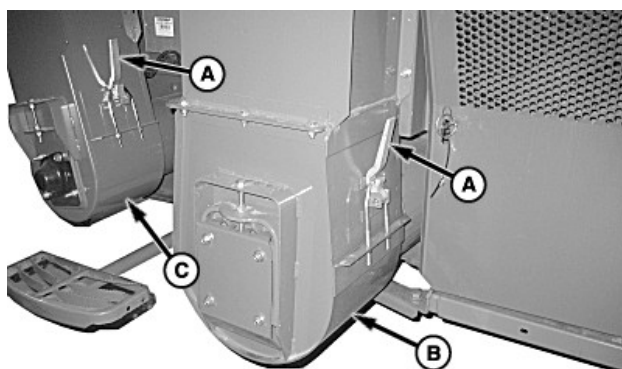


H97193—UN—30JUN10

- A—Handle
- B—Clean Grain Elevator Door
- C—Tailings System Elevator Door

1. Use handles (A) to open clean grain elevator door (B) and the tailings system elevator door (C).


2. Remove material as needed and clean sides of elevator.

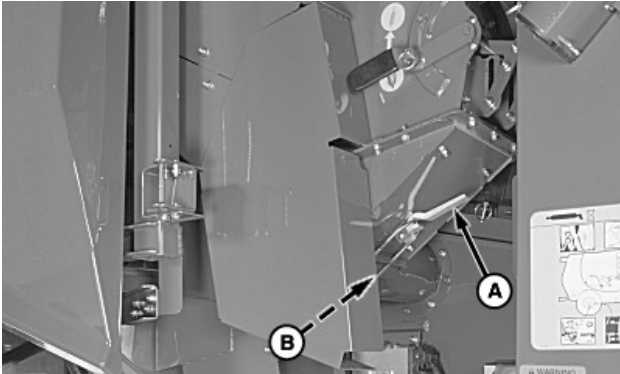

H97194—UN—30JUN10


A—Handle
B—Tailings System Auger Door

3. Use handle (A) to open the tailings system auger door (B).
4. Remove material as needed and clean sides of elevator.

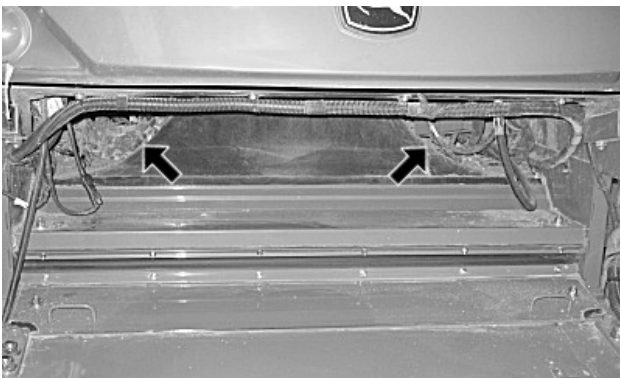


H100541—UN—02MAR11

30. Clean out chaff between separator and sides of machine.

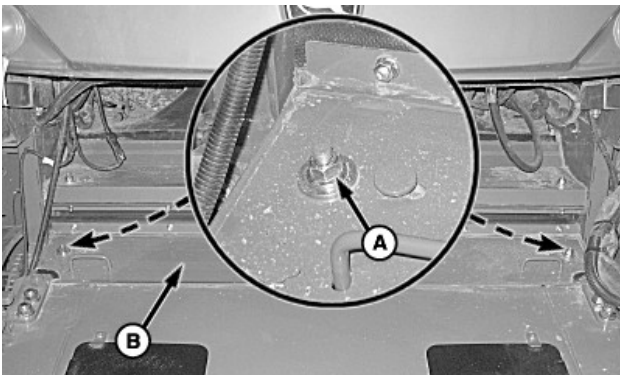

H100486—UN—28FEB11

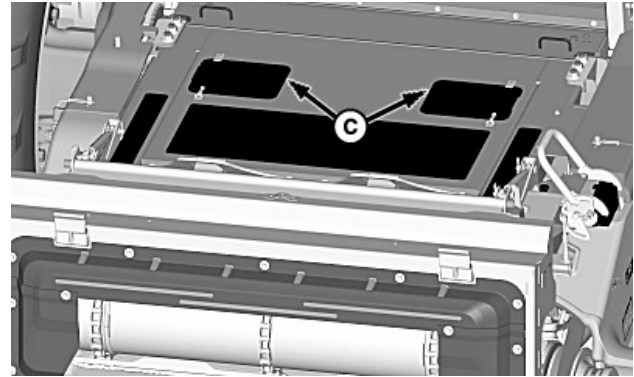


H90905—UN—27FEB08

A—Nut
B—Feeder House Door
C—Feeder House Door

31. Loosen nuts (A) on each side of the feeder house door and push nuts towards center of the feeder house.
32. Pull door forward to remove.
33. Clean feeder house through top doors (B) and (C).
34. Lift conveyor chain and let chain snap back several times while cleaning.
35. Depending on the machine option, clean the feed plate areas.

Feed Plate (Style A)

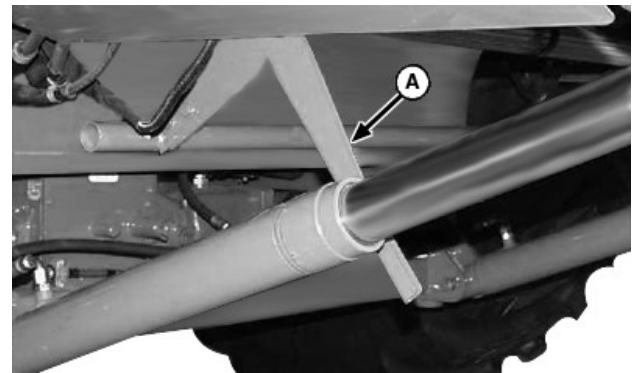


H52761—UN—17MAY99

A—Lever

1. Remove quick-lock pin and move lever (A) down and rearward to open feed plate.
2. Clean out feed plate area.
3. Push lever forward and up to close feed plate. Retain with the previously removed quick-lock pin.


Feed Plate (Style B)

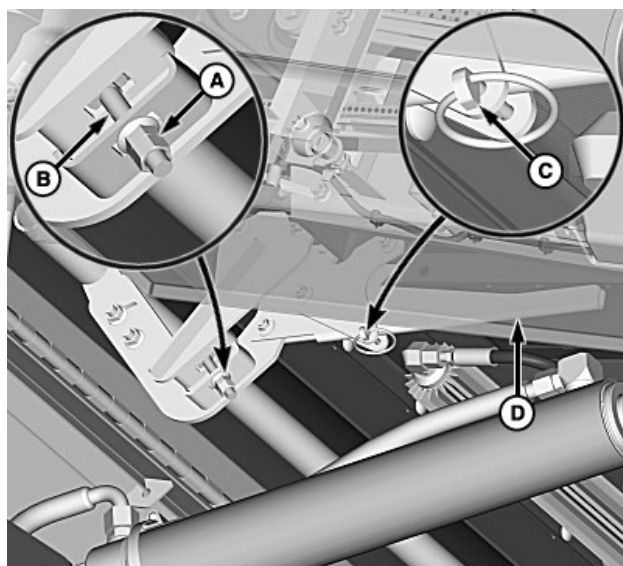

H120113—UN—29NOV16

A—Nut
B—Round-Head Bolt
C—Quick-Lock Pin
D—Lever

1. Remove nuts (A) and round-head bolt (B) on both sides of the machine.
2. Remove quick-lock pin (C) and move lever (D) down and rearward to open feed plate.
3. Clean out feed plate area.
4. Push lever forward and up to close feed plate. Retain with previously removed quick-lock pin.
5. Install previously removed round-head bolt (B) and nuts (A) on both sides of the machine.

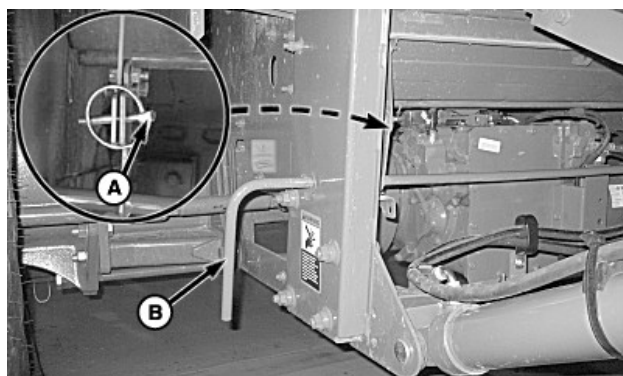


H99239—UN—01DEC10

A—Quick-Lock Pin
B—Lever

36. Remove quick-lock pin (A) and move lever (B) up to open stone trap.
37. Clean out stone trap area.
38. Move lever down to close stone trap. Retain with the quick-lock pin.
39. Depending on the machine option, clean the cleaning shoe auger gear area.

Cleaning Shoe Auger Gears (Style A)

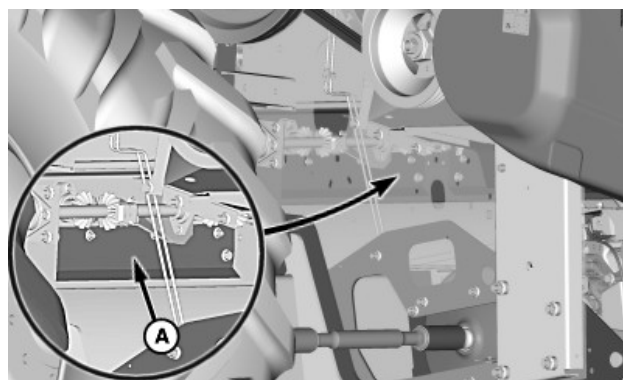


H102538—UN—29JUN11

A—Cleanout Door

1. To clean area, remove cap screws from cleanout doors (A).
2. Install cleanout doors and cap screws when cleaning is complete.


Cleaning Shoe Auger Gears (Style B)

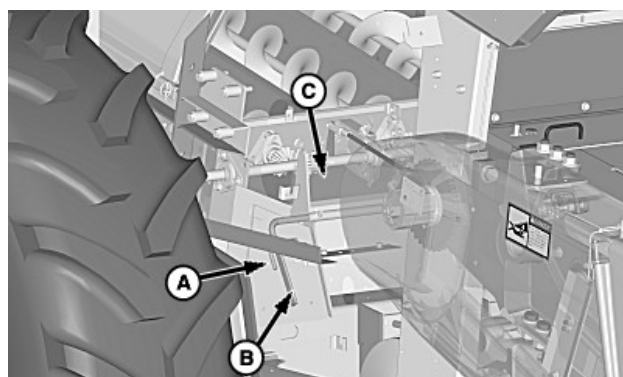

H91139—UN—15APR08


A—Lockout Pin
B—Handle
C—Cleanout Door

1. Pull lockout pin (A) and move handle (B) up to dump cleanout door (C).
2. Move handle down to close and lock cleanout door.

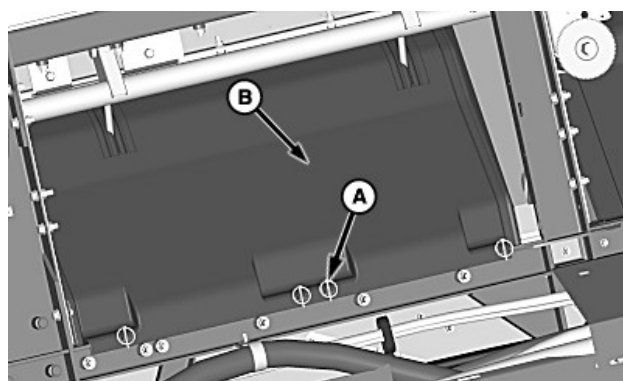


H111240—UN—13MAY14

Inspection Cover (style A)

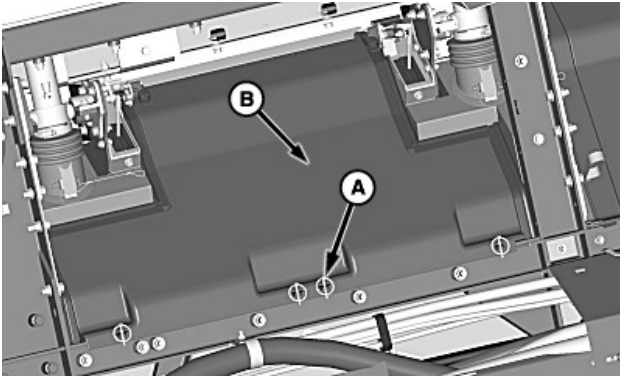

H111241—UN—13MAY14


Inspection Cover (style B)

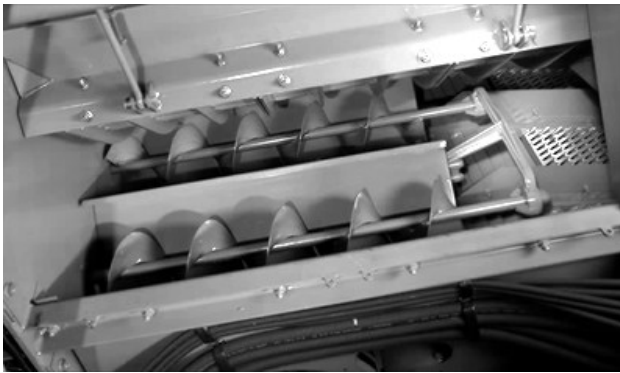

H52708—UN—23MAR99

A—Quick-Lock Pin
B—Inspection Cover


40. Remove quick-lock pins (A) and inspection cover (B). Use scraper to loosen material, and clean out through sides of machine.

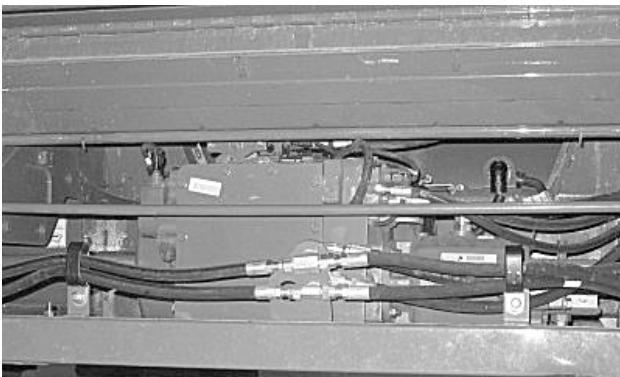

H99165—UN—22NOV10

Push-Button Shift Machine Shown

41. Clean off top of axle and transmission.

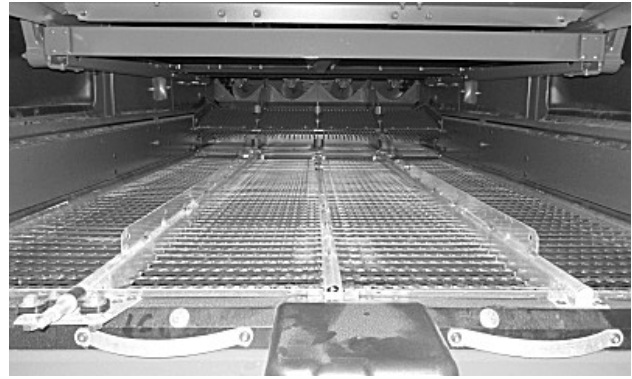


H115550—UN—20AUG15

42. Open sieve and chaffer as far as possible and clean.



H115551—UN—20AUG15

43. Clean rear axle area.

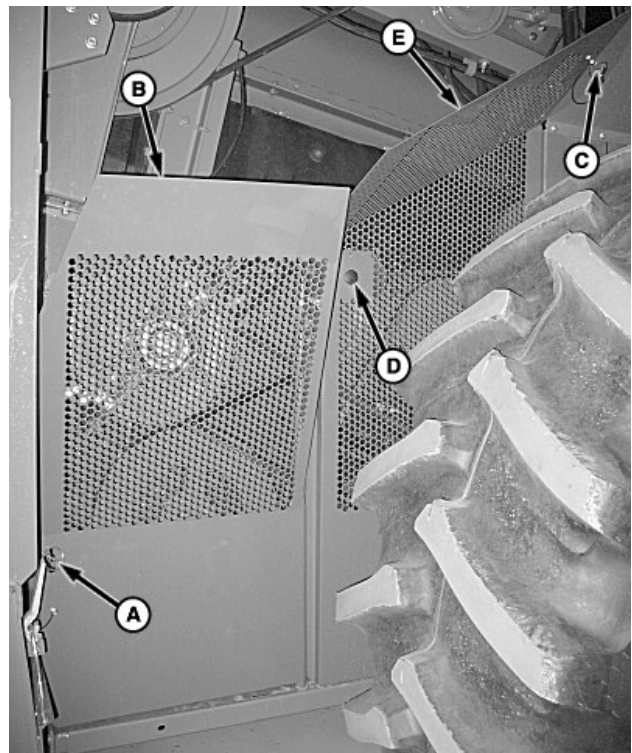


H96806—UN—09JUN10

A—Quick-Lock Pin
B—Shield
C—Quick-Lock Pin
D—Latch

E—Shield


44. Remove quick-lock pin (A) and open shield (B).
45. Remove quick-lock pin (C) and turn latch (D) to unlock.
46. Lift and remove rear shield (B) and middle fan shield (E).
47. Clean out fan area.

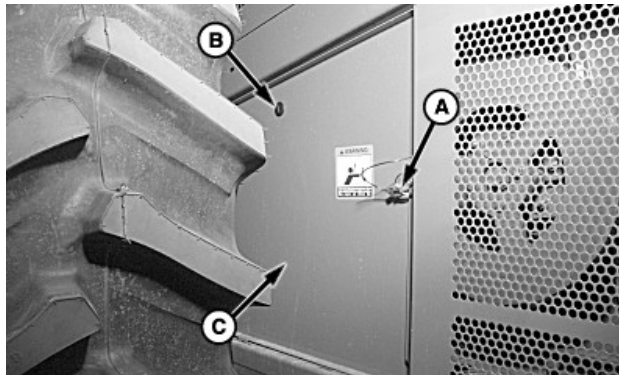

H96803—UN—09JUN10


- A—Quick-Lock Pin**
B—Latch
C—Shield

48. Remove quick-lock pin (A) and turn the latch (B) to remove shield (C).
49. Clean out area.

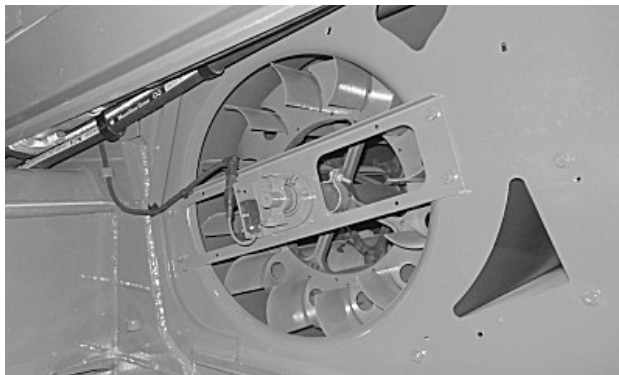

H123359—UN—08FEB18


50. Clean area around fan.

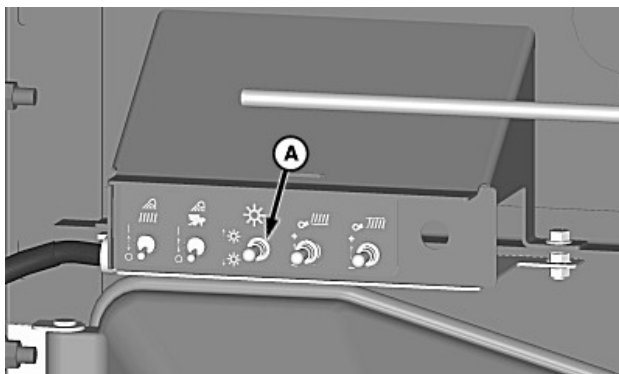

H97565—UN—14SEP10

- A—Switch**


51. Raise chopper (if equipped) with switch (A).

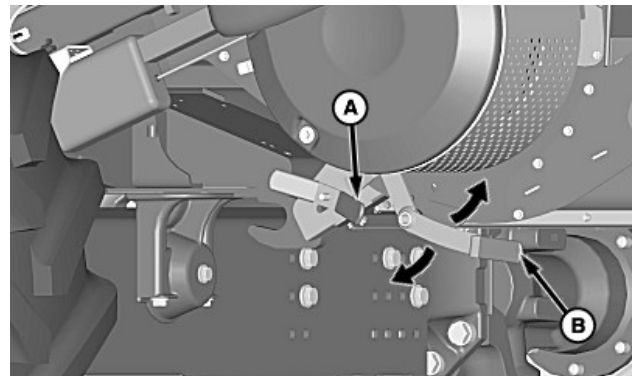

H98137—UN—20SEP10

- A—Wing Nut**
B—Handle

52. Manual Adjust Knife Bank: Loosen wing nut (A) and use handle (B) to disengage the knife bank and clean chopper.

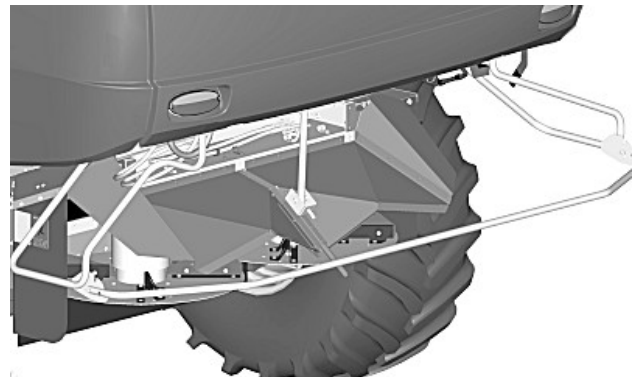

H98906—UN—27OCT10

53. Clean chaff from spreader (if equipped) drive area and spreader hood.
54. Install all the previously removed shields and close all the previously opened doors before operating the machine.

OUC6075,0004D3C-19-29JUN20

Fuels and Lubricants

Handle Fuel Safely—Avoid Fires



TS202—UN—23AUG88

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.


Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1-19-12OCT11

Avoid Static Electricity Risk When Refueling



RG22142—UN—17MAR14

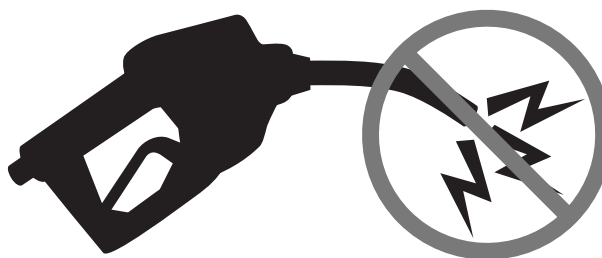

RG21992—UN—21AUG13

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.


Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.


DX,FUEL,STATIC,ELEC-19-12JUL13

Fuel Tank—Filling

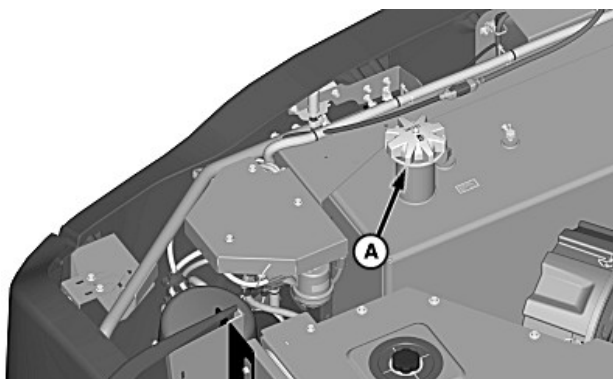

H125474—UN—10DEC18

Fuel Tank Cap (Non-Lockable)

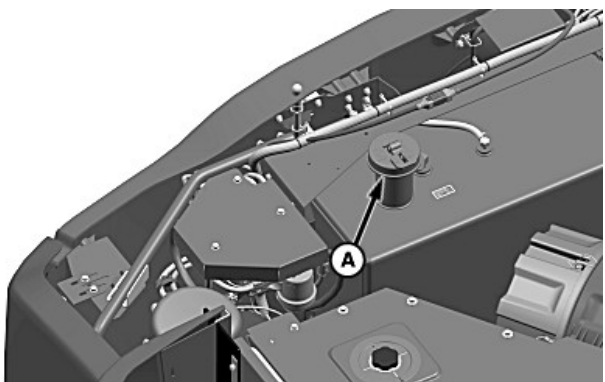

H130126—UN—30APR20
Fuel Tank Cap (Lockable)

A—Fuel Tank

CAUTION: Handle fuel carefully. Do not refuel machine while smoking. Shut OFF engine, set park brake, and remove key before filling fuel tank.

Do not overfill fuel tank. Bodily injury can result from fuel splash back. Leakage can result from expansion of fuel. If fuel tank is too full, then left in direct sunlight or if temperature gets too hot, fuel tank will overflow.

IMPORTANT: Final Tier 4/Stage V Engines: Use **ONLY** ultra low sulfur diesel fuel. See Diesel Fuel and Biodiesel Fuel in this section for further information.

Fill fuel tank (A) at end of each day. This prevents condensation in the fuel tank as moist air cools.

OUO6075,0004E1B-19-30APR20

Handling and Storing Diesel Fuel

CAUTION: Reduce the risk of fire. Handle fuel carefully. **DO NOT** fill the fuel tank when engine is running. **DO NOT** smoke while you fill the fuel tank or service the fuel system.

Fill the fuel tank at the end of each day's operation to prevent water condensation and freezing during cold weather.

Keep all storage tanks as full as practicable to minimize condensation.

Ensure that all fuel tank caps and covers are installed properly to prevent moisture from entering. Monitor water content of the fuel regularly.

When using BioDiesel fuel, the fuel filter may require more frequent replacement due to premature plugging.

Check engine oil level daily prior to starting engine. A rising oil level may indicate fuel dilution of the engine oil.

When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel and prevent water condensation. Contact your fuel supplier or John Deere dealer for recommendations.

OUO6075,000163E-19-06SEP13

Diesel Fuel

Consult your local fuel distributor for properties of the diesel fuel available in your area.

In general, diesel fuels are blended to satisfy the low temperature requirements of the geographical area in which they are marketed.

Diesel fuels specified to EN 590 or ASTM D975 are recommended. Renewable diesel fuel produced by hydrotreating animal fats and vegetable oils is basically identical to petroleum diesel fuel. Renewable diesel that meets EN 590, ASTM D975, or EN 15940 is acceptable for use at all percentage mixture levels.

Required Fuel Properties

In all cases, the fuel shall meet the following properties:

Cetane number of 40 minimum. Cetane number greater than 47 is preferred, especially for temperatures below -20°C (-4°F) or elevations above 1675 m (5500 ft.).

Cloud Point should be below the expected lowest ambient temperature or **Cold Filter Plugging Point** (CFPP) should be a maximum 10°C (18°F) below the fuel cloud point.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

Diesel fuel quality and sulfur content must comply with all existing emissions regulations for the area in which the engine operates. **DO NOT** use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

Materials such as copper, lead, zinc, tin, brass and bronze should be avoided in fuel handling, distribution and storage equipment as these metals can catalyze fuel oxidation reactions which can lead to fuel system deposits and plugged fuel filters.

E-Diesel fuel

DO NOT use E-Diesel (Diesel fuel and ethanol blend). Use of E-Diesel fuel in any John Deere machine may void the machine warranty.

CAUTION: Avoid severe injury or death due to the fire and explosion risk from using E-Diesel fuel.

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III A and B, Stage IV, and Stage V Engines Above 560 kW

- Use ONLY diesel fuel with a maximum of 500 mg/kg (500 ppm) sulfur content.

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III B, Stage IV Engines, and Stage V Engines

- Use ONLY ultra low sulfur diesel (ULSD) fuel with a maximum of 15 mg/kg (15 ppm) sulfur content.

Sulfur Content for Tier 3 and Stage III A Engines

- Use of diesel fuel with sulfur content less than 1000 mg/kg (1000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 1000—2000 mg/kg (1000—2000 ppm) REDUCES the oil and filter change interval.
- BEFORE using diesel fuel with sulfur content greater than 2000 mg/kg (2000 ppm), contact your John Deere dealer.

Sulfur Content for Tier 2 and Stage II Engines

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 2000—5000 mg/kg (2000—5000 ppm) REDUCES the oil and filter change interval.¹
- BEFORE using diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm), contact your John Deere dealer.

Sulfur Content for Other Engines

- Use of diesel fuel with sulfur content less than 5000 mg/kg (5000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm) REDUCES the oil and filter change interval.

IMPORTANT: Do not mix used diesel engine oil or any other type of lubricating oil with diesel fuel.

Improper fuel additive usage may cause damage on fuel injection equipment of diesel engines.

DX,FUEL1-19-13JUL20

Biodiesel Fuel

Biodiesel fuel is comprised of monoalkyl esters of long chain fatty acids derived from vegetable oils or animal fats. Biodiesel blends are biodiesel mixed with petroleum diesel fuel on a volume basis.

Before using fuel containing biodiesel, review the Biodiesel Use Requirements and Recommendations in this Operator's Manual.

Environmental laws and regulations can encourage or prohibit the use of biofuels. Operators should consult with appropriate governmental authorities prior to using biofuels.

John Deere Stage V Engines Operating in the European Union

Where the engine is to be operated within the Union on diesel or non-road gas-oil, a fuel with a FAME content not greater than 8% volume/volume (B8) shall be used.

John Deere Engines with Exhaust Filter Except Stage V Engines Operating in the European Union

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

Biodiesel concentrations above B20 can harm the engine's emission control systems and should not be used. Risks include, but are not limited to, more frequent stationary regeneration, soot accumulation, and increased intervals for ash removal.

John Deere Fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B20, and are recommended when using lower biodiesel blends.

John Deere Engines Without Exhaust Filter

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

These John Deere engines can operate on biodiesel blends above B20 (up to 100% biodiesel). Operate at levels above B20 ONLY if the biodiesel is permitted by law and meets the EN 14214 specification (primarily available in Europe). Engines operating on biodiesel blends above B20 might not fully comply with or be permitted by all applicable emissions regulations. Expect up to a 12% reduction in power and an 18% reduction in fuel economy when using 100% biodiesel.

John Deere fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B100, and are recommended when using lower biodiesel blends.

Biodiesel Use Requirements and Recommendations

The petroleum diesel portion of all biodiesel blends must meet the requirements of ASTM D975 (US) or EN 590 (EU) commercial standard.

Biodiesel users in the U.S. are strongly encouraged to purchase biodiesel blends from a BQ-9000 Certified

¹ See DX,ENOIL12,OEM, DX,ENOIL12,T2,STD, or DX,ENOIL12,T2,EXT for more information on Engine Oil and Filter Service Intervals.

Marketer and sourced from a BQ-9000 Accredited Producer (as certified by the National biodiesel Board). Certified Marketers and Accredited Producers can be found at the following website: <http://www.bq9000.org>.

Biodiesel contains residual ash. Ash levels exceeding the maximums allowed in either ASTM D6751 or EN14214 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present).

The fuel filter can require more frequent replacement when using biodiesel fuel, particularly if switching from diesel. Check engine oil level daily prior to starting engine. A rising oil level can indicate fuel dilution of the engine oil. Biodiesel blends up to B20 must be used within 90 days of the date of biodiesel manufacture. Biodiesel blends above B20 must be used within 45 days from the date of biodiesel manufacture.

When using biodiesel blends up to B20, the following must be considered:

- Cold-weather flow degradation
- Stability and storage issues (moisture absorption, microbial growth)
- Possible filter restriction and plugging (usually a problem when first switching to biodiesel on used engines)
- Possible fuel leakage through seals and hoses (primarily an issue with older engines)
- Possible reduction of service life of engine components

Request a certificate of analysis from your fuel distributor to ensure that the fuel is compliant with the specifications provided in this Operator's Manual.

Consult your John Deere dealer for John Deere fuel products to improve storage and performance with biodiesel fuels.

The following must also be considered if using biodiesel blends above B20:

- Possible coking or blocked injector nozzles, resulting in power loss and engine misfire if John Deere fuel additives and conditioners or equivalent containing detergent/dispersants are not used
- Possible crankcase oil dilution (requiring more frequent oil changes)
- Possible lacquering or seizure of internal components
- Possible formation of sludge and sediments
- Possible thermal oxidation of fuel at elevated temperatures
- Possible compatibility issues with other materials (including copper, lead, zinc, tin, brass, and bronze) used in fuel handling, distribution, and storage equipment
- Possible reduction in water separator efficiency

- Possible damage to paint if exposed to biodiesel
- Possible corrosion of fuel injection equipment
- Possible elastomeric seal and gasket material degradation (primarily an issue with older engines)
- Possible high acid levels within fuel system
- Because biodiesel blends above B20 contain more ash, using blends above B20 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present)

IMPORTANT: Raw pressed vegetable oils are NOT acceptable for use as fuel in any concentration in John Deere engines. Their use could cause engine failure.

DX,FUEL7-19-13JAN18

Lubricity of Diesel Fuel

Most diesel fuels manufactured in the United States, Canada, and the European Union have adequate lubricity to ensure proper operation and durability of fuel injection system components. However, diesel fuels manufactured in some areas of the world may lack the necessary lubricity.

IMPORTANT: Make sure the diesel fuel used in your machine demonstrates good lubricity characteristics.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

If fuel of low or unknown lubricity is used, add John Deere Fuel-Protect Diesel Fuel Conditioner (or equivalent) at the specified concentration.

Lubricity of BioDiesel Fuel

Fuel lubricity can improve significantly with BioDiesel blends up to B20 (20% BioDiesel). Further increase in lubricity is limited for BioDiesel blends greater than B20.

DX,FUEL5-19-07FEB14

Supplemental Diesel Fuel Additives

Diesel fuel can be the source of performance or other operational problems for many reasons. Some causes include poor lubricity, contaminants, low cetane number, and a variety of properties that cause fuel system deposits. These and others are referenced in other sections of this Operator's Manual.

To optimize engine performance and reliability, closely follow recommendations on fuel quality, storage, and handling, which are found elsewhere in this Operator's Manual.

To further aid in maintaining performance and reliability

of the engine's fuel system, John Deere has developed a family of fuel additive products for most global markets. The primary products include Fuel-Protect Diesel Fuel Conditioner (full feature conditioner in winter and summer formulas) and Fuel-Protect Keep Clean (fuel injector deposit removal and prevention). Availability of these and other products varies by market. See your local John Deere dealer for availability and additional information about fuel additives that might be right for your needs.

DX,FUEL13-19-07FEB14

Testing Diesel Fuel

A fuel analysis program can help to monitor the quality of diesel fuel. The fuel analysis can provide critical data such as calculated cetane index, fuel type, sulfur content, water content, appearance, suitability for cold weather operations, bacteria, cloud point, acid number, particulate contamination, and whether the fuel meets ASTM D975 or equivalent specification.

Contact your John Deere dealer for more information on diesel fuel analysis.

DX,FUEL6-19-13JAN18

Minimizing the Effect of Cold Weather on Diesel Engines

John Deere diesel engines are designed to operate effectively in cold weather.

However, for effective starting and cold-weather operation, a little extra care is necessary. The following information outlines steps that can minimize the effect that cold weather may have on starting and operation of your engine. See your John Deere dealer for additional information and local availability of cold-weather aids.

Use Winter Grade Fuel

When temperatures fall below 0°C (32°F), winter grade fuel (No. 1-D in North America) is best suited for cold-weather operation. Winter grade fuel has a lower cloud point and a lower pour point.

Cloud point is the temperature at which wax begins to form in the fuel. This wax causes fuel filters to plug.

Pour point is the lowest temperature at which movement of the fuel is observed.

NOTE: On average, winter grade diesel fuel has a lower Btu (heat content) rating. Using winter grade fuel may reduce power and fuel efficiency, but should not cause any other engine performance effects. Check the grade of fuel being used before troubleshooting for low-power complaints in cold-weather operation.

Air Intake Heater

An air intake heater is an available option for some engines to aid cold weather starting.

Ether

An ether port on the intake is available to aid cold weather starting.

 **CAUTION: Ether is highly flammable. Do not use ether when starting an engine equipped with glow plugs or an air intake heater.**

Coolant Heater

An engine block heater (coolant heater) is an available option to aid cold weather starting.

Seasonal Viscosity Oil and Proper Coolant Concentration

Use seasonal grade viscosity engine oil based on the expected air temperature range between oil changes and a proper concentration of low silicate antifreeze as recommended. (See DIESEL ENGINE OIL and ENGINE COOLANT requirements in this section.)

Diesel Fuel Cold Flow Additive

Use John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula), which contains anti-gel chemistry, or equivalent fuel conditioner to treat non-winter grade fuel (No. 2-D in North America) during the cold-weather season. This generally extends operability to about 10° C (18°F) below the fuel cloud point. For operability at even lower temperatures, use winter grade fuel.

IMPORTANT: Treat fuel when outside temperature drops below 0°C (32°F). For best results, use with untreated fuel. Follow all recommended instructions on label.

Biodiesel

When operating with biodiesel blends, wax formation can occur at warmer temperatures. Begin using John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula) or equivalent at 5°C (41°F) to treat biodiesel fuels during the cold-weather season. Use B5 or lower blends at temperatures below 0°C (32°F). Use only winter grade petroleum diesel fuel at temperatures below -10°C (14°F).

Winterfronts

Use of fabric, cardboard, or solid winterfronts is not recommended with any John Deere engine. Their use can result in excessive engine coolant, oil, and charge air temperatures. This can lead to reduced engine life, loss of power and poor fuel economy. Winterfronts may also put abnormal stress on fan and fan drive components potentially causing premature failures.

If winterfronts are used, they should never totally close off the grill frontal area. Approximately 25% area in the

center of the grill should remain open at all times. At no time should the air blockage device be applied directly to the radiator core.

Radiator Shutters

If equipped with a thermostatically controlled radiator shutter system, this system should be regulated in such a way that the shutters are completely open by the time the coolant reaches 93°C (200°F) to prevent excessive intake manifold temperatures. Manually controlled systems are not recommended.

If air-to-air aftercooling is used, the shutters must be completely open by the time the intake manifold air temperature reaches the maximum allowable temperature out of the charge air cooler.

For more information, see your John Deere dealer.

DX,FUEL10-19-13JAN18

Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines

In order to maintain the emissions performance of the engine, it is essential to use and refill DEF in accordance with the specification.

Diesel exhaust fluid (DEF) is a high purity liquid that is injected into the exhaust system of engines equipped with selective catalytic reduction (SCR) systems. Maintaining the purity of DEF is important to avoid malfunctions in the SCR system. Engines requiring DEF shall use a product that meets the requirements for aqueous urea solution 32 (AUS 32) according to ISO 22241-1.

The use of John Deere Diesel Exhaust Fluid is recommended. John Deere Diesel Exhaust Fluid is available at your John Deere dealer in a variety of package sizes to suit your operational needs.

If John Deere Diesel Exhaust Fluid is not available, use DEF that is certified by the American Petroleum Institute (API) Diesel Exhaust Fluid Certification Program or by the AdBlue™ Diesel Exhaust Fluid Certification Program. Look for the API certification symbol or the AdBlue™ name on the container.



RG30211—UN—08MAR18

In some cases, DEF is referred to by one or more of these names:

- Urea
- Aqueous Urea Solution 32
- AUS 32
- AdBlue™
- NOx Reduction Agent
- Catalyst Solution

DX,DEF-19-13JAN18

Testing Diesel Exhaust Fluid (DEF)

IMPORTANT: Using DEF with the correct concentration is critical to engine and aftertreatment system performance. Extended storage and other conditions can adversely alter the DEF concentration.

If DEF quality is questionable, draw a sample out of the DEF tank or storage tank into a clear container. DEF must be crystal clear with a light ammonia smell. If DEF appears cloudy, has a colored tint, or has a profound ammonia smell, it is likely not within specification. DEF in this condition should not be used. Drain tank, flush with distilled water and refill with new or good DEF. After refilling the tank, check the DEF concentration.

If the DEF passes the visual and smell test, check the DEF concentration with a handheld refractometer calibrated to measure DEF.

DEF concentration should be checked when the engine has been stored for extended periods, or if there is suspicion the engine or packaged DEF fluid has been contaminated with water.

Two approved tools are available through your John Deere dealer:

- JDG11594 Digital DEF Refractometer—A digital tool providing an easy to read concentration measurement
- JDG11684 DEF Refractometer—Low-cost alternative tool providing an analog reading

Follow instructions included with either tool to obtain the measurement.

The correct DEF concentration is 31.8—33.2% urea. If the DEF concentration is not within specification, drain the DEF tank, flush with distilled water and fill with new or good DEF. If packaged DEF is not within specification, dispose of DEF packages and replace with new or good DEF.

DX,DEF,TEST-19-13JUN13

AdBlue is a trademark of VDA, the German Association of the Automotive Industry.

Storing Diesel Exhaust Fluid (DEF)

⚠ CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: It is unlawful to tamper with or remove any component of the aftertreatment system. Do not use DEF that does not meet the required specifications or operate the engine with no DEF.

Never attempt to create DEF by mixing agricultural grade urea with water. Agricultural grade urea does not meet the necessary specifications and can damage the aftertreatment system.

Do not add any chemicals or additives to DEF in an effort to prevent freezing. Any chemicals or additives added to DEF can damage the aftertreatment system.

Never add water or any other fluid in place of, or in addition to DEF. Operating with a modified DEF or using an unapproved DEF can damage the aftertreatment system.

Storage information provided below is for reference and is to be used as a guideline only.

It is preferred to store DEF out of extreme ambient temperatures. DEF freezes at -11°C (12°F). Exposure to temperatures greater than 30°C (86°F) can degrade DEF over time. Do not store DEF in direct sunlight.

Dedicated DEF storage containers must be sealed between uses to prevent evaporation and contamination. Containers made of polyethylene, polypropylene, or stainless steel are recommended to transport and store DEF.

Ideal conditions for storage of DEF are:

- Store at temperatures between -5°C and 30°C (23°F and 86°F)
- Store in dedicated containers sealed to avoid contamination and evaporation

Under these conditions, DEF is expected to remain useable for a minimum of 18 months. Storing DEF at higher temperatures can reduce its useful life by approximately 6 months for every 5°C (9°F) temperature above 30°C (86°F).


If unsure how long or under what conditions DEF has been stored, test DEF. See Testing Diesel Exhaust Fluid (DEF).

Long-term storage in the DEF tank (over 12 months) is not recommended. If long-term storage is necessary, test DEF prior to operating engine. See Testing Diesel Exhaust Fluid (DEF).

It is recommended to purchase DEF in quantities that will be consumed within 12 months.

DX,DEF,STORE-19-15JUL20

Refilling Diesel Exhaust Fluid (DEF) Tank

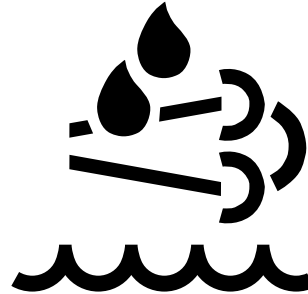

TS1731—UN—23AUG13

⚠ CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

Do not ingest DEF. In the event DEF is ingested, contact a physician immediately. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: Use only distilled water to rinse components that are used to deliver DEF. Tap water can contaminate DEF. If distilled water is not available, rinse with clean tap water, then thoroughly rinse with ample amounts of DEF.

If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

If DEF is filled into engine fuel tank or other fluid compartment, do not operate engine until system is properly purged of DEF. Contact your John Deere dealer immediately to determine how to clean and purge the system.

Reasonable care should be taken when refilling the DEF tank. Ensure that the DEF tank cap area is free of debris before removing the cap. Seal containers of DEF between use to prevent contamination and evaporation.

Avoid splashing DEF and do not allow DEF to come into contact with skin, eyes, or mouth.

DEF is not harmful to handle, but DEF can be corrosive to materials such as steel, iron, zinc, nickel, copper,

aluminum, and magnesium. Use suitable containers to transport and store DEF. Containers made of polyethylene, polypropylene, or stainless steel are recommended.

Avoid prolonged contact with skin. In case of accidental contact, wash skin immediately with soap and water.

Keep anything used to store or dispense DEF clean of dirt and dust. Wash and rinse containers or funnels thoroughly with distilled water to remove contaminants.

If an unapproved fluid, such as diesel fuel or coolant is added to the DEF tank, contact your John Deere dealer immediately to determine how to clean and purge the system.

If water has been added to the DEF tank, a tank cleaning is necessary. See Cleaning DEF Tank in this manual. After refilling the tank, check the DEF concentration. See Testing Diesel Exhaust Fluid (DEF).

The operator must maintain appropriate DEF levels at all times. Check the DEF level daily and refill the tank as needed. The filling port is identified by a blue colored cap embossed with the following DEF symbol.

DX,DEF,REFILL-19-15JUL20

Disposal of Diesel Exhaust Fluid (DEF)

Although there is little issue with minor spillage of DEF on the ground, large amounts of DEF should be contained. If large spills occur, contact local environmental authorities for assistance with clean-up.

If a substantial quantity of DEF is not within specification, contact the DEF supplier for assistance with disposal. Do not dump substantial quantities of DEF onto the ground or send DEF to wastewater treatment facilities.

DX,DEF,DISPOSE-19-13JUN13

Diesel Engine Coolant (engine with wet sleeve cylinder liners)

Failure to follow applicable coolant standards and drain intervals can result in severe engine damage that may not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere coolants, parts, or service.

Preferred Coolants

The following pre-mix engine coolants are preferred:

- John Deere COOL-GARD™ II
- John Deere COOL-GARD II PG

COOL-GARD II pre-mix coolant is available in several

concentrations with different freeze protection limits as shown in the following table.

COOL-GARD II Pre-Mix	Freeze Protection Limit
COOL-GARD II 20/80	-9°C (16°F)
COOL-GARD II 30/70	-16°C (3°F)
COOL-GARD II 50/50	-37°C (-34°F)
COOL-GARD II 55/45	-45°C (-49°F)
COOL-GARD II PG 60/40	-49°C (-56°F)
COOL-GARD II 60/40	-52°C (-62°F)

Not all COOL-GARD II pre-mix products are available in all countries.

Use COOL-GARD II PG when a non-toxic coolant formulation is required.

Additional Recommended Coolants

The following engine coolant is also recommended:

- John Deere COOL-GARD II Concentrate in a 40—60% mixture of concentrate with quality water.

IMPORTANT: When mixing coolant concentrate with water, do not use less than 40% or greater than 60% concentration of coolant. Less than 40% gives inadequate additives for corrosion protection. Greater than 60% can result in coolant gelation and cooling system problems.

Other Coolants

Other ethylene glycol or propylene glycol base coolants may be used if they meet the following specification:

- Pre-mix coolant meeting ASTM D6210 requirements
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Coolant concentrate meeting ASTM D6210 requirements in a 40—60% mixture of concentrate with quality water

If coolant meeting one of these specifications is unavailable, use a coolant concentrate or pre-mix coolant that has a minimum of the following chemical and physical properties:

- Provides cylinder liner cavitation protection according to either the John Deere Cavitation Test Method or a fleet study run at or above 60% load capacity
- Is formulated with a nitrite-free additive package
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion

Water Quality

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

Coolant Drain Intervals

Drain and flush the cooling system and refill with fresh coolant at the indicated interval, which varies with the coolant used.

When COOL-GARD II or COOL-GARD II PG is used, the drain interval is 6 years or 6000 hours of operation.

If a coolant other than COOL-GARD II or COOL-GARD II PG is used, reduce the drain interval to 2 years or 2000 hours of operation.²

IMPORTANT: Do not use cooling system sealing additives or antifreeze that contains sealing additives.

Do not mix ethylene glycol and propylene glycol base coolants.

Do not use coolants that contain nitrites.

DX,COOL3-19-25AUG20

John Deere COOL-GARD™ II Coolant Extender

Some coolant additives gradually deplete during engine operation. For COOL-GARD™ II pre-mix and COOL-GARD II Concentrate, replenish coolant additives between drain intervals by adding COOL-GARD II Coolant Extender.

COOL-GARD II Coolant Extender should not be added unless indicated by COOL-GARD II Test Strips. These test strips provide a simple, effective method to check the freeze point, additive levels, and pH of your engine coolant.

Test the coolant solution at intervals of 12 months and whenever excessive coolant is lost through leaks or overheating.

IMPORTANT: Do not use COOL-GARD II Test Strips with COOL-GARD II PG.

COOL-GARD II Coolant Extender is a chemically matched additive system for use with all COOL-GARD II coolants. COOL-GARD II Coolant Extender is not intended for use with nitrite-containing coolants.

COOL-GARD is a trademark of Deere & Company

² Coolant analysis may extend the service interval of other "Coolants" to a maximum not to exceed the interval of Cool-Gard II coolants. Coolant analysis means taking a series of coolant samples at 1000 hour increments beyond the normal service interval until either the data indicate the end of useful coolant life or the maximum service interval of Cool-Gard II is reached.

IMPORTANT: Do not add a supplemental coolant additive when the cooling system is drained and refilled with any of the following:

- John Deere COOL-GARD II
- John Deere COOL-GARD II PG

The use of non-recommended supplemental coolant additives can result in additive drop-out, gelation of the coolant, or corrosion of cooling system components.

Add the recommended concentration of COOL-GARD II Coolant Extender. DO NOT add more than the recommended amount.

DX,COOL16-19-15MAY13

Operating in Warm Temperature Climates

John Deere engines are designed to operate using recommended engine coolants.

Always use a recommended engine coolant, even when operating in geographical areas where freeze protection is not required.

IMPORTANT: Water may be used as coolant in emergency situations only.

Foaming, hot surface aluminum and iron corrosion, scaling, and cavitation occur when water is used as the coolant, even when coolant conditioners are added.

Drain cooling system and refill with recommended engine coolant as soon as possible.

DX,COOL6-19-17FEB20

Water Quality for Mixing with Coolant Concentrate

Engine coolants are a combination of three chemical components: ethylene glycol (EG) or propylene glycol (PG) antifreeze, inhibiting coolant additives, and quality water.

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

All water used in the cooling system should meet the following minimum specifications for quality:

Chlorides	<40 mg/L
Sulfates	<100 mg/L
Total solids	<340 mg/L
Total dissolved hardness	<170 mg/L
pH	5.5—9.0

IMPORTANT: Do not use bottled drinking water because it often contains higher concentrations of total dissolved solids.


Freeze Protection

The relative concentrations of glycol and water in the engine coolant determine its freeze protection limit.

Ethylene Glycol	Freeze Protection Limit
40%	-24°C (-12°F)
50%	-37°C (-34°F)
60%	-52°C (-62°F)
Propylene Glycol	Freeze Protection Limit
40%	-21°C (-6°F)
50%	-33°C (-27°F)
60%	-49°C (-56°F)

DO NOT use a coolant-water mixture greater than 60% ethylene glycol or 60% propylene glycol.

DX,COOL19-19-13JAN18

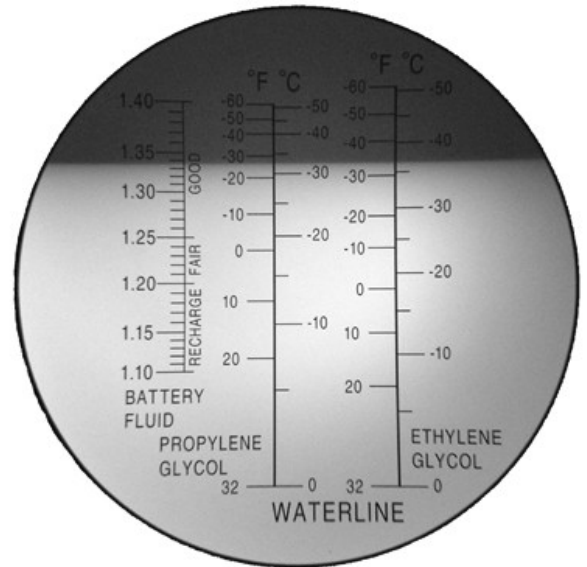

TS1733—UN—04SEP13

Image with a Drop of 50/50 Coolant Placed on the Refractometer Window

Testing Coolant Freeze Point



TS1732—UN—04SEP13

SERVICEGARD™ Part Number 75240

The use of a handheld coolant refractometer is the quickest, easiest, and most accurate method to determine coolant freeze point. This method is more accurate than a test strip or a float-type hydrometer which can produce poor results.

A coolant refractometer is available through your John Deere dealer under the SERVICEGARD™ tool program. Part number 75240 provides an economical solution to accurate freeze point determination in the field.

To use this tool:

1. Allow cooling system to cool to ambient temperatures.
2. Open radiator cap to expose coolant.
3. With the included dropper, collect a small coolant sample.
4. Open the lid of the refractometer, place one drop of coolant on the window and close the lid.
5. Look through the eyepiece and focus as necessary.
6. Record the listed freeze point for the type of coolant (ethylene glycol coolant or propylene glycol) being tested.

DX,COOL,TEST-19-13JUN13

Diesel Engine Break-In Oil — Non-Emissions Certified and Certified Tier 1, Tier 2, Tier 3, Stage I, Stage II, and Stage III

New engines are filled at the factory with either John

SERVICEGARD is a trademark of Deere & Company

Deere Break-In™ or John Deere Break-In Plus™ Engine Oil. During the break-in period, add John Deere Break-In™ or Break-In Plus™ Engine Oil, respectively, as needed to maintain the specified oil level.

Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.

If John Deere Break-In™ Engine Oil is used during the initial operation of a new or rebuilt engine, change the oil and filter at a maximum of 100 hours.

If John Deere Break-In Plus™ Engine Oil is used, change the oil and filter at a minimum of 100 hours and a maximum equal to the interval specified for John Deere Plus-50™ II or Plus-50™ oil.

After engine overhaul, fill the engine with either John Deere Break-In™ or Break-In Plus™ Engine Oil.

If John Deere Break-In™ or Break-In Plus™ Engine Oil is not available, use an SAE 10W-30 viscosity grade diesel engine oil meeting one of the following and change the oil and filter at a maximum of 100 hours of operation:

- API Service Classification CE
- API Service Classification CD
- API Service Classification CC
- ACEA Oil Sequence E2
- ACEA Oil Sequence E1

IMPORTANT: Do not use Plus-50™ II, Plus-50™, or engine oils meeting any of the following for the initial break-in of a new or rebuilt engine:

API CK-4	ACEA E9
API CJ-4	ACEA E7
API CI-4 PLUS	ACEA E6
API CI-4	ACEA E5
API CH-4	ACEA E4
API CG-4	ACEA E3
API CF-4	
API CF-2	
API CF	

These oils do not allow the engine to break in properly.

John Deere Break-In Plus™ Engine Oil can be used for all John Deere diesel engines at all emission certification levels.

After the break-in period, use John Deere Plus-50™ II,

John Deere Plus-50™, or other diesel engine oil as recommended in this manual.

DX,ENOIL4-19-02NOV16

John Deere Break-In Plus™ Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V

New engines are filled at the factory with John Deere Break-In Plus™ Engine Oil. During the break-in period, add John Deere Break-In Plus™ Engine Oil, as needed to maintain the specified oil level.

Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.

During the initial operation of a new or rebuilt engine, change the oil and filter between a minimum of 100 hours and maximum equal to the interval specified for John Deere Plus-50™ II oil.

After engine overhaul, fill the engine with John Deere Break-In Plus™ Engine Oil.

If John Deere Break-In Plus™ Engine Oil is not available, use an SAE 10W-30 viscosity grade diesel engine oil meeting one of the following:

- API Service Category CK-4
- API Service Category CJ-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E6

If one of these oils is used during the initial operation of a new or rebuilt engine, change the oil and filter between a minimum of 100 hours and a maximum of 250 hours.

IMPORTANT: Do not use any other engine oils during the initial break-in of a new or rebuilt engine.


John Deere Break-In Plus™ Engine Oil can be used for all John Deere diesel engines at all emission certification levels.

After the break-in period, use John Deere Plus-50™ II or other diesel engine oil as recommended in this manual.

DX,ENOIL16-19-13JAN18

*Break-In is a trademark of Deere & Company.
Break-In Plus is a trademark of Deere & Company
Plus-50 is a trademark of Deere & Company.*

Diesel Engine Oil — Tier 2 and Stage II

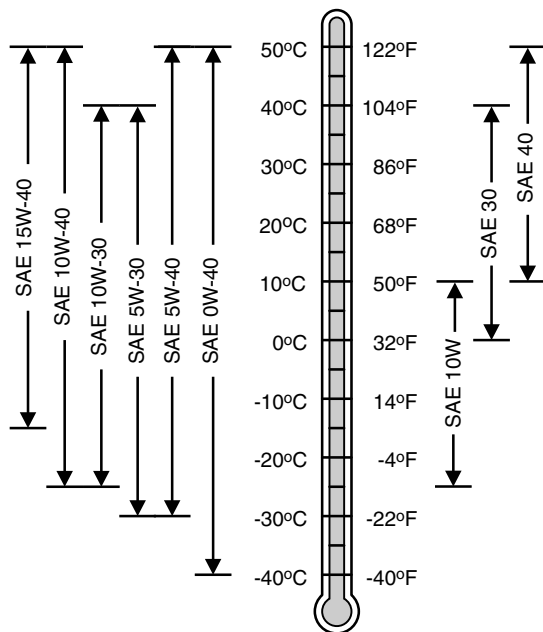

TS1743—UN—25APR19

Oil Viscosities for Air Temperature Ranges

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50™ II oil is preferred.

John Deere Plus-50™ is also recommended.

John Deere Torq-Gard™ is also allowed.

Other oils may be used if they meet one or more of the following standards:

- API Service Category CK-4
- API Service Category CJ-4
- API Service Category CI-4 PLUS
- API Service Category CI-4
- API Service Category CH-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E7
- ACEA Oil Sequence E6
- ACEA Oil Sequence E5
- ACEA Oil Sequence E4

Multi-viscosity diesel engine oils are preferred.


Diesel fuel quality and fuel sulfur content must comply

with all existing emissions regulations for the area in which the engine operates.

DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

DX,ENOIL7-19-23APR19

Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V

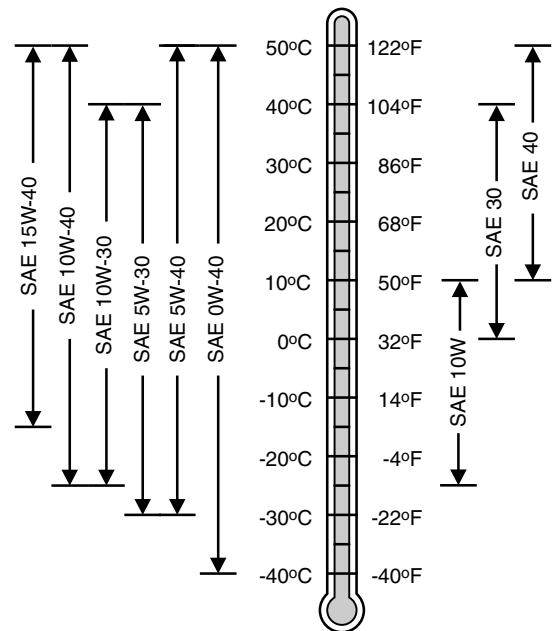

TS1743—UN—25APR19

Oil Viscosities for Air Temperature Ranges

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50™ II is the recommended engine oil.

Extended service intervals may apply when John Deere Plus-50™ II engine oil is used. Refer to the engine oil drain interval table and consult your John Deere dealer for more information.

If John Deere Plus-50™ II engine oil is not available, engine oil meeting one or more of the following may be used:

- API Service Category CK-4
- API Service Category CJ-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E6

Plus-50 is a trademark of Deere & Company
Torq-Gard is a trademark of Deere & Company

DO NOT use engine oil containing more than 1.0% sulfated ash, 0.12% phosphorus, or 0.4% sulfur.

Multi-viscosity diesel engine oils are preferred.

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

IMPORTANT: Use only ultra low sulfur diesel (ULSD) fuel with a maximum sulfur content of 15 mg/kg (15 ppm).

DX,ENOIL14-19-23APR19

Diesel Engine Oil Service Interval for Operation at High Altitude

To avoid excessive oil degradation and potential engine damage, reduce oil and filter service intervals to 50% of the original recommended values when operating engines at altitudes above **1675 m (5500 ft)**.

Oil analysis may allow longer service intervals.

Use only approved oil types.

Example of Original Hours	Corresponding High Altitude Hours
125	60
150	75
175	85
200	100
250	125
275	135
300	150
350	175
375	185
400	200
500	250

DX,ENOIL,SERV,HIALT-19-11NOV14

Engine Oil and Filter Service Intervals — Tier 2 and Stage II Engines

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of the diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Use oil analysis to evaluate the condition of the oil and to aid in selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12

months even if the hours of operation are fewer than the otherwise recommended service interval.

Diesel fuel sulfur content affects engine oil and filter service intervals.

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is **RECOMMENDED**
- Use of diesel fuel with sulfur content 2000—5000 mg/kg (2000—5000 ppm) **REDUCES** the oil and filter change interval
- **BEFORE** using diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm), contact your John Deere dealer or qualified service provider

IMPORTANT: To avoid engine damage:

- **Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20. Oil analysis may allow longer service intervals**
- **Use only approved oil types**

Approved Oil Types:

- “Plus-50 Oils” include John Deere Plus-50™ II and John Deere Plus-50™
- “Other Oils” include John Deere Torq-Gard™, API CK-4, API CJ-4, API CI-4 PLUS, API CI-4, API CH-4, ACEA E9, ACEA E7, ACEA E6, ACEA E5, and ACEA E4

Engine Oil and Filter Service Intervals	
Fuel Sulfur	Less than 2000 mg/kg (2000 ppm)
Plus-50 Oils	375 hours
Other Oils	250 hours
Fuel Sulfur	2000—5000 mg/kg (2000—5000 ppm)
Plus-50 Oils	275 hours
Other Oils	150 hours
Fuel Sulfur	5000—10 000 mg/kg (5000—10 000 ppm)
Plus-50 Oils	187 hours (See John Deere dealer)
Other Oils	125 hours (See John Deere dealer)
Oil analysis may extend the service interval of “Other Oils”, to a maximum not to exceed the interval for Plus-50 Oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 oils is reached.	

DX,ENOIL12,T2,STD-19-13JAN18

Engine Oil and Filter Service Intervals — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V Engines

Failure to follow applicable oil standards and drain

*Plus-50 is a trademark of Deere & Company
Torq-Gard is a trademark of Deere & Company*

intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of the diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Approved Oil Types

- John Deere Plus-50™ II
- “Other Oils” include API CK-4, API CJ-4, ACEA E9, and ACEA E6

Use oil analysis to evaluate the condition of the oil and to aid in selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

Diesel fuel sulfur content affects engine oil and filter service intervals. Higher fuel sulfur levels reduce oil and filter service intervals.

Use of diesel fuel with sulfur content less than 15 mg/kg (15 ppm) is **REQUIRED**.

Engine Oil and Filter Service Intervals	
John Deere Plus-50™ II	400 hours
Other Oils	250 hours
Oil analysis may extend the service interval of “Other Oils” to a maximum not to exceed the interval of Plus-50™ II oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 II oils is reached.	


Engine operation at high altitude decreases oil change intervals. See Diesel Engine Oil Service Interval for Operation at High Altitude for additional information.

IMPORTANT: To avoid engine damage:


- **Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20. Oil analysis may allow longer service intervals**
- **Use only approved oil types**

OUO6075,0004926-19-22MAR18

Oilsan™ and CoolScan™

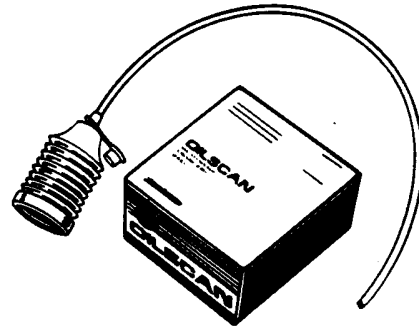

T6828AB—UN—15JUN89

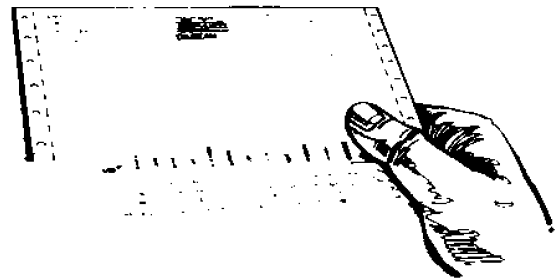

T6829AB—UN—26AUG11

Oilsan™ and CoolScan™ are John Deere sampling programs to help you monitor machine performance and identify potential problems before they cause serious damage.


Oil and coolant samples should be taken from each system before its recommended change interval.

Check with your John Deere dealer for the availability of Oilsan™ and CoolScan™ kits.

DX,OILSCAN-19-13SEP11

ProDrive™ Transmission, CommandTouch™ Multi-Speed Feeder House Drive, Hydrostatic Drive System, Main Hydraulic System, and Main Engine Gear Case Oils

NOTE: Machines come factory filled with John Deere Hy-Gard™.

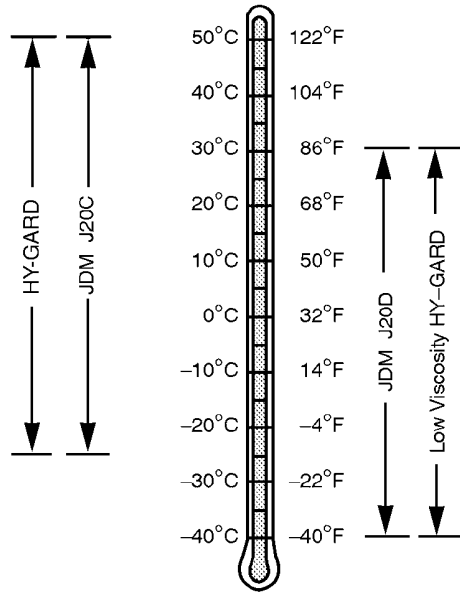

ZX1030848—UN—15SEP02

Only the following oils are approved:


- John Deere Hy-Gard™
- Oils meeting John Deere Standard JDM J20C

NOTE: For usage in extremely low temperatures only the following may be substituted:

- Low Viscosity Hy-Gard™
- Oils meeting John Deere Standard JDM J20D

OOU6075,00046CB-19-30MAR17

Transmission (Mechanical Shift and Push-Button Shift), Final Drives, Loading Auger, Primary Countershaft, and Two-Speed Separator Drive Gear Case Oils

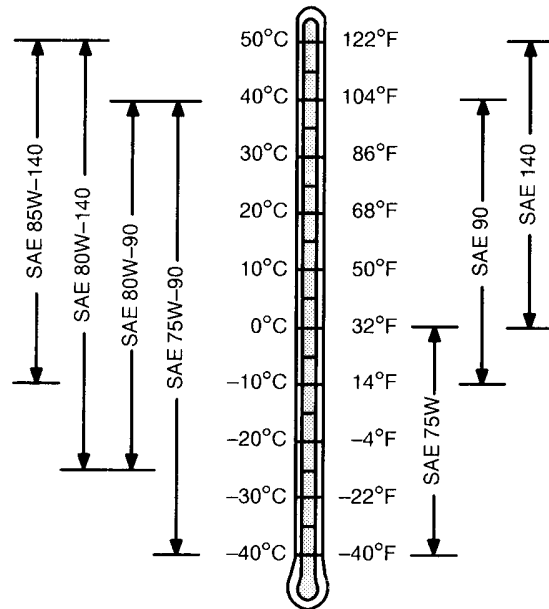

TS1653—UN—14MAR96

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following oils are preferred:

- John Deere GL-5 Gear Lubricant
- John Deere EXTREME-GARD™


Other oils may be used if they meet the following:

- API Service Category GL-5

Product Number	Description	Size
TY6252	80W/90 GL5 Gear Lube	16 kg pail (35 lb pail)
TY6296	80W/90 GL5 Gear Lube	0.9 L can (1 qt can)
TY6256	85W/140 GL5 Gear Lube	16 kg pail (35 lb pail)
TY6345	85W/140 GL5 Gear Lube	0.9 L can (1 qt can)

OOU6075,0004924-19-21MAR18

Feeder House Reverser Gear Case

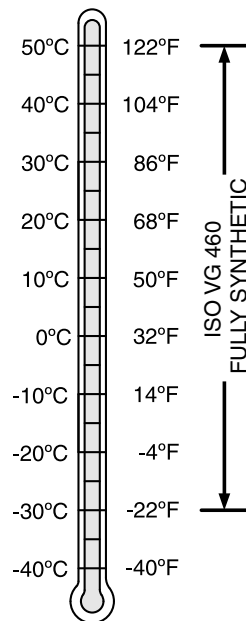

H87702—UN—25JUL07

Oil Viscosities for Air Temperature Ranges

The following Gear Oil is recommended:


- John Deere ISO VG 460 Fully Synthetic

Other gear oils may be used if they meet all of the following specifications:

- ISO VG 460 Gear Oil per ISO12925-1 type CKD
- ANSI/AGMA 9005-E02 (EP)
- US Steel 224
- DIN 51517-3 (CLP)

OUC6075,00046CD-19-28MAR17

Grease

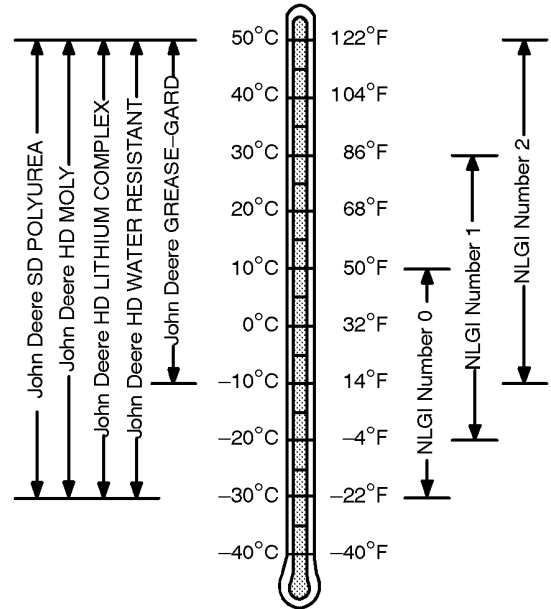

TS1667—UN—30JUN99

Use grease based on NLGI consistency numbers and the expected air temperature range during the service interval.

The following grease is recommended:

- John Deere SD POLYUREA GREASE (TY6341)

Other greases may be used if they meet the following:

- NLGI Performance Classification GC-LB

IMPORTANT: John Deere SD POLYUREA GREASE (TY6341) is the required grease for the feeder house torque sensing cams.

Some types of grease thicken and are not compatible with others.

If grease fitting is missing, replace immediately. Clean fittings thoroughly before using grease gun.

Product Number	Description
TY6341	Multi-Purpose, High-Temperature Extreme Pressure Grease, especially effective in rolling contact applications.

HX,AG,SF7350-19-26OCT99

Brake Fluid (If Equipped)

IMPORTANT: When removing reservoir cap, keep contaminants from entering the reservoir.

Fluid should be 6 mm (1/4 in.) from top.

Fill reservoir with SAE J1703d, DOT-3 or DOT-4 hydraulic brake fluid.

OUO6075,0000AE9-19-10DEC10

Re-refined base stock products may be used if the finished lubricant meets the performance requirements.

DX,ALTER-19-13JAN18

Oil Filters

Filtration of oils is critically important for proper operation and lubrication. John Deere brand oil filters have been designed and produced specifically for John Deere applications.

John Deere filters adhere to engineering specifications for quality of the filter media, filter efficiency rating, strength of the bond between the filter media and the element end cap, fatigue life of the canister (if applicable), and pressure capability of the filter seal. Non-John Deere branded oil filters might not meet these key John Deere specifications.

Always change oil filters regularly as specified in this manual.

DX,FILT1-19-11APR11

Lubricant Storage

Your equipment can operate at top efficiency only when clean lubricants are used.

Use clean containers to handle all lubricants.

Store lubricants and containers in an area protected from dust, moisture, and other contamination. Store containers on their side to avoid water and dirt accumulation.

Make certain that all containers are properly marked to identify their contents.

Properly dispose of all old containers and any residual lubricant they may contain.

DX,LUBST-19-11APR11

Fuel Filters

The importance of fuel filtration cannot be overemphasized with modern fuel systems. The combination of increasingly restrictive emission regulations and more efficient engines requires fuel system to operate at much higher pressures. Higher pressures can only be achieved using fuel injection components with very close tolerances. These close manufacturing tolerances have significantly reduced capacities for debris and water.

John Deere brand fuel filters have been designed and produced specifically for John Deere engines.

To protect the engine from debris and water, always change engine fuel filters as specified in this manual.

DX,FILT2-19-14APR11

Mixing of Lubricants

In general, avoid mixing different brands or types of oil. Oil manufacturers blend additives in their oils to meet certain specifications and performance requirements.

Mixing different oils can interfere with the proper functioning of these additives and degrade lubricant performance.

Consult your John Deere dealer to obtain specific information and recommendations.

DX,LUBMIX-19-18MAR96

Alternative and Synthetic Lubricants

Conditions in certain geographical areas may require lubricant recommendations different from those printed in this manual.

Some John Deere brand coolants and lubricants may not be available in your location.

Consult your John Deere dealer to obtain information and recommendations.

Synthetic lubricants may be used if they meet the performance requirements as shown in this manual.

The temperature limits and service intervals shown in this manual apply to John Deere branded fluids or fluids that have been tested and/or approved for use in John Deere equipment.

Lubrication and Maintenance

Service Interval—Setup or Clearing


CAUTION: To prevent injury, never lubricate or service machine, header, or engine while it is running. Shut OFF engine, set park brake and remove key.

IMPORTANT: Service times are for average conditions. Service more often if machine is used in extreme conditions.

See Calibrations Application Help or Operator's Station Help for further information on setup or clearing service intervals.


OUO6075,0004552-19-20DEC16

Lubrication Decal Locations

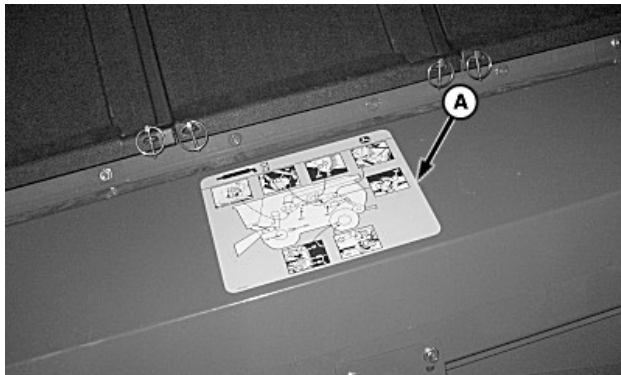

H97176—UN—30JUN10

Left-Hand Lubrication Decal

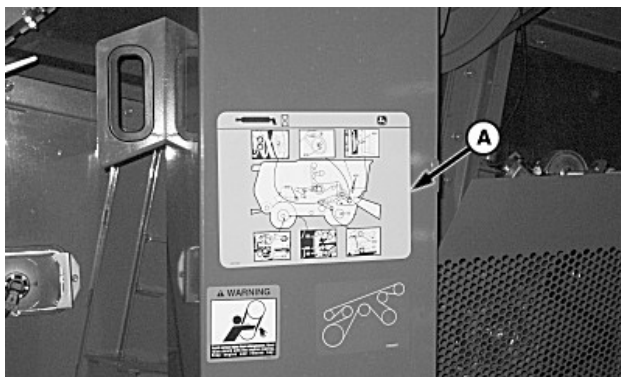

H97177—UN—30JUN10

Right-Hand Lubrication Decal

A—Lubrication Decals

IMPORTANT: HiilMaster Machines: Avoid crushing injuries. Always completely lower machine leveling system before getting underneath for service, adjustments, or repairs. Shut OFF engine, set park brake and remove key.

Lubrication decals (A) show the different locations of grease points around the machine. Follow lubrication

times provided on decals and refer to hour intervals listed in this section for further information.

Bearing failures or overheating can result in a fire. To reduce bearing failures or overheating, follow hour intervals listed in this section for further information.

Crop material and other debris may accumulate around bearings and bearing covers. Inspect and clean these areas periodically throughout the harvest day.

OUO6075,00044AF-19-14NOV16

Hydraulic Hose Replacement

Hydraulic hoses should be inspected frequently for leakage, kinking, cuts, cracks, abrasion, corrosion, exposed wire braid, or any other signs of wear or damage. Worn or damaged hose assemblies can fail during use and should be replaced immediately. See your John Deere dealer for replacement hoses.

CAUTION: If incorrectly rated hose is used, machine damage, injury or death could occur.

If hoses are to be fabricated, ensure that hoses are the same rating as one being replaced. See your John Deere dealer for correct hose rating replacements.

Incorrect hose length or routing can increase chance of hose wear or damage. Use old hose as guide for length and hose routing.

Incorrect fittings can damage mating parts or cause leaks. Make sure to use steel fittings approved for use with hose manufacture. Use correct size and thread type as replaced hose.

OUO6075,00043CC-19-12OCT16

Hydraulic System Cleanliness



X9811—UN—23AUG88

CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene can result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.

Cleanliness

If hydraulic system should be disconnected for service, protect ends of hoses, tubing, and ports of components from contamination with clean, lint-free towels or clean plastic bags.

Before installing any replacement hose, flush the inside with unused diesel fuel or unused commercial petroleum cleaning solvent for 10 seconds minimum. Do not use water, water soluble cleaners, or compressed air.

IMPORTANT: To prevent hydraulic system contamination, clean the hydraulic component surfaces with an electrical contact cleaner.

Remove cover from multicoupler and attach to docking station on header. When coupling to header clean multicoupler surfaces to remove dirt and debris.


OUO6075,0004897-19-12APR18

Accumulator Pressure

NOTE: Due to temperature differences, accumulator pressures can vary significantly and will need to be adjusted. See your John Deere dealer for further information.

OUO6075,00043CE-19-12OCT16

Using High-Pressure Washers

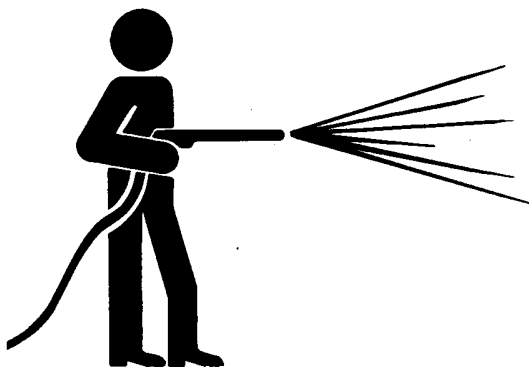


T6642EJ—UN—18OCT88

IMPORTANT: High-pressure washers are an effective means of cleaning the machine. To avoid damage to the machine, do not go closer to 1 m (39 in) and spray at an angle between 45—90 degrees when cleaning sealing surfaces, seals, and decals. Maximum pressure must not exceed 12 000 kPa (120 bar) (1740 psi).

Do not, under any circumstances, spray, or wash components (example; engine) with cold water when hot. Do not use rotary nozzles or water at temperatures over 50°C (122°F), and do not aim at seals. Always keep the water jet moving. Reduce pressure when using high-pressure washer to clean cooling units, bearings, and electronic/electrical equipment. Directing pressurized water at electronic/electrical components or connectors, bearings and hydraulics seals, fuel injection pumps or other sensitive parts and components may cause product malfunctions. Follow the instructions in the high-pressure washer operator's manual and manuals of attached equipment.

OUO6075,0004977-19-17MAY18

Using Pressurized Air

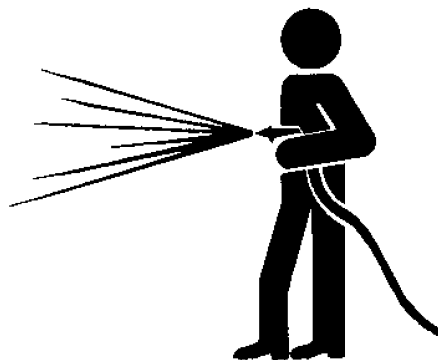

RW56455—UN—30JUN97

IMPORTANT: Directing pressurized air at electronic/ electrical components or connectors, may cause buildup of static electricity and product malfunctions.

OUO6075,0004976-19-17MAY18

Lubrication Symbols



CAUTION: Never lubricate or service machine while the engine is running.



Lubricate with John Deere Multipurpose SD Polyurea Grease High Temperature/Extreme Pressure lubricant or an equal SAE Multipurpose High Temperature Grease with Extreme Pressure (EP) performance at hours shown on the symbol.



Lubricate with John Deere SAE 30 oil or heavier oil at hourly intervals indicated on the symbols.

IMPORTANT: Recommended service intervals are for average conditions. Service more often if machine is operated under adverse conditions.

OUO6075,0004F7E-19-12NOV20

Service Your Machine at Specified Intervals

Perform lubrication, checks, and adjustments at intervals specified in the following tables. Perform service on items at multiples of the original requirement. For example, at 1000 operating hours also service those items listed under every 500 operating hours, every 250 operating hours, every 100 operating hours, and every 25 operating hours or daily.

SS43267,00006D2-19-12AUG15

Important Considerations

IMPORTANT: Clean fittings before and after applying grease. Replace any damaged or missing fittings immediately.


Lubrication and maintenance intervals are listed in this section.

Locations and procedures are listed in the section for that interval.

OUO6075,00045A8-19-25JAN17

Maintenance—Every 10 Hours

Service Interval Chart—Every 10 Hours

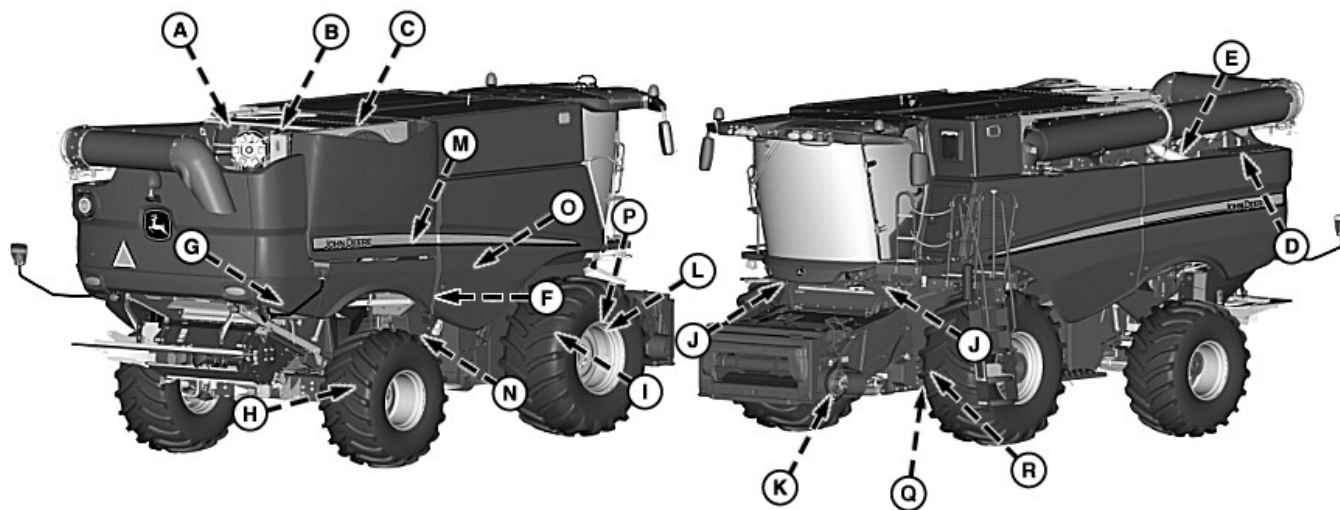

H132951—UN—18JAN21


Legend	Service	Every 10 Hours
A	Check Engine Oil Level	•
B	Check Engine Coolant Level	•
C	Clean Rotary Screen, Oil Cooler, Condenser, Radiator, and Charge Air Cooler	•
D	Check Hydrostatic/Hydraulic Oil	•
E	Check Main Engine Gear Case Oil	•
F	Drain Water from Air Compressor Reservoir (If Equipped)	•
G	Inspect Fuel Precleaner Filter	•
H	Grease Two-Speed Four-Wheel Drive Motor Pivots Grease Two-Wheel Drive Heavy-Duty and Extra Heavy-Duty Axle Spindle Bearings/Pivot Pins (Muddy Conditions)	•
I	Grease Final Drive Outer Bearings (Muddy Conditions)	•
J	Clean Air Conditioner Drain Hose	•
K	Grease Variable Speed Feeder House Reverser Drive Gear Case (S760 and S770 Machines) (Severe Conditions)	•
L	Check Stone Trap	•
M	Grease Tailings Elevator Slip Clutch (Tough Crop Conditions) (S780, S785, and S790 Machines)	•
N	Clean ActiveVision™ Tailings System Camera (If Equipped)	•
O	Clean ActiveVision™ Clean Grain Elevator Camera (If Equipped)	•
P	Central Lube Bank (If Equipped) (HillMaster™ Machines) • Grease Final Drive Pivot • Grease Header Tilt Primary Cylinder Pivot Pin • Grease Leveling Cylinder Barrel	•
Q	Without Central Lube Bank (HillMaster™ Machines) • Final Drive Pivot	•
R	Without Central Lube Bank (HillMaster™ Machines) • Grease Header Tilt Primary Cylinder Pivot Pin • Grease Leveling Cylinder Barrel	•

ActiveVision is a trademark of Deere & Company

HillMaster is a trademark of Deere & Company


OUC6075.0004FB2-19-14MAY21

Engine Oil Level

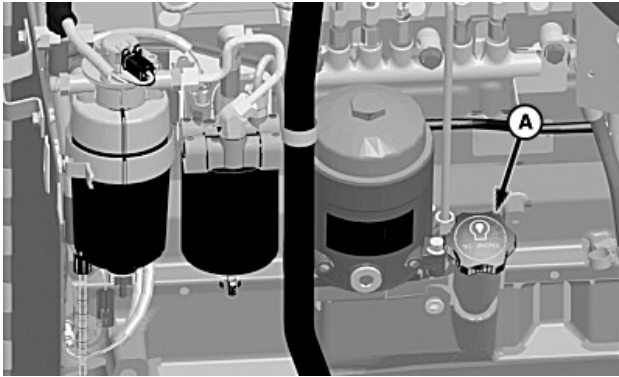


H95375—UN—16FEB10

Tier 2/Stage II (Style A)

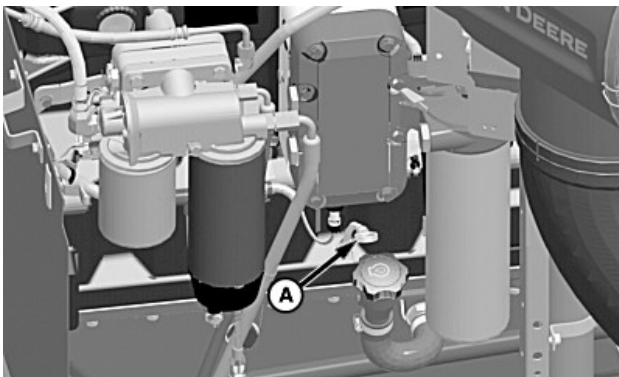


H95419—UN—19FEB10

Tier 2/Stage II (Style B)

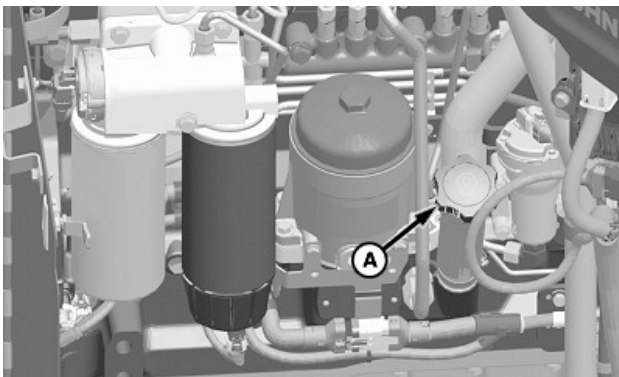


H95306—UN—11FEB10

Final Tier 4/Stage V (Style A)

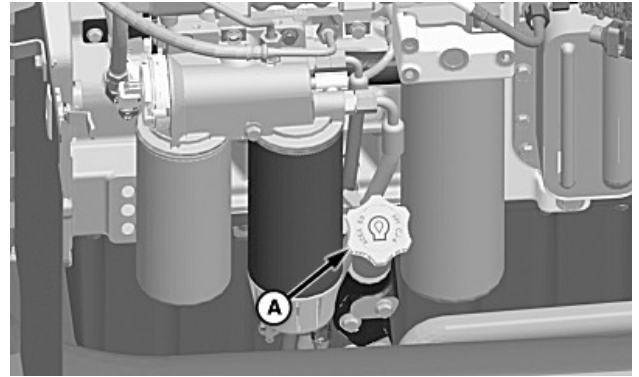


H95396—UN—17FEB10

Final Tier 4/Stage V (Style B)

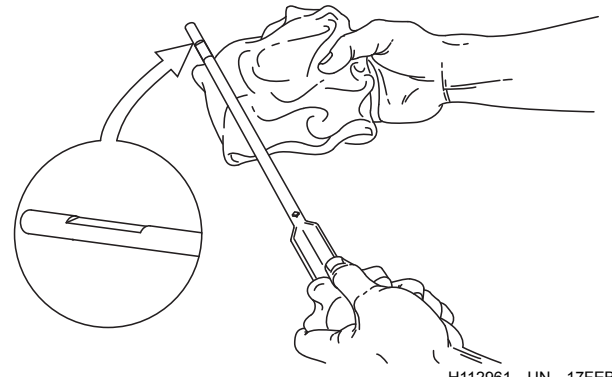

H112961—UN—17FEB15

Tier 2/Stage II

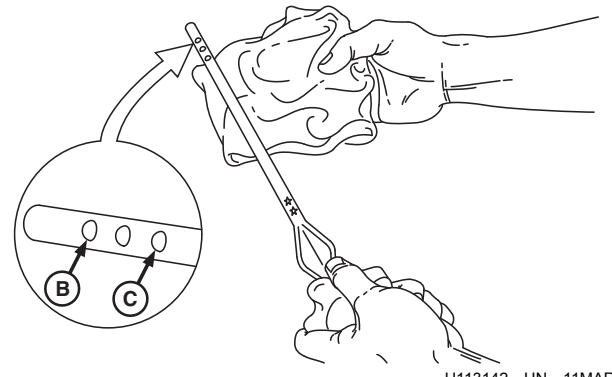

H113142—UN—11MAR15

Final Tier 4/Stage V

A—Dipstick
B—ADD Mark
C—FULL Mark

IMPORTANT: It is vital to maintain engine oil at correct levels to ensure a long service life. Check oil level with the machine parked on level ground.


NOTE: Verify that dipstick is screwed or pushed completely into housing before removing to check oil level.

Check engine oil level with dipstick (A) daily. Do not operate engine when oil level is below "ADD" mark on dipstick.

Remove dipstick and check oil level. Oil level should be between "ADD" and top of cross-hatch area on dipstick. If oil level is below "ADD" mark, add oil as needed. See Fuel and Lubricants section for oil recommendations.

OUO6075,00047E7-19-13NOV17

Engine Coolant

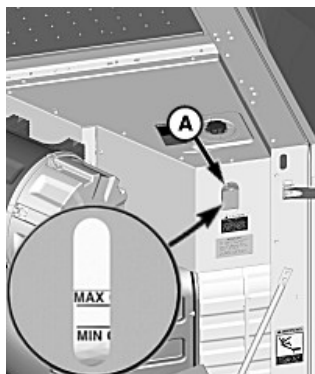

H115495—UN—19AUG15


A—Surge Tank

Coolant level must be between "Max Cold" and "Min Cold" lines. Add coolant as needed if coolant is below "Min Cold" line.

Check engine coolant level in the surge tank (A) with engine cold. Level must be up to "Max Cold" line.

OUO6075,00043FB-19-21DEC16

Rotary Screen, Oil Cooler, Condenser, Radiator, and Charge Air Cooler

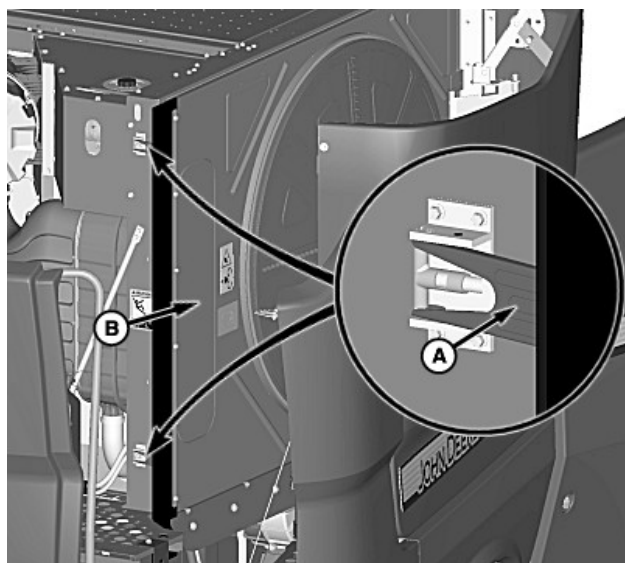


H106847—UN—08FEB13

A—Latches
B—Rotary Screen Door

CAUTION: Shut OFF engine, set park brake and remove key.

Pull latches (A) and open rotary screen door (B).

Tier 2/Stage II (Style A)

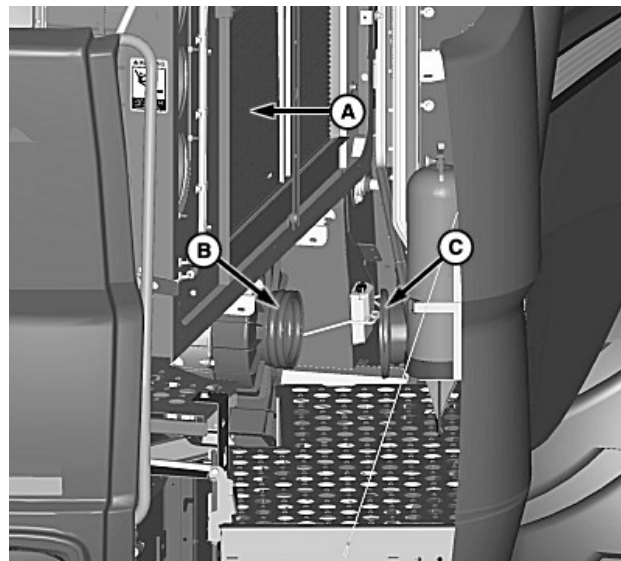

H106852—UN—08FEB13

A—Condenser
B—Vacuum Duct
C—Transfer Duct

NOTE: Clean areas out with compressed air, blowing from inside out.

Check rotary screen daily to be certain it turns freely.

Clean rotary screen with a brush and compressed air when dirt and chaff build up on or behind screen.


Clean condenser (A), oil cooler, charge air cooler, and radiator.

Clean out dirt from the lower vacuum duct (B) and transfer duct (C).


IMPORTANT: Reduce high-pressure washer or pressurized air when cleaning coolers. To prevent damage to fins, direct the water or air straight through the fins to avoid bending them. Use a fin comb to straighten bent fins. Bent fins decrease cooler performance.

Close and latch the rotary screen door.

Tier 2/Stage II (Style B) and Final Tier 4/Stage V

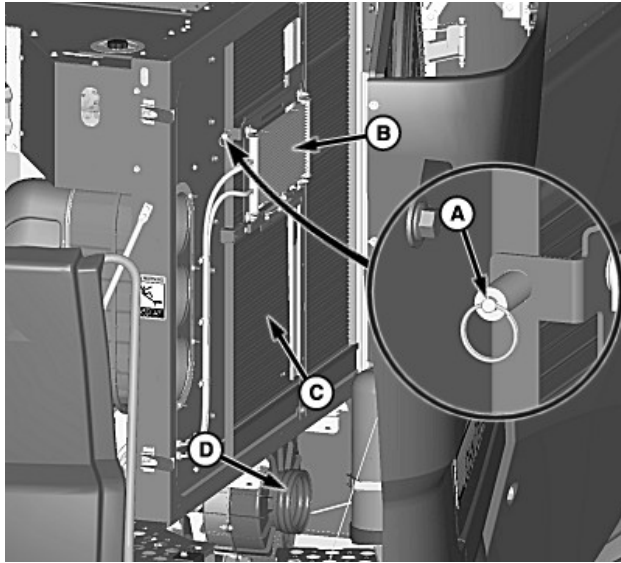

H106853—UN—08FEB13

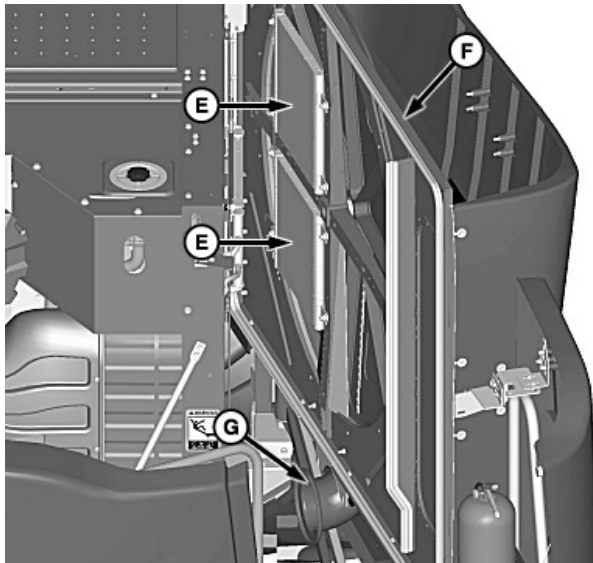

H106854—UN—08FEB13

- A—Lockout Pin
- B—Fuel Cooler
- C—Radiator
- D—Vacuum Duct
- E—Condensers
- F—Rotary Screen Door
- G—Transfer Duct

NOTE: Clean areas out with compressed air, blowing from inside out.

- Check rotary screen daily to be certain it turns freely.
- Clean rotary screen with a brush and compressed air when dirt and chaff build up on or behind screen.
- Pull lockout pin (A) and rotate fuel cooler (B) to clean.
- Clean radiator (C), oil cooler, and charge air cooler.
- Clean out dirt from the lower vacuum duct (D).
- Clean condensers (E) on rotary screen door (F).


Clean out dirt from the transfer duct (G).

IMPORTANT: Reduce high-pressure washer or pressurized air when cleaning coolers. To prevent damage to fins, direct the water or air straight through the fins to avoid bending them. Use a fin comb to straighten bent fins. Bent fins decrease cooler performance.

Close and latch the rotary screen door.

OUC6075,0004975-19-17MAY18

Hydrostatic/Hydraulic Oil

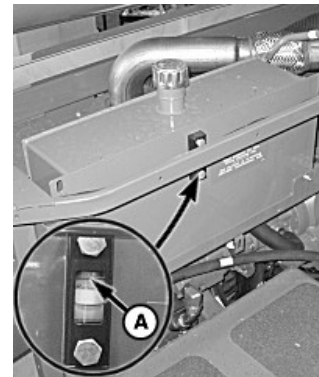

H115659—UN—28AUG15

A—Sight Glass


Check with header on ground.

Oil level must be at top of sight glass (A) with the feeder house fully lowered.

Add oil as needed.

OUC6075,0004413-19-21DEC16

Main Engine Gear Case Oil

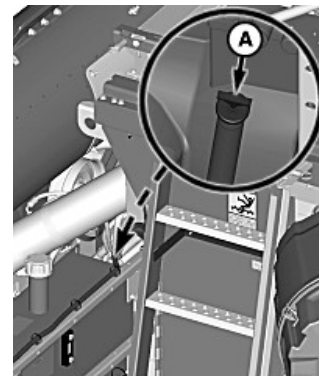

H121743—UN—12JUN17

A—Dipstick

Shut OFF engine, set park brake and remove key before checking hydraulic oil at engine gear case.


Let machine sit for 5 minutes allowing air to settle from oil.

Oil level must not be below "ADD" mark on dipstick (A).

Add oil as needed.

OUC6075,000493D-19-12APR18

Air Compressor Reservoir (If Equipped)

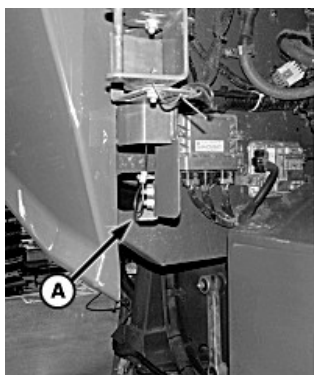


H115497—UN—19AUG15

A—Air Tank Drain Cable

Pull air tank drain cable (A) and drain water from reservoir.

OUC6075,00043FD-19-21DEC16

Fuel Precleaner Filter

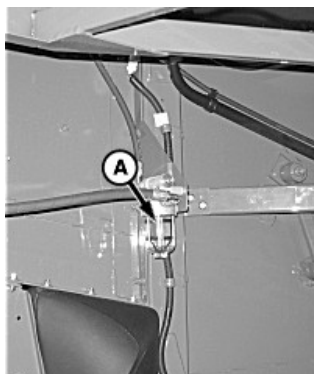


H117746—UN—17MAR16

A—Fuel Precleaner Filter

Inspect fuel precleaner filter (A) for buildup and clean as necessary.

OUC6075,00043FE-19-21DEC16

Two Speed Four-Wheel Drive Motor Pivots (Muddy Conditions)

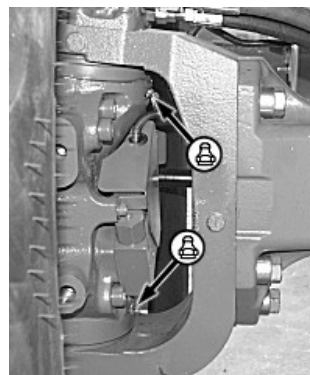

H115499—UN—19AUG15

NOTE: When operating in mud and water, grease motor pivots every 10 hours. In normal conditions, grease every 50 hours.

Grease fittings until grease purges from top and bottom motor pivot seals.

Grease two fittings (both sides).

OUC6075,0004687-19-22MAR17

Two-Wheel Drive Heavy-Duty and Extra Heavy-Duty Axle Spindle Bearings/Pivot Pins (Muddy Conditions)



H115500—UN—19AUG15


NOTE: When operating in mud and water, grease rear axle spindle bearings and motor pivots every 10 hours. In normal conditions, grease every 50 hours.

Grease fittings until grease purges from top and bottom motor pivot seals.

When operating in mud and water, grease fittings (both sides) every 10 hours.

OUC6075,0004688-19-22MAR17

Final Drive Outer Bearings (Muddy Conditions)

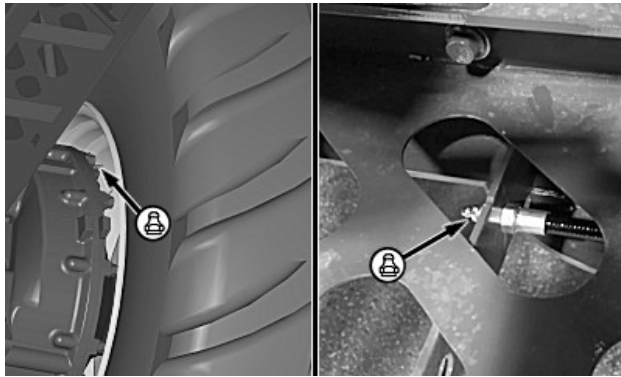

H135707—UN—10JUN22


Style A / Style B

NOTE: When operating in mud and water, grease final drive outer bearings every 10 hours. In normal conditions, grease every 50 hours.

When operating in mud and water, grease fitting (both sides) every 10 hours.

mh69740,1654887775821-19-13JUN22

Air Conditioner Drain Hose

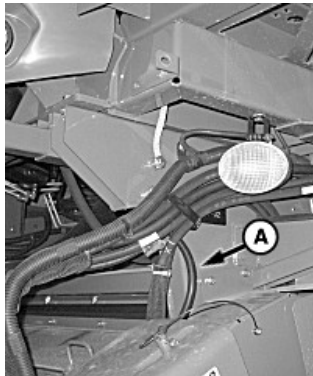


H115502—UN—19AUG15

A—Drain Hose

Clean air conditioner drain hose (A) on both sides of cab.

OOU6075,0004402-19-21DEC16

Variable Speed Feeder House Reverser Drive Gear Case (S760 and S770 Machines) (Severe Conditions)

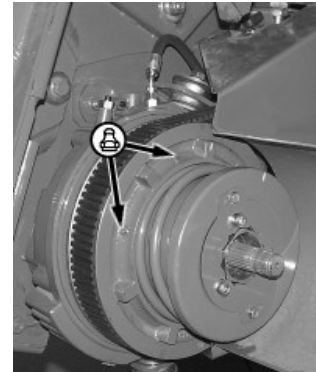

H115503—UN—19AUG15

NOTE: Use John Deere TY6341 Multi-Purpose SD Polyurea Grease or John Deere TY25744 Synthetic Grease when greasing feeder house reverser drive gear case.

Over greasing can allow grease to purge on belt and cause belt failure.

Turn sheave so fittings are in the twelve and two o'clock positions.


When operating in severe conditions or high yielding corn, grease fitting at twelve o'clock position, 5—8 pumps every 10 hours.

Excess grease purges from under spring.

Grease fitting at two o'clock position, 2—3 pumps every 10 hours.

OOU6075,000493E-19-12APR18

Stone Trap

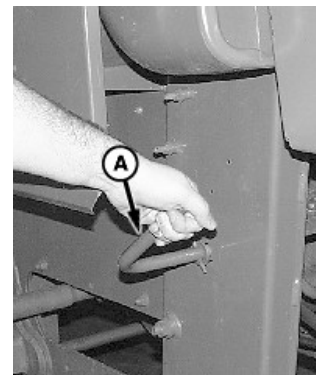


H115496—UN—19AUG15

A—Lever

Remove quick-lock pin and dump stone trap with lever (A). Close stone trap and retain with quick-lock pin.

OOU6075,0004404-19-21DEC16

Tailings Elevator Slip Clutch (Tough Crop Conditions) (S780, S785, and S790 Machines)

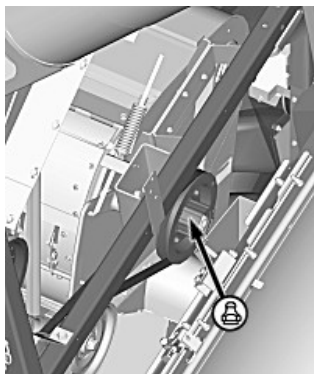


H115504—UN—19AUG15

NOTE: When operating in tough crop conditions, grease tailings elevator slip clutch every 10 hours. In normal conditions, grease every 50 hours.

Grease fitting on tailings elevator slip clutch.

OUC6075,00048A0-19-08FEB18

ActiveVision™ Tailings System Camera (If Equipped)

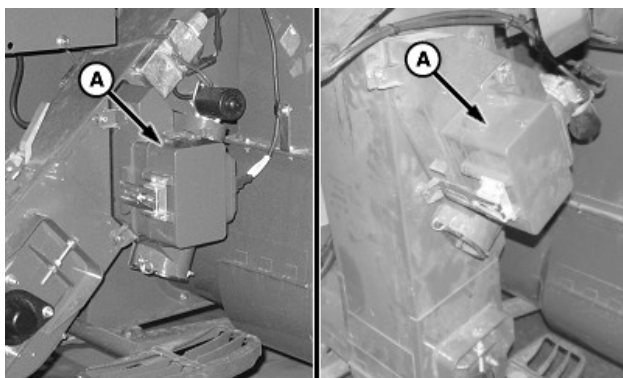

H119876—UN—01NOV16

Style A / Style B


A—ActiveVision™ Tailings System Camera

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ tailings system camera (A).

OUC6075,0004FAF-19-27APR21

ActiveVision™ Clean Grain Elevator Camera (If Equipped)

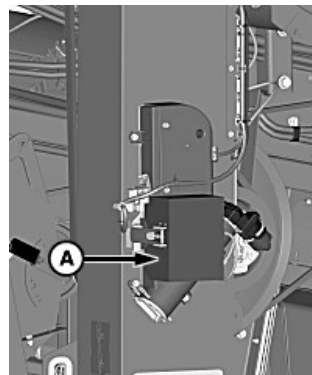

H125313—UN—06NOV18


A—ActiveVision™ Clean Grain Elevator Camera

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ clean grain elevator camera (A).

OUC6075,0004FB0-19-27APR21

Central Lube Bank (If Equipped) (HillMaster™ Machines)

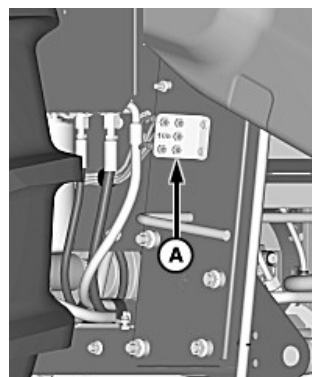

H123115—UN—19JAN18

A—Bracket

Grease fittings on bracket (A) provide grease to the following locations:

- Final Drive Pivots (both sides)
- Header Tilt Primary Cylinder Pivot Pin
- Leveling Cylinder Barrels (both sides)

Grease these fittings until the grease purges from those specific areas.

OUC6075,0004B3F-19-07JUN19

Final Drive Pivot (Without Central Lube Bank) (HillMaster™ Machines)

Grease fitting (both sides) until grease purges.

OUO6075.0004891-19-07FEB18




H120022—UN—14NOV16

Grease fitting (both sides) until grease purges.

OUO6075.000488F-19-07FEB18

Header Tilt Primary Cylinder Pivot Pin (Without Central Lube Bank) (HillMaster™ Machines)

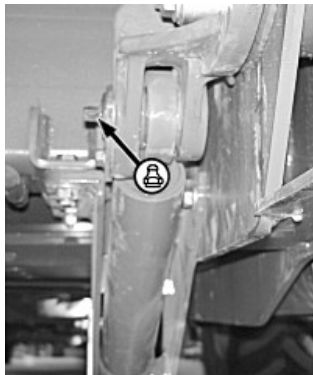


H120023—UN—14NOV16

Grease fitting (both sides) until grease purges.

OUO6075.0004B41-19-09APR19


Leveling Cylinder Barrel (Without Central Lube Bank) (HillMaster™ Machines)

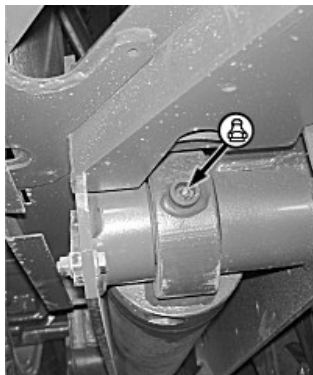

H120024—UN—14NOV16

Maintenance—Every 50 Hours

Service Interval Chart—Every 50 Hours

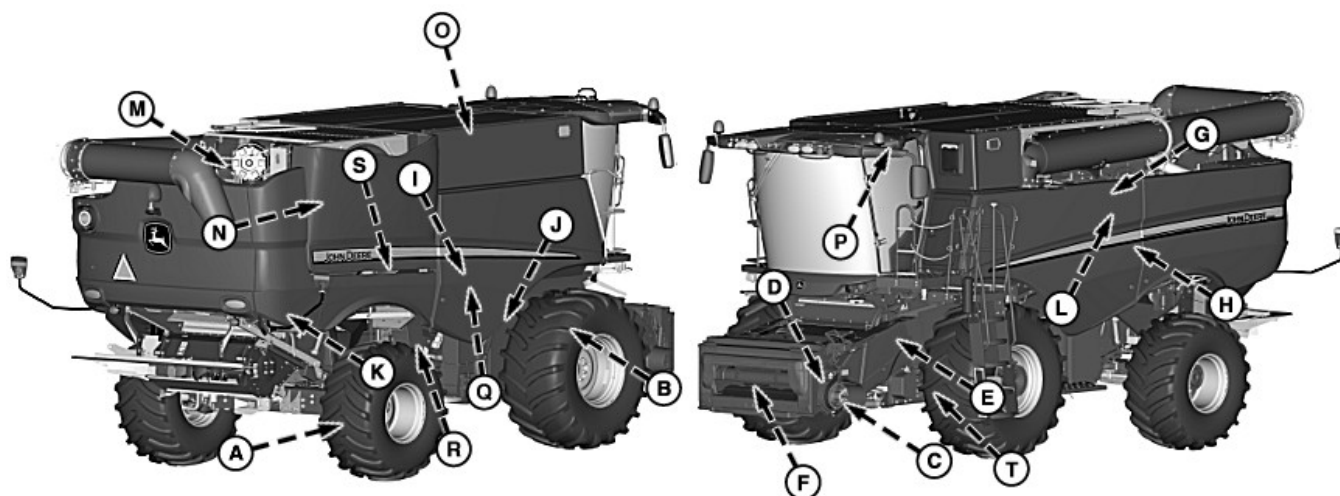


H132953—UN—18JAN21

Legend	Service	Every 50 Hours
A	Grease Two-Speed Four-Wheel Drive Motor Pivots Grease Two-Wheel Drive Heavy-Duty and Extra Heavy-Duty Axle Spindle Bearings/Pivot Pins (Normal Conditions)	•
B	Grease Final Drive Outer Bearings (Normal Conditions)	•
C	Grease Variable Speed Feeder House Reverser Drive Gear Case (S760 and S770 Machines) (Normal Conditions)	•
D	Check Feeder House Reverser Gear Case Oil	•
E	Grease Variable Speed Feeder House Upper Sheaves (S760 and S770 Machines)	•
F	Check/Clean Lateral Tilt Feeder House	•
G	Cycle Separator Variable Speed Driven/Driver Sheaves	•
H	Grease Separator Variable Speed Driven/Driver Sheaves (S770 Optional, S780, S785, and S790 Machines)	•
I	Grease Cleaning Fan Variable Upper Sheaves	•
J	Grease Cleaning Fan Variable Lower Sheaves	•
K	Inspect Fuel Precleaner Filter	•
L	Check Two-Speed Separator Drive Oil	•
M	Check Water Separator Primary Fuel Filter	•
N	Check Radiator, Charge Air Cooler, Oil Cooler, and Condenser	•
O	Check Mass Flow Sensor	•
P	Clean/Replace Cab Fresh Air Filter	•
Q	Clean Moisture Sensor Clean Moisture Sensor Bypass Auger (If Required) Clean ActiveVision™ Clean Grain Elevator Camera (If Equipped)	•
R	Clean Tailings System Bypass Auger (If Required) Clean ActiveVision™ Tailings System Camera (If Equipped)	•
S	Grease Tailings Elevator Slip Clutch (Normal Crop Conditions) (S780, S785, and S790 Machines)	•
T	Grease Final Drive Couplers	•

ActiveVision is a trademark of Deere & Company

OUC6075.0004FB9-19-14MAY21

Two Speed Four-Wheel Drive Motor Pivots (Normal Conditions)

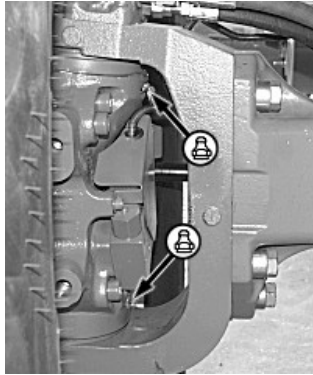

H115499—UN—19AUG15


NOTE: When operating in mud and water, grease motor pivots every 10 hours. In normal conditions, grease every 50 hours.

Grease fittings until grease purges from top and bottom motor pivot seals.

Grease two fittings (both sides).

OUC6075,000468A-19-22MAR17

Final Drive Outer Bearings (Normal Conditions)

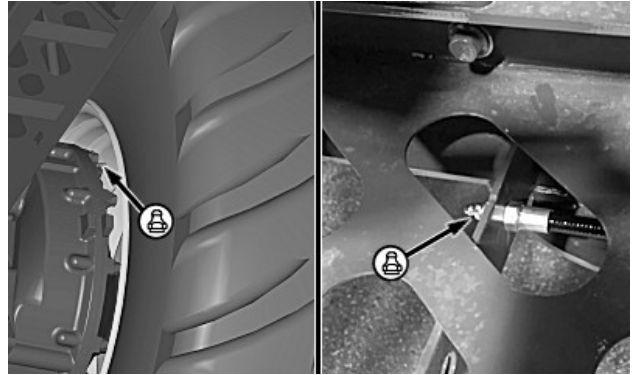

H135707—UN—10JUN22


Style A / Style B

NOTE: When operating in mud and water, grease final drive outer bearings every 10 hours. In normal conditions, grease every 50 hours.

When operating in normal conditions, grease fitting (both sides) every 50 hours.

mh69740,1654890255263-19-13JUN22

Two-Wheel Drive Heavy-Duty and Extra Heavy-Duty Axle Spindle Bearings and Pivot Pins (Normal Conditions)

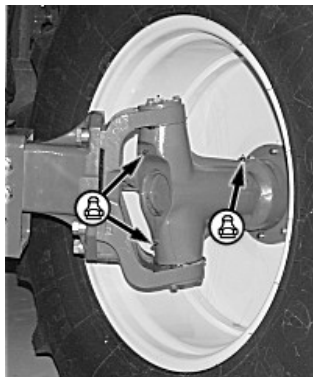

H115500—UN—19AUG15


NOTE: When operating in mud and water, grease rear axle spindle bearings and motor pivots every 10 hours. In normal conditions, grease every 50 hours.

Grease fittings until grease purges from top and bottom pivot seals.

When operating in normal conditions, grease fittings (both sides) every 50 hours.

OUC6075,000468B-19-22MAR17

Variable Speed Feeder House Reverser Drive Gear Case (S760 and S770 Machines) (Normal Conditions)

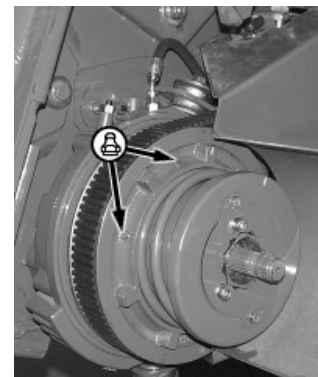

H115503—UN—19AUG15

NOTE: Use John Deere TY6341 Multi-Purpose SD Polyurea Grease or John Deere TY25744 Synthetic Grease when greasing feeder house reverser drive gear case.

Over greasing can allow grease to purge on belt and cause belt failure.

Turn sheave so fittings are in the twelve and two o'clock positions.


When operating in normal conditions, grease twelve o'clock fitting (10—15 times) and two o'clock fitting (5—8 times) every 50 hours.

After greasing, cycle variable sheaves through speed

range a couple of times to ensure grease spreads evenly over cam surfaces.

OUC6075,000493F-19-12APR18

Feeder House Reverser Drive Gear Case Oil

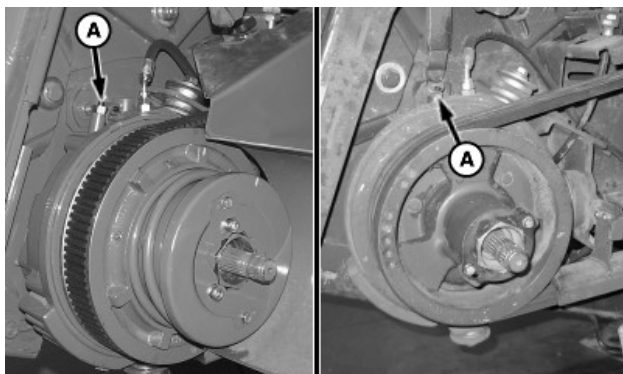

H115651—UN—27AUG15

Variable Speed/Multi-Speed Reverser Gear Case

A—Dipstick

Raise feeder house and lower safety stop.


NOTE: Gear cases with an oil cooler require gear case to be run for several minutes. This ensures that the cooler is filled with oil.

Oil level must show on knurled part of dipstick.

Remove dipstick (A) and check oil level.

OUC6075,00046D1-19-28MAR17

Variable Speed Feeder House Upper Sheaves (S760 and S770 Machines)

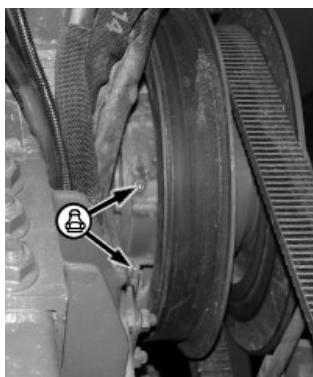

H115652—UN—27AUG15


NOTE: It may be necessary to rotate the sheave for access to fittings.

Raise feeder house and lower safety stop.

Lube fittings from the underside of the feeder house.

OUC6075,000440C-19-21DEC16

Lateral Tilt Feeder House

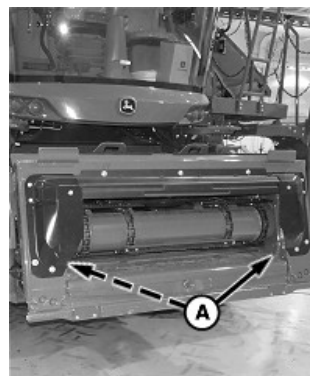


H115653—UN—28AUG15

A—Cleanout Areas

Check cleanout areas (A) for packed material which could prevent header from tilting. Clean out if necessary.


OUC6075,000440D-19-21DEC16

Separator Variable Speed Driven/Driver Sheaves

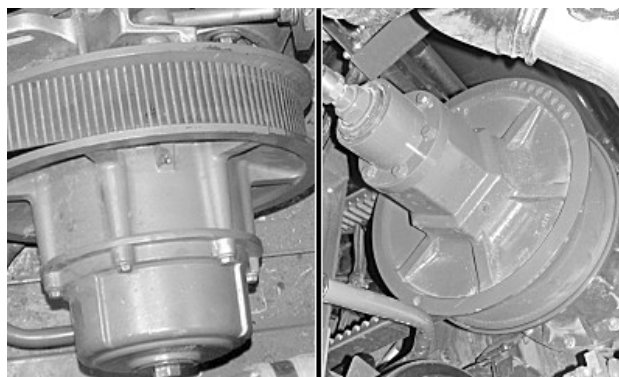

H120802—UN—13FEB17

Driven Sheaves / Driver Sheaves (Small Diameter)

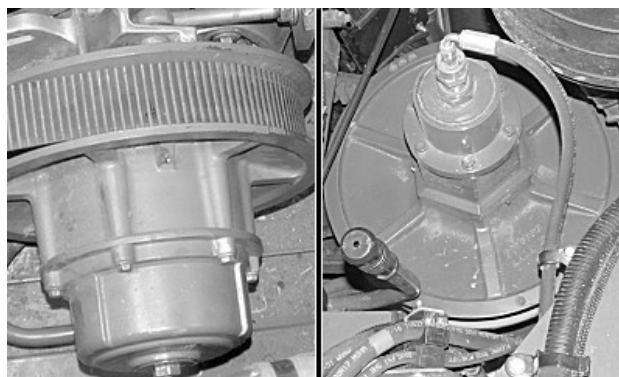

H120803—UN—13FEB17


Driven Sheaves / Driver Sheaves (Large Diameter)

Separator Variable Speed Sheaves: Start machine and cycle sheaves through speed range if operated at

high speed all the time. Cycling sheaves helps replenish bushings with grease already inside sheave cavity.

OUC6075,00045D9-19-13FEB17

Separator Variable Speed Driven/Driver Sheaves (S770 Optional, S780, S785, and S790 Machines)

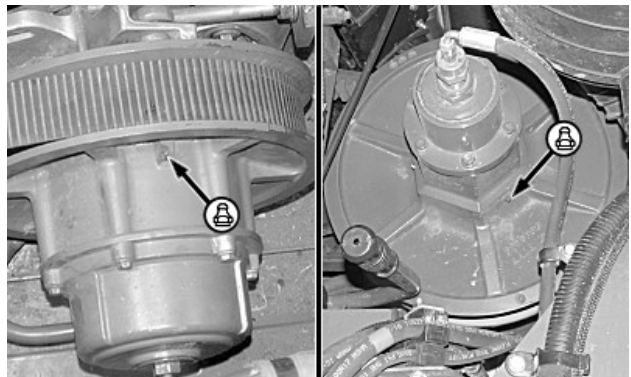

H120804—UN—13FEB17

Driven Sheaves / Driver Sheaves

NOTE: On S770 machines equipped with the optional large diameter driver sheave, the fitting **MUST** be greased every 50 hours.

IMPORTANT: Separator Variable Speed Driven and Driver Sheaves: Pump 20—25 shots of grease into fitting. **DO NOT OVER GREASE.**


Separator Variable Speed Driven Sheaves: Rotate sheaves to access fitting.

NOTE: Start machine and cycle separator through full speed range a couple of times to distribute grease evenly.

Separator Variable Speed Driver Sheaves: Close sheaves (high speed) before greasing fitting on the outer sheave hub. Rotate sheave to access fitting. Cycle cylinder speed to distribute grease if operated at high speed all the time.

OUC6075,00045DA-19-20MAR17

Cleaning Fan Variable Upper and Lower Sheaves

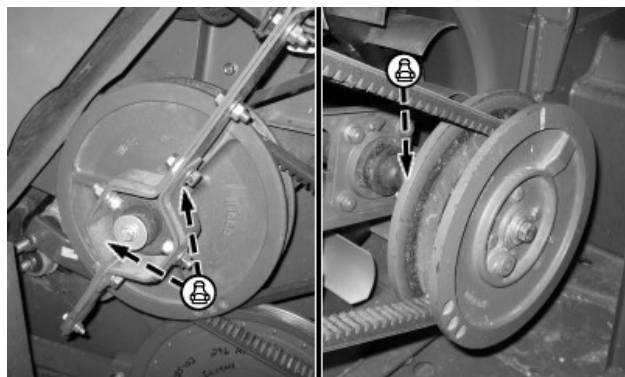

H115656—UN—28AUG15


Upper Sheaves / Lower Sheaves

Cleaning Fan Variable Upper Sheaves: Grease both fittings on hub of outer sheave. Rotate sheaves for fitting access.

Cleaning Fan Variable Lower Sheaves: Grease fitting on hub located on inner sheave. Rotate sheaves for fitting access.

OUC6075,0004410-19-21DEC16

Fuel Precleaner Filter

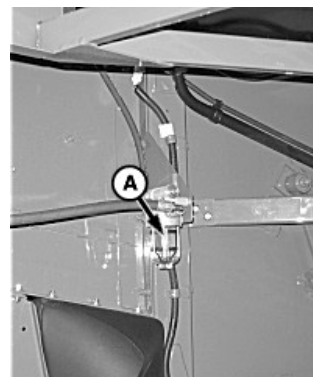

H115657—UN—28AUG15

A—Fuel Precleaner Filter

Visually check fuel precleaner filter (A) and clean if buildup is visible on screen.

Close the fuel tank shutoff valve.

Remove fuel precleaner filter and clean screen.

Install screen and filter. Open the fuel tank shutoff valve to fill. See Fuel Maintenance—As Required (Engine Fluids and Filters) section for further information.

OUC6075,0004411-19-21DEC16

Two-Speed Separator Drive Oil



H115658—UN—28AUG15

A—Dipstick


Remove dipstick (A) and check oil level. Add oil as needed to correct level on dipstick.

OUO6075,0004412-19-21DEC16

Open drain (A) and drain water out separator bowl.

OUO6075,00047EA-19-13NOV17

Radiator, Charge Air Cooler, Oil Cooler, and Condenser

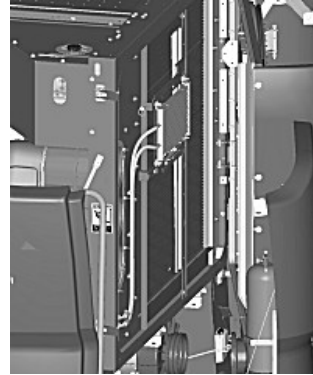


H115662—UN—28AUG15

Clean radiator by blowing compressed air from inside out.

Check areas for chaff buildup and clean if necessary.


OUO6075,0004415-19-21DEC16

Water Separator Primary Fuel Filter

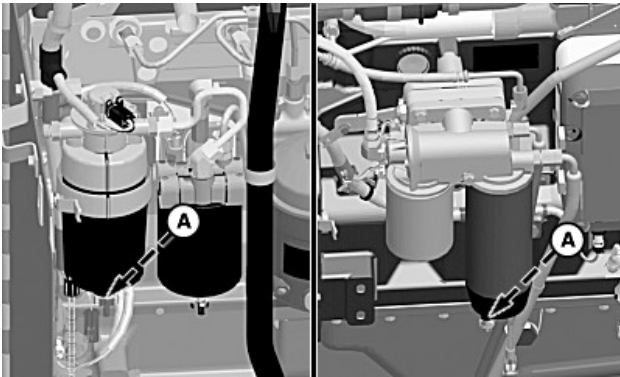

H119923—UN—02NOV16

Tier 2/Stage II (Style A / Style B)

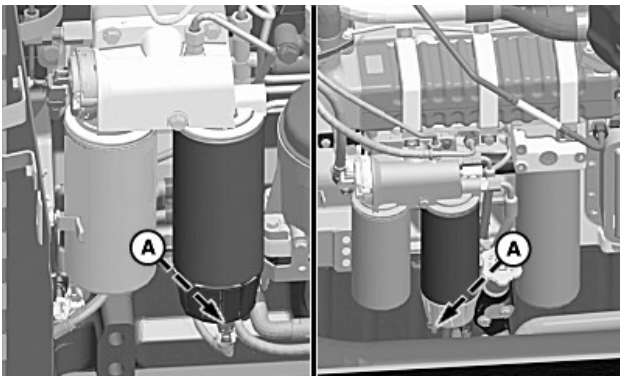


H119924—UN—02NOV16

Final Tier 4/Stage V (Style A / Style B)

A—Drain

Check separator bowl for water.

Mass Flow Sensor

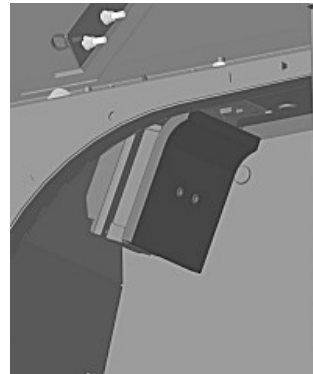


H123564—UN—22FEB18

NOTE: If machine is equipped with grain tank covers, it is necessary to remove bottom support rod hardware to lower the grain tank loading auger.

Lower grain tank loading auger and clean mass flow sensor plate.

OUO6075,0004882-19-22FEB18

Cab Fresh Air Filter

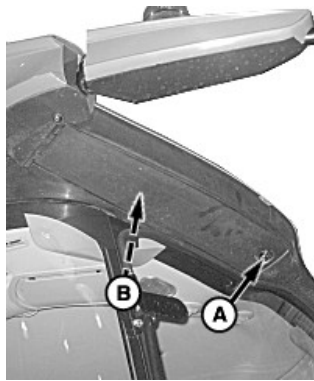

H115664—UN—28AUG15

A—Knob
B—Fresh Air Filter

NOTE: Cab fresh air filter may require cleaning sooner in dusty conditions.

Turn knob (A) and lower access cover. Remove fresh air filter (B) to clean or replace.


OOU6075,0004417-19-21DEC16

- A dry rag is preferred for cleaning. If that does not work, then scrub with just a rag and water.
- Do not power wash the moisture sensor face.

Install moisture sensor and perform a Moisture Sensor calibration. See Calibrations Application Help or Operator's Station Help for further information.

OOU6075,0004FB5-19-14MAY21

Moisture Sensor Bypass Auger (If Required)

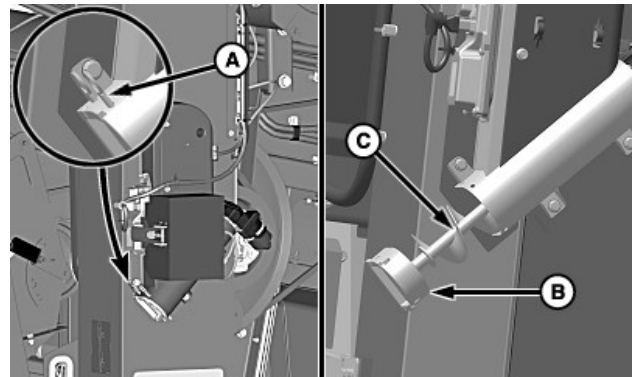

H132959—UN—18JAN21



A—Pin (2 used)
B—End Cap
C—Auger

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Remove pins (A) and end cap (B).
2. Remove auger (C) from the moisture sensor bypass.
3. Clean the auger and area inside the moisture sensor bypass.
4. Install and align the auger.
5. Install end cap and retain with pins.

OOU6075,0004FB6-19-18JAN21

Moisture Sensor (If Equipped)

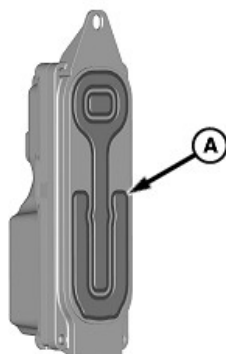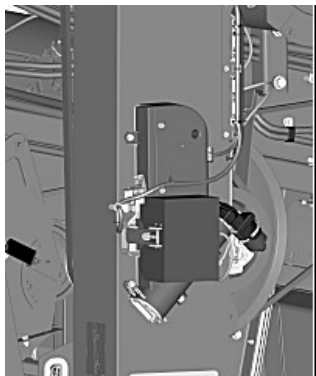

H125315—UN—06NOV18

A—Moisture Sensor


IMPORTANT: Static electricity can damage the moisture sensor module. To avoid damage, ensure that a metal surface is touched on the machine with at least one hand or arm before working on or cleaning.

The moisture sensor has internal components that can loosen when dropped, which is not immediately detectable. Handle the moisture sensor with care when working on or cleaning.

Remove and clean the moisture sensor (A) when operating in weeds, green crops, or small grains (canola).

- Do not use solvents or other cleaners on the sensor face.

ActiveVision™ Clean Grain Elevator Camera (If Equipped)

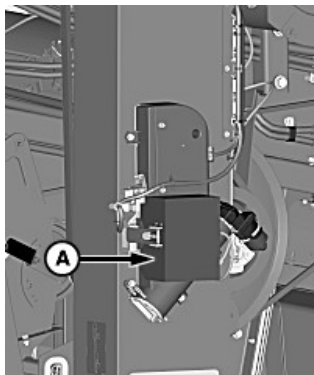

H125313—UN—06NOV18


A—ActiveVision™ Clean Grain Elevator Camera

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ clean grain elevator camera (A).


OUO6075,0004FB4-19-27APR21

Tailings Sensor Bypass Auger (If Required)

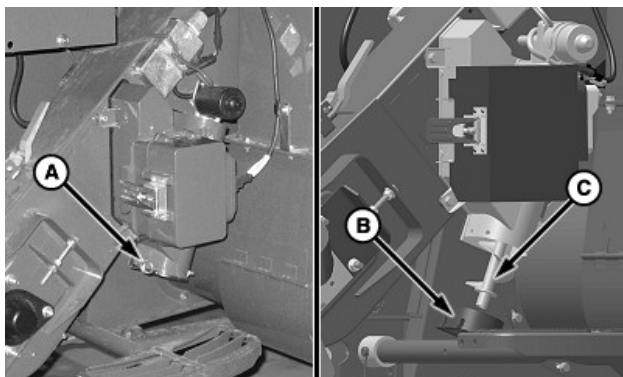

H132960—UN—18JAN21

Style A

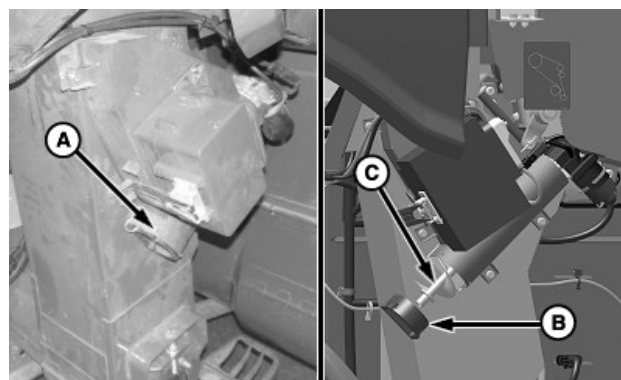

H132961—UN—19JAN21

Style B


A—Pin (2 used)
B—End Cap
C—Auger

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Remove pins (A) and end cap (B).
2. Remove auger (C) from the moisture sensor bypass.
3. Clean the auger and area inside the moisture sensor bypass.
4. Install and align the auger.
5. Install end cap and retain with pins.

OUO6075,0004FB8-19-18JAN21

ActiveVision™ Tailings System Camera (If Equipped)

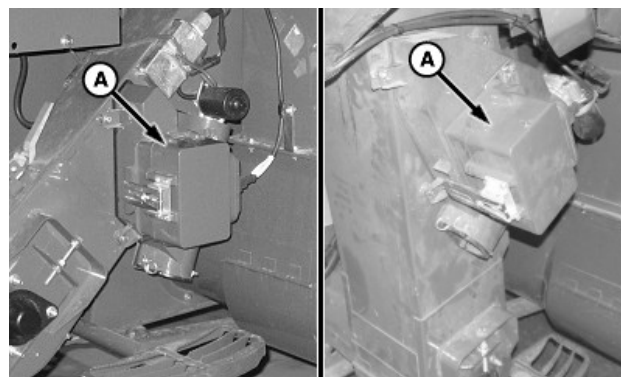

H119876—UN—01NOV16

Style A / Style B

A—ActiveVision™ Tailings System Camera

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ tailings system camera (A).

OUO6075,0004FB7-19-27APR21


Tighten the hex head cap screw on the final drive coupler (both sides) to specification.

Specification

Hex Head Cap Screw—Torque. 10 N·m
(89 lb·in)

OUO6075,0004ECG-19-09JUL20

Tailings Elevator Slip Clutch (Normal Crop Conditions) (S780, S785, and S790 Machines)

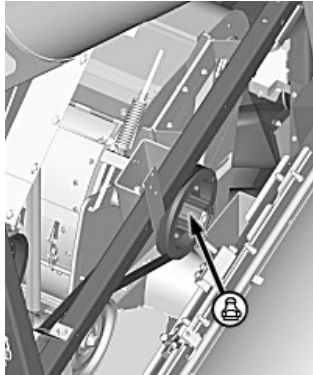


H115504—UN—19AUG15

NOTE: When operating in tough crop conditions, grease tailings elevator slip clutch every 10 hours. In normal conditions, grease every 50 hours.

Grease fitting on tailings elevator slip clutch.

OUO6075,00048A1-19-08FEB18

Final Drive Couplers

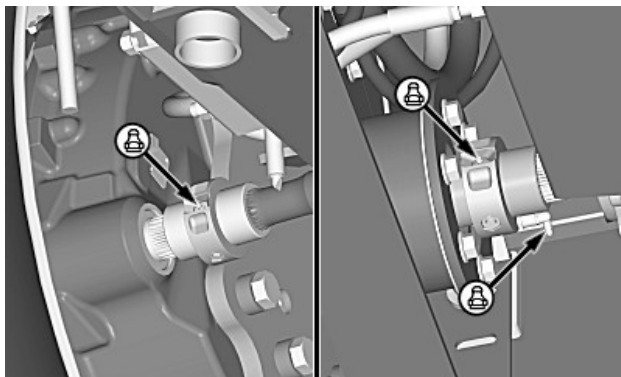

H124886—UN—10AUG18

Non-HillMaster™ Machines / HillMaster™ Machines

NOTE: Grease fittings until grease purges from splines.

Non-HillMaster™ machines have one grease fitting per final drive coupler.


HillMaster™ machines have two grease fittings per final drive coupler.

Grease the final drive coupler fittings (both sides).

ActiveVision is a trademark of Deere & Company
HillMaster is a trademark of Deere & Company

Maintenance—First 100 Hours

Service Interval Chart—First 100 Hours

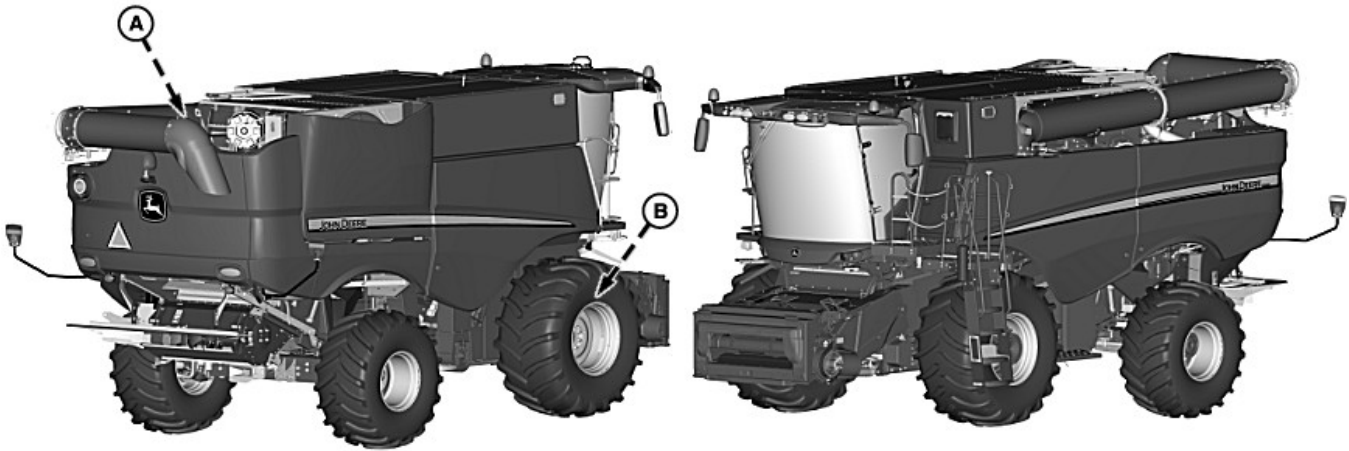


H119631—UN—13OCT16

Legend	Service	First 100 Hours
A	Replace Main Engine Gear Case Filter (S760 and S770 ProDrive™ Machines)	•
B	Replace Main Engine Gear Case Lube Filter (ProDrive™ Machines)	•

ProDrive is a trademark of Deere & Company

OOU6075,00046D2-19-28MAR17

Main Engine Gear Case Filter (S760 and S770 ProDrive™ Machines)

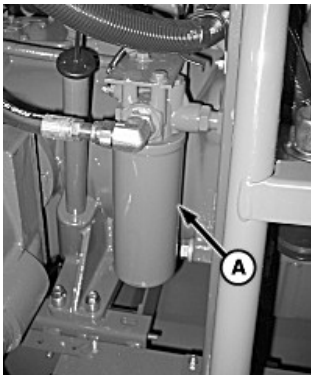

H115506—UN—27AUG15

A—Filter

NOTE: It is not necessary to drain system when replacing filter.

Remove and replace filter (A). Coat seal on the filter with oil. Hand tighten, then tighten 1/2 turn more.

OOU6075,00046D3-19-28MAR17

Main Engine Gear Case Lube Filter (ProDrive™ Machines)



H115507—UN—27AUG15

A—Filter


NOTE: It is not necessary to drain system when replacing filter.

Remove and replace filter (A). Coat seal on the filter with oil. Hand tighten, then tighten 1/2 turn more.

OOU6075,00046D4-19-28MAR17

Maintenance—Every 100 Hours

Service Interval Chart—Every 100 Hours

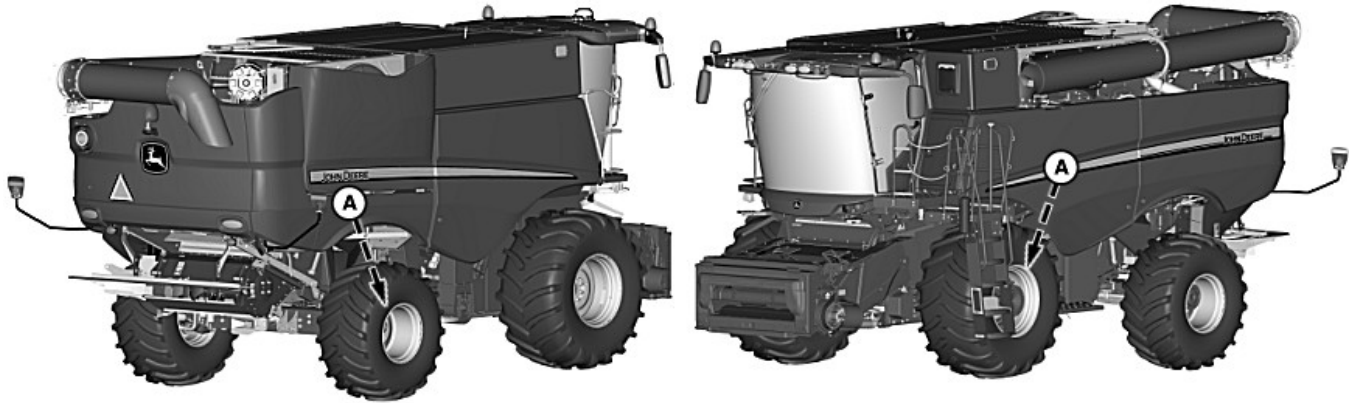

H119634—UN—13OCT16

A—Tire Pressure and Bolt Locations

Legend	Service	Every 100 Hours
A	Check Tire Pressure and Bolt Torque	•

OUC6075,000441C-19-20DEC16

Tire Pressure and Bolt Torque




H115666—UN—28AUG15

Check front and rear tire pressure and wheel bolt torque. See Ground Drive and Rear Axle section for further information.

OUC6075,000441D-19-21DEC16

Maintenance—Every 200 Hours

Service Interval Chart—Every 200 Hours

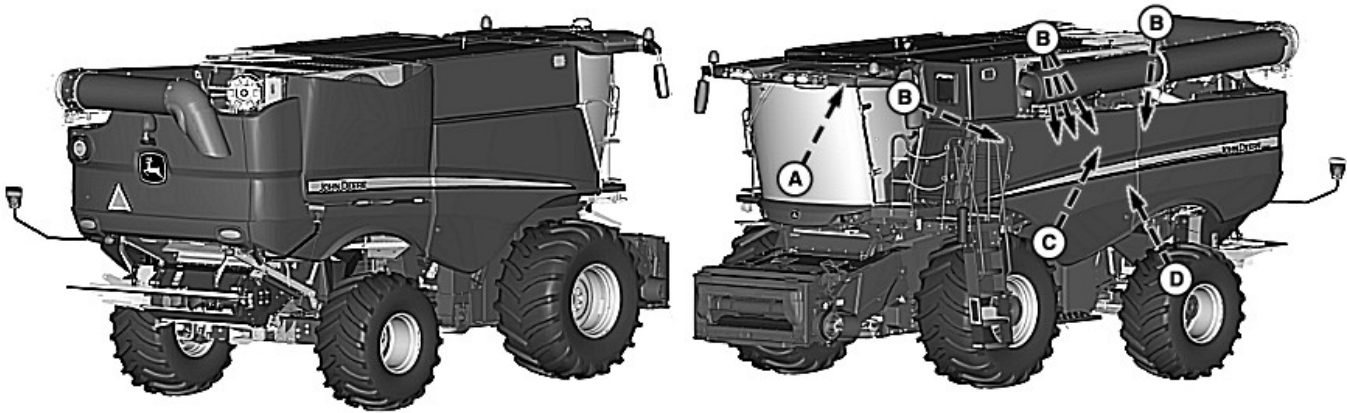


H119635—UN—13OCT16

Legend	Service	Every 200 Hours
A	Clean/Replace Recirculating Filter	•
B	Grease Primary Countershaft (Multi-Speed Feeder House on S770, S780, S785, and S790 Machines)	•
C and D	Grease Separator Variable Speed Driven/Driver Sheaves (S760 and S770 Machines)	•

OOU6075,00045E0-19-13FEB17

Recirculating Filter

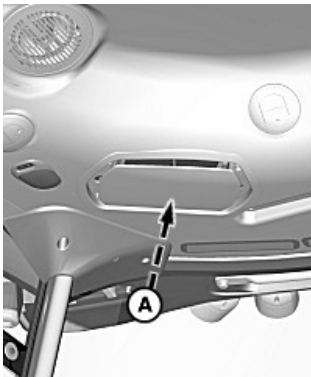


H115668—UN—28AUG15

A—Recirculating Filter

Remove cover to clean or replace recirculating filter (A).

OOU6075,000441F-19-21DEC16

Primary Countershaft (Multi-Speed Feeder House on S770, S780, S785, and S790 Machines)

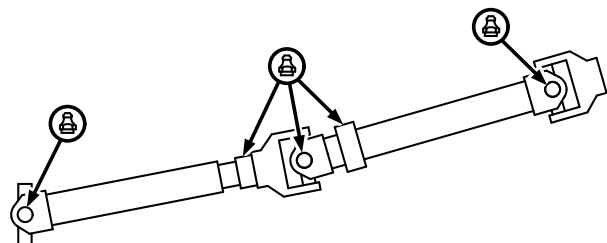


H119656—UN—17OCT16

NOTE: Machines not equipped with the multi-speed feeder house have one grease fitting and should be greased every 400 hours.

Rotate to access five fittings and grease.

OOU6075,00044B8-19-21DEC16

Separator Variable Speed Driven/Driver Sheaves (S760 and S770 Machines)

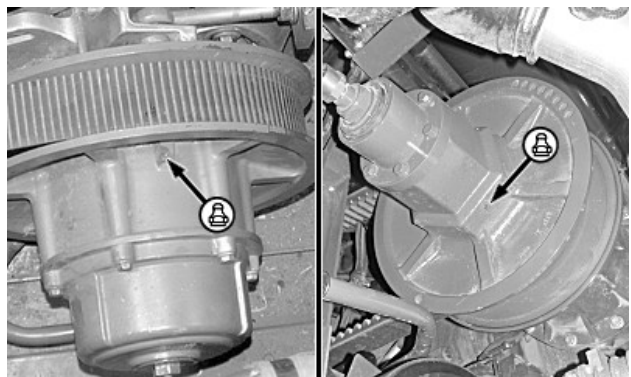

H120805—UN—13FEB17

Driven Sheaves / Driver Sheaves

NOTE: On S770 machines equipped with the optional large diameter driver sheave, the fitting **MUST** be greased every 50 hours.

IMPORTANT: Separator Variable Speed Driven and Driver Sheaves: Pump 20—25 shots of grease into fitting. **DO NOT OVER GREASE.**

Separator Variable Speed Driven Sheaves: Rotate sheaves to access fitting.


NOTE: Start machine and cycle separator through full speed range a couple of times to distribute grease evenly.

Separator Variable Speed Driver Sheaves: Close sheaves (high speed) before greasing fitting on the outer sheave hub. Rotate sheave to access fitting. Cycle cylinder speed to distribute grease if operated at high speed all the time.

OUO6075,00045DB-19-20MAR17

Maintenance—Every 250 Hours

Service Interval Chart—Every 250 Hours

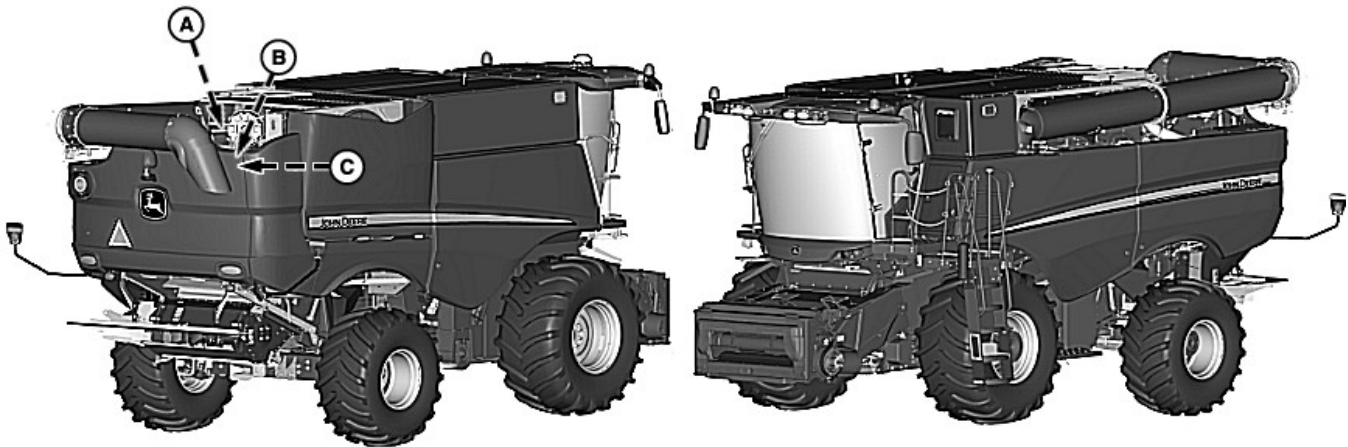


H119636—UN—14OCT16

Legend	Service	Every 250 Hours
A	Change Engine Oil and Filter (Tier 2/Stage II) Change Engine Oil and Filter (Final Tier 4/Stage V)	•
B	Inspect Fuel Tank Breather	•
C	Inspect Diesel Exhaust Fluid (DEF) Tank Breather (Final Tier 4/Stage V)	•


OOU6075,00047ED-19-15NOV17

Engine Oil and Filter (Tier 2/Stage II)

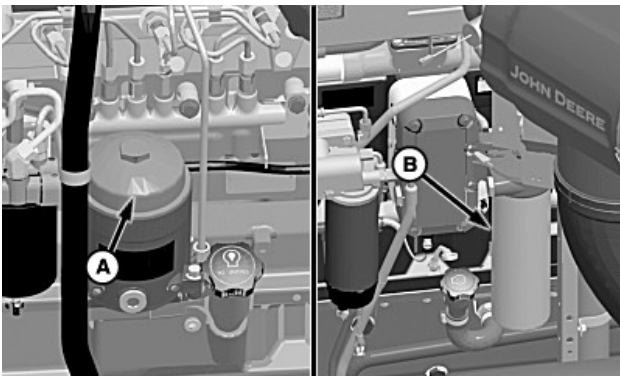


H115672—UN—28AUG15

Style A / Style B

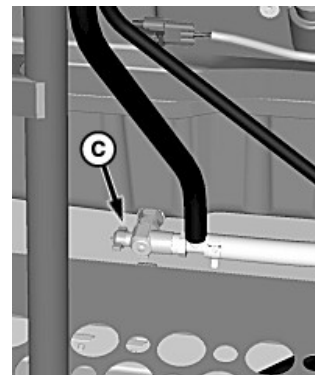

H115673—UN—28AUG15

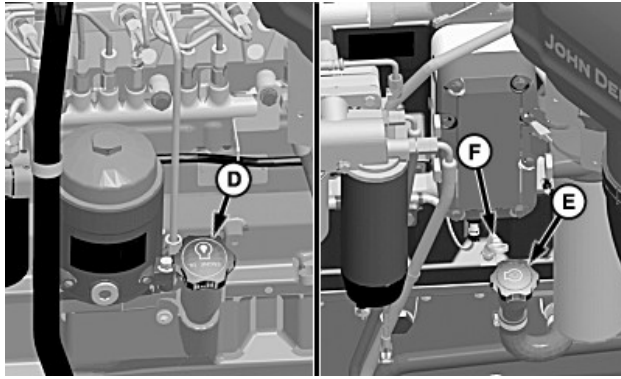

H115674—UN—28AUG15

Style A / Style B

- A—Cap
- B—Oil Filter
- C—Drain
- D—Dipstick
- E—Cap
- F—Dipstick

IMPORTANT: Change oil every 100 hours if fuel with a high sulfur content is used. See Fuels and Lubricants section for further information on sulfur content.

Fill crankcase with seasonal viscosity grade oil or Torq-Gard™ (250 hours service interval). If using John Deere Plus-50™ or Plus-50™ II engine oil and a John Deere filter, service interval can be extended by 50 percent. Example: 250 hours extends to 375 hours.

1. **Style A:** Engine Crankcase Top Load Oil Filter: Remove cap (A) and remove filter. Replace filter and install cap. Tighten to specification.

Specification

Oil Filter Cap—Torque. 40 N·m
(30 lb·ft)


Style B: Engine Crankcase Oil Filter: Remove and replace oil filter (B).

2. Open drain (C) to remove oil.
3. **Style A:** Engine Crankcase Top Load Oil Filter: Remove dipstick (D) to fill and check oil level after filling.

Style B: Engine Crankcase Oil Filter: Remove cap (E) to fill and check oil with dipstick (F) after filling.


OUO6075,00044BA-19-25JAN17

Engine Oil and Filter (Final Tier 4/Stage V)

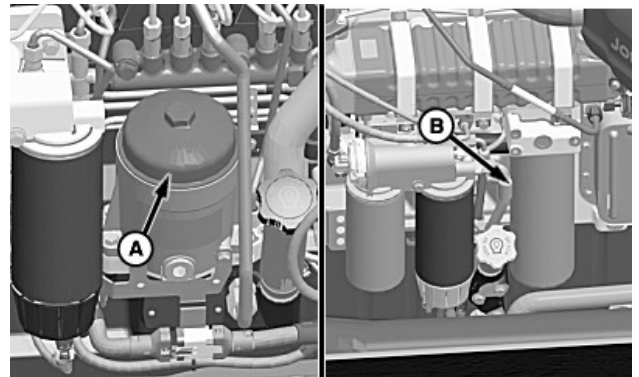


H115675—UN—28AUG15

Style A / Style B

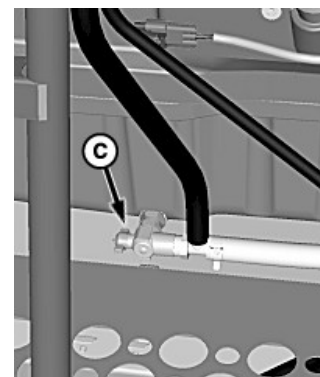

H115673—UN—28AUG15

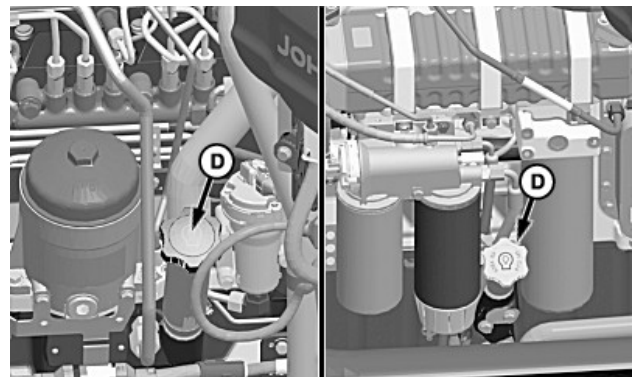

H115676—UN—28AUG15

- A—Cap
- B—Oil Filter
- C—Drain
- D—Dipstick

IMPORTANT: Change oil every 250 hours when using other engine oils as specified in Fuels and Lubricants section.

Change oil every 400 hours when using John Deere Plus-50™ II engine oil and a John Deere filter. See Fuels and Lubricants section for further information.

Final Tier 4/Stage V engines require Plus-50™ II engine oil or a API CK-4, API CJ-4, ACEA E9, ACEA E6 certified oils.

Torq-Gard is a trademark of Deere & Company
Plus-50 is a trademark of Deere & Company

Use only ultra low sulfur diesel (ULSD) fuel with a maximum sulfur content of 15 mg/kg (15 ppm).

1. **Style A:** Engine Crankcase Top Load Oil Filter: Remove cap (A) and remove filter. Replace filter and install cap. Tighten to specification.

Specification


Oil Filter Cap—Torque. 40 N·m
(30 lb·ft)

Style B: Engine Crankcase Oil Filter: Remove and replace oil filter (B).

2. Open drain (C) to remove oil.
3. Remove dipstick (D) to fill and check oil level after filling.

OUC6075,00047EE-19-13NOV17

Fuel Tank Breather

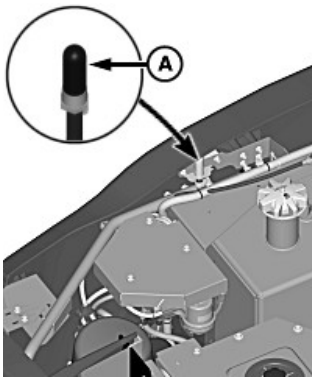


H125430—UN—04DEC18

A—Fuel Tank Breather

Visually inspect fuel tank breather (A). Do not allow debris to collect on breather. Remove breather from hose and clean.

OUC6075,0004A5E-19-04DEC18

Diesel Exhaust Fluid (DEF) Tank Breather (Final Tier 4/Stage V)

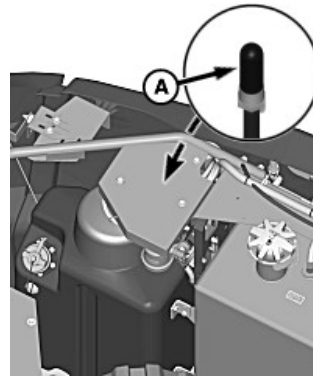

H125431—UN—04DEC18


A—Diesel Exhaust Fluid (DEF) Tank Breather

Visually inspect Diesel Exhaust Fluid (DEF) tank breather (A). Do not allow debris to collect on breather. Remove breather from hose and clean.

OUC6075,0004A5F-19-04DEC18

Maintenance—Every 400 Hours

Service Interval Chart—Every 400 Hours

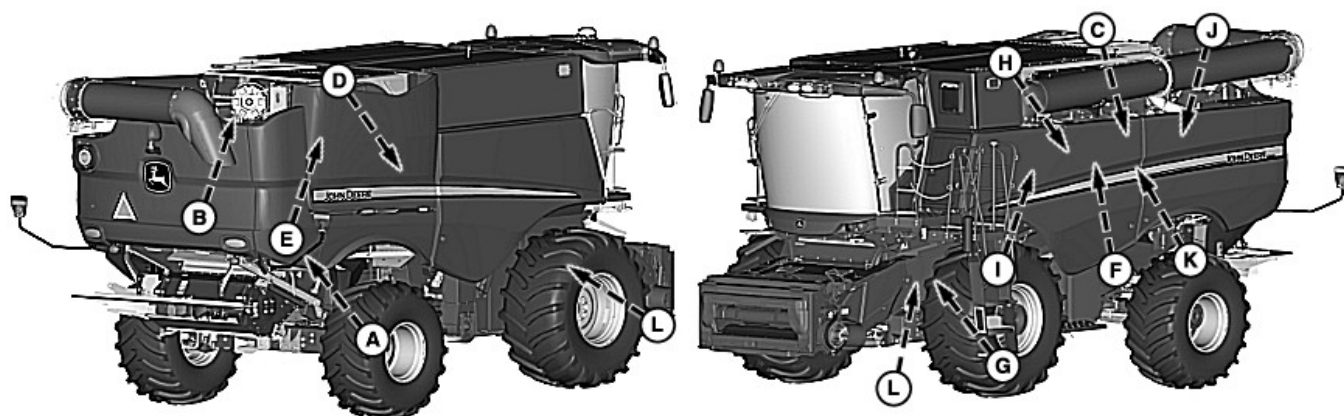


H119653—UN—17OCT16

Legend	Service	Every 400 Hours
A	Clean Fuel Precleaner Filter	•
B	Check Water Separator (S780, S785, and S790 Machines) Replace Primary and Secondary Fuel Filter	•
C, D, E	Grease Variable Speed Driver/Driven Sheaves (Final Tier 4/Stage V S760 and S770 Machines)	•
F	Grease Unloading Auger Upper Gear Case	•
G	Grease Header/Reel Drive Pump Sheave Bearing	•
H	Grease Primary Countershaft Universal Joint Spline (Non-Multi-Speed Feeder House)	•
I	Grease Vertical Unloading Auger Upper Gear Case (S780, S785, and S790 Machines)	•
J	Grease Chopper/Unloading Driveshaft Bearing	•
K	Grease Variable Speed Driver Sheave	•
L	Grease Feed Accelerator Bearings	•

OUC6075,00047F1-19-13NOV17

Fuel Precleaner Filter

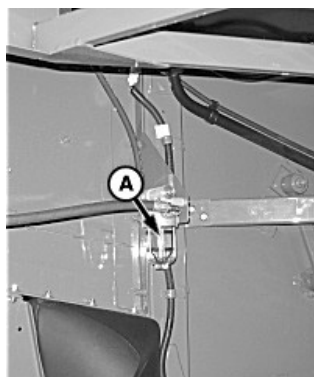

H115657—UN—28AUG15


A—Fuel Precleaner Filter

CAUTION: Shut OFF engine, set park brake and remove key before performing maintenance work on the fuel filter.

1. Close the fuel tank shutoff valve.
2. Remove fuel precleaner filter (A) and clean screen.
3. Install screen and filter. Open fuel tank shutoff valve to fill. See Maintenance—As Required (Engine Fluids and Filters) section for further information.


OUC6075,0004428-19-17JAN17

Water Separator

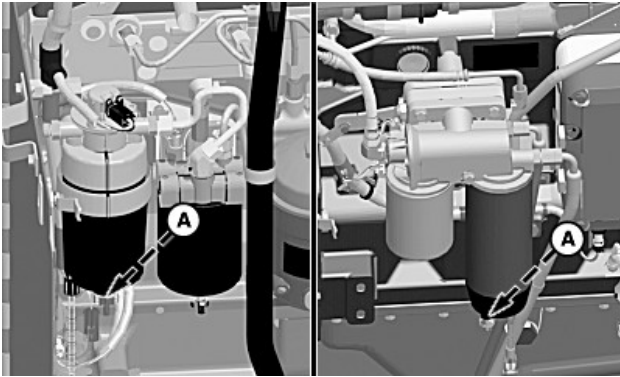

H119923—UN—02NOV16

Tier 2/Stage II (Style A / Style B)

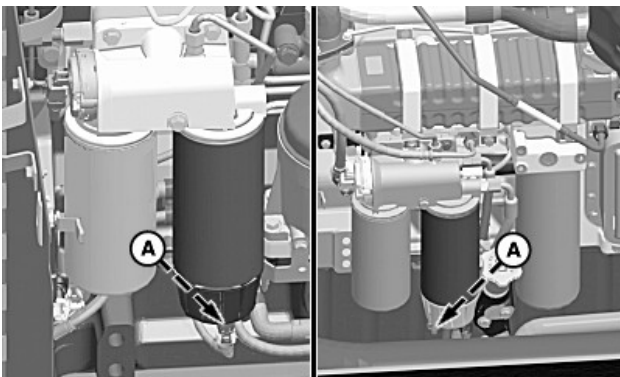

H119924—UN—02NOV16

Final Tier 4/Stage V (Style A / Style B)

A—Drain


Check water separator (A) for water or when diagnostic trouble code is generated.

Open drain to remove water from separator. See Maintenance—As Required (Engine Fluids and Filters) section for further information.

Remove and retain water separator.


OUC6075,00047F3-19-13NOV17

Primary and Secondary Fuel Filter

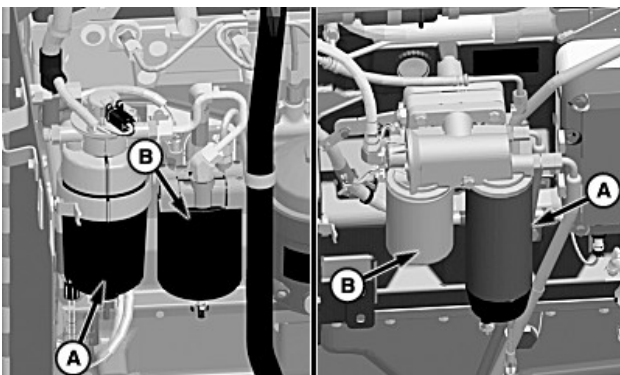

H119925—UN—02NOV16

Tier 2/Stage II (Style A / Style B)

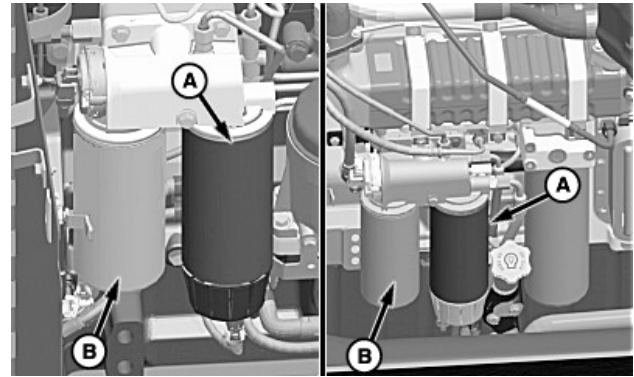

H119926—UN—02NOV16

Final Tier 4/Stage V (Style A / Style B)

A—Primary Fuel Filter
B—Secondary Fuel Filter

CAUTION: High-pressure fluid remaining in fuel lines can cause serious injury. Before disconnecting fuel lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system, wait a minimum of 15 minutes after engine is stopped.

Shut OFF engine, set park brake and remove key before performing maintenance work on the fuel filter.

1. Primary Fuel Filter:

- Close fuel tank shutoff valve.
- Remove and replace primary fuel filter (A) when performance decline is noticed or diagnostic trouble code is generated.
- Disconnect water sensor (if equipped)
- Remove fuel from the filter and discard.
- Install replacement primary fuel filter.
- Open fuel tank shutoff valve, and turn key switch ON to prime the fuel system. See Maintenance—As Required (Engine Fluids and Filters) section for further information.


2. Secondary Fuel Filter:

- Close fuel tank shutoff valve.
- Remove and replace secondary fuel filter (B) when performance decline is noticed or diagnostic trouble code is generated.
- Remove fuel from the filter and discard.
- Install replacement secondary fuel filter.
- Open fuel tank shutoff valve, and turn key switch ON to prime the fuel system. See Maintenance


—As Required (Engine Fluids and Filters)
section for further information.

OUC6075,00047F5-19-13NOV17

Variable Speed Driver/Driven Sheaves (Final Tier 4/Stage V) (S760 and S770 Machines)

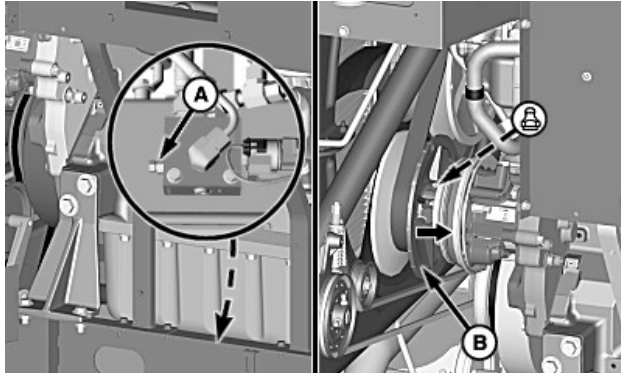

H115710—UN—31AUG15

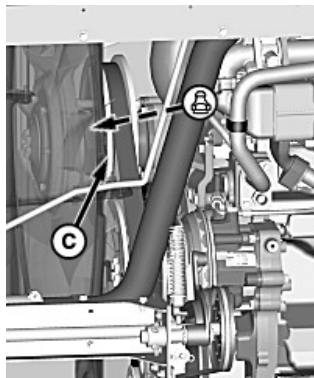

H115711—UN—31AUG15

A—Bleed Screw
B—Driver Sheave
C—Driven Sheave

NOTE: Variable speed drive bleed valve and sheaves are accessible by opening separator access cover.

1. Variable Speed Drive Bleed Valve - Loosen bleed screw (A) to relieve pressure from sheaves.

IMPORTANT: Inner driver sheave must be fully retracted to obtain proper amount of lubrication.

Sheave movement range can be impaired if sheaves are not fully separated.

2. Variable Speed Driver Sheave - Locate grease fitting on the driver sheave (B). Pull driver sheave towards the engine until completely open. Grease fitting 10—12 pumps. Excess grease purges from the front side of the driver sheave.

IMPORTANT: Driven sheaves must be fully closed to obtain proper amount of lubrication.

Sheave movement range can be impaired if sheaves are not fully closed.

3. Variable Speed Driven Sheave - Locate grease fitting on driven sheave (C). Push driven sheaves together until they are completely closed. Grease fitting 10—12 pumps. Excess grease purges from the front side of the driven sheave.


Tighten bleed screw and nut on the valve to specification.

Specification

Bleed Screw and Nut—Torque. 23 N·m
(17 lb·ft)

OUC6075,00047F6-19-13NOV17

Unloading Auger Upper Gear Case

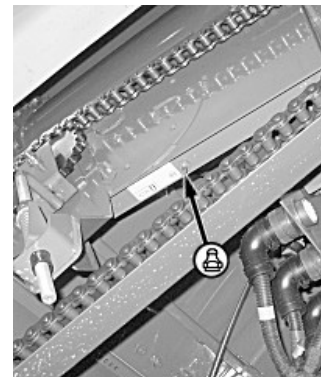


H115712—UN—31AUG15

Grease the fitting.

OUC6075,000468D-19-28MAR17

Header/Reel Drive Pump Sheave Bearing

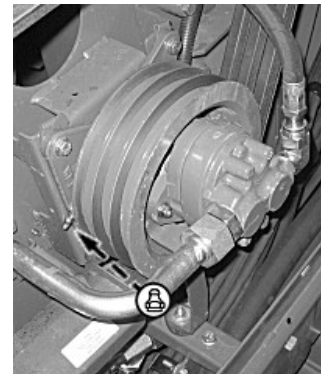

H115713—UN—31AUG15

Grease the fitting.

OUC6075,000468E-19-20MAR17

Primary Countershaft Universal Joint Spline (Non-Multi-Speed Feeder House)




H115714—UN—31AUG15

NOTE: Machines equipped with multi-speed feeder house drive have five grease fittings.

Rotate to access fitting and grease.

OUO6075,000442F-19-17JAN17

Chopper/Unloading Driveshaft Bearing

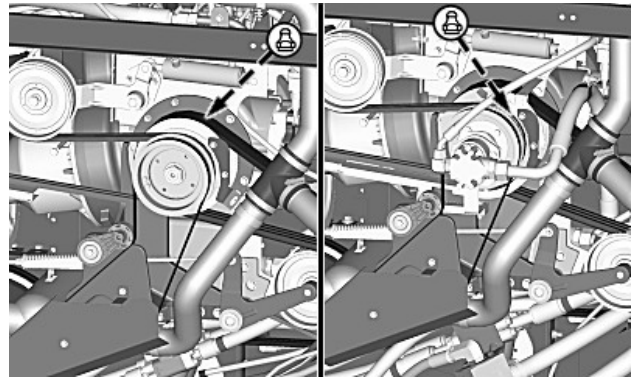


H115716—UN—31AUG15

Style A / Style B

Rotate sheave to access fitting on bottom of the sheave groove, and grease the fitting.

OUO6075,0004690-19-20MAR17

Vertical Unloading Auger Upper Gear Case (S780, S785, and S790 Machines)

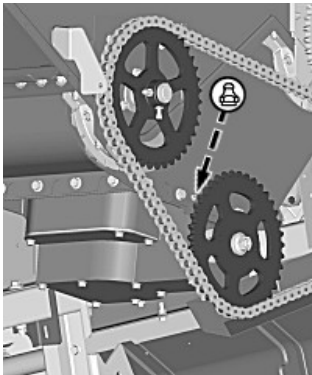


H115715—UN—31AUG15

IMPORTANT: Pump 10 shots of grease into fitting.

Grease the fitting.

OUO6075,000468F-19-28MAR17

Variable Speed Driver Sheave

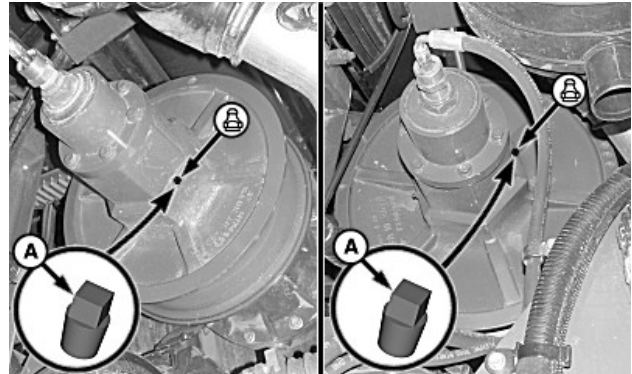

H122949—UN—18DEC17

Driver Sheaves (Small Diameter) / Driver Sheaves (Large Diameter)


A—Pipe Plug

IMPORTANT: Remove pipe plug (A) and install grease fitting. Pump 40—45 shots of grease into fitting. **DO NOT OVER GREASE.** Remove grease fitting and reinstall pipe plug.

1. Close sheaves (high speed) before greasing at pipe plug in the outer sheave hub.
2. Rotate sheave for pipe plug access.
3. Cycle cylinder speed to distribute grease if operated at high speed all the time.

OUO6075,0004862-19-18DEC17

Feed Accelerator Bearings

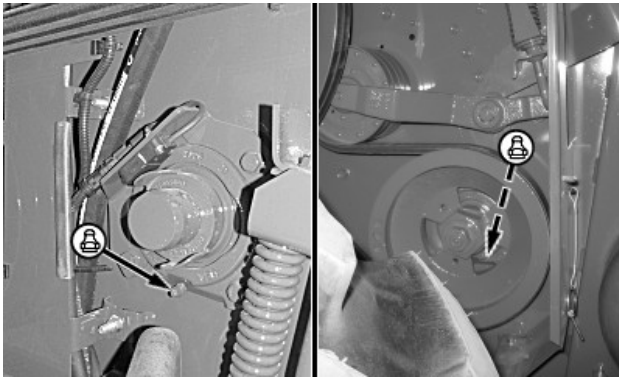

H123176—UN—26JAN18

Left-Hand Side / Right-Hand Side

Rotate sheaves to access and grease fittings.

OUO6075,000488A-19-26JAN18

Service Interval Chart—Every 400 Hours (Continued)



H119654—UN—17OCT16

Legend	Service	Every 400 Hours
A	Grease Tailings Auger Drive Slip Clutch (S760 and S770 Machines)	•
B	Grease Conveyor Auger Drive Slip Clutch	•
C	Grease Right-Hand Side Lube Bank	•
D	Grease Overshot Beater Bearings (Optional) (S770, S780, S785, and S790 Machines)	•
E	Grease Discharge Beater Bearings	•
F	Grease Cleaning Fan Shaft Bearings	•
G	Grease Rear Axle Tie Rod	•
H	Grease Spreader Disk (If Equipped)	•
I	Check Overshot Beater Gear Case Oil (Optional) (S770, S780, S785, and S790 Machines)	•
J	Check Separator Drive Oil	•
K	Check Final Drive Oil	•

OOU6075,00049BA-19-30MAY18

Tailings Auger Drive Slip Clutch (S760 and S770 Machines)

Rotate sheave assembly to access fitting.


OOU6075,0004433-19-17JAN17



H115720—UN—31AUG15

IMPORTANT: Do not over grease.

Conveyor Auger Drive Slip Clutch

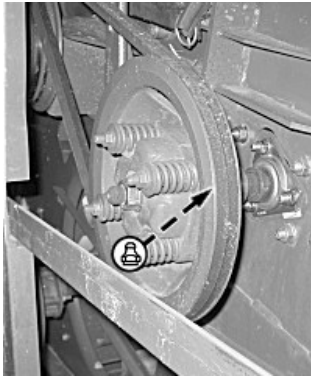


H115721—UN—31AUG15

IMPORTANT: Do not over grease.

Rotate sheave assembly to access fitting.

OUO6075,0004434-19-17JAN17

Overshot Beater Bearings (Optional) (S770, S780, S785, and S790 Machines)

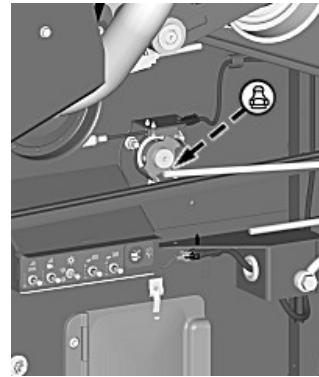


H123397—UN—09FEB18

Grease the fitting (both sides).

OUO6075,00048A7-19-09FEB18

Right-Hand Side Lube Bank

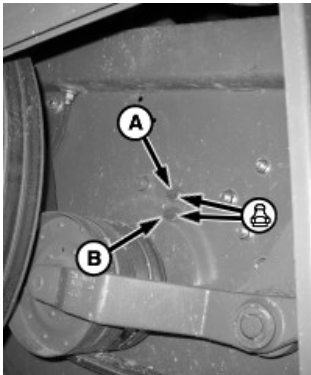


H115722—UN—31AUG15

A—Primary Countershaft Bearing
B—Separator Bearing

Grease fittings to lubricate primary countershaft bearing (A) and separator bearing (B).

OUO6075,0004435-19-17JAN17

Discharge Beater Bearings

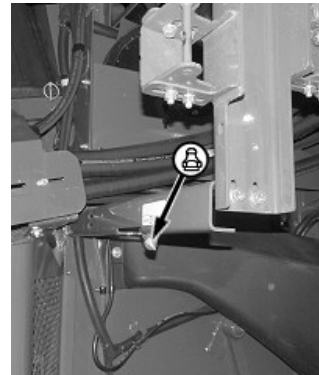

H115724—UN—31AUG15

Grease the fitting (both sides).

OUO6075,0004693-19-21MAR17

Cleaning Fan Shaft Bearings




H123398—UN—09FEB18

Grease the fitting (both sides).

OUO6075,00048A8-19-09FEB18

Rear Axle Tie Rod

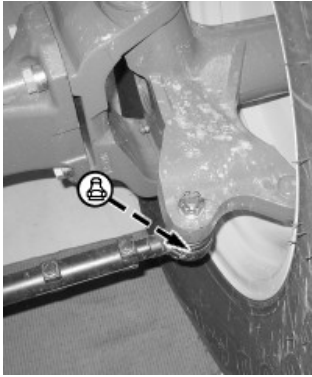


H115726—UN—31AUG15

Grease the fitting (both sides) on power steering rod end ball joint.

OOU6075,0004695-19-21MAR17

Spreader Disk (If Equipped)

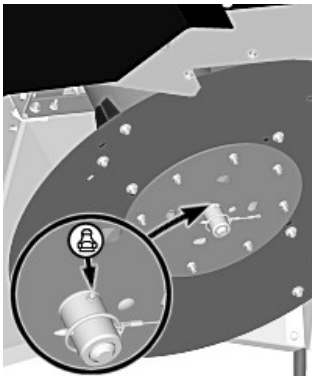


H115727—UN—31AUG15

Grease the fitting (both sides) to prevent hubs from corroding to shafts.

OOU6075,0004696-19-21MAR17

Overshot Beater Gear Case Oil (Optional) (S770, S780, S785, and S790 Machines)

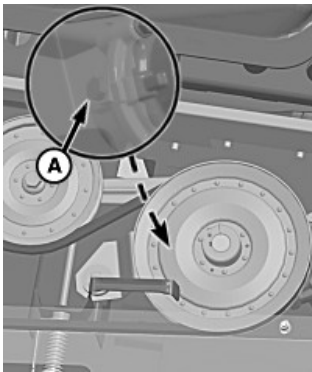

H115728—UN—31AUG15

A—Plug

Remove plug (A) and check oil level. Add oil as needed.

OOU6075,00046D6-19-28MAR17

Separator Drive Oil




H115729—UN—31AUG15

A—Dipstick

Remove dipstick (A) and check oil level. Oil level should be between grooves on dipstick. Add oil as needed.

OOU6075,000443C-19-17JAN17

Final Drive Oil

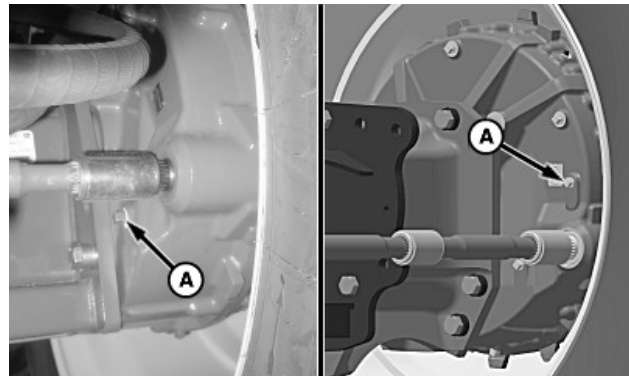

H124880—UN—09AUG18

Single Tire Configuration and HillMaster™ (Left) / Dual Tire Configuration (Right)

A—Plug

IMPORTANT: HillMaster™ Machines: When checking final drive oil level, warn bystanders to stay clear of machine while leveling.

NOTE: HillMaster™ Machines: For oil level accuracy, final drives must be positioned so that final drive input shaft is on the same level as the axle driveshaft.


Remove plug (A) and check oil level (both sides). Oil

HillMaster is a trademark of Deere & Company

should be within 12 mm (1/2 in) of the bottom of the hole. Add oil as needed.

OUC6075,0004A17-19-15AUG18

Service Interval Chart—Every 400 Hours (Continued)

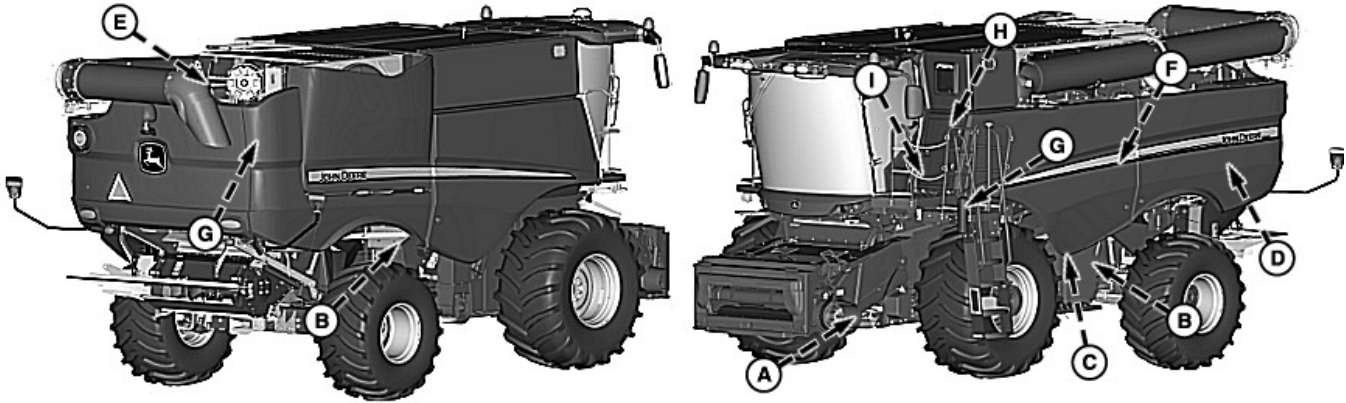


H132992—UN—19JAN21

Legend	Service	Every 400 Hours
A	Check Transmission Oil (S760 and S770 Non-ProDrive™ Machines) Verify Length of Park Brake Cylinder Cables (S760 and S770 Push-Button Shift Transmission Machines)	•
B	Service/Clean Batteries	•
C	Replace Hydraulic/Hydrostatic Filter (S760 and S770 Machines)	•
D	Replace Hydrostatic Charge Filter (S760 and S770 Non-ProDrive™ Machines) Replace Hydrostatic Charge Filter (S760 and S770 ProDrive™ Machines)	•
E	Replace Hydrostatic Charge Filter (S780, S785, and S790 ProDrive™ Machines) Replace Main Engine Gear Case Filter (S760 and S770 Non-ProDrive™ Machines) Replace Main Engine Gear Case Filter (S760 and S770 ProDrive™ Machines)	•
F	Check Engine Debris Management Air Filter (Final Tier 4/Stage V)	•
G	Inspect/Charge/Replace Fire Extinguishers	•
H	Check Primary Countershaft Gear Case Oil (Fixed Speed and Variable Speed Feeder House Drive)	•
I	Check Brake Fluid (S760 and S770 Non-ProDrive™ Machines)	•

ProDrive is a trademark of Deere & Company

OUC6075,0004FC8-19-19JAN21

Transmission Oil (S760 and S770 Non-ProDrive™ Machines)

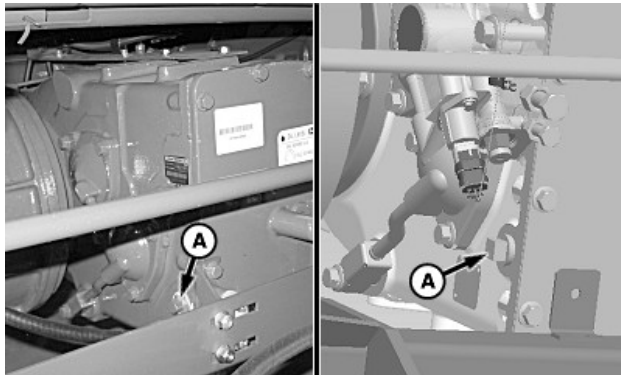

H115752—UN—02SEP15

Mechanical Shift / Push-Button Shift


A—Plug

Remove plug (A) and check oil level.

Add oil as needed to within 12 mm (1/2 in) of bottom of hole.

OUO6075.000443F-19-17JAN17

Park Brake Cylinder Cables (S760 and S770 Push-Button Shift Transmission Machines)

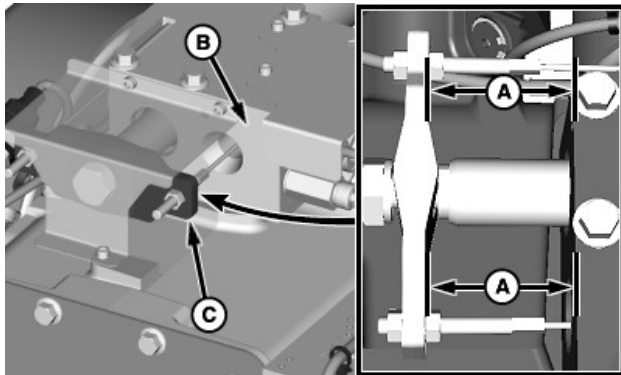

H115764—UN—02SEP15

A—Distance
B—Actuator Housing
C—Balancer

NOTE: Engage park brake (piston extended—spring applied).

Measure and verify that distance (A) from the actuator housing (B) to balancer (C) on both sides is within specification.

Specification


Park Brake Cable—Torque. 37-1/2 ± 2-1/2 mm
(1-31/64 ± 3/32 in)

CAUTION: Park brake cylinder cables are under extreme pressure. Cables **MUST** be adjusted by your John Deere dealer.

If cables need adjusted, see your John Deere dealer.

OUO6075.0004440-19-17JAN17

Batteries

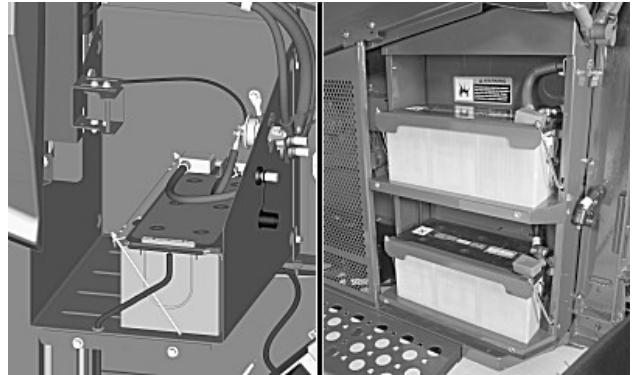

H125572—UN—22JAN19

Style A / Style B

NOTE: Batteries are on the right-hand side or the left-hand side depending on the machine model.

1. Clean top of the battery or batteries and check level in each cell.
2. Fill to bottom of the filler neck with distilled water if needed.
3. Clean battery posts, cables, and tighten connections as needed.

OUO6075.0004A99-19-11JAN19

Hydraulic/Hydrostatic Filter (S760 and S770 Machines)



H115753—UN—02SEP15

A—Filter


NOTE: It is not necessary to drain system when replacing filters.

1. Remove and replace filter (A).
2. Coat seal of the new filter with oil.

3. Install filter. Hand tighten, then tighten 1/2 turn more.

OOU6075,0004E01-19-13APR20

Hydrostatic Charge Filter

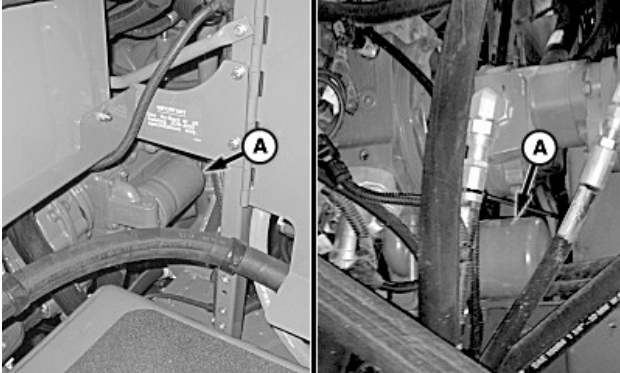

H121740—UN—12JUN17

Style A / Style B



H121741—UN—12JUN17

Style C

A—Filter

NOTE: Depending on machine configuration, style and location of hydrostatic charge filter varies.

It is not necessary to drain system when replacing filters.

1. Remove filter (A).
2. Replace filter and coat new seal with oil.
3. **Style A and Style B:** Hand tighten, then tighten to specification.


Specification

Hydrostatic Charge
Filter—Torque. 45 N·m
(33 lb·ft)

Style C: Hand tighten, then tighten 1/2 turn more.

OOU6075,0004E02-19-26JUN20

Main Engine Gear Case Filter

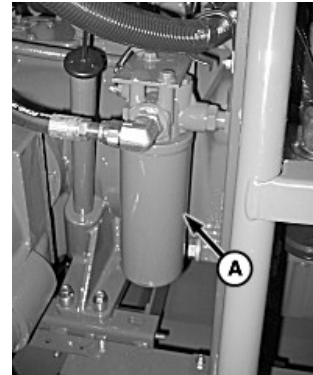

H115762—UN—02SEP15

A—Filter


NOTE: Depending on machine configuration, main engine gear case filter is on different areas of the machine. See Service Interval Chart—Every 400 Hours (Continued) for further information.

It is not necessary to drain system when replacing filters.

1. Remove and replace filter (A).
2. Coat new seal on the filter with oil.
3. Install filter by hand tightening, then tighten 1/2 turn more.

OOU6075,00046D8-19-28MAR17

Engine Debris Management Air Filter (Final Tier 4/Stage V)

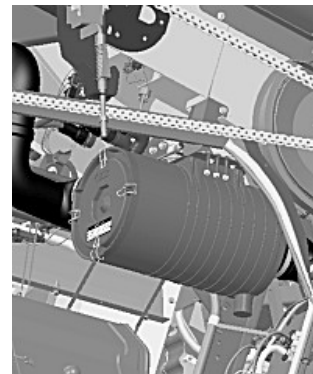

H115760—UN—02SEP15

IMPORTANT: When air filter restricted indicator is shown on display, service primary filter.

Check safety filter for plugging.

OOU6075,00047F9-19-15NOV17

Fire Extinguishers



H123657—UN—02MAR18

CAUTION: Inspect fire extinguisher straps and mounting hardware at least once a year. If fire extinguisher straps or mounting hardware shows any sign of damage or unusual wear, discoloration or abrasion, the entire strap and hardware must be replaced immediately. For your safety, replace fire extinguisher components with replacement parts approved for your machine. See your John Deere dealer.

Inspect fire extinguishers (front and rear) by following maintenance instructions on the fire extinguisher label.

Recharge or replace as necessary.

OUC6075,000490D-19-02MAR18

Brake Fluid (S760 and S770 Non-ProDrive™ Machines)



H115754—UN—02SEP15

A—Reservoir Cap

1. Look through the reservoir cap (A) and check brake fluid.

NOTE: Do not let dirt get into brake fluid.

2. Add brake fluid to 6 mm (1/4 in) from top.

OUC6075,0004449-19-16JAN17

Primary Countershaft Gear Case Oil (Fixed Speed and Variable Speed Feeder House Drive)




H115761—UN—02SEP15

A—Dipstick

Check primary countershaft gear case oil level with dipstick (A). Add oil as needed.

OUC6075,00046D9-19-29MAR17

Service Interval Chart—Every 400 Hours (Continued)

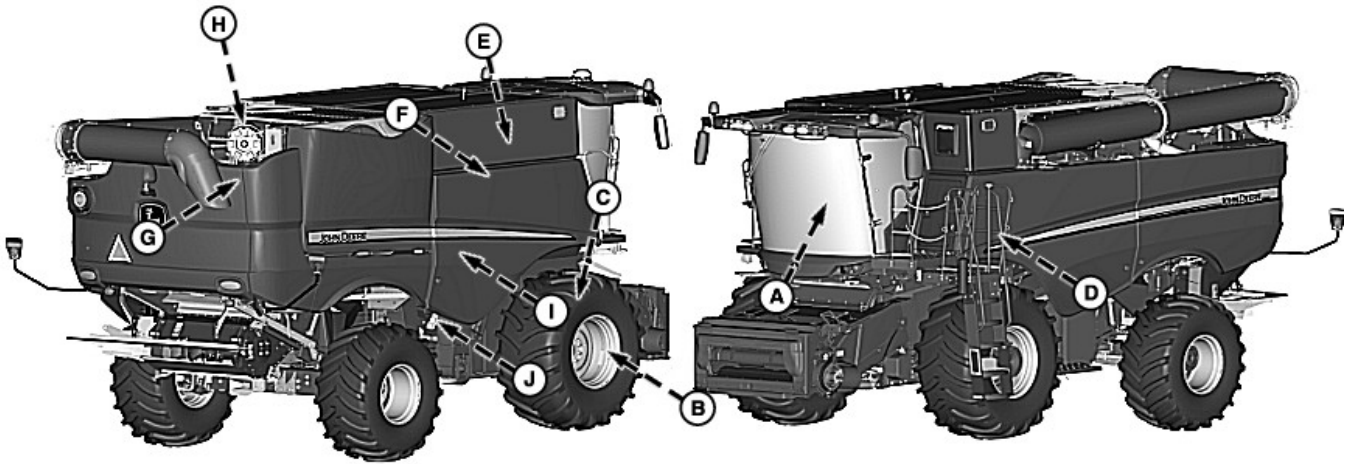

H134411—UN—17MAY21

Legend	Service	Every 400 Hours
A	Inspect Seat Belts	•
B	ProDrive™/Main Engine Gear Case Lube Filter (S760 and S770 ProDrive™ Machines) ProDrive™/Main Engine Gear Case Lube Filter (S780, S785, and S790 ProDrive™ Machines)	•
C	Grease Feeder House Slip Clutch	•
D	Tighten Header Electromagnetic Clutch Nut (Fixed Speed and Variable Speed Feeder House)	•
E	Clean Multi-Speed Feeder House Drive Gear Case (S770, S780, S785, and S790 Machines)	•
F	Check Loading Auger Gear Case Oil	•
G	Replace Diesel Exhaust Fluid (DEF) Tank Breather (Final Tier 4/Stage V) Replace Fuel Tank Breather	•
H	Check Air Filter Elements	•
I	Clean Moisture Sensor (If Equipped) Clean Moisture Sensor Bypass Auger (If Required) Clean ActiveVision™ Clean Grain Elevator Camera (If Equipped) Replace ActiveVision™ Clean Grain Elevator Camera Desiccant Cartridge (If Equipped) ^a	•
J	Clean Tailing System Bypass Auger (If Required) Clean ActiveVision™ Tailings System Camera (If Equipped) Replace ActiveVision™ Tailings System Camera Desiccant Cartridge (If Equipped) ^a	•

ActiveVision is a trademark of Deere & Company

^aIf the harvest season is complete, wait until the beginning of the next harvest season to extend the desiccant cartridge life.

OU06075,0004FC9-19-18MAY21

Seat Belts



H115757—UN—02SEP15

CAUTION: Inspect seat belt and mounting hardware at least once a year. If seat belt system, including mounting hardware, buckle, belt, or retractor, shows any sign of damage or unusual wear, discoloration or abrasion, the entire seat belt should be replaced immediately. For your safety, replace seat belt system with replacement parts approved for your machine. See your John Deere dealer.

Inspect seat belt for damage.

OOU6075,0004698-19-21MAR17

ProDrive™/Main Engine Gear Case Lube Filter (ProDrive™ Machines)



H115763—UN—02SEP15


A—Filter

NOTE: It is not necessary to drain system when replacing filters.

1. Remove and replace filter (A).
2. Coat new seal on the filter with oil.
3. Install filter by hand tightening, then tighten 1/2 turn more.

OOU6075,00046DA-19-28MAR17

Feeder House Slip Clutch

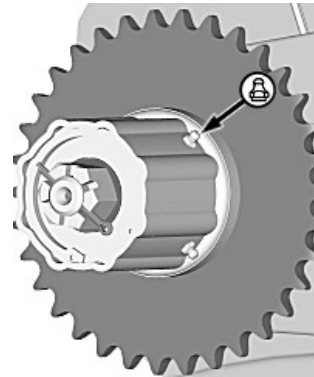


H115747—UN—01SEP15

Grease fitting on the upper feeder house slip clutch, until grease is forced out past seal.

OOU6075,000444C-19-16JAN17

Header Electromagnetic Clutch Nut (Fixed Speed and Variable Speed Feeder House)

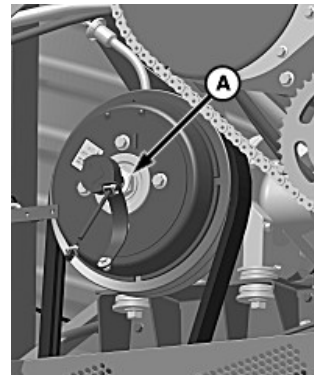

H134413—UN—17MAY21

A—Header Electromagnetic Clutch Nut


Tighten the header electromagnetic clutch nut (A) to specification.

Specification

Header Electromagnetic Clutch
Nut—Torque. 328 N·m
(242 lb·ft)

OOU6075,0005144-19-18MAY21

Multi-Speed Feeder House Drive Gear Case (S770, S780, S785, and S790 Machines)

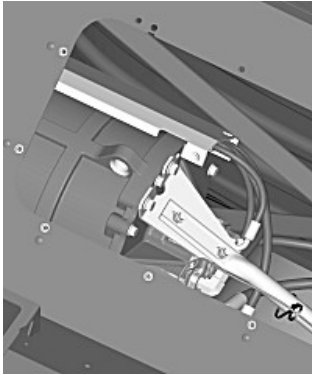


H125585—UN—17JAN19

CAUTION: Dirt, oil, chaff, and crop debris in this area are all fire hazards. Direction of wind, type of crop, and crop moisture content can all have effects on where and how much chaff and debris accumulate. Do not clean area with engine running.

1. Remove storage rack (if equipped) on the front of the grain tank.
2. Remove access door on the front of the grain tank.
3. Clean out material around the multi-speed feeder house drive gear case.
4. Install the access door and storage rack (if equipped).

OUC6075,0004E94-19-17JUN20

Loading Auger Gear Case Oil

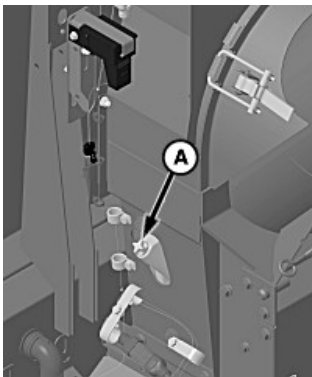

H123565—UN—22FEB18


A—Dipstick

NOTE: Loading auger gear case does not need drained.

Check oil level with dipstick (A) and add oil as needed.

OUC6075,00048BF-19-22FEB18

Diesel Exhaust Fluid (DEF) Tank Breather (Final Tier 4/Stage V)

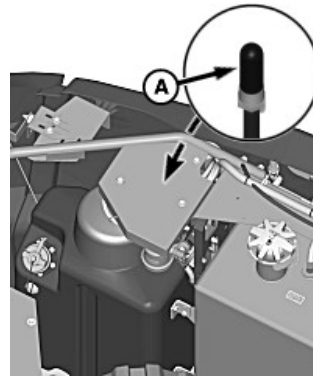


H125431—UN—04DEC18

A—Diesel Exhaust Fluid (DEF) Tank Breather

Remove and replace the Diesel Exhaust Fluid (DEF) tank breather (A).

OUC6075,0004A60-19-04DEC18

Fuel Tank Breather

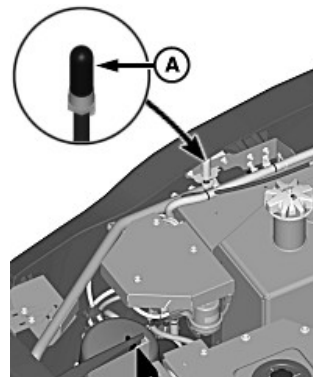


H125430—UN—04DEC18

A—Breather

Remove and replace the fuel tank breather (A).

OUC6075,0004A61-19-04DEC18

Air Filter Elements

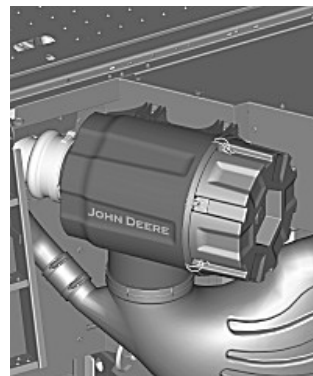

H115759—UN—02SEP15


IMPORTANT: When engine air filter restricted indicator is shown on display, service primary air filter.

Check safety filter for plugging.


Check for leaks and for collapse of aspirator tube.

OUC6075,0004451-19-16JAN17

Moisture Sensor (If Equipped)

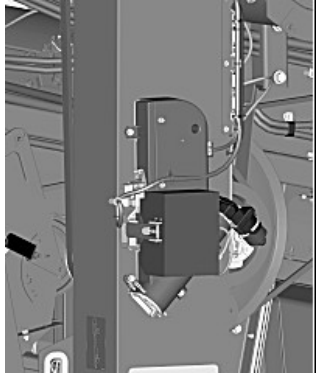

A—Moisture Sensor

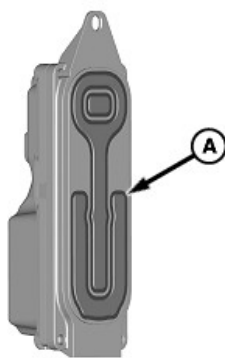

H125315—UN—06NOV18

IMPORTANT: Static electricity can damage the moisture sensor module. To avoid damage, ensure that a metal surface is touched on the machine with at least one hand or arm before working on or cleaning.

The moisture sensor has internal components that can loosen when dropped, which is not immediately detectable. Handle the moisture sensor with care when working on or cleaning.


Remove and clean the moisture sensor (A) when operating in weeds, green crops, or small grains (canola).

- Do not use solvents or other cleaners on the sensor face.
- A dry rag is preferred for cleaning. If that does not work, then scrub with just a rag and water.
- Do not power wash the moisture sensor face.

Install moisture sensor and perform a Moisture Sensor calibration. See Calibrations Application Help or Operator's Station Help for further information.

OUC6075,000513D-19-14MAY21

Moisture Sensor Bypass Auger (If Required)

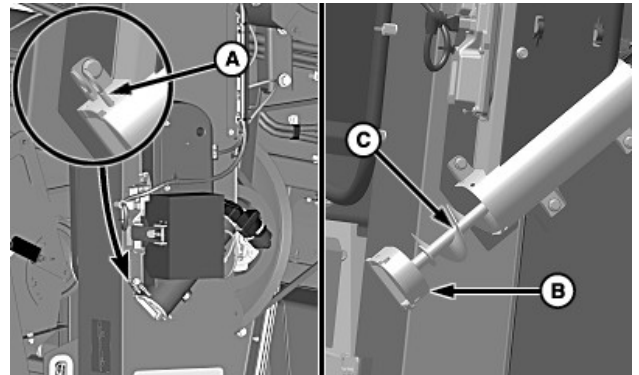

H132959—UN—18JAN21


- A—Pin (2 used)
B—End Cap
C—Auger

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Remove pins (A) and end cap (B).
2. Remove auger (C) from the moisture sensor bypass.
3. Clean the auger and area inside the moisture sensor bypass.
4. Install and align the auger.
5. Install end cap and retain with pins.

OUC6075,0004FBB-19-18JAN21

ActiveVision™ Clean Grain Elevator Camera (If Equipped)

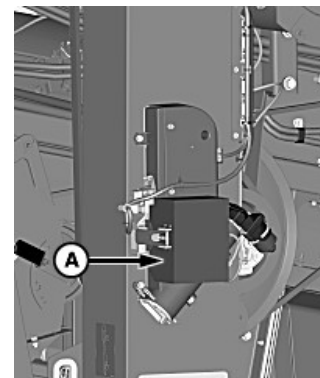

H125313—UN—06NOV18


A—ActiveVision™ Clean Grain Elevator Camera

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ clean grain elevator camera (A).


OOU6075,0004FC3-19-27APR21

Tailings Sensor Bypass Auger (If Required)

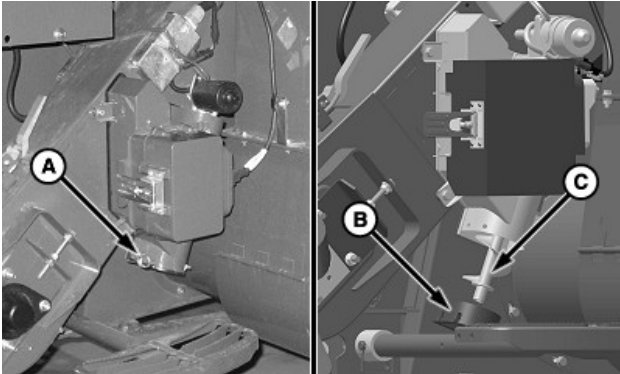

H132960—UN—18JAN21

Style A

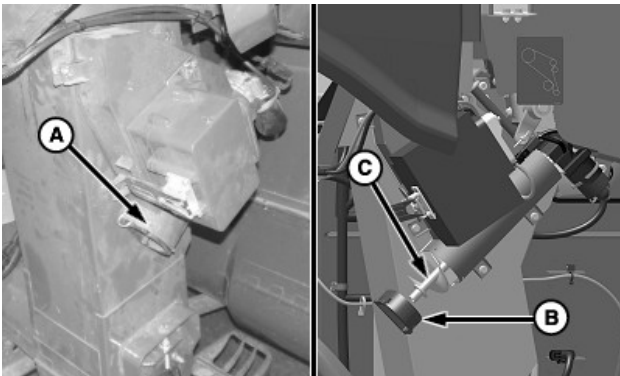

H132961—UN—19JAN21

Style B


A—Pin (2 used)
B—End Cap
C—Auger

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Remove pins (A) and end cap (B).
2. Remove auger (C) from the moisture sensor bypass.
3. Clean the auger and area inside the moisture sensor bypass.
4. Install and align the auger.
5. Install end cap and retain with pins.

OOU6075,0004FC4-19-19JAN21

ActiveVision™ Tailings System Camera (If Equipped)

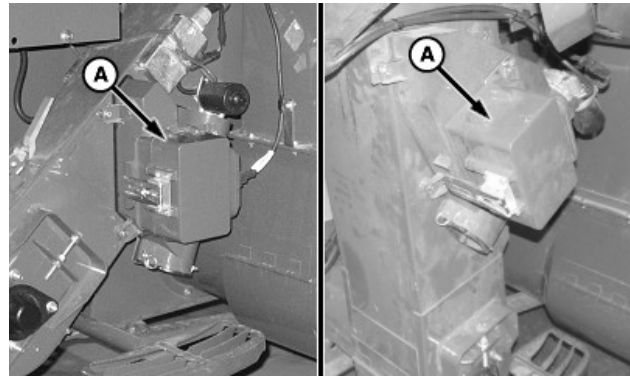

H119876—UN—01NOV16

Style A / Style B


A—ActiveVision™ Tailings System Camera

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ tailings system camera (A).

OOU6075,0004FC5-19-27APR21

ActiveVision™ Camera Desiccant Cartridge (If Equipped)

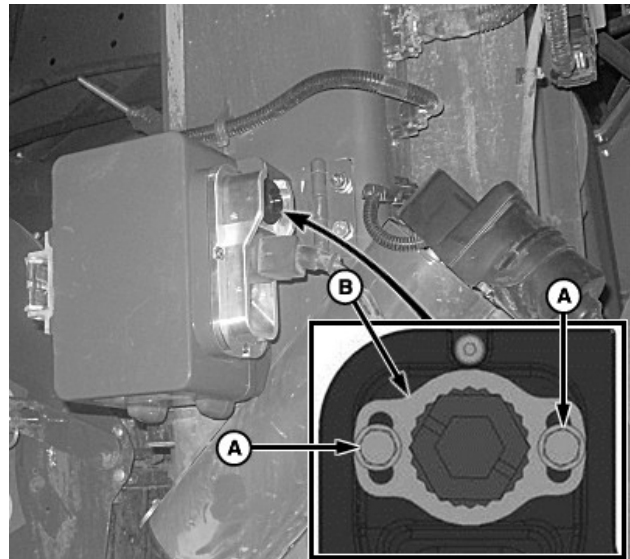

H130473—UN—09JUN20

A—Cap Screw (2 used)
B—Retainer Plate

CAUTION: Shut OFF engine, set park brake, and remove key.


IMPORTANT: Crop material and other debris may accumulate around the desiccant cartridge. Inspect and clean the area around the desiccant cartridge before removing.

NOTE: The ActiveVision™ clean grain elevator camera is shown. The ActiveVision™ tailings system camera is similar.

Replace the desiccant cartridge as needed when the moisture buildup is visible on the interior of the camera lens.

If the harvest season is complete, wait until the beginning of the next harvest season to extend the desiccant cartridge life.


1. Remove cap screws (A) and retainer plate (B).

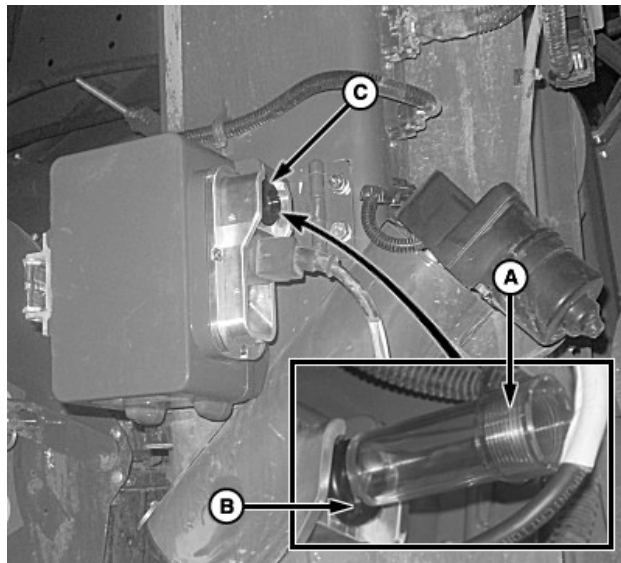

H130389—UN—21MAY20

A—Desiccant Container (tool)
B—Notch
C—Desiccant Cartridge

2. Align the desiccant container (A) that was included with the replacement desiccant cartridge with notch (B).
3. Remove the desiccant cartridge (C) from the ActiveVision™ camera.
4. Discard the desiccant cartridge.

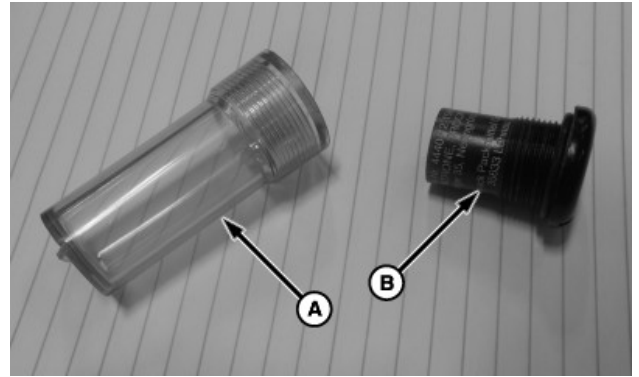

H130390—UN—01JUN20

Desiccant Container (tool) and Desiccant Cartridge

A—Desiccant Container (tool)
B—Desiccant Cartridge

5. Remove the desiccant container (A) from the replacement desiccant cartridge (B).
6. Install the desiccant cartridge into the ActiveVision™ camera.
7. Align the desiccant tool with the notch.
8. Tighten the desiccant cartridge until it is hand-tight.

NOTE: Verify that the retainer plate fits the hexagon form of the desiccant cartridge.

9. Install the retainer plate over the desiccant cartridge and retain with cap screws.
10. Tighten the cap screws to specification.


Specification

Cap Screws—Torque. 6.8 N·m
 (60 lb·in)

OJ06075,0004E5D-19-26JUN20

Maintenance—Every 800 Hours

Service Interval Chart—Every 800 Hours

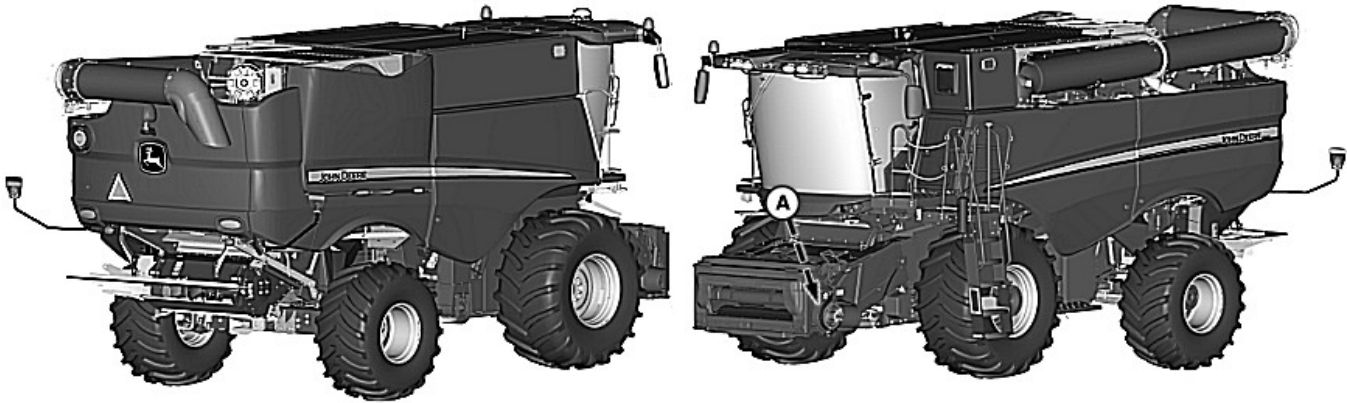


H119640—UN—13OCT16

Legend	Service	Every 800 Hours
A	Change Feeder House Reverser Gear Case Oil	•


OOU6075,00046DD-19-28MAR17

Feeder House Reverser Gear Case

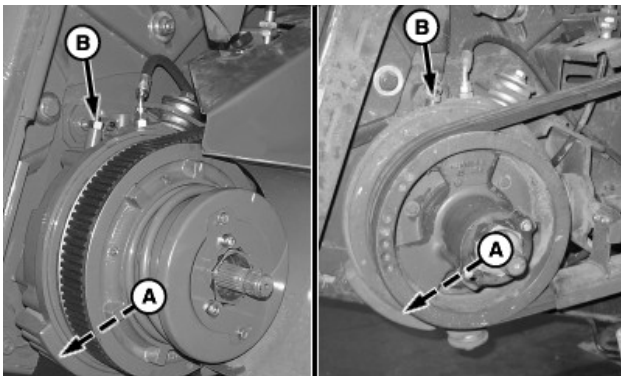

H115801—UN—03SEP15

Variable Speed / Multi-Speed Reverser Gear Case

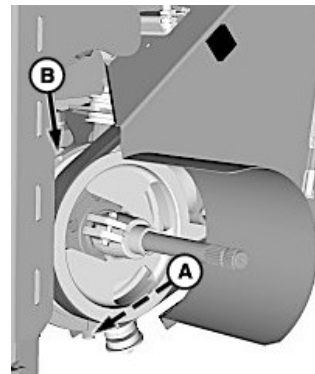

Fixed Speed

H115802—UN—03SEP15

A—Plug
B—Dipstick

1. Raise feeder house and lower safety stop.

NOTE: See Fuels and Lubricants section for oil recommendations.

2. Drain oil at plug (A), wipe plug clean and refill dipstick opening (B).

NOTE: Gear cases with an oil cooler require gear case be run for several minutes. This ensures that the cooler is filled with oil.

Oil level must show on knurled part of dipstick.

3. Check oil level with the feeder house raised up.

OUO6075,00046DE-19-28MAR17

Maintenance—Every 1000 Hours

Service Interval Chart—Every 1000 Hours (ProDrive™ Machines)




H119641—UN—13OCT16


Legend	Service	Every 1000 Hours
A, B, C, D, E	Change Main Engine Gear Case Oil	•
F	Replace Hydraulic Reservoir Filter (S780, S785, and S790 Machines)	•

OOU6075,00046DF-19-28MAR17


Change Main Engine Gear Case Oil

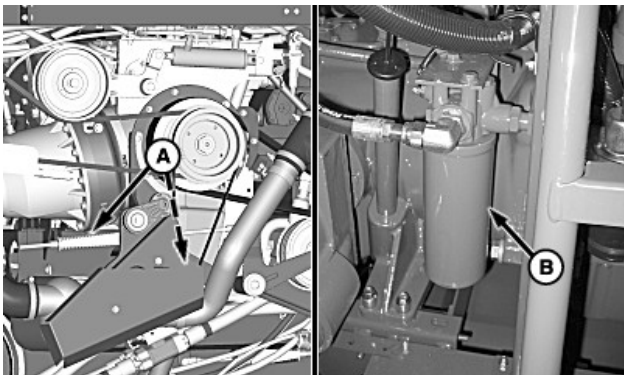

H115805—UN—03SEP15

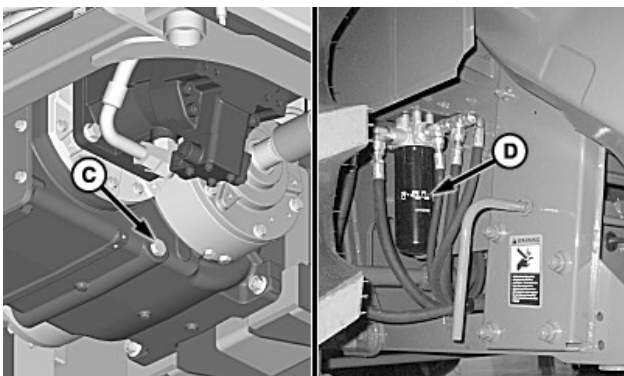

H119733—UN—27OCT16

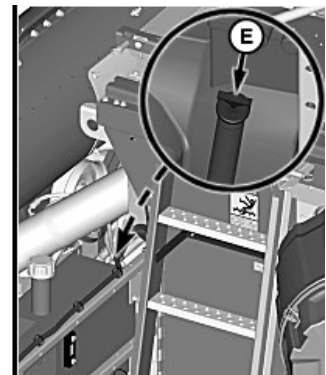

H115807—UN—03SEP15

- A—Plugs
- B—Filter
- C—Plug
- D—Filter
- E—Dipstick

1. Main Engine Gear Case Oil - Drain oil at plugs (A).
2. **S760 and S770 ProDrive™ Machines:** Remove and replace filter (B). Coat seal on the new filter with oil. Hand tighten, then tighten 1/2 turn more.
3. **ProDrive™ Machines:** Transmission Oil - Drain oil at plug (C).
4. ProDrive™/Main Engine Gear Case Lube Filter -

ProDrive is a trademark of Deere & Company

Remove and replace filter (D). Coat seal on the filter with oil. Hand tighten, then tighten 1/2 turn more.

NOTE: Overfilling main engine gear case may cause oil to force dipstick tube out when machine is running.

5. Fill Main Engine Gear Case

1. Fill until oil is at the bottom line on dipstick (E).
2. Install dipstick and run engine for 1 minute minimum.
3. Shut OFF engine and let machine sit for 5 minutes allowing air to settle from oil.
4. Remove dipstick and check oil level. Add oil until oil level is at the top line on dipstick.
5. Repeat procedures until oil level remains at the top line on dipstick.

3. Remove and retain the spring on top of filter.
4. Remove and discard filter.
5. Install replacement filter as shown with previously removed spring.
6. Install previously removed filter cap.
7. Use filter cap to compress spring and install previously removed cap screws.

IMPORTANT: Verify that O-ring remains in place when installing filter cap.

8. Tighten cap screws to specification.

Specification


Cap Screws—Torque. 7 N·m
(62 lb·in)

9. Connect wiring harness to sensor.

OUO6075,0004940-19-12APR18

OUO6075,00044C6-19-22DEC16

Hydraulic Reservoir Filter (S780, S785, and S790)

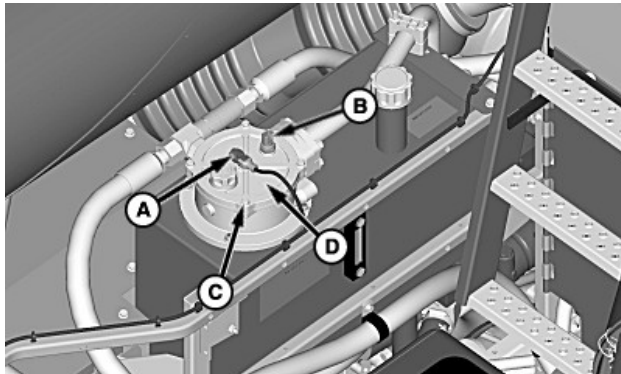

H115808—UN—03SEP15

- A—Wiring Harness Connector
- B—Sensor
- C—Cap Screws
- D—Filter Cap

NOTE: Clean area around the filter cap before removing to prevent system contamination. It is not necessary to drain system when replacing filter.

Hydraulic Reservoir Filter - Remove and replace filter when performance decline is noticed or diagnostic trouble code is generated.


1. Disconnect wiring harness connector (A) from sensor (B).

CAUTION: Remove cap screws equally to relieve spring pressure from the filter cap.

NOTE: Inspect and replace O-ring underneath the filter cap as needed.

2. Remove and retain cap screws (C) and filter cap (D).

Service Interval Chart—Every 1000 Hours (Continued)

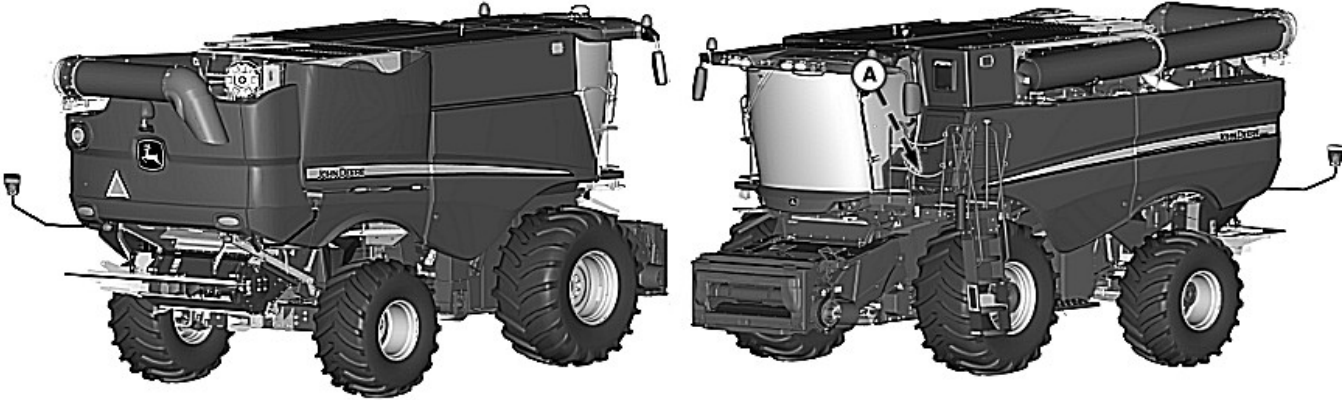


H133703—UN—16MAR21

Legend	Service	Every 1000 Hours
A	Change Brake Fluid (S760 and S770 Machines) (If Equipped with Three-Speed Mechanical Shift Transmission and Push-Button Shift Transmission [PBST])	•

OUC6075.000503C-19-14MAY21

Change Brake Fluid (S760 and S770 Machines)

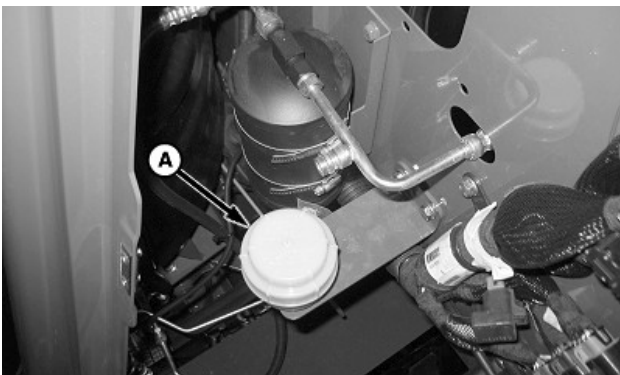


A—Cap

H100469—UN—25FEB11

NOTE: If equipped with three-speed mechanical shift transmission and push-button shift transmission machines.

1. Remove cap (A) from the brake fluid reservoir.

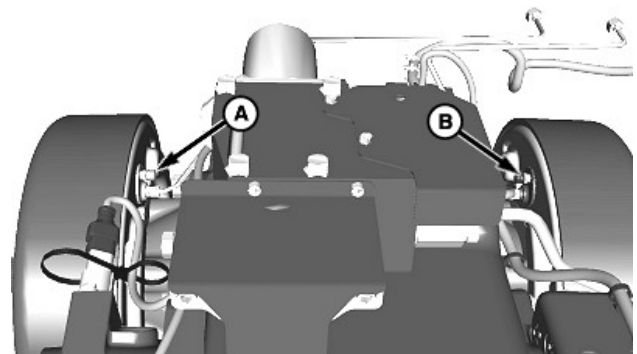

H103105—UN—23AUG11

- A—Bleed Screw (right-hand wheel cylinder)
B—Bleed Screw (left-hand wheel cylinder)

IMPORTANT: To avoid damage to painted surfaces, install tubing onto bleed screws.

2. Install tubing onto the wheel cylinder bleed screws (A and B).
3. To remove brake fluid from the brake lines, press brake pedals slowly to the floor.
4. Allow brake fluid to drain into a suitable container.
5. Close the wheel cylinder bleed screws when the brake fluid is drained.

NOTE: Two people are required to bleed the brakes. One person must pump the brakes and fill the reservoir, while the other person opens and closes the bleed screws to bleed the brakes.

Use only clean TY26180 or DOT 4 brake fluid.

20. Check the brake system for leaks and check each pedal for a solid firm feel.

OJ06075,000503D-19-14MAY21

6. Fill the brake fluid reservoir as needed.
7. Loosely install the cap onto the reservoir to avoid creating a vacuum during the bleeding procedure.
8. Lock the brake pedals together.
9. Loosen the left-hand wheel cylinder bleed screw with a 1/4 turn.

NOTE: Check the fluid in the brake reservoir and fill as needed during the bleeding procedure.

10. With the brake pedals still locked together, slowly depress to floor, tighten the bleed screw, and slowly release the brake pedals. Repeat until there is a clear flow of fluid with no air bubbles.

NOTE: If the system was partially filled before the bleed procedure was started, a steady, clear flow of fluid may appear for several initial strokes. If the air is located in or near the wheel cylinder, it takes several strokes to move the air through the lines and out the bleed screw.

11. Close the left-hand wheel cylinder bleed screw.
12. Unlock the brake pedals.
13. Loosen the right-hand wheel cylinder bleed screw with a 1/4 turn.

NOTE: Check the fluid in the brake reservoir and fill as needed during the bleeding procedure.

14. Slowly depress the right-hand brake pedal to the floor, tighten the bleed screw, and slowly release the brake pedal. Repeat until there is a clear flow of fluid with no air bubbles.
15. Close the right-hand wheel cylinder bleed screw.
16. Remove the tubing from the wheel cylinder bleed screws.
17. Tighten both bleed screws to specification.

Specification

Wheel Cylinder Bleed

Screws—Torque. 12 N·m
(106 lb·in)

NOTE: Add brake fluid to 6 mm (1/4 in) from the top.

18. Check the brake reservoir for the proper fluid level.
19. Install the cap onto the brake fluid reservoir.

Maintenance—Every 2000 Hours

Service Interval Chart—Every 2000 Hours



H119642—UN—13OCT16


NOTE: SCHEDULED coolant change interval is two years or 2000 hours if John Deere Cool-Gard™ II or Cool-Gard™ II PG is used.

Legend	Service	Every 2000 Hours
A	Change Hydraulic/Hydrostatic Reservoir Oil	•
B	Check Engine Valve Lash ^a	•
C	Check Final Drives Oil (both sides)	•
D	Change Main Engine Gear Case Oil (Non-ProDrive™ Machines)	•
E	Change Separator Drive Oil	•
F	Change Primary Countershaft Gear Case Oil (Fixed Speed and Variable Speed Feeder House)	•
G	Change Transmission Oil (Mechanical Shift and Push-Button Shift Transmission)	•
H	Overshot Beater Gear Case (Optional) (S770, S780, S785, and S790 Machines)	•

ProDrive is a trademark of Deere & Company
^aSee your John Deere dealer for service.


OOU6075,0004DE8-19-02APR20

Hydraulic/Hydrostatic Reservoir Oil

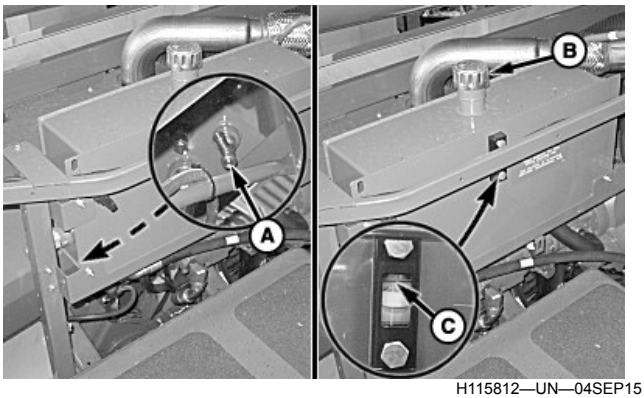

Style A

H115812—UN—04SEP15

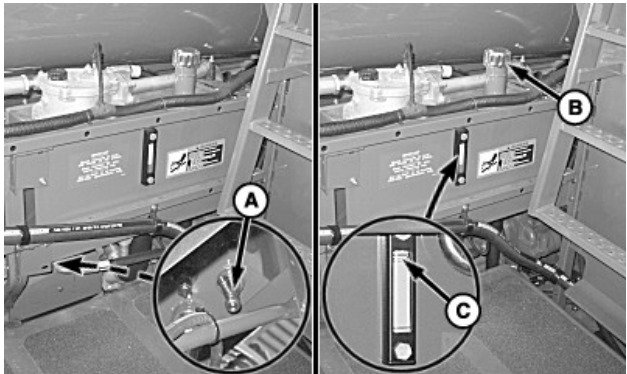

Style B

H115811—UN—04SEP15

A—Drain Valve

Cool-Gard is a trademark of Deere & Company

B—Cap
C—Sight Glass

NOTE: Clean hydraulic reservoir area to prevent system contamination. See Specifications section for oil capacity.

1. Open drain valve (A) to drain oil. Close valve once oil is drained.
2. Remove cap (B) and fill hydraulic reservoir until oil level is at top of sight glass (C) with the feeder house fully lowered.

OUO6075,000445A-19-22DEC16

IMPORTANT: HillMaster™ Machines: When checking final drive oil level, warn bystanders to stay clear of machine while leveling.

NOTE: HillMaster™ Machines: For oil level accuracy, final drives must be positioned so that final drive input shaft is on the same level as the axle driveshaft.

Remove drain plug (A) on both sides to drain.

Remove fill plug (B) to refill until oil level is within 12 mm (1/2 in) of the bottom check hole (C).

OUO6075,0004A18-19-15AUG18

Engine Valve Lash




H115813—UN—04SEP15

Have the engine valve lash checked and adjusted, if necessary, by your John Deere dealer.

OUO6075,0004DE9-19-26JUN20

Main Engine Gear Case Oil (Non-ProDrive™ Machines)

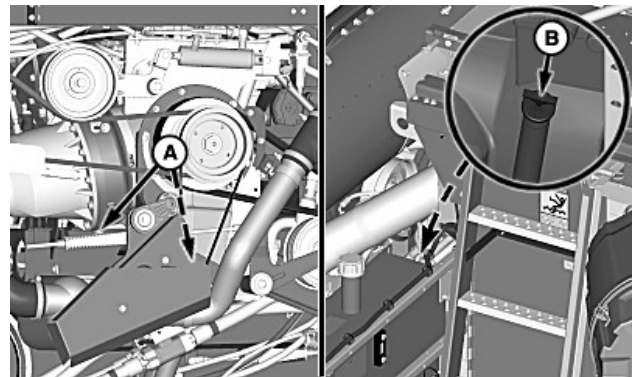

H115815—UN—04SEP15


A—Drain Plugs
B—Dipstick

Drain at plugs (A).

Refill and check oil level at dipstick (B).

OUO6075,00046E2-19-28MAR17

Final Drive Oil

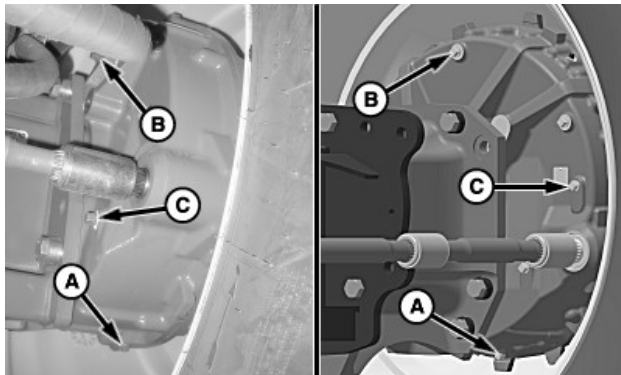


H124881—UN—10AUG18

Single Tire Configuration and HillMaster™ (Left) / Dual Tire Configuration (Right)

A—Drain Plug
B—Fill Plug
C—Check Hole

Separator Drive Oil

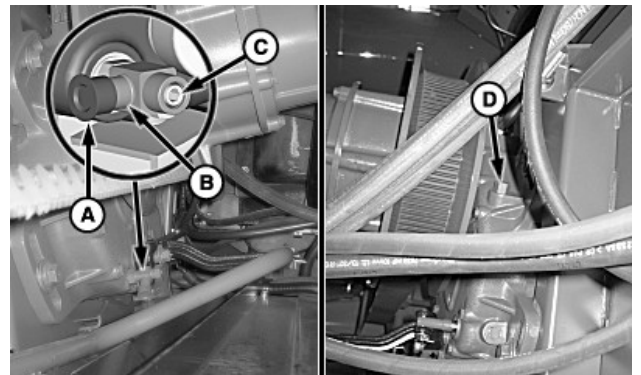

H125516—UN—17DEC18

A—Cap
B—Drain
C—Drain Valve


HillMaster is a trademark of Deere & Company

D—Dipstick

1. Remove cap (A) and attach hose to drain (B).
2. Open socket head screw located in drain valve (C) to drain oil.
3. Refill at dipstick (D) as needed.

OUO6075,0004A84-19-17DEC18

Primary Countershaft Gear Case Oil (Fixed Speed and Variable Speed Feeder House)

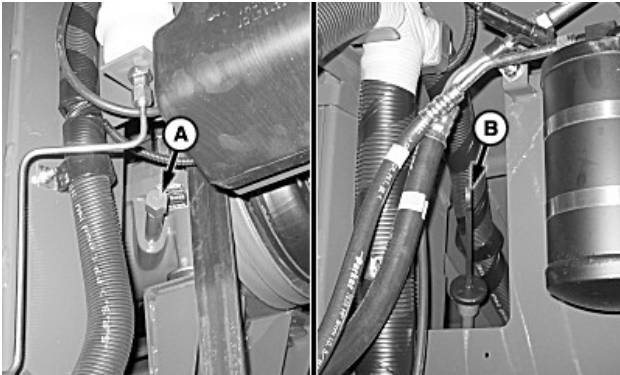


H115817—UN—04SEP15

A—Cap
B—Dipstick

Drain at cap (A) and refill at dipstick (B).
Oil level must show on knurled part of dipstick.

OUO6075,00046E3-19-28MAR17

Transmission Oil (Mechanical Shift and Push-Button Shift Transmission)

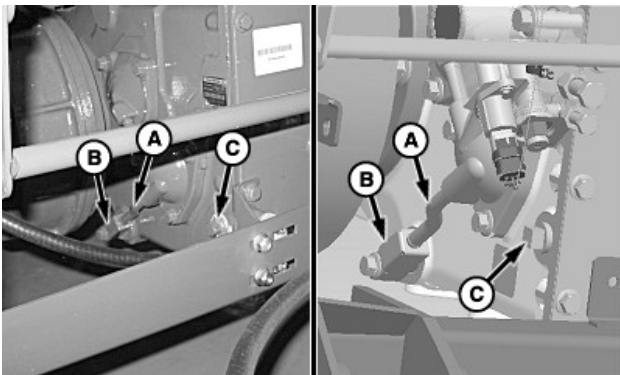

H115818—UN—04SEP15


Mechanical Shift / Push-Button Shift

A—Tube
B—Block
C—Check Plug

1. Slide tube (A) out of block (B).
2. Remove block to drain.
3. Remove check plug (C) and refill to within 12 mm (1/2 in) of hole.

OUO6075,0004460-19-22DEC16

Overshot Beater Gear Case Oil (Optional) (S770, S780, S785, and S790 Machines)

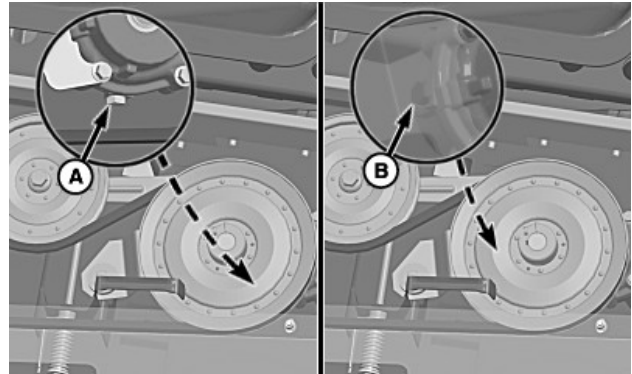


H115819—UN—04SEP15

A—Plug
B—Plug

Drain at plug (A) and refill at plug (B). Oil level must be level with the plug hole on the side of the gear case.

OUO6075,00046E4-19-28MAR17

Service Interval Chart—Every 2000 Hours (Continued)

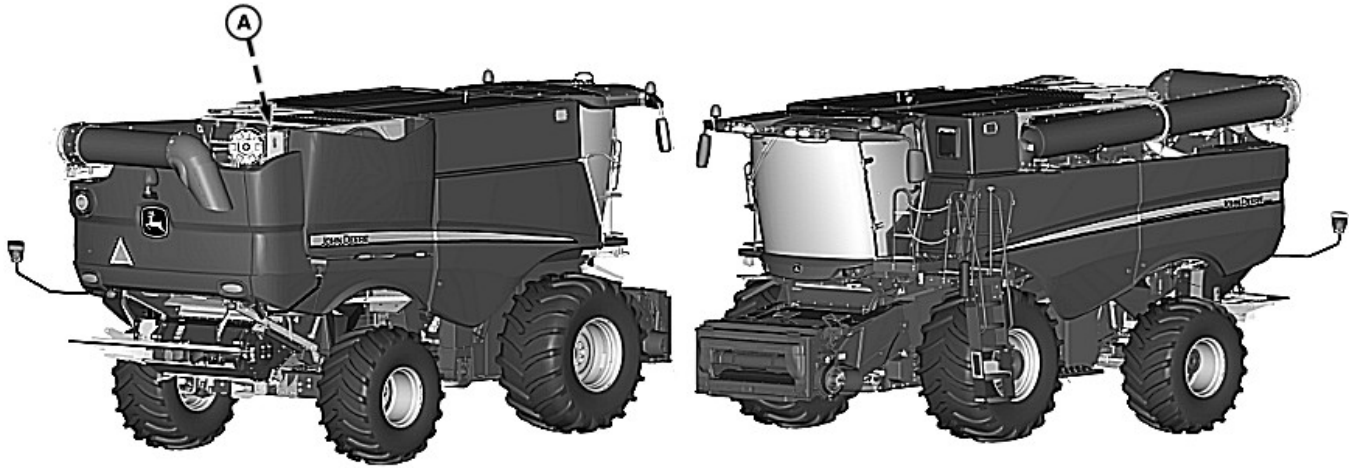


H120324—UN—22DEC16

Legend	Service	Every 2000 Hours
A	Check Front Engine Crankshaft Damper (Final Tier 4/Stage V)	•

ouo6075,1657720585940-19-13JUL22

Check Engine Crankshaft Damper (Final Tier 4/Stage V)

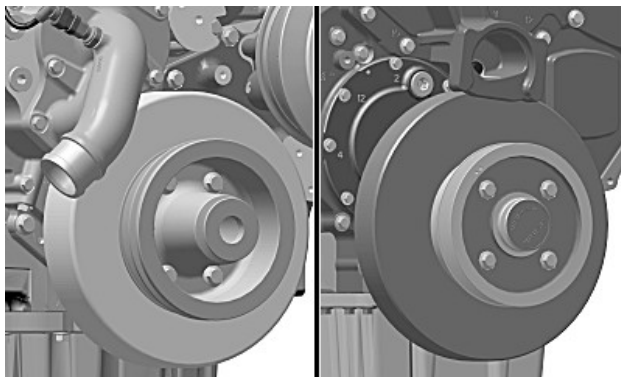

H120326—UN—22DEC16

Final Tier 4/Stage V (Style A / Style B)


IMPORTANT: Vibration damper assembly is not repairable and should be checked every 2000 hours.

Have your John Deere dealer check the front engine crankshaft damper.

ouo6075,1657721749711-19-13JUL22

Maintenance—Every 2000 Hours or Three Years

Service Interval Chart—Every 2000 Hours or Three Years

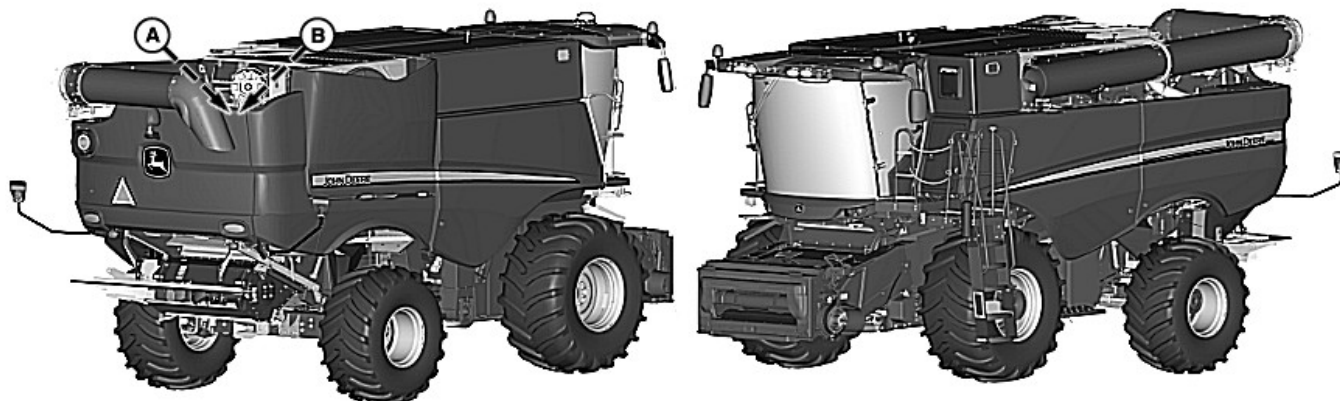


H125475—UN—10DEC18

Legend	Service	Every 2000 Hours or Three Years
A	Replace Diesel Exhaust Fluid (DEF) Dosing Unit Filter (Final Tier 4/Stage V S780, S785, and S790 Machines)	•
B	Replace Diesel Exhaust Fluid (DEF) In-Line Filter (Final Tier 4/Stage V S780, S785, and S790 Machines)	•

OJ06075,0004A6E-19-14DEC18

Changing Diesel Exhaust Fluid (DEF) Dosing Unit Filter (S780, S785, and S790 Machines)

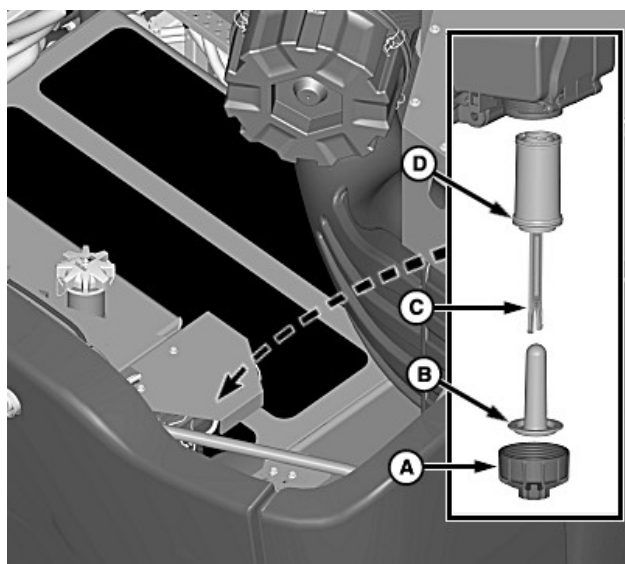

DEF Dosing Unit Filter

H125506—UN—14DEC18

- A—Filter Cover
- B—Equalizing Element
- C—Filter Tool
- D—DEF Dosing Unit Filter

CAUTION: Avoid contact with eyes. If contact occurs, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

NOTE: The DEF dosing unit filter and DEF in-line filter must be replaced together every 2000 hours or 36 months, whichever occurs first.

Servicing DEF dosing unit filter requires removing extra covers or components. See Access DEF Dosing Unit for location information.

1. Clear all debris from area around the DEF dosing unit.

NOTE: Wait approximately 5 minutes for DEF to purge from the system.

2. Remove filter cover (A).
3. Remove and discard the equalizing element (B).

NOTE: Filter tool (C) is supplied with the replacement filter.

4. Insert “Black” end of the filter tool (C) into the DEF dosing unit filter (D) until a CLICK is felt or heard, indicating that the filter tool is fully engaged.

NOTE: A tool, such as a screwdriver, can be inserted into the filter tool slot to assist removal.


5. Pull filter tool and DEF dosing unit filter from the DEF dosing unit. Discard DEF dosing unit filter and filter tool.
6. Clean DEF dosing unit threads and mating surfaces with distilled water.
7. Lubricate DEF filter O-rings with clean DEF. Carefully insert DEF dosing unit filter into the DEF dosing unit.
8. Install new DEF dosing unit filter equalizing element into the DEF dosing unit filter.
9. Install filter cover and tighten to specification.

Specification

Filter Cover—Torque. 23 N·m
(204 lb·in)

OUO6075,0004BBB-19-30MAY19

Replace Diesel Exhaust Fluid (DEF) In-Line Filter (S780, S785, and S790 Machines)

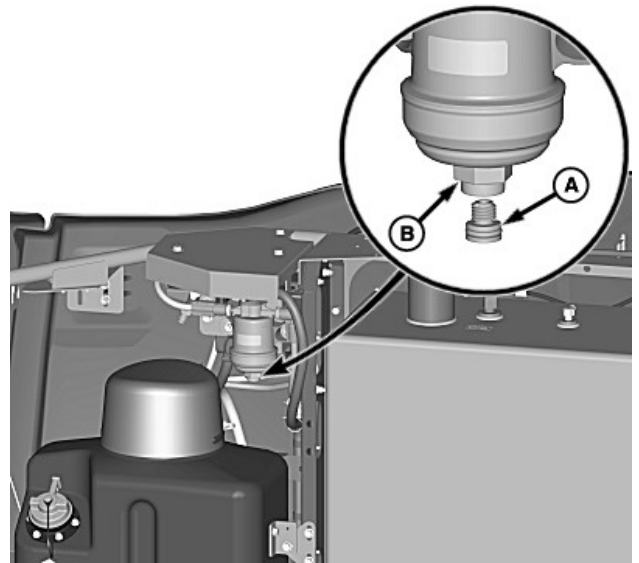

H125448—UN—05DEC18

A—Drain Plug
B—Filter Cover

CAUTION: Avoid contact with eyes. If contact occurs, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

NOTE: The DEF in-line filter and DEF dosing unit filter must be replaced together every 2000 hours or 36 months, whichever occurs first.

1. Clear all debris from area around in-line DEF filter assembly.

NOTE: Wait approximately 5 minutes for DEF to purge from the system.

2. Remove and discard drain plug (A).
3. Drain DEF fluid into a proper container.
4. Remove filter cover (B).



H125462—UN—06DEC18

A—Filter Assembly
B—Filter

5. Pull filter assembly (A) down from the DEF body.

NOTE: If necessary, tap filter to loosen. Plastic tabs inside the filter cover lock the filter into place.

6. Remove and discard filter (B) from filter cover.
7. Clean assembly threads and mating surfaces with distilled water.



H125463—UN—06DEC18

A—Foam Spacer
B—Seal
C—Filter Cover

8. Remove and discard foam spacer (A) and discard seal (B) from filter cover (C).
9. Install replacement foam spacer and replacement seal into previously removed filter cover.



H125464—UN—06DEC18

A—Filter

B—DEF Body

NOTE: Plastic tabs inside the cover lock the filter into place.

10. Insert replacement filter (A) into filter cover as shown, and then into the DEF body (B).
11. Install filter cover and tighten to specification.

Specification

Filter Cover—Torque. 25 N·m
(221 lb·in)



H125465—UN—06DEC18

A—O-Ring
B—Notch

12. Install replacement O-ring (A) into notch (B) on the replacement drain plug.
13. Install drain plug into filter cover and tighten to specification.


Specification

Drain Plug—Torque. 4 N·m
(35 lb·in)

OUO6075,0004BBC-19-30MAY19

Maintenance—Every 3500 Hours or Three Years

Service Interval Chart—Every 3500 Hours or Three Years

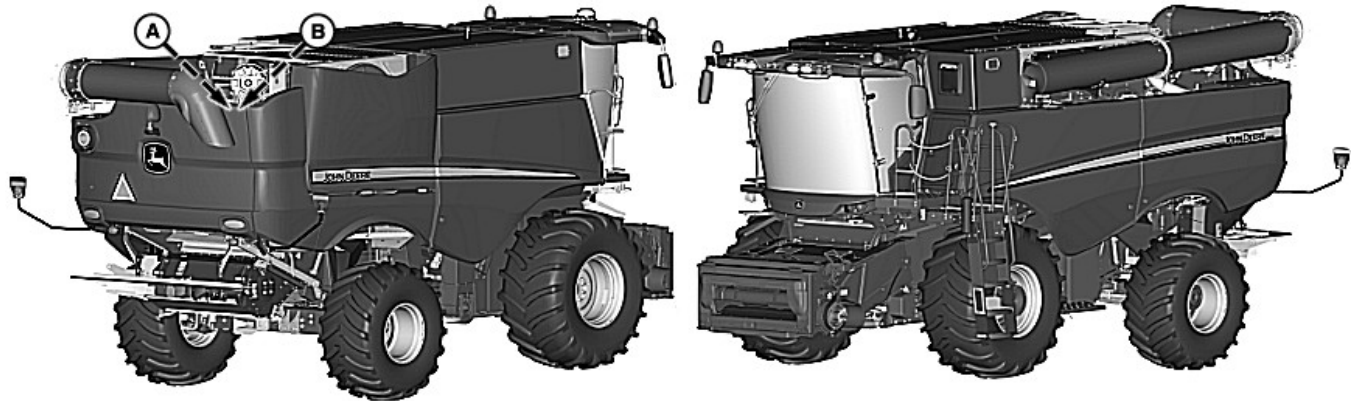


H125475—UN—10DEC18

Legend	Service	Every 3500 Hours or Three Years
A	Replace Diesel Exhaust Fluid (DEF) Dosing Unit Filter (Final Tier 4/Stage V S760 and S770 Machines)	•
B	Replace Diesel Exhaust Fluid (DEF) In-Line Filter (Final Tier 4/Stage V S760 and S770 Machines)	•

OJ06075,0004A6B-19-14DEC18

Changing Diesel Exhaust Fluid (DEF) Dosing Unit Filter (S760 and S770 Machines)

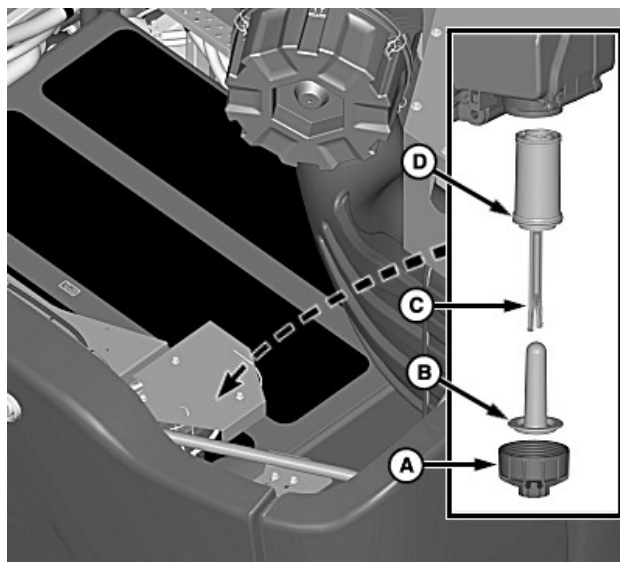

DEF Dosing Unit Filter

H125605—UN—24JAN19

- A—Filter Cover
- B—Equalizing Element
- C—Filter Tool
- D—DEF Dosing Unit Filter

CAUTION: Avoid contact with eyes. If contact occurs, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

NOTE: The DEF dosing unit filter and DEF in-line filter must be replaced together every 3500 hours or 36 months, whichever occurs first.

Servicing DEF dosing unit filter requires removing extra covers or components. See Access DEF Dosing Unit for location information.

1. Clear all debris from area around the DEF dosing unit.

NOTE: Wait approximately 5 minutes for DEF to purge from the system.

2. Remove filter cover (A).
3. Remove and discard the equalizing element (B).

NOTE: Filter tool (C) is supplied with the replacement filter.

4. Insert “Black” end of the filter tool (C) into the DEF dosing unit filter (D) until a CLICK is felt or heard, indicating that the filter tool is fully engaged.

NOTE: A tool, such as a screwdriver, can be inserted into the filter tool slot to assist removal.


5. Pull filter tool and DEF dosing unit filter from the DEF dosing unit. Discard DEF dosing unit filter and filter tool.
6. Clean DEF dosing unit threads and mating surfaces with distilled water.
7. Lubricate DEF filter O-rings with clean DEF. Carefully insert DEF dosing unit filter into the DEF dosing unit.
8. Install new DEF dosing unit filter equalizing element into the DEF dosing unit filter.
9. Install filter cover and tighten to specification.

Specification

Filter Cover—Torque. 23 N·m
(204 lb·in)

OUO6075,0004BB9-19-30MAY19

Replace Diesel Exhaust Fluid (DEF) In-Line Filter (S760 and S770 Machines)

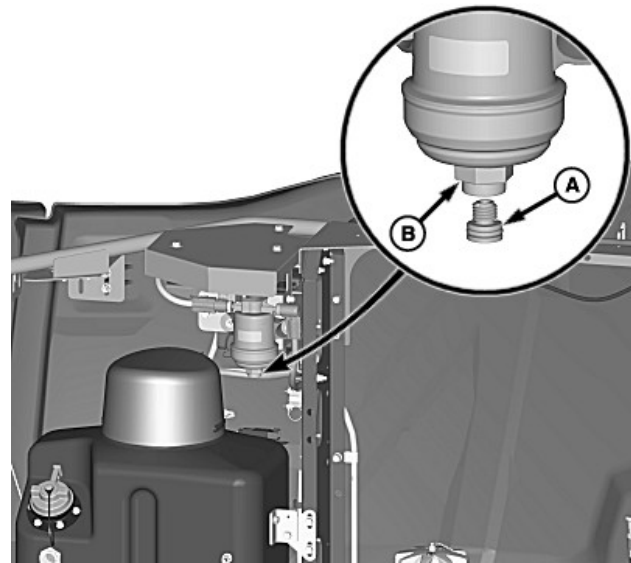

H125606—UN—24JAN19

A—Drain Plug
B—Filter Cover

CAUTION: Avoid contact with eyes. If contact occurs, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

NOTE: The DEF in-line filter and DEF dosing unit filter must be replaced together every 2000 hours or 36 months, whichever occurs first.

1. Clear all debris from area around in-line DEF filter assembly.

NOTE: Wait approximately 5 minutes for DEF to purge from the system.

2. Remove and discard drain plug (A).
3. Drain DEF fluid into a proper container.
4. Remove filter cover (B).



H125462—UN—06DEC18

A—Filter Assembly
B—Filter

5. Pull filter assembly (A) down from the DEF body.

NOTE: If necessary, tap filter to loosen. Plastic tabs inside the filter cover lock the filter into place.

6. Remove and discard filter (B) from filter cover.
7. Clean assembly threads and mating surfaces with distilled water.



H125463—UN—06DEC18

A—Foam Spacer
B—Seal
C—Filter Cover

8. Remove and discard foam spacer (A) and discard seal (B) from filter cover (C).
9. Install replacement foam spacer and replacement seal into previously removed filter cover.



H125464—UN—06DEC18

A—Filter

B—DEF Body

NOTE: Plastic tabs inside the cover lock the filter into place.

10. Insert replacement filter (A) into filter cover as shown, and then into the DEF body (B).

11. Install filter cover and tighten to specification.

Specification

Filter Cover—Torque. 25 N·m
(221 lb·in)



H125465—UN—06DEC18

A—O-Ring
B—Notch

12. Install replacement O-ring (A) into notch (B) on the replacement drain plug.

13. Install drain plug into filter cover and tighten to specification.


Specification

Drain Plug—Torque. 4 N·m
(35 lb·in)

OUO6075,0004BBA-19-30MAY19

Maintenance—Every 4500 Hours or Five Years

Service Interval Chart—Every 4500 Hours or Five Years

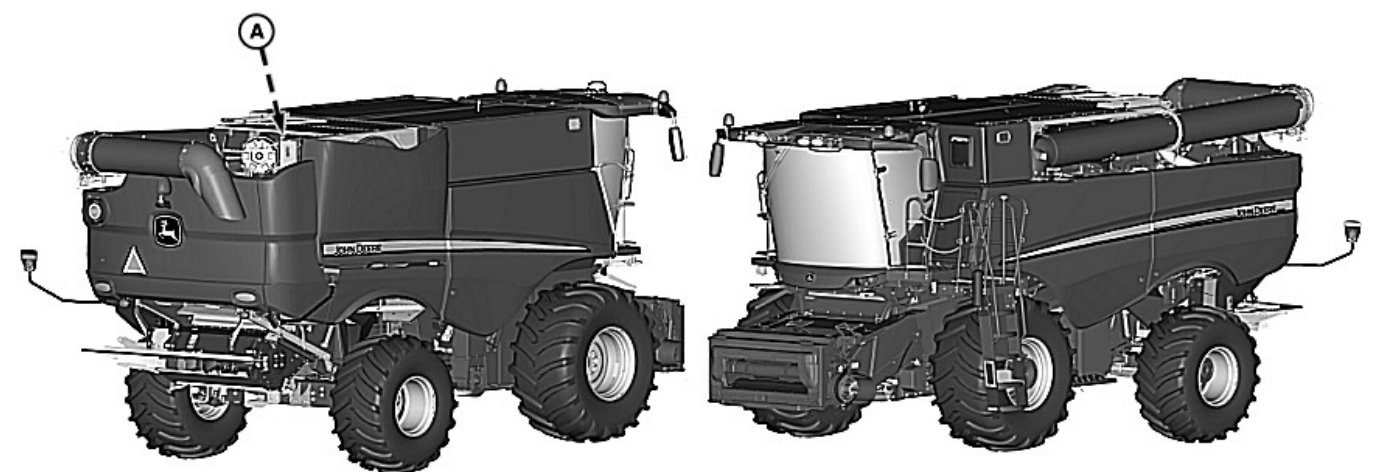


H120324—UN—22DEC16

Legend	Service	Every 4500 Hours or Five Years
A	Replace Front Engine Crankshaft Damper (Tier 2/Stage II)	•

ouo6075,1657722111062-19-13JUL22

Replace Engine Crankshaft Damper (Tier 2/ Stage II)

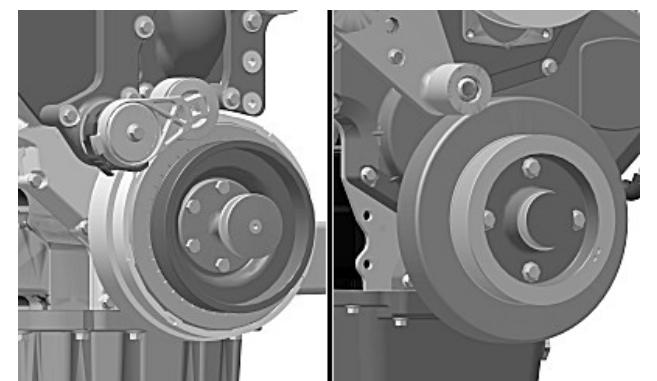

H120325—UN—22DEC16

Tier 2/Stage II Only (style A / style B)


IMPORTANT: Vibration damper assembly is not repairable and should be replaced every five years or 4500 hours, whichever occurs first.

Have your John Deere dealer replace the front engine crankshaft damper.

ouo6075,1653323944771-19-13JUL22

Maintenance—Every 6000 Hours or Six years

Service Interval Chart—Every 6000 Hours or Six Years

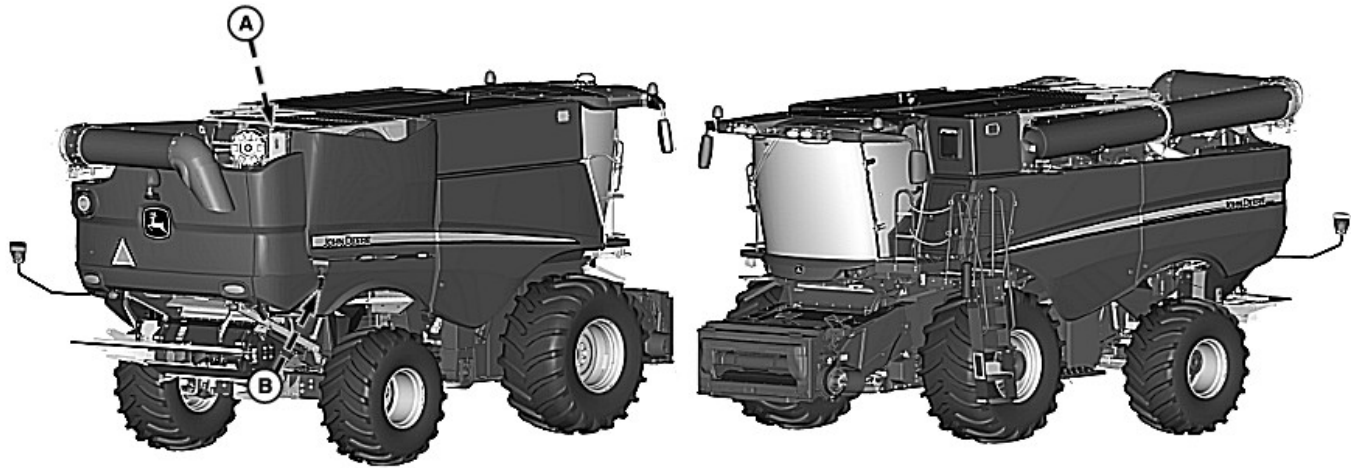


H119645—UN—13OCT16

NOTE: SCHEDULED coolant change interval 6 years or 6000 hours if John Deere Cool-Gard™ II or Cool-Gard™ II PG is used.

Legend	Service	Every 6000 Hours or Six Years
A and B	Drain, Flush, and Refill Engine Cooling System	•


OOU6075,0004465-19-20DEC16

Engine Cooling System

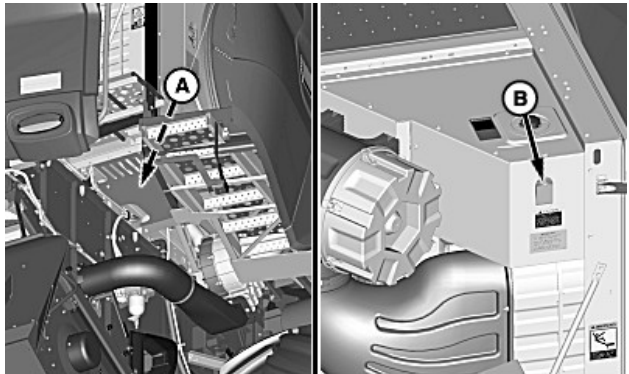

H115825—UN—04SEP15

Tier 2/Stage II (Style A)

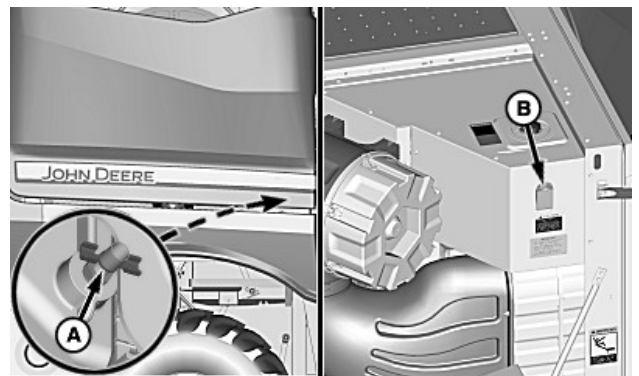

H115826—UN—04SEP15

Tier 2/Stage II (Style B)
and Final Tier 4/Stage V

A—Drain
B—Surge Tank

NOTE: When Cool-Gard™ II or Cool-Gard™ II PG is used, the drain interval is 6 years or 6000 hours of operation.

Cool-Gard is a trademark of Deere & Company

If a coolant other than Cool-Gard™ II or Cool-Gard™ II PG is used, reduce the drain interval to 2 years or 2000 hours of operation.

Open drain (A) to remove coolant from the radiator.


Flush and refill surge tank (B) with correct coolant and conditioner. See Maintenance—As Required (Engine Fluids and Filters) section for further information. See Fuels and Lubricants section for coolant recommendations.

Check engine coolant level in the surge tank with engine cold. Level must be up to the "Max Cold" line.

OUO6075,00047FF-19-13NOV17

Maintenance—As Required

Service Interval Chart—As Required

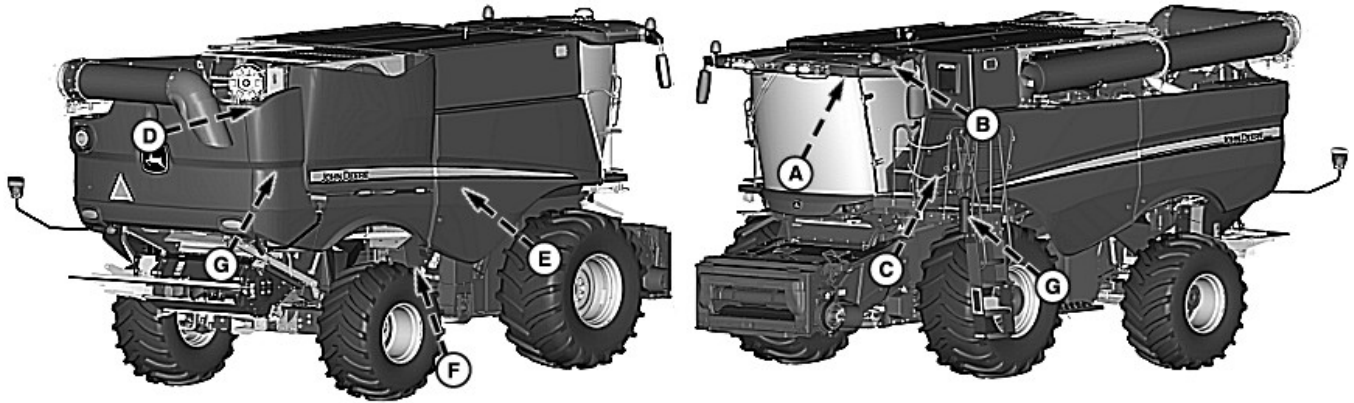

H124383—UN—29MAY18


Legend	Service	As Required
A	Clean/Replace Recirculating Filter	•
B	Clean/Replace Cab Fresh Air Filter	•
C	Fill Windshield Washer Reservoir	•
D	Clean Alternator Screen	•
E	Clean Moisture Sensor (If Equipped) Clean Moisture Sensor Bypass Auger Clean ActiveVision™ Clean Grain Elevator Camera (If Equipped) Replace ActiveVision™ Clean Grain Elevator Camera Desiccant Cartridge (If Equipped) ^a	•
F	Clean Tailing System Bypass Auger (If Required) Clean ActiveVision™ Tailings System Camera (If Equipped) Replace ActiveVision™ Tailings System Camera Desiccant Cartridge (If Equipped) ^a	•
G	Inspect/Tighten Fire Extinguisher Bracket Straps (If Equipped)	•

ActiveVision is a trademark of Deere & Company

^aIf the harvest season is complete, wait until the beginning of the next harvest season to extend the desiccant cartridge life.

OOU6075,0004FBD-19-14MAY21

Recirculating Filter

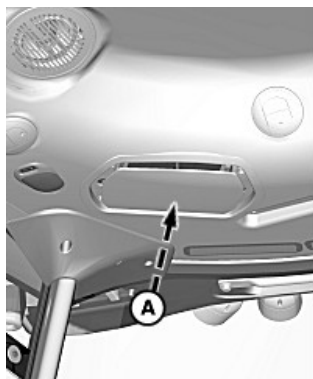


H115668—UN—28AUG15

A—Recirculating Filter

Remove cover to clean or replace recirculating filter (A).

OOU6075,0004468-19-21DEC16

Cab Fresh Air Filter

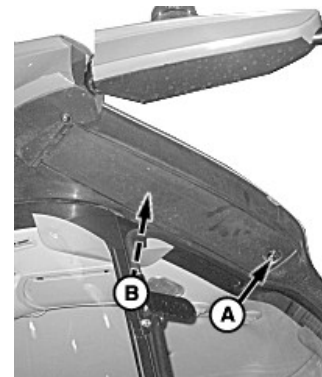

H115664—UN—28AUG15

**A—Knob
B—Fresh Air Filter**

NOTE: Cab fresh air filter may require cleaning sooner in dusty conditions.

Turn knob (A) and lower access cover. Remove fresh air filter (B) to clean or replace.

OUC6075,0004469-19-21DEC16

Windshield Washer Reservoir




A—Cap

Open cap (A) and fill windshield washer reservoir.

OUC6075,000446A-19-21DEC16

Alternator Screen


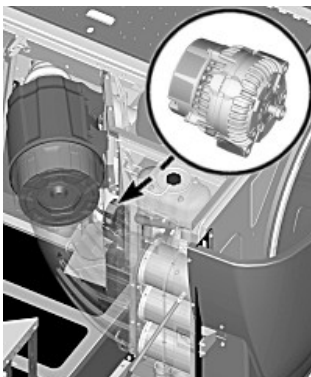


H119648—UN—13OCT16

Clean screen when it is 50% covered with debris

OUC6075,000469C-19-21MAR17

Moisture Sensor (If Equipped)

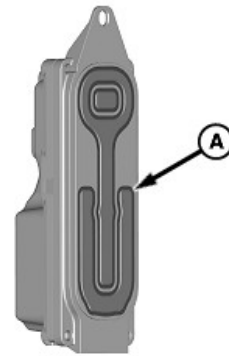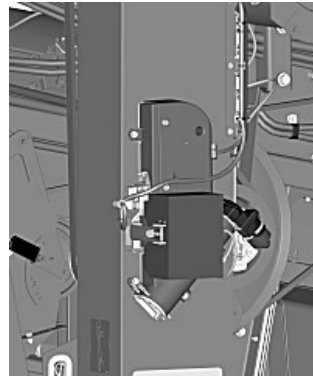

H125315—UN—06NOV18

A—Moisture Sensor

IMPORTANT: Static electricity can damage the moisture sensor module. To avoid damage, ensure that a metal surface is touched on the machine with at least one hand or arm before working on or cleaning.

The moisture sensor has internal components that can loosen when dropped, which is not immediately detectable. Handle the moisture sensor with care when working on or cleaning.


Remove and clean the moisture sensor (A) when operating in weeds, green crops, or small grains (canola).

- Do not use solvents or other cleaners on the sensor face.
- A dry rag is preferred for cleaning. If that does not work, then scrub with just a rag and water.
- Do not power wash the moisture sensor face.

Install moisture sensor and perform a Moisture Sensor calibration. See Calibrations Application Help or Operator's Station Help for further information.

OUC6075,0004FBE-19-14MAY21

Moisture Sensor Bypass Auger (If Required)

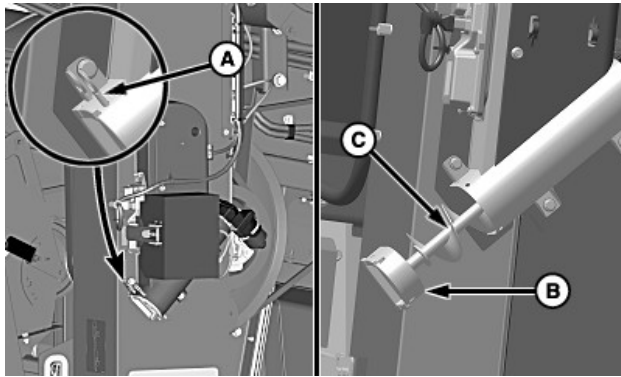

H132959—UN—18JAN21


A—Pin (2 used)
B—End Cap
C—Auger

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Remove pins (A) and end cap (B).
2. Remove auger (C) from the moisture sensor bypass.
3. Clean the auger and area inside the moisture sensor bypass.
4. Install and align the auger.
5. Install end cap and retain with pins.

OOU6075,0004FBF-19-18JAN21

ActiveVision™ Clean Grain Elevator Camera (If Equipped)

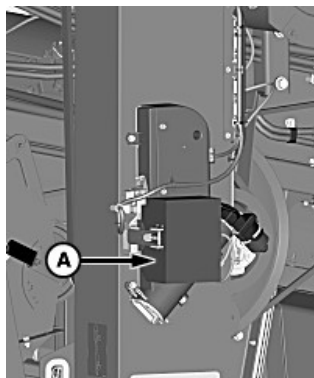

H125313—UN—06NOV18


A—ActiveVision™ Clean Grain Elevator Camera

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ clean grain elevator camera (A).


OOU6075,0004FC0-19-27APR21

Tailings Sensor Bypass Auger (If Required)

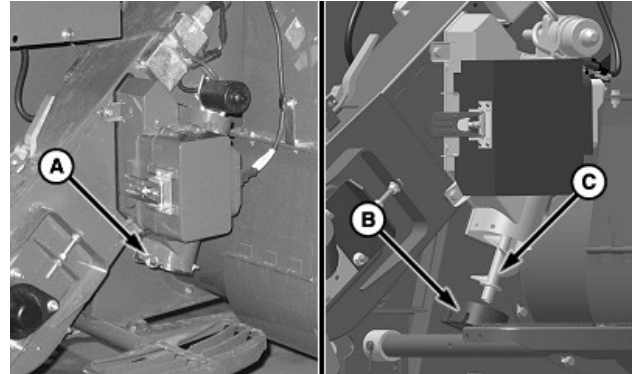

H132960—UN—18JAN21

Style A

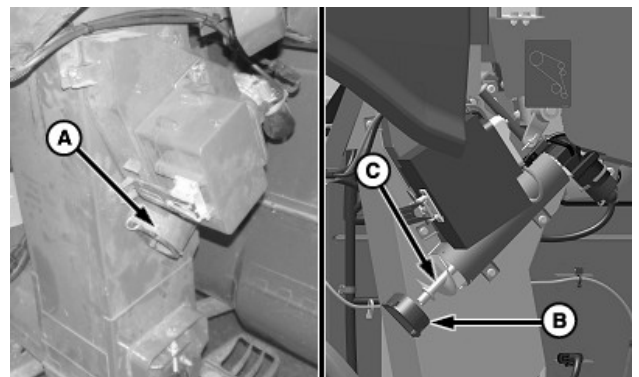

H132961—UN—19JAN21

Style B


A—Pin (2 used)
B—End Cap
C—Auger

CAUTION: Shut OFF engine, set park brake, and remove key.

1. Remove pins (A) and end cap (B).
2. Remove auger (C) from the moisture sensor bypass.
3. Clean the auger and area inside the moisture sensor bypass.
4. Install and align the auger.
5. Install end cap and retain with pins.

OOU6075,0004FC1-19-18JAN21

ActiveVision™ Tailings System Camera (If Equipped)

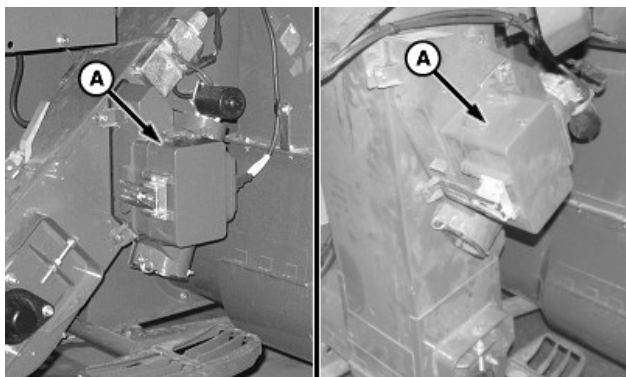

H119876—UN—01NOV16

Style A / Style B


A—ActiveVision™ Tailings System Camera

NOTE: The cleaning frequency varies depending on several factors, including operating conditions, weather, and crop conditions. Clean the camera lens using a clean, soft, moistened cloth.

Open latch and clean the ActiveVision™ tailings system camera (A).

OUC6075,0004FC2-19-27APR21

ActiveVision™ Camera Desiccant Cartridge (If Equipped)

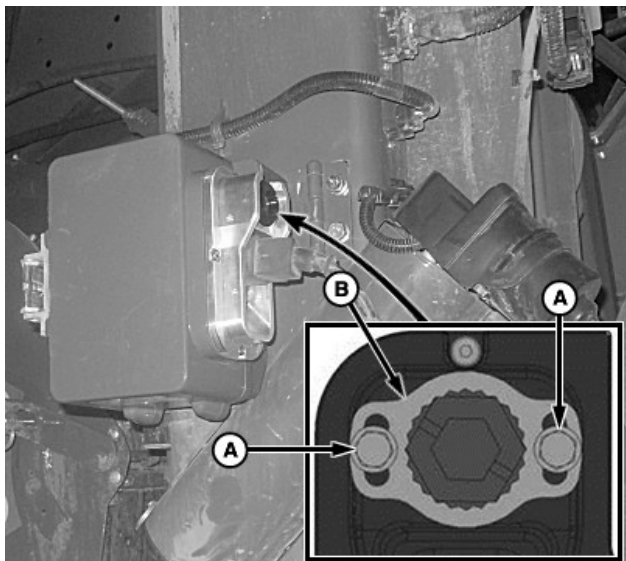

H130473—UN—09JUN20

A—Cap Screw (2 used)
B—Retainer Plate

CAUTION: Shut OFF engine, set park brake, and remove key.


IMPORTANT: Crop material and other debris may accumulate around the desiccant cartridge. Inspect and clean the area around the desiccant cartridge before removing.

NOTE: The ActiveVision™ clean grain elevator camera is shown. The ActiveVision™ tailings system camera is similar.

Replace the desiccant cartridge as needed when the moisture buildup is visible on the interior of the camera lens.

If the harvest season is complete, wait until the beginning of the next harvest season to extend the desiccant cartridge life.


1. Remove cap screws (A) and retainer plate (B).

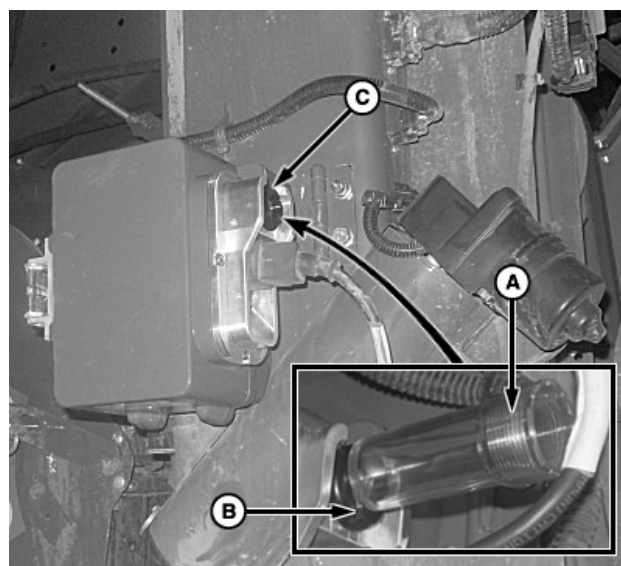

H130389—UN—21MAY20

A—Desiccant Container (tool)
B—Notch
C—Desiccant Cartridge

2. Align the desiccant container (A) that was included with the replacement desiccant cartridge with notch (B).
3. Remove the desiccant cartridge (C) from the ActiveVision™ camera.
4. Discard the desiccant cartridge.

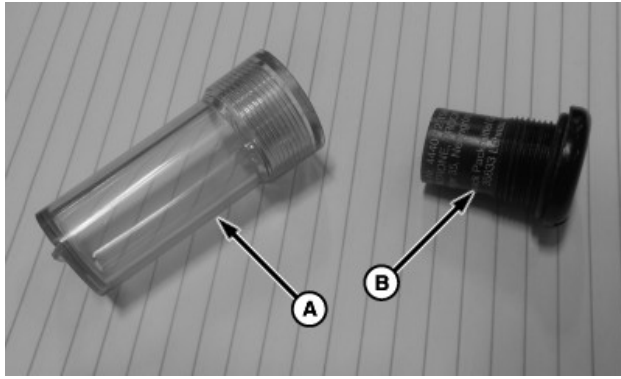

H130390—UN—01JUN20

Desiccant Container (tool) and Desiccant Cartridge

A—Desiccant Container (tool)
B—Desiccant Cartridge

5. Remove the desiccant container (A) from the replacement desiccant cartridge (B).
6. Install the desiccant cartridge into the ActiveVision™ camera.
7. Align the desiccant tool with the notch.
8. Tighten the desiccant cartridge until it is hand-tight.

NOTE: Verify that the retainer plate fits the hexagon form of the desiccant cartridge.

9. Install the retainer plate over the desiccant cartridge and retain with cap screws.
10. Tighten the cap screws to specification.

Specification

Cap Screws—Torque. 6.8 N·m
(60 lb·in)

OUC6075,0004E3B-19-26JUN20

CAUTION: Inspect fire extinguisher straps and mounting hardware at least once a year. If fire extinguisher straps or mounting hardware shows any sign of damage or unusual wear, discoloration or abrasion, the entire strap and hardware must be replaced immediately. For your safety, replace fire extinguisher components with replacement parts approved for your machine. See your John Deere dealer.

Inspect fire extinguisher bracket straps.

OUC6075,0004983-19-29MAY18

Clean Windows, Mirrors, and Lights

Be sure that there is good visibility in all directions. Clean windows, mirrors, and lights to ensure good visibility.

- Do not use solvents or other cleaners. John Deere Glass Cleaner or equivalent is recommended.
- A soft, non-abrasive rag or towel is preferred for cleaning.

OUC6075,0004C88-19-27FEB20

Fire Extinguisher Bracket Straps (If Equipped)



H123657—UN—02MAR18

Maintenance—As Required (Engine Fluids and Filters)


Required Emission-Related Information

Service Provider

A qualified repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.

DX,EMISSIONS,REQINFO-19-12JUN15

Rear Ladder and Landing

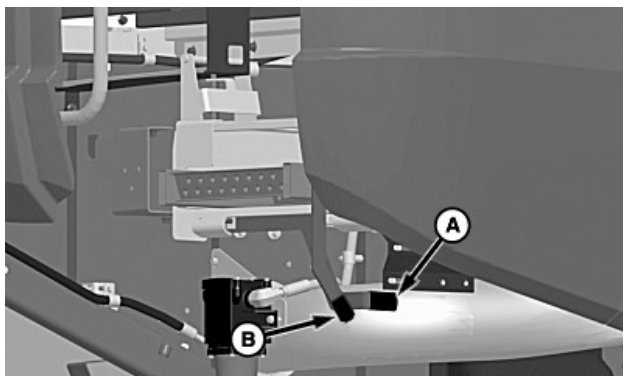

H95325—UN—11FEB10

A—Handle
B—Handle

CAUTION: Shut OFF engine, set parking brake and remove key.

Push up on handle (A) and swing ladder out until door latches.


Use handle (B) to pull ladder rearward.

OOU6075,0000588-19-16FEB10

Pull filter access cover (C) open to release from magnet.

OOU6075,000069B-19-25AUG10

Engine Access Covers

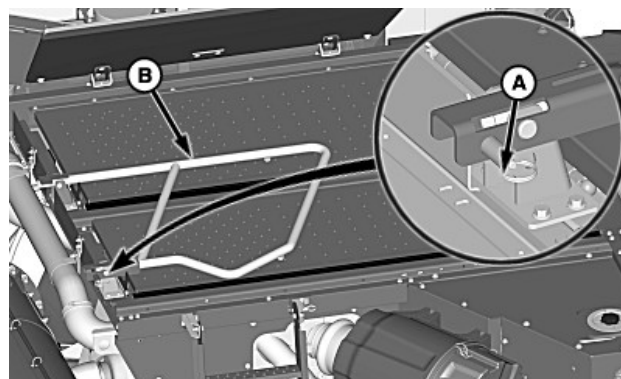

H118332—UN—04MAY16


A—Lockout Pin
B—Handrail

Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place.

Open engine access covers.

OOU6075,00042D3-19-04MAY16

Engine Filter Access Cover

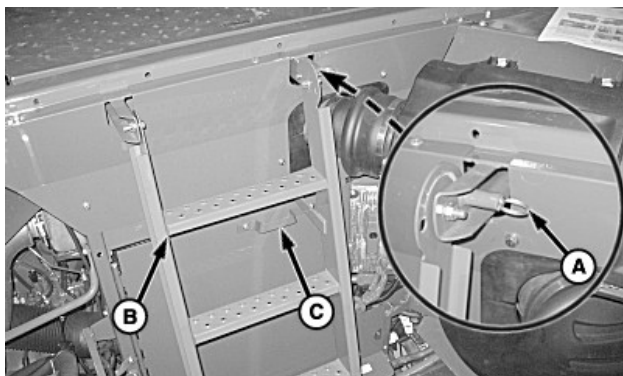


H95353—UN—25AUG10

A—Lock-Out Pin
B—Ladder
C—Cover

Pull lock-out pin (A) and rotate ladder (B) up until ladder locks into place.

Changing Starting Fluid Can

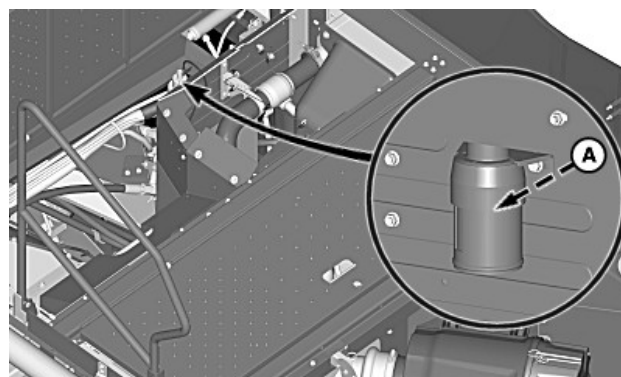

H116834—UN—08JAN16

A—Starting Fluid Can

⚠ CAUTION: Starting fluid is highly flammable and can cause injury or death to you or others if accidentally ignited. **DO NOT** use near fire, sparks, or flames. Read the cautionary information on the container and protect the container against damage.

Open engine access cover. Remove safety cap and spray button from starting fluid can (A). Loosen thumb wheel enough to change cans and then tighten.

IMPORTANT: To avoid drawing dust into engine, always keep can in position.

Protect starting fluid can from extreme heat or damage.

Check for fluid and valve operation by installing and pressing spray nozzle. If no fluid sprays out, replace can.

⚠ CAUTION: To prevent possible injury from exploding container, do not carry extra or empty cans inside cab.

OUC6075,00041C6-19-08JAN16


Do Not Modify Engine Power or Fuel/Air System

IMPORTANT: Increasing horsepower, or altering any aspect of fuel and air delivery on emissions certified engines beyond factory settings, will cause emission levels beyond what is allowed by engine emission regulations. Unauthorized adjustments are in violation of the emission regulations applicable to this engine and may result in substantial fines and penalties. Machine warranty will be voided if power level is changed from factory specifications.

Do not attempt to service injection pump or fuel injectors. Special training and special tools are required. See your John Deere dealer.

OUC6075,000058D-19-11FEB10

Fuel System

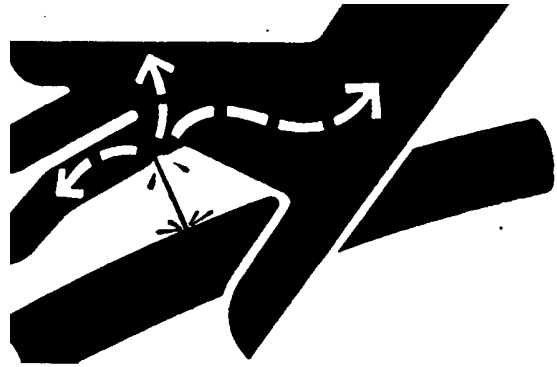


X9811—UN—23AUG88

⚠ CAUTION: Escaping diesel fuel under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pin holes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

OUC6075,000058E-19-11FEB10

Diesel Exhaust Fluid (DEF) Tank—Filling (Final Tier 4/Stage V)

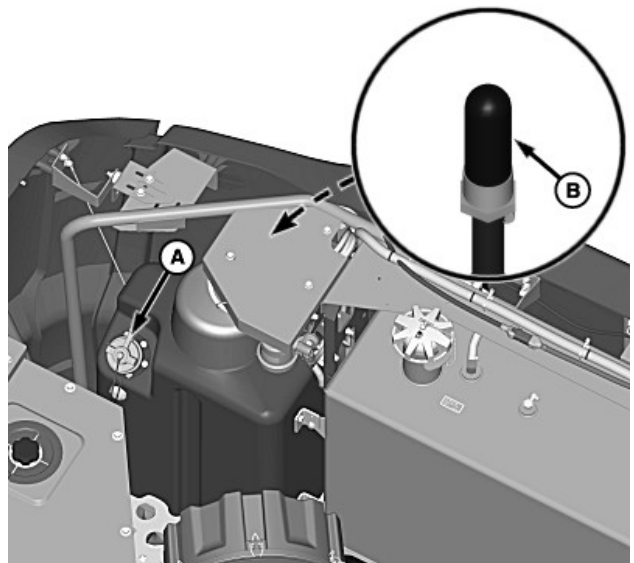

H125432—UN—04DEC18

A—Cap
B—Diesel Exhaust Fluid (DEF) Tank Breather

CAUTION: Diesel Exhaust Fluid (DEF) contains urea. Do not get fluid in eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. In the event DEF is ingested, contact a physician immediately. Reference Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: Using incorrect or unapproved aftertreatment components can damage the vehicle's aftertreatment system and reduce ability of the aftertreatment system to function correctly. Never interchange aftertreatment components between Interim Tier 4/Stage III B and Final Tier 4/Stage V equipped vehicles.

NOTE: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Cap (A) is not vented. Excess air is vented through Diesel Exhaust Fluid (DEF) tank breather (B).

Visually inspect the breather. Do not allow excessive amounts of chaff or debris to collect on breather. If the breather is covered with debris, it does not allow tank to breathe. Remove breather from hose and clean.


Fill tank every time machine is refueled. If this cannot be done, monitor Diesel Exhaust Fluid (DEF) level indicator on corner post display and refill as necessary. To avoid drastic changes in machine performance, always keep fluid level above the topmost red mark on the level indicator. See Combine Overview Application Help or Operator's Station for further information.

To fill tank:

1. Wash and rinse containers with distilled water to remove contaminants before adding fluid.
2. Wipe area around the cap before removing to reduce chance of contaminating fluid.
3. Using a funnel, carefully pour fluid into the tank, watching level through sight glass.
4. Install previously removed cap.
5. Carefully clean any spills, using distilled water.

OUC6075,0004A62-19-04DEC18

Diesel Exhaust Fluid (DEF) Tank—Draining (Final Tier 4/Stage V)

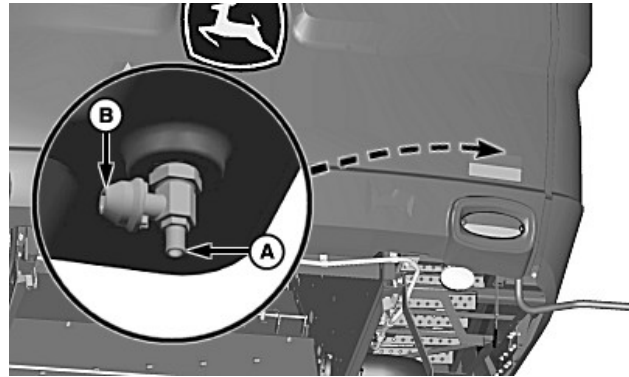

H130128—UN—30APR20

A—Fitting
B—Hex Head Cap Screw

CAUTION: Shut OFF engine, set park brake, and remove key.

IMPORTANT: Long-term storage of fluids in the vehicle (over 12 months) is not recommended. If long-term storage is necessary, periodic testing of the fluid is recommended to ensure that the urea concentration does not fall out of specification.


If an unapproved fluid, such as diesel fuel or engine coolant is added, drain the tank and rinse with distilled water, then refill the tank. If the system does not operate correctly after cleaning and refilling, contact your John Deere dealer to determine how to clean and purge the system. If water has been added to the tank, drain tank, flush with distilled water, and refill with Diesel exhaust fluid (DEF). Check the concentration of fluid after filling the tank. See Fuels and Lubricants section for testing.

NOTE: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. Fluid is corrosive to painted surfaces and can distort some plastic and rubber components.

1. Attach a hose to the fitting (A) at the bottom of the tank.
2. Loosen the hex head cap screw (B) to open the drain valve.
3. Close the drain valve and remove the hose once the fluid is drained.

OUC6075,0004E1D-19-07MAY20

Access Diesel Exhaust Fluid (DEF) Dosing Unit Filter (Final Tier 4/Stage V)

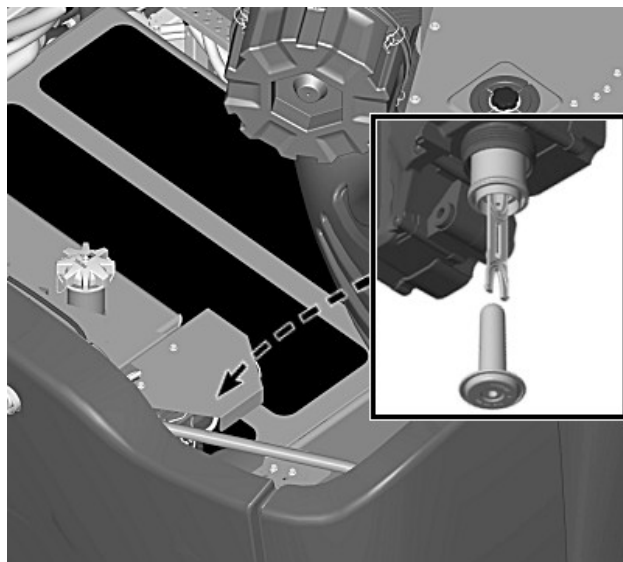

H125433—UN—04DEC18

Diesel Exhaust Fluid (DEF) Dosing Unit Filter

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.


IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

1. Shut OFF engine, set park brake, and remove key.
2. Remove and replace Diesel Exhaust Fluid (DEF) dosing unit filter. See Changing Diesel Exhaust Fluid (DEF) Dosing Unit Filter for further information.

OUC6075,0004A80-19-14DEC18

Access Diesel Exhaust Fluid (DEF) In-Line Filter (Final Tier 4/Stage V)

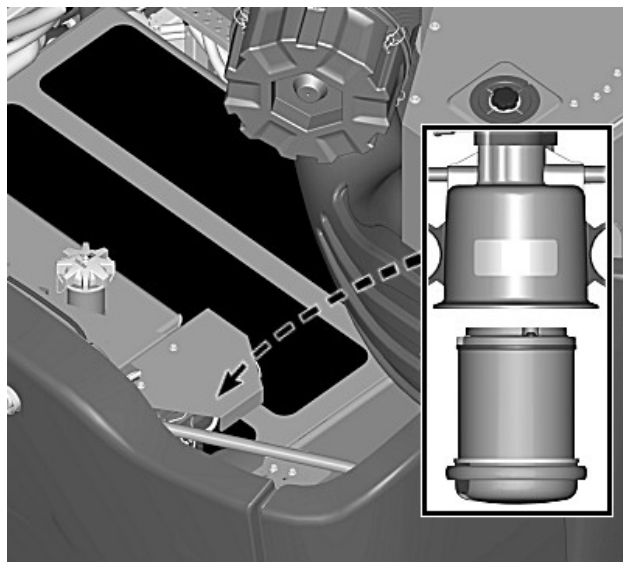

H125446—UN—04DEC18

Diesel Exhaust Fluid (DEF) In-Line Filter

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

1. Shut OFF engine, set park brake, and remove key.
2. Remove and replace Diesel Exhaust Fluid (DEF) in-line filter. See Replace Diesel Exhaust Fluid (DEF) In-Line Filter for further information.

OUC6075,0004A64-19-04DEC18

Cleaning Diesel Exhaust Fluid (DEF) Tank

CAUTION: Avoid contact with eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Reference the Materials Safety Data Sheet (MSDS) for additional information.

IMPORTANT: If DEF is spilled or contacts any surface other than the storage tank, immediately clean the surface with clear water. DEF is corrosive to painted and unpainted metallic surfaces and can distort some plastic and rubber components.

Spilled DEF, if left to dry or if only wiped away with a cloth, leaves a white residue. Improperly cleaned DEF spill can interfere with diagnosis of Selective Catalytic Reduction (SCR) system leakage problems.

If foreign material or fluid has been added to the DEF tank, drain the DEF tank, flush, and fill with new DEF.

If DEF quality is in question, pull a sample out of the DEF tank and place into a clear container. DEF should be crystal clear with a light ammonia smell. If DEF appears cloudy, has a colored tint, or has a profound ammonia smell, it is likely not within specification. DEF in this condition should not be used.

1. Remove drain plug (if equipped), and drain or siphon bad DEF from DEF tank.

NOTE: Cleaning can take place with DEF tank installed or removed.

2. Clean DEF tank with new DEF.

DEF must pass visual, smell, and concentration checks before running the engine. See Diesel Exhaust Fluid (DEF) – For Use In Selective Catalytic Reduction (SCR) Equipped Engines in the Fuels, Lubricants, and Coolants Section for more information.

3. Drain or siphon DEF tank.

NOTE: Repeat steps 2—3 until DEF tank has been cleaned.


4. **Early version:** Change DEF dosing unit filter and DEF tank header suction screen.

Later version: Change DEF dosing unit filter and DEF inline filter.

5. If removed, install DEF tank drain plug.
6. If removed, install DEF tank.
7. Fill DEF tank with new DEF.
8. Check DEF concentration with DEF refractometer, such as JDG11594 or JDG11684. The correct DEF concentration is 31.8% — 33.2%. See your authorized dealer for more information.
9. If DEF is not within specification, does not appear clear, or does not have a slight ammonia smell, contact your authorized dealer.

DX,DEF,CLEANTANK-19-18SEP19

Fuel Tank—Filling

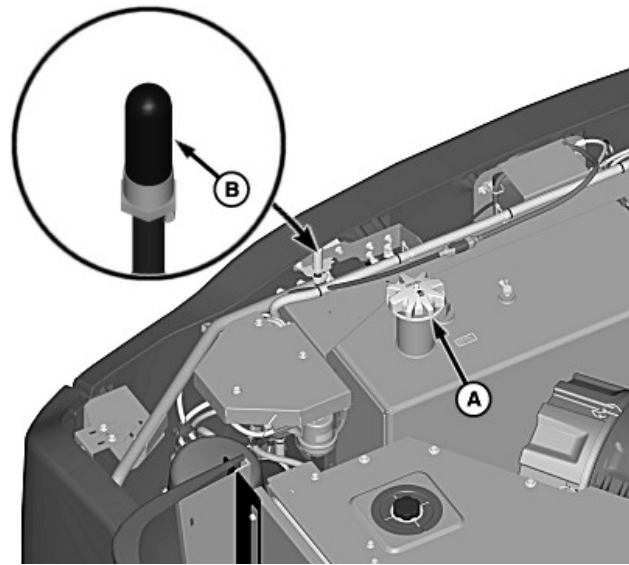

H125439—UN—04DEC18

A—Fuel Tank Cap
B—Fuel Tank Breather

CAUTION: Handle fuel carefully. Do not refuel machine while smoking. Shut OFF engine, set park brake and remove key before filling tank.


Do not overfill fuel tank. Bodily injury can result from fuel splash back. Leakage can result from expansion of fuel. If tank is too full, then left in direct sunlight or if temperature gets too hot, tank will overflow.

Fuel tank cap (A) is not vented. Excess air is vented through the fuel tank breather (B).

Visually inspect fuel tank breather. Do not allow excessive amounts of chaff or debris to collect on breather. If the breather is covered with debris, it does not allow fuel tank to breathe. Remove fuel tank breather from hose and clean.

OUO6075,0004A65-19-04DEC18

Fuel Tank—Draining

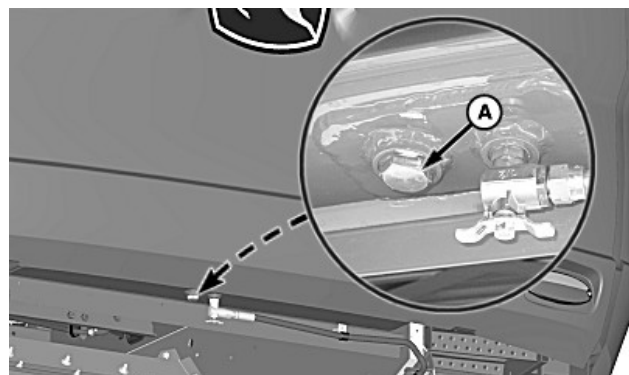

H95330—UN—21JUN11


A—Plug

CAUTION: Shut OFF engine, set parking brake and remove key before performing maintenance work.

Remove plug (A) at bottom of fuel tank to drain fuel.

OUO6075,0000591-19-16FEB10

Fuel Tank—Shut-Off Valve

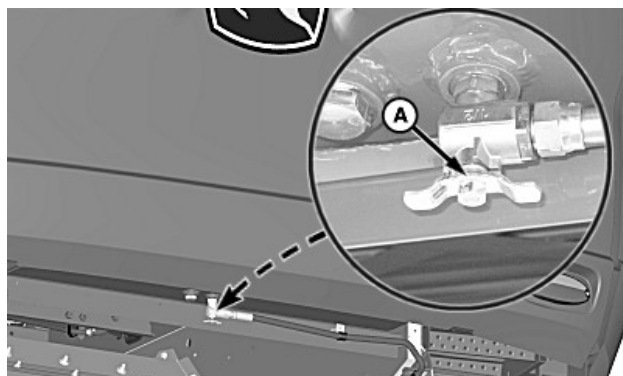

H95332—UN—30SEP10


A—Valve

CAUTION: Shut OFF engine, set parking brake and remove key before performing maintenance work.

Close valve (A) at bottom of fuel tank when servicing fuel filters.


OUO6075,0000913-19-30AUG10

Water Separator Primary Fuel Filter—Draining

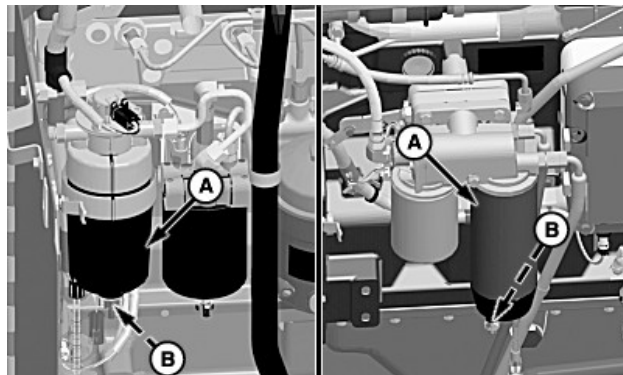

H119921—UN—02NOV16

Tier 2/Stage II (Style A / Style B)

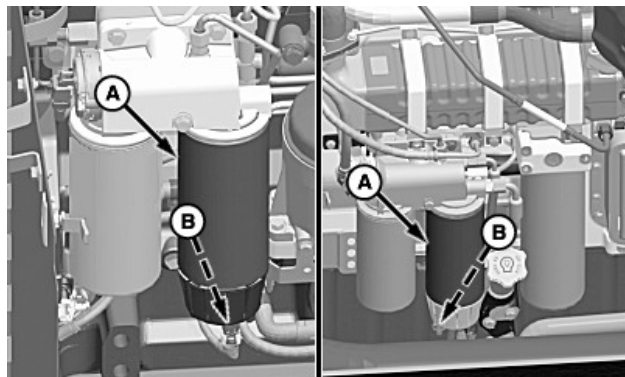

H119922—UN—02NOV16

Final Tier 4/Stage V (Style A / Style B)

A—Primary Fuel Filter
B—Drain


CAUTION: Shut OFF engine, set park brake and remove key before performing maintenance work.

When primary fuel filter (A) senses water in the fuel system, a diagnostic trouble code is generated.

If a diagnostic trouble code appears, drain primary filter using drain (B) and reset code.


OUO6075,000480C-19-13NOV17

Fuel Precleaner Filter—Cleaning

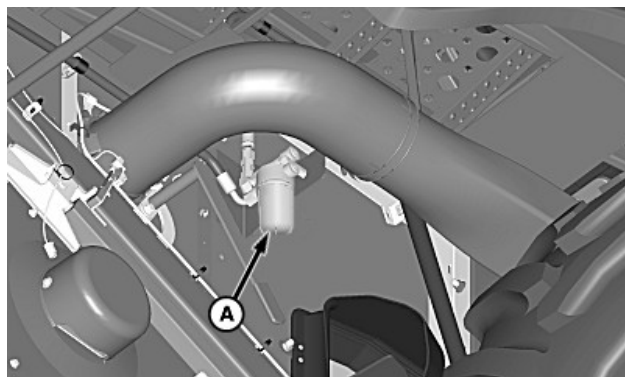

H98377—UN—30SEP10

Fuel Precleaner Filter

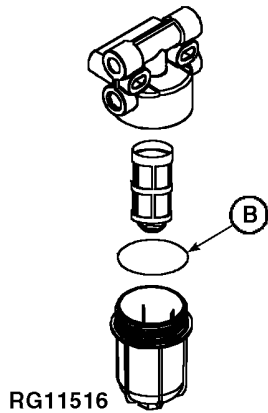

Fuel Precleaner Parts

A—Precleaner Bowl
B—O-ring


NOTE: Do not clean fuel precleaner and change primary and secondary fuel filters at the same time. Doing so makes it difficult to restart machine. Perform this procedure, then run engine before changing primary and secondary fuel filters.

Clean fuel precleaner filter if buildup is visible on the filter screen or if a diagnostic trouble code appears. Reset code after cleaning filter.

1. Start engine and run 3—5 minutes at low idle if machine had not been previously running.
2. Shut OFF engine and close valve at bottom of the fuel tank to prevent drain back within the supply line.
3. Thoroughly clean fuel precleaner assembly and surrounding area.
4. Remove precleaner bowl (A).
5. Clean filter screen and precleaner bowl. Inspect O-ring (B).
6. Install screen and tighten precleaner bowl.
7. Open valve at bottom of the fuel tank to fill the precleaner.
8. Start engine and run 3—5 minutes at low idle.

OUO6075,000456F-19-20DEC16

Heavy-Duty Fuel Precleaner Filter (Optional)—Flushing

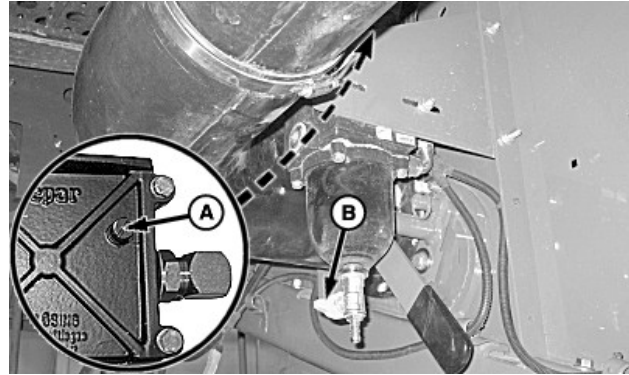

H100500—UN—29JUN11

A—Bleed Screw
B—Drain Valve

NOTE: Do not clean fuel precleaner and change primary and secondary fuel filters at the same time. Doing so makes it difficult to restart machine. Perform this procedure, then run engine before changing primary and secondary fuel filters.

Heavy-duty fuel precleaner should be back flushed whenever bowl is half full of water or when diagnostic code appears. Reset code after cleaning. If code still displays, see Heavy-Duty Fuel Precleaner Filter (Optional)—Replacing and Cleaning.

Filter element can be back flushed up to five times before being replaced.

1. Shut OFF engine and close valve at bottom of the fuel tank.
2. Open bleed screw (A) on top of the water separator. Allow water and dirt to be released from filter element and settle in bottom of bowl.
3. Push in on the drain valve (B) and turn counterclockwise to drain water and dirt from bowl.

NOTE: As fuel, water, and dirt are drained from bowl, more water and dirt are flushed from filter element and collect in bottom of bowl.

4. Close drain valve and allow water and dirt to settle again.
5. Repeat steps 3 and 4 until all dirt and water is removed.
6. Close bleed screw and open valve at bottom of the fuel tank.
7. Turn key switch ON for 60 seconds to allow fuel pump to prime the fuel system and check for leaks.
8. Start engine and run 3—5 minutes at low idle. If

engine does not start or dies, see Primary and Secondary Fuel Filter Element—Replacing.

OOU6075,000469F-19-21MAR17

Heavy-Duty Fuel Precleaner Filter (Optional)—Replacing and Cleaning

Replacing Filter



RXA0084320—UN—26SEP05

A—Lid
B—Spring Cassette
C—Filter Element
D—Gasket

NOTE: After filter element has been back flushed five times, clean filter. Replace filter when light is no longer visible while holding filter up to light.

1. Shut OFF engine and close valve at bottom of the fuel tank.
2. Loosen lid screws evenly in sequence shown.

NOTE: Lid and spring cassette is used again, but a replacement filter element must be installed.

3. Remove lid (A), spring cassette (B), and filter element (C).
4. Install replacement filter element and previously removed spring cassette (B).
5. Inspect lid gasket (D) and replace if necessary.
6. Install lid and tighten in sequence shown.

7. Open valve at bottom of the fuel tank.
8. Turn key switch ON for 60 seconds to allow fuel pump to prime the fuel system and check for leaks.
9. Start engine and run 3—5 minutes at low idle. If engine does not start or dies, see Primary and Secondary Fuel Filter Element—Replacing.

Cleaning Filter

1. Shut OFF engine and close valve at bottom of the fuel tank.

NOTE: Use a catch pan when draining fuel.

2. Open drain valve and drain fuel from bowl.
3. Loosen lid screws evenly in sequence shown.
4. Remove lid (A) and spring cassette (B).
5. Lift out filter element (C) by handle.

NOTE: Inspect filter for damage. If damaged, install replacement filter.


6. Wash filter in clean diesel fuel or mineral spirits.
7. Install filter element and spring cassette.
8. Inspect lid gasket (D) and replace if necessary.
9. Install lid and cap screws and leave cap screws finger tight.
10. Tighten cap screws in sequence as shown.
11. Open valve at bottom of the fuel tank.
12. Turn key switch ON for 60 seconds to allow fuel pump to prime the fuel system and check for leaks.
13. Start engine and run 3—5 minutes at low idle.

OOU6075,000456E-19-20DEC16

Primary and Secondary Fuel Filter Element—Replacing




TS1343—UN—18MAR92

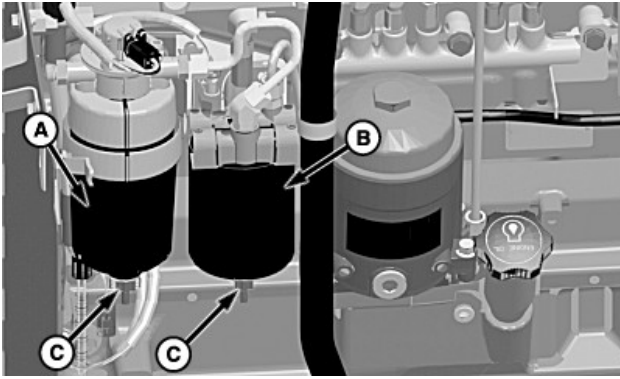

H95381—UN—16FEB10

Style A

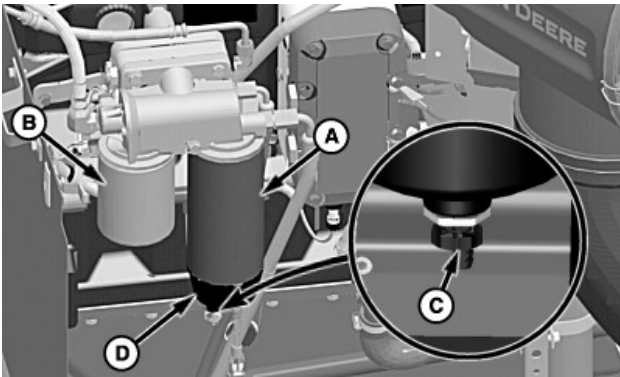

H115841—UN—10SEP15

Style B

A—Primary Fuel Filter
B—Secondary Fuel Filter
C—Drain Valves
D—Separator Bowl

CAUTION: High-pressure fluid remaining in fuel lines can cause serious injury. Only technicians familiar with this type of system should perform repairs. Before disconnecting fuel lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system, wait a minimum of 15 minutes after engine is stopped.

NOTE: Do not clean fuel precleaner and change primary and secondary fuel filter at the same time. Doing so makes it difficult to restart machine. Perform fuel precleaner cleaning procedure then run engine before changing primary and secondary fuel filter.

Change primary and secondary fuel filters if performance decline is noticed or a diagnostic trouble code appears. Reset code after replacing filters.

1. Start engine and run 3—5 minutes at low idle if machine had not been previously operating.
2. Shut OFF engine and close valve at bottom of the fuel tank.

3. Thoroughly clean the exterior of the filter elements and filter mounting areas.

CAUTION: Fuel in filters may be under pressure. Do not remove filters without completing the following step.

NOTE: Use a catch pan when draining fuel and when removing fuel filters.

4. **Style A:** Drain fuel contaminants and relieve pressure from the primary fuel filter (A) and secondary fuel filter (B) by opening drain valves (C). Close drain valves and remove fuel filters.

Style B: Drain fuel contaminants and relieve pressure from the primary fuel filter (A) by opening drain valve (C). Close drain valve and remove and retain separator bowl (D).

NOTE: Additional fuel drains from filter housings.

5. Remove primary fuel filter and secondary fuel filter.


IMPORTANT: Do NOT prefill either fuel filter with fuel.

NOTE: Lube filter seals with diesel fuel before installing.

6. **Style B Only:** Install previously removed separator bowl on the replacement primary fuel filter.
7. Install primary fuel filter (A) assembly on engine. Tighten filter assembly 3/4 of a turn after seal contacts filter housing.
8. Install replacement secondary fuel filter (B). Tighten filter 3/4 of a turn after seal contacts filter housing.
9. Verify that drain valves (C) are closed.
10. Open valve at bottom of the fuel tank.
11. Turn key switch ON for 60 seconds to prime the fuel system.
12. Start engine and run 3—5 minutes at low idle.


OUO6075,00043C7-19-20DEC16

Fuel System—Bleeding

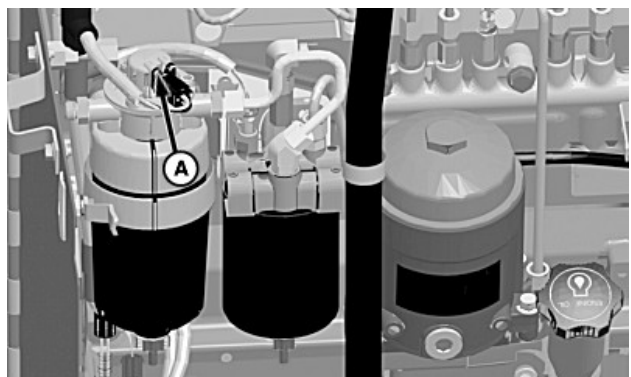


Tier 2/Stage II (Style A)

H95383—UN—16FEB10

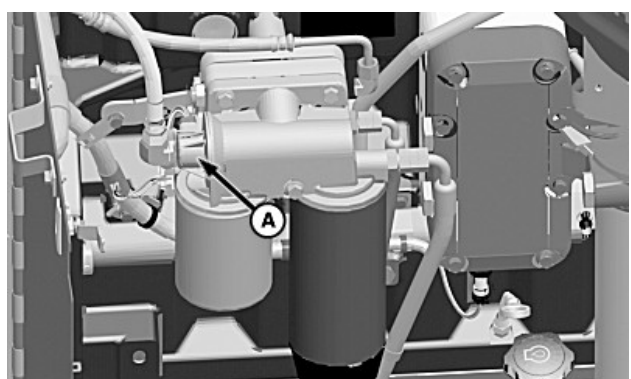


Tier 2/Stage II (Style B)

H95428—UN—19FEB10

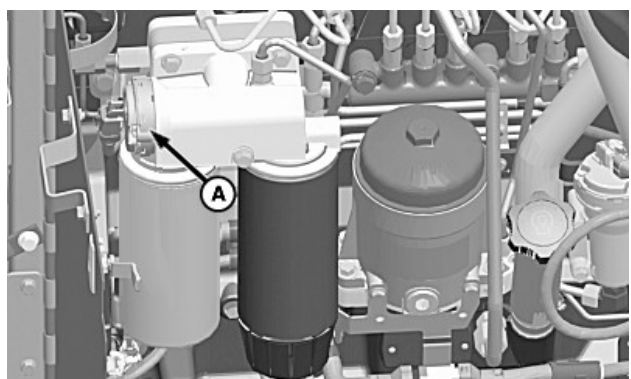

Final Tier 4/Stage V (Style A)

H95337—UN—12FEB10

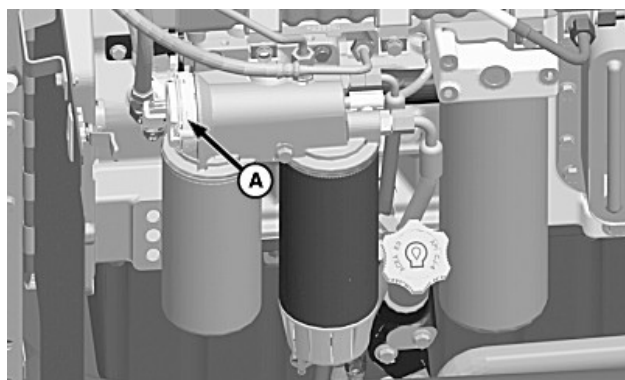

Final Tier 4/Stage V (Style B)

H95403—UN—17FEB10

A—Fuel Pump

CAUTION: Shut OFF engine, set park brake and remove key before performing maintenance work.


Air can enter fuel system when changing fuel filters or when machine has run out of fuel. Air in the fuel system could prevent engine from starting. If engine does not start, turn key switch ON for 60 seconds to allow fuel pump (A) to prime the fuel system.

OUO6075,000480D-19-13NOV17

Cooling System—Draining




TS281—UN—15APR13

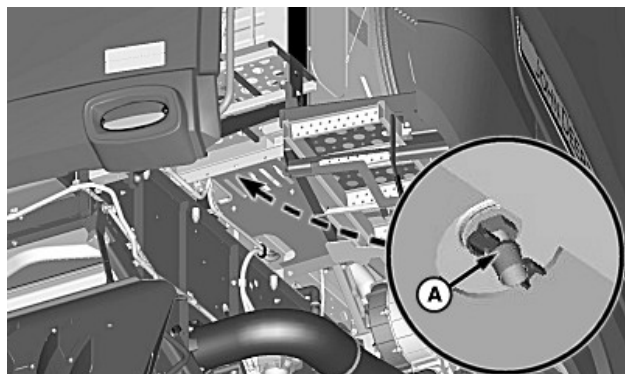


Tier 2/Stage II (Style A)

H106843—UN—08FEB13

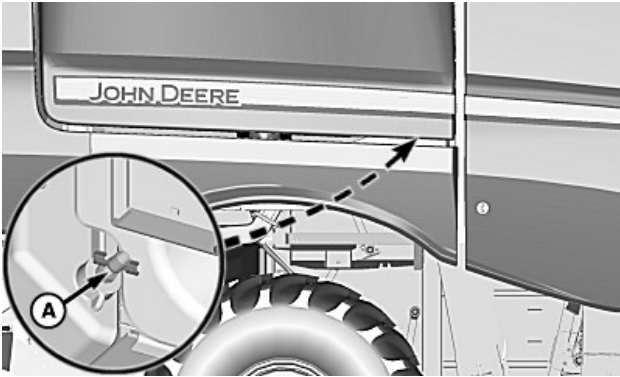

H106844—UN—08FEB13

*Tier 2/Stage II (Style B)
Final Tier 4/Stage V*

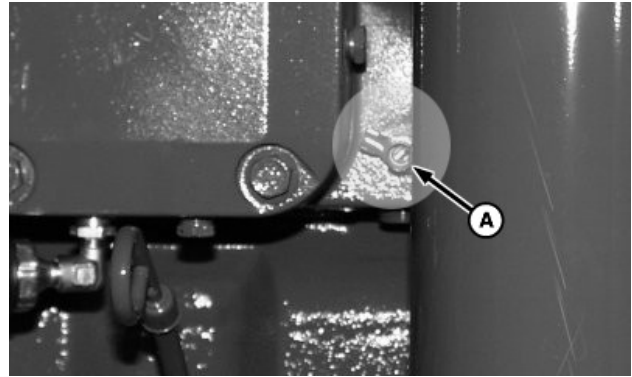

H104942—UN—28FEB12

Above Crankshaft (Tier 2/Stage II) (Style B)

A—Drain Valve

CAUTION: Shut OFF engine, set park brake and remove key. Avoid being scalded when opening surge tank cap. Never open cap when engine is hot. Open cap slowly to relieve pressure.


NOTE: Radiator drain is on the front side of radiator.

When Cool-Gard™ II or Cool-Gard™ II PG is used, the drain interval is 6 years or 6000 hours of operation.

If a coolant other than Cool-Gard™ II or Cool-Gard™ II PG is used, reduce the drain interval to 2 years or 2000 hours of operation.


Coolant must be drained and replaced. See Fuels and Lubricants section for engine coolant recommendations.

Open drain valve (A) on radiator.

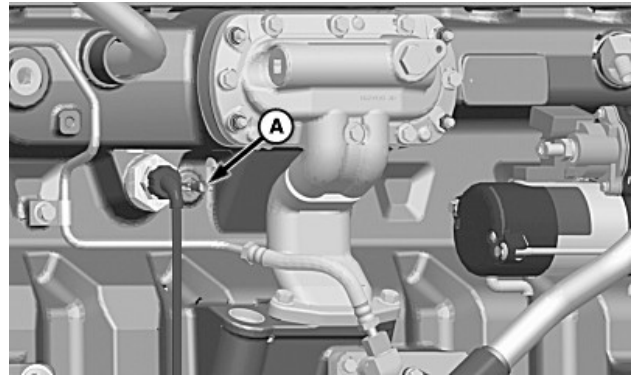

H104943—UN—28FEB12

Front Side of Engine (Final Tier 4/Stage V) (Style A)

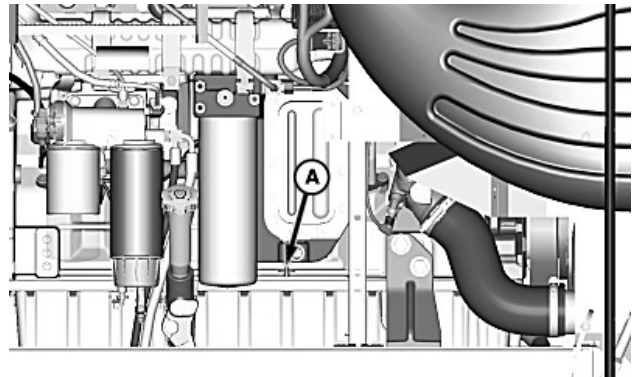


H104944—UN—28FEB12

Rear Side of Engine (Final Tier 4/Stage V) (Style B)


A—Drain Valve

Open drain valve (A) on the engine block.

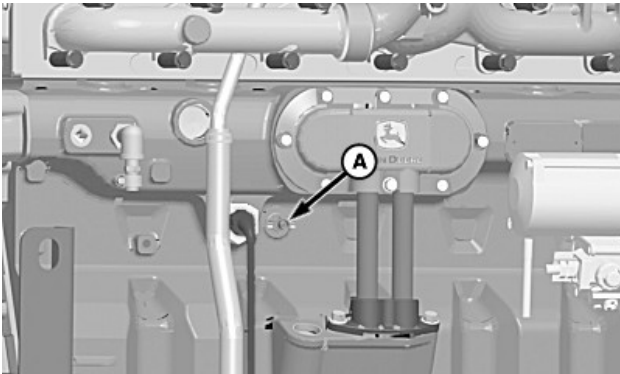

H104941—UN—28FEB12

Front Side of Engine (Tier 2/Stage II) (Style A)

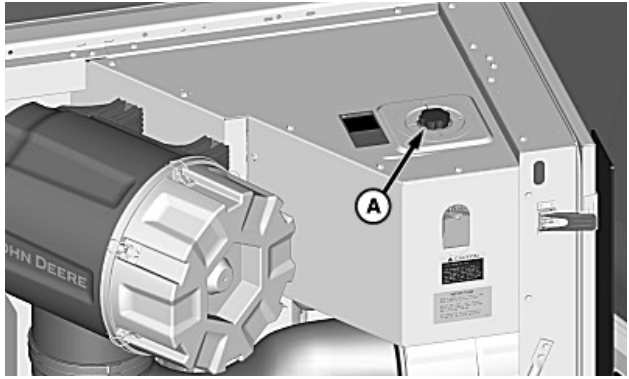

H105924—UN—05OCT12

A—Surge Tank Cap

Open surge tank cap (A) to allow coolant to drain faster.

Close radiator drains and fill system with clean water.

Install surge tank cap and run engine until it reaches operating temperature with heater ON.

Shut OFF engine, carefully remove surge tank cap and drain water out before rust or sediment settles.


Close radiator drains and refill system with a solution of clean water and John Deere Cooling System Cleaner PT500 or equivalent. Follow instructions with cleaner.

After using cleaner, flush system with clean water and drain.

Close radiator drains and fill system. See Cooling System—Filling in this section for filling procedure. See Fuels and Lubricants section for engine coolant recommendations.

OUC6075,000480E-19-13NOV17

Cooling System—Filling

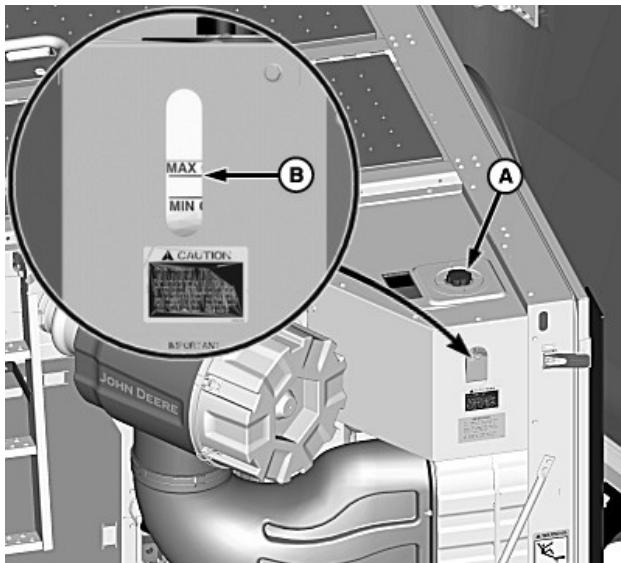

H105922—UN—05OCT12

A—Surge Tank Cap
B—Max Cold Line

CAUTION: Shut OFF engine, set park brake and remove key. Avoid being scalded when opening surge tank cap. Never open cap when engine is hot and never fill cooling system when engine is overheated. Open cap slowly to relieve pressure. Pour coolant in slowly. Check coolant level when engine is cold.

IMPORTANT: A special cap is used on the surge tank and radiator. If cap is damaged or missing, it must be replaced by an equivalent cap.

Never pour cold water into a hot engine as it might crack cylinder block or head. Do not operate engine without coolant.

Remove surge tank cap (A) and fill until fluid is at "Max Cold" line (B).

Install cap on surge tank, turn ON heater, and run engine until it reaches operating temperature.

Carefully remove cap from surge tank and refill as necessary. Install cap on surge tank.

When engine is cool, coolant level should be at "Max Cold" line.

NOTE: Coolant level must be between "Max Cold" and "Min Cold" lines. Add coolant as needed if coolant is below "Min Cold" line.

OUC6075,00041C9-19-27JAN16

Cooling System—Winterize


IMPORTANT: Do not drain cooling system to protect against freezing. Heater does not drain completely, so damage would result.

Before cold weather, be sure that cooling system has enough antifreeze. Use a reliable brand of permanent-type ethylene glycol antifreeze which contains a rust inhibitor and water pump lubricant, but does not contain a leak-stopping additive. See Fuels and Lubricants in this manual for correct recommendations.


After adding antifreeze, turn heater ON and run engine until it reaches operating temperature. This mixes the solution and circulates it through the system.

OUC6075,00043AF-19-11OCT16

Air Cleaner Filters—Removing

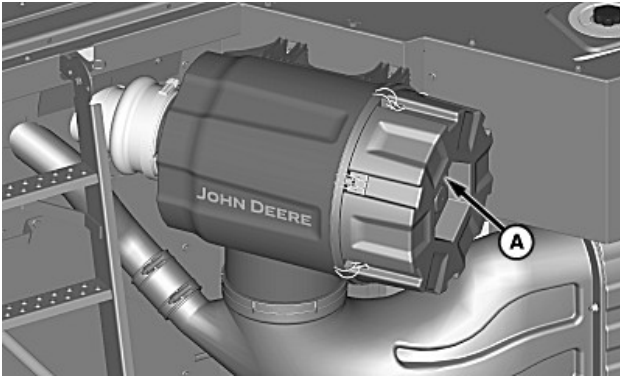

H111135—UN—25APR14

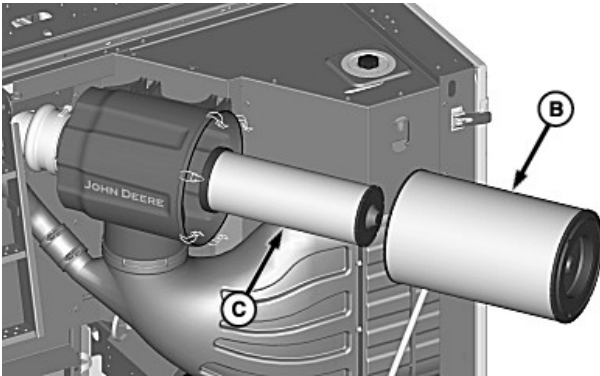

H111136—UN—25APR14

- A—Dust Cover
B—Primary Air Filter
C—Safety Filter

IMPORTANT: When servicing filters, shut OFF engine, set park brake and remove key so dirt cannot be pulled into engine.

Service filters only when engine air filter icon is displayed on armrest display.

Unsnap dust cover (A) and remove primary air filter (B).

Unscrew safety filter (C) in a counterclockwise direction to remove. Safety filter stops dirt that would pass through a damaged primary filter.

IMPORTANT: Never wash, brush, or knock elements. If blowing out the primary element, use dry compressed air (500 kPa; 72.5 psi). Clean the element from the inside out making sure that the tip of the air gun does not come in contact with the filter paper.

Never clean the safety element. Replace if dirty.

Never run engine without both filters in place.

Service filters as needed.

Install safety filter and turn in a clockwise direction until hand tight.

Install primary air filter and dust cover.

Check all connections in the air intake system. Be certain they are tight.


IMPORTANT: Do not use any exhaust flow cleaning unit to blow chaff off combine. Using such a unit can cause air filter failure, followed by engine failure.

OUC6075,00017D4-19-25APR14


Air Compressor System (If Equipped)




H112987—UN—20FEB15

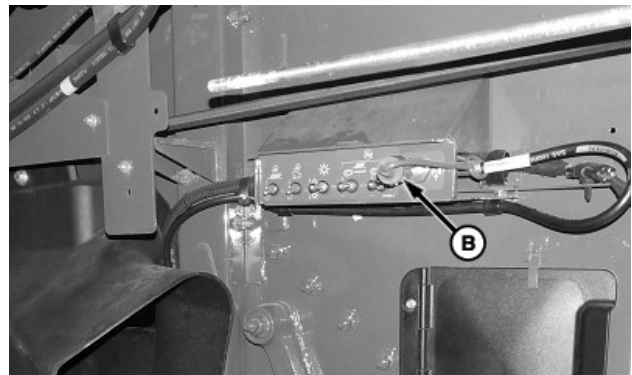

H115838—UN—09SEP15

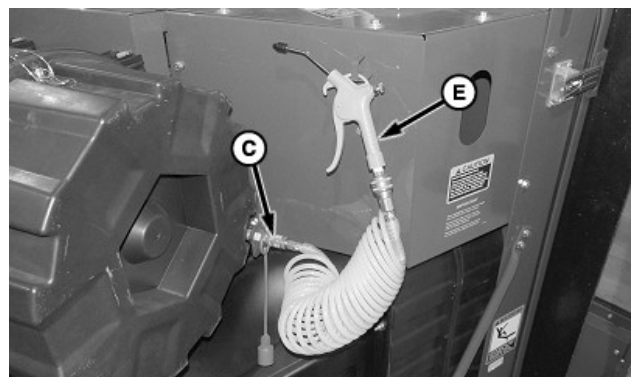

H115575—UN—21AUG15

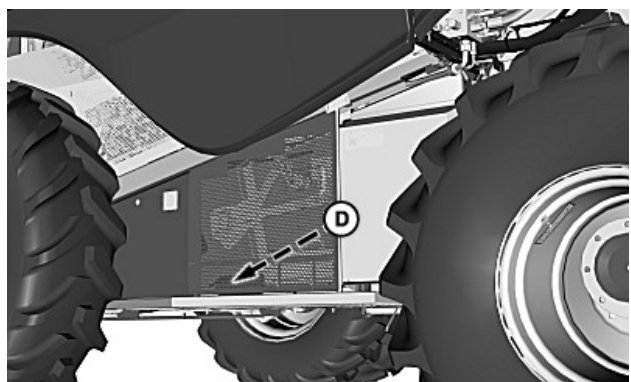

H112990—UN—20FEB15

- A—Reservoir
- B—Air Compressor Hose Coupler
- C—Air Compressor Hose Coupler
- D—Air Compressor Hose/Wand
- E—Air Compressor Hose/Wand

IMPORTANT: Never clean engine air filters or debris management air filters while machine engine is running.

NOTE: For optimal air compressor performance, engine must be running to provide continuous air supply.

Not recommended to inflate tires on machine or operate air tools.

Not recommended to use both coupler connections simultaneously.


Air compressor is on engine deck and reservoir (A) is on the right-hand side of machine.

Air compressor hose coupler (B) is on left-hand side of machine and air compressor hose coupler (C) is on engine deck.

Air compressor hose/wand (D) is on left-hand side of machine and air compressor hose/wand (E) is on engine deck.

OUC6075,000412E-19-21MAR16

Diesel Particulate Filter Maintenance and Service (Final Tier 4/Stage V)

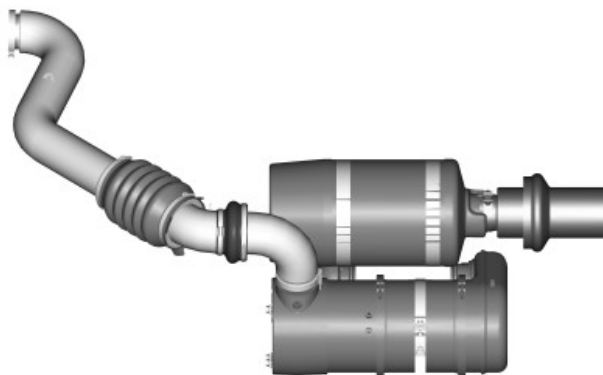

H115641—UN—27AUG15

The Exhaust Filter includes the Diesel Oxidation

Catalyst and Diesel Particulate Filter (DPF). The DPF is designed to retain residual ash, which is a noncombustible result of additives used in crankcase lubrication oils and the fuel. The DPF provides many hours of maintenance free operation. At some point the DPF will require professional service to remove the accumulated ash. The exact number of hours of operation before service is required will vary depending upon the engine's power category, duty cycle and operating conditions, engine oil ash content, and fuel quality. Adhering to John Deere's recommended oil and fuel specifications will maximize the hours of operation before professional DPF service is required.

As the engine owner, you are responsible for performing the required maintenance described in your Operator's Manual. During normal equipment operation the DPF maintenance requirements will depend on the rate at which ash accumulates in it. Generally, DPFs on engines above 175 hp / 130 kW will require servicing at about 4,500 hours. As ash levels rise in the DPF the capacity for soot storage is reduced and the back pressure of the exhaust system will rise more frequently. A diagnostic trouble code will appear indicating when the DPF needs servicing.

The removal of DPF ash must be done by removing the DPF from the machine and placing it into specialized equipment. Do not remove ash by using water or other chemicals. Removing ash by these methods may damage the material securing the DPF in its canister, resulting in the loosening of the DPF element in the canister and subjecting it to damage from vibration.

Failure to follow the approved ash removal methods may violate U.S. federal, state and local hazardous waste laws, along with damage to the DPF resulting in potential denial of the Diesel Exhaust Filter emissions warranty. It is strongly recommended you take the DPF to an authorized John Deere service location or other qualified service provider for servicing.

When AUTO or PARKED cleaning is enabled, the exhaust temperature may be high under no load or light load conditions at certain times during the exhaust filter cleaning cycle.

Disable exhaust filter cleaning system in conditions where it may be unsafe for elevated exhaust temperatures.

Disable the automatic exhaust filter cleaning system only when necessary.

OUC6075,0004808-19-13NOV17

Exhaust Filter / Diesel Particulate Filter Ash Handling and Disposal (Final Tier 4/Stage V)

CAUTION: Under federal, state, and/or local laws or regulations, Diesel Particulate Filter ash may be classified as a hazardous waste. Hazardous wastes must be disposed of in accordance with all applicable federal, state and local laws or regulations governing hazardous waste disposal. Only a qualified service provider should remove ash from the DPF. Personal protective equipment and clothing, maintained in a sanitary and reliable condition, should be used when handling and cleaning a DPF. See your John Deere dealer or qualified service provider for assistance.


OUO6075,0004809-19-13NOV17

Exhaust Filter Disposal (Final Tier 4/Stage V)


CAUTION: Proper management of an Exhaust Filter that has reached the end of its useful life is required, since the ash or catalyst material in the device may be classified as hazardous waste under federal, state, and/or local laws or regulations. Used Exhaust Filters, which include the Diesel Particulate Filter, may be exchanged at any John Deere dealer or qualified service provider.

OUO6075,000480A-19-13NOV17

Engine Debris Management Air Filter—Removing (Final Tier 4/Stage V)

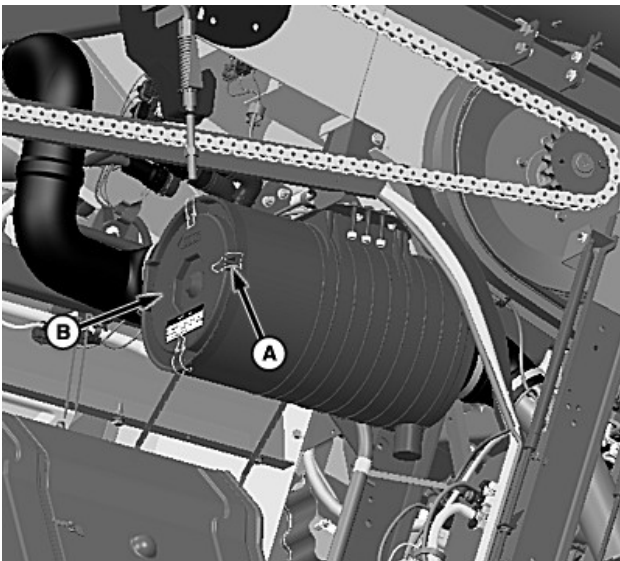

H111139—UN—28APR14

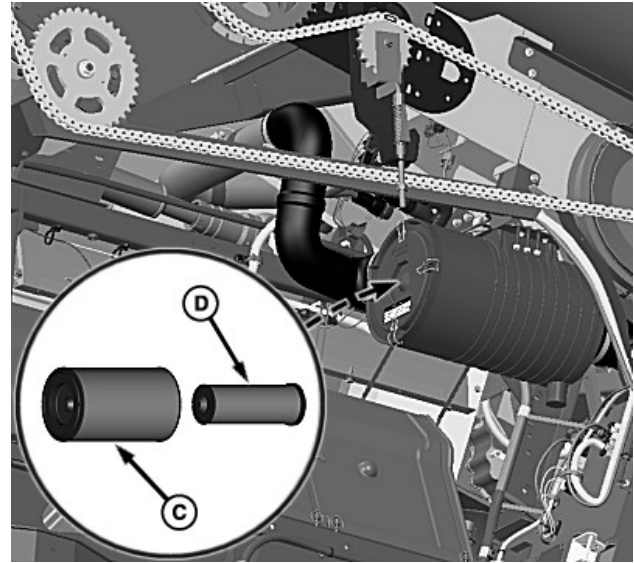

H111140—UN—28APR14

A—Latches
B—Dust Cover
C—Primary Air Filter
D—Safety Filter

IMPORTANT: When servicing filters, shut OFF engine, set park brake and remove key so dirt cannot be pulled into engine.

Service filter only when engine debris management air filter icon is displayed on armrest display.

Disengage latches (A) and remove dust cover (B).

Remove primary air filter (C).

Remove safety filter (D) in a counterclockwise direction. Safety filter stops dirt that would pass through a damaged primary filter.

IMPORTANT: Never wash, brush, or knock elements. If blowing out the primary element, use dry compressed air (500 kPa; 72.5 psi). Clean the element from the inside out making sure that the tip of the air gun does not come in contact with the filter paper.

Never clean the safety element. Replace if dirty.

Never run engine without both filters in place.

Service filters as needed.

Install safety filter and turn in a clockwise direction until hand tight.


Install primary air filter.

Install cover and engage latches.

OUO6075,000480B-19-13NOV17

Maintenance—As Required (9.0 L Engine Belts)


Engine Belt—Routing (Tier 2/Stage II)

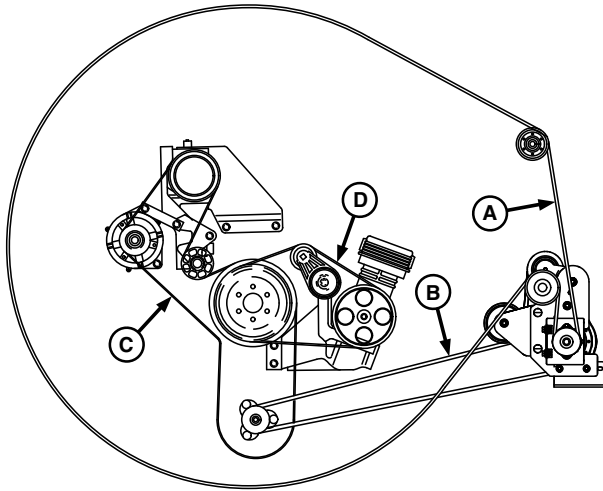

H124552—UN—21JUN18

A—Rotary Screen Drive Belt, Screen Side
B—Rotary Screen Drive Belt, Engine Side
C—Cooling Fan, Air Conditioner, Compressor Belt
D—Air Compressor Belt (If Equipped)

OUC6075,00049EF-19-20JUN18

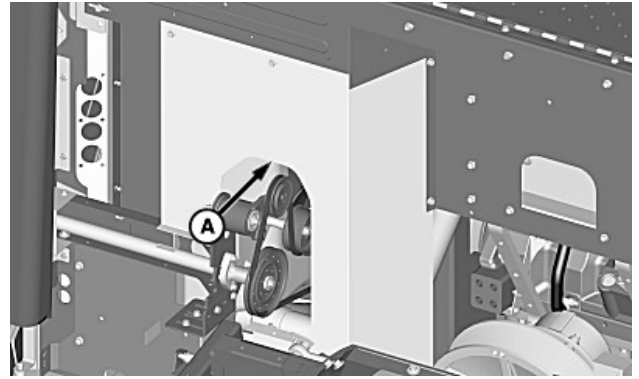


H124546—UN—19JUN18

Front Side Of Engine

A—Shield

2. Remove shield (A).

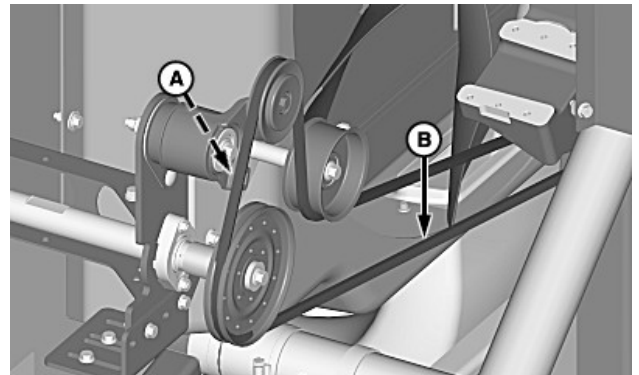


H124547—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).

Engine Accessory/Fan Drive/Air Compressor (If Equipped) Belt—Replacing (Tier 2/Stage II)

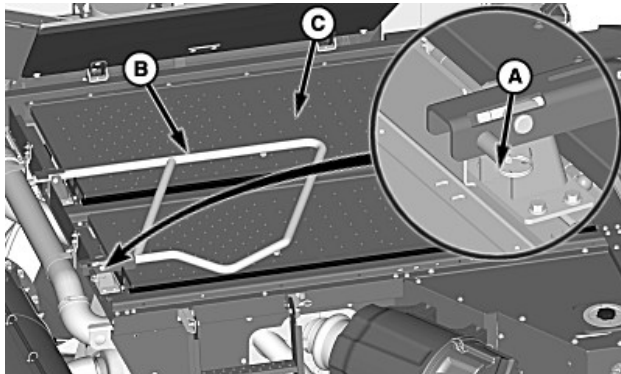


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.


1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

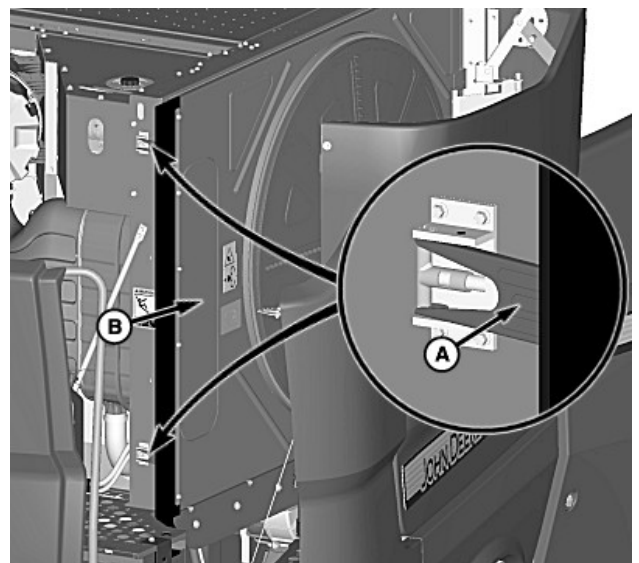

H106847—UN—08FEB13

A—Latches
B—Rotary Screen Door


5. Pull latches (A) and open rotary screen door (B).

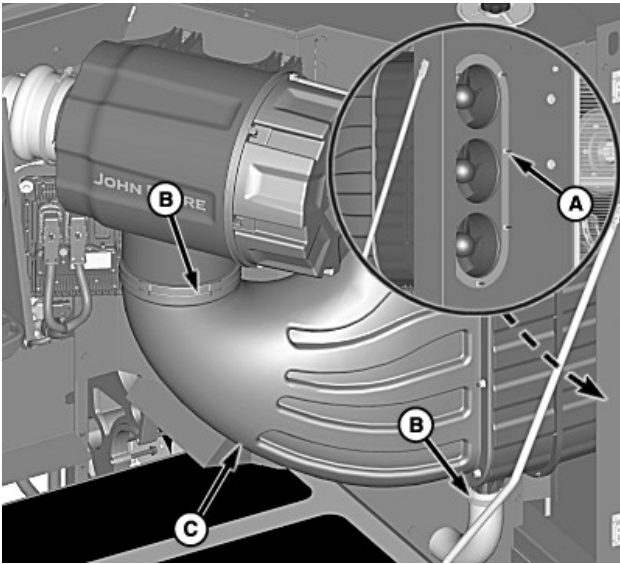

H95647—UN—10MAR10

- A—Nut (7 used)
- B—Clamps
- C—Air Duct


6. Remove nuts (A) and loosen hose clamps (B).
7. Lay air duct (C) out of the way.

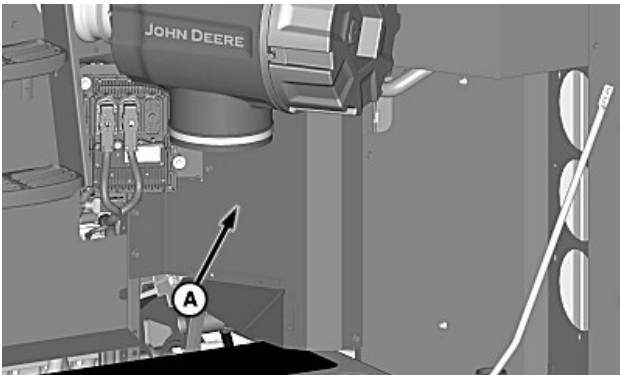

H95648—UN—10MAR10


- A—Shield

8. Remove shield (A).

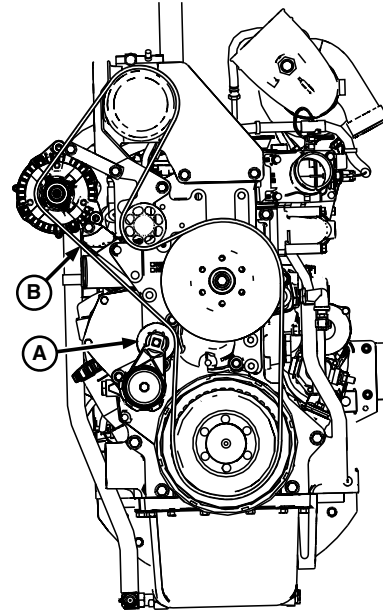

H95702—UN—15MAR10

Engine Accessory/Fan Drive Belt Without Air Compressor

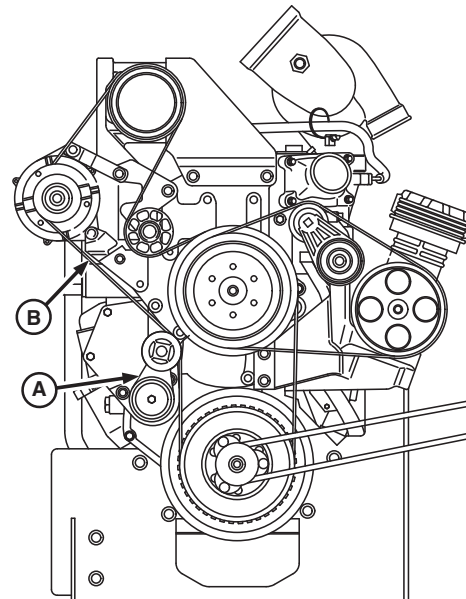


H113079—UN—02MAR15

Engine Accessory/Fan Drive Belt With Air Compressor

- A—Tensioner Arm
- B—Engine Accessory/Fan Drive Belt

9. Use breaker bar to relieve belt tension from the tensioner arm (A).
10. Remove belt (B) and work belt over fan blades to remove.
11. Install replacement belt over the fan blades.
12. Use breaker bar to relieve tension from the tensioner arm to install replacement belt.

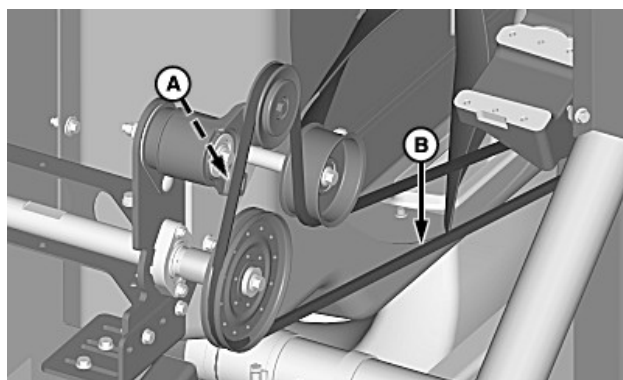


H124547—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

13. Use breaker bar to relieve tension from the tensioner arm (A) to install rotary screen drive belt (B).
14. Install previously removed shield (front side).
15. Close separator access cover and lower handrail.
16. Install previously removed shield (rear side) and air duct.
17. Close and latch the rotary screen door.

OUC6075,00049E6-19-20JUN18

Rotary Screen Belt—Routing

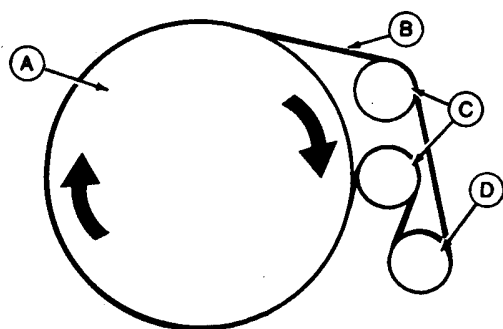


H39170

H39170—UN—11OCT88

A—Rotary Screen
B—Belt
C—Idlers
D—Drive Sheave

OUC6075,00006CE-19-05MAR10

Rotary Screen Belt—Replacing

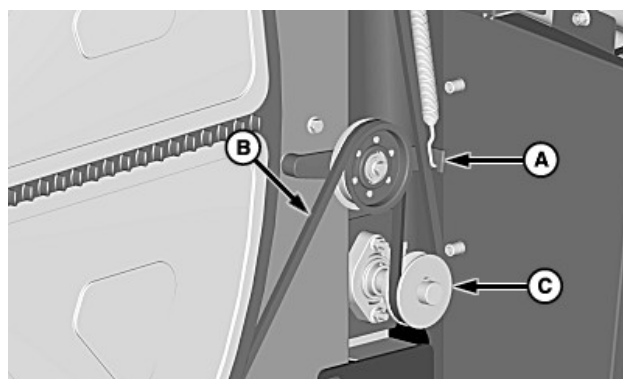


H126280—UN—08MAY19

A—Tensioner Lever
B—Rotary Screen Belt
C—Sheave

CAUTION: Shut OFF engine, set park brake, and remove key.

Prevent injury. Belt is under tension. Slowly release the tensioner lever when belt is removed.


1. Push down on tensioner lever (A) and relieve tension from the rotary screen belt (B).
2. Remove rotary screen belt from sheave (C) and slowly release the lever and spring tension.

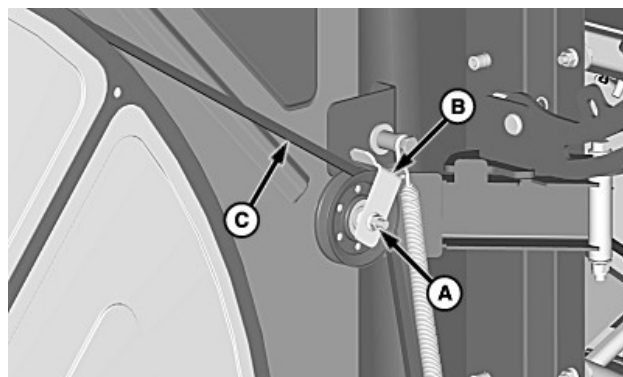

H126281—UN—08MAY19

A—Nut
B—Belt Trap
C—Rotary Screen Belt

3. Remove nut (A) and belt trap (B).
4. Remove rotary screen belt (C).

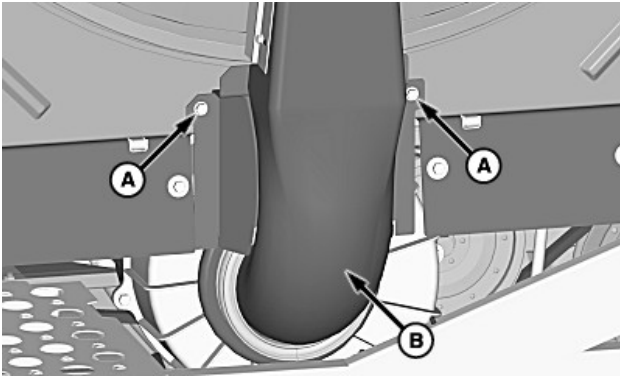

A—Cap Screw and Nut (2 used)
B—Vacuum Duct


H126282—UN—08MAY19

NOTE: The rotary screen door must be opened to access the nuts from the inside.

5. Remove cap screws and nuts (A).
6. Pull vacuum duct (B) away from the rotary screen door and remove the rotary screen belt.
7. Pull vacuum duct away from the rotary screen door and install the replacement rotary screen belt.
8. Install cap screws and nuts.

IMPORTANT: To prevent damage, verify that the rotary screen clears the notches in the vacuum duct rake bar. Adjust vacuum duct as needed.

9. Close rotary screen door.

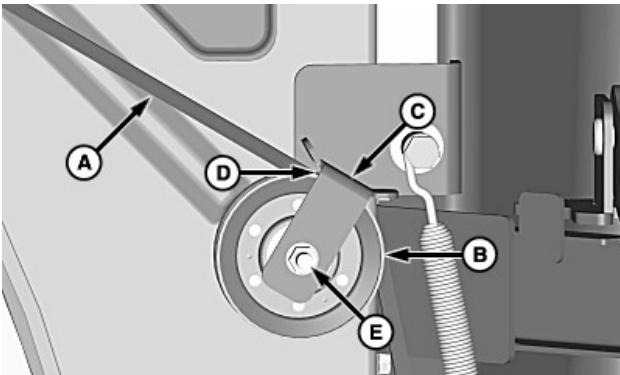

A—Rotary Screen Belt
B—Pulley
C—Belt Trap
D—Gap
E—Nut

H126283—UN—08MAY19

10. Install rotary screen belt (A) around pulley (B) as shown.


IMPORTANT: To prevent damage, verify that the belt trap is parallel to the rotary screen belt.

11. Install belt trap (C) and adjust to specified gap (D).

Specification

Belt Trap—Gap. 4 mm
(5/32 in)

12. Install and tighten the nut (E), making sure that the belt trap does not move.

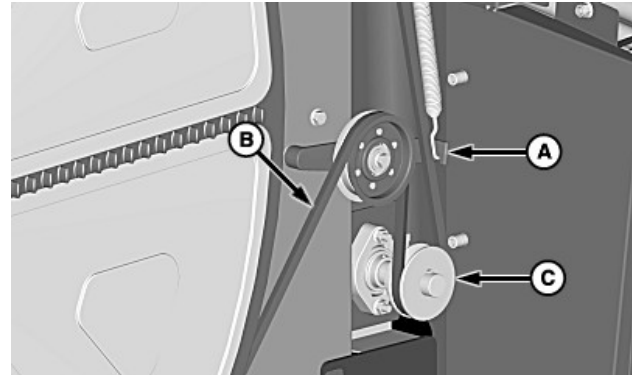

H126280—UN—08MAY19


A—Tensioner Lever
B—Rotary Screen Belt
C—Sheave

CAUTION: Prevent injury. Belt is under tension. Slowly release the tensioner lever when the belt is installed.

13. Push down on tensioner lever (A) and relieve tension from the rotary screen belt (B).
14. Install rotary screen belt around sheave (C) as shown and slowly release the lever and spring tension.

OUC6075,0004B91-19-30MAY19

Rotary Screen Drive Belt—Replacing (Tier 2/Stage II)

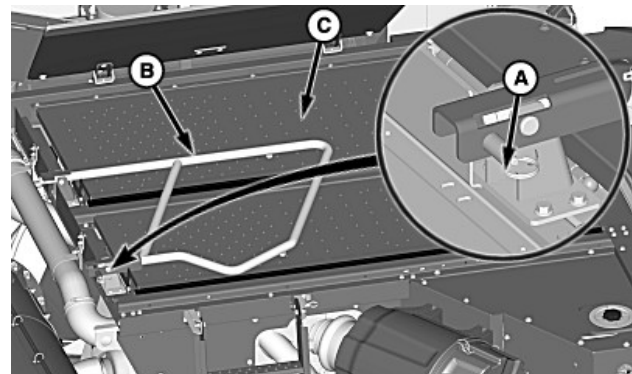


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.


1. Pull lockout pin (A) and rotate handrail (B) up until

handrail locks into place to open separator access cover (C).

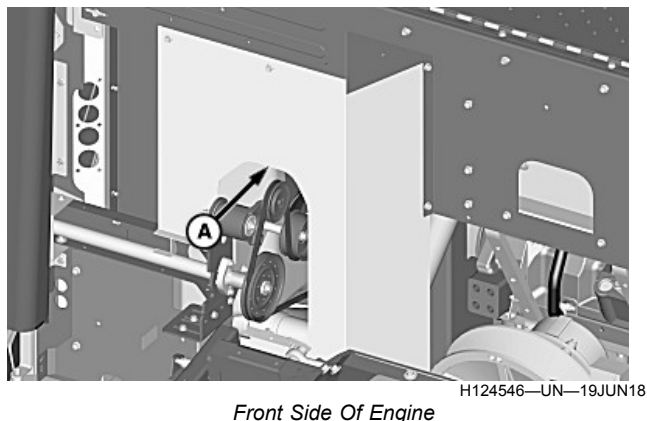

A—Shield

2. Remove shield (A).

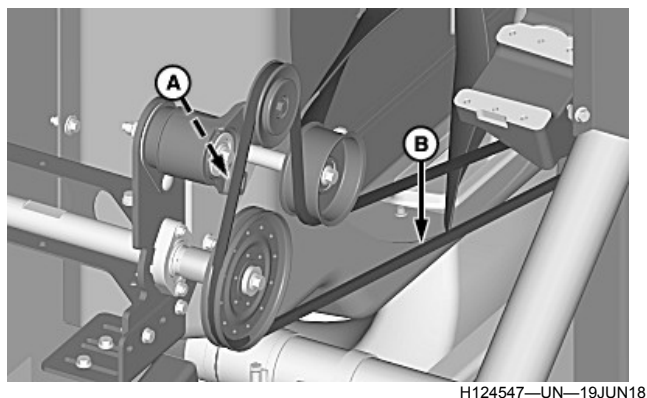


A—Tensioner Arm
B—Rotary Screen Drive Belt

3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).
5. Use breaker bar to relieve tension from the tensioner arm to install replacement belt.
6. Install previously removed shield, close separator access cover, and lower handrail.

OOU6075,00049E7-19-20JUN18

Engine Belt—Routing (Final Tier 4/Stage V)

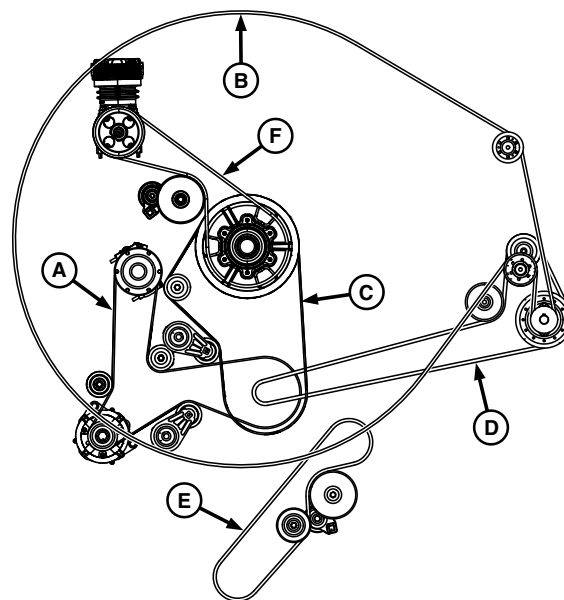


H135673—UN—10JUN22

A—Air Conditioner Compressor, Alternator Belt
B—Rotary Screen Drive Belt, Screen Side
C—Variable Speed Fan Belt
D—Rotary Screen Drive Belt, Engine Side
E—Vacuum Fan Driven Belt, Fan Side

mh69740,1653054087326-19-20MAY22

Air Conditioner Compressor/Alternator Belt—Replacing (Final Tier 4/Stage V)

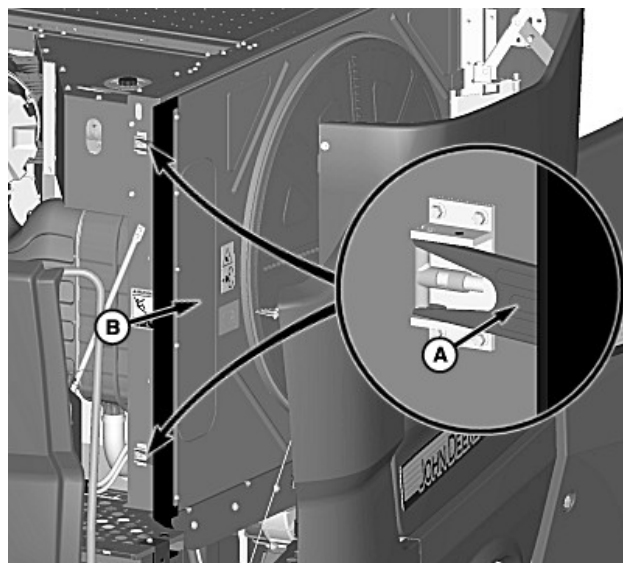


H106847—UN—08FEB13

A—Latches
B—Rotary Screen Door

CAUTION: Shut OFF engine, set park brake and remove key.


1. Pull latches (A) and open rotary screen door (B).

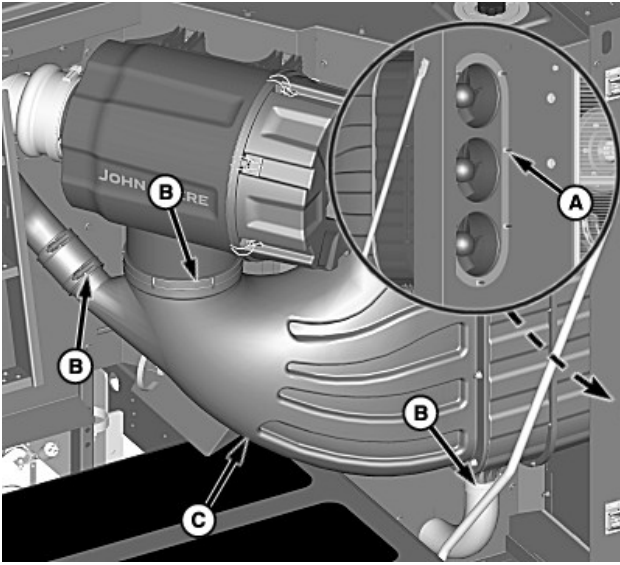

H110003—UN—18MAR14

A—Nut (7 used)
B—Clamps
C—Air Duct


2. Remove nuts (A) and loosen hose clamps (B).
3. Lay air duct (C) out of the way.

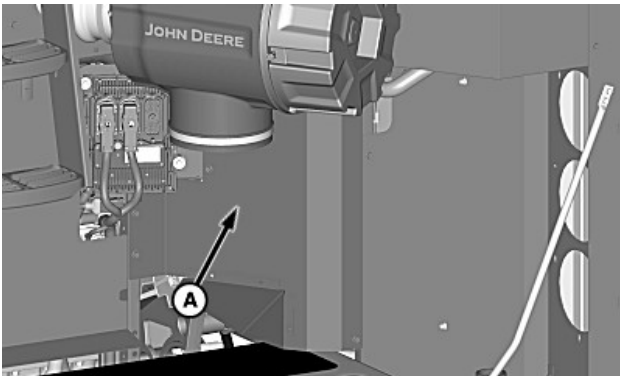

H95648—UN—10MAR10

A—Shield

4. Remove shield (A).

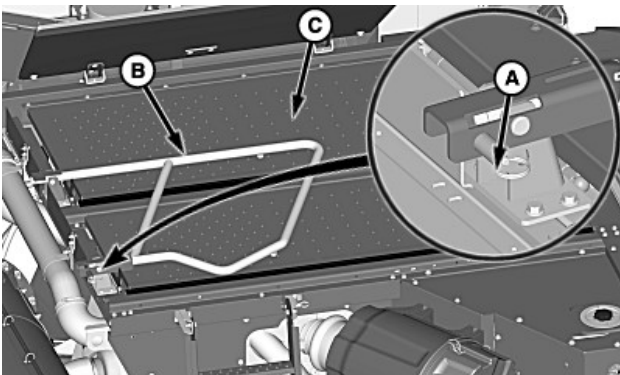


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

5. Pull lockout pin (A) and rotate handrail (B) up until


handrail locks into place to open separator access cover (C).

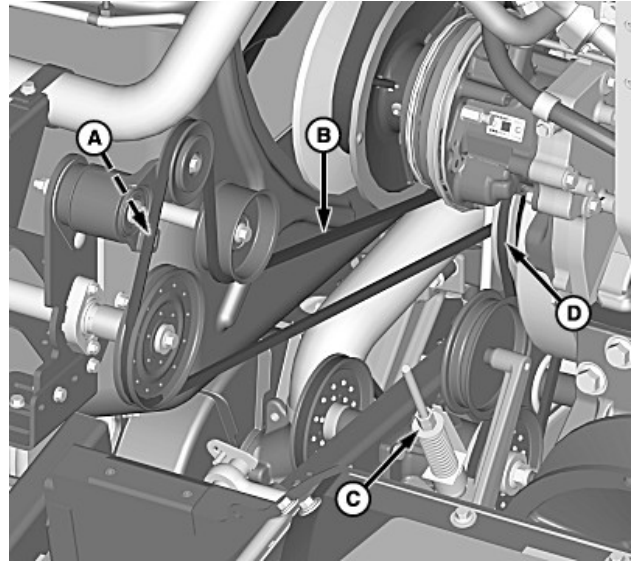

H124540—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt
C—Nut (2 used)
D—Vacuum Fan Drive Belt

6. Use breaker bar to relieve belt tension from the tensioner arm (A).
7. Remove rotary screen drive belt (B).
8. Loosen nuts (C) and remove the vacuum fan drive belt (D).

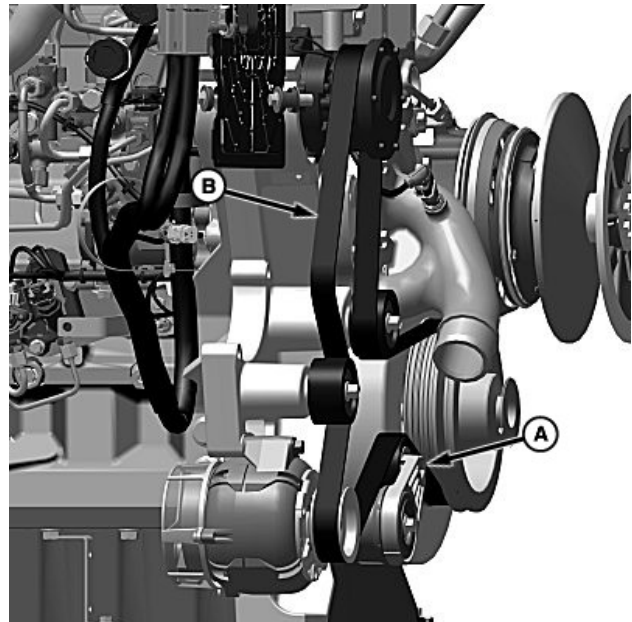


H135681—UN—26MAY22

A—Tensioner Arm
B—Belt

9. Use breaker bar to relieve belt tension from the tensioner arm (A).

10. Remove belt (B) and work belt over fan blades to remove.
11. Install replacement belt over the fan blades.
12. Use breaker bar to relieve tension from the tensioner arm to install replacement belt.

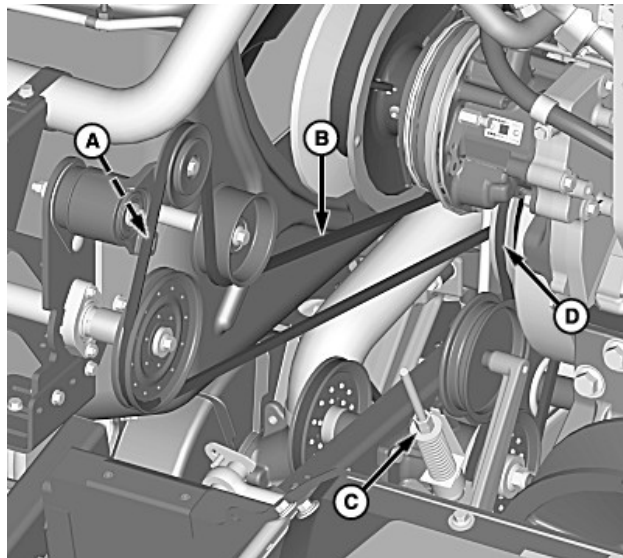


H124540—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt
C—Nut (2 used)
D—Vacuum Fan Drive Belt

13. Install the vacuum fan drive belt (D).
14. Tighten nuts (C) until washer is positioned between end of gauge and bottom of step.
15. Use breaker bar to relieve tension from the tensioner arm (A) to install rotary screen drive belt (B).
16. Close separator access cover and lower handrail.
17. Install previously removed shield (rear side) and air duct.
18. Close and latch the rotary screen door.

mh69740,1653322835755-19-23MAY22

Rotary Screen Drive Belt—Replacing (Final Tier 4/Stage V)

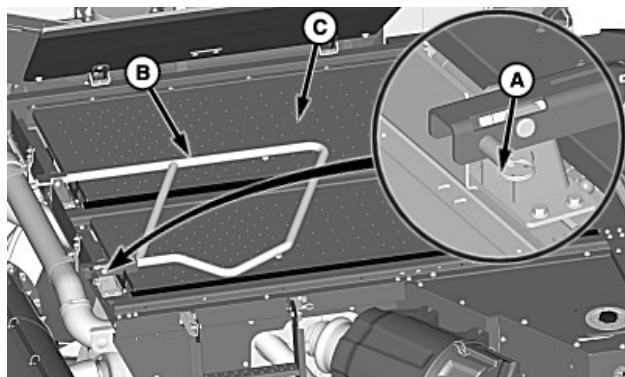


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.

1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

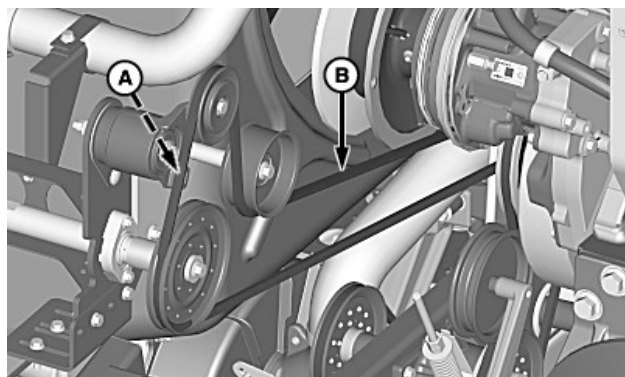


H124541—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

2. Use breaker bar to relieve belt tension from the tensioner arm (A).
3. Remove rotary screen drive belt (B).
4. Use breaker bar to relieve tension from the tensioner arm to install replacement rotary screen drive belt.
5. Close separator access cover and lower handrail.

OOU6075,00049DE-19-20JUN18

Vacuum Fan Drive Belt—Replacing (Final Tier 4/Stage V)

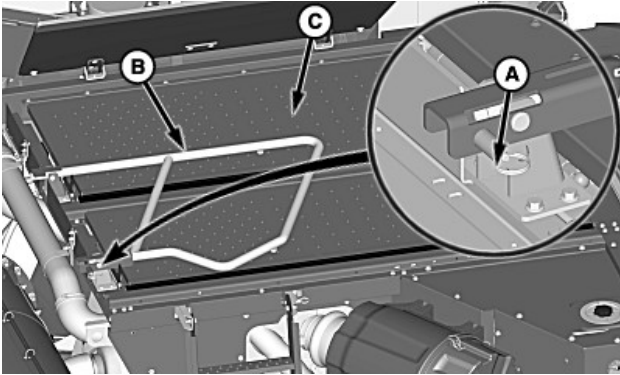


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.

1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

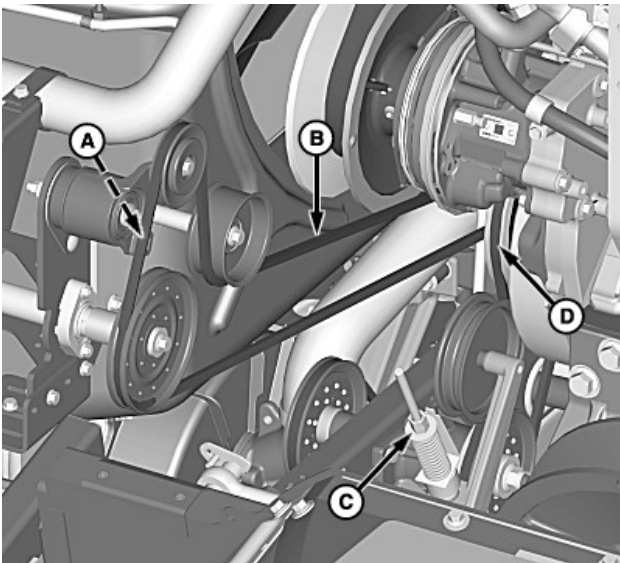

H124540—UN—19JUN18


A—Tensioner Arm
B—Rotary Screen Drive Belt
C—Nut (2 used)
D—Vacuum Fan Drive Belt

2. Use breaker bar to relieve belt tension from the tensioner arm (A).
3. Remove rotary screen drive belt (B).
4. Loosen nuts (C) and remove the vacuum fan drive belt (D).
5. Install the replacement vacuum fan drive belt and tighten nut until washer is positioned between end of gauge and bottom of step.

6. Use breaker bar to relieve tension from the tensioner arm to install rotary screen drive belt.
7. Close separator access cover and lower handrail.

OUC6075,00049DF-19-20JUN18

Vacuum Fan Driven Belt—Replacing (Final Tier 4/Stage V)

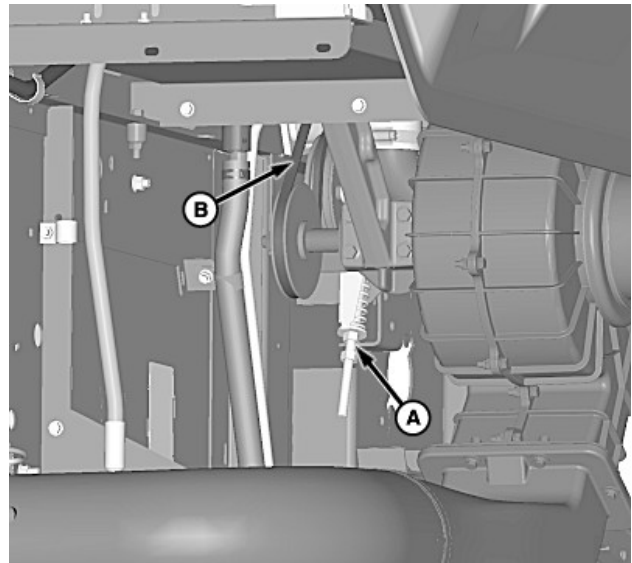

H95667—UN—11MAR10

A—Nuts
B—Vacuum Fan Driven Belt

CAUTION: Shut OFF engine, set park brake and remove key.


Loosen nuts (A) and remove vacuum fan driven belt (B) located below radiator.

Install replacement vacuum fan driven belt.

Tighten nuts until the washer is positioned between the end of gauge and bottom of step.

OUC6075,0004814-19-14NOV17


Variable Speed Fan Drive Belt—Replacing (Final Tier 4/Stage V)

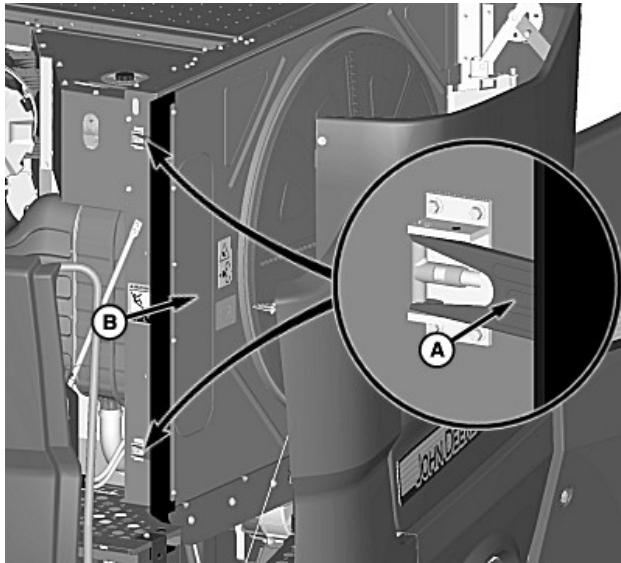

A—Latches
B—Rotary Screen Door


⚠ CAUTION: Shut OFF engine, set park brake and remove key.

1. Pull latches (A) and open rotary screen door (B).

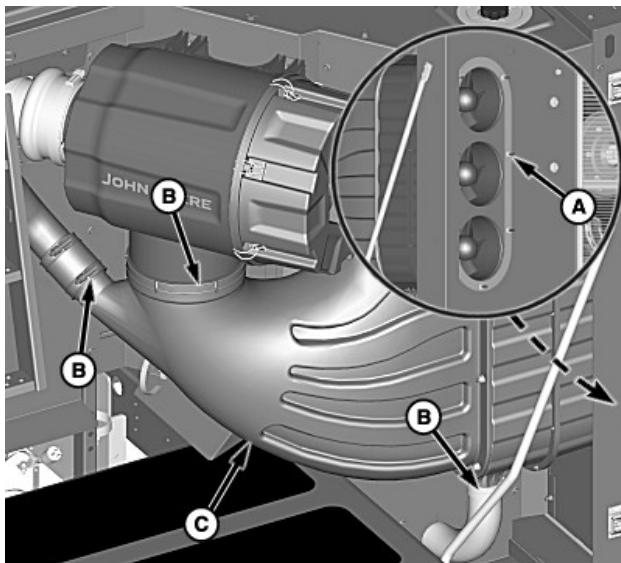


A—Nuts (7 Used)
B—Clamps
C—Air Duct

2. Remove nuts (A) and loosen hose clamps (B).
3. Lay air duct (C) out of the way.

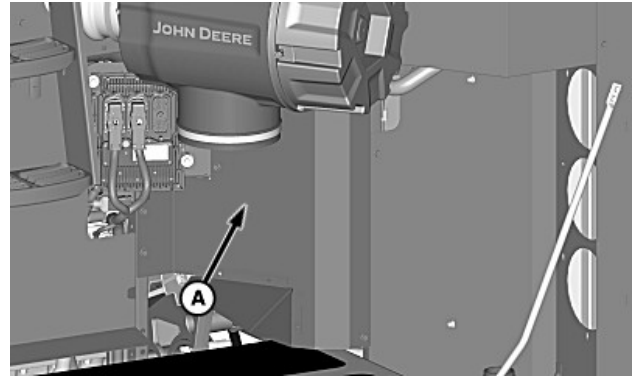


A—Shield

4. Remove shield (A).

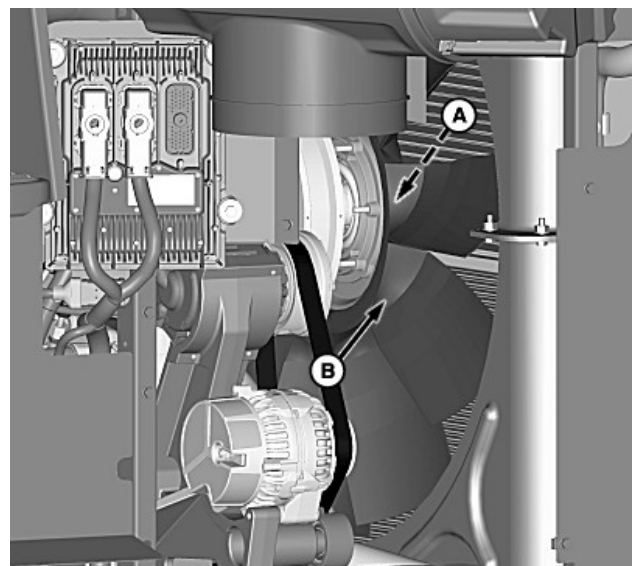

A—Cap Screws (6 Used)
B—Fan Assembly


5. Remove cap screws (A) from fan assembly (B).
6. Lay fan assembly out of the way.

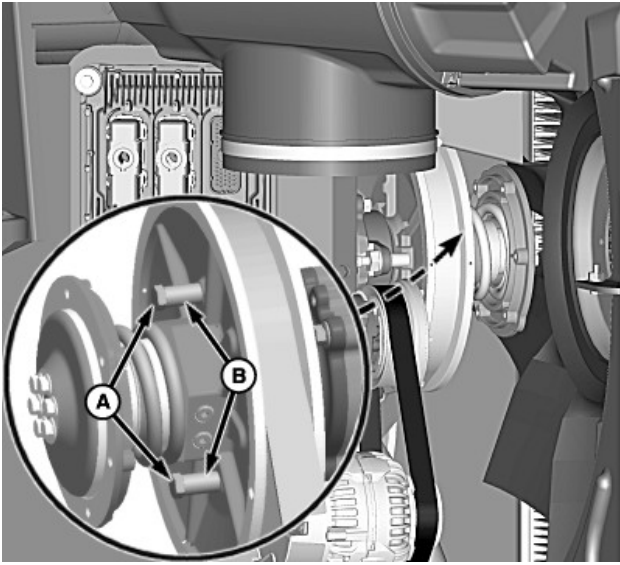

H95650—UN—10MAR10

A—Cap Screws
B—Spacers


7. Remove cap screws (A) and spacers (B).
8. Install previously removed cap screws until spring is compressed completely.

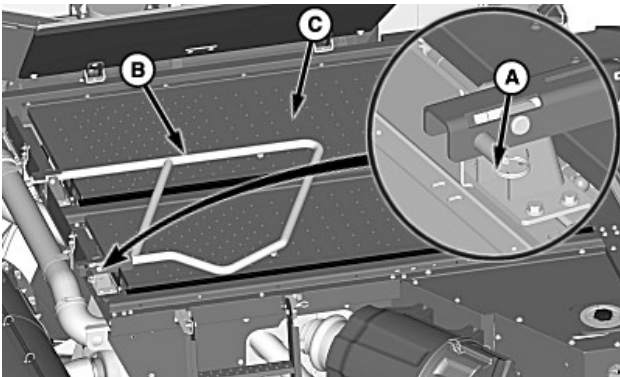

H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover


9. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

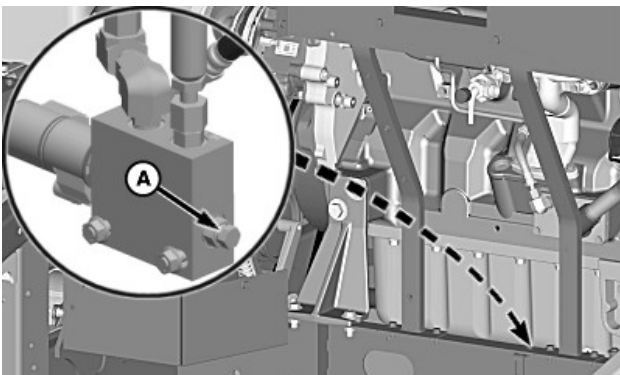

H95652—UN—10MAR10

A—Bleed Screw

10. Locate valve on the front side of the support rail and loosen bleed screw (A) to relieve pressure from sheaves.

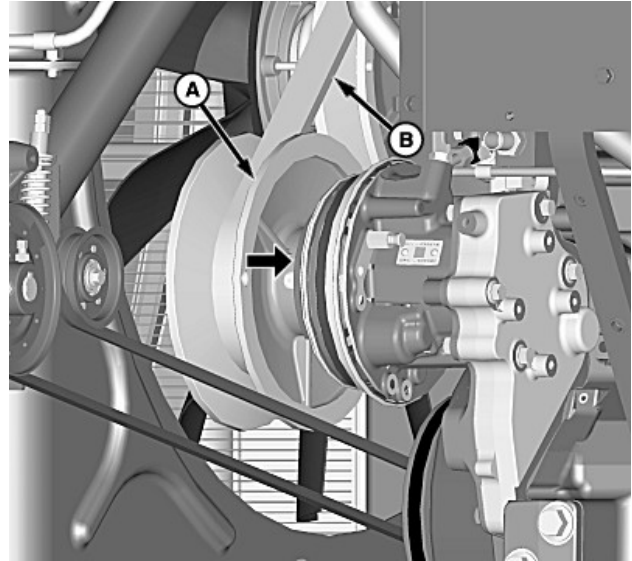

H95653—UN—31MAR10


A—Sheave
B—Variable Speed Belt

11. With the bleed screw loose, pull sheave (A) towards engine until completely open.
12. Remove variable speed belt (B).

NOTE: Before installing the replacement variable speed belt, visually inspect air compressor belt (if equipped) for wear. Replace air compressor belt (if equipped) if needed. See Air Compressor Belt (If Equipped)—Replacing (Final Tier 4/Stage V) for further information.

Variable speed belt MUST be installed over the driver sheave first and then over driven sheave.

13. Install the replacement variable speed belt.

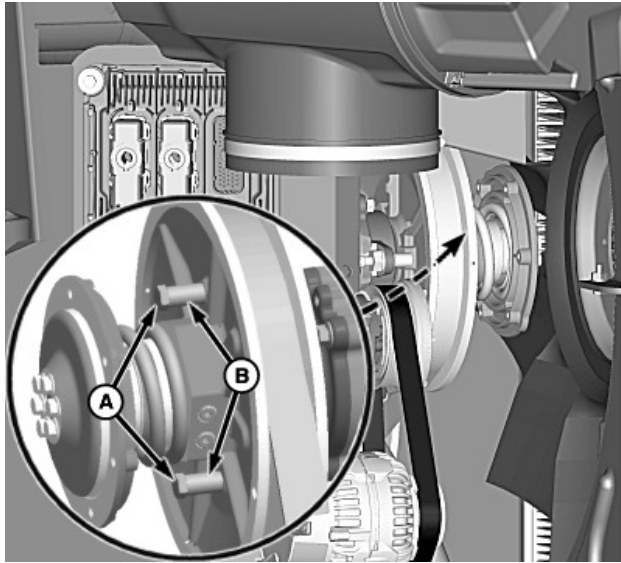


H95650—UN—10MAR10

A—Cap Screws
B—Spacers

IMPORTANT: Spring MUST be uncompressed to allow variable speed fan to adjust speed.

14. With the variable speed belt installed, remove cap screws (A) to uncompress spring and install previously removed spacers (B) as shown.

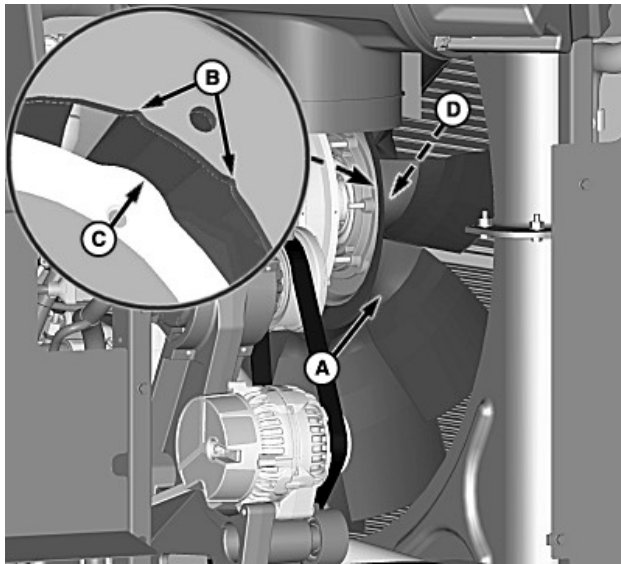


H95654—UN—10MAR10

A—Fan Assembly
B—Index Marks
C—Boss
D—Cap Screws (6 Used)

15. Install fan assembly (A) so index marks (B) are positioned on either side of boss (C).
16. Install previously removed cap screws (D). Tighten cap screws to specification.

Specification

Cap Screws—Torque. 40 N·m
(30 lb·ft)

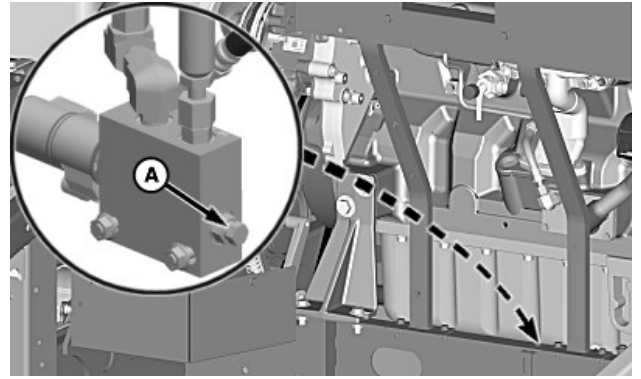

H95652—UN—10MAR10

A—Bleed Screw and Nut

17. Locate valve on the front side of the support rail and tighten bleed screw and nut (A) to specification.


Specification

Bleed Screw and Nut—Torque. 23 N·m
(17 lb·ft)

18. Close separator access cover and lower handrail.
19. Install previously removed shield (rear side) and air duct.
20. Close and latch the rotary screen door.

OUC6075.0004815-19-14NOV17

Air Compressor Belt (If Equipped)—Replacing (Final Tier 4/Stage V)

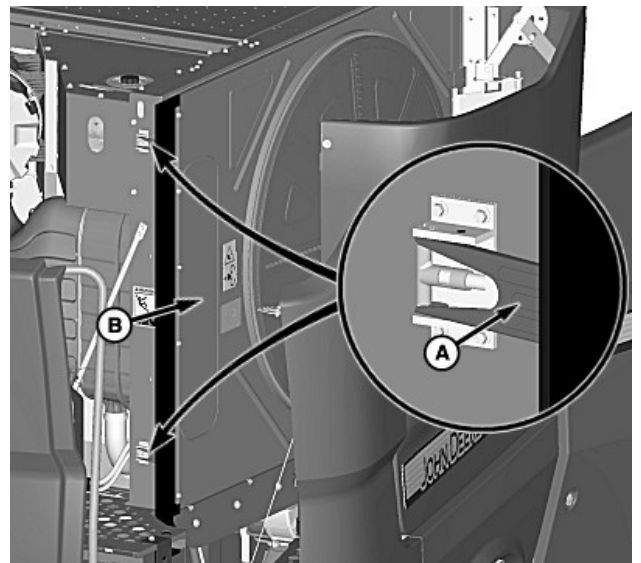


H106847—UN—08FEB13

A—Latches
B—Rotary Screen Door

CAUTION: Shut OFF engine, set park brake and remove key.


1. Pull latches (A) and open rotary screen door (B).

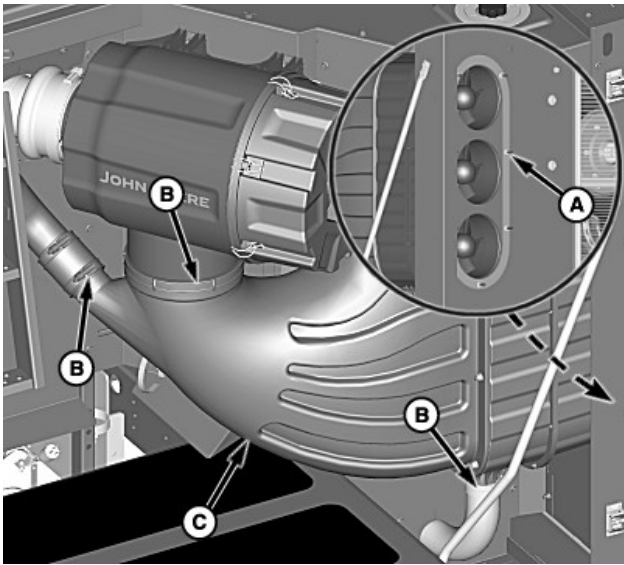

H110003—UN—18MAR14

A—Nuts (7 Used)
B—Clamps
C—Air Duct


2. Remove nuts (A) and loosen hose clamps (B).
3. Lay air duct (C) out of the way.

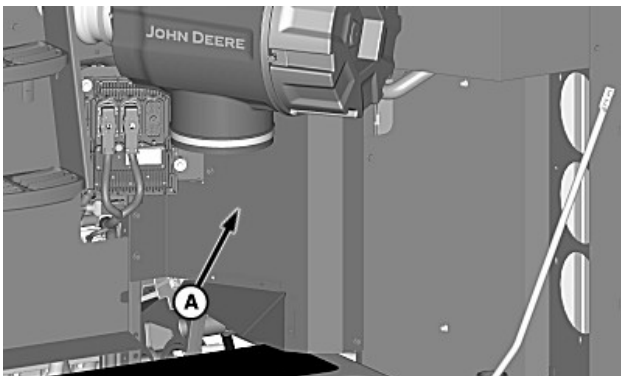

H95648—UN—10MAR10

A—Shield


4. Remove shield (A).

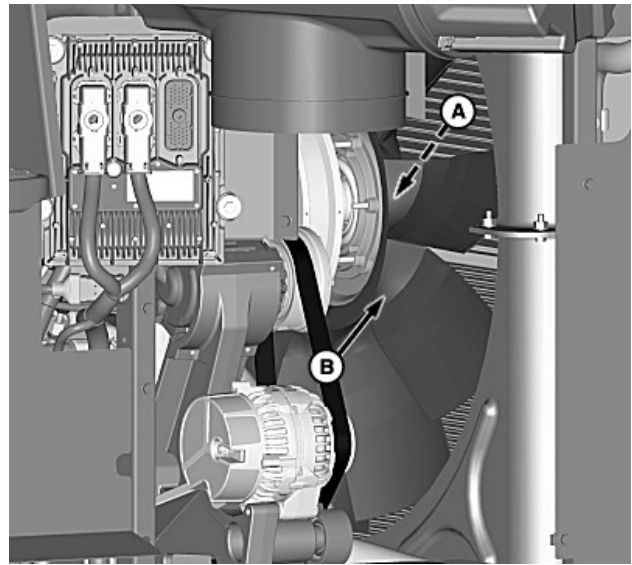

H95649—UN—10MAR10

A—Cap Screws (6 Used)
B—Fan Assembly


5. Remove cap screws (A) from fan assembly (B).
6. Lay fan assembly out of the way.

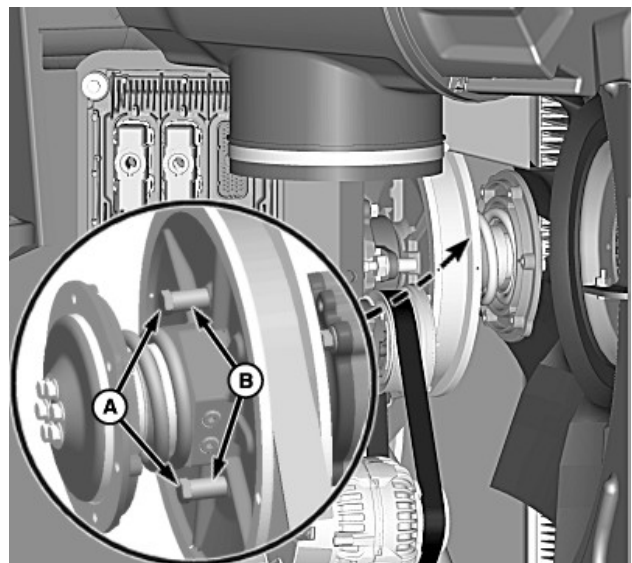

H95650—UN—10MAR10

A—Cap Screws
B—Spacers


7. Remove cap screws (A) and spacers (B).
8. Install previously removed cap screws until spring is compressed completely.

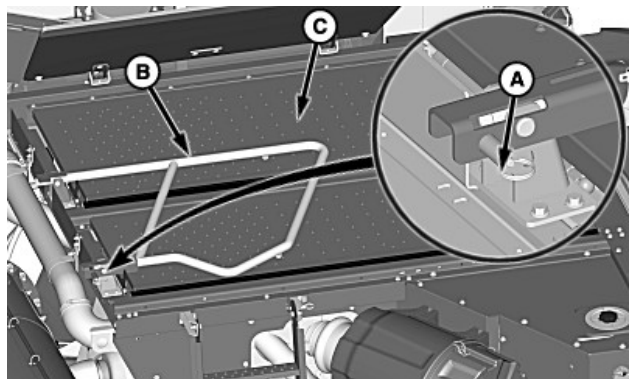

H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover


9. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

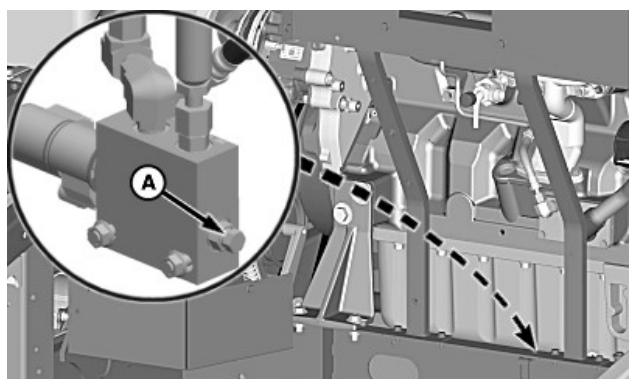

H95652—UN—10MAR10

A—Bleed Screw


10. Locate valve on the front side of the support rail and loosen bleed screw (A) to relieve pressure from sheaves.

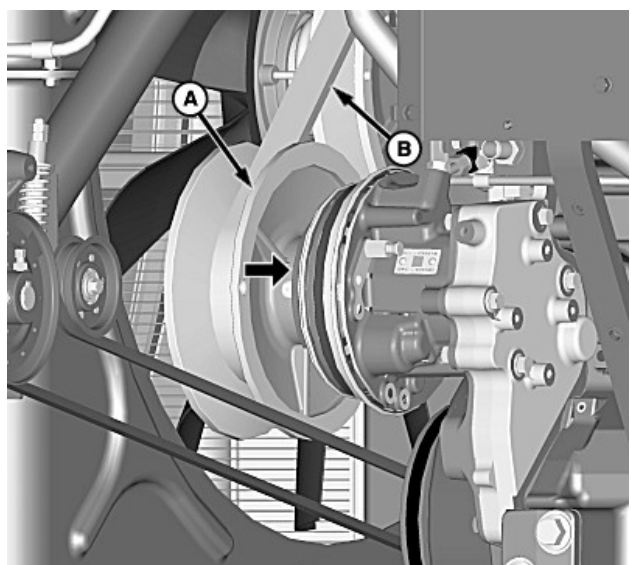

H95653—UN—31MAR10

A—Sheave
B—Variable Speed Belt

11. With the bleed screw loose, pull sheave (A) towards engine until completely open.
12. Remove variable speed belt (B).

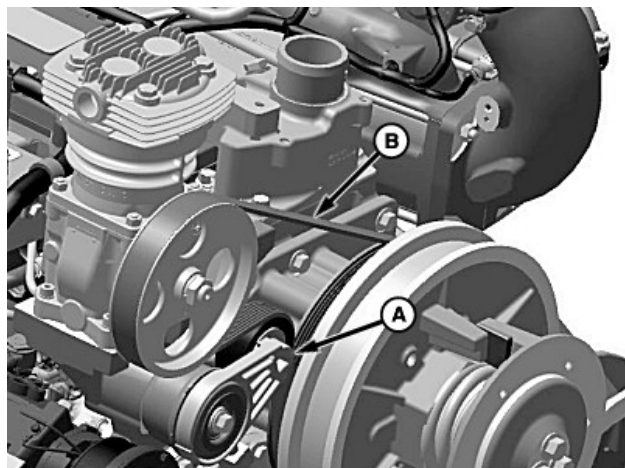


H113087—UN—02MAR15

A—Tensioner Arm
B—Air Compressor Belt

13. Use breaker bar to relieve belt tension from the tensioner arm (A).
14. Remove air compressor belt (B).
15. Install the replacement air compressor belt.

NOTE: Belt **MUST** be installed over the driver sheave first and then over driven sheave.

16. Install variable speed belt.

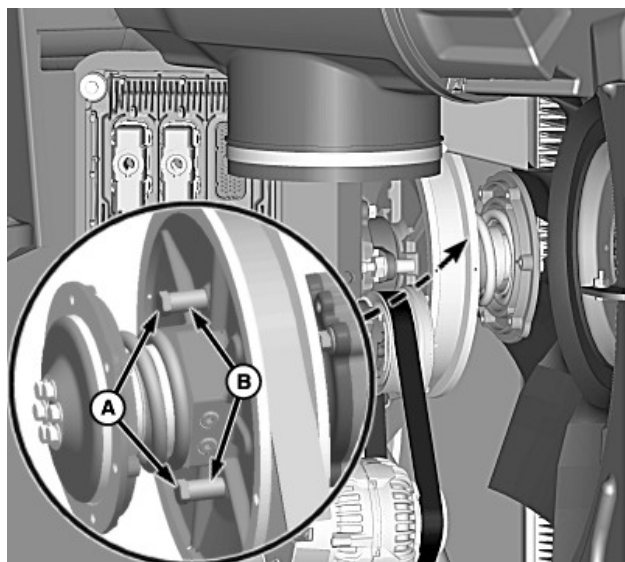


H95650—UN—10MAR10

A—Cap Screws
B—Spacers

IMPORTANT: Spring **MUST** be uncompressed to allow variable speed fan to adjust speed.

17. With the variable speed belt installed, remove cap

screws (A) to uncompress spring and install previously removed spacers (B) as shown.

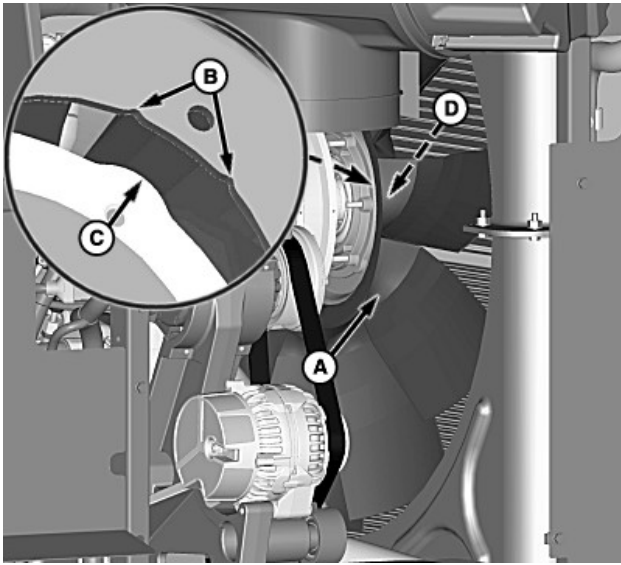


H95654—UN—10MAR10

- A—Fan Assembly
- B—Index Marks
- C—Boss
- D—Cap Screws (6 Used)

18. Install fan assembly (A) so index marks (B) are positioned on either side of boss (C).
19. Install previously removed cap screws (D). Tighten cap screws to specification.

Specification

Cap Screws—Torque. 40 N·m
(30 lb·ft)

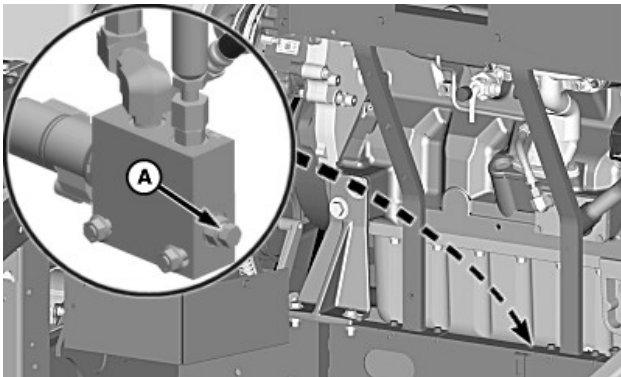

H95652—UN—10MAR10

- A—Bleed Screw and Nut

20. Locate valve on the front side of the support rail and tighten bleed screw and nut (A) to specification.

Specification


Bleed Screw and Nut—Torque. 23 N·m
(17 lb·ft)

21. Close separator access cover and lower handrail.
22. Install previously removed shield (rear side) and air duct.

23. Close and latch the rotary screen door.

OOU6075,0004816-19-14NOV17

Rotary Screen Brush—Adjustment

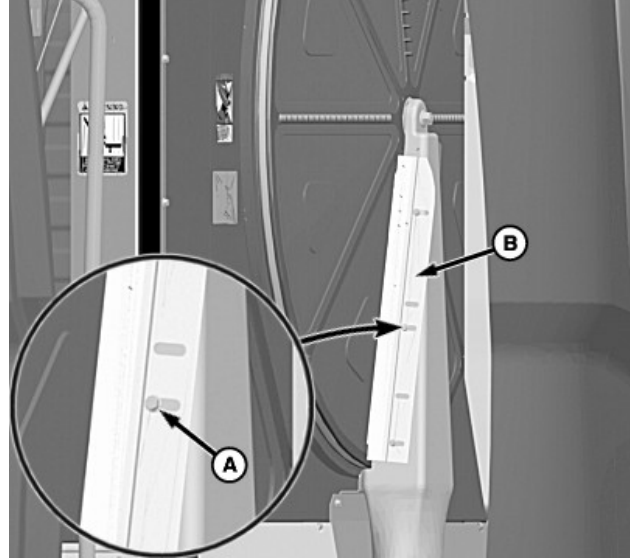


H95350—UN—15FEB10

- A—Cap Screws
- B—Brush

Loosen cap screws (A) and adjust brush (B) as needed to remove crop debris.

OOU6075,00005A0-19-16FEB10

Engine Debris Management Belt—Replacing (Final Tier 4/Stage V)

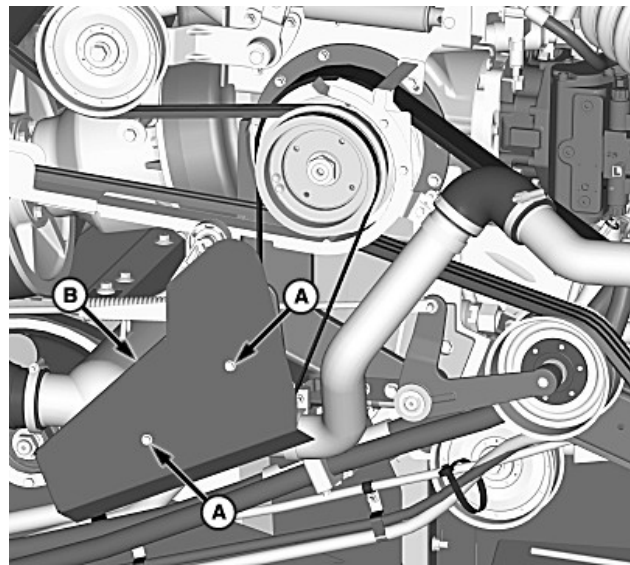


H121347—UN—25APR17

- A—Cap Screws
- B—Shield

⚠ CAUTION: Shut OFF engine, set park brake and remove key.

Remove cap screws (A) and shield (B).

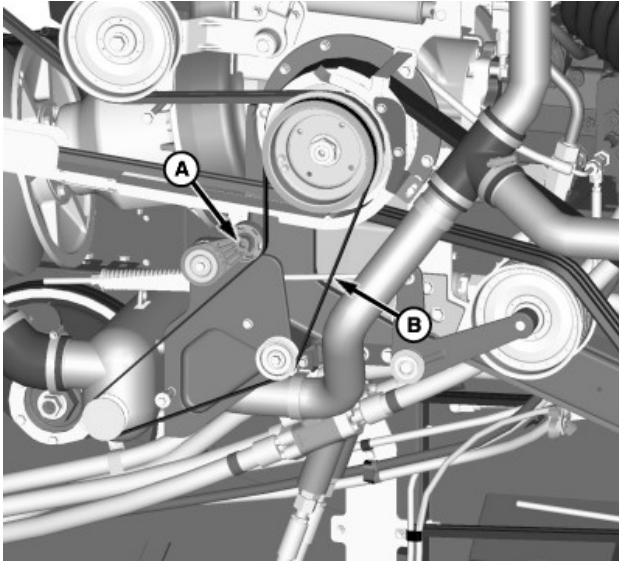

H108290—UN—18JUN13

A—Tensioner Arm

B—Engine Debris Management Belt

Use breaker bar to relieve tension from the tensioner arm (A) to remove the engine debris management belt (B).

Remove belt and install replacement belt in reverse order.


Use breaker bar to relieve tension from the tensioner arm to install belt.

Install shield and retain with cap screws.

OUO6075,0004817-19-14NOV17

Maintenance—As Required (13.5 L Engine Belts)


Engine Belt—Routing (Tier 2/Stage II)

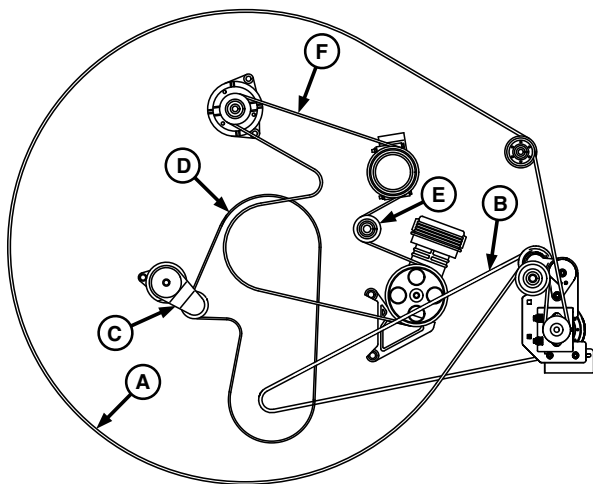

- A—Belt, Rotary Screen (Driven)
- B—Belt, Rotary Screen (Drive)
- C—Tensioner, Fan
- D—Belt, Fan
- E—Tensioner, Accessory
- F—Belt, Accessory and Air Compressor (If Equipped)

H124554—UN—21JUN18

OUC6075,00049F0-19-20JUN18

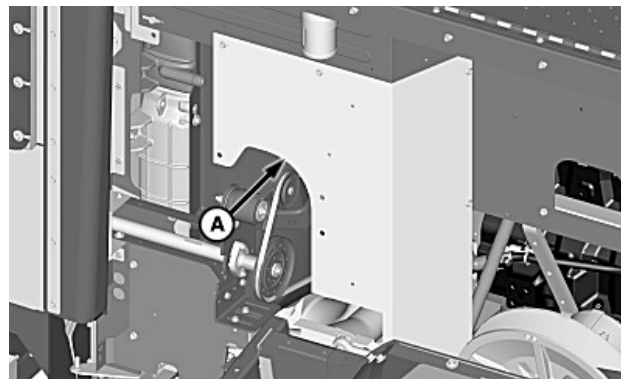


H124544—UN—19JUN18

Front Side Of Engine

A—Shield

2. Remove shield (A).

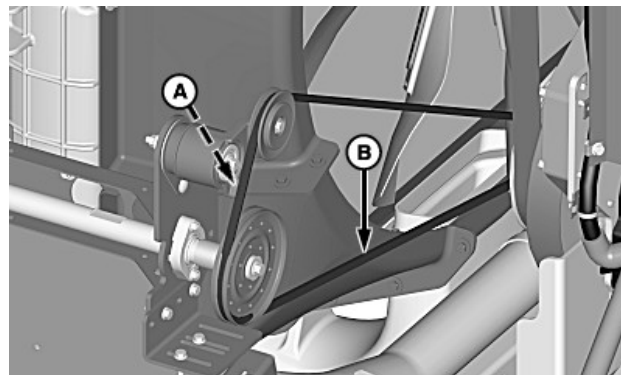


H124545—UN—19JUN18

- A—Tensioner Arm
- B—Rotary Screen Drive Belt

3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).

Engine Accessory/Air Compressor (If Equipped) Belt—Replacing (Tier 2/Stage II)

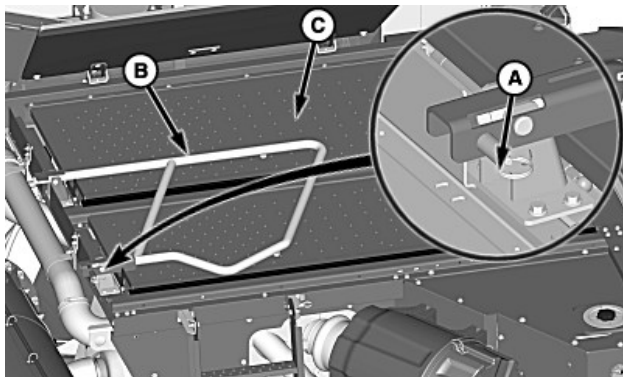


H118329—UN—04MAY16

- A—Lockout Pin
- B—Handrail
- C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.


1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

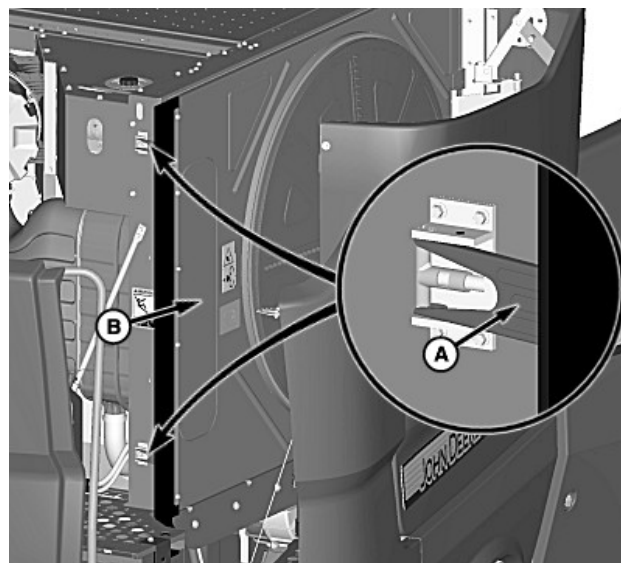

H106847—UN—08FEB13

- A—Latches
- B—Rotary Screen Door


5. Pull latches (A) and open rotary screen door (B).

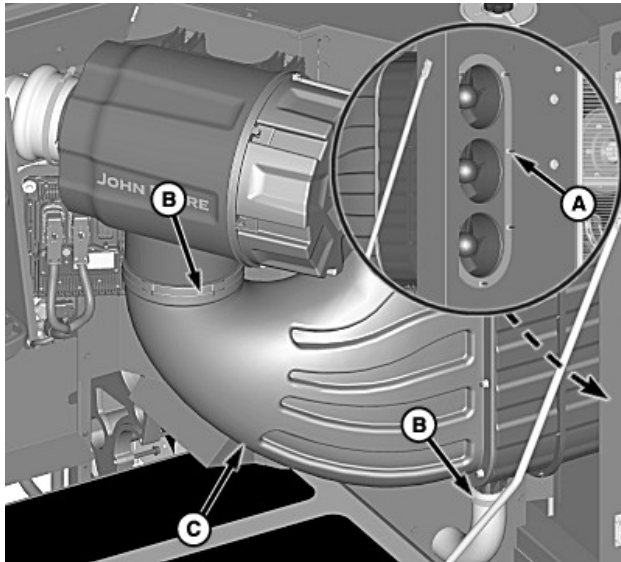

H95647—UN—10MAR10

- A**—Nut (7 used)
B—Clamps
C—Air Duct


6. Remove nuts (A) and loosen hose clamps (B).
7. Lay air duct (C) out of the way.

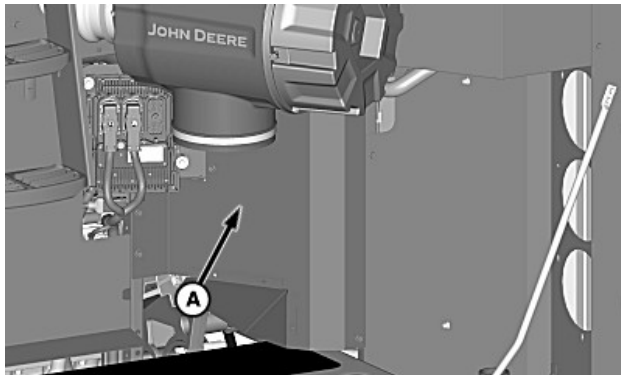

H95648—UN—10MAR10

- A**—Shield

8. Remove shield (A).

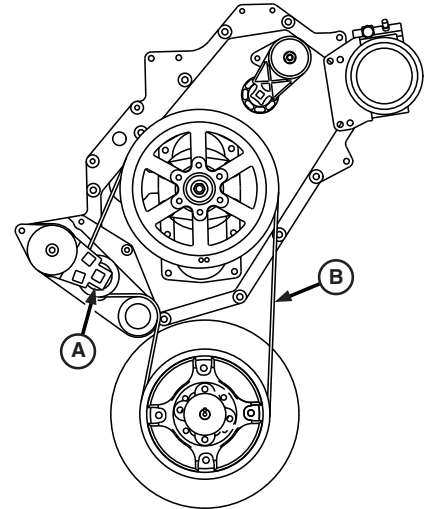


H71844—UN—25APR02

Fan Belt Routing


- A**—Tensioner Arm
B—Fan Belt

9. Use breaker bar to relieve belt tension from the tensioner arm (A).
10. Remove belt (B) and work belt over fan blades to remove.

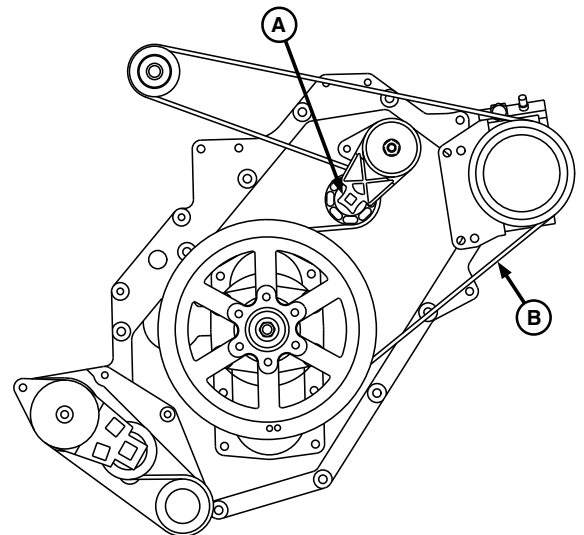

H82475—UN—17FEB05

Accessory Belt Routing Without Air Compressor

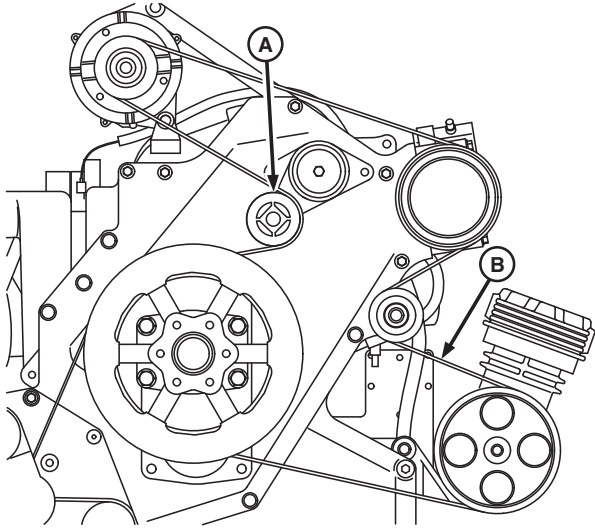


H113080—UN—02MAR15

Accessory Belt Routing With Air Compressor

A—Tensioner Arm
B—Accessory Belt

11. Use breaker bar to relieve belt tension from the tensioner arm (A).
12. Remove belt (B) and work belt over fan blades to remove.
13. Install replacement belt over the fan blades.
14. Use breaker bar to relieve tension from the tensioner arm to install replacement belt.

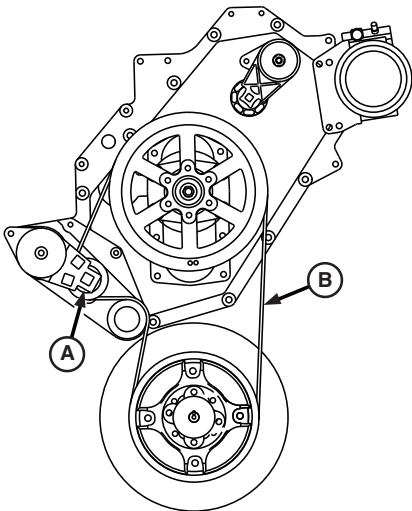


H71844—UN—25APR02

Fan Belt Routing

A—Tensioner Arm
B—Fan Belt

15. Use breaker bar to relieve belt tension from the tensioner arm (A).

16. Install previously removed belt (B) and work belt over fan.

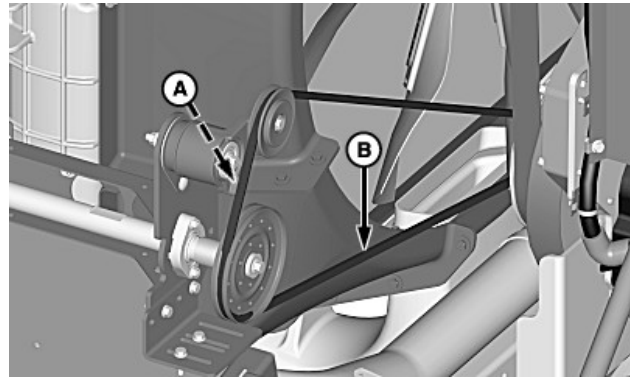


H124545—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

17. Use breaker bar to relieve tension from the tensioner arm (A) to install rotary screen drive belt (B).
18. Install previously removed shield (front side).
19. Close separator access cover and lower handrail.
20. Install previously removed shield (rear side) and air duct.
21. Close and latch the rotary screen door.

OUC6075,00049E8-19-20JUN18

Fan Drive Belt—Replacing (Tier 2/Stage II)

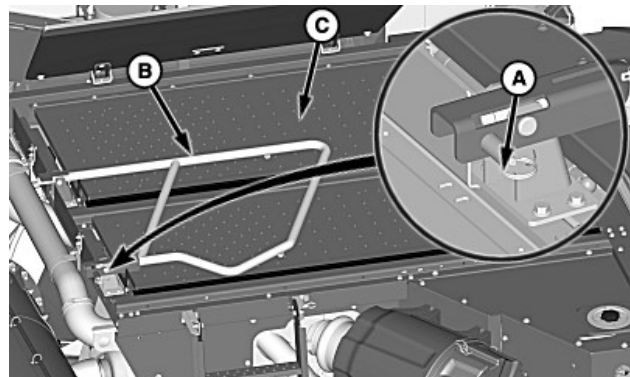


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

⚠ CAUTION: Shut OFF engine, set park brake and remove key.

1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

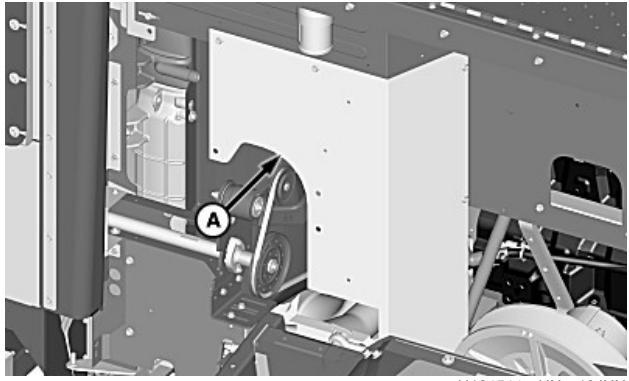


H124544—UN—19JUN18

Front Side Of Engine

A—Shield

2. Remove shield (A).

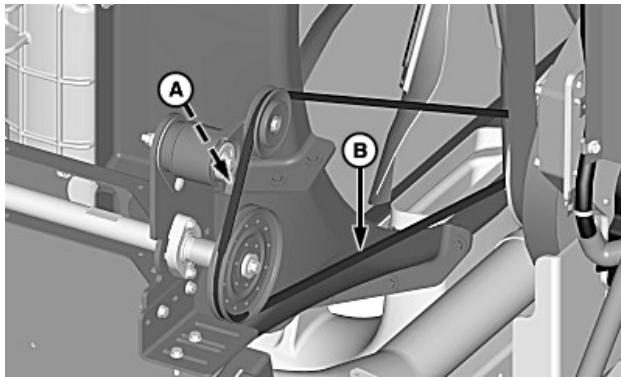


H124545—UN—19JUN18

A—Tensioner Arm

B—Rotary Screen Drive Belt

3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).

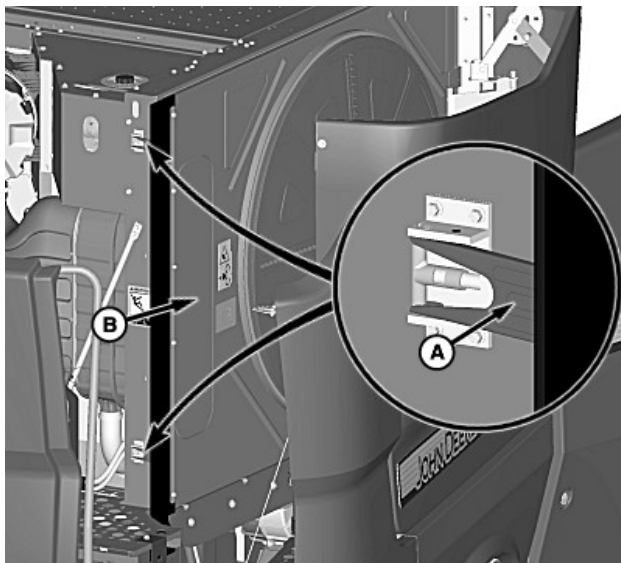


H106847—UN—08FEB13

A—Latches

B—Rotary Screen Door

5. Pull latches (A) and open rotary screen door (B).

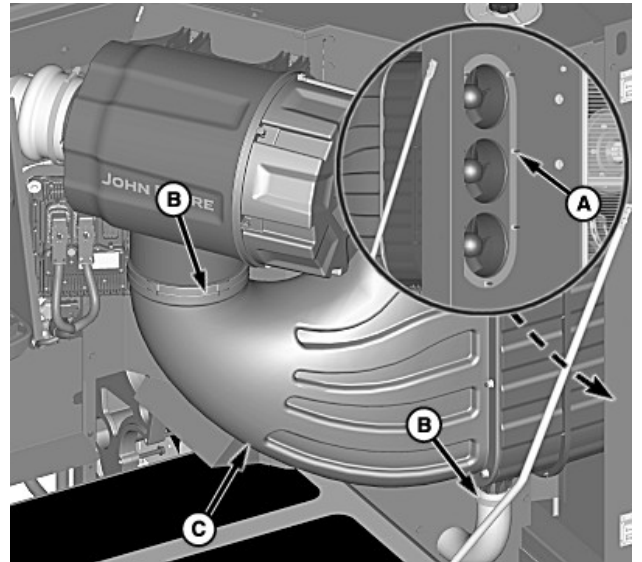


H95647—UN—10MAR10

A—Nut (7 used)

B—Clamps

C—Air Duct


6. Remove nuts (A) and loosen hose clamps (B).
7. Lay air duct (C) out of the way.

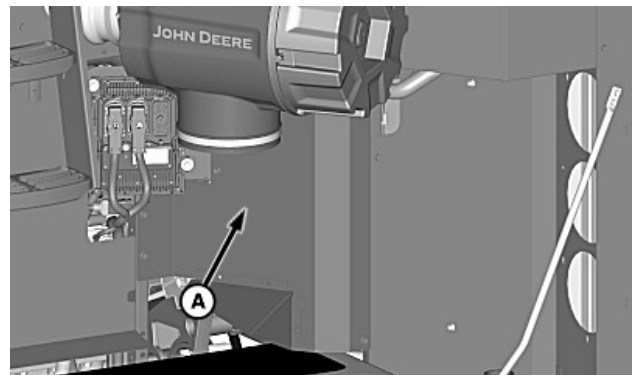

H95648—UN—10MAR10

A—Shield

8. Remove shield (A).

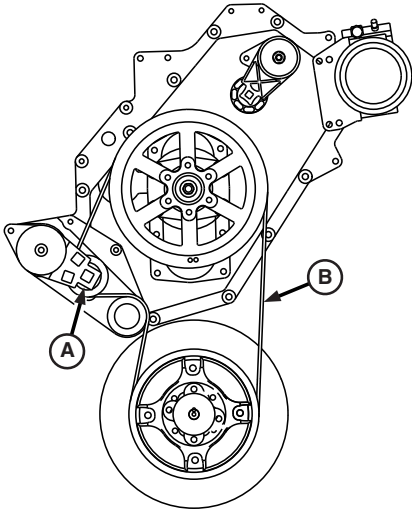


Fan Belt Routing

H71844—UN—25APR02

A—Tensioner Arm
B—Fan Belt

9. Use breaker bar to relieve belt tension from the tensioner arm (A).
10. Remove belt (B) and work belt over fan blades to remove.
11. Install replacement belt over the fan blades.
12. Use breaker bar to relieve tension from the tensioner arm to install replacement belt.

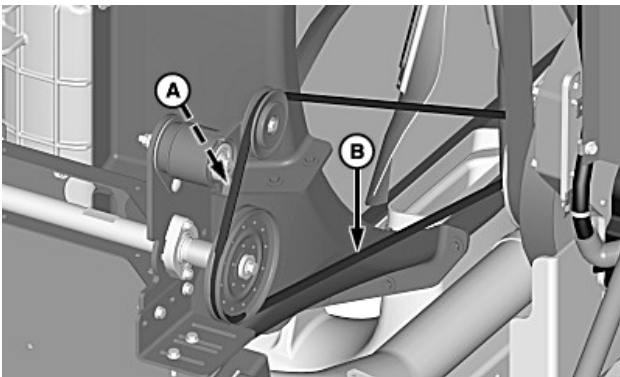


H124545—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

13. Use breaker bar to relieve tension from the tensioner arm (A) to install rotary screen drive belt (B).
14. Install previously removed shield (front side).
15. Close separator access cover and lower handrail.
16. Install previously removed shield (rear side) and air duct.
17. Close and latch the rotary screen door.

OUC6075,00049E9-19-20JUN18

Rotary Screen Belt—Routing

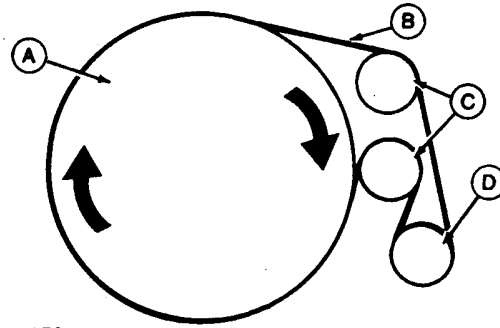


H39170

H39170—UN—11OCT88

A—Rotary Screen
B—Belt
C—Idlers
D—Drive Sheave

OUC6075,00006CE-19-05MAR10

Rotary Screen Belt—Replacing

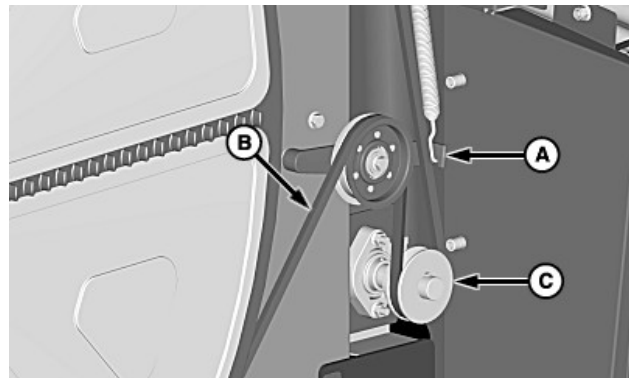


H126280—UN—08MAY19

A—Tensioner Lever
B—Rotary Screen Belt
C—Sheave

CAUTION: Shut OFF engine, set park brake, and remove key.

Prevent injury. Belt is under tension. Slowly release the tensioner lever when belt is removed.


1. Push down on tensioner lever (A) and relieve tension from the rotary screen belt (B).
2. Remove rotary screen belt from sheave (C) and slowly release the lever and spring tension.

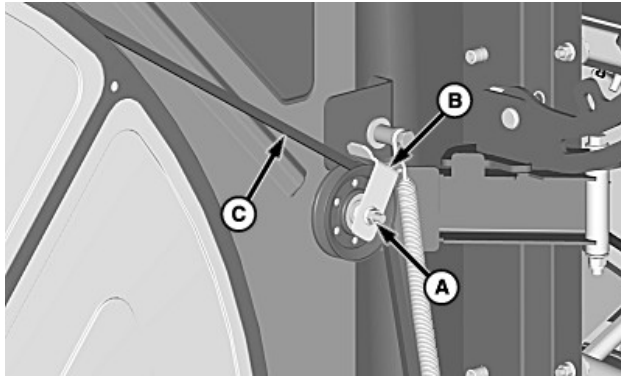

H126281—UN—08MAY19

A—Nut
B—Belt Trap
C—Rotary Screen Belt

3. Remove nut (A) and belt trap (B).
4. Remove rotary screen belt (C).

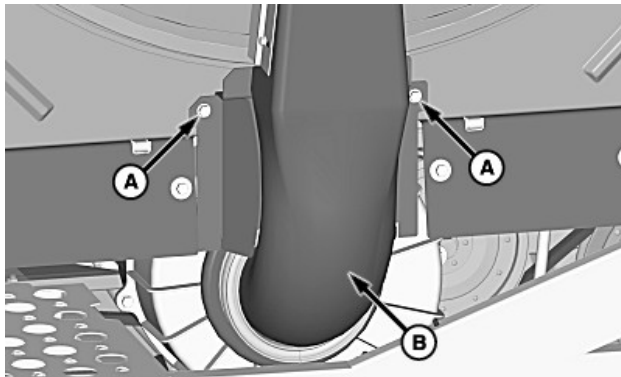

H126282—UN—08MAY19


A—Cap Screw and Nut (2 used)
B—Vacuum Duct

NOTE: The rotary screen door must be opened to access the nuts from the inside.

5. Remove cap screws and nuts (A).
6. Pull vacuum duct (B) away from the rotary screen door and remove the rotary screen belt.
7. Pull vacuum duct away from the rotary screen door and install the replacement rotary screen belt.
8. Install cap screws and nuts.

IMPORTANT: To prevent damage, verify that the rotary screen clears the notches in the vacuum duct rake bar. Adjust vacuum duct as needed.

9. Close rotary screen door.

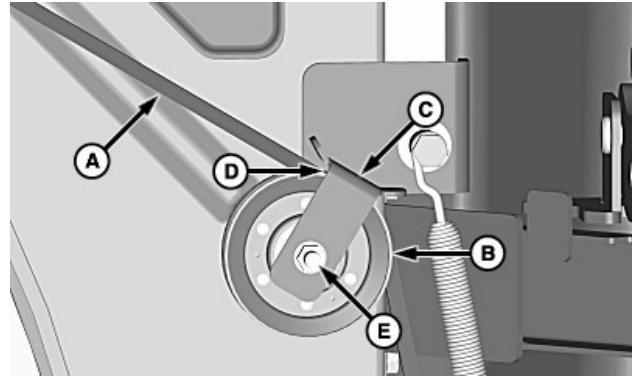

H126283—UN—08MAY19

A—Rotary Screen Belt
B—Pulley
C—Belt Trap
D—Gap
E—Nut

10. Install rotary screen belt (A) around pulley (B) as shown.


IMPORTANT: To prevent damage, verify that the belt trap is parallel to the rotary screen belt.

11. Install belt trap (C) and adjust to specified gap (D).

Specification

Belt Trap—Gap. 4 mm
(5/32 in)

12. Install and tighten the nut (E), making sure that the belt trap does not move.

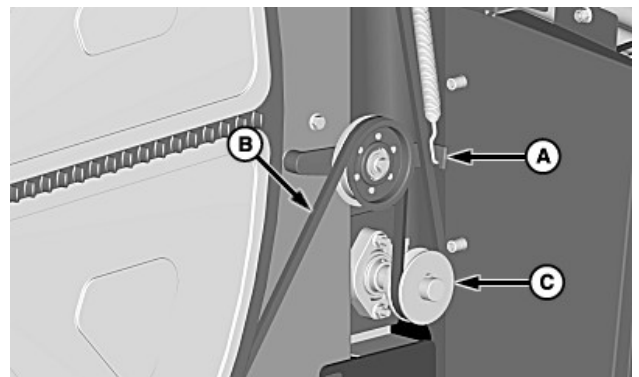


H126280—UN—08MAY19

A—Tensioner Lever
B—Rotary Screen Belt
C—Sheave

CAUTION: Prevent injury. Belt is under tension. Slowly release the tensioner lever when the belt is installed.

13. Push down on tensioner lever (A) and relieve tension from the rotary screen belt (B).
14. Install rotary screen belt around sheave (C) as shown and slowly release the lever and spring tension.

Rotary Screen Drive Belt—Replacing (Tier 2/Stage II)

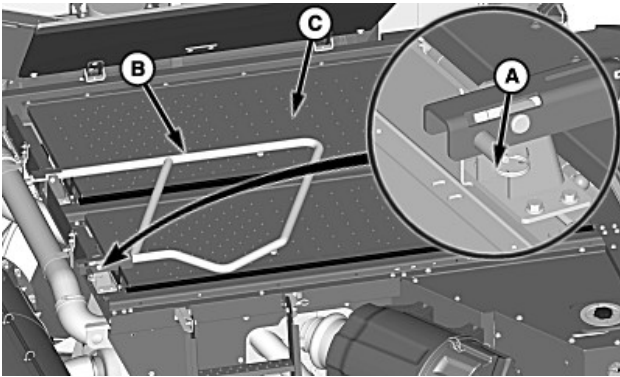


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.

1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

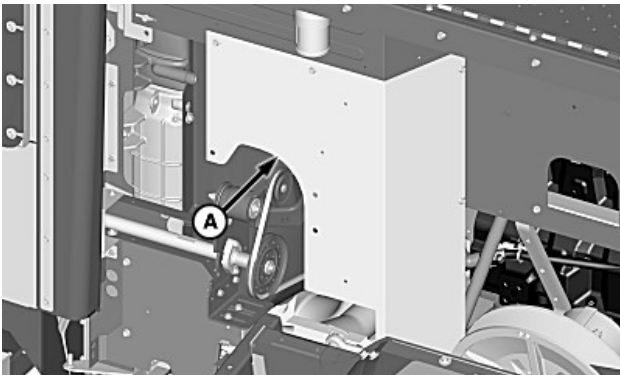


H124544—UN—19JUN18

Front Side Of Engine

A—Shield

2. Remove shield (A).

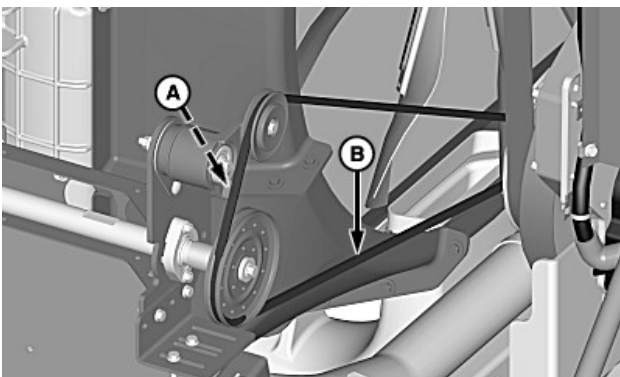


H124545—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).
5. Use breaker bar to relieve tension from the tensioner arm to install replacement rotary screen drive belt.
6. Install previously removed shield, close separator access cover, and lower handrail.

OOU6075,00049EA-19-20JUN18

Engine Belt—Routing (Final Tier 4/Stage V)

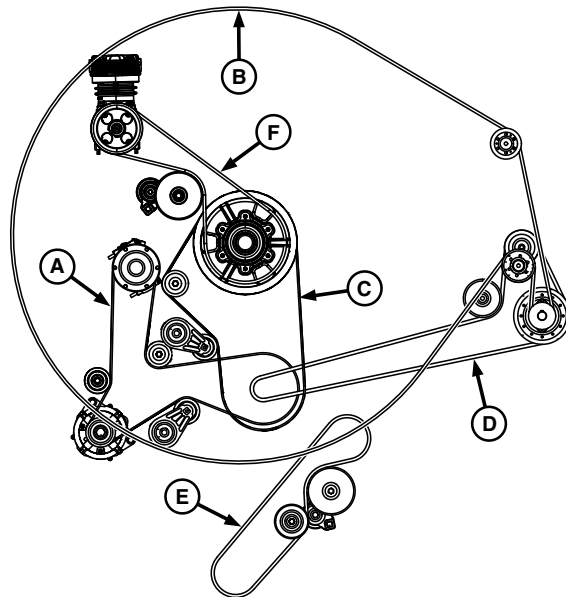


H135673—UN—10JUN22

A—Air Conditioner Compressor, Alternator Belt
B—Rotary Screen Drive Belt, Screen Side
C—Fan Drive Belt
D—Rotary Screen Drive Belt, Engine Side
E—Vacuum Fan Drive Belt
F—Air Compressor Belt (If Equipped)

mh69740,1653050856636-19-20MAY22

Air Conditioner Compressor/Alternator Belt—Replacing (Final Tier 4/Stage V)

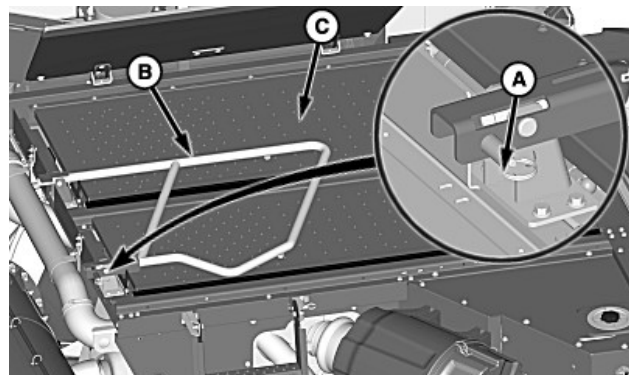


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.

1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

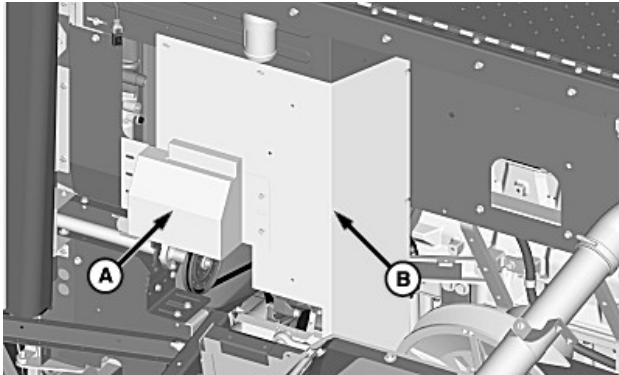


H124542—UN—19JUN18

Front Side of Engine

A—Shield
B—Shield


2. Remove shield (A) and shield (B).

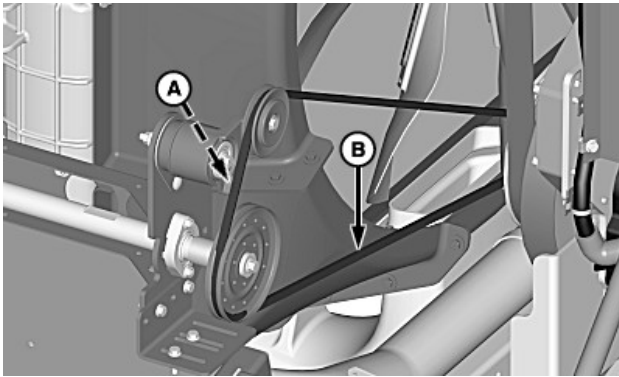

H124545—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt


3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).

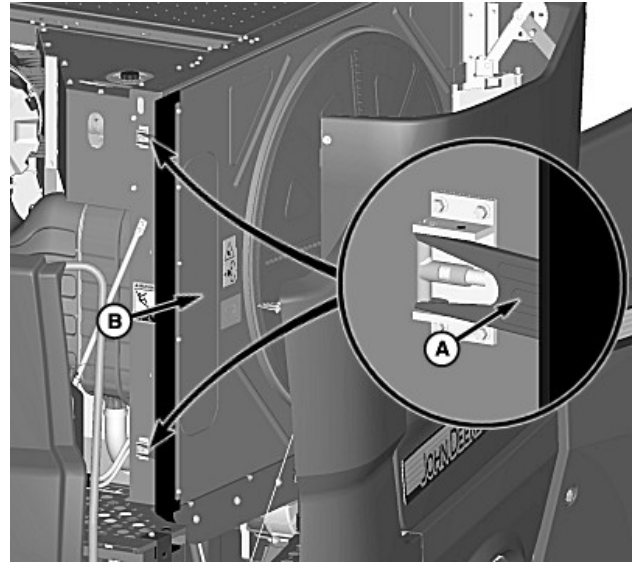

H106847—UN—08FEB13

A—Latches
B—Rotary Screen Door


5. Pull latches (A) and open rotary screen door (B).

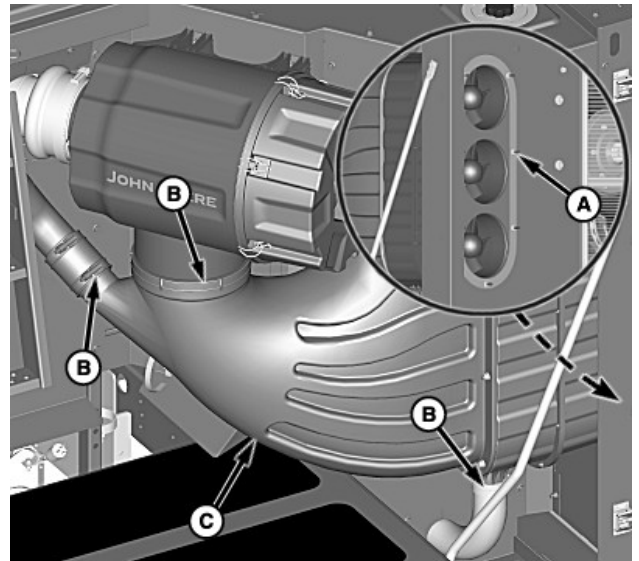

H110003—UN—18MAR14

A—Nut (7 used)
B—Clamps
C—Air Duct


6. Remove nuts (A) and loosen hose clamps (B).
7. Lay air duct (C) out of the way.

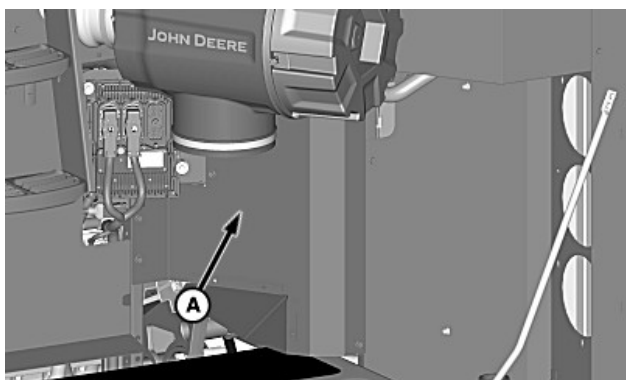

H95648—UN—10MAR10

A—Shield

8. Remove shield (A).

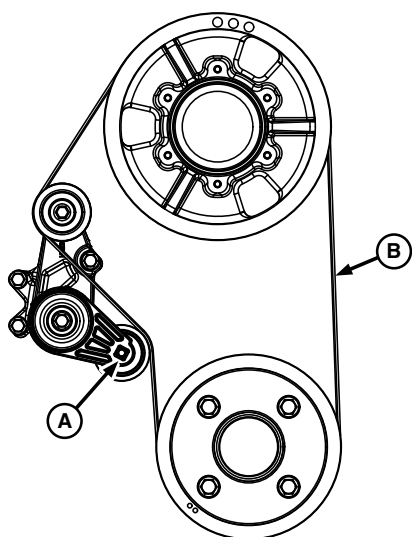


H99551—UN—06JAN11

Fan Belt Routing

A—Tensioner Arm
B—Fan Belt


9. Use breaker bar to relieve belt tension from the tensioner arm (A).
10. Remove belt (B) and work belt over fan blades to remove.

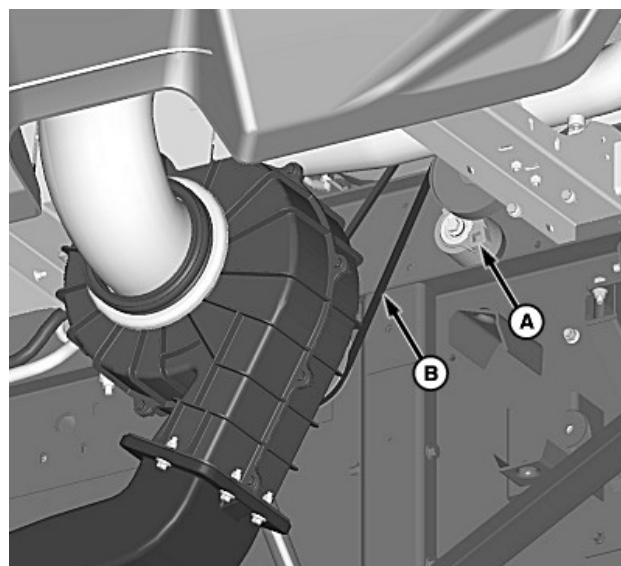

H99550—UN—06JAN11

A—Tensioner Arm
B—Vacuum Fan Drive Belt


11. Use breaker bar to relieve belt tension from the tensioner arm (A).
12. Remove the vacuum fan drive belt (B) located below radiator.

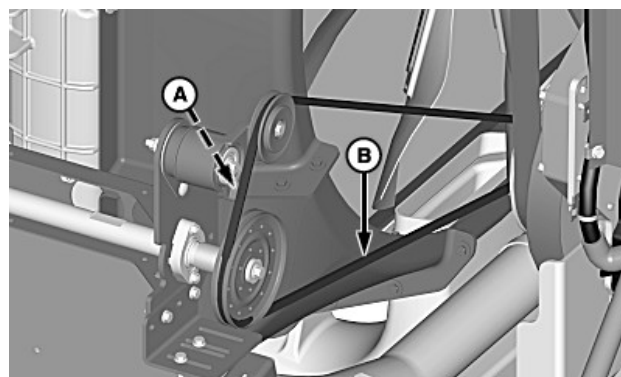

H124545—UN—19JUN18

A—Tensioner Arm
B—Belt


13. Use breaker bar to relieve belt tension from the tensioner arm (A).
14. Remove belt (B) and work belt over fan blades to remove.
15. Install replacement belt over the fan blades.
16. Use breaker bar to relieve tension from the tensioner arm to install replacement belt.

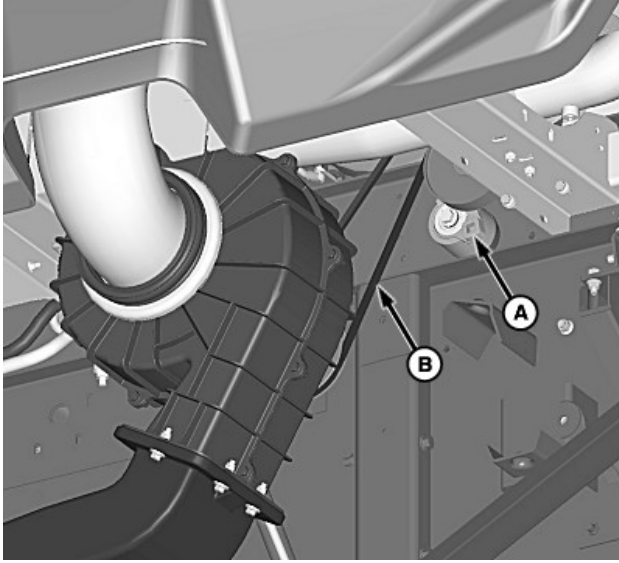

H99550—UN—06JAN11

A—Tensioner Arm
B—Vacuum Fan Drive Belt

17. Install the vacuum fan drive belt (B).
18. Use breaker bar to relieve tension from the tensioner arm (A) to install belt.

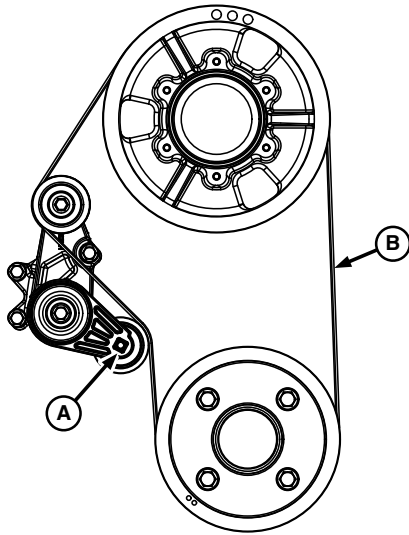


H99551—UN—06JAN11

Fan Belt Routing

A—Tensioner Arm
B—Fan Belt

19. Install belt (B) and work belt over fan blades.
20. Use breaker bar to relieve tension from the tensioner arm (A) to install belt.

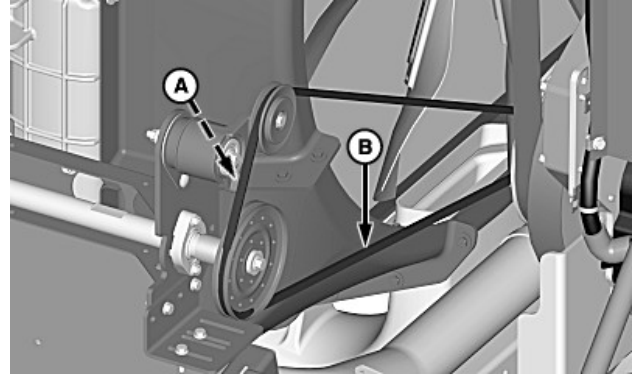


H124545—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

21. Use breaker bar to relieve tension from the tensioner arm (A) to install rotary screen drive belt (B).
22. Install previously removed shields (front side).
23. Close separator access cover and lower handrail.
24. Install previously removed shield (rear side) and air duct.
25. Close and latch the rotary screen door.

mh69740,1653331314630-19-14JUN22

Rotary Screen Drive Belt—Replacing (Final Tier 4/Stage V)

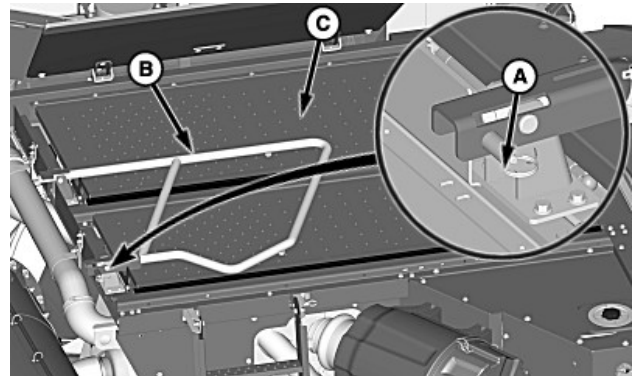


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.

1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

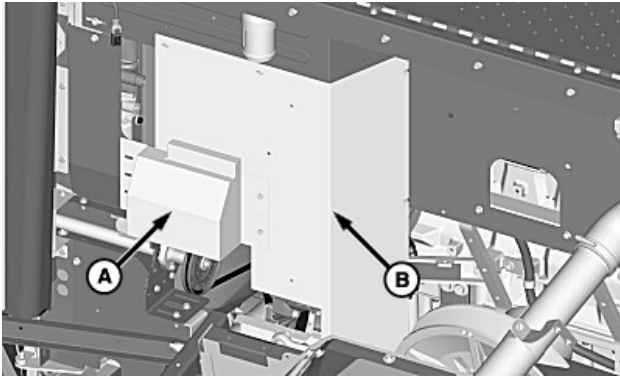


H124542—UN—19JUN18

Front Side Of Engine

A—Shield
B—Shield

2. Remove shield (A) and shield (B).

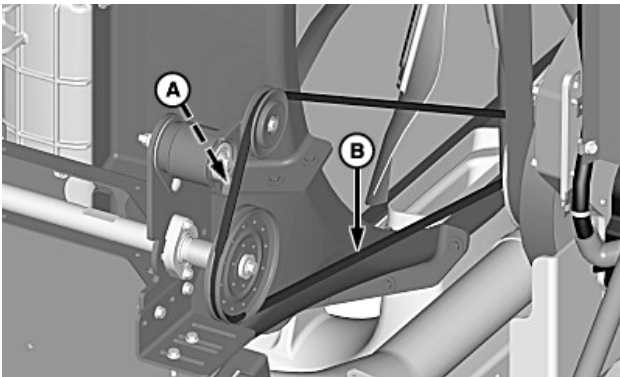


H124545—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).
5. Use breaker bar to relieve tension from the tensioner arm to install replacement rotary screen drive belt.
6. Install previously removed shields, close separator access cover, and lower handrail.

mh69740,1653331520796-19-23MAY22

Vacuum Fan Drive Belt—Replacing (Final Tier 4/Stage V)

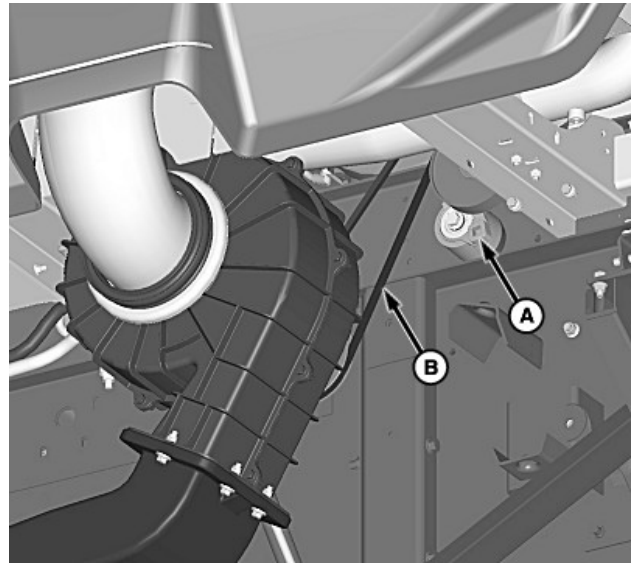

H99550—UN—06JAN11

A—Tensioner Arm
B—Vacuum Fan Drive Belt

CAUTION: Shut OFF engine, set park brake and remove key.

Use breaker bar to relieve belt tension from the tensioner arm (A).


Remove the vacuum fan drive belt (B) located below the radiator.

Install the replacement vacuum fan drive belt.

Use breaker bar to relieve tension from the tensioner arm to install belt.

OUO6075,000481B-19-14NOV17

Air Compressor Belt (If Equipped)—Replacing (Final Tier 4/Stage V)

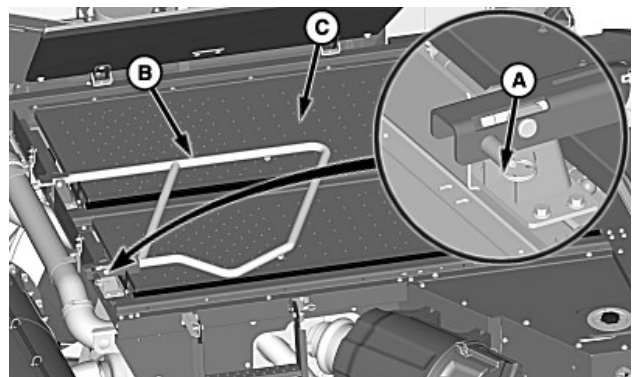


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.


1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

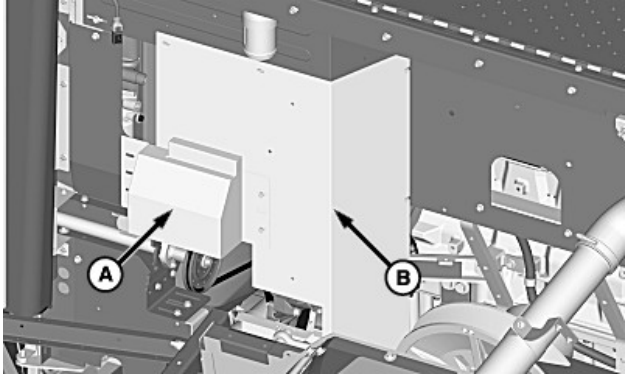

Front Side Of Engine


A—Shield
B—Shield

2. Remove shield (A) and shield (B).

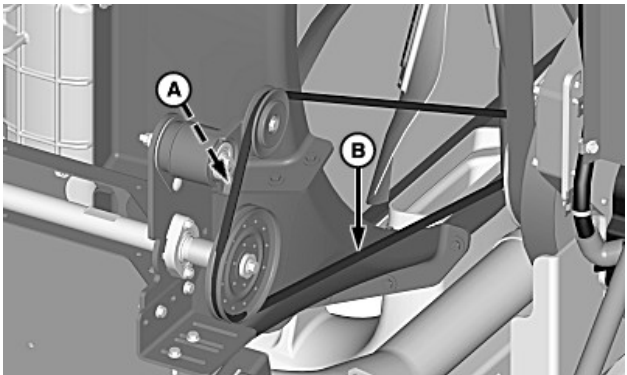


A—Tensioner Arm
B—Rotary Screen Drive Belt

3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).

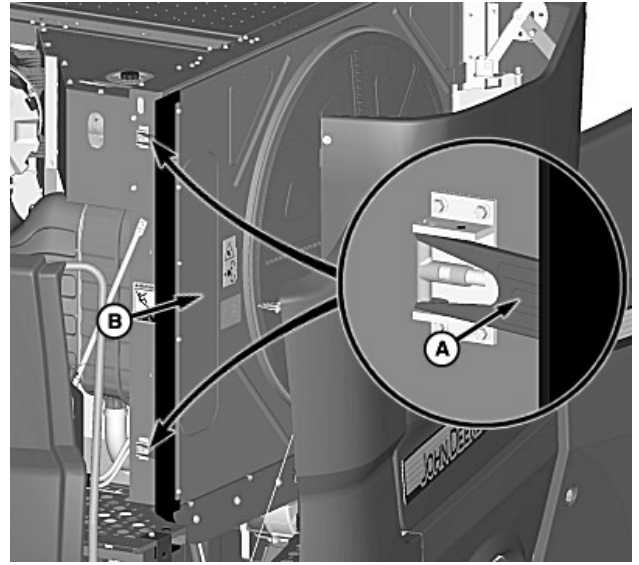


A—Latches
B—Rotary Screen Door

5. Pull latches (A) and open rotary screen door (B).

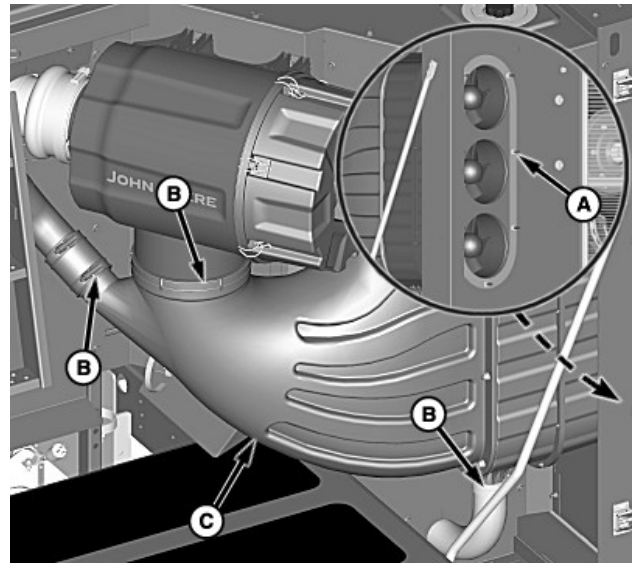

A—Nut (7 used)
B—Clamps
C—Air Duct


6. Remove nuts (A) and loosen hose clamps (B).
7. Lay air duct (C) out of the way.

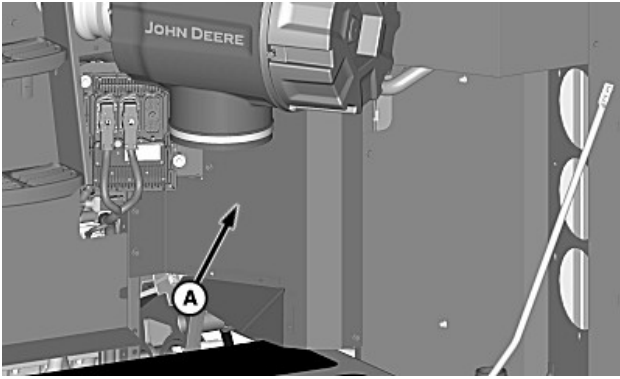

H95648—UN—10MAR10

A—Shield


8. Remove shield (A).

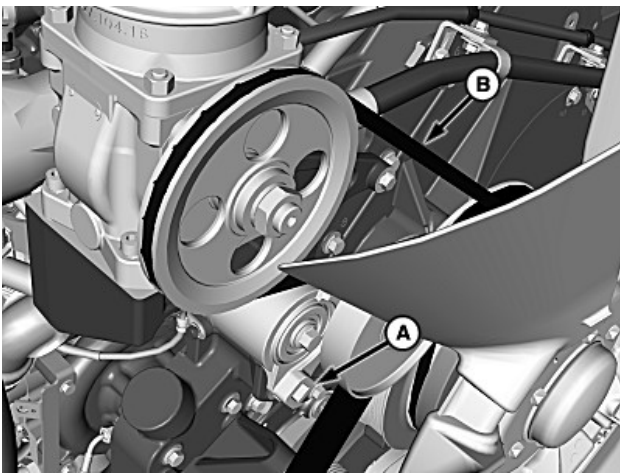

H113078—UN—25FEB15

A—Tensioner Arm
B—Belt

9. Use breaker bar to relieve belt tension from the tensioner arm (A).
10. Remove belt (B) and work belt over fan blades to remove.
11. Install replacement belt over the fan blades.
12. Use breaker bar to relieve tension from the tensioner arm to install replacement belt.

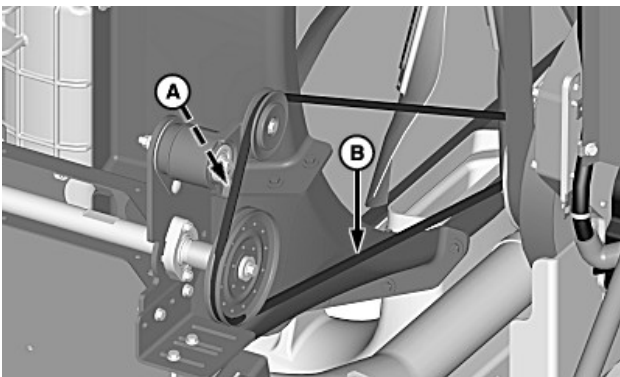


H124545—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt

13. Use breaker bar to relieve tension from the tensioner arm (A) to install rotary screen drive belt (B).
14. Install previously removed shields (front side).
15. Close separator access cover and lower handrail.
16. Install previously removed shield (rear side) and air duct.
17. Close and latch the rotary screen door.

mh69740,1653331737767-19-23MAY22

Fan Drive Belt—Replacing (Final Tier 4/ Stage V)

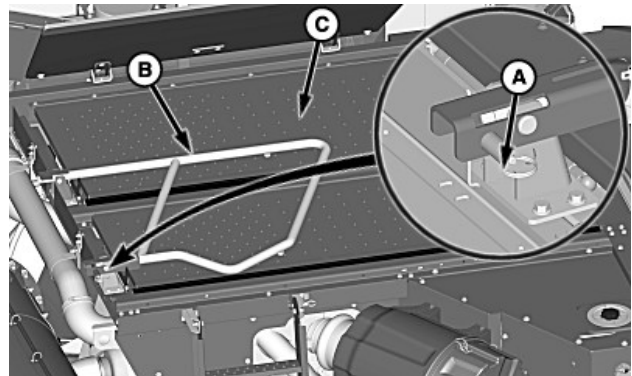


H118329—UN—04MAY16

A—Lockout Pin
B—Handrail
C—Separator Access Cover

CAUTION: Shut OFF engine, set park brake and remove key.

1. Pull lockout pin (A) and rotate handrail (B) up until handrail locks into place to open separator access cover (C).

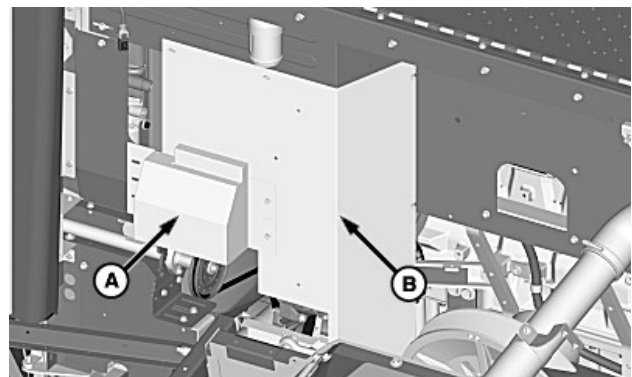


H124542—UN—19JUN18

Front Side Of Engine

A—Shield
B—Shield


2. Remove shield (A) and shield (B).

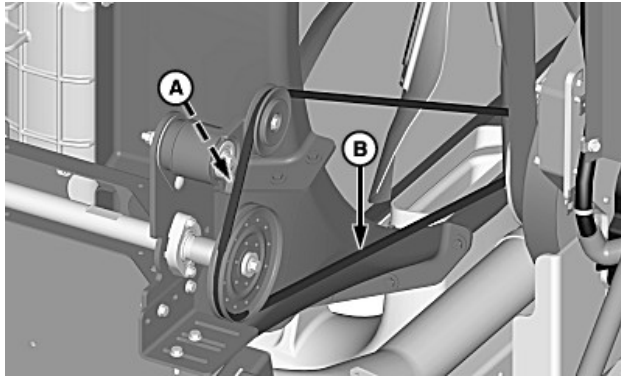

H124545—UN—19JUN18

A—Tensioner Arm
B—Rotary Screen Drive Belt


3. Use breaker bar to relieve belt tension from the tensioner arm (A).
4. Remove rotary screen drive belt (B).

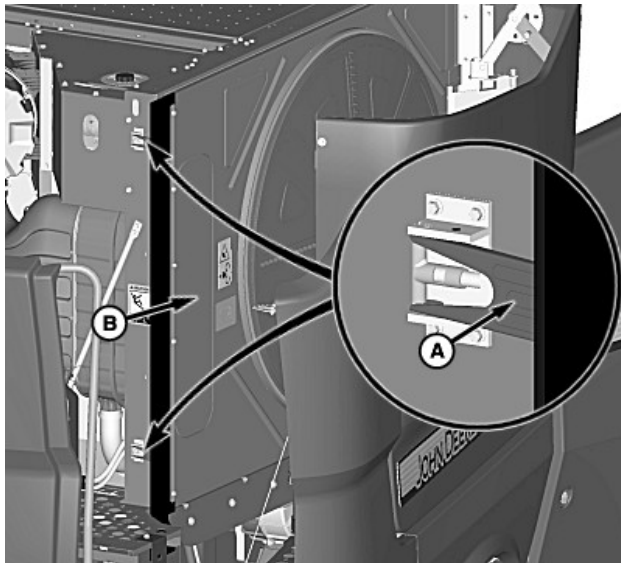

H106847—UN—08FEB13

A—Latches
B—Rotary Screen Door


5. Pull latches (A) and open rotary screen door (B).

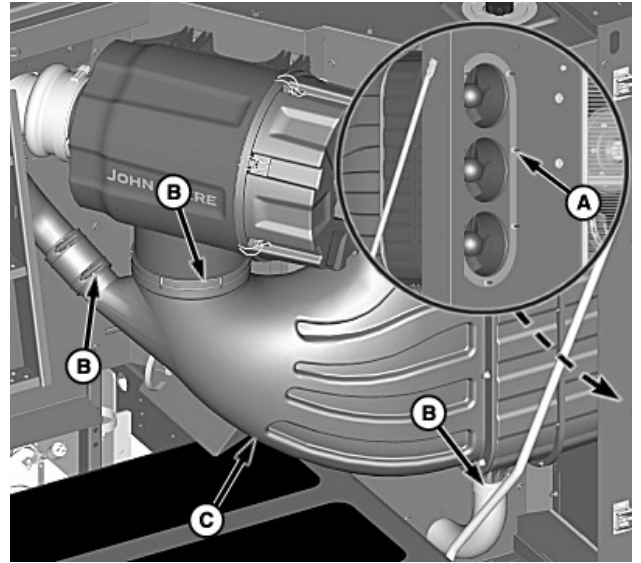

H110003—UN—18MAR14

A—Nuts (7 used)
B—Clamps
C—Air Duct


6. Remove nuts (A) and loosen hose clamps (B).
7. Lay air duct (C) out of the way.

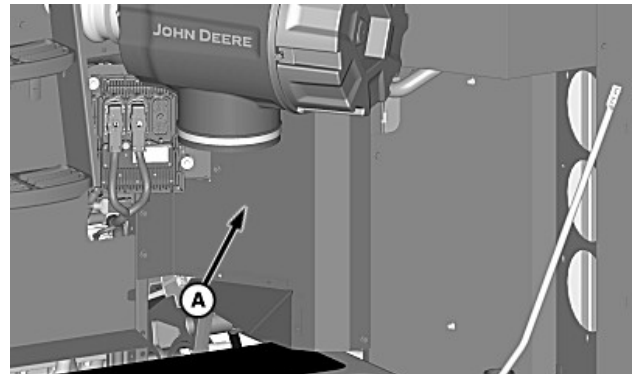

H95648—UN—10MAR10

A—Shield

8. Remove shield (A).

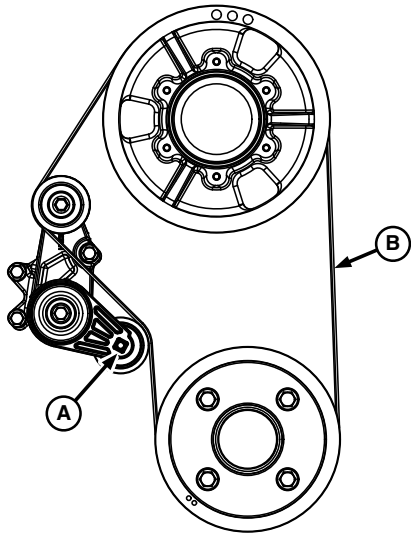


Fan Belt Routing

H99551—UN—06JAN11

A—Tensioner Arm
B—Fan Belt

NOTE: Air compressor belt must be removed to replace fan belt. See Air Compressor Belt (If Equipped)—Replacing (Final Tier 4/Stage V) for further information.

9. Use breaker bar to relieve belt tension from the tensioner arm (A).
10. Remove belt (B) and work belt over fan blades to remove.
11. Install replacement belt over the fan blades.
12. Use breaker bar to relieve tension from the tensioner arm to install replacement belt.

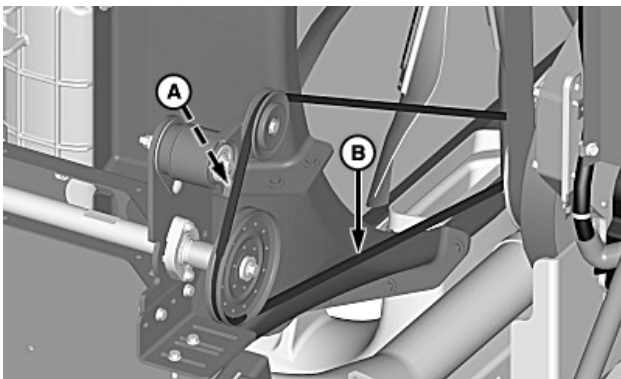

H124545—UN—19JUN18


A—Tensioner Arm
B—Rotary Screen Drive Belt

13. Use breaker bar to relieve tension from the tensioner arm (A) to install rotary screen drive belt (B).
14. Install previously removed shields (front side).
15. Close separator access cover and lower handrail.

16. Install previously removed shield (rear side) and air duct.
17. Close and latch the rotary screen door.

mh69740,1653331840305-19-23MAY22

Rotary Screen Brush—Adjustment

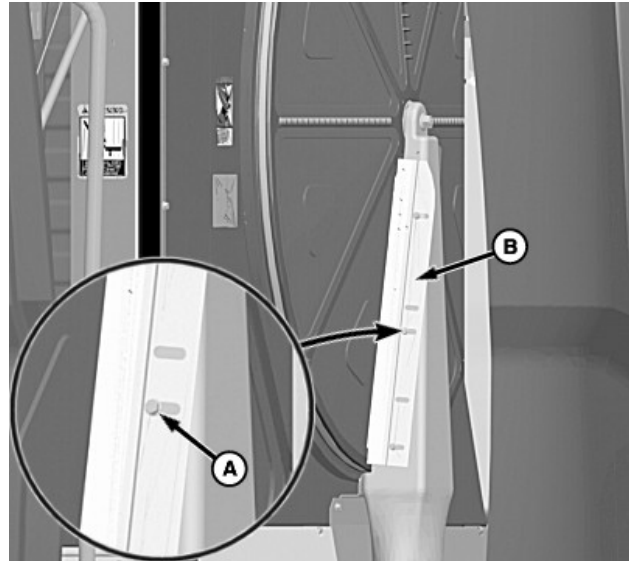


H95350—UN—15FEB10

A—Cap Screws
B—Brush

Loosen cap screws (A) and adjust brush (B) as needed to remove crop debris.

OUO6075,00005A0-19-16FEB10

Engine Debris Management Belt—Replacing (Final Tier 4/Stage V)

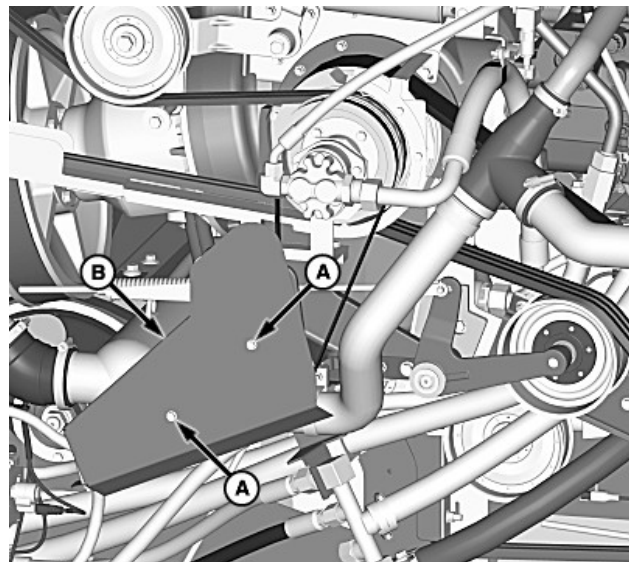


H121348—UN—25APR17

A—Cap Screws

B—Shield

⚠ CAUTION: Shut OFF engine, set park brake and remove key.

Remove cap screws (A) and shield (B).

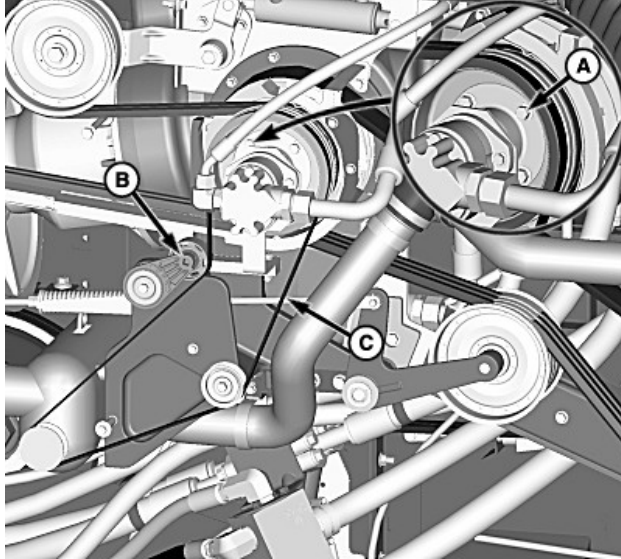

H108293—UN—18JUN13

A—Cap Screws
B—Tensioner Arm
C—Engine Debris Management Belt

Remove cap screws (A) and support pump assembly out of the way.

Remove belt and install replacement belt in reverse order.

Align pump assembly with sheave and tighten cap screws to specification.

Specification

Cap Screws—Torque. 80 N·m
(59 lb·ft)

Use breaker bar to relieve tension from the tensioner arm (B) to install the engine debris management belt (C).

Install shield and retain with cap screws.

OUO6075,000481E-19-14NOV17

Troubleshooting

Feeder House

Symptom	Problem	Solution
Uneven or bunched feeding of crop to rotor.	Header auger too high.	Adjust auger down and back. See header operator's manual.
	Buildup of grain on cutterbar.	Lower reel and set fore-and aft position as close as possible to cutterbar and auger. See platform operator's manual.
	Drum arms bind up to sidesheet on one side.	Loosen and tension chain again. Straighten or replace bent parts.
	Feeder conveyor chain too tight and holds drum up.	Adjust conveyor chain to correct tension.
	Header drive belt slipping.	Spring-loaded idler must be free and tight against belt.
	Auger too far ahead of stripper.	Adjust auger back to stripper. See header operator's manual.
	Feeder conveyor drive chain not on correct sprocket.	Place chain on correct sprocket.
	Feeder conveyor slats bowed up.	Straighten or replace bent slats.
	Dirt and sap buildup on feeder house bottom.	Clean bottom.
Header or Reel Will Not Lift Correctly	Too great a distance between platform auger and feeder house front drum.	Add links to feeder house chain.
	Air in hydraulic system.	Tighten clamps on leaking lines or hoses. Bleed reel lift system. See Platform operator's manual.

OUO6075,0000B5B-19-02MAR11

Separator

Symptom	Problem	Solution
Slugging or Overloading of Separator.	Single tine separator variable drive belt is slipping at slow speed.	Adjust sheave gap.
	Separator speed too slow for crop.	Increase separator speed.
Backfeeding of Feed Accelerator.	Separator speed too slow for crop.	Increase separator speed.
	Accelerator speed in slow speed position.	Change accelerator speed to high-speed position.

Symptom	Problem	Solution
Grain Not Threshed.	Separator speed too slow for crop.	Increase separator speed in increments of 50—100 rpm. After separator speed adjustment check grain quality.
	Concave clearance too wide.	Tighten threshing clearance in increments of 5—10 mm. After threshing clearance adjustment check grain quality.
	Concave clearance not even from front to rear.	Adjust to specifications. See Concave Leveling in Separator section for further information.
	Not enough material entering combine for proper threshing.	Increase ground speed.
Too Much Cracked Grain in Tank.	Separator speed too fast for crop.	Decrease separator speed in increments of 10 rpm.
	Concave clearance too tight.	Open threshing clearance in 2 mm increments.
	Feed beater speed too fast for crop.	Decrease feed accelerator speed by switching to low speed.
	Excessive grain in tailings.	Open sieve in increments of 2 mm to reduce tailings.
	Not enough material entering machine.	Increase ground speed.
	Active tailings system (if equipped) concave position incorrectly set.	Set active tailings system concave position. See Crop Settings section for further information.
Separator Grain Loss	Separator overloaded due to incomplete threshing or late threshing at concave.	Reduce separator to concave spacing and/or increase separator speed to increase threshing action.
	Separator covers installed.	See Crop Settings section for further information. Remove covers to increase open area while maintaining even shoe loading.
	Separator top cover vanes (if equipped) are in the advanced position.	Move vanes to standard position. See Residue Management Application Help or Operator's Station Help for further information.
Dirty Grain Tank (Unthreshed Heads).	Separator not threshing enough.	Increase separator speed in increments of 50—100 rpm.

Symptom	Problem	Solution
		Decrease threshing clearance in increments of 2 mm.
		Check concave level. See Concave Leveling in Separator section for further information.
		Active tailings system machines: install concave covers in the first concave.
		Non-active tailings system machines: install concave covers in the second concave.
		Add concave interrupters to the first concave.
	Active tailings system (if equipped) concave position incorrectly set.	Verify that active tailings system concave position is correct for crop harvested.
		Check active tailings system concave position for correct zero position. See Tailings System Wear Strips and Rasp Bars—Adjusting in Separator section for further information.
Dirty Grain Tank (Mostly Chaff).	Fan speed too slow.	Increase fan speed.
	Residue system crop diverter door in incorrect position.	Verify that door position matches harvested crop.
Dirty Grain Tank (Small Pieces of Cob).	Broken cob pieces in grain tank.	<i>NOTE: Spacers should be used in corn and soybeans only. Remove spacers for all other crops.</i>
		Install separator grate spacers.
	Check threshing clearance. If clearance is less than bare cob diameter, rotor may break up cob.	<i>NOTE: For active tailings system machine spacers should not be installed in fourth grate.</i>
		Install separator grate spacers.
Damaged chaffer/sieve elements.	Crop diverter door in incorrect position.	Verify that door position matches harvested crop.
Loss of Grain Over Cleaning Shoe.	Incorrect chaffer/sieve clearance.	Check and calibrate chaffer/sieve clearance.

Symptom	Problem	Solution
	Incorrect distribution of chaff/grain on cleaning shoe.	Adjust separator grate blanks and auger bed dividers as required. See Power Shutdown Procedure in Crop Settings section for further information.
VisionTrak™ Performance Monitor not reading.	Cleaning shoe loss increases at low feed rate.	Reduce fan speed.
	Cleaning shoe loss increases at high feed rate.	Open chaffer.
		Increase fan speed.
	Sensor not reading.	Check crop sensitivity settings.
		Check that sensors are connected.
		Check that sensors are not block by material.
Undesirable Straw Quality.	Excessive material handling.	Decrease rotor speed and increase threshing clearance to increase straw quality and balance threshing performance.
		Decrease material handling speed (feeder house and feed accelerator) to balance straw quality and material handling performance.
		Advance separator top cover vanes (if equipped). See Residue Management Application Help or Operator's Station Help for further information.

OUO6075,00046A1-19-21MAR17

Hydrostatic Ground Drive

Symptom	Problem	Solution
Speed Range Selector Will Not Go in Reverse (Non-ProDrive™ Machines).	Bent or broken parts in control linkage.	Repair or replace as required.
Linkages Binding (Non-ProDrive™ Machines).	Frozen or worn ball joints on the control cable.	Lubricate or replace.
	Bell crank or pivots binding.	Lubricate or replace.
	Control cable kinked or frozen.	Replace if needed.

*VisionTrak is a trademark of Deere & Company
ProDrive is a trademark of Deere & Company*

Symptom	Problem	Solution
System Overheats.	Oil cooler or radiator plugged.	Blow air through core and clean.
	Lack of charge oil flow.	See your John Deere dealer.
	Engine fan belt slipping or broken.	Check for worn or broken belt.
	Plugged oil filter.	Change filter.
	Exceeding relief valve pressure.	Shift to lower gear.
	Relief valve stuck closed.	See your John Deere dealer.
	By-pass valve fails to close.	See your John Deere dealer.
High Oil Loss.	Loose connections or leaking hydraulic lines, hoses, or O-rings.	Tighten connections or replace damaged lines, hoses, or O-rings.
	Oil leaking into the main engine gear case (Non-ProDrive™ Machines).	Replace hydrostatic pump shaft seal.
	Oil leaking into the main engine gear case (ProDrive™ Machines).	Replace hydrostatic motor shaft seal or park brake seals in transmission, see your John Deere dealer.
	Worn or damaged triple pump seals (Non-ProDrive™ Machines).	Check triple pump cavities between the valve stack pump and steering pump. Both pump cavities should contain no oil. If oil is found between pump cavity sections, replace pump shaft seals on the valve stack pump and steering pump before replacing both pumps.
	Worn or damaged quadruple pump seals (ProDrive™ Machines).	Check quadruple pump cavities between the valve stack pump and ProDrive™ lube supply pump. Both pump cavities should contain no oil. If oil is found between pump cavities sections, replace pump shaft seals on the valve stack pump and ProDrive™ lube pump before replacing both pumps.
Machine Will Not Move Forward or Reverse.	Transmission out of gear (Non-ProDrive™ Machines).	Shift transmission.
	System detects ground drive faults (ProDrive™ Machines).	See your John Deere dealer.
	Low on oil.	Check for leaks and correct. Fill reservoir.
	Air leak in system.	Tighten connections.

Troubleshooting

Symptom	Problem	Solution
	Control linkages broken or loose (Non-ProDrive™ Machines).	Tighten loose linkages or replace as needed.
	Lack of charge flow or charge pressure.	See your John Deere dealer.
	Plugged filter.	Change filter.
	Exceeding maximum operating pressure setting (Non-ProDrive™ Machines).	Shift to lower gear.
	Exceeding maximum operating pressure setting (ProDrive™ Machines).	See your John Deere dealer.
	Drive system unable to build up pressure.	See your John Deere dealer.
	Relief valve open.	See your John Deere dealer.
Ground Travel Speed Erratic.	Low oil.	Check for leaks and correct. Fill reservoir.
	Plugged filter.	Change hydrostatic charge filter.
	Exceeding maximum operating pressure setting (Non-ProDrive™ Machines).	Shift to lower gear or engage four-wheel drive.
	Exceeding maximum operating pressure setting (ProDrive™ Machines).	See your John Deere dealer.
	Multi-function lever creeps toward neutral.	See your John Deere dealer.
	System unable to keep charge pressure.	See your John Deere dealer.
Machine Will Not Stop When Speed Range Selector is in Neutral Position (Non-ProDrive™ Machines).	Control cable out of adjustment.	Adjust cable for neutral position.
Lack of Power or Lost Power. Machine Not Responding to Speed Range Selector.	Low on oil.	Check for leaks and correct. Fill reservoir.
	Plugged filter.	Change hydrostatic charge filter.
	Lack of charge flow or charge pressure.	See your John Deere dealer.
	Dirty fuel filter.	Replace fuel filter.

Troubleshooting

Symptom	Problem	Solution
	Water in separator bowl.	Drain water from separator bowl.
	Drive system unable to keep or build up pressure.	See your John Deere dealer.
	System detects ground drive faults.	See your John Deere dealer.

OUO6075,00046A2-19-28MAR17

Four-Wheel Drive (Optional)

Symptom	Problem	Solution
Machine Will Not Move When Four-Wheel Drive Is Engaged.	One or both rear wheels in spin-out condition.	Increase hydrostatic pump flow by moving the multi-function lever forward.
	Bad electrical control switch on console.	See your John Deere dealer
	Bad solenoid valve on the control valve.	See your John Deere dealer.
	Spool will not move in the control valve.	See your John Deere dealer.
Machine Will Not Move When Four-Wheel Drive Is Disengaged.	Faulty line or connection between the main system and rear wheel drive control valve.	Repair or replace parts as needed.
Four-Wheel Drive Will Not Disengage.	Bad electrical control switch on console.	See your John Deere dealer
	Bad solenoid valve on the control valve.	See your John Deere dealer.
	Spool will not work in the control valve.	See your John Deere dealer.
Rear Wheels Wander During Transport Speeds.	Toe-in out of adjustment.	Adjust toe-in.

OUO6075,000457A-19-10JAN17

Steering

Symptom	Problem	Solution
Rear Wheels Wander During Transport Speeds.	Toe-in out of adjustment.	Adjust toe-in.
Steering Arms Do Not Contact Stops at Full Turns.	Steering cylinder out of adjustment.	Adjust cylinder.
Hard Steering.	Low oil level in the engine gear case reservoir.	Add oil.

OUO6075,00046F0-19-29MAR17

Brakes

Symptom	Problem	Solution
Spongy Brake Pedal Pressure.	Low brake fluid level (Non ProDrive Machines).	Add brake fluid.
	Brake pedal push rods out of adjustment (ProDrive Machines).	Adjust jam nut on brake pedal push rods.
	Air in system.	See your John Deere dealer.
Loss of Braking Power.	Glazed linings (Non ProDrive Machines).	See your John Deere dealer.
	Inadequate pressure (ProDrive Machines).	See your John Deere dealer.
	Worn linings.	See your John Deere dealer.
Parking Brake Not Holding.	Park brake not adjusted properly (Non ProDrive Machines).	Adjust park brake.
	Lack of spring force (ProDrive Machines).	See your John Deere dealer.
	Glazed linings (Non ProDrive Machines).	See your John Deere dealer.
	Worn brake linings (ProDrive Machines).	See your John Deere dealer.
	Machine was manual overridden to move machine (ProDrive Machines).	Remove cap screws from transmission.

OUO6075,00000F7-19-29APR08

Engine

Symptom	Problem	Solution
Engine Will Not Crank	Weak battery	Charge or replace battery.
	Corroded or loose battery connections	Clean battery terminals and connections.
	Defective main switch or start safety switch	Repair switch as required.
	Starter solenoid defective	Replace solenoid.
	Starter defective	Replace starter.
Engine Hard to Start or Will Not Start	Starting system problem	Starting system not strong enough to start engine

Troubleshooting

Symptom	Problem	Solution
		Perform steps found in Engine Will Not Crank.
	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Slow cranking speed	Check for problem in the charging/starting system.
	Too high viscosity crankcase oil	Drain crankcase oil and replace with correct viscosity oil.
	Electronic control system problem or basic engine problem	See your John Deere dealer.
Engine Misfiring or Runs Irregularly	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Electronic control system problem or basic engine problem	See your John Deere dealer.
Lack of Engine Power	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Plugged fuel filter	Replace fuel filters.
	Engine overloaded	Reduce engine load.
	Improper crankcase oil	Drain crankcase oil and replace with correct viscosity oil.
	Electronic control system problem or basic engine problem	See your John Deere dealer.
	Engine is in derate because of an active diagnostic trouble code	See your John Deere dealer.
	Engine is in derate because exhaust filter cleaning is required.	Engage exhaust filter auto cleaning mode and request a manual exhaust filter cleaning.
Engine Emits Black or Gray Smoke	Engine overloaded	Reduce engine load.
	Improper type of fuel.	Use proper fuel.
	Air cleaner restricted or dirty	Replace air cleaner element as required.
	Defective muffler/exhaust piping (causing backpressure)	Replace muffler or defective piping.
	Electronic control system problem or basic engine problem	See your John Deere dealer.

Symptom	Problem	Solution
	Fuel injectors dirty.	See your John Deere dealer.
	High-pressure fuel pump out of time.	See your John Deere dealer.
	Turbocharger not functioning.	See your John Deere dealer.
	Exhaust filter is cracked or damaged.	See your John Deere dealer.
Engine Emits White Smoke	Engine compression too low	Determine cause of low compression and repair as required. See your John Deere dealer.
	Improper type of fuel.	Use proper fuel.
	Low engine temperature.	Warm up engine to normal operating temperature.
	Defective thermostat(s)	Test thermostats; replace thermostats as required.
	Coolant entering combustion chamber (failed cylinder head gasket or cracked cylinder head)	Repair or replace as required. See your John Deere dealer.
	Electronic control system problem or basic engine problem	See your John Deere dealer.
	Defective fuel injectors.	See your John Deere dealer.
	High-pressure fuel pump out of time.	See your John Deere dealer.
Engine Idles Poorly	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Air leak on suction side of air intake system.	Check hose and pipe connections for tightness; repair as required.
	Electronic control system problem or basic engine problem	See your John Deere dealer.
Excessive Fuel Consumption	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Engine overloaded	Reduce engine load.
	Air cleaner restricted or dirty	Replace air cleaner element as required.
	Compression too low	Determine cause of low compression and repair as required.
	Leaks in fuel supply system	Locate source of leak and repair as required.

Troubleshooting

Symptom	Problem	Solution
	Improper type of fuel.	Use proper type of fuel.
	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Improper valve clearance.	See your John Deere dealer.
	Fuel injectors defective.	See your John Deere dealer.
	High-pressure fuel pump out of time.	See your John Deere dealer.
	Improper turbocharger operation.	Inspect turbocharger. See your John Deere dealer.
	Low engine temperature.	Check thermostats.
Fuel in Oil	Cracked cylinder head	Locate crack, repair/replace components as required. See your John Deere dealer.
	Cracked or worn electronic unit injector O-ring	Remove suspected electronic unit injector and replace O-ring as required. See your John Deere dealer.
Low Fuel Pressure	Plugged fuel filter	Replace fuel filter.
	Restricted fuel line	Locate restriction, repair as required.
	Faulty fuel transfer pump	Remove fuel transfer pump; repair/replace pump as required. See your John Deere dealer.
Fuel Aeration	Electronic unit injector hold-down clamp loose	Tighten hold-down clamp cap screw to proper torque. See your John Deere dealer.
	Cracked or worn electronic unit injector O-ring	Remove suspected electronic unit injector and replace O-ring as required. See your John Deere dealer.
Low Oil Pressure	Low crankcase oil level	Fill crankcase to proper oil level.
	Crankcase oil level too high	Fill crankcase to proper oil level.
	Faulty pressure sensor	Replace sensor. See your John Deere dealer.
	Clogged oil cooler or filter	Remove and inspect oil cooler. See your John Deere dealer.
	Excessive oil temperature	Remove and inspect oil cooler. See your John Deere dealer.

Troubleshooting

Symptom	Problem	Solution
	Defective oil pump	Remove and inspect oil pump. See your John Deere dealer.
	Incorrect oil	Drain crankcase and refill with correct oil.
	Oil pressure regulating valve failure	Remove and inspect oil pressure regulating valve. See your John Deere dealer.
	Broken piston spray nozzle	Replace piston spray nozzle. See your John Deere dealer.
	Clogged oil pump screen or cracked pick-up tube	Remove oil pan and clean screen/replace pick-up tube.
	Excessive main or connecting rod bearing clearance	Determine bearing clearance. See your John Deere dealer.
High Oil Pressure	Improper oil classification	Drain crankcase and refill with correct oil.
	Faulty pressure sensor	Replace sensor. See your John Deere dealer.
	Oil pressure regulating valve bushing loose (wanders)	Remove and inspect oil pressure regulating valve. See your John Deere dealer.
	Improperly operating regulating valve	Remove and inspect oil pressure regulating valve. See your John Deere dealer.
	Plugged piston spray nozzle	Replace piston spray nozzle. See your John Deere dealer.
	Stuck or damaged filter bypass valve	Remove and inspect filter bypass valve. See your John Deere dealer.
Excessive Oil Consumption	Stuck or damaged oil cooler bypass valve	Remove and inspect oil cooler bypass valve. See your John Deere dealer.
	Too low viscosity crankcase oil	Drain crankcase and refill with correct viscosity oil.
	Crankcase oil level too high	Drain oil until oil level is correct.
	External oil leak(s)	Determine source of oil leak(s) and repair as required.
	Oil control rings not seated	See your John Deere dealer.
	Oil control rings worn or broken	Replace piston rings. See your John Deere dealer.

Troubleshooting

Symptom	Problem	Solution
	Scored cylinder liners or pistons	Remove and inspect cylinders and liners; replace as required. See your John Deere dealer.
	Worn valve guides or stems	Inspect and measure valve stems and valve guides; repair as required. See your John Deere dealer.
	Excessive oil pressure	See High Oil Pressure earlier in this section.
	Piston ring grooves excessively worn	Remove and inspect pistons. See your John Deere dealer.
	Piston rings sticking in ring grooves	Remove and inspect pistons. See your John Deere dealer.
	Insufficient piston ring tension	Remove and inspect pistons. See your John Deere dealer.
	Piston ring gaps not staggered	Remove and inspect pistons. See your John Deere dealer.
	Front and/or rear crankshaft oil seal faulty	Replace oil seals. See your John Deere dealer.
Abnormal Engine Noise ¹	Worn main or connecting rod bearings	Determine bearing clearance. See your John Deere dealer.
	Excessive crankshaft end play	Check crankshaft end play. See your John Deere dealer.
	Loose main bearing caps	Check bearing clearance; replace bearings and bearing cap screws as required. See your John Deere dealer.
	Worn connecting rod bushings and piston pins	Inspect piston pins and bushings. See your John Deere dealer.
	Scored pistons	Inspect pistons. See your John Deere dealer.
	Worn timing gears or excess backlash	Check timing gear backlash. See your John Deere dealer.
	Excessive valve clearance	Check and adjust valve clearance. See your John Deere dealer.
	Worn camshaft lobes	Replace camshaft. See your John Deere dealer.

¹ NOTE: Variable geometry turbocharger recycles after starting engine, causing a momentary revving sound in engine. This is normal. Do not confuse whine heard during run down with noise which indicates a bearing failure.

Symptom	Problem	Solution
	Worn rocker arm shaft(s)	Replace rocker arm shafts. See your John Deere dealer.
	Insufficient engine lubrication	See Lubrication System Troubleshooting, later in this section.
	Turbocharger noise	See Air Intake System Troubleshooting, later in this section.
Turbocharger “Whistles”	Air leak in intake manifold.	Check intake manifold gasket and manifold; repair as required. See your John Deere dealer.
Turbocharger Noise or Vibration ²	Bearings not lubricated (insufficient oil pressure)	Determine cause of lack of lubrication; repair as required. See your John Deere dealer.
	Air leak in engine intake or exhaust manifold	Check intake and exhaust manifold gaskets and manifolds; repair as required. See your John Deere dealer.
	Improper clearance between turbine wheel and turbine housing	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
	Broken blades (or other wheel failures)	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
Oil on Turbocharger Compressor Wheel or in Compressor Housing (Oil Being Pushed or Pulled through Center Housing)	Excessive crankcase pressure.	Determine cause of excessive crankcase pressure; repair as required. See your John Deere dealer.
	Air intake restriction	Determine cause of intake restriction; repair as required. See your John Deere dealer.
	Drain tube restriction	Determine cause of drain tube restriction; repair as required. See your John Deere dealer.
Oil in Intake Manifold or Dripping from Turbocharger Housing	Excessive crankcase pressure	Determine cause of excessive crankcase pressure; repair as required. See your John Deere dealer.
	Air intake restriction	Determine cause of intake restriction; repair as required. See your John Deere dealer.

² NOTE: Variable geometry turbocharger recycles after starting engine, causing a momentary revving sound in engine. This is normal. Do not confuse whine heard during run down with noise which indicates a bearing failure.

Symptom	Problem	Solution
	Drain tube restriction	Determine cause of drain tube restriction; repair as required. See your John Deere dealer.
	Damaged or worn housing bearings	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
	Unbalance of rotating assembly	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
	Damage to turbine or compressor wheel or blade	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
	Dirt or carbon build-up on wheel or blade	Check for air intake leaks (post air filter). Inspect turbocharger; repair/replace as required. See your John Deere dealer.
	Bearing wear	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
	Oil starvation or insufficient lubrication	Determine cause of lack of lubrication; repair as required. See your John Deere dealer.
	Shaft seals worn	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
Turbocharger Turbine Wheel Drag	Carbon build-up behind turbine wheel caused by coked oil or combustion deposits	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
	Dirt build-up behind compressor wheel caused by air intake leaks	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
	Bearing seizure or dirty, worn bearings	Inspect turbocharger; repair/replace as required. See your John Deere dealer.
Engine Overheats	Engine overloaded.	Reduce engine load.
	Low coolant level.	Fill cooling system to proper level, check radiator, and hoses for loose connections or leaks.
	Defective surge tank cap	Replace surge tank cap as required.
	Loose or defective fan belt	Replace fan belt as required. Check belt tensioner.

Troubleshooting

Symptom	Problem	Solution
	Low engine oil level.	Check oil level. Add oil as required.
	Cooling system needs flushing.	Flush cooling system.
	Defective thermostat(s)	Remove and check thermostats as required.
	Defective temperature gauge or sender.	Check coolant temperature with thermometer and replace, if necessary.
	Incorrect grade of fuel.	Use correct grade of fuel.
	Radiator core dirty	Clean radiator as required.
	Too low crankcase oil level	Fill crankcase to proper oil level.
	Damaged cylinder head gasket	Replace cylinder head gasket. See your John Deere dealer.
	Defective coolant pump	Replace coolant pump. See your John Deere dealer.
Coolant in Crankcase	Cylinder head gasket defective	Replace cylinder head gasket. See your John Deere dealer.
	Cylinder head or block cracked	Locate crack, repair/replace components as required.
	Cylinder liner seals leaking	Remove and inspect cylinder liners. See your John Deere dealer.
	Leaking oil cooler	Pressure test oil cooler; repair/replace as required. See your John Deere dealer.
	Defective oil cooler O-rings	Remove and inspect oil cooler O-rings; replace as required. See your John Deere dealer.
	Faulty coolant pump seal; weep hole plugged; coolant leaking through bearing	Replace coolant pump seals. See your John Deere dealer.
Coolant Temperature Below Normal	Defective thermostat(s)	Test thermostats; replace thermostats as required.

OUO6075,0000C98-19-20JUN11

Electrical

Symptom	Problem	Solution
Undercharged system	Excessive electrical load from added accessories.	Remove accessories or install higher output alternator.

Troubleshooting

Symptom	Problem	Solution
	Excessive engine idling.	Increase engine rpm when heavy electrical load is used.
	Poor electrical connections on battery, ground strap, starter, or alternator.	Inspect and clean as necessary.
	Defective battery.	Test batteries.
	Defective alternator.	Test charging system.
Battery used too much water	Cracked battery case.	Check for moisture and replace as necessary.
	Battery charging rate too high.	Test charging system.
Batteries will not charge	Loose or corroded connections.	Clean and tighten connections.
	Sulfated or worn-out batteries.	See your John Deere dealer.
	Stretched belt or defective belt tensioner.	Adjust belt tension or replace belts.
Starter will not crank	Engine drivelines engaged.	Disengage engine drivelines.
	Loose or corroded connections.	Clean and tighten loose connections.
	Low battery output voltage or discharged battery.	Charge or replace batteries.
	Faulty start circuit relay.	See your John Deere dealer.
	Blown fuse.	Replace fuse.
		Clean battery terminals and connections.
	Defective main switch or start safety switch	Repair switch as required.
	Starter solenoid defective	Replace solenoid.
	Starter defective	Replace starter.
Starter cranks slowly	Low battery output.	Charge batteries.
	Crankcase oil too heavy.	Use proper viscosity oil.
	Loose or corroded connections.	Clean and tighten loose connections.
Entire electrical system does not function	Faulty battery connection.	Clean and tighten connections.
	Sulfated or worn-out batteries.	Replace batteries.

Troubleshooting

Symptom	Problem	Solution
	Blown fuse.	Replace fuse.

OUO6075,0000C99-19-20JUN11

Heater

Symptom	Problem	Solution
Heater Not Blowing Warm Air.	Dirty recirculating filter.	Clean filter.
	No thermostat in water outlet manifold.	See your John Deere dealer.
	Defective thermostat in water outlet manifold.	See your John Deere dealer.
	Heater temperature control defective.	Replace control.
	Kinked heater hose. Defective heater valve.	Straighten or replace. Replace valve.

OUO6075,0000B24-19-14MAR07

Air Conditioner

Symptom	Problem	Solution
Lack Of Or Insufficient Cooling	Temperature control in OFF position.	Turn Air Conditioner to ON position.
	Compressor belt off or broken.	Replace belt.
	Compressor not functioning (if both the large and small hoses in the left-hand access panel are at the same temperature).	See your John Deere dealer.
	Temperature control is not responding (temperature door broken resulting in warm air).	See your John Deere dealer.
	Low-pressure warning (system lost refrigerant).	See your John Deere dealer.
	High-pressure warning (system is overcharged).	See your John Deere dealer.
Compressor clutch cycles excessively or compressor stays OFF up to 15 minutes.	Evaporator icing.	Adjust controls correctly. See Combine Overview Application Help or Operator's Station Help for further information. Open louvers. Clean filters. Move control to a warmer setting.

Troubleshooting

Symptom	Problem	Solution
Bad smell (foul odor) in cab.	Plugged drain tube. Dirty filters. Dirty cab.	Blow out condensate tube and clean pan under evaporator. Clean filters. Vacuum out cab.
		Be certain weep valve in the condensate drain tube is installed.

OUO6075,0004572-19-19JAN17

Moisture Sensor (If Equipped)

Symptom	Problem	Solution
Moisture is too high.	Green plant sap or weed seed buildup on moisture sensor plate.	Clean moisture sensor plate.
Moisture is consistently high or low.	Moisture correction needs adjustment.	Change moisture correction.
Moisture does not change or is constantly low.	Obstructed sensor.	Inspect elevator mount unit and clean as needed.
Moisture reading is inaccurate.	Incorrect crop selected.	Select correct crop.
	Moisture sensor out of adjustment.	Change moisture correction.
Moisture always zero.	Recording problems.	Check if recording status comes ON when harvesting.

OUO6075,0000A75-19-03NOV10

Mass Flow Sensor (If Equipped)

Symptom	Problem	Solution
Yield is constantly too high or low.	System is out of calibration.	Change yield calibration.
	Incorrect header width.	Change header width.
	Incorrect crop selection.	Select correct crop.
	Dirt, mud, or debris on impact plate.	Clean impact plate.
Yield is zero.	No ground speed.	See your John Deere dealer.
	Clean grain elevator speed is too low.	See your John Deere dealer.
	Recording problems.	Check if recording status comes ON when harvesting.

OUO6075,0000A76-19-03NOV10

Combine Advisor™

Symptom	Problem	Solution
---------	---------	----------

Symptom	Problem	Solution
Auto Maintain Faults or Diagnostic Trouble Code for Low Crop Flow	Incorrect crop selection.	Select correct crop.
	Clean grain elevator moisture sensor bypass is obstructed.	Clear obstructions from the bypass.
	ActiveVision™ camera not detecting crop flow.	Clean camera glass. See Maintenance—Every 10 Hours section for further information. Replace the camera desiccant cartridge. See Maintenance—As Required section for further information.

OUO6075,000507D-19-30MAR21

Storage

Preparing Machine for Storage

Swing out condenser and oil cooler and clean radiator with air, water, or a vacuum cleaner.

Clean condenser and oil cooler after cleaning radiator. Clean charge air cooler.

Every 60—90 days start engine and turn air conditioning ON. Run engine at low idle for several minutes for compressor seal lubrication. Outside temperature should be above 5°C (40°F) for proper air conditioning operation.

Clean the surfaces of the engine with a safe solvent.

 **CAUTION: Do not use gasoline.**

Clean inside the air cleaner and install new elements.

Drain the engine crankcase, while the engine is warm. Replace filter and fill with correct oil. Add 0.66 L (22 oz) of a corrosion inhibitor to the engine crankcase. Run engine to circulate.

Drain, flush, and refill cooling system with 50/50 mixture of antifreeze and water.

IMPORTANT: Long-term storage in vehicle (over 12 months) is not recommended. If long-term storage is necessary, periodic testing of Diesel Exhaust Fluid (DEF) is recommended to ensure that urea concentration does not fall out of specification.

Final Tier 4/Stage V: Diesel Exhaust Fluid (DEF) has a limited shelf life, but may be stored in the vehicle for as long as 12 months, depending upon storage conditions. See Storing Diesel Exhaust Fluid (DEF) and Refilling Diesel Exhaust Fluid (DEF) Tank in Fuels and Lubricants section for further information. See Diesel Exhaust Fluid (DEF) Tank—Filling and Diesel Exhaust Fluid (DEF) Tank—Draining in Maintenance—As Required (Engine Fluids and Filters) section for further information.

IMPORTANT: Final Tier 4/Stage V: Do not disconnect battery for at least 90 seconds after machine is shut OFF. Selective Catalyst Reduction (SCR) system automatically purges lines of Diesel Exhaust Fluid (DEF) during this time, immediately after machine is shut OFF. If adequate time is not allowed for lines to be purged, any fluid remaining in lines can crystallize and plug lines. Fluid freezes and possibly burst lines in freezing weather conditions.

NOTE: Turn battery disconnect switch OFF if machine is stored longer than 25 days. If storage period is longer than 90 days, remove negative lead to batteries to minimize load to batteries.

Charge batteries completely. Specific gravity equals

1.260 volts. To minimize load to the batteries, remove the negative lead to the batteries.

Drain water separator.

Clean machine inside and out. Leave elevator doors and drain covers open.

Cycle concave up and down several times to prevent material buildup in the concave area.

IMPORTANT: Directing pressurized water at electronic/electrical components or connectors, bearings and hydraulic seals, fuel injection pumps or other sensitive parts and components may cause product malfunctions. Reduce pressure, and spray at a 45 to 90 degree angle.

Repaint areas where needed.

NOTE: It is not necessary to wax the machine. However, if desired, use a good clear wax that contains no abrasives. These types of waxes usually do not contain cleaners.

Lubricate machine and grease adjusting bolt threads.

Perform all 400 hours (yearly) service.

To prevent condensation, fill fuel tank.

IMPORTANT: To stabilize the fuel and prevent water condensation, add fuel conditioner when the following occurs:

- **Fuel is stored in the fuel tanks (machine or farm storage) for extended periods of time. See your John Deere dealer for recommendations.**
- **A slow turn over of fuel is being used. See your John Deere dealer for recommendations.**

For prolonged machine storage, the best practice is to drain biodiesel and fill machine with regular petroleum diesel fuel. Otherwise use biodiesel stabilizer (anti-oxidant) additives or fully formulated biodiesel conditioners. See your John Deere dealer for recommendations.

If machine is to be stored for a long period, remove and clean the batteries. Store them in a cool, dry place and keep them fully charged.

Before storing the machine, the air compressor reservoir (if equipped) **MUST** be drained of water.

OUO6075,0004A72-19-10DEC18

Removing Machine from Storage

Reconnect and/or charge batteries.

Charge batteries completely. Specific gravity equals 1.260 volts. To minimize load to the batteries, remove negative lead to the batteries.

Check oil and coolant levels. Inspect for leaks and add oil and coolant if needed.

Final Tier 4/Stage V: If diesel exhaust fluid (DEF) tank was not drained, test urea concentration. See Testing Diesel Exhaust Fluid (DEF) in Fuels and Lubricants section for further information. If concentration is not within specifications, drain and replace with new diesel exhaust fluid (DEF). If diesel exhaust fluid (DEF) tank was drained, fill tank. See Diesel Exhaust Fluid (DEF) Tank—Filling in Maintenance—As Required (Engine Fluids and Filters) section for further information.

Replace the ActiveVision™ clean grain elevator camera and tailings system camera desiccant cartridge (if equipped). See ActiveVision™ Camera Desiccant Cartridge in Maintenance—Every 400 Hours section for further information.

Close elevator doors and drain hole.

Check tension of drive belts. Adjust spring-loaded idlers until the washer is positioned between the end of the gauge and the bottom of the step.

Check tire inflation and review machine Operator's Manual.

Inspect fire extinguishers (front and rear) by following maintenance instructions on the fire extinguisher label. Recharge or replace as necessary.

OUO6075,0004E61-19-08JUL20

Specifications

Operating Speeds (S760 and S770)

Speeds shown are average and can vary from machine to machine.

NOTE: Operating speed specifications and design subject to change without notice.

Engine Speeds	9.0 L Tier 2/Stage II Engine	9.0 L Final Tier 4/Stage V Engine
Slow Speed (Separator Off)	1200 rpm	1200 rpm
Medium Speed (Separator Off)	1690 rpm	1690 rpm
Fast Speed (Separator Off)	2340 rpm	2340 rpm
Rated Speed (Separator On)	2200 rpm	2200 rpm

Separator Drive Shaft Speed	1453 rpm
-----------------------------	----------

Main Countershaft Speed	1453 rpm
-------------------------	----------

Separator Speeds	
High Range	400—1000 rpm
Low Range	210—530 rpm

Feeder House Lower Shaft Speeds	
Fixed Speed (If Equipped)	490 rpm
Heavy-Duty Variable Speed (If Equipped)	490—750 rpm
High Torque Variable Speed (If Equipped)	490—750 rpm
Multi-Speed (If Equipped)	First Gear: 480 rpm Second Gear: 535 rpm Third Gear: 590 rpm Fourth Gear: 665 rpm Fifth Gear: 735 rpm

Feed Accelerator Speeds	
Feed Accelerator (Standard Speed)	430/780 rpm
Feed Accelerator (Optional Slow Speed)	310/770 rpm
Feed Accelerator (High-Speed High Capacity)	520/970 rpm

Discharge Beater Speed	S760	S770
	998 rpm	995 rpm

Jackshaft Speeds	
Front Right-Hand Jackshaft	518 rpm
Rear Right-Hand Jackshaft	518 rpm

Cleaning Fan Speeds	
Standard Speed	620—1350 rpm
Special Slow Speed	250—500 rpm

Elevator Speeds	S760	S770
Clean Grain Elevator	417 rpm	415 rpm
Clean Grain Loading Auger	448 rpm	445 rpm
Tailings Elevator, Lower Auger	395 rpm	
Tailings Elevator, Upper Auger	625 rpm	
Shoe Drive	298 rpm	
Conveyor Augers	420 rpm	

Specifications

Unloading System Speeds (Separator Engaged)	
Unloading System Countershaft	1000 rpm
Unloading Auger Gear Case, Input Shaft	460 rpm, 116 L/s (3.3 bu/s) Unload Rate
Unloading Vertical Auger	460 rpm, 116 L/s (3.3 bu/s) Unload Rate
Unloading Outer Auger	460 rpm, 116 L/s (3.3 bu/s) Unload Rate
Grain Tank Horizontal Augers (Front and Rear)	330 rpm, 116 L/s (3.3 bu/s) Unload Rate

Chopper Speeds	Fine Cut Chopper	Extra-Fine Cut Chopper
Chopper/Discharge Beater Jackshaft	1880 rpm	2045 rpm
Chopper (Two-Speed)	1505/2350 rpm	1400/2995 rpm
Overshot Beater (If Equipped)	995 rpm	995 rpm

OUO6075,00050CA-19-14MAY21

Specifications

Operating Speeds (S780, S785, and S790)

Speeds shown are average and can vary from machine to machine.

NOTE: Operating speed specifications and design subject to change without notice.

Engine Speeds	13.5 L Tier 2/Stage II Engine	13.5 L Final Tier 4/Stage V Engine
Slow Speed (Separator Off)	1200 rpm	1200 rpm
Medium Speed (Separator Off)	1690 rpm	1690 rpm
Fast Speed (Separator Off)	2240 rpm	2240 rpm
Rated Speed (Separator On)	2100 rpm	2100 rpm

Separator Drive Shaft Speed	1466 rpm
-----------------------------	----------

Main Countershaft Speed	1466 rpm
-------------------------	----------

Separator Speeds	
High Range	400—1000 rpm
Low Range	210—530 rpm

Tailings System Speed	880 rpm
-----------------------	---------

Feeder House Lower Shaft Speeds	
Fixed Speed (If Equipped)	490 rpm
Multi-Speed (If Equipped)	First Gear: 480 rpm Second Gear: 535 rpm Third Gear: 590 rpm Fourth Gear: 665 rpm Fifth Gear: 735 rpm

Feed Accelerator Speeds	
Feed Accelerator (Standard Speed)	430/780 rpm
Feed Accelerator (Optional Slow Speed)	310/770 rpm
Feed Accelerator (High-Speed High Capacity)	520/970 rpm

Discharge Beater Speed	995 rpm
------------------------	---------

Jackshaft Speeds	
Front Right-Hand Jackshaft	520 rpm
Rear Right-Hand Jackshaft	520 rpm

Cleaning Fan Speeds	
Standard Speed	620—1350 rpm
Special Slow Speed	250—500 rpm

Elevator Speeds	
Clean Grain Elevator	415 rpm
Clean Grain Loading Auger	450 rpm
Tailings Elevator, Lower Auger	490 rpm
Tailings Elevator, Upper Auger	580 rpm
Shoe Drive	300 rpm
Conveyor Augers	425 rpm

Unloading System Speeds (Separator Engaged)	S780, S785, and S790	S780 HillMaster™, S785 HillMaster™, and S790 HillMaster™
Unloading System Countershaft	1005 rpm	
Unloading Auger Gear Case, Input Shaft	460 rpm	465 rpm

Specifications

Unloading System Speeds (Separator Engaged)	S780, S785, and S790	S780 HillMaster™, S785 HillMaster™, and S790 HillMaster™
Unloading Vertical Auger	460 rpm	465 rpm
Unloading Outer Auger	460 rpm	465 rpm
Grain Tank Horizontal Augers (Front and Rear)	450 rpm	335 rpm

HillMaster is a trademark of Deere & Company

Chopper Speeds	Fine Cut Chopper	Extra-Fine Cut Chopper
Chopper/Discharge Beater Jackshaft	1880 rpm	2045 rpm
Chopper (Two-Speed)	1505/2350 rpm	1400/2995 rpm
Overshot Beater (If Equipped)	995 rpm	995 rpm

OUO6075,00050CB-19-14MAY21

Specifications

Specifications (S760 and S770)

NOTE: Specifications and design subject to change without notice.

Engine		
Make	John Deere	
Model	6090HH006 (9.0 L Tier 2/Stage II) 6090HH029 (9.0 L Final Tier 4/Stage V)	
Type	Six-Cylinder, In-Line, Valve-in-Head (Four Valves), Air-to-Air Aftercooled Diesel Turbocharged	
	S760	S770
Rated Power (Tier 2/Stage II)	239 kW (320 hp)	278 kW (373 hp)
Rated Power (Final Tier 4/Stage V)	249 kW (334 hp)	292 kW (392 hp)
Rated Speed	2200 rpm	2200 rpm
Power Boost at Rated Speed	25 kW (34 hp)	25 kW (34 hp)
Peak Power (Tier 2/Stage II)	272 kW (365 hp)	317 kW (425 hp)
Peak Power (Final Tier 4/Stage V)	285 kW (382 hp)	335 kW (449 hp)
Peak Power Speed (Rated Speed -200 rpm)	2000 rpm	
Displacement	9.0 L (549 in³)	
Firing Order	1-5-3-6-2-4	
Air Cleaner	Dry Type with Safety Element	

Electrical System	
Battery Voltage	12 Volts
Battery Terminal Grounded	Negative
Alternator (Tier 2/Stage II) Alternators (Final Tier 4/Stage V)	200 A

Transmission	
Speeds (Mechanical Shift Machines)	Three Speeds
Speeds (Push-Button Shift Machines)	Three Speeds
Speeds (ProDrive™ Machines)	Two-Speed Auto-Shift

ProDrive is a trademark of Deere & Company

Brakes	
Type (Mechanical Shift Machines)	Hydraulic Shoe
Type (Push-Button Shift Machines)	Hydraulic Shoe
Type (ProDrive™ Machines)	Multiple Wet Discs

Feed Accelerator	S760 and S770	S770 HillMaster™
Number of Wings	Standard: 10 Tough Crop: 8 Rice: 5	Tough Crop: 8

HillMaster is a trademark of Deere & Company

Separator Elements	
Threshing Elements (TriStream™ Rotor)	Corn/Small Grain: 15
Threshing Elements (Variable Stream Rotor)	Corn/Small Grain: 15 Rice Option: 15 Elements and 12 Threshing Tines in Dense Pack Locations
Tines (TriStream™ Rotor)	24
Tines (Variable Stream Rotor)	20

TriStream is a trademark of Deere & Company

Concave	
Number of Concaves	3
Number of Bars Per Concave	Grain—Front 25, Mid/Rear 25; Corn 31

Specifications

Separator		
Number of Grates	4	

Discharge Grate		
Number of Grates	3	

Discharge Beater	S760 and S770	S770 HillMaster™
Number of Wings	Standard: 5 Tough Crop: 8	Tough Crop: 8

Grain Tank		
Capacity	10 572 L (300 bu) Extensions 10 572 L (300 bu) Covers	
Average Unloading Rate, 116 L/s (3.3 bu/s) Unload Rate	6977 L/min (198 bu/min)	
Maximum Unloading Rate, 116 L/s (3.3 bu/s) Unload Rate	7612 L/min (216 bu/min)	

Turning Radius		
Rear Wheel Tread Width	3.35 m (10 ft 10 in)	
Turning Radius (Non-Powered Axles)	8.02 m (26 ft 3 in)	
Turning Radius (Powered Axles)	7.73 m (25 ft 4 in)	

Capacities	S760	S770
Fuel Tank	950 L (250 gal)	
Diesel Exhaust Fluid (DEF) Tank (Final Tier 4/Stage V)	52.2 L (13.8 gal)	
Cooling System with Heater (Tier 2/Stage II)	53 L (56 qt)	
Cooling System with Heater (Final Tier 4/Stage V)	53 L (56 qt)	
Engine Crankcase with Filter (Tier 2/Stage II)	27.5 L (29 qt) ^a	
Engine Crankcase with Filter (Final Tier 4/Stage V)	27.5 L (29 qt) ^a	
Transmission (Mechanical Shift and Push-Button Shift Machines)	9.6 L (10 qt)	
Final Drives	8 L (8.5 qt) Single Wheel Configuration 23.0 L (24.3 qt) Dual Wheel Configuration	
Final Drives (HillMaster™)	Not Applicable	7 L (7.4 qt)
Heavy-Duty Variable Speed Drive Feeder House Reverser Gear Case with Cooler	3.5 L (7.4 pt)	Not Applicable
High-Torque Fixed Speed Drive Feeder House Reverser Gear Case without Cooler (Optional)	3.6 L (7.7 pt)	
High-Torque Variable Speed Drive Feeder House Reverser Gear Case with Cooler	4.9 L (10.4 pt)	
Multi-Speed Drive Feeder House Reverser Gear Case with Cooler	Not Applicable	5.2 L (11 pt)
Premium Overshot Beater Gear Case (If Equipped)	Not Applicable	0.2 L (6.75 oz)
Primary Countershaft Drive Gear Case	1.9 L (2.04 qt)	
Loading Auger Gear Case	3.8 L (4 qt)	
Two-Speed Separator Drive Gear Case	4.7 L (5 qt)	
Engine Gear Case with Transfer (Mechanical Shift and Push-Button Shift Machines)	21.3 L (22.5 qt)	
Engine Gear Case with Transfer (ProDrive™ Machines)	51 L (54 qt)	
Hydraulic/Hydrostatic Reservoir	31 L (33 qt)	

^aIt is vital to maintain engine oil at correct levels. Always verify that oil level is at correct location on dipstick when servicing.

Air Compressor (If Equipped)		
Reservoir Size	60 L (16 gal)	
Maximum Reservoir Pressure	827 kPa (8.27 bar) (120 psi)	
Air Compressor Flow	Slow Engine Speed	250 L/min (8.8 ft³/min)
	High Engine Speed	450 L/min (15.8 ft³/min)

Specifications

OUO6075,0005067-19-18MAR21

Specifications

Specifications (S780, S785, and S790)

NOTE: Specifications and design subject to change without notice.

Engine		
Make	John Deere	
Model	6135HH004 (13.5 L Tier 2/Stage II) 6135HH011 (13.5 L Final Tier 4/Stage V)	
Type	Six-Cylinder, In-Line, Valve-in-Head, Air-to-Air Aftercooled Diesel Turbocharged	
	S780	S785
Rated Power (Tier 2/Stage II)	353 kW (473 hp)	373 kW (500 hp)
Rated Power (Final Tier 4/Stage V)	353 kW (473 hp)	373 kW (500 hp)
Rated Speed	2100 rpm	2100 rpm
Power Boost at Rated Speed	37 kW (50 hp)	37 kW (50 hp)
Peak Power (Tier 2/Stage II)	402 kW (540 hp)	425 kW (570 hp)
Peak Power (Final Tier 4/Stage V)	402 kW (540 hp)	425 kW (570 hp)
Peak Power Speed (Rated Speed -200 rpm)	1900 rpm	
Displacement	13.5 L (824 in³)	
Firing Order	1-5-3-6-2-4	
Air Cleaner	Dry Type with Safety Element	
	S790	
Rated Power (Tier 2/Stage II)	405 kW (543 hp)	
Rated Power (Final Tier 4/Stage V)	405 kW (543 hp)	
Rated Speed	2100 rpm	
Power Boost at Rated Speed (Tier 2/Stage II)	23 kW (31 hp)	
Power Boost at Rated Speed (Final Tier 4/Stage V)	37 kW (50 hp)	
Peak Power (Tier 2/Stage II)	458 kW (614 hp)	
Peak Power (Final Tier 4/Stage V)	460 kW (617 hp)	
Peak Power Speed (Rated Speed -200 rpm)	1900 rpm	
Displacement	13.5 L (824 in³)	
Firing Order	1-5-3-6-2-4	
Air Cleaner	Dry Type with Safety Element	

Electrical System	
Battery Voltage	12 Volts
Battery Terminal Grounded	Negative
Alternator (Tier 2/Stage II) Alternators (Final Tier 4/Stage V)	200 A

Transmission	
Speeds	Two-Speed Auto-Shift

Brakes	
Type	Multiple Wet Discs

Feed Accelerator	S780, S785, and S790	S780 HillMaster™, S785 HillMaster™, and S790 HillMaster™
Number of Wings	Standard: 10 Tough Crop: 8 Rice: 5	Tough Crop: 8

HillMaster is a trademark of Deere & Company

Specifications

Separator Elements	
Threshing Elements (TriStream™ Rotor)	Corn/Small Grain: 15
Threshing Elements (Variable Stream Rotor)	Corn/Small Grain: 15 Rice Option: 15 Elements and 12 Threshing Tines in Dense Pack Locations
Tines (TriStream™ Rotor)	24
Tines (Variable Stream Rotor)	20

TriStream is a trademark of Deere & Company

Concave	
Number of Concaves	3
Number of Bars Per Concave	Grain—Front 25, Mid/Rear 25; Corn 31

Separator	
Number of Grates	4

Discharge Grate	
Number of Grates	1

Discharge Beater	S780, S785, and S790	S780 HillMaster™, S785 HillMaster™, and S790 HillMaster™
Number of Wings	Standard: 10 Tough Crop: 8	Tough Crop: 8

Grain Tank	S780, S785, and S790
Capacity	14 096 L (400 bu) Extensions 14 096 L (400 bu) Covers
Average Unloading Rate, 134 L/s (3.8 bu/s) Unload Rate	8035 L/min (228 bu/min)
Maximum Unloading Rate, 134 L/s (3.8 bu/s) Unload Rate	8670 L/min (246 bu/min)

Grain Tank	HillMaster™ Machines
Capacity	10 572 L (300 bu) Extensions 10 572 L (300 bu) Covers
Average Unloading Rate, 116 L/s (3.3 bu/s) Unload Rate	6977 L/min (198 bu/min)
Maximum Unloading Rate, 116 L/s (3.3 bu/s) Unload Rate	7612 L/min (216 bu/min)

Turning Radius	
Rear Wheel Tread Width	3.35 m (10 ft 10 in)
Turning Radius (Non-Powered Axles)	8.02 m (26 ft 3 in)
Turning Radius (Powered Axles)	7.73 m (25 ft 4 in)

Capacities	
Fuel Tank	950 L (250 gal) Optional 1250 L (330 gal) Standard
Diesel Exhaust Fluid (DEF) Tank (Final Tier 4/Stage V)	52.2 L (13.8 gal)
Cooling System with Heater (Tier 2/Stage II)	61.2 L (65 qt)
Cooling System with Heater (Final Tier 4/Stage V)	85 L (90 qt)
Engine Crankcase with Filter (Tier 2/Stage II)	39 L (41 qt) ^a
Engine Crankcase with Filter (Final Tier 4/Stage V)	43 L (45.5 qt) ^a
Final Drives	8 L (8.5 qt) Single Wheel Configuration 23.0 L (24.3 qt) Dual Wheel Configuration 7 L (7.4 qt) HillMaster™ Machines
High-Torque Fixed Speed Drive Feeder House Reverser Gear Case without Cooler	3.6 L (7.7 pt)
Multi-Speed Drive Feeder House Reverser Gear Case with Cooler (Optional)	5.2 L (11 pt)
Premium Overshot Beater Gear Case (If Equipped)	0.2 L (6.75 oz)

Specifications

Capacities	
Primary Countershaft Drive Gear Case (Non-Multi-Speed)	1.9 L (2.04 qt)
Loading Auger Gear Case	3.8 L (4 qt)
Two-Speed Separator Drive Gear Case	4.7 L (5 qt)
Engine Gear Case with Transfer	51 L (54 qt)
Hydraulic/Hydrostatic Reservoir	47 L (50 qt)

^aIt is vital to maintain engine oil at correct levels. Always verify that oil level is at correct location on dipstick when servicing.

Air Compressor (If Equipped)		
Reservoir Size	60 L (16 gal)	
Maximum Reservoir Pressure	827 kPa (8.27 bar) (120 psi)	
Air Compressor Flow	Slow Engine Speed	250 L/min (8.8 ft ³ /min)
	High Engine Speed	450 L/min (15.8 ft ³ /min)

OUO6075,0005068-19-14MAY21

Specifications

Dimensions (S760 and S770)

NOTE: Dimensions are approximate and subject to change without notice.

Dimension	S760 and S770
A	9.80 m (32 ft 2 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 11.02 m (36 ft 2 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 11.72 m (38 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 11.98 m (39 ft 4 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 12.46 m (40 ft 11 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
B	9.14 m (30 ft 0 in) with 6.9 m (22 ft 6 in) Power Fold Auger 9.93 m (32 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Auger
C	8.52 m (27 ft 11 in)
D	4.91—4.99 m (16 ft 1 in—16 ft 5 in) with 10 572 L (300 bu) Covers
E	4.61—4.84 m (15 ft 2 in—15 ft 11 in) Clean Grain Loading Auger
F	4.30—4.39 m (14 ft 1 in—14 ft 5 in) with 10 572 L (300 bu) Extensions
G	4.04—4.13 m (13 ft 3 in—13 ft 7 in)
H	3.96—4.04 m (13 ft 0 in—13 ft 3 in)
I	0.63—0.76 m (2 ft 1 in—2 ft 6 in)
J	3.53 m (11 ft 7 in)
K	6.52 m (21 ft 5 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 7.66 m (25 ft 2 in) with 6.9 m (22 ft 6 in) Rigid Unloading Auger 7.67 m (25 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 8.97 m (29 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 8.72 m (28 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 9.42 m (30 ft 11 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
L	4.72—5.05 m (15 ft 6 in—16 ft 7 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 5.23—5.33 m (17 ft 2 in—17 ft 6 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 5.48—5.58 m (18 ft 0 in—18 ft 4 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 5.42—5.52 m (17 ft 9 in—18 ft 1 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 5.59—5.69 m (18 ft 4 in—18 ft 8 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
M	4.01—4.33 m (13 ft 2 in—14 ft 3 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 4.51—4.62 m (14 ft 10 in—15 ft 2 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 4.61—4.71 m (15 ft 2 in—15 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 4.32—4.65 m (14 ft 2 in—15 ft 3 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 4.72—4.82 m (15 ft 6 in—15 ft 10 in) with 8.7 m (28 ft 6 in) Unloading Auger
N ^a	4.08—4.40 m (13 ft 5 in—14 ft 5 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 4.58—4.69 m (15 ft 0 in—15 ft 5 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 4.91—5.01 m (16 ft 1 in—16 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 4.84—4.95 m (15 ft 11 in—16 ft 3 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 5.02—5.12 m (16 ft 6 in—16 ft 10 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
O ^b	3.47—4.34 m (11 ft 5 in—14 ft 3 in) Rear Tires
P ^b	3.49—5.36 m (11 ft 5 in—17 ft 7 in) Front Tires

^aDimension is measured 1.22 m (4 ft) from the grain spill point. This represents the unloading auger when centered over the grain cart.

^bDue to the different tire configurations, row spacings, axle configurations, wheel offsets, axle positions, and spindles types, machine widths vary. Measurements given in chart are for minimum and maximum widths. For more detailed width information, see your John Deere dealer.

OUO6075,0004E58-19-01JUN20

Specifications

Dimensions (S770 HillMaster™)

NOTE: Dimensions are approximate and subject to change without notice.

Dimension	S770 HillMaster™
A	9.80 m (32 ft 2 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 11.02 m (36 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 11.98 m (39 ft 4 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
B	9.14 m (30 ft 0 in) with 6.9 m (22 ft 6 in) Power Fold Auger 9.93 m (32 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Auger
C	8.52 m (27 ft 11 in)
D	4.91—5.00 m (16 ft 1 in—16 ft 5 in) with 10 572 L (300 bu) Covers
E	4.62—4.71 m (15 ft 2 in—15 ft 5 in) Clean Grain Loading Auger
F	4.31—4.40 m (14 ft 2 in—14 ft 5 in) with 10 572 L (300 bu) Extensions
G	4.05—4.14 m (13 ft 4 in—13 ft 7 in)
H	3.97—4.06 m (13 ft 0 in—13 ft 4 in)
I	0.69—0.78 m (2 ft 3 in—2 ft 7 in)
J	3.53 m (11 ft 7 in)
K	6.52 m (21 ft 5 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 7.67 m (25 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 8.72 m (28 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
L	4.82—5.07 m (15 ft 10 in—16 ft 8 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 5.10—5.35 m (16 ft 9 in—17 ft 7 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 5.30—5.54 m (17 ft 5 in—18 ft 2 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
M	4.11—4.35 m (13 ft 6 in—13 ft 3 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 4.39—4.63 m (14 ft 5 in—15 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 4.42—4.67 m (14 ft 6 in—15 ft 4 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
N ^a	4.18—4.42 m (13 ft 9 in—14 ft 6 in) with 5.6 m (18 ft 6 in) Rigid Unloading Auger 4.46—4.71 m (14 ft 8 in—15 ft 5 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 4.72—4.96 m (15 ft 6 in—16 ft 3 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
O ^b	3.48—3.70 m (11 ft 5 in—12 ft 2 in) Rear Tires
P ^b	3.48—3.78 m (11 ft 5 in—12 ft 5 in) Front Tires

^aDimension is measured 1.22 m (4 ft) from the grain spill point. This represents the unloading auger when centered over the grain cart.

^bDue to the different tire configurations, row spacings, axle configurations, wheel offsets, axle positions, and spindles types, machine widths vary. Measurements given in chart are for minimum and maximum widths. For more detailed width information, see your John Deere dealer.

OUO6075,0004E59-19-01JUN20

Specifications

Dimensions (S780, S785, and S790)

NOTE: Dimensions are approximate and subject to change without notice.

Dimension	S780, S785, and S790
A	11.02 m (36 ft 2 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 11.72 m (38 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 11.98 m (39 ft 4 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 12.46 m (40 ft 11 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
B	9.14 m (30 ft 0 in) with 6.9 m (22 ft 6 in) Power Fold Auger 9.93 m (32 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Auger
C	8.52 m (27 ft 11 in)
D	3.92—3.99 m (12 ft 10 in—13 ft 1 in) with 14 096 L (400 bu) Covers
E	4.77—4.85 m (15 ft 8 in—15 ft 11 in) Clean Grain Loading Auger
F	4.57—4.65 m (15 ft 0 in—15 ft 3 in) with 14 096 L (400 bu) Extensions
G	4.04—4.13 m (13 ft 3 in—13 ft 7 in)
H	3.96—4.04 m (13 ft 0 in—13 ft 3 in)
I	0.63—0.76 m (2 ft 1 in—2 ft 6 in)
J	3.53 m (11 ft 7 in)
K	7.66 m (25 ft 2 in) with 6.9 m (22 ft 6 in) Rigid Unloading Auger 7.67 m (25 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 8.97 m (29 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 8.72 m (28 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 9.42 m (30 ft 11 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
L	5.23—5.33 m (17 ft 2 in—17 ft 6 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 5.48—5.58 m (18 ft 0 in—18 ft 4 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 5.42—5.52 m (17 ft 9 in—18 ft 1 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 5.59—5.69 m (18 ft 4 in—18 ft 8 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
M	4.51—4.62 m (14 ft 10 in—15 ft 2 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 4.61—4.71 m (15 ft 2 in—15 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 4.32—4.65 m (14 ft 2 in—15 ft 3 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 4.72—4.82 m (15 ft 6 in—15 ft 10 in) with 8.7 m (28 ft 6 in) Unloading Auger
N ^a	4.58—4.69 m (15 ft 0 in—15 ft 5 in) with 6.9 m (22 ft 6 in) Rigid and Power Fold Unloading Auger 4.91—5.01 m (16 ft 1 in—16 ft 5 in) with 7.9 m (26 ft 0 in) Rigid Unloading Auger 4.84—4.95 m (15 ft 11 in—16 ft 3 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger 5.02—5.12 m (16 ft 6 in—16 ft 10 in) with 8.7 m (28 ft 6 in) Rigid Unloading Auger
O ^b	3.39—4.34 m (11 ft 2 in—14 ft 3 in) Rear Tires
P ^b	3.49—5.36 m (11 ft 5 in—17 ft 7 in) Front Tires

^aDimension is measured 1.22 m (4 ft) from the grain spill point. This represents the unloading auger when centered over the grain cart.

^bDue to the different tire configurations, row spacings, axle configurations, wheel offsets, axle positions, and spindles types, machine widths vary. Measurements given in chart are for minimum and maximum widths. For more detailed width information, see your John Deere dealer.

OUO6075,0004E5A-19-01JUN20

Specifications

Dimensions (S780 HillMaster™, S785 HillMaster™ and S790 HillMaster™)

NOTE: Dimensions are approximate and subject to change without notice.


Dimension	S780 HillMaster™, S785 HillMaster™ and S790 HillMaster™
A	11.02 m (36 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 11.98 m (39 ft 4 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
B	9.14 m (30 ft 0 in) with 6.9 m (22 ft 6 in) Power Fold Auger 9.93 m (32 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Auger
C	8.52 m (27 ft 11 in)
D	4.90—4.91 m (16 ft 1 in—16 ft 2 in) with 10 572 L (300 bu) Covers
E	4.62—4.76 m (15 ft 2 in—15 ft 7 in) Clean Grain Loading Auger
F	4.30—4.31 m (14 ft 1 in—14 ft 2 in) with 10 572 L (300 bu) Extensions
G	4.04—4.05 m (13 ft 3 in—13 ft 4 in)
H	3.96—3.97 m (13 ft 0 in—13 ft 1 in)
I	0.68—0.69 m (2 ft 2 in—2 ft 3 in)
J	3.53 m (11 ft 7 in)
K	7.67 m (25 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 8.72 m (28 ft 7 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
L	5.10—5.35 m (16 ft 9 in—17 ft 7 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 5.30—5.54 m (17 ft 5 in—18 ft 2 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
M	4.39—4.63 m (14 ft 5 in—15 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 4.42—4.67 m (14 ft 6 in—15 ft 4 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
N ^a	4.59—4.61 m (15 ft 1 in—15 ft 2 in) with 6.9 m (22 ft 6 in) Power Fold Unloading Auger 4.84—4.87 m (15 ft 11 in—16 ft 0 in) with 7.9 m (26 ft 0 in) Power Fold Unloading Auger
O ^b	3.48—3.68 m (11 ft 5 in—12 ft 1 in) Rear Tires
P ^b	3.47—3.80 m (11 ft 5 in—12 ft 6 in) Front Tires

^aDimension is measured 1.22 m (4 ft) from the grain spill point. This represents the unloading auger when centered over the grain cart.


^bDue to the different tire configurations, row spacings, axle configurations, wheel offsets, axle positions, and spindles types, machine widths vary. Measurements given in chart are for minimum and maximum widths. For more detailed width information, see your John Deere dealer.

OUO6075,0004E5B-19-01JUN20

Dimension Reference Points

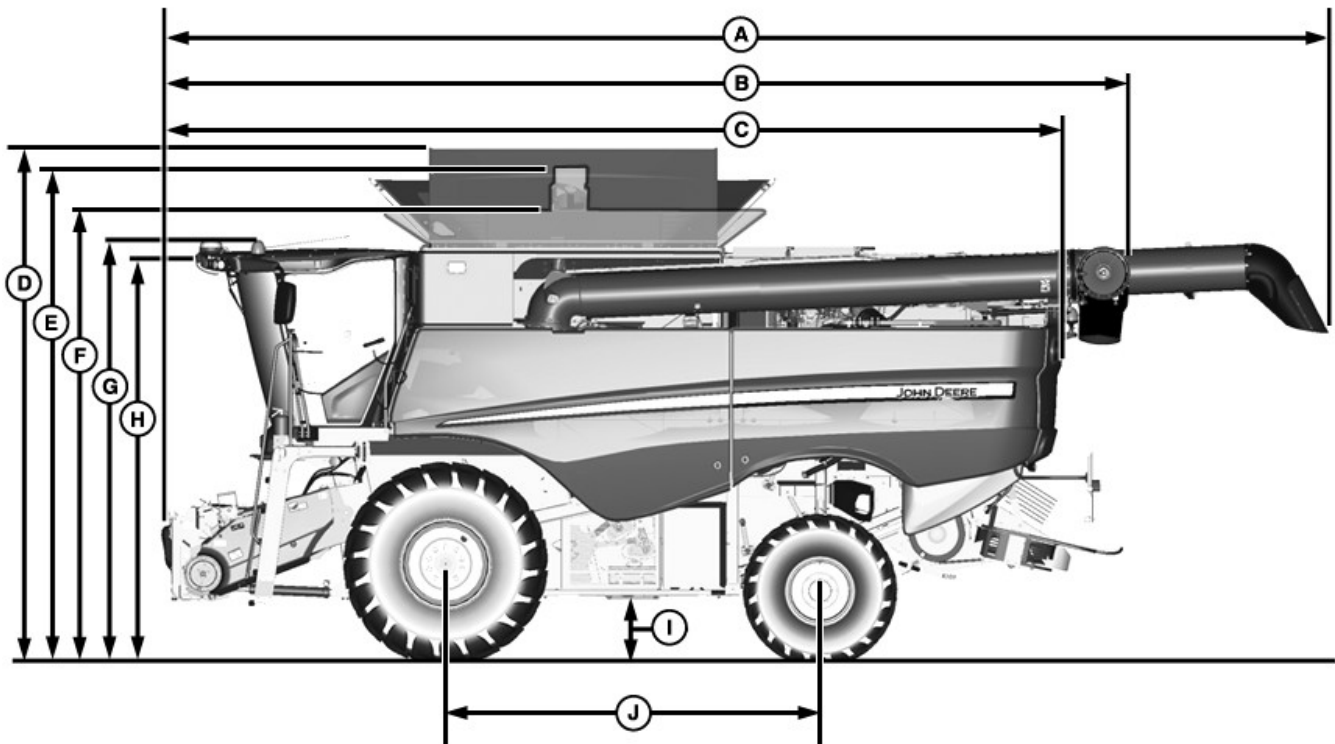

H107111—UN—28FEB13

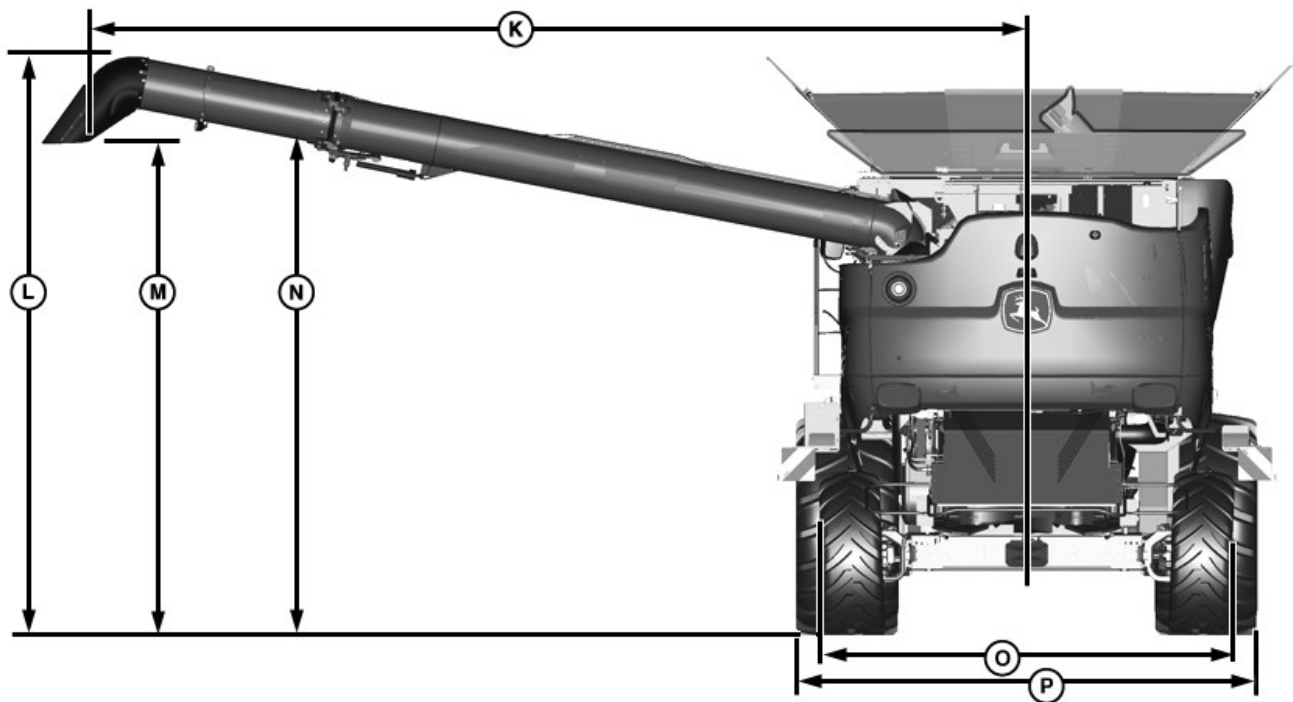

H107112—UN—28FEB13
OUO6075,00049AB-19-30MAY18

Whole Body Vibration

The weighted root mean square acceleration to which the whole body is subjected to ranges from 0.51 to 0.73 m/s² as measured on a representative machine during typical operations and analyzed in accordance with ISO 2631. During the same operations, the weighted root mean square hand-arm vibration was less than 2.5 m/s² when analyzed in accordance with ISO 5349. These acceleration values depend on the roughness of the ground, the speeds at which the combine is operated, the operator's experience, weight and driving habits.

OUO6075,0000AA6-19-17NOV10

- Transmitters shall be installed separately from the vehicle's electronics;
- The antenna must be installed in a professional manner, with a good ground connection between the antenna and the vehicle ground.

Wiring, installation and maximum permissible current supply must be as stated in the installation instructions of the machine manufacturer.

OUO6075,0000AA8-19-17NOV10

Sound Level

The sound level inside the operator's cab ranges from 72.8 to 77.0 dB(A) as measured on several representative machines in accordance with ISO 4254-7:2017. The sound level depends upon the engine speed and load, function settings, field and crop conditions, and the type of header used.

OUO6075,0004BAB-19-16MAY19

Safety Note Regarding the Subsequent Installation of Electrical and Electronic Appliances and/or Components

The machine is equipped with electronic components whose function may be influenced by electromagnetic radiation from other appliances. Such influences may be hazardous, so take the following safety instructions into account:

If electrical and electronic appliances are subsequently installed on the machine and connected to the on board system, the user must verify whether the installation affects the electronics or other components. This applies particularly to:

- Area counter
- Personal Computer
- GPS (Global Positioning System) receiver

In particular, subsequently installed electrical/electronic components must comply with the relevant edition of EMC Directive 89/336/EEC, and be CE marked.

If mobile communication systems (e.g. radio communication, telephone) are to be installed subsequently, the following extra requirements must be met:

- Only devices with an approval complying with the valid national regulation (i.e. BZT approval in Germany) shall be installed;
- The device shall be installed securely;
- Portable or mobile devices may be operated in the vehicle only if connected to a fixed outside antenna;

EU Declaration of Conformity

Deere & Company
Moline, Illinois, U.S.A.

The undersigned hereby declares that:

Machine Type: Combine S700

Model(s): S760; S770; S780; S785; S790 S770HM; S780HM; S785HM; S790HM

fulfill(s) all relevant provisions and essential requirements of the following directives:

DIRECTIVE	NUMBER	CERTIFICATION METHOD
Machinery Directive	2006/42/EC	Self-certification
EMC Directive	2014/30/EU	Self-certification (Annex II)

The product is in conformity with the following standards and/or other normative documents:

EN ISO 14982: 2009

Name and address of the person in the European Community authorized to compile the technical construction file:

John Deere Walldorf GmbH & Co. KG
Customer Support
Impexstraße 3
D-69190 Walldorf
EUConformity@JohnDeere.com

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Place of Declaration: Zweibruecken, Germany

Date of Declaration:

Manufacturing Unit: John Deere GmbH & Co. KG, John Deere
Werk Zweibrücken, Germany

Name: Thomas Fell

Title: Combine Engineering Manager - Region 1 & 2



DXCE01—UN—28APR09
OUO6075.0005234-19-13JUN22

UK Declaration of Conformity

Deere & Company
Moline, Illinois USA

The undersigned hereby declares that:

Machine Type: Combine S700

Model(s): S760; S770; S780; S785; S790 S770HM; S780HM; S785HM; S790HM

fulfill(s) all relevant provisions and essential requirements of the following UK Regulations:

REGULATION	NUMBER	CERTIFICATION METHOD
Machinery Directive	S.I. 2008/1597	Self-certification
EMC Directive	S.I. 2016/1091	Self-certification (Annex II)
RoHS Directive	S.I. 2012/3032	Self-certification

The product is in conformity with the following standards and/or other normative documents:

EN ISO 4254-1:2015

EN ISO 12100:2010

EN ISO 4254-7:2017

EN ISO 14982:2009

Name and address of the person authorized to compile the technical construction file:

John Deere Ltd
Harby Road
Langar
Nottinghamshire
NG13 9HT
United Kingdom
EUConformity@JohnDeere.com

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Place of Declaration: Zweibrücken, Germany

Date of Declaration:

Name: Thomas Fell

Manufacturing Unit: John Deere GmbH & Co. KG, John Deere Werk
Zweibrücken, Germany

Title: Combine Engineering Manager - Region 1 & 2

Ag&Turf Products Importer: John Deere Ltd- Harby Road, Langar, Nottinghamshire, NG13 9HT, United Kingdom

Forestry Products Importer: John Deere Forestry Ltd- Carlisle Airport Industrial Estate, Carlisle, Cumbria, CA6 4NW



Eurasian Economic Union



EAC Marking

TS1738—UN—26APR16

This information applies only to products which bear the EAC conformity mark of the Eurasian Economic Union member states.

Manufacturer:

Deere & Company, Moline, Illinois U.S.A.

Name of the authorized representative in the Eurasian Economic Union:

Limited Liability Company
"John Deere Rus"

Address of the authorized representative:

142050, Russia, Moscow region, Domodedovo district,
Domodedovo, Belye Stolbi micro district, vladenye
"Warehouse 104", Building 2

For technical support, contact your dealer.

Date of manufacture is denoted by the product marking on or near the serial number plate.

DX,EAC-19-27APR16

a long life of productive operation, however actual attainable life depends on a number of factors including the severity of working conditions and completion of recommended maintenance. (See the Service section of this manual.)

Periodically inspect and review the machine in conjunction with your John Deere dealer. The review may result in recommendations for service, component repair, remanufacture or replacement, or, if at the end of life, that the machine be removed from operation. (See separate decommissioning section of this manual for information on disposal and recycling of machine components.)

No machine should be operated if safety-related components are missing or in need of service. All missing or damaged safety-related components, including safety signs, should be repaired or replaced before operating.

DX,MACH,DESIGN,LIFE-19-14SEP15

Fluorinated Greenhouse Gas

Air Conditioner System contains Fluorinated Greenhouse Gas (F-Gas)	
Type of F-Gas:	R-134a
F-Gas Mass (kg):	2.7
CO ₂ Equivalent (tonnes):	3.86
Global Warming Potential (GWP):	1430


NOTE: Cab refrigerator (if equipped) contains approximately 0.040 kg of refrigerant.

OUO6075,00045E8-19-21FEB17

Machine Design Life

This machine is designed and manufactured to provide

Carbon Dioxide Emissions (CO₂)

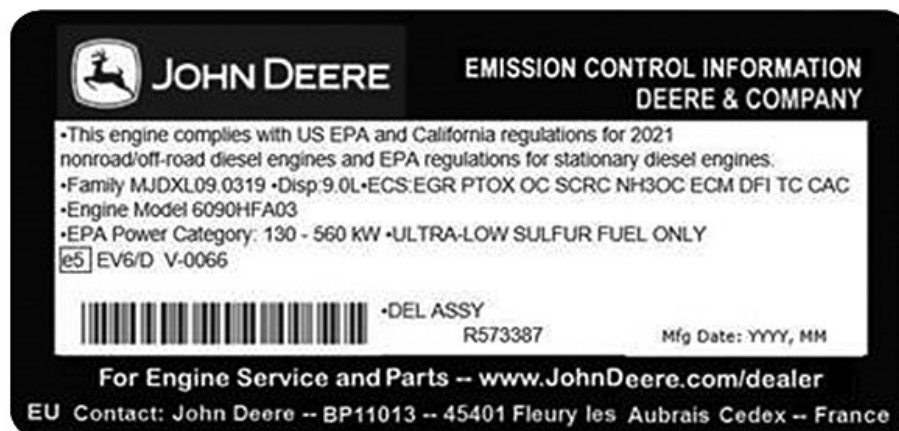

SAMPLE - Engine Emissions Label

RG33429—UN—04FEB21

To identify the carbon dioxide (CO₂) output, locate the engine emissions label. Find the appropriate family on the emissions label and reference the chart.

NOTE: The first letter of the family number is not utilized for family identification on the chart.

Emissions Label Family	CO₂ Result
_JDXL02.9323	952 g/kW-hr
_JDXL02.9327	784 g/kW-hr
_JDXL04.5337	819 g/kW-hr
_JDXL04.5338	682 g/kW-hr
_JDXL04.5304	1004 g/kW-hr
_JDXN04.5174	792 g/kW-hr
_JDXL06.8324	720 g/kW-hr
_JDXL06.8328	683 g/kW-hr
_JDXL06.8336	701 g/kW-hr
_JDXN06.8175	771 g/kW-hr
_JDXL09.0319	646 g/kW-hr
_JDXL09.0325	695 g/kW-hr
_JDXL09.0329	657 g/kW-hr
_JDXL09.0333	650 g/kW-hr
_JDXL13.5326	684 g/kW-hr
_JDXL13.6320	651 g/kW-hr
_JDXL13.5340	632 g/kW-hr
_JDXL18.0341	683 g/kW-hr
F28	870 g/kW-hr
F32	710 g/kW-hr
F33	677 g/kW-hr

This CO₂ measurement results from testing over a fixed test cycle under laboratory conditions a(n) (parent) engine representative of the engine type (engine family) and shall not imply or express any guarantee of the performance of a particular engine.

DX,EMISSIONS.CO2-19-20JUL21

LICENSE AGREEMENT FOR JOHN DEERE IMAGE PROCESSING MODULE SOFTWARE

IMPORTANT -- READ CAREFULLY: THIS LICENSE AGREEMENT (THE "AGREEMENT") IS A LEGAL CONTRACT BETWEEN YOU AND JOHN DEERE SHARED SERVICES, INC., A CORPORATION HAVING A PRINCIPAL ADDRESS OF ONE JOHN DEERE PLACE, MOLINE, IL 61265 ("JOHN DEERE") AND GOVERNS YOUR USE OF THE JOHN DEERE IMAGE PROCESING MODULE (THE "IPM").

BY USING THE IPM, YOU ARE ACCEPTING AND AGREEING TO THE TERMS OF THIS LICENSE AGREEMENT WITH RESPECT TO THE SOFTWARE (THE "SOFTWARE") THAT HAS BEEN PRE-INSTALLED ON THE IPM. YOU AGREE THAT THIS LICENSE AGREEMENT, INCLUDING THE WARRANTY DISCLAIMERS, LIMITATIONS OF LIABILITY, TERMINATION, AND ARBITRATION PROVISIONS BELOW, IS BINDING UPON YOU AS OF THE DATE YOU FIRST USE THE IPM (THE "EFFECTIVE DATE"), AND UPON ANY COMPANY ON WHOSE BEHALF YOU USE THE SOFTWARE AND IPM AS WELL AS THE EMPLOYEES OF ANY SUCH COMPANY (COLLECTIVELY REFERRED TO AS "YOU" IN THIS LICENSE AGREEMENT). IF YOU ARE UNABLE OR UNWILLING TO COMPLY WITH ANY OF THESE TERMS, YOU MUST IMMEDIATELY DISCONTINUE USING THE SOFTWARE, AND CONTACT JOHN DEERE OR YOUR DEALER. THIS CONTRACT IS BETWEEN YOU AND JOHN DEERE ONLY. NO THIRD PARTY – INCLUDING BUT NOT LIMITED TO ANY JOHN DEERE DEALER – HAS THE AUTHORITY TO CHANGE OR SUPPLEMENT THIS LICENSE AGREEMENT. IF YOU WERE ASSIGNED THIS LICENSE AGREEMENT FROM A THIRD PARTY (SUCH AS A JOHN DEERE DEALER), YOU UNDERSTAND AND AGREE THAT NO AGENCY RELATIONSHIP BETWEEN JOHN DEERE AND THAT THIRD PARTY IS IMPLIED OR SUGGESTED BY THE FACT THAT SUCH THIRD PARTY ASSIGNED THIS LICENSE AGREEMENT TO YOU. THIS LICENSE AGREEMENT REPRESENTS THE ENTIRE AGREEMENT CONCERNING THE SOFTWARE BETWEEN YOU AND JOHN DEERE AND IT REPLACES ANY PRIOR PROPOSAL, REPRESENTATION, OR UNDERSTANDING BETWEEN YOU AND JOHN DEERE.

1. Description of Software. Your IPM comes with all Software pre-installed. The Software enables the IPM to receive images, process them, and transmit images and other information to a display on a John Deere machine in support of a software application.

2. Use of Images. The images received, processed and transmitted by the IPM are directed at the field, crop, machine or ancillary machines. The camera devices creating these images may also capture images of the machine operator or bystanders during system

operation. These images may be shown to the operator in the operator station, recorded within the system for troubleshooting, or recorded within the system for improving system performance. By using the IPM, you hereby consent to such collection, storage, and use of these images. To prevent images from being captured by the camera devices, refer to the operator manual for the applicable machine for instruction on how to turn off the system.

3. License. John Deere hereby grants to you, and you accept, a nonexclusive license to use the Software in machine-readable, object code form, only in a country authorized by John Deere and only as otherwise authorized in this Agreement and the applicable provisions of the applicable machine operators' manual, which you agree to review carefully prior to using the Software. The Software may be used only on the IPM on which it was initially installed. You agree that you will not assign, sublicense, transfer, pledge, lease, rent, or share your rights under this Agreement, except that you may permanently transfer all of your rights under this Agreement in connection with the sale of the IPM on which the Software covered by this Agreement is installed to a new owner for use solely in a country authorized by John Deere. If you sell or otherwise transfer the ownership of the IPM, you agree that you will require such transferee to accept terms no less restrictive than those in this Agreement. In addition to the foregoing, you agree that you will not obtain or attempt to obtain the Software using false or untrue information or without paying the appropriate fees and charges, nor will you knowingly permit others to do so, and you agree to pay any license fees and charges that would otherwise have been due. No other use of the Software is permitted by this Agreement except as set forth in this Paragraph 3.

4. John Deere's Rights. You acknowledge and agree that the Software is proprietary to John Deere, or its licensors, and is protected under copyright law. You further acknowledge and agree that all right, title, and interest in and to the Software, including associated intellectual property rights, are and shall remain with John Deere and its licensors. This Agreement does not convey to you any title or interest in or to the Software, but only a limited right of use revocable in accordance with the terms of this Agreement. You agree that you will not: (a) use the IPM with any equipment, products or services other than those that John Deere, in its specifications, bulletins or brochures, has indicated are compatible with the IPM; (b) use the IPM outside of the countries that John Deere has specifically authorized; (c) translate, reverse engineer, decompile, disassemble, or modify the Software, or otherwise attempt to discover the source code of the Software, or attempt to defeat unlawfully or circumvent unlawfully any security measures, any copyright protection and application enabling mechanisms therein; (c) copy or reproduce the Software; or (d) remove or obliterate any copyright, trademark or other proprietary rights notices from the Software, except as expressly permitted in writing by

John Deere or its suppliers or expressly permitted under applicable law notwithstanding these restrictions. You also agree not to permit any third party acting under your control to do any of the foregoing.

5. License Fees. In consideration of the licenses granted under this Agreement, you agree to pay all applicable license fees. Such fees will be paid via a John Deere-approved payment method. All reasonable costs and expenses, including but not limited to attorneys' fees, court costs and service charges incurred by John Deere in collecting payment will be an expense of and charged to you. John Deere may change payment terms at any time. If you become delinquent in the payment of any sum due, John Deere will not be obligated to continue performance under this Agreement. If you purchased or received this Agreement from a third party (such as a John Deere dealer), you are responsible to pay any license fees due under this Agreement to the extent the third party has not paid, or does not pay, John Deere, regardless of whether you have paid the third party for the assignment of this Agreement. Should any taxes and/or penalties become due as a result of your submission of false or inaccurate information in conjunction with the execution of this Agreement or your use of the Software, you agree that you will be responsible for payment of any such taxes or penalties or for reimbursement of such taxes or penalties, in case they were already incurred by John Deere or any of John Deere's affiliates or suppliers. John Deere reserves the right to refer your account to a third party for collection in the event of an ongoing default in payment.

6. Limited Warranty. John Deere warrants, for your benefit alone and not for the benefit of any other party, that during the "**Warranty Period**" defined below, the Software will operate substantially in accordance with the applicable functional specifications ("**Specifications**") set forth in the Receiver documentation. **JOHN DEERE DOES NOT WARRANT THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR FREE OR THAT IT WILL MEET YOUR NEEDS.** Your exclusive remedy and the sole obligation of John Deere and (as applicable) its service partners in the event of any warranty claim or any other contract deficiency shall be for John Deere or (as applicable) its service partners to use commercially reasonable efforts to correct the deficiency or, if correction cannot be accomplished in thirty (30) days, to refund an equitable part of any license fees for the Software determined in reference to your prior use of the Software and the impact of the deficiency. You acknowledge that this warranty does not apply where a deficiency in the operation of the Software is due to circumstances beyond John Deere's reasonable control and/or is caused by an act or omission of a third party, including, but not limited to, equipment failure, acts of God, strikes, or other similar causes. The "**Warranty Period**" is one (1) year from the date you take delivery of the IPM.

7. DISCLAIMER OF WARRANTIES. YOU HEREBY AGREE THAT THE LIMITED WARRANTY PROVIDED ABOVE (THE "**LIMITED WARRANTY**") CONSTITUTES YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY PROBLEM WHATSOEVER WITH THE SOFTWARE. EXCEPT AS PROVIDED IN THE LIMITED WARRANTY, THE SOFTWARE IS LICENSED "AS IS" AND "AS AVAILABLE" AND JOHN DEERE, ITS AFFILIATES AND THIRD PARTY SUPPLIERS EXPRESSLY DISCLAIM AND YOU EXPRESSLY WAIVE, RELEASE AND RENOUNCE ALL WARRANTIES ARISING BY LAW OR OTHERWISE WITH RESPECT TO THE SOFTWARE, INCLUDING, BUT NOT LIMITED TO: ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; ANY IMPLIED WARRANTY ARISING FROM COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE; ANY WARRANTY OF TITLE OR NON-INFRINGEMENT; AND, ANY OTHER WARRANTY ARISING UNDER ANY THEORY OF LAW, INCLUDING TORT, NEGLIGENCE, STRICT LIABILITY, CONTRACT OR OTHER LEGAL OR EQUITABLE THEORY. NO REPRESENTATION OR OTHER AFFIRMATION OF FACT INCLUDING, BUT NOT LIMITED TO, STATEMENTS REGARDING CAPACITY OR SUITABILITY FOR USE, SHALL BE DEEMED TO BE A WARRANTY BY JOHN DEERE OR ANY OF ITS AFFILIATES OR THIRD-PARTY SUPPLIERS.

8. LIMITATION OF LIABILITY. EXCEPT AS SET FORTH IN THE LIMITED WARRANTY, UNDER NO CIRCUMSTANCES SHALL JOHN DEERE, ITS AFFILIATES OR ITS THIRD PARTY SUPPLIERS BE LIABLE TO YOU OR TO ANY THIRD PARTIES FOR DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, INCLUDING ANY LOSS OR DAMAGE CAUSED BY THE SOFTWARE; ANY PARTIAL OR TOTAL FAILURE OF THE SOFTWARE; PERFORMANCE, NONPERFORMANCE OR DELAYS IN CONNECTION WITH ANY INSTALLATION, MAINTENANCE, WARRANTY OR REPAIRS OF THE SOFTWARE, DAMAGES FOR CROP LOSS, DAMAGE TO LAND, DAMAGE TO MACHINES, LOST PROFITS, LOSS OF BUSINESS OR LOSS OF GOODWILL, LOSS OF USE OF EQUIPMENT OR SERVICES OR DAMAGES TO BUSINESS OR REPUTATION ARISING FROM THE PERFORMANCE OR NON-PERFORMANCE OF ANY ASPECT OF THIS AGREEMENT, WHETHER IN CONTRACT, TORT OR OTHERWISE, AND WHETHER OR NOT JOHN DEERE, ITS AFFILIATES OR ITS THIRD PARTY SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL JOHN DEERE'S CUMULATIVE LIABILITY TO YOU OR TO ANY OTHER PARTY FOR ANY LOSSES OR DAMAGES RESULTING FROM ANY CLAIMS, LAWSUITS, DEMANDS, OR ACTIONS ARISING FROM OR RELATING TO USE OF THE SOFTWARE EXCEED YOUR TOTAL PAYMENT FOR THE IPM AND THE LICENSE OF THE SOFTWARE.

9. Software Maintenance. John Deere may, at its sole option, offer you maintenance of the Software, even though the Warranty Period has expired. Such maintenance may include providing modifications, corrections or enhancements ("**Upgrades**") to the Software and/or the applicable operators' manuals. John Deere reserves the right, in its sole discretion, to charge you for maintenance (except in cases where corrections are provided under the Limited Warranty). Your acceptance of this Agreement constitutes your agreement that any Upgrades will be deemed included in the Software as defined in this Agreement and that they shall be governed by the terms and conditions applicable to the Software under this Agreement.

10. Term and Termination.

a. Term. This Agreement will commence as of the Effective Date and expire upon the earlier of i) the useful life of the IPM or ii) the date John Deere terminates this Agreement in accordance with the terms of this Paragraph 10. This Agreement does not automatically renew.

b. Termination. John Deere may terminate the license granted under this Agreement upon written notice of termination provided to you if you violate any material term of this Agreement pertaining to your use of the Software or John Deere's rights, including, without limitation, the provisions of Sections 3 and 4 above.

11. Compliance with Law. You agree that you will use the Software in accordance with United States law and the laws of the country in which you are located, as applicable, including foreign trade control laws and regulations. The Software may be subject to export and other foreign trade controls restricting re-sales and/or transfers to other countries and parties. By accepting the terms of this Agreement, you acknowledge that you understand that the Software may be so controlled, including, but not limited to, by the Export Administration Regulations and/or the foreign trade control regulations of the Treasury Department of the United States. The Software remains subject to applicable U.S. laws.

12. Indemnification. You agree to defend, indemnify and hold John Deere, its affiliates and third party supplier, and their, officers, directors, employees, agents and representatives (each an "**Indemnified Party**"), harmless from and against all claims, demands proceedings, injuries, liabilities, losses, or costs and expenses (including reasonable legal fees) brought by any third party against any such persons arising from or in connection with your misuse of the IPM or the Software or your breach of any term of this Agreement.

13. Trademark. No right, license, or interest to any trademark is granted hereunder, and you agree that no such right, license, or interest shall be asserted by you with respect to any John Deere trademarks.

14. Costs of Litigation. If any claim or action is brought by either party to this Agreement against the other party regarding the subject matter hereof, the prevailing party

shall be entitled to recover, in addition to any other relief granted, reasonable attorney, arbitrators, and dispute resolution center administrative fees and expenses of litigation.

15. Severability and Waiver Should any term of this Agreement be declared void or unenforceable by any court of competent jurisdiction, such declaration shall have no effect on the remaining terms hereof. The failure of either party to enforce any rights granted hereunder or to take action against the other party in the event of any breach hereunder shall not be deemed a waiver by that party as to subsequent enforcement of rights of subsequent actions in the event of future breaches.

16. Language Clause. Unless the laws of the location in which you reside require otherwise, the parties hereby acknowledge that they have required this Agreement, and all other documents relating hereto, be drawn up in the English language only. There may be a translated version of this License Agreement. If there is an inconsistency or contradiction between the translated version and the English version of this Agreement, the English version of this Agreement shall control unless the laws of the location in which you reside require that a different version control.

17. Assignment by John Deere. John Deere may assign this Agreement without your prior consent to any company or entity affiliated with John Deere or by an assignment associated with a corporate restructuring, merger or acquisition.

18. Governing Law and Forum. This Agreement will be governed by and construed in accordance with the substantive laws in force in the State of Illinois, U.S.A. The respective courts of Rock Island County, Illinois, have exclusive jurisdiction over all disputes relating to this Agreement. The rights and obligations of the parties under this Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods ("CISG") and the parties hereto expressly exclude the applicability of the CISG to this License Agreement.

19. Arbitration. IF YOU RESIDE IN A JURISDICTION WHEREIN THE ENFORCEABILITY OF THE TERMS OF SECTION 18 IS DEPENDENT UPON THE PARTIES AGREEING TO SUBMIT TO ARBITRATION, THEN ANY CONTROVERSY OR CLAIM ARISING OUT OF OR RELATING TO THIS AGREEMENT SHALL BE DETERMINED BY ARBITRATION IN ACCORDANCE WITH THE INTERNATIONAL ARBITRATION RULES OF THE INTERNATIONAL CENTRE FOR DISPUTE RESOLUTION ("**ICDR**") IN EFFECT AT THE TIME OF ITS INITIATION. THE ARBITRATION SHALL BE HELD BEFORE ONLY ONE ARBITRATOR APPOINTED BY THE ICDR. THE PLACE OF ARBITRATION SHALL BE CHICAGO, ILLINOIS, USA AND THE LANGUAGE OF THE ARBITRATION SHALL BE ENGLISH.

20. Representations of Licensee. BY ACCEPTING THIS AGREEMENT, YOU: (A) ACKNOWLEDGE THAT YOU HAVE READ AND UNDERSTAND THIS AGREEMENT; (B) REPRESENT THAT YOU HAVE THE AUTHORITY TO ENTER INTO THIS AGREEMENT; (C) AGREE THAT THIS AGREEMENT IS ENFORCEABLE AGAINST YOU AND ANY LEGAL ENTITY THAT OBTAINED THE SOFTWARE AND ON WHOSE BEHALF IT IS USED; (D) AGREE TO PERFORM THE OBLIGATIONS OF THIS AGREEMENT; AND (E) REPRESENT AND AGREE THAT ALL INFORMATION PROVIDED BY YOU IS TRUE AND ACCURATE TO THE BEST OF YOUR KNOWLEDGE.

21. Notices. All notices to John Deere shall be sent by certified or registered mail to John Deere Shared Services, Inc., One John Deere Place, Moline, IL 61265 U.S.A. In addition, a copy of the notice shall be sent to John Deere Intelligent Solutions Group, ATTN: John Deere Image Processing Module, 9505 Northpark Drive, Urbandale, Iowa 50131, U.S.A. All notices to John Deere shall be effective upon receipt. All notices required to be given to you shall, in John Deere's sole discretion, either be sent via certified or registered mail to the address given to John Deere, a John Deere dealer, or another distribution partner of John Deere in connection with your purchase of the IPM. Either method of notification used by John Deere shall be effective upon dispatch. You agree to notify John Deere of any change in your address in the manner set forth above.

22. Third-Party Software Notifications and Licenses. The copyrights for certain portions of the Software may be owned by other third parties ("Third-Party Software") and used and distributed under license. The acknowledgements, notices, licenses and corresponding source code of the Third-Party Software are available in an enclosed CD-ROM, or via the instructions provided in the Third Party Software Notifications and Licenses section of the operators manual. The Third-Party Software is licensed according to the applicable Third-Party Software license notwithstanding anything to the contrary in this License Agreement.

OUC6075,0004F8F-19-02DEC20

Third-Party Software Notifications and Licenses for Image Processing Module

The copyrights for certain portions of the Software may be owned or licensed by other third parties ("Third-Party Software") and used and distributed under license. The Third-Party Notices include the acknowledgements, notices, and licenses for the Third-Party Software. The Third-Party Software is licensed according to the applicable Third-Party Software license notwithstanding anything to the contrary in the applicable Software End-User License Agreement. The Third-Party Software contains copyrighted software that is licensed under the GPL/LGPL or other copyleft licenses. Copies of those licenses are included in the Third-Party Notices.

Third-Party Notices are available electronically by following these steps:

Connect a mobile device using the Mobile to Machine feature of the MTG 4G LTE. Directions for the using the Mobile to Machine feature can be found in the MTG 4G LTE Operator's Manual.

Find the current Image Processing Module IP address which is viewable by accessing the Diagnostic Addresses on your display. Navigate to the GQM Diagnostic Addresses and find the IP address text located in Diagnostic Address 8.

Open a web browser on your connected mobile device and navigate to the IP address shown in Diagnostic Address 8.


You may obtain the complete Corresponding Source Code from us for a period of three years after our last shipment of the Software by sending a request letter to:

Deere Open Source Compliance Team
P.O. Box 1202
Moline, IL 61266-1202 USA

Please include "source for John Deere Image Processing Module GQM" and the version number of the software in the request letter. This offer is valid to anyone in receipt of this information.

OUC6075,0004F93-19-02DEC20

Unified Inch Bolt and Screw Torque Values

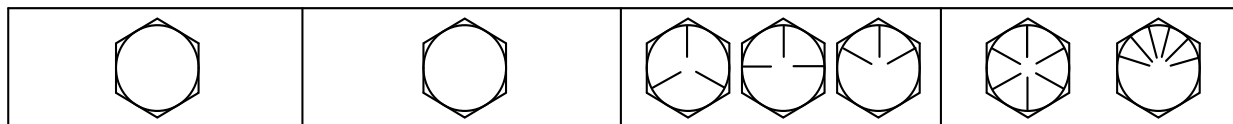

TS1671—UN—01MAY03


Specifications

Bolt or Screw Size	SAE Grade 1 ^a				SAE Grade 2 ^b				SAE Grade 5, 5.1 or 5.2				SAE Grade 8 or 8.2			
	Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
1/4	3.1	27.3	3.2	28.4	5.1	45.5	5.3	47.3	7.9	70.2	8.3	73.1	11.2	99.2	11.6	103
													N·m	lb·ft	N·m	lb·ft
5/16	6.1	54.1	6.5	57.7	10.2	90.2	10.9	96.2	15.7	139	16.8	149	22.2	16.4	23.7	17.5
									N·m	lb·ft	N·m	lb·ft				
3/8	10.5	93.6	11.5	102	17.6	156	19.2	170	27.3	20.1	29.7	21.9	38.5	28.4	41.9	30.9
					N·m	lb·ft	N·m	lb·ft								
7/16	16.7	148	18.4	163	27.8	20.5	30.6	22.6	43	31.7	47.3	34.9	60.6	44.7	66.8	49.3
	N·m	lb·ft	N·m	lb·ft												
1/2	25.9	19.1	28.2	20.8	43.1	31.8	47	34.7	66.6	49.1	72.8	53.7	94	69.3	103	75.8
9/16	36.7	27.1	40.5	29.9	61.1	45.1	67.5	49.8	94.6	69.8	104	77	134	98.5	148	109
5/8	51	37.6	55.9	41.2	85	62.7	93.1	68.7	131	96.9	144	106	186	137	203	150
3/4	89.5	66	98	72.3	149	110	164	121	230	170	252	186	325	240	357	263
7/8	144	106	157	116	144	106	157	116	370	273	405	299	522	385	572	422
1	216	159	236	174	216	159	236	174	556	410	609	449	785	579	860	634
1-1/8	305	225	335	247	305	225	335	247	685	505	751	554	1110	819	1218	898
1-1/4	427	315	469	346	427	315	469	346	957	706	1051	775	1552	1145	1703	1256
1-3/8	564	416	618	456	564	416	618	456	1264	932	1386	1022	2050	1512	2248	1658
1-1/2	743	548	815	601	743	548	815	601	1665	1228	1826	1347	2699	1991	2962	2185

The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.

Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.

- Make sure that fastener threads are clean.
- Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image.
- Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.
- Properly start thread engagement.

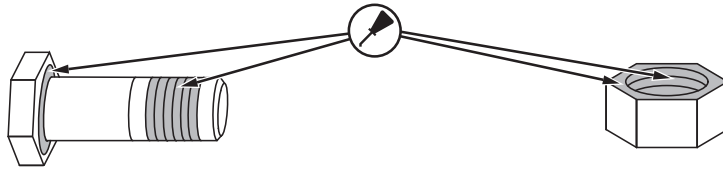

TS1741—UN—22MAY18

^aGrade 1 applies for hex cap screws over 6 in (152 mm) long, and for all other types of bolts and screws of any length.

^bGrade 2 applies for hex cap screws (not hex bolts) up to 6 in (152 mm) long.

^cHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^dHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ1-19-09MAY22

Metric Bolt and Screw Torque Values

	4.8	8.8	9.8	10.9	12.9
	4.8	8.8	9.8	10.9	12.9

TS1742—UN—31MAY18


Specifications

Bolt or Screw Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
M6	3.6	31.9	3.9	34.5	6.7	59.3	7.3	64.6	9.8	86.7	10.8	95.6	11.5	102	12.6	112
									N·m	lb·ft	N·m	lb·ft	N·m	lb·ft	N·m	lb·ft
M8	8.6	76.1	9.4	83.2	16.2	143	17.6	156	23.8	17.6	25.9	19.1	27.8	20.5	30.3	22.3
			N·m	lb·ft	N·m	lb·ft	N·m	lb·ft								
M10	16.9	150	18.4	13.6	31.9	23.5	34.7	25.6	46.8	34.5	51	37.6	55	40.6	60	44.3
	N·m	lb·ft														
M12	—	—	—	—	55	40.6	61	45	81	59.7	89	65.6	95	70.1	105	77.4
M14	—	—	—	—	87	64.2	96	70.8	128	94.4	141	104	150	111	165	122
M16	—	—	—	—	135	99.6	149	110	198	146	219	162	232	171	257	190
M18	—	—	—	—	193	142	214	158	275	203	304	224	322	245	356	263
M20	—	—	—	—	272	201	301	222	387	285	428	316	453	334	501	370
M22	—	—	—	—	365	263	405	299	520	384	576	425	608	448	674	497
M24	—	—	—	—	468	345	518	382	666	491	738	544	780	575	864	637
M27	—	—	—	—	683	504	758	559	973	718	1080	797	1139	840	1263	932
M30	—	—	—	—	932	687	1029	759	1327	979	1466	1081	1553	1145	1715	1265
M33	—	—	—	—	1258	928	1398	1031	1788	1319	1986	1465	2092	1543	2324	1714
M36	—	—	—	—	1617	1193	1789	1319	2303	1699	2548	1879	2695	1988	2982	2199

The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.

Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.

- Make sure that fastener threads are clean.
- Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image.
- Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.
- Properly start thread engagement.

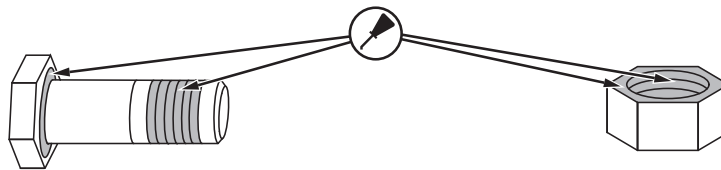

TS1741—UN—22MAY18


^aHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^bHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ2-19-09MAY22

Machine Identification Numbers

Interpreting Machine Serial Number

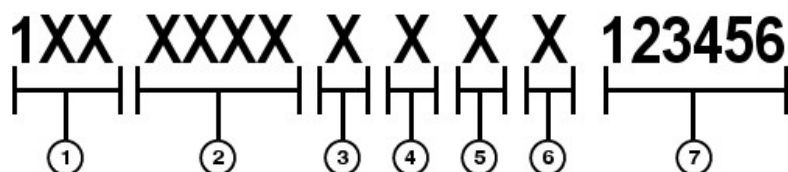

H105725—UN—22AUG12

1	Manufacturer Code	Harvesting Manufacturing Facilities	
		CQ - John Deere Horizontina H0 - John Deere Harvester Works EK - John Deere Orenburg KM - Maschinenfabrik Kemper GmbH & Co. KG PY - John Deere India Pvt. Ltd	SA - SABO Maschinenfabrik GmbH YC - John Deere (Jiamusi) Agricultural Machinery Co., Ltd. YH - John Deere (Harbin) Agriculture Machinery Co., Ltd Z0 - John Deere Werke Zweibrücken
2	Machine Model Identifier		
3	Model Identifier Suffix Machine Configuration Code Additional Machine Information	Example: N, T, W, etc.	
4	Check Letter	Example: A, B, C, D, etc.	
5	Calendar Year of Manufacture	Refer to Year of Manufacture Code table	
6	Additional Information		
7	Manufacturing Serial Number	Example: 000001, 000127, etc.	

Year of Manufacture Code							
Year	Code	Year	Code	Year	Code	Year	Code
2008	8	2018	J	2028	W	2038	8
2009	9	2019	K	2029	X	2039	9
2010	A	2020	L	2030	Y	2040	A
2011	B	2021	M	2031	1	2041	B
2012	C	2022	N	2032	2	2042	C
2013	D	2023	P	2033	3	2043	D
2014	E	2024	R	2034	4	2044	E
2015	F	2025	S	2035	5	2045	F
2016	G	2026	T	2036	6	2046	G
2017	H	2027	V	2037	7	2047	H


OOU6075,0004F74-19-22OCT20

Identification Numbers

Your machine has these various identification plates. The letters and numbers stamped on these plates identify a component or assembly. ALL of these characters are needed when ordering parts or identifying a machine or component for any John Deere product support program. Also, they are needed for law enforcement to trace your machine if it is ever stolen. ACCURATELY record these characters in the spaces provided in each of the following photographs.

OOU6075,0000BE0-19-04MAY11

Combine (Product Identification) Type Plate

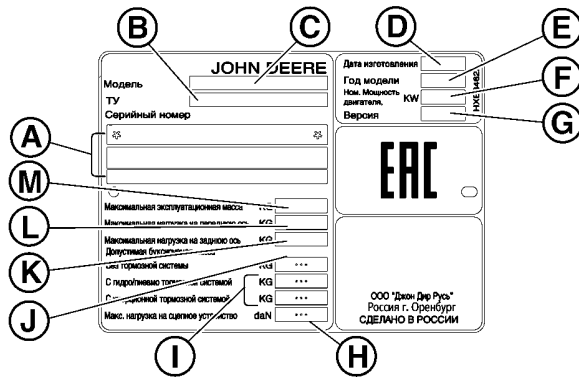


ZX418616—UN—12OCT20

- A**—Product Identification Number
B—Type Approval Number (in certain countries only)
C—Model
D—Manufacturing Date (month/year)
E—Model Year
F—Engine Power
G—Version (in certain countries only)
H—Permissible Drawbar Load
I—Permissible Trailer Load
J—Permissible Axle Load 3
K—Permissible Axle Load 2
L—Permissible Axle Load 1
M—Permissible Total Weight

ouo6075,1656530876845-19-29JUN22

Eurasian Economic Union Compliance Label Location

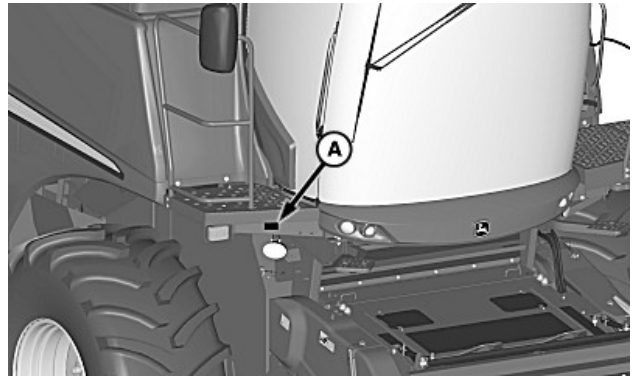

H111494—UN—30JUN14


A—Compliance Label

NOTE: This information applies only to products which bear the EAC conformity mark of the Eurasian Economic Union member states.

Compliance label (A) is located on right-hand side of cab handrail landing.

OUO6075,00041B8-19-12NOV15

Machine Identification Plate Location

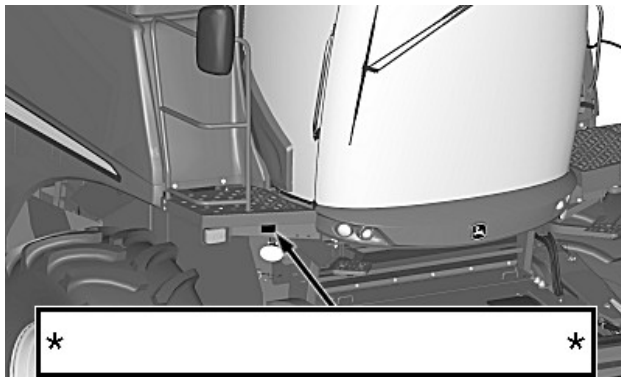

H97568—UN—10AUG10

Located on right-hand side of cab handrail landing.

OUO6075,0000BE1-19-04MAY11

Interpreting Engine Serial Number



H112201—UN—06NOV14

Sample Engine Serial Number Plate

Each engine has a 13 digit John Deere engine serial number identifying the producing factory, engine model designation, and a 6 digit sequential number.

Engine Serial Number (A)

9.0 L Example (RG6090U123456)

13.5 L Example (RG6135U123456)

RG Factory Code Producing Engine
 • RG Waterloo, Iowa, USA

6090 Number of Cylinders and Total Displacement
 • 6090 6 Cylinders, 9.0 liters

6135 Number of Cylinders and Total Displacement
 • 6135 6 Cylinders, 13.5 liters

U Emission Certification

9.0 L Example (RG6090U123456)
13.5 L Example (RG6135U123456)

- B Non-Certified
- C Tier 1/Stage 1
- D Tier 2/Stage II
- L Tier 3/Stage III A
- R Interim Tier 4/Stage III B
- U or V Final Tier 4/Stage IV and Stage V

123456 Engine Serial Number

Engine Model Number (B)

9.0 L Example (6090HFC09)
13.5 L Example (6135HFC09)

6090 Number of Cylinders and Total Displacement
 • 6090 6 Cylinders, 9.0 liters

6135 Number of Cylinders and Total Displacement
 • 6135 6 Cylinders, 13.5 liters

- H Engine Aspiration
- D Naturally aspirated
 - T Turbocharged
 - A Turbocharged and aftercooled, air-to-coolant
 - H Turbocharged and aftercooled, air-to-air
 - S Turbocharged and aftercooled, air-to-sea water


- F User Type
- F OEM (John Deere Power Systems)
 - XX Other letters are used to identify John Deere Equipment manufacturing locations

- C Industrial
- C Industrial
 - G Gen-Set

- 09 Engine Configuration
- 09 PSS (Series Turbochargers, DOC/DPF and SCR)
 - 94 PVX (Single VGT Turbocharger)
 - 95 PSX (Series Turbochargers and Aftertreatment)

OOU6075.0004A29-19-25SEP18

Engine Serial Number (Tier 2/Stage II)

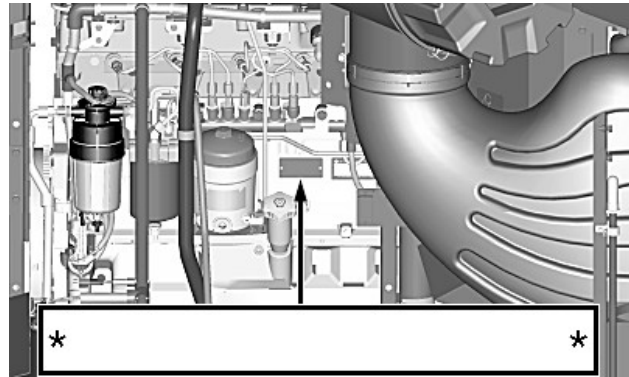

H99413—UN—14DEC10

Style A



H99437—UN—14DEC10


Style B

Style A: located on rear side of engine.

Style B: located on front side of engine above starter.


OOU6075.0004A4-19-14NOV16

Engine Serial Number (Final Tier 4/Stage V)

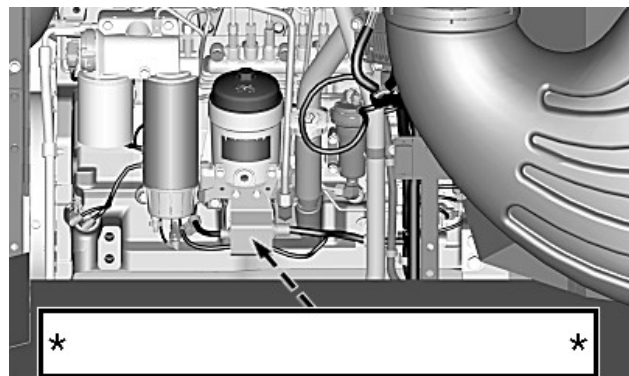

H99414—UN—14DEC10

Style A

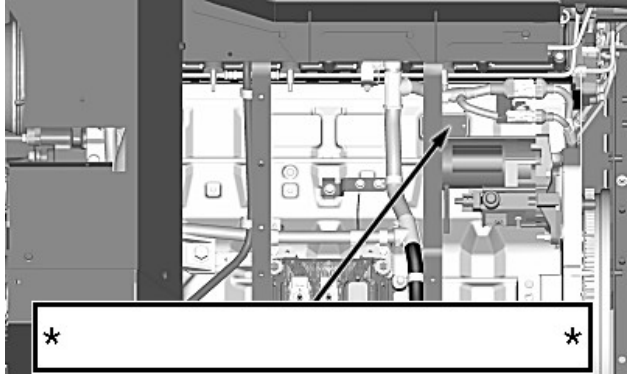

H99415—UN—14DEC10


Style B

Style A: located on the rear side of the engine.

Style B: located on the front side of the engine above the starter.

OUC6075,000482A-19-14NOV17

Cab Serial Number

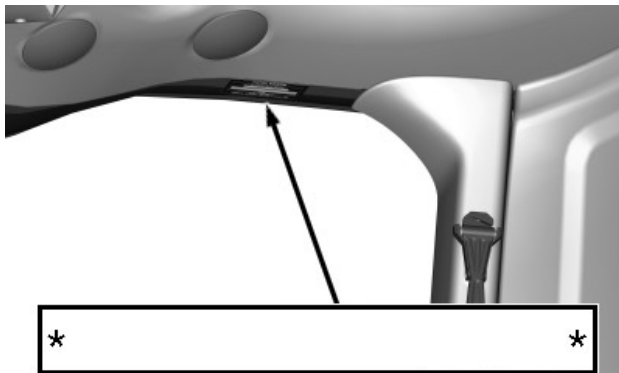


H121251—UN—24APR17

Located in the upper rear right-hand corner of the cab.

OUC6075,0004716-19-13APR17

Hydrostatic Drive Unit Pump

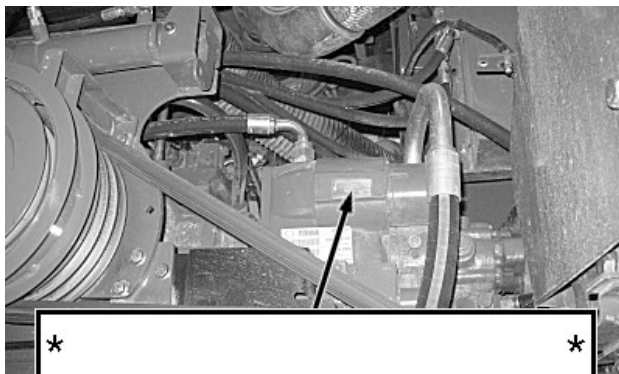


H99421—UN—14DEC10

Mechanical Shift and Push Button Shift Machines Shown

Located on side of hydrostatic drive pump.

OUC6075,0001059-19-27FEB12

Hydrostatic Drive Unit Motor

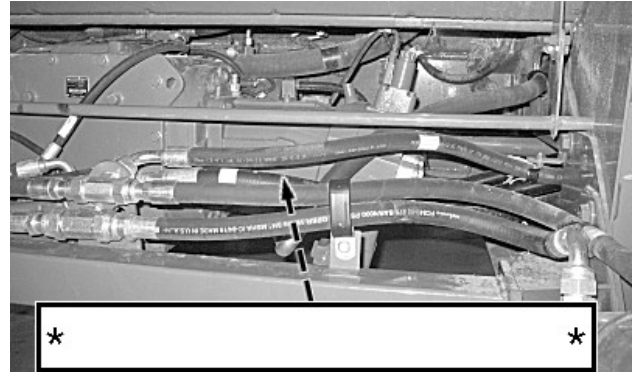

H99424—UN—14DEC10


ProDrive Machine Shown

Mechanical Shift and Push Button Shift Machines:
located on top side of hydrostatic drive motor.

ProDrive Machines: located on bottom side of
hydrostatic drive motor.

OUC6075,0001058-19-27FEB12

Two Speed Four-Wheel Drive Motor

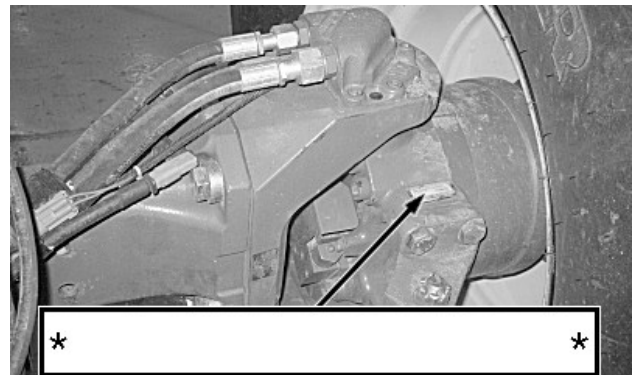


H99419—UN—14DEC10

Located on top side of four-wheel drive motor.

OUC6075,0000AF4-19-14APR11

Engine Gear Case

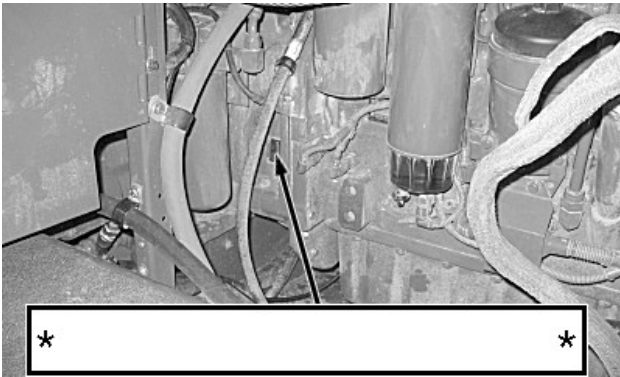

H99418—UN—14DEC10


Located on the rear side of the engine gear case.

OUO6075,00046E7-19-28MAR17

ProDrive Machines: located on front of transmission

OUO6075,0001056-19-27FEB12

Feeder House Reverser

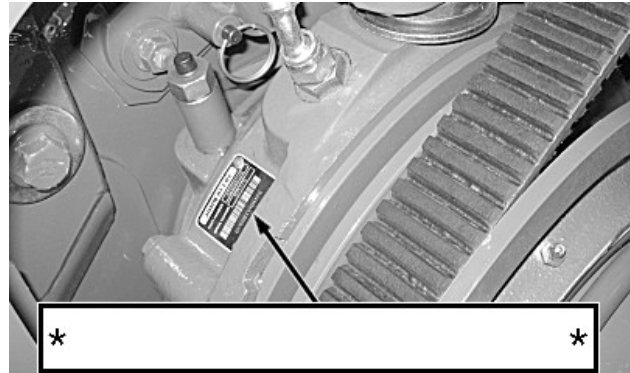


H99432—UN—14DEC10

Located on top side of feeder house reverser.

OUO6075,0000AF9-19-14DEC10

Rotor Drive Gear Case

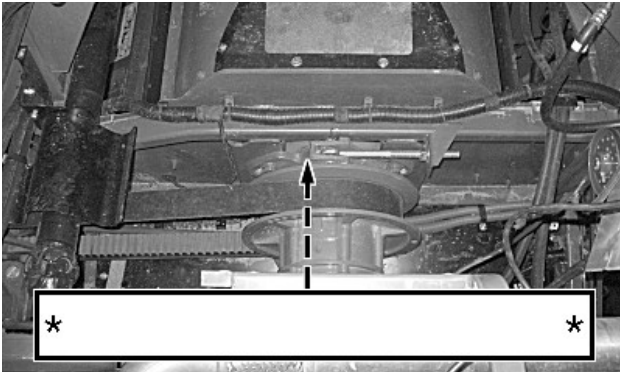

H99430—UN—14DEC10

Located on the left-hand side of the rotor drive gear case.

OUO6075,00046E8-19-28MAR17

Multi-Speed Feeder House Gear Case (If Equipped)




H99431—UN—14DEC10

Located on the rear side of the multi-speed feeder house gear case.

OUO6075,00046E9-19-28MAR17

Transmission

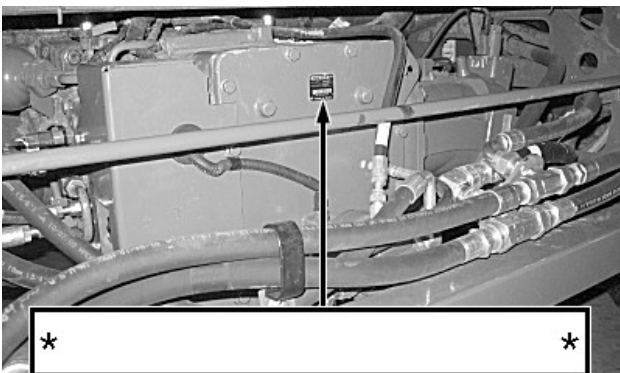


H99426—UN—14DEC10

ProDrive Transmission Shown

Mechanical Shift and Push Button Shift Machines:
located on side of transmission

Chopper (If Equipped)

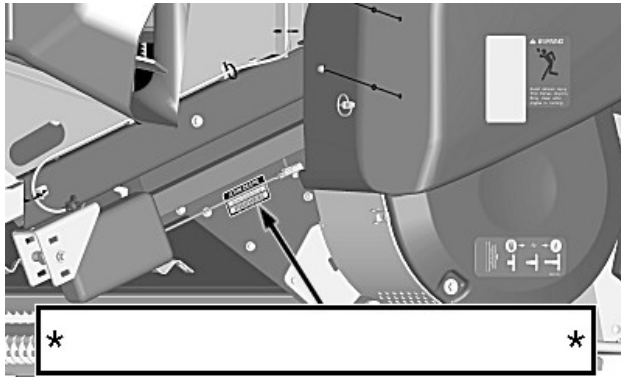


H101339—UN—04MAY11

Located on left-hand side of chopper.

OUC6075,0000C27-19-04MAY11

Vane Tailboard (Deluxe, Intermediate and Premium Residue)

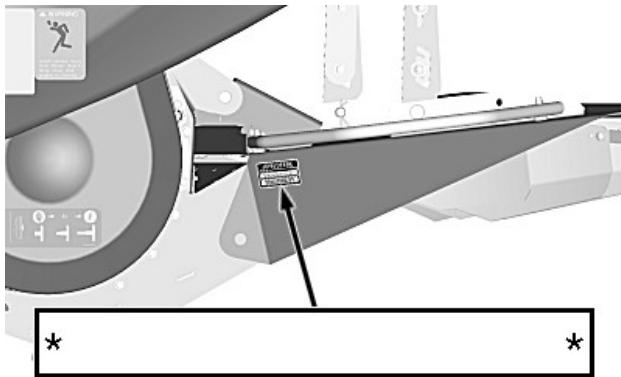


H101340—UN—04MAY11

Located on left-hand side of vane tailboard.

OUC6075,0001820-19-28MAY14

Advanced PowerCast™ Tailboard (Intermediate and Premium Residue)

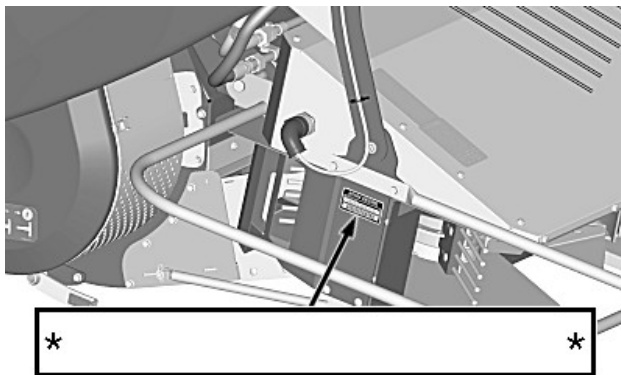


H101342—UN—04MAY11

Located on left-hand side of Advanced PowerCast™ tailboard.

OUC6075,0001821-19-28MAY14

PowerCast Tailboard (Deluxe Residue)

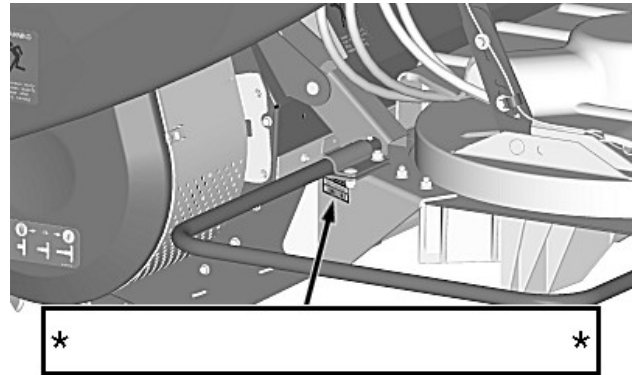


H101343—UN—04MAY11

Located on left-hand side of PowerCast tailboard.

OUC6075,0000C2A-19-04MAY11

Spreader (Deluxe Residue)

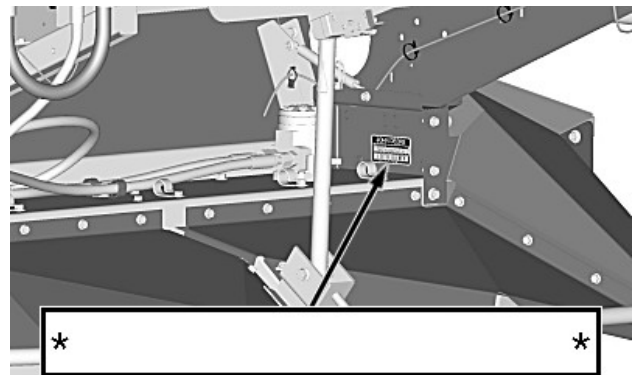

H101344—UN—04MAY11

Located on right-hand inside of spreader.

OUC6075,0000C2B-19-04MAY11

Keep Proof of Ownership



TS1680—UN—09DEC03


6. Notify your John Deere dealer of any losses.

DX, SECURE2-19-18NOV03

1. Maintain in a secure location an up-to-date inventory of all product and component serial numbers.
2. Regularly verify that identification plates have not been removed. Report any evidence of tampering to law enforcement agencies and order duplicate plates.
3. Other steps you can take:
 - Mark your machine with your own numbering system
 - Take color photographs from several angles of each machine

DX, SECURE1-19-18NOV03

Keep Machines Secure

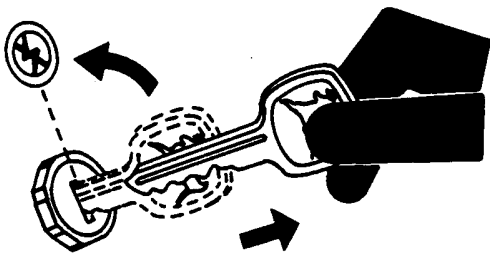

TS230—UN—24MAY89

1. Install vandal-proof devices.
2. When machine is in storage:
 - Lower equipment to the ground
 - Set wheels to widest position to make loading more difficult
 - Remove any keys and batteries
3. When parking indoors, put large equipment in front of exits and lock your storage buildings.
4. When parking outdoors, store in a well-lighted and fenced area.
5. Make note of suspicious activity and report any thefts immediately to law enforcement agencies.

Index

A

Access calibrations and procedures.....	45-K-1	Air compressor.....	45-G-6
Access Combine Advisor™	45-L-1	Maintenance	
Access controls setup.....	45-A-1	Drain water from reservoir	130-A-5
Access door work lights		Replacing	
Replacing.....	80-19	Belt (Final Tier 4/Stage V)	
Access engine	45-G-1	9.0 L	130-Q-11
Access folding.....	45-E-1	13.5 L.....	130-R-11
Access grain handling.....	45-D-1	Belt (Tier 2/Stage II)	
Access harvest settings.....	45-F-1	9.0 L	130-Q-1
Access header	45-C-1	13.5 L.....	130-R-1
Access HVAC	45-H-1	Reservoir	130-P-13
Access lights	45-J-1	Air Compressor	
Access residue management	45-B-1	Wand	
Access transmission.....	45-I-1	Hose	130-P-13
Accessory belt		Air compressor status.....	45-G-7
Replacing (Tier 2/Stage II)		Air compressor system.....	130-P-13
9.0 L	130-Q-1	Air conditioner	
13.5 L	130-R-1	Clean drain hose	130-A-6
Accumulator		Troubleshooting.....	135-18
Pressure	130-2	Air conditioner belt (Final Tier 4/Stage V)	
Accumulator decal	110-1	Replacing	
Active concave isolation (aci) air removal	45-K-23	9.0 L	130-Q-5
Active concave isolation (aci) air removal calibration		13.5 L.....	130-R-7
procedure.....	45-K-23	Air conditioning.....	45-H-3
Active concave isolation (aci) leveling	45-K-24	Air filter	
Active concave isolation (aci) leveling calibration		Removing	
procedure.....	45-K-24	Engine debris management (Final Tier 4/Stage	
Active Terrain Adjustment active adjustments	45-L-5	V).....	130-P-15
Active Terrain Adjustment History	45-L-4	Air flow mode	45-H-3
Active Terrain Adjustments completed adjustments	45-L-6	Air scoop	
Active Terrain Adjustment™ settings.....	45-L-13	Extended field position.....	30-6
Active Terrain Adjustment™ status	45-L-16	Positions	30-4
ActiveYield™	45-K-12	Standard field position	30-5
Removing cross auger covers	75-4	Transport position	30-7
Sensor locations	75-4	Air system	
ActiveYield™		Do not modify	130-P-2
advanced settings	45-K-13	Alarm	
calibration correction	45-K-14	Backup.....	10-14
reset.....	45-K-13	Alfalfa	
status indicator.....	45-K-12	Crop settings.....	100-1
Adjusting steering wheel.....	45-M-13	Alternator belt (Final Tier 4/Stage V)	
Adjustment details	45-L-8	Replacing	
Adjustment states.....	45-F-12	9.0 L	130-Q-5
Advanced PowerCast		13.5 L	130-R-7
Replacing		Alternator screen	
Spreader disks.....	70-24	Cleaning	130-O-2
Advanced settings	45-D-2, 45-F-13	Amber flasher	45-K-23
Header.....	45-C-38	Amber flasher calibration procedure	45-K-23
Aftertreatment indicators overview.....	35-2	Antenna	20-2
Air chutes.....	70-10	Application	
Air cleaner filters		Video	
Removing.....	130-P-13	Adjusting cameras.....	80-11
		Safety	80-9
		Video interface capability.....	80-9

Armrest	
Camera	
Adjusting	80-11
Display	
Payable moisture and density chart	100-18
Standard weights chart	100-18
Yield calibration	
Change tire radius code	95-4
Multi-point	95-4
Single point	95-4
Switches	
HillMaster™ leveling control	105-3
Video application	
Safety	80-9
Video interface capability	80-9
Augers	
Adjusting	
Grain tank loading auger (Grain tank covers)	75-7
Upper tailings drive chain	65-65
Auger bed dividers	65-39
Cleanout door	
Cleaning shoe auger gears (if equipped)....	65-49
Folding grain tank loading auger (Grain tank extensions)	75-7
Grain tank cross auger covers	75-3
ActiveYield™	75-4
Loading auger deflector	75-6
Manual cleanout door	
Cleaning shoe auger gears	65-48
Auto draper belt speed	45-C-29
AUTO exhaust filter cleaning	45-G-3
Auto header control	45-C-12
Combinations	95-2
Auto maintain active adjustments	45-L-5
Auto maintain completed adjustments	45-L-6
Auto maintain history	45-L-4
Auto maintain response aggressiveness	45-L-28
Auto maintain settings	45-L-27
Auto maintain status	45-L-17
Auto reel speed	45-C-28
Auto swap	45-B-7
Automation status	45-L-9
AutoTrac™ resume button (if equipped)	45-M-35
Auxiliary field lights	
Replacing	80-19
Avoid crushing	110-1
Avoid static electricity risk when fueling	10-5, 125-1
Axle	
Drives	
Change final drive oil	130-J-2
Check final drive oil	130-G-8
Grease final drive couplers	130-B-8
Grease final drive outer bearings	130-A-6, 130-B-2
Grease final drive pivot (HillMaster™ machines)	130-A-7, 130-A-8

Grease header tilt primary cylinder pivot pin (HillMaster™ machines)	130-A-8
Grease leveling cylinder barrel (HillMaster™ machines)	130-A-7, 130-A-8
Grease master cylinder pivot pin (HillMaster™ machines)	130-A-7
Grease rear axle tie rods	130-G-8
Grease two-speed four-wheel drive motor pivots	130-A-5, 130-B-2
Grease two-wheel drive extra heavy-duty spindle bearings and pivot pins	130-A-5, 130-B-2
Grease two-wheel drive heavy-duty spindle bearings and pivot pins	130-A-5, 130-B-2

B

Backshaft speed	45-C-34
Backup alarm	10-14
Ballast	
Liquid weight	85-22
Requirements	85-24, 85-25
Barley	
Crop settings	100-1
Basic tire information	85-2
Batteries	
Charging	80-4
Check batteries	130-G-11
Checking specific gravity	80-4
Connecting booster	80-5
Connecting cables	80-3
Disconnect switch	80-6
Removing and installing	80-5, 80-6
Safe installation	80-3
Battery Handling, Safety	
Safety, Battery Handling	10-15, 80-2
Beacon	
Replacing	
Light	80-18
Light bulb	80-18
Belt	
Adjusting	
Chopper drive	70-29
Chopper jackshaft	70-32
Clean grain elevator	65-59
Cleaning fan	65-49
Cleaning shoe	65-49
CommandTouch multi-speed feeder house drive	55-21
Conveyor auger	65-49
Countershaft right-hand front	65-47
Countershaft right-hand rear	65-47
Discharge beater	65-40
Feed accelerator	65-6
Feeder house fixed speed drive	55-19
Feeder house variable speed drive	55-13
First 50 hours	25-3

Header reel/belt pickup pump (CommandTouch multi-speed feeder house)	55-23	Header reel/belt pickup pump (Fixed speed feeder house)	55-19
Header reel/belt pickup pump (Fixed speed feeder house)	55-21	Header reel/belt pickup pump (Variable speed feeder house)	55-15
Header reel/belt pickup pump (Variable speed feeder house)	55-18	High speed high capacity feed accelerator ..	65-5
Overshot beater (if equipped)	65-45	Overshot beater (if equipped)	65-46
Tailings elevator	65-64	Rotary screen belt	130-Q-3, 130-R-5
Tailings system	65-65	Rotary screen drive belt (Final Tier 4/Stage V) 9.0 L	130-Q-7
Engine routing (Final Tier 4/Stage V) 13.5 L	130-R-7	13.5 L	130-R-10
Engine routing (Tier 2/Stage II) 9.0 L	130-Q-1	Rotary screen drive belt (Tier 2/Stage II) 9.0 L	130-Q-4
13.5 L	130-R-1	13.5 L	130-R-7
Left-hand drive belts	65-71	Standard speed high capacity feed accelerator ..	65-5
Replacing		Tailings system	65-65
Accessory (Tier 2/Stage II) 9.0 L	130-Q-1	Unloading auger drive	75-12, 75-13
13.5 L	130-R-1	Vacuum fan drive belt (Final Tier 4/Stage V) 9.0 L	130-Q-8
Air compressor (Tier 2/Stage II) 9.0 L	130-Q-1	13.5 L	130-R-11
13.5 L	130-R-1	Vacuum fan driven belt (Final Tier 4/Stage V) 9.0 L	130-Q-8
Air compressor belt (Final Tier 4/Stage V) 9.0 L	130-Q-11	Variable drive	65-39
13.5 L	130-R-11	Variable speed fan drive belt (Final Tier 4/Stage V) 9.0 L	130-Q-9
Air conditioner (Final Tier 4/Stage V) 9.0 L	130-Q-5	Right-hand drive belts	65-72
13.5 L	130-R-7	Routing	
Alternator (Final Tier 4/Stage V) 9.0 L	130-Q-5	Rotary screen belt	130-Q-3, 130-R-5
13.5 L	130-R-7	Seat belts	45-M-19
Chopper	70-29	Belt care and conditioning	110-9
Chopper jackshaft	70-33, 70-35	Belt pickup cleanout	45-M-25
Clean grain elevator	65-59	Biodiesel fuel	125-3
Cleaning fan	65-50, 65-51	Bleeding	
Cleaning shoe	65-50	Fuel system	130-P-10
CommandTouch multi-speed feeder house drive	55-21	Bolt and screw torque values	
Conveyor auger	65-50	Metric	145-25
Countershaft right-hand front	65-47	Unified inch	145-24
Countershaft right-hand rear	65-48	Brake fluid (If equipped)	125-16
Discharge beater	65-40	Brake lights	
Engine debris management belt (Final Tier 4/Stage V)	130-Q-14	Replacing	80-21
13.5 L	130-R-15	Brakes	
Fan drive (Tier 2/Stage II) 9.0 L	130-Q-1	Change brake fluid	130-I-3
13.5 L	130-R-3	Check brake fluid	130-G-13
Fan drive belt (Final Tier 4/Stage V) 13.5 L	130-R-13	Check park brake cylinder cables	130-G-11
Feeder house fixed speed drive	55-18	Troubleshooting	135-8
Feeder house variable speed drive	55-11	Break-in engine oil	
Header reel/belt pickup pump (CommandTouch multi-speed feeder house)	55-22	Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	125-11
		Non-Emissions certified and certified tier 1, tier 2, tier 3, stage I, stage II, and stage III	125-10
		Break-in service	
		Check after 100 hours (Tier 2/Stage II)	25-4
		Check after 400 hours (Final Tier 4/Stage V) ..	25-4
		Check before first 100 hours	25-3
		Engine	25-1
		Broken grain	45-L-23

Broken grain sensitivity 45-L-28

C

Cab

After market radios 20-1

Air conditioner

Clean drain hose 130-A-6

Camera

Adjusting 80-11

Clean fresh air filter 130-B-6, 130-O-1

Clean recirculating filter 130-E-1, 130-O-1

Corner post

VisionTrak™ operational checks 65-61

Display

Payable moisture and density chart 100-18

Standard weights chart 100-18

Yield calibration

Change tire radius code 95-4

Multi-point 95-4

Single point 95-4

Handrails 20-7

Inspect seat belts 130-G-15

Ladder positions 20-4

Fold/unfold from ground (Track machines) .. 110-3

Fold/unfold from landing (Track machines) . 110-3

Track machines (Swing) 110-2

Lighting locations

Auto beacon lights 50-2

Beacon lights 50-1

Engine compartment service lights (optional)

50-7

Exit lights 50-3, 50-7

Field lights 50-2, 50-4

Front stubble lights 50-2

Gull wing service lights (optional) 50-5

Hazard lights 50-1

Marker/Brake lights 50-3

Rear discharge lights 50-3

Road lights 50-1

Shoe service lights 50-5

Radio

Antenna 20-2

CB mounting 20-3

CB wiring 20-3

Radio controls 20-2

Radio frequency 20-1

Radio types (optional) 20-1

Right-hand landing 20-7

Switches

HillMaster™ leveling control 105-3

Lighting delay/Timeout 50-8

Video application

Safety 80-9

Video interface capability 80-9

Windshield washer reservoir

Filling reservoir 130-O-2

Cab headlights

Adjusting 80-12

Replacing 80-12

Cab headlights (high and low beam)

Adjusting 80-13, 80-14

Replacing 80-13

Cab interior light

Replacing 80-21

Calibration

Yield

Change tire radius code 95-4

Multi-point 95-4

Single point 95-4

Calibrations

Access calibrations and procedures 45-K-1

Active concave isolation (aci) air removal ... 45-K-23

Active concave isolation (aci) air removal calibration

procedure 45-K-23

Active concave isolation (aci) leveling 45-K-24

Active concave isolation (aci) leveling calibration

procedure 45-K-24

ActiveYield™ 45-K-12

ActiveYield™

advanced settings 45-K-13

calibration correction 45-K-14

reset 45-K-13

status indicator 45-K-12

Amber flasher 45-K-23

Amber flasher calibration procedure 45-K-23

Calibrations and procedures overview 45-K-1

Chassis tilt 45-K-15

Chassis tilt calibration procedure 45-K-15

Concave air removal 45-K-23

Concave air removal calibration procedure . 45-K-23

Concave leveling 45-K-24

Concave leveling calibration procedure 45-K-24

Deck plate spacing 45-K-17

Procedure 45-K-17

Extendable platform header self-test 45-K-19

Extendable platform header self-test calibration

procedure 45-K-19

Feeder house lateral tilt range 45-K-20

Feeder house lateral tilt range calibration procedure

45-K-20

Feeder house lateral tilt speed 45-K-21

Feeder house lateral tilt speed calibration

procedure 45-K-21

Feeder house raise speed 45-K-17

Feeder house raise speed calibration procedure ...

45-K-18

Feeder house tilt fore/aft range 45-K-19

Feeder house tilt fore/aft range calibration

procedure 45-K-20

Folding corn head 45-K-21

Folding corn head calibration procedure 45-K-21

Gauge wheel speed	45-K-26, 45-K-27	Canola	
Procedure	45-K-27	Crop settings	100-2
Header calibration	45-K-18	Carbon Dioxide Emissions	145-19
Header calibration procedure	45-K-18	CB	
Header suspension service mode	45-K-24	Radio mounting	20-3
Pressure control	45-K-25	Radio wiring	20-3
Procedure	45-K-25	Chaffer	
Hinged draper wing position	45-K-26	Adjusting	
Procedure	45-K-26	Dual zone adjust	65-55
Mass flow vibration	45-K-2	Front chaffer	65-52
Mass flow vibration calibration procedure	45-K-2	Motor	65-58
Moisture sensor		Adjusting switch	65-55
Procedure	45-K-2	Deep-tooth chaffer	65-53
Moisture sensor procedure	45-K-2	Fixed front chaffer	65-52
Reel and cutterbar calibration procedure	45-K-22	Flat-tooth comb chaffer	65-54
Reel and cutterbar position	45-K-22	General-purpose chaffer	65-53
Reel and cutterbar position calibration procedure ..	45-K-22	Installing	
Threshing clearance (active concave isolation)	45-K-15	Elements	65-56
Threshing clearance (active concave isolation)		Measuring	65-52
calibration procedure	45-K-16	Premium corn chaffer	65-53
Threshing clearance (standard concave adjust)	45-K-3	Removing	
Threshing clearance (standard concave adjust)		Elements	65-56
calibration procedure	45-K-3	Chaffer adjust	45-M-29
Unloading auger engage	45-K-16	Chaffer clearance	45-F-10
Unloading auger engage calibration procedure	45-K-16	Chaffer/sieve/return pan assemblies	
Windscreen position	45-K-28	Non-serviceable	65-58
Procedure	45-K-28	Charge air cooler	
Wings	45-K-21	Cleaning	130-A-3, 130-B-5
Wings calibration procedure	45-K-21	Chassis tilt	45-K-15
Yield		Chassis tilt calibration procedure	45-K-15
Delete unused samples	45-K-11	Chickpeas	
Yield		Crop settings	100-2
advanced edit	45-K-11	Chopper	
advanced settings	45-K-7	Access door	70-16
calibration quality	45-K-4	Adjusting	
calibration quality indicator	45-K-7	Chopper drive belt tension	70-29
collected sample status	45-K-8	Chopper jackshaft belt	70-32
edit/select calibration	45-K-10	Crop diverter vanes	70-3
mass flow rate	45-K-8	PowerCast™ tailboard (optional)	70-8
match scale weight	45-K-6	Stationary knife bank (without electric actuator) .	70-11
record sample	45-K-5	Tailboard	70-4
recording status	45-K-9	Tailboard vane settings	70-6, 70-7, 70-23
reset	45-K-9	Tailboard vanes	70-5, 70-22
status indicator	45-K-5	Adjusting switch	70-21
weight indicator	45-K-9	Centering	
Yield calibration	45-K-4	Chopper blades	70-20
Calibrations and procedures overview	45-K-1	Changing	
Camera		Speeds	70-21
Adjusting	80-11	Cleaning	
Camera lens debris	45-L-8	Machine cleanout (Annual cleanout and Specialty	
Cannot maintain target	45-L-20	Crops)	120-7
		Machine cleanout (Periodic cleanout)	120-1
		Controller bar (optional)	70-11
		Crop diverter	70-9

Installing		Cleaning fan (Non—Active Terrain Adjustment)	
Stationary knife bank (electric actuator)	70-13	Adjusting	
PowerCast™ tailboard (optional)		Actuator	65-50
Rear shrouds	70-9	Cleaning fan speed adjust	45-M-28
Removing		Cleaning shoe	
Stationary knife bank (electric actuator)	70-12	Access door	65-48
Replacing		Adjusting	
Advanced PowerCast spreader disks	70-24	Belt	65-49
Belt	70-29	Air chutes	65-48
Chopper blades	70-17, 70-18	Cleanout door	
Chopper jackshaft belt	70-33, 70-35	Auger gears (if equipped)	65-49
Middle splitter knife	70-19	Manual cleanout door	
PowerCast™ tailboard blades (optional)	70-8	Auger gears	65-48
Stationary knives (electric actuator)	70-15	Replacing	
Stationary knives (without electric actuator) . .	70-14	Belt	65-50
Windrow convergence rakes	70-4	Cleaning shoe lights	
Windrowing general information (Premium		Replacing	80-20
Residue)	70-4	Cleaning tracks	110-8
Clean grain elevator		Cleanout areas	110-8
Adjusting		Cleanout doors	
Belt	65-59	Grain tank	75-1
Conveyor chain	65-60	Codes	
Cleaning		Changing tire radius	95-4
Camera	65-62	Cold weather	
Maintenance		Coolant heater	35-6
Camera desiccant	130-G-18, 130-O-4	Staring fluid operation	35-6
Clean camera	130-A-7, 130-B-7, 130-G-17,	Starting fluid	130-P-1
	130-O-3	Starting fluid safety	35-6
Clean moisture sensor	130-B-6, 130-G-17,	Combine Advisor™	
	130-O-2	Access	45-L-1
Clean moisture sensor bypass auger	130-B-6,	Active adjustments	45-L-5
	130-B-7, 130-G-17, 130-G-18, 130-O-3	Active Terrain Adjustment™ settings	45-L-13
Replacing		Active Terrain Adjustment™ status	45-L-16
Belt	65-59	Adjustment details	45-L-8
Wear plates and door	65-61	Advanced settings	45-L-3
Cleaning		Auto maintain settings	45-L-27
Machine cleanout		Auto maintain status	45-L-17
Quick response (QR) code	120-1	Automation status	45-L-9
Machine cleanout (Annual cleanout and Specialty		Broken grain	45-L-23
Crops)	120-7	Broken grain sensitivity	45-L-28
Machine cleanout (Periodic cleanout)	120-1	Camera lens debris	45-L-8
Windows, mirrors, and lights	130-O-5	Cannot maintain target	45-L-20
Cleaning fan	45-F-9	Combine Advisor™ main page	45-L-1
Adjusting		Completed adjustments	45-L-6
Belt	65-49	Downhill sensitivity	45-L-14
Maintenance		Engine power target	45-L-12
Grease cleaning fan bearings	130-G-7	Excess tailings	45-L-23
Grease cleaning fan variable lower sheave	130-B-4	Foreign material sensitivity	45-L-29
Grease cleaning fan variable upper sheave	130-B-4	Grain loss sensitivity	45-L-28
Replacing		Grain system video	45-L-3
Belt	65-50, 65-51	Ground speed adjustment	45-L-24
Cleaning fan (Active Terrain Adjustment)		HarvestSmart™ automation	45-L-11
Adjusting		HarvestSmart™ settings	45-L-9
Actuator	65-50	HarvestSmart™ status	45-L-15
		Heavy foreign material	45-L-23
		History	45-L-4

Lens debris	45-L-8	Key switch	45-M-12
Light foreign material	45-L-23	Left-hand cab items	45-M-11
Offset details	45-L-7	Lights	45-M-24
Offset tuning chaffer	45-L-18	Multi-function lever	45-M-6
Offset tuning cleaning fan	45-L-20	Navigation bar	45-M-8
Offset tuning sieve	45-L-19	Operate ether injection (if equipped)	45-M-15
Optimize performance	45-L-18	Operate lights	45-M-13
Out-of-cab adjustments	45-L-26	Operate turn signals, horn, and high and low beam	45-M-13
Performance issues	45-L-22	Operate windshield wiper and washer	45-M-14
Performance monitor	45-L-4	Overhead controls	45-M-11
Response aggressiveness	45-L-11, 45-L-28	Park brake	45-M-32
Separator losses	45-L-23	ProDrive™ (if equipped)	45-M-31
Separator vane adjustments	45-L-25	Push button shift gear (if equipped)	45-M-31
Set performance target	45-L-21	Quick stop switch	45-M-33
Shoe losses	45-L-23	Radio	45-M-22
Solutions	45-L-24	Seek	45-M-30
Speed limit	45-L-10	Reel raise/lower, reel fore/aft (if equipped) switch	45-M-35
Straw quality issues	45-L-23	Right-hand cab items	45-M-9
Troubleshooting	135-19	Road transport disconnect	45-M-31
Unthreshed losses	45-L-23	Seat belts	45-M-19
Unthreshed material	45-L-23	Seat controls	45-M-12
Uphill sensitivity	45-L-14	Separator engage	45-M-27
Combine Advisor™ advanced settings	45-L-3	Sieve adjust	45-M-30
Combine Advisor™ main page	45-L-1	Threshing clearance adjust	45-M-27
Combine overview	45-M-1	Threshing speed adjust	45-M-28
Adjusting steering wheel	45-M-13	Unloading auger drive switch	45-M-34
AutoTrac™ resume button (if equipped)	45-M-35	Unloading auger swing switch	45-M-34
Belt pickup cleanout	45-M-25	VisionTrak™	45-M-36
Chaffer adjust	45-M-29	ComfortCommand™ operators seat (basic seat)	45-M-15
Cleaning fan speed adjust	45-M-28	ComfortCommand™ operators seat (premium cloth seat)	45-M-16
Combine overview	45-M-1	ComfortCommand™ operators seat (premium leather seat)	45-M-17
ComfortCommand™ operators seat (basic seat)	45-M-15	CommandARM™ console and display	45-M-6
ComfortCommand™ operators seat (premium cloth seat)	45-M-16	CommandARM™ controls setup	45-A-5
ComfortCommand™ operators seat (premium leather seat)	45-M-17	CommandCenter display	
CommandARM™ console and display	45-M-6	Lights application	
Console and display	45-M-24	Access lights	45-J-1
Corner post display	45-M-3	CommandCenter™ display	
Diesel exhaust fluid (DEF) level indicator	45-M-33	Calibrations application	
Differential lock (if equipped)	45-M-32	Access calibrations and procedures	45-K-1
Engine and ground drive	45-M-22	Active concave isolation (aci) air removal	45-K-23
Exhaust filter cleaning indicator	45-M-33	Active concave isolation (aci) air removal calibration procedure	45-K-23
Feeder house backshaft speed, adjustable corn head deck plates (if equipped)	45-M-36	Active concave isolation (aci) leveling	45-K-24
Feeder house reverser	45-M-25	Active concave isolation (aci) leveling calibration procedure	45-K-24
Four-wheel drive (if equipped)	45-M-32	ActiveYield™	45-K-12
Front console	45-M-2	ActiveYield™ advanced settings	45-K-13
Fuel level indicator	45-M-33	calibration correction	45-K-14
Harvesting controls	45-M-20	reset	45-K-13
Header activation buttons	45-M-36	status indicator	45-K-12
Header engage	45-M-26		
Header raise/lower and tilt switch	45-M-35		
HVAC	45-M-22		
Instructional seat	45-M-20		

Amber flasher	45-K-23	collected sample status	45-K-8
Amber flasher calibration procedure	45-K-23	edit/select calibration	45-K-10
Calibrations and procedures overview	45-K-1	mass flow rate	45-K-8
Chassis tilt	45-K-15	match scale weight	45-K-6
Deck plate spacing	45-K-17	recording status	45-K-9
Procedure	45-K-17	reset	45-K-9
Extendable platform header self-test	45-K-19	status indicator	45-K-5
Extendable platform header self-test calibration		weight indicator	45-K-9
procedure	45-K-19	Yield calibration	45-K-4
Feeder house lateral tilt range	45-K-20	Combine Advisor™	
Feeder house lateral tilt range calibration		Set performance target	45-L-21
procedure	45-K-20	Combine Advisor™ application	
Feeder house lateral tilt speed	45-K-21	Access Combine Advisor™	45-L-1
Feeder house lateral tilt speed calibration		Active adjustments	45-L-5
procedure	45-K-21	Active Terrain Adjustment™ settings	45-L-13
Feeder house raise speed	45-K-17	Active Terrain Adjustment™ status	45-L-16
Feeder house raise speed calibration procedure		Adjustment details	45-L-8
45-K-18		Advanced settings	45-L-3
Feeder house tilt fore/aft range	45-K-19	Auto maintain settings	45-L-27
Feeder house tilt fore/aft range calibration		Auto maintain status	45-L-17
procedure	45-K-20	Automation status	45-L-9
Folding corn head	45-K-21	Broken grain	45-L-23
Folding corn head calibration procedure	45-K-21	Broken grain sensitivity	45-L-28
Gauge wheel speed	45-K-26, 45-K-27	Cannot maintain target	45-L-20
Procedure	45-K-27	Combine Advisor™ main page	45-L-1
Header calibration	45-K-18	Completed adjustments	45-L-6
Header calibration procedure	45-K-18	Downhill sensitivity	45-L-14
Header suspension service mode	45-K-24	Engine power target	45-L-12
Pressure control	45-K-25	Excess tailings	45-L-23
Procedure	45-K-25	Foreign material sensitivity	45-L-29
Hinged draper wing position	45-K-26	Grain loss sensitivity	45-L-28
Procedure	45-K-26	Grain system video	45-L-3
Mass flow vibration	45-K-2	Ground speed adjustment	45-L-24
Mass flow vibration calibration procedure	45-K-2	HarvestSmart™ automation	45-L-11
Moisture sensor		HarvestSmart™ settings	45-L-9
Procedure	45-K-2	HarvestSmart™ status	45-L-15
Moisture sensor calibration	45-K-2	Heavy foreign material	45-L-23
Reel and cutterbar calibration procedure	45-K-22	History	45-L-4
Reel and cutterbar position	45-K-22	Lens debris	45-L-8
Threshing clearance (active concave isolation)	45-K-15	Light foreign material	45-L-23
Threshing clearance (standard concave adjust)	45-K-3	Offset details	45-L-7
Threshing clearance (standard concave adjust)		Offset tuning chaffer	45-L-18
calibration procedure	45-K-3	Offset tuning cleaning fan	45-L-20
Unloading auger engage	45-K-16	Offset tuning sieve	45-L-19
Unloading auger engage calibration procedure	45-K-16	Optimize performance	45-L-18
Windscreen position	45-K-28	Out-of-cab adjustments	45-L-26
Procedure	45-K-28	Performance issues	45-L-22
Yield		Performance monitor	45-L-4
Delete unused samples	45-K-11	Response aggressiveness	45-L-11, 45-L-28
Yield		Separator losses	45-L-23
advanced settings	45-K-7	Separator vane adjustments	45-L-25
calibration quality	45-K-4	Shoe losses	45-L-23
calibration quality indicator	45-K-7	Solutions	45-L-24
		Speed limit	45-L-10
		Straw quality issues	45-L-23
		Unthreshed losses	45-L-23

Unthreshed material	45-L-23	Seat controls	45-M-12
Uphill sensitivity	45-L-14	Separator engage	45-M-27
Combine overview		Sieve adjust	45-M-30
Adjusting steering wheel	45-M-13	Threshing clearance adjust	45-M-27
AutoTrac™ resume button (if equipped)	45-M-35	Threshing speed adjust	45-M-28
Belt pickup cleanout	45-M-25	Unloading auger drive switch	45-M-34
Chaffer adjust	45-M-29	Unloading auger swing switch	45-M-34
Cleaning fan speed adjust	45-M-28	VisionTrak™	45-M-36
Combine overview	45-M-1	Controls setup application	
Comfort Command™ operators seat (ultimate leather seat)	45-M-17	Access controls setup	45-A-1
ComfortCommand™ operators seat (basic seat)	45-M-15	CommandARM™ controls setup	45-A-5
ComfortCommand™ operators seat (premium cloth seat)	45-M-16	Controls setup overview	45-A-1, 45-A-3
CommandARM™ console and display	45-M-6	Create dual position assignments	45-A-6
Console and display	45-M-24	Create single position assignments	45-A-6
Corner post display	45-M-3	Function assignments	45-A-7
Diesel exhaust fluid (DEF) level indicator	45-M-33	Multi-function lever controls setup	45-A-3
Differential lock (if equipped)	45-M-32	Scroll button	45-A-7
Engine and ground drive	45-M-22	Engine application	
Exhaust filter cleaning indicator	45-M-33	Access engine	45-G-1
Feeder house backshaft speed, adjustable corn head deck plates (if equipped)	45-M-36	Air compressor	45-G-6
Feeder house reverser	45-M-25	Air compressor status	45-G-7
Four-wheel drive (if equipped)	45-M-32	AUTO exhaust filter cleaning	45-G-3
Front console	45-M-2	Debris management filter capacity	45-G-6
Fuel level indicator	45-M-33	Disable auto exhaust filter cleaning	45-G-5
Harvesting controls	45-M-20	Engine cool down in progress	45-G-5
Header activation buttons	45-M-36	Engine main page	45-G-1
Header engage	45-M-26	Engine power	45-G-2
Header raise/lower and tilt switch	45-M-35	Exhaust filter system overview	45-G-3
HVAC	45-M-22	Parked filter cleaning	45-G-4
Instructional seat	45-M-20	Folding application	
Key switch	45-M-12	Access folding	45-E-1
Left-hand cab items	45-M-11	Folding corn head	
Lights	45-M-24	John Deere models	45-E-6
Multi-function lever	45-M-6	Non-John Deere models	45-E-7
Navigation bar	45-M-8	Folding main page	45-E-1
Operate ether injection (if equipped)	45-M-15	Folding unloading auger	45-E-4
Operate lights	45-M-13	Fountain auger	45-E-3
Operate turn signals, horn, and high and low beams	45-M-13	Grain tank covers	45-E-2
Operate windshield wiper and washer	45-M-14	Header transport position	45-E-5
Overhead controls	45-M-11	Manual control	45-E-7
Park brake	45-M-32	Grain handling application	
ProDrive™ (if equipped)	45-M-31	Advanced settings	45-D-2
Push button shift gear (if equipped)	45-M-31	Custom alarm level	45-D-3
Quick stop switch	45-M-33	Grain handling main page	45-D-1
Radio	45-M-22	Grain level	45-D-3
Seek	45-M-30	Grain level auto beacon	45-D-2
Reel raise/lower, reel fore/aft (if equipped) switch	45-M-35	Moisture correction	45-D-4
Right-hand cab items	45-M-9	Moisture settings	45-D-4
Road transport disconnect	45-M-31	Status center	45-D-5
Seat belts	45-M-19	Tank unloading offset	45-D-2
		Harvest settings application	
		Access harvest settings	45-F-1
		Adjustment states	45-F-12
		Advanced settings	45-F-13
		Chaffer clearance	45-F-10
		Cleaning fan	45-F-9

Custom preset	45-F-6	Tilt speed	45-C-8
Effects of crop change	45-F-7	Width	45-C-4
Factory default	45-F-6	Width corn head	45-C-5
Harvest settings main page	45-F-1	HVAC application	
Outside configuration	45-F-11	Access HVAC	45-H-1
Performance target	45-F-15	Air conditioning	45-H-3
Preset	45-F-3	Air flow mode	45-H-3
Save preset	45-F-6	Fan speed	45-H-2
Separator resolution	45-F-13	Heating, ventilation, and air conditioning (HVAC)	
Shoe resolution	45-F-14	main page	45-H-1
Sieve clearance	45-F-10	Outside temperature	45-H-3
Straw conditions	45-F-5	Set temperature	45-H-2
Threshing clearance	45-F-7	Lights application	
Threshing conditions	45-F-4	Exit lights	45-J-4
Threshing speed	45-F-8	Lights main page	45-J-1
Harvest settings display		Worklights controls	45-J-4
Load harvest settings	45-F-2	Worklights preset 1—high-beam	45-J-3
Header application		Worklights preset 1—low-beam	45-J-2
Access	45-C-1	Worklights preset 2—high-beam	45-J-3
Advanced settings	45-C-38	Worklights preset 2—low-beam	45-J-2
Auto draper belt speed	45-C-29	Residue management application	
Auto header control	45-C-12	Auto swap	45-B-7
Auto reel speed	45-C-28	Direction	45-B-5
Backshaft speed	45-C-34	Knife bank	45-B-7
Control preview	45-C-12	Out-of-cab adjustments	45-B-6
Cutterbar position	45-C-35	Residue management	45-B-1
Cutterbar position resume	45-C-26	Residue mode	45-B-3
Cutterbar tilt	45-C-33	Speed	45-B-4
Deck plate position resume	45-C-25	Transmission application	
Deck plate spacing	45-C-34	Access transmission	45-I-1
Draper belt speed	45-C-31	Advanced settings ProDrive™ limp home mode	45-I-4
Draper float position	45-C-33	Advanced settings ProDrive™ tow mode	45-I-2
Feeder house float	45-C-20	Max speed 1 and 2	45-I-2
Fore/aft resume	45-C-23	Transmission main page	45-I-1
Fore/aft tilt	45-C-11	CommandCenter™ display	
Gauge wheels	45-C-37	Calibrations application	
Header automation	45-C-12	Chassis tilt calibration procedure	45-K-15
Header details	45-C-3	Threshing clearance (active concave isolation)	
Header down force	45-C-36	calibration procedure	45-K-16
Header down force advanced tuning	45-C-40	Yield	
Header main page	45-C-1	advanced edit	45-K-11
Height resume	45-C-13	record sample	45-K-5
Height sensing hinged draper	45-C-18	Grain handling application	
Height sensing off ground	45-C-15	Access grain handling	45-D-1
Height sensing on ground	45-C-16	Moisture alarm	45-D-4
Height sensitivity	45-C-9	Header application	
Hours	45-C-6	Work recording	45-C-6
HydraFlex™ pressure	45-C-31	Residue management application	
Lateral tilt	45-C-21	Access residue management	45-B-1
Limp home mode	45-C-38	Separator vane	45-B-3
Minimum reel speed	45-C-5	Swap	45-B-6
Raise/lower speed	45-C-7	Width	45-B-4
Reel position resume	45-C-24	CommandCenter™ display applications	45-1
Resume preferences	45-C-22		
Row width	45-C-5		
Tilt sensitivity	45-C-10		

Concave		
Different types	65-8	
MaxThresh™ and MaxRound™	65-9	
Grate covers (If equipped)	65-10	
Grate Interrupter locations (If equipped)	65-12	
Grate Interrupters (If equipped)	65-11	
Grate spacers	65-9	
Heavy-Duty Cast Grate Interrupters (If equipped) ..	65-11	
Installing		
Sections (Active Concave Isolation)	65-17	
Sections (Standard Concave Adjust)	65-14	
Leveling (Active Concave Isolation)	65-25	
Leveling (Standard Concave Adjust)	65-23	
Recommendations	65-8, 100-16	
Removing		
Sections (Active Concave Isolation)	65-17	
Sections (Standard Concave Adjust)	65-14	
Sector gear shear bolts (Standard Concave Adjust)		
.....	65-13	
Separator grate types	65-10	
Concave air removal	45-K-23	
Concave air removal calibration procedure	45-K-23	
Concave leveling	45-K-24	
Concave leveling calibration procedure	45-K-24	
Condenser		
Cleaning	130-A-3, 130-B-5	
Console and display	45-M-24	
Control preview	45-C-12	
Controller bar (optional)	70-11	
Controls setup		
Access controls setup	45-A-1	
Auto header control combinations	95-2	
CommandARM™ controls setup	45-A-5	
Controls setup overview	45-A-1, 45-A-3	
Create dual position assignments	45-A-6	
Create single position assignments	45-A-6	
Function assignments	45-A-7	
Multi-function lever controls setup	45-A-3	
Scroll button	45-A-7	
Controls setup overview	45-A-1, 45-A-3	
Conveyor auger		
Adjusting		
Belt	65-49	
Grease slip clutch	130-G-7	
Replacing		
Belt	65-50	
Conveyor chain		
Adjusting	55-7	
Drive chain	55-11	
Removing		
Links	55-8	
Conveyor drive chain		
Removing		
Links	55-10	
Conveyor speed		
Changing	55-9	
Coolant		
Diesel engine		
Engine with wet sleeve cylinder liners	125-8	
Heater	35-6	
John deere COOL-GARD II coolant extender	125-9	
Mixing with concentrate, water quality	125-9	
Testing freeze point	125-10	
Warm temperature climates	125-9	
Cooling system		
Adjusting		
Rotary screen brush	130-Q-14, 130-R-15	
Check coolant level	30-2	
Draining	130-P-10	
Filling	130-P-12	
Maintenance		
Change engine coolant	130-N-1	
Clean charge air cooler	130-A-3, 130-B-5	
Clean condenser	130-A-3, 130-B-5	
Clean oil cooler	130-A-3, 130-B-5	
Clean radiator	130-A-3, 130-B-5	
Clean rotary screen	130-A-3, 130-B-5	
Inspect engine coolant	130-A-3	
Replacing		
Fan drive belt (Final Tier 4/Stage V)		
13.5 L	130-R-13	
Rotary screen belt	130-Q-3, 130-R-5	
Rotary screen drive belt (Final Tier 4/Stage V)		
9.0 L	130-Q-7	
13.5 L	130-R-10	
Rotary screen drive belt (Tier 2/Stage II)		
9.0 L	130-Q-4	
13.5 L	130-R-7	
Vacuum fan drive belt (Final Tier 4/Stage V)		
9.0 L	130-Q-8	
13.5 L	130-R-11	
Vacuum fan driven belt (Final Tier 4/Stage V)		
9.0 L	130-Q-8	
Variable speed drive belt (Final Tier 4/Stage V)		
9.0 L	130-Q-9	
Routing		
Rotary screen belt	130-Q-3, 130-R-5	
Winterize	130-P-12	
CoolScan	125-14	
Corn (Dry)		
Crop settings	100-3	
Corn (Wet)		
Crop settings	100-3	
Corn Cob Mix		
Crop settings	100-4	
Corner post		
Display		
VisionTrak™ operational checks	65-61	
Corner post display	45-M-3	

Coupler		
Air compressor.....	130-P-13	
Cover		
Engine access	130-P-1	
Engine filter access	130-P-1	
Covers		
Grain tank		
Operating.....	75-2	
Crankshaft damper		
Check	130-J-4	
Replace	130-M-1	
Create dual position assignments	45-A-6	
Create single position assignments	45-A-6	
Crop		
Density chart	100-18	
Payable moisture chart	100-18	
Weights chart	100-18	
Crop diverter	70-9	
Crop diverter vanes		
Adjusting	70-3	
Crop settings		
Alfalfa	100-1	
Barley	100-1	
Canola	100-2	
Chickpeas	100-2	
Corn (Dry)	100-3	
Corn (Wet).....	100-3	
Corn Cob Mix	100-4	
Edible Beans.....	100-4	
Flax.....	100-5	
Footnotes description page	100-15	
Grass Seed	100-5	
Guar (Cluster Beans)	100-6	
Lentils	100-6	
Lupins.....	100-7	
Millet	100-7	
Mustard	100-8	
Navy Beans	100-8	
Oats	100-9	
Peas.....	100-9	
Popcorn.....	100-10	
Rape Seed (Dry)	100-10	
Rape Seed (Green)	100-11	
Rice	100-11	
Rye.....	100-12	
Safflower.....	100-12	
Sorghum.....	100-13	
Soybeans.....	100-13	
Sunflower.....	100-14	
Triticale	100-14	
Wheat Difficult	100-15	
Wheat Normal.....	100-15	
Custom alarm level.....	45-D-3	
Custom preset	45-F-6	
Cutterbar position.....	45-C-35	
Cutterbar position resume	45-C-26	
Cutterbar tilt	45-C-33	
D		
Debris management filter capacity	45-G-6	
Decal		
Lubrication locations	130-1	
Deck plate position resume	45-C-25	
Deck plate spacing	45-C-34, 45-K-17	
Procedure	45-K-17	
DEF		
DEF in-line filter, replace	130-K-2, 130-L-2	
Disposal	125-8	
Dosing unit filter, changing	130-K-1, 130-L-1	
Storing	125-7	
Tank, cleaning.....	130-P-4	
Tank, refilling.....	125-7	
Testing	125-6	
Use in SCR equipped engines.....	125-6	
DEF dosing unit filter		
Changing	130-K-1, 130-L-1	
DEF in-line filter		
Replace	130-K-2, 130-L-2	
DEF tank		
Cleaning	130-P-4	
Deluxe residue		
Chopper		
Windrowing general information	70-2	
Diesel engine oil		
Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	125-12	
Service interval for operation at high altitude	125-13	
Tier 2 and stage II	125-12	
Diesel engines, cold weather effect	125-5	
Diesel exhaust fluid (DEF) level indicator	45-M-33	
Diesel Exhaust Fluid (DEF) tank		
Access		
Dosing unit filter (Final Tier 4/Stage V)...	130-P-4	
In-line filter (Final Tier 4/Stage V)	130-P-4	
Checking breather	30-4	
Clean breather	130-F-3	
Draining.....	130-P-3	
Filling.....	130-P-2	
Replace breather	130-G-16	
Diesel fuel	125-2	
Supplemental additives	125-4	
Diesel fuel, testing	125-5	
Diesel Particulate Filter		
Maintenance and Service	130-P-14	
Diesel Particulate Filter Maintenance and Service	130-P-14	
Differential lock (if equipped).....	45-M-32	
Dimensions		
Machine.....	110-14	
Reference points	110-15, 145-15	
S760 and S770	145-11	
S770 HillMaster™	145-12	

S780 HillMaster™, S785 HillMaster™ and S790 HillMaster™	145-14
S780, S785 and S790	145-13
Track module.....	110-13
Direction	45-B-5
Disable auto exhaust filter cleaning	45-G-5
Discharge beater	
Adjusting	
Belt.....	65-40
Grease bearings	130-G-7
Replacing	
Belt.....	65-40
Wear strips.....	65-43
Unplugging	65-73
Discharge beater (Standard)	
Replacing	
Wear strips.....	65-44
Discharge beater (Tough Crop)	
Replacing	
Wear strips.....	65-45
Discharge lights	
Replacing.....	80-19
Display	
Corner post	
VisionTrak™ operational checks	65-61
Yield calibration	
Change tire radius code.....	95-4
Multi-point	95-4
Single point	95-4
Disposal, Exhaust Filter.....	130-P-15
Downhill sensitivity	45-L-14
Draper belt speed	45-C-31
Draper float position.....	45-C-33
Drive wheel starter stud.....	85-11
Driveshaft	
Maintenance	
Grease primary countershaft.....	130-E-1
Grease primary countershaft universal joint spline	130-G-4
Driving machine	
Header attached.....	85-1, 90-1
Road transporting	90-1

E

Edible Beans	
Crop settings.....	100-4
Effect of cold weather on diesel engines	125-5
Effects of crop change	45-F-7
Electrical	
Component handling precautions.....	80-1
Troubleshooting.....	135-16
Electrical system	
Adjusting	
Cab headlights.....	80-12
Cab headlights (high and low beam)	80-13, 80-14
Light emitting diode (LED) lights	80-17

Lower driving lights (if equipped).....	80-15
Battery disconnect switch	80-6
Charging batteries	80-4
Check batteries	130-G-11
Checking specific gravity	80-4
Cleaning	
Machine cleanout (Periodic cleanout)	120-1
Connecting booster.....	80-5
Connecting cables.....	80-3
Fuse center	80-7, 80-9
Halogen bulb safety rules	80-11
Inline fuses	80-8
Maintenance	
Clean alternator screen.....	130-O-2
Precautions.....	80-1
Removing and installing batteries	80-5, 80-6
Replacing	
Access door work lights	80-19
Auxiliary field lights.....	80-19
Beacon light.....	80-18
Beacon light bulb.....	80-18
Cab headlights.....	80-12
Cab headlights (high and low beam)	80-13
Cab interior light.....	80-21
Cleaning shoe lights	80-20
Discharge lights	80-19
Fascia lights (if equipped).....	80-14, 80-15
Grain tank light	80-19
Hazard/Marker lights	80-21
Light emitting diode (LED) lights	80-16
Lower driving lights (if equipped).....	80-15
Map light.....	80-21
Marker/Brake lights	80-21
Rear hazard lights.....	80-21
Side finder lights.....	80-20
Stubble lights	80-19
Unloading auger light	80-19
Emissions	
Required language	
EPA	130-P-1
Emissions Performance	
Tampering	5
Engine	
Access	45-G-1
Access cover.....	130-P-1
Adjusting	
Rotary screen brush	130-Q-14, 130-R-15
Air compressor.....	45-G-6
Air compressor status.....	45-G-7
Air scoop	
Extended field position.....	30-6
Positions.....	30-4
Standard field position	30-5
Transport position	30-7
AUTO exhaust filter cleaning.....	45-G-3

Belt		Replace Diesel Exhaust Fluid (DEF) tank breather	130-G-16
Routing (Final Tier 4/Stage V)		Replace fuel tank breather	130-G-16
9.0 L	130-Q-5	Replace hydraulic/hydrostatic charge filter	130-G-11
13.5 L	130-R-7	Replace hydrostatic charge filter	130-G-12
Routing (Tier 2/Stage II)		Replace main engine gear case filter	130-C-1, 130-G-12
9.0 L	130-Q-1	Replace main engine gear case lube filter	130-C-1, 130-G-15
13.5 L	130-R-1	Replace primary fuel filter	130-G-2
Break-in check before first 100 hours	25-3	Replace secondary fuel filter	130-G-2
Break-in service after 100 hours (Tier 2/Stage II) ..	25-4	Object detection sensor (Final Tier 4/Stage V)	35-4
Break-in service after 400 hours (Final Tier 4/Stage V)	25-4	Parked filter cleaning	45-G-4
Breaking-in	25-1	Replacing	
Change engine oil and filter	130-F-1, 130-F-2	Accessory belt (Tier 2/Stage II)	
Check engine oil	130-A-2	9.0 L	130-Q-1
Check oil	30-1	13.5 L	130-R-1
Cleaning		Air compressor belt (Final Tier 4/Stage V)	
Machine cleanout (Annual cleanout and Specialty Crops)	120-7	9.0 L	130-Q-11
Machine cleanout (Periodic cleanout)	120-1	13.5 L	130-R-11
Coolant heater	35-6	Air compressor belt (Tier 2/Stage II)	
Debris management filter capacity	45-G-6	9.0 L	130-Q-1
Disable auto exhaust filter cleaning	45-G-5	13.5 L	130-R-1
Engine cool down in progress	45-G-5	Air conditioner belt (Final Tier 4/Stage V)	
Engine main page	45-G-1	9.0 L	130-Q-5
Engine power	45-G-2	13.5 L	130-R-7
Engine speed management		Alternator belt (Final Tier 4/Stage V)	
ProDrive™ machines	35-5	9.0 L	130-Q-5
Exhaust filter system overview	45-G-3	13.5 L	130-R-7
Filter access cover	130-P-1	Engine debris management belt (Final Tier 4/Stage V)	130-Q-14
Maintenance		13.5 L	130-R-15
Change engine coolant	130-N-1	Fan belt (Tier 2/Stage II)	
Change main engine gear case oil	130-I-1, 130-J-2	9.0 L	130-Q-1
Check air filter elements	130-G-16	13.5 L	130-R-3
Check crankshaft damper	130-J-4	Fan drive belt (Final Tier 4/Stage V)	
Check engine debris management air filter	130-G-12	13.5 L	130-R-13
Check engine valve lash	130-J-2	Rotary screen belt	130-Q-3, 130-R-5
Check water separator	130-G-2	Rotary screen drive belt (Final Tier 4/Stage V)	
Clean alternator screen	130-O-2	9.0 L	130-Q-7
Clean charge air cooler	130-A-3, 130-B-5	13.5 L	130-R-10
Clean condenser	130-A-3, 130-B-5	Rotary screen drive belt (Tier 2/Stage II)	
Clean Diesel Exhaust Fluid (DEF) tank breather	130-F-3	9.0 L	130-Q-4
Clean fuel precleaner filter	130-B-4, 130-G-1	13.5 L	130-R-7
Clean fuel tank breather	130-F-3	Vacuum fan drive belt (Final Tier 4/Stage V)	
Clean oil cooler	130-A-3, 130-B-5	9.0 L	130-Q-8
Clean radiator	130-A-3, 130-B-5	13.5 L	130-R-11
Clean rotary screen	130-A-3, 130-B-5	Vacuum fan driven belt (Final Tier 4/Stage V)	
Clean water separator primary fuel filter .	130-B-5	9.0 L	130-Q-8
Drain water from air compressor reservoir	130-A-5	Variable speed fan drive belt (Final Tier 4/Stage V)	
Grease variable speed driven sheaves ...	130-G-3	9.0 L	130-Q-9
Grease variable speed driver sheaves ...	130-G-3	Routing	
Inspect coolant level	130-A-3	Rotary screen belt	130-Q-3, 130-R-5
Inspect fuel precleaner filter	130-A-5	Starting fluid	130-P-1
Replace crankshaft damper	130-M-1	Starting fluid operation	35-6

Starting fluid safety	35-6	Exhaust Filter, Safety	
Starting information.....	35-4	Safety, Exhaust Filter	10-15, 35-1
Stopping information	35-5	Exit lights	45-J-4
Troubleshooting.....	135-8	Extendable platform header self-test.....	45-K-19
Engine and ground drive.....	45-M-22	Extendable platform header self-test calibration	
Engine cool down in progress.....	45-G-5	procedure.....	45-K-19
Engine debris management			
Replacing		F	
Drive belt (Final Tier 4/Stage V).....	130-Q-14	Factory default	45-F-6
13.5 L.....	130-R-15	Fan belt	
Engine deck		Replacing (Tier 2/Stage II)	
Air compressor system	130-P-13	9.0 L	130-Q-1
Engine main page	45-G-1	13.5 L.....	130-R-3
Engine oil		Fan speed	45-H-2
Break-In		Feed accelerator	
Interim tier 4, final tier 4, stage IIIB, stage IV, and		Adjusting	
stage V	125-11	Belt.....	65-6
Non-Emissions certified and certified tier 1, tier 2,		Changing	
tier 3, stage I, stage II, and stage III....	125-10	High speed high capacity feed accelerator speed	
Change engine oil and filter.....	130-F-1, 130-F-2		65-7
Check engine oil.....	130-A-2	Standard speed high capacity feed accelerator	
Diesel		speed	65-7
Interim tier 4, final tier 4, stage IIIB, stage IV, and		Comb floor (Rice machines)	65-2
stage V	125-12	Maintenance	
Service interval for operation at high altitude	125-13	Grease feed accelerator bearings.....	130-G-5
Tier 2 and stage II.....	125-12	Removing	
Engine oil and filter service intervals		Comb floor (Rice machines)	65-3
Interim tier 4, final tier 4, stage IIIB, stage IV, and		Replacing	
stage V		High speed high capacity feed accelerator belt .	
0.10 - 0.119 L/kW oil pan.....	125-13		65-5
Operation at high altitude.....	125-13	Standard speed high capacity feed accelerator	
Tier 2 and stage II		belt	65-5
Standard drain oil pan	125-13	Wear strips (Standard).....	65-1
Engine power	45-G-2	Wear strips (Tine)	65-2
Engine Power		Wear strips (Tough Crop)	65-1
Do not modify	130-P-2	Top access door	55-2
Engine power target.....	45-L-12	Unplugging	65-73
Engine speed management		Feed plate	
ProDrive™ machines	35-5	Seal support.....	55-3
Engine valve lash		Feeder house	
Check	130-J-2	Adjusting	
Ether		CommandTouch multi-speed feeder house drive	
Safety	35-6	belt	55-21
Eurasian Economic Union compliance label location .		Conveyor chain	55-7
	150-2	Conveyor drive chain	55-11
Excess tailings	45-L-23	Fixed speed drive belt	55-19
Exhaust Filter		Fore/aft tilt frame (Manual tilt)	55-5
Ash Handling and Disposal	130-P-15	Header reel/belt pickup pump belt	
Exhaust Filter Ash Handling and Disposal		(CommandTouch multi-speed feeder house) .	
Diesel Particulate Filter Ash Handling and Disposal			55-23
	130-P-15	Header reel/belt pickup pump belt (Fixed speed	
Exhaust filter cleaning indicator.....	45-M-33	feeder house).....	55-21
Exhaust Filter Disposal	130-P-15	Header reel/belt pickup pump belt (Variable speed	
Exhaust filter system overview.....	45-G-3	feeder house).....	55-18
		Lower cable end (level land).....	55-27
		Shims (level land)	55-28

Single-point latching	55-26	Troubleshooting	135-1
Variable speed drive belt	55-13	Unlatching	
Attaching		Pins	55-28
Header	55-25	Feeder house (Hydraulic tilt)	
Multicoupler and single-point latching	55-24	Adjusting	
Bottom door	55-3	Drum height	55-9
Changing		Feeder house (Manual tilt)	
Conveyor speed	55-9	Adjusting	
Cleaning		Drum height	55-8
Latching pins	55-28	Feeder house backshaft speed, adjustable corn head	
Machine cleanout (Annual cleanout and Specialty		deck plates (if equipped)	45-M-36
Crops)	120-7	Feeder house float	45-C-20
Machine cleanout (Periodic cleanout)	120-1	Feeder house lateral tilt range	45-K-20
Cylinder safety stop	55-1	Feeder house lateral tilt range calibration procedure	
Detaching			45-K-20
Header	55-25	Feeder house lateral tilt speed	45-K-21
Doors	55-2	Feeder house lateral tilt speed calibration procedure	
Feed accelerator top access door	55-2		45-K-21
Feed plate seal support	55-3	Feeder house raise speed	45-K-17
Maintenance		Feeder house raise speed calibration procedure	
Change feeder house reverser gear case oil			45-K-18
.....	130-H-1	Feeder house reverser	45-M-25
Check feeder house reverser drive gear case oil		Feeder house tilt fore/aft range	45-K-19
.....	130-B-3	Feeder house tilt fore/aft range calibration procedure	
Clean lateral tilt feeder house	130-B-3		45-K-20
Clean multi-speed feeder house drive gear case		Filter	
.....	130-G-16	Access	
Clean stone trap	130-A-6	Diesel Exhaust Fluid (DEF) dosing unit filter (Final	
Grease feeder house slip clutch	130-G-15	Tier 4/Stage V)	130-P-4
Grease variable speed feeder house reverser		Diesel Exhaust Fluid (DEF) tank in-line filter (Final	
drive gear case	130-A-6, 130-B-2	Tier 4/Stage V)	130-P-4
Grease variable speed feeder house upper		Check	
sheaves	130-B-3	Air filter elements	130-G-16
Manual tilt indicator	55-23	Engine debris management air filter	130-G-12
Removing		Water separator	130-G-2
Conveyor chain links	55-8	Clean	
Conveyor drive chain links	55-10	Diesel Exhaust Fluid (DEF) tank breather	130-F-3
Replacing		Fuel precleaner filter	130-B-4, 130-G-1
CommandTouch multi-speed feeder house drive		Fuel tank breather	130-F-3
belt	55-21	Water separator primary fuel filter	130-B-5
Fixed speed drive belt	55-18	Cleaning	
Header reel/belt pickup pump belt		Heavy-duty fuel precleaner (optional)	130-P-8
(CommandTouch multi-speed feeder house)		Precleaner	130-P-6
.....	55-22	Draining	
Header reel/belt pickup pump belt (Fixed speed		Water separator primary filter	130-P-6
feeder house)	55-19	Flushing	
Header reel/belt pickup pump belt (Variable speed		Heavy-duty fuel precleaner (optional)	130-P-7
feeder house)	55-15	Inspect	
Variable speed drive belt	55-11	Fuel precleaner filter	130-A-5
Set		Maintenance	
Fore/aft tilt frame (Manual tilt)	55-5	Change hydraulic reservoir filter	130-I-2
Fore/aft tilt frame zero point (Hydraulic tilt)		Clean cab fresh air filter	130-B-6, 130-O-1
.....	55-6	Clean recirculating filter	130-E-1, 130-O-1
Shear screw location	55-29	Removing	
Side shields	55-1	Air cleaner filters	130-P-13
Stone trap	55-4		
Top shaft sprockets	55-11		

Engine debris management air filter (Final Tier 4/ Stage V).....	130-P-15	Folding unloading auger	45-E-4
Replace		Fore/aft resume	45-C-23
Diesel Exhaust Fluid (DEF) tank breather.....	130-G-16	Fore/aft tilt	45-C-11
Engine oil filter.....	130-F-1, 130-F-2	Foreign material sensitivity	45-L-29
Fuel tank breather.....	130-G-16	Fountain auger.....	45-E-3
Hydraulic/Hydrostatic charge filter.....	130-G-11	Four-wheel drive (if equipped)	45-M-32
Hydrostatic charge filter	130-G-12	Four-wheel drive (optional) Troubleshooting.....	135-7
Main engine gear case filter ..	130-C-1, 130-G-12	Front chaffer	
Main engine gear case lube filter	130-C-1, 130-G-15	Adjusting.....	65-52
Primary fuel filter	130-G-2	Front console.....	45-M-2
Replace secondary fuel filter.....	130-G-2	Front wheels	
Replacing		Installing	85-18
Heavy-duty fuel precleaner (optional).....	130-P-8	Removing.....	85-14
Primary and secondary fuel filter	130-P-8	Fuel	
Filters, Oil		Biodiesel	125-3
Oil Filters	125-17	Bleeding system	130-P-10
Final drives		Checking Diesel Exhaust Fluid (DEF) tank breather (Final Tier 4/Stage V).....	30-4
Change		Checking fuel tank breather.....	30-4
Oil	130-J-2	Checking system	30-3
Check		Cleaning	
Oil	130-G-8	Heavy-duty fuel precleaner filter (optional).....	130-P-8
Grease		Precleaner.....	130-P-6
Bearings	130-A-6, 130-B-2	Diesel	125-2
Final drive couplers	130-B-8	Draining	
Final drive pivot (HillMaster™ machines)	130-A-7, 130-A-8	Diesel Exhaust Fluid (DEF) tank (Final Tier 4/ Stage V).....	130-P-3
Fire extinguisher	20-5, 20-6, 115-3, 115-4	Water separator primary filter	130-P-6
Charge	115-2	Draining tank.....	130-P-5
Checklist.....	115-1	Filling	
Inspect	130-G-13	Diesel Exhaust Fluid (DEF) tank (Final Tier 4/ Stage V).....	130-P-2
Inspect straps	130-O-5	Filling tank.....	125-1, 130-P-5
Mounting	20-7, 115-5	Flushing	
Operating	115-1	Heavy-duty fuel precleaner filter (optional).....	130-P-7
Recommended fire preventions.....	115-1	Handling and storing	125-2
Flax		Lubricity.....	125-4
Crop settings.....	100-5	Replacing	
Fluorinated greenhouse gas, specifications	145-19	Heavy-duty fuel precleaner filter (optional).....	130-P-8
Folding		Primary and secondary fuel filter	130-P-8
Access folding	45-E-1	Shut-off valve	130-P-6
Folding corn head		Fuel Filters	
John Deere models	45-E-6	Filters, Fuel.....	125-17
Non-John Deere models	45-E-7	Fuel level indicator	45-M-33
Folding main page.....	45-E-1	Fuel system	130-P-2
Folding unloading auger.....	45-E-4	Bleeding	130-P-10
Fountain auger.....	45-E-3	Check water separator.....	130-G-2
Grain tank covers.....	45-E-2	Checking.....	30-3
Header transport position.....	45-E-5	Clean Diesel Exhaust Fluid (DEF) tank breather ...	130-F-3
Manual control	45-E-7	Clean fuel precleaner filter	130-B-4, 130-G-1
Folding corn head	45-K-21	Clean fuel tank breather.....	130-F-3
John Deere models	45-E-6	Clean water separator primary fuel filter.....	130-B-5
Non-John Deere models.....	45-E-7	Do not modify	130-P-2
Folding corn head calibration procedure.....	45-K-21	Inspect fuel precleaner filter.....	130-A-5
Folding main page.....	45-E-1		

Guar (Cluster Beans)			
Crop settings	100-6		
H			
Hardware torque values			
Metric	145-25		
Unified inch	145-24		
Harvest settings			
Access harvest settings	45-F-1		
Adjustment states	45-F-12		
Advanced settings	45-F-13		
Chaffer clearance	45-F-10		
Cleaning fan	45-F-9		
Custom preset	45-F-6		
Effects of crop change	45-F-7		
Factory default	45-F-6		
Harvest settings main page	45-F-1		
Load harvest settings	45-F-2		
Outside configuration	45-F-11		
Performance target	45-F-15		
Preset	45-F-3		
Save preset	45-F-6		
Separator resolution	45-F-13		
Shoe resolution	45-F-14		
Sieve clearance	45-F-10		
Straw conditions	45-F-5		
Threshing clearance	45-F-7		
Threshing conditions	45-F-4		
Threshing speed	45-F-8		
Harvest settings main page	45-F-1		
Harvesting controls	45-M-20		
Harvesting hints			
Operation at low temperatures	95-1		
Harvesting tips	95-1		
HarvestSmart™ automation	45-L-11		
HarvestSmart™ response aggressiveness	45-L-11		
HarvestSmart™ settings	45-L-9		
HarvestSmart™ speed limit	45-L-10		
HarvestSmart™ status	45-L-15		
Hazard lights			
Replacing	80-21		
Header			
Access	45-C-1		
Advanced settings	45-C-38		
Attaching	55-25		
Auto draper belt speed	45-C-29		
Auto header control	45-C-12		
Auto header control combinations	95-2		
Auto reel speed	45-C-28		
Backshaft speed	45-C-34		
Control preview	45-C-12		
Cutterbar position	45-C-35		
Cutterbar position resume	45-C-26		
Cutterbar tilt	45-C-33		
Deck plate position resume	45-C-25		
Deck plate spacing	45-C-34		
Detaching	55-25		
Draper belt speed	45-C-31		
Draper float position	45-C-33		
Feeder house float	45-C-20		
Fore/aft resume	45-C-23		
Fore/aft tilt	45-C-11		
Gauge wheels	45-C-37		
Ground conditions	45-C-36		
Header automation	45-C-12		
Header details	45-C-3		
Header down force	45-C-36		
Header down force advanced tuning	45-C-40		
Header main page	45-C-1		
Height resume	45-C-13		
Height sensing hinged draper	45-C-18		
Height sensing off ground	45-C-15		
Height sensing on ground	45-C-16		
Height sensitivity	45-C-9		
Hours	45-C-6		
HydraFlex™ pressure	45-C-31		
Lateral tilt	45-C-21		
Limp home mode	45-C-38		
Minimum reel speed	45-C-5		
Raise/lower speed	45-C-7		
Reel position resume	45-C-24		
Resume preferences	45-C-22		
Row width	45-C-5		
Suspension			
Service mode	45-K-24		
Tilt sensitivity	45-C-10		
Tilt speed	45-C-8		
Transport safety	10-3		
Width	45-C-4		
Width corn head	45-C-5		
Work recording	45-C-6		
Header activation buttons	45-M-36		
Header automation	45-C-12		
Header calibration	45-K-18		
Header calibration procedure	45-K-18		
Header clutch			
Maintenance			
Electromagnetic nut	130-G-15		
Header details	45-C-3		
Header down force	45-C-36		
Header down force advanced tuning	45-C-40		
Header engage	45-M-26		
Header main page	45-C-1		
Header pump			
Grease header drive pump sheave bearing	130-G-3		
Header raise/lower and tilt switch	45-M-35		
Header suspension service mode	45-K-24		
Header tilt primary cylinder			
Grease			
Pivot pin (HillMaster™ machines)	130-A-8		
Header transport position	45-E-5		

Headlights	
Adjusting	
Light emitting diode (LED) lights	80-17
Lower driving lights (if equipped)	80-15
Replacing	
Fascia lights (if equipped)	80-14, 80-15
Light emitting diode (LED) lights	80-16
Lower driving lights (if equipped)	80-15
Heater	
Troubleshooting	135-18
Heating, ventilation, and air conditioning (HVAC) main page	45-H-1
Heavy foreign material	45-L-23
Heavy-Duty Cast Gate interrupters (If equipped)	65-11
Height resume	45-C-13
Height sensing hinged draper	45-C-18
Height sensing off ground	45-C-15
Height sensing on ground	45-C-16
Height sensitivity	45-C-9
HillMaster™	
Daily operation preparations	105-3
General information	105-1
Switches	
Leveling control	105-3
Hinged draper wing position	45-K-26
Procedure	45-K-26
Hitch	
Manual (standard)	90-12
Semi-AutoMatic (optional)	90-12
Hours	45-C-6
HVAC	45-M-22
Access HVAC	45-H-1
Air conditioning	45-H-3
Air flow mode	45-H-3
Fan speed	45-H-2
Heating, ventilation, and air conditioning (HVAC) main page	45-H-1
Outside temperature	45-H-3
Set temperature	45-H-2
HydraFlex™ pressure	45-C-31
Hydraulic oil	110-10
Hydraulic system	
Accumulator pressure	130-2
Check reservoir oil	30-2
Cleaning	
Machine cleanout (Annual cleanout and Specialty Crops)	120-7
Machine cleanout (Periodic cleanout)	120-1
Cleanliness	130-1
Hose replacement	130-1
Maintenance	
Change hydraulic reservoir filter	130-I-2
Change hydraulic reservoir oil	130-J-1
Check hydraulic reservoir oil level	130-A-4
Check main engine gear case oil level	130-A-4
Hydraulics	
Tensioning system	110-8
Hydrostatic ground drive	
Troubleshooting	135-4
I	
Image processing module	
Terms and conditions	145-21
Third-party software notifications and licenses	145-24
Indicator	
Adjusting	
Fill sensors	75-2
Feeder house tilt	55-23
Indicators overview	35-2
Instructional seat	45-M-20
Interval chart	
As required	130-O-1
Every 10 hours	130-A-1
Every 50 hours	130-B-1
Every 100 hours	130-D-1
Every 200 hours	130-E-1
Every 250 hours	130-F-1
Every 400 hours	130-G-1, 130-G-6, 130-G-10, 130-G-14
Every 800 hours	130-H-1
Every 1000 hours	130-I-1, 130-I-3
Every 2000 hours	130-J-1, 130-J-4, 130-K-1
Every 3500 hours	130-L-1
Every 4500 hours	130-M-1
Every 6000 hours	130-N-1
Every five years	130-M-1
Every six years	130-N-1
Every three years	130-K-1, 130-L-1
First 100 hours	130-C-1
J	
Jack pocket	
Locations	85-13, 90-11
Locations decal	85-12
K	
Key switch	45-M-12
Knife bank	45-B-7
L	
Ladder	
Engine	75-1
Grain tank	75-1
Positions	20-4
Fold/unfold from ground (Track machines)	110-3
Fold/unfold from landing (Track machines)	110-3
Track machines (Swing)	110-2
Rear	130-P-1
Lateral tilt	45-C-21

Left-hand cab items	45-M-11	Side finder lights.....	80-20
Lens debris	45-L-8	Stubble lights	80-19
Lentils		Unloading auger light	80-19
Crop settings	100-6	Worklights controls	45-J-4
Leveling concave		Worklights preset 1—high-beam.....	45-J-3
Active Concave Isolation	65-25	Worklights preset 1—low-beam.....	45-J-2
Standard Concave Adjust	65-23	Worklights preset 2—high-beam.....	45-J-3
Leveling cylinder		Worklights preset 2—low-beam.....	45-J-2
Grease		Lights main page	45-J-1
Leveling cylinder barrel (HillMaster™ machines)		Limp home mode	45-C-38
130-A-7, 130-A-8		ProDrive™ transmission.....	45-I-4
Light foreign material	45-L-23	Load harvest settings	45-F-2
Lights.....	45-M-24	Effects of crop change	45-F-7
Access lights	45-J-1	Preset	45-F-3
Adjusting		Save preset	45-F-6
Cab headlights.....	80-12	Custom preset	45-F-6
Cab headlights (cab and low beam)	80-13, 80-14	Factory default.....	45-F-6
Light emitting diode (LED) lights	80-17	Straw conditions	45-F-5
Lower driving lights (if equipped).....	80-15	Threshing conditions	45-F-4
Cleaning	130-O-5	Loading auger deflector.....	75-6
Exit lights	45-J-4	Loading auger folding (Grain tank extensions) ..	75-7
Lighting delay/Timeout	50-8	Lubricant	
Lighting locations		Mixing	125-17
Auto beacon lights	50-2	Lubricant Storage	
Beacon lights	50-1	Storage, Lubricant.....	125-17
Engine compartment service lights (optional)	50-7	Lubricants, safety	125-17
Exit lights	50-3, 50-7	Lubrication and maintenance	
Field lights.....	50-2, 50-4	2000 hours	
Front stubble lights.....	50-2	Replace DEF in-line filter.....	130-K-2
Gull wing service lights (optional)	50-5	2000 Hours/36 Months	
Hazard lights.....	50-1	Changing DEF dosing unit filter	130-K-1, 130-L-1
Marker/Brake lights	50-3	4500 hours	
Rear discharge lights	50-3	Replace DEF in-line filter.....	130-L-2
Road lights	50-1	As required	
Shoe service lights	50-5	Cleaning DEF tank.....	130-P-4
Lights main page	45-J-1	Lubrication and Maintenance	
Replacing		Hydraulic oil	110-10
Access door work lights	80-19	Lubricity of diesel fuel	125-4
Auxiliary field lights.....	80-19	Lupins	
Beacon light.....	80-18	Crop settings.....	100-7
Beacon light bulb.....	80-18		
Cab headlights.....	80-12		
Cab headlights (high and low beam)	80-13		
Cab interior light.....	80-21		
Cleaning shoe lights	80-20		
Discharge lights	80-19		
Fascia lights (if equipped).....	80-14, 80-15		
Grain tank light	80-19		
Halogen bulb safety rules	80-11		
Hazard/Marker lights.....	80-21		
Light emitting diode (LED) lights	80-16		
Lower driving lights (if equipped).....	80-15		
Map light.....	80-21		
Marker/Brake lights	80-21		
Rear hazard lights.....	80-21		

M

Machine

Jack pocket locations	85-13, 90-11
Jack pocket locations decal	85-12
Road transporting	90-1
Header attached.....	85-1, 90-1
Tie down locations	90-10
Tie down locations decal	90-10
Towing	90-11
Trailer transporting	90-4
Transport information	90-11
Machine design life	145-19
Machine identification numbers	150-1
Advanced PowerCast™ tailboard (Intermediate and Premium residue)	150-6

Cab.....	150-4	Triticale	100-14
Chopper (If equipped).....	150-6	Wheat Difficult	100-15
Engine (Final Tier 4/Stage V)	150-3	Wheat Normal	100-15
Engine (Tier 2/Stage II).....	150-3	Drum height (Hydraulic tilt).....	55-9
Engine gear case.....	150-5	Drum height (Manual tilt)	55-8
Feeder house reverser.....	150-5	Harvesting tips	95-1
Hydrostatic drive motor	150-4	Operation at low temperatures.....	95-1
Hydrostatic drive pump	150-4	Power shutdown procedure	100-16
Interpreting engine serial number	150-2	Stationary knife bank (without electric actuator)	70-11
Multi-speed feeder house gear case (If equipped)	150-5	Tailboard vanes	70-6, 70-7, 70-23
PowerCast tailboard (Deluxe residue)	150-6	Machine stop warning, required	35-3
Rotor drive gear case.....	150-5	Machine storage	
Spreader (Deluxe residue)	150-6	Preparing machine	140-1
Transmission	150-5	Removing machine from storage	140-1
Two speed four-wheel drive motor	150-4	Winterize cooling system	130-P-12
Vane tailboard (Deluxe, Intermediate and Premium residue).....	150-6	Machine tie down locations decal	90-10
Machine identification plate.....	110-18	Main engine gear case	
Eurasian Economic Union compliance label location	150-2	Change oil.....	130-I-1, 130-J-2
Machine identification plate location.....	110-18, 150-2	Maintenance	
Machine operation	110-6	Access	
Machine settings		Diesel Exhaust Fluid (DEF) dosing unit filter (Final Tier 4/Stage V)	130-P-4
Changing chopper speeds	70-21	Diesel Exhaust Fluid (DEF) tank in-line filter (Final Tier 4/Stage V)	130-P-4
Chopper controller bar (optional)	70-11	Accumulator pressure.....	130-2
Crop diverter	70-9	Adjusting	
Crop settings		Belt first 50 hours	25-3
Alfalfa	100-1	Clean grain elevator conveyor chain.....	65-60
Barley	100-1	Grain tank covers (If equipped).....	75-3
Canola	100-2	Grain tank loading auger (Grain tank covers)	75-7
Chickpeas	100-2	Unloading auger cradle support	75-10
Corn (Dry).....	100-3	Unloading auger drive chain	75-9
Corn (Wet).....	100-3	Unloading auger position	75-10, 75-11
Corn Cob Mix	100-4	Air conditioner	
Edible Beans	100-4	Clean drain hose	130-A-6
Flax	100-5	Basic tire information.....	85-2
Footnotes description page	100-15	Belt care	110-9
Grass Seed	100-5	Bleeding fuel system.....	130-P-10
Guar (Cluster Beans)	100-6	Break-in check before first 100 hours.....	25-3
Lentils.....	100-6	Break-in service after 100 hours (Tier 2/Stage II)	25-4
Lupins.....	100-7	Break-in service after 400 hours (Final Tier 4/Stage V).....	25-4
Millet	100-7	Breaking-in engine	25-1
Mustard.....	100-8	Cab	
Navy Beans	100-8	Clean fresh air filter	130-B-6, 130-O-1
Oats.....	100-9	Clean recirculating filter	130-E-1, 130-O-1
Peas	100-9	Fill windshield washer reservoir	130-O-2
Popcorn.....	100-10	Inspect seat belts.....	130-G-15
Rape Seed (Dry)	100-10	Care and service of tires	85-1
Rape Seed (Green)	100-11	Centering	
Rice	100-11	Chopper blades.....	70-20
Rye.....	100-12	Check coolant level	30-2
Safflower	100-12	Check engine oil.....	30-1
Sorghum.....	100-13	Check hydraulic reservoir oil	30-2
Soybeans.....	100-13		
Sunflower.....	100-14		

-
- Check hydrostatic oil 30-2
 - Checking
 - Diesel Exhaust Fluid (DEF) tank breather (Final Tier 4/Stage V) 30-4
 - Checking fuel system 30-3
 - Checking fuel tank breather 30-4
 - Checking tire pressure 85-3, 85-5, 85-8, 85-9
 - HillMaster 85-7, 85-10
 - Clean grain elevator
 - Camera desiccant 130-G-18, 130-O-4
 - Clean camera 130-A-7, 130-B-7, 130-G-17, 130-O-3
 - Clean moisture sensor 130-B-6, 130-G-17, 130-O-2
 - Clean moisture sensor bypass auger 130-B-6, 130-B-7, 130-G-17, 130-G-18, 130-O-3
 - Wear plates and door 65-61
 - Cleaning
 - Clean grain elevator camera 65-62
 - Fuel precleaner 130-P-6
 - Heavy-duty fuel precleaner filter (optional) 130-P-8
 - Machine cleanout (Annual cleanout and Specialty Crops) 120-7
 - Machine cleanout (Periodic cleanout) 120-1
 - Mass flow sensor (Grain tank covers) 75-9
 - Mass flow sensor (Grain tank extensions) ... 75-8
 - Quick response (QR) code 120-1
 - Tailings system elevator camera 65-62
 - Tailings system elevator sensors 65-63
 - Windows, mirrors, and lights 130-O-5
 - Cleaning engine compartment 30-8, 115-5
 - Cleaning fan
 - Grease cleaning fan bearings 130-G-7
 - Grease cleaning fan variable lower sheave 130-B-4
 - Grease cleaning fan variable upper sheave 130-B-4
 - Cleaning tracks 110-8
 - Cleanout areas 110-8
 - Conditioning 110-9
 - Conveyor auger
 - Grease conveyor auger slip clutch 130-G-7
 - Daily 110-10
 - Discharge beater
 - Grease discharge beater bearings 130-G-7
 - Draining
 - Diesel Exhaust Fluid (DEF) tank (Final Tier 4/Stage V) 130-P-3
 - Water separator primary filter 130-P-6
 - Draining cooling system 130-P-10
 - Draining fuel tank 130-P-5
 - Drive wheel bolt torque 85-11
 - Drives
 - Change final drive oil 130-J-2
 - Check final drive oil 130-G-8
 - Grease final drive couplers 130-B-8
 - Grease final drive outer bearings 130-A-6, 130-B-2
 - Grease final drive pivot (HillMaster™ machines) 130-A-7, 130-A-8
 - Grease header tilt primary cylinder pivot pin (HillMaster™ machines) 130-A-8
 - Grease leveling cylinder barrel (HillMaster™ machines) 130-A-7, 130-A-8
 - Grease master cylinder pivot pin (HillMaster™ machines) 130-A-7
 - Grease rear axle tie rods 130-G-8
 - Grease two-speed four-wheel drive motor pivots 130-A-5, 130-B-2
 - Grease two-wheel drive extra heavy-duty spindle bearings and pivot pins 130-A-5, 130-B-2
 - Grease two-wheel drive heavy-duty spindle bearings and pivot pins 130-A-5, 130-B-2
 - Electrical
 - Check batteries 130-G-11
 - Engine
 - Change engine coolant 130-N-1
 - Change engine oil and filter 130-F-1, 130-F-2
 - Change main engine gear case oil 130-I-1, 130-J-2
 - Check air filter elements 130-G-16
 - Check crankshaft damper 130-J-4
 - Check engine debris management air filter 130-G-12
 - Check engine oil 130-A-2
 - Check engine valve lash 130-J-2
 - Check water separator 130-G-2
 - Clean alternator screen 130-O-2
 - Clean charge air cooler 130-A-3, 130-B-5
 - Clean condenser 130-A-3, 130-B-5
 - Clean Diesel Exhaust Fluid (DEF) tank breather 130-F-3
 - Clean fuel precleaner filter 130-B-4, 130-G-1
 - Clean fuel tank breather 130-F-3
 - Clean oil cooler 130-A-3, 130-B-5
 - Clean radiator 130-A-3, 130-B-5
 - Clean rotary screen 130-A-3, 130-B-5
 - Clean water separator primary fuel filter . 130-B-5
 - Drain water from air compressor reservoir 130-A-5
 - Grease variable speed driven sheaves ... 130-G-3
 - Grease variable speed driver sheaves ... 130-G-3
 - Inspect coolant level 130-A-3
 - Inspect fuel precleaner filter 130-A-5
 - Replace crankshaft damper 130-M-1
 - Replace Diesel Exhaust Fluid (DEF) tank breather 130-G-16
 - Replace fuel tank breather 130-G-16
 - Replace hydraulic/hydrostatic charge filter 130-G-11
 - Replace hydrostatic charge filter 130-G-12
 - Replace main engine gear case filter 130-C-1, 130-G-12
 - Replace main engine gear case lube filter 130-C-1, 130-G-15
-

-
- Replace primary fuel filter 130-G-2
 - Replace secondary fuel filter..... 130-G-2
 - Every 1000 hours..... 110-11
 - Feed accelerator
 - Grease feed accelerator bearings..... 130-G-5
 - Feeder house
 - Change feeder house reverser gear case oil 130-H-1
 - Check feeder house reverser drive gear case oil 130-B-3
 - Clean lateral tilt feeder house 130-B-3
 - Clean multi-speed feeder house drive gear case 130-G-16
 - Clean stone trap..... 130-A-6
 - Grease feeder house slip clutch..... 130-G-15
 - Grease variable speed feeder house reverser drive gear case 130-A-6, 130-B-2
 - Grease variable speed feeder house upper sheaves 130-B-3
 - Filling
 - Diesel Exhaust Fluid (DEF) tank (Final Tier 4/ Stage V)..... 130-P-2
 - Filling cooling system 130-P-12
 - Filling fuel tank..... 125-1, 130-P-5
 - Fire extinguisher 115-1
 - Charge..... 115-2
 - Inspect fire extinguisher 130-G-13
 - Inspect fire extinguisher straps 130-O-5
 - Fire preventions 115-1
 - Flushing
 - Heavy-duty fuel precleaner filter (optional)130-P-7
 - Fuel tank shut-off valve 130-P-6
 - Grain tank
 - Check loading auger gear case oil..... 130-G-16
 - Clean mass flow sensor..... 130-B-5
 - Grease chopper driveshaft bearing 130-G-4
 - Grease unloading auger upper gear case 130-G-3
 - Grease unloading driveshaft bearing 130-G-4
 - Grease vertical unloading auger upper gear case 130-G-4
 - Header clutch
 - Electromagnetic nut..... 130-G-15
 - Header pump
 - Grease header drive pump sheave bearing 130-G-3
 - Hydraulic system
 - Change hydraulic reservoir filter..... 130-I-2
 - Change hydraulic reservoir oil..... 130-J-1
 - Check hydraulic reservoir oil level 130-A-4
 - Check main engine gear case oil level ... 130-A-4
 - Hydraulic system cleanliness 130-1
 - Interval chart 110-9
 - Lubrication decal location 130-1
 - Lubrication symbols 130-3
 - Overshot beater
 - Change overshot beater gear case oil..... 130-J-3
 - Check overshot beater gear case oil 130-G-8
 - Grease overshot beater bearings 130-G-7
 - Primary countershaft
 - Change primary countershaft gear case oil130-J-3
 - Check primary countershaft gear case oil130-G-13
 - Grease primary countershaft..... 130-E-1
 - Grease primary countershaft bearing 130-G-7
 - Grease primary countershaft universal joint spline 130-G-4
 - Rear wheel bolt torque..... 85-22
 - Reel pump
 - Grease reel drive pump sheave bearing . 130-G-3
 - Removing
 - Air cleaner filters 130-P-13
 - Engine debris management air filter (Final Tier 4/ Stage V)..... 130-P-15
 - Tine feed accelerator comb floor (Rice machines) 65-3
 - Unloading auger drive chain links..... 75-9
 - Replacing
 - Advanced PowerCast spreader disks..... 70-24
 - Chopper blades..... 70-17, 70-18
 - Discharge beater wear strips 65-43
 - Disk assemblies (Dual speed) 70-28
 - Disk assemblies (Single speed) 70-27
 - Heavy-duty fuel precleaner filter (optional)130-P-8
 - Hydraulic hose..... 130-1
 - Middle splitter knife 70-19
 - Overshot beater wings (if equipped) 65-46
 - Primary and secondary fuel filter..... 130-P-8
 - Standard discharge beater wear strips 65-44
 - Standard feed accelerator wear strips..... 65-1
 - Stationary knives (electric actuator)..... 70-15
 - Stationary knives (without electric actuator) 70-14
 - Tine feed accelerator wear strips..... 65-2
 - Tough crop discharge beater wear strips.... 65-45
 - Tough crop feed accelerator wear strips 65-1
 - Separator
 - Change separator drive oil 130-J-2
 - Check separator drive oil..... 130-G-8
 - Check two-speed separator drive oil..... 130-B-5
 - Cycle separator variable speed driven sheave .. 130-B-3
 - Cycle separator variable speed driver sheave ... 130-B-3
 - Grease separator bearing 130-G-7
 - Grease separator variable speed driven sheave 130-B-4, 130-E-2
 - Grease separator variable speed driver sheave 130-B-4, 130-E-2
 - Grease variable speed driver sheave..... 130-G-4
 - Separator wear liners 65-13
 - Service interval
 - Clearing..... 130-1
 - Setup..... 130-1
-

Service interval chart		Master cylinder	
As required.....	130-O-1	Grease	
Every 10 hours	130-A-1	Master cylinder pivot pin (HillMaster™ machines)	130-A-7
Every 50 hours	130-B-1	Max speed 1 and 2.....	45-I-2
Every 100 hours.....	130-D-1	Metric bolt and screw torque values	145-25
Every 200 hours.....	130-E-1	Millet	
Every 250 hours.....	130-F-1	Crop settings.....	100-7
Every 400 hours....	130-G-1, 130-G-6, 130-G-10, 130-G-14	Minimum reel speed.....	45-C-5
Every 800 hours.....	130-H-1	Mirrors	
Every 1000 hours	130-I-1, 130-I-3	Cleaning	130-O-5
Every 2000 hours	130-J-1, 130-J-4, 130-K-1	Mixing lubricants	125-17
Every 3500 hours	130-L-1	Moisture	
Every 4500 hours	130-M-1	Payable moisture and density chart.....	100-18
Every 6000 hours	130-N-1	Moisture alarm	45-D-4
Every five years	130-M-1	Moisture correction	45-D-4
Every six years	130-N-1	Moisture sensor	
Every three years	130-K-1, 130-L-1	Cleaning	130-B-6, 130-G-17, 130-O-2
First 100 hours	130-C-1	Bypass auger	130-B-6, 130-B-7, 130-G-17, 130-G-18, 130-O-3
Spreader		Procedure	45-K-2
Grease spreader disk.....	130-G-8	Troubleshooting.....	135-19
Tailings augers		Moisture sensor calibration.....	45-K-2
Grease tailings auger drive slip clutch....	130-G-6	Moisture settings.....	45-D-4
Tailings elevator		Multi-function lever	45-M-6
Grease tailings elevator slip clutch.....	130-A-7, 130-B-8	Auto header control combinations.....	95-2
Tailings system		Multi-function lever controls setup	45-A-3
Camera desiccant	130-G-18, 130-O-4	Multicoupler	
Clean tailings system camera .	130-A-7, 130-B-7, 130-G-18, 130-O-4	Attaching.....	55-24
Tires		Mustard	
Check bolt torque	130-D-1	Crop settings.....	100-8
Check tire pressure	130-D-1		
Track Replacement.....	110-10	N	
Transmission		Navigation bar.....	45-M-8
Change brake fluid	130-I-3	Navy Beans	
Change transmission oil	130-J-3	Crop settings.....	100-8
Check brake fluid.....	130-G-13	Non-serviceable	
Check park brake cylinder cables	130-G-11	Chaffer/sieve/return pan assemblies	65-58
Check transmission oil	130-G-11		
Winterize cooling system	130-P-12	O	
Maintenance		Oats	
Replacement Criteria.....	110-10	Crop settings.....	100-9
Manual control	45-E-7	Object detection sensor (Final Tier 4/Stage V) ..	35-4
Map light		Offset details	45-L-7
Replacing.....	80-21	Offset tuning chaffer.....	45-L-18
Marker lights		Offset tuning cleaning fan	45-L-20
Replacing.....	80-21	Offset tuning sieve.....	45-L-19
Mass flow sensor		Oil	
Maintenance		Engine	
Cleaning mass flow sensor	130-B-5	Interim tier 4, final tier 4, stage IIIB, stage IV, and stage V	125-12
Troubleshooting.....	135-19	Tier 2 and stage II.....	125-12
Mass flow vibration	45-K-2	Oil cooler	
Mass flow vibration calibration procedure	45-K-2	Cleaning	130-A-3, 130-B-5
		Oilscan	125-14

-
- Operate
- Track benefits 110-5
 - Track components 110-5
 - Track features 110-5
 - Track machines 110-6
 - Track tensioning system 110-8
- Operate ether injection (if equipped) 45-M-15
- Operate lights 45-M-13
- Operate turn signals, horn, and high and low beam ..
45-M-13
- Operate windshield wiper and washer 45-M-14
- Operating speeds (S760 and S770) 145-1
- Operating speeds (S780, S785 and S790) 145-3
- Operation at low temperatures 95-1
- Operator presence system 10-16
- Operator's manual 110-1
- Operator's station
- Cab ladder positions 20-4
 - Fold/unfold from ground (Track machines) .. 110-3
 - Fold/unfold from landing (Track machines) . 110-3
 - Swing (Track machines) 110-2
 - Handrails 20-7
 - Right-hand landing access 20-7
- Optimize performance 45-L-18
- Out-of-cab adjustments 45-B-6, 45-L-26
- Outside configuration 45-F-11
- Outside temperature 45-H-3
- Overhead controls 45-M-11
- Overshot beater
- Adjusting
 - Belt (if equipped) 65-45
 - Change overshot beater gear case oil 130-J-3
 - Check overshot beater gear case oil 130-G-8
 - Grease bearings 130-G-7
 - Removing
 - Floor (if equipped) 70-10
 - Replacing
 - Belt (if equipped) 65-46
 - Wings (if equipped) 65-46
- P**
- Panels
- Feeder house 55-1
 - Gull wing doors 60-1
 - Cylinder adjustment 60-2
 - Left-hand side 60-2
 - Right-hand side 60-4
 - Separator covers 60-4
 - Toolbox (If Equipped) 60-2
- Park brake 45-M-32
- Parked filter cleaning 45-G-4
- Peas
- Crop settings 100-9
- Performance check
- Power shutdown 100-16
- Performance issues 45-L-22
- Performance monitor 45-L-4
- Performance target 45-F-15
- Popcorn
- Crop settings 100-10
- Posi-Torq
- Speed ranges 65-37
- Power shutdown procedure 100-16
- PowerCast™ tailboard (optional)
- Adjusting 70-8
 - Rear shrouds 70-9
- PowerCast™ tailboard blade (optional)
- Replacing 70-8
- Preset 45-F-3
- Pressure
- Care and service of tires 85-1
 - Checking tires 85-3, 85-5, 85-8, 85-9
 - HillMaster 85-7, 85-10
- Preview 45-1
- Primary countershaft
- Change primary countershaft gear case oil .. 130-J-3
 - Check primary countershaft gear case oil . 130-G-13
 - Grease bearing 130-G-7
- ProDrive™ (if equipped) 45-M-31
- ProDrive™ transmission
- Advanced settings ProDrive™ limp home mode ...
45-I-4
 - Advanced settings ProDrive™ tow mode 45-I-2
 - Engine speed management 35-5
 - Gear case
 - Oil recommendations 125-14
 - Limp home mode 45-I-2
 - Tow mode 45-I-2
- Push button shift gear (if equipped) 45-M-31
- Q**
- Quick stop switch 45-M-33
- R**
- Radiator
- Adjusting
 - Rotary screen brush 130-Q-14, 130-R-15
 - Check coolant level 30-2
 - Cleaning 130-A-3, 130-B-5
 - Draining system 130-P-10
 - Filling system 130-P-12
 - Maintenance
 - Change engine coolant 130-N-1
 - Replacing
 - Fan drive belt (Final Tier 4/Stage V)
 - 13.5 L 130-R-13
 - Rotary screen belt 130-Q-3, 130-R-5
 - Rotary screen drive belt (Final Tier 4/Stage V)
 - 9.0 L 130-Q-7
 - 13.5 L 130-R-10
-

Rotary screen drive belt (Tier 2/Stage II)		Width.....	45-B-4
9.0 L	130-Q-4	Residue material handling option	
13.5 L	130-R-7	Intermediate/Deluxe residue	70-1
Vacuum fan drive belt (Final Tier 4/Stage V)		Premium residue	70-1
9.0 L	130-Q-8	Straw spreader.....	70-1
13.5 L	130-R-11	Residue mode.....	45-B-3
Vacuum fan driven belt (Final Tier 4/Stage V)		Response aggressiveness	
9.0 L	130-Q-8	Auto maintain	45-L-28
Variable speed drive belt (Final Tier 4/Stage V)		HarvestSmart™	45-L-11
9.0 L	130-Q-9	Resume preferences	45-C-22
Routing		Rice	
Rotary screen belt.....	130-Q-3, 130-R-5	Crop settings.....	100-11
Winterize system	130-P-12	Right-hand cab items.....	45-M-9
Radio.....	20-1, 45-M-22	Road transport disconnect.....	45-M-31
After market radios	20-1	Road transport speed	
Antenna.....	20-2	Specifications	110-7
CB mounting	20-3	Road transporting.....	90-1
CB wiring	20-3	Header attached.....	85-1, 90-1
Controls.....	20-2	Rotary screen	
Frequency	20-1	Adjusting	
Seek.....	45-M-30	Brush.....	130-Q-14, 130-R-15
Raise/lower speed	45-C-7	Cleaning	130-A-3, 130-B-5
Raising machine		Replacing	
Jack pocket locations decal	85-12	Belt.....	130-Q-3, 130-R-5
Pocket locations	85-13, 90-11	Drive belt (Final Tier 4/Stage V)	
Rape Seed (Dry)		9.0 L	130-Q-7
Crop settings.....	100-10	13.5 L	130-R-10
Rape Seed (Green)		Drive belt (Tier 2/Stage II)	
Crop settings.....	100-11	9.0 L	130-Q-4
Rear ladder and landing	130-P-1	13.5 L	130-R-7
Reel and cutterbar calibration procedure	45-K-22	Routing	
Reel and cutterbar position.....	45-K-22	Belt.....	130-Q-3, 130-R-5
Reel and cutterbar position calibration procedure	45-K-22	Rotational alarm system	10-16
Reel position resume	45-C-24	Rotor	
Reel pump		Installing	
Grease reel drive pump sheave bearing	130-G-3	Threshing elements (TriStream rotor).....	65-29
Reel raise/lower, reel fore/aft (if equipped) switch	45-M-35	Threshing elements (Variable Stream rotor)	65-34
Refueling, avoid static electricity risk.....	10-5, 125-1	Threshing tines (TriStream rotor).....	65-29
Required machine stop warning	35-3	Threshing tines (Variable Stream rotor)	65-34
Residue management.....	45-B-1	Removing	
Access residue management	45-B-1	Threshing elements (TriStream rotor).....	65-29
Auto swap	45-B-7	Threshing elements (Variable Stream rotor)	65-34
Direction	45-B-5	Threshing tines (TriStream rotor).....	65-29
Grease spreader disk	130-G-8	Threshing tines (Variable Stream rotor)	65-34
Intermediate/Deluxe residue	70-1	Separator tine location (TriStream rotor dense pack configuration)	65-33
Knife bank	45-B-7	Separator tine location (TriStream rotor standard configuration) (S760 and S770)	65-31
Out-of-cab adjustments	45-B-6	Separator tine location (TriStream rotor tough grain rotor configuration)	65-32
Premium residue	70-1	Separator tine location (Variable Stream rotor dense pack configuration)	65-37
Residue management.....	45-B-1	Separator tine location (Variable Stream rotor standard configuration)	65-36
Residue mode	45-B-3		
Separator vane	45-B-3		
Speed	45-B-4		
Straw spreader.....	70-1		
Swap	45-B-6		

Threshing element location (TriStream rotor dense pack configuration)	65-33
Threshing element location (TriStream rotor standard configuration) (S760 and S770)	65-31
Threshing element location (TriStream rotor tough grain rotor configuration)	65-32
Threshing element location (Variable Stream rotor dense pack configuration)	65-37
Threshing element location (Variable Stream rotor standard configuration)	65-36
Row width	45-C-5
Rye	
Crop settings	100-12

S

Safety	
Backup alarm	10-14
Battery safe installation	80-3
Decals	
Cab	15-6, 15-20
Cab ladder	15-6
Engine view	15-13
Front view	15-1
Jack pocket locations	85-12
Left-hand view	15-7, 15-9
Left-hand view feeder house	15-4
Left-hand view residue (chopper)	15-11
Left-hand view residue (spreader)	15-12
Machine tie down locations	90-10
Right-hand view	15-17, 15-20
Right-hand view feeder house	15-22
Right-hand view residue (chopper)	15-15
Right-hand view residue (spreader)	15-16
Top view	15-24
Feeder house stop	55-1
Fire extinguisher	20-5, 20-6, 115-3, 115-4
Charge	115-2
Checklist	115-1
Locations	20-7, 115-5
Operating	115-1
Recommended fire preventions	115-1
Halogen bulb safety rules	80-11
Header transport	10-3
Heated and ventilated operator's seat	10-7
Jack pocket locations	85-13, 90-11
Machine features	05-1
Machine tie down locations	90-10
Operator ability	10-2
Safe maintenance, practice	10-8
Tires, service safely	10-11
Safety signs	
Accumulator decal	110-1
Safety Signs	
Cab/platform access ladder	110-1
Operator's manual	110-1

Safety, Avoid High-Pressure Fluids	
Avoid High-Pressure Fluids	10-10
Safety, Handle Fuel Safely, Avoid Fires	
Avoid Fires, Handle Fuel Safely ..	10-4, 115-2, 125-1
Safety, lubricants	125-17
Safflower	
Crop settings	100-12
Save preset	45-F-6
Scroll button	45-A-7
Seat belts	45-M-19
Inspect	130-G-15
Seat controls	45-M-12
Seek	45-M-30
Sensor	
ActiveYield™	75-4
Adjusting	
Grain tank fill	75-2
Separator	
Adjusting	
Chaffer motor	65-58
Chaffer switch	65-55
Clean grain elevator belt	65-59
Clean grain elevator conveyor chain	65-60
Cleaning fan actuator (Active Terrain Adjustment)	65-50
Cleaning fan actuator (Non—Active Terrain Adjustment)	65-50
Cleaning fan belt	65-49
Cleaning shoe belt	65-49
Conveyor auger belt	65-49
Countershaft right-hand front belt	65-47
Countershaft right-hand rear belt	65-47
Discharge beater belt	65-40
Dual zone adjust rear chaffer	65-55
Feed accelerator belt	65-6
Front chaffer	65-52
Overshot beater belt (if equipped)	65-45
Sheave drive gap	65-38
Sieve motor	65-58
Sieve switch	65-55
Speeds	65-37
Tailings elevator drive belt	65-64
Tailings system drive belt	65-65
Tailings system drive chain	65-66
Tailings system elevator paddle chain	65-64
Tailings system elevator paddles	65-63
Tailings system rasp bars	65-69
Tailings system return concave	65-70
Tailings system wear strips	65-69
Upper tailings auger drive chain	65-65
Air chutes	70-10
Auger bed dividers	65-39
Chaffer/sieve/return pan assemblies	
Non-serviceable	65-58

Changing		Maintenance	
High speed high capacity feed accelerator speed	65-7	Change separator drive oil	130-J-2
Standard speed high capacity feed accelerator speed	65-7	Check separator drive oil	130-G-8
Cleaning		Check two-speed separator drive oil	130-B-5
Clean grain elevator camera	65-62	Cycle separator variable speed driven sheave ..	130-B-3
Machine cleanout (Annual cleanout and Specialty Crops)	120-7	Cycle separator variable speed driver sheave ...	130-B-3
Machine cleanout (Periodic cleanout)	120-1	Grease separator variable speed driven sheave	130-B-4, 130-E-2
Tailings auger	65-70	Grease separator variable speed driver sheave	130-B-4, 130-E-2
Tailings system elevator camera	65-62	Grease variable speed driver sheave	130-G-4
Tailings system elevator sensors	65-63	Measuring	
Cleaning shoe access door	65-48	Chaffer	65-52
Cleaning shoe air chutes	65-48	Sieve	65-52
Cleaning shoe auger gears		Posi-Torq	
Cleanout door (if equipped)	65-49	Speed ranges	65-37
Manual cleanout door	65-48	Premium corn chaffer	65-53
Concave recommendations	65-8, 100-16	Rail liners	65-13
Concave sector gear shear bolts (Standard Concave Adjust)	65-13	Removing	
Concave types	65-8	Chaffer elements	65-56
MaxThresh™ and MaxRound™	65-9	Concave sections (Active Concave Isolation) ...	65-17
Covers	60-4	Concave sections (Standard Concave Adjust) ..	65-14
Deep-tooth chaffer	65-53	Overshot beater floor (if equipped)	70-10
Deep-tooth sieve	65-54	Sieve elements	65-56
Fixed front chaffer	65-52	Tailings system rasp bars	65-67
Flat-tooth comb chaffer	65-54	Tailings system wear strips	65-67
General purpose sieve	65-54	Threshing elements (TriStream rotor)	65-29
General-purpose chaffer	65-53	Threshing elements (Variable Stream rotor)	65-34
Grate covers (If equipped)	65-10	Threshing tines (TriStream rotor)	65-29
Grate interrupter locations (If equipped)	65-12	Threshing tines (Variable Stream rotor)	65-34
Grate interrupters (If equipped)	65-11	Tine feed accelerator comb floor (Rice machines)	65-3
Grate spacers	65-9	Replacing	
Grate types	65-10	Clean grain elevator belt	65-59
Grease separator bearing	130-G-7	Cleaning fan belt	65-50, 65-51
Heavy-Duty Cast Grate interrupters (If equipped) ..	65-11	Cleaning shoe belt	65-50
Installing		Conveyor auger belt	65-50
Chaffer elements	65-56	Countershaft right-hand front belt	65-47
Concave sections (Active Concave Isolation) ...	65-17	Countershaft right-hand rear belt	65-48
Concave sections (Standard Concave Adjust) ..	65-14	Discharge beater belt	65-40
Sieve elements	65-56	Discharge beater wear strips	65-43
Tailings system rasp bars	65-67	Discharge beater wear strips (Tough Crop)	65-45
Tailings system wear strips	65-67	High speed high capacity feed accelerator belt ..	65-5
Threshing elements (TriStream rotor)	65-29	Overshot beater belt (if equipped)	65-46
Threshing elements (Variable Stream rotor)	65-34	Overshot beater wings (if equipped)	65-46
Threshing tines (TriStream rotor)	65-29	Standard discharge beater wear strips	65-44
Threshing tines (Variable Stream rotor)	65-34	Standard feed accelerator wear strips	65-1
Left-hand drive belts	65-71	Standard speed high capacity feed accelerator belt	65-5
Leveling		Tailings system drive belt	65-65
Concave (Active Concave Isolation)	65-25		
Concave (Standard Concave Adjust)	65-23		

Tailings system drive chain.....	65-66	Spreader (Deluxe residue)	150-6
Tine feed accelerator wear strips.....	65-2	Transmission	150-5
Tough crop feed accelerator wear strips	65-1	Two speed four-wheel drive motor	150-4
Variable drive belt	65-39	Vane tailboard (Deluxe, Intermediate and Premium residue).....	150-6
Right-hand drive belts.....	65-72	Serial Numbers	
Separator tine location (TriStream rotor dense pack configuration)	65-33	Type Plate	150-2
Separator tine location (TriStream rotor standard configuration) (S760 and S770)	65-31	Service	
Separator tine location (TriStream rotor tough grain rotor configuration)	65-32	2000 hours	
Separator tine location (Variable Stream rotor dense pack configuration)	65-37	Replace DEF in-line filter.....	130-K-2
Separator tine location (Variable Stream rotor standard configuration)	65-36	2000 Hours/36 Months	
Threshing element location (TriStream rotor dense pack configuration)	65-33	Changing DEF dosing unit filter	130-K-1, 130-L-1
Threshing element location (TriStream rotor standard configuration) (S760 and S770)	65-31	4500 hours	
Threshing element location (TriStream rotor tough grain configuration).....	65-32	Replace DEF in-line filter.....	130-L-2
Threshing element location (Variable Stream rotor dense pack configuration).....	65-37	Access	
Threshing element location (Variable Stream rotor standard configuration)	65-36	Diesel Exhaust Fluid (DEF) dosing unit filter (Final Tier 4/Stage V)	130-P-4
Tine feed accelerator comb floor (Rice machines) ..	65-2	Diesel Exhaust Fluid (DEF) tank in-line filter (Final Tier 4/Stage V)	130-P-4
Top cover vanes (If equipped)	65-29	Accumulator pressure.....	130-2
Troubleshooting	135-1	Adjusting	
Unplugging	65-73	Belt first 50 hours	25-3
Discharge beater	65-73	Clean grain elevator conveyor chain.....	65-60
Feeder accelerator	65-73	Grain tank covers (If equipped).....	75-3
Separator		Grain tank loading auger (Grain tank covers) ..	75-7
Dual-range		Unloading auger cradle support	75-10
Speeds	65-37	Unloading auger drive chain	75-9
Separator engage	45-M-27	Unloading auger position.....	75-10, 75-11
Separator losses.....	45-L-23	Air conditioner	
Separator resolution.....	45-F-13	Clean drain hose	130-A-6
Separator vane.....	45-B-3	As required	
Separator vane adjustments	45-L-25	Cleaning DEF tank.....	130-P-4
Serial number identification.....	110-18, 150-1, 150-2	Basic tire information.....	85-2
Advance PowerCast™ tailboard (Intermediate and Premium residue)	150-6	Belt care and conditioning.....	110-9
Cab.....	150-4	Bleeding fuel system.....	130-P-10
Chopper (If equipped).....	150-6	Break-in check before first 100 hours.....	25-3
Engine (Final Tier 4/Stage V)	150-3	Break-in service after 100 hours (Tier 2/Stage II) ..	25-4
Engine (Tier 2/Stage II).....	150-3	Break-in service after 400 hours (Final Tier 4/Stage V).....	25-4
Engine gear case.....	150-5	Breaking-in engine	25-1
Feeder house reverser.....	150-5	Cab	
Hydrostatic drive motor	150-4	Clean cab fresh air filter	130-B-6, 130-O-1
Hydrostatic drive pump	150-4	Clean recirculating filter	130-E-1, 130-O-1
Interpreting engine serial number	150-2	Fill windshield washer reservoir	130-O-2
Multi-speed feeder house gear case (If equipped) ..	150-5	Inspect seat belts.....	130-G-15
PowerCast tailboard (Deluxe residue)	150-6	Care and service of tires	85-1
Rotor drive gear case.....	150-5	Centering	
		Chopper blades.....	70-20
		Check coolant level	30-2
		Check engine oil.....	30-1
		Check hydraulic reservoir oil	30-2
		Check hydrostatic oil	30-2
		Checking	
		Diesel Exhaust Fluid (DEF) tank breather (Final Tier 4/Stage V)	30-4

-
- Checking fuel system 30-3
 - Checking fuel tank breather 30-4
 - Checking tire pressure 85-3, 85-5, 85-8, 85-9
 - HillMaster 85-7, 85-10
 - Clean grain elevator
 - Camera desiccant 130-G-18, 130-O-4
 - Clean camera 130-A-7, 130-B-7, 130-G-17, 130-O-3
 - Clean moisture sensor 130-B-6, 130-G-17, 130-O-2
 - Clean moisture sensor bypass auger 130-B-6, 130-B-7, 130-G-17, 130-G-18, 130-O-3
 - Wear plates and door 65-61
 - Cleaning
 - Clean grain elevator camera 65-62
 - Fuel precleaner 130-P-6
 - Heavy-duty fuel precleaner filter (optional) 130-P-8
 - Machine cleanout (Annual cleanout and Specialty Crops) 120-7
 - Machine cleanout (Periodic cleanout) 120-1
 - Mass flow sensor (Grain tank covers) 75-9
 - Mass flow sensor (Grain tank extensions) ... 75-8
 - Quick response (QR) code 120-1
 - Tailings system camera 65-62
 - Windows, mirrors, and lights 130-O-5
 - Cleaning engine compartment 30-8, 115-5
 - Cleaning fan
 - Grease cleaning fan bearings 130-G-7
 - Grease cleaning fan variable lower sheave 130-B-4
 - Grease cleaning fan variable upper sheave 130-B-4
 - Cleaning tracks 110-8
 - Cleanout areas 110-8
 - Conveyor auger
 - Grease conveyor auger slip clutch 130-G-7
 - Daily 110-10
 - Discharge beater
 - Grease discharge beater bearings 130-G-7
 - Draining
 - Diesel Exhaust Fluid (DEF) tank (Final Tier 4/ Stage V) 130-P-3
 - Water separator primary filter 130-P-6
 - Draining cooling system 130-P-10
 - Draining fuel tank 130-P-5
 - Drive wheel bolt torque 85-11
 - Drives
 - Change final drive oil 130-J-2
 - Check final drive oil 130-G-8
 - Grease final drive couplers 130-B-8
 - Grease final drive outer bearing 130-A-6, 130-B-2
 - Grease final drive pivot (HillMaster™ machines) 130-A-7, 130-A-8
 - Grease header tilt primary cylinder pivot pin (HillMaster™ machines) 130-A-8
 - Grease leveling cylinder barrel (HillMaster™ machines) 130-A-7, 130-A-8
 - Grease master cylinder pivot pin (HillMaster™ machines) 130-A-7
 - Grease rear axle tie rods 130-G-8
 - Grease two-speed four-wheel drive motor pivots 130-A-5, 130-B-2
 - Grease two-wheel drive extra heavy-duty spindle bearings and pivot pins 130-A-5, 130-B-2
 - Grease two-wheel drive heavy-duty spindle bearings and pivot pins 130-A-5, 130-B-2
 - Electrical
 - Check batteries 130-G-11
 - Engine
 - Change engine coolant 130-N-1
 - Change engine oil and filter 130-F-1, 130-F-2
 - Change main engine gear case oil 130-I-1, 130-J-2
 - Charge air cooler 130-A-3, 130-B-5
 - Check air filter elements 130-G-16
 - Check crankshaft damper 130-J-4
 - Check engine debris management air filter 130-G-12
 - Check engine oil 130-A-2
 - Check engine valve lash 130-J-2
 - Check water separator 130-G-2
 - Clean alternator screen 130-O-2
 - Clean condenser 130-A-3, 130-B-5
 - Clean Diesel Exhaust Fluid (DEF) tank breather 130-F-3
 - Clean fuel precleaner filter 130-B-4, 130-G-1
 - Clean fuel tank breather 130-F-3
 - Clean oil cooler 130-A-3, 130-B-5
 - Clean radiator 130-A-3, 130-B-5
 - Clean rotary screen 130-A-3, 130-B-5
 - Clean water separator primary fuel filter . 130-B-5
 - Drain water from air compressor reservoir 130-A-5
 - Grease variable speed driven sheaves ... 130-G-3
 - Grease variable speed driver sheaves ... 130-G-3
 - Inspect coolant level 130-A-3
 - Inspect fuel precleaner filter 130-A-5
 - Replace crankshaft damper 130-M-1
 - Replace Diesel Exhaust Fluid (DEF) tank breather 130-G-16
 - Replace fuel tank breather 130-G-16
 - Replace hydraulic/hydrostatic charge filter 130-G-11
 - Replace hydrostatic charge filter 130-G-12
 - Replace main engine gear case filter 130-C-1, 130-G-12
 - Replace main engine gear case lube filter 130-C-1, 130-G-15
 - Replace primary fuel filter 130-G-2
 - Replace secondary fuel filter 130-G-2
 - Every 1000 hours 110-11
-

-
- Feeder house
 - Change feeder house reverser gear case oil 130-H-1
 - Check feeder house reverser drive gear case oil 130-B-3
 - Clean lateral tilt feeder house 130-B-3
 - Clean multi-speed feeder house drive gear case 130-G-16
 - Clean stone trap..... 130-A-6
 - Grease feeder house slip clutch..... 130-G-15
 - Grease variable speed feeder house reverser drive gear case..... 130-A-6, 130-B-2
 - Grease variable speed feeder house upper sheaves 130-B-3
 - Filling
 - Diesel Exhaust Fluid (DEF) tank (Final Tier 4/ Stage V)..... 130-P-2
 - Filling cooling system 130-P-12
 - Filling fuel tank..... 125-1, 130-P-5
 - Fire extinguisher..... 115-1
 - Charge..... 115-2
 - Inspect fire extinguisher 130-G-13
 - Inspect fire extinguisher straps 130-O-5
 - Fire preventions 115-1
 - Flushing
 - Heavy-duty fuel precleaner filter (optional)130-P-7
 - Fuel tank shut-off valve..... 130-P-6
 - Grain tank
 - Check loading auger gear case oil..... 130-G-16
 - Clean mass flow sensor..... 130-B-5
 - Grease chopper driveshaft bearing 130-G-4
 - Grease unloading auger upper gear case 130-G-3
 - Grease unloading driveshaft bearing 130-G-4
 - Grease vertical unloading auger upper gear case 130-G-4
 - Header clutch
 - Electromagnetic nut..... 130-G-15
 - Header pump
 - Grease header drive pump sheave bearing 130-G-3
 - Header suspension
 - Service mode 45-K-24
 - Hydraulic system
 - Change hydraulic reservoir filter..... 130-I-2
 - Change hydraulic reservoir oil..... 130-J-1
 - Check hydraulic reservoir oil level 130-A-4
 - Check main engine gear case oil level ... 130-A-4
 - Hydraulic system cleanliness 130-1
 - Installing front wheels..... 85-18
 - Interval
 - Clearing..... 130-1
 - Setup..... 130-1
 - Interval chart..... 110-9
 - As required..... 130-O-1
 - Every 10 hours 130-A-1
 - Every 50 hours 130-B-1
 - Every 100 hours..... 130-D-1
 - Every 200 hours..... 130-E-1
 - Every 250 hours..... 130-F-1
 - Every 400 hours.... 130-G-1, 130-G-6, 130-G-10, 130-G-14
 - Every 800 hours..... 130-H-1
 - Every 1000 hours 130-I-1, 130-I-3
 - Every 2000 hours 130-J-1, 130-J-4, 130-K-1
 - Every 3500 hours 130-L-1
 - Every 4500 hours 130-M-1
 - Every 6000 hours 130-N-1
 - Every five years 130-M-1
 - Every six years 130-N-1
 - Every three years 130-K-1, 130-L-1
 - First 100 hours 130-C-1
 - Overshot beater
 - Change overshot beater gear case oil..... 130-J-3
 - Check overshot beater gear case oil 130-G-8
 - Grease discharge beater bearings 130-G-7
 - Preparing dual wheels 85-12
 - Primary countershaft
 - Change primary countershaft gear case oil130-J-3
 - Check primary countershaft gear case oil130-G-13
 - Grease primary countershaft..... 130-E-1
 - Grease primary countershaft bearing 130-G-7
 - Grease primary countershaft universal joint spline 130-G-4
 - Rear wheel bolt torque..... 85-22
 - Reel pump
 - Grease reel drive pump sheave bearing . 130-G-3
 - Removing
 - Air cleaner filters 130-P-13
 - Engine debris management air filter (Final Tier 4/ Stage V)..... 130-P-15
 - Tine feed accelerator comb floor (Rice machines) 65-3
 - Unloading auger drive chain links 75-9
 - Removing front wheels 85-14
 - Replacing
 - Advanced PowerCast spreader disks..... 70-24
 - Chopper blades..... 70-17, 70-18
 - Discharge beater wear strips 65-43
 - Disk assemblies (Dual speed) 70-28
 - Disk assemblies (Single speed) 70-27
 - Heavy-duty fuel precleaner filter (optional)130-P-8
 - Hydraulic hose..... 130-1
 - Middle splitter knife 70-19
 - Overshot beater wings (if equipped) 65-46
 - Primary and secondary fuel filter..... 130-P-8
 - Standard discharge beater wear strips 65-44
 - Standard feed accelerator wear strips..... 65-1
 - Stationary knives (electric actuator)..... 70-15
 - Stationary knives (without electric actuator) 70-14
 - Tine feed accelerator wear strips..... 65-2
 - Tough crop discharge beater wear strips.... 65-45
 - Tough crop feed accelerator wear strips 65-1

Separator		Guar (Cluster Beans)	100-6
Change separator drive oil	130-J-2	Lentils	100-6
Check separator drive oil	130-G-8	Lupins	100-7
Check two-speed separator drive oil	130-B-5	Millet	100-7
Cycle separator variable speed driven sheave ..	130-B-3	Mustard	100-8
Cycle separator variable speed driver sheave ...	130-B-3	Navy Beans	100-8
Grease separator bearing	130-G-7	Oats	100-9
Grease separator variable speed driven sheave	130-B-4, 130-E-2	Peas	100-9
Grease separator variable speed driver sheave	130-B-4, 130-E-2	Popcorn	100-10
Grease variable speed driver sheave	130-G-4	Rape Seed (Dry)	100-10
Separator rail liners	65-13	Rape Seed (Green)	100-11
Spreader		Rice	100-11
Grease spreader disk	130-G-8	Rye	100-12
Tailings auger		Safflower	100-12
Grease feed accelerator bearings	130-G-5	Sorghum	100-13
Grease tailings auger drive slip clutch	130-G-6	Soybeans	100-13
Tailings elevator		Sunflower	100-14
Grease tailings elevator slip clutch	130-A-7, 130-B-8	Triticale	100-14
Tailings system		Wheat Difficult	100-15
Camera desiccant	130-G-18, 130-O-4	Wheat Normal	100-15
Clean tailings system camera .	130-A-7, 130-B-7, 130-G-18, 130-O-4	Crop diverter	70-9
Tires		Drum height (Hydraulic tilt)	55-9
Check bolt torque	130-D-1	Drum height (Manual tilt)	55-8
Check tire pressure	130-D-1	Front and rear tire information	85-10
Track Replacement	110-10	Harvesting tips	95-1
Transmission		Operation at low temperatures	95-1
Change brake fluid	130-I-3	Power shutdown procedure	100-16
Change transmission oil	130-J-3	Stationary knife bank (without electric actuator)	70-11
Check brake fluid	130-G-13	Tailboard vanes	70-6, 70-7, 70-23
Check park brake cylinder cables	130-G-11	Tailings system return concave	65-70
Check transmission oil	130-G-11	Shear bolt	
Winterize cooling system	130-P-12	Unloading auger drive	75-6
Set performance target	45-L-21	Location	75-6
Set temperature	45-H-2	Shear screw location	
Settings		Single point latching	55-29
Ballast requirements	85-24, 85-25	Shield	
Changing chopper speeds	70-21	Cleaning	
Chopper controller bar (optional)	70-11	Machine cleanout (Annual cleanout and Specialty Crops)	120-7
Crop		Machine cleanout (Periodic cleanout)	120-1
Alfalfa	100-1	Shields	
Barley	100-1	Feeder house	55-1
Canola	100-2	Feeder house doors	55-2
Chickpeas	100-2	Gull wing doors	60-1
Corn (Dry)	100-3	Cylinder adjustment	60-2
Corn (Wet)	100-3	Left-hand side	60-2
Corn Cob Mix	100-4	Right-hand side	60-4
Edible Beans	100-4	Separator covers	60-4
Flax	100-5	Toolbox (If Equipped)	60-2
Footnotes description page	100-15	Shoe losses	45-L-23
Grass Seed	100-5	Shoe resolution	45-F-14
		Side finder lights	
		Replacing	80-20

Sieve		Speed limit.....	45-L-10
Adjusting		Spreader	
Motor.....	65-58	General information	70-25
Adjusting switch	65-55	Grease spreader disk	130-G-8
Deep-tooth sieve	65-54	Lowering	70-26
General purpose sieve.....	65-54	Replacing	
Installing		Advanced PowerCast spreader disks.....	70-24
Elements	65-56	Disk assemblies (Dual speed)	70-28
Measuring	65-52	Disk assemblies (Single speed)	70-27
Removing		Wide spread straw spreader (optional)	70-28
Elements	65-56	Windrow position	70-25
Sieve adjust	45-M-30	Standard weights chart	100-18
Sieve clearance.....	45-F-10	Starting fluid	
Signal words, understand.....	10-1	Changing	130-P-1
Single point		Operation	35-6
Adjusting		Safety	35-6
Lower cable end (level land).....	55-27	Stationary knife bank	
Cleaning		Adjusting (without electric actuator)	70-11
Latching pins.....	55-28	Installing (electric actuator).....	70-13
Shear screw location.....	55-29	Removing (electric actuator)	70-12
Unlatching		Replacing knives (electric actuator)	70-15
Pins	55-28	Replacing knives (without electric actuator) ..	70-14
Single-point		Status center	45-D-5
Adjusting		Steering	
Latching	55-26	Troubleshooting.....	135-7
Latching.....	55-24	Stone trap	55-4
Slip clutch		Clean.....	130-A-6
Grease feeder house slip clutch.....	130-G-15	Storage	
Software		Preparing machine	140-1
Terms and conditions	145-21	Removing machine from storage	140-1
Third-party software notifications and licenses	145-24	Winterize cooling system	130-P-12
Solutions.....	45-L-24	Storing fuel	125-2
Sorghum		Straw conditions	45-F-5
Crop settings.....	100-13	Straw quality issues	45-L-23
Sound level.....	145-16	Stubble lights	
Soybeans		Replacing.....	80-19
Crop settings.....	100-13	Sunflower	
Specifications	110-13	Crop settings.....	100-14
Dimension reference points	110-15, 145-15	Swap	45-B-6
Dimensions (S760 and S770).....	145-11	Switch	
Dimensions (S770 HillMaster™).....	145-12	Battery disconnect.....	80-6
Dimensions (S780 HillMaster™, S785 HillMaster™ and S790 HillMaster™).....	145-14	Chaffer adjusting	65-55
Dimensions (S780, S785 and S790).....	145-13	Chopper adjusting	70-21
Machine dimensions	110-14	Lighting delay/Timeout	50-8
Machine specifications (S760 and S770).....	145-5	Sieve adjusting.....	65-55
Machine specifications (S780, S785, and S790) ...	145-8	Switches	
Operating speeds (S760 and S770)	145-1	HillMaster™ leveling control.....	105-3
Operating speeds (S780, S785 and S790).....	145-3		
Road speeds.....	110-7		
Sound level.....	145-16		
Track module dimensions	110-13		
Whole body vibration.....	145-16		
Speed	45-B-4		

T

Tailboard	
Adjusting.....	70-4
PowerCast™ (optional).....	70-8
Vane settings	70-6, 70-7, 70-23
Vanes	70-5, 70-22
PowerCast™ (optional)	
Rear shrouds	70-9

Replacing		
PowerCast™ blades (optional)	70-8	
Tailings auger		
Maintenance		
Grease tailings auger drive slip clutch....	130-G-6	
Tailings elevator		
Adjusting		
Drive belt	65-64	
Upper drive chain	65-65	
Camera	65-62	
Maintenance		
Grease tailings elevator slip clutch.....	130-A-7, 130-B-8	
Sensors	65-63	
Tailings system		
Adjusting		
Drive belt	65-65	
Drive chain	65-66	
Elevator paddles.....	65-63	
Rasp bars	65-69	
Return concave.....	65-70	
Tailings elevator paddle chain	65-64	
Wear strips	65-69	
Cleaning		
Auger cleanout	65-70	
Tailings elevator camera.....	65-62	
Tailings elevator sensors	65-63	
Installing		
Rasp bars	65-67	
Wear strips	65-67	
Maintenance		
Camera desiccant	130-G-18, 130-O-4	
Clean tailings system camera .	130-A-7, 130-B-7, 130-G-18, 130-O-4	
Removing		
Rasp bars	65-67	
Wear strips	65-67	
Replacing		
Drive belt	65-65	
Drive chain	65-66	
Tank unloading offset.....	45-D-2	
Tensioning system	110-8	
Testing diesel fuel	125-5	
Threshing clearance.....	45-F-7	
Threshing clearance (active concave isolation)	45-K-15	
Threshing clearance (active concave isolation) calibration procedure.....	45-K-16	
Threshing clearance (standard concave adjust)	45-K-3	
Threshing clearance (standard concave adjust) calibration procedure.....	45-K-3	
Threshing clearance adjust.....	45-M-27	
Threshing conditions	45-F-4	
Threshing elements		
Location (TriStream rotor dense pack configuration)	65-33	
Location (TriStream rotor standard configuration) (S760 and S770)	65-31	
Location (TriStream rotor tough grain rotor configuration)	65-32	
Location (Variable Stream rotor dense pack configuration)	65-37	
Location (Variable Stream rotor standard configuration)	65-36	
Threshing elements (TriStream rotor)		
Installing	65-29	
Removing.....	65-29	
Threshing elements (Variable Stream rotor)		
Installing	65-34	
Removing.....	65-34	
Threshing speed	45-F-8	
Threshing speed adjust	45-M-28	
Threshing tines		
Location (TriStream rotor dense pack configuration)	65-33	
Location (TriStream rotor standard configuration) (S760 and S770)	65-31	
Location (TriStream rotor tough grain rotor configuration)	65-32	
Location (Variable Stream rotor dense pack configuration)	65-37	
Location (Variable Stream rotor standard configuration)	65-36	
Threshing tines (TriStream rotor)		
Installing	65-29	
Removing.....	65-29	
Threshing tines (Variable Stream rotor)		
Installing	65-34	
Removing.....	65-34	
Threshing vanes		
Top cover vanes (If equipped)	65-29	
Tie down machine locations	90-10	
Tie rods		
Grease rear axle tie rods	130-G-8	
Tilt frame		
Adjusting		
Feeder house (Manual tilt)	55-5	
Set		
Feeder house (Manual tilt)	55-5	
Tilt frame zero point		
Set		
Feeder house (Hydraulic tilt).....	55-6	
Tilt indicator		
Feeder house	55-23	
Tilt sensitivity	45-C-10	
Tilt speed	45-C-8	
Tires		
Ballast requirements	85-24, 85-25	
Basic tire information.....	85-2	
Care and service of tires	85-1	
Change tire radius code	95-4	

Checking pressure		Transporting machine	
Front tire	85-3, 85-5	Hauling	90-4
HillMaster	85-7, 85-10	Preparing dual wheels	85-12
Rear tire	85-8, 85-9	Tie down locations	90-10
Drive wheel bolt torque	85-11	Tie down locations decal	90-10
Drive wheel starter stud	85-11	Triticale	
Front drive wheel offset	85-11	Crop settings	100-14
Front tire information	85-10	Troubleshooting	
Installing		Air conditioner	135-18
Front wheels	85-18	Brakes	135-8
Liquid weight	85-22	Combine Advisor™	135-19
Preparing dual wheels for service	85-12	Electrical	135-16
Preparing dual wheels for transporting	85-12	Engine	135-8
Rear tire information	85-10	Feeder house	135-1
Rear wheel bolt torque	85-22	Four-wheel drive (optional)	135-7
Removing		Heater	135-18
Front wheels	85-14	Hydrostatic ground drive	135-4
Tires, service safely	10-11	Mass flow sensor (If equipped)	135-19
Toolbox	60-2	Moisture sensor (If equipped)	135-19
Torque charts		Separator	135-1
Metric	145-25	Steering	135-7
Unified inch	145-24	Type Plate	150-2
Tow hook			
Front	90-12		
Rear	90-13		
Tow mode			
ProDrive™ transmission	45-I-2		
Towing			
Machine	90-11		
Machine forward	90-12		
Machine rearward	90-13		
Track Replacement Criteria	110-10		
Tracks			
Benefits	110-5		
Components	110-5		
Features	110-5		
Trailer hitch			
Manual (standard)	90-12		
Semi-Automatic (Optional)	90-12		
Transmission			
Access transmission	45-I-1		
Advanced settings ProDrive™	45-I-2		
Limp home mode	45-I-2		
Tow mode	45-I-2		
Change brake fluid	130-I-3		
Change transmission oil	130-J-3		
Check brake fluid	130-G-13		
Check park brake cylinder cables	130-G-11		
Check transmission oil	130-G-11		
Max speed 1 and 2	45-I-2		
Transmission main page	45-I-1		
Transmission main page	45-I-1		
Transport			
Road speed specifications	110-7		
Transport information	90-11		

U

Unified inch bolt and screw torque values	145-24
Unloading auger	
Adjusting	
Auger position	75-10, 75-11
Cradle support	75-10
Drive chain	75-9
Lock arm positions	75-11
Maintenance	
Grease unloading auger upper gear case	130-G-3
Grease vertical unloading auger upper gear case	130-G-4
Removing	
Drive chain links	75-9
Replacing	
Drive belt	75-12, 75-13
Shear bolt	75-6
Location	75-6
Unloading auger drive switch	45-M-34
Unloading auger engage	45-K-16
Unloading auger engage calibration procedure	45-K-16
Unloading auger light	
Replacing	80-19
Unloading auger swing switch	45-M-34
Unthreshed losses	45-L-23
Unthreshed material	45-L-23
Uphill sensitivity	45-L-14

V

Vacuum fan	
Replacing	
Drive belt (Final Tier 4/Stage V)	
9.0 L	130-Q-8
13.5 L	130-R-11
Driven belt (Final Tier 4/Stage V)	
9.0 L	130-Q-8
Vanes	
Adjusting	
Crop diverter	70-3
Variable speed fan	
Maintenance	
Grease variable speed driven sheaves ...	130-G-3
Grease variable speed driver sheaves ...	130-G-3
Replacing	
Drive belt (Final Tier 4/Stage V)	
9.0 L	130-Q-9
Video application	
Adjusting cameras	80-11
Safety	80-9
Video interface capability	80-9
VisionTrak™	45-M-36
Operational checks	65-61

W

Wheat Difficult	
Crop settings	100-15
Wheat Normal	
Crop settings	100-15
Wheel offset	
Front tires	85-11
Whole body vibration	145-16
Width	45-B-4, 45-C-4
Width corn head	45-C-5
Windows	
Cleaning	130-O-5
Windrow convergence rakes	70-4
Windscreen position	45-K-28
Procedure	45-K-28
Windshield washer reservoir	
Filling reservoir	130-O-2
Wings	45-K-21
Wings calibration procedure	45-K-21
Work recording	45-C-6
Worklights controls	45-J-4
Worklights preset 1—high-beam	45-J-3
Worklights preset 1—low-beam	45-J-2
Worklights preset 2—high-beam	45-J-3
Worklights preset 2—low-beam	45-J-2

Y

Yield	
Delete unused samples	45-K-11

Yield

advanced edit	45-K-11
advanced settings	45-K-7
calibration quality	45-K-4
calibration quality indicator	45-K-7
collected sample status	45-K-8
edit/select calibration	45-K-10
mass flow rate	45-K-8
match scale weight	45-K-6
record sample	45-K-5
recording status	45-K-9
reset	45-K-9
status indicator	45-K-5
weight indicator	45-K-9
Yield calibration	45-K-4
Change tire radius code	95-4
Multi-point	95-4
Single point	95-4

John Deere Service Literature Available

Technical Information

Technical information can be purchased from John Deere. Publications are available in print or CD-ROM format.

Orders can be made using one of the following:

- John Deere Technical Information Store: **www.JohnDeere.com/TechInfoStore**
- Call 1-800-522-7448
- Contact your John Deere dealer

Available information includes:



TS189—UN—17JAN89

PARTS CATALOGS list service parts available for your machine with exploded view illustrations to help you identify the correct parts. It is also useful in assembling and disassembling.



TS191—UN—02DEC88

OPERATOR'S MANUALS providing safety, operating, maintenance, and service information.



TS224—UN—17JAN89

TECHNICAL MANUALS outlining service information for your machine. Included are specifications, illustrated assembly and disassembly procedures, hydraulic oil flow diagrams, and wiring diagrams. Some products have separate manuals for repair and diagnostic information. Some components, such as engines, are available in a separate component technical manual.



TS1663—UN—10OCT97

EDUCATIONAL CURRICULUM including five comprehensive series of books detailing basic information regardless of manufacturer:

- Agricultural Primer series covers technology in farming and ranching.
- Farm Business Management series examines “real-world” problems and offers practical solutions in the areas of marketing, financing, equipment selection, and compliance.
- Fundamentals of Services manuals show you how to repair and maintain off-road equipment.
- Fundamentals of Machine Operation manuals explain machine capacities and adjustments, how to improve machine performance, and how to eliminate unnecessary field operations.
- Fundamentals of Compact Equipment manuals provide instruction in servicing and maintaining equipment up to 40 PTO horsepower.

DX,SERV LIT-19-07DEC16

John Deere Service Keeps You on the Job

John Deere Parts



TS100—UN—23AUG88

We help minimize downtime by putting genuine John Deere parts in your hands in a hurry.

That's why we maintain a large and varied inventory—to stay a jump ahead of your needs.

DX,IBC,A-19-04JUN90

School is never out for John Deere service technicians.

Training schools are held regularly to be sure our personnel know your equipment and how to maintain it.

Result?

Experience you can count on!

DX,IBC,C-19-04JUN90

Prompt Service



TS103—UN—23AUG88

Our goal is to provide prompt, efficient care when you want it and where you want it.

We can make repairs at your place or at ours, depending on the circumstances: see us, depend on us.

JOHN DEERE SERVICE SUPERIORITY: We'll be around when you need us.

DX,IBC,D-19-04JUN90

The Right Tools



TS101—UN—23AUG88

Precision tools and testing equipment enable our Service Department to locate and correct troubles quickly . . . to save you time and money.

DX,IBC,B-19-04JUN90

Well-Trained Technicians



TS102—UN—23AUG88

