

Z300 Series Residential Zero Turn Mowers Serial Number 200001-



JOHN DEERE

OPERATOR'S MANUAL

**Residential ZTrak Z315E, Z320M,
Z320R**

OMUC48154E ISSUE F6 (ENGLISH)

John Deere Power Products

**Export Edition
PRINTED IN U.S.A.**

Introduction

Thank You for Purchasing a John Deere Product

We appreciate having you as a customer and wish you many years of safe and satisfied use of your machine.

MX00654,000020B-19-17SEP25

Required Emission-Related Information

Service Provider

A repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.

DX,EMISSIONS,REQINFO-19-08DEC23

Using Your Operator's Manual

Read this operator's manual, watch the safety video, www.deere.com/QR and review the safety signs on your machine before use. They all contain important safety information and operating instructions that must be followed to help keep you and others safe. Be sure everyone who uses the machine has read the manual, reviewed the safety signs, and knows how to use the machine safely and properly.

Your machine was designed and built to be operated in accordance with all the safe operating instructions. Since it was designed to cut grass, it can amputate hands and feet and throw objects. If you do not follow safety instructions, serious injury or death can occur.

This operator manual is organized in sections to help you find information quickly. You can use this manual to find answers to many of your operating and servicing questions. An index at the end of this book helps you find needed information quickly. Contact your dealer if this manual does not answer your questions.

Before using your machine:

- Know how to operate the machine. The Operating Controls section helps you understand the controls of your machine and what they do.
- Prepare your machine and the mowing area by performing required daily checks outlined in the General Instructions section.
- Follow instructions in the Preventing Injuries section, especially related to:
 - Keeping children safe by following instructions in the Protect Children section.
 - Avoiding injury on slopes and near terrain hazards by following instructions in the Operating on Slopes and Near Terrain Hazards section.
 - Follow the instructions in the Avoid Thrown Objects section and keep all guards in place, including discharge chute.

- Cleaning machine during use and before storing as outlined in the Prevent Fires section.
- Understand how to service and inspect your machine.

If you do not understand the instructions or have questions, contact your dealer.

The machine shown in this manual can differ slightly from your machine.

RIGHT-HAND and LEFT-HAND sides are determined by facing in the direction that the machine travels when going forward. When you see a broken line (-----), the item referenced is hidden from view.

Before delivering this machine, your dealer performed a predelivery inspection to ensure best performance.

This manual is an important part of your machine. Keep this manual with the machine when you sell it.

mk71445,1654877011782-19-10JUN25

Machine Use

This machine is designed solely for use in customary lawn mowing operations. Use in any other way is considered as contrary to the intended use.

The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service, and repair as specified by the manufacturer also constitute essential elements for the intended use.

This machine should be operated, serviced, and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations

on safety and occupational medicine, and the road traffic regulations must be observed at all times.

Setting fuel delivery beyond published factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

Any arbitrary modifications carried out on this machine will relieve the manufacturer of all liability for any resulting damage or injury.

OUO1023,0000025-19-05JUN17

Emissions Performance and Tampering Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system will void the European Union (EU) type approval and applicable emissions-related warranties.

AK08008,00000A6-19-14MAY25

Special Messages

Your manual contains special messages to bring attention to potential safety concerns and machine damage, as well as helpful operating and servicing information. Please read all the information carefully to avoid injury and machine damage.



CAUTION: Avoid injury! This symbol and text highlight potential hazards or death to the operator or bystanders that may occur if the hazards or procedures are ignored.

IMPORTANT: Avoid damage! This text is used to tell the operator of actions or conditions that might result in damage to the machine.

NOTE: General information is given throughout the manual that may help the operator in the operation or service of the machine.

MX00654,000020D-19-04AUG25

Parts

We recommend John Deere quality parts and lubricants, available at your John Deere dealer.

When you order parts, your John Deere dealer needs the serial number or product identification number (PIN) for your machine or attachment. These are the numbers that you recorded in the Product Identification section of this manual.

Order Service Parts Online

Visit <https://partscatalog.deere.com/jdrc/> for your Internet connection to parts ordering and information.

TC00531,00000E9-19-04AUG25

Service Literature

If you would like to purchase a copy of the Parts Catalog or Technical Manual for this machine, visit The John Deere Technical Information Store at:

<https://techpubs.deere.com/>

or call:

- **U.S. & Canada:** 1-800-522-7448.
- **All Other Regions:** Your John Deere dealer.

TH84124,0000199-19-04AUG25

Contents

	Page		Page
Product Identification		Testing Safety Systems	30-4
Record Identification Numbers	00-1	Testing Park Brake Switch	30-5
Safety Labels without Text		Testing Park Brake	30-5
Safety Label Location	05-1	Testing Mower Engagement (PTO) Switch	30-5
Understanding the Machine Safety Labels without Text	05-2	Testing Seat Switch	30-5
Avoid Injury from Loaded Spring	05-2	Using Park Brake	30-6
Avoid Injury from Rotating Blades	05-2	Using Key Switch	30-6
Avoid Injury from Getting Caught in Belts	05-2	Using Mower Engagement Switch	30-7
Read Operator's Manual	05-2	Using the Hour Meter	30-7
Keep Children Away from Mower	05-2	Using the Motion Control Levers	30-7
Avoid Injury From Tipping	05-3	Using Dual Levers (If Equipped)	30-9
Avoid Injury From Thrown Objects	05-3	Starting the Machine	30-9
Avoid Injury from Equipment Fires	05-3	Engaging Mower	30-10
Avoid Injury from Thrown Objects	05-3	Unplugging Mower	30-10
Hot Surface (Molded into Muffler)	05-4	Stopping the Machine	30-10
Safety		Move Machine by Hand	30-10
Use Your Mower Safely	10-1	Unplugging Mower, Bagger, or Material Collection System	30-11
Preventing Injuries	10-2	Using Wash Port to Clean Mower Deck	30-11
Operating on Slopes and Near Terrain Hazards	10-2	Transport Machine on Trailer	30-12
Prevent Fires	10-3	Transporting Material Collection System (If Equipped)	30-13
Parking Safely	10-4	Towing Loads	30-13
Additional Safety Information	10-4	Mowing Tips	30-13
Machine Cleanout		Blade Choices	30-13
General Cleaning Guidelines	15-1	Service Intervals	
Cleanout Areas	15-1	Servicing Your Machine	35-1
Assembly		Service Intervals	35-1
Charge and Connect Battery	20-1	Service Lubrication	
Check Tire Pressure	20-1	Grease	40-1
Adjust Mower Deck Level	20-1	Lubricating Mower Deck Spindles	40-1
Check Engine Oil Level	20-1	Service Engine	
Check Machine Safety System	20-1	Carbon Dioxide Emissions (CO ₂)	45-1
Operating Controls		Avoid Fumes	45-1
Operator's Station Controls	25-1	Gasoline Engine Oil	45-1
Operating		Checking Engine Oil Level	45-1
Daily Operating Checklist	30-1	Changing Conventional Engine Oil and Filter	45-2
Avoid Damage to Plastic and Painted Surfaces	30-1	Cleaning Air Intake Screen and Engine Fins	45-3
Mounting and Dismounting Machine	30-1	Cleaning Engine Shroud	45-3
Adjusting Seat	30-1	Checking and Cleaning Air Cleaner Element	45-4
Adjusting Motion Control Levers	30-1	Checking and Cleaning Air Cleaner Element (Z320)	45-5
Adjusting Cutting Height	30-2	Checking Spark Plug	45-6
Adjusting Mower Level	30-2	Adjusting Carburetor	45-7
Adjusting Mower Wheels	30-4	Replacing Fuel Filter	45-7
		Service Transmission	
		Checking Transmission	50-1
		Checking and Adjusting Neutral Creep	50-1

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

	Page		Page
Adjusting Tracking	50-2	John Deere Quality Statement	
Cleaning Transaxle Cooling Fans	50-2	John Deere Quality	90-1
Checking and Replacing Transaxle/ Transmission Drive Belt	50-3	Service Record	
Service Mower		Record Service Dates	SR-1
Mower Deck Identification	55-1	Declaration of Conformity	
Removing and Installing Mower Deck Foot Plate	55-1	Declaration(s) of Conformity	95-1
Removing Mower Deck (42A)	55-1	EU Declaration of Conformity	95-2
Installing Mower Deck (42A)	55-2	UK Declaration of Conformity	95-4
Replacing Mower Drive Belt (42A)	55-4	Slope Gauge	
Installing Mulch Blades	55-6	Slope Gauge Template	SG-1
Checking for Bent Mower Blades	55-7		
Servicing Mower Blades	55-7		
Service Electrical			
Service the Battery Safely	60-1		
Removing and Installing the Battery	60-1		
Cleaning Battery and Terminals	60-1		
Use Booster Battery	60-1		
Replacing Fuse	60-2		
Service Miscellaneous			
Gasoline Fuel for 4-Cycle Engines	65-1		
Fill Fuel Tank	65-1		
Lifting Machine	65-1		
Checking Tire Pressure	65-2		
Removing and Installing Wheel Assembly	65-2		
Removing and Installing Front Caster Wheels	65-3		
Cleaning and Repairing Metal Surfaces	65-4		
Troubleshooting			
Using Troubleshoot Chart	70-1		
Engine	70-1		
Electrical	70-1		
Machine	70-2		
Mower	70-2		
MulchControl (If Equipped)	70-2		
Storage			
Storing Safety	75-1		
Preparing Machine for Storage	75-1		
Preparing Fuel and Engine For Storage	75-1		
Removing Machine From Storage	75-2		
Specifications			
Engine	80-1		
Carbon Dioxide Emissions (CO ₂)	80-1		
Drivetrain	80-1		
Travel Speeds at Full Engine RPM	80-1		
Electrical System	80-2		
Fuel System	80-2		
Tires	80-2		
Capacities	80-2		
Dimensions	80-2		
Recommended Lubricants	80-2		
Mower Decks	80-2		
High Idle Engine Speed	80-2		
Speed of Rotation of Cutting Device	80-3		
Sound Measurements	80-3		
Vibration Measurements	80-3		

Product Identification

Record Identification Numbers

Zero-Turn Mowers


When you contact an Authorized Service Center for information on servicing, always provide the product model and identification numbers.

Locate the model and serial number for the machine, engine, and transmission/transaxle of your machine and record the information in the spaces provided as follows.

DATE OF PURCHASE:

DEALER NAME:

DEALER PHONE:

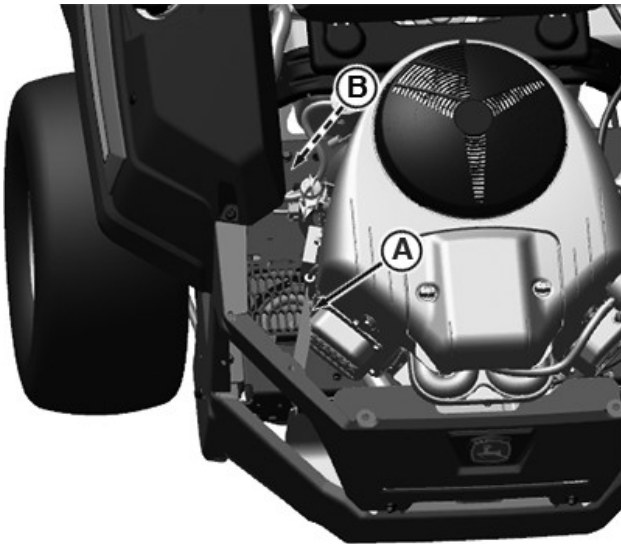

APY536232—UN—25APR22

Product Identification Number (A):

Engine Serial Number:

On engine blower housing.

Transaxle Serial Numbers (B):

S/N tag on the forward side of each transaxle housing.


LEFT SIDE:

RIGHT SIDE:

GH8XT3T,00008AD-19-25APR22

Safety Labels without Text

Safety Label Location

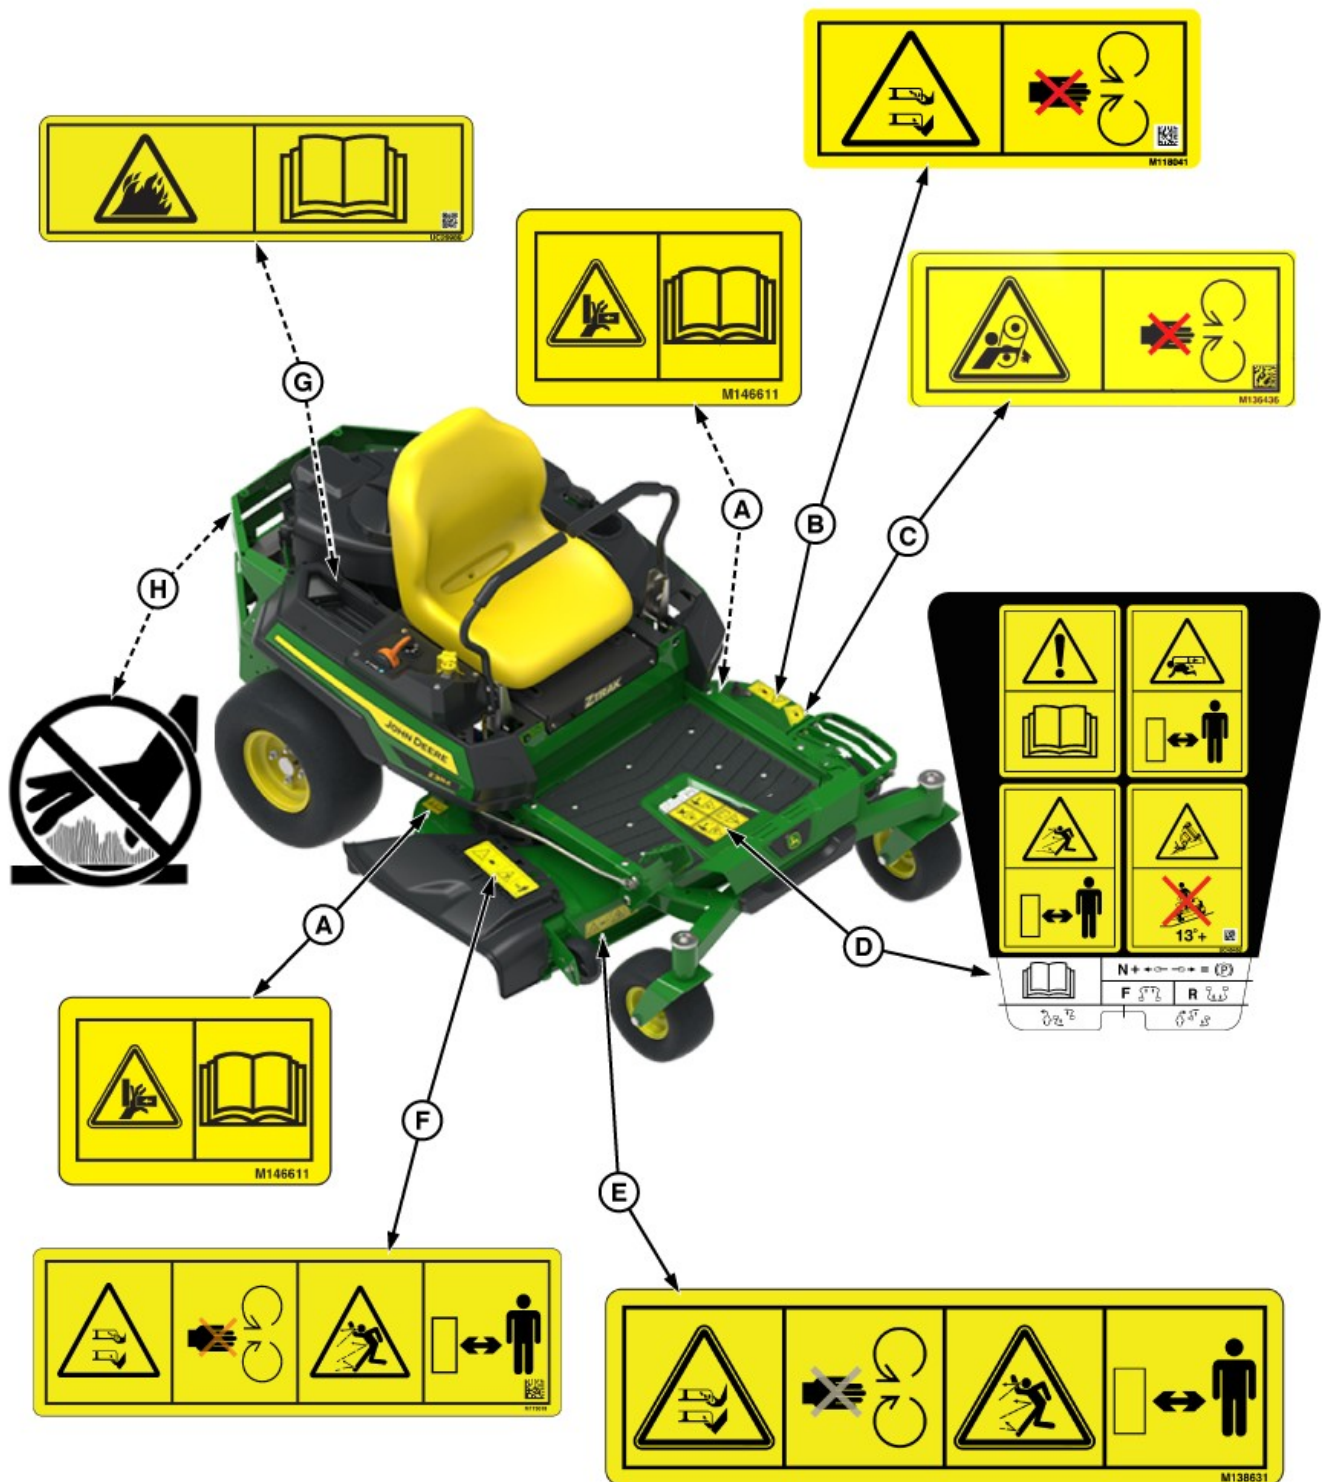

GX663355—UN—08MAY25

A—WARNING - M146611

B—DANGER - M118041

C—DANGER - M136436
D—DANGER, WARNING, CAUTION - UC45452
E—DANGER - M138631

F—DANGER - M173018
G—CAUTION - UC26989
H—Hot Surface (Molded into Muffler)

SDHTXN6,1746552064897-19-11MAY25

Understanding the Machine Safety Labels without Text




TCT005498—UN—11SEP12

Machine safety labels are placed on the machine to identify potential safety hazards.

Safety labels use the safety-alert symbol with the signal words DANGER, WARNING, and CAUTION. DANGER identifies the most serious hazards.

MX00654,0000389-19-11MAY26

Avoid Injury from Getting Caught in Belts

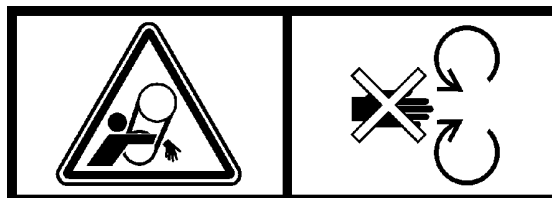


MXT018017—UN—03MAY16

- Stay clear of moving belts.
- Do not operate machine without shields in place.

MX00654,0000391-19-24APR19

Avoid Injury from Loaded Spring

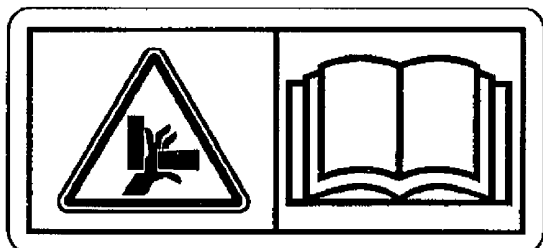

MXAL42777—UN—09APR13

- Keep fingers and hands away from pinch point.
- Read operator's manual.

MX00654,000038C-19-24APR19

Read Operator's Manual



MXT013479—UN—05MAR15

- This operator's manual contains important information necessary for safe machine operation.
- Carefully read operator's manual before operating machine. Observe all safety rules to avoid accidents.

TH84124,0000173-19-12JUN15

Avoid Injury from Rotating Blades



TC1362285—UN—28MAR24

- Do not put hands or feet under or into mower when engine is running.
- Do not operate mower without discharge chute/deflector or entire grass catcher in place.

MX00654,0000392-19-08APR24

Keep Children Away from Mower



MXT013480—UN—05MAR15

- Mower can cause dismemberment or death.
- Stay a safe distance from the machine.
- Make sure that children stay clear of mower at all times when the engine is running.

TH84124,0000174-19-12JUN15

Avoid Injury From Tipping




GX663356—UN—08MAY25

- Do not drive where the machine could slip, tip, or rollover.
- Never mow or operate the machine on slope angles greater than 13°.
- Refer to the "Operating on Slopes" section for more information.

SDHTXN6,1746607452600-19-10JUN25

Avoid Injury From Thrown Objects

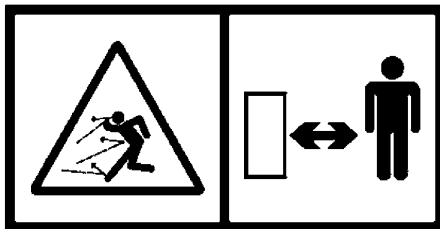


MXAL42780—UN—09APR13

Keep a safe distance from the machine as long as the engine is running.

MX00654,000038F-19-14JUN23

Avoid Injury from Equipment Fires

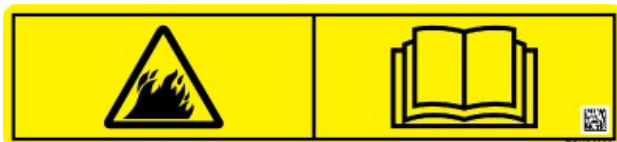

TC1362284—UN—28MAR24

- Avoid equipment fires.
- Accumulation of grass, leaves, and debris on or near hot or moving parts can cause a fire.
- Inspect and clean the entire machine before, during and after use.

- Shut off engine and allow machine to cool before cleaning.
- Carefully read operator's manual Machine Cleanout section for details.

MX00654,0000390-19-08APR24

Avoid Injury from Thrown Objects



APY538841—UN—07JUN22

Use extreme care to avoid injury from thrown objects. Do not, under any circumstances, operate the mower-conditioner when other people are in the vicinity. Stones and other objects can be thrown very far by the rotating cutting blades.

The cutterbar curtains are very important to reduce the potential for thrown objects. Always keep these curtains down when operating the mower-conditioner. Replace the curtains if worn or damaged.

For additional operator protection from thrown objects, only use this mower-conditioner with a tractor equipped with a complete operator enclosure.

gh8xt3t,1654611841236-19-07JUN22

Hot Surface (Molded into Muffler)



MX632707—UN—07JUN24

- Do not touch engine muffler.

gh8xt3t, 1717769571176-19-26JUN24

Safety

Use Your Mower Safely

General Instructions

- Read this operator's manual, watch the safety video, and review the safety signs on your machine before use. They all contain important safety information and operating instructions that must be followed to help keep you and others safe. Be sure everyone who uses the machine has read the manual, reviewed the safety signs, and knows how to use the machine safely and properly.
- Never mow when there is a risk of lightning.
- Age, physical ability, and mental capacity can be factors in equipment-related injuries. Operators must be mentally and physically capable of operating the machine properly and safely. Never allow a child to operate the machine.
- Do not operate the machine while under the influence of alcohol or drugs or when distracted or fatigued. Proper operation requires your full attention.
- Always wear eye protection, hearing protection, close-fitting clothing, and substantial footwear while operating the machine. Never operate while wearing sandals or when barefoot.
- Do not wear radio or music headphones. Both safe operation and service require your full attention.
- Never tamper with safety devices.
- Operate the machine only in daylight or good artificial light.
- Only operate the engine in well-ventilated areas. Exhaust gasses contain carbon monoxide, a deadly poison.
- Never leave a running machine unattended.
- Look both ways when approaching roadways and use caution when turning around on public roadways. You can be struck by a vehicle and suffer serious injury or death.

Before Using Your Machine

- Know how to operate the machine. The Operating Controls section helps you understand the controls of your machine and what they do.
- Prepare your machine and the mowing area by performing required daily checks outlined in the General Instructions section.
- Follow instructions in the Preventing Injuries section, especially related to:
 - Keeping children safe by following instructions in the Protect Children section.
 - Avoiding injury on slopes and near terrain hazards by following instructions in the Operating on Slopes and Near Terrain Hazards section.
 - Follow the instructions in the Avoid Thrown Objects section, and keep all guards in place, including discharge chute.

- Cleaning machine during use and before storing as outlined in the Prevent Fires section.
- Understand how to service and inspect your machine.

Inspection and Daily Checklist

- Inspect machine before you operate. Be sure that hardware is tight, and all guards and shields are in good condition and fastened in place. Make all necessary adjustments before you operate. Repair or replace damaged, badly worn, or missing parts.
- Visually inspect that mower blades, blade bolts, and the mower assembly are not worn or damaged. To prevent machine damage, replace worn or damaged blades and bolts in sets.
- Make sure that the fuel cap and air cleaner are in place before starting engine.

Fuel

- Use care when handling fuel. Fuel is flammable and fuel vapors can be explosive. Do not smoke when handling fuel. Only use an approved fuel container. Clean up spilled fuel immediately.
- Check fuel lines, tank, cap, and fittings frequently for cracks or leaks. Replace if necessary.

Check the Mowing Area

- Keep bystanders and pets out of the mowing area.
- Clear the area of objects such as rocks, wire, or toys, which can be thrown by the blades. Remove low-hanging branches or other obstacles, which can interfere with your travel path.
- Study the mowing area. Set up a safe mowing path. Do not mow where traction or stability is doubtful.
- Slopes and terrain hazards are major factors related to loss-of-control and tipover accidents. Operation on slopes and near terrain hazards requires extra caution. Follow instructions in the Operating on Slopes and Near Terrain Hazards section.


Weights and Attachments

- Some attachments require ballast weights. Follow recommendations for wheel weights or counterweights.
- Use only accessories and attachments approved by John Deere.
- If you do not understand the instructions or have questions, contact your dealer or other service provider.

SDHTXN6,1745840906380-19-29JUL25

Preventing Injuries

Protect Children

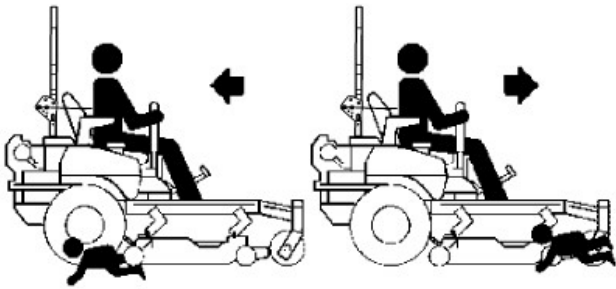

TC716385—UN—15MAY26

- Children can be killed or seriously injured by riding mowers when operators do not follow safe operating practices.
- Do not mow in reverse. Operating with the mower engaged while backing up is discouraged.
- Never give children a ride on a mower or in a cart behind the mower, even when the blades are off. They can fall off and be run over or cut by the mower blades. Children can interfere with mower operation. Children who have been given rides in the past can suddenly appear in the mowing area for another ride. If you are not aware, they can be run over or backed over by the mower.
- Children are often attracted to lawn mowers and mowing activities, especially if they have been given rides before. They do not know if the blades are rotating or understand that they can be killed or seriously injured even if the blades are not rotating.
- Keep children indoors and out of the mowing area when the mower is being operated. Keep children under the watchful eye of a responsible adult, other than the operator. If there is not a responsible adult to ensure that children stay indoors, DO NOT mow.
- Be alert to the presence of children or others. Turn off the mower blades and stop the machine if someone enters the mowing area.
- Look in the direction the machine is traveling. Before and while backing, turn off the mower blades and look down and behind the machine carefully, especially for children.
- Use extreme care when approaching objects that block your view, such as blind corners, shrubs, or trees, especially while backing. They can hide a child.

Avoid Thrown Objects

- Clear the mowing area of all bystanders when using this machine. Thrown objects could cause serious injury or death.
- Clear the area of objects such as rocks, wire, or toys, which can be thrown by the blades.
- Never direct discharged material toward anyone.

- Avoid discharging material against a wall or obstruction such as a fence or retaining wall. Material can ricochet towards the operator.
- Avoid discharging material towards a street or roadway.
- Stop the blades when crossing gravel surfaces.

OUO2005,000078C-19-18MAY26

Operating on Slopes and Near Terrain Hazards

- Slopes are a major factor related to loss of control and tip-over accidents, which can result in serious injury or death. Use caution and common sense when operating on slopes.
- If you feel uneasy on a slope, do not mow or operate the machine on it.
- Mow across slopes, not up and down.
- Watch for holes, ruts, bumps, rocks, or other hidden objects. Tall grass can hide obstacles.
- Drive slowly so you do not have to stop while on a slope.
- Do not mow on wet grass. Tires can slip on wet grass even if the brakes are working normally.
- Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which can cause the ride-on mower to roll over.
- If the tires lose traction, disengage the PTO and proceed slowly and carefully off the slope.
- Do not shift to neutral and coast downhill.

Identify Safe Slopes


- Before using your machine, measure the slopes of all mowing areas to determine which slopes are safe for mowing with a ride-on mower. Use good judgment and common sense when performing this survey.

Measuring Slopes

- Suggested method 1: Lay a straight piece of sturdy lumber 1.2 m (4 ft) long on the slope and measure the angle with an angle gauge or protractor level.
- Suggested method 2: Refer to the slope gauge provided at the end of the manual.

Slope Limits


- Exceeding the recommended maximum slope angle increases the risk of rollover accidents that can result in serious injury or death.

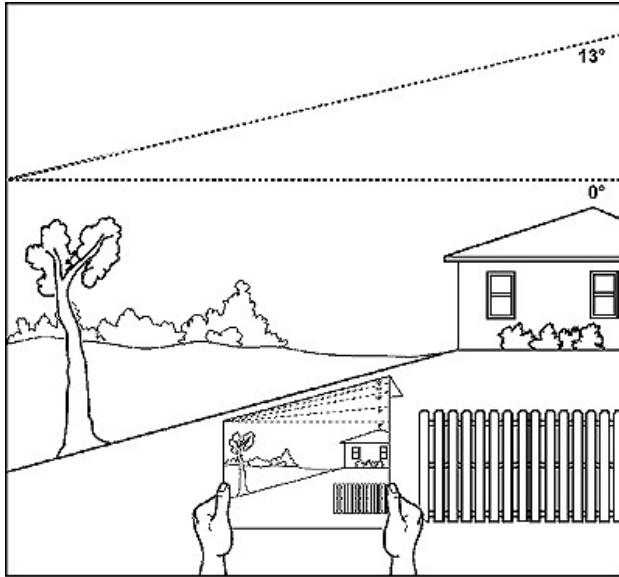

GX100108—UN—14FEB20

- Never mow or operate this ride-on mower on slope angles greater than 13°. (A 13° slope is a slope that rises 1.4 m [4.6 ft] over a horizontal distance of 6.1 m [20 ft].)
- Material collection systems, weather enclosures, or other attachments increase the risk of a rollover.
- As slope increases the risk of rollover increases.

Operating Near Terrain Hazards

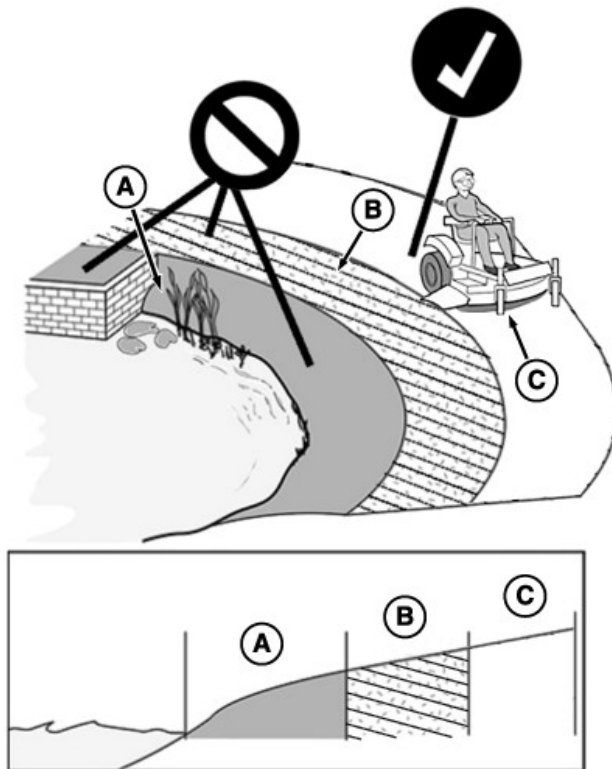

GX100105—UN—01FEB20

- Terrain hazards such as ditches and drop-offs are a factor related to loss of control and tip-over accidents, which can result in serious injury or death.

Use caution and common sense when operating near terrain hazards.

- Do not mow or operate the machine in areas adjacent to hazards that can cause the machine to roll over. If a wheel goes over an edge or if the edge breaks away, the machine can suddenly lose traction, slide, and/or roll over.
- Hazards (A) include but are not limited to ditches, drop-offs, embankments, or areas near bodies of water.
- Maintain a buffer area (B) at least as wide as the machine between hazards (A) and the mowing area (C). Do not mow or operate the machine in the hazard area or buffer area.
- Only mow or operate in the mowing area (C). Do not exceed the recommended slope operating angle. Refer to the Slope Limits section.

SDHTXN6,1746613701194-19-07MAY25

Prevent Fires



TS227—UN—15APR13

- Do not mow tall, dry grass or through piles of leaves. Combustible materials can contact hot components and increase the risk of fire.
- Debris can build up anywhere on the machine, especially on horizontal surfaces. While using your machine, periodically check for and remove debris, especially in dry or heavy debris conditions, such as when collecting leaves.
- After operating, completely remove any combustible materials from equipment before storing. Use compressed air, a leaf blower, or water to keep the machine clean.
- Allow machine to cool in an open area before storing. Do not park machine near flammable materials, such as straw, mulch, cloth, or chemicals. Do not park near an open flame or other sources of ignition, such as a water heater or furnace.
- Excess lubrication or fuel/oil leaks or spills on the machine can also provide collection sites for debris. Promptly cleaning up spills and repairing leaks reduces the potential for debris collection.
- Refer to the Machine Cleanout section for more

information on checking for debris buildup and locations to inspect.

- Always park the machine safely before cleaning or servicing a machine. See the Parking Safely section.

OUO2005,0000787-19-15FEB20

Parking Safely

Always apply the park brake and remove the key or key pin before leaving the machine unattended. Children or others may attempt to move or operate an unattended machine.

- Bring the machine to stop on a level surface.
- Disengage mower blades or other attachments.
- Lower attachments to the ground.
- Apply the park brake.
- Shut the machine OFF.
- Remove the key or key pin.
- Wait for all moving parts to stop before you leave the seat.
- Disconnect battery before maintenance.

OUO2005,0000788-19-12APR23

Additional Safety Information

Towing Loads Safely

- Stopping distance increases with speed and weight of towed load. Travel slowly and allow extra time and distance to stop.
- Total towed weight must not exceed Towing Capacity stated in Specifications of this manual.
- Excessive towed load can cause loss of traction and loss of control on slopes. Reduce towed weight when operating on slopes.
- Never allow children or others in or on towed equipment.
- Use only approved hitches. Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the approved hitch point.
- Towed equipment increases the risk of rollover on slopes. Refer to the Operating on Slopes and Near Terrain Hazards section for more information.
- Do not turn sharply. Use additional caution when turning or operating on adverse surface conditions. Use care when reversing.

Safe Transportation

Follow instructions in the Transporting Machine on Trailer section.

- Use a full-width loading ramp at least 30 cm (12 in) wider than the machine, never two separate ramps.

Service and Maintenance

- Proper service and maintenance of the machine is essential.
- Keep all parts in good condition, keep all nuts and bolts tight, and repair any damage immediately. Stop and inspect the machine immediately if you strike an object.
- Ensure that all safety devices, discharge chute, and grass catcher components are in good condition and replace when necessary.
- Understand service procedures thoroughly before working on the machine. If you do not understand the service procedures or are uncomfortable working in your machine, contact your John Deere dealer or other service provider.
- Disconnect the battery or all spark plug wires before servicing the machine. Disconnect negative terminal first and positive last. Install positive terminal first and negative last.
- Some components could have stored energy in springs or hydraulic components. Servicing procedures described in the Service section describe how to perform service and maintenance tasks safely.
- Support any machine elements that must be raised for service work. Use jack stands or service locks to support components when needed.

Disposing of Waste Products and Chemicals

- Waste products, such as used oil, fuel, coolant, brake fluid, and batteries can harm the environment and people.
- Do not use beverage containers for waste fluids – someone can mistakenly drink from them.
- A Safety Data Sheet (SDS) provides specific details on chemical products: Physical and health hazards, safety procedures, and emergency response techniques. The seller of the chemical products used with your machine is responsible for providing the SDS for that product.
- To learn how to recycle or properly dispose of waste products generated from service, see your local recycling center, John Deere dealer, or other service provider. If you wish to discard the machine, contact your local recycling center, John Deere dealer, or other service provider.

OUO2005,0000789-19-17OCT25

Machine Cleanout

General Cleaning Guidelines

Machine must be inspected periodically throughout the day. Buildup of debris must be removed to ensure proper machine function and to reduce the risk of fire. Frequency of these inspections and cleanings vary depending on a number of factors including operating conditions, machine configuration, operating speeds, and weather conditions. Inspections and cleanings may be required multiple times throughout the day particularly in dry, hot, and windy conditions.

IMPORTANT: Avoid fire! Regular and thorough cleaning of machine combined with other routine maintenance procedures listed in the Operator's Manual greatly reduce the risk of fire, downtime, and improve machine performance.

Besides proper maintenance the condition of the material being handled is the most significant factor contributing to fires. Dry, light, and fluffy materials that can create a dust cloud are the most likely to catch fire. Debris can accumulate in various areas especially on horizontal surfaces. Conditions such as wind speed and direction can change where the material accumulates. Be aware of these changing conditions and adjust your cleaning schedule and practices to ensure proper machine function and to reduce the risk of fire.


Always follow all safety procedures posted on the machine and in the Operator's Manual. Before carrying out any inspection or cleaning, always park machine safely. (See Parking Safely in the Safety Section).

The entire machine should be inspected, with extra attention given to the areas noted below.

OUMX068,0001043-19-03AUG25


Cleanout Areas

Primary areas that must be inspected and cleaned on machine include (see machine service label):

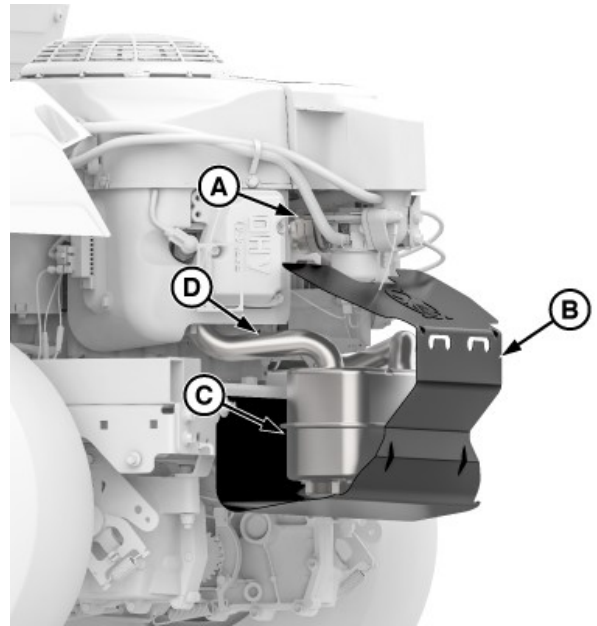


GX710684—UN—08APR26

1. Exhaust manifold (A), shield (B), muffler (C) and muffler pipe (D).

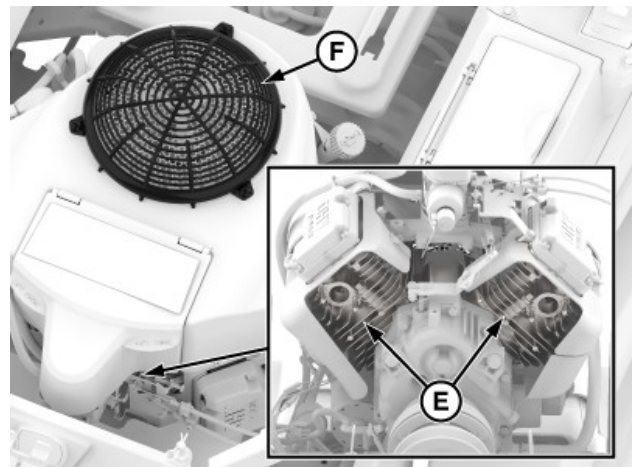


GX710685—UN—08APR26

2. Engine cooling fins (E) and intake screen (F).

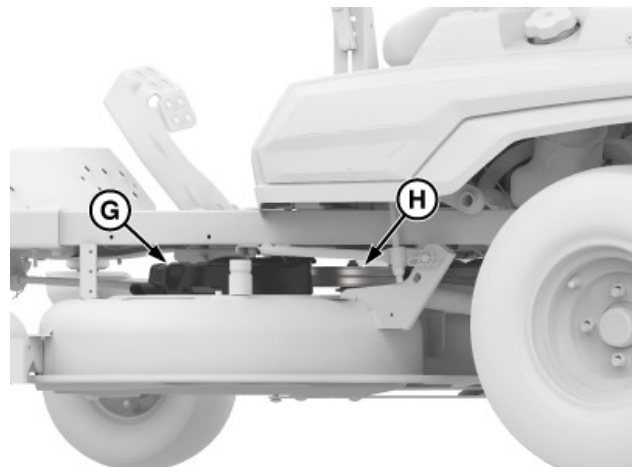


GX710686—UN—08APR26

3. Top of mower deck, under shields (G), including spindle and belt area (H).

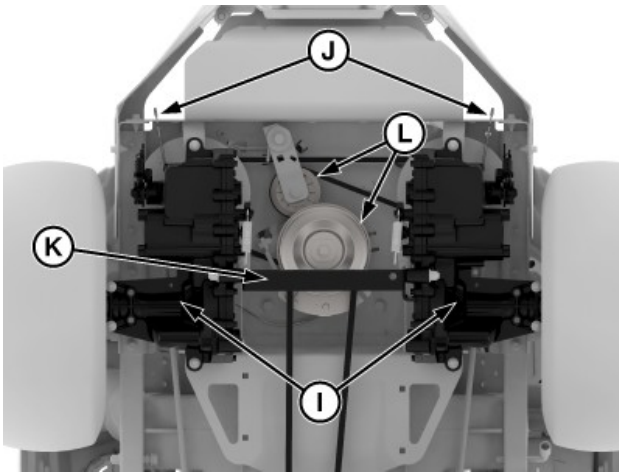

GX710687—UN—10APR26

4. On or near transaxles (I), fins (J), cross-strap bracket (K), and belt drives (L).

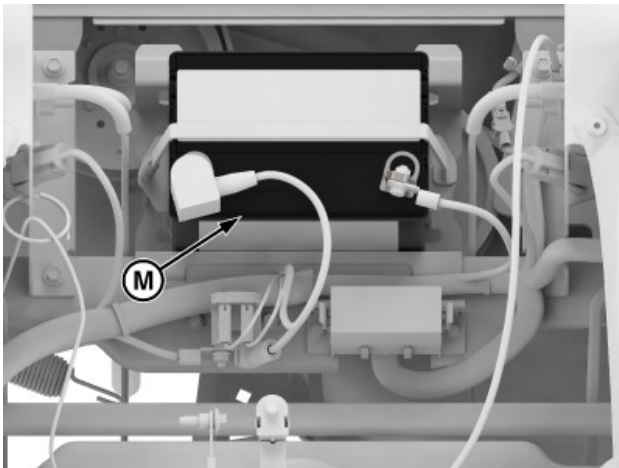

GX710688—UN—10APR26

5. Under seat, including battery (M), and wiring harness.

SDHTXN6,1775542527241-19-12APR26

Assembly


Charge and Connect Battery

⚠ CAUTION: Avoid injury! The battery produces a flammable and explosive gas. The battery may explode:

- Do not smoke or have open flame near battery.
- Wear eye protection and gloves.
- Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.
- Always route battery cables away from battery posts.
- Do not jump start or charge a frozen battery. Warm battery to specification.

Specification

Battery—Temperature. 16°C (60°F)

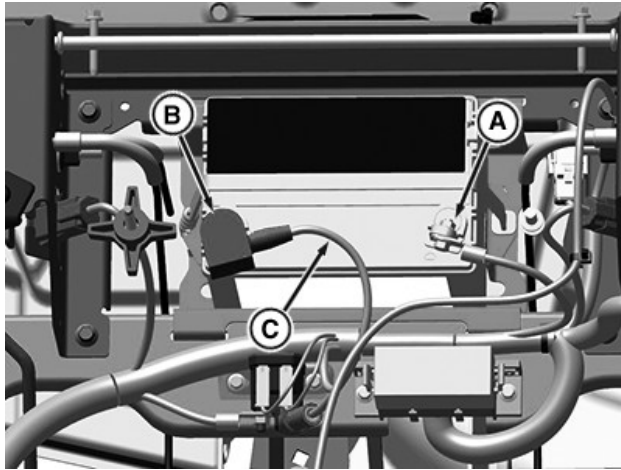

GX535574—UN—21APR22

1. Remove and discard the red positive (+) protective cap from the positive (+) battery terminal.
2. Charge the battery.
 - Battery is fully charged at 12.6 volts.
3. Connect positive (+) battery cable (A) to battery positive terminal (B).
4. Connect negative (–) battery cable to battery negative terminal (C).
5. Apply general purpose grease or silicone spray to terminal to help prevent corrosion.
6. Slide red cover over positive battery cable.

H9PQBYK,000005E-19-21APR22

Check Tire Pressure

Check tire pressure. (See Checking Tire Pressure in the SERVICE MISCELLANEOUS section.)

MP47322,00F4629-19-15MAR13

Adjust Mower Deck Level

Adjust mower deck level. (See Adjusting Mower Deck Level in the OPERATING section.)

MP47322,00F462A-19-31MAY13

Check Engine Oil Level

Check engine oil level. (See Checking Engine Oil Level in the SERVICE ENGINE section.)

MP47322,00F462B-19-15MAR13


Check Machine Safety System

Perform safety system check to make sure the electronic safety interlock circuit is functioning properly. Perform all tests. (See Testing Safety System in the OPERATING section.)

MP47322,00F462C-19-15MAR13

Operating Controls

Operator's Station Controls

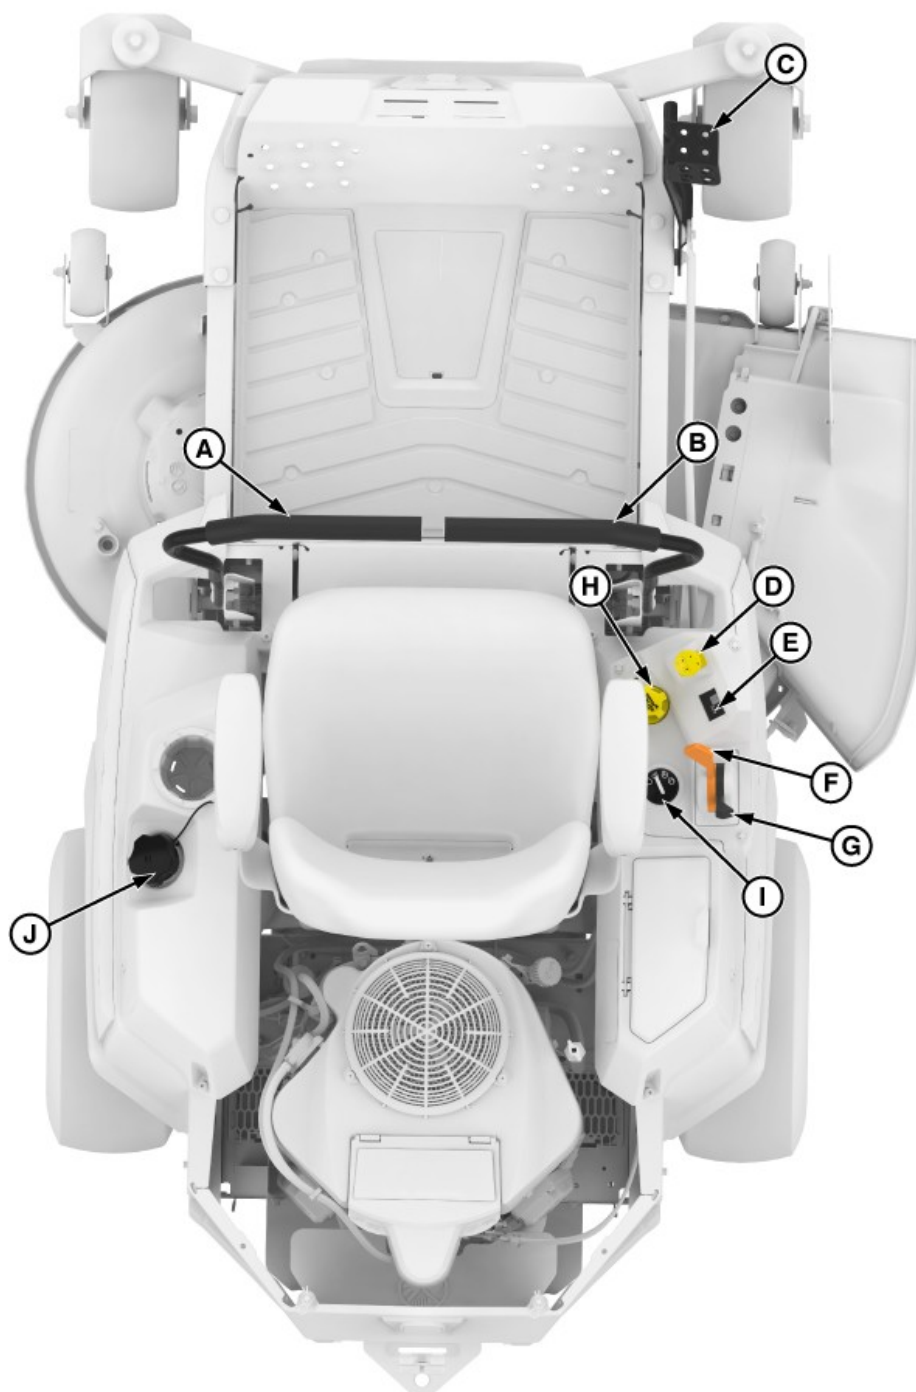

Z320R Shown, Others Similar

GX710689—UN—08APR26

A—Left Motion Control Lever
B—Right Motion Control Lever
C—Mower Deck Lift Pedal (if equipped)
D—Mower Engagement Switch
E—Hour Meter

F—Throttle Control Lever
G—Choke Lever (if equipped)
H—Height-of-Cut Dial Adjustment
I—Key Switch
J—Fuel Tank Cap

Operating

Daily Operating Checklist

- ☐ Check engine oil.
- ☐ Clean muffler area, air intake screens, and mower deck.
- ☐ Check brake system.
- ☐ Check fuel level.
- ☐ Check under the machine for leaks.
- ☐ Check safety interlock system.
- ☐ Check tire pressures.
- ☐ Check mulch control open/close operation (if equipped).
- ☐ Clean mower deck using the washout port after use.

H9PQBYK,000003F-19-12APR22

Avoid Damage to Plastic and Painted Surfaces

- Do not wipe plastic parts until they are rinsed first. Using a dry cloth causes scratches.
- Insect repellent spray damages plastic and painted surfaces. Do not spray insect repellent near machine.
- Be careful not to spill fuel on the machine. Fuel damages surfaces. Wipe up spilled fuel immediately.

MP47322,00F4630-19-02DEC22

Mounting and Dismounting Machine



GX536018—UN—25APR22

NOTE: Do not step on the mower deck when mounting and dismounting the machine.

1. Mount the machine from the side using the foot plate (A).
2. Park machine safely before dismounting (See Parking Safely in the Safety section.)

3. Keep the foot plate clean.

H9PQBYK,0000060-19-25APR22

Adjusting Seat

Adjustable Seat

1. Tip seat forward.




APY69543—UN—25FEB22

2. Remove the knob (A).
3. Slide seat forward or backward to the desired position.
4. Reinsert the knob (A).

GH8XT3T,00008C6-19-18APR22

Adjusting Motion Control Levers

1. Park machine safely. (See Parking Safely in the Safety section.)

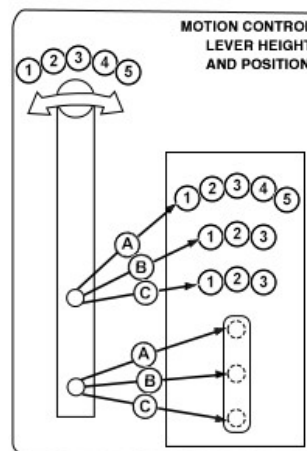

APY536236—UN—08JUN22

2. To adjust motion control lever height, refer to the operator instruction label on the machine front panel and the instructions that follow.



GX535570—UN—19APR22


3. Remove two bolts and nuts and raise or lower each control lever to your comfort level.
 - For highest lever position, use holes (A).
 - For lowest lever position, use holes (B).
4. You can also adjust each motion control lever slightly forward or rearward (C) within slotted holes.

GH8XT3T,000098C-19-27APR22

Adjusting Cutting Height

Cutting height can be adjusted from approximately 31—114 mm (1.25—4.5 in). Refer to the control lever label on the front platform.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Inflate tires to the correct pressure. (See tires in the Specifications section.)
3. Depress Mower Deck Lift pedal (if equipped) to alleviate pressure on Height-of-Cut Dial.

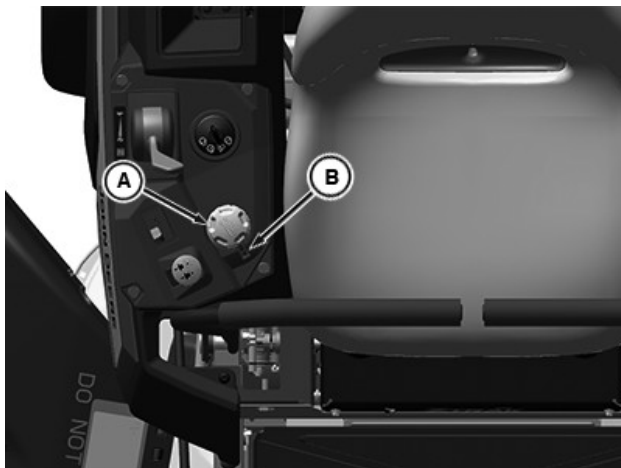

APY69519—UN—08MAR22

4. Rotate dial (A) counterclockwise to raise mower deck height.

5. Rotate dial (A) clockwise to lower mower deck height.
6. Rotate dial (A) to index mark (B) to desired mower deck height.

GH8XT3T,00008AE-19-12JUN25

Adjusting Mower Level


CAUTION: Avoid injury! Rotating blades are dangerous.

Before adjusting or servicing mower:

- Disconnect spark plug wires or battery negative (—) cable to prevent engine from starting
- Always wear gloves when handling mower blades or working near blades.

NOTE: Mower deck wheels should not contact the ground when leveling the deck.


1. Park machine safely. (See Parking Safely in the Safety section.)
2. Inflate tires to the correct pressure. (See Tires pressure in the Specifications section.)
3. Position caster wheels to the forward driving position.
4. Set mower to preferred cutting height and lower deck into the mowing position.
5. Measure mower level (side-to-side).

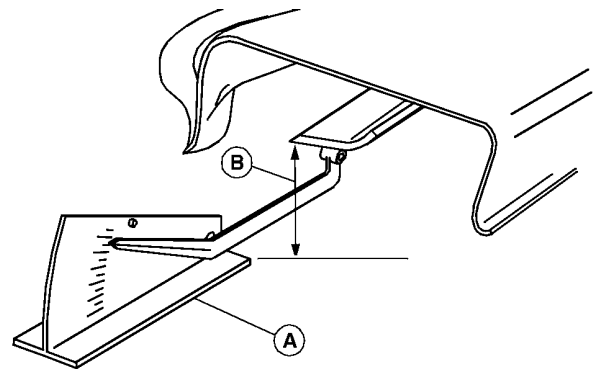

MXAL42797—UN—09APR13

A convenient leveling gauge (A) (AM130907) is available for purchase.


- a. Position mower blades as follows and measure from each outside blade tip (B) to the level surface.

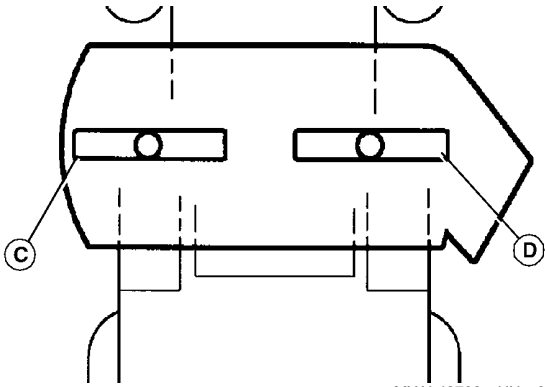

MXAL42798—UN—09APR13

- b. Turn left blade (C) as shown. Turn the right blade (D) as shown. Take measurement for both blades.

The difference between blade measurements must not be more than 3 mm (1/8 in).

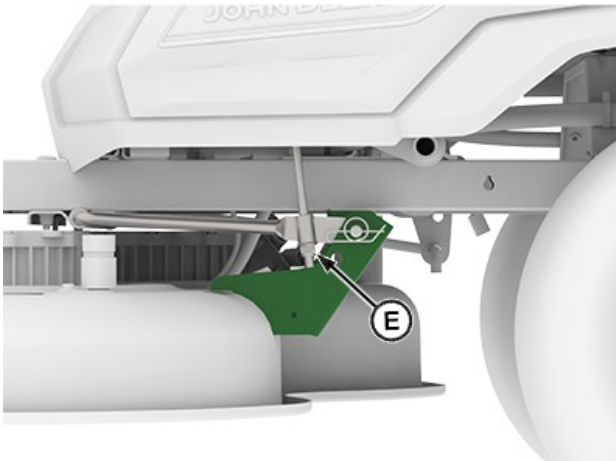


APY545201—UN—13SEP22

- c. If necessary, adjust mower lever by turning nuts (E) clockwise to raise the side of the mower deck, or counterclockwise to lower the mower deck.

NOTE: Ensure that bottom of the lock nut is fully engaged on the threaded fitting to avoid hardware loosening during operation.

6. Measure mower level (front-to-rear).

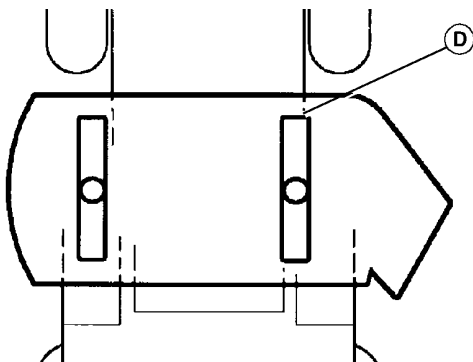

MXAL42800—UN—09APR13


- Turn right blade (D) so that a blade tip points straight forward.
- Measure from the blade tip to the surface. Take measurement for both blades. The front blade tips must be lower than the rear blade tips according to the specification listed.

Specification

Front-to-Rear Blade Tip

Variation—Height. 3—6 mm (1/8—1/4 in)


- c. **42A Mower Deck**

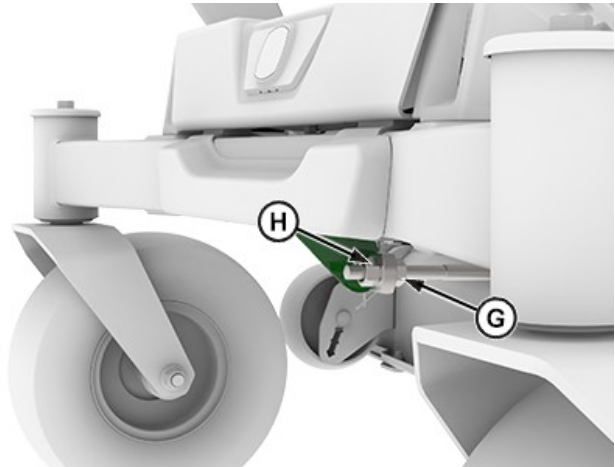

APY545202—UN—13SEP22

- Adjust the mower front-to-rear level by loosening rear nut (G) on the front lift rod.
- Turn front nut (H) clockwise to raise front of mower or counterclockwise to lower it.
- Tighten rear nut (G) after adjustment is complete.

- d. **48A and 54A Mower Deck**

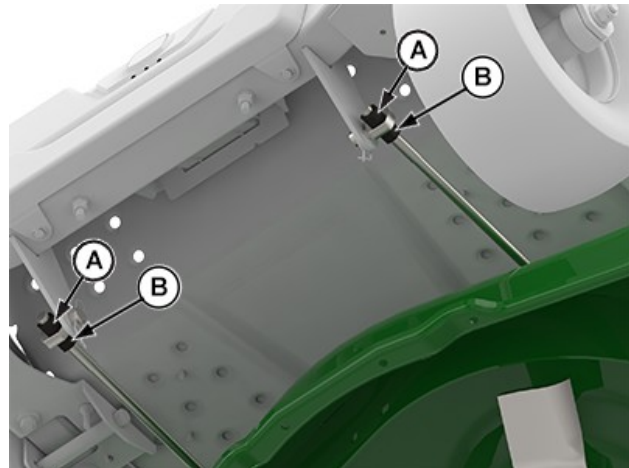

APY597502—UN—06OCT23

- Adjust the mower front-to-rear level by loosening rear nuts (B) on front lift rods.
- Turn front nuts (A) clockwise to raise front of mower or counterclockwise to lower it.
- If the lift rod is not tight against both deck hooks,

tighten loose side until both sides are tight against deck hooks.

- Shake the deck slightly to ensure that it has settled into position.
- Tighten rear nut (B) to specified torque after adjustment is complete.

Specification

Front Nut—Torque. 27 N·m
(20 lb·ft)

al64819,1749741365863-19-17OCT25

Adjusting Mower Wheels

CAUTION: Avoid injury! Rotating blades are dangerous.

Before adjusting or servicing mower:


- **Disconnect spark plug wires or battery negative (-) cable to prevent engine from starting accidentally.**
- **Always wear gloves when handling mower blades or working near blades.**

IMPORTANT: Avoid damage! The mower deck can be damaged if mower wheels are incorrectly adjusted:

- **Wheels must not ride on ground supporting mower weight.**
- **Check wheel adjustment each time cutting height is changed.**

1. Park machine safely on a level surface. (see Parking Safely in the Safety section.)
2. Inflate tires to correct pressure.
3. Rotate height-of-cut dial counterclockwise to raise mower deck to highest position.
4. Adjust mower wheels to the correct height:

42A Mower Deck

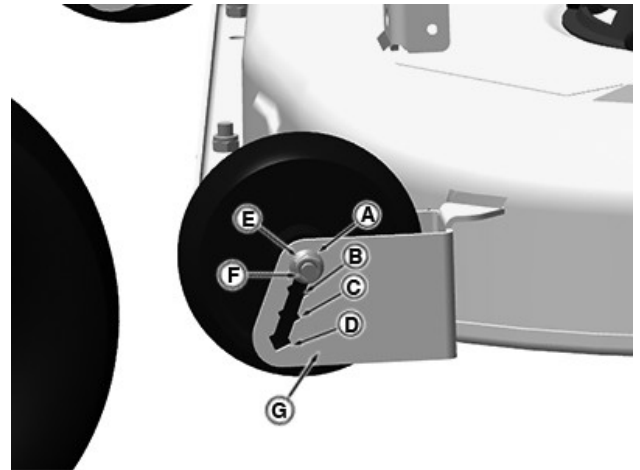

APY69526—UN—07MAR22

Position 1 (A)	31 — 38 mm (1.25 — 1-1/2 in) Height of Cut
Position 2 (B)	38 — 50 mm (1-1/2 — 2 in) Height of Cut
Position 3 (C)	50 — 76 mm (2 — 3 in) Height of Cut
Position 4 (D)	76 — 114 mm (3 — 4.5 in) Height of Cut


- Remove the nut (E). Pull carriage bolt (F) out until end of bolt clears the outer wall of the gauge wheel bracket (G), then slide bolt and wheel assembly to the desired position. Push bolt back through outer wall of bracket. Install the nut (E) and tighten to specification.

Specification

Carriage Bolt—Torque. 24 N·m (18 lb·ft)

GH8XT3T,00008AF-19-12JUN22

Testing Safety Systems

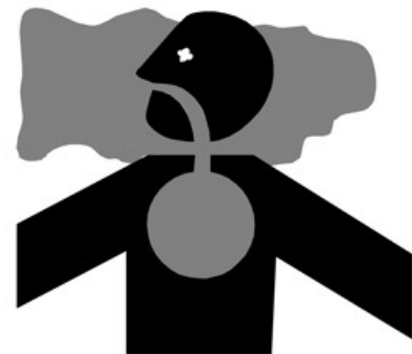

MXAL42804—UN—09APR13

CAUTION: Avoid injury! Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.

Do not run an engine in an enclosed area, such as a garage, even with doors or windows opened.

Move the machine to an outside area before running the engine.

Check all safety systems before each use of the machine. Read the operator's manual and understand machine operation before performing safety system checks.

Use the following checkout procedures to check for normal operation of machine.

If there is a malfunction during one of these procedures, do not operate machine. **See your dealer or other service provider for service.**

Perform these tests in a clear open area. Keep bystanders away.

MP47322,00F4637-19-19MAY26

Testing Park Brake Switch

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Sit on seat.
3. First test:
 - a. Move right motion control lever inward to the neutral position.
 - b. Turn key to the START position.

Result: Engine must not turn over. If engine turns over, there is a problem with your safety interlock circuit.
4. Return right motion control lever to fully outward position.
5. Second Test:
 - a. Move left motion control lever inward to the neutral position.
 - b. Turn key to the START position.

Result: Engine must not turn over. If engine turns over, there is a problem with your safety interlock circuit.
6. Return left motion control lever to fully outward position.

GH8XT3T,00009BA-19-13JUN22

Testing Park Brake

1. Park machine safely (See Parking Safely in the Safety section.)
2. Lock the park brake by moving the motion control levers fully outward.
3. Engage bypass valve control.
4. Try to push machine manually.

Result: Park brake must prevent machine from moving.

If machine moves, see your John Deere dealer or other service provider for service.

NOTE: When testing is complete, disengage bypass valve control prior to returning machine to service.

GH8XT3T,00009BB-19-17OCT25

Testing Mower Engagement (PTO) Switch

CAUTION: Avoid injury! The mower blades should stop in approximately five seconds when the mower or PTO is disengaged.

If you believe that your blades may not be stopping in that period of time, take your machine to your John Deere dealer or other service provider where they can safely check and service your machine.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Sit on seat.
3. Lock the park brake by moving motion control levers fully outward.
4. Pull mower engagement (PTO) switch up to engage.
5. Turn key switch to the START position.

Result: Engine must not turn over. If engine turns over, there is a problem with your safety interlock circuit.

H9PQBYK,0000043-19-17OCT25

Testing Seat Switch

1. Park machine safely. (See Parking Safely in the Safety section.)
2. First test:
 - a. Lock the park brake by moving the motion control levers fully outward.
 - b. Sit on seat.
 - c. Start engine.
 - d. Move motion control levers inward to neutral position.
 - e. Pull mower engagement switch (PTO) up to engage.
 - f. Raise up slightly off the seat. Do not get off machine.

Result: The machine should stop. If engine does not stop, there is a problem with your safety interlock circuit.

- g. Return to sitting position in seat.

- h. Return motion control levers to the fully outward position.
- i. Push mower engagement switch (PTO) down to disengage.
- j. Turn machine off.

3. Second test:

- a. Lock the park brake by moving the motion control levers fully outward.
- b. Sit on seat.
- c. Start engine.
- d. Raise up slightly off the seat. Do not get off machine.

Result: Engine should continue to run. If engine stops, there is a problem with your safety interlock circuit.

- e. Return to sitting position in seat.
- f. Turn machine off.

H9PQBYK,0000045-19-13JUN22

Using Park Brake

CAUTION: Avoid injury! Children or bystanders may attempt to move or operate an unattended machine. Always lock the park brake and remove the key before leaving the machine unattended.

Locking Park Brake



APY536680—UN—27APR22

To lock the park brake, move motion control levers (A) fully outward.

Unlocking Park Brake




APY536679—UN—07JUN22

To unlock the park brake, move motion control levers (A) inward to neutral position.

GH8XT3T,00008B4-19-10JUN22

Using Key Switch

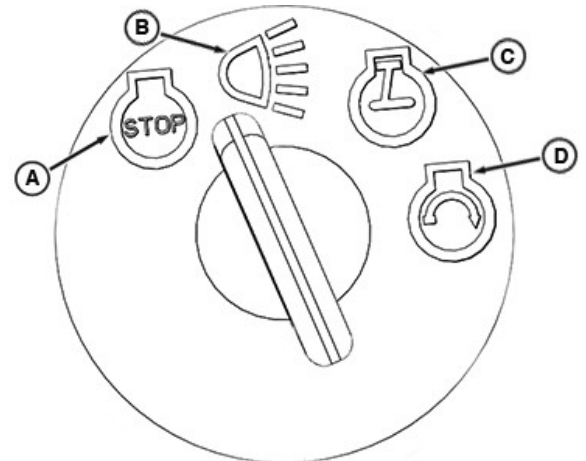

APY69525—UN—07MAR22

A—STOP Position
B—LED Light (if equipped)
C—Run Position
D—START Position

- A - STOP (off) position - With key in the STOP position, all switched power is off, and engine should not run.
- B - LED light - Turn key from STOP to this position. LED light will be on.
- C - Run (on) position - Turn key from STOP to this position, and all switched power circuits will be on.
- D - START position - Turn key to start position to crank the engine. Release key after engine has started and it will automatically return to the on position. The engine continues to run.

GH8XT3T,00008B5-19-17FEB23

Using Mower Engagement Switch

- To Engage Mower - Pull mower engagement knob up.
- To Disengage Mower - Push mower engagement knob down.

MP47322,00F463F-19-15MAR13

Using the Hour Meter

- The hour meter shows the number of hours the engine has run. The hour meter does not accumulate hours with the engine off when the key is in the run position. Use the hour meter to determine when your machine has reached the recommended service intervals.
- Turn the key to STOP position when not using the machine.
- Hour meter cannot be reset.

MP47322,00F4640-19-05JUN15

Using the Motion Control Levers

⚠ CAUTION: Avoid injury! Learn the use of the motion control levers and practice at half throttle until becoming proficient and comfortable with the operation of the machine.

Do not move motion control levers from forward to reverse or reverse to forward position rapidly. Sudden direction changes could cause loss of control or damage the machine.

Before using the machine, become familiar with the motion control levers and how they respond. It is essential to know how the machine accelerates, steers, and stops.

The functions of the motion control levers are:

- Dual function neutral position.
- Steering.
- Acceleration.
- Braking.

Start/Shutdown Position



APY536680—UN—27APR22

- Motion control levers must be placed fully outward (A). This position engages the park brake and allows the operator to start the engine.
- Forward and reverse movement of the motion control levers is prevented when levers are moved to the start/shutdown position.
- Operator can exit mower with the engine running when the mower engagement switch is disengaged and the motion control levers are fully outward.
- Motion control levers must be fully outward to safely enter and exit the operator's seat.

Neutral Position



GX536019—UN—25APR22

- Machine speed, motion, and direction can be controlled when the engine is running and motion control levers are in the neutral position (C).
- To stop the machine for an emergency, move the motion control levers quickly back to the neutral position.

Forward and Reverse Travel

Straight forward and reverse travel takes practice. If the machine does not track in a straight line when going

forward or reverse, the motion control lever tracking may need adjusting.

1. Move throttle lever to the mow position.
2. Move both motion control levers from the start/shutdown position inward to the neutral position.
3. Move the motion control levers forward to begin forward travel.
4. Move the motion control levers rearward to begin reverse travel.
5. To stop travel, move motion control levers back to the neutral position.

Forward Travel



GX536021—UN—25APR22

Gradually move both motion control levers evenly forward (A) from neutral. To speed up, move the levers farther forward. To slow down smoothly, slowly move the levers toward neutral.

Reverse Travel



GX536020—UN—25APR22

Look down and behind, then gradually move both motion control levers evenly rearward (B) from neutral. To speed up, move the levers farther rearward. To slow down smoothly, slowly move the levers toward neutral.

Left Turn



GX536022—UN—25APR22

1. To turn slightly to the left, push right control lever (C) further forward than the left control lever (D).



APY69540—UN—28APR22

2. To turn sharply to the left, push right control lever (C) forward and pull left control lever (D) rearward at the same time.

Right Turn



GX536023—UN—25APR22

1. To turn slightly to the right, push left control lever (D) further forward than the right control lever (C).




APY536684—UN—28APR22

2. To turn sharply to the right, push left control lever (D) forward and pull right control lever (C) rearward at the same time.

GH8XT3T,00009BC-19-10JUN22

Using Dual Levers (If Equipped)

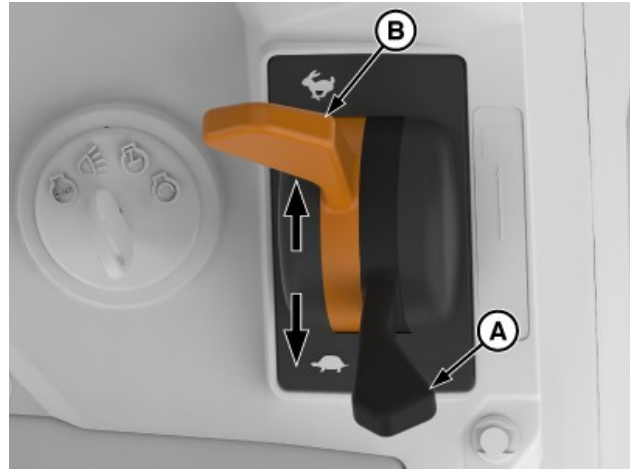

GX711170—UN—16APR26

Throttle and Choke Lever Shown

1. The choke lever (A) should be pushed up when starting a cold engine.
2. After engine has started, move choke lever (A) down completely to previous position, as shown.
3. Move throttle lever (B) toward rabbit symbol to increase engine speed, as shown.
4. Move throttle lever (B) toward tortoise symbol to decrease engine speed, as shown.

SDHTXN6,1775557319368-19-16APR26

Starting the Machine

⚠ CAUTION: Avoid injury! Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.

Do not run an engine in an enclosed area, such as a garage, even with doors or windows opened.

Move the machine to an outside area before running the engine.

1. Sit on the operator's seat.
2. Set both motion control levers to the start/shutdown position.
3. Push the mower engagement knob to disengage the mower.
4. Adjust throttle lever to set engine speed:
 - **Cold Start:** Set throttle control to the Start position, full throttle Use the choke control as necessary (if equipped).
 - **Warm Start:** Set throttle control to the mow position, full throttle.

IMPORTANT: Avoid damage! Starter may be damaged if the starter is operated for more than 20 seconds at a time:

NOTE: Wait two minutes before trying again if engine does not start.

5. Turn key switch to the START position.
6. After engine starts, release key switch to the RUN position, disengage the choke control (if equipped), and move throttle to the mow position, full throttle.

IMPORTANT: Avoid damage! Unnecessary engine idling may cause engine damage. Excessive idling can cause engine overheating, carbon buildup, and poor performance.

7. Allow the engine to warm up for 20 seconds.
8. Set both motion control levers to the neutral position from the start/ shutdown position.

GH8XT3T,00008B1-19-17FEB23

Engaging Mower

 **CAUTION: Avoid injury! Clear mowing area of all bystanders when operating this machine. Thrown objects could cause serious injury or death.**

Keep hands and feet away from blades and discharge opening.

Do not mow in reverse unless necessary.

1. Adjust mower to desired cutting height.
2. Start engine.
3. Move both motion control levers to the neutral position from the start/shutdown position.
4. Set throttle lever to the START/MOW position, full throttle.
5. Pull mower engagement switch up to engage mower.

NOTE: The travel speed and turn rate vary with the amount that the control levers are moved.

6. Push motion control levers forward slowly. Mow at safe travel speed.

GH8XT3T,00008B2-19-18MAR22

Unplugging Mower

 **CAUTION: Avoid injury! Do not attempt to unplug attachment with machine running.**

Rotating blades are dangerous. Shut off the engine and remove the key before getting off the seat to inspect the machine and attachment.

Thrown objects can cause serious injury. Make sure that all machine parts are stopped before raising hopper top or removing chutes.

1. Park machine safely. Wait for all moving parts to stop before you leave the operator's station to inspect machine.
2. Check under mower deck and discharge chute for debris.
3. Clear all debris before using mower.
4. If plugging occurs, switch to open mode to allow some grass to discharge.

OUO2004,0000AF8-19-29JAN21

Stopping the Machine

1. Stop machine on a level surface, not on a slope.
2. Push the mower engagement switch down to disengage mower
3. Throttle position must remain in the full throttle position to avoid backfiring at shutdown.
4. Lock the park brake by moving the motion control levers fully outward.
5. Turn ignition key to STOP (off) position.

 **CAUTION: Avoid injury! Children or bystanders may attempt to move or operate an unattended machine.**

Always lock the park brake and remove the key before leaving the machine unattended.

6. Remove key.

H9PQBYK,0000047-19-17FEB23

Move Machine by Hand

 **CAUTION: CAUTION: Avoid injury! When the bypass valve is open, the machine will have unrestricted motion.**


- Do not open the bypass valve when the machine is stopped on an incline to prevent it from going downhill out of control.

IMPORTANT: Avoid damage! Transmission damage occur if the machine is towed or moved incorrectly:

- Move machine manually.
- Do not use another vehicle to move machine.

- **Do not tow machine.**


When moving the machine without starting the engine, always use the bypass valves:

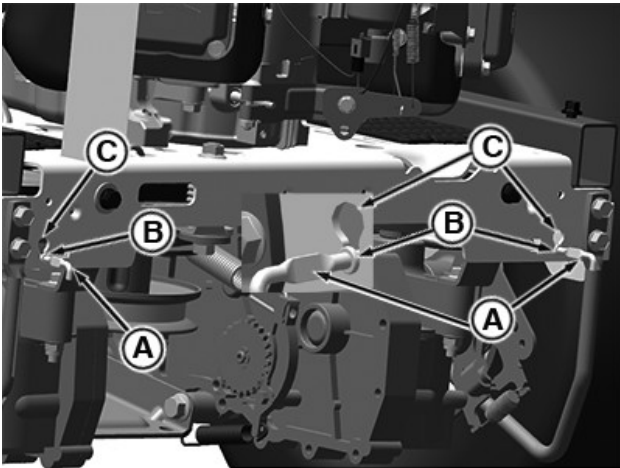

APY538834—UN—07JUN22

1. Pull bypass control rods (A) rearward through the key hole slot and place the collar (B) into the detent slot (C) to engage bypass valve.
2. Release park brake.
3. Push machine to desired location and lock park brake.

NOTE: The bypass control rods should be disengaged before starting and operating the machine.

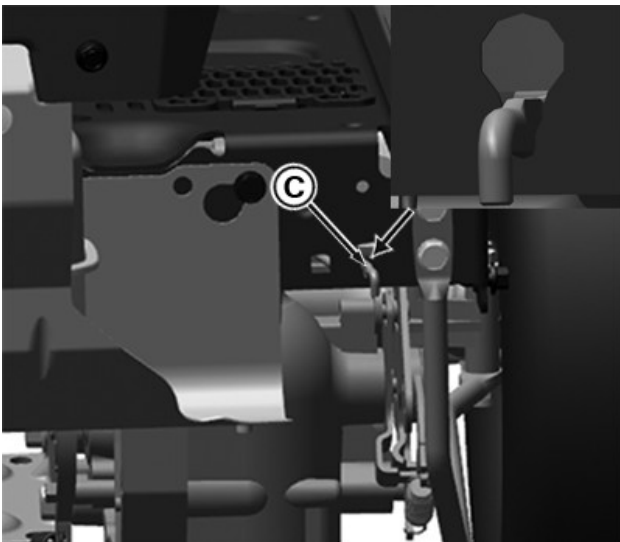

APY536234—UN—25APR22

4. Move both bypass control rods from their detent slot and push back the control rods to the original position (C).

GH8XT3T,00009BD-19-19FEB23

Unplugging Mower, Bagger, or Material Collection System

CAUTION: Avoid injury! Do not attempt to unplug attachment with the machine running.

- Rotating blades are dangerous. Shut off the engine and remove the key before getting off the seat to inspect the machine and attachment.
- Thrown objects can cause serious injury. Make sure that all machine parts are stopped before raising hopper top or removing chutes.

Checking for Plugging While Driving

If grass builds up in the front of the mower discharge chute, check for plugged chute or problems with blower assembly (if equipped).

If there is a trail of clippings behind mower or clippings blow to the side, check for plugged chute, full collector bags, or problems with blower assembly.

Removing Debris from Inspection Points:

CAUTION: Avoid injury! Do not use hands or feet to clear plugged mower deck or blower assembly. Stored energy can cause blades to rotate.


1. Park machine safely. Wait for all moving parts to stop before getting off to inspect machine.
2. Open hopper cover. Check chute outlet.
3. Remove chute from the mower deck or blower assembly. Check chute inlet.
4. Check under the mower deck for debris.

MP47322,00F4646-19-10JUL20

Using Wash Port to Clean Mower Deck

NOTE: Follow this procedure after each use to prevent buildup and remove corrosive lawn chemicals.

1. Park machine safely. (See Parking Safely in the Safety section.)

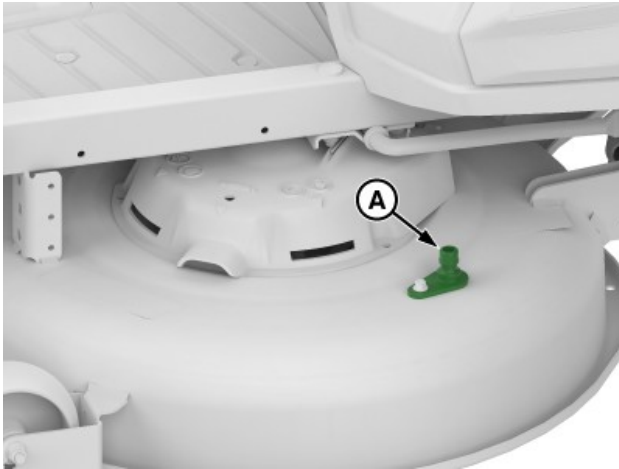


GX715298—UN—13MAY26

2. Attach quick-coupler to the garden hose.
3. Attach garden hose with the quick-coupler to wash port (A) on the mower deck.
4. Turn on water.
5. Start engine.
6. Run at full throttle.
7. Engage mower blades.
8. Flush water under the deck for approximately one minute.
9. Disengage mower blades.
10. Stop engine.
11. Turn off water and remove garden hose and quick-coupler from the wash port.


SDHTXN6,1778665485037-19-14MAY26

1. Park trailer on a level surface.
2. Fully raise mower deck before driving machine onto trailer.

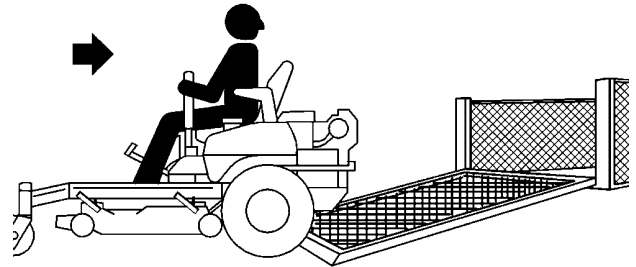

MXAL42817—UN—09APR13

3. Back machine onto heavy-duty trailer with full-width ramp.
4. Lower mower deck completely.
5. Lock park brake.
6. Turn off machine and remove key.

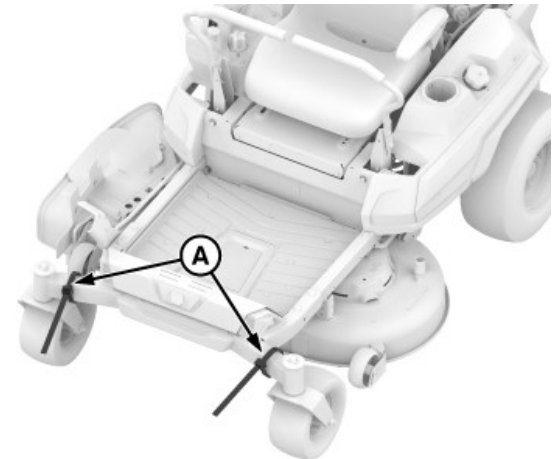

GX710690—UN—08APR26

Transport Machine on Trailer


NOTE: Trailer capacity must exceed combined machine weight and attachment weight. See Specifications section (Operator's Manual.)

Ensure trailer has all necessary lights and signs required by law.

CAUTION: Avoid injury. Use extra care when loading or unloading machine onto a trailer or truck. Machine wheels can go off ramp or trailer, causing machine to tip over.

- To load, back up slowly and in a straight line. Keep wheels away from drop-offs and edges.
- Do not use two separate loading ramps. Use a full width loading ramp at least 30 cm (12 in) wider than the machine to keep caster wheels from going off the ramp edge.
- Use a trailer with sides.

7. Fasten front of machine at both sides of frame at points (A) to trailer with heavy-duty straps, chains, or cables. Straps must be directed down, forward, and outward from machine.

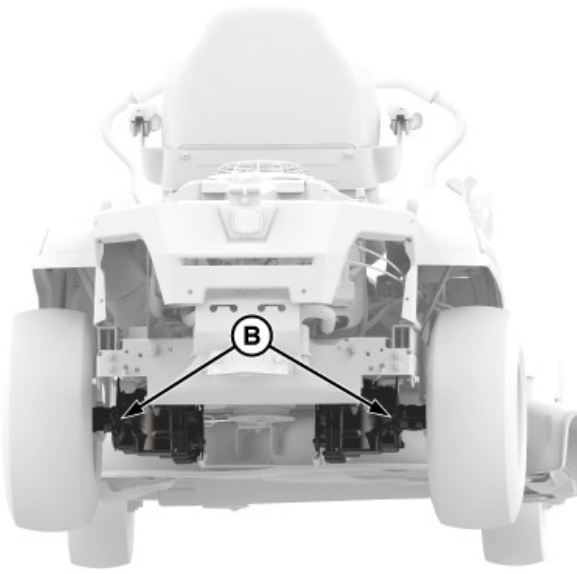

GX710691—UN—08APR26

8. Fasten rear of machine at both sides of axle at points (B) to trailer with heavy-duty straps, chains, or cables. Straps must be directed down, rearward, and outward from machine.

SDHTXN6,1775543053703-19-12APR26

Transporting Material Collection System (If Equipped)

If the material collection system is left on the machine during transport, follow these guidelines when trailering the unit:

- Empty the cloth bags and remove them from the hopper. Full bags add extra weight which can overstress the hopper frame on rough roads. At road travel speeds, wind can cause premature wear of the cloth bags.
- Make sure that the hopper cover is latched securely to the hopper frame.
- If the unit is transported over long distances or at high speeds, remove the rear bagger or power flow chute before transport.

TH84124,000020A-19-10APR19

Towing Loads

IMPORTANT: Avoid damage! Towing excessive trailer loads can stress drivetrain components. To avoid damage to drivetrain components, use the following guidelines.

- Do not exceed maximum towing capacity of 113.4 kg (250 lbs).

- Do not exceed maximum tongue weight of 45.4 kg (100 lbs).
- Always run tractor at full throttle when towing loads.
- Avoid inclines greater than a 10 degree slope while towing to avoid damage to the pulling machine. Use the Slope Guide located in this operator's manual to ensure proper machine towing operation. See Operating on Slopes in the Safety section for additional information.
- Avoid making tight turns. Make wide turns to avoid jack-knifing.
- Travel slowly and allow extra stopping distance.

SB31882,0000444-19-02DEC22

Mowing Tips

- Mow grass with throttle lever in the full fast / mow position.
- Mow grass when it is dry.
- Keep mower deck and discharge chute clean.
- Mow with sharp blades.
- Properly level mower deck for a smooth cut.
- Mow grass frequently.
- Use a travel speed that fits the conditions:
 - Mow tall or wet grass twice. With the first pass, cut grass halfway to desired height. With the second pass, cut to the desired height.
 - Travel slowly when mowing tall or thick grass.
 - Avoid damaging grass by slipping or skidding machine drive wheels. Practice smooth control lever movements.
 - When performing sharp turns, do not allow inside machine drive wheel to stop and twist on grass.

MG39705,00005BB-19-09JUN21

Blade Choices

Several types of blades are available for ZTrak mowers:

- Side discharge blades - These are general purpose blades installed from the factory that are best suited for side-discharge operation.
- Mulching blades - These blades are designed for optimal performance when used with the optional Mulch Control kit.
- Bagging blades- Refer to bagger operator's manual and utilize blades included in material collection kit.

SB31882,000047C-19-16JUN20

Service Intervals

Servicing Your Machine

IMPORTANT: Avoid damage!

Operating in extreme conditions may require more frequent service intervals:

- Engine components may become dirty or plugged when operating in extreme heat, dust or other severe conditions.
- Engine oil can degrade if machine is operated constantly at slow or low engine speeds or for frequent short periods of time.

High-pressure washing can cause damage to machine components. It is recommended that your vehicle be washed by hand or with a garden hose using mild soap.

Avoid spraying water with any great force near or into the following places:

- Air intake
- Electrical connections (including battery compartment)
- Wheel bearings
- Radiator (if equipped)
- Warning labels
- Other labels
- Ignition switch
- Instrument panel (gauges and switches)
- Breather/tube vents
- Mower spindles
- Mower idler bearings
- Transmission cooling fans
- Under the machine
- At the PTO clutch

Please use the following timetables to perform routine maintenance on your machine.

Park the vehicle safely. (See Park Safely in the SAFETY Section.)

OUMX068,00006EF-19-14MAY26

Yearly or 50 Hours (Whichever Comes First)

- Check mower deck level. Level if necessary.
- Change engine oil. (10W30)
- Replace engine oil filter.
- Lubricate mower deck spindles and idler arm.

Every 100 Hours or Annually (Whichever Comes First)

- Replace air filter, fuel filter, and spark plugs.
- Clean engine cooling fins.
- Check mower belt. Replace if necessary.
- Sharpen / replace mower blades.
- Clean underside of mower deck.
- Check tire pressure.
- If there is debris that cannot be blown out, remove blower housing for complete cleaning.

Every 200 Hours

- Check / adjust engine valve clearance. See your John Deere dealer or other service provider for this service.

SDHTXN6,1746551603139-19-02JUN26

Service Intervals

Every 8 Hours or Daily

- Check Engine Oil.
- Clean muffler area, air intake screens, and mower deck.
- Check brake system.
- Check fuel level.
- Clean mower deck with washout port after use.
- Check under machine for leaks.
- Check safety interlock system.

Service Lubrication

Grease

IMPORTANT: Avoid damage! Use recommended John Deere greases to avoid component failure and premature wear.

The following grease is recommended for service:


- John Deere Multi-Purpose HD Lithium Complex Grease
- Grease-Gard Premium Plus

Not all grease types are compatible; John Deere does not recommend mixing greases. If using any product other than the recommended grease in service, purge any remaining grease from the system before application. If not practical, grease twice as often until all old grease is purged from the system.

OUMX068,0000642-19-12APR24

Lubricating Mower Deck Spindles

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Lower mower deck fully.
3. Remove the mower deck foot plate. (See Removing and Installing Mower Deck Foot Plate in the Service Mower section.)

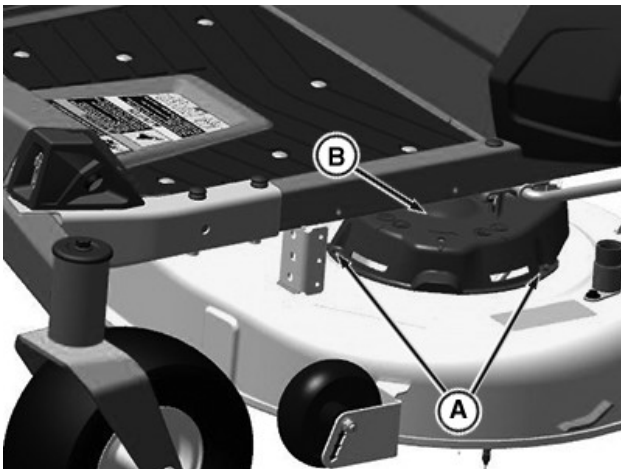

GX535576—UN—21APR22

Left Spindle Cover Removal

4. Remove two screws (A) and left spindle cover (B).



GX535581—UN—21APR22

5. Lubricate left spindle grease fitting (C) with two pumps of grease at the specified interval.
6. Install the left spindle cover with two screws.
7. Repeat steps to lubricate the right mower deck spindle.

H9PQBKY,000005A-19-12JUN22

Service Engine

Carbon Dioxide Emissions (CO₂)

To identify the carbon dioxide (CO₂) output, locate the engine emissions label. Find the appropriate family on the emissions label and refer to the engine manufacturer's website listed below.

<http://www.briggsandstratton.com>

<https://power.kohler.com/en/engines>

<https://www.kawasaki-engines.eu/en/support/>

<http://www.honda-engines-eu.com/co2>

This CO₂ measurement results from testing over a fixed test cycle under laboratory conditions a(n) (parent) engine representative of the engine type (engine family) and shall not imply or express any guarantee of the performance of a particular engine.

MK71445,000007A-19-13MAY19

Avoid Fumes

CAUTION: Avoid injury! Engine exhaust fumes contain carbon monoxide and can cause serious illness or death.

Do not run an engine in an enclosed area, such as a garage, even with doors or windows opened.

Move the machine to an outside area before running the engine.

MP47322,00F4652-19-13JAN15

Use oil viscosity based on the expected air temperature range during the period between oil changes.

Using single viscosity grade oils such as SAE 30 or SAE 40 can reduce oil consumption in air cooled engines.

The following oils are approved:


- John Deere Plus-50™ II
- John Deere Turf-Gard™

Other oils may be used if they meet one or more of the following:

- ILSAC GF-6A
- API Service Category SP
- API Service Category SN
- API Service Category SM
- API Service Category SL
- API Service Category SJ
- ACEA Oil Sequence A3/B3
- ACEA Oil Sequence A3/B4
- ACEA Oil Sequence A5/B5
- ACEA Oil Sequence C5
- ACEA Oil Sequence C4
- ACEA Oil Sequence C3
- ACEA Oil Sequence C2
- ACEA Oil Sequence C1

DX,ENOIL2-19-15JUL20

Gasoline Engine Oil

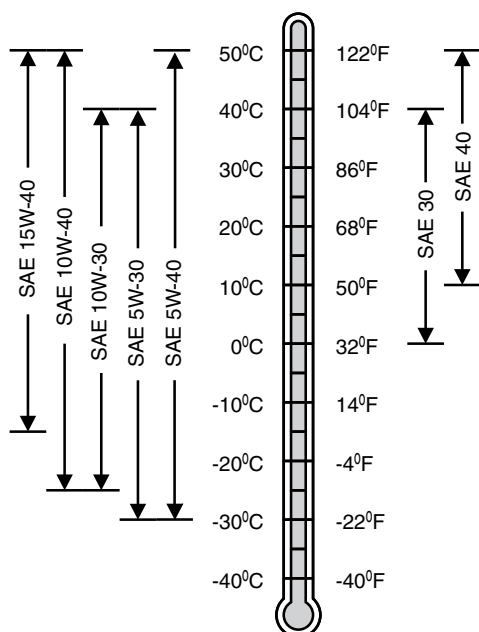

TS1744—UN—25AUG20

Oil Viscosities for Air Temperature Ranges

Checking Engine Oil Level

IMPORTANT: Avoid damage! Failure to check the oil level regularly could lead to serious engine problems if oil level is out of the operating range:

- Check oil level before operating.
- Check oil level when the engine is cold and not running.
- Keep oil level between the dipstick marks.
- Shut off engine before adding oil.

NOTE: Check oil twice a day if you run engine over 4 hours in a day.

Make sure that engine is cold when checking engine oil level.


1. Park machine safely. (See Parking Safely in the Safety section.)

*Plus-50 is a trademark of Deere & Company
Turf-Gard is a trademark of Deere & Company*

IMPORTANT: Avoid damage! Dirt and contamination can enter engine when checking oil level. Clean area around dipstick before loosening or removing.

NOTE: NOTE: Machines equipped with Kawasaki engines have dip stick located on right side of engine.

2. Clean area around the dipstick to prevent debris from falling into crankcase.

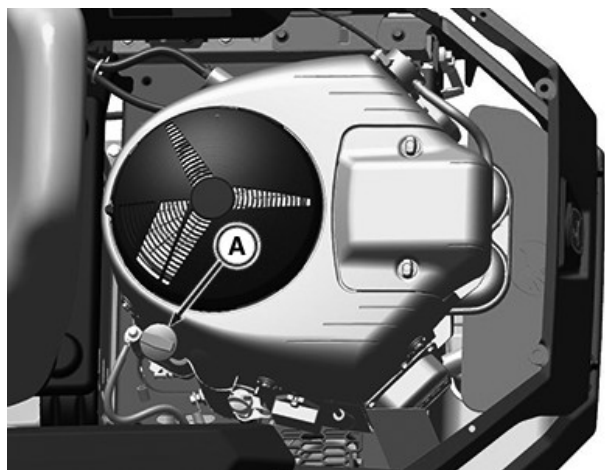

GX535578—UN—19APR22

3. Remove dipstick (A). Wipe with clean cloth.
4. Install and tighten the dipstick.
5. Remove dipstick.
6. Check oil level on dipstick. Oil must be between ADD and FULL marks.
7. If oil level is low, add oil to bring oil level no higher than FULL mark on dipstick. Do not overfill.
8. Install and tighten the dipstick.

H9PQBYK,0000059-19-07MAY26

Changing Conventional Engine Oil and Filter

IMPORTANT: Avoid damage. Operating in extreme conditions may require more frequent service intervals:


- Engine components may become dirty or plugged when operating in extreme heat, dust, or other severe conditions.
- Engine oil can degrade if machine is operated constantly at slow or low engine speeds or for frequent short periods of time.

1. Run engine to warm oil.

2. Park machine safely on the level surface. (See Parking Safely in the Safety section.)


IMPORTANT: Avoid damage. Dirt and contamination can enter engine when checking oil level. Clean area around dipstick before loosening or removing.

NOTE: Engines equipped with Kawasaki engines have dip stick and oil drain hose located on right side of engine.

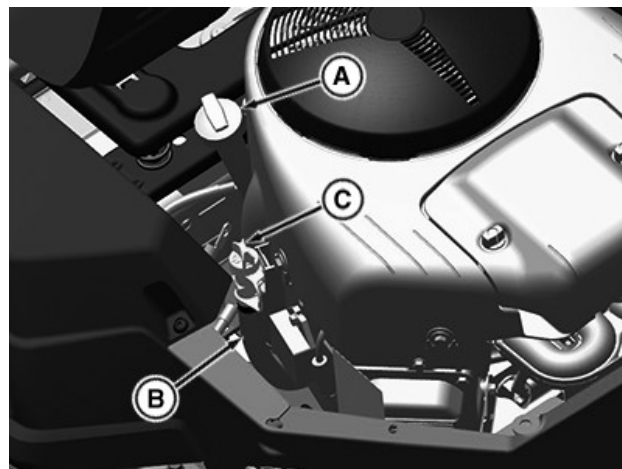

GX535579—UN—19APR22

3. Clean area around dipstick (A) to prevent debris from falling into crankcase.
4. Loosen dipstick (A). Disconnect oil drain hose (B) from the side of the engine.
5. Remove the oil drain cap (C). Carefully lower the quick oil drain into an approved container until the oil has drained completely.

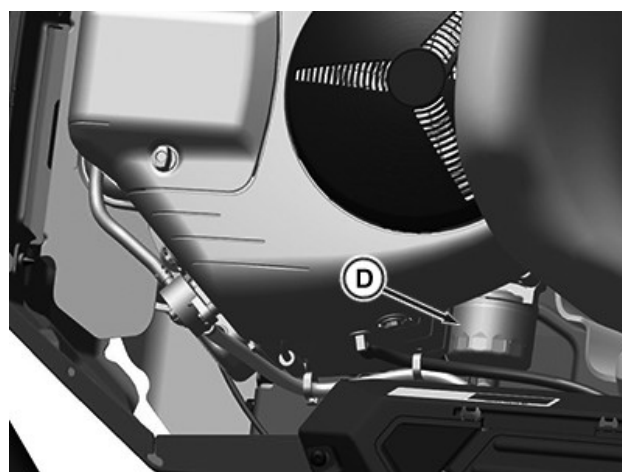

GX535580—UN—19APR22

6. Wipe dirt from around the oil filter (D). Place a drain pan under the oil filter, and remove filter.
7. Wipe up any dripped oil from the oil filter on the engine pan.

8. Put a light coat of fresh, clean oil on the new filter gasket.
9. Install replacement oil filter by turning oil filter to the right (clockwise) until the rubber gasket contacts filter base. Tighten filter an additional one-half turn.
10. After oil has drained, install the drain cap (C) and attach drain hose assembly (B) to side of engine.
11. Add oil no higher than FULL mark on dipstick. Begin with specification. Do not overfill.

Specification

Engine Oil—Capacity with filter. 1.9 L (2.0 qt) (approx.)

12. Tighten dipstick (A) .
13. Start and run engine at idle to check for leaks. Stop engine. Fix any leaks before operating.
14. Check oil level. Add oil if necessary.
15. Wipe up all surfaces of any oil drippings.

H9PQBYK,0000058-19-16APR26

Cleaning Air Intake Screen and Engine Fins

CAUTION: Avoid injury! Compressed air can cause debris to fly a long distance.

- Clear work area of bystanders.
- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to specification.

Specification

Air—Pressure. 210 kPa (30 psi)

IMPORTANT: Avoid damage! An obstructed air intake screen can cause engine damage due to overheating. Keep air intake screen and other external surfaces of the engine, including cooling fins, clean at all times to allow adequate air intake.

1. Park machine safely. (See Parking Safely in the Safety Section.)
2. Clean air intake screen on top of engine and external surfaces with rag, brush, vacuum, or compressed air.

MP47322,00F4656-19-12JUN22

Cleaning Engine Shroud

CAUTION: Avoid injury! Compressed air can cause debris to fly a long distance.

- Clear work area of bystanders.

- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to specification.


Specification

Air—Pressure. 210 kPa (30 psi)

IMPORTANT: Avoid damage! An obstructed air intake screen can cause engine damage due to overheating. Keep Air intake screen and other external surfaces of engine, including cooling fins, clean at all times to allow adequate air intake.

CAUTION: Avoid injury! Touching hot surfaces can burn skin. The engine, components, and fluids will be hot if the engine has been running. Allow the engine to cool before servicing or working near the engine and components.

1. Park machine safely. (See Parking Safely in the Safety Section.)
2. Clean air intake screen and external engine surfaces (See Cleaning Air Intake Screen and Engine Fins in ENGINE Section).
- 3.

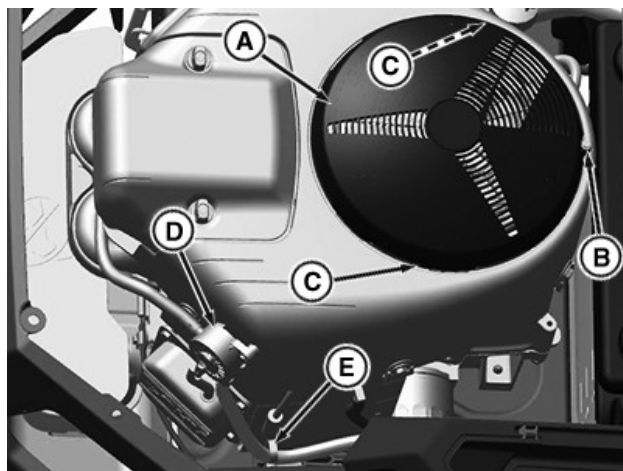


GX535575—UN—21APR22

Locate rotating screen guard (A) at the top of engine.


4. Remove screw (B) (if equipped) press in tabs (C) and lift off guard (A).
5. Clean guard and flywheel cover of debris.

IMPORTANT: Avoid damage! Be careful to maintain position of fuel pump assembly (D), clips (E) for the fuel line, and any other attached components when removing parts from the side of engine.

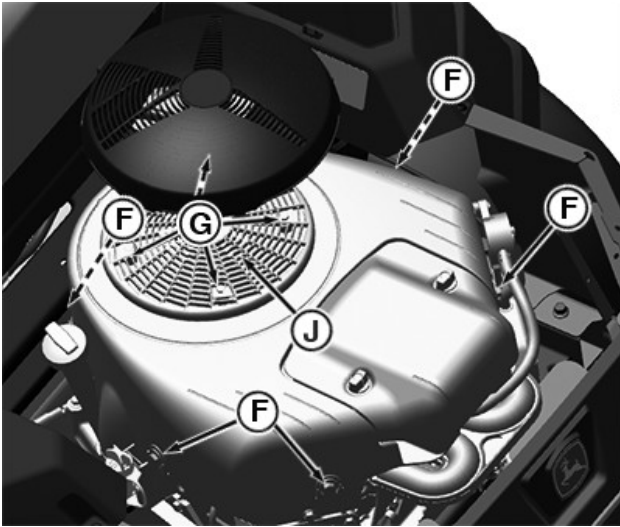

APY538562—UN—13JUN22

6. Remove five bolts (F) and engine shroud.
7. Remove four bolts (G) and rotating screen (J).

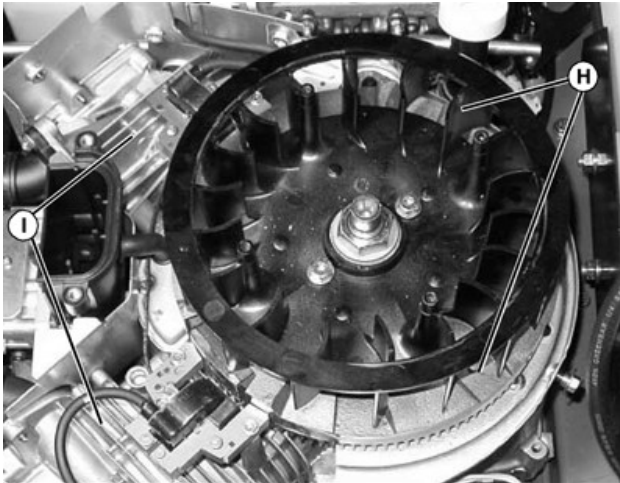

MXAL42832—UN—09APR13

8. Clean debris from:
 - Fan areas (H)
 - Cylinder head cooling fins (I)
 - Engine cooling fins
 - Area between engine and frame
9. Install rotating screen with four bolts.

IMPORTANT: Avoid damage! Engine shroud must be assembled so that the slots in the shroud align with the ridge in the air intake and mating surfaces along sides of engine. Failure to assemble correctly will prevent the air filter from sealing and may cause engine damage.


10. Install shroud with hardware.

H9PQBYK.0000057-19-13JUN22

Checking and Cleaning Air Cleaner Element

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Let engine cool.

IMPORTANT: Avoid damage! To prevent engine damage, do not allow any foreign objects to fall into the carburetor air intake.

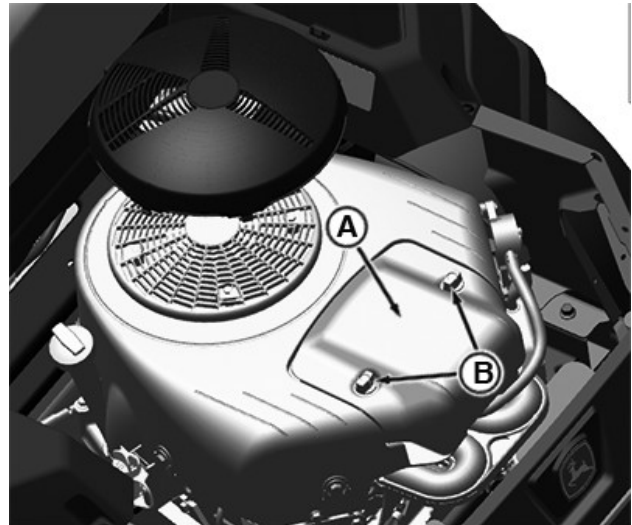

APY538563—UN—07JUN22

3. Clean dirt and debris from the air cleaner cover (A).
4. Loosen two knobs (B) and remove cover.

IMPORTANT: Avoid damage! Dirt and debris can enter the engine through a damaged filter element:

- Do not wash paper element.
- Do not attempt to clean paper element by tapping against another object.
- Do not use pressurized air to clean element.
- Replace element only if it is dirty, damaged or the seal is cracked.

NOTE: During filter cartridge removal, any material or foreign object that enters the air intake must be removed before replacement of the cartridge.



MXT010728—UN—21APR14



GXT002964—UN—18APR16

5. Lift out filter cartridge (C) and inspect it for damage.

NOTE: Do not put engine oil on precleaner. Engine oil may wick into the paper filter element and result in poor engine performance.

- Rinse precleaner thoroughly. Squeeze out excess water in a dry cloth until precleaner is dry.
- Replace the precleaner if damaged or missing.

6. If equipped, carefully clean and inspect foam precleaner (D).

- Wash precleaner in a solution of warm water and liquid detergent.

7. Clean air cleaner housing carefully. Prevent any dirt from falling into carburetor.

8. Install cartridge. Make sure that cartridge and seal are properly seated and sealing the air intake area.

9. Install air cleaner cover.

gh8xt3t,1654855300768-19-13JUN22

Checking and Cleaning Air Cleaner Element (Z320)

1. Park machine safely. (See Parking Safely in Safety section.)
2. Let engine cool.


IMPORTANT: Avoid damage To prevent engine damage, do not allow any foreign objects to fall into the carburetor air intake.



APY564724—UN—17FEB23

Engine for model Z320

3. Clean dirt and debris from the air cleaner cover and remove the cover (A).

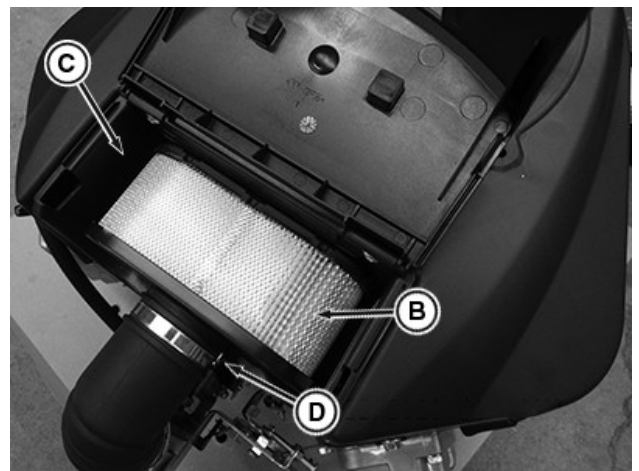

APY30386—UN—04MAY20

Engine for model Z320

4. Loosen air filter clamp by turning thumbscrews (D) counterclockwise until clamp loosens. Carefully lift the filter element (B) out of the blower housing (C)

IMPORTANT: Avoid damage Dirt and debris can enter the engine through a damaged filter element


NOTE: During filter cartridge removal, any material or foreign object that enters the air intake must be removed before replacement of the cartridge.



APY30387—UN—04MAY20
Engine for model Z320

5. Remove the air filter (E) clean by tapping it gently on a flat surface to remove dust. If the element is very dirty, replace it with a new one.
6. Clean air cleaner base carefully, preventing any dirt from falling into the air intake tube.
7. Install cartridge. Make sure that cartridge and seal are properly seated and sealing the air intake area.
8. Install air cleaner cover.

gh8xt3t,1654623265569-19-16APR26

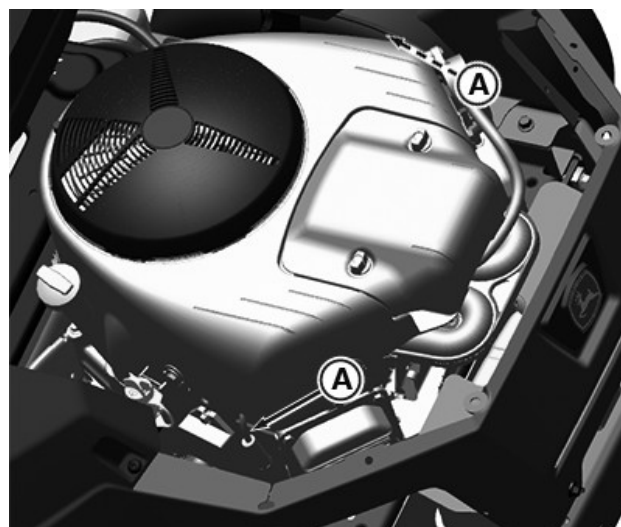

APY538564—UN—07JUN22

2. Disconnect spark plug wire (A) on each side of engine.
3. Remove each spark plug.
4. Clean spark plug carefully with a wire brush.
5. Inspect the spark plug for:
 - Cracked porcelain.
 - Pitted or damaged electrodes.
 - Other wear or damage.


NOTE: In Canada, replace the spark plug with a resistor plug only.

6. Replace the spark plugs as necessary.

Checking Spark Plug

CAUTION: Avoid injury! Touching hot surfaces can burn skin. The engine, components, and fluids are hot if the engine has been running. Allow the engine to cool before servicing or working near the engine and components.

1. Park machine safely (See Parking Safely in the Safety section).

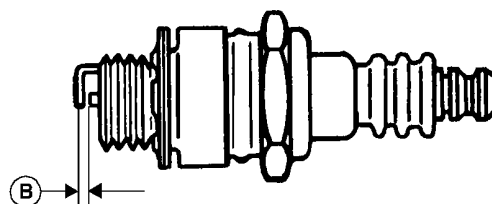

MXAL42836—UN—09APR13

7. Check plug gap (B) with a wire feeler gauge. To change gap, move the outer electrode. Gap must be to specification.

Specification

Electrode—Gap. 0.75 mm (0.030 in)

8. Install spark plugs and tighten to specification.

Specification

Spark Plug—Torque. 20 N·m (180 lb·in)

9. Connect the spark plug wires.

gh8xt3t,1654858046695-19-13JUN22

Adjusting Carburetor

NOTE: Carburetor is calibrated by the engine manufacturer and is not adjustable.

If engine is operated at altitudes above 1006 m (3,300 ft), some carburetors may require a special high altitude main jet. See your authorized dealer.

If engine is hard to start or runs rough, check the TROUBLESHOOTING section of this manual.

Possible engine surging will occur at high throttle with transmission in "N" neutral and mower engagement lever disengaged. This is a normal condition due to the emission control system.

After performing the checks in the troubleshooting section and your engine is still not performing correctly, contact your authorized dealer.

MP47322,00F465A-19-15MAR13

Replacing Fuel Filter

⚠ CAUTION: Avoid injury! Fuel vapors are explosive and flammable:

- Do not smoke while handling fuel.
- Keep fuel away from flames or sparks.
- Shut off engine before servicing.
- Cool engine before servicing.
- Work in a well-ventilated area.
- Clean up spilled fuel immediately.

NOTE: Change filter when fuel is low.

1. Park machine safely. (See Parking Safely in the Safety section).
2. Let engine cool.
3. Raise operator seat if necessary.
4. Put a drain pan under the fuel filter.



GX535582—UN—21APR22

Standard twin cylinder shown.

5. Slide hose clamps on both sides of the fuel filter (A) away from the fuel filter ends using pliers.
6. Disconnect hoses from the filter.

IMPORTANT: Avoid damage! Incorrect installation of the fuel filter may cause engine damage. Install the filter with the arrow pointing in the direction of fuel flow (towards the engine) for proper operation.

7. Connect hoses to the new filter making sure that the filter arrow is pointing in the direction of the fuel flow.
8. Install clamps and check for leaks.

H9PQBYK,0000056-19-21APR22

Service Transmission

Checking Transmission

The transmission is a sealed component. No maintenance is required on this transmission. If you suspect any transmission problems, please contact your John Deere dealer or other service provider.

TH84124,00001D2-19-17OCT25

Checking and Adjusting Neutral Creep

Checking Neutral Creep

Check neutral creep with engine running, motion control levers in the start/shutdown position, park brake off, and machine on level ground.

If the machine creeps forward or reverses while motion control levers are in the start/shutdown position, adjust the motion control lever linkages.


Adjusting Neutral Creep

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Remove style panel for better access to adjustment components (if desired):




APY536681—UN—28APR22

- a. Remove two bolts (A) to remove steering arm.

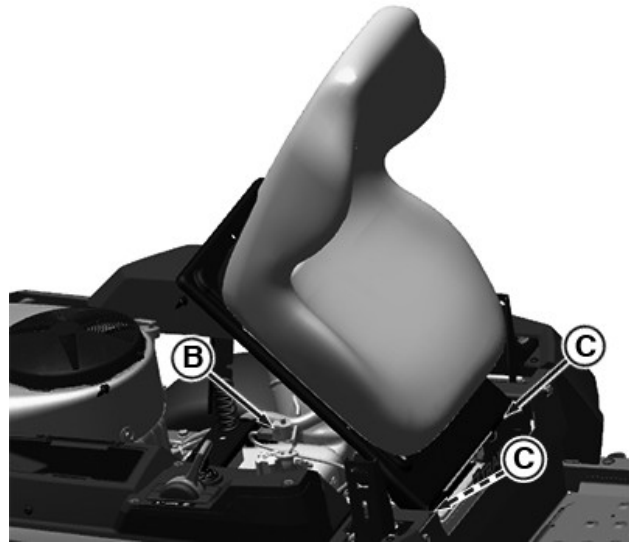


APY536682—UN—28APR22

- b. Raise rear of seat and disconnect connector (B) from the seat switch wiring harness connector. And remove two bolts (C) to remove the seat.

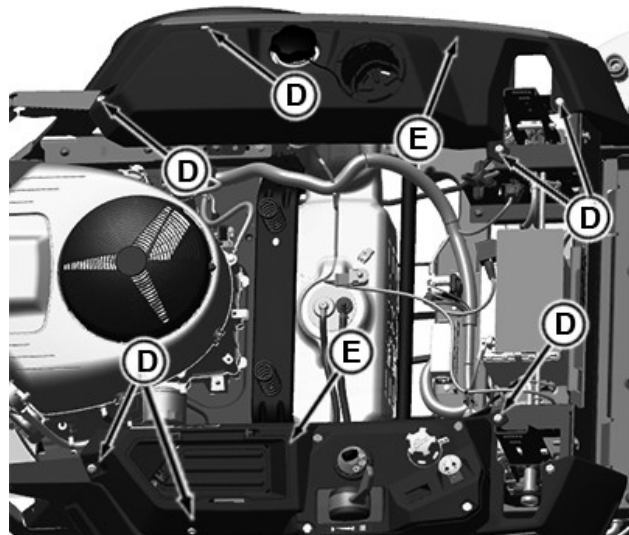

APY536683—UN—28APR22

- c. Remove four push retainers (D) from left side and three push retainers (D) from right side of the style panel (E) and remove the style panel (E).

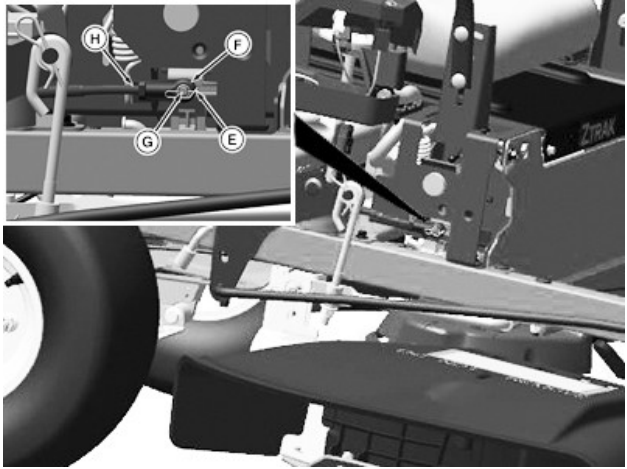

Right Side of Machine Shown with Machine Parts Removed for a Clearer Image

GX535583—UN—21APR22


3. On linkage side needing adjustment (right side shown), remove spring locking pin (E) and rod end (F) from pivot pin (G). Turn rod end (F) on rod (H) in (clockwise) to decrease forward creep and out (counterclockwise) to decrease reverse creep. Repeat procedure, as necessary, on opposite side. Install rod ends back onto arms and secure with spring locking pins.
4. Install style panel and push retainers, seat, seat switch, and steering arm if previously removed.

GH8XT3T,00009C9-19-13JUN22

Adjusting Tracking

If the machine does not track in a straight line while moving in full forward position, the tracking requires adjustment.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Use tracking adjustment socket found in the glove box of the machine.

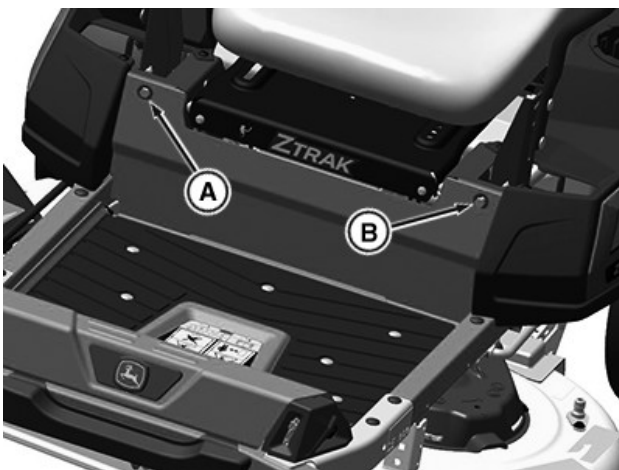

GX536024—UN—25APR22

3. Adjust tracking as follows:

NOTE: Tracking bolts limit top forward speed. If both levers hit against the tracking bolts, turn both bolts counterclockwise equally until only one bolt contacts the lever. This will achieve maximum forward speed.

- If machine tracks to the left, turn tracking bolt (A) clockwise.
- If machine tracks to the right, turn tracking bolt (B) clockwise.

H9PQBYK,0000061-19-11JUL22

Cleaning Transaxle Cooling Fans

CAUTION: Avoid injury. Compressed air can cause debris to fly a long distance.


- Clear work area of bystanders.
- Wear eye protection when using compressed air for cleaning purposes.
- Reduce compressed air pressure to specification.

Specification

Air—Pressure. 210 kPa (30 psi)

IMPORTANT: To ensure proper cooling, keep transaxle cooling fins and surrounding area clean at all times. Operating transaxle with obstructed cooling fins could cause damage due to overheating.

1. Park machine safely. See Parking Safely (Safety section).

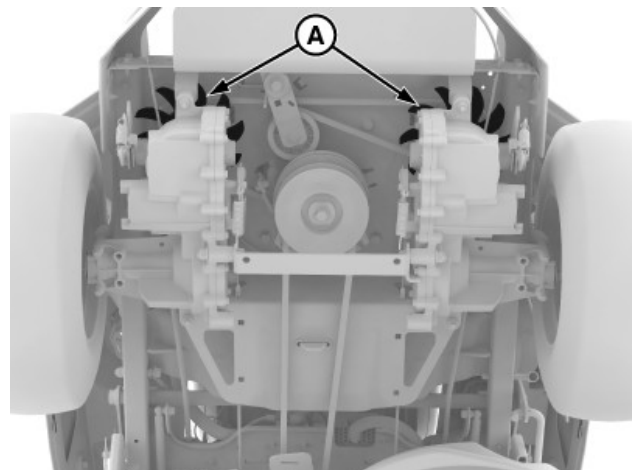

GX710692—UN—08APR26

2. Clean transaxle fan fins (A) and around exterior of each fan with rag, brush or compressed air.

SDHTXN6,1775543238378-19-07APR26


Checking and Replacing Transaxle/Transmission Drive Belt

CAUTION: Avoid injury. Entanglement in a belt or sheave can cause serious injury. Stop engine and wait for all moving parts to stop.

NOTE: The transmission drive belts are self-adjusted using a spring tensioner and do not require a tension adjustment.

Checking Transaxle/Transmission Drive Belts

1. Park machine safely. See Parking Safely (Safety section).

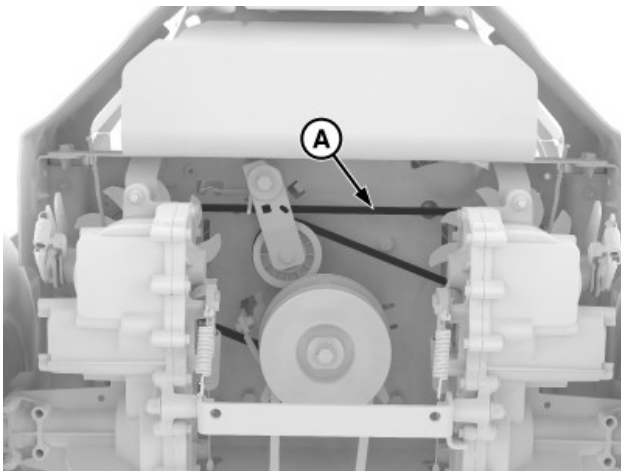


GX710693—UN—08APR26

2. Inspect drive belt (A) for excessive wear, damage or stretching while in position on all machine sheaves.

Replacing Transaxle/Transmission Drive Belts


1. Park machine safely. See Parking Safely (Safety section).
2. Remove shield over engine drive sheave.
3. Remove mower deck.

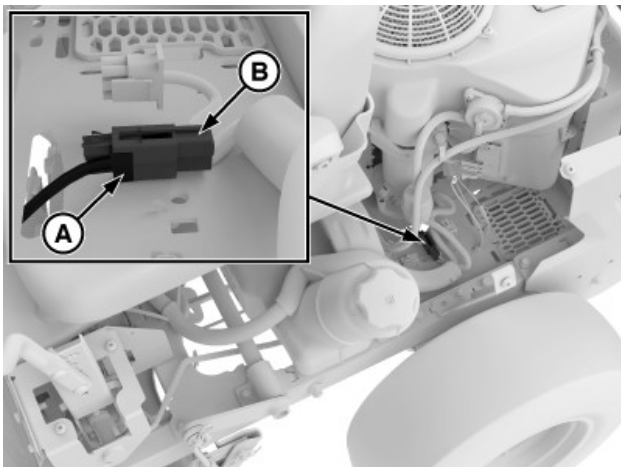

GX711173—UN—09APR26

4. Disconnect electric clutch wiring connector (A) from main wiring harness connector (B).


CAUTION: Avoid injury. Components are installed under spring tension. Wear eye protection and use proper tools when installing and removing components with spring tension.

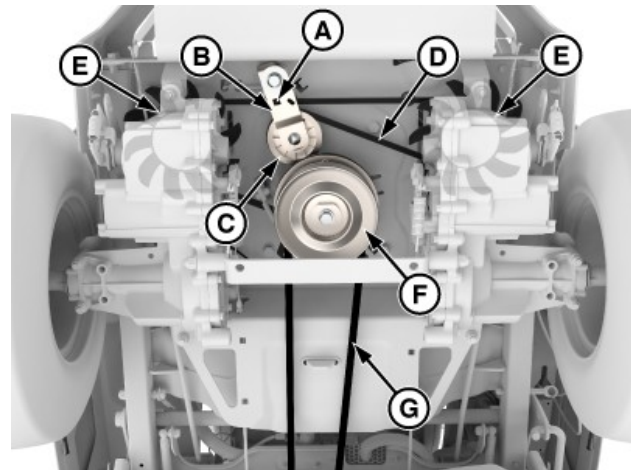

GX710694—UN—09APR26

Components Viewed from Bottom

5. Insert 3/8 in. ratchet or breaker bar into square hole (A) on idler arm (B), rotate spring-loaded idler arm to relieve belt tension on idler sheave (C) and remove drive belt (D) from idler sheave (C). Release spring tension from arm and remove tool.
6. Remove drive belt (D) from both transaxle sheaves (E).
7. Remove drive belt (G) from engine sheave (F).
8. Position replacement belts onto engine sheave (F) and both transaxle sheaves (E).
9. Rotate spring-loaded idler arm (B) and install belt on idler sheave (C).

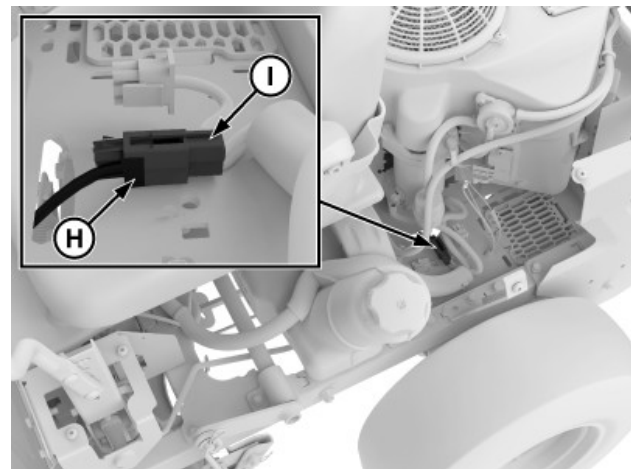

GX711167—UN—09APR26

10. Connect electric clutch wiring harness connector (H) to main wiring harness (I).
11. Install mower deck.
12. Install shield over engine drive sheave.

SDHTXN6,1775543310832-19-16APR26

Service Mower

Mower Deck Identification

Mower decks in the following instructions are identified by a code designation. The codes are as follows:

Code	Description
42A	42 Inch Accel Deep™ Mower Deck

Accel Deep is a trademark of Deere & Company


gh8xt3t,1657258727127-19-08JUL22

Removing and Installing Mower Deck Foot Plate

CAUTION: Avoid injury! Always operate the mower with the foot plate installed. Operating with the foot plate removed can cause serious injury.

Removing Foot Plate

1. Park machine safely. (See Parking Safely in the Safety section.)

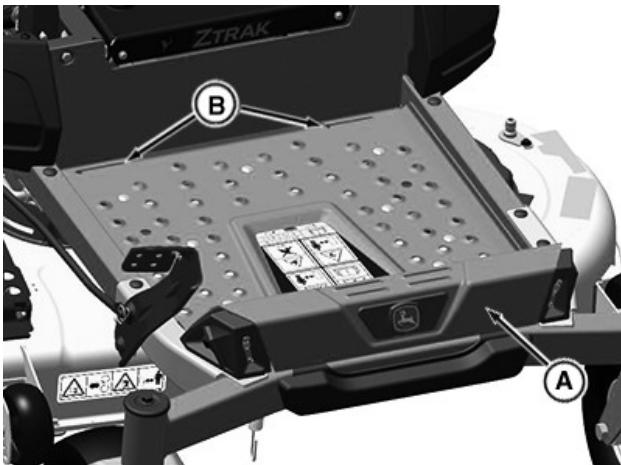

GX536025—UN—25APR22

2. Lift the front end of the foot plate (A).
3. Using both hands, pull the foot plate out of the two openings (B) in the frame.

Installing Foot Plate

1. Using both hands, position the foot plate (A) into the two openings (B) in the frame.
2. Lower the foot plate until it rests securely in place.

H9PQBYK,0000051-19-25APR22


Removing Mower Deck (42A)

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Allow engine and muffler to cool completely.

CAUTION: Avoid injury! Rotating blades are dangerous.


Before adjusting or servicing mower:

- To prevent engine from starting accidentally, disconnect spark plug wires or battery negative (-) cable.
- Always wear gloves when handling mower blades or working near blades.

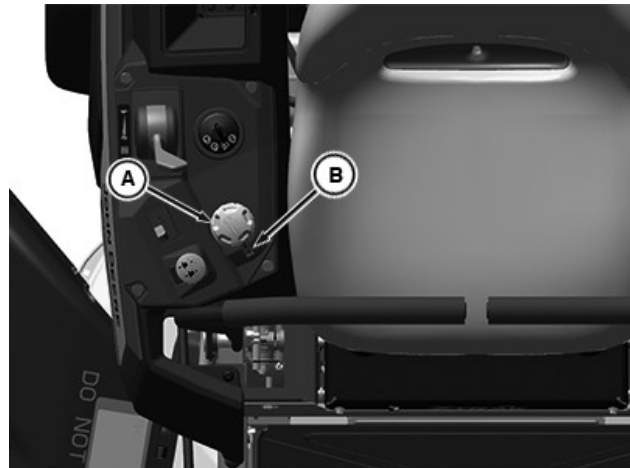


APY69519—UN—08MAR22

3. Rotate the height-of-cut dial (A) in clockwise direction to the lowest range in index mark (B) to lower deck to 1.25" height-of-cut for lockout position.

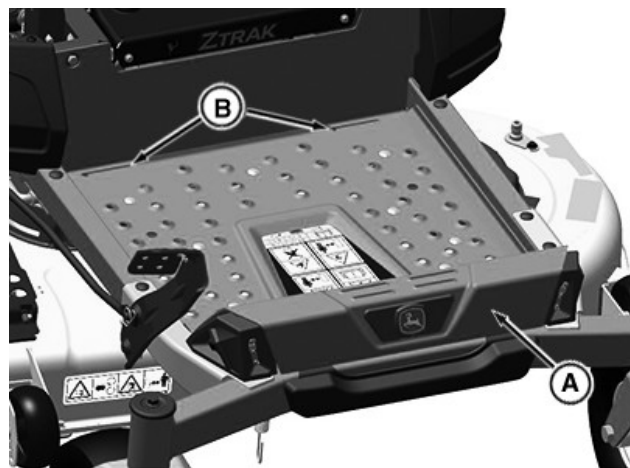

GX536026—UN—25APR22

4. Lift the front end of the foot plate (A) and remove the foot plate from the slots (B).

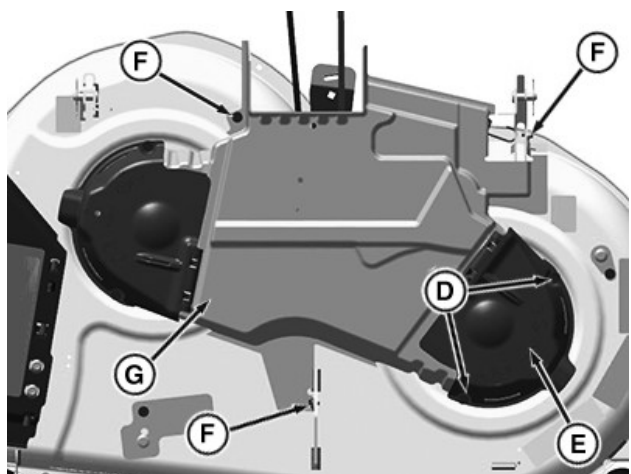


GX535584—UN—21APR22

Deck Shown Removed from Machine for Better View

5. Remove two screws (D) and left spindle shield (E) from deck.
6. Remove three screws (F) and center shield (G) from deck.


CAUTION: Avoid injury! Component is spring-assisted and under tension. Injury can occur if spring-assisted component is released suddenly.

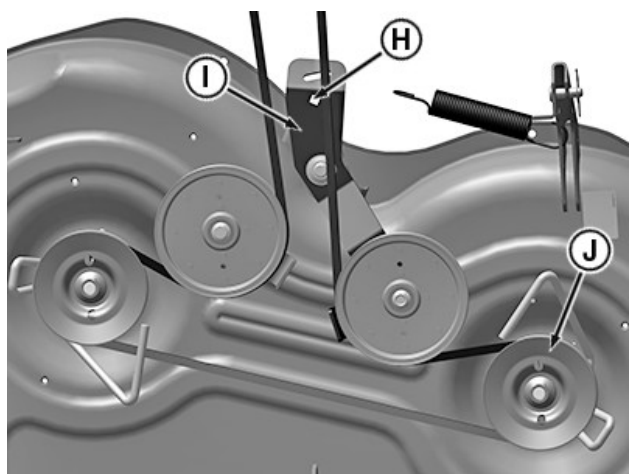

PY43380—UN—31MAY17


Deck Shown Removed from Machine for Better View

7. Install a 3/8 in ratchet with extension into **bottom** of square hole (H) of sheave tension arm (I). Rotate counterclockwise to release belt tension and remove belt from left spindle sheave (J).
8. Remove deck drive belt from engine sheave.

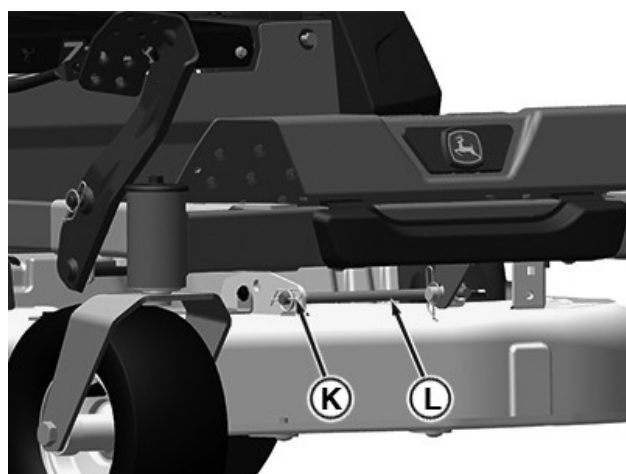

APY69533—UN—24FEB22

9. Remove locking pin (K) and front draft bracket (L) from deck bracket.

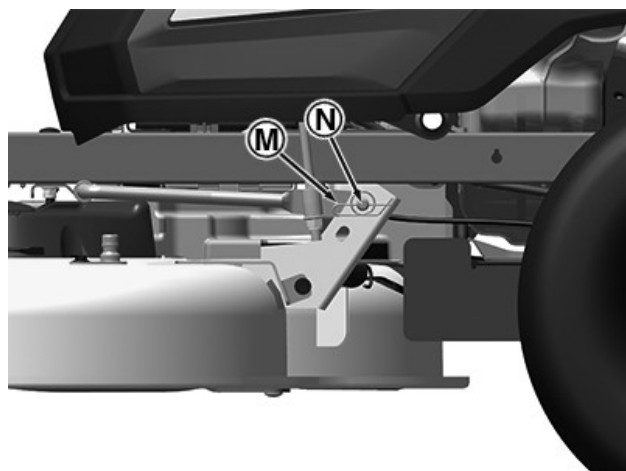

APY69534—UN—24FEB22

10. Remove spring locking pin (M) and pin (N) from each side of rear mower bracket.
11. Rotate the height-of-cut dial to highest position.
 - Rotate the dial (A) counterclockwise to raise the deck.
12. Slide mower deck and belt toward front of machine to clear machine center belt shield and slide deck to the side and out from under the machine.

CAUTION: Machine may tip over when driven without the mower deck attached. Move machine without mower deck attached only by hand. (See Moving Machine by Hand in Operating section.)

H9PQBYK,0000049-19-25APR22

Installing Mower Deck (42A)


1. Park machine safely. See Parking Safely (Safety section).

2. Allow engine and muffler to cool completely.

⚠ CAUTION: Avoid injury. Rotating blades are dangerous.


Before adjusting or servicing mower:

- **Disconnect spark plug wires or battery negative (-) cable to prevent engine from starting accidentally.**
 - **Always wear gloves when handling mower blades or working near blades.**
3. Rotate height-of-cut dial (A) in counterclockwise direction to raise deck to highest position.
 4. Slide mower deck under machine, then insert belt into machine center belt shield. Align deck with machine shield and roll rearward.

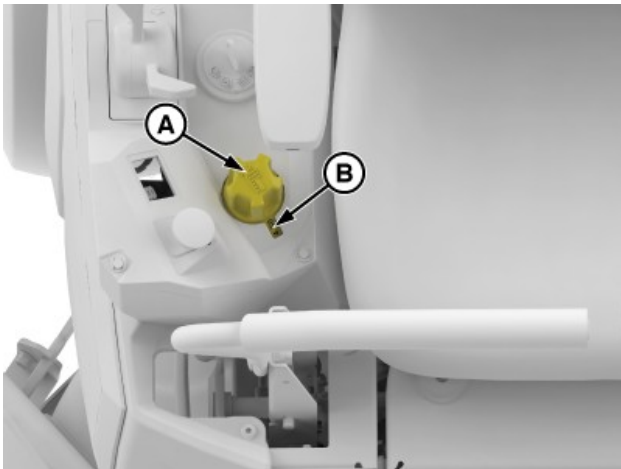


GX710700—UN—08APR26

5. Rotate height-of-cut dial (A) in clockwise direction to lowest range in index mark (B) to lock deck in lowered position.

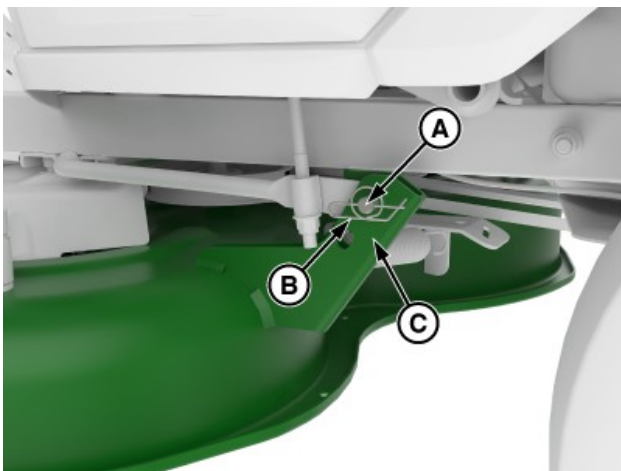


GX710695—UN—09APR26

6. Install pin (A) and spring locking pin (B) onto each rear mower bracket (C).

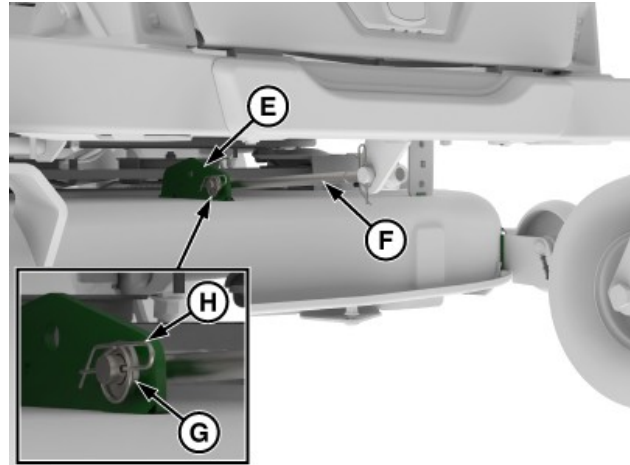

GX710696—UN—10APR26

7. Install front draft rod (F) into deck bracket (E) and secure with washer (G) and spring locking pin (H).

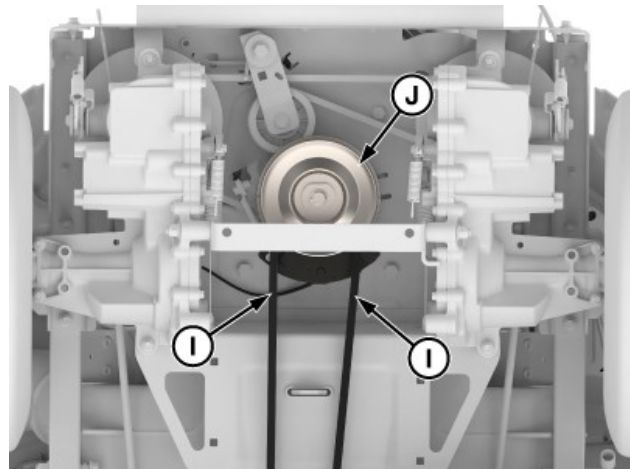


GX710697—UN—08APR26

8. Install deck belt (I) onto engine drive sheave (J).

IMPORTANT: Left and right spindle sheaves are hidden by belt shields. Failure to seat belt properly on sheaves may result in belt damage.

9. Make sure belt is completely seated on three right deck sheaves.


⚠ CAUTION: Avoid injury. Component is spring-assisted and under tension. Injury can occur if spring-assisted component is released suddenly.

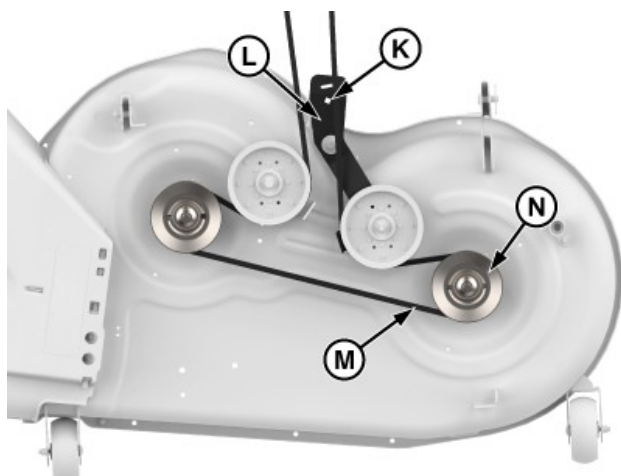

GX710698—UN—08APR26

Mower Deck Shown Removed from Machine for Better View

10. Install 3/8 in ratchet with extension into bottom of square hole (K) of sheave tension arm (L). Rotate arm counterclockwise and install belt (M) on left spindle sheave (N).

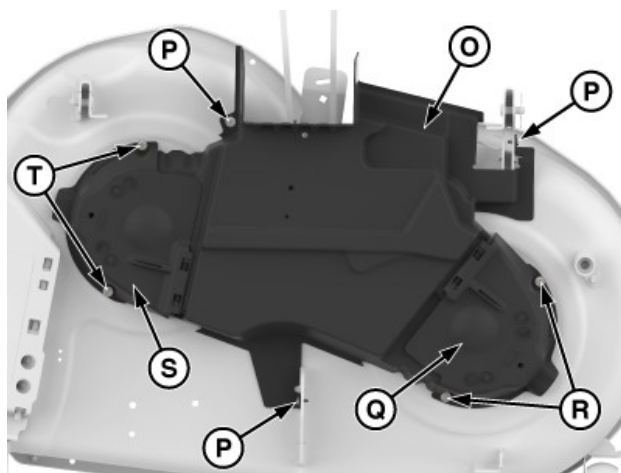

GX710699—UN—08APR26


Mower Deck Shown Removed from Machine for Better View

11. Install center deck shield (O) with three screws (P).
12. Install left spindle shield (Q) with two screws (R).
13. Install left spindle shield (S) with two screws (T).
14. Install foot plate.

SDHTXN6,1775543542234-19-16APR26


Before adjusting or servicing mower:

- Disconnect spark plug wire or battery negative (-) cable to prevent engine from starting accidentally.
- Always wear gloves when handling mower blades or working near blades.

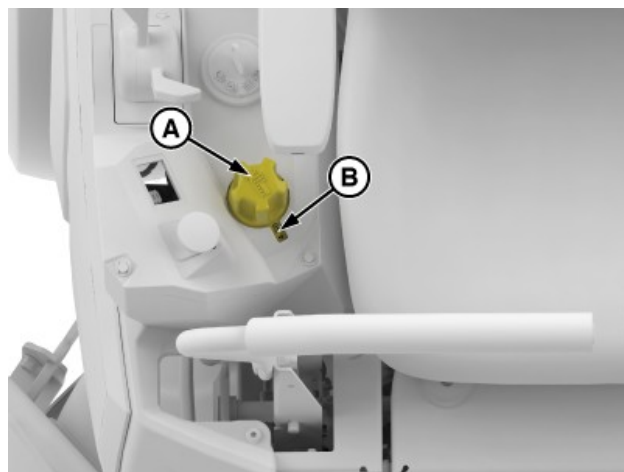

GX710700—UN—08APR26

3. Rotate height-of-cut dial (A) in clockwise direction to lowest range in index mark (B) to lock deck in lowered position.

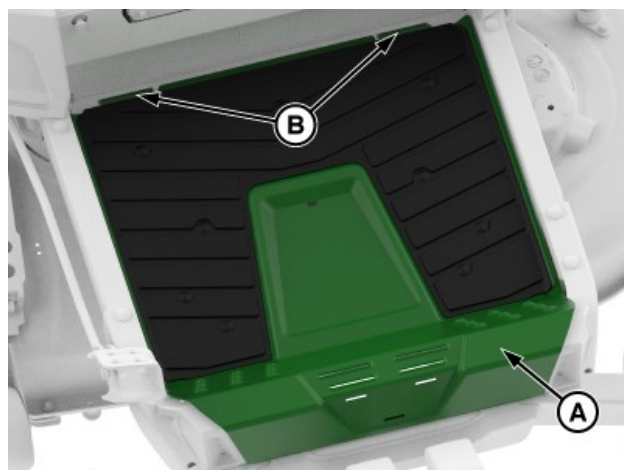

GX710701—UN—08APR26


4. Lift front end of foot plate (A) and remove foot plate from slots (B).

Replacing Mower Drive Belt (42A)

Remove Mower Drive Belt

1. Park machine safely. See Parking Safely (Safety section).
2. Allow engine and muffler to cool completely.

CAUTION: Avoid injury. Rotating blades are dangerous.

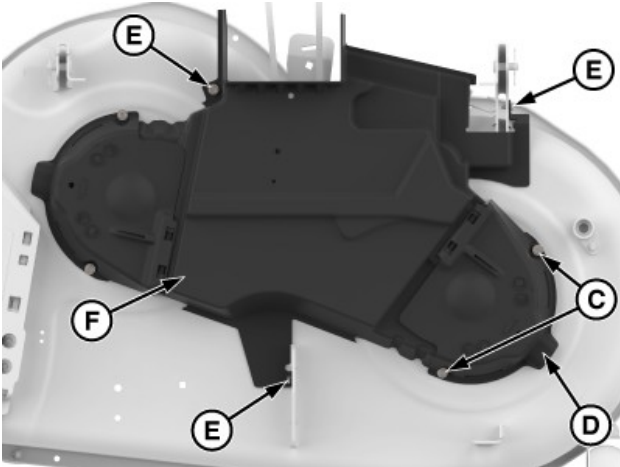


GX710702—UN—08APR26

Mower Deck Shown Removed from Machine for Better View

5. Remove two screws (C) and left spindle shield (D) from deck.
6. Remove three screws (E) and center shield (F) from deck.


CAUTION: Avoid injury. Component is spring-assisted and under tension. Injury can occur if spring-assisted component is released suddenly.

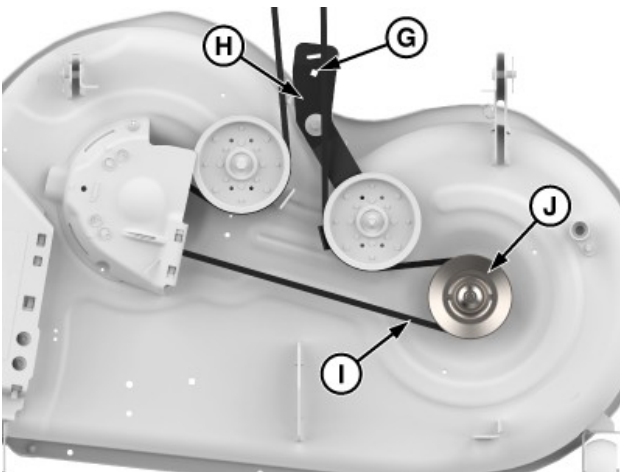

GX711160—UN—08APR26


Mower Deck Shown Removed from Machine for Better View

7. Install 3/8 in ratchet with extension into bottom of square hole (G) of sheave tension arm (H). Rotate counterclockwise to release belt tension and remove belt (I) from left spindle sheave (J).

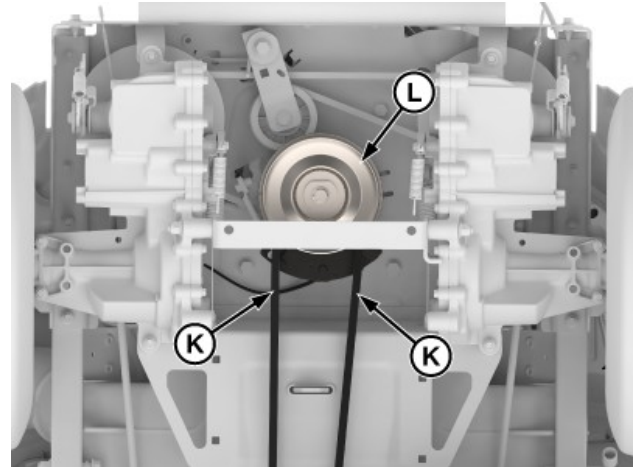

GX711174—UN—09APR26

8. Remove deck drive belt (K) from engine sheave (L).

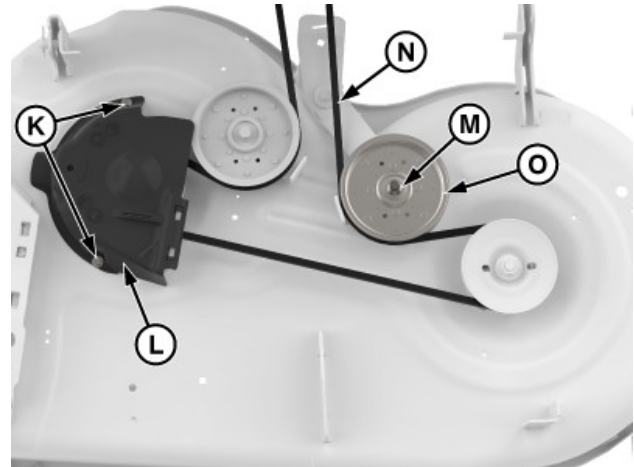


GX711161—UN—08APR26

Mower Deck Shown Removed from Machine for Better View


9. Remove two screws (K) and right spindle shield (L).
10. Loosen nut (M) on belt tension sheave and remove belt (N) from sheave (O) and guide.
11. Remove belt (N) from machine.
12. Inspect belt for wear or damage. Replace if necessary.
13. Clean top surface of mower deck and sheaves.

Install Mower Drive Belt

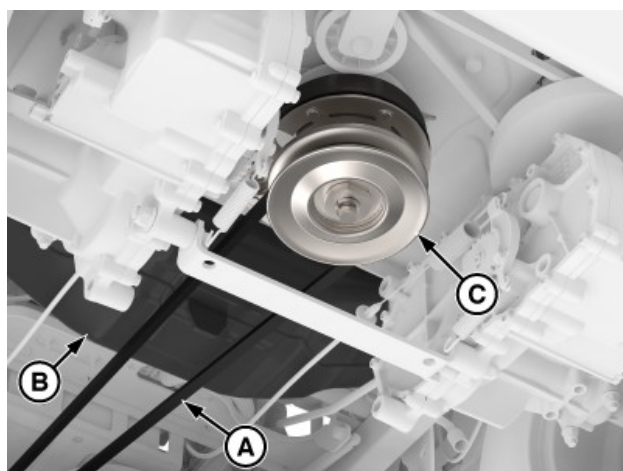

GX711162—UN—08APR26

1. Route belt (A) through center machine shield (B) and install onto engine sheave (C).

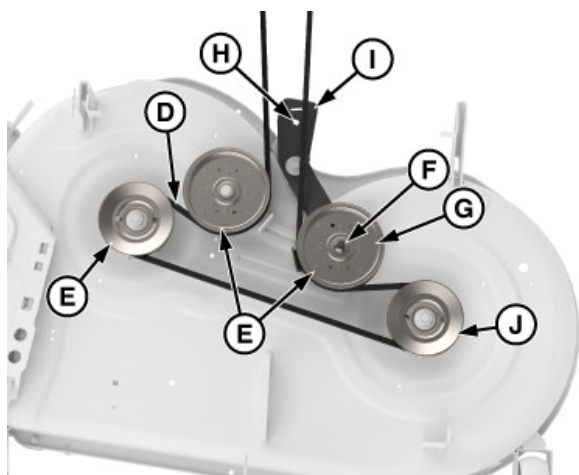

GX711163—UN—10APR26

2. Install belt (D) on three deck sheaves (E) as shown.
3. Tighten bolt (F) on idler sheave (G) to specification.


Specification

Sheave—Torque. 47 N·m (35 lb·ft)

IMPORTANT: Left and right spindle sheaves are hidden by belt shields. Failure to seat belt properly on sheaves may result in belt damage.

CAUTION: Avoid injury. Component is spring-assisted and under tension. Injury can occur if spring-assisted component is released suddenly.

4. Install 3/8 inch ratchet with extension into bottom of square hole (H) of sheave tension arm (I). Rotate arm counterclockwise and install belt (D) on left spindle sheave (J).

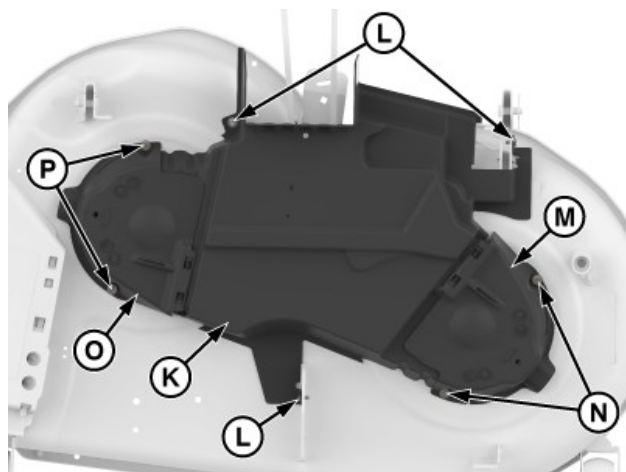

GX711164—UN—10APR26


Mower Deck Shown Removed from Machine for Better View

5. Install center deck shield (K) with three screws (L).
6. Install left spindle shield (M) with two screws (N).
7. Install right spindle shield (O) with two screws (P).
8. Install foot plate and secure with original hardware.

SDHTXN6,1775545311114-19-16APR26

Installing Mulch Blades

CAUTION: Avoid injury! Blades are sharp. Always wear gloves when handling blades or working near blades. Replace blades if defective. Never straighten or weld them.

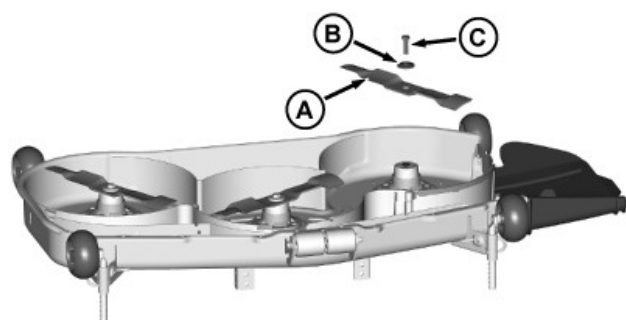

MXT015291—UN—19AUG15

1. Install blade (A) with cutting edge toward the ground.
2. Install large washer (B) and bolt (C).
3. Insert wood block between blade and mower to prevent the blade from turning when tightening bolt.
4. Tighten bolt.

Specification

Blade Bolt—Torque. 68 N·m (50 lb·ft)

5. To check blade-to-mulch baffle clearance, rotate

blades by hand. If interference occurs, check that hardware is tightened.


SB31882,00003E3-19-27MAY20

Checking for Bent Mower Blades

CAUTION: Avoid Injury! Blades are sharp. Always wear gloves when handling blades or working near blades.

Replace blades if defective. Never straighten or weld them.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Raise mower deck to highest position to access blades.

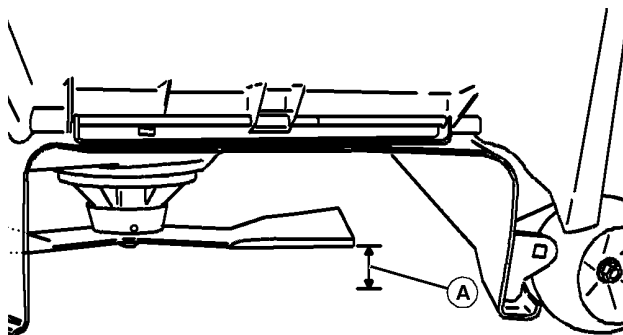

MXAL42867—UN—09APR13

Mower deck with side discharge used for illustration

3. Measure distance (A) between blade tip and flat ground surface.
4. Rotate blade 180° and measure distance between other blade tip and flat ground surface.
5. Install new blade if the difference between the two measurements is more than 3 mm (1/8 in).
6. Repeat for all blades.

MP47322,00F466C-19-12JAN23

Servicing Mower Blades


CAUTION: Rotating blades are dangerous.

Before adjusting or servicing mower:

- Disconnect spark plug wire(s) or battery negative (-) cable to prevent engine from starting accidentally.
- Always wear gloves when handling mower blades or working near blades.

Removing Mower Blades

1. Park machine safely. (See Parking Safely in the SAFETY section.)
2. Raise mower deck to gain access to mower blades. If necessary, remove mower deck.
3. Block mower blade with a piece of wood to prevent it from spinning.

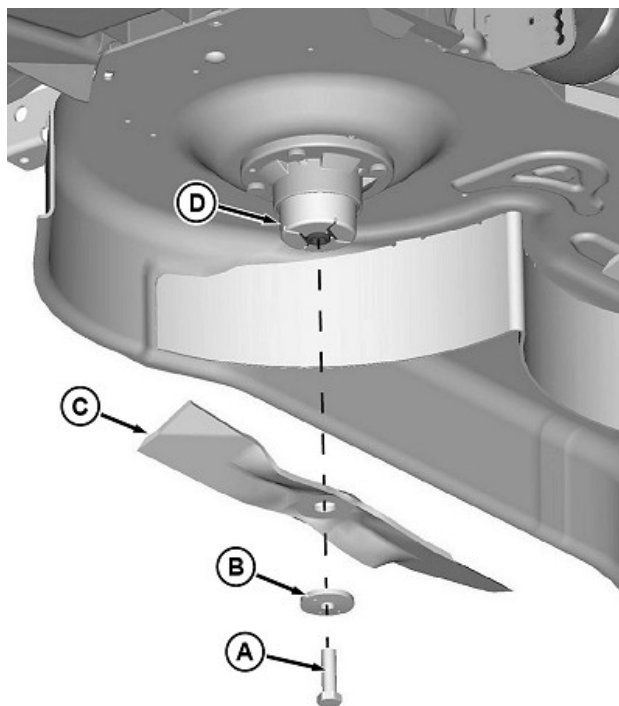

GXT001605—UN—13MAY15

4. Loosen and remove bolt (A), washer (B), and blade (C).
5. Inspect blades; sharpen, balance or replace blades as necessary.

Installing Mower Blades

1. Make sure deflector cup (D) is seated properly between mower spindle and blade.
2. Position mower blade (C) with cutting edge toward ground onto mower spindle.
3. Install washer (B), with cupped side towards blade, and bolt (A) to secure blade onto spindle shaft.
4. Block mower blade with a piece of wood to prevent spinning and tighten bolt to specification.

Specification

Mower Blade Bolt—Torque. 68 N·m (50 lb-ft)

TH84124,000022C-19-18JUN15

Service Electrical

Service the Battery Safely



MXAL42869—UN—09APR13

CAUTION: Avoid injury! The battery produces a flammable and explosive gas.

To prevent the battery from exploding:


- Do not smoke or have open flame near battery.
- Wear eye protection and gloves.
- Do not allow direct metal contact across battery posts.
- Remove negative cable first when disconnecting.
- Install negative cable last when connecting.

MP47322,00F466F-19-13JAN15

Removing and Installing the Battery

Removing

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Rotate operator seat forward.
3. Remove battery compartment cover.

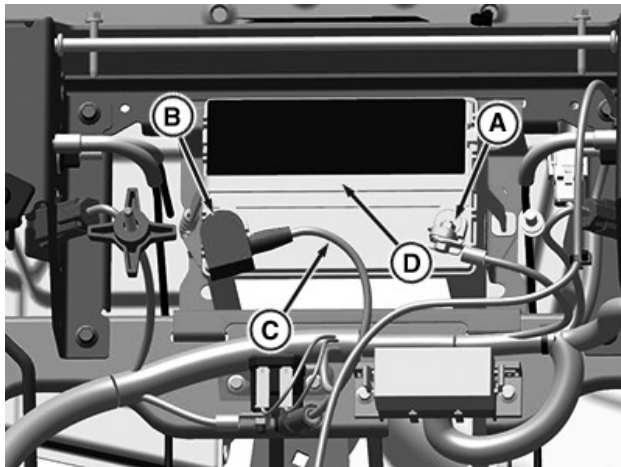

GX536017—UN—26APR22

4. Disconnect negative (-) battery cable (A).

5. Push red cover (B) away from positive (+) battery terminal and remove cable (C) from battery.
6. Remove strap (D).
7. Remove battery.

Installing

1. Place battery into the battery tray as shown.
2. Put battery strap.
3. Connect positive (+) cable to battery first, then negative (-) cable.
4. Apply general-purpose grease or silicone spray to terminals to help prevent corrosion.
5. Slide red cover over the positive battery terminal.
6. Install battery compartment cover.
7. Lower operator seat.

H9PQBYK,0000050-19-21APR22

Cleaning Battery and Terminals

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Disconnect and remove battery.
3. Wash battery with solution of four tablespoons of baking soda to one gallon of water. Be careful not to get the soda solution into the cells.
4. Rinse the battery with plain water and dry.
5. Clean terminals and battery cable ends with wire brush until bright.
6. Install battery.
7. Attach cables to battery terminals, beginning with the positive cable, using washers and nuts.
8. Apply general purpose grease or silicone spray to terminals to help prevent corrosion.

MG39705,00000D8-19-13JUN22

Use Booster Battery

CAUTION: Avoid injury! The battery produces a flammable and explosive gas.


To prevent the battery from exploding:

- Do not smoke or have open flame near battery.
 - Wear eye protection and gloves.
 - Do not jump-start or charge a frozen battery.
- Warm battery to:

Specification

Battery—Temperature. 16°C (60°F)

- Do not connect the negative (-) booster cable to the negative (-) terminal of the discharged battery. Connect at a good ground location away from the discharged battery.

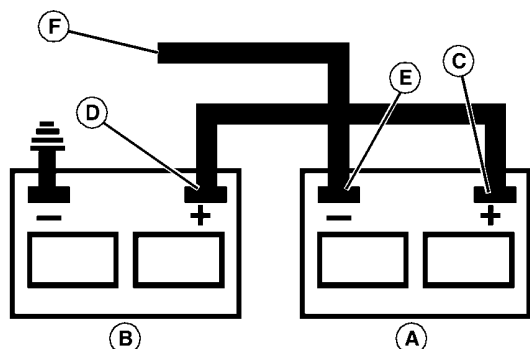

MXAL42872—UN—09APR13

A—Booster Battery
 B—Disabled Vehicle Battery
 C—Positive (+) Post
 D—Positive (+) Post
 E—Negative (-) Post
 F—Negative (-) Booster Cable End

- Connect positive (+) booster cable to booster battery (A) positive (+) post (C).
- Connect the other end of positive (+) booster cable to the disabled vehicle battery (B) positive (+) post (D).
- Connect negative (-) booster cable to booster battery negative (-) post (E).

IMPORTANT: Avoid damage! Electric charges from the booster battery damages machine components. Do not install negative booster cable to machine frame. Install only to the engine block.

Install negative booster cable away from moving parts in the engine compartment, such as belts and fan blades.

- Connect the other end (F) of negative (-) booster cable to a rear frame of the disabled machine engine block away from battery.
- Start the engine of the disabled machine and run machine for several minutes.
- Carefully disconnect the booster cables in the exact reverse order: negative cable first and then the positive cable.

MP47322,00F4672-19-14MAY26

Replacing Fuse

F1		K2
F2	V2←	
F3		K3
F4		

GX715295—UN—13MAY26

F1—Charging System, 20 Amp
 F2—Battery Power, 15 Amp
 F3—Switched Power, 7.5 Amp
 F4—Light, 7.5 Amp
 V2—Logic Diode
 K2—Interlock Relay
 K3—PTO Relay

- Park machine safely. (See Parking Safely in the Safety section.)
- Raise operator's seat.
- Remove battery compartment cover.
- Refer to the service label behind the operator's seat for fuse circuit identification and location.
- Remove the fuse and check metal strip in fuse window. Discard fuse if strip is broken.
- Push new, correct amp, fuse into correct socket.
- Lower operator's seat.

SDHTXN6,1778664020722-19-14MAY26

Service Miscellaneous

Gasoline Fuel for 4-Cycle Engines

Use unleaded gasoline with a minimum octane rating of 87 AKI (anti-knock index) or 90 RON (research octane number). Gasoline fuels specified to EN 228 or ASTM D4814 are recommended.

Fuel blends of unleaded gasoline with a maximum 10% ethanol or 15% MTBE (methyl tertiary-butyl ether) are also acceptable.

CAUTION: Reduce the risk of fire. Handle fuel carefully. **DO NOT** fill the fuel tank when the engine is running or hot. Stop engine and allow it to cool for several minutes before filling fuel tank. Fill fuel tank only to the bottom of the filler neck.

Refuel outdoors. **DO NOT** smoke while you fill the fuel tank or service the fuel system.

Store fuel in properly identified polyethylene containers.

When storing fuel, add John Deere Gasoline Conditioner and Stabilizer (or equivalent) at the specified concentration.

IMPORTANT: **DO NOT** use methanol or fuel blends that contain methanol.

Avoid spilling fuel. Gasoline can damage plastic and painted surfaces.

DO NOT mix oil with gasoline.

DX,FUEL2-19-15MAY13

Fill Fuel Tank

CAUTION: Avoid injury! Fuel vapors are explosive and flammable:

- Shut engine off before filling fuel tank.
- Allow engine to cool before refueling.
- Do not smoke while handling fuel.
- Keep fuel away from flames or sparks.
- Fill fuel tank outdoors or in ventilated area.
- Clean up spilled fuel immediately.
- Prevent static electric discharge by using a clean, approved, non metal container.

IMPORTANT: Avoid damage! Dirt and water in fuel causes engine damage:

- Clean dirt and debris from the fuel tank opening.
- Use clean, fresh, stabilized fuel.
- Fill the fuel tank at the end of operation each day to prevent condensation and freezing during cold weather.

- If using a funnel, make sure it is plastic and has no screen or filter.

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Allow engine to cool.
3. Remove any debris from area around fuel tank cap.
4. Remove fuel tank cap slowly to allow any pressure built up in tank to escape.
5. Fill fuel tank only to bottom of filler neck. Do not overfill.

NOTE: On some models, the fuel tank cap will click when it is tight.

6. Install fuel tank cap and turn cap until it is tight.

MP47322,00F4675-19-10AUG23


Lifting Machine

1. Park machine safely. See Parking Safely (Safety section).

CAUTION: Avoid injury. Machine can fall or slip from an unsafe lifting device or supports.


- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto jack stands or other stable supports and block wheels before servicing.

NOTE: Remove any material collection system attachments prior to lifting machine.

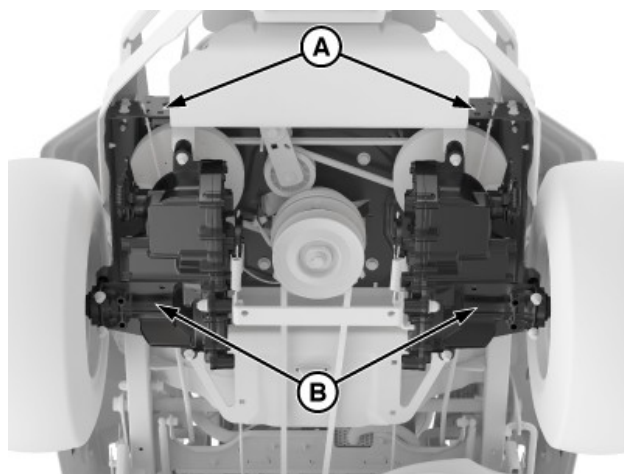

GX711165—UN—08APR26

2. Safely lift rear of machine frame points (A). Place jack stands or other stable supports under transaxle locations (B).

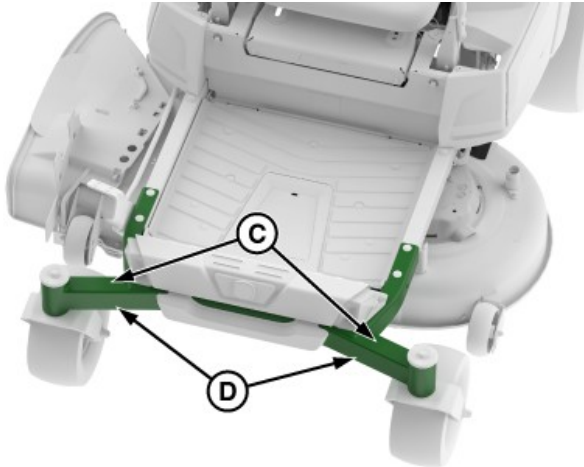

GX711166—UN—08APR26

3. Safely lift front of machine at machine frame points (C). Place jack stands or other stable supports under machine frame locations (D).
4. If lifting only front of machine, block rear wheels remaining on ground to avoid movement of machine.
5. To lower machine, lift front and/or rear of machine, and remove jackstands or supports. Lower machine.

SDHTXN6,1775545571472-19-07APR26

Checking Tire Pressure

CAUTION: Avoid injury! Explosive separation of tire and rim parts is possible when they are serviced incorrectly:

- Do not attempt to mount a tire without the proper equipment and experience to perform the job.
 - Make sure that all tires are inflated to the recommended pressure, especially when operating on slopes. Low pressure can cause machine to become unstable on slopes.
 - Do not weld or heat a wheel and tire assembly. Heat can cause an increase in air pressure resulting in an explosion. Welding can structurally weaken or deform the wheel.
 - Do not stand in front or over the tire assembly when inflating. Use a clip-on chuck and extension hose long enough to allow you to stand to one side.
1. Check tires for damage.
 2. Check tire pressure with an accurate low-pressure gauge.
 3. A lower pressure will improve traction and performance depending on turf conditions or if transport areas have steep inclines.
 4. Add or remove air to meet specified tire pressure.

(See Specifications section for recommended tire pressures.)

MP47322,00F4677-19-10JUN20

Removing and Installing Wheel Assembly

Removing


1. Park machine safely. (See Parking Safely in the Safety section.)

CAUTION: Avoid injury! The machine can fall or slip from an unsafe lifting device or supports.

- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto jack stands or other stable supports and block wheels before servicing.

IMPORTANT: Avoid damage! Place jackstands under frame, not under transmission or engine, when raising or supporting machine.

2. Raise machine with a safe lifting device and lower machine onto jackstands or other stable supports. Block wheels remaining on the ground to prevent machine movement.

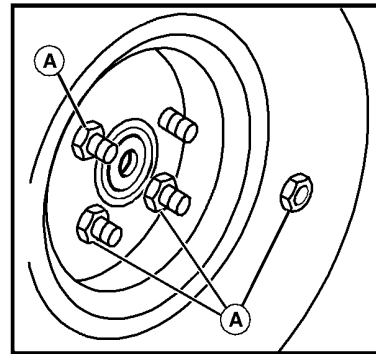

MXAL42875—UN—09APR13

3. Remove the wheel nuts (A).
4. Remove the wheel assembly.

CAUTION: Avoid injury! Explosive separation of tire and rim parts is possible when they are serviced incorrectly:

- Do not attempt to mount a tire without the proper equipment and experience to perform the job.

5. Take wheel assembly to an authorized service dealer for repairs.

Installing

1. Install wheel assembly with valve stem to the outside.

2. Tighten wheel nuts evenly in alternating sequence until snug.
3. Lower machine completely to the ground.
4. Tighten wheel nuts to specification.

Specification

Wheel Nuts—Torque. 102 N·m (75 lb.ft.)

GH8XT3T,00008E5-19-14MAR22

Removing and Installing Front Caster Wheels

Disassembly:


1. Park machine safely. (See Park Machine Safely in the Safety section.)

CAUTION: Avoid injury! The machine can fall or slip from an unsafe lifting device or supports.

- Use a safe lifting device rated for the load to be lifted.
- Lower machine onto jackstands or other stable supports and block wheels before servicing.

NOTE: Remove all attachments prior to lifting machine.


2. Jack up front of machine and place on safety stands.

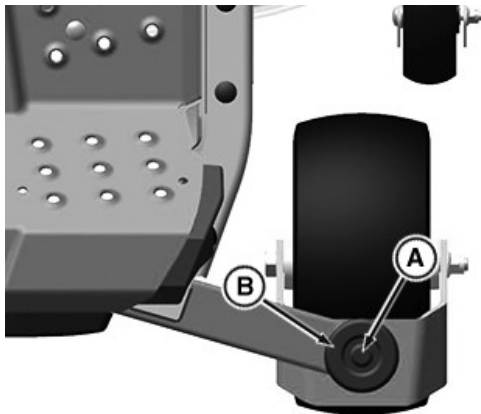

GX536029—UN—25APR22


3. Support caster assembly and remove flange bolt (A) and cap (B).
4. Remove caster from machine.
5. Inspect bearings at top and bottom of frame. Replace worn or damaged bearings.

NOTE: Inner race extends above outer race.

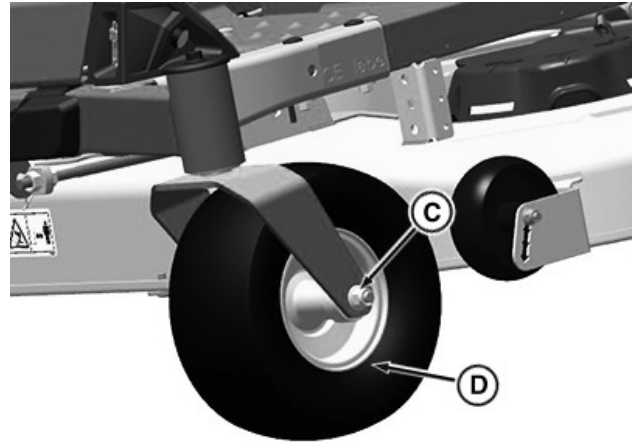


GX536030—UN—25APR22

6. Remove nut (C) and pull bolt out of caster.
7. Remove wheel assembly (D).

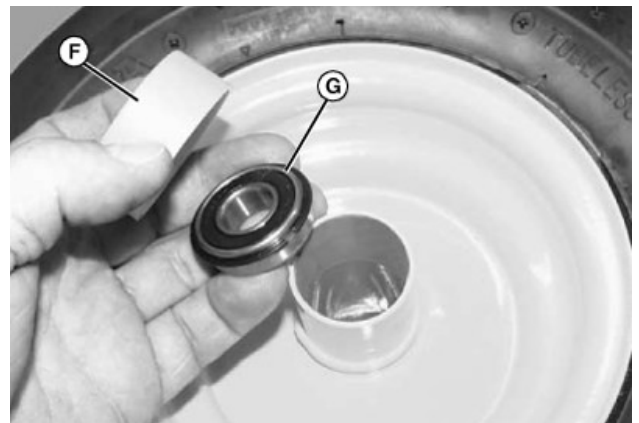

MXAL47140—UN—16APR13

8. Remove shield (F) and bearing (G). Inspect shields, wheel, and bearings for wear or damage. Replace worn or damaged parts.

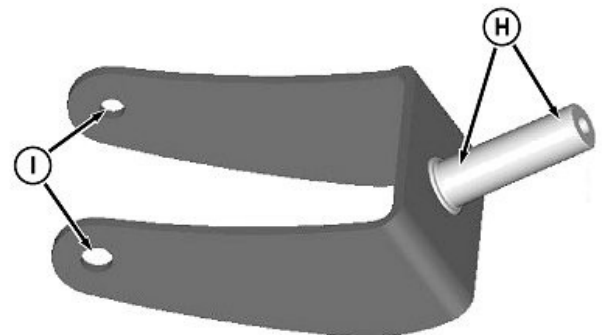

GXT002156—UN—02JUN15

9. Inspect bearing wear areas (H), and bolt holes (I) for wear or damage. Replace if necessary.

Assembly

- Apply grease to caster shaft and bolt.
- Assemble in the reverse order of disassembly.
- Tighten caster locknut and bolt to specification.

Specification

Caster Locknut—Torque. 47 N·m (35 lb·ft)

- Tighten flange bolt securing yoke to specification.

Specification

Flange Bolt—Torque. 47 N·m (35 lb·ft)

H9PQBYK,0000063-19-13JUN22

Cleaning and Repairing Metal Surfaces

Cleaning:

Follow automotive practices to care for your vehicle's painted metal surfaces. Use a high-quality automotive wax regularly to maintain the factory look of your vehicle's painted surfaces.

Repairing Minor Scratches (surface scratch):

1. Clean area to be repaired thoroughly.

IMPORTANT: Avoid damage! Do not use rubbing compound on painted surfaces.

2. Use automotive polishing compound to remove surface scratches.
3. Apply wax to entire surface.

Repairing Deep Scratches (bare metal or primer showing):

1. Clean area to be repaired with rubbing alcohol or mineral spirits.
2. Use paint stick with factory-matched colors available from your service provider to fill scratches. Follow directions included on paint stick for use and for drying.
3. Smooth out surface using an automotive polishing compound. Do not use power buffer.
4. Apply wax to surface.

MP47322,00F467A-19-16JUL25

Troubleshooting

Using Troubleshoot Chart

If you are experiencing a problem that is not listed in this chart, see your Technical Manual, dealer, or other service provider for service.

MP47322,00F467B-19-17OCT25

Engine

IF	CHECK
Poor Engine Performance	Dirt in fuel system or fuel is old. Replace fuel with fresh stabilized fuel. Obtain fuel from another supplier before suspecting machine problems. Suppliers blend fuels differently and changing suppliers will generally solve any performance problems. Fuel blended with alcohol or ether may contribute to performance problems by causing gum and varnish deposits, especially if fuel is stored for several weeks or more. Obtain fresh fuel.
Engine Will Not Start - No Crank	Park brake not locked. Motion control levers not in Start/Shutdown position. Mower is engaged. Defective brake, mower engagement, or key switch. Electrical problem - See Electrical Troubleshooting section.
Engine Cranks But Will Not Start	Spark plug wire is loose or disconnected. Improper fuel. Plugged fuel filter. Electrical problem - See Electrical Troubleshooting section.
Engine Is Hard To Start	Carburetor is not adjusted properly or dirty. Choke not fully closing. Plugged fuel filter. Faulty spark plug. Stale or improper fuel. Loose or corroded electrical connections. Engine oil viscosity.
Engine Runs Unevenly	Cooling fins plugged. Loose electrical connections. Choke or throttle cable sticking. Choke not fully open. Fuel line or fuel filter plugged. Stale or dirty fuel. Improper fuel. Air cleaner element plugged.
Engine Misses Under Load	Faulty spark plug. Stale or dirty fuel. Plugged fuel filter.
Engine Vapor Locks	Fuel tank vent plugged. Dirt in fuel filter. Cooling fins plugged. Loose hose connection at fuel filter or fuel pump.

IF	CHECK
Engine Overheats	Engine air intake screen plugged. Cooling fins plugged. Engine oil level low or too high. Engine operated too long at low idle speed.
Engine Will Not Idle	Spark plug not gapped correctly. Faulty spark plug. Operator raising off the seat.
Engine Knocks	Stale or low octane fuel. Engine overloaded. Low engine speed. Oil level low.
Engine Stops Or Misses When Operating On Hillsides	Fuel tank less than half full of fuel. Operator raising off the seat.
Engine Backfires	Faulty spark plug. Operator raising off the seat.
Engine Loses Power	Engine overheating. Too much oil in engine. Dirty air cleaner. Faulty spark plug. Travel speed is too fast for conditions. Improper fuel.
Excessive Fuel Consumption	Choke is not fully open.
Black Exhaust Smoke	Air filter is dirty or oil soaked.

GH8XT3T,00008C9-19-08JUL22

Electrical

IF	CHECK
Starter Does Not Work Or Will Not Turn Engine	Park brake not locked. Mower is engaged. Battery terminals are corroded. Battery not charged. Motion control levers not in Start/Shutdown position. Blown fuse. Defective key switch
Battery Will Not Charge	Dead cell in the battery. Blown charging fuse. Battery cables and terminals are dirty. Low engine speed or excessive idling.
Lights Do Not Work	Light plug disconnected. Loose or burned out bulb. Blown headlight fuse.

MP47322,00F467D-19-15MAR13

Machine

IF	CHECK
Machine Vibrates Too Much Or Rattles Excessively	Attachment drive belts worn or damaged. Mower blades not balanced. Traction drive belt damaged or worn. Dirt on drive sheaves.
Machine Will Not Move With Engine Running	Transmission hydraulic oil level low. Transmission belt broke. Bypass valve levers are engaged.
Front of machine squeaks while driving	Lubricate mower front draft rod at front and rear pivot points.

GH8XT3T,00009CA-19-05MAY22

Mower

IF	CHECK
Discharge Chute Plugged	Travel speed too fast. Grass too long. Grass too wet. Machine rpm not at mow position. Restricted air flow. Belt installed incorrectly. Adjust cutting height to remove only 1/3 of grass at a time.
Patches Of Grass Uncut	Travel speed too fast. Engine rpm not at mow position. Mower deck needs cleaning.
Belt Slipping	Debris in sheaves. Worn belt. Belt tension is incorrect.
Too Much Vibration	Debris on mower deck or in sheaves. Damaged drive belt. Damaged sheaves or sheaves out of alignment. Blades out of balance.
Blades Scalping Grass	Cutting too low. Mower wheels not adjusted correctly. Turning speed too fast. Ridges in terrain. Rough or uneven terrain. Low tire pressure.
Mower Loads Down Tractor	Machine rpm too low. Travel speed too fast. Debris wrapped around mower spindles. Adjust cutting height to remove only 1/3 of grass at a time.
Uneven Cut	Mower deck not leveled properly. Travel speed too fast. Blades dull. Mower wheels not adjusted correctly. Tire pressure unequal. Adjust cutting height to remove only 1/3 of grass at a time.
Excessive Clippings are	Conditions may be too dry or

IF	CHECK
Expelled from Front of Mower Deck	terrain too uneven to provide good seal between front of deck and grass. Visit http://JDParts.deere.com or contact John Deere dealer or other purchase provider to purchase dry condition kit.

TH84124,00001B2-19-17OCT25

MulchControl (If Equipped)

IF	Check
MulchControl™ gate will not open	Plugging of mower deck/baffles.
MulchControl™ gate will not close	Plugging of mower deck/baffles
MulchControl™ gate not holding setting (open or closed)	Check for handle seated firmly onto pin taper and properly aligned.
MulchControl™ causing blowout in closed position	Check that gate stop is installed (after removal of cut and throw - 42 inch Accel Deep™ only) Ensure that system is in closed position
MulchControl™ Material Dispersion Not Satisfactory	Clean debris buildup from underside of deck Check blades for sharpness and damage Ensure that correct blades are installed (MulchControl™ is designed to use mulch blades, not standard blades) Change blades Check discharge chute for damage Check procedures on Adjusting Mower Level Side-to-Side and Front-to-Rear. Adjust system for proper door position Mowing too fast for grass conditions

*MulchControl is a trademark of Deere & Company
Accel Deep is a trademark of Deere & Company*

SB31882,00003DC-19-10NOV22

Storage

Storing Safety

⚠ CAUTION: Avoid injury! Fuel vapors are explosive and flammable.

Engine exhaust fumes contain carbon monoxide and cause serious illness or death:

- Run the engine only long enough to move the machine to or from storage.
- If a machine is stored before allowing it to cool, machine fires and structure fires can occur. Fires can occur if debris is not removed from around the engine and muffler, or if stored near combustible materials.
- Do not store vehicle with fuel in the tank inside a building where fumes reach an open flame or spark.
- Allow the engine to cool before storing the machine in any enclosure.

MP47322,00F4680-19-06MAY15

Preparing Machine for Storage

1. Repair any worn or damaged parts. Replace parts if necessary. Tighten loose hardware.
2. To prevent rust, repair scratched or chipped metal surfaces.
3. Perform machine clean out, see Machine Cleanout section.
4. Clean under the rotary deck and remove grass and debris from inside chute and bagger, if applicable.
5. Wash the machine and apply wax to metal and plastic surfaces.
6. To dry belts and pulleys, run machine for five minutes.
7. To prevent rust, apply light coat of engine oil on pivot and wear points.
8. Lubricate grease points and check tire pressure.
9. Allow the machine to cool before storing.

MP47322,00F4681-19-14MAY26

Preparing Fuel and Engine For Storage

Fuel:

If you have been using "Stabilized Fuel," add stabilized fuel to tank until the tank is full.

NOTE: Filling the fuel tank reduces the amount of air in the fuel tank and helps reduce deterioration of fuel.

If you are not using "Stabilized Fuel":

1. Park machine safely in a well-ventilated area. (See Parking Safely in the Safety section.)

NOTE: Try to anticipate the last time the machine will be used for the season so very little fuel is left in the fuel tank.

2. Turn on engine and allow to run until it runs out of fuel.
3. For machines equipped with key switch, turn key to off position.

IMPORTANT: Avoid damage! Stale fuel can produce varnish and plug carburetor or injector components and affect engine performance.

- Add fuel conditioner or stabilizer to fresh fuel before filling tank.

4. Mix fresh fuel and fuel stabilizer in separate container. Follow stabilizer instructions for mixing.
5. Fill fuel tank with stabilized fuel.
6. Run engine for a few minutes to allow fuel mixture to circulate through carburetor on gas engine or fuel injectors on diesel engine.

Engine:

Engine storage procedure should be used when vehicle is not to be used for longer than 60 days.

1. Change engine oil and filter while engine is warm.
2. Service air filter if necessary.
3. Clean debris from engine air intake screen.
4. On gas engines:
 - Remove spark plugs. Put 30 mL (1 oz) of clean engine oil in cylinders.
 - Install spark plugs, but do not connect spark plug wires.
 - Crank the engine 5 or 6 times to allow oil to be distributed.
5. Clean the engine and engine compartment.
6. Remove battery.
7. Clean the battery and battery posts. Check the electrolyte level if your battery is not maintenance free.
8. Close fuel shutoff valve if your machine is equipped.
9. Store the battery in a cool, dry place where it will not freeze.

NOTE: The stored battery should be recharged every 90 days.

10. Charge the battery.

IMPORTANT: Avoid damage! Prolonged exposure to sunlight could damage surfaces. Store machine inside or use a cover if stored outside.

11. Store the vehicle in a dry, protected place. If vehicle is stored outside, put a waterproof cover over it.

OUMX068,000077B-19-05JUL17

Removing Machine From Storage

1. Check tire pressure.
2. Check engine oil level.
3. Check battery electrolyte level if your battery is not maintenance free. Charge battery if necessary.
4. Install battery.
5. On gas engines: check spark plug gap. Install and tighten plugs to specified torque.
6. Lubricate all grease points.
7. Open fuel shut-off valve if your machine is equipped.
8. Run the engine 5 minutes without the mower or any attachments running to allow oil to be distributed throughout engine.
9. Be sure all shields and guards or deflectors are in place.

MP47322,00F4683-19-17FEB23

Specifications

Engine

Z315E

Make	Briggs & Stratton
Engine Model	40EXi
Power Rating Information	http://www.briggsandstratton.com/
Bore	75.4 mm (2.97 in)
Stroke	73.4 mm (2.89 in)
Displacement	656 cm ³ (40.03 in ³)
Cylinders	Twin
Cycle	Four
Magneto Air Gap	0.20 - 0.30 mm (0.008 - 0.012 in)
Valve Clearance - Intake	0.10 - 0.15 mm (0.004 - 0.006 in)
Valve Clearance - Exhaust	0.10 - 0.15 mm (0.004 - 0.006 in)
Spark Plug Gap	0.75 mm (0.030 in)
Spark Plug Torque	20 N•m (180 lb•in)

Z320M

Make	Kawasaki
Engine Model	FR651V
Power Rating Information	http://www.kawasakienginesusa.com/
Bore	78 mm (3.07 in)
Stroke	76 mm (2.99 in)
Displacement	726 cm ³ (44.30 in ³)
Cylinders	Twin
Cycle	Four
Valve Clearance - Intake	0.075 - 0.125 mm (0.002 - 0.005 in)
Valve Clearance - Exhaust	0.075 - 0.125 mm (0.002 - 0.005 in)
Spark Plug Gap	0.75 mm (0.030 in)
Spark Plug Torque	20 N•m (180 lb•in)

Z320R

Make	Kawasaki
Engine Model	FR651V
Power Rating Information	http://www.kawasakienginesusa.com/
Bore	78 mm (3.07 in)
Stroke	76 mm (2.99 in)
Displacement	726 cm ³ (40.30 in ³)
Cylinders	Twin
Cycle	Four
Magneto Air Gap	0.20 - 0.30 mm (0.008 - 0.012 in)
Valve Clearance - Intake	0.075 - 0.125 mm (0.002 - 0.005 in)
Valve Clearance - Exhaust	0.075 - 0.125 mm (0.002 - 0.005 in)
Spark Plug Gap	0.75 mm (0.030 in)
Spark Plug Torque	20 N•m (180 lb•in)

GH8XT3T,00008C0-19-14JUL22

the emissions label and refer to the engine manufacturer's website listed below.

<http://www.briggsandstratton.com>

<https://power.kohler.com/en/engines>

<https://www.kawasaki-engines.eu/en/support/>

<http://www.honda-engines-eu.com/co2>

This CO₂ measurement results from testing over a fixed test cycle under laboratory conditions a(n) (parent) engine representative of the engine type (engine family) and shall not imply or express any guarantee of the performance of a particular engine.

MK71445,000007A-19-13MAY19

Drivetrain

Z315E

Transaxle Motors	Hydro-Gear EZT-C
Number of Speeds	Hydrostatic, Variable Speed

Z320M

Transaxle Motors	Hydro-Gear EZT-C
Number of Speeds	Hydrostatic, Variable Speed

Z320R

Transaxle Motors	Hydro-Gear EZT-C
Number of Speeds	Hydrostatic, Variable Speed

GH8XT3T,00008DD-19-14MAR22

Travel Speeds at Full Engine RPM

Z315E

Forward	0-11.26 km/h (0-6.5 mph)
Reverse	0-5.6 km/h (0-3.5 mph)

Z320M

Forward	0-11.26 km/h (0-6.5 mph)
Reverse	0-5.6 km/h (0-3.5 mph)

Z320R

Forward	0-11.26 km/h (0-6.5 mph)
Reverse	0-5.6 km/h (0-3.5 mph)

H9PQBYK,000004B-19-14JUL22

Carbon Dioxide Emissions (CO₂)

To identify the carbon dioxide (CO₂) output, locate the engine emissions label. Find the appropriate family on

Specifications

Electrical System

Battery Type 12 Volt
Cold Cranking Capacity 300 Amps

TH84124,0000221-19-15JUN15

Fuel System

Fuel Types (Recommended):
. Regular Grade 87 Octane Unleaded Fuel
. Ethanol Blended Fuel (Up to 10%)
. MTBE Reformulated Fuel (Up to 15%)
Fuel Filter Replaceable - paper element
Fuel Pump Pulse
Fuel Delivery Carburetor

GH8XT3T,00008E6-19-14MAR22

Tires

Front. 11x6-5
Rear 18x8.5-8 (Turf)
Inflation - Front 103 kPa (15 psi)
Inflation - Rear. 69 kPa (10 psi)

gh8xt3t,1657776569016-19-14JUL22

Capacities

Crankcase with oil filter (Z320M, Z320R) 2.1 L (2.2 qt)
Crankcase with oil filter (Z315E) 1.9 L (2.0 qt)
Fuel Tank 11.36 L (3.0 gal)

Towing Capacity (All Models) 113.39 kg (250 lb)
Maximum Tongue Load 45.4 kg (100 lb)

gh8xt3t,1657776771759-19-21AUG23

Dimensions

Z315E
Height. 1056 mm (41.57 in)

Width 1280 mm (50.39 in)
Length 1915 mm (75.39 in)
Weight with Mower and Full Fuel 254 kg (559 lb)

Z320M

Height. 1100 mm (43.30 in)
Width 1280 mm (50.39 in)
Length/hitch. 1975 mm (75.39 in)
Weight with Mower and Full Fuel 257 kg (566 lb)

Z320R

Height. 1100 mm (43.30 in)
Width 1280 mm (50.39 in)
Length/hitch. 1975 mm (75.39 in)
Weight with Mower and Full Fuel 262 kg (577 lb)

GH8XT3T,00008CF-19-07JUL22

Recommended Lubricants

Engine Oil TURF-GARD® OR PLUS-4®
Grease
. GREASE-GARD™ Premium Plus
. John Deere Multi-Purpose HD Lithium Complex Grease

(Specifications and design subject to change without notice.)

TH84124,000016C-19-03MAR15

Mower Decks

42A in Mower
Cutting Width. 1.07 m (42 in)
Blades-Rotary 2
Blade Bolt Torque 68 N•m (50 lb-ft)
Cutting Height (Approximately) 32- 114 mm (1.25 - 4.5 in)

H9PQBYK,000004C-19-14APR22

High Idle Engine Speed

Z315E without mower deck 3000 ± 100 rpm
Z320M without mower deck 3000 ± 100 rpm
Z320R without mower deck 3000 ± 100 rpm

H9PQBYK,000004D-19-14APR22

Speed of Rotation of Cutting Device

42A 107 cm mower 2728 r/min at 3000 r/min engine speed

gh8xt3t,1657778197835-19-14JUL22

Sound Measurements

Averaged Sound Level at Work Station According to EN ISO 5395-3		
Z315E	Mower off	90 dB(A) at 3000 r/min engine speed
Z315E	With mower on, side discharge	89.9 dB(A) at 3000 r/min engine speed
Z315E	With mower on, material collection system	91.3 dB(A) at 3000 r/min engine speed
Z315E	With mower on, mulch	90.5 dB(A) at 3000 r/min engine speed
Z320M	Mower off	88.6 dB(A) at 3000 r/min engine speed
Z320M	With mower on, side discharge	89.5 dB(A) at 3000 r/min engine speed
Z320M	With mower on, material collection system	90.9 dB(A) at 3000 r/min engine speed
Z320M	With mower on, mulch	91.3 dB(A) at 3000 r/min engine speed
Z320R	Mower off	88.6 dB(A) at 3000 r/min engine speed
Z320R	With mower on, side discharge	89.5 dB(A) at 3000 r/min engine speed
Z320R	With mower on, material collection system	90.9 dB(A) at 3000 r/min engine speed
Z320R	With mower on, mulch	91.3 dB(A) at 3000 r/min engine speed

gh8xt3t,1658314907216-19-20JUL22

Vibration Measurements

Hand-Arm Measured Per EN ISO 5395-1

Hand-Arm Measured Per EN ISO 5395-1		Nominal	K Uncertainty
Z315E	Mower deck off	1.9 m/s ²	1.0 m/s ²
Z315E	With 42A 107 cm mower deck	2.4 m/s ²	1.2 m/s ²
Z315E	With 42A 107 cm mower deck and material collection system	2.6 m/s ²	1.3 m/s ²
Z315E	With 42A 107 cm mower deck and mulch control	2.1 m/s ²	1.1 m/s ²
Z320M	Mower deck off	1.2 m/s ²	0.6 m/s ²
Z320M	With 42A 107 cm mower deck	1.8 m/s ²	0.9 m/s ²
Z320M	With 42A 107 cm mower deck and material collection system	2.1 m/s ²	1.1 m/s ²
Z320M	With 42A 107 cm mower deck and mulch control	1.8 m/s ²	0.9 m/s ²
Z320R	Mower deck off	1.2 m/s ²	0.6 m/s ²
Z320R	With 42A 107 cm mower deck	1.8 m/s ²	0.9 m/s ²
Z320R	With 42A 107 cm mower deck and material collection system	2.1 m/s ²	1.1 m/s ²
Z320R	With 42A 107 cm mower deck and mulch control	1.8 m/s ²	0.9 m/s ²

Whole Body Measured Per EN ISO 5395-1

Whole Body Measured Per EN ISO 5395-1		Nominal	K Uncertainty
Z315E	Mower deck off	0.8 m/s ²	0.4 m/s ²
Z315E	With 42A 107 cm mower deck	0.8 m/s ²	0.4 m/s ²
Z315E	With 42A 107 cm mower deck and material collection system	0.7 m/s ²	0.4 m/s ²
Z315E	With 42A 107 cm mower deck and mulch control	0.7 m/s ²	0.4 m/s ²
Z320M	Mower deck off	1.0 m/s ²	0.5 m/s ²
Z320M	With 42A 107 cm mower deck	0.9 m/s ²	0.5 m/s ²
Z320M	With 42A 107 cm mower deck and material collection system	0.8 m/s ²	0.4 m/s ²
Z320M	With 42A 107 cm mower deck and mulch control	0.8 m/s ²	0.4 m/s ²
Z320R	Mower deck off	1.0 m/s ²	0.5 m/s ²
Z320R	With 42A 107 cm mower deck	0.9 m/s ²	0.5 m/s ²
Z320R	With 42A 107 cm mower deck and material collection system	0.8 m/s ²	0.4 m/s ²
Z320R	With 42A 107 cm mower deck and mulch control	0.8 m/s ²	0.4 m/s ²

gh8xt3t,1658291996144-19-20JUL22

John Deere Quality Statement

John Deere Quality

John Deere equipment is more than just a purchase, it's an investment in quality. That quality goes beyond our equipment to your John Deere dealer's parts and service support. This support is needed to keep you a satisfied customer.

That's why John Deere has initiated a process to handle your questions or problems, should they arise. The following three steps will help guide you through the process.

Step 1

Refer to your operator's manual

A. It has many illustrations and detailed information on the safe and proper operation of your equipment.

B. It gives troubleshooting procedures, and specification information.

C. It gives ordering information for parts catalogs, service and technical manuals.

D. If your questions are not answered in the operator's manual, then go to Step 2.

Step 2

Contact your dealer

A. Your John Deere dealer has the responsibility, authority, and ability to answer questions, resolve problems, and fulfill your parts and service needs.

B. First, discuss your questions or problems with your dealer's trained parts and service staff.

C. If the parts and service people are unable to resolve your problem, see the dealership manager or owner.

D. If your questions or problems are not resolved by the dealer, then go to Step 3.

Step 3

Contact John Deere

A. Your John Deere dealer is the most efficient source in addressing any concern, but if you are not able to resolve your problem after checking your operator's manual and contacting your dealer, contact John Deere for assistance.

B. For prompt, effective service, please have the following ready before you call:

- The name of the dealer with whom you've been working.
- Your equipment model number.
- Number of hours on machine (if applicable).
- Your serial number which you recorded on the inside front cover of this manual.
- If the problem is with an attachment, your attachment identification number.

C. Then call 1-800-537-8233 (United States and Canada) and our advisor will work with your dealer to investigate your concern. If you are outside the United States and Canada, visit the following website:

<https://www.deere.com/en/global-country-selector/>

Select your country and then click on the Contact Us link at the bottom of the page.

SP66632,00043A7-19-04AUG25

Service Record

Record Service Dates

Oil Change	Oil Filter Change (If Equipped)	Lubricate Machine	Air Cleaner Element Check/Clean	Fuel Filter Change

OUO1082,00066CA-19-15MAY17

Declaration of Conformity

Declaration(s) of Conformity

The following Declaration(s) of Conformity documents are included in this manual to comply with regulations in certain countries. These are only applicable when your machine is fitted with a CE/UKCA marking. Contact your dealer with questions.

at46167,1772813015359-19-06MAR26

EU Declaration of Conformity

Deere & Company
One John Deere Place
Moline, Illinois, 61265, USA

The undersigned hereby declares that:

Machine Type: Zero Turn Mower

Model: Z315E, Z320M, Z320R

Serial Number: See Product Identification Page

Fulfills all relevant provisions and essential requirements of the following directives/regulations:

DIRECTIVE/REGULATION	NUMBER	CERTIFICATION METHOD
Machinery Directive (until 19 January 2027)	2006/42/EC	Self-Certification
Machinery Regulation (from 20 January 2027)	(EU) 2023/1230	Self-Certification (Annex VI Module A)
Electromagnetic Compatibility Directive	2014/30/EU	Self-Certification
DIRECTIVE/REGULATION	NUMBER	CERTIFICATION METHOD
Machinery Directive (until 19 January 2027)	2006/42/EC	Self-Certification
Machinery Regulation (from 20 January 2027)	(EU) 2023/1230	Self-Certification (Annex VI Module A)
Electromagnetic Compatibility Directive	2014/30/EU	Self-Certification
Noise Directive	2000/14/EC (Annex VI, Procedure 2)	Third-Party Certification (Annex VI)
		NOTIFIED BODY
Measured Sound Power Level		Intertek Deutschland GmbH – NB0905 Stangenstraße 1 70771 Leinfelden-Echterdingen, Germany
Z315E with 42A 107 cm Mower Deck.....99 dB(A)		
Z315E with 42A 107 cm Material Collection System.....100 dB(A)		
Z315E with Mulch Control.....100 dB(A)		
Z320M with 42A 107 cm Mower Deck.....99 dB(A)		
Z320M with 42A 107 cm Material Collection System.....100 dB(A)		
Z320M with Mulch Control.....99 dB(A)		
Z320R with 42A 107 cm Mower Deck.....99 dB(A)		
Z320R with 42A 107 cm Material Collection System.....100 dB(A)		
Z320R with Mulch Control.....99 dB(A)		
Guaranteed Sound Power Level		
Z315E with 42A 107 cm Mower Deck.....100 dB(A)		
Z315E with 42A 107 cm Material Collection System.....100 dB(A)		
Z315E with Mulch Control.....100 dB(A)		
Z320M with 42A 107 cm Mower Deck.....100 dB(A)		
Z320M with 42A 107 cm Material Collection System.....100 dB(A)		
Z320M with Mulch Control.....100 dB(A)		
Z320R with 42A 107 cm Mower Deck.....100 dB(A)		
Z320R with 42A 107 cm Material Collection System.....100 dB(A)		
Z320R with Mulch Control.....100 dB(A)		

John Deere Walldorf GmbH & Co. KG
Customer Support
John Deere Strasse 1
D-69190 Walldorf
EUConformity@JohnDeere.com

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Place of Declaration: 300N Vine St. Horicon, WI, USA

Date of Declaration: 16 April 2026

Manufacturing Unit: John Deere Power Products



DXCE01—UN—28APR09

A handwritten signature in black ink that reads "Scott Farlow". The signature is written in a cursive, flowing style.

APY46799—UN—26MAY21

Name: Scott Farlow

Title: Product Engineering Manager, T&CU

al64819,1777400003729-19-29APR26

Declaration of Conformity

UK Declaration of Conformity

Deere & Company
One John Deere Place
Moline, Illinois, 61265, USA

The undersigned hereby declares that

Machine Type: Zero Turn Mower

Model: Z315E/Z320M/Z320R

Serial Numbers: See Product Identification Page

Fulfill(s) all relevant provisions and essential requirements of the following directives/regulations:

DIRECTIVE	NUMBER	CERTIFICATION METHOD
The Supply of Machinery (Safety) Regulations 2008	S.I. 2008/1597	Self-Certification
Electromagnetic Compatibility Regulations 2016	S.I. 2016/1091	Self-Certification
The Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001	S.I. 2001/1701 (Schedule 9)	Third-Party Certification
		APPROVED BODY
Measured Sound Power Level		Intertek Testing and Certification Limited Approved Body Number 0395 1-9 Brook Street Brentwood Essex CM14 5NQ
Z315E with 42A 107 cm Mower Deck.....99 dB(A)		
Z315E with 42A 107 cm Material Collection System.....100 dB(A)		
Z315E with Mulch Control.....100 dB(A)		
Z320M with 42A 107 cm Mower Deck.....99 dB(A)		
Z320M with 42A 107 cm Material Collection System.....100 dB(A)		
Z320M with Mulch Control.....99 dB(A)		
Z320R with 42A 107 cm Mower Deck.....99 dB(A)		
Z320R with 42A 107 cm Material Collection System.....100 dB(A)		
Z320R with Mulch Control.....99 dB(A)		
Guaranteed Sound Power Level		
Z315E with 42A 107 cm Mower Deck.....100 dB(A)		
Z315E with 42A 107 cm Material Collection System.....100 dB(A)		
Z315E with Mulch Control.....100 dB(A)		
Z320M with 42A 107 cm Mower Deck.....100 dB(A)		
Z320M with 42A 107 cm Material Collection System.....100 dB(A)		
Z320M with Mulch Control.....100 dB(A)		
Z320R with 42A 107 cm Mower Deck.....100 dB(A)		
Z320R with 42A 107 cm Material Collection System.....100 dB(A)		
Z320R with Mulch Control.....100 dB(A)		

Name and address of the person authorized to compile the technical construction file:

John Deere Ltd
Harby Road
Langar
Nottinghamshire
NG13 9HT
United Kingdom
EUConformity@JohnDeere.com

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Place of Declaration: 300N Vine St. Horicon, WI USA
Date of Declaration: 16 April 2026
Manufacturing Unit: John Deere Power Products
Ag & Turf Products Importer: John Deere Ltd- Harby Road, Langar, Nottinghamshire, NG13 9HT

Declaration of Conformity

Forestry Products Importer: John Deere Forestry Ltd- Carlisle Airport Industrial Estate, Carlisle, Cumbria, CA6 4NW



TC101783—UN—21FEB21

A handwritten signature in black ink that reads 'Scott Farlow'.

APY46799—UN—26MAY21

Name: Scott Farlow


Title: Product Engineering Manager, T&CU

al64819,1777473661518-19-29APR26

Slope Gauge

Slope Gauge Template

Hold up or copy this page and follow the directions below to use the Slope Gauge Template.

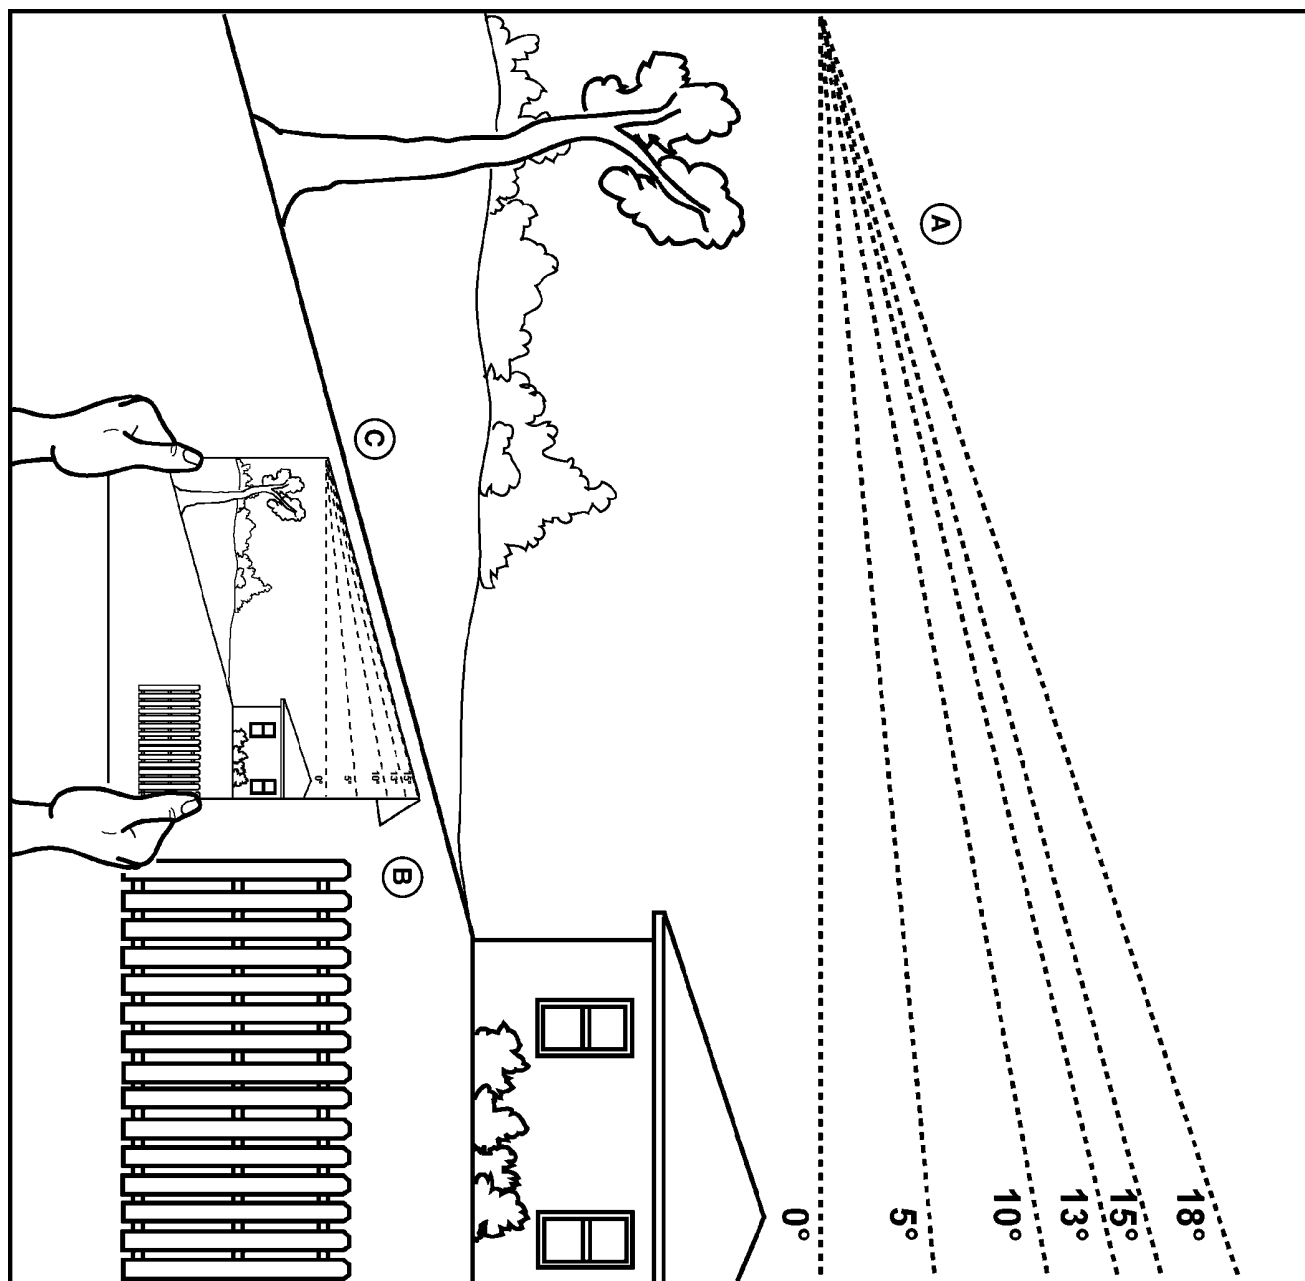

MXT013189—UN—22APR15

Use this slope gauge to determine if a slope is too steep for safe operation. Do not operate your machine on a slope greater than what is recommended in your operator's manual. See Operating on Slopes in the Safety section.

- Fold along the appropriate line (A) to match the recommended slope.
- Align this edge (B) with a vertical surface, a tree, building, fence pole, etc.
- Compare slope (C) with folded edge.

OUMX068,0000513-19-05JUL17

Index

A		J	
Air Cleaner Element		John Deere Quality	90-1
Checking and Cleaning	45-5		
Air Cleaner Elements (Twin Cylinder), Checking and			
Cleaning	45-4	L	
		Labels, safety without text	05-2
B		Levers, Using the Motion Control	30-7
Battery and Terminals, Cleaning	60-1	Lifting Machine	65-1
Battery, Charge and Connect at Assembly	20-1		
Battery, Removing and Installing	60-1	M	
Battery, Service Safely	60-1	Machine Troubleshooting	70-2
Battery, Using Booster	60-1	Machine, Mounting and Dismounting	30-1
Belt, Replacing Mower Drive (42A)	55-4	Material Collection System, Unplugging	30-11
Blades, Checking Mower	55-7	Metal Surfaces, Repairing and Cleaning	65-4
Blades, Servicing Mower	55-7	Motion Control Levers, Adjusting	30-1
		Move Machine by Hand	30-10
C		Mower Deck Identification	55-1
Carbon Dioxide Emissions	45-1, 80-1	Mower Deck Spindles, Lubricating	40-1
Carburetor, Adjusting	45-7	Mower Deck, Cleaning	30-11
		Mower Troubleshooting	70-2
E		Mower, Adjust Level	30-2
Electrical Troubleshooting	70-1	Mower, Adjusting Cutting Height	30-2
Emissions		Mower, Engaging	30-10
Required language		Mower, Installing (42A)	55-2
EPA	2	Mowing tips	30-13
Emissions Performance		Mowing Tips	30-13
Tampering	3	Mulch blades	
Engine		Installing, 48 in. Accel Deep™ deck	55-6
Oil	45-1	MulchControl Troubleshooting	70-2
Engine Fins, Cleaning	45-3		
Engine Shroud, Cleaning	45-3	N	
Engine Troubleshooting	70-1	Neutral Creep, Checking and Adjusting	50-1
F		O	
Filter, Changing Engine Oil	45-2	Oil	
Filter, Replacing Fuel	45-7	Engine	
Foot Plate, Removing and Installing Mower Deck	55-1	Gasoline	45-1
Four-cycle Engine, gasoline fuel	65-1	Oil Level, Checking Engine	45-1
Fuel Storage	75-1	Operating Checklist, Daily	30-1
Fuel Tank, Filling	65-1	Operator's Station Controls	25-1
Fuse, Replacing	60-2	Order Service Parts Online	3
G		P	
Gasoline fuel, four-cycle engine	65-1	Park Brake, Test	30-5
General Cleaning Guidelines	15-1	Park Brake, Using	30-6
Grease	40-1	Parts	3
		Plastic And Painted Surfaces, Avoid Damage To	30-1
H			
Hour Meter, Using	30-7	R	
		Record service dates	SR-1
I			
Identification Numbers, Record	00-1	S	
		Safety	
		Label	
		Location	05-1

Safety Systems, Testing	30-4
Seat, Adjusting	30-1
Service Intervals	35-1
Service Literature	3
Slopes, operating on	
Terrain hazards, operating near	10-2
Spark Plug, Checking	45-6
Special Messages	3
Specifications	
Capacities	80-2
Dimensions	80-2
Drivetrain	80-1
Electrical System	80-2
Engine	80-1
High Idle Engine Speed	80-2
Mower Decks	80-2
Recommended Lubricants.....	80-2
Sound Measurements.....	80-3
Tires	80-2
Start the machine.....	30-9
Stopping the machine	30-10
Storage, Preparing Machine for.....	75-1
Storage, Removing Machine from	75-2
Storing Safety	75-1
Switch, Testing Mower Engagement (PTO)	30-5
Switch, Testing Park Brake	30-5
Switch, Testing Seat.....	30-5
Switch, Using the Mower Engagement	30-7

T

Template, slope gauge	SG-1
Thank You for Purchasing a John Deere Product ...	2
Tire Pressure, Checking	65-2
Tracking, Adjusting	50-2
Transaxle Drive Belt, Checking and Replacing ..	50-3
Transaxle, Cleaning Cooling Fans.....	50-2
Transmission, Checking (See your John Deere dealer)	
	50-1
Transport Machine on Trailer.....	30-12
Transporting Material Collection System.....	30-13
Troubleshooting chart	70-1

U

Unplugging Mower.....	30-10
Using Key Switch	30-6

V

Vibration	
Measurements	80-3

W

Wheel Assembly, Removing and Installing	65-2
Wheels, Adjusting Mower.....	30-4
Wheels, Removing and Installing Front Caster ..	65-3