

**FH381V
FH430V**

4-Stroke Air-Cooled V-Twin Gasoline Engine

OWNER'S MANUAL

Kawasaki

SAFETY AWARENESS

Whenever you see the symbols shown below, heed their instructions! Always follow safe operating and maintenance practices.



DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

NOTE

○ *NOTE* indicates information that may help or guide you in the operation or service of the vehicle.

READ THIS FIRST

For your safety, read this Owner's Manual and understand it thoroughly before operating this ENGINE.

DANGER

Exhaust gas contains carbon monoxide, a colorless, odorless poisonous gas. Inhaling carbon monoxide can cause serious brain injury or death. **DO NOT** run the engine in enclosed areas. Operate only in a well-ventilated area. Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. When refueling, servicing fuel system, draining gasoline and/or adjusting the carburetor: Stop engine and allow it to cool before refueling. **DO NOT** smoke. Make sure the area is well-ventilated and free from any source of flame or sparks, including the pilot light of any appliance. **DO NOT** fill the tank so the fuel level rises into the filler neck or level surface of level gauge. If the tank is overfilled, heat may cause the fuel to expand and overflow through the vents in the tank cap. Wipe off any spilled gasoline immediately. Engines can become extremely hot during normal operation. To prevent fire hazard: Keep the engine at least 1 m (3.3 ft) away from buildings, obstructions and other flammable objects. **DO NOT** place flammable objects close to the engine. **DO NOT** expose combustible materials to the engine exhaust. **DO NOT** use the engine on any forest covered, brush covered or grass covered unimproved land unless spark arrester is installed on the muffler. To avoid getting an electric shock, **DO NOT** touch spark plugs, plug caps or spark plug leads during engine running. To avoid a serious burn, **DO NOT** touch a hot engine or muffler. The engine becomes hot during operation. Before you service or remove parts, stop engine and allow the engine to cool. **DO NOT** place hands or feet near moving or rotating parts. Place a protective cover over pulley, V belt or coupling. **DO NOT** run engine at excessive speeds. This may result in injury. Always remove the spark plug caps from spark plugs when servicing the engine to prevent accidental starting.

Read warning labels which are on the engine and understand them. If any label is missing, damaged, or worn get a replacement from an authorized Kawasaki engine dealer and install it in the correct position.

EMISSION CONTROL INFORMATION

Fuel Information

THIS ENGINE IS CERTIFIED TO OPERATE ON UNLEADED REGULAR GRADE GASOLINE ONLY. A minimum of 87 octane of the antiknock index is recommended. The antiknock index is posted on service station pumps in the U.S.A.

Emission Control Information

To protect the environment in which we all live, Kawasaki has incorporated an exhaust emission control system in compliance with applicable regulations of the United States Environmental Protection Agency. Also, depending on when your engine was produced, it may have an assigned emissions durability period.

*See below for the engine emissions durability period that may apply to your engine.

Exhaust Emission Control System

The exhaust emission control system applied to this engine consists of a carburetor and an ignition system having optimum ignition timing characteristics. The carburetor has been calibrated to provide specific air/fuel mixture characteristics and optimum fuel economy with a suitable air cleaner and exhaust system.

A sealed-type crankcase emission control system is also used to eliminate blow-by gasses. The blow-by gasses are led to a breather chamber through the crankcase and from there to the air cleaner.

Engine Emissions Compliance Period

Engines Greater Than or Equal To 225 cc

Durability Period – 1,000 hours (Category A)

***If your engine has an assigned emissions durability period it will be located on the certification label attached to the engine (IMPORTANT ENGINE INFORMATION).**

High Altitude Performance Adjustment Information

To improve the EMISSIONS CONTROL PERFORMANCE of engines operated above 1,000 meters (3,300 feet) , Kawasaki requires the following Environmental Protection Agency (EPA) approved modifications. High altitude adjustment requires replacement of carburetor main jets. Installation of these optional parts may be performed by an authorized Kawasaki engine dealer or equally qualified service facility, following repair recommendations specified in the appropriate Kawasaki Service document or parts catalog.

Operating the engine with the wrong engine configuration at a given altitude may increase its emissions and decrease fuel efficiency and performance.

NOTE

○ *When properly performed, these specified modifications only are not considered to be emissions system "tampering" and engine performance is generally unchanged as a result.*

Maintenance and Warranty

Proper maintenance is necessary to ensure that your engine will continue to have low emission levels. This Owner's Manual contains those maintenance recommendations for your engine. Those items identified by the Periodic Maintenance Chart are necessary to ensure compliance with the applicable standards.

As the owner of the engine, you have the responsibility to make sure that the recommended maintenance is carried out according to the instructions in this Owner's Manual at your own expense.

The Kawasaki Limited Emission Control System Warranty requires that you return your engine to an authorized Kawasaki engine dealer for remedy under warranty. Please read the warranty carefully, and keep it valid by complying with the owner's obligations it contains.

Tampering with Emission Control System Prohibited

Federal law prohibits the following acts or the causing thereof: (1) the removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new engine for the purposes of emission control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the engine after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering, do not tamper with the original emission related parts below:

- Carburetor or DFI system, and their internal parts
- Spark Plug

- Magneto ignition system
- Fuel filter element
- Air cleaner element
- Crankcase
- Cylinder head
- Breather chamber and internal parts
- Intake pipe and tube

FOREWORD

This Owner's Manual provided to aid you in the safe and reliable operation of your Engine. READ AND UNDERSTAND IT THOROUGHLY BEFORE OPERATING YOUR ENGINE.

READ THE OPERATING INSTRUCTIONS OF THE EQUIPMENT THIS ENGINE POWERS.

To ensure a long, trouble-free life for your Engine, give it proper care and maintenance in accordance with this Owner's Manual.

Please note that the photographs and illustrations shown in this manual are made based on Model FH430V as a typical example among other similar models.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Kawasaki Heavy Industries, Ltd., Motorcycle & Engine Company. Although every possible care has been taken to make this manual as complete and accurate as possible, Kawasaki cannot guarantee against errors and omissions. Due to improvements in design and performance during production, procedures and specifications are subject to change without prior notice. Illustrations are provided for general reference purposes, and may differ from actual product aspects and components.


TABLE OF CONTENTS

GENERAL INFORMATION	8	Choke Adjustment Associated Choke Type	23
Label Location	8	Separate Choke Type.....	25
Parts Location	10	Throttle Cable Installation, Adjustment.....	25
Tune-up Specifications	12	Choke Cable Installation, Adjustment	25
Engine Oil Capacity	13	Engine Speed Adjustment.....	27
FUEL AND OIL RECOMMENDATIONS	14	MAINTENANCE	28
Fuel	14	Periodic Maintenance Chart	28
Engine Oil	15	Oil Level Check	31
PREPARATION	16	Oil Change	31
Fuel	16	Oil Filter Change	32
Engine Oil	16	Air Cleaner Service	33
STARTING	18	Foam Element	33
Start Engine.....	18	Paper Element	34
Warming Up.....	20	Fuel Filter and Fuel Pump Service	35
OPERATING	21	Spark Plug Service.....	35
Engine Inclination	21	Cooling System Cleaning	36
STOPPING	22	STORAGE	38
Stopping the Engine	22	Engine Storage Procedure	38
Ordinary Stop	22	TROUBLESHOOTING GUIDE	39
Emergency Stop.....	22	ENVIRONMENTAL PROTECTION	41
ADJUSTMENT	23	SPECIFICATIONS	42
Associated Choke Type.....	23	WIRING DIAGRAM	43
Throttle Cable Installation, Adjustment.....	23		


GENERAL INFORMATION

Label Location

[Recoil Starter Model]

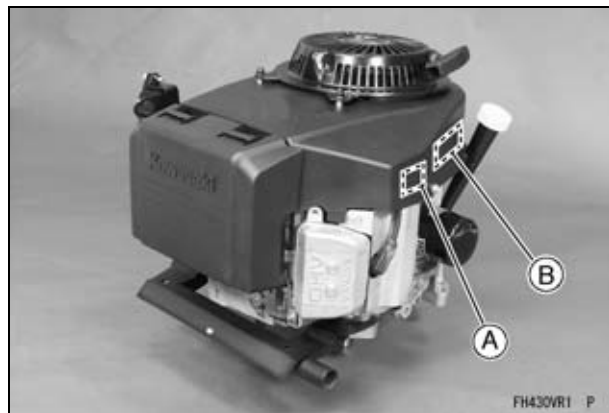


- A. Warning
- B. Engine Maintenance

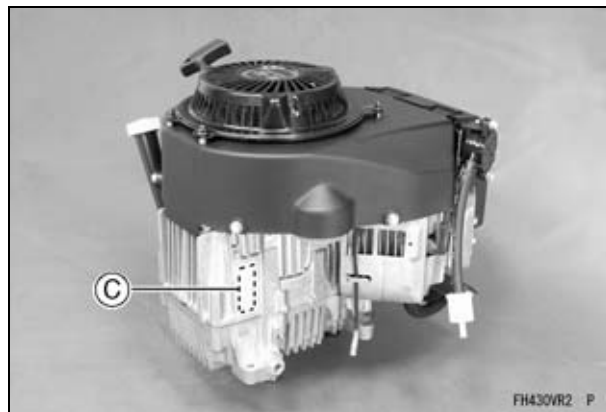

C. Engine Serial Number

The engine serial number is your only means of identifying your particular engine from others of the same model type.

This engine serial number is needed by an authorized Kawasaki engine dealer or equally qualified service facility when ordering parts.

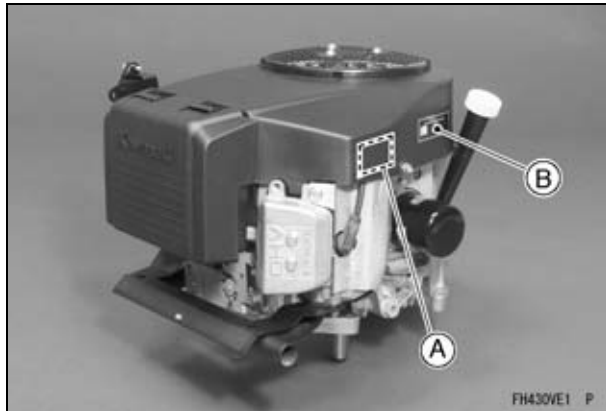[Electric Starter Model]

A. Warning

B. Engine Maintenance



C. Engine Serial Number

The engine serial number is your only means of identifying your particular engine from others of the same model type.

This engine serial number is needed by an authorized Kawasaki engine dealer or equally qualified service facility when ordering parts.

10 GENERAL INFORMATION

[Label Information]



ENGINE MAINTENANCE




1. CHECK OIL LEVEL
2. CHECK & CLEAN AIR CLEANER
3. CLEAN FINS & SCREEN
4. CHANGE OIL & OIL FILTER

REFER TO OWNER'S MANUAL FOR FURTHER INFORMATION


FH430V01M4 G

Parts Location

[Recoil Starter Model]

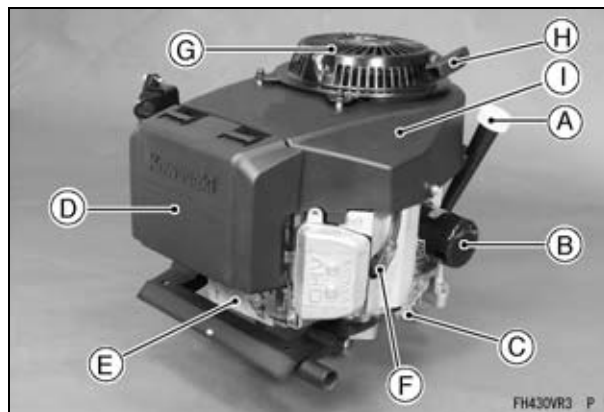


- A. Oil Gauge/Filler
- B. Oil Filter
- C. Oil Drain Plugs
- D. Air Cleaner/Carburetor
- E. Control Panel
- F. Spark Plug Caps/Spark Plugs
- G. Recoil Starter with Screen
- H. Recoil Starter Grip
- I. Fan Housing

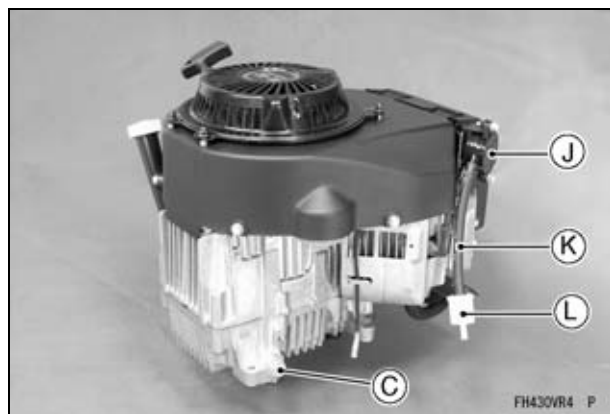


J. Fuel Pump
K. Fuel Tube
L. Fuel Filter

[Electric Starter Model]

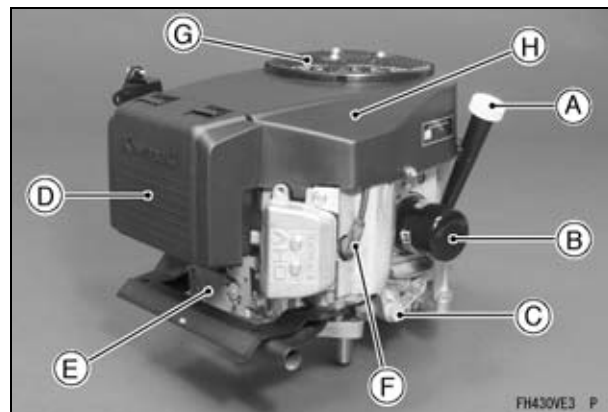

A. Oil Gauge/Filler
B. Oil Filter
C. Oil Drain Plugs
D. Air Cleaner/Carburetor
E. Control Panel
F. Spark Plug Caps/Spark Plugs
G. Air-intake Screen
H. Fan Housing

12 GENERAL INFORMATION

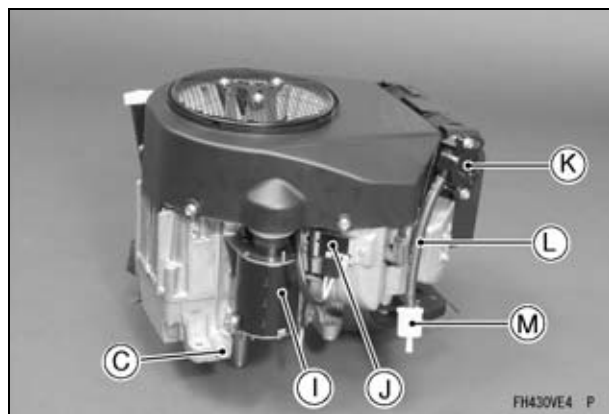

- I. Electric Starter
- J. Voltage Regulator
- K. Fuel Pump
- L. Fuel Tube
- M. Fuel Filter

Tune-up Specifications

ITEM	Specifications
Ignition Timing	Unadjustable
Spark Plugs:	CHAMPION...RCJ8Y
Gap	0.75 mm (0.030 in)
Low Idle Speed	1,550 r/min (rpm)
High Idle Speed	3,600 r/min (rpm)
Valve Clearance	IN 0.10 ~ 0.15 mm (0.004 ~ 0.006 in) EX 0.10 ~ 0.15 mm (0.004 ~ 0.006 in)
Other Specifications	No other adjustment needed

NOTE

- *High and low idle speeds may vary depending on the equipment on which the engine is used. Refer to the equipment specification.*

Engine Oil Capacity

FH381V FH430V	1.5 L (1.6 US·qt) [when oil filter is not removed]
	1.7 L (1.8 US·qt) [when oil filter is removed]

FUEL AND OIL RECOMMENDATIONS

Fuel

Use only clean, fresh, unleaded regular grade gasoline.

NOTICE

Do not mix oil with gasoline.

Octane Rating

The octane rating of a gasoline is a measure of its resistance to “knocking”. Using a minimum of 87 octane by the antiknock index is recommended. The antiknock index is posted on service station pumps in the U.S.A..

NOTE

○If “knocking or pinging” occurs, use a different brand of gasoline or higher octane rating.

Oxygenated Fuel

Oxygenates (either ethanol or MTBE) are added to the gasoline. If you use the oxygenated fuel be sure it is unleaded and meets the minimum octane rating requirement.

The following are the EPA approved percentages of fuel oxygenates.

ETHANOL: (Ethyl or Grain Alcohol)

You may use gasoline containing up to 10% ethanol by volume.

MTBE: (Methyl Tertiary Butyl Ether)

You may use gasoline containing up to 15% MTBE by volume.

METHANOL: (Methyl or Wood Alcohol) 5% by volume


You may use gasoline containing up to 5% methanol by volume, as long as it also contains cosolvents and corrosion inhibitors to protect the fuel system. Gasoline containing more than 5% methanol by volume may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of your fuel system.

Engine Oil

The following engine oils are recommended.
API Service Classification : SJ or SL class

Oil Viscosity

Choose the viscosity according to the temperature as follows:

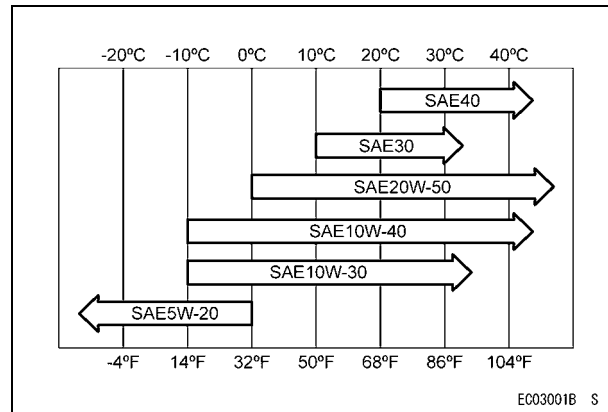

NOTE

- Although 10W-40 engine oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions. Using 20W-50 oil in higher ambient temperatures may reduce oil consumption.

PREPARATION

Fuel

WARNING

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Turn the ignition switch off. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light. Never fill the tank completely to the top. If the tank is filled completely to the top, heat may cause the fuel to expand and overflow through the vents in the tank cap. After refueling, make sure the tank cap is closed securely. If gasoline is spilled on the fuel tank, wipe it off immediately.


Engine Oil

Check the engine oil daily before starting the engine otherwise shortage of the engine oil may cause serious damage to the engine such as seizure.

- Place the engine on level surface. Clean area around the oil gauge before removing it.
- Remove the oil gauge (A) and wipe it with clean cloth.
- Pour the oil slowly to “FULL” mark on the oil gauge.
- Insert the oil gauge into tube (B) WITHOUT SCREWING IT IN.
- Remove the oil gauge (A) to check the oil level. Level should be between “ADD” and “FULL” marks. Do not overfill.
- Install and tighten the oil gauge (A).

NOTICE

The engine is shipped without engine oil.

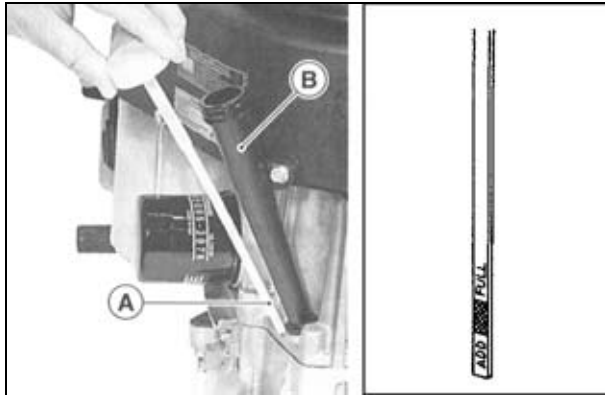

A. Oil Gauge

B. Tube

STARTING

Start Engine

DANGER

Exhaust gas contains carbon monoxide, a colorless, odorless poisonous gas. Inhaling carbon monoxide can cause serious brain injury or death. **DO NOT** run the engine in enclosed areas. Operate only in a well-ventilated area.

WARNING

Engine exhaust may ignite combustible materials and cause a fire. Keep the area around the exhaust outlet clear. Locate the unit so that the exhaust outlet points toward an open area and is located at least one meter (3.3 feet) from any obstructions.

NOTE

- *Be aware of following in order to start the engine easily in cold weather:*
- *Use proper oil for temperature expected (See “FUEL AND OIL RECOMMENDATIONS” chapter).*
- *Use fresh gasoline.*

- *Protect the engine or the equipment from direct exposure to weather when not in operation.*

NOTE

- *Follow the operating instructions of the equipment this engine powers.*

- Before starting the engine, insure all possible external loads are disconnected.
- Open the fuel valve (A) on the equipment.
- Turn the key to its “ON” or “START” position. For Control Panel Switch Type, move the throttle lever on the equipment to its halfway position. Moving the lever away from its low speed end turns ignition on.
- Move the throttle lever to its halfway position between low speed and high speed.

[Associated choke type]

For A Cold Engine - Place the throttle lever into “CHOKE” position.

For A Warm Engine (normal operating temperatures) - Place the throttle lever **midway** between “SLOW” and “FAST” positions.


[Separate choke type]

For A Cold Engine - Place the choke control into “CHOKE” position.

NOTE

- *When the engine is very warm, or when the engine does not start immediately, DO NOT keep trying*

- to start it with the choke closed as this will cause flooding and make starting more difficult.
- Instead, fully open the choke and start the engine.

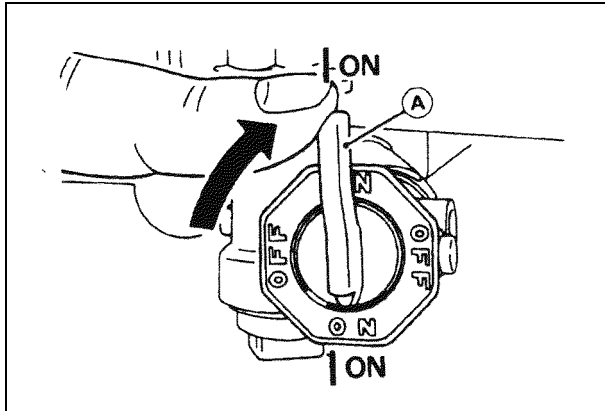

NOTICE

Whenever you start engine, make sure warning light is not illuminated after engine starts. If warning light comes on, stop engine immediately and check oil level (If equipped).

[Recoil Starter Model]


- Pull the recoil starter grip slowly until you feel compression, then pull it briskly.

NOTICE

Do not let recoil cord snap back by itself. This may damage the cord or recoil starter assembly.

NOTE

- If the engine won't start in three pulls, open the choke and try again.

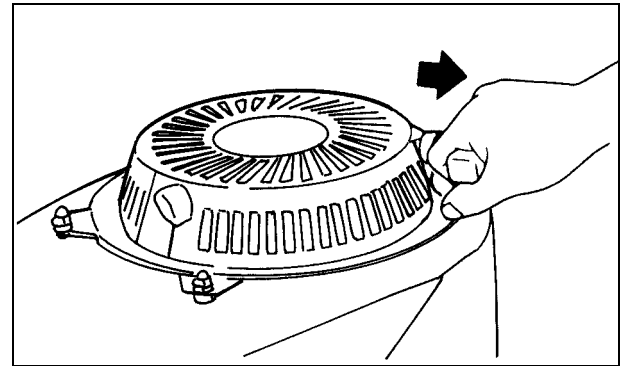


[Electric Starter Model]

- Put the key into the ignition switch.
- Turn the key to the START position on the equipment. Usually the engine will start within 3 seconds.

20 STARTING

NOTICE

Do not run the electric starter continuously for more than 5 seconds, otherwise the battery may discharge quickly. If the engine does not start right away, wait 15 seconds and try again.

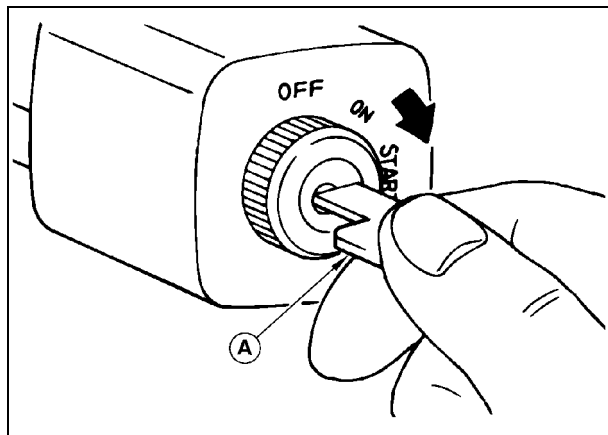

Warming Up

After the engine starts, move the throttle lever on the equipment to halfway between “FAST” and “SLOW”.

To warm up the engine, run it for 3 to 5 minutes with the throttle lever in the same position (halfway) before putting the equipment under load. Then, move the throttle lever on the equipment to its “FAST” position.

NOTICE

Allow engine to warm up sufficiently (3 to 5 minutes at idle) before applying a load. This will allow oil to reach all engine parts, and allow piston clearance to reach design specifications.

NOTICE

While warming up the engine, make sure the warning light (oil pressure) on dash is not on. The warning light must not be illuminated during engine operation (if equipped).

OPERATING

Engine Inclination

This engine will operate continuously at angles up to 25° in any direction.

Refer to the operating instructions of the equipment this engine powers. Because of equipment design or application, there may be more stringent restrictions regarding the angle of operation.

NOTICE

Do not operate this engine continuously at angles exceeding 25° in any direction. Engine damage could result from insufficient lubrication.

STOPPING

Stopping the Engine

WARNING

Leaving the equipment with the key hanging in the ignition can allow operation by someone who does not know how to operate it. It may cause serious accident with injury. Always remove the key from unattended equipment.

Ordinary Stop

- Keep running at the “SLOW” speed for about one minute.

NOTICE

Engine damage can occur from run-on or after-burning if engine is stopped suddenly from high speed loaded operation. Reduce engine speed to idle for one minute before shutting engine off.

- Turn the ignition switch to the “OFF” position.
For Control Panel Switch Type, move the throttle lever against its low speed end to turn ignition off.

Emergency Stop

- Immediately turn the ignition switch to the “OFF” position.
- Close the fuel valve on the equipment.
For Control Panel Switch Type, move the throttle lever on the equipment against its low speed end. Moving the lever against its low speed end turns ignition off.

ADJUSTMENT

Two types of choke controls are used for FH430V and FH381V Model Engines.

Associated Choke Type

Throttle Cable Installation, Adjustment

Make sure that the throttle lever on the equipment has been linked to the engine with the throttle cable.

- Leave the cable clamp bolt (A) loose.
- Align the hole (B) in the speed control lever (C) with the hole (D) in the base plate (E) moving the lever (C); insert 6 mm dia. pin (or 6 mm bolt) through two holes.
- Pull up the outer housing (F) of the throttle cable until the inner wire (G) has almost no slack, and tighten the cable clamp bolt (A). Remove the 6 mm dia. pin.


Make sure that the carburetor choke valve (M) is closed completely when the throttle lever on the equipment is moved to “CHOKE” position. If not, perform “CHOKE ADJUSTMENT” chapter.

Choke Adjustment Associated Choke Type

- Stop the engine.
- Align the hole (B) in the speed control lever (C) with the hole (D) in the base plate (E) by moving the lever (C); insert 6 mm dia. pin (or 6 mm bolt) through two holes.
- Turn the choke setting screw (I) so that the clearance between the screw end and the tongue of the lever (J) is 2.7 mm (Turn the screw back 3 - 7/8 turns). Remove the 6 mm dia. pin or bolt.
- Make sure that the choke valve turns from fully closed position to fully opened position when actuating the choke lever.

24 ADJUSTMENT

Associated choke type

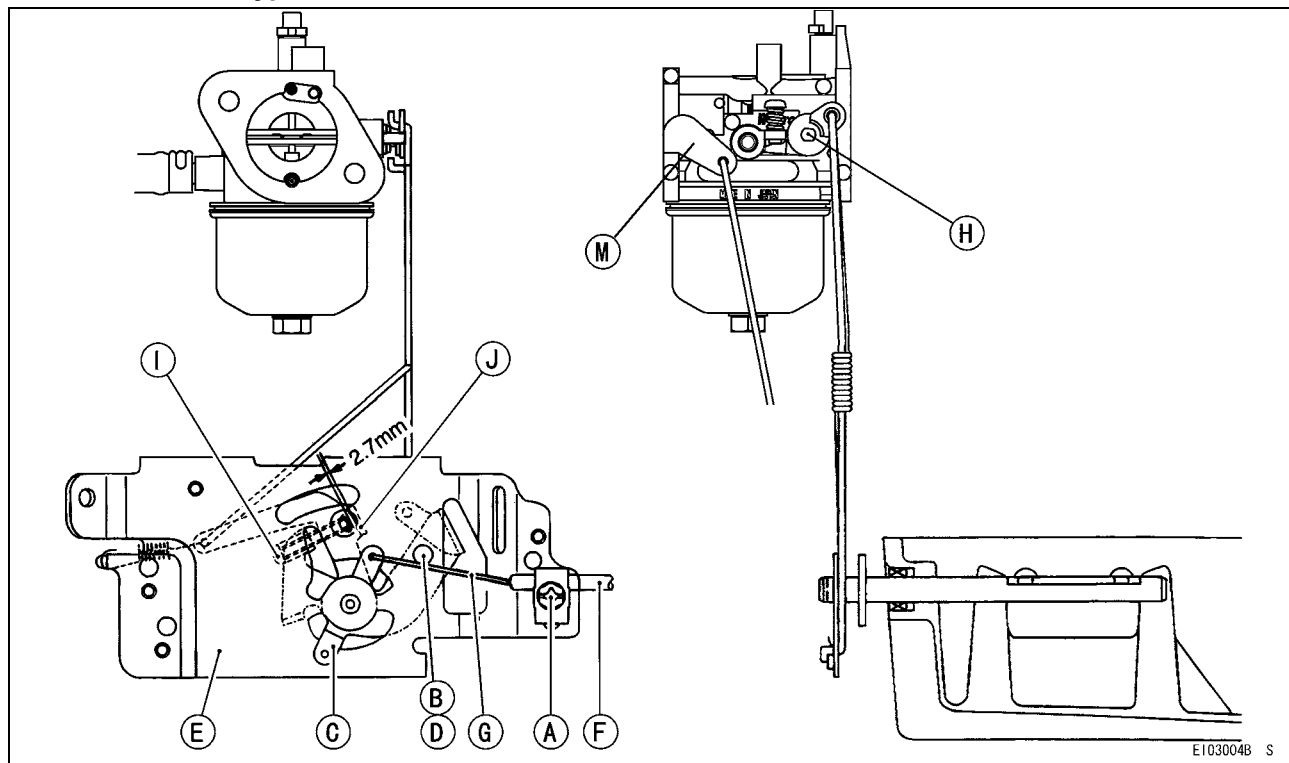

Separate Choke Type

Throttle Cable Installation, Adjustment


- Link the throttle cable (G) to the speed control lever (C) and loosely clamp the throttle cable outer housing (F) with the cable clamp bolt (A).
- Move the throttle lever to “FAST” position.
- Pull up the outer housing (F) of the throttle cable until the inner wire (G) has almost no slack, and tighten the cable clamp bolt (A).
- Move the throttle lever to “slow” position. Make sure that the carburetor throttle valve (H) is moved smoothly.

Choke Cable Installation, Adjustment

- Link the choke cable (K) to the choke control lever (D), and loosely clamp the choke cable outer housing (L) with the cable clamp bolt (B).
- Move the equipment choke control to “OPEN” position. Make sure that the carburetor choke valve (M) is fully opened.
- Pull up the outer housing (L) of the choke cable until the inner wire (K) has almost no slack, and tighten the cable clamp bolt (B).
- Move the equipment choke control to “CHOKE” position. Make sure that the carburetor choke valve (M) is completely closed.
- Make sure that the choke valve turns from fully closed position to fully opened position when actuating the equipment choke control.

26 ADJUSTMENT

Separate choke type

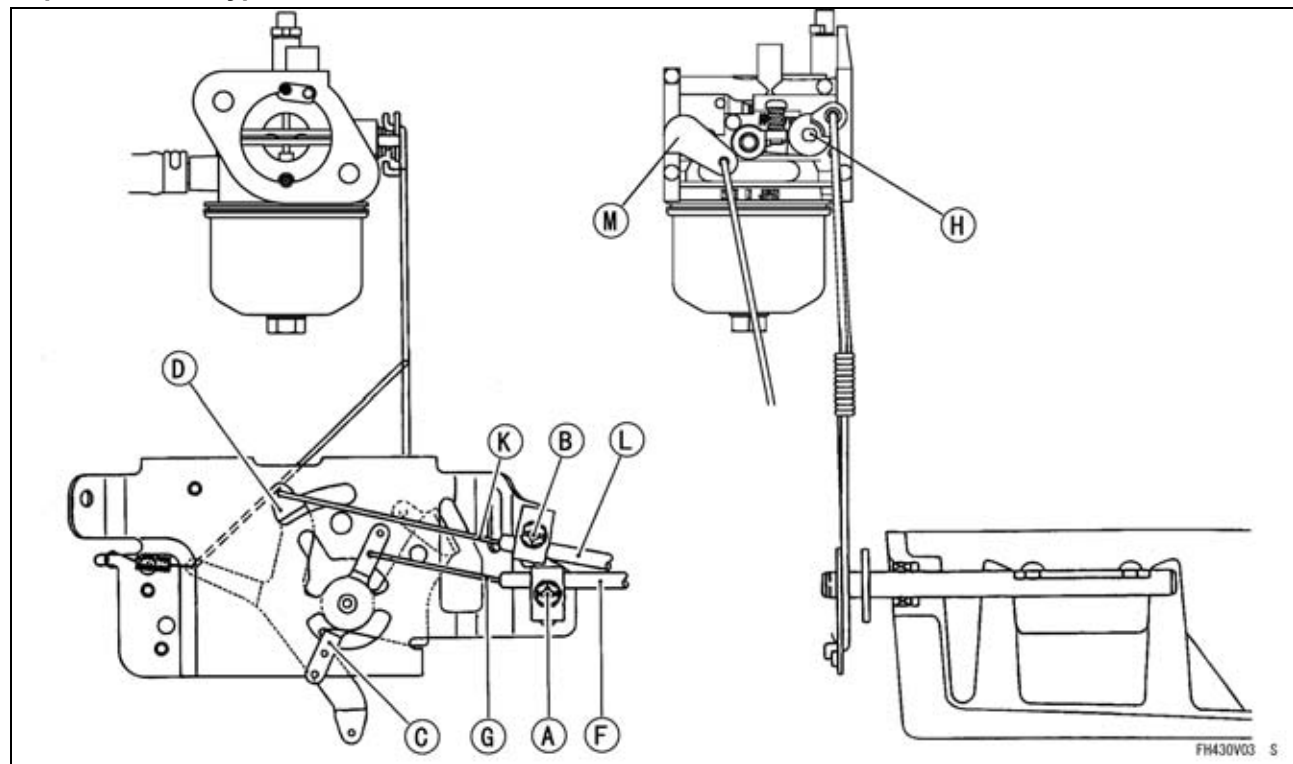

Engine Speed Adjustment

NOTE

- *Do not tamper with the governor setting or the carburetor setting to increase the engine speed. Every carburetor is adjusted at the factory and a cap or a stop plate was installed on each mixture screw.*
- *If adjustment is needed, it must be performed by an authorized Kawasaki engine dealer or equally qualified service facility.*

MAINTENANCE

Maintenance, replacement, or repair of the emission control devices and systems may be performed by any non-road engine repair establishment or individual.

Periodic Maintenance Chart

WARNING
Prevent accidental starting during engine service by removing the spark plug caps.

NOTE

- *The service intervals indicated are to be used as a guide. Service should be performed more frequently as determined by operating conditions.*

MAINTENANCE	INTERVAL					
	Daily	Every 25 hr.	Every 50 hr.	Every 100 hr.	Every 200 hr.	Every 300 hr.
Check and add engine oil.	•					
Check for loose or lost nuts and screws.	•					
Check for fuel and oil leakage.	•					
Check battery electrolyte level.	•					
Check or clean air intake screen.	•					
♦ Clean air cleaner foam element.		•				
♦ Clean air cleaner paper element.			•			
♦ Clean dust and dirt from cylinder and cylinder head fins.				•		
Tighten nuts and screws.				•		
Change engine oil.				•		
Clean and regap spark plugs.				•		
Change oil filter.					•	
♦ Replace air cleaner paper element.					•	
◇ Clean combustion chambers.						•
◇ Check and adjust valve clearance.						•
◇ Clean and lap valve seating surface.						•


30 MAINTENANCE

◆ : Service more frequently under dusty conditions.

◇ : Service to be performed by an authorized Kawasaki engine dealer or equally qualified service facility.

Oil Level Check

Check oil level daily and before each time of operation. Be sure oil level is maintained. See "PREPARATION" chapter.

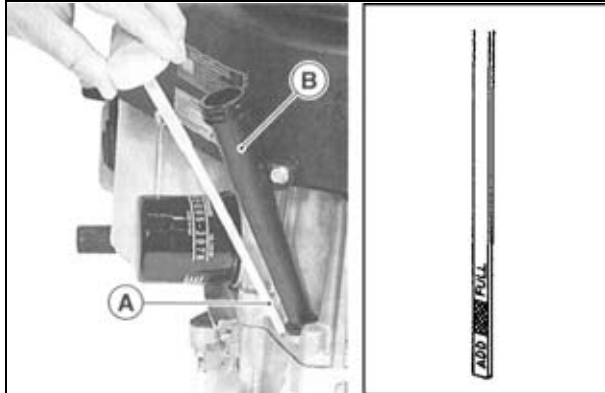


A. Oil Gauge
B. Tube

Oil Change

- Change oil every 100 hours.
- Run the engine to warm oil.
- Be sure the engine (equipment) is level.
- Stop the engine.
- Remove the oil drain plugs (A) and drain the oil into suitable container while engine is warm.

⚠ WARNING

Hot engine oil can cause severe burns. Allow engine temperature to drop from hot to warm level before draining and handling oil.

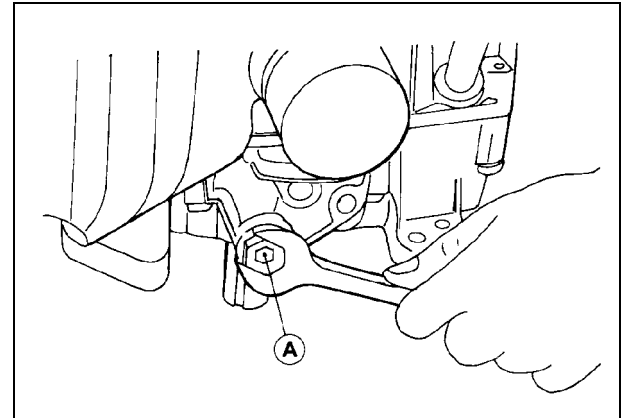

A. Oil Drain Plug

- Install the oil drain plug (A).

32 MAINTENANCE

- Remove oil gauge and refill with fresh oil (See “FUEL AND OIL RECOMMENDATIONS” chapter).
- Check the oil level (See PREPARATION for oil level check).

Oil Filter Change

- Change the oil filter every 200 hours of operation.

WARNING


Hot engine oil can cause severe burns. Allow engine temperature to drop from hot to warm before attempting to remove oil filter.

- Drain engine oil into a suitable container.

<i>NOTICE</i>

Before removing the oil filter, place suitable pan under filter connection.
--

- Rotate the oil filter (A) counterclockwise to remove it.
- Coat a film of clean engine oil on seal of new filter.
- Install new filter rotating it clockwise until seal contacts mounting surface (B). Then rotate filter 3/4 turn more by hand.
- Supply engine oil as specified.
- Run the engine for about 3 minutes, stop engine, and check for oil leakage around the filter.
- Add oil to compensate for oil level drop due to oil filter capacity (See “Oil Level Check” section in “PREPARATION” chapter).

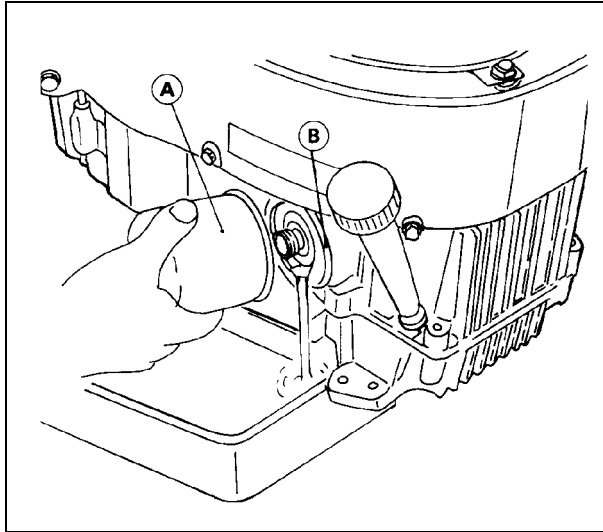

⚠ WARNING

Engine oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.

Air Cleaner Service

NOTICE

Do not run the engine with the air cleaner removed.


- Remove the air cleaner case (A) from the air cleaner body (B) by pushing down the latches (C) with fingers.

Foam Element

Clean the foam element (D) every 25 hours.

- Wash the element in detergent and water, and dry it thoroughly.

34 MAINTENANCE

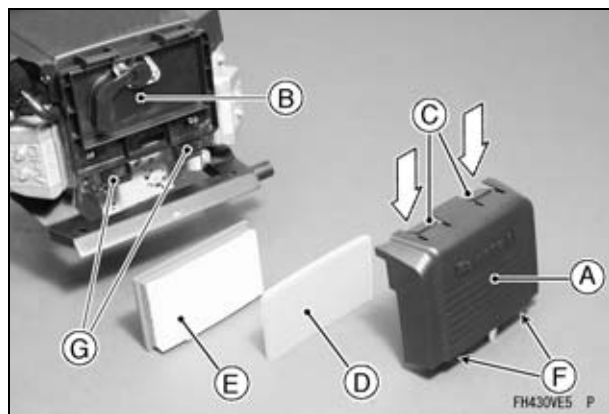

- A. Air cleaner case
- B. Air cleaner body
- C. Latches of Air cleaner case
- D. Foam element
- E. Paper element
- F. Air cleaner case bottom
- G. Air cleaner body bottom

Paper Element

Clean the paper element (E) every 50 hours.

- Clean the paper element by tapping gently to remove dust. If very dirty, replace the paper element with a new one.
- Replace with a new paper element yearly or 200 hours. Whichever comes first.

- Reinstall the foam element and the paper element into the air cleaner case.
- Reinstall the air cleaner case into the air cleaner body by putting the hooks on the bottom of the air cleaner case (F) into the air cleaner body bottom (G).

NOTE

- *Operating in dusty condition may require more frequent maintenance than above.*

NOTICE

Do not wash paper element.
Do not oil foam or paper element.
Do not use pressurized air to clean paper element.

Fuel Filter and Fuel Pump Service

WARNING

Many solvents are highly flammable and may cause serious burns. Improper use of solvents can result in fire or an explosion. Do not use gasoline or low flash-point solvents to clean the fuel filter and/or the fuel pump. Clean only in a well-ventilated area away from sources of sparks or flame, including any appliances with a pilot light.

- The fuel filter can not be disassembled. If the fuel filter gets clogged, replace it with a new one.
- The fuel pump can not be disassembled. If the fuel pump fails, replace it with a new one.

Spark Plug Service

WARNING


Engines can become extremely hot during normal operation. Hot engine components can cause severe burns. Stop the engine and allow it to cool before checking spark plugs.

- Clean or replace the spark plugs and reset spark plugs gap (B) every 100 hours of operation.
- Disconnect the spark plug caps from the spark plugs and remove the spark plugs
- Clean the electrodes (A) by scraping with a wire brush to remove carbon deposits.
- Inspect for cracked porcelain or other wear and damage. Replace the spark plug with a new one if necessary.
- Check the spark plug gap and reset if necessary. The gap must be 0.75 mm (0.030 in). To change the gap, bend only the side-electrode, using a spark plug tool.
- Install and tighten the spark plugs to 22 N·m (2.2 kgf·m, 16 ft·lb). Connect the spark plug caps.

36 MAINTENANCE

RECOMMENDED SPARK PLUG

CHAMPIONRCJ8Y

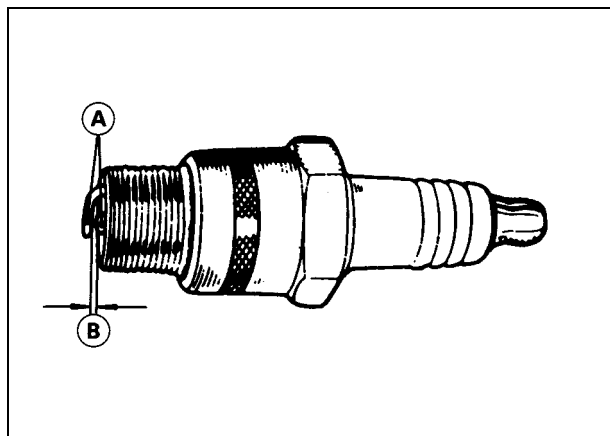

Cooling System Cleaning

Before each use, check that the air-intake (rotary) screen (A) is free from grass and debris and clean if necessary. Every 100 hours of operation, check and clean the cooling fins and inside of engine shrouds to remove grass, chaff or dirt clogging the cooling system and causing overheating. When cleaning, remove the recoil starter (C) for Recoil Starter Model or the air-intake screen (A) for Electric Starter Model, and the fan housing (B).


NOTICE

Do not run engine before all cooling system parts reinstalled to keep cooling and carburetion as intended.


[Bolts and Nut Size, Tightening torque]

Bolts and Nut	Size	Length	Tightening-torque
D	M6	16 mm	5.9 N·m (0.6 kgf·m, 4.3 ft·lb)
E	M6	22 mm	5.9 N·m (0.6 kgf·m, 4.3 ft·lb)
F	M6	12 mm	5.9 N·m (0.6 kgf·m, 4.3 ft·lb)
G	M6		5.9 N·m (0.6 kgf·m, 4.3 ft·lb)

Recoil Starter Model

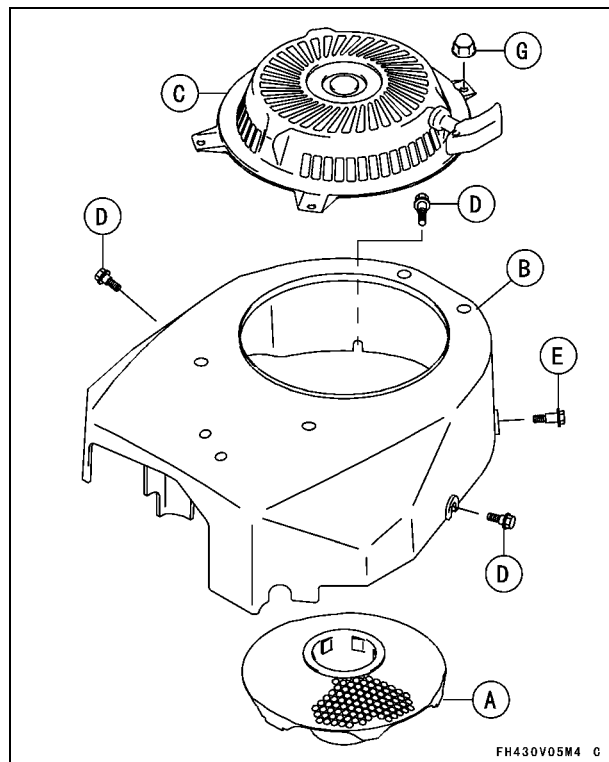

Electric Starter Model

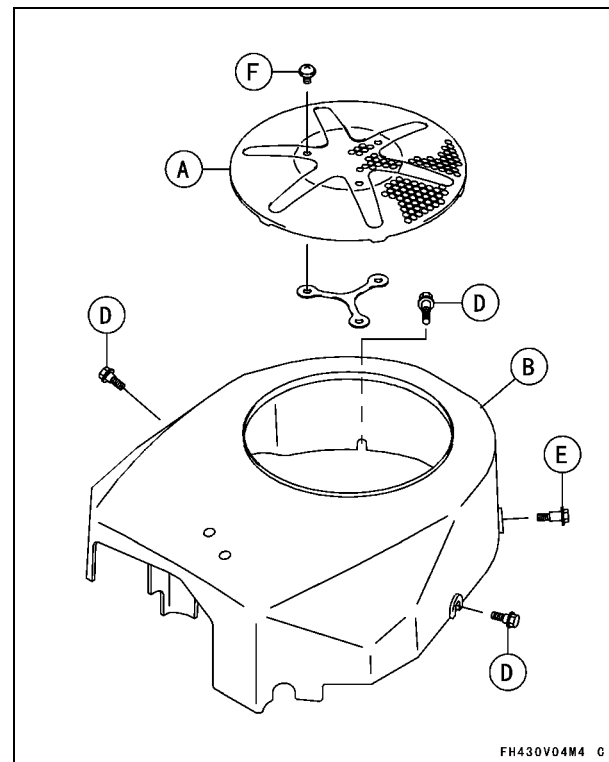

STORAGE

Engine Storage Procedure

When not operating your Kawasaki engine more than 30 days, add fuel stabilizer to fuel tank and run engine for 5 minutes then drain the fuel tank.

After draining the fuel tank, run the engine at low idle until the engine stalls.

WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Drain fuel before storing the equipment for extended periods. Drain gasoline in a well-ventilated area away from any source of flame or sparks, including any appliances with a pilot light. Store gasoline in an approved container in safe location.

WARNING

Gasoline is a toxic substance. Dispose of gasoline properly. Contact your local authorities for approved disposal methods.

- Remove the spark plugs and pour approx 1 ~ 2 mL (1/2 teaspoon) of engine oil through the spark plug holes and then screw the spark plugs in after turning the engine a few times. Slowly turning the engine until you feel compression and then leave it there. This blocks the air inside the cylinder and prevents rust inside the engine.
- Wipe the body with oily cloth.
- Wrap the engine with plastic sheeting and store it in a dry place.
- Change engine oil for next use after period of storage (Refer to “Oil Change” section in “MAINTENANCE” chapter).

TROUBLESHOOTING GUIDE

If the engine malfunctions, carefully examine the symptoms and the operating conditions, and use the table below as a guide to troubleshooting.

Symptom		Probably Cause	Remedy
Engine won't start or output is low	Insufficient compression	Loose spark plugs	Tighten properly
		Loose cylinder head bolts	◇
		Faulty pistons, cylinders, piston rings, or head gaskets	
		Faulty valves	
	No fuel to combustion chamber	No fuel in fuel tank	Fill fuel tank
		Fuel valve not in "ON" position	Open fuel valve lever.
		Blocked fuel filter or tube	Change fuel filter or fuel tube
		Blocked air vent in tank cap	Clean fuel tank cap
		Faulty carburetor	◇
	Spark plugs fouled by fuel	Clogged air cleaner	Clean
		Incorrect grade/type of fuel	Change fuel
		Water in fuel	
		Over rich fuel/air mixture	◇
		Faulty carburetor	◇
	No spark or weak spark	Faulty spark plugs	Replace spark plugs
		Engine switch left in "OFF" position	Turn engine switch to "START" position (See M)
		Faulty ignition coil	◇

40 TROUBLESHOOTING GUIDE

Symptom		Probably Cause	Remedy
Low output	Engine overheats	Clogged air cleaner	Clean
		Air inlet screen or cooling air path clogged with dirt	
		Insufficient engine oil	Replenish or change oil
		Poor ventilation around engine	Select a better location
		Carbon build-up in combustion chamber	◇
	Engine speed won't increase	Faulty governor	◇

◇ : Service to be performed by an authorized Kawasaki engine dealer or equally qualified service facility.

M : For Control Panel Switch Type, move the throttle lever on the equipment away from its low speed end to turn the engine switch to “START” position.

ENVIRONMENTAL PROTECTION

To protect our environment, properly dispose of used batteries, engine oil, gasoline, coolant, or other components that you might discard.

Consult an authorized Kawasaki engine dealer or equally qualified service facility or local environmental waste agency for the proper disposal procedures.

SPECIFICATIONS



	FH381V, FH430V	
Type of engine	Air-cooled, 4-stroke OHV, V-twin cylinder, gasoline engine	
Bore x Stroke	65 x 65 mm (2.56 x 2.56 in.)	
Displacement	431 mL (26.3 cu.in)	
Ignition System	Magneto ignition	
Direction of rotation	Counterclockwise facing the PTO Shaft	
Starting system	Recoil starter	Electric starter
Dry weight	30.5 kg (67.3 lbs)	31.7 kg (69.9 lbs)

NOTE

- *Specifications subject to change without notice.*
- *Dry weight excludes that of fuel tank and muffler.*


WIRING DIAGRAM

(Recoil Starter Model)

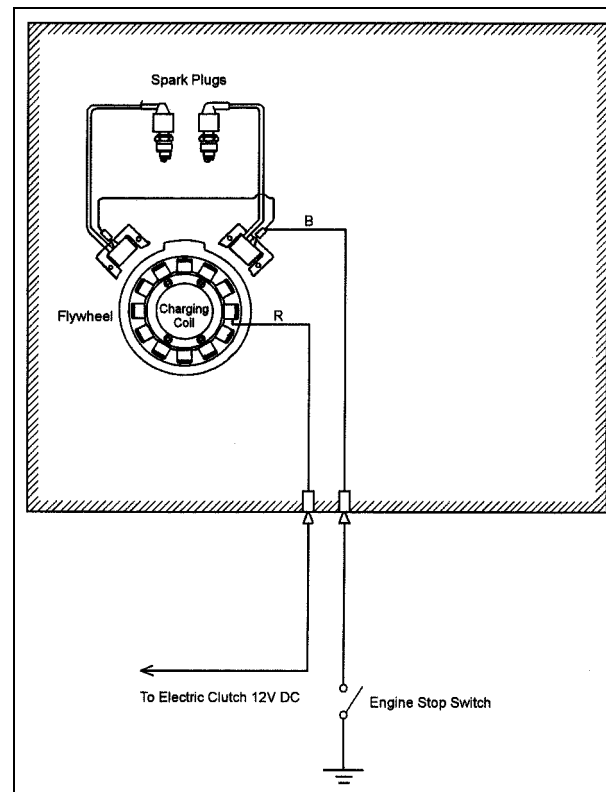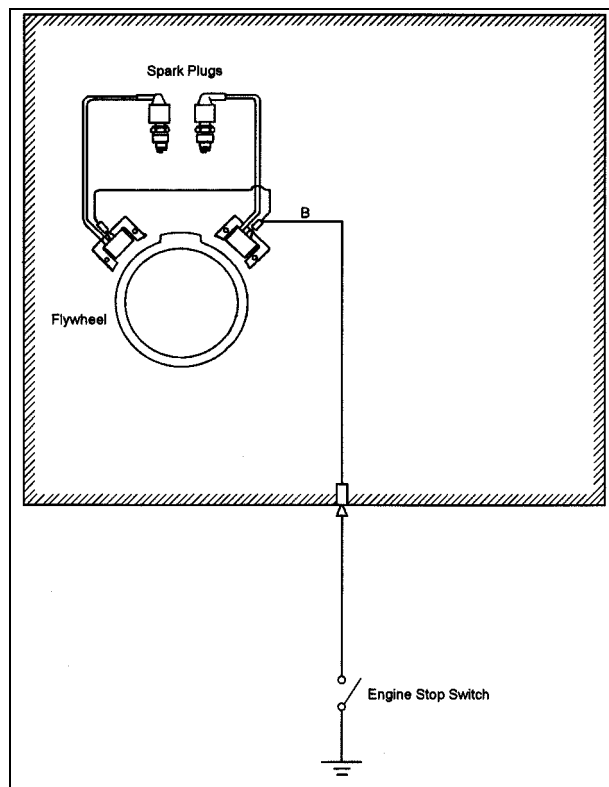

44 WIRING DIAGRAM

With 12 - 13 V Charging Coil

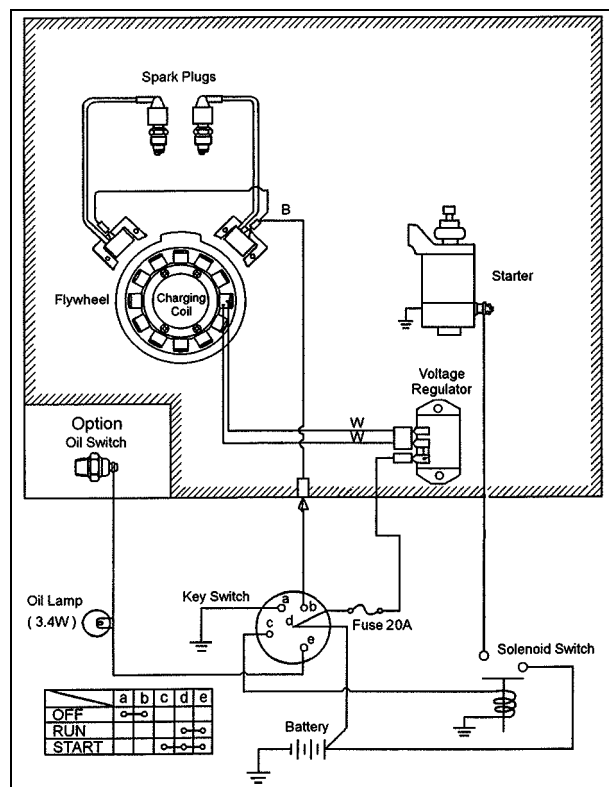

NOTE

○ Portion Surrounded by hatching Shows Kawasaki Procurement Parts.

⚠ WARNING

Prevent sparks and/or electrical system damage by removing the negative (-) cable from the battery before attempting any repair or maintenance.

Battery Capacity Recommended

Model	FH381V, FH430V
Lawn Mower	12 V 200 CCA Class
Snow Thrower	12 V 280 CCA Class

Part No. 99920-2158-06

For repair or maintenance assistance contact an authorized Kawasaki engine dealer or equally qualified service facility.

For warranty assistance please contact an authorized Kawasaki engine dealer.

Kawasaki engine dealer locator can be found on our website: www.kawasakienginesusa.com

For further assistance email:
kawasakienginesupport@kmc-usa.com
or call 877-364-6404



Kawasaki Heavy Industries, Ltd. Motorcycle & Engine Company

Printed in Japan

GB