


KW1TXRX Wireless Subwoofer Transmitter to Audio Source Connection

KW1 Y-Adaptor Connection Guide

Determine the number of subwoofer outputs on your device, Mono (Single) or Stereo (Dual).

Connecting KW1 to Mono (Single) Subwoofer Output

Locate the dual RCA cable (male to male), and split it, gently pulling the two sides apart. Using only one side, red or white (the other will not be needed), connect one end of the cable to the Mono Sub Out and the other end of the cable to the female end on the RCA Y-Adapter. Connect the red and white male ends of the Y-Adapter to the corresponding RCA sockets on the KW1 transmitter unit.

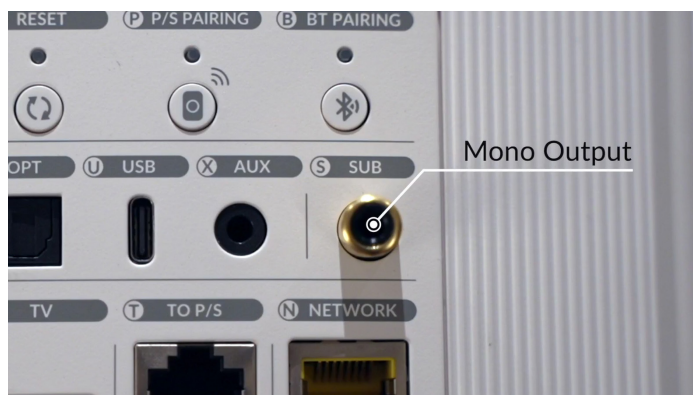

Connecting KW1 to Stereo (Dual) Subwoofer Output



Connect the dual RCA cable (male to male) to the corresponding RCA sockets on the rear of the amp, pre-amp or processor. Connect the other end of the cable to the corresponding RCA sockets on the KW1 transmitter module.

NOTE: Some older equipment may use a black connector instead of white. In this case simply connect red-to-red and white to white or black.

In the event the KW1 Receiver indicator LED is not lit, turn the subwoofer off and reseal the KW1 Receiver module, making sure all four pins of the connector are snug. After reseating, switch the subwoofer on – the KW1 receiver indicator should be lit.