 
 


Adjustable Slicing Disc

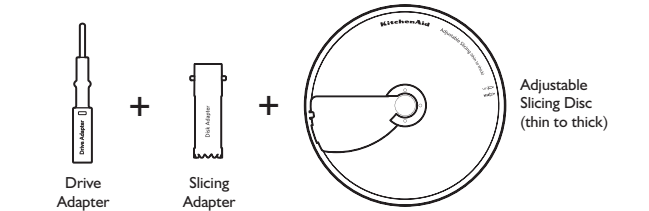


 Slice Thin	Food Type	Setting
	Cheese	Off ☐ Low ☐ High ☐ Pulse ☐
 Slice Thick	Chocolate	Off ☐ Low ☐ High ☐ Pulse ☐
	Fruit - soft (e. g. strawberries)	Off ☐ Low ☐ High ☐ Pulse ☐
	Fruit - hard (e.g. apples)	Off ☐ Low ☐ High ☐ Pulse ☐
	Potatoes	Off ☐ Low ☐ High ☐ Pulse ☐
	Tomatoes	Off ☐ Low ☐ High ☐ Pulse ☐
	Vegetables - soft (e.g. cucumber)	Off ☐ Low ☐ High ☐ Pulse ☐
	Vegetables - hard (e.g. carrots)	Off ☐ Low ☐ High ☐ Pulse ☐

Reversible Shredding Disc

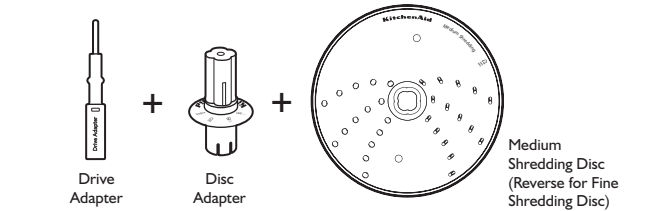


 Medium Shredding	Food Type	Setting
	Cabbage	Off ☐ Low ☐ High ☐ Pulse ☐
 Fine Shredding	Cheese	Off ☐ Low ☐ High ☐ Pulse ☐
	Chocolate	Off ☐ Low ☐ High ☐ Pulse ☐
	Fruit - hard (e.g. apples)	Off ☐ Low ☐ High ☐ Pulse ☐
	Potatoes	Off ☐ Low ☐ High ☐ Pulse ☐
	Vegetables - soft (e.g. cucumber)	Off ☐ Low ☐ High ☐ Pulse ☐
	Vegetables - hard (e.g. carrots)	Off ☐ Low ☐ High ☐ Pulse ☐

 Julienne Disc (on some models)

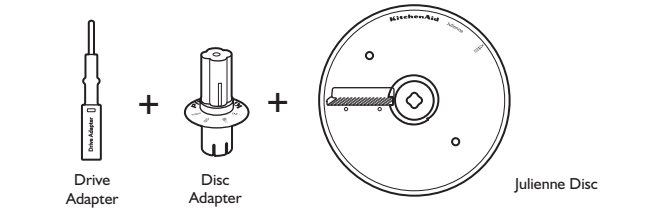


 Julienne Cut	Food Type	Setting
	Potatoes	Off ☐ Low ☐ High ☐ Pulse ☐
	Vegetables - soft (e.g. cucumber)	Off ☐ Low ☐ High ☐ Pulse ☐
	Vegetables - hard (e.g. carrots)	Off ☐ Low ☐ High ☐ Pulse ☐

 Grate/Shave Disc (on some models)

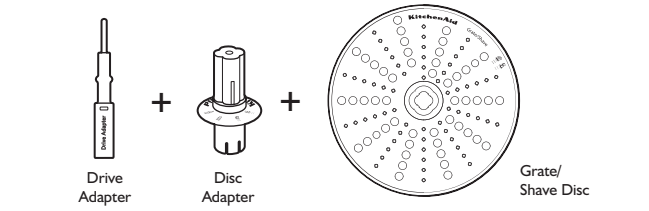

 Grate	Food Type	Setting
	Cheese	Off ☐ Low ☐ High ☐ Pulse ☐
 Shave	Ice	Off ☐ Low ☐ High ☐ Pulse ☐

 
Multipurpose Stainless Steel Blade



Multipurpose Blade

 Chop	Food Type	Setting
	Cheese	Off Low High Pulse
 Mince	Chocolate	Off Low High Pulse
	Fruit	Off Low High Pulse
	Fresh Herbs	Off Low High Pulse
	Nuts	Off Low High Pulse
	Tofu	Off Low High Pulse
 Purée	Vegetables	Off Low High Pulse
	Pasta Sauce	Off Low High Pulse
	Pesto	Off Low High Pulse
	Salsa	Off Low High Pulse
	Sauces	Off Low High Pulse
 Mix		

 Mini Multipurpose Blade and Mini Bowl

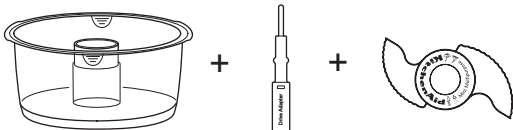

Bowl

Drive Adapter

Mini Multipurpose Blade

 Chop	Food Type	Setting
	Cheese	Off Low High Pulse
 Mince	Chocolate	Off Low High Pulse
	Fruit	Off Low High Pulse
	Fresh Herbs	Off Low High Pulse
	Nuts	Off Low High Pulse
	Tofu	Off Low High Pulse
 Purée	Vegetables	Off Low High Pulse
	Pasta Sauce	Off Low High Pulse
	Pesto	Off Low High Pulse
	Salsa	Off Low High Pulse
	Sauces	Off Low High Pulse
 Mix		


Plastic Dough Blade



Plastic Dough Blade

 Knead	Food Type	Setting
	Batters	Off Low High Pulse
	Sweet Dough	Off Low High Pulse
	Yeast Dough	Off Low High Pulse

 Egg Whip (on some models)

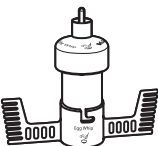

Egg Whip Adapter


Egg Whip

 Eggs	Food Type	Setting
	Whip	Off Low High Pulse

NOTE: Not all accessories are included with all models. For information on ordering available accessories, refer to your Use and Care Guide.

KitchenAid® Food Processor

 Refer to the following guide for recommendations on selecting the accessories available for your food processor. See your Use and Care for instructions on installing accessories and operating your Food Processor.

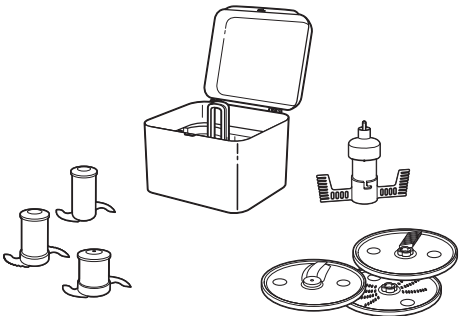

FOR THE WAY IT'S MADE.™

W10424583A