



The friendly user guide for


The Play Kitchen

⚠ WARNING:


**TOY MUST BE ASSEMBLED
BY AN ADULT BEFORE USE**

Recommended Age: 3yr+

Cutting board is a toy and not
intended for use with real food.

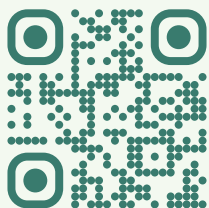

Scan to shop little chef accessories.
meetlalo.com

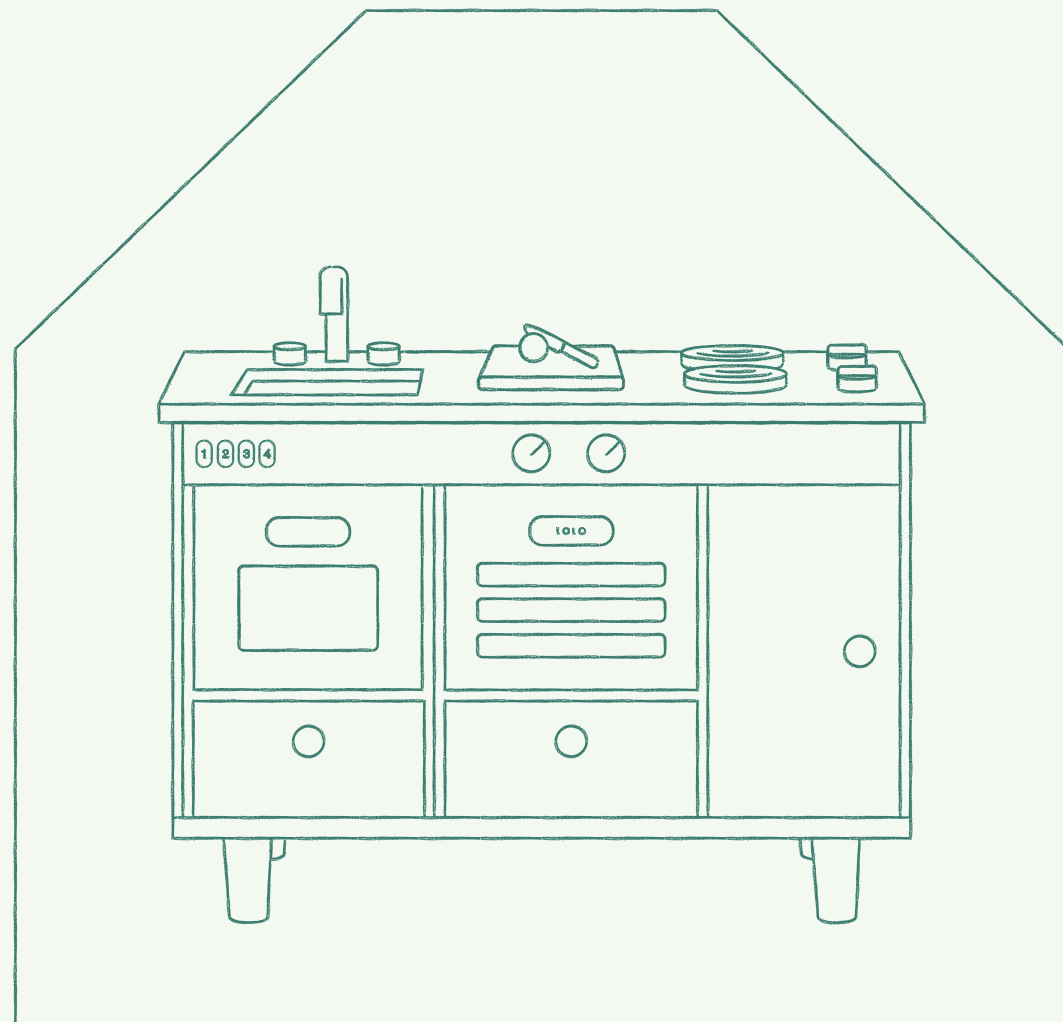

What's included...

The Play Kitchen


- | | | | |
|----|-----------------|----|---------------|
| A. | Play Kitchen | F. | Cups (x2) |
| B. | Feet (x4) | | Saucers (x2) |
| C. | Faucet | | Plates (x2) |
| D. | Fluted Nut | G. | Cutting Board |
| E. | Dishwasher Rack | | |

**No tools
needed.
Hooray!**

*Assembly is as
easy as 1,2,3!*


Step 1

Remove the play kitchen from the box and open the drawers. Inside you'll find a box with the feet and faucet and in the other you'll find the dishwasher rack, cups, saucers, plates, and cutting board. You will need these to complete assembly.

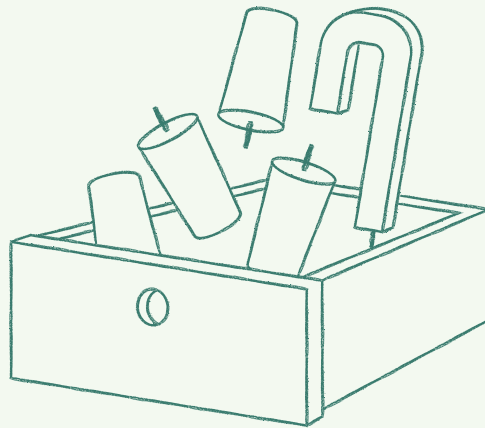

Step 2

To install the feet, lay the play kitchen on its back so that you can access the bottom. Insert the screws attached to the feet into the threaded holes in the bottom panel. Turn clockwise until tight.

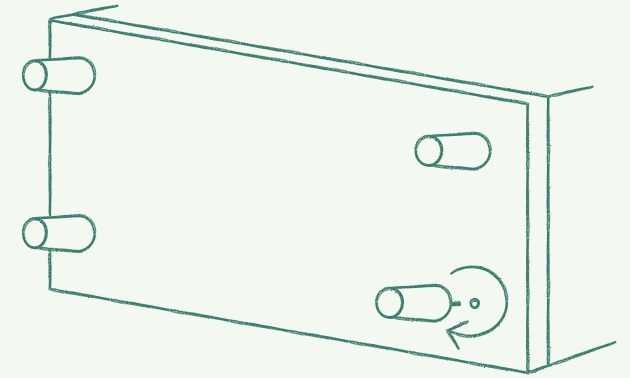

Step 3

To attach the faucet, stand the play kitchen back up on its feet. Insert the screw attached to the faucet into the hole on the countertop. Open the cabinet drawer and place the fluted nut on the screw. Turn until tight. To assemble the dishwasher, orient the dishwasher rack so the hole is in front and slide it into the grooves on the walls inside the dishwasher.

